



ASSEMBLY INSTRUCTIONS

TWIN BED

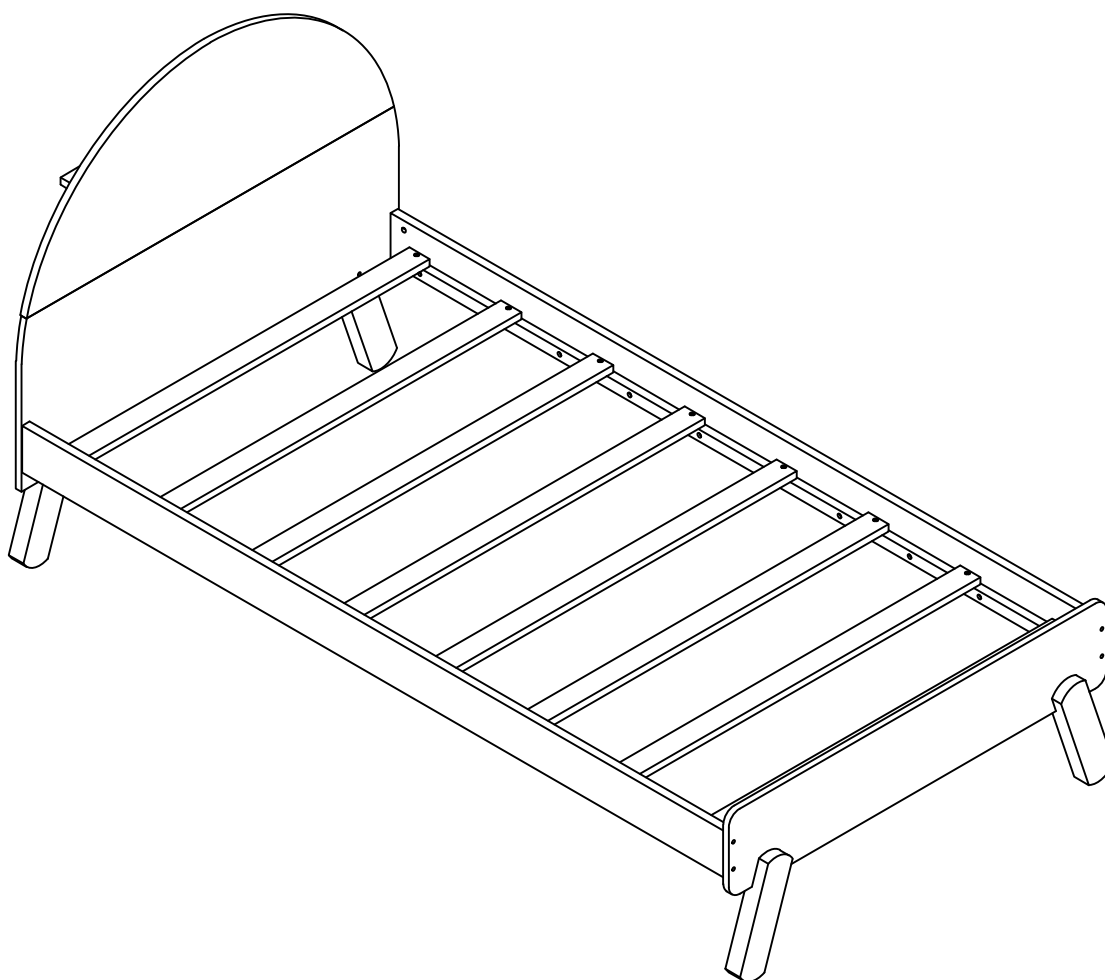



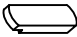

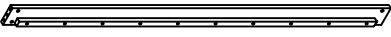
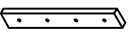
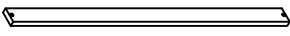
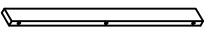

WF295686

ASSEMBLY INSTRUCTIONS

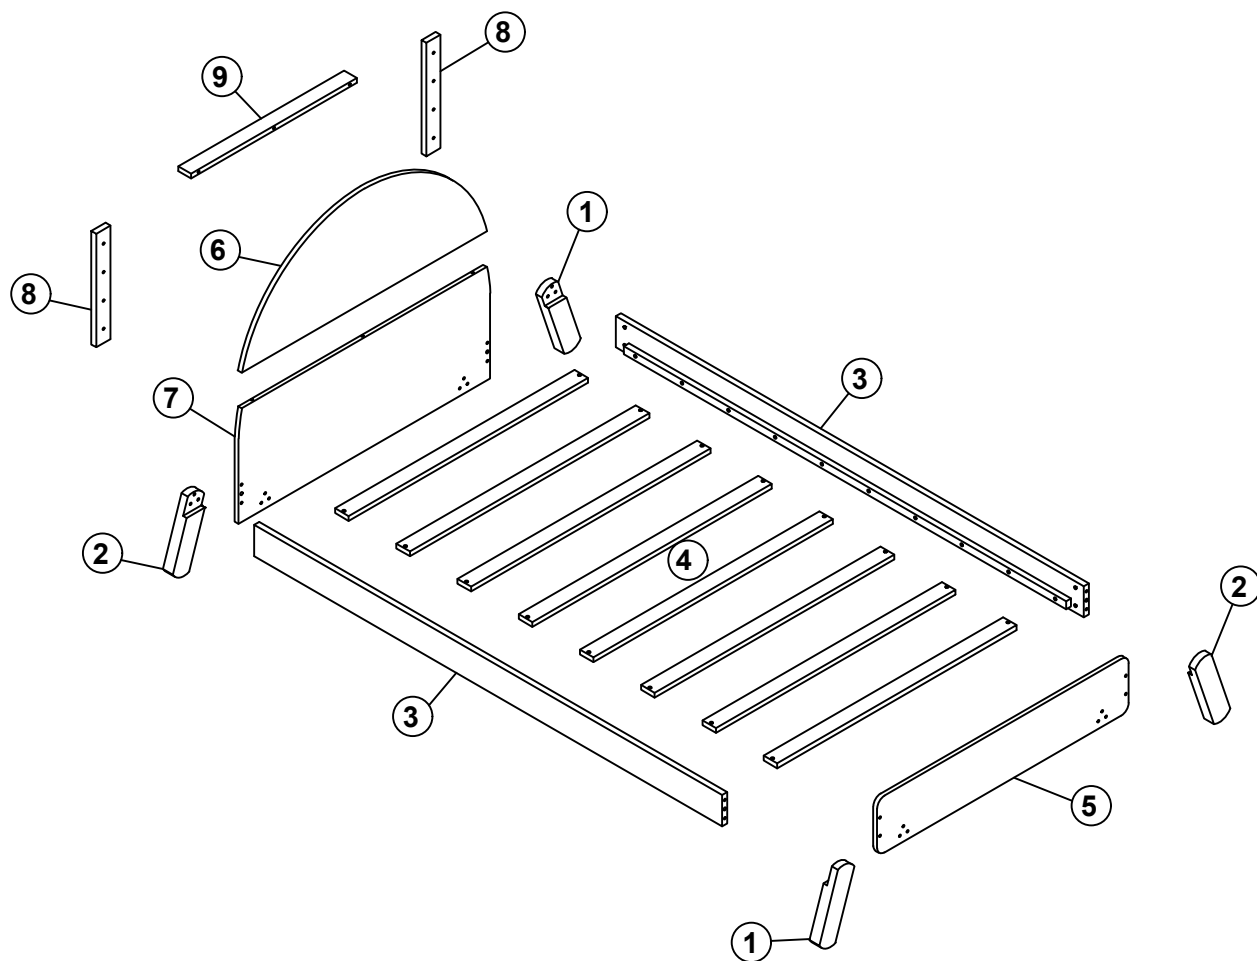





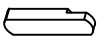


PARTS LIST

WF295686


1	Left front & right back legs 	2pcs	6	Headboard panel 	1pc
2	Right front & left back legs 	2pcs	7	Headboard panel 	1pc
3	Side rails 	2pcs	8	Headboard support panels 	2pcs
4	Slats 	8pcs	9	Headboard support panel 	1pc
5	Headboard panel 	1pc			


ASSEMBLY INSTRUCTIONS

HARDWARE LIST (WF295686)

A	Ø4x30		16PCS	E	Ø10x40		4PCS
B	1/4x65		8PCS	F	Ø8x30		3PCS
C	1/4x60		3PCS	J	4x58		1PC
D	1/4x30		20PCS				

Step 1

F	Ø8x30		3PCS
----------	-------	---	------





F	Ø8x30		3PCS
----------	-------	---	------

Step 2

J 4x58 1PC


D 1/4x30 20PCS



C 1/4x60 3PCS

J	4x58 	1PC	 1x1		
D	1/4x30 	20PCS	C	1/4x60 	3PCS

ASSEMBLY INSTRUCTIONS

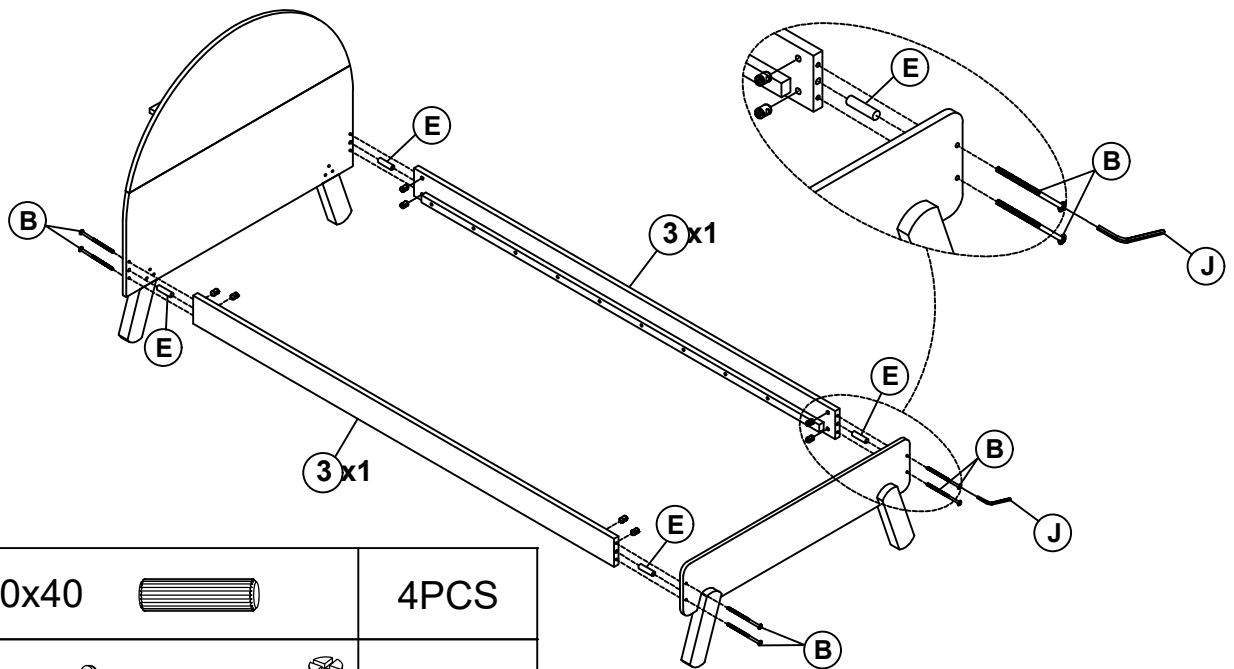
Step 3




E	Ø10x40		4PCS
B	1/4x65		8PCS

Step 4

First attach 2pcs part 4 to the front and end of the frame between headboard. Then attach the remaining part 4 equidistantly between headboard

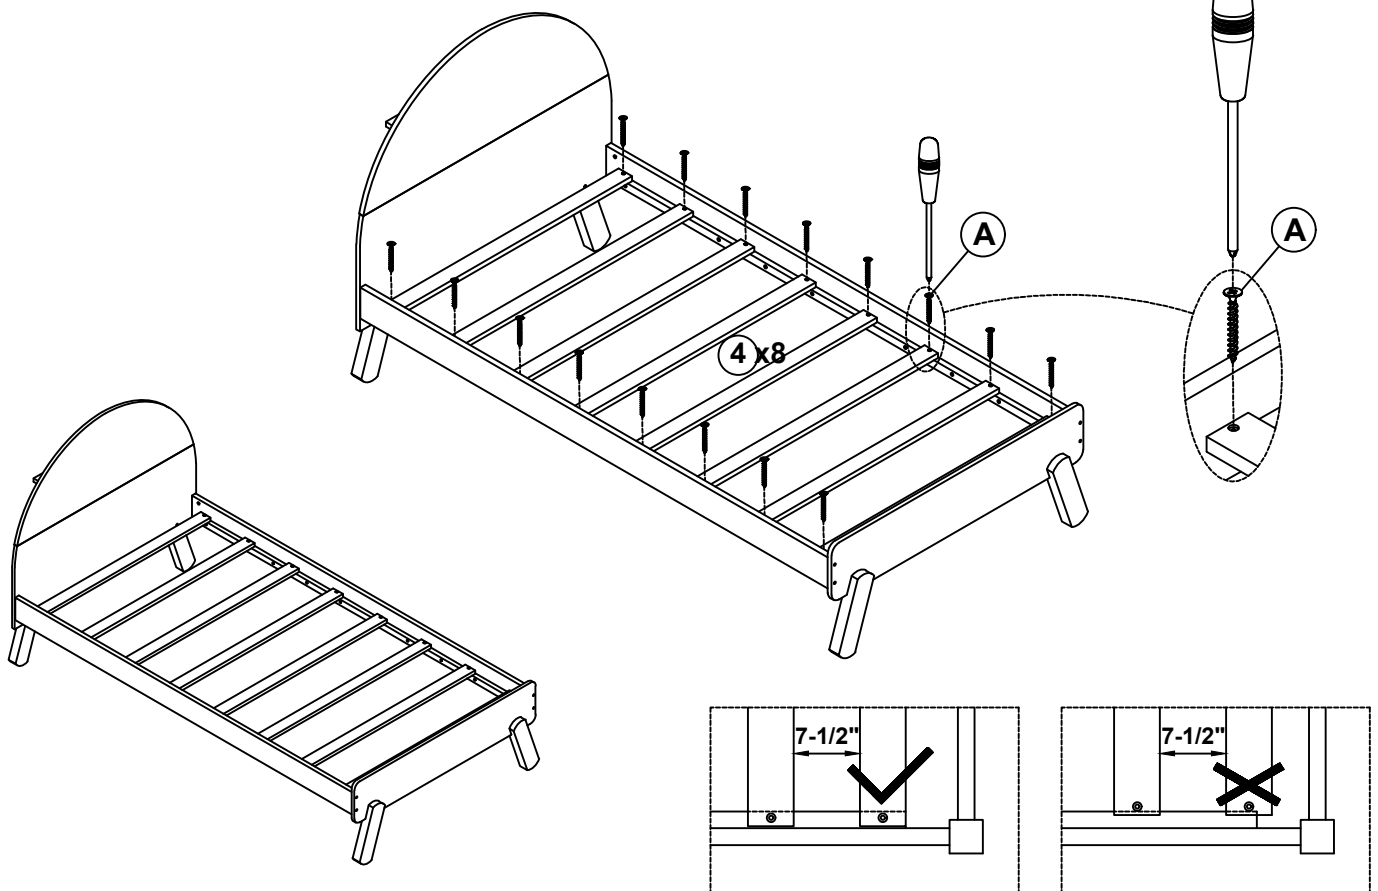

Note : Do not lock the screws of the bed slats to the outermost edge of the bed slats, you need to leave a certain space at the edges, otherwise it will cause the board to break

A	Ø4x30		16PCS
----------	-------	---	-------