





Installation & Assembly

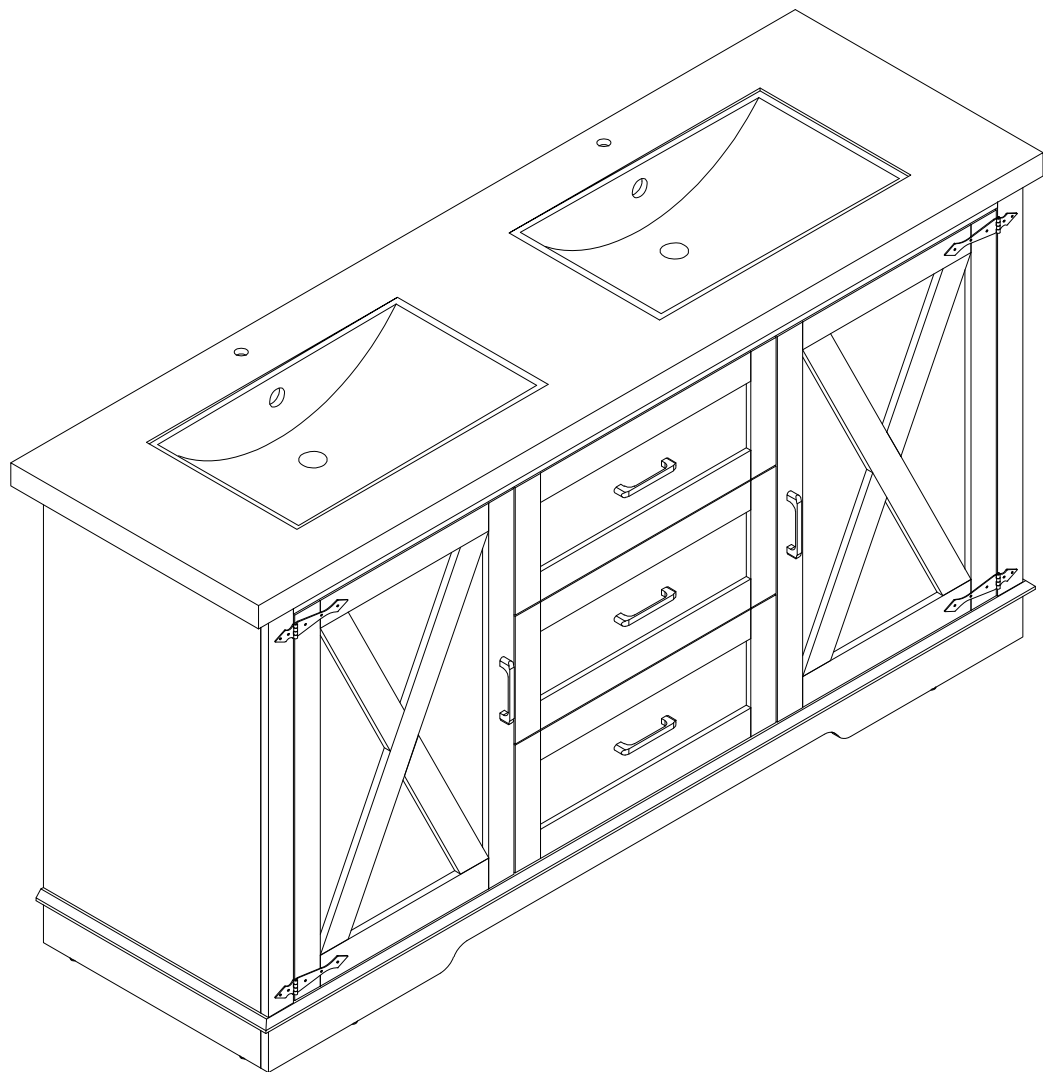

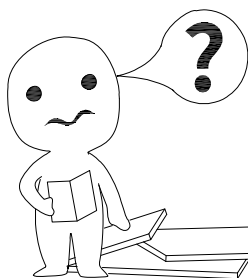



IMPORTANT INFORMATION!

please read the entire manual before starting to assemble and/or using this product. follow the manual thoroughly and keep it for further reference.

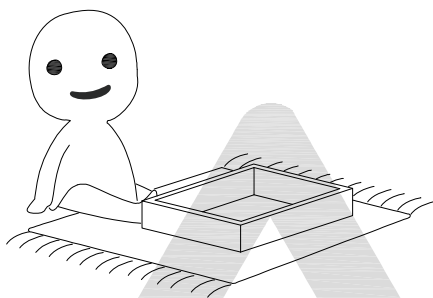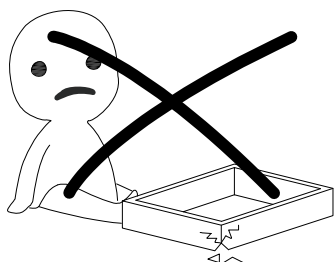





AVOID SCRATCHES!

In order to avoid scratching this furniture should be assembled on a soft layer - could be a rug.

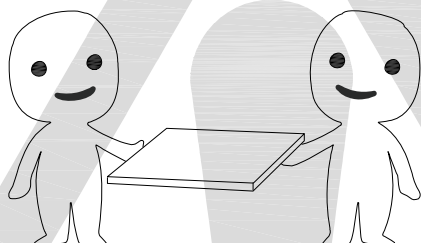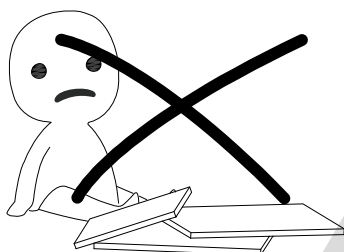

IMPROVE EFFICIENCY !

Try to find a partner to install with you, which can speed up the installation efficiency and shorten the time.

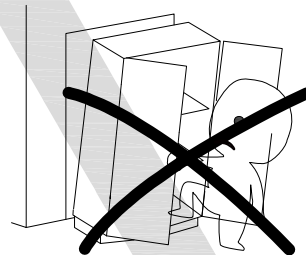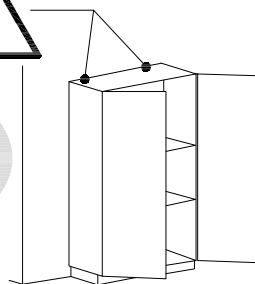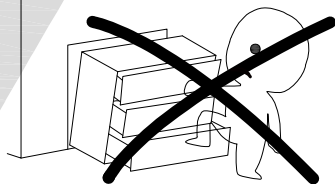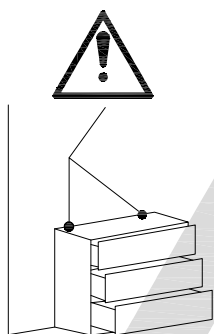

ANTI-TOPPLE WARNING !


Overturnd furniture can cause serious or fatal crush injuries. To prevent tipping over, be sure to use the wall attachment, if not included with this product. Please purchase the wall attachment that fit your wall. If unsure, seek professional advice. Please read and follow each step of the instructions carefully.

IMPORTANT !

















It is important that any product which is assembled using any kind of screw is re-tightened 2 weeks after assembly, and once every 3 months - in order to assure stability throughout the lifespan of the product.

For regular maintenance and cleaning of the product, for the frame, please use a rag dipped in neutral detergent to fully wipe it, and then dry it with a clean rag. For glass materials, wipe with a rag dampened with water glass cleaner, and then dry with a dry rag.














Do not use an electric screwdriver, and do not use too much force when installing, because the board is easy to break.

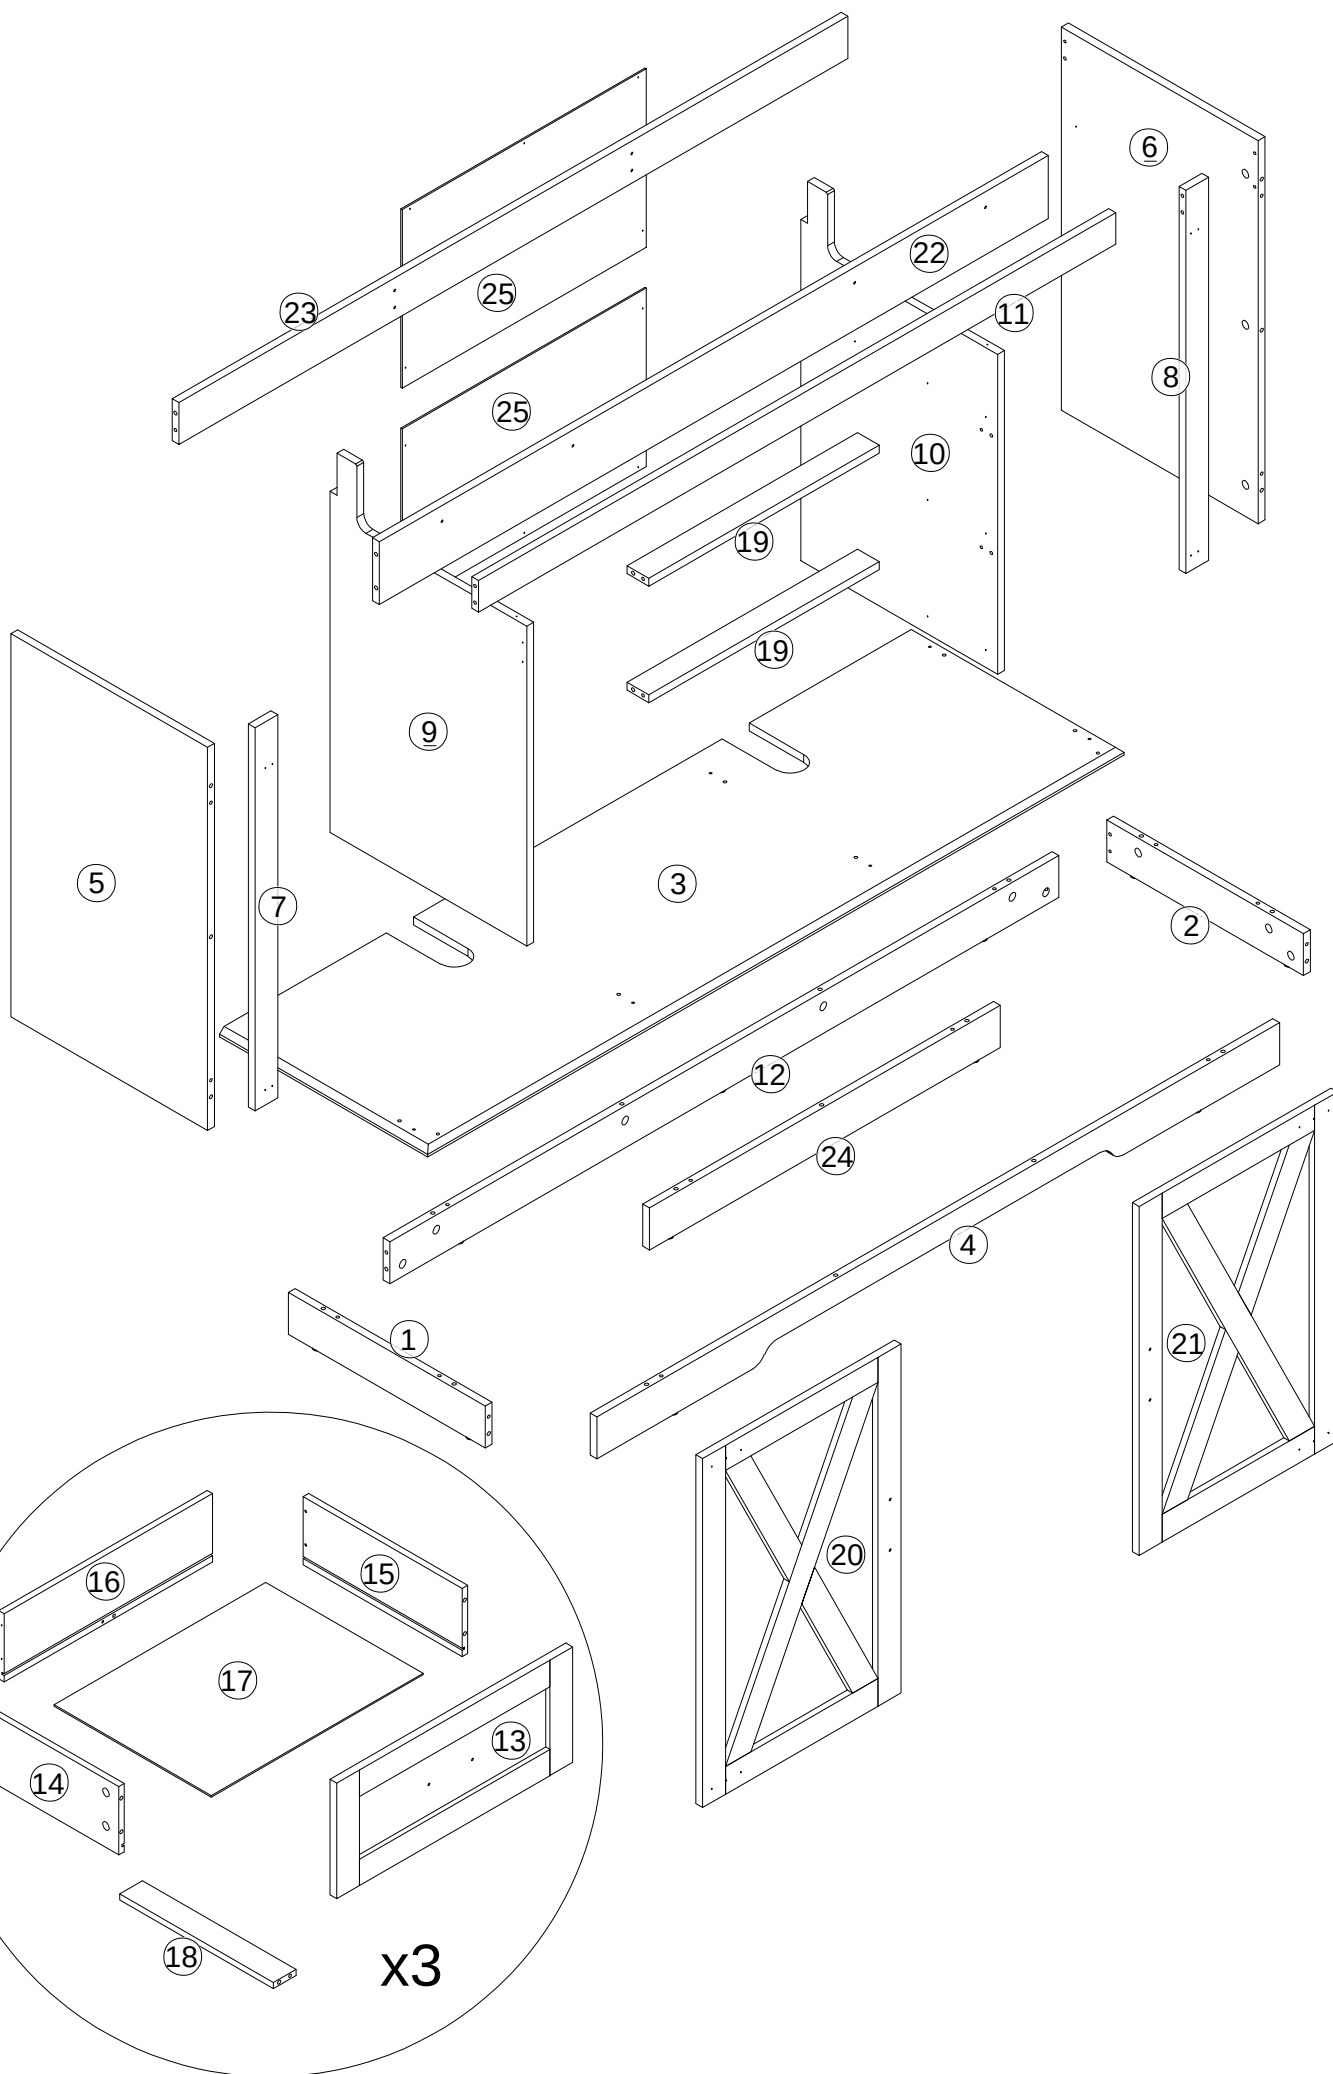

Parts and Operation Elements

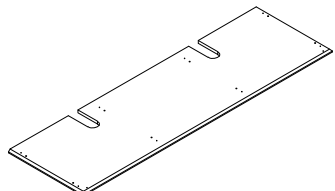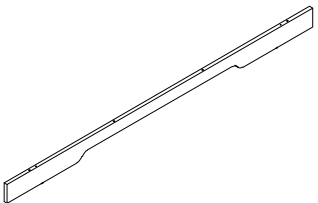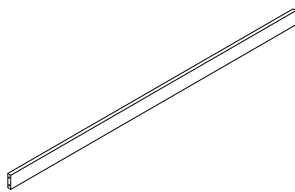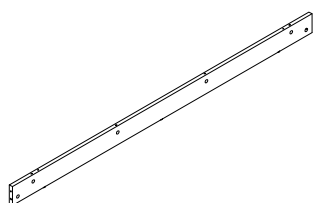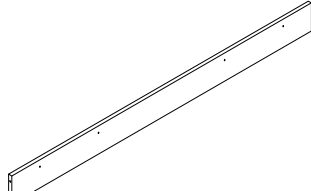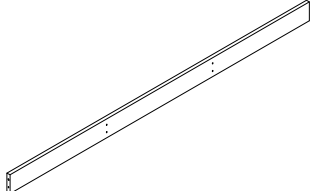							
①	1 pc	②	1 pc	③	1 pc	④	1 pc
							
⑤	1 pc	⑥	1 pc	⑦	1 pc	⑧	1 pc
							
⑨	1 pc	⑩	1 pc	⑪	1 pc	⑫	1 pc
							
⑬	3 pcs	⑭	3 pcs	⑮	3 pcs	⑯	3 pcs
							
⑰	3 pcs	⑱	3 pcs	⑲	2 pcs	⑳	1 pc
							
㉑	1 pc	㉒	1 pc	㉓	1 pc	㉔	1 pc
							
㉕	2 pcs						





Hardware

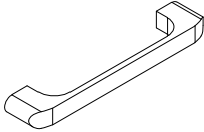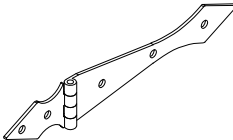 Cam bolt		 Cam Lock		 Sticker		 7x30mm Wood dowel	
A	52+2 pcs	B	52+2 pcs	C	52+2 pcs	D	42+2 pcs
 4x30mm screw		 4x6mm screw		 4x18mm screw		 5x40mm screw	
E	19+2 pcs	F	6 pcs	G	4 pcs	H	8+2 pcs
 3.5x12mm screw		   5x40mm screw 4x12mm screw Unit-dumping device					
J	48+2 pcs	K	2 pcs			L	5 pcs
 3.5x14mm screw						 4x14mm screw	
M	10+2 pcs	N	4 pcs	P	2 pcs	Q	20+2 pcs
 4x25mm screw		  S-1 S-2		 Uual-purpose screwdrivr		 350mm	
R	4 pcs	S	2 pcs	T	1 pc	CL	3 pcs
 350mm		 350mm		 350mm			
CR	3 pcs	DL	3 pcs	DR	3 pcs		








SPARE BAG



THE SPARE BAG INCLUDED EXTRA HARDWARE FOR DAMAGED
OR MISSING SMALL HARDWARE WHILE YOU ARE ASSEMBLING

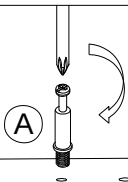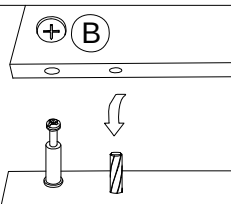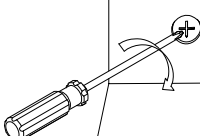							
Gently screw cam bolt into the threaded anchor.		Insert the wood dowel halfway into hole.		Arrow must face hole		Screw the camlock firmly into locked position.	

1

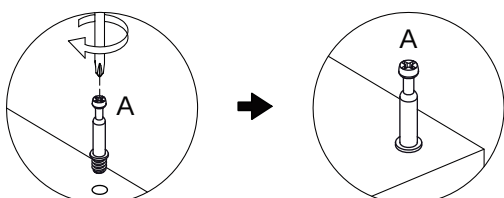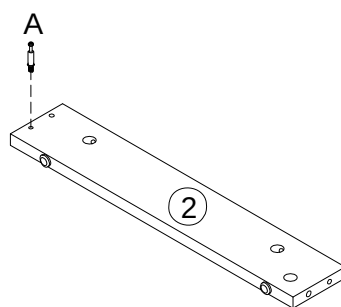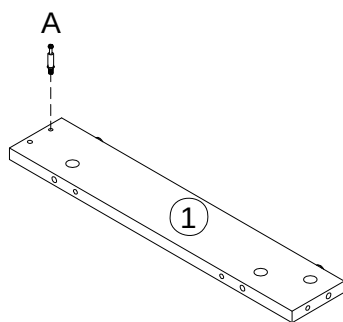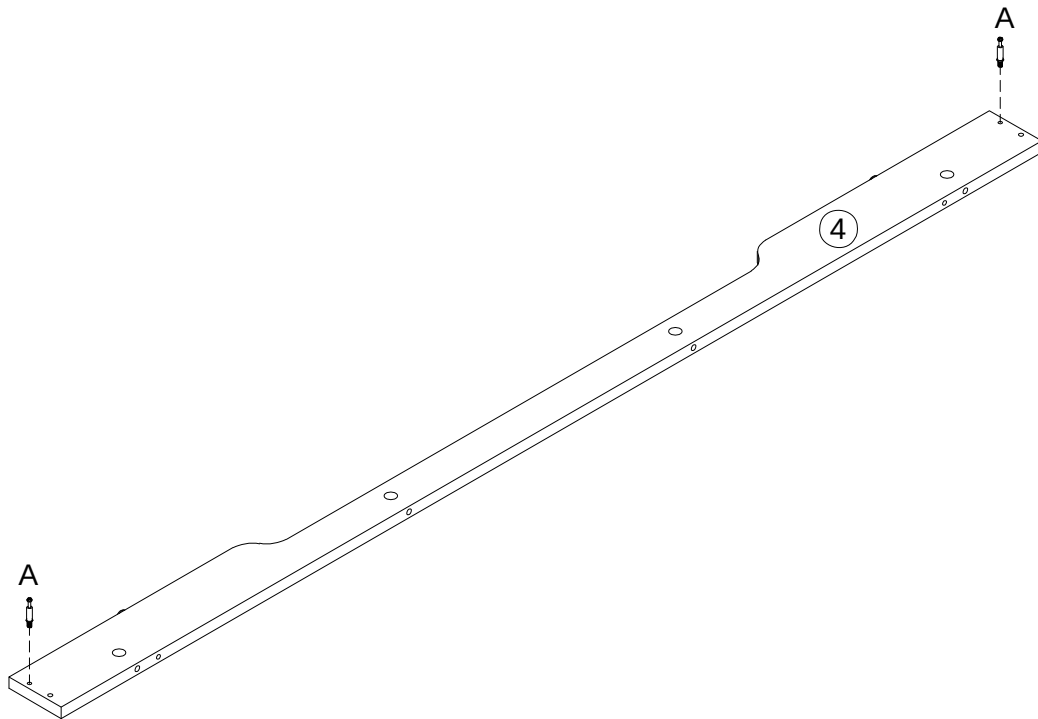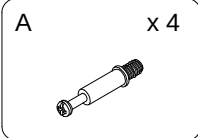

2

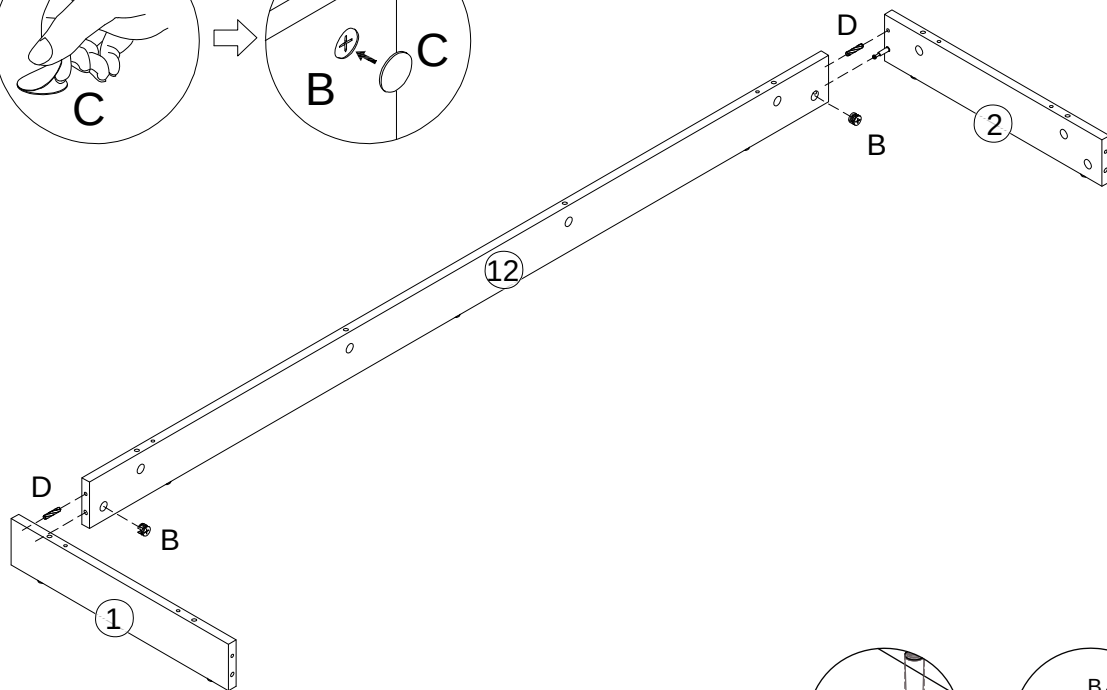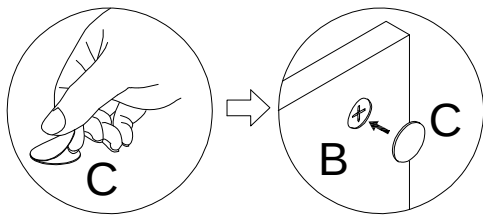


B x 2





C x 2



D x 2

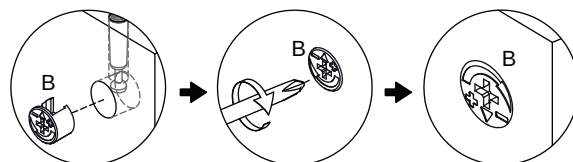

3

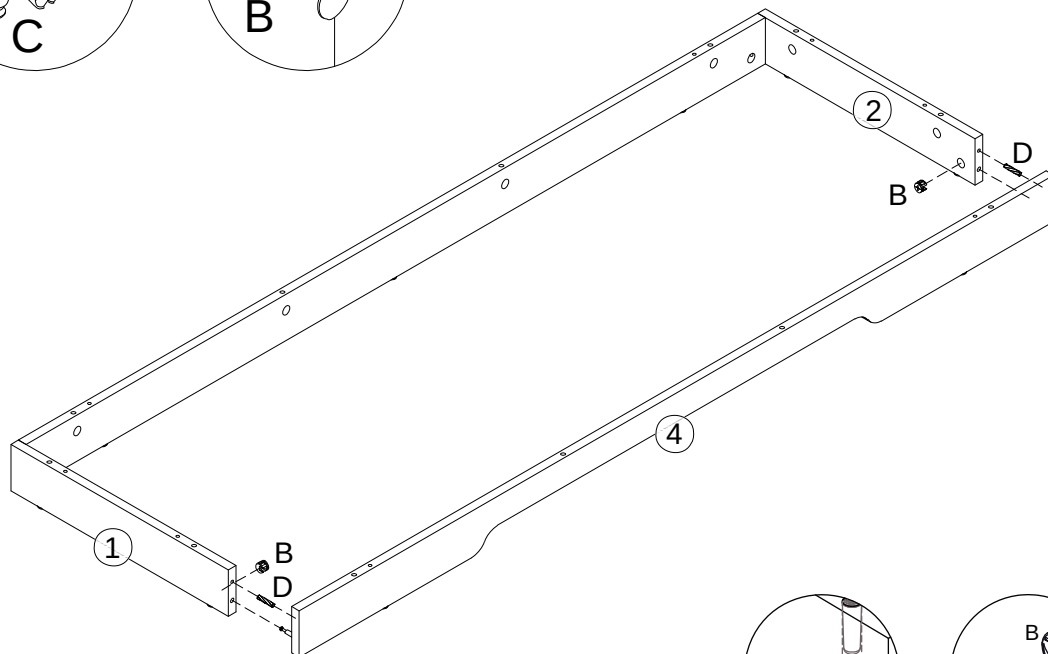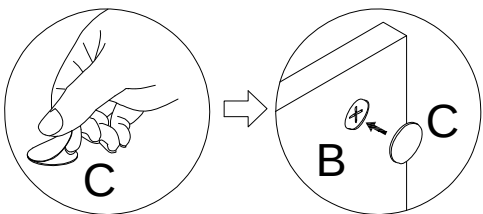


B x 2




C x 2



D x 2

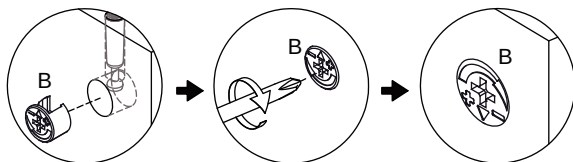

4

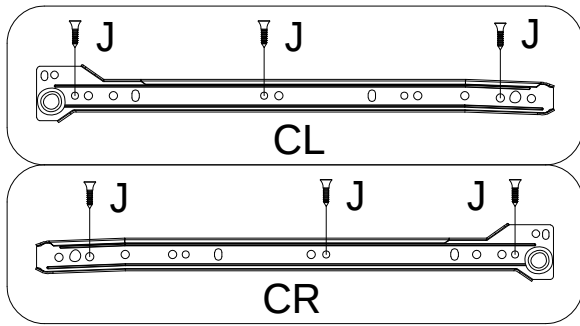

A x 4



J x 22






S-1 x 2



CL x 3






CR x 3

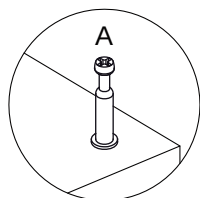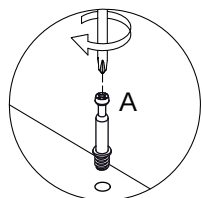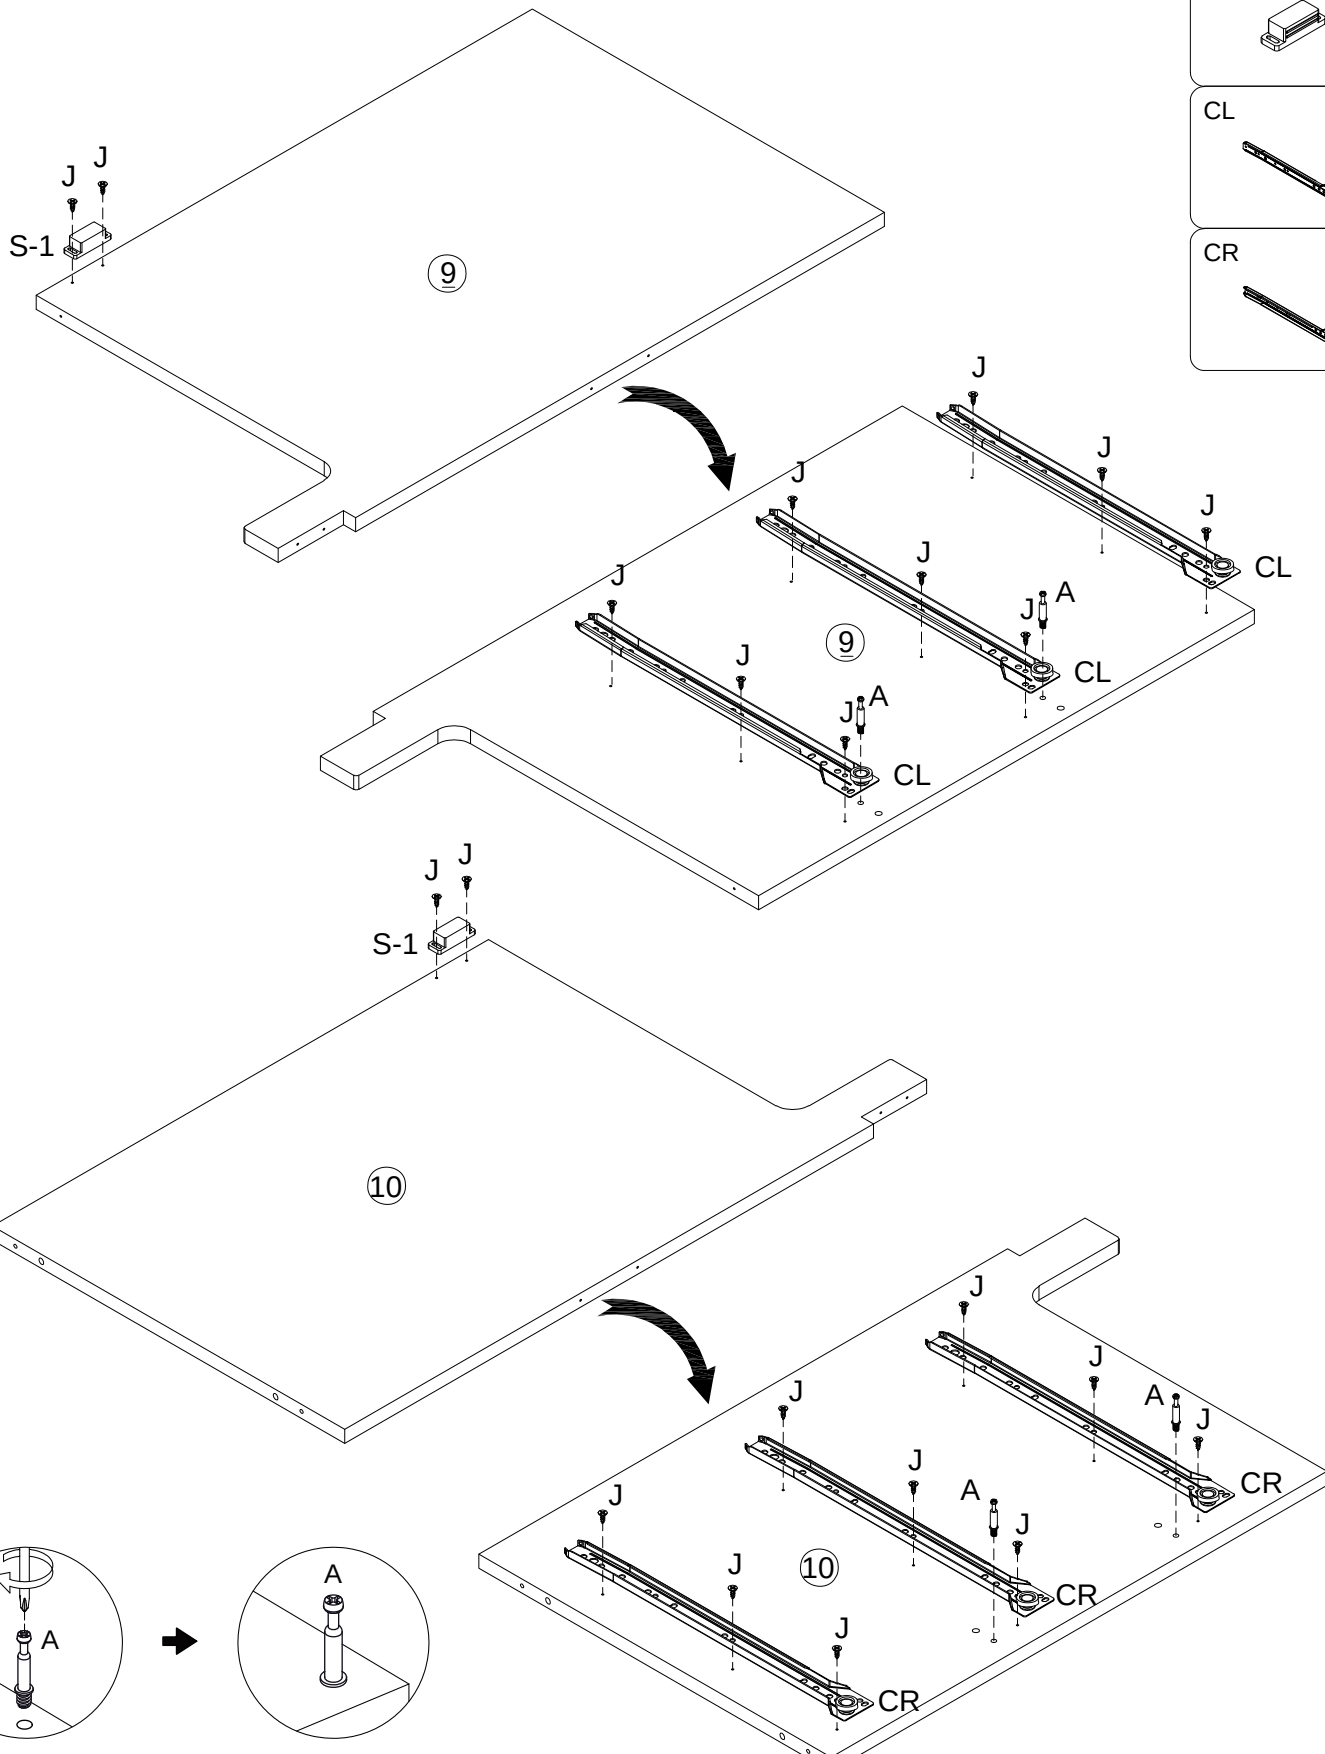

5

A x 6

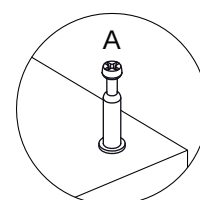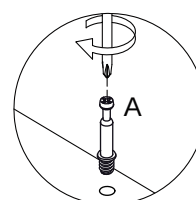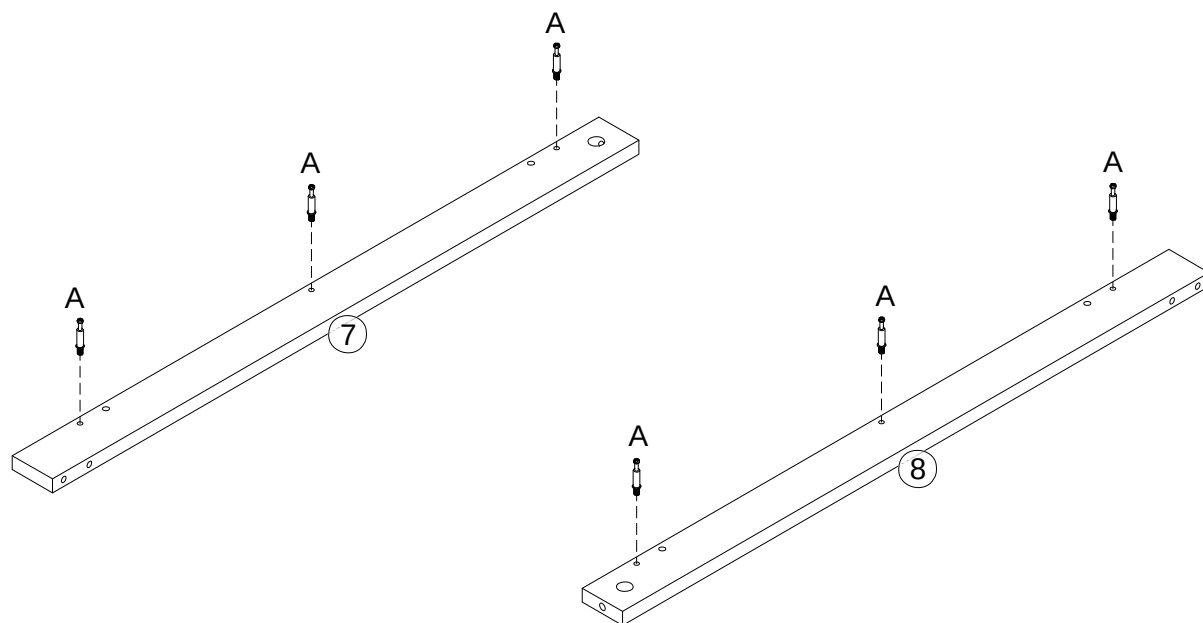

6

A x 6








B x 6




C x 6



D x 4

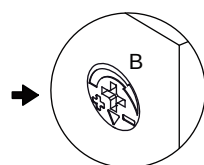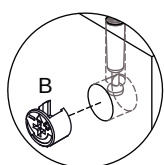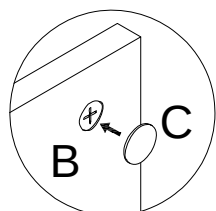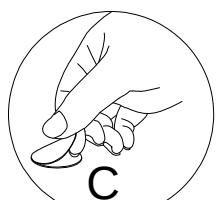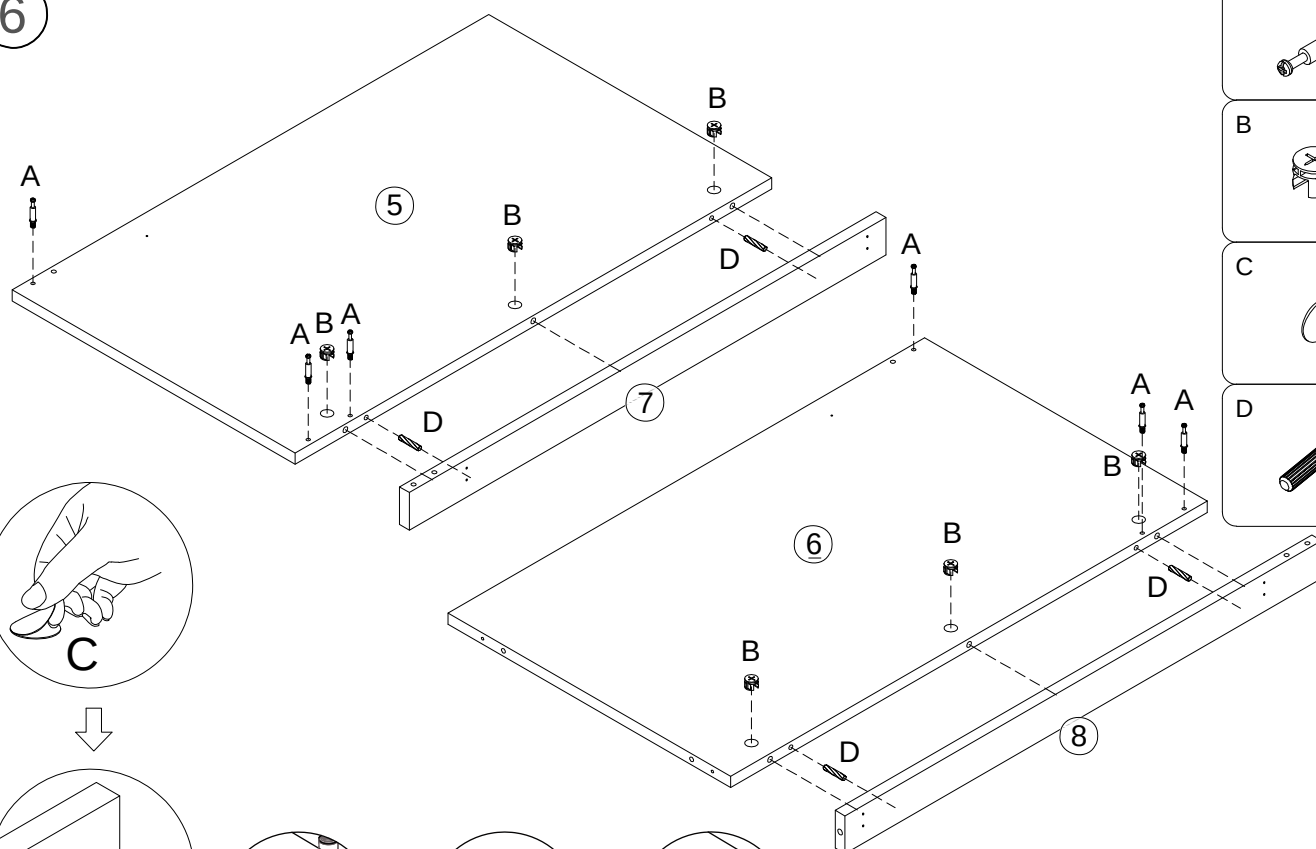

7

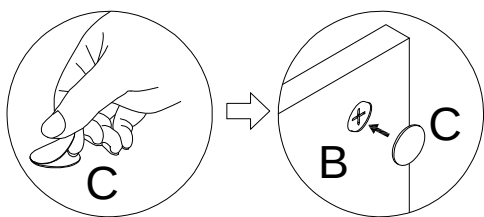



B x 4



C x 4




D x 4

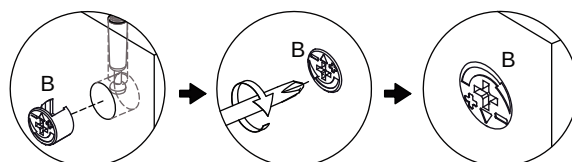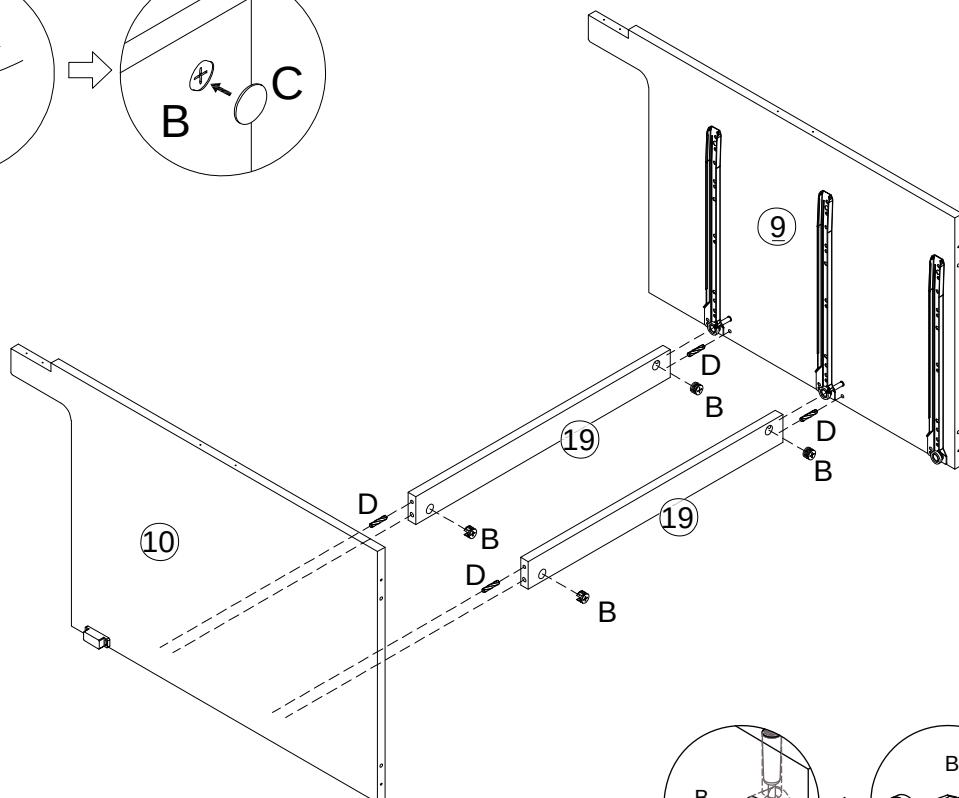


8

E x 4

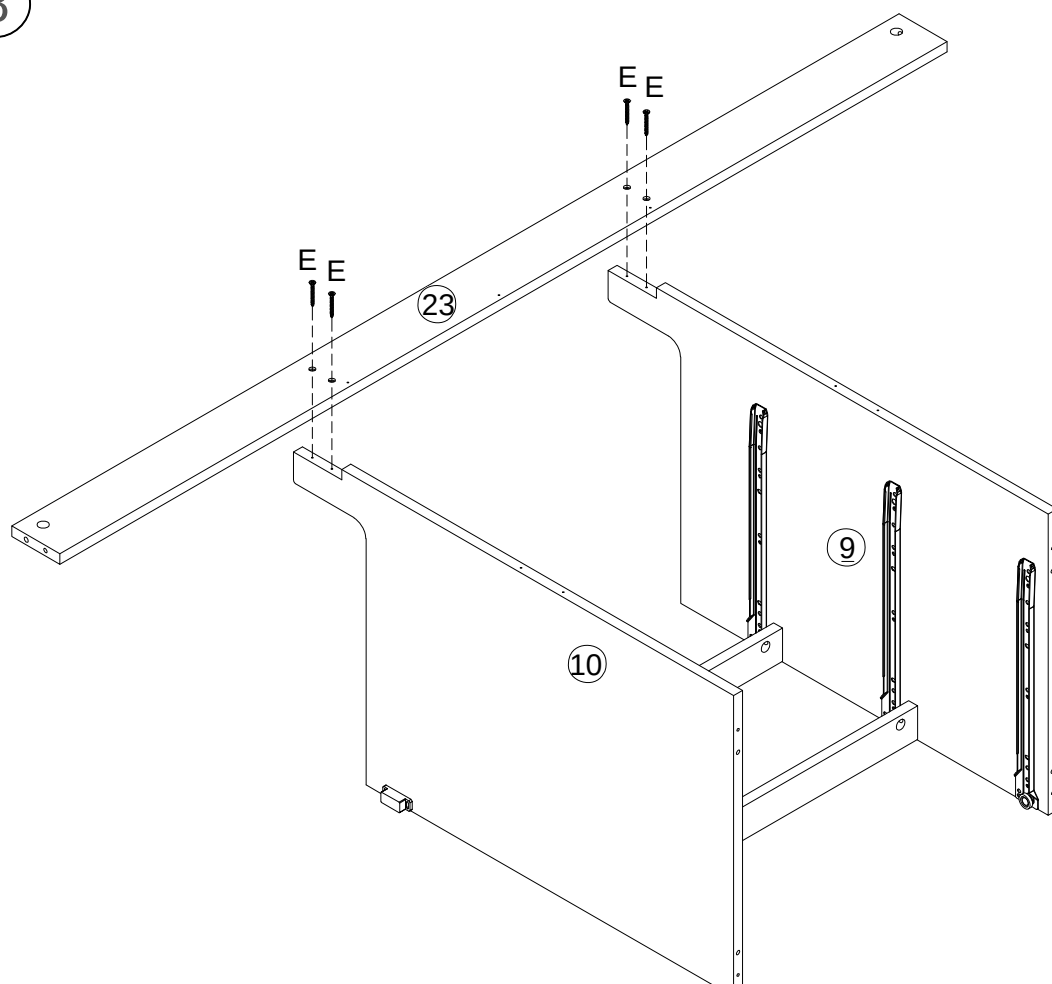


9

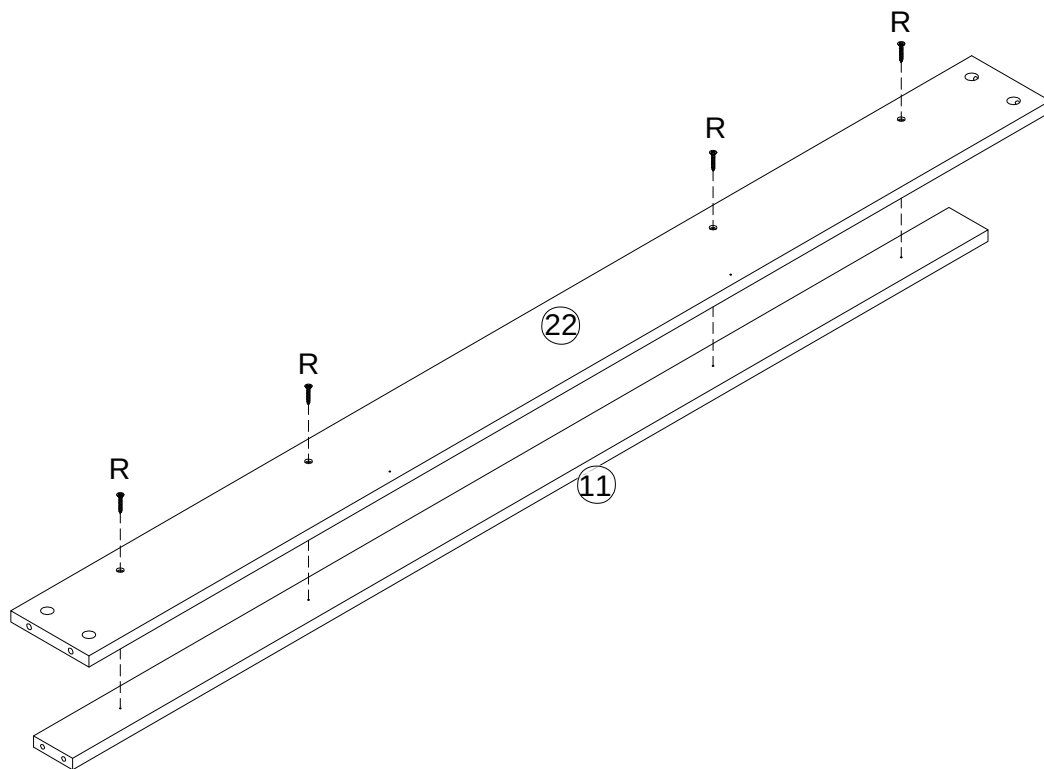

R x 4



10

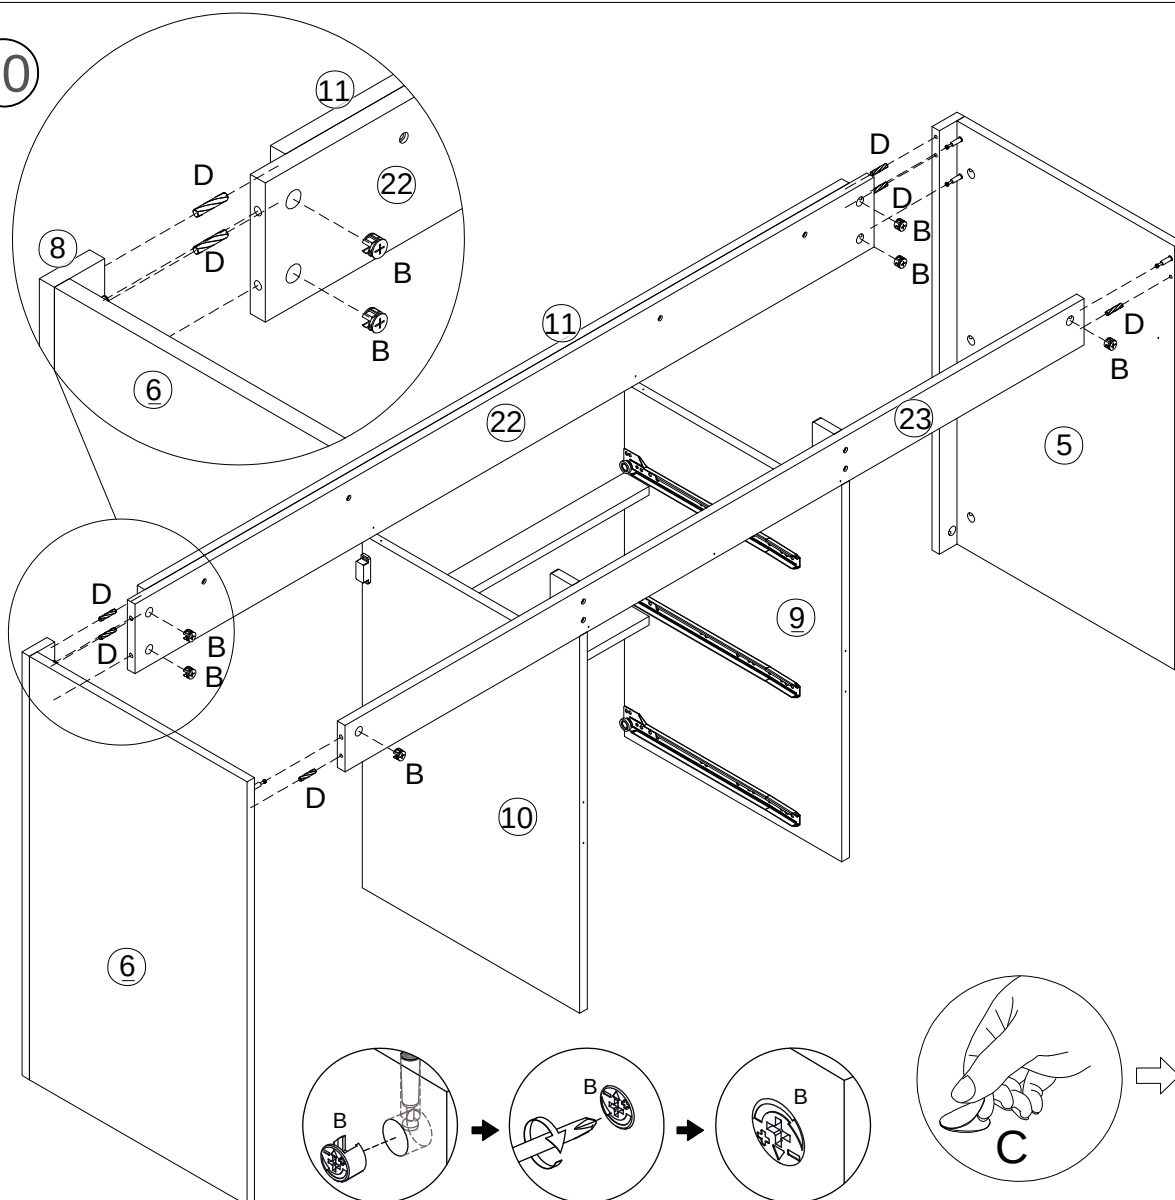





B x 6





C x 6



D x 6

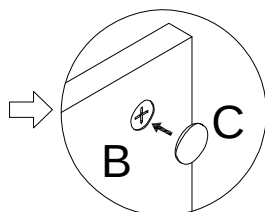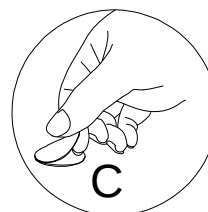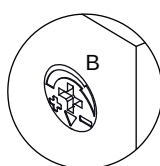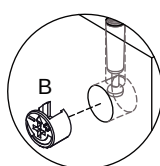

11

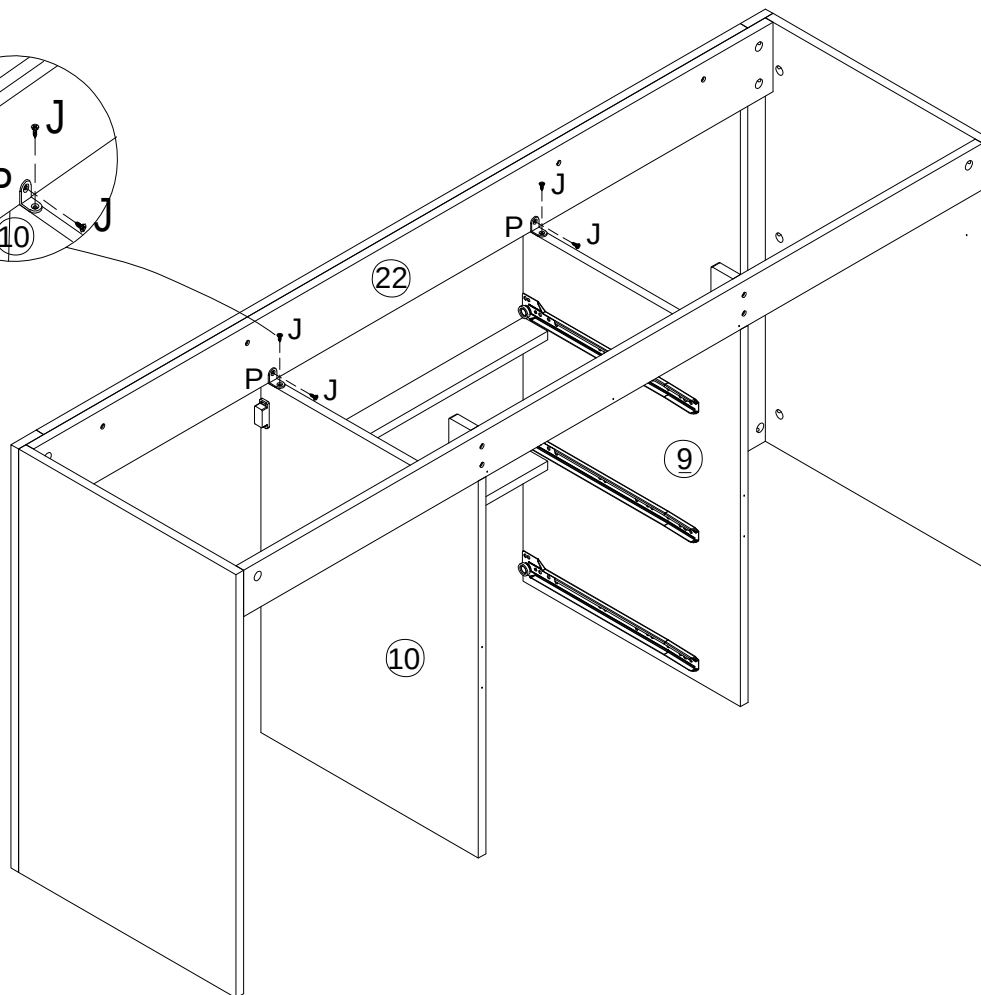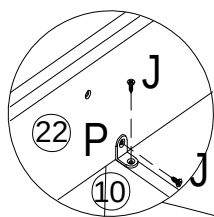


J x 4





P x 2






12

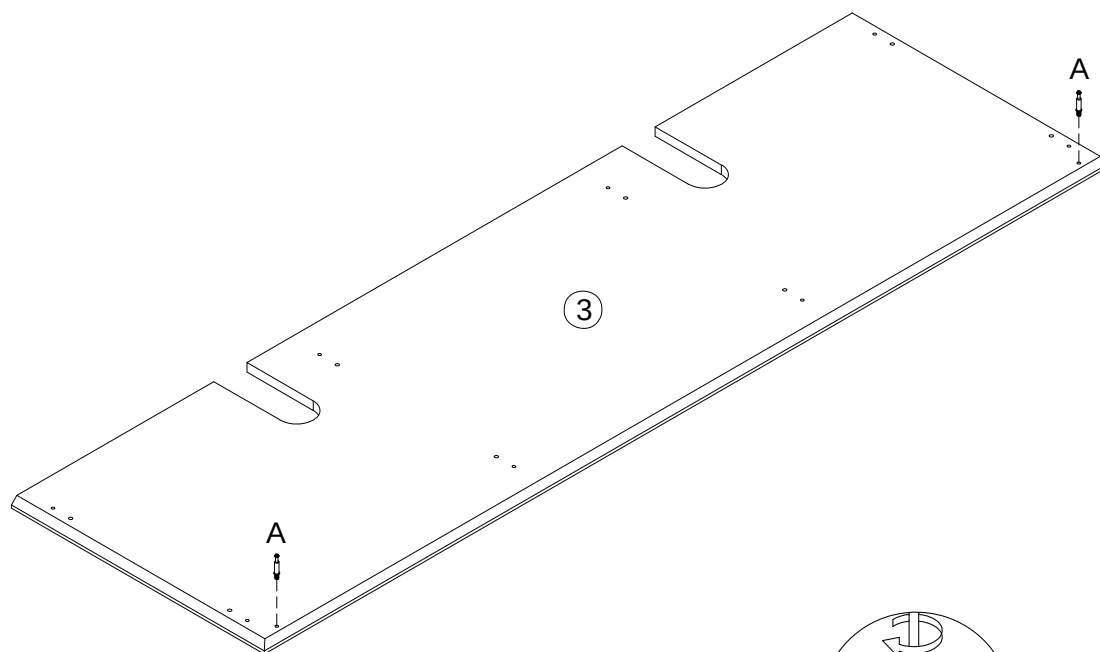


A x 2

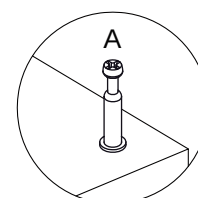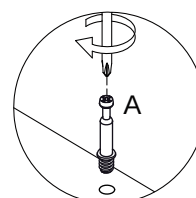





13

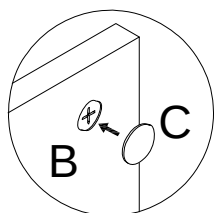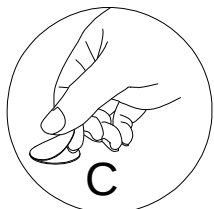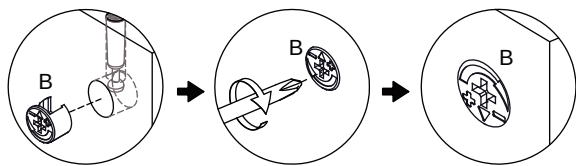










B	x 2
C	x 2
D	x 8
H	x 8

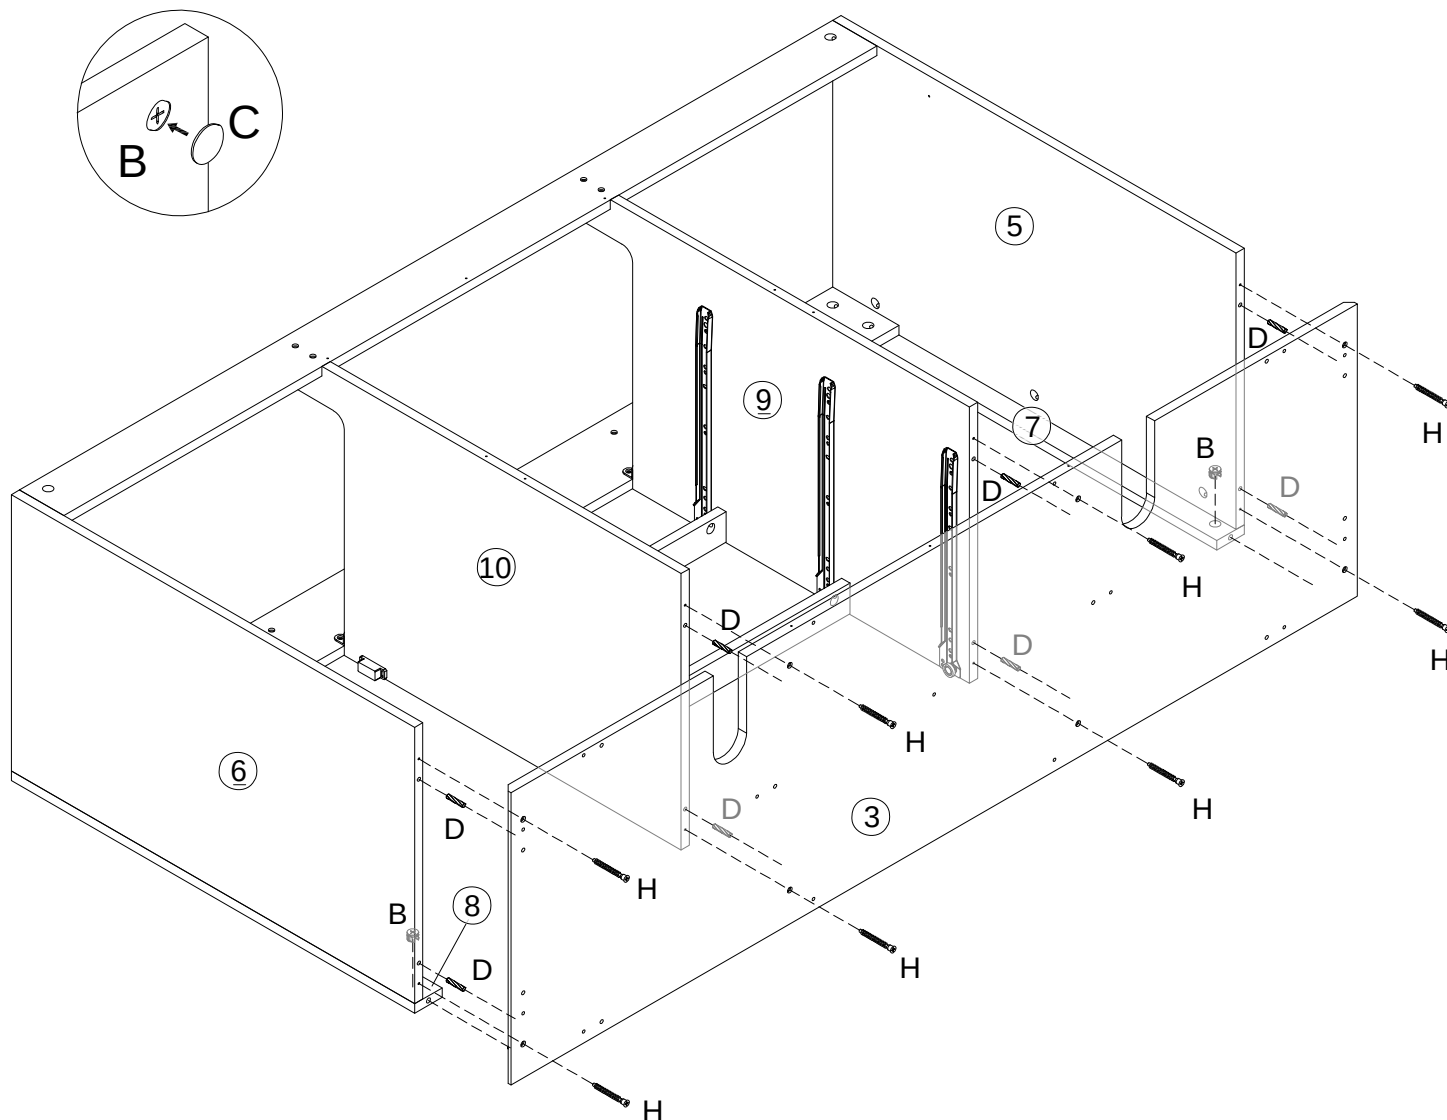


14

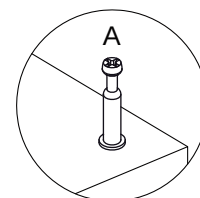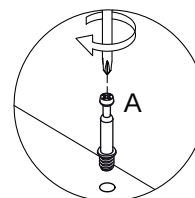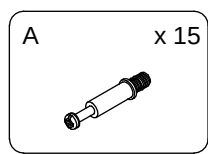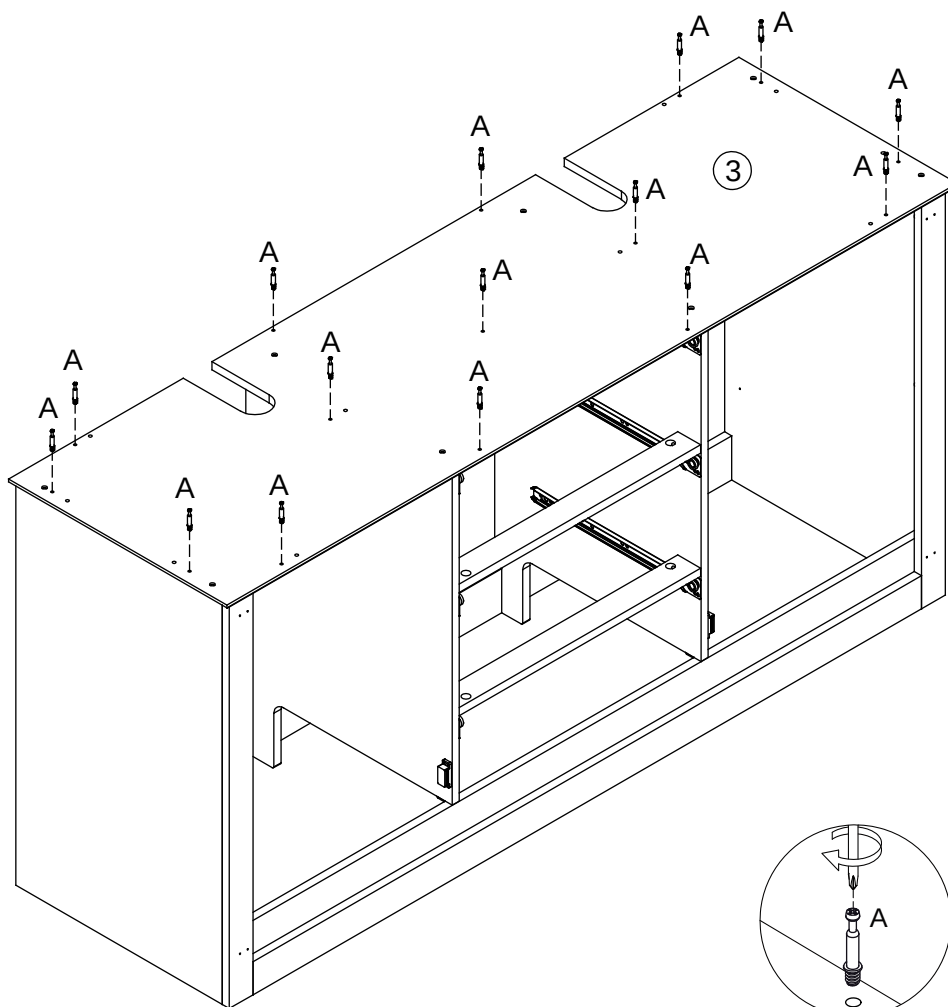

15

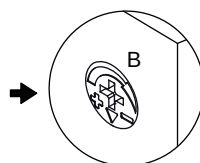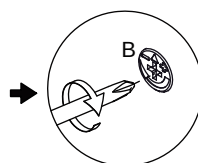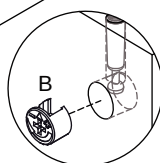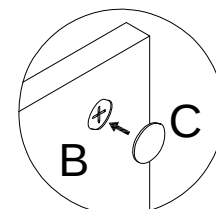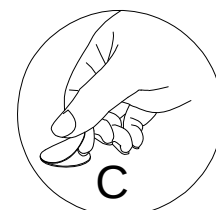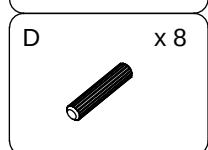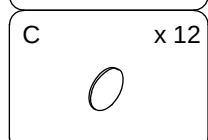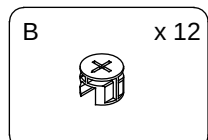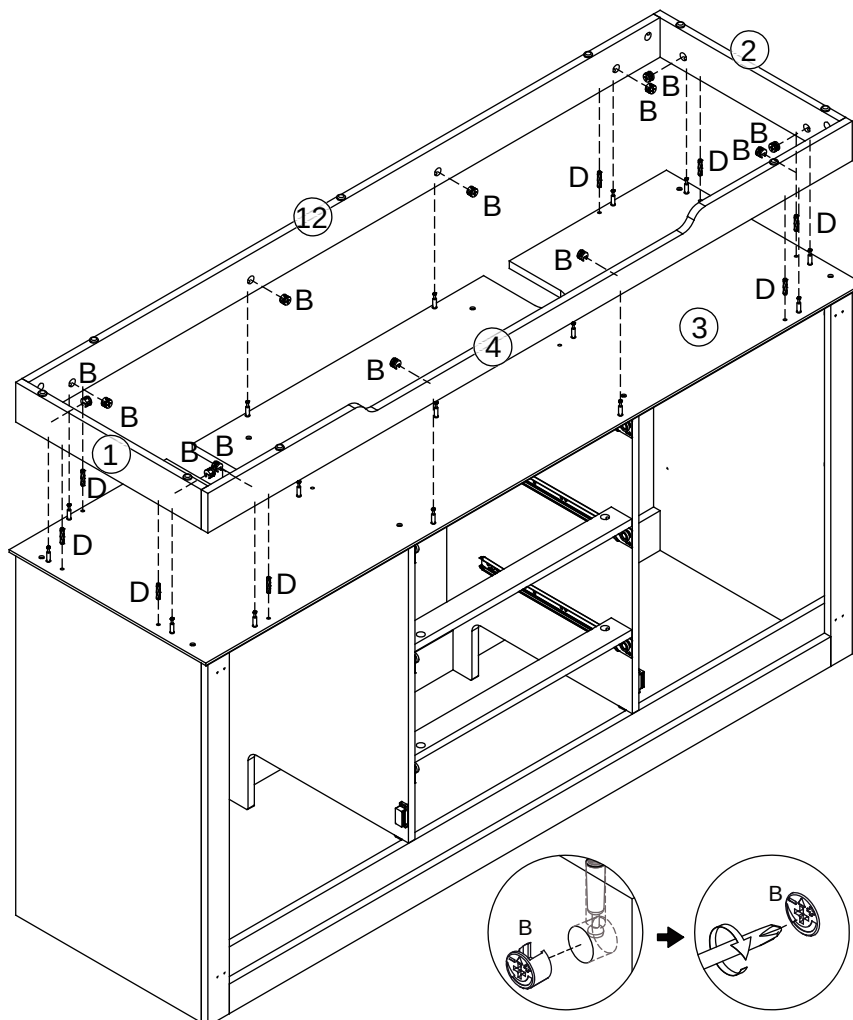

16

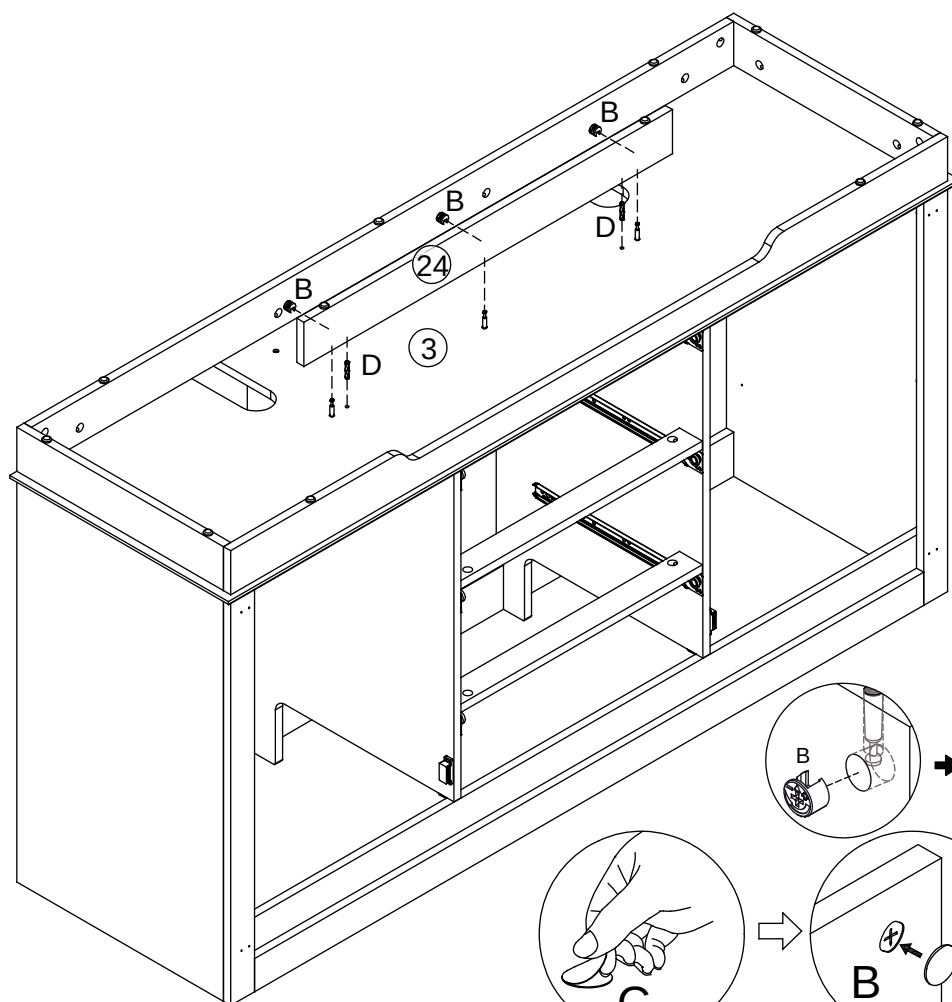

B x 3




C x 3



D x 2








17

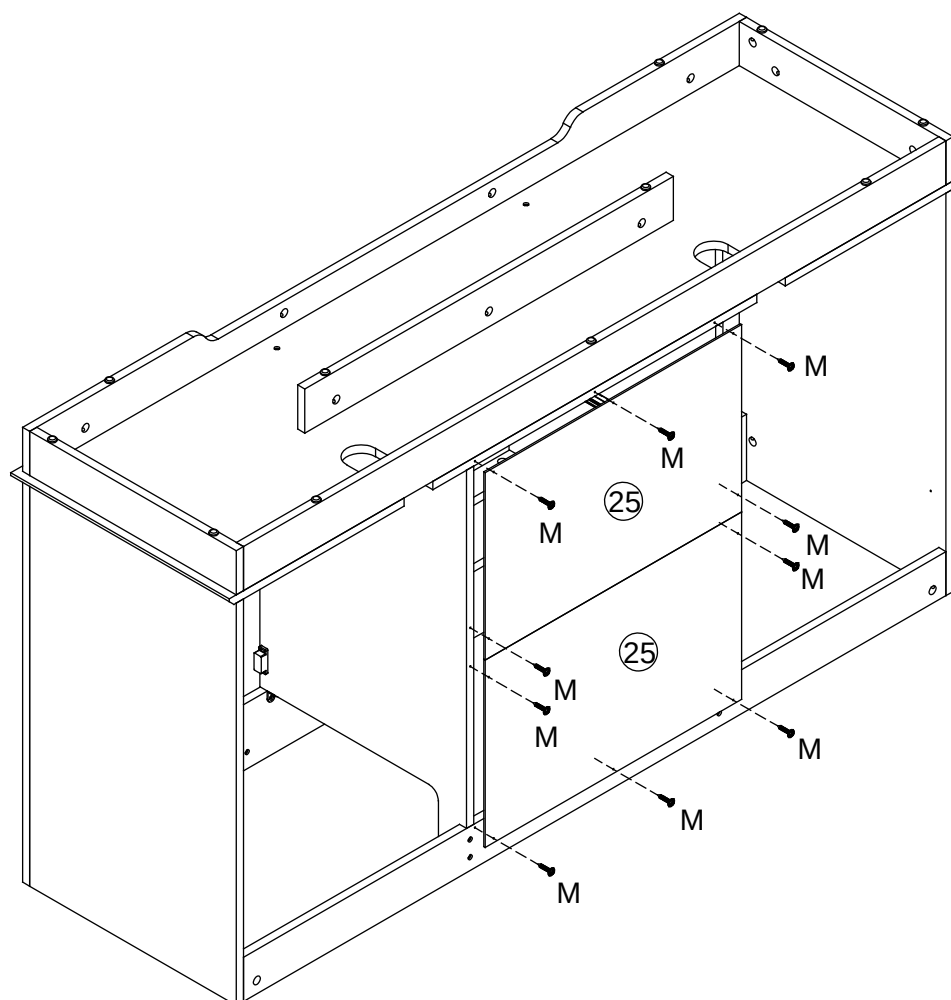

M x 10




18

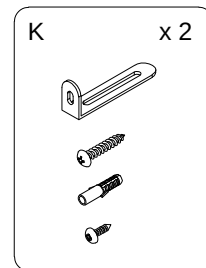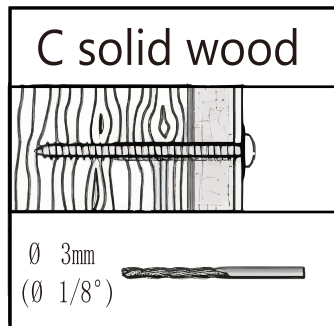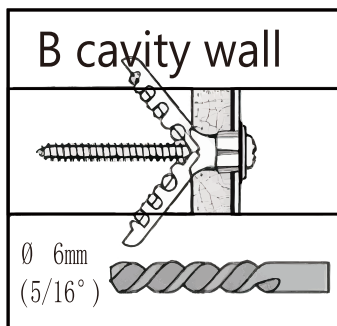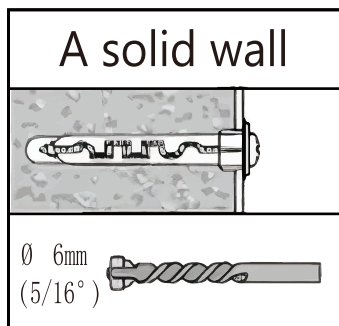
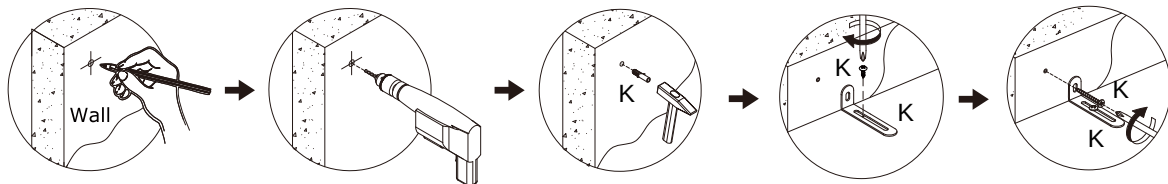


! Warning: If you overturn the furniture, it may cause serious or fatal crushing injuries.
We have a wall connection device attached, please use it to hold the furniture following these instructions.

1. Mark the corresponding hole positions where you want to place the furniture;
2. Use a impact drill to drill holes and pay attention to avoid wires and water pipes;
3. Knock the expansion pipes into the wall holes;
4. Place the furniture in the corresponding position and tighten the wall connection device with screws.

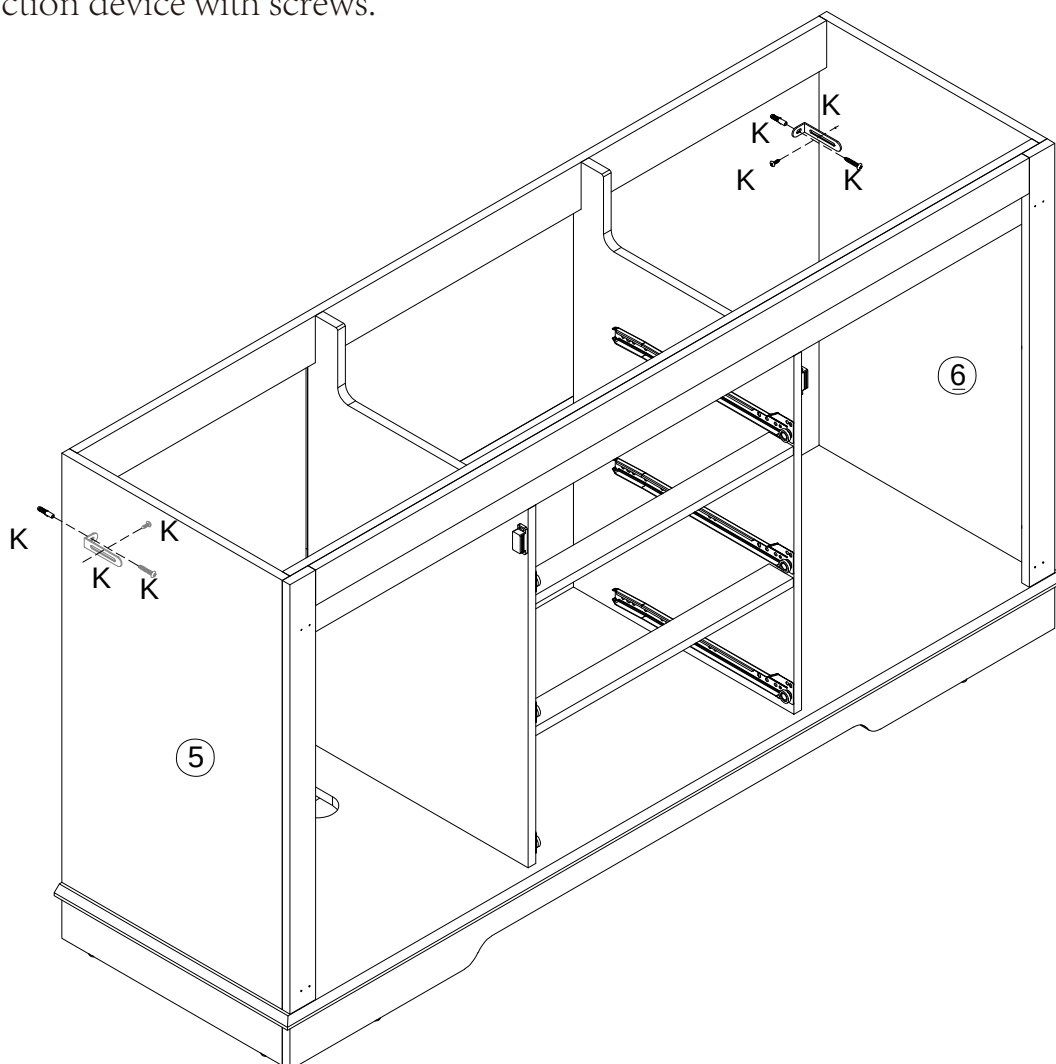

19

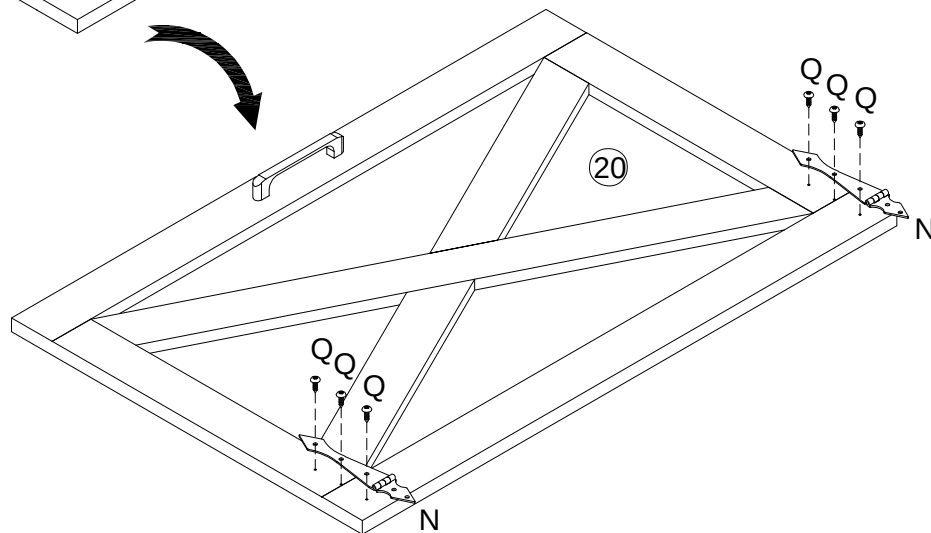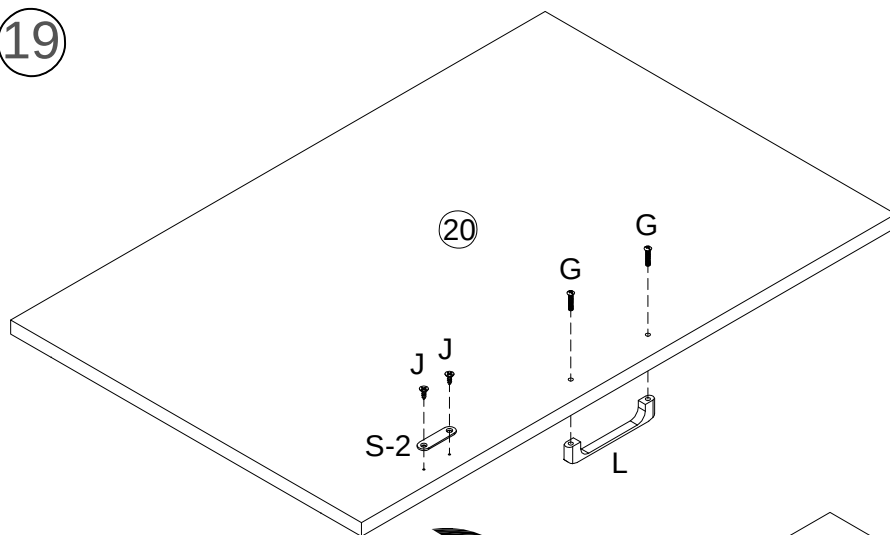

J x 4



G x 4

L x 2






N x 4

Q x 12



S-2 x 2

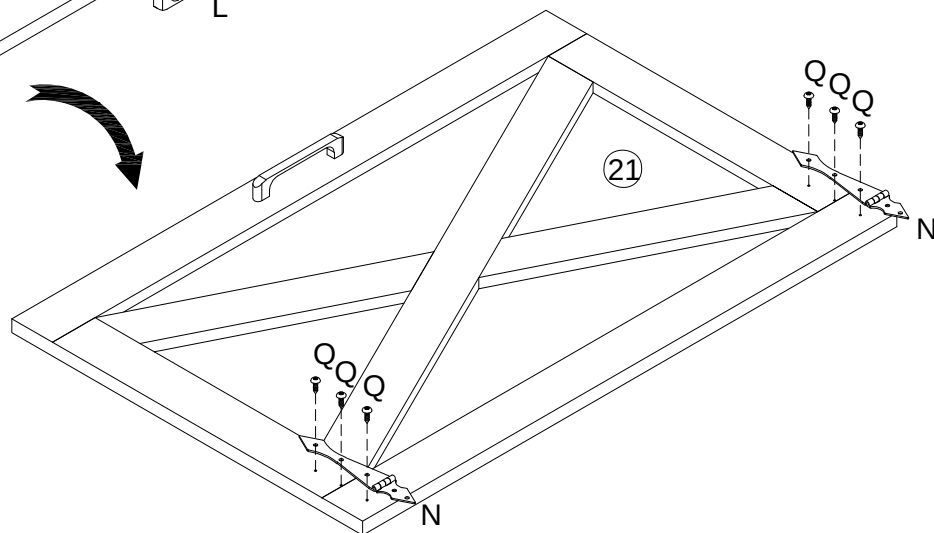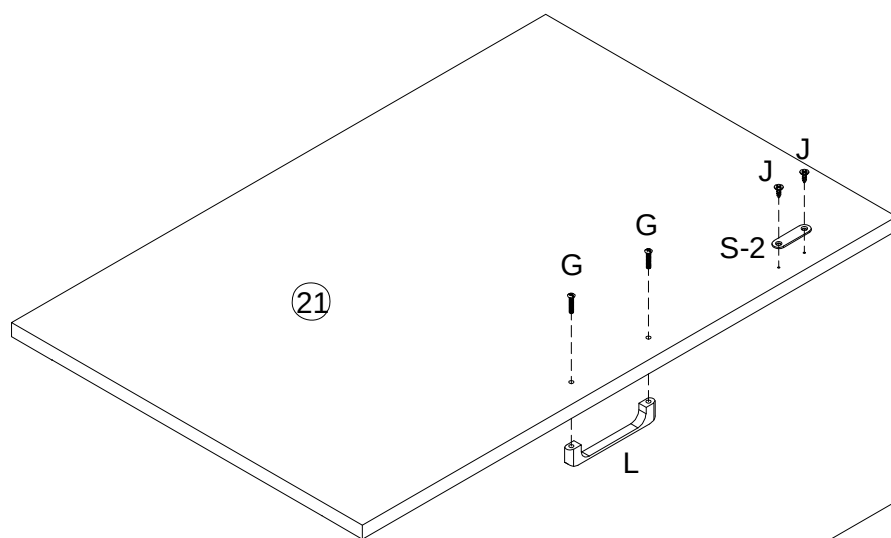

20

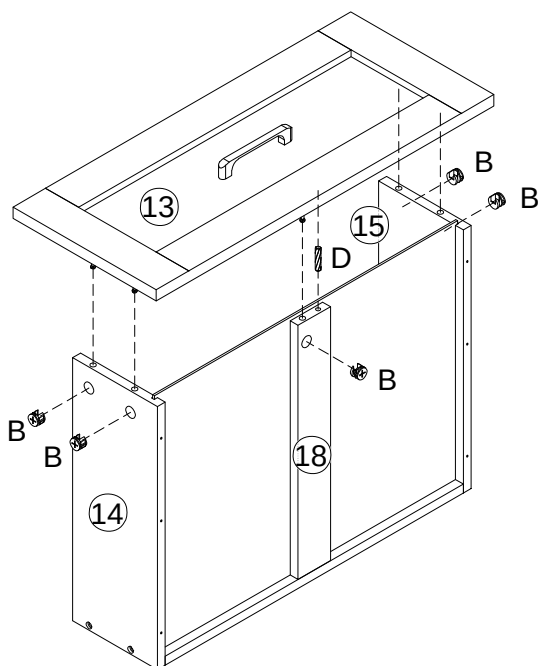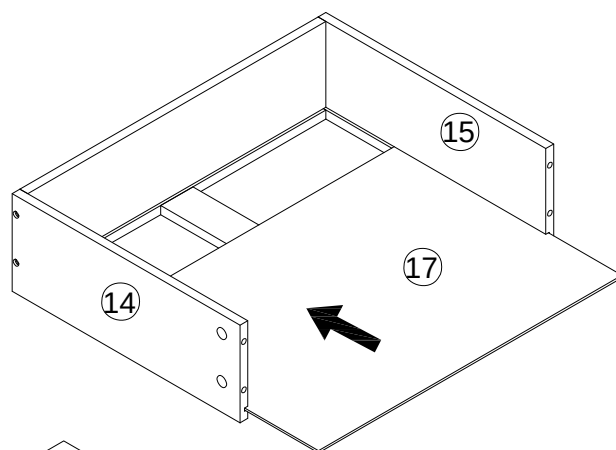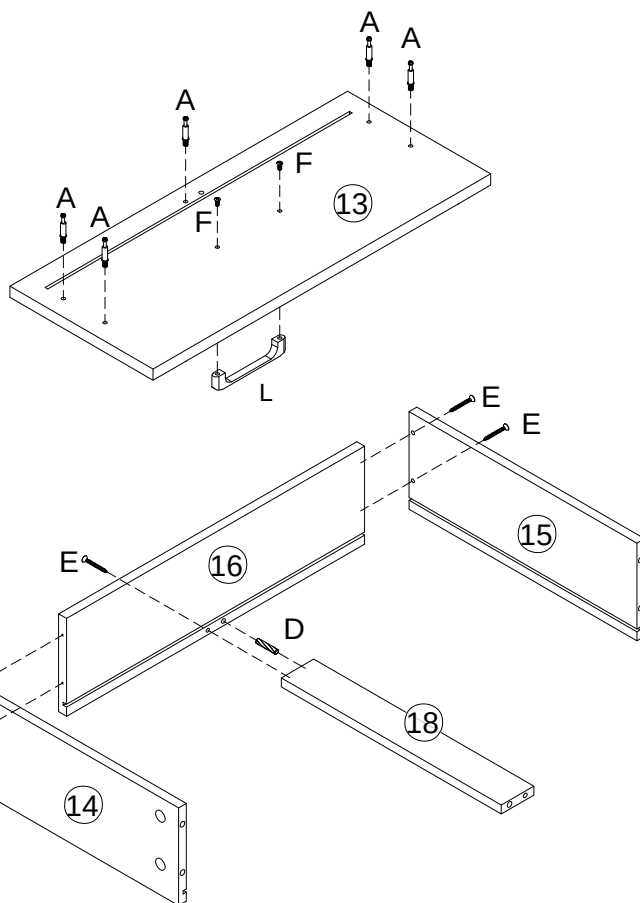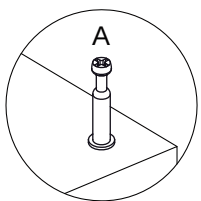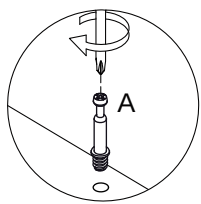


- A x 15
- B x 15
- C x 15
- D x 6
- E x 15
- F x 6
- L x 3

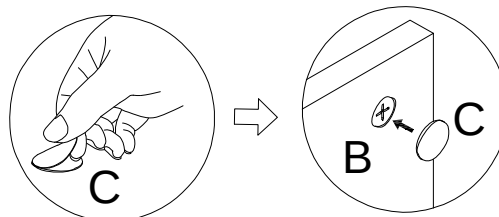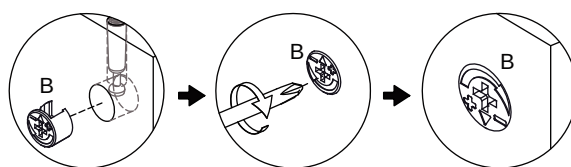

x3

21

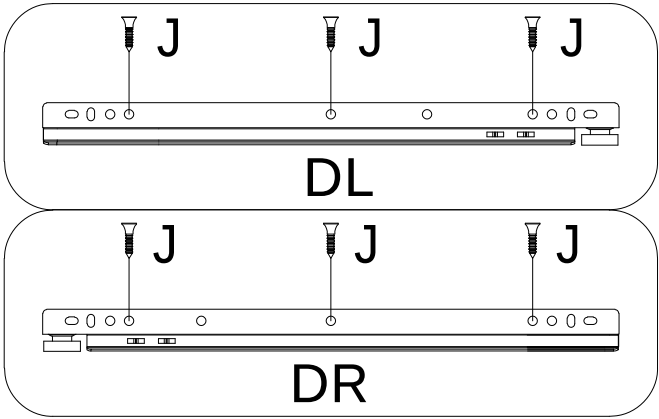



J x 18



DL x 3





DR x 3

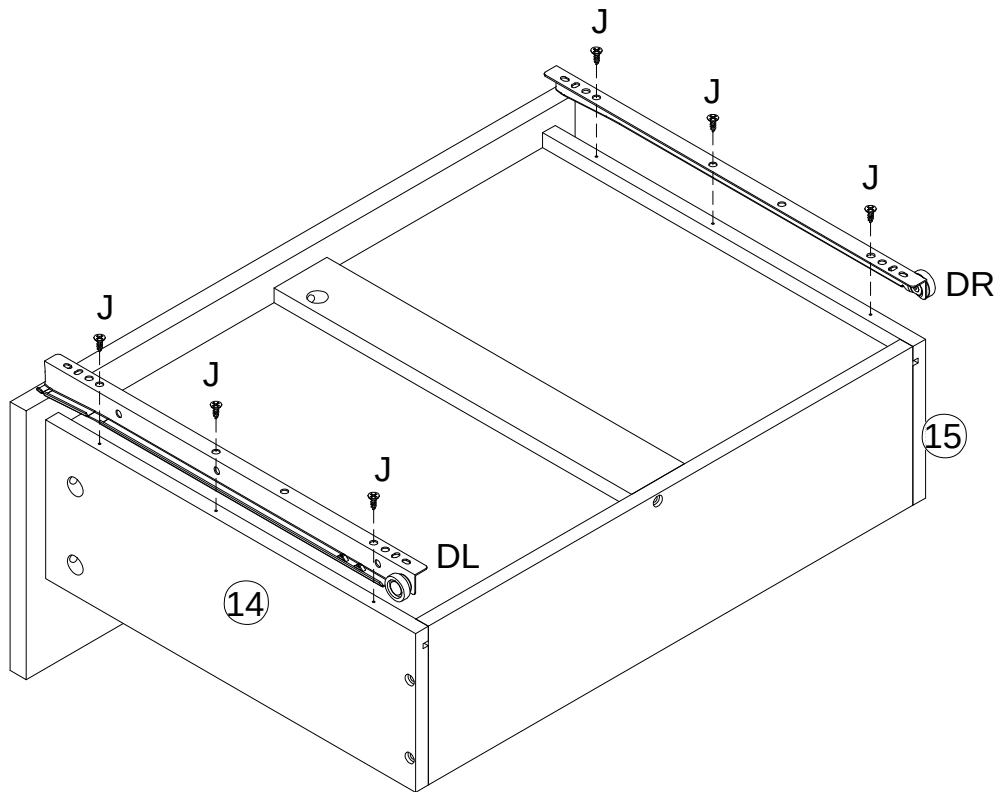


x3

22

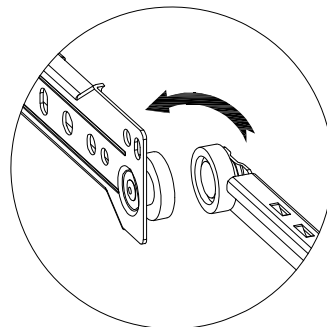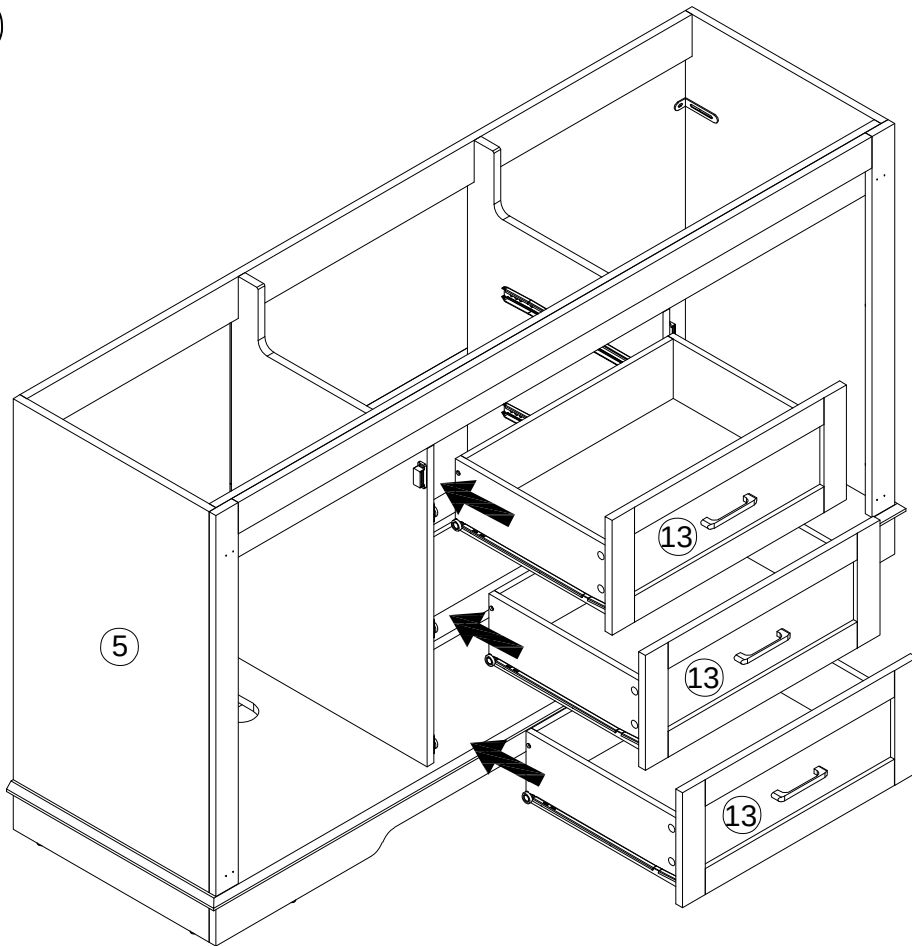


23

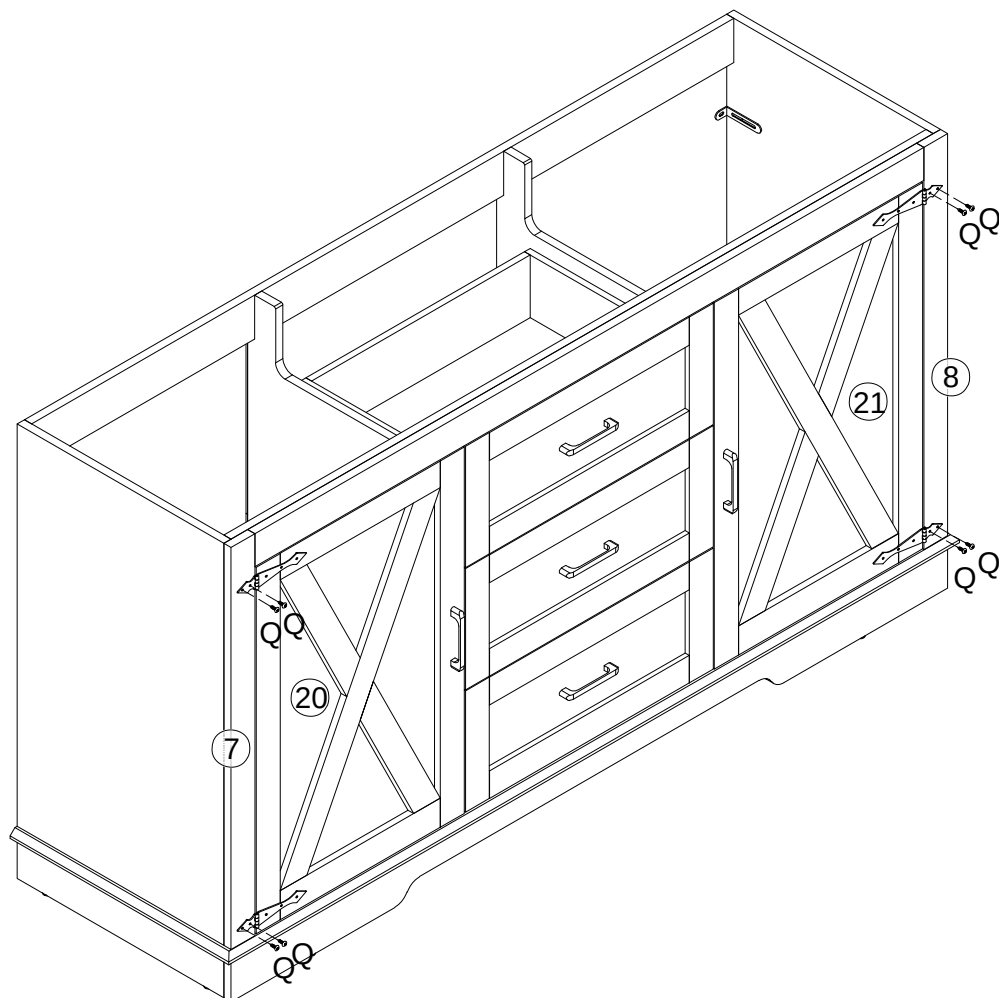

Q x 8



24

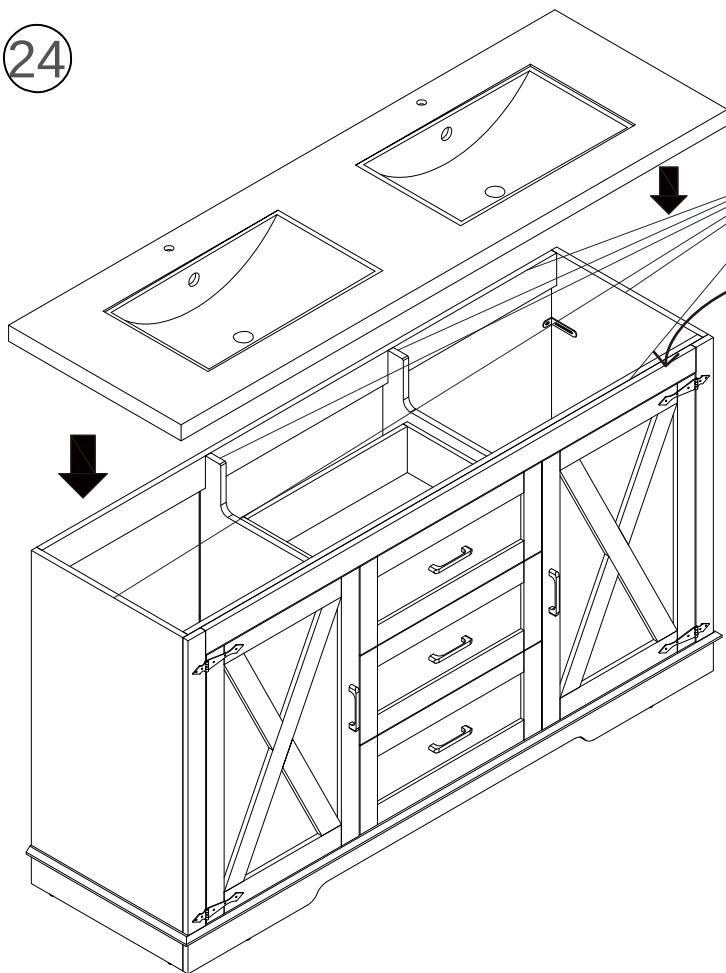

Please complete the installation of the faucet and basin first, and then place the basin on the cabinet

silicone(NOT provided)

Note: After installing the sink, you need to apply Silicone to fix the circle, and you need to wait patiently for 10 hours for the glue to dry.

Use only through-wall plumbing attachments.

Follow the instructions included with your plumbing fixtures.

Install plumbing fixture and drain to basin before attaching basin to vanity using 100% silicone adhesive.

Allow adhesive 24 hours cure time to achieve full strength.

Consult a plumbing professional for specific installation questions and consult local codes as applicable.

Use only plumbing fixtures designed to fit either single hole or 3 hole, 4" centerline faucets.

Team Lift

Silicone

Faucet, drain, silicone and all other plumbing components, tools and hardware are not included.

Ensure the vanity is installed on a level floor.

Unevenness can cause the vanity to become misaligned, resulting in twisting of the cabinet.

