

1FB PANEL BED FRAME

edfurnishings.com

FULL

ASSEMBLY INSTRUCTIONS

Before assembling your bed frame, please read through these instructions carefully and familiarize yourself with the different parts.



PARTS LIST

HARDWARE

- ① LEFT LEG 1 PC
- ② RIGHT LEG 1 PC
- ③ TOP/BOTTOM RAIL 2 PCS
- ④ FB PANEL 1 PC
- ⑤ LEFT SIDE RAIL 1 PC
- ⑥ RIGHT SIDE RAIL 1 PC
- ⑦ SLAT KIT 2 SET
- ⑧ SUPPORT RAIL 2 PCS

- Ⓐ JCB M6 X 80mm (3 1/8") - 8 pcs
Spare - 1 pc
- Ⓑ Barrel nut - 8 pcs
- Ⓒ Wood screw (1 1/4") - 12 pcs
Spare - 1 pc
- Ⓓ Wood button - 8 pcs
Spare - 1 pc
- Ⓔ JCB M6 X 30mm (1 1/4") - 6 pcs
Spare - 1 pc
- Ⓕ Cap nut - 6 pcs
- Ⓖ Allen wrench M4 - 1pc
Spare - 1pc

NOTE: WE INCLUDE SPARE HARDWARE IN CASE DAMAGE OCCURS DURING ASSEMBLY.

Step 1


Attach right leg (2) to top/bottom rail (3), using JCB (A) and barrel nut (B). Tighten with the Allen wrench (G).

Step 2

Guide the FB panel (4) in carefully so that it won't jump out of its grooves. Be sure it fits fully into its groove at the leg before fitting the left leg (1).

Step 3

Attach left leg (1) to the footboard assemblies as shown below. Using JCB (A) and barrel nut (B). Tighten with allen wrench (G).

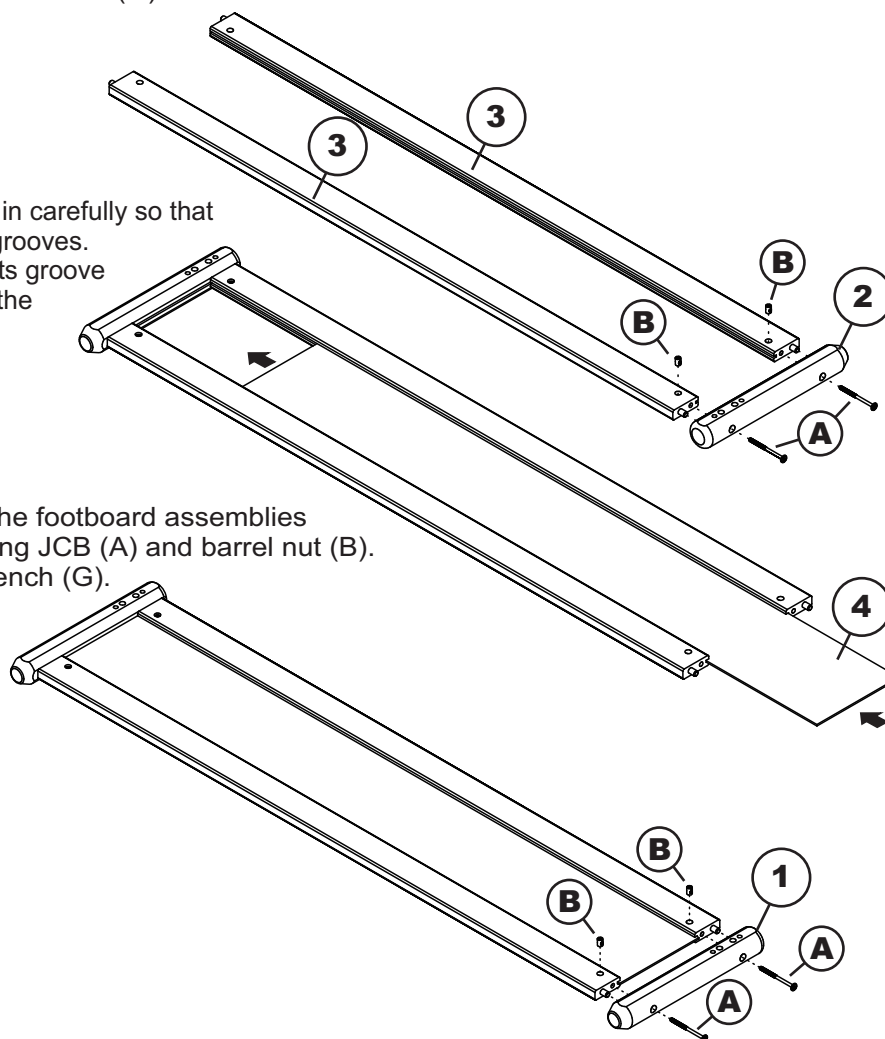

Adult assembly

Ⓐ



JCB M6 X 80mm

Ⓑ



Barrel nut

Ⓖ




Allen wrench

FULL


Step 4

Attach left & right side rails (5)(6) to the footboard as shown below. Using JCB (A) and barrel nut (B) tighten with Allen wrench (G).

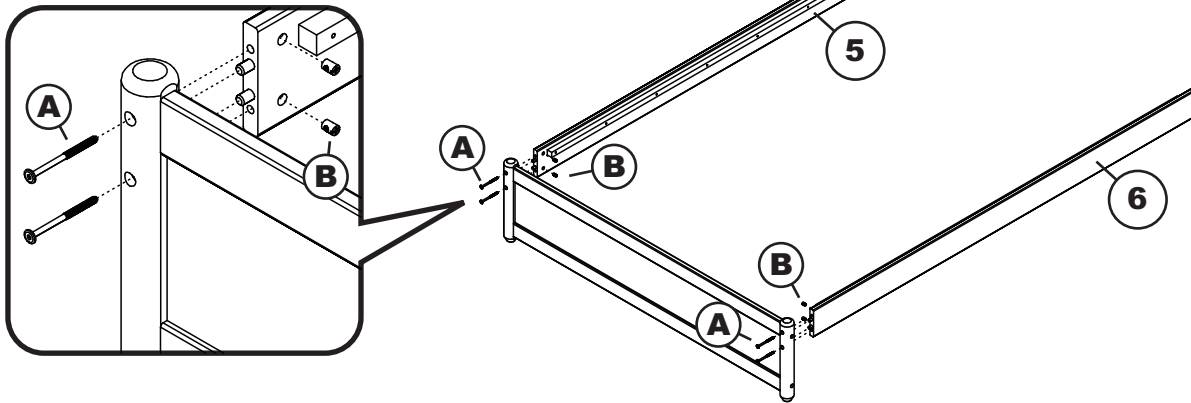


Step 5

Attach the side rails to the headboard as shown using the bed hooks and middle set of pins on headboard.

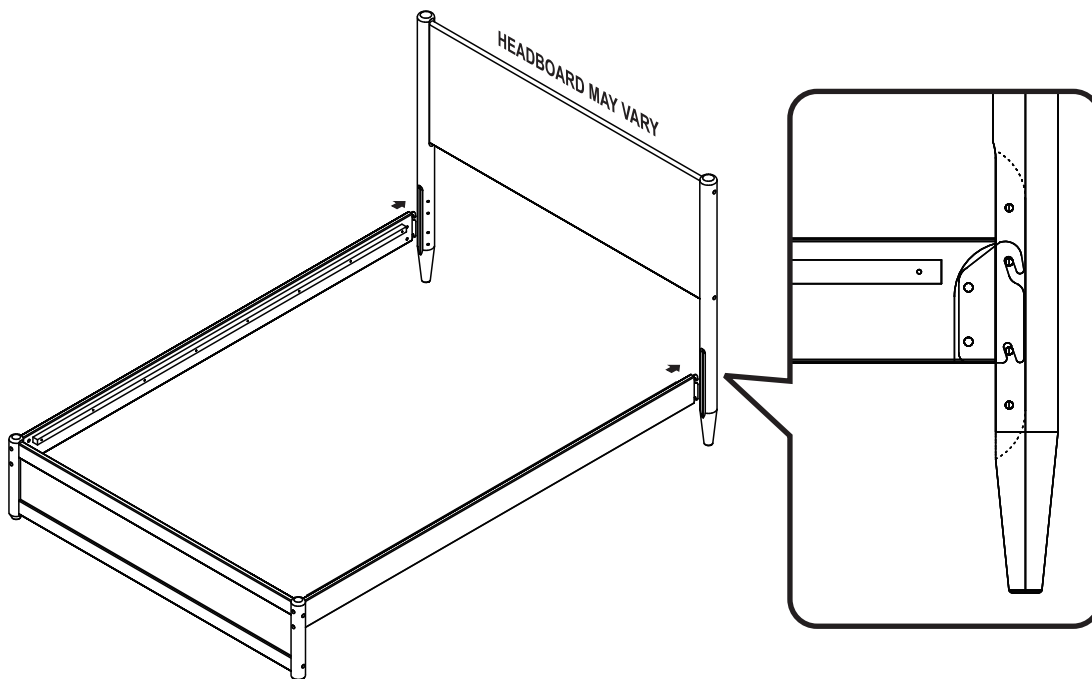

Step 6

Attach support rails (8) to the slat kit (7). Using JCB (E) and cap nut (F) tighten with Allen wrench (G). Repeat the other.

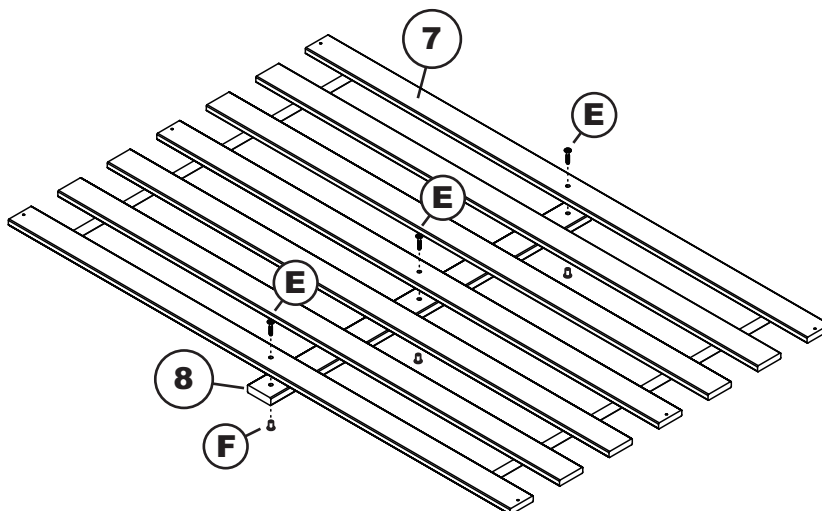

Adult assembly

(A)



JCB M6 X 80mm

(B)



Barrel nut

(E)



JCB M6 X 30mm

(F)



Cap nut

(G)





Allen wrench

FULL



Step 7

Attach slat kit (7) onto the bed. Using wood screw (C) tighten with Phillips head screwdriver. (Customer supplied)

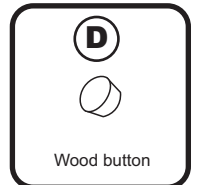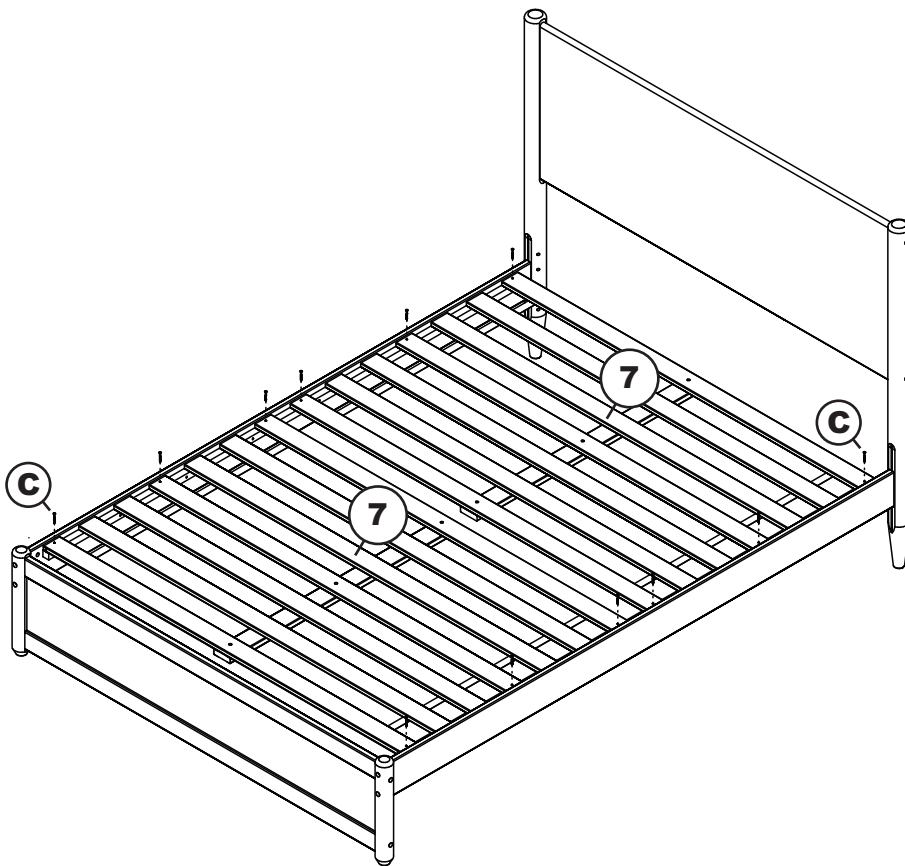

Step 8

Lastly, cover holes with wood button (D).

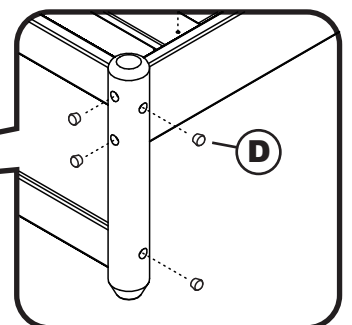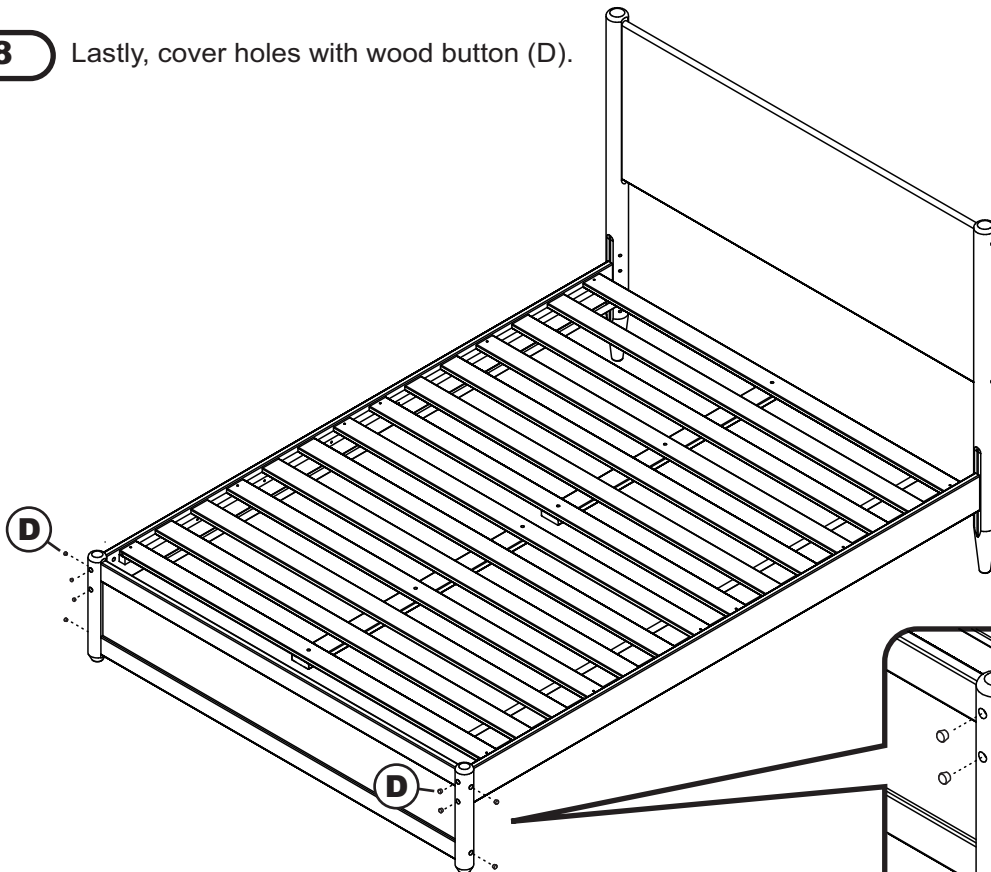

Congratulations!

Your bed is now ready for use.

We recommend that you periodically recheck that all screws are tight to ensure lasting safety.

HEADBOARD

ASSEMBLY INSTRUCTIONS

Before assembling your headboard, please read through these instructions carefully and familiarize yourself with the different parts.



PARTS LIST

- 1 HEADBOARD PANEL 1 PC
- 2 LEFT LEG 1 PC
- 3 RIGHT LEG 1 PC

Instructions apply for bed sizes
FULL

HARDWARE

- (A) Wooden dowel - 4 pcs
Spare - 1 pc
- (B) JCB M6 X 40mm (1 1/2") - 6 pcs
Spare - 1 pc
- (F) Allen wrench - 1pc
Spare - 1pc


HARDWARE FOR METAL BED FRAME

- (C) JCB M6 X 25mm (1") - 4 pcs
Spare - 1 pc
- (D) Flat washer - 4 pcs
Spare - 1 pc
- (E) Split washer - 4 pcs
Spare - 1 pc

NOTE: WE INCLUDE SPARE HARDWARE IN CASE DAMAGE OCCURS DURING ASSEMBLY.

Step 1


Attach the legs (2) and (3) to headboard panel (1), using wooden dowels (A) and JCB (B). Tighten with the Allen wrench (F).

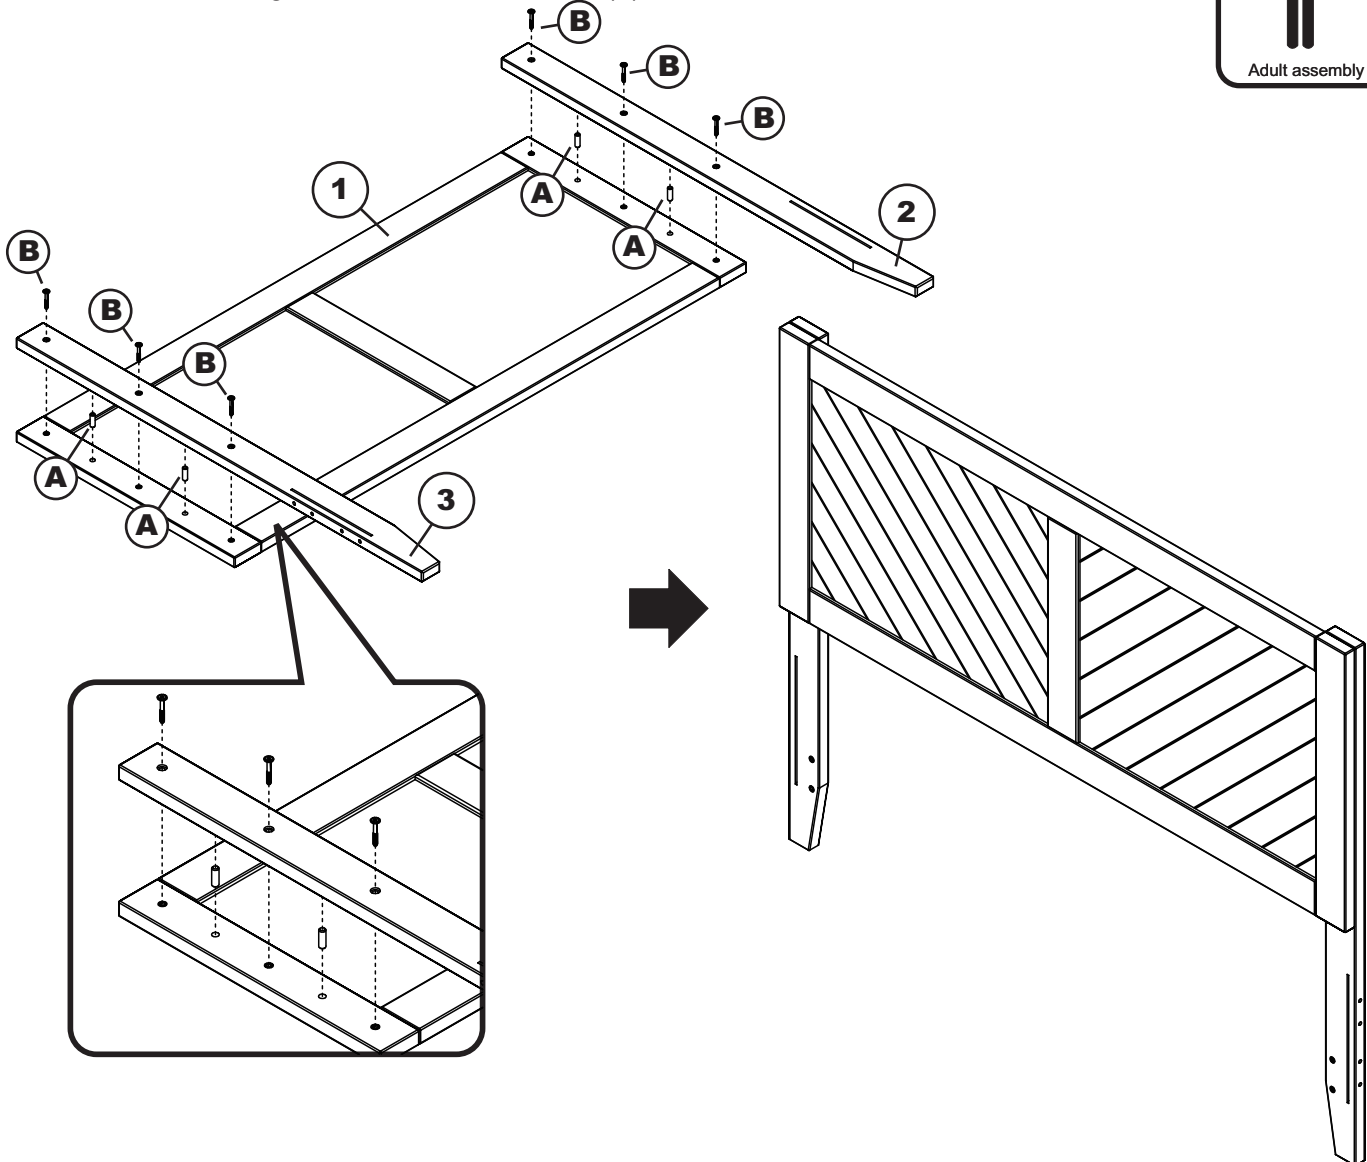


If you purchased a wood headboard to attach to metal bed frame, please refer to page 3.

WOOD BED FRAME



Your bed can be assembled using an open footrail or panel footboard.
The open footrail has a choice of tall or short legs.

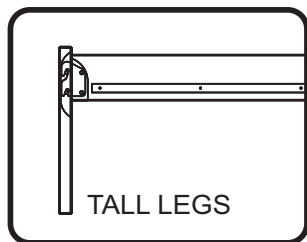

TALL LEGS

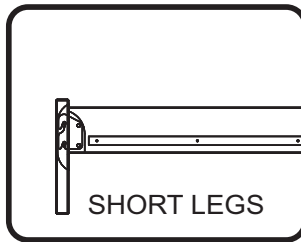

SHORT LEGS

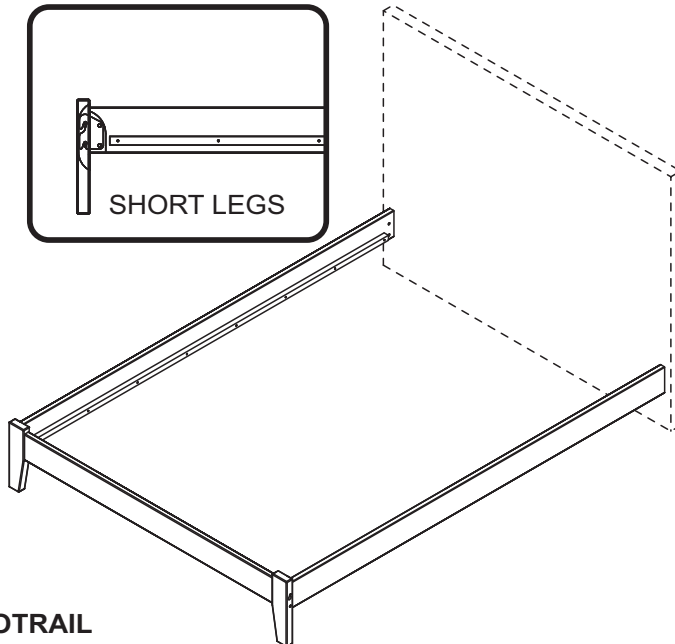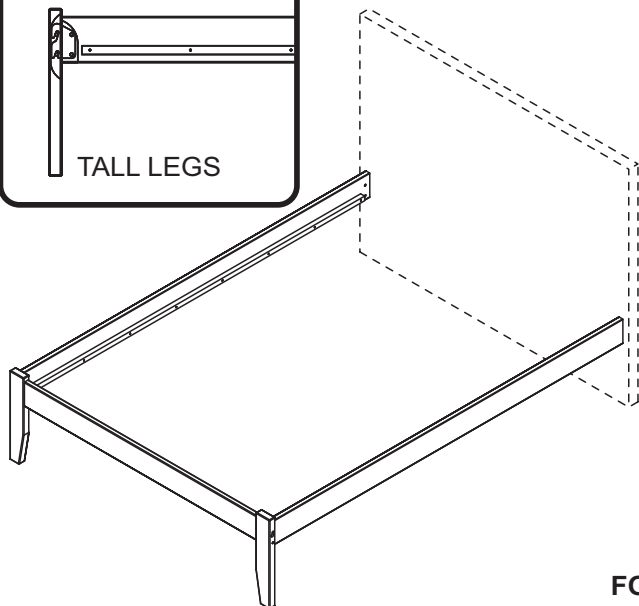


FOOTRAIL

Storage drawers, Trundle bed or mattress only use TALL LEGS.


Foundation and mattress use SHORT LEGS.





The side rails can be attached to either the upper set of pins or lower set of pins.

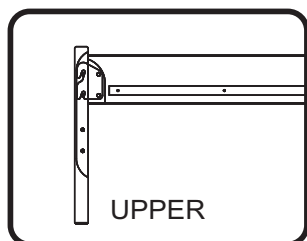

UPPER

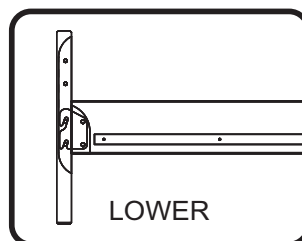

LOWER

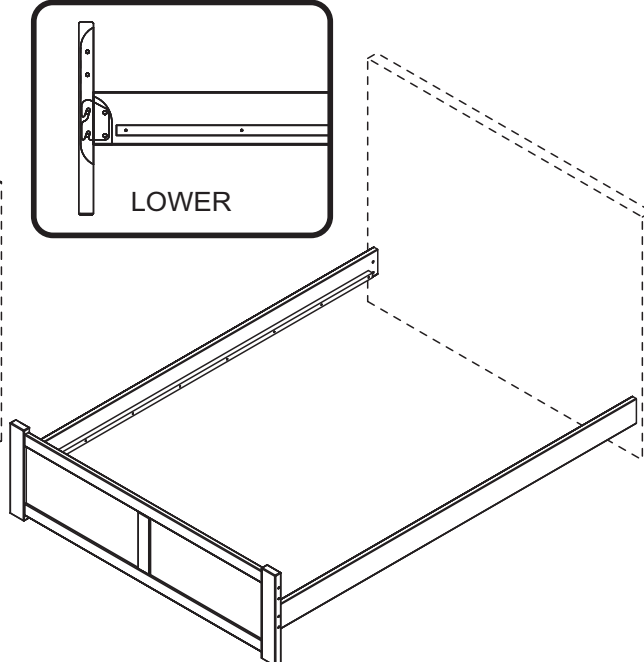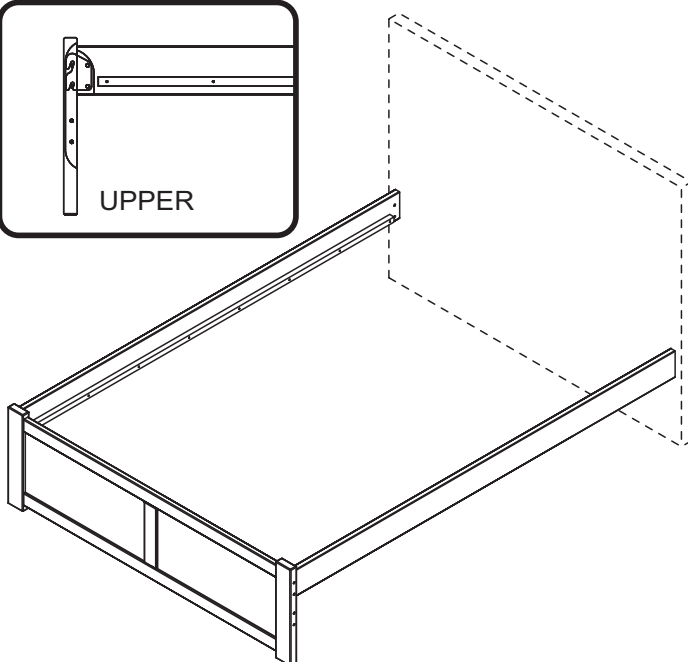

PANEL FOOTBOARD

Storage drawers, Trundle bed or mattress only use UPPER PINS.

Foundation and mattress use LOWER PINS.

ATTACHING HEADBOARD TO METAL BED FRAME

ASSEMBLY INSTRUCTIONS

Before assembling your bed, please read through these instructions carefully and familiarize yourself with the different parts.

Instructions apply for bed sizes
TWIN > FULL > QUEEN > KING









Adult assembly

Metal bed frames are sold separately from wood headboards. The hardware shown on this page is supplied with your wood headboard for attaching the bed frame to the headboard. The metal bed frame is supplied with its own assembly instructions and hardware.

Step 1

Attach the headboard assembly to the metal frame using JCB (C), flat washer (D), and split washer (E) then tighten with Allen wrench (F), as shown below.

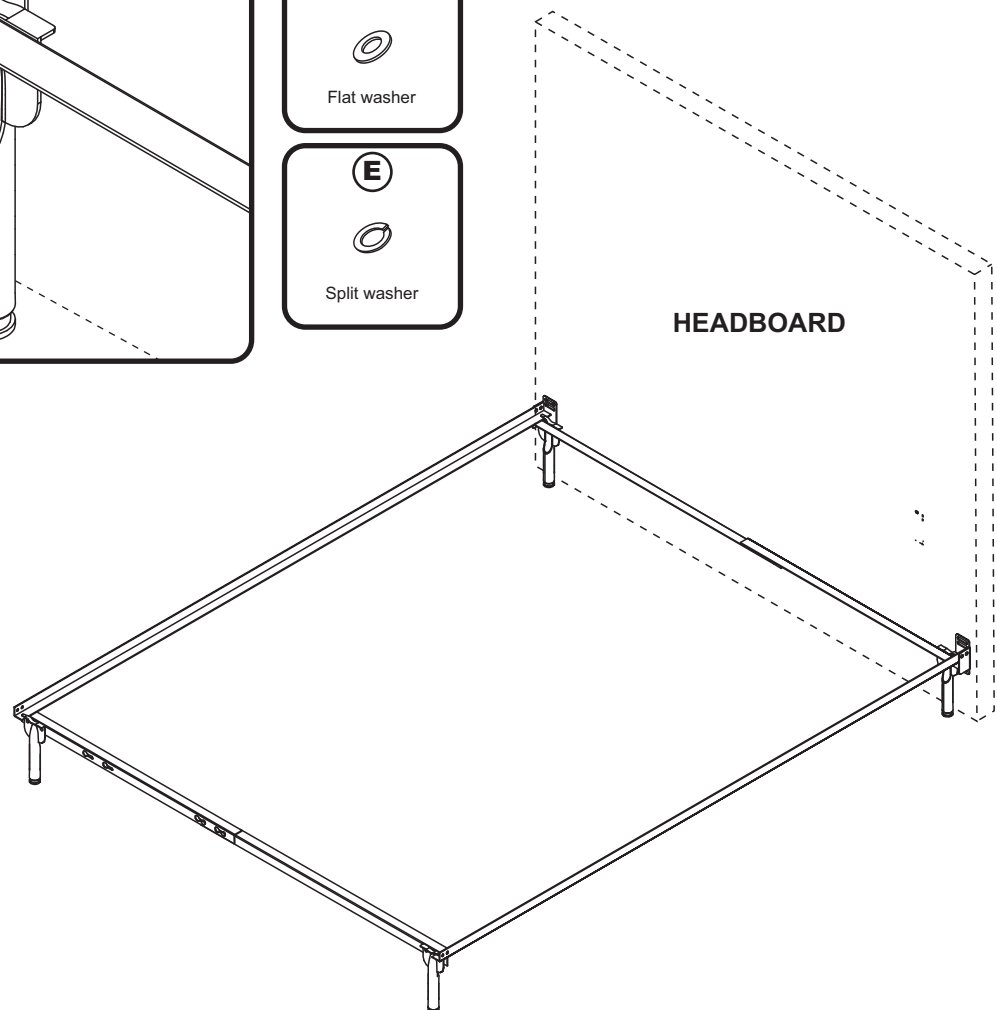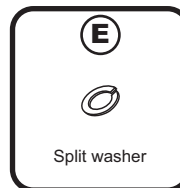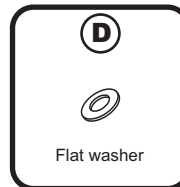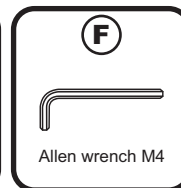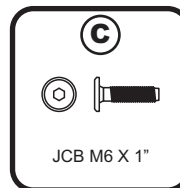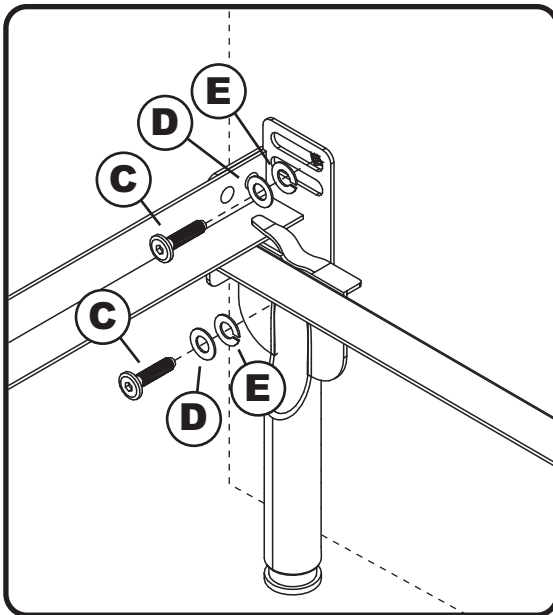

Congratulations!

Your bed is now ready for use.



To ensure lasting safety, we recommend that you periodically check that all screws are tight and all parts are secure.

BED DRAWER

edfurnishings.com


ASSEMBLY INSTRUCTIONS

Before assembling your bed drawer, please read through these instructions carefully, familiarize yourself with the different parts.

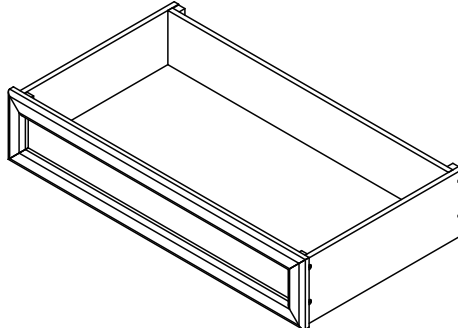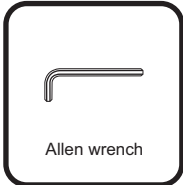

NOTE: WE INCLUDE SPARE HARDWARE IN CASE DAMAGE OCCURS DURING ASSEMBLY.

HARDWARE




A JCB M6 X 30mm - 16 pcs
Spare - 1 pc



B Allen wrench - 1 pcs
Spare - 1 pc




PARTS LIST

01	HARDWARE	1 BOX
02	DRAWER FACE	2 PCS
03	DRAWER SIDE	4 PCS
04	DRAWER BACK	2 PCS
05	DRAWER BOTTOM	2 PCS

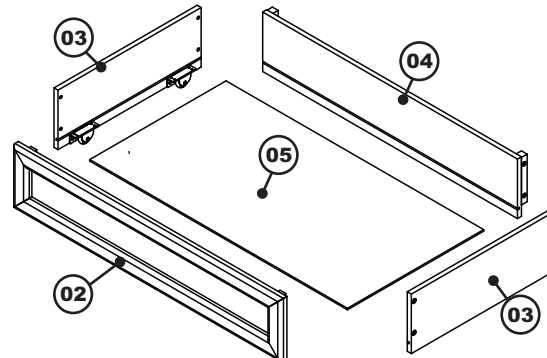




Step 1

Lay the drawer face (02) on smooth, flat surface so the drawer bottom (05) groove is facing upwards. Attach the drawer sides (03) to drawer face (02) using JCB M6 X 30mm (A). Align groove inside drawer side with groove in drawer face. Tighten with Allen wrench (B).

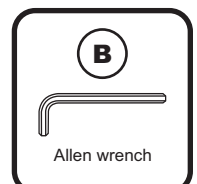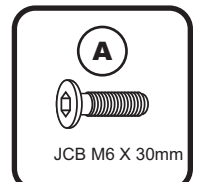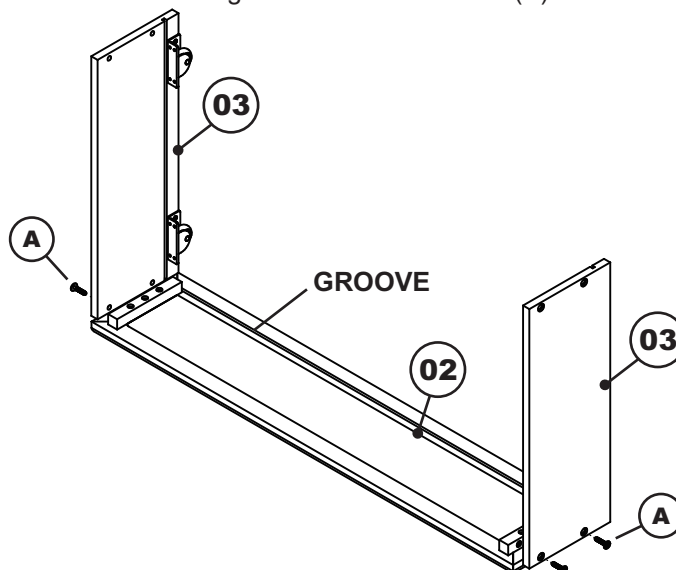


Step 2

Guide the drawer bottom (05) in carefully so that it won't jump out of its grooves. Be sure it fits fully into its groove at the bottom (in the drawer face) before fitting the drawer back.

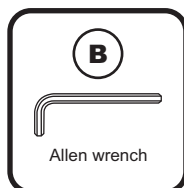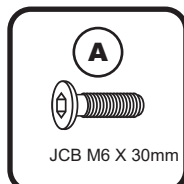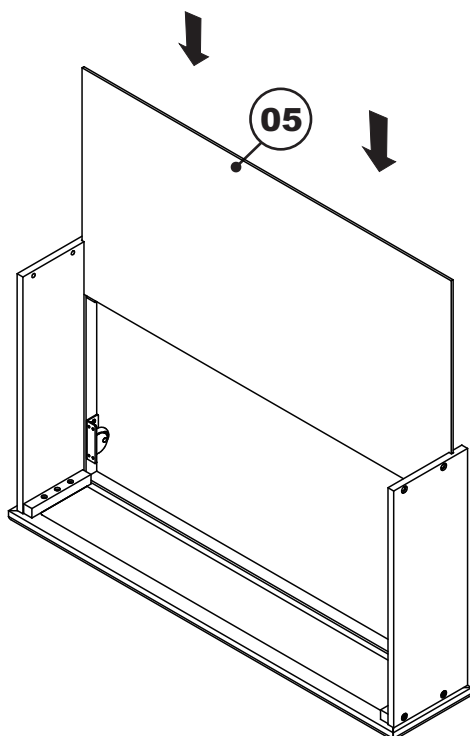


Step 3

Attach drawer back (04) to bed drawer assembly as shown. Use JCB M6 X 30mm (A). Tighten with Allen wrench (B).

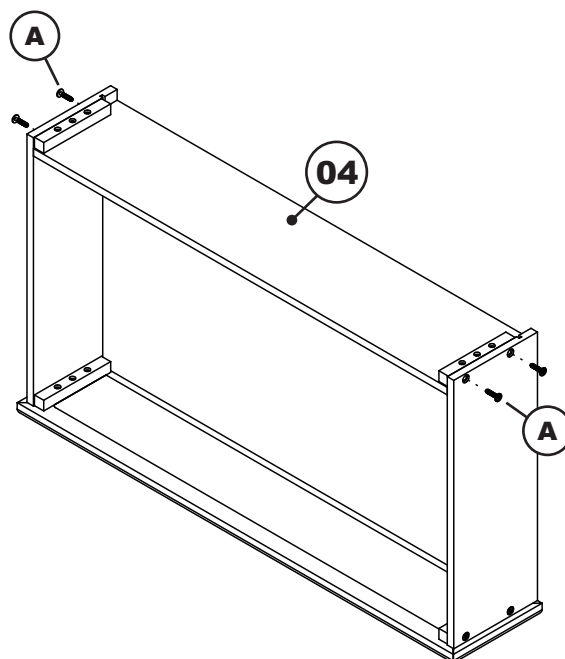

Step 4

Lastly, insert bed drawer to the bed as shown below.

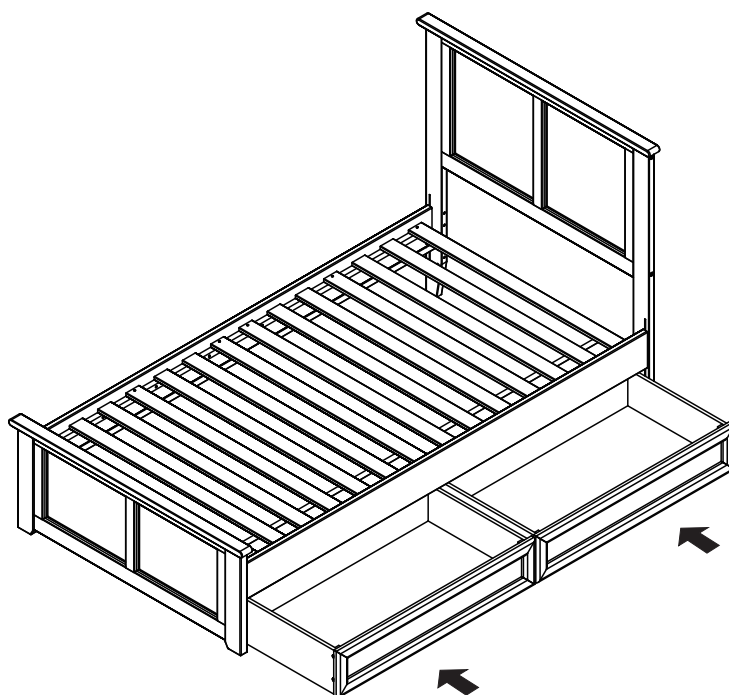

Congratulations!

Your bed drawer is now ready for use.
We recommend that you periodically recheck that all screws are tight to ensure lasting safety.