




Customer Support: **info.amerlifhome@gmail.com**


ANTI-TIP WARNING!!

Overturning furniture can cause serious or fatal crushing injuries. To reduce the risk of tipping, always use the wall attachment provided with this product.

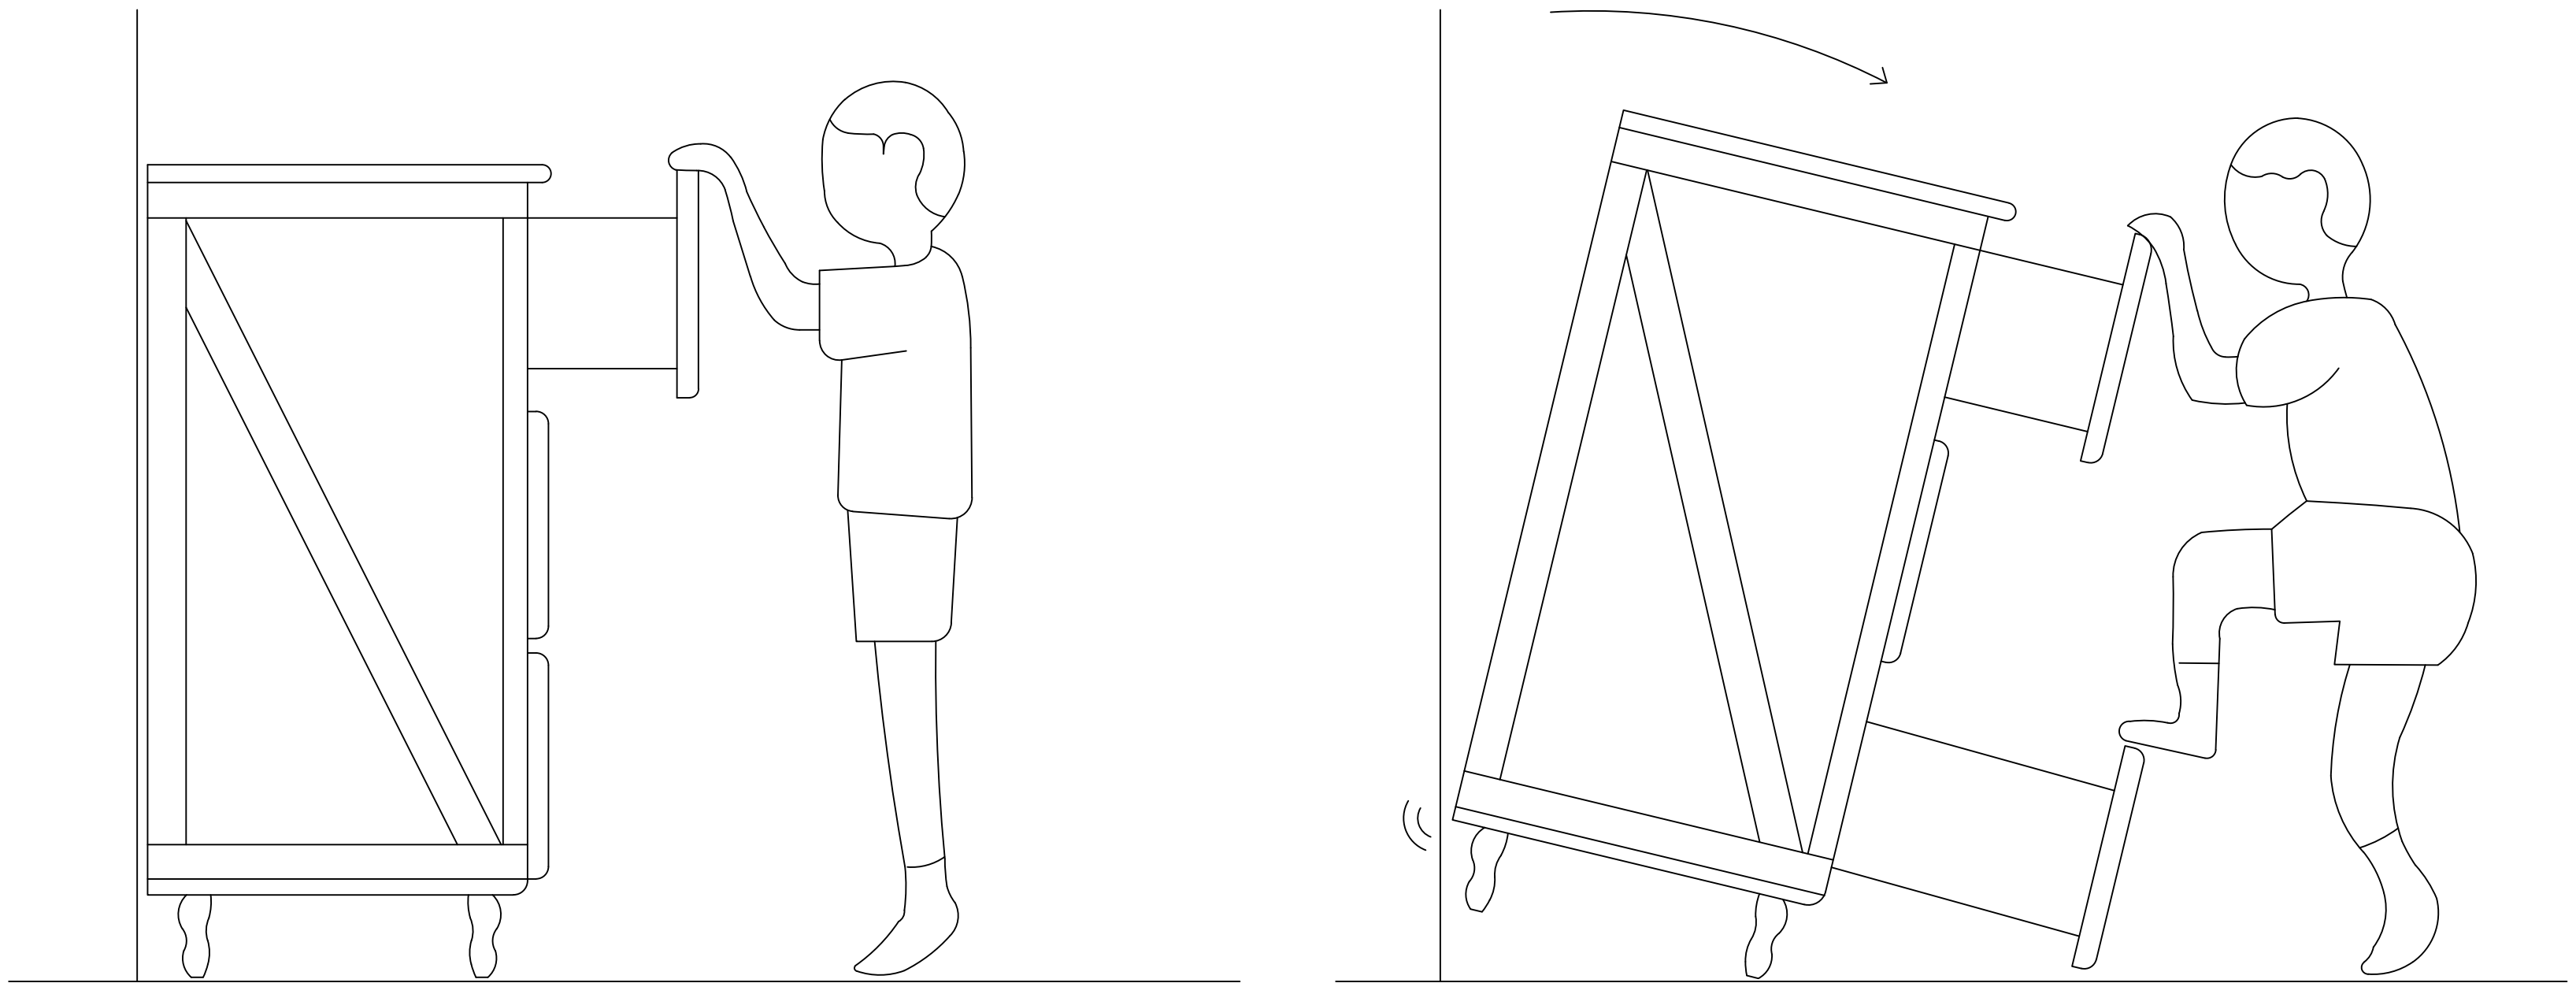


General Assembly Guidelines


- I .Please ensure that all parts and hardware are available before assembly.
- II. Follow each step carefully to ensure the proper assembly of this product.
- III. For easy of assembly, two people are recommended to assemble this product.
- IV. The three main types of hardware are: wood dowels , screws and bolts.

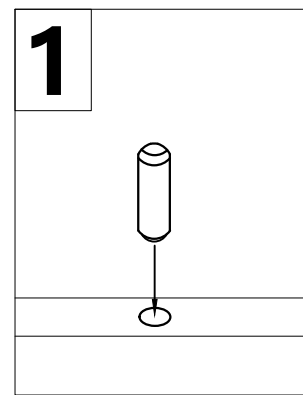


V.A Phillips head screwdriver is required for the assembly of this product.

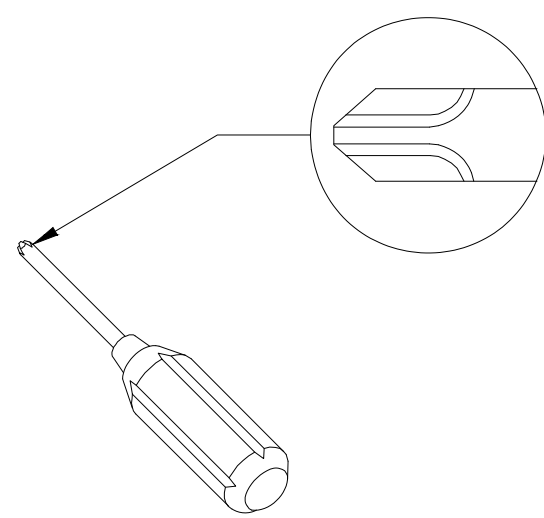


VI.Power tools should not be used when assemble this product.

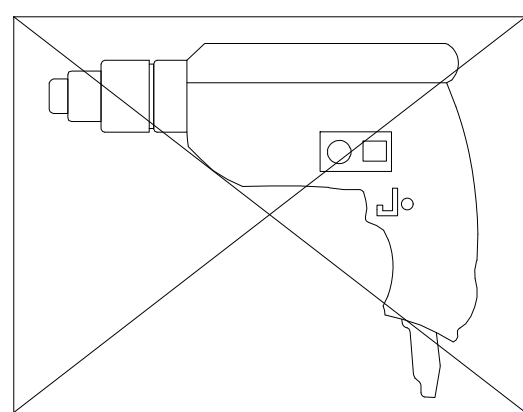

VII.Steps for assembly of three-in-one screws.

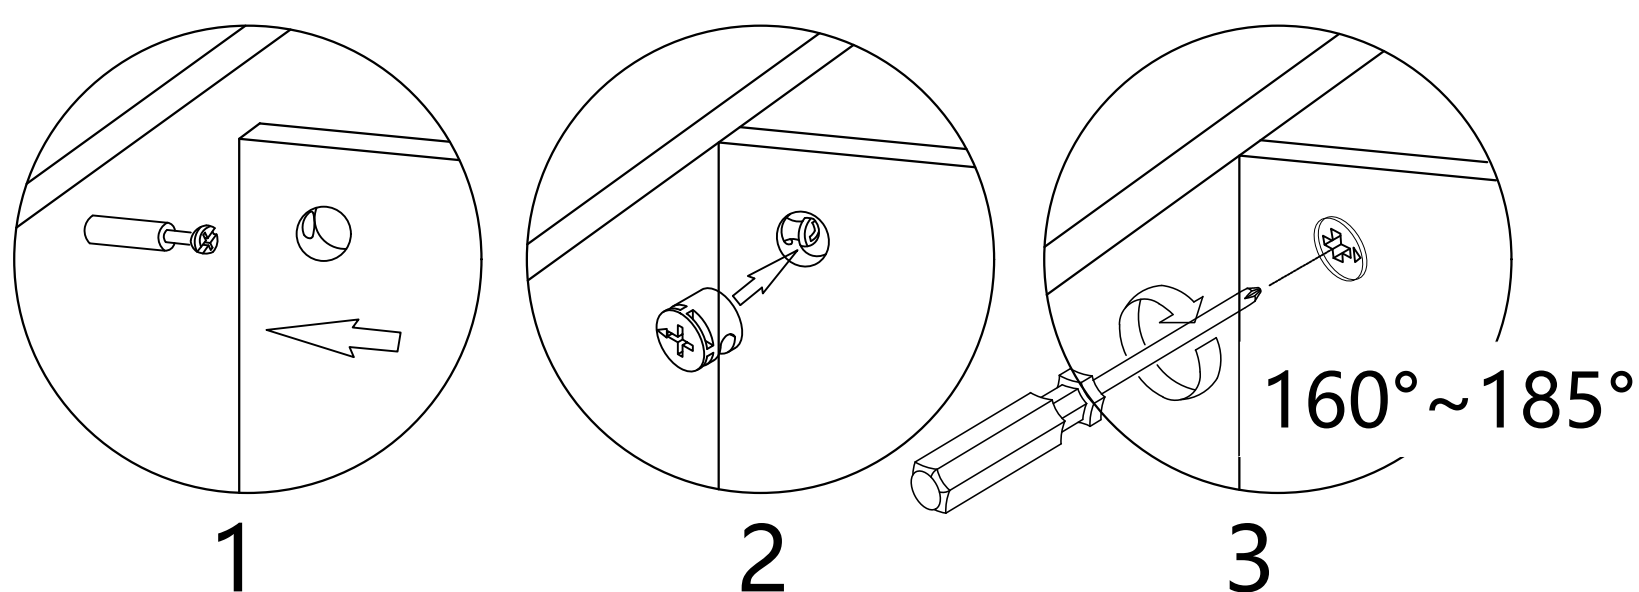

IX.Screw fixation diagram for all fittings

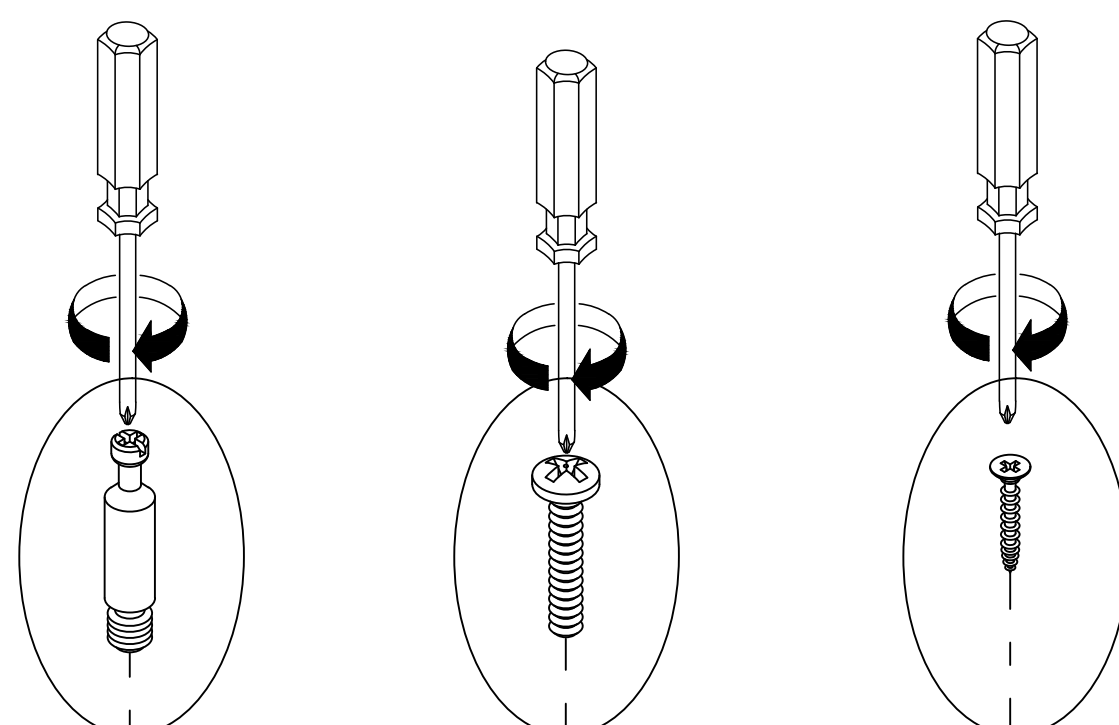

Parts List

- 1

x 1
- 2

x 1
- 3

x 1
- 4

x 1
- 5

x 1
- 6

x 1
- 7

x 1
- 8

x 4
- 9

x 1
- 10

x 1
- 11

x 1
- 12

x 1
- 13

x 3
- 14


x 1
- 15

x 3
- 16

x 2
- 17


x 2
- 18

x 2

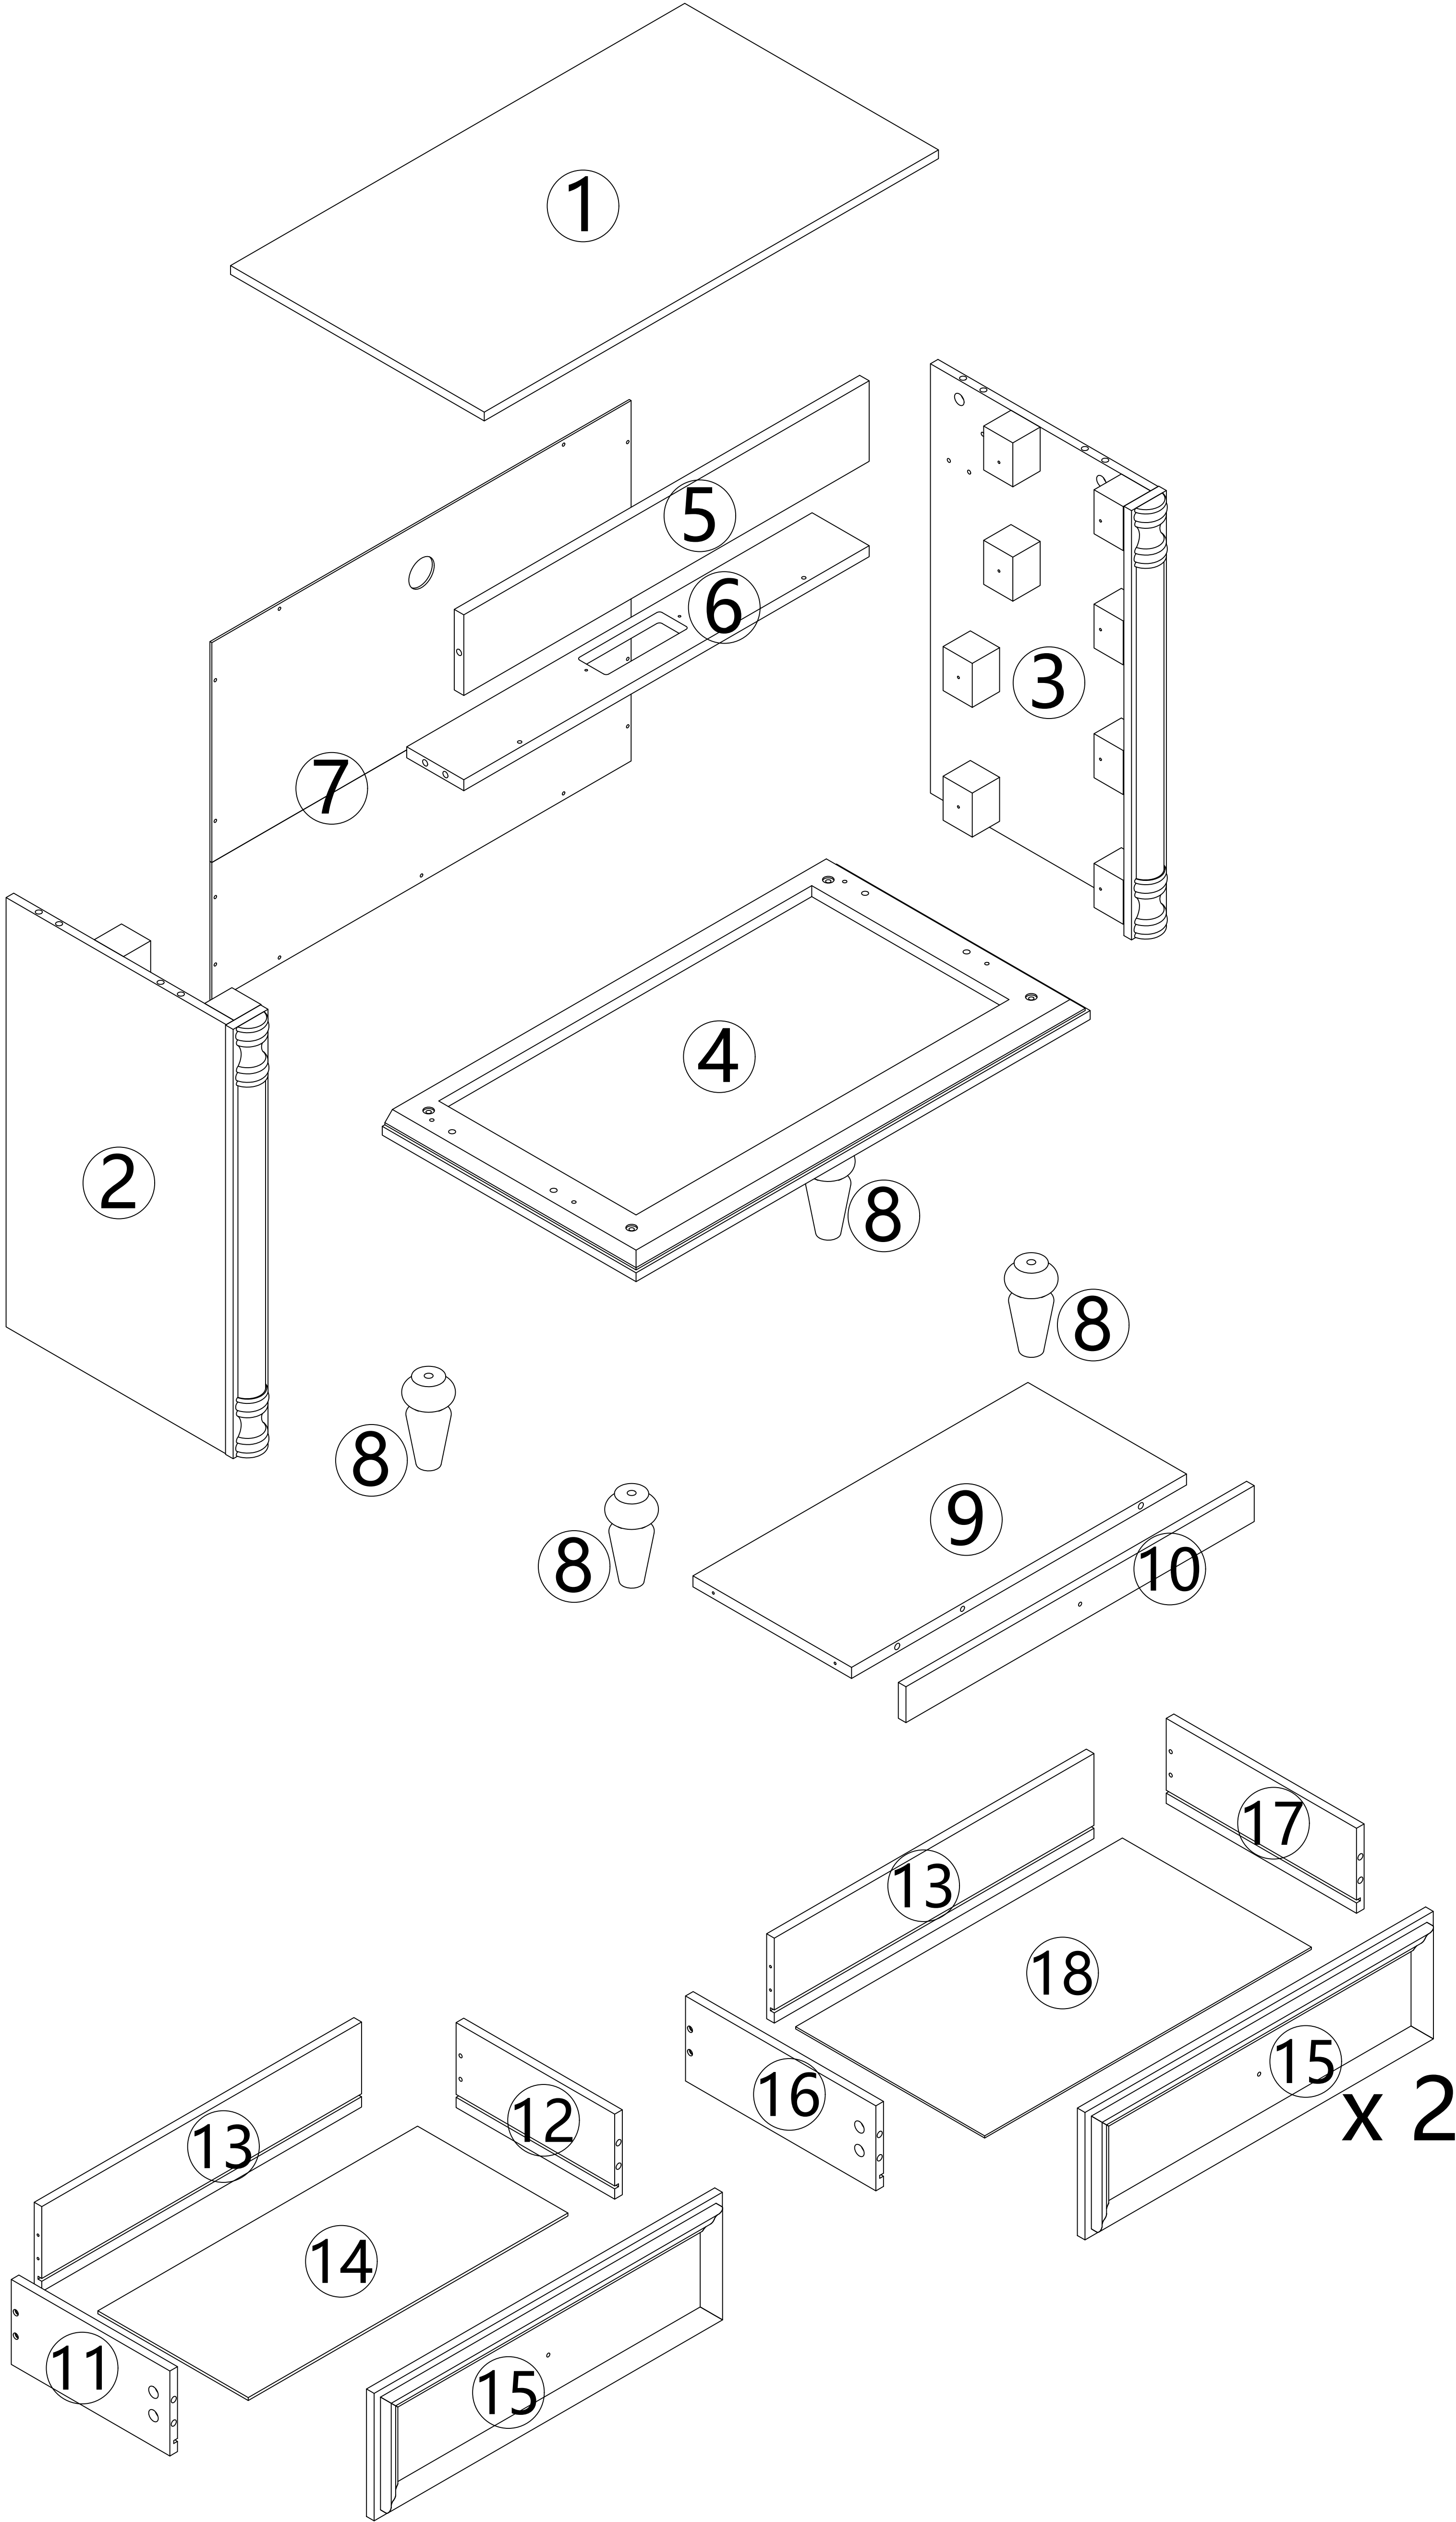

HARDWARE


[x26+2]

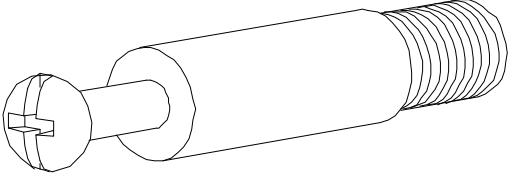

A

M6x34


[x26+2]

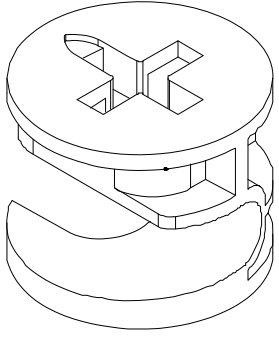

B

15X9


[x9+2]

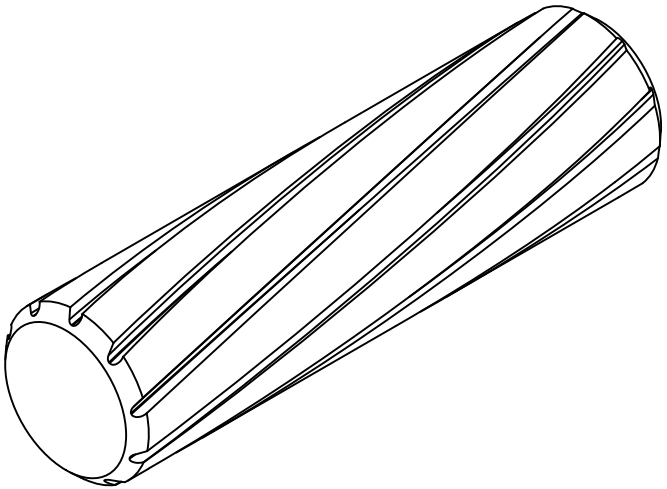

C


Ø8x30

[x4]

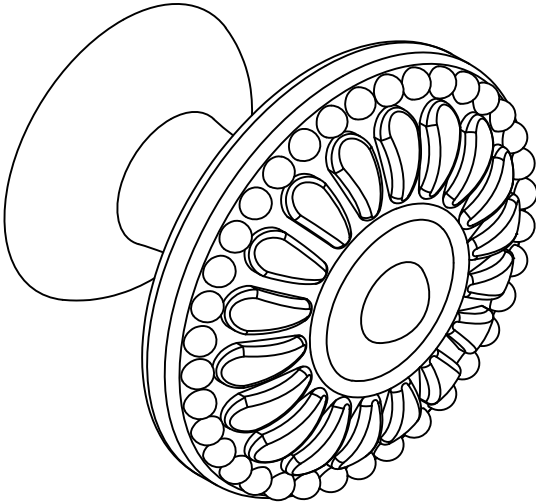

D


[x4]

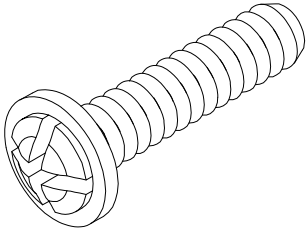

E

M4x16


[x15+2]

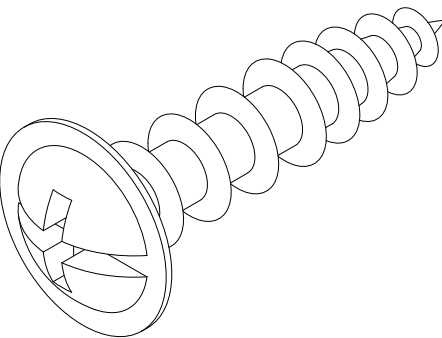

F

Ø3x15


[x32+2]

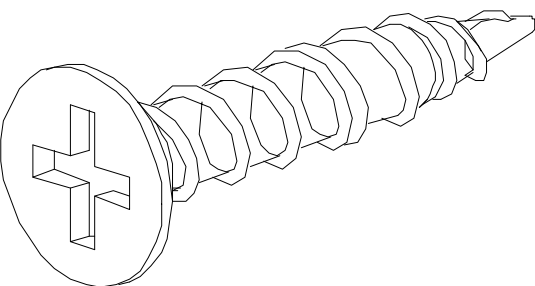

G


Ø3.5x12

[x1]

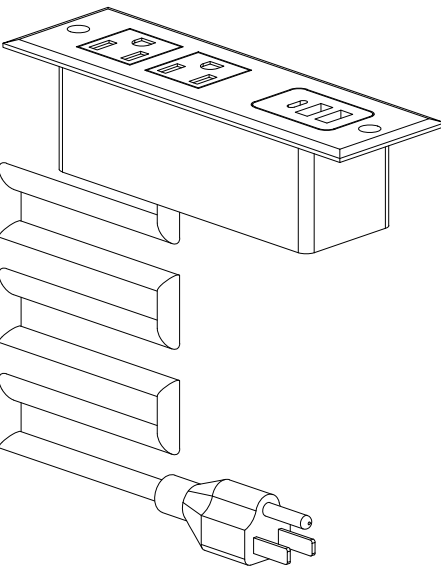

H


[x12+2]

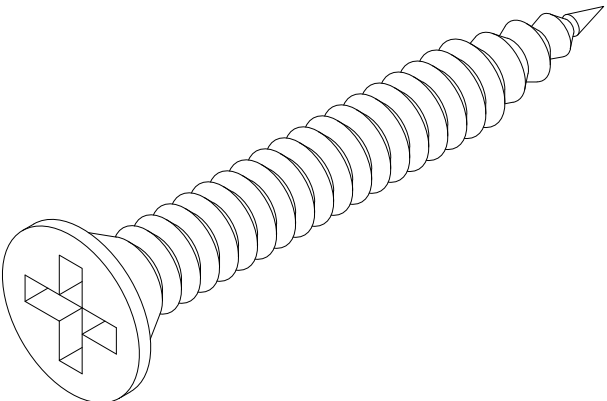

I

Ø3.5x30


[x4]

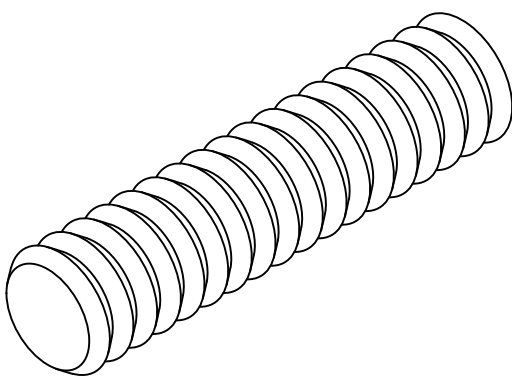

J

Ø8x40


[x4]

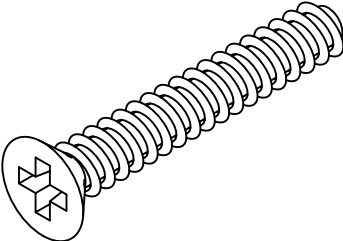

K

Ø4x38


[x2]

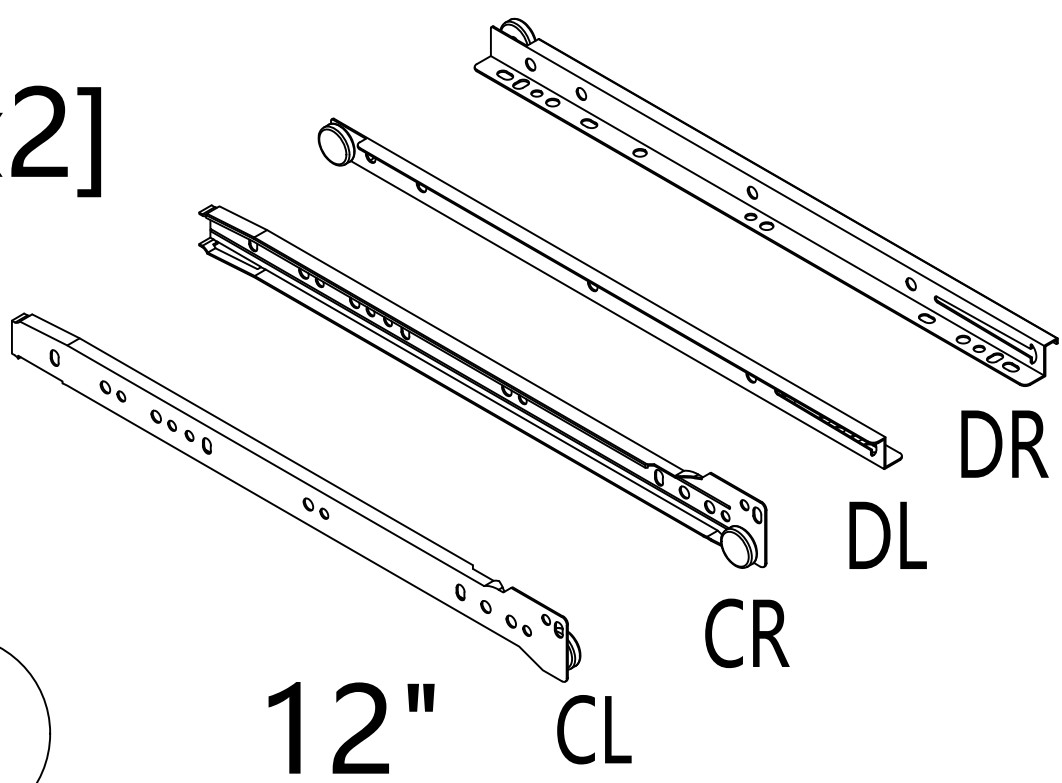

L

12" CL CR DL DR


[x1]

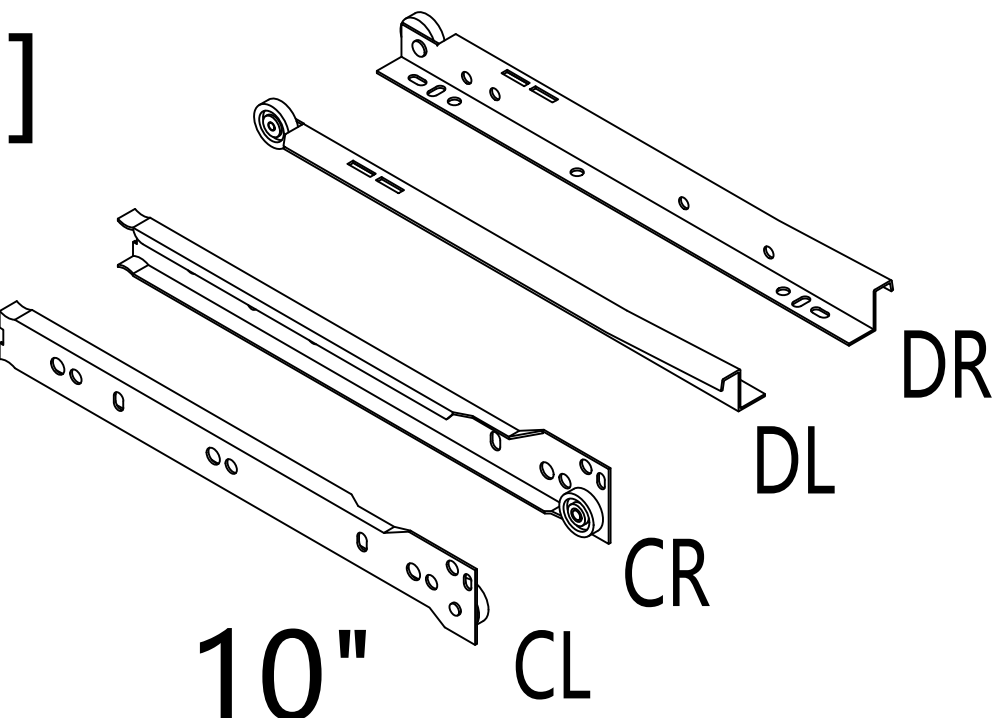

M

10" CL CR DL DR


[x2]

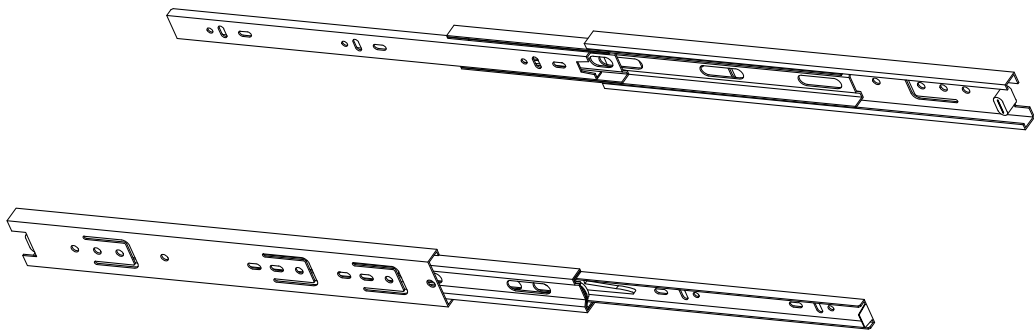

N

10"

[x26+2]

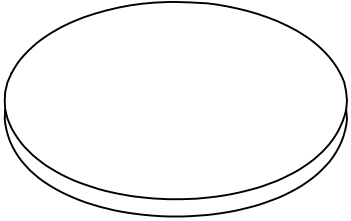


O

Ø20x0.1

STEP#1

G x 8


CR
L x 2 CL

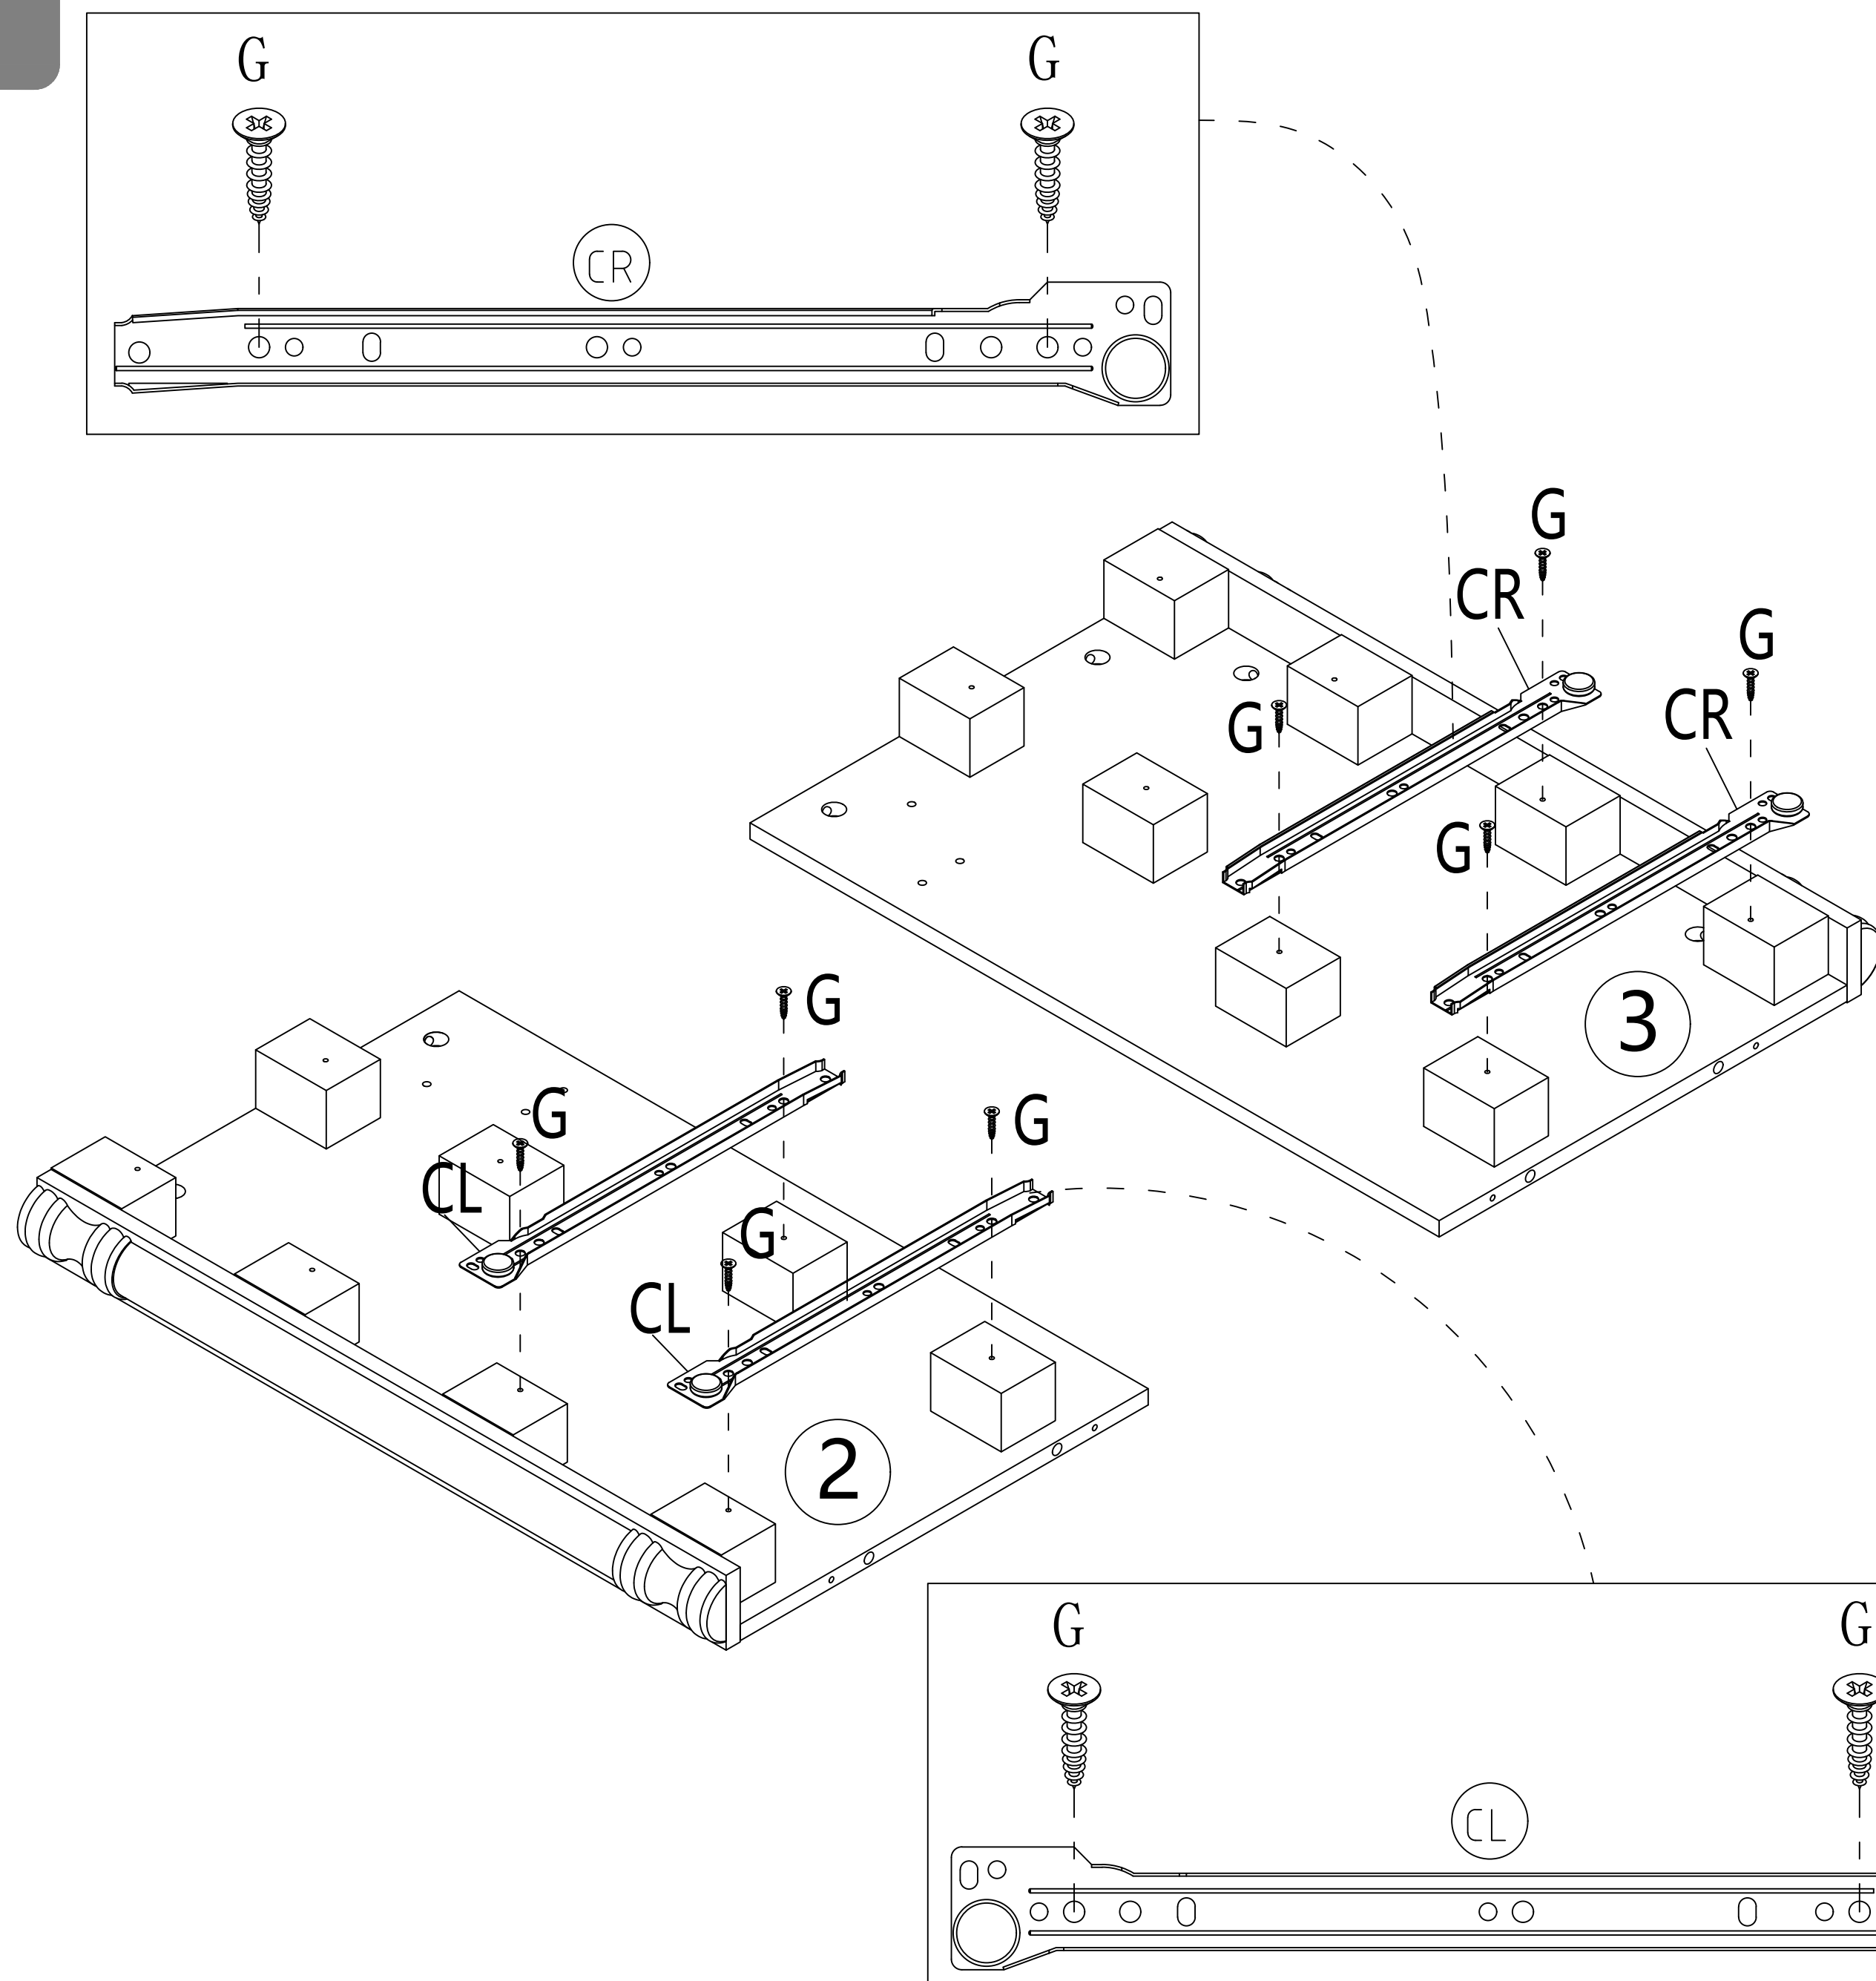


STEP#2

G x 4



CR
CL
M x 1

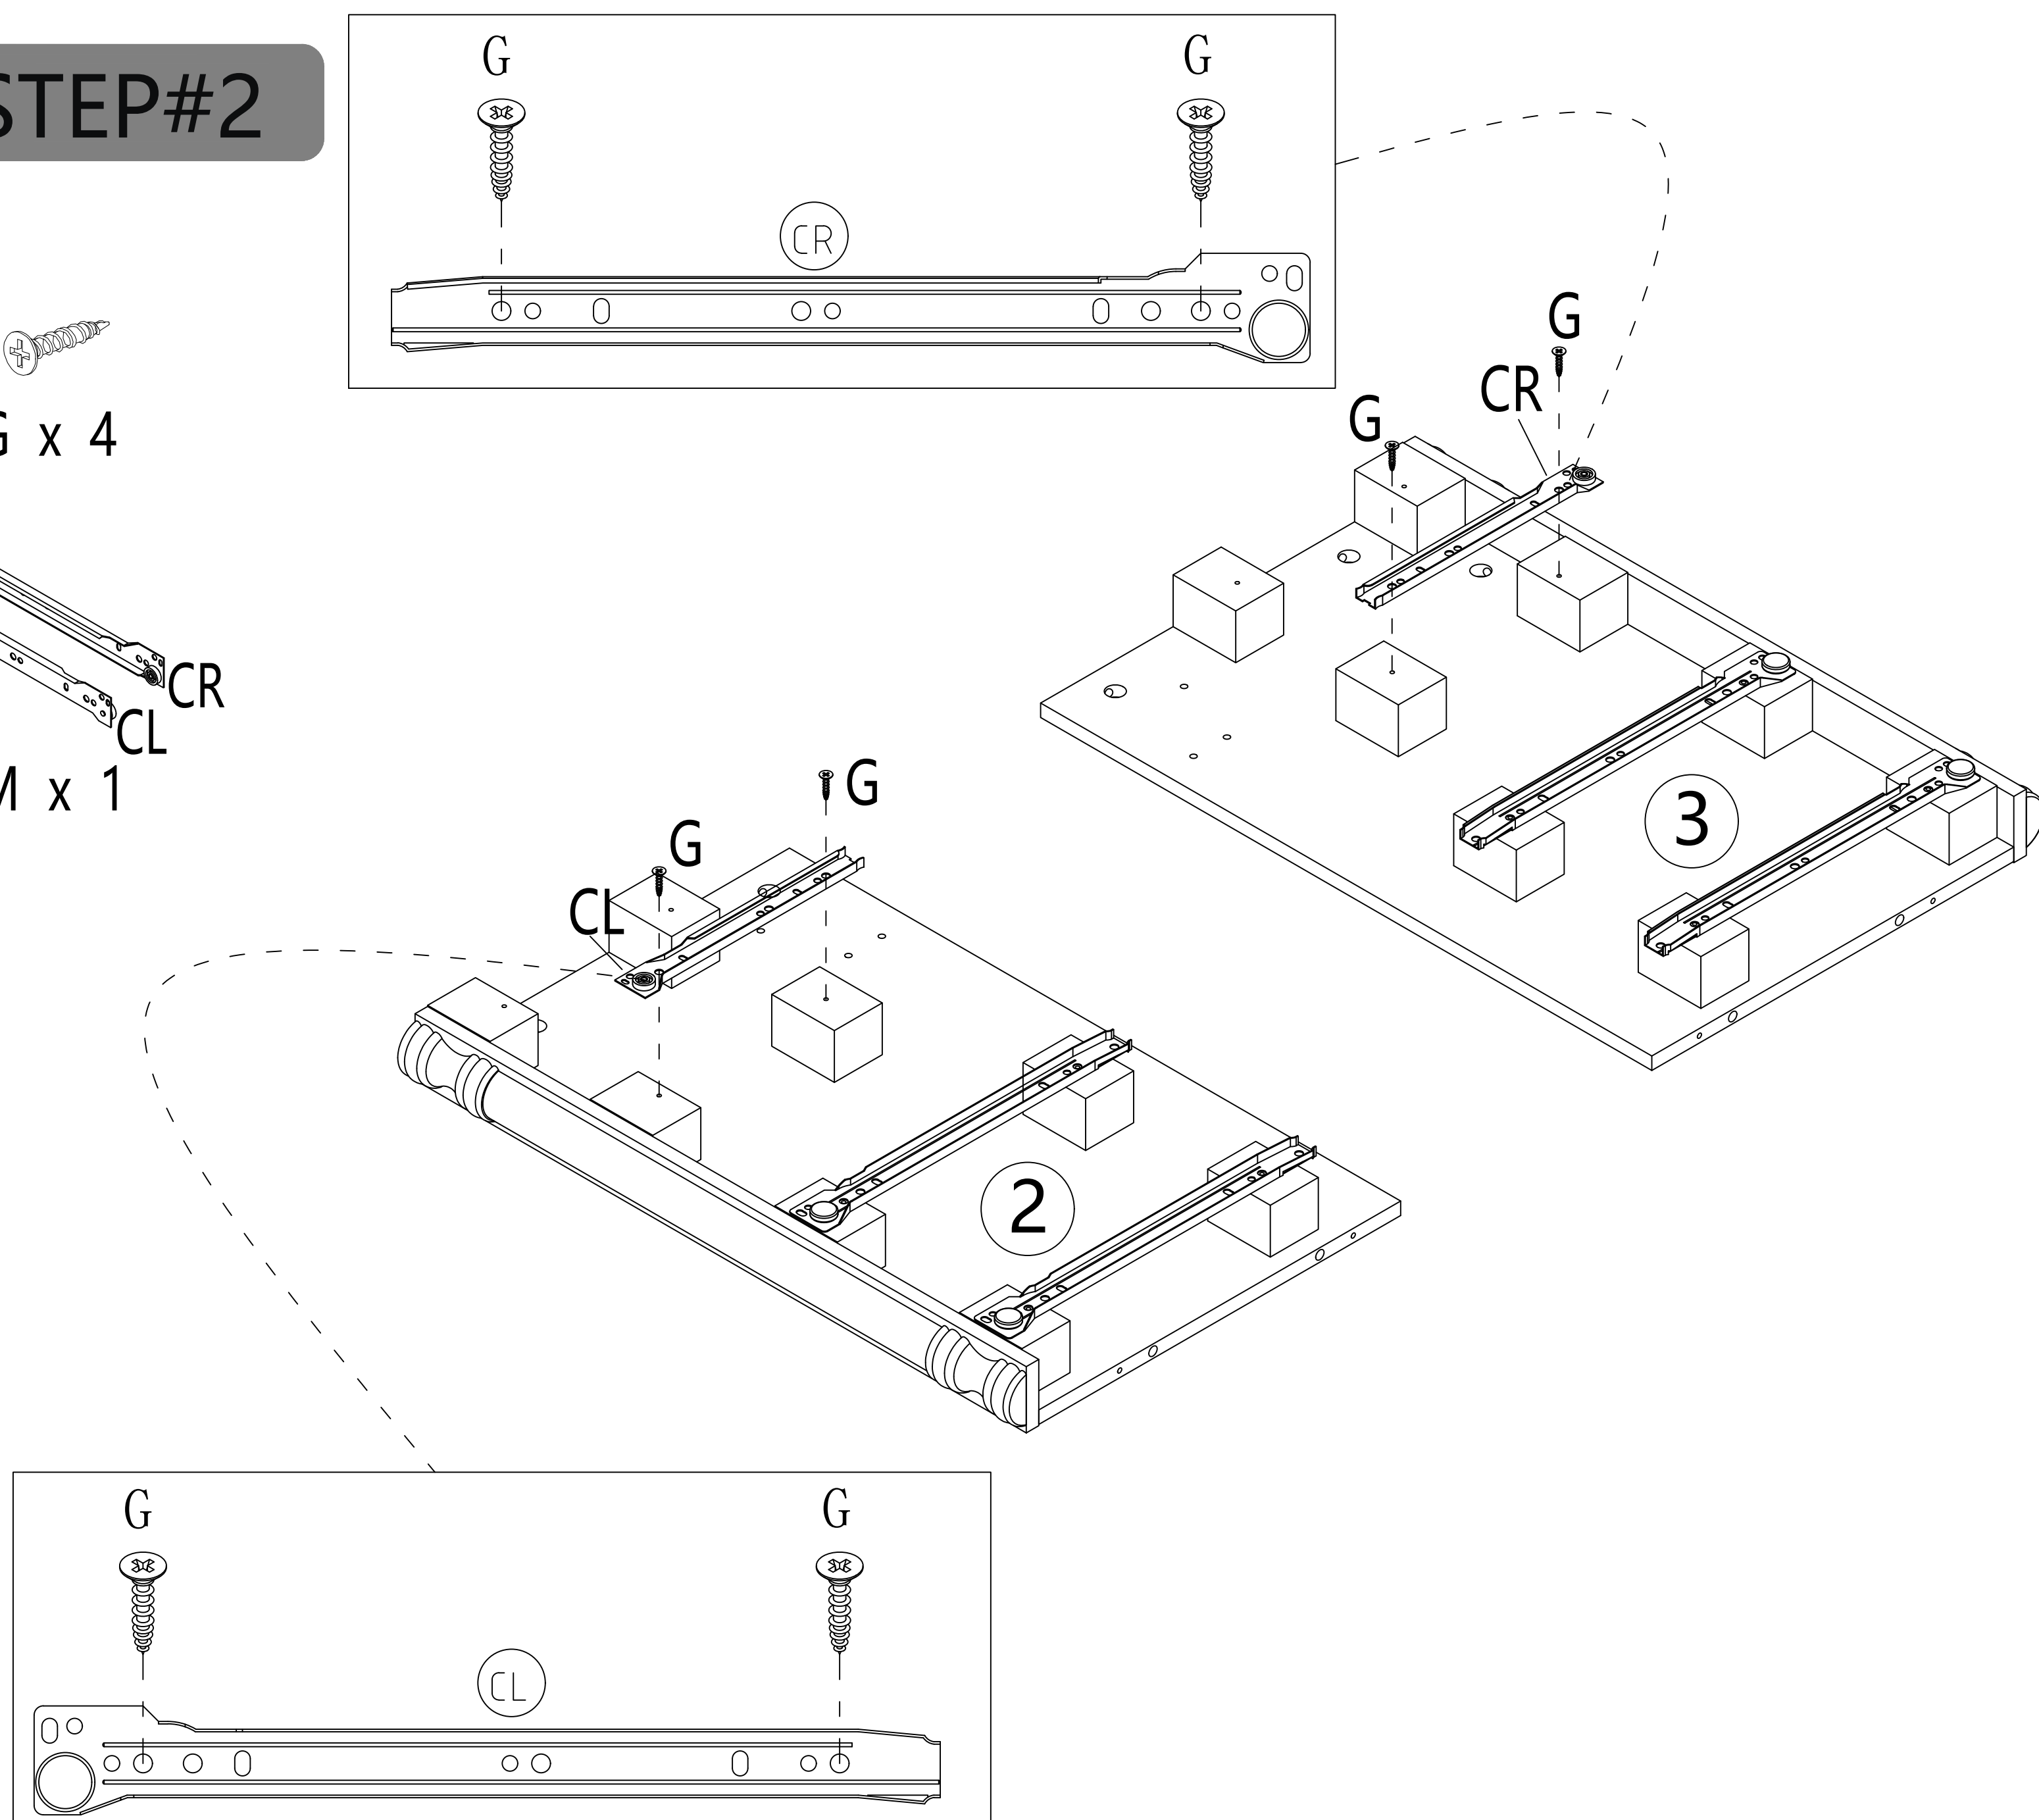


STEP#3




A x 6

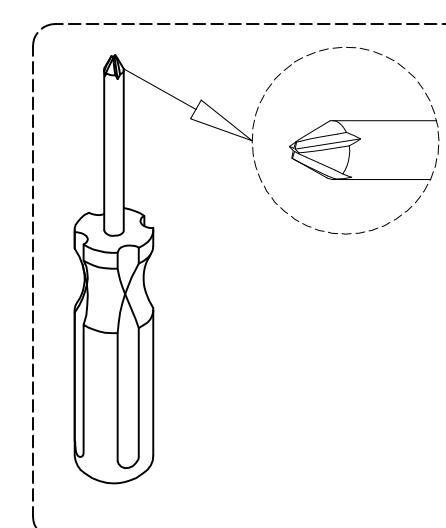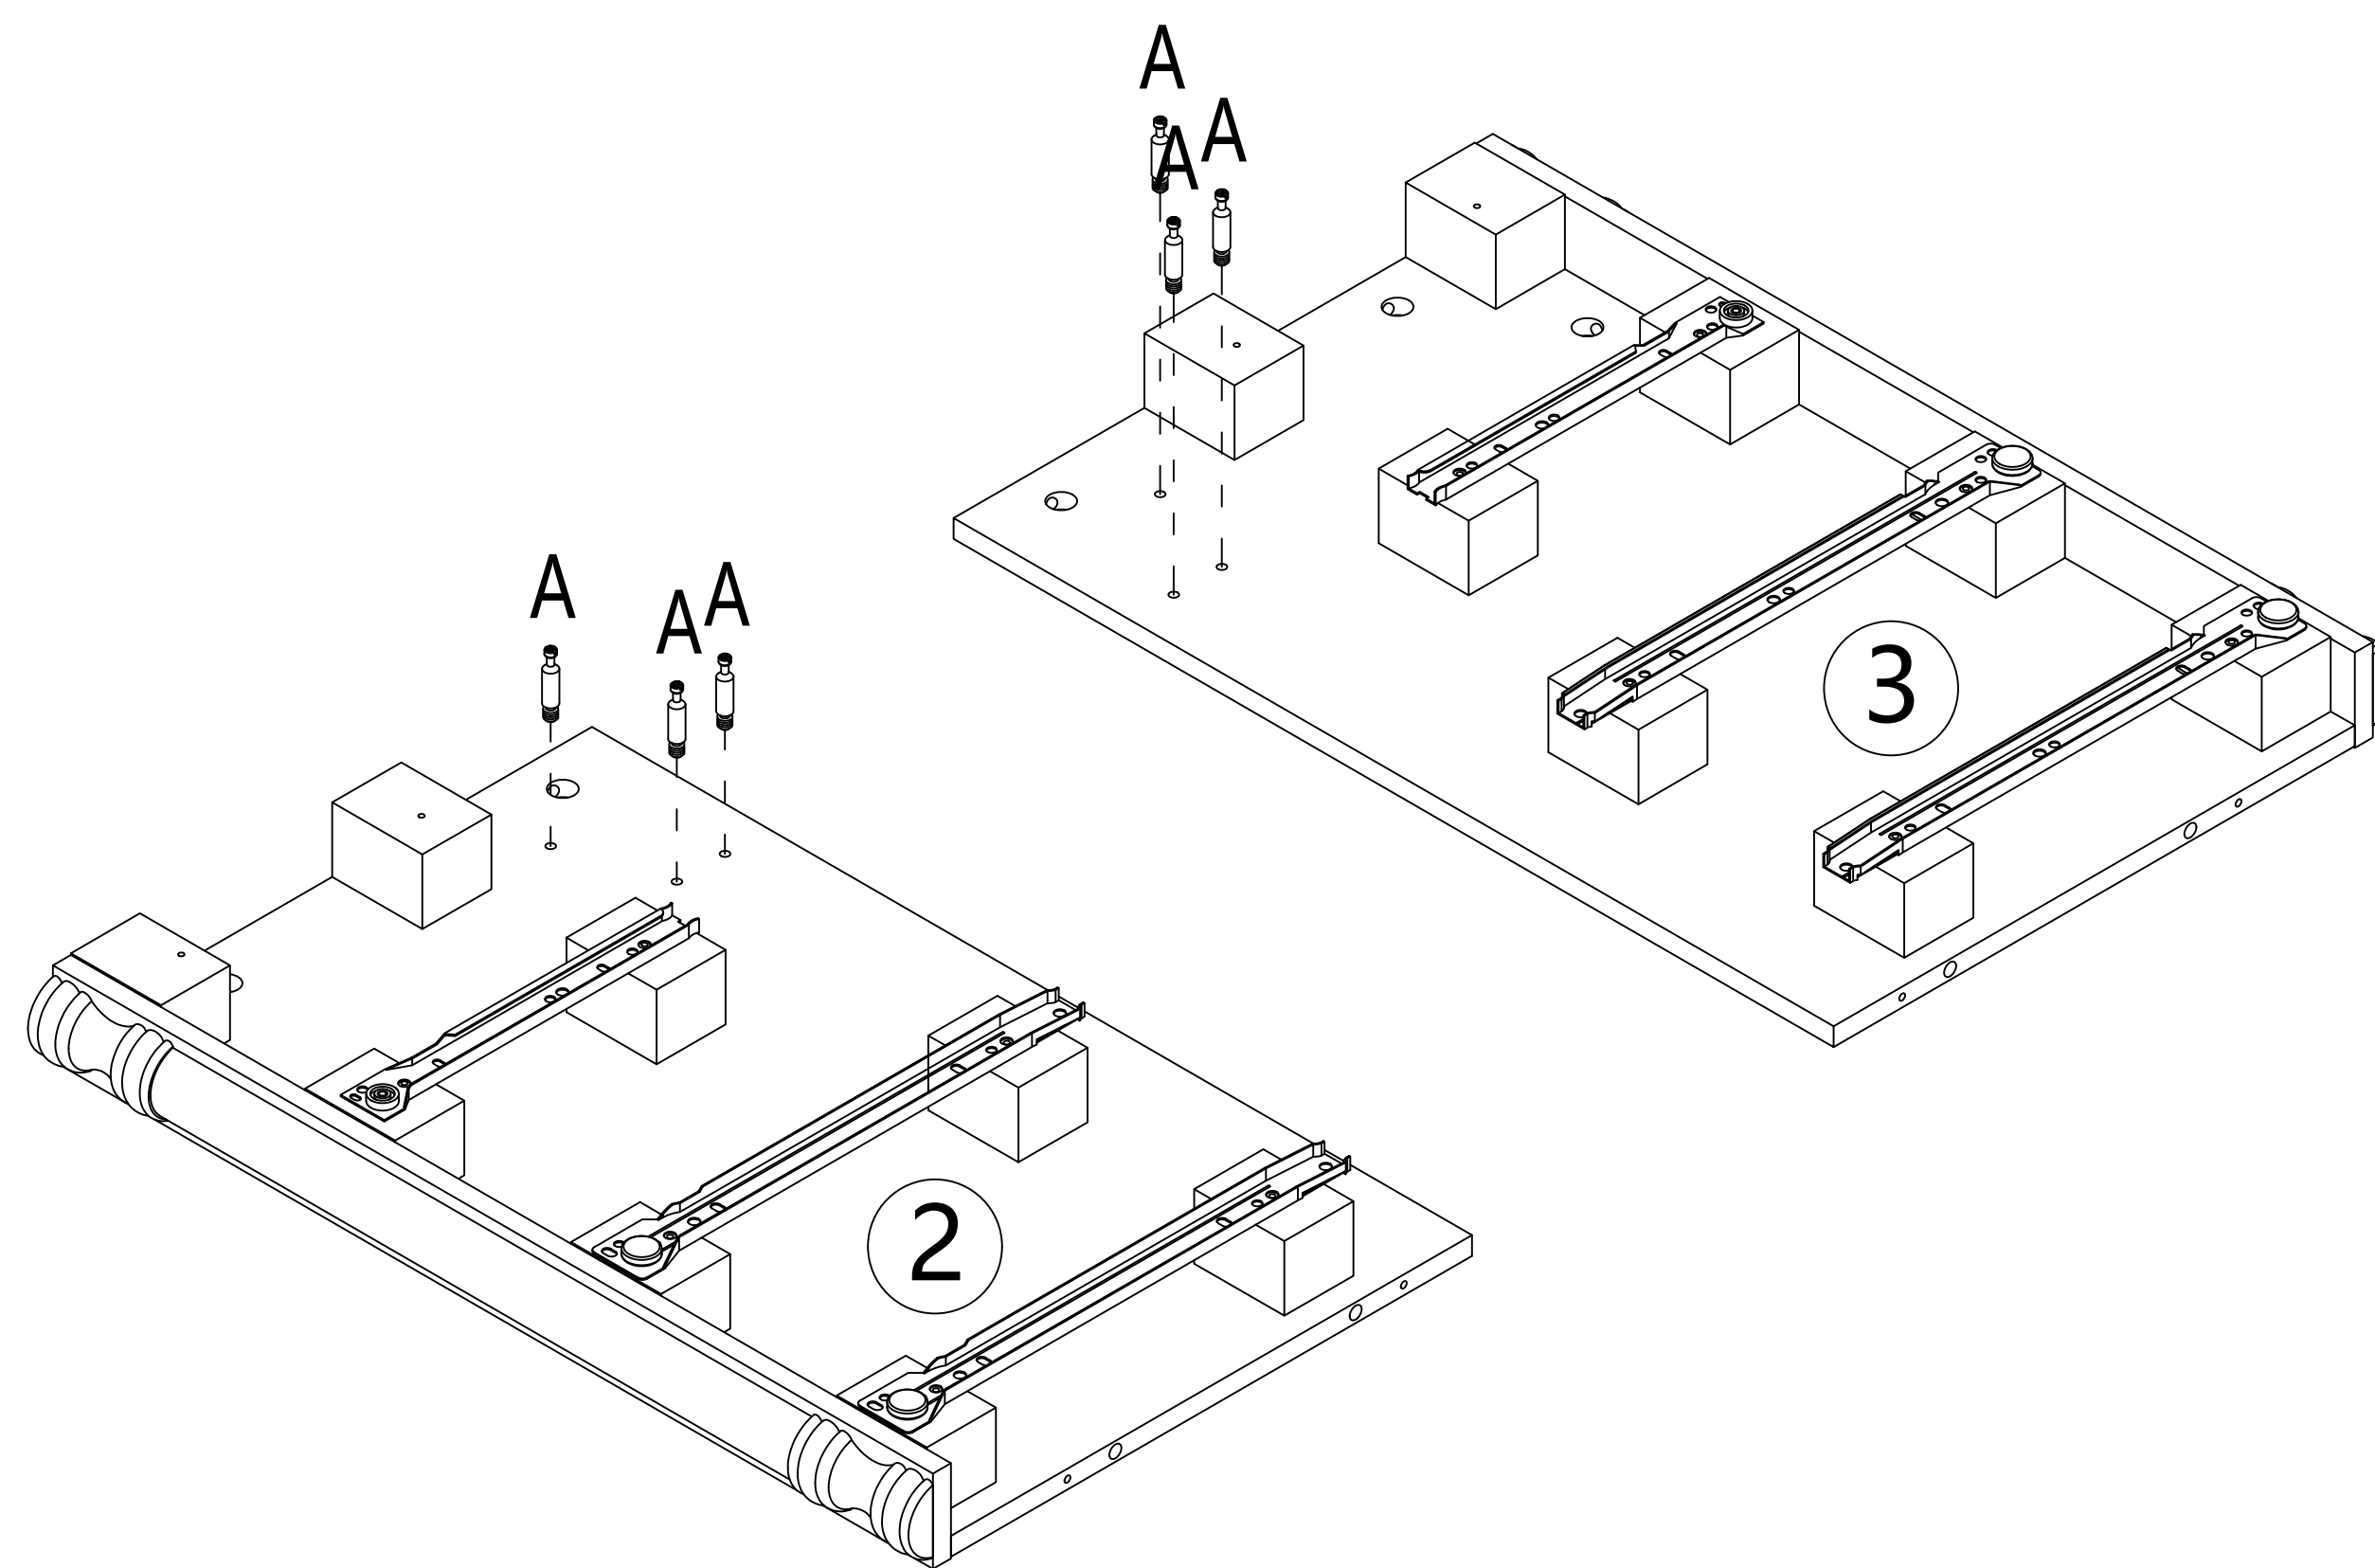


STEP#4





A x 6

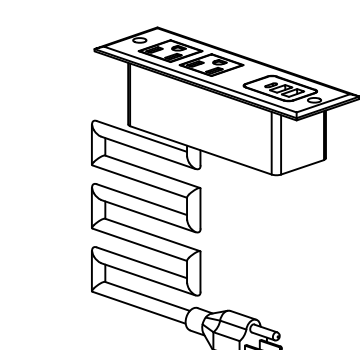


H x 1

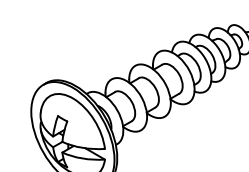


F x 2

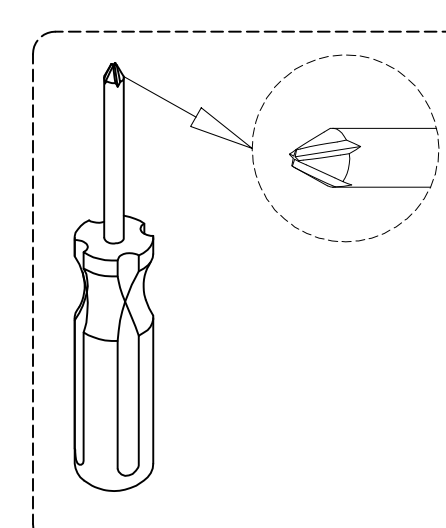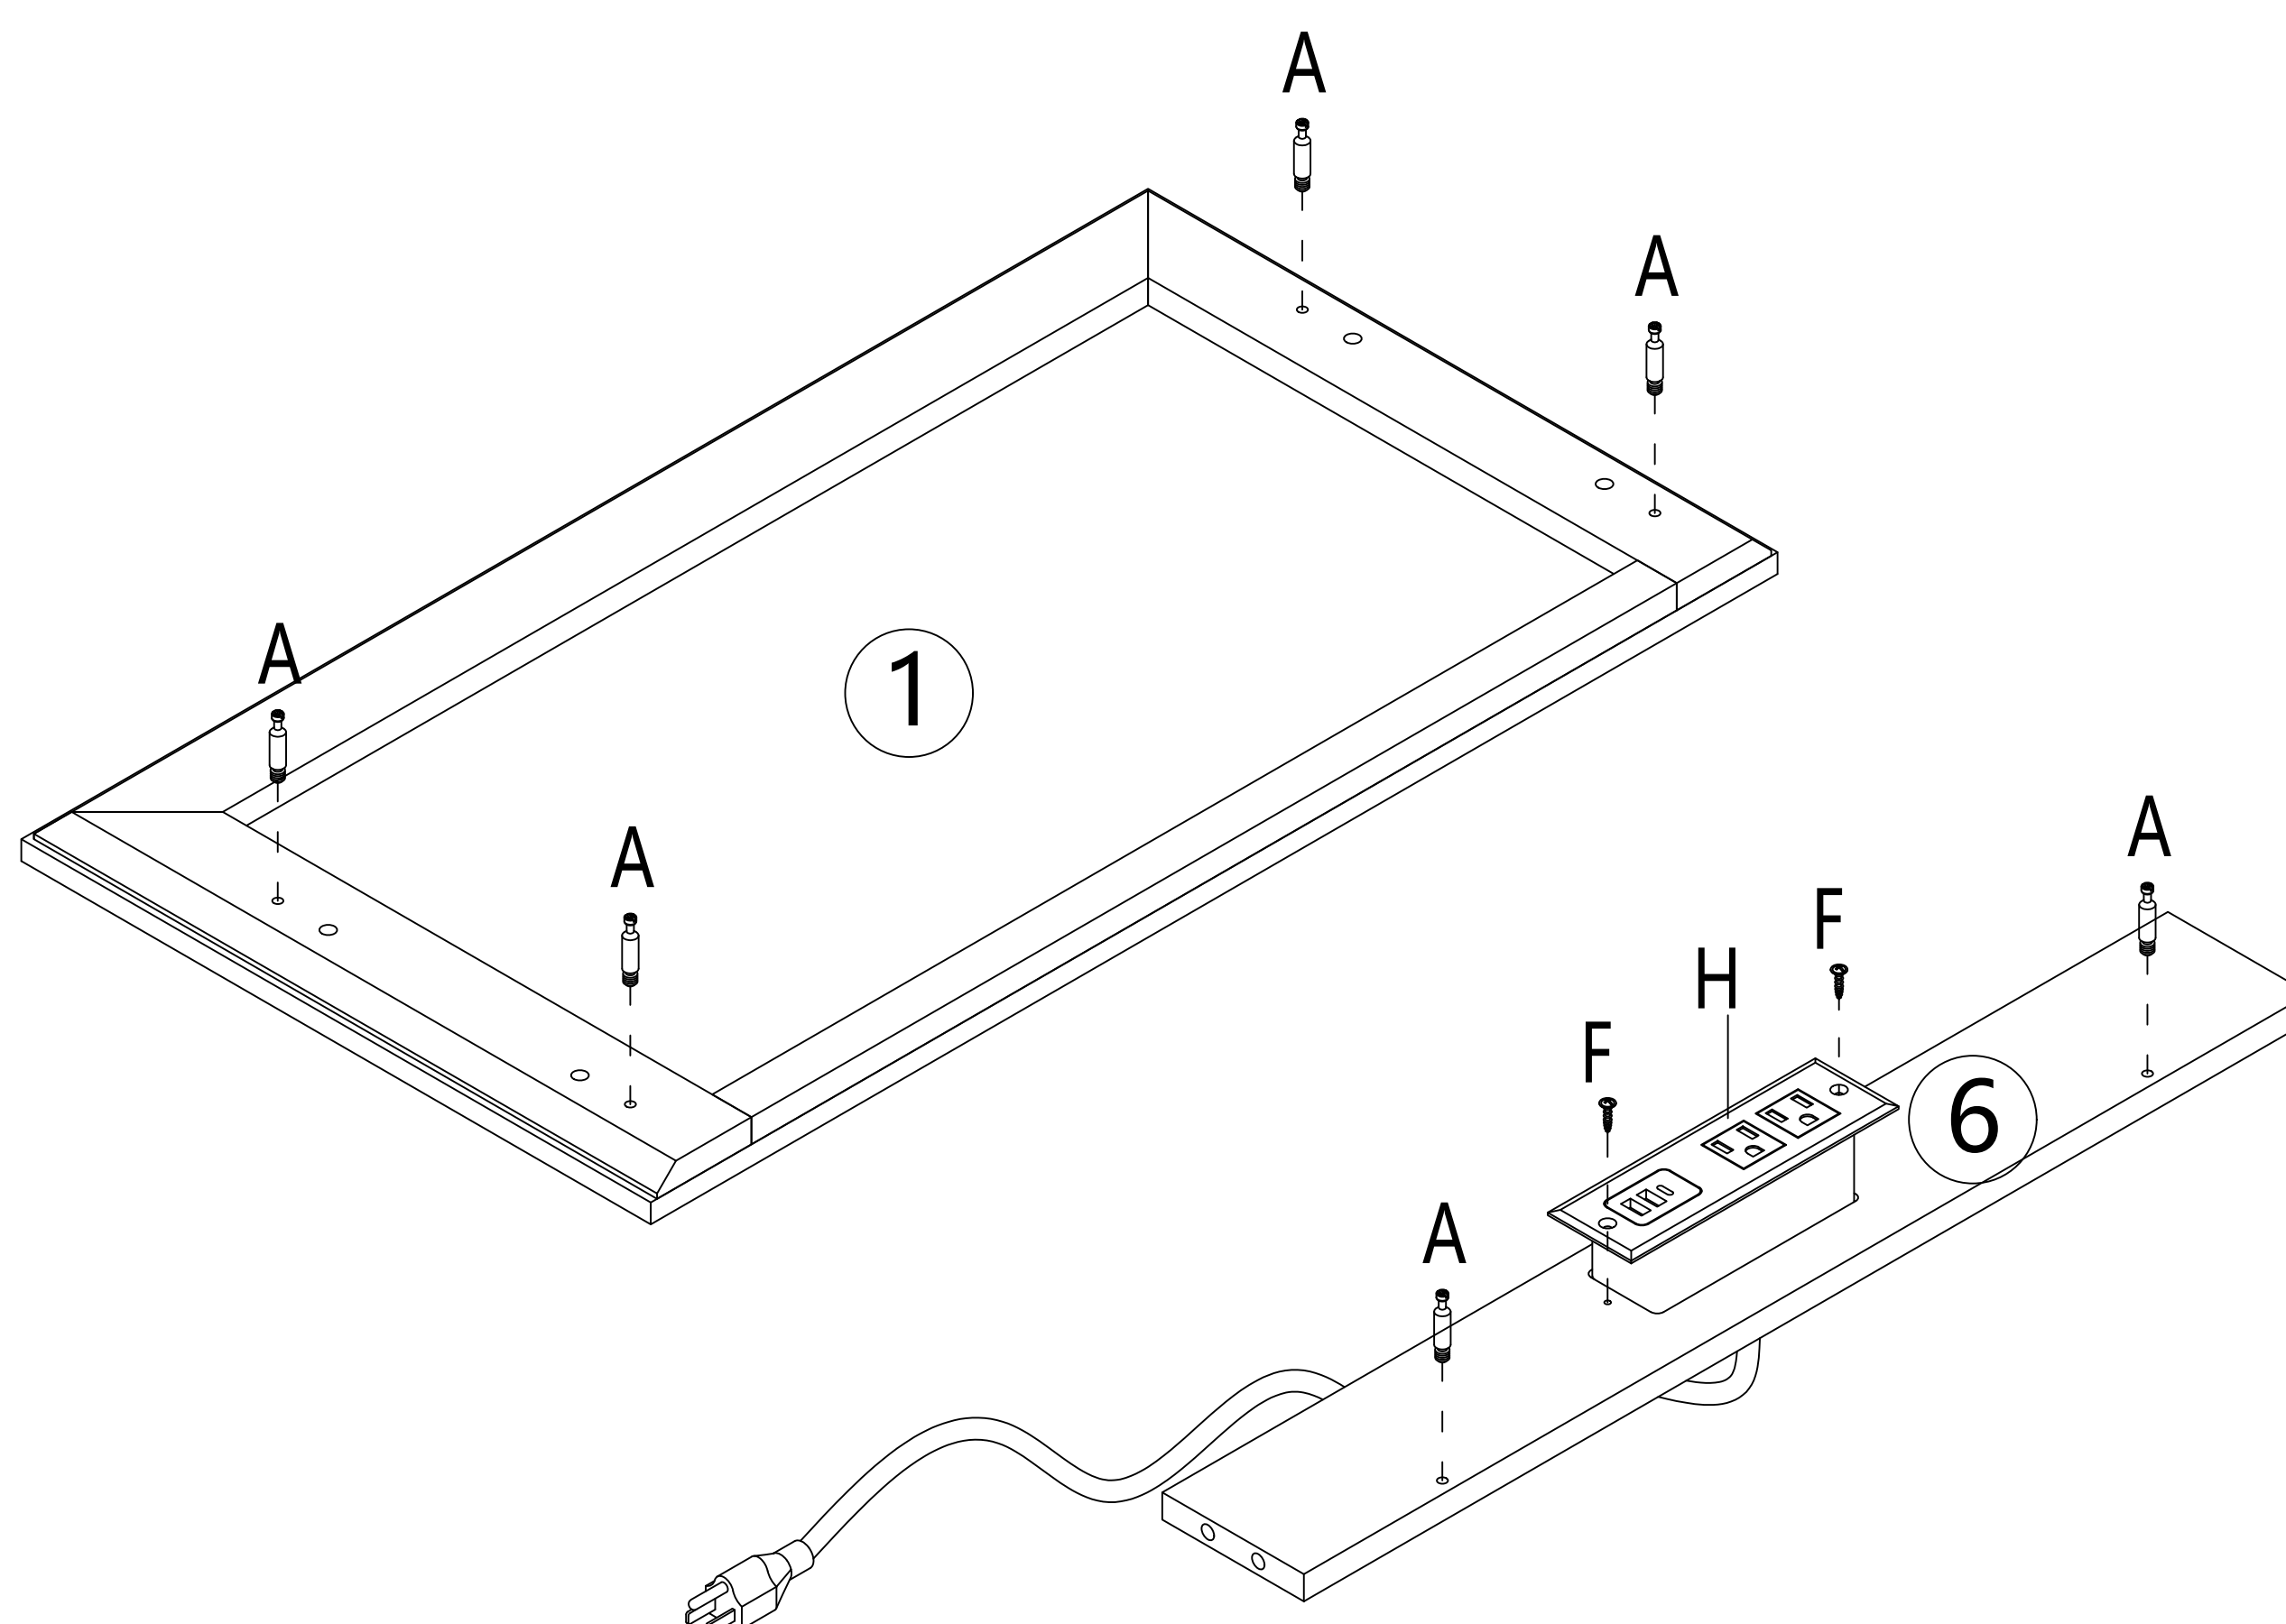



STEP#5

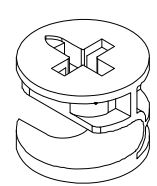


B x 2

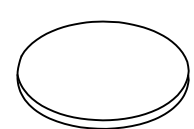


O x 2

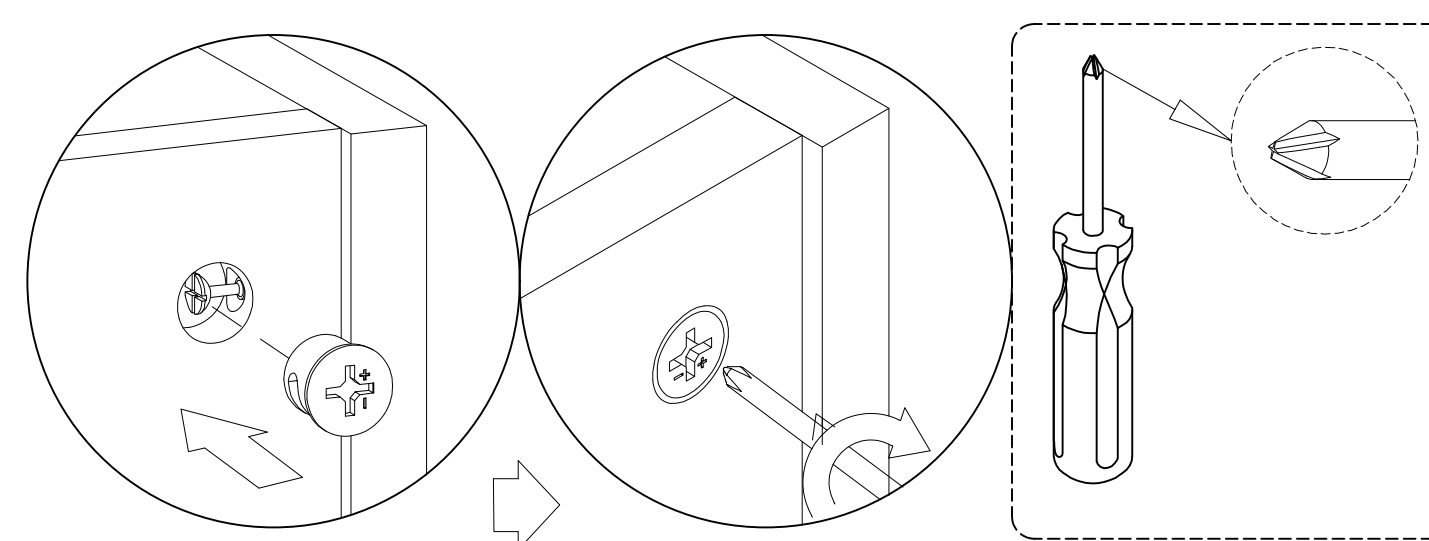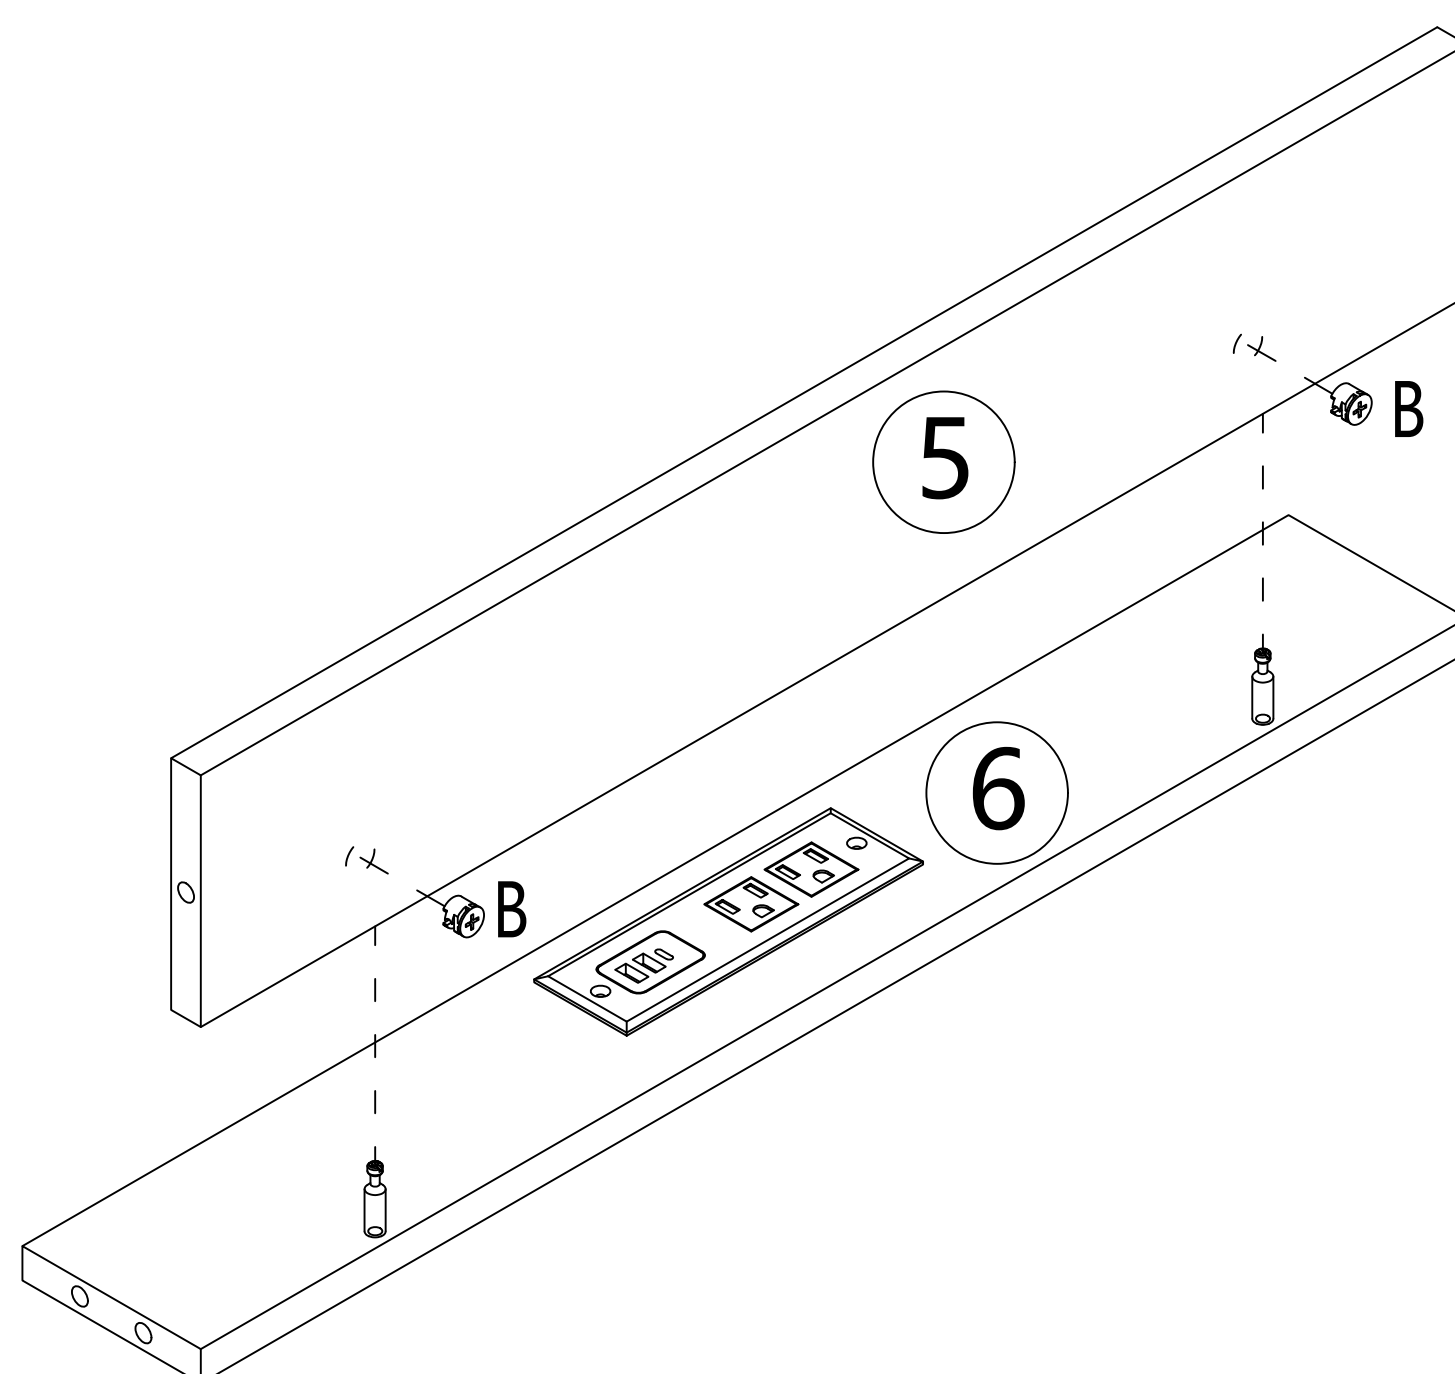



STEP#6

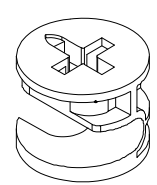


B x 6

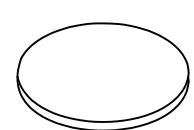


O x 6

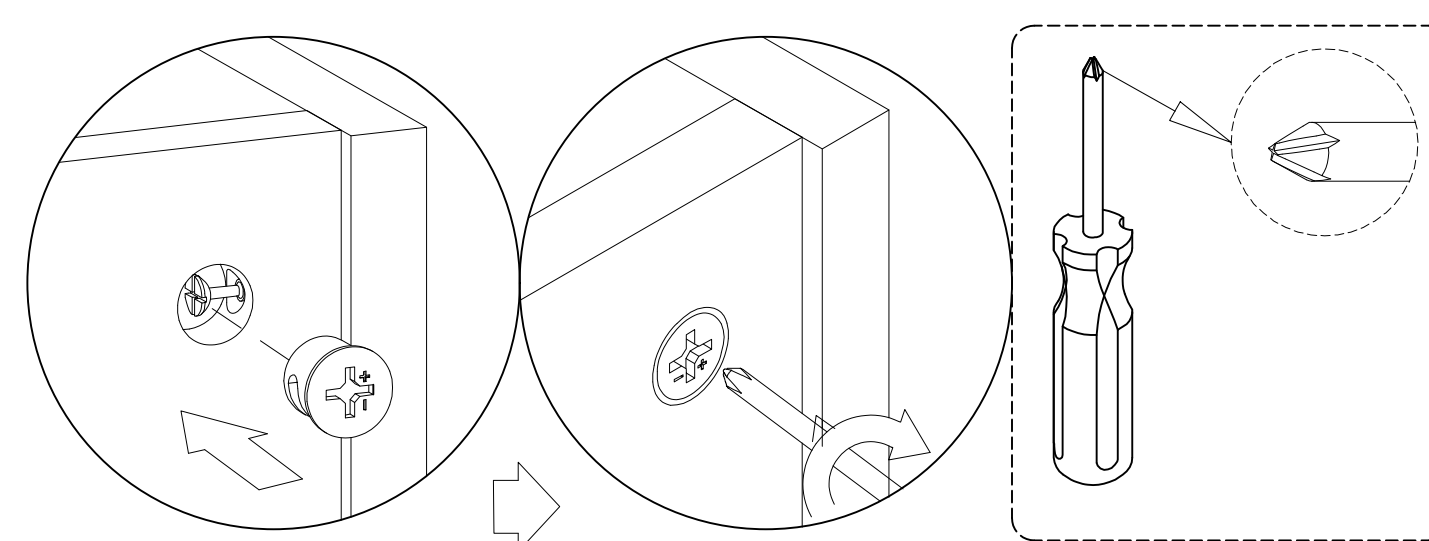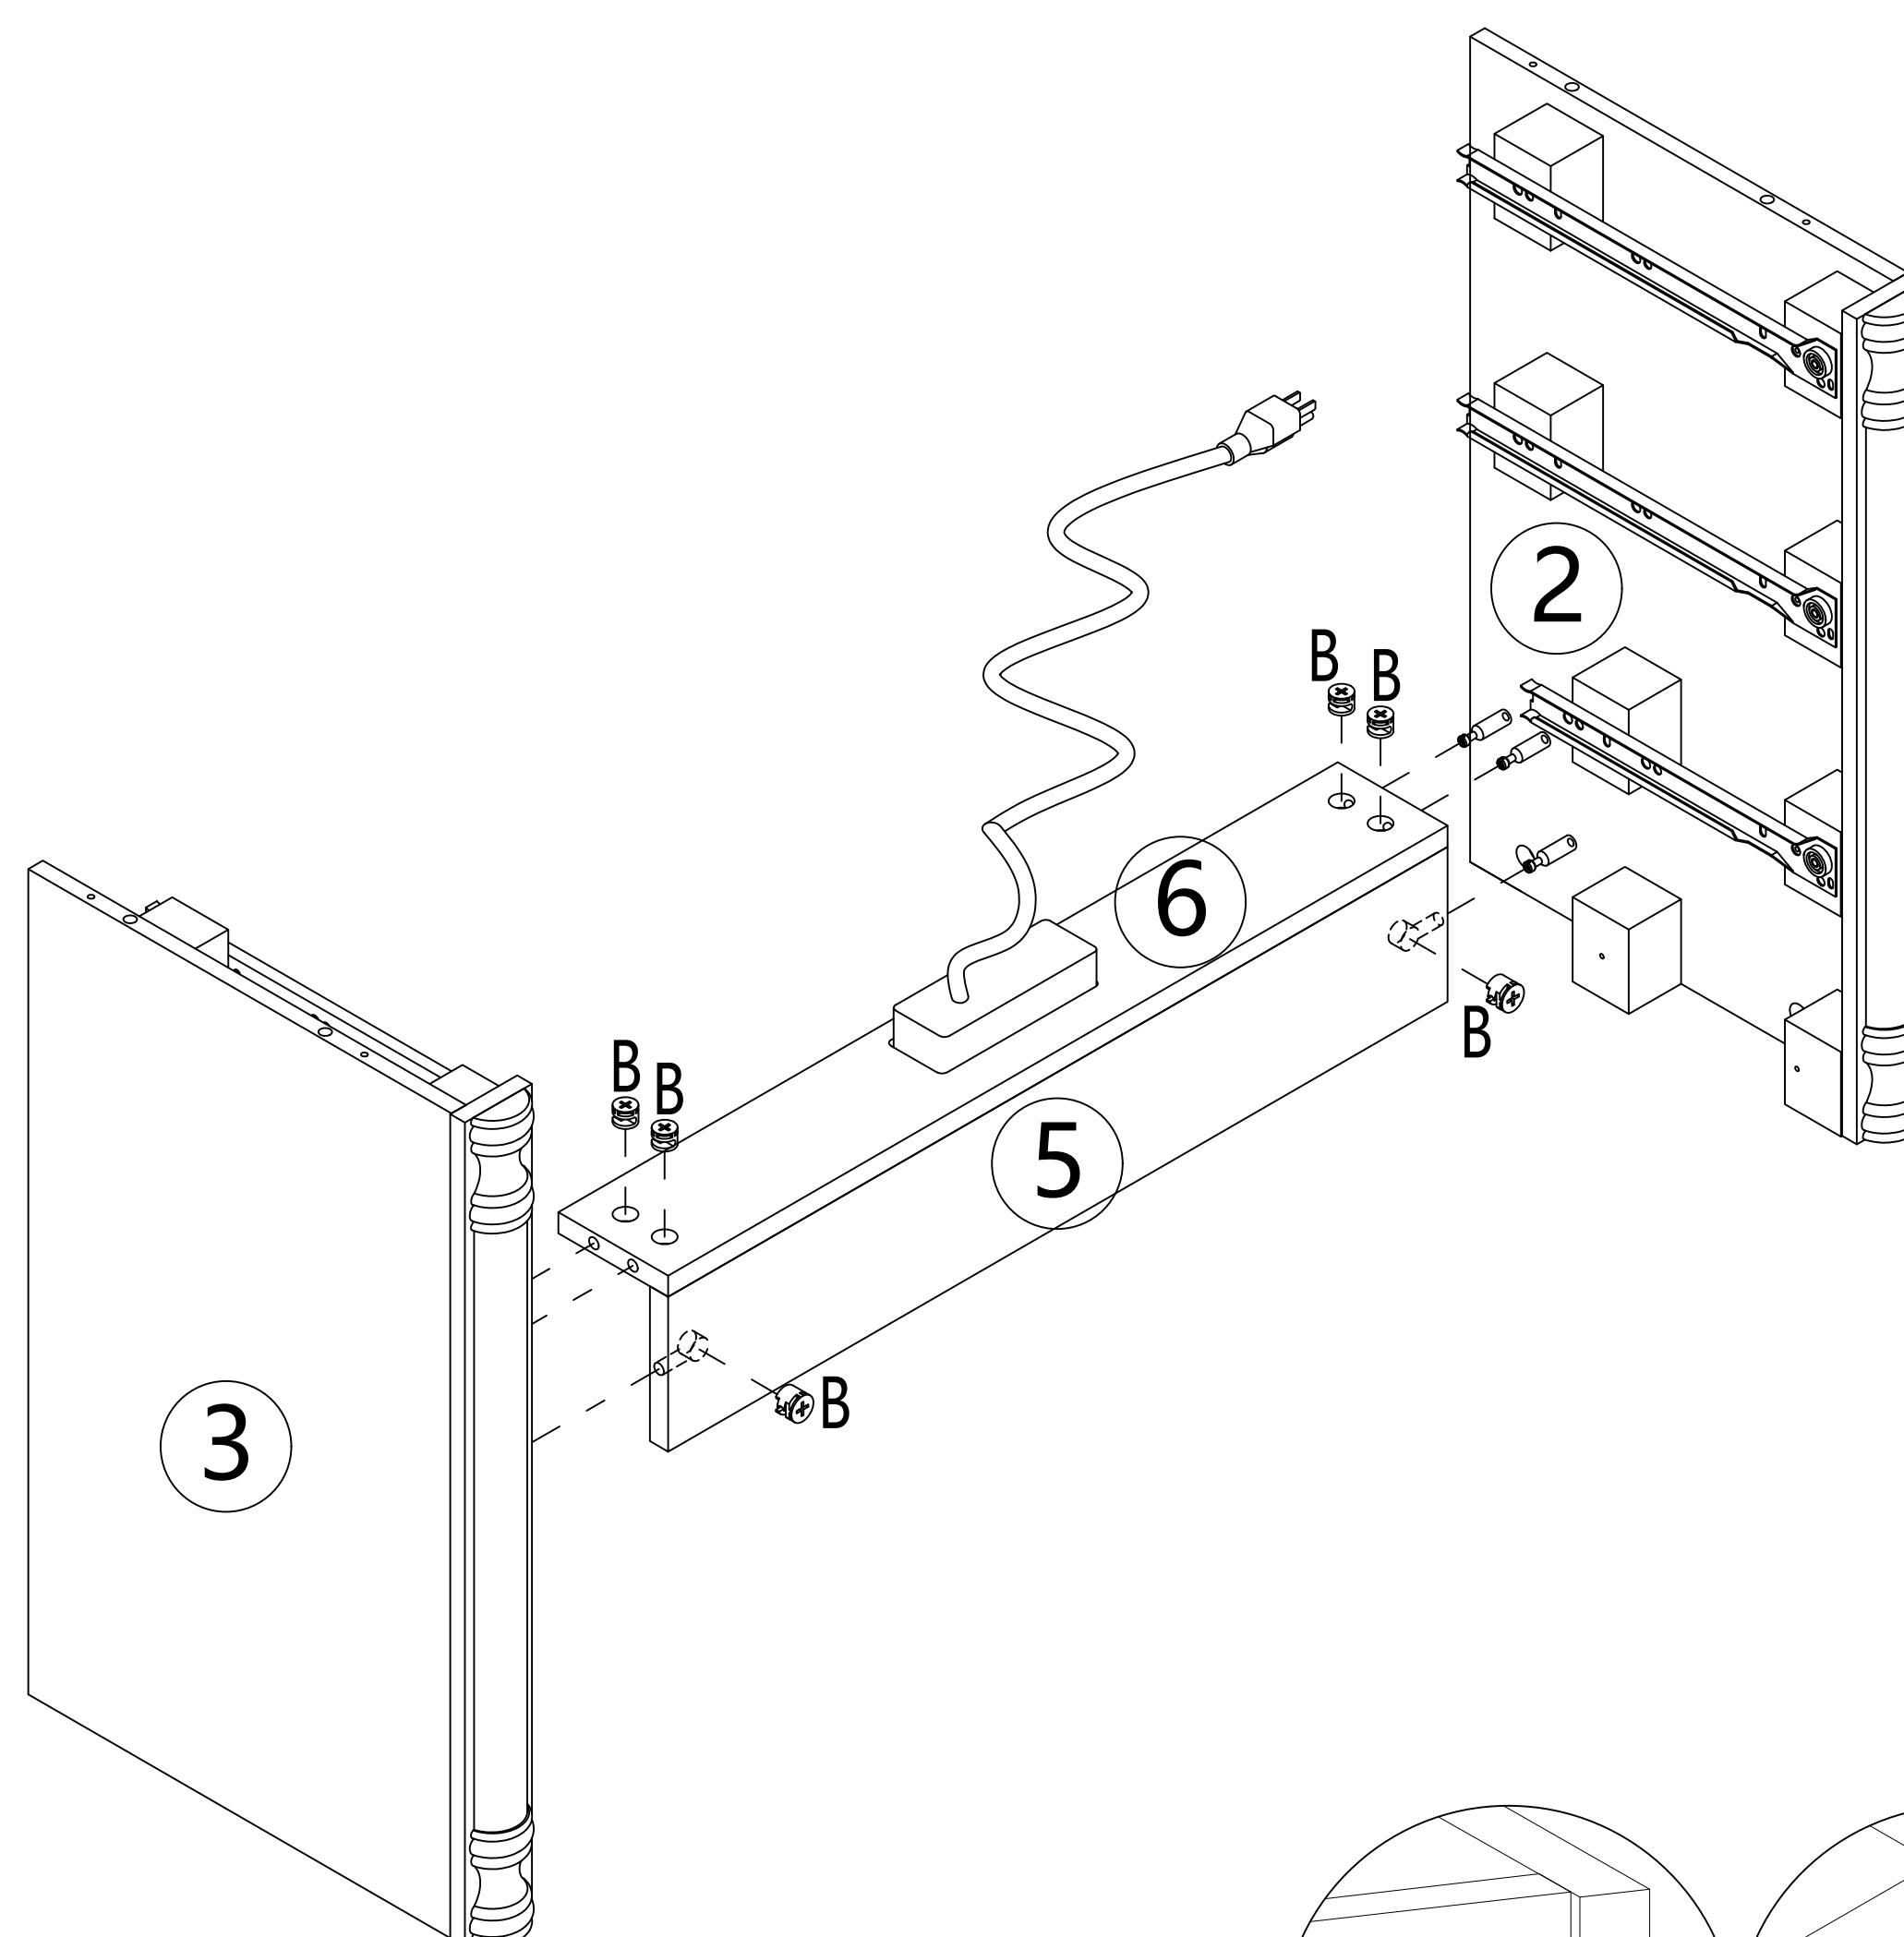


STEP#7

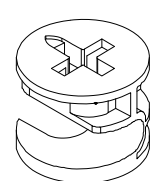



B x 4

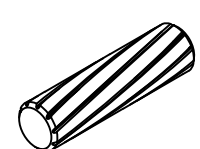

C x 4

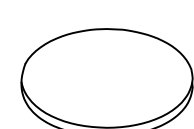

O x 4

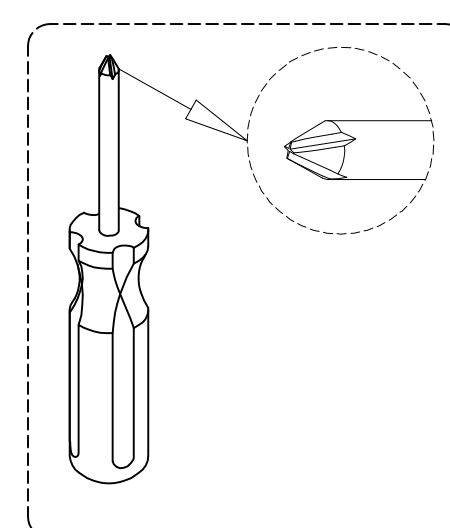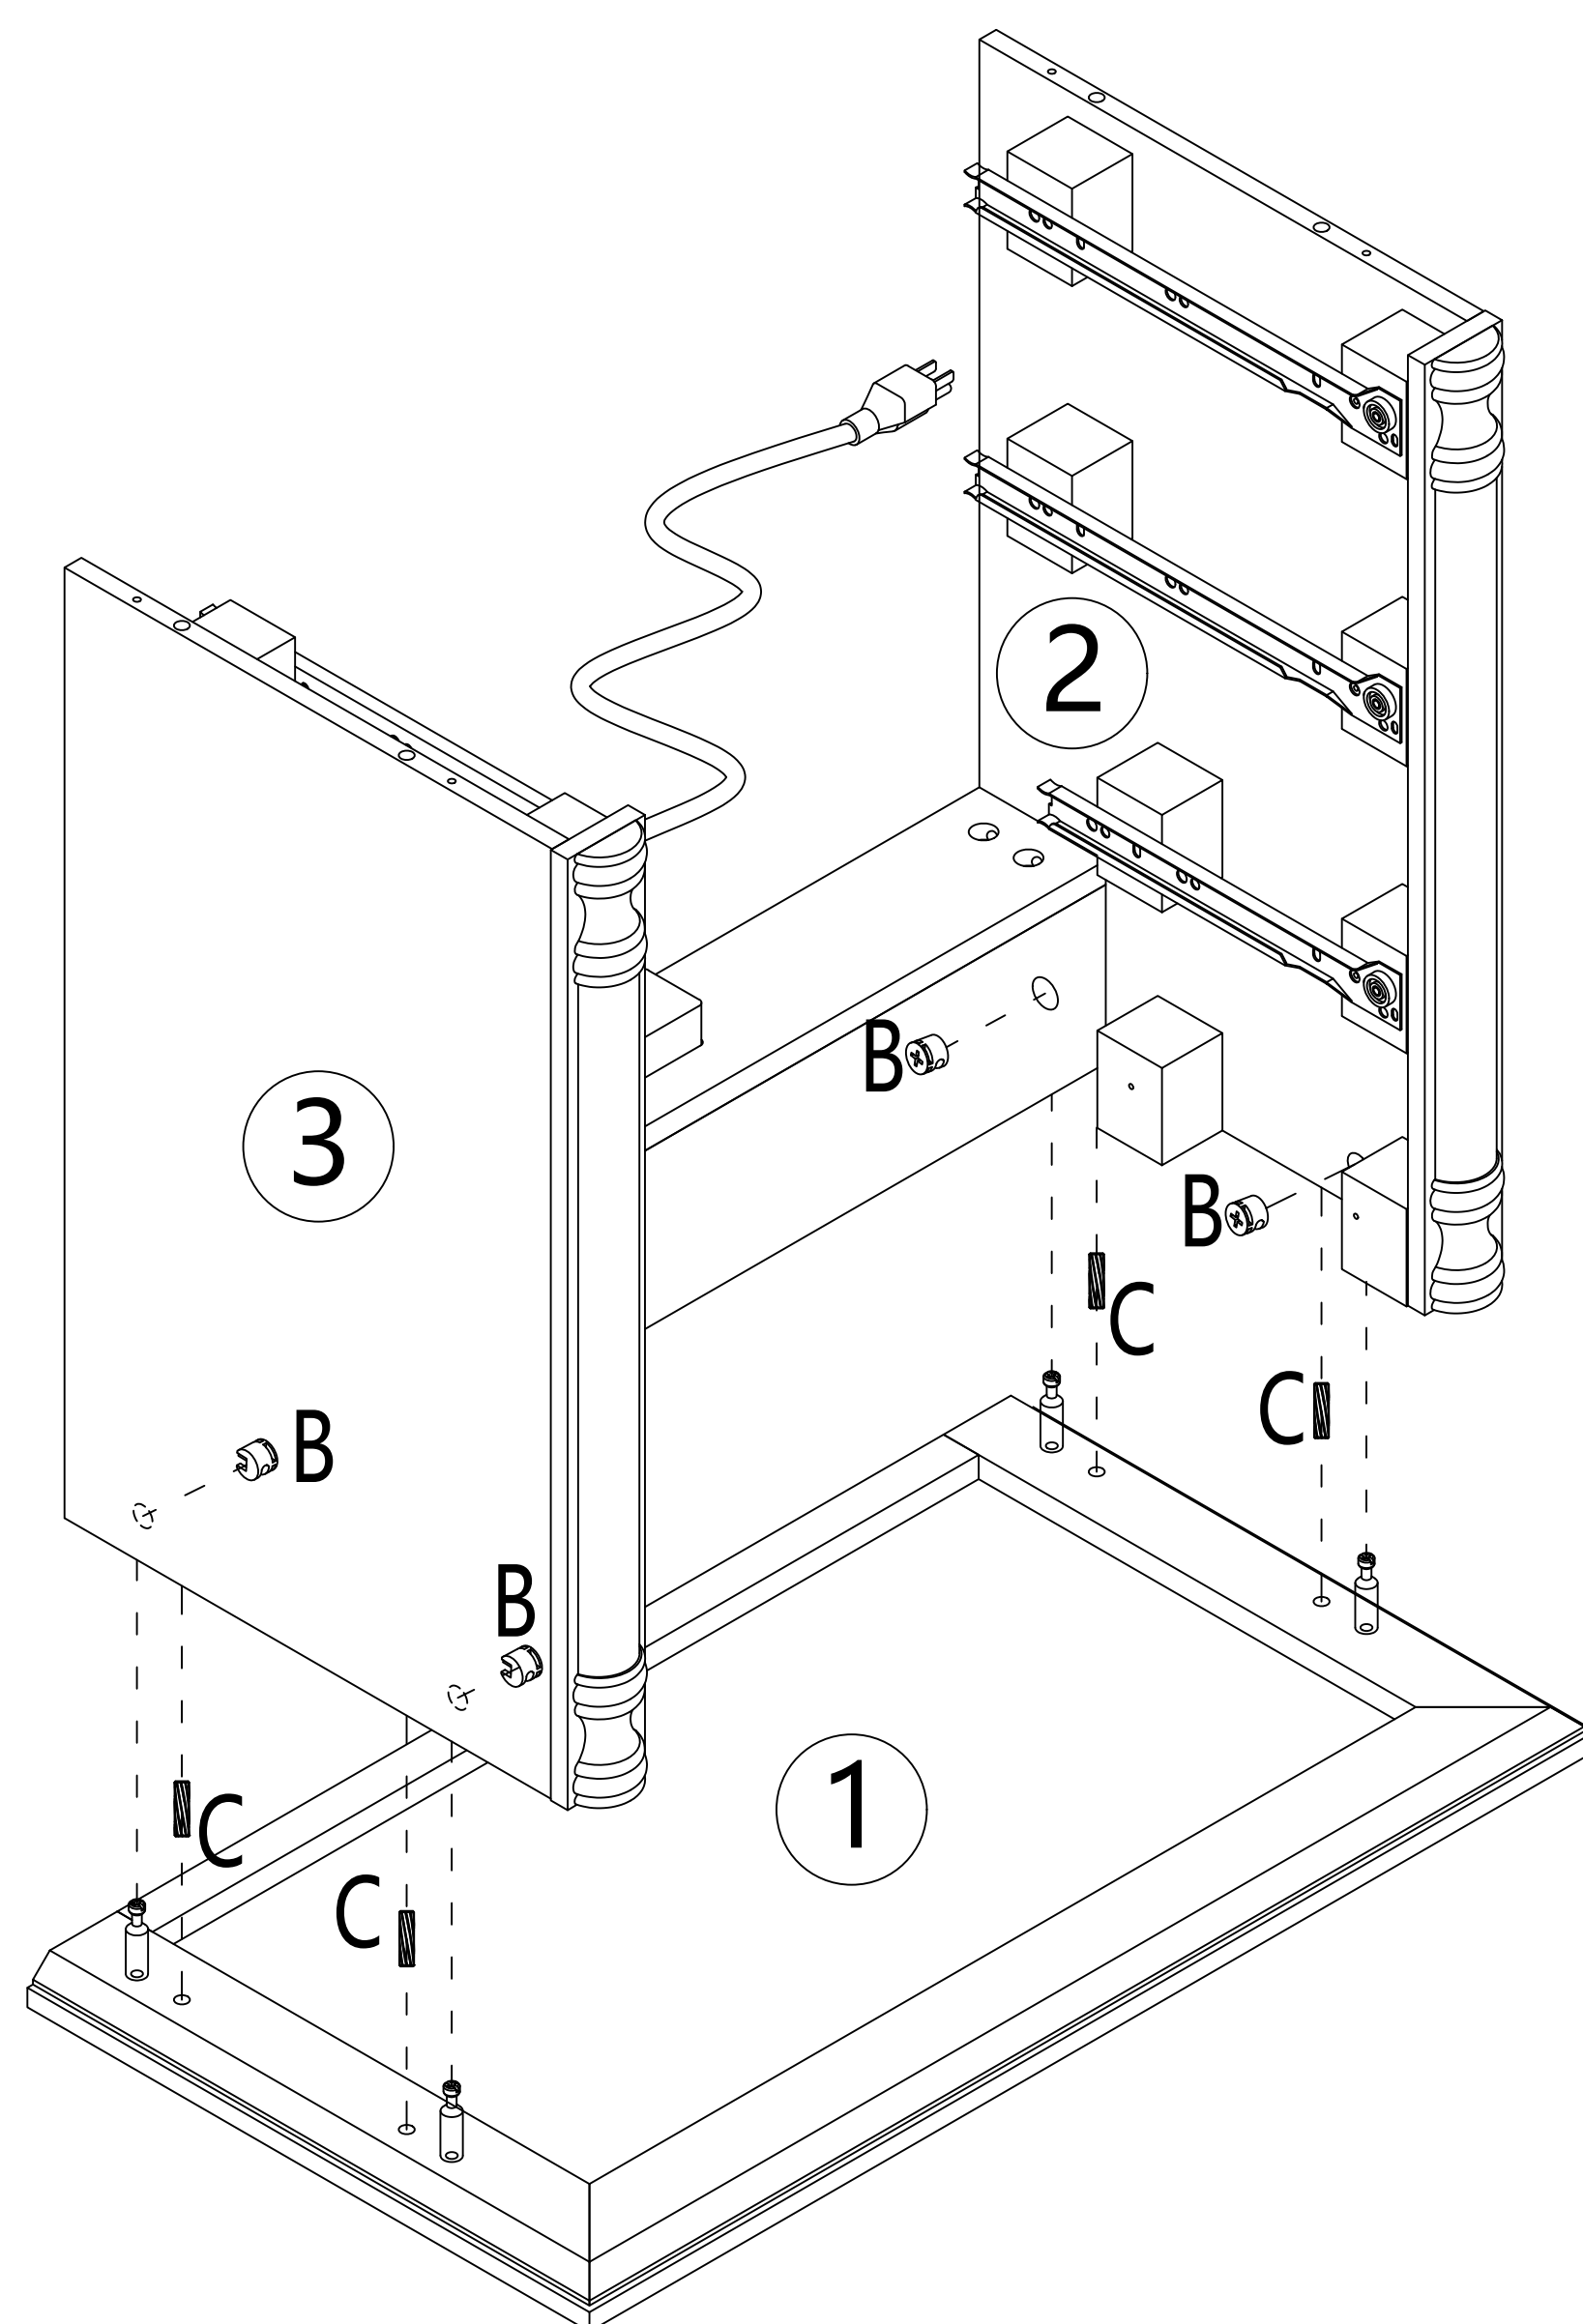

STEP#8

Attention:


Take care when installing the slide rails as they have been pre-lubricated

N




N x 2


Slider runner

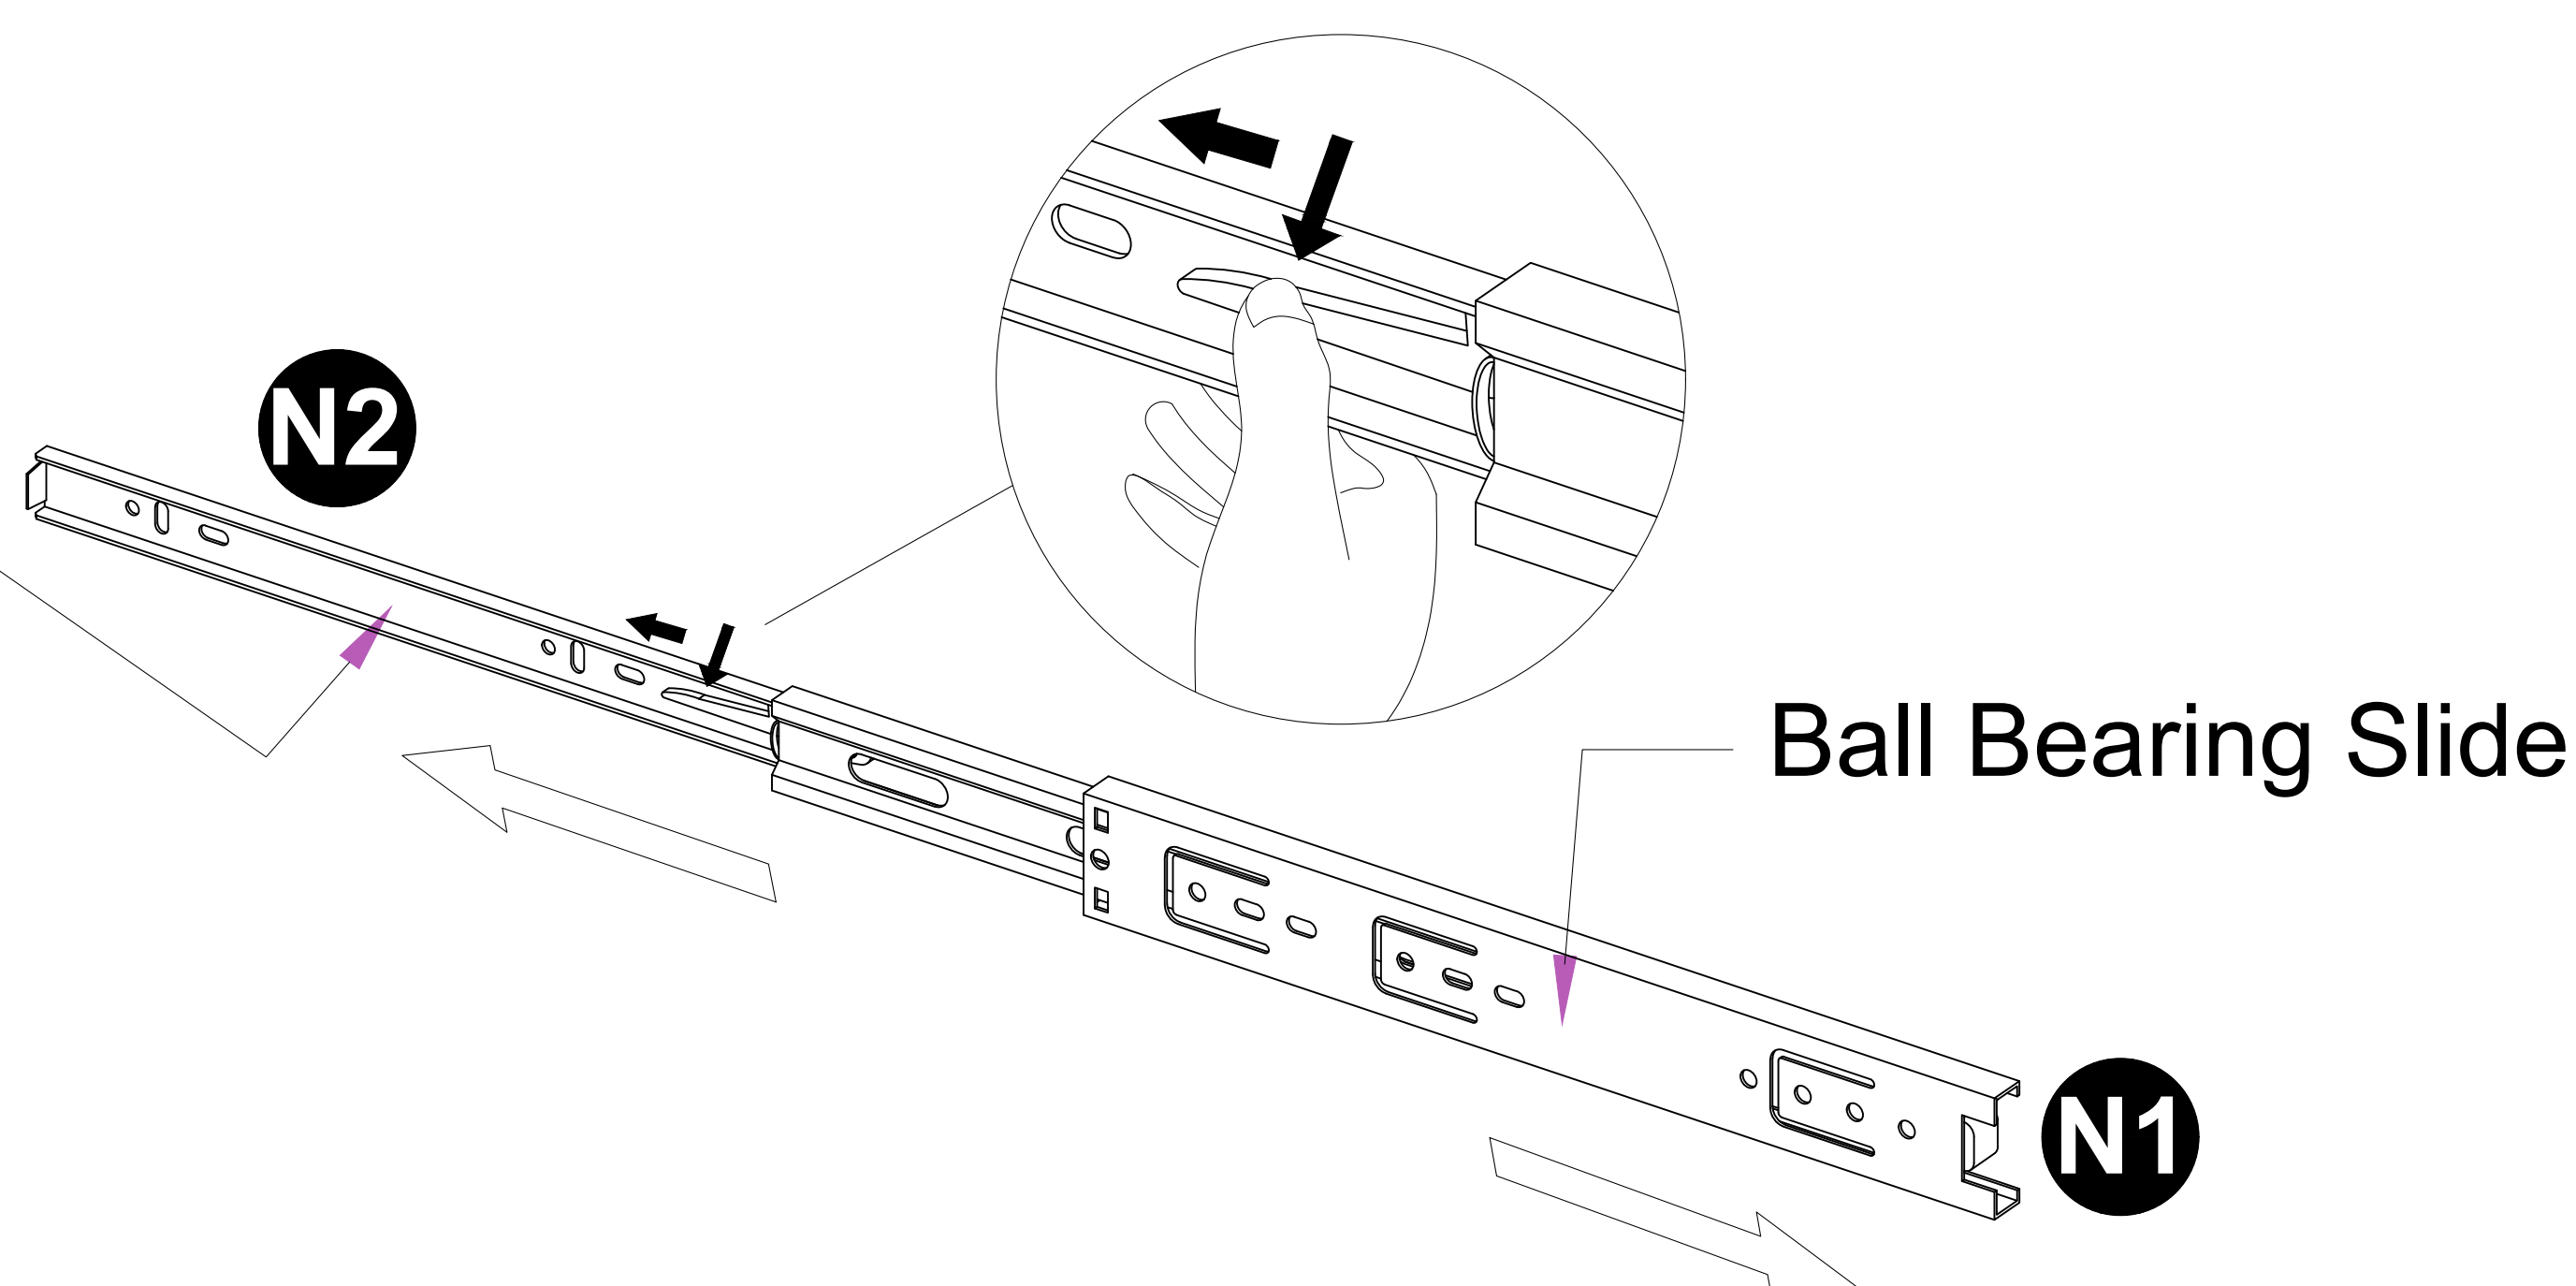


STEP#9



G x 4

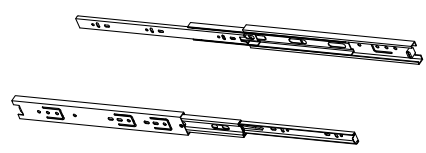


N1 x 2

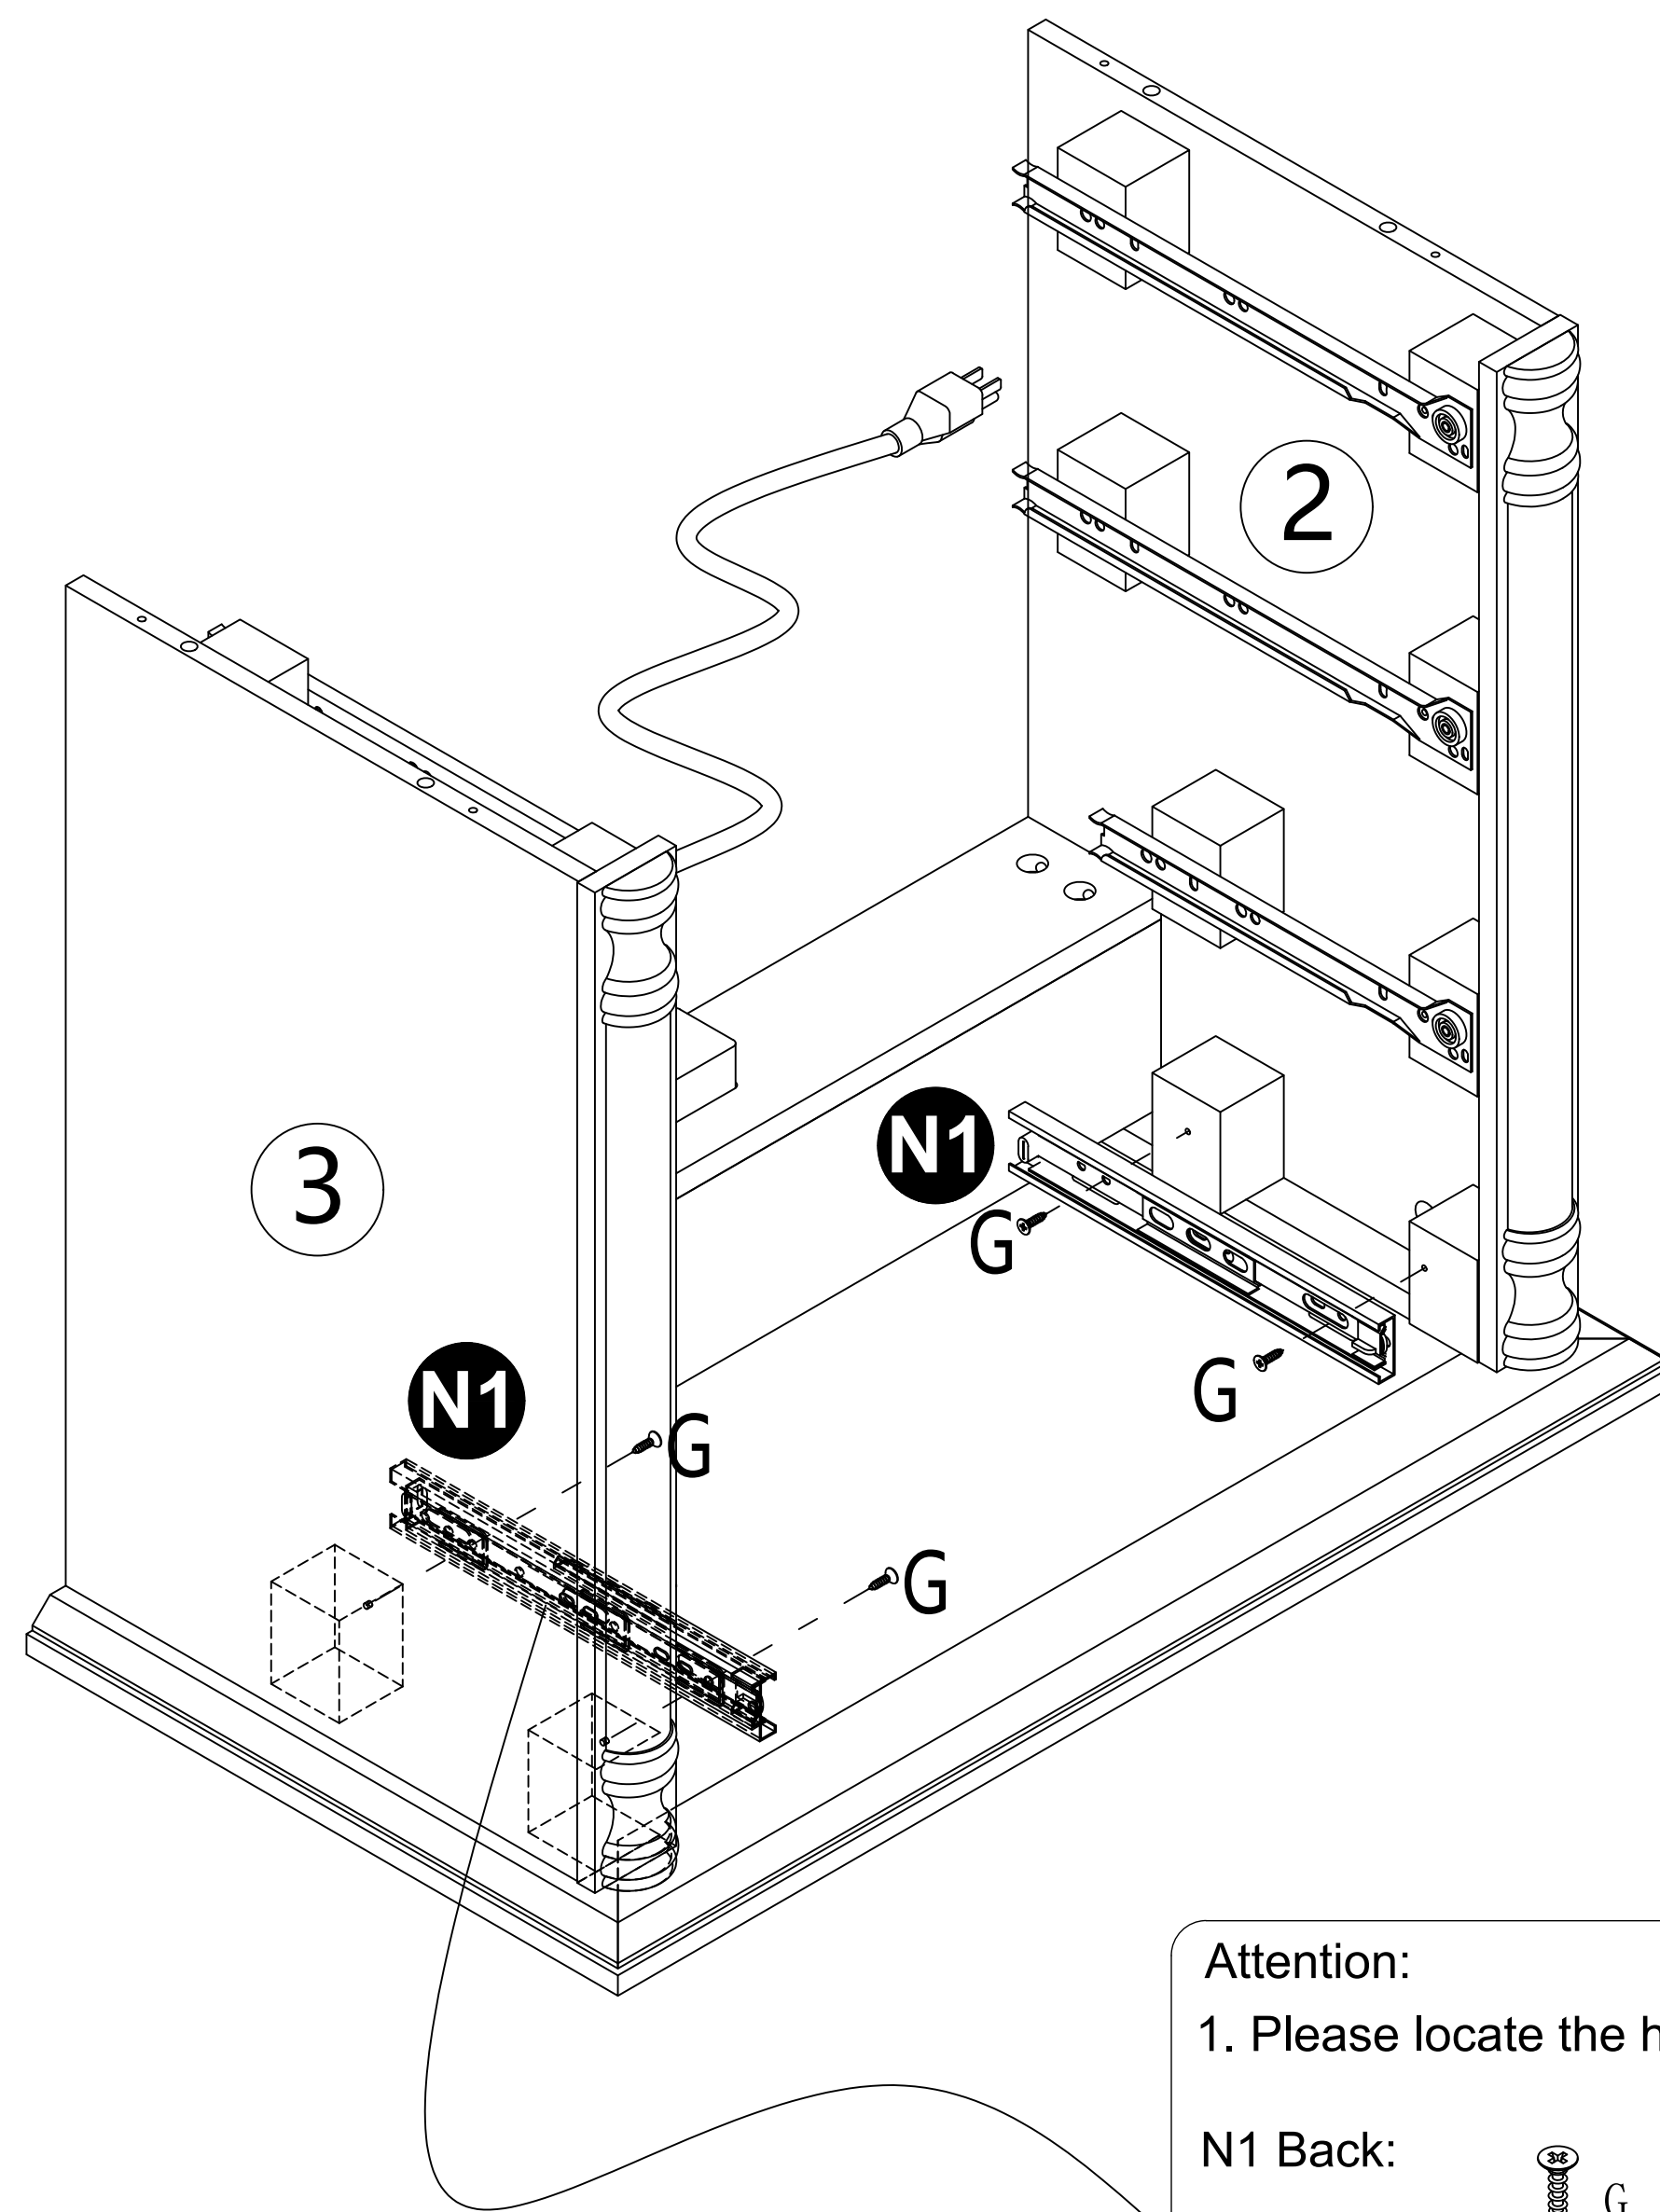


Attention:

1. Please locate the holes from the back of part N1.


N1 Back:

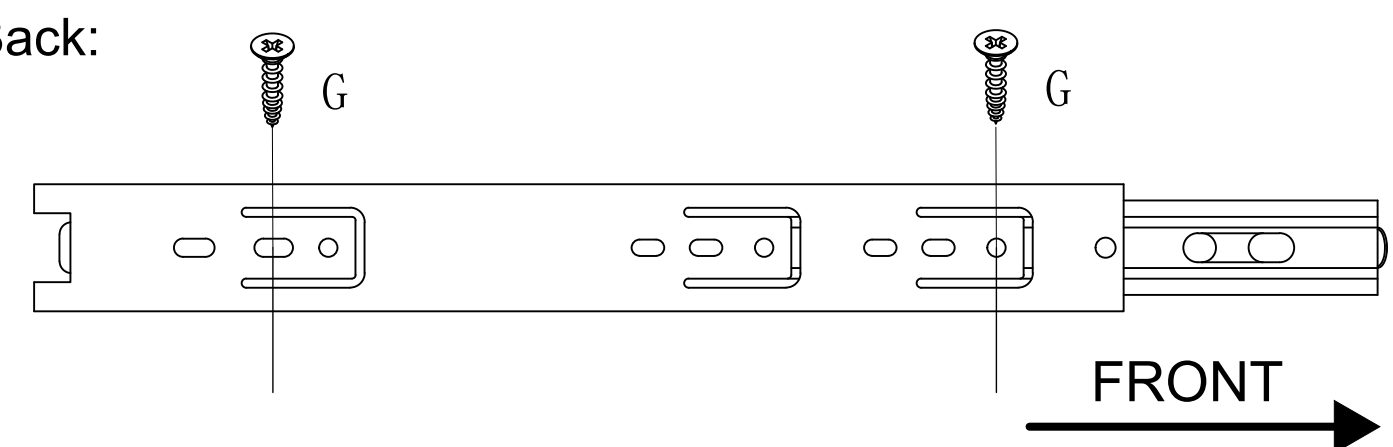


STEP#10

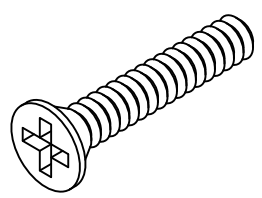


K x 4

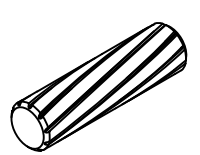



C x 4

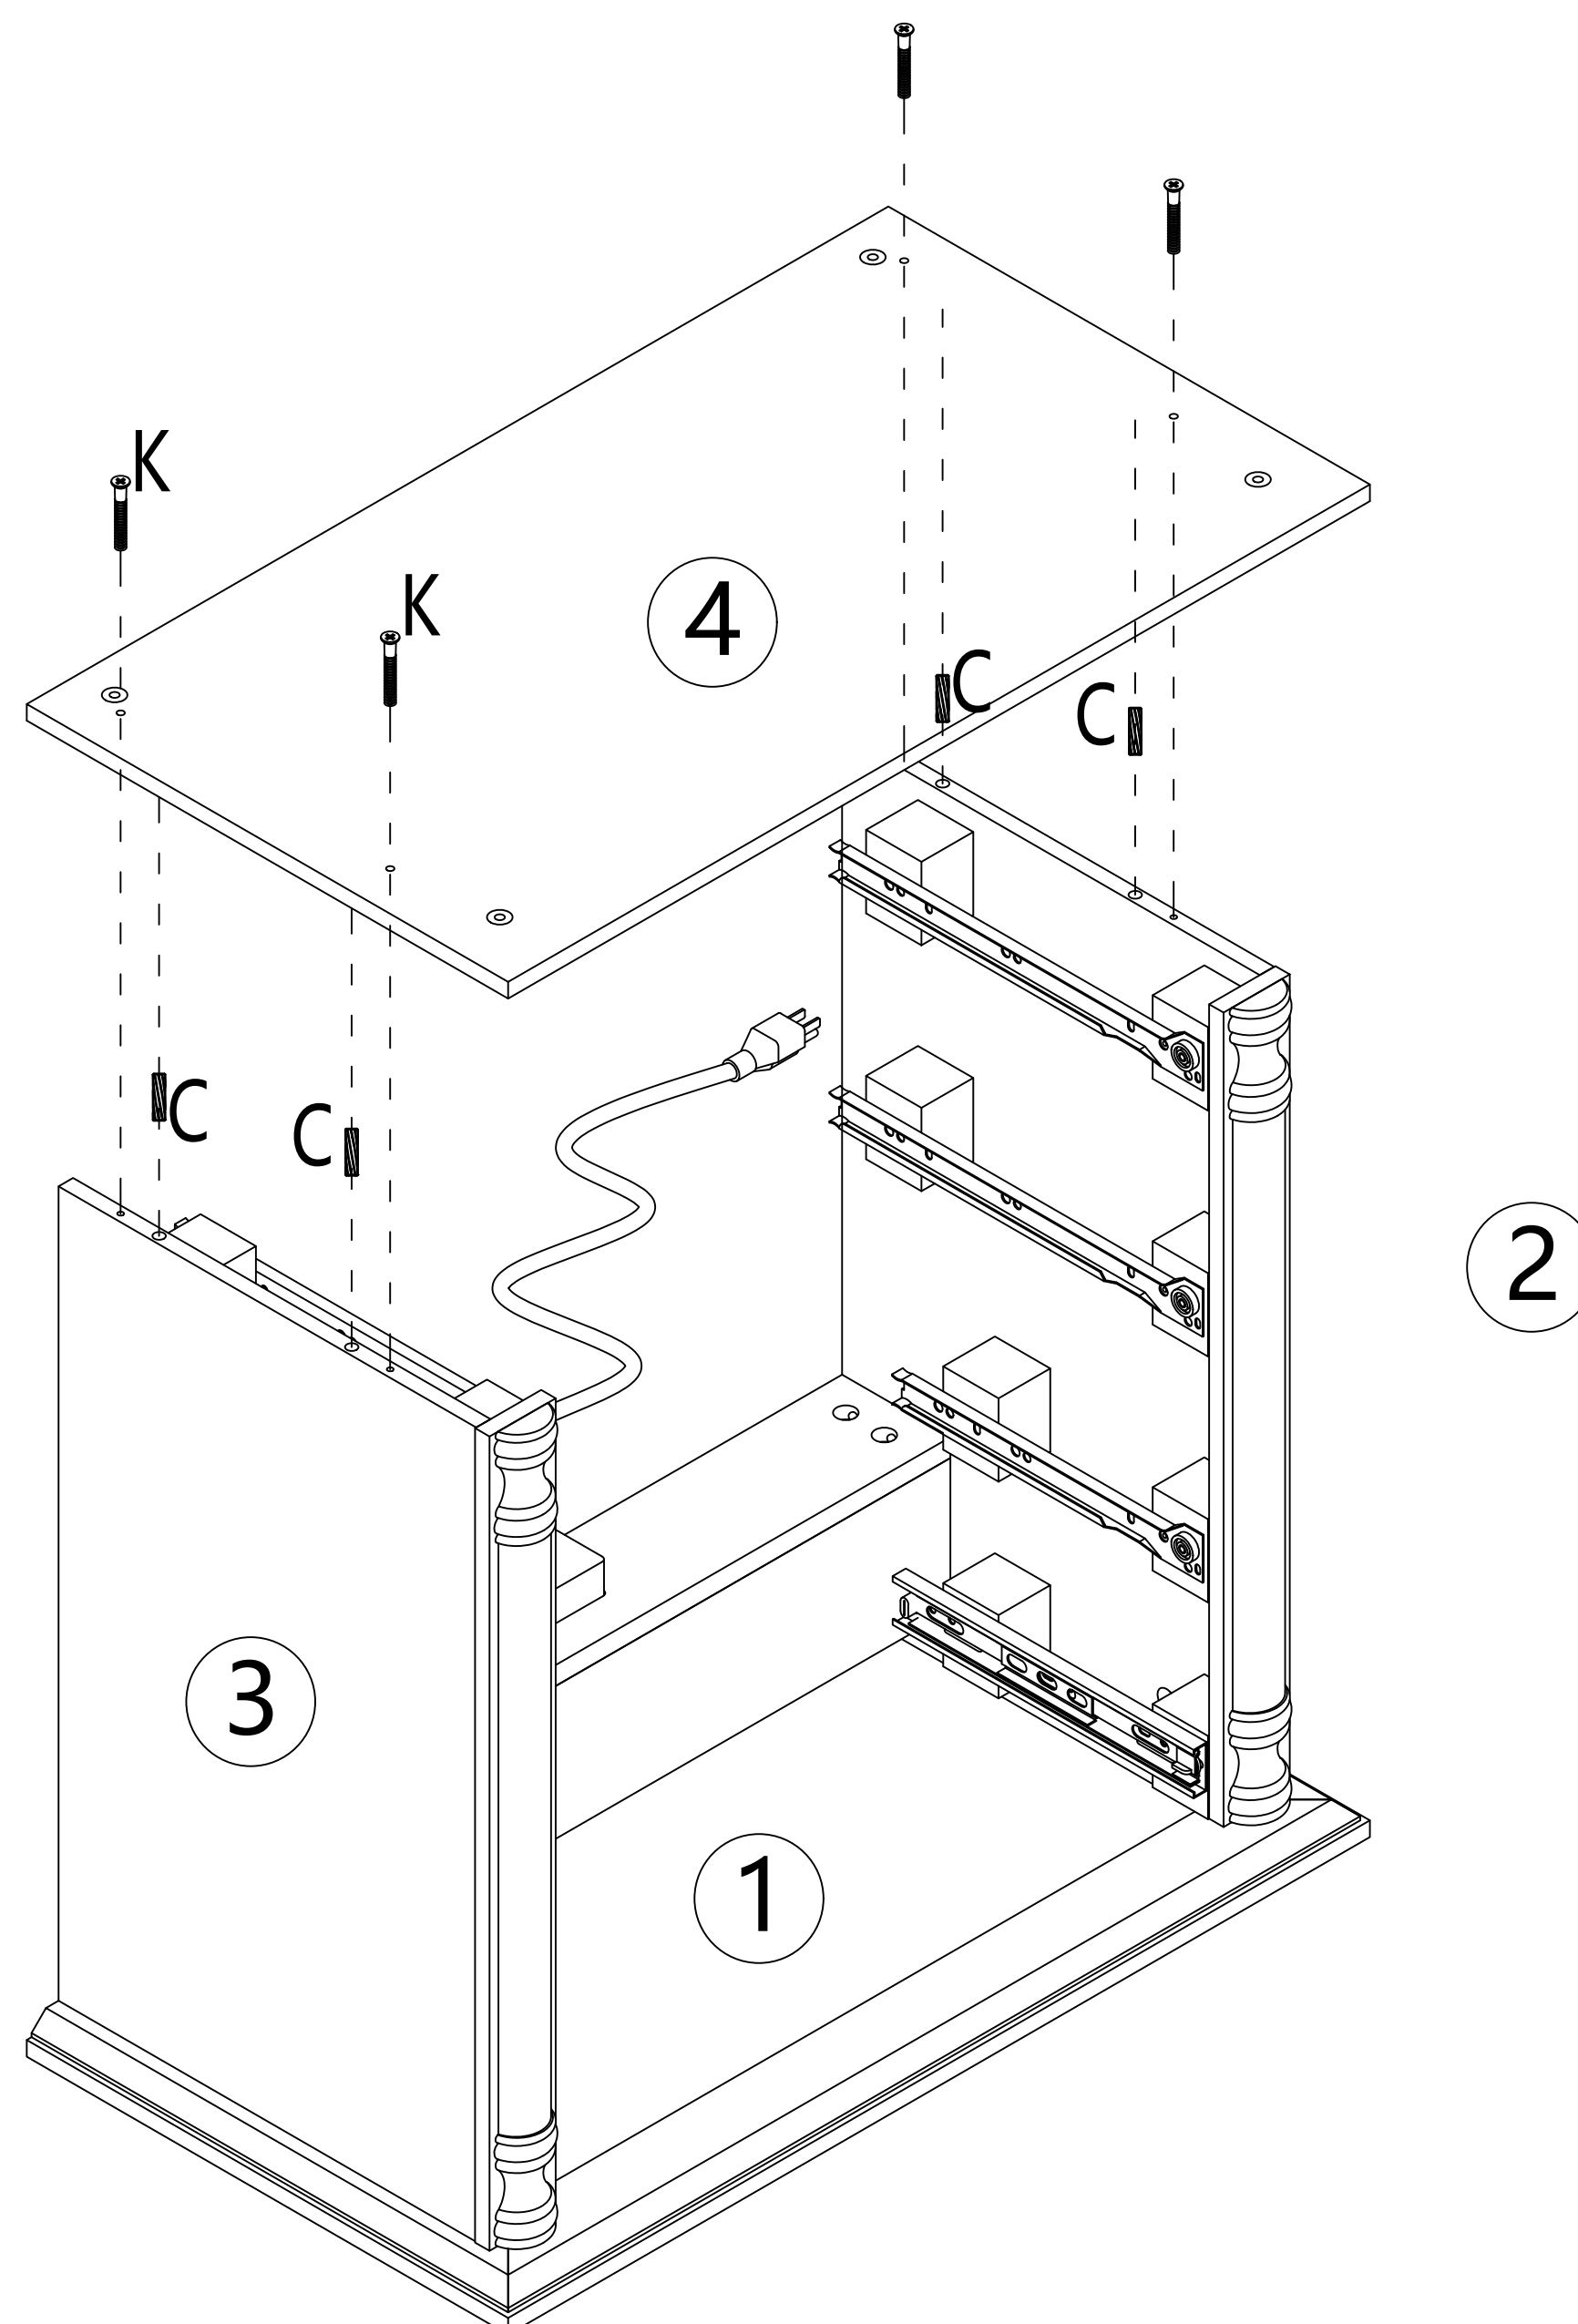


STEP#11

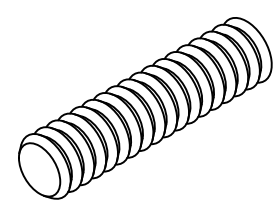



J x 4

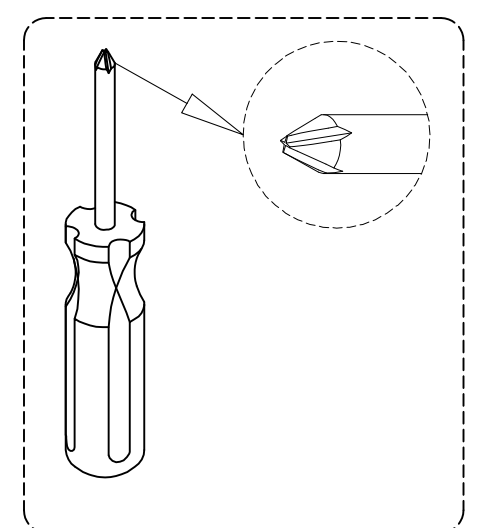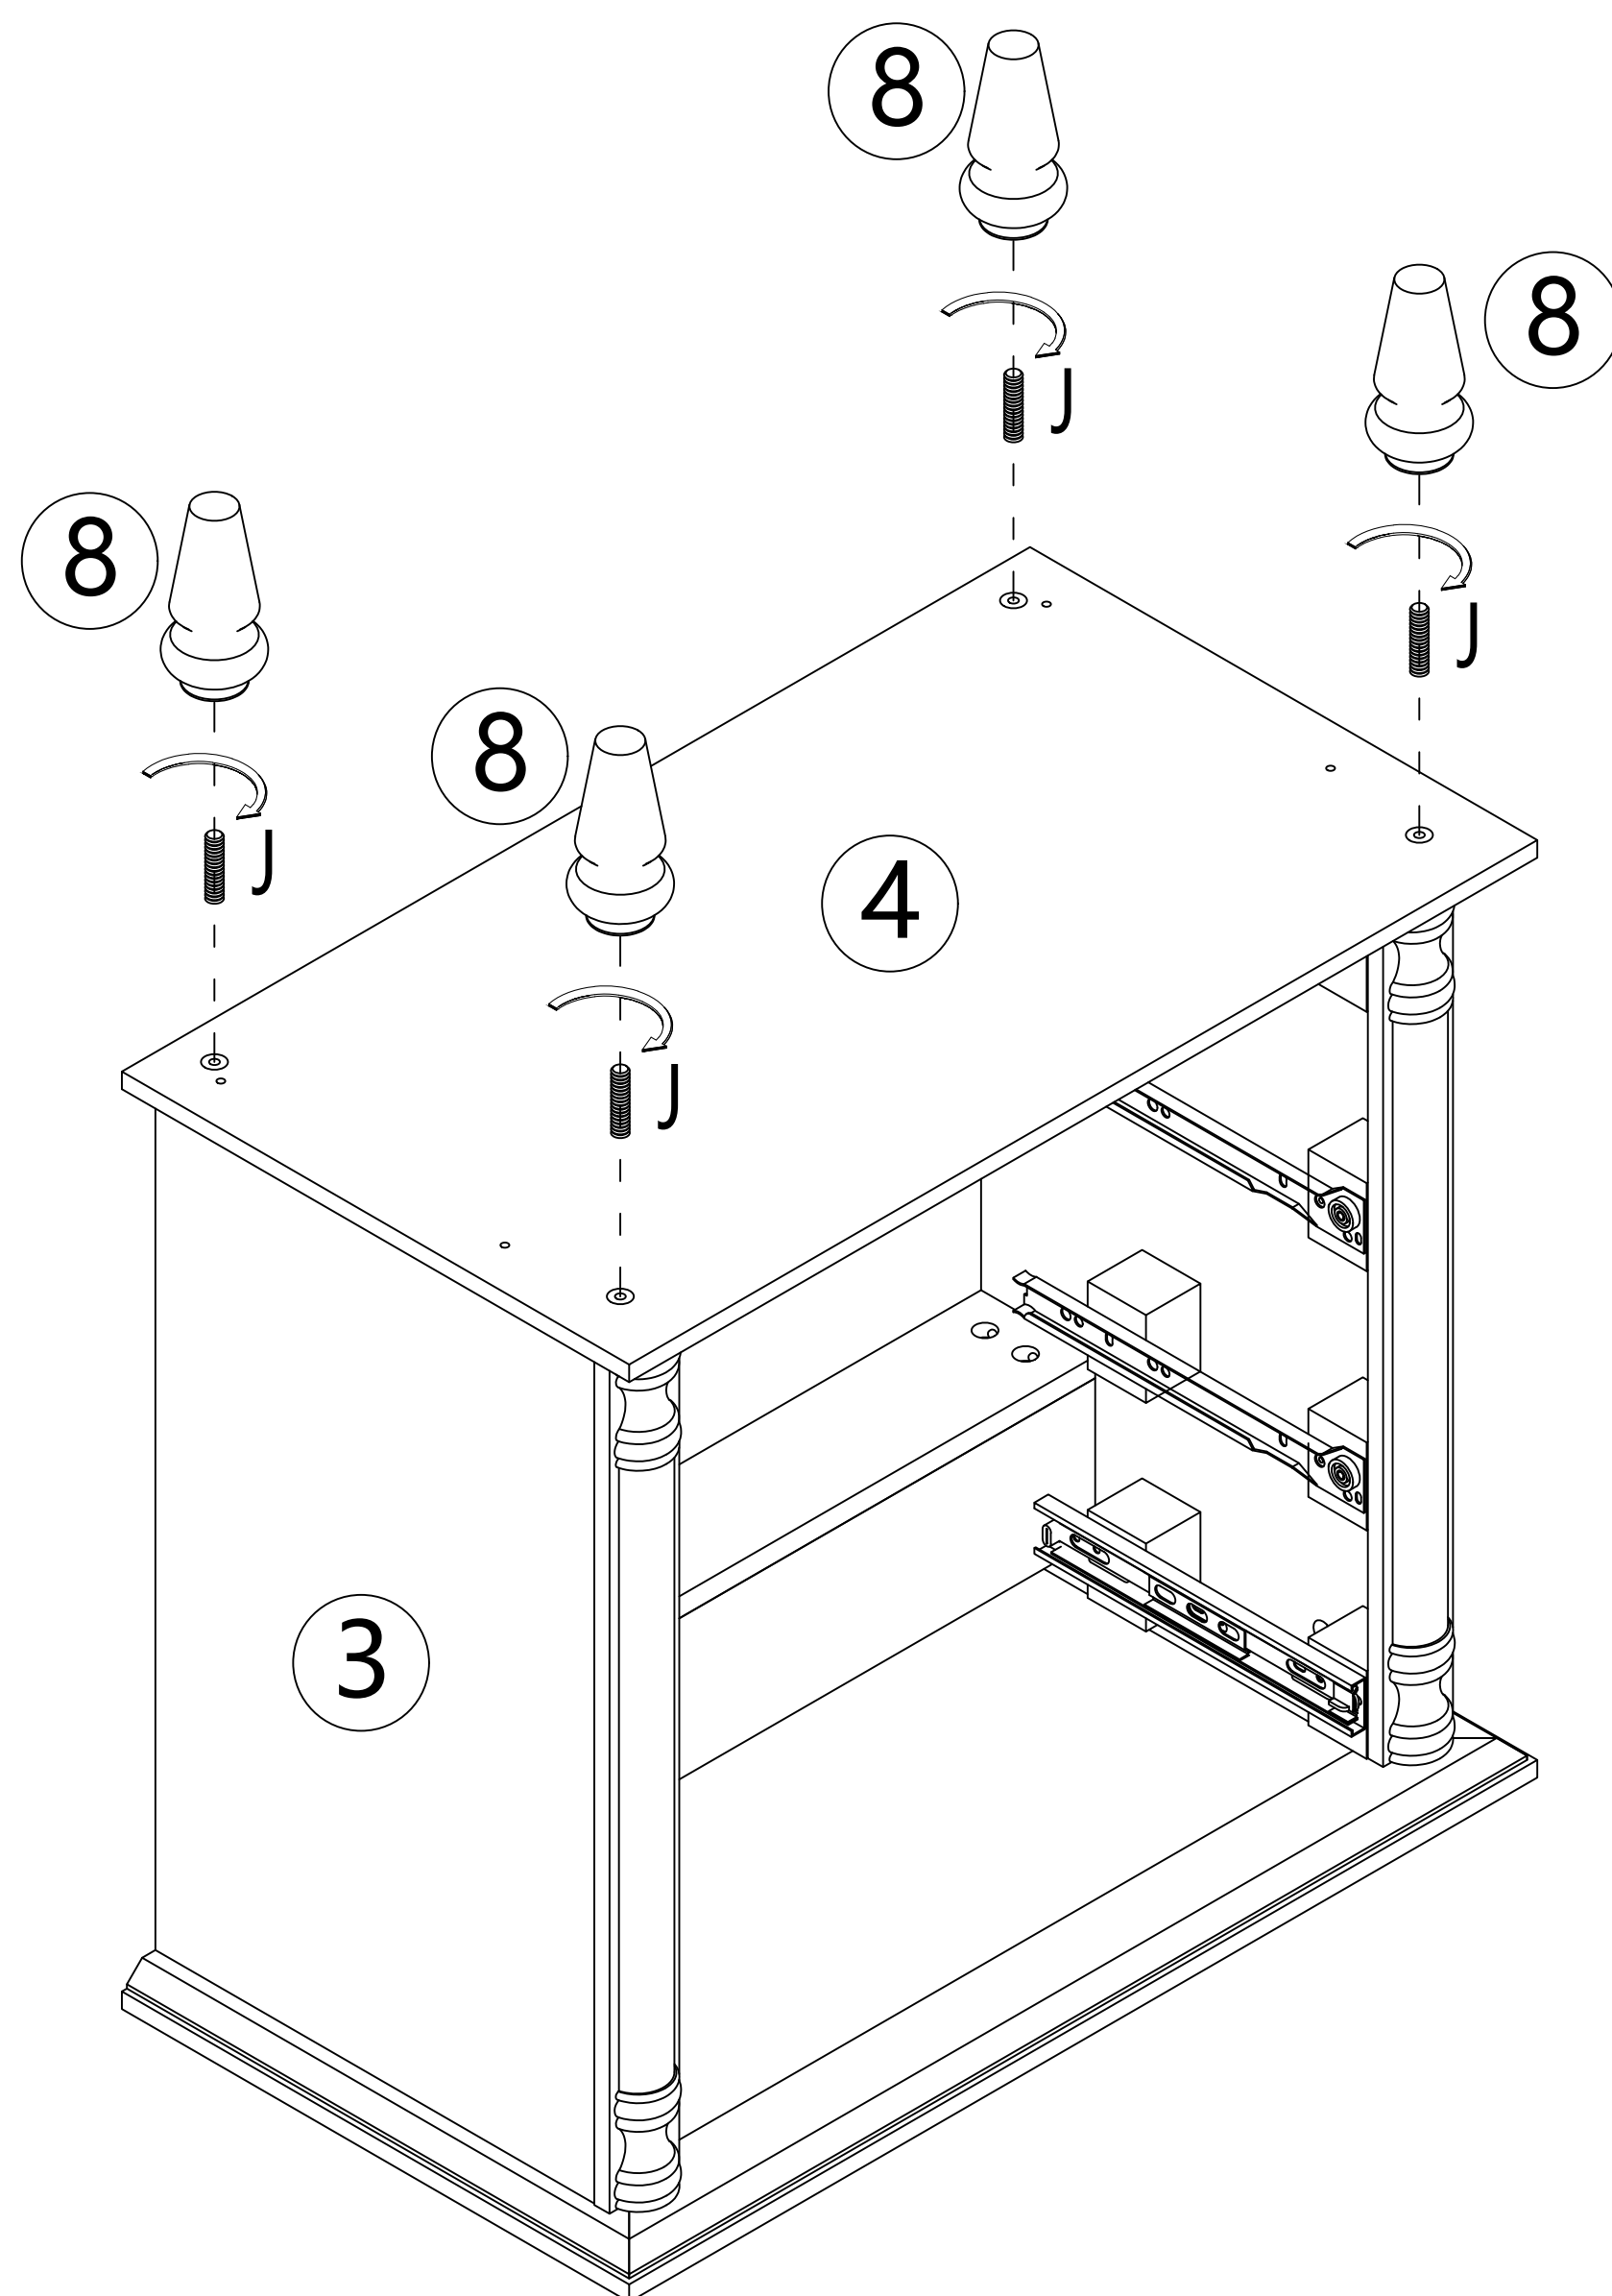



STEP#12

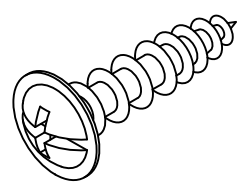


F x 13

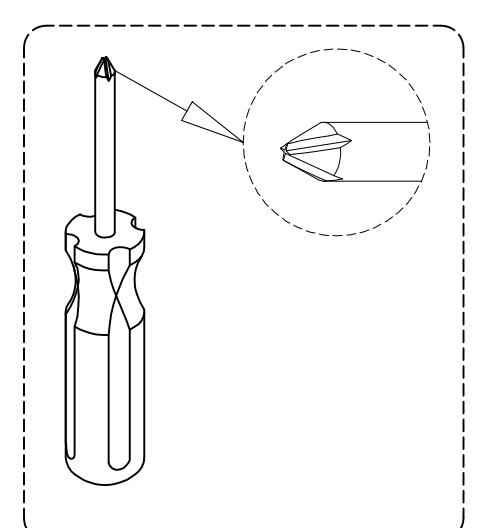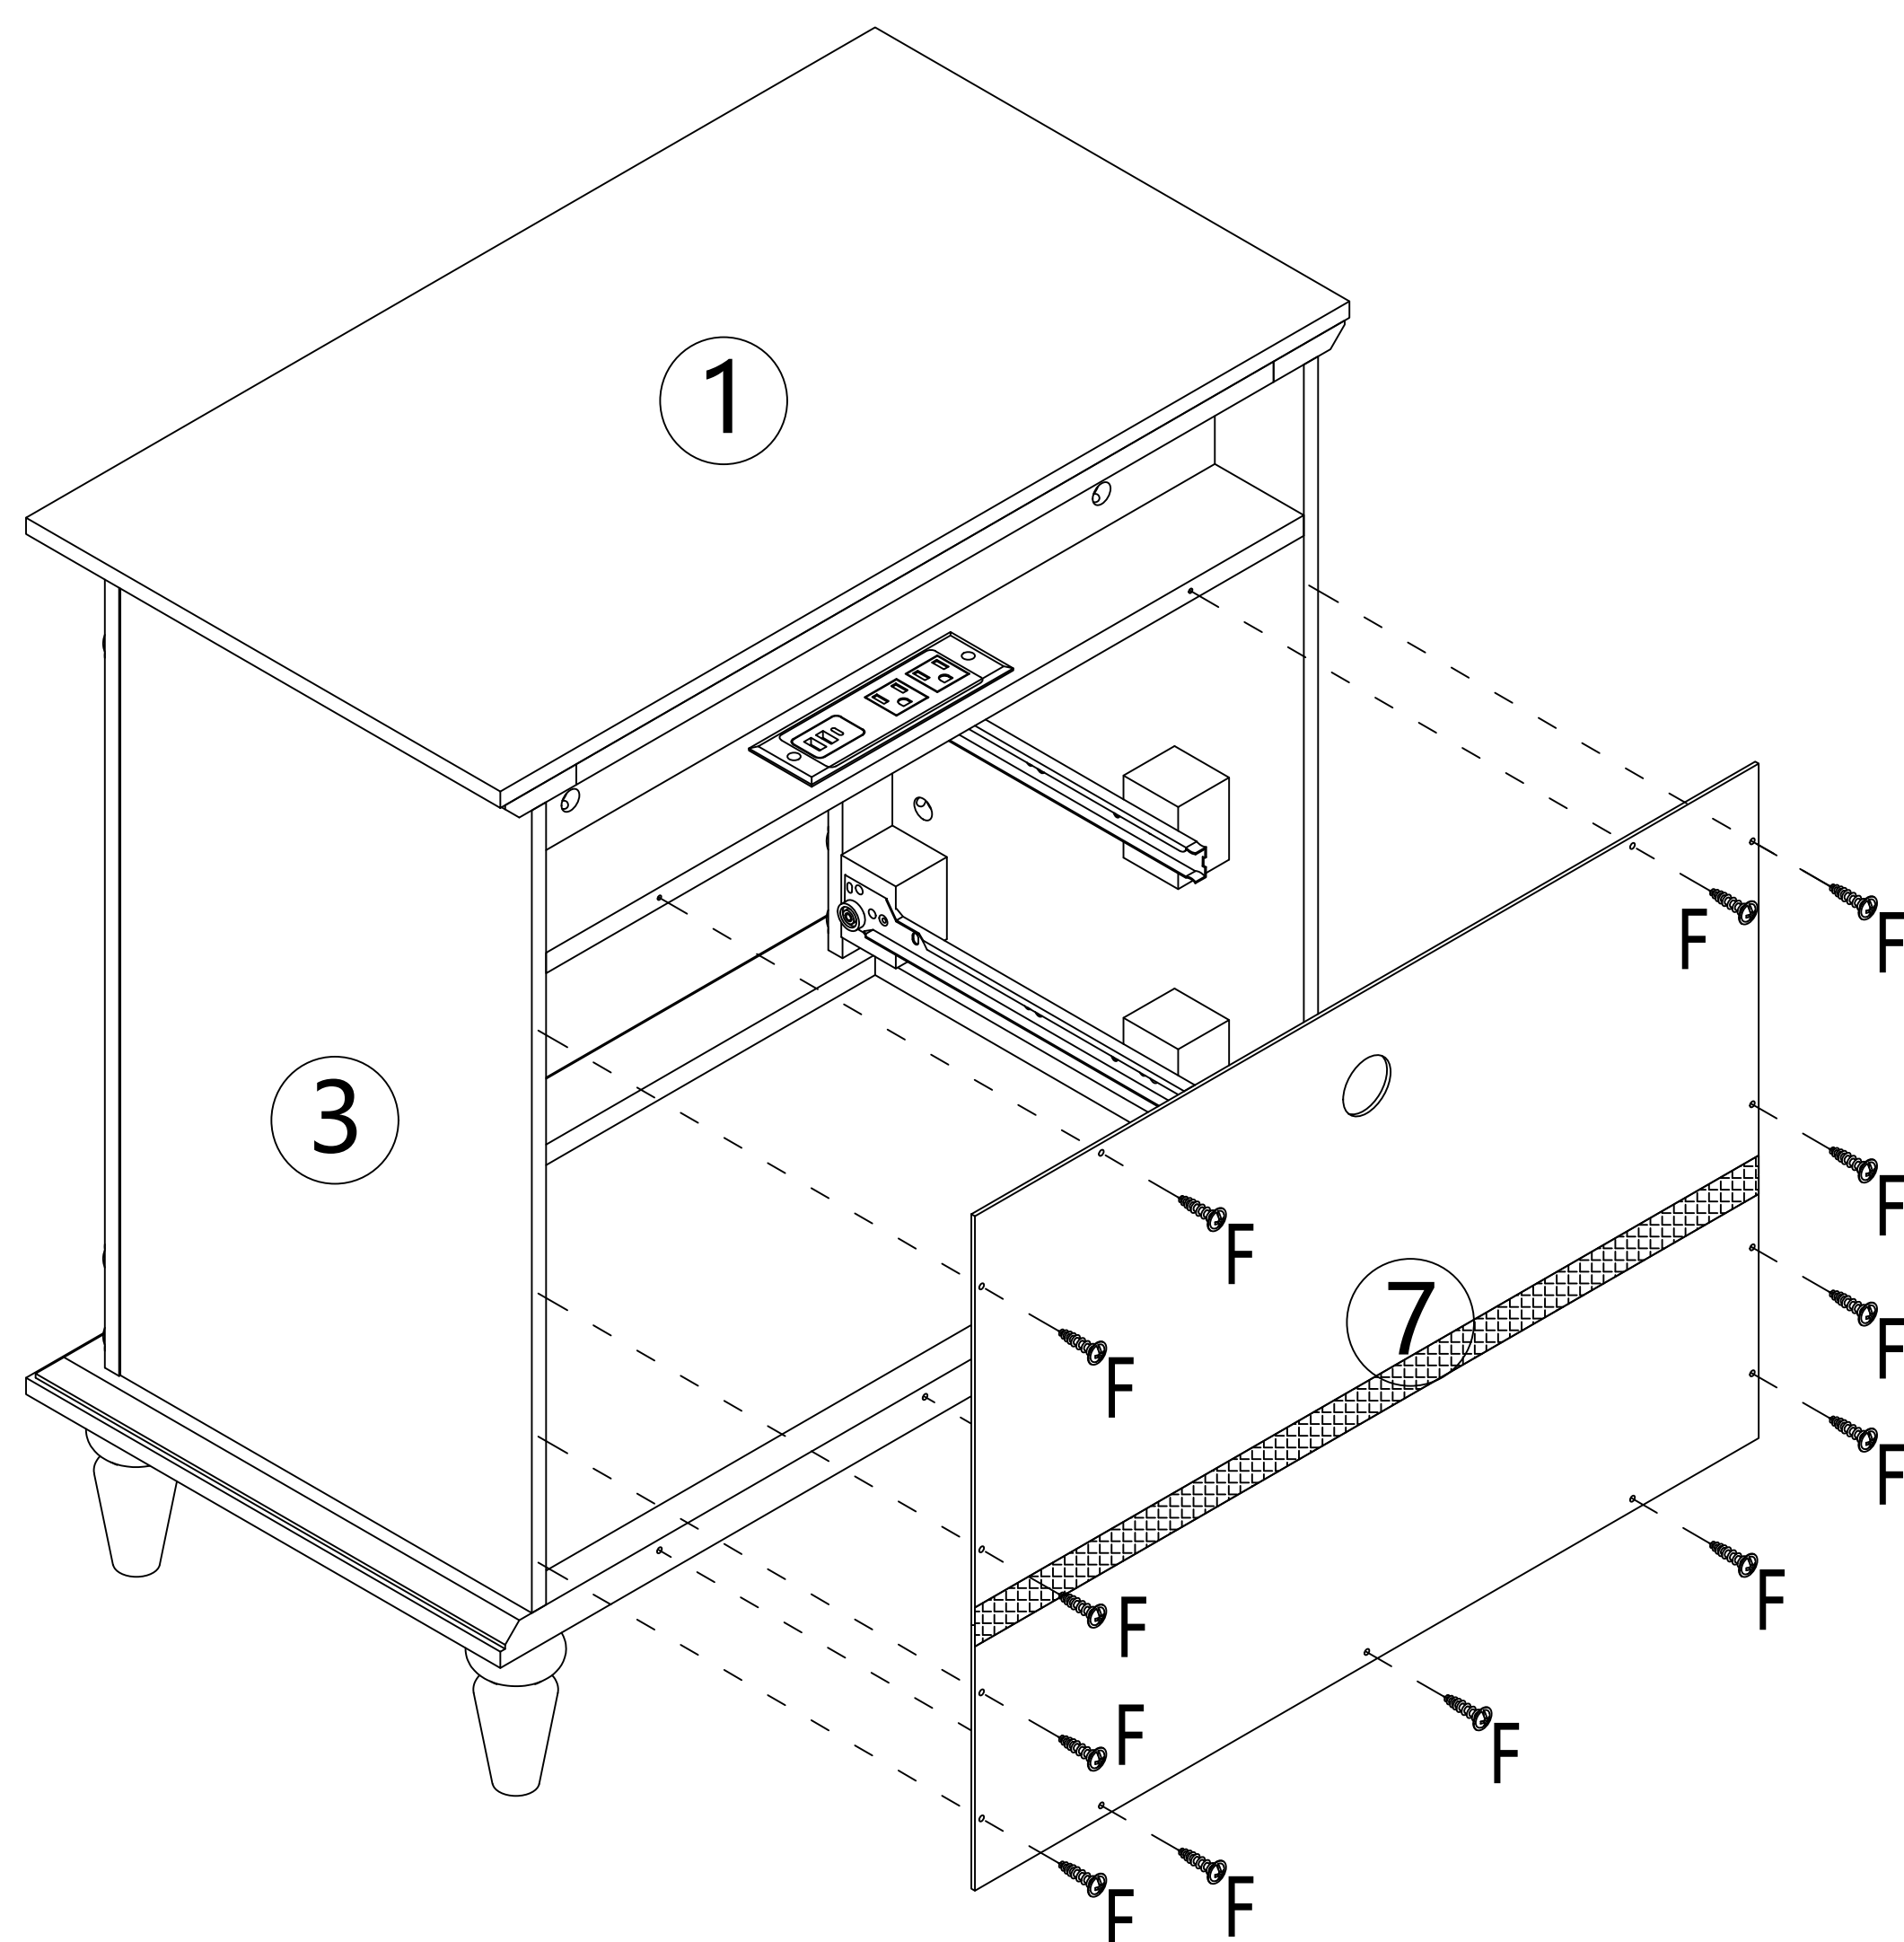



STEP#13

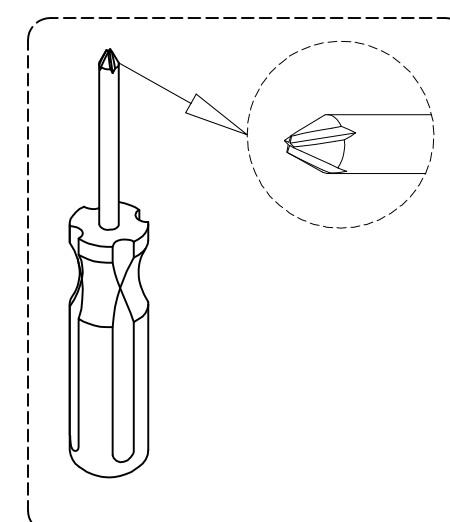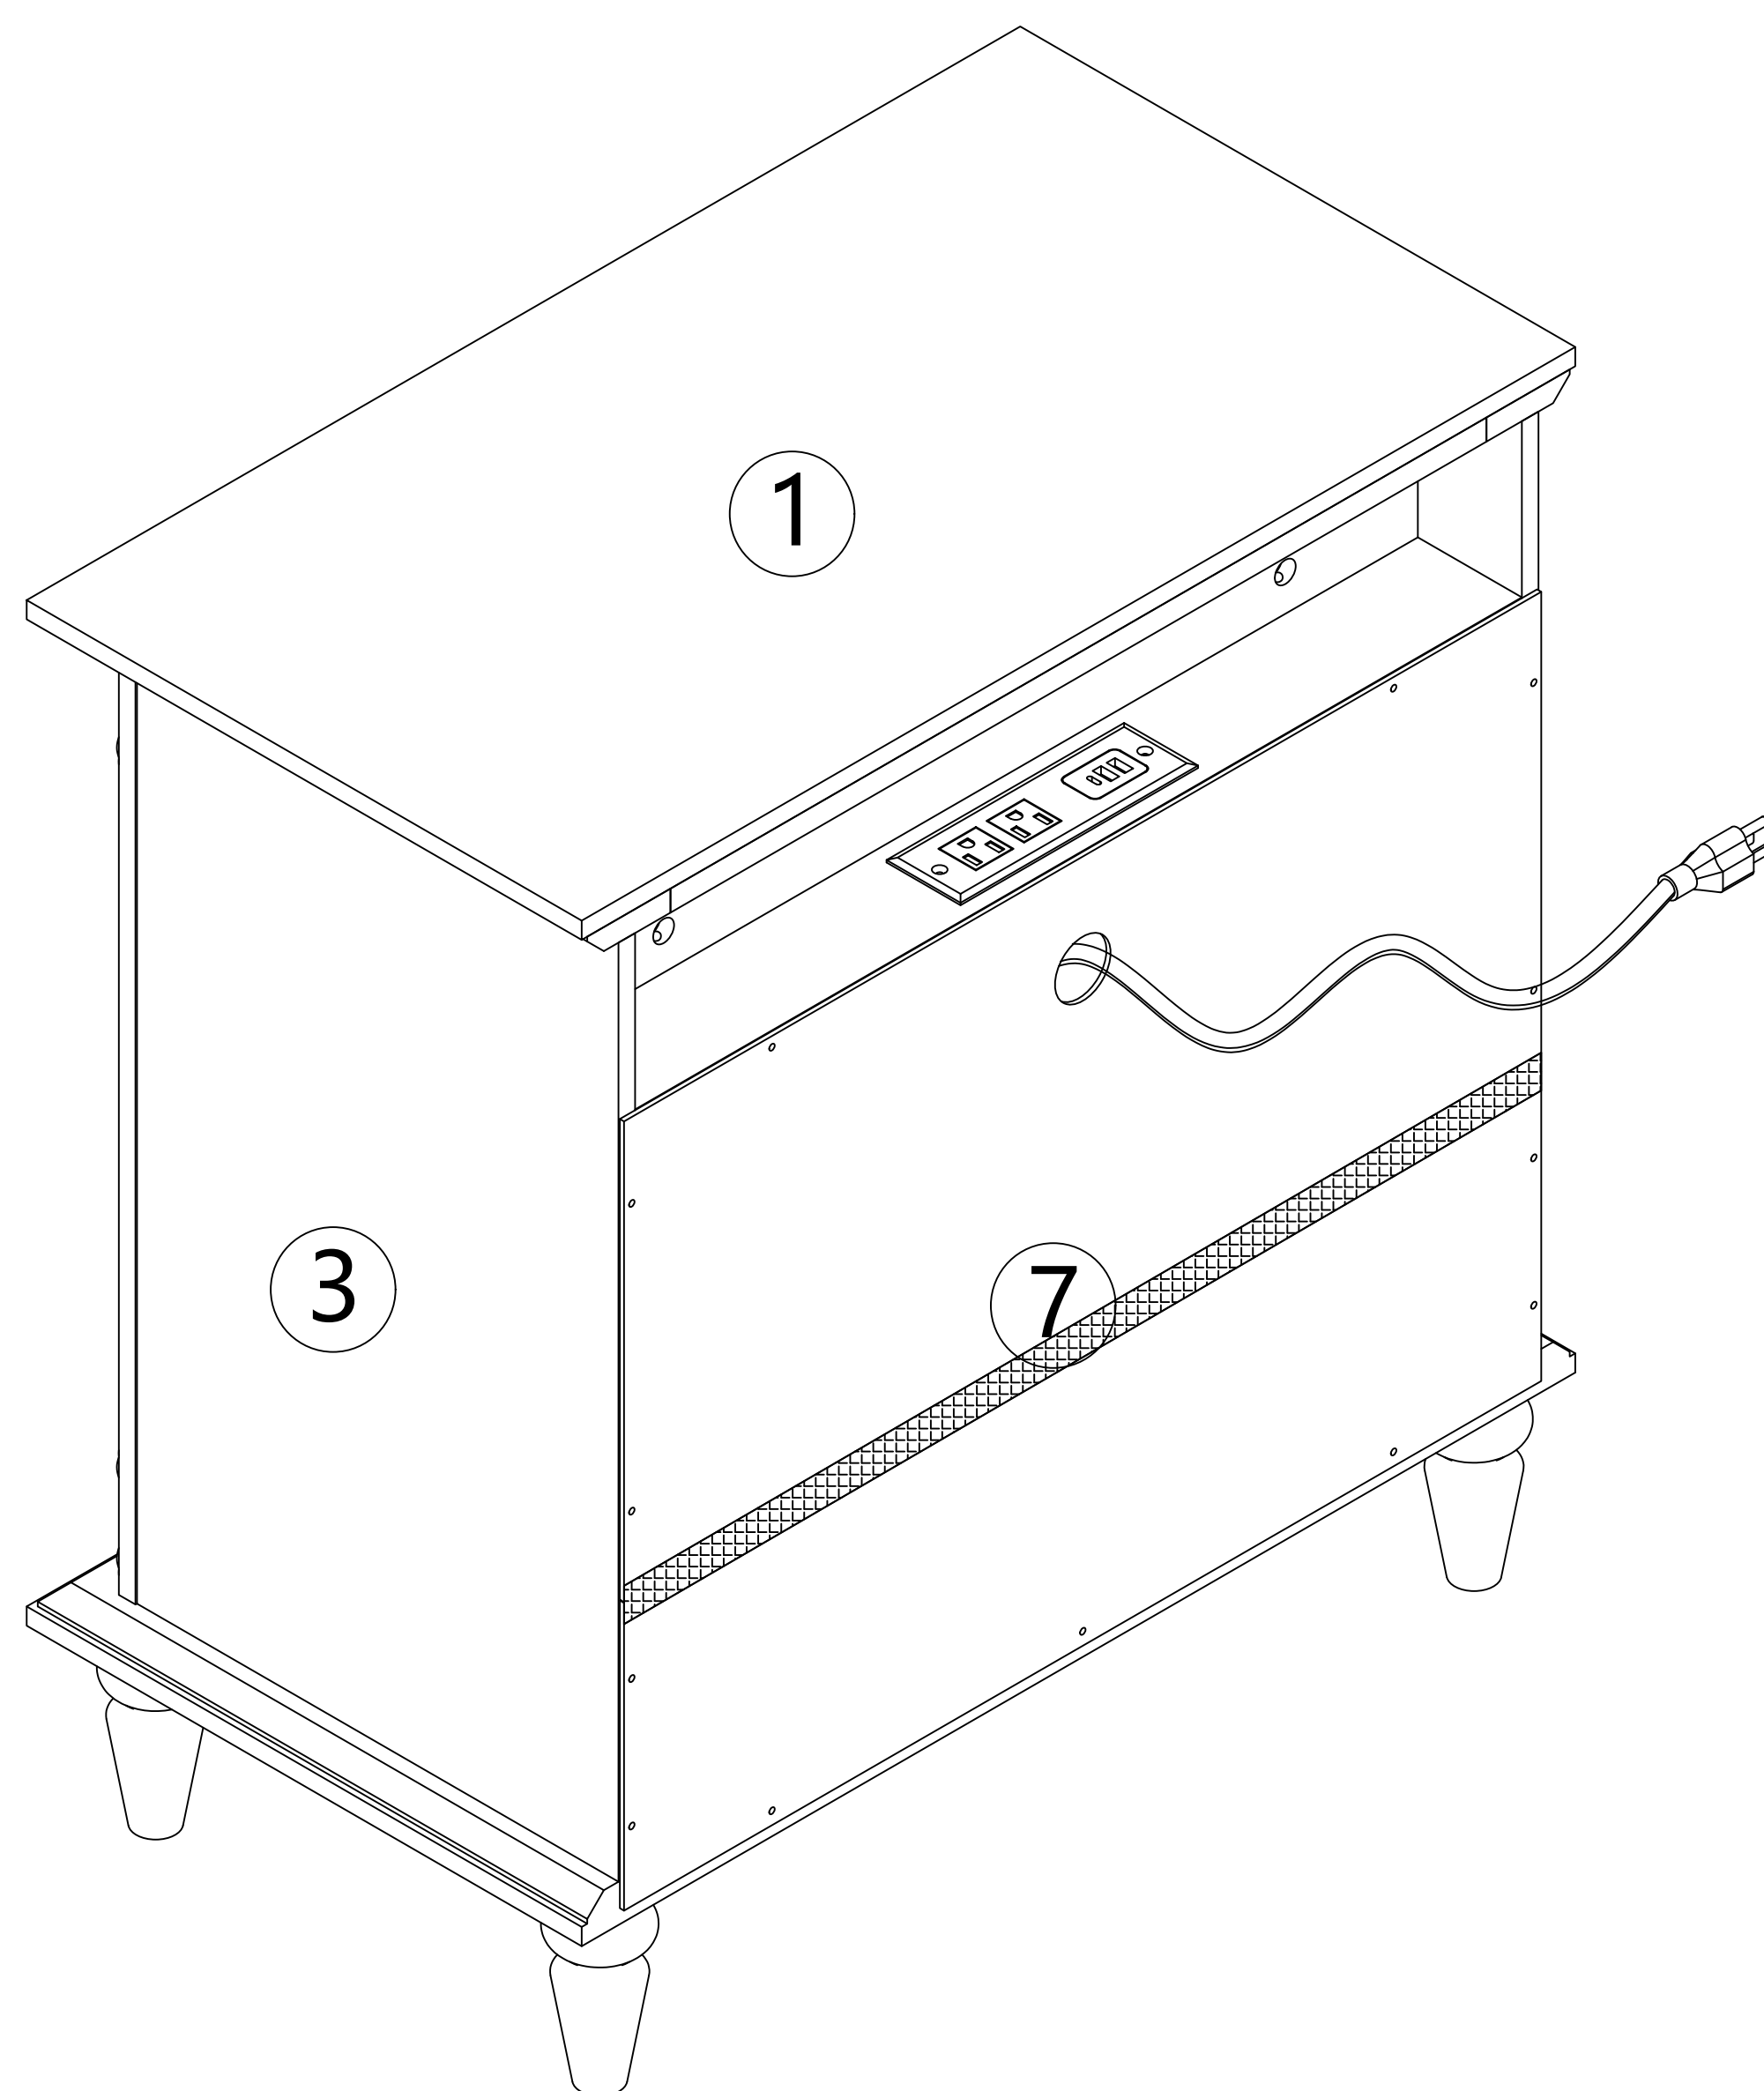


STEP#14

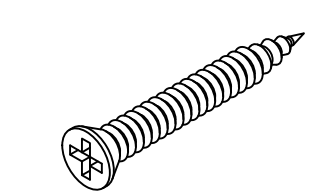


1 x 8

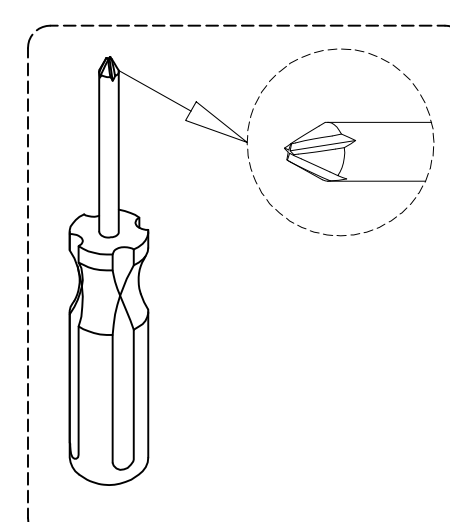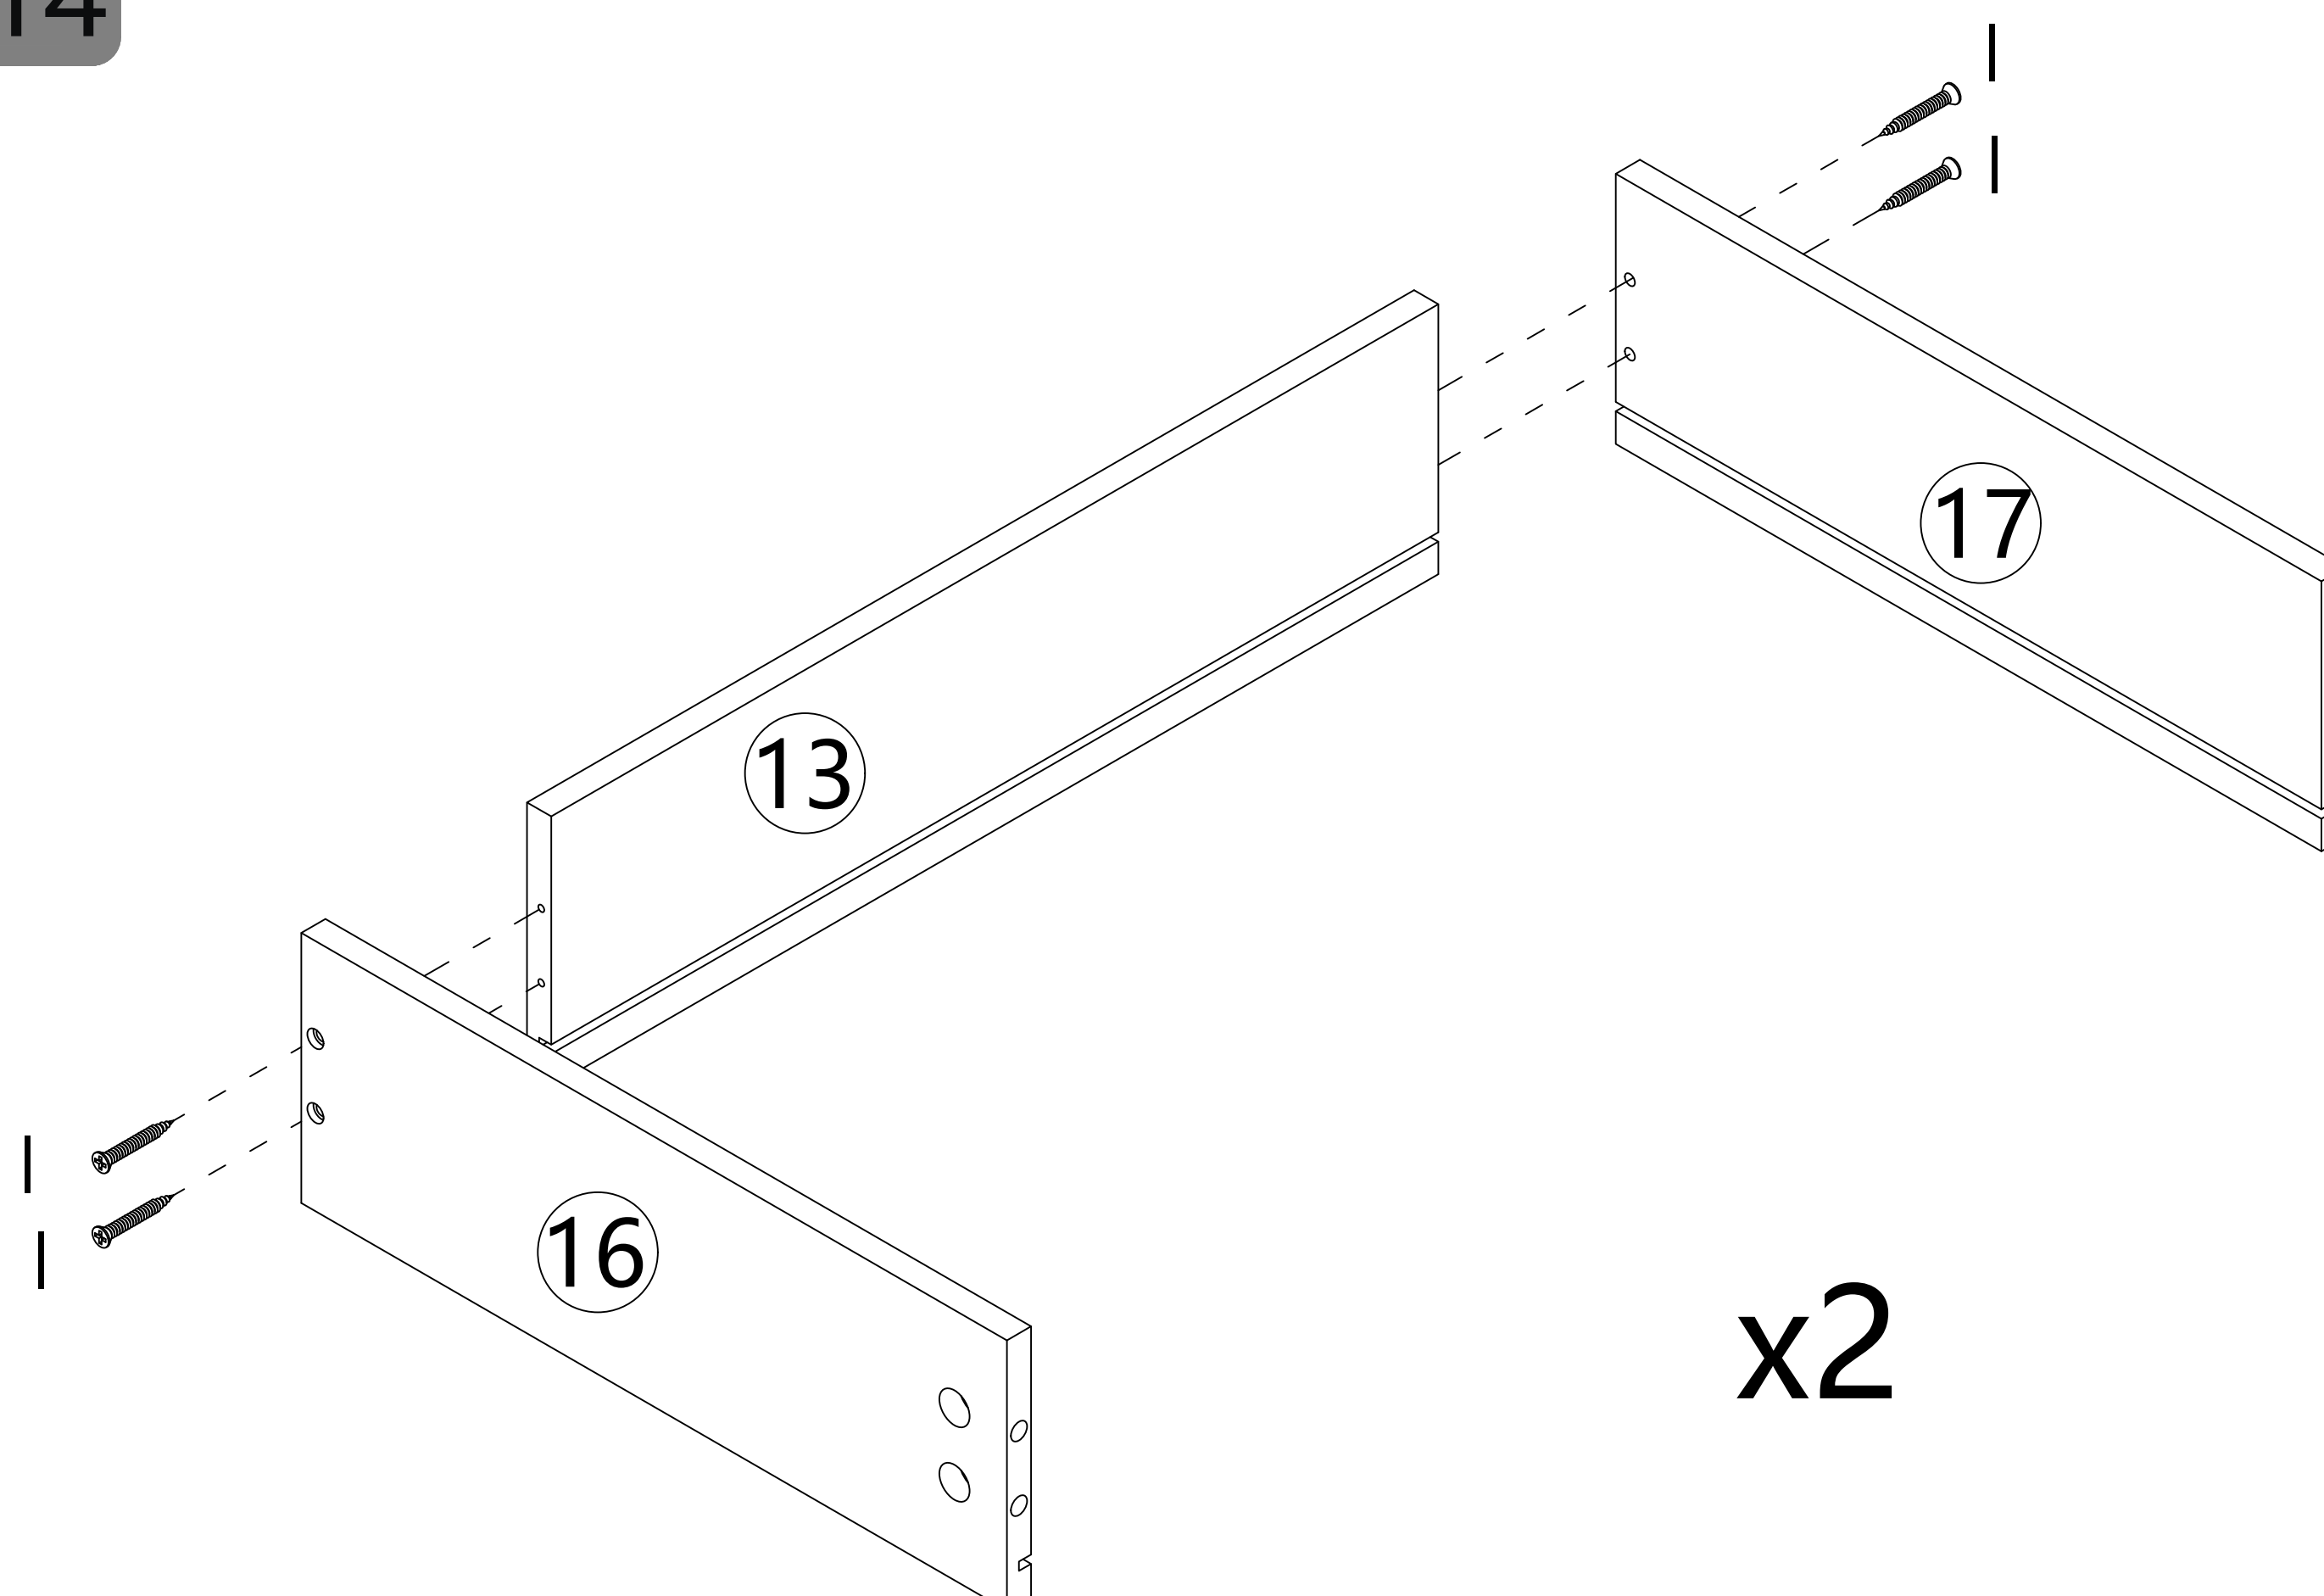


STEP#15

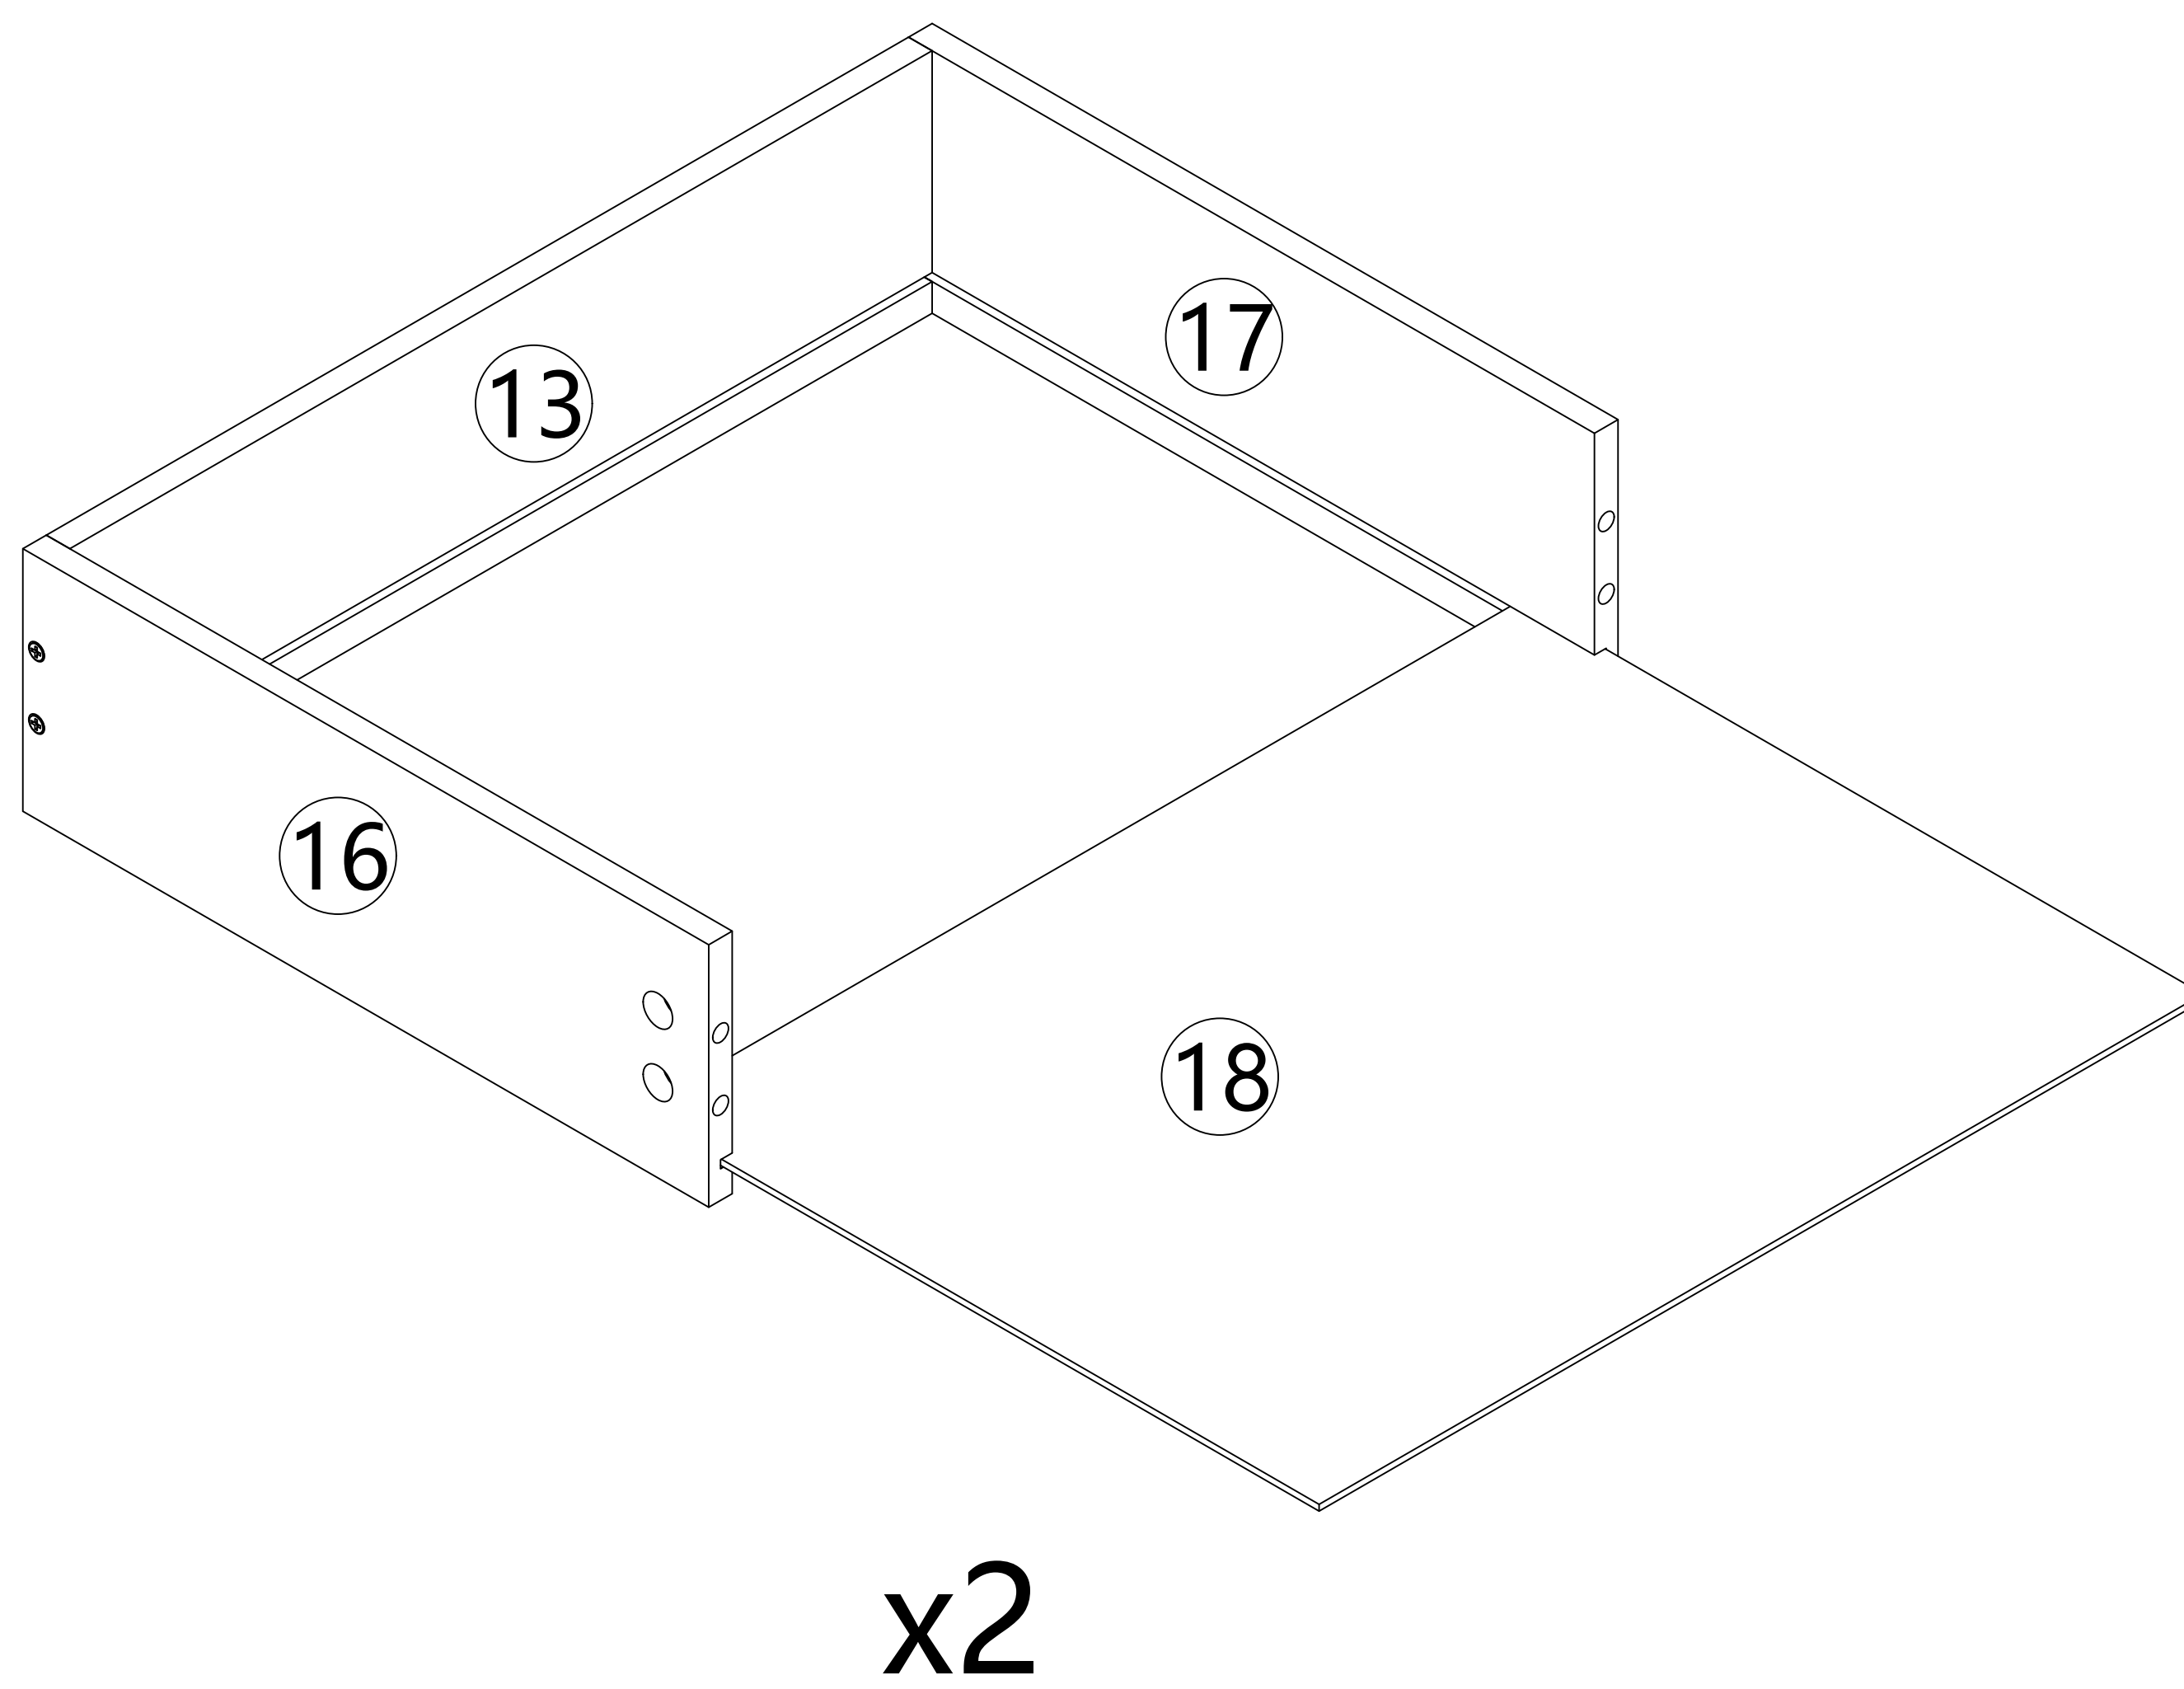

STEP#16





A x 12

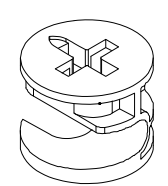


B x 8




O x 8

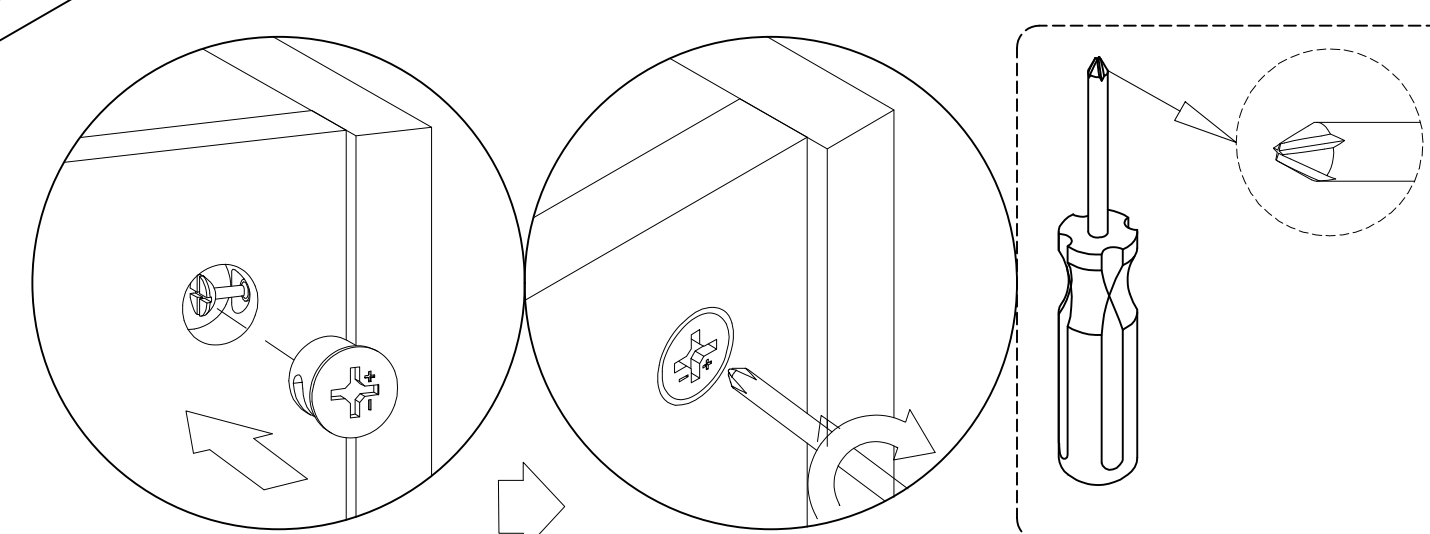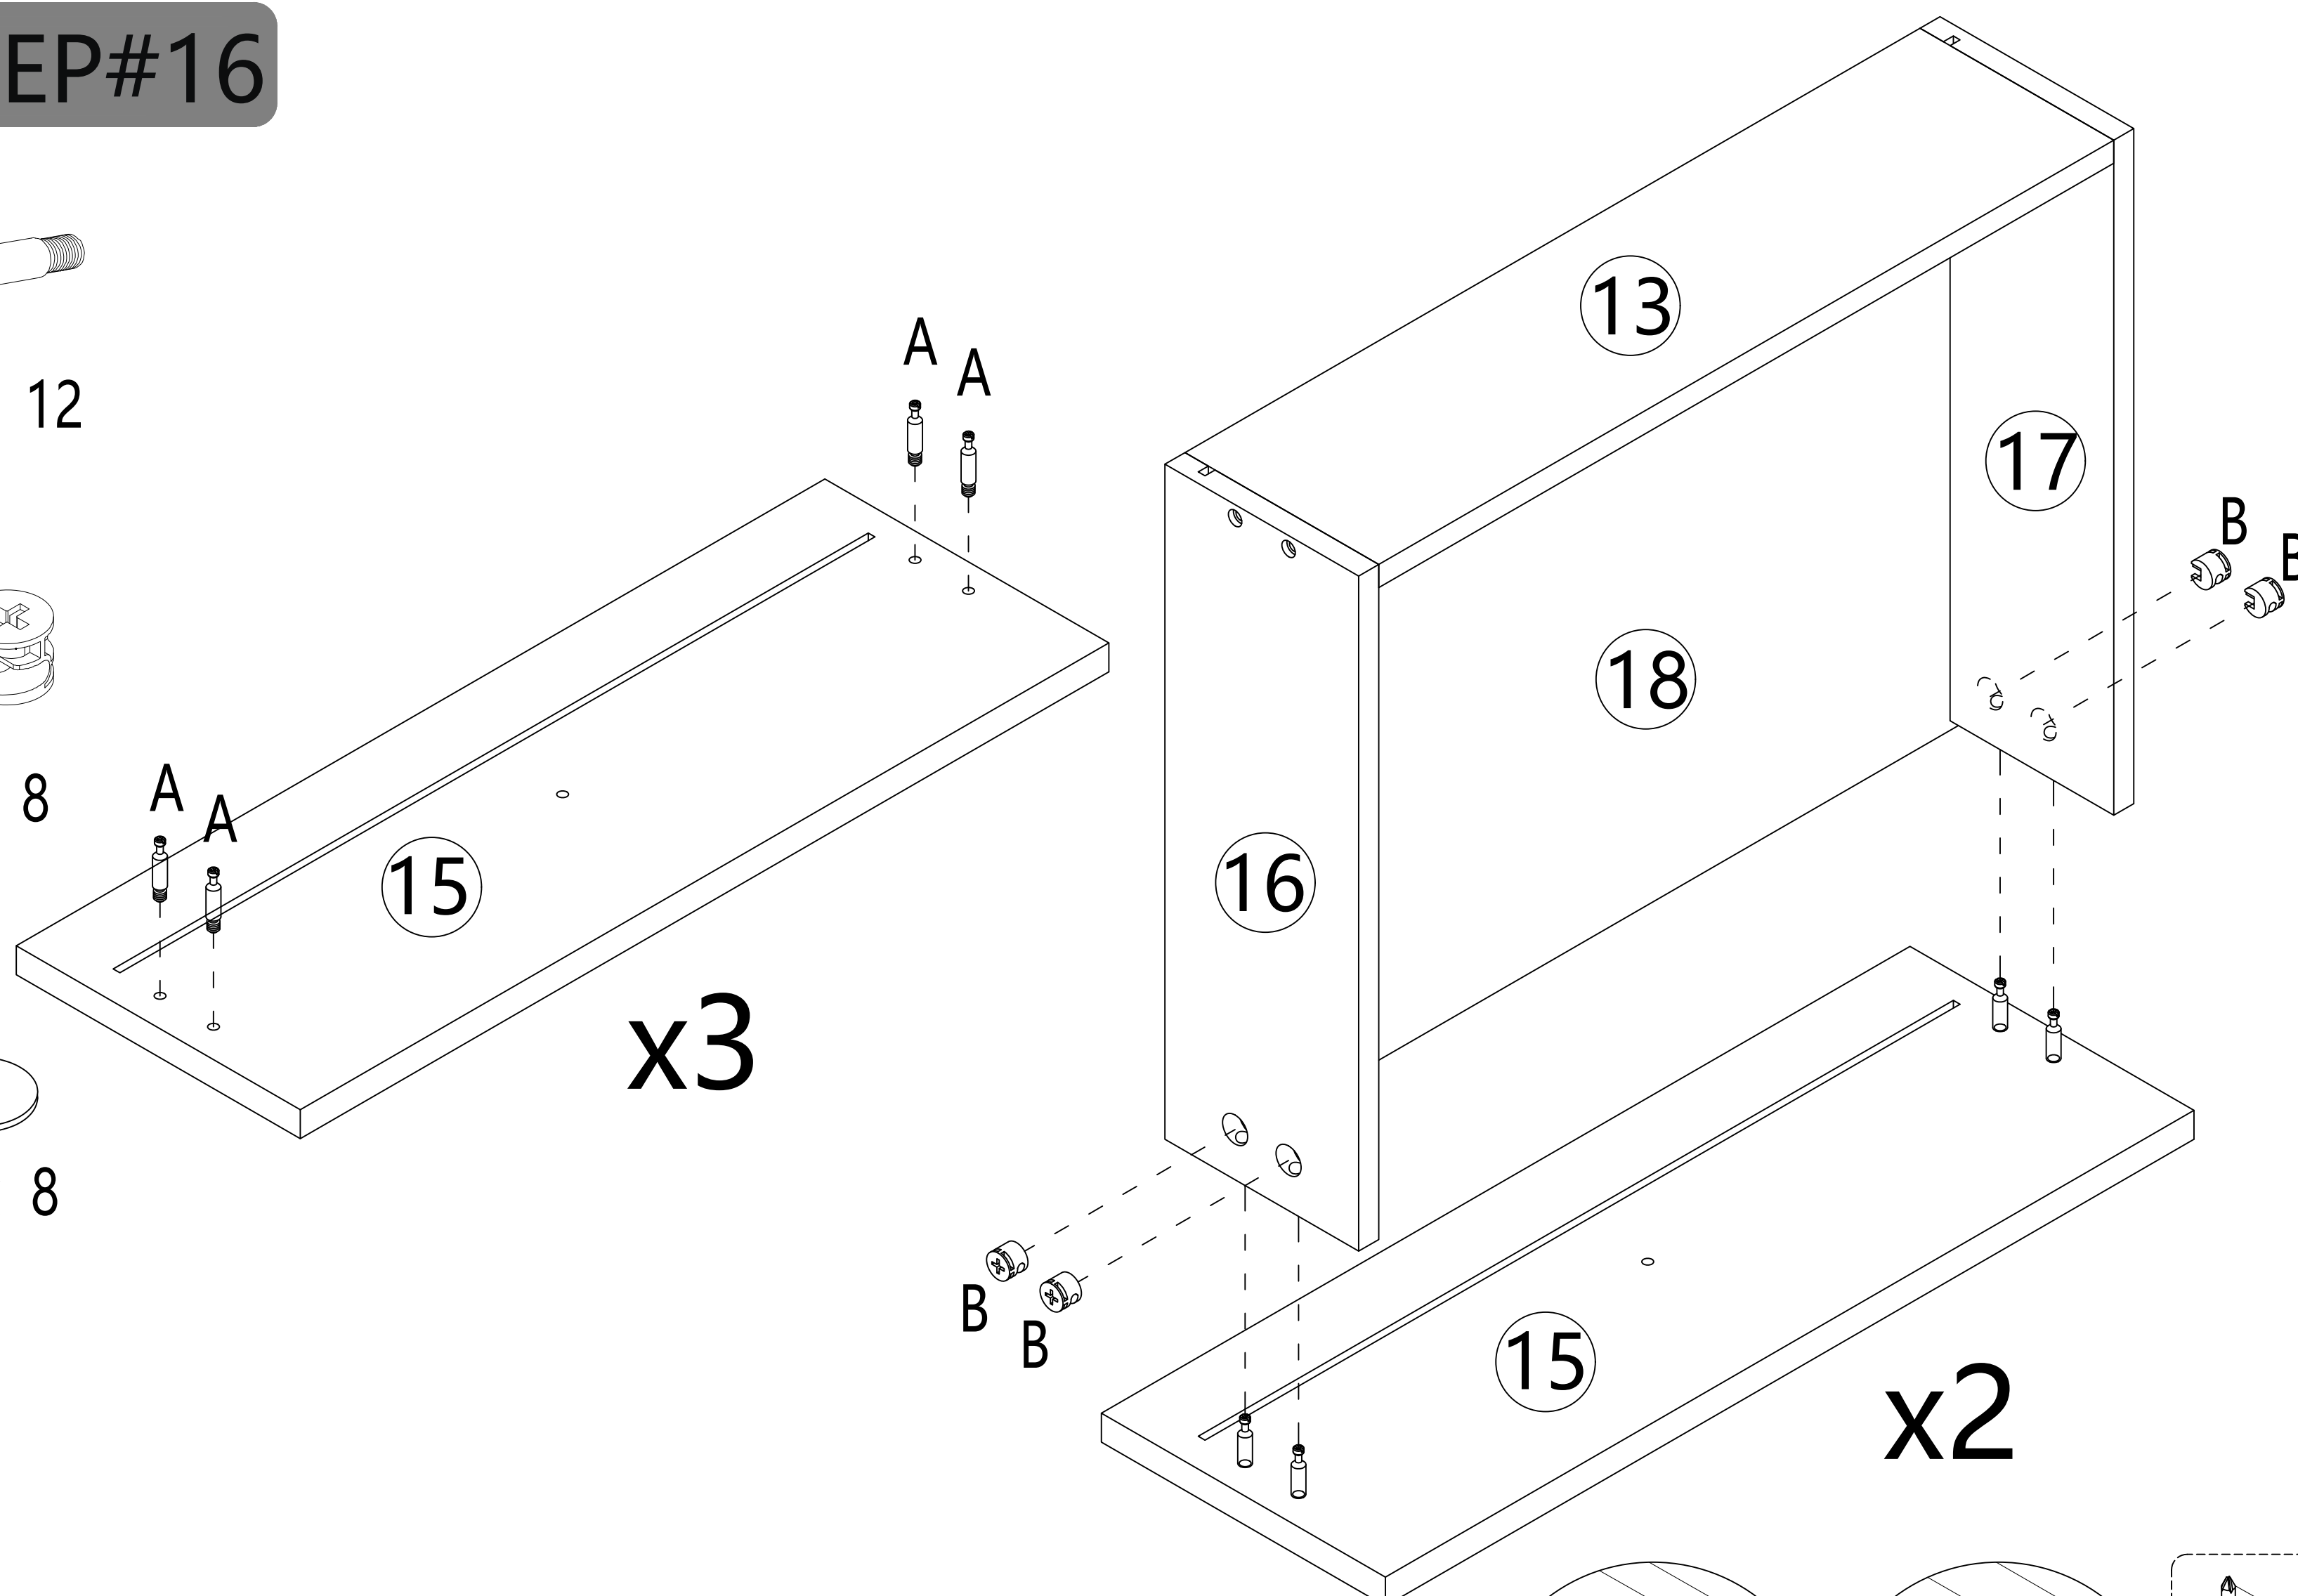



STEP#17




G x 8

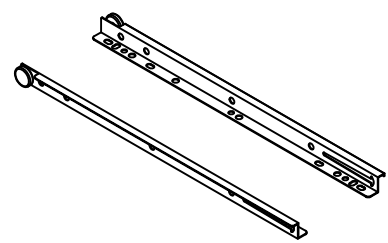


L x 2

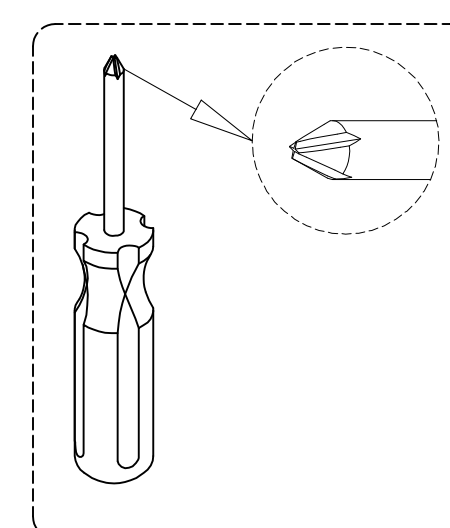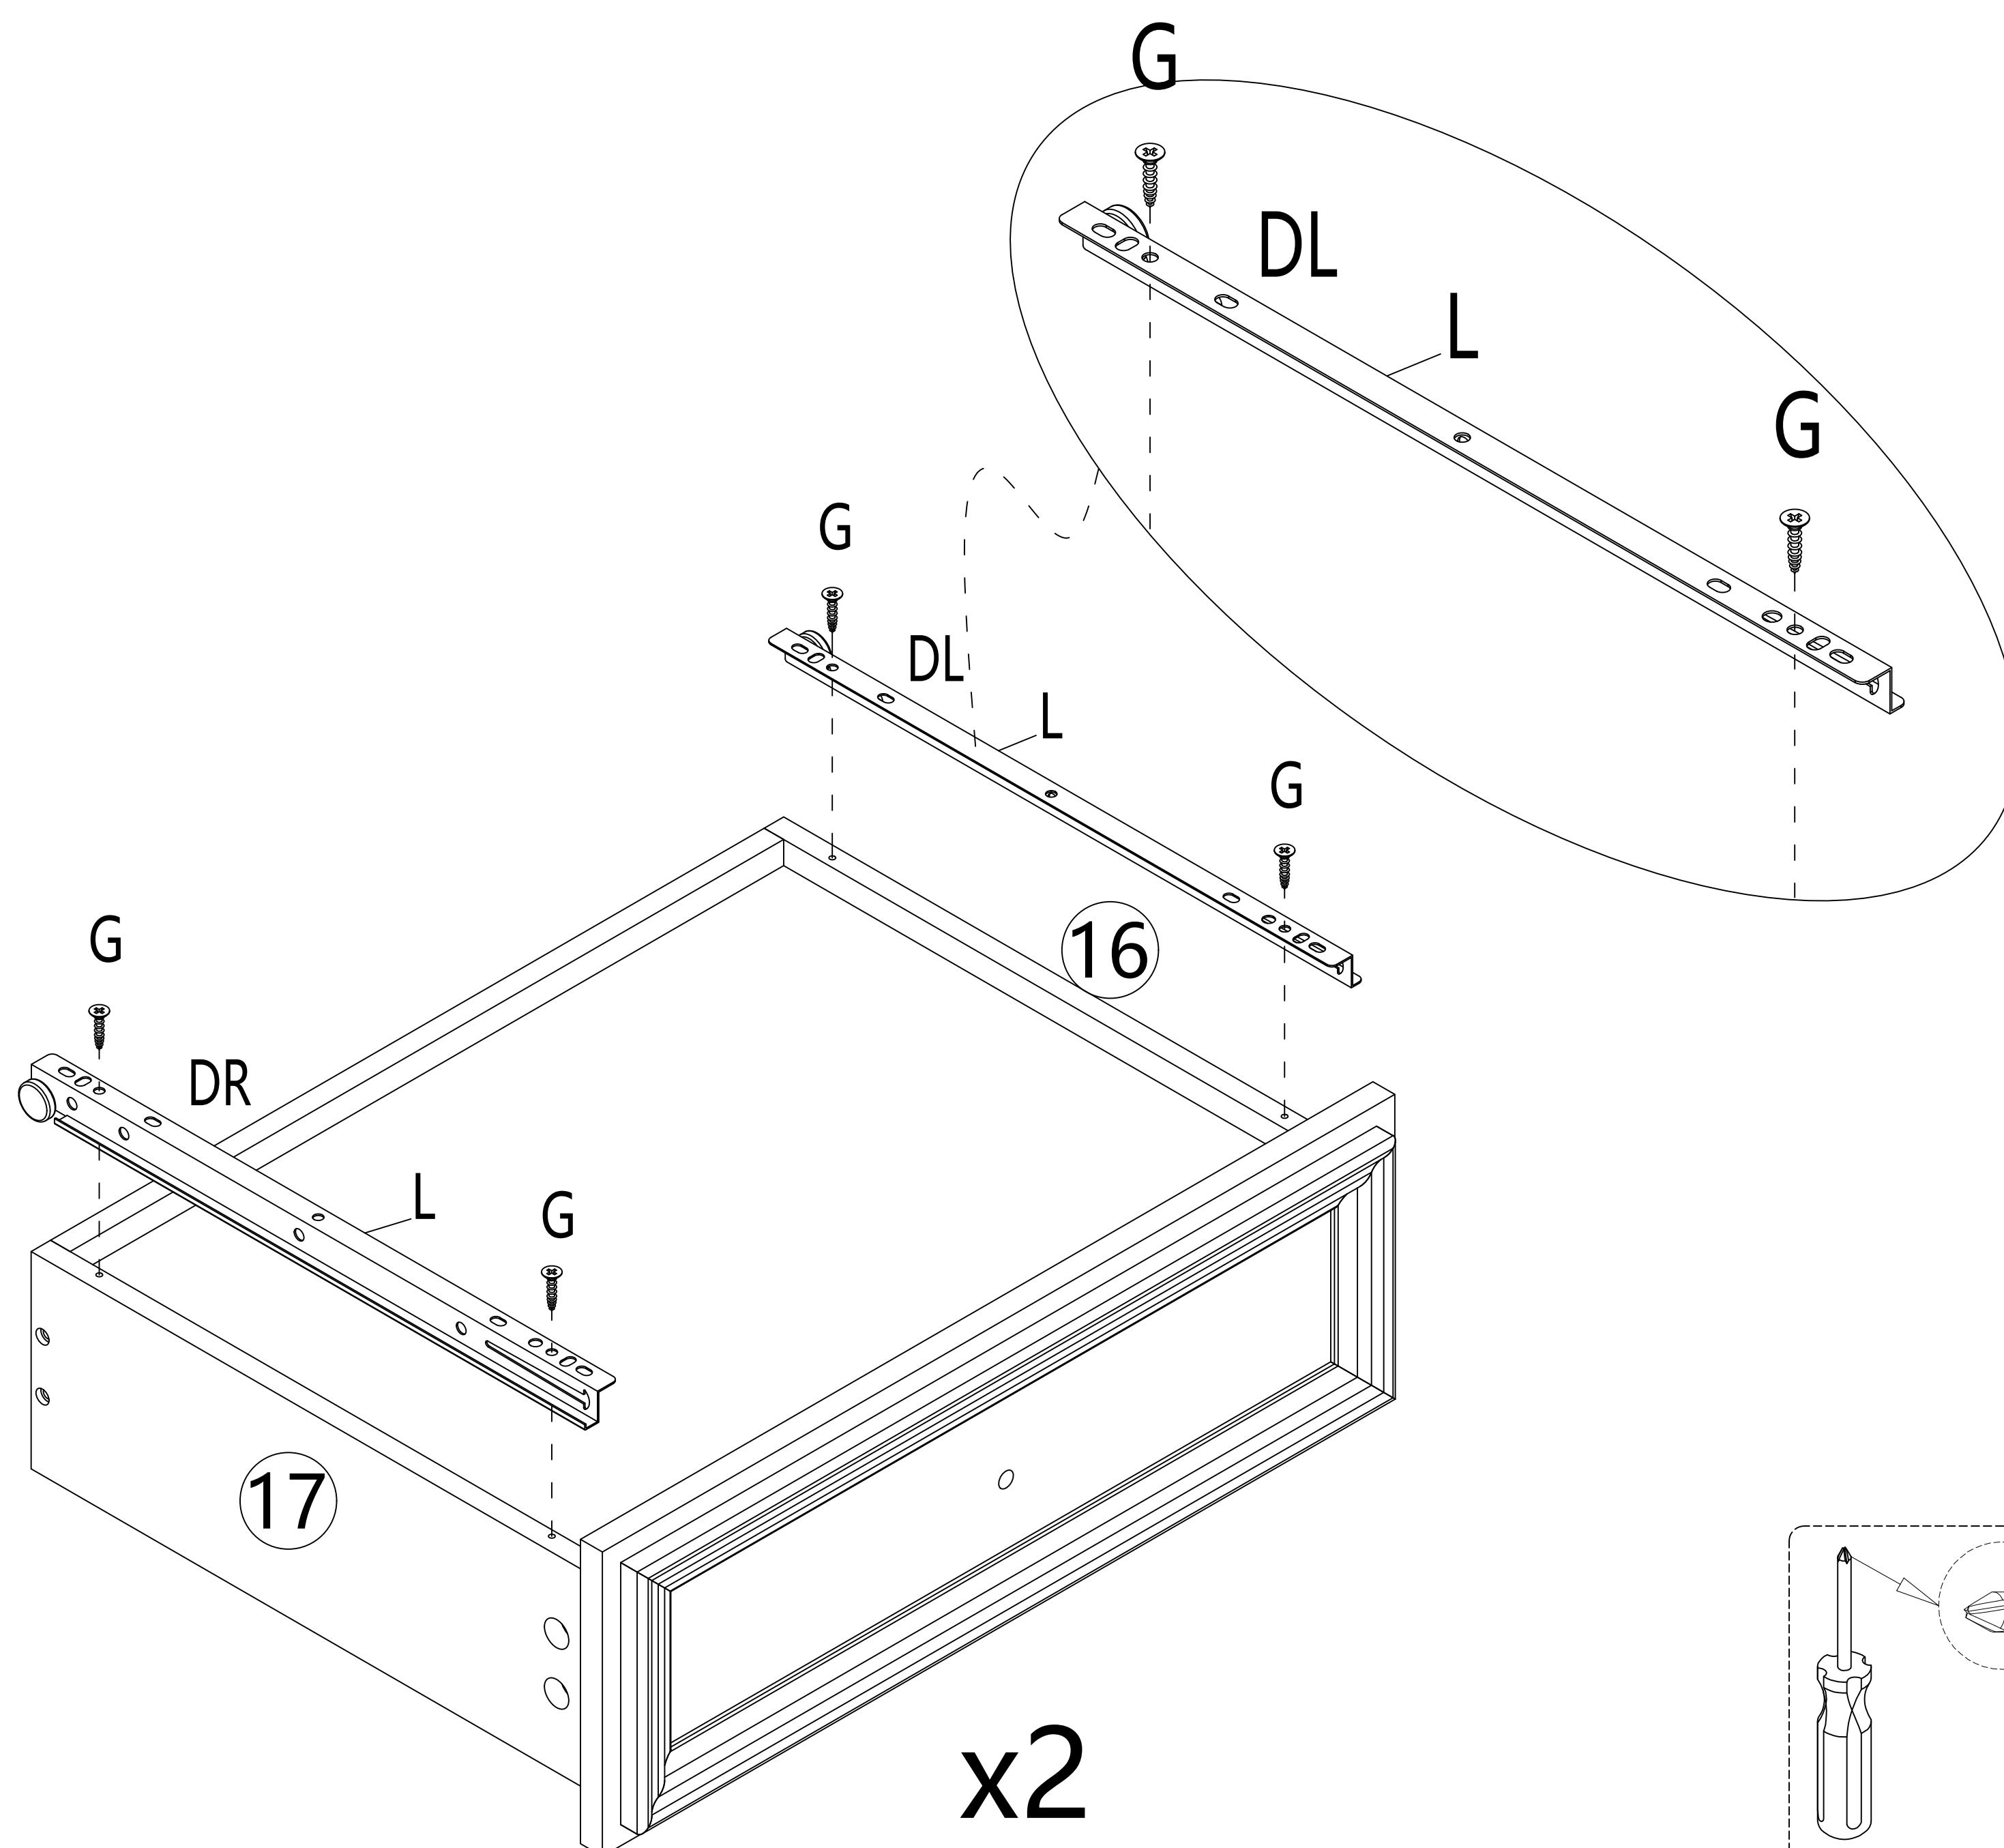



STEP#18

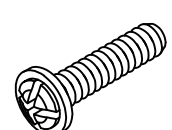


E x 2

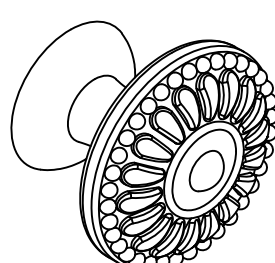



D x 2

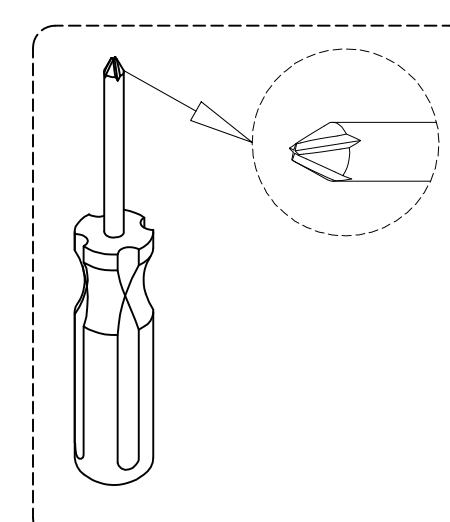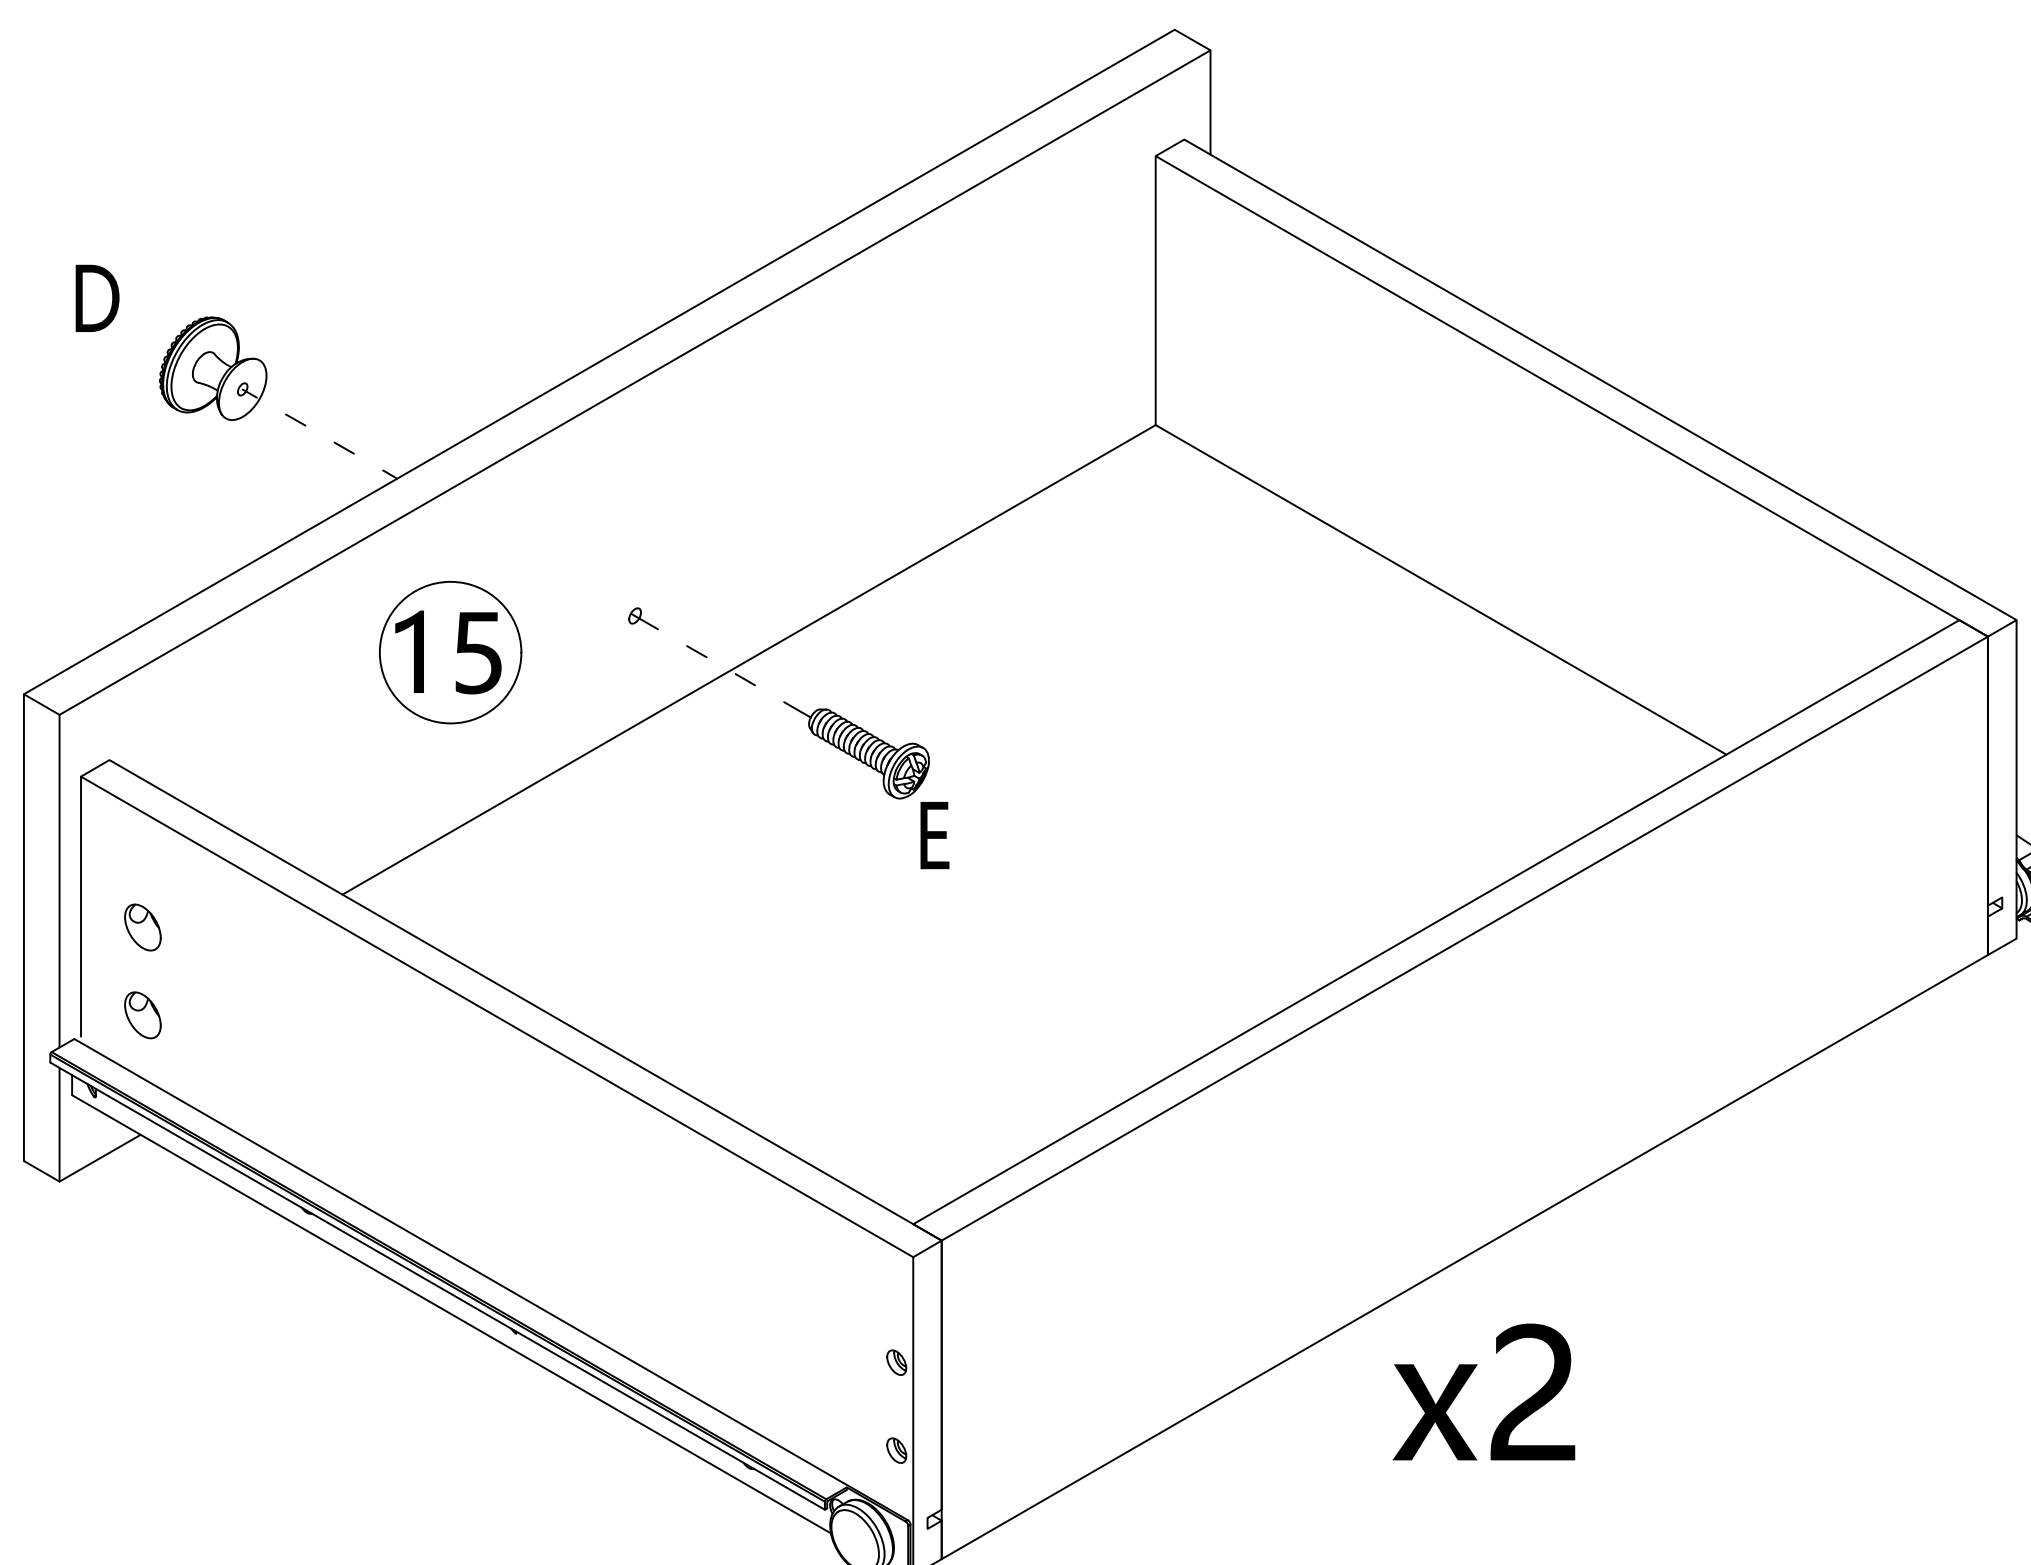


STEP#19

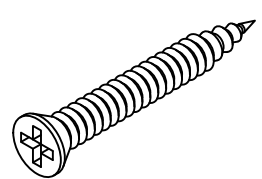


1 x 4

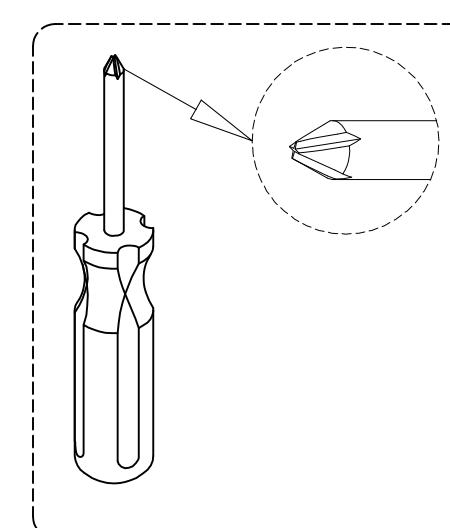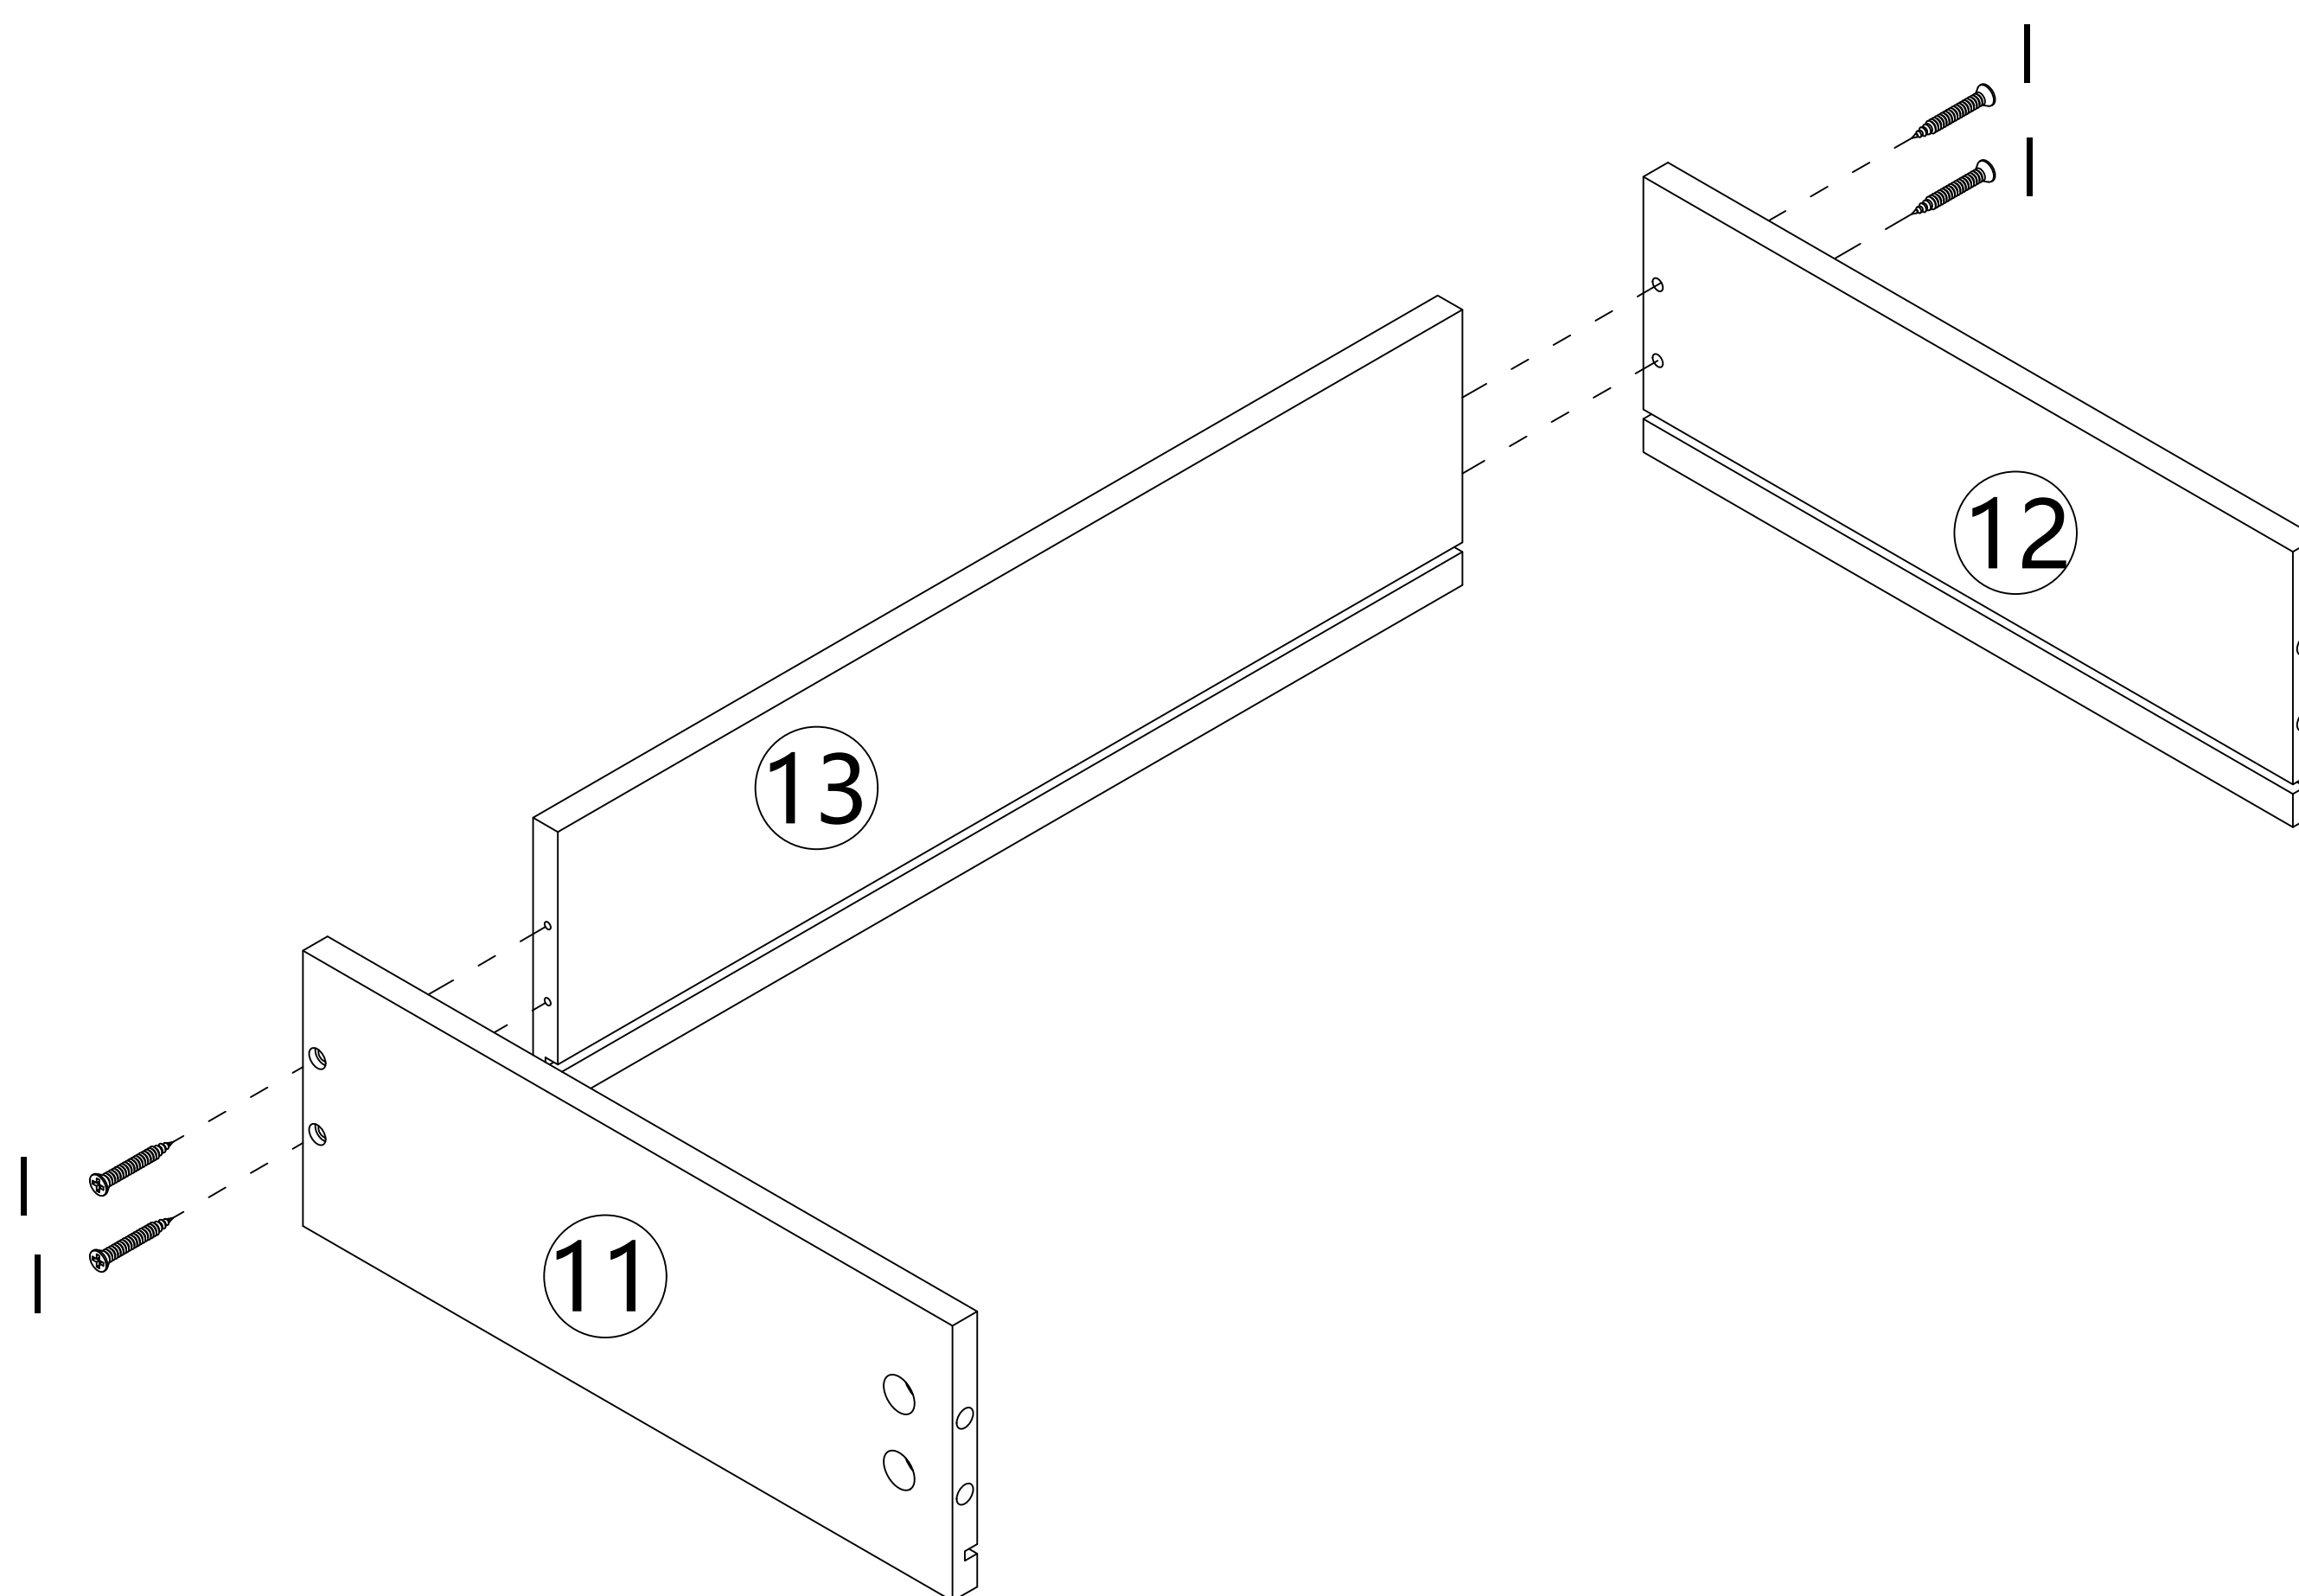


STEP#20

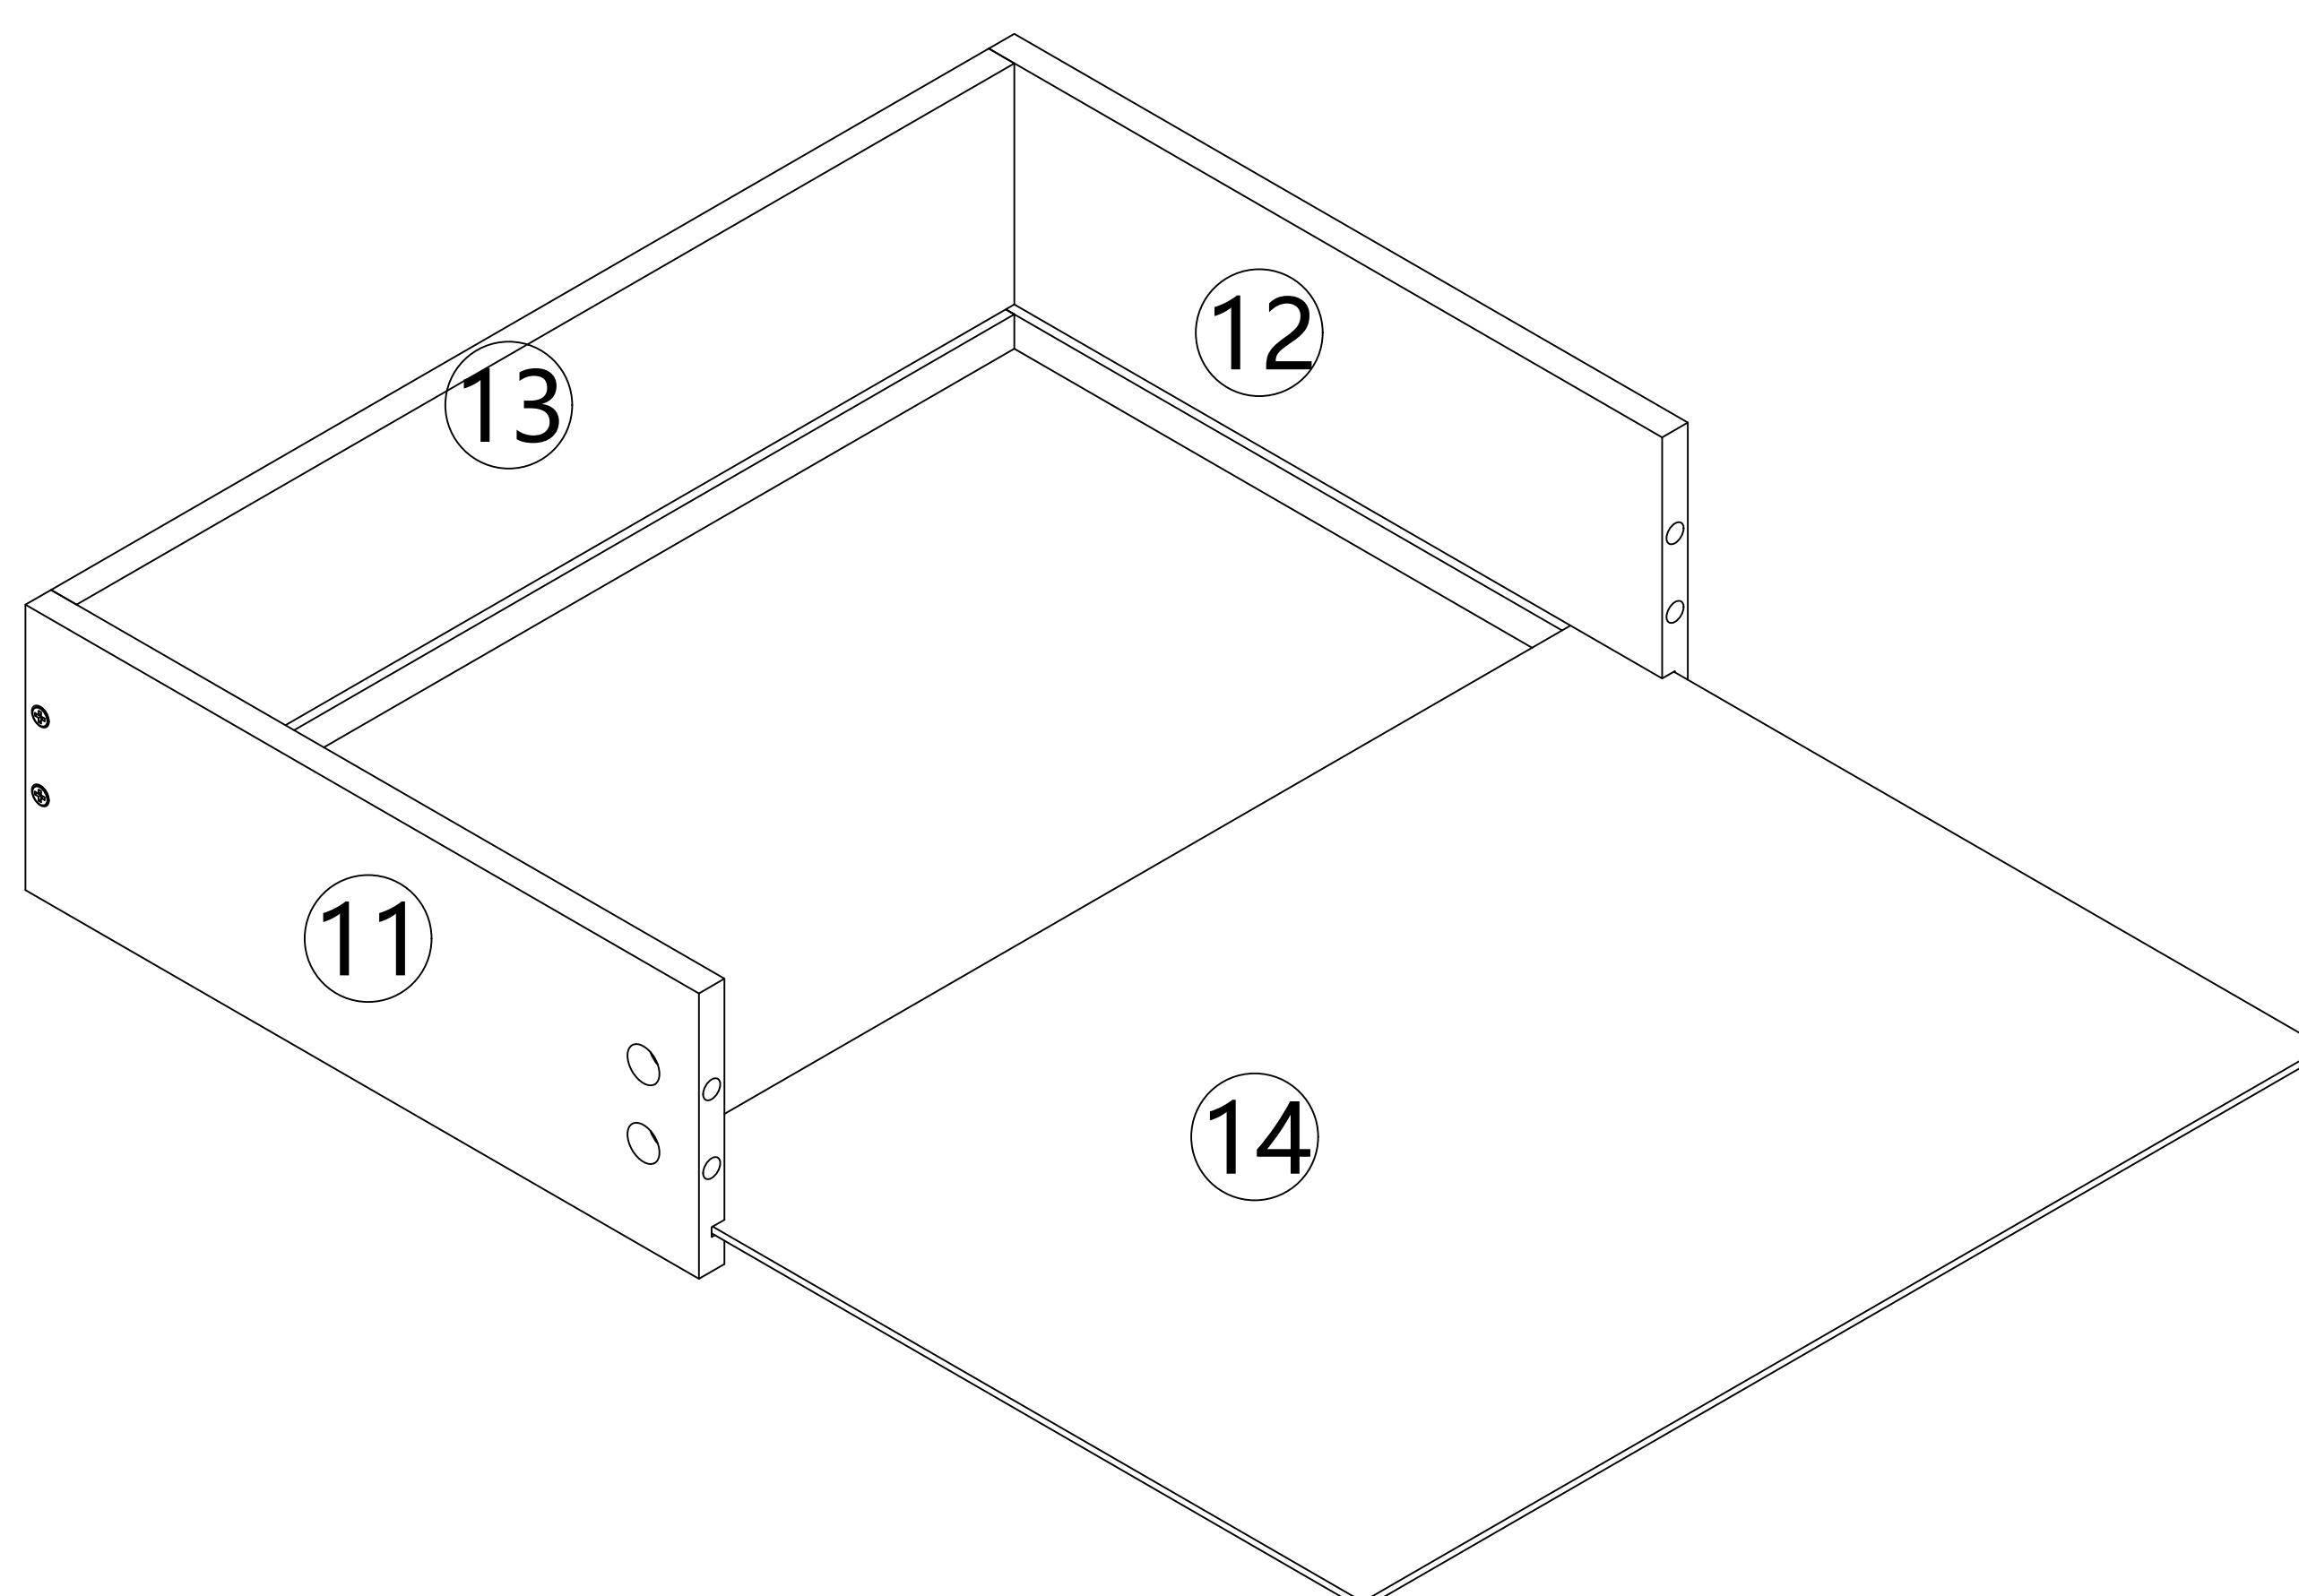



STEP#21

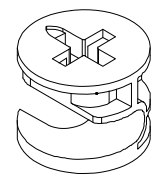


B x 4

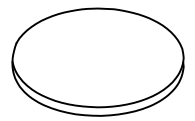


O x 4

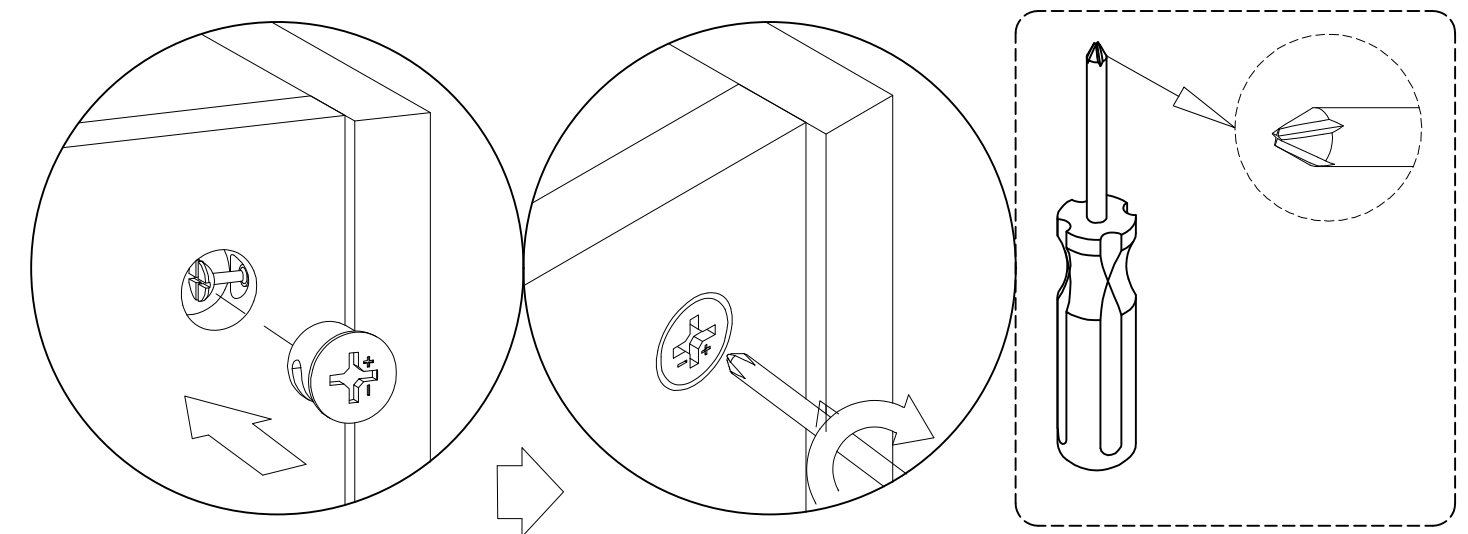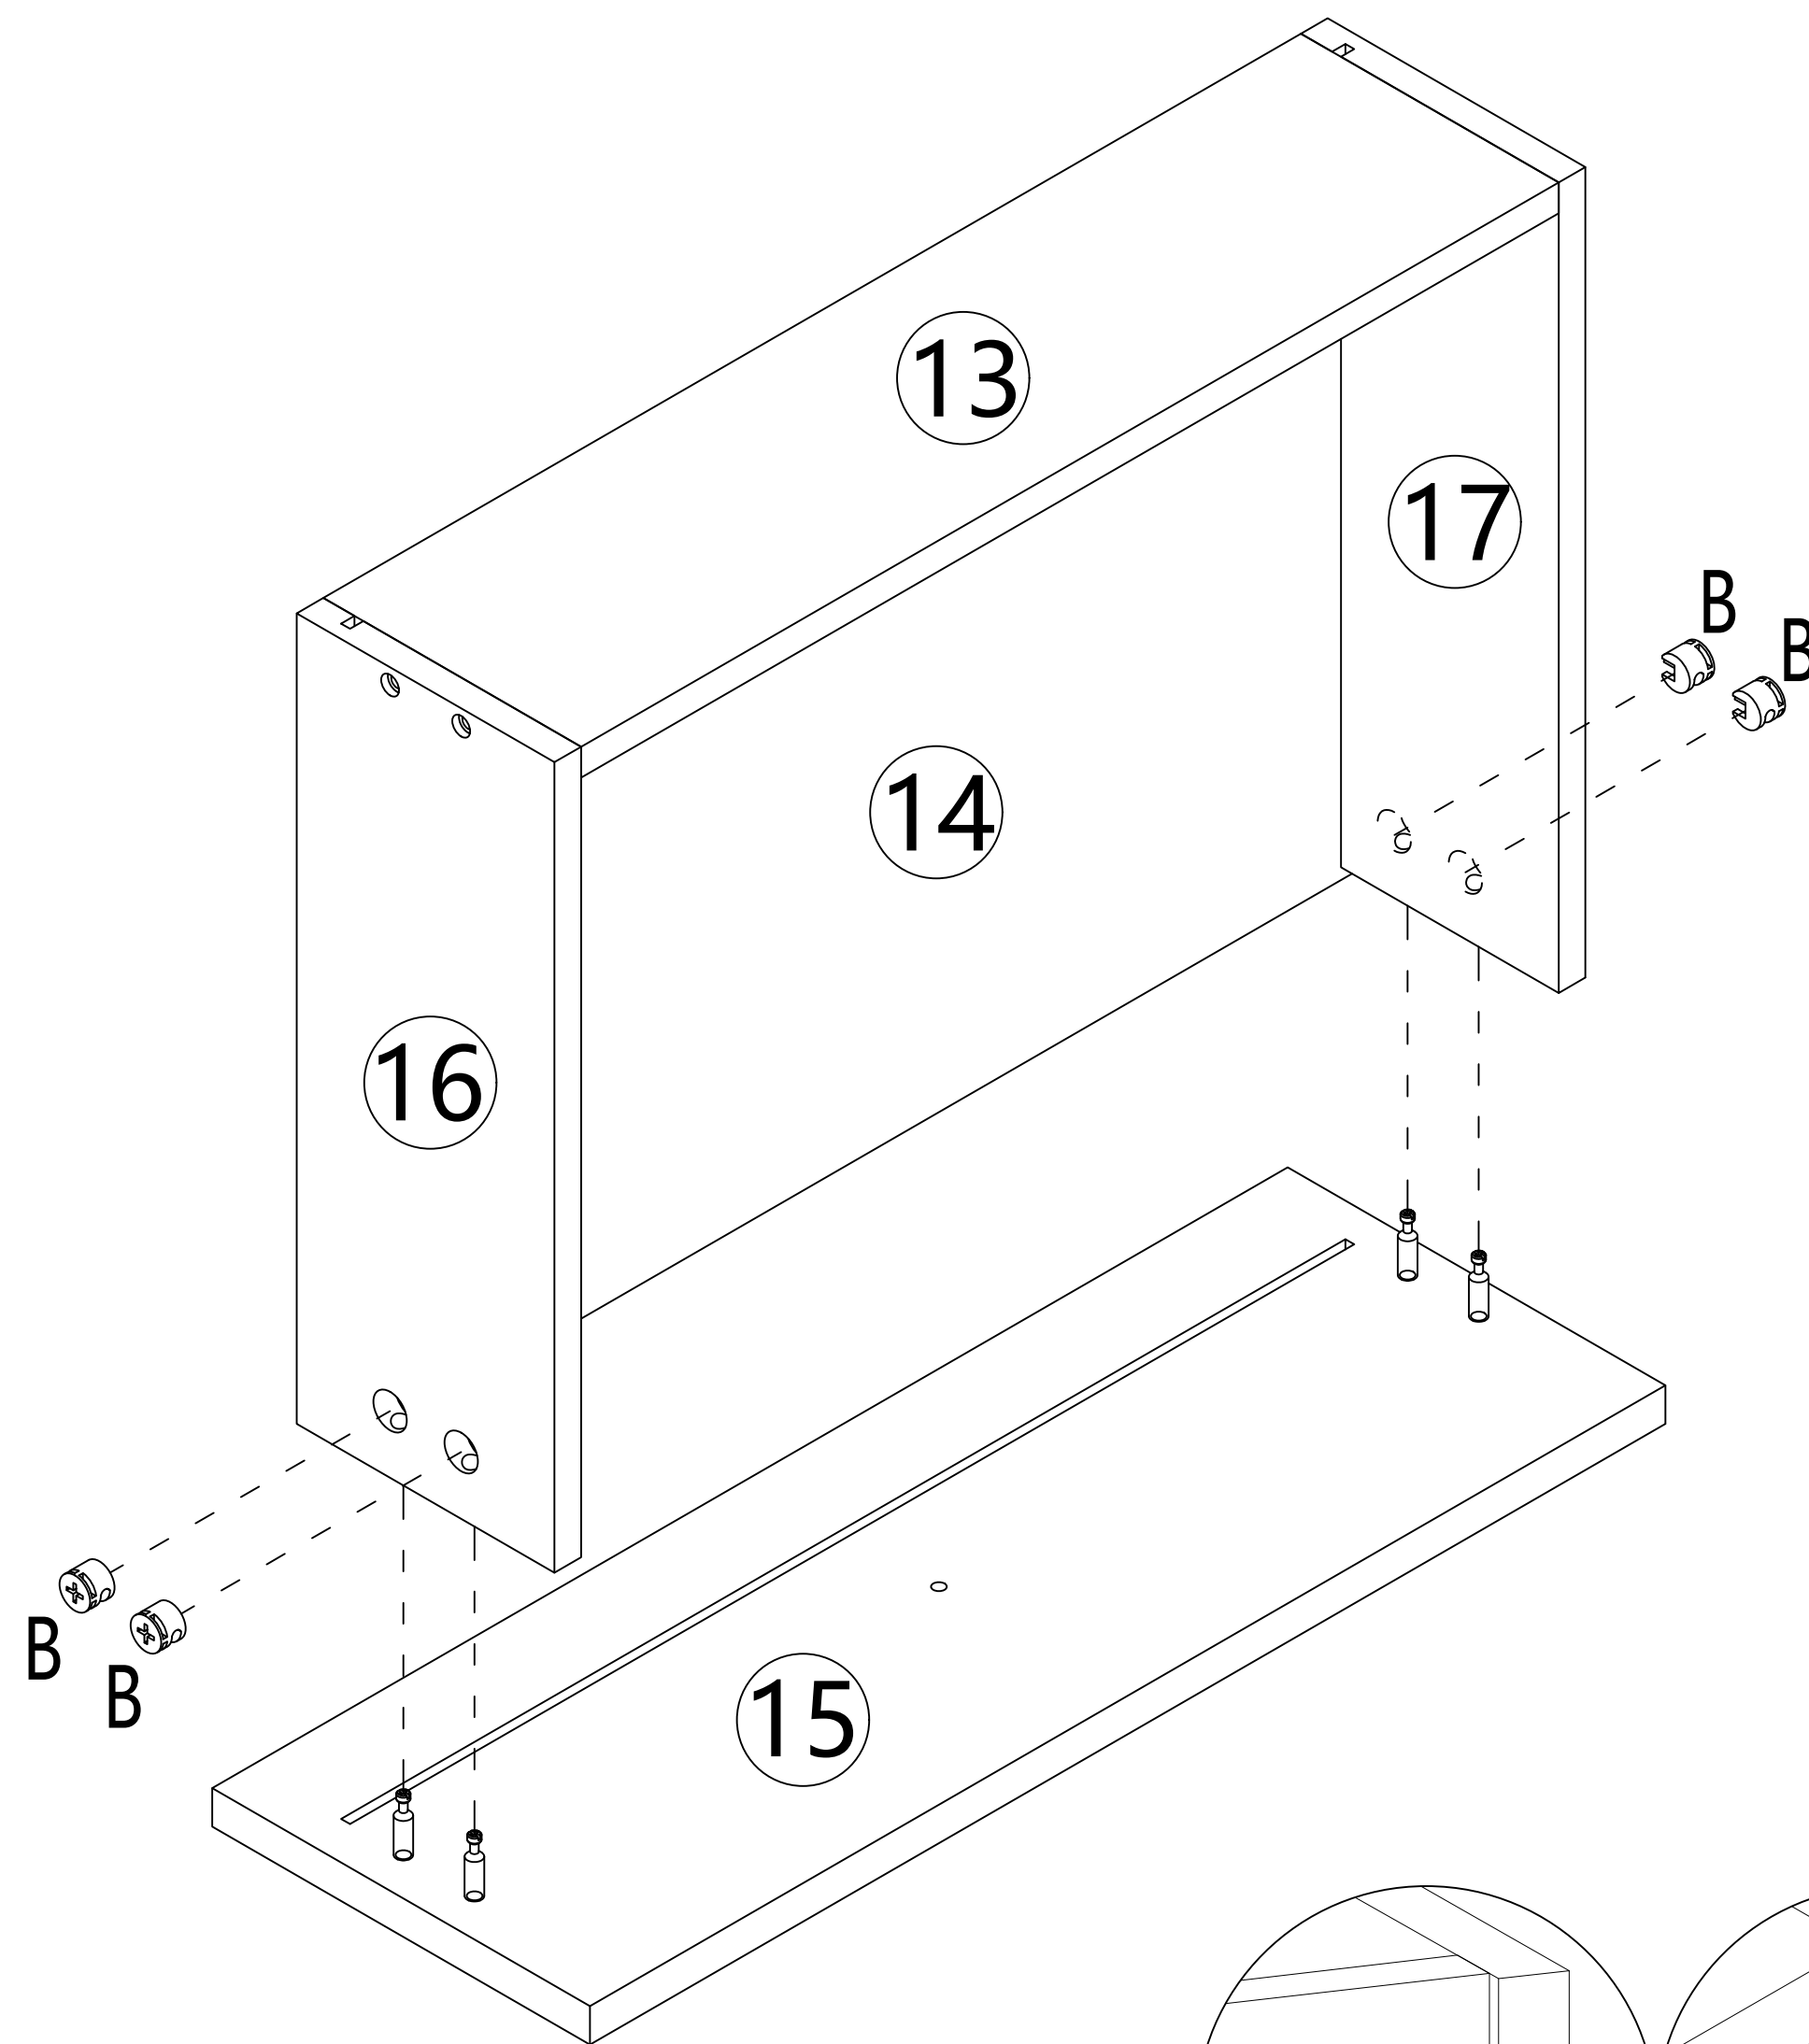



STEP#22




G x 4

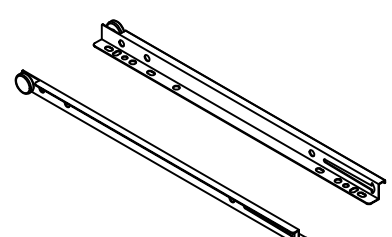


M x 1

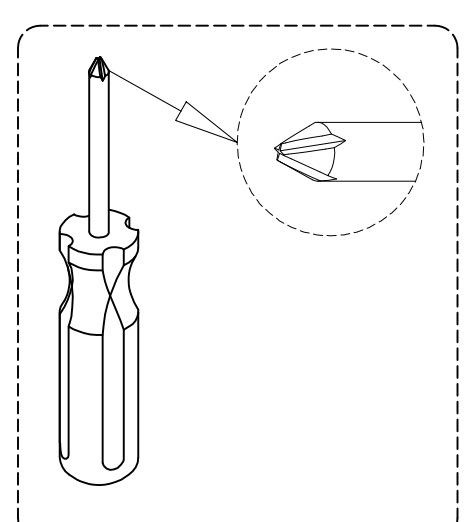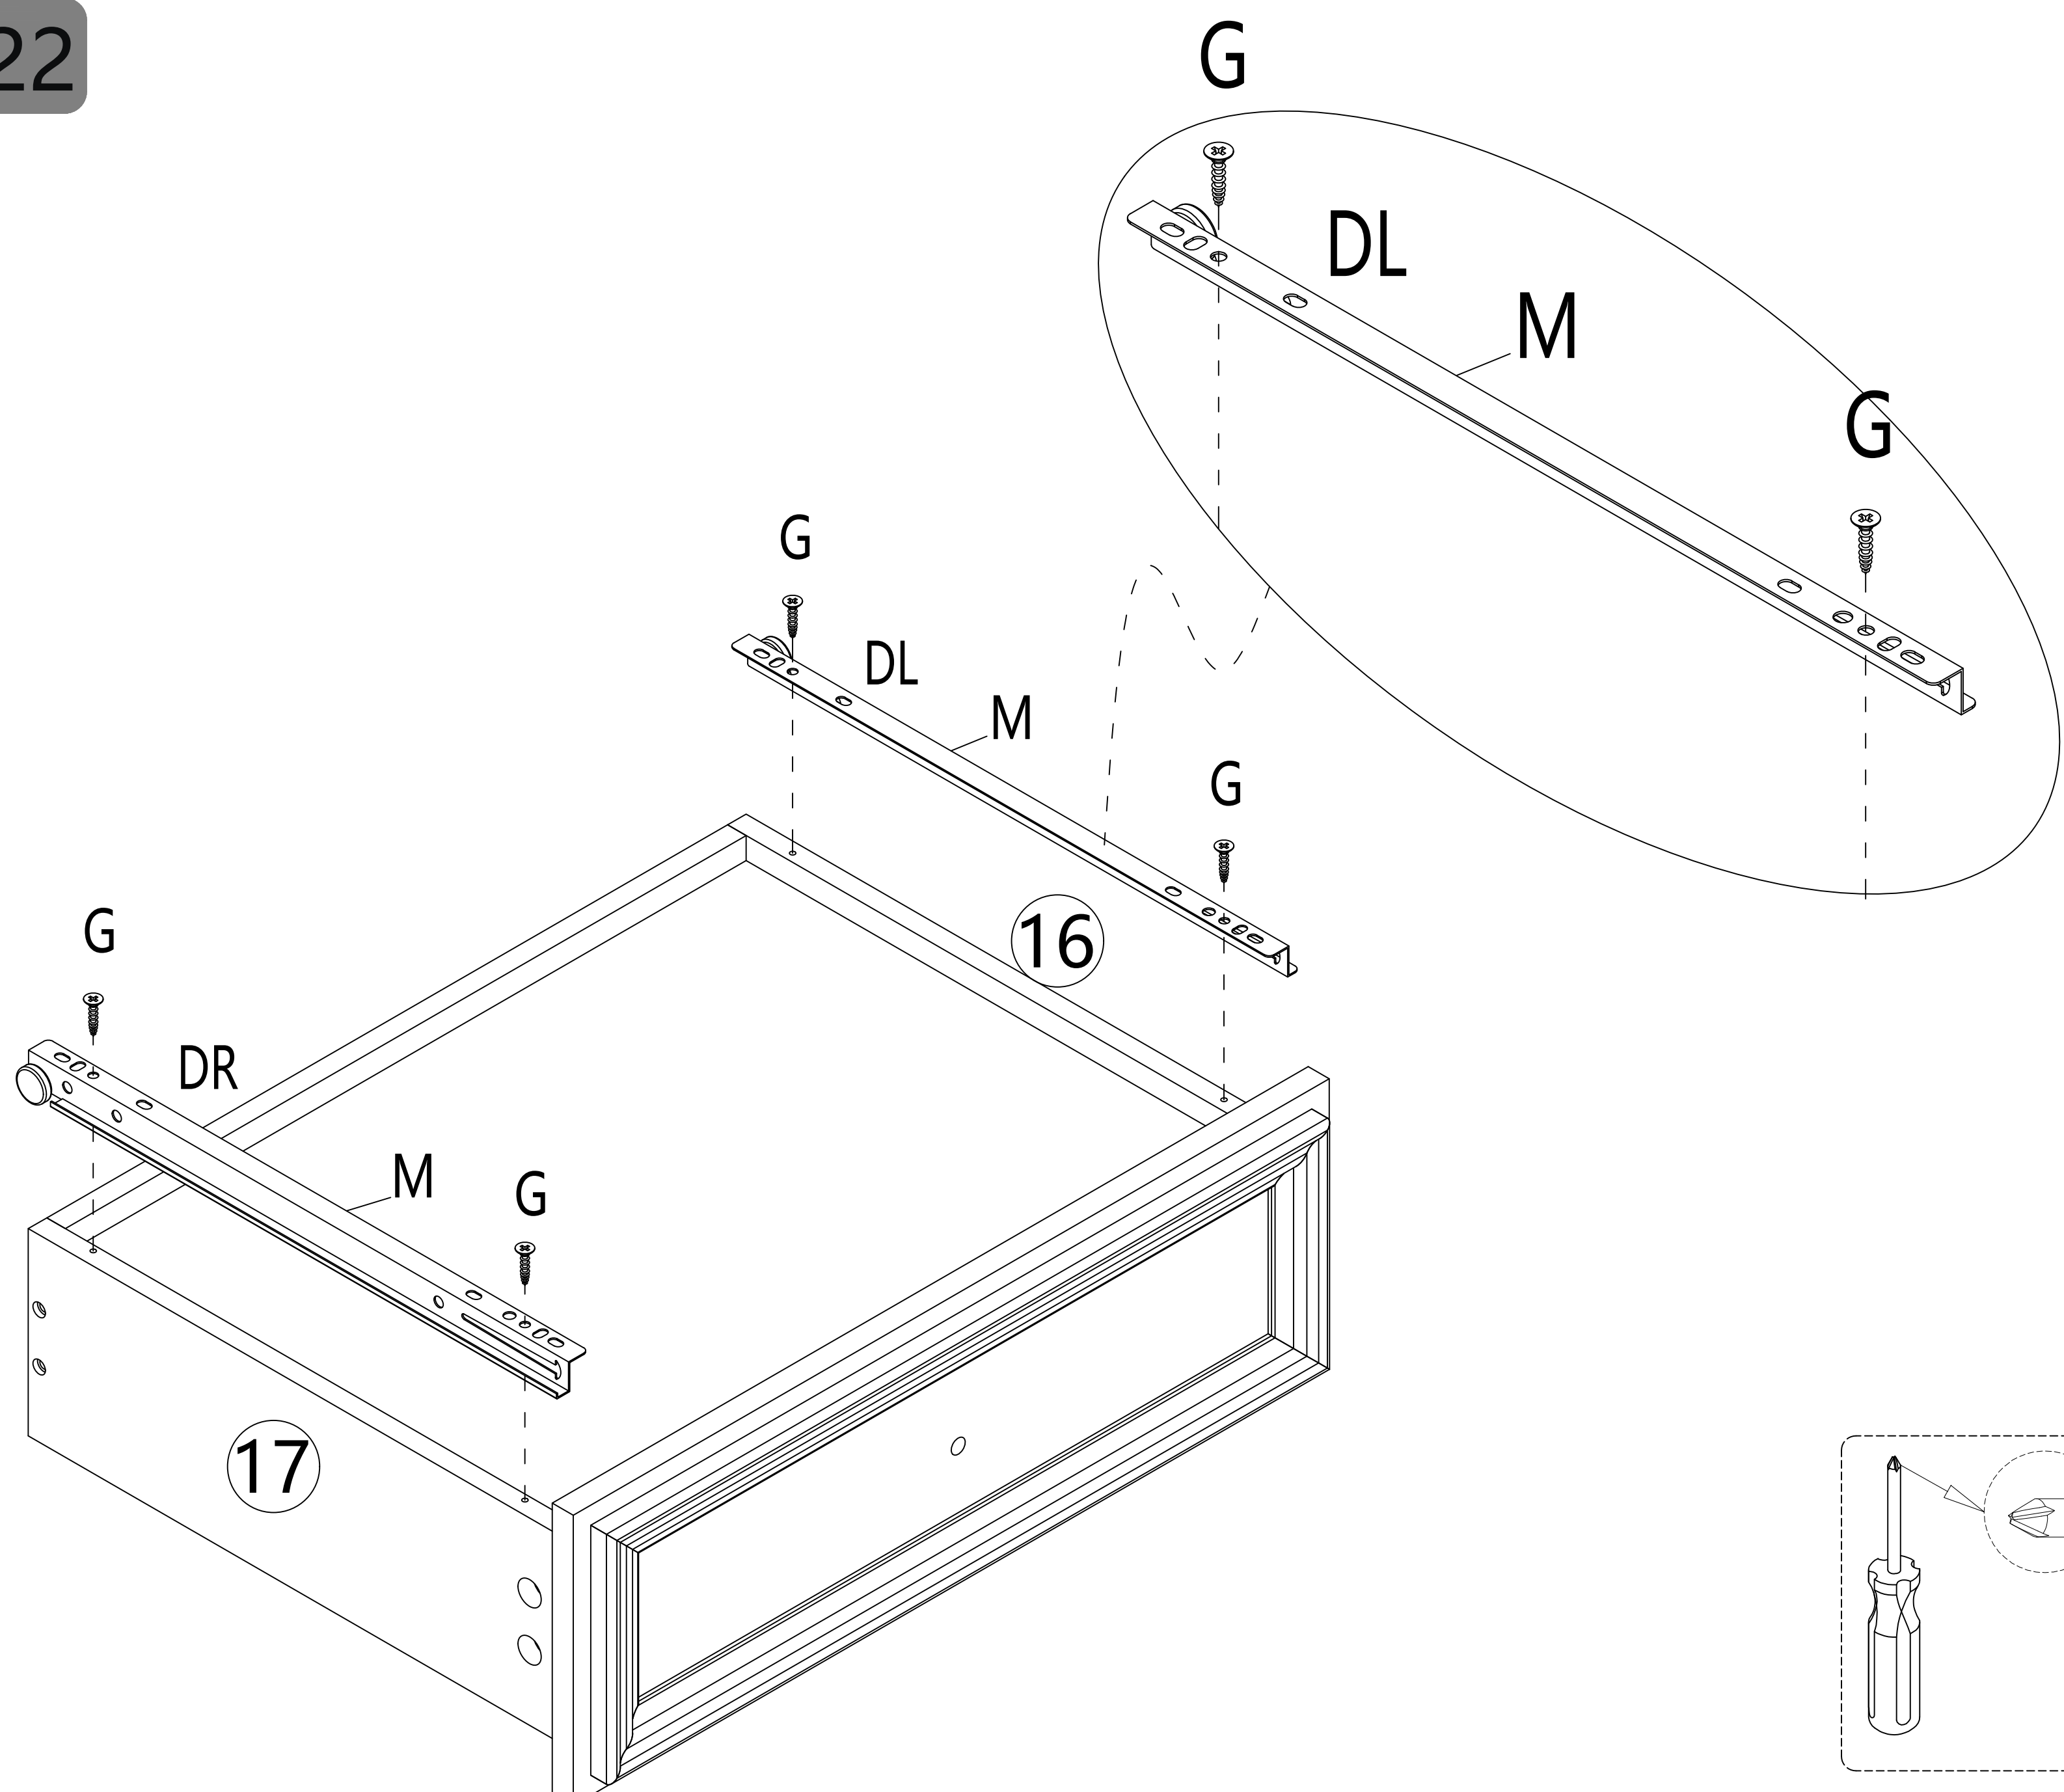



STEP#23

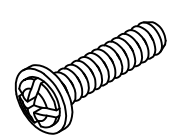


E x 1

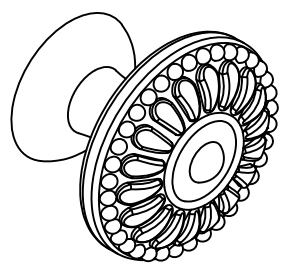


D x 1

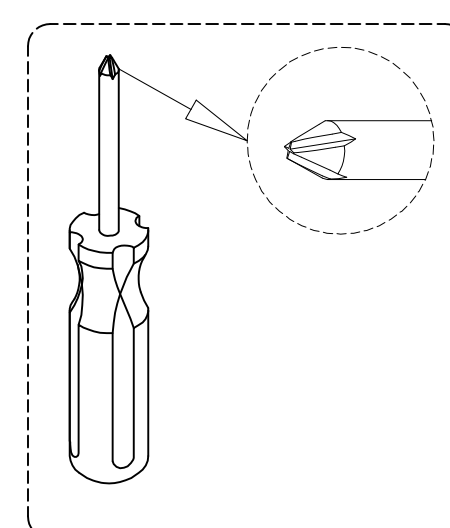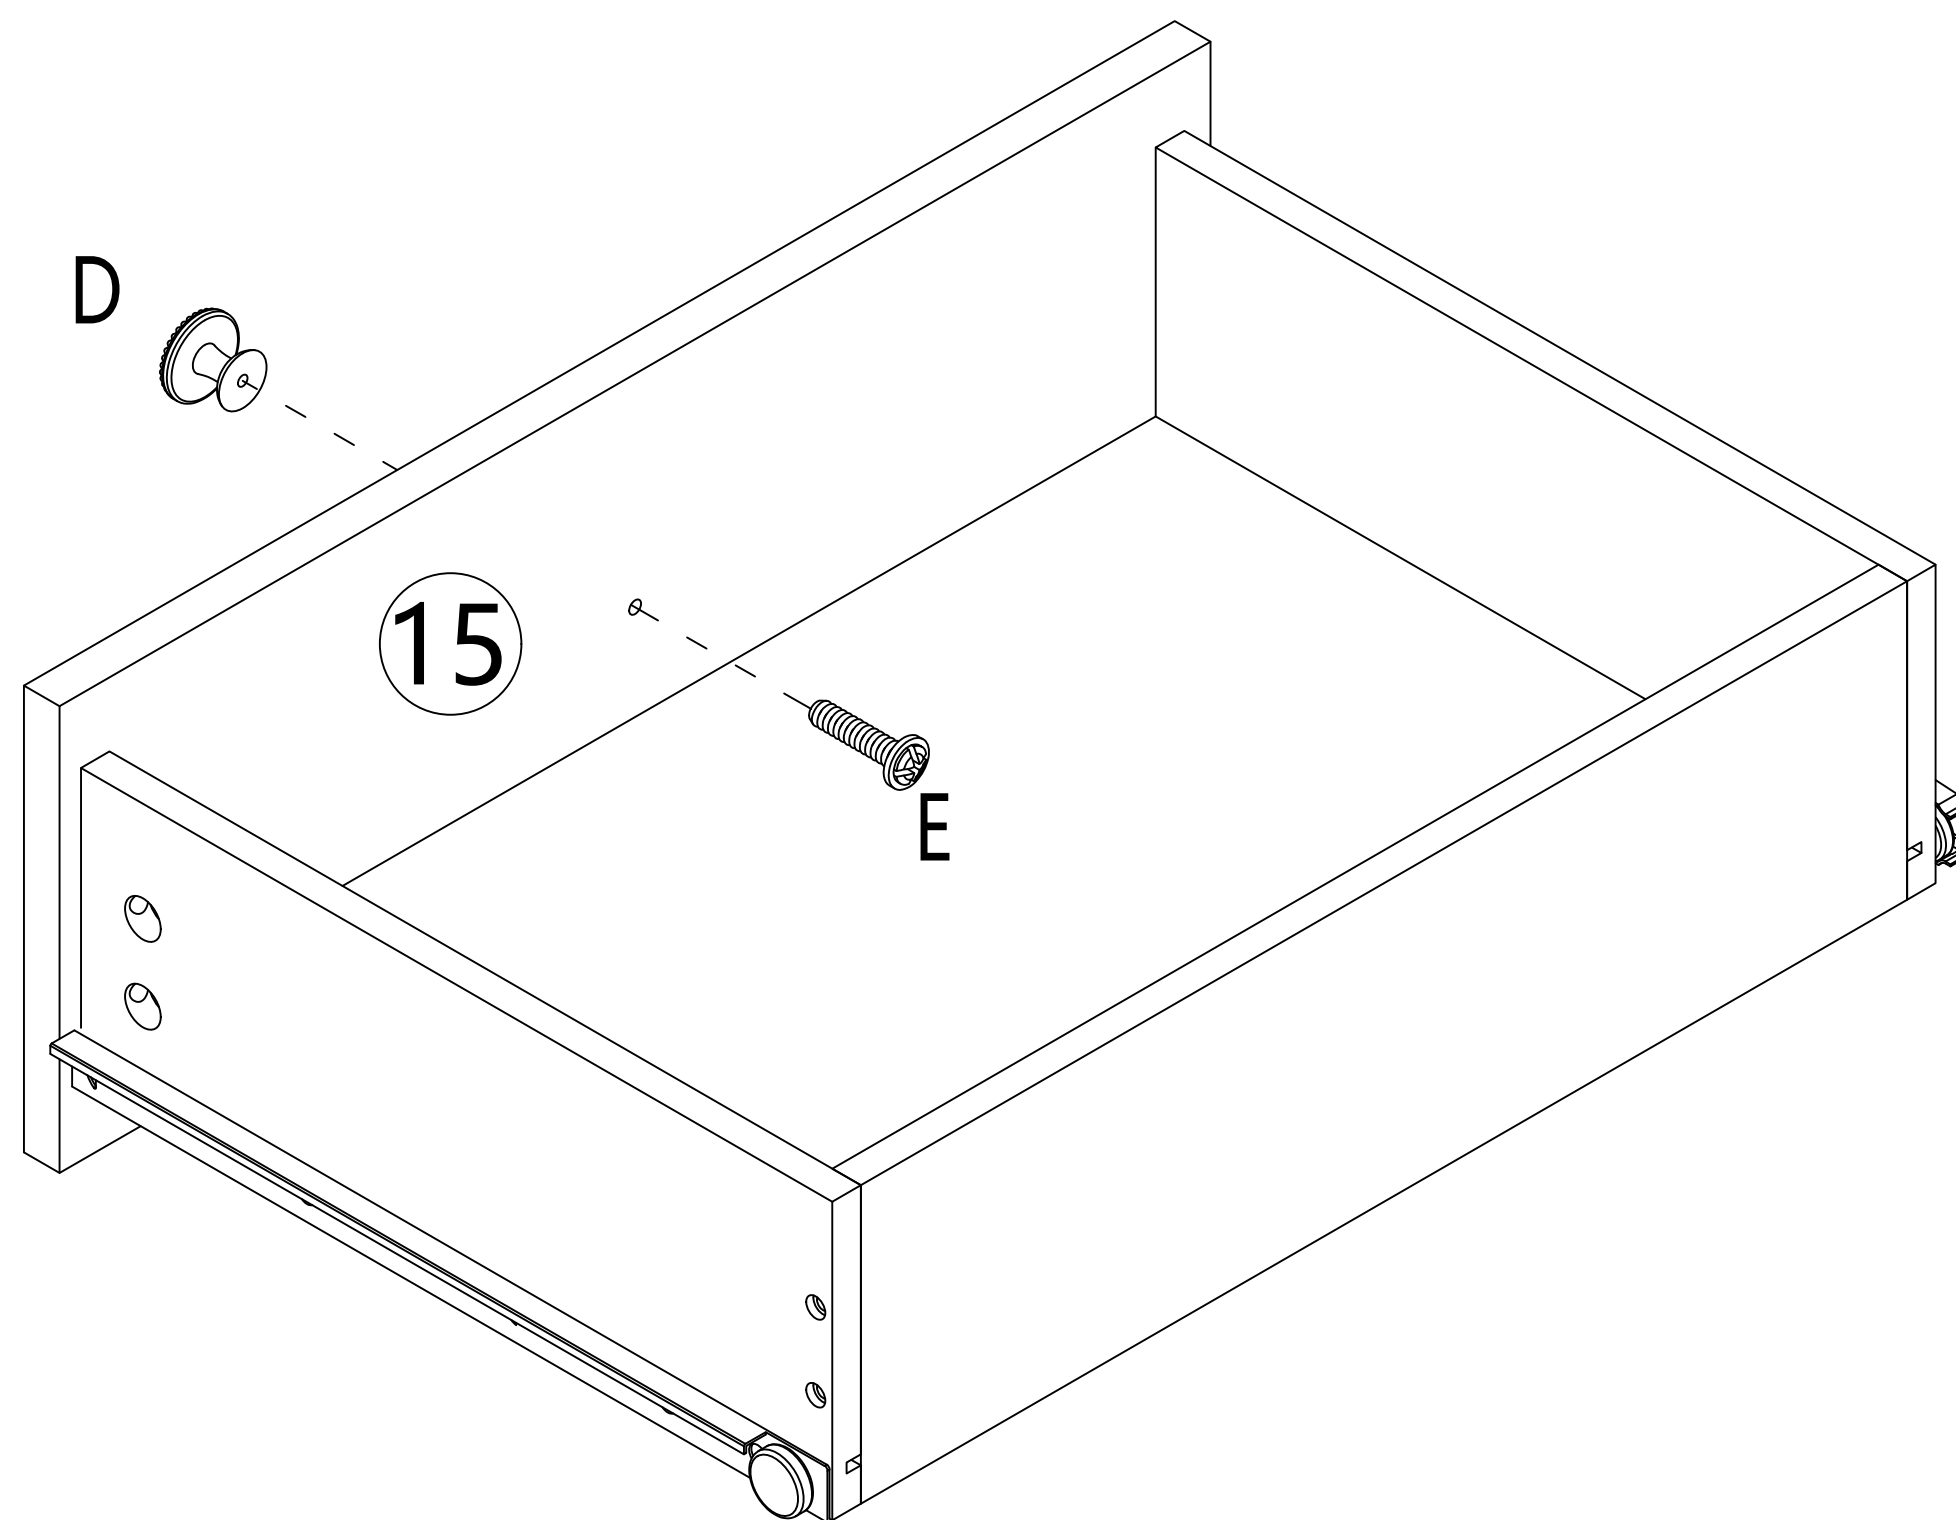


STEP#24

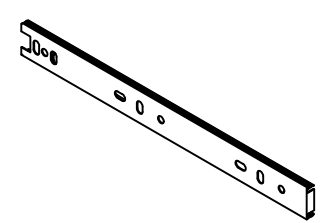


N2 x 2




G x 4




A x 2

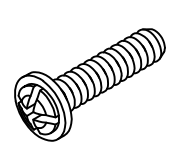


E x 1

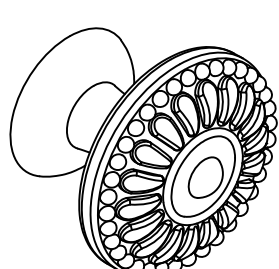


D x 1

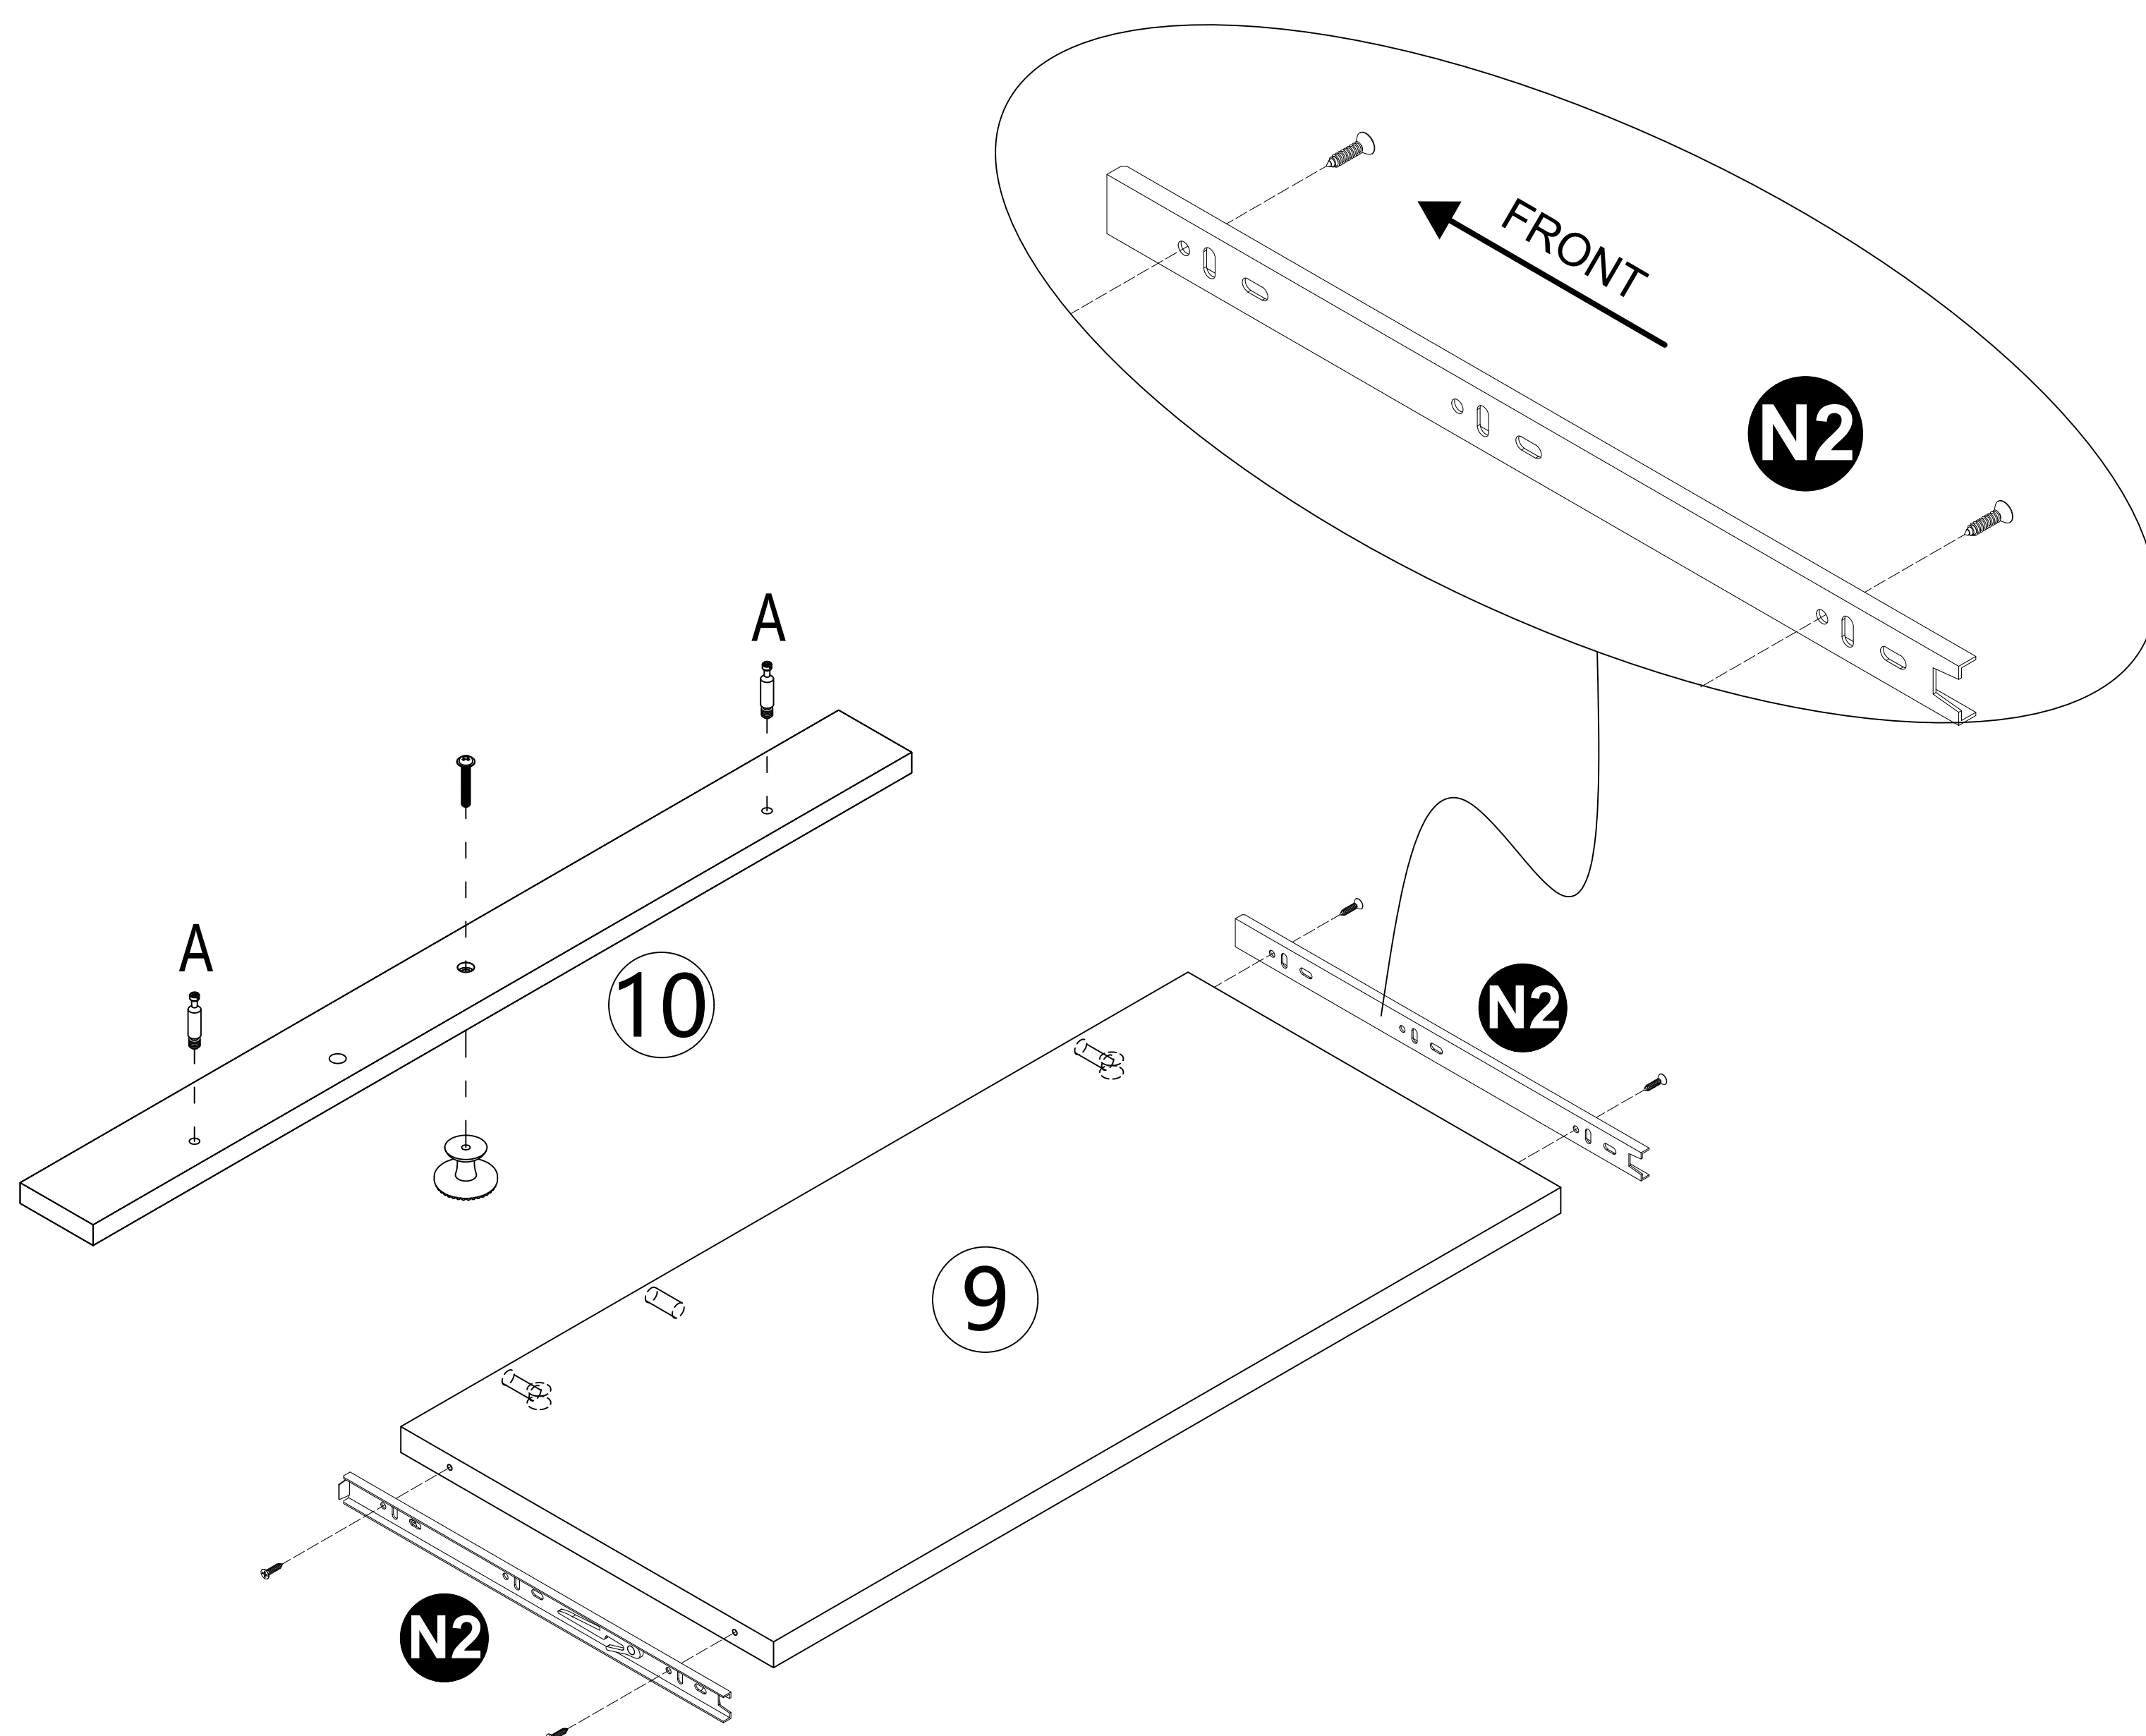


STEP#25

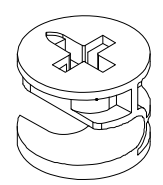


B x 2

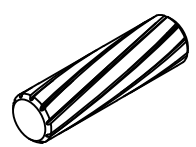


C x 1

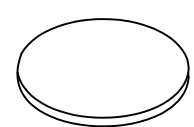

O x 2


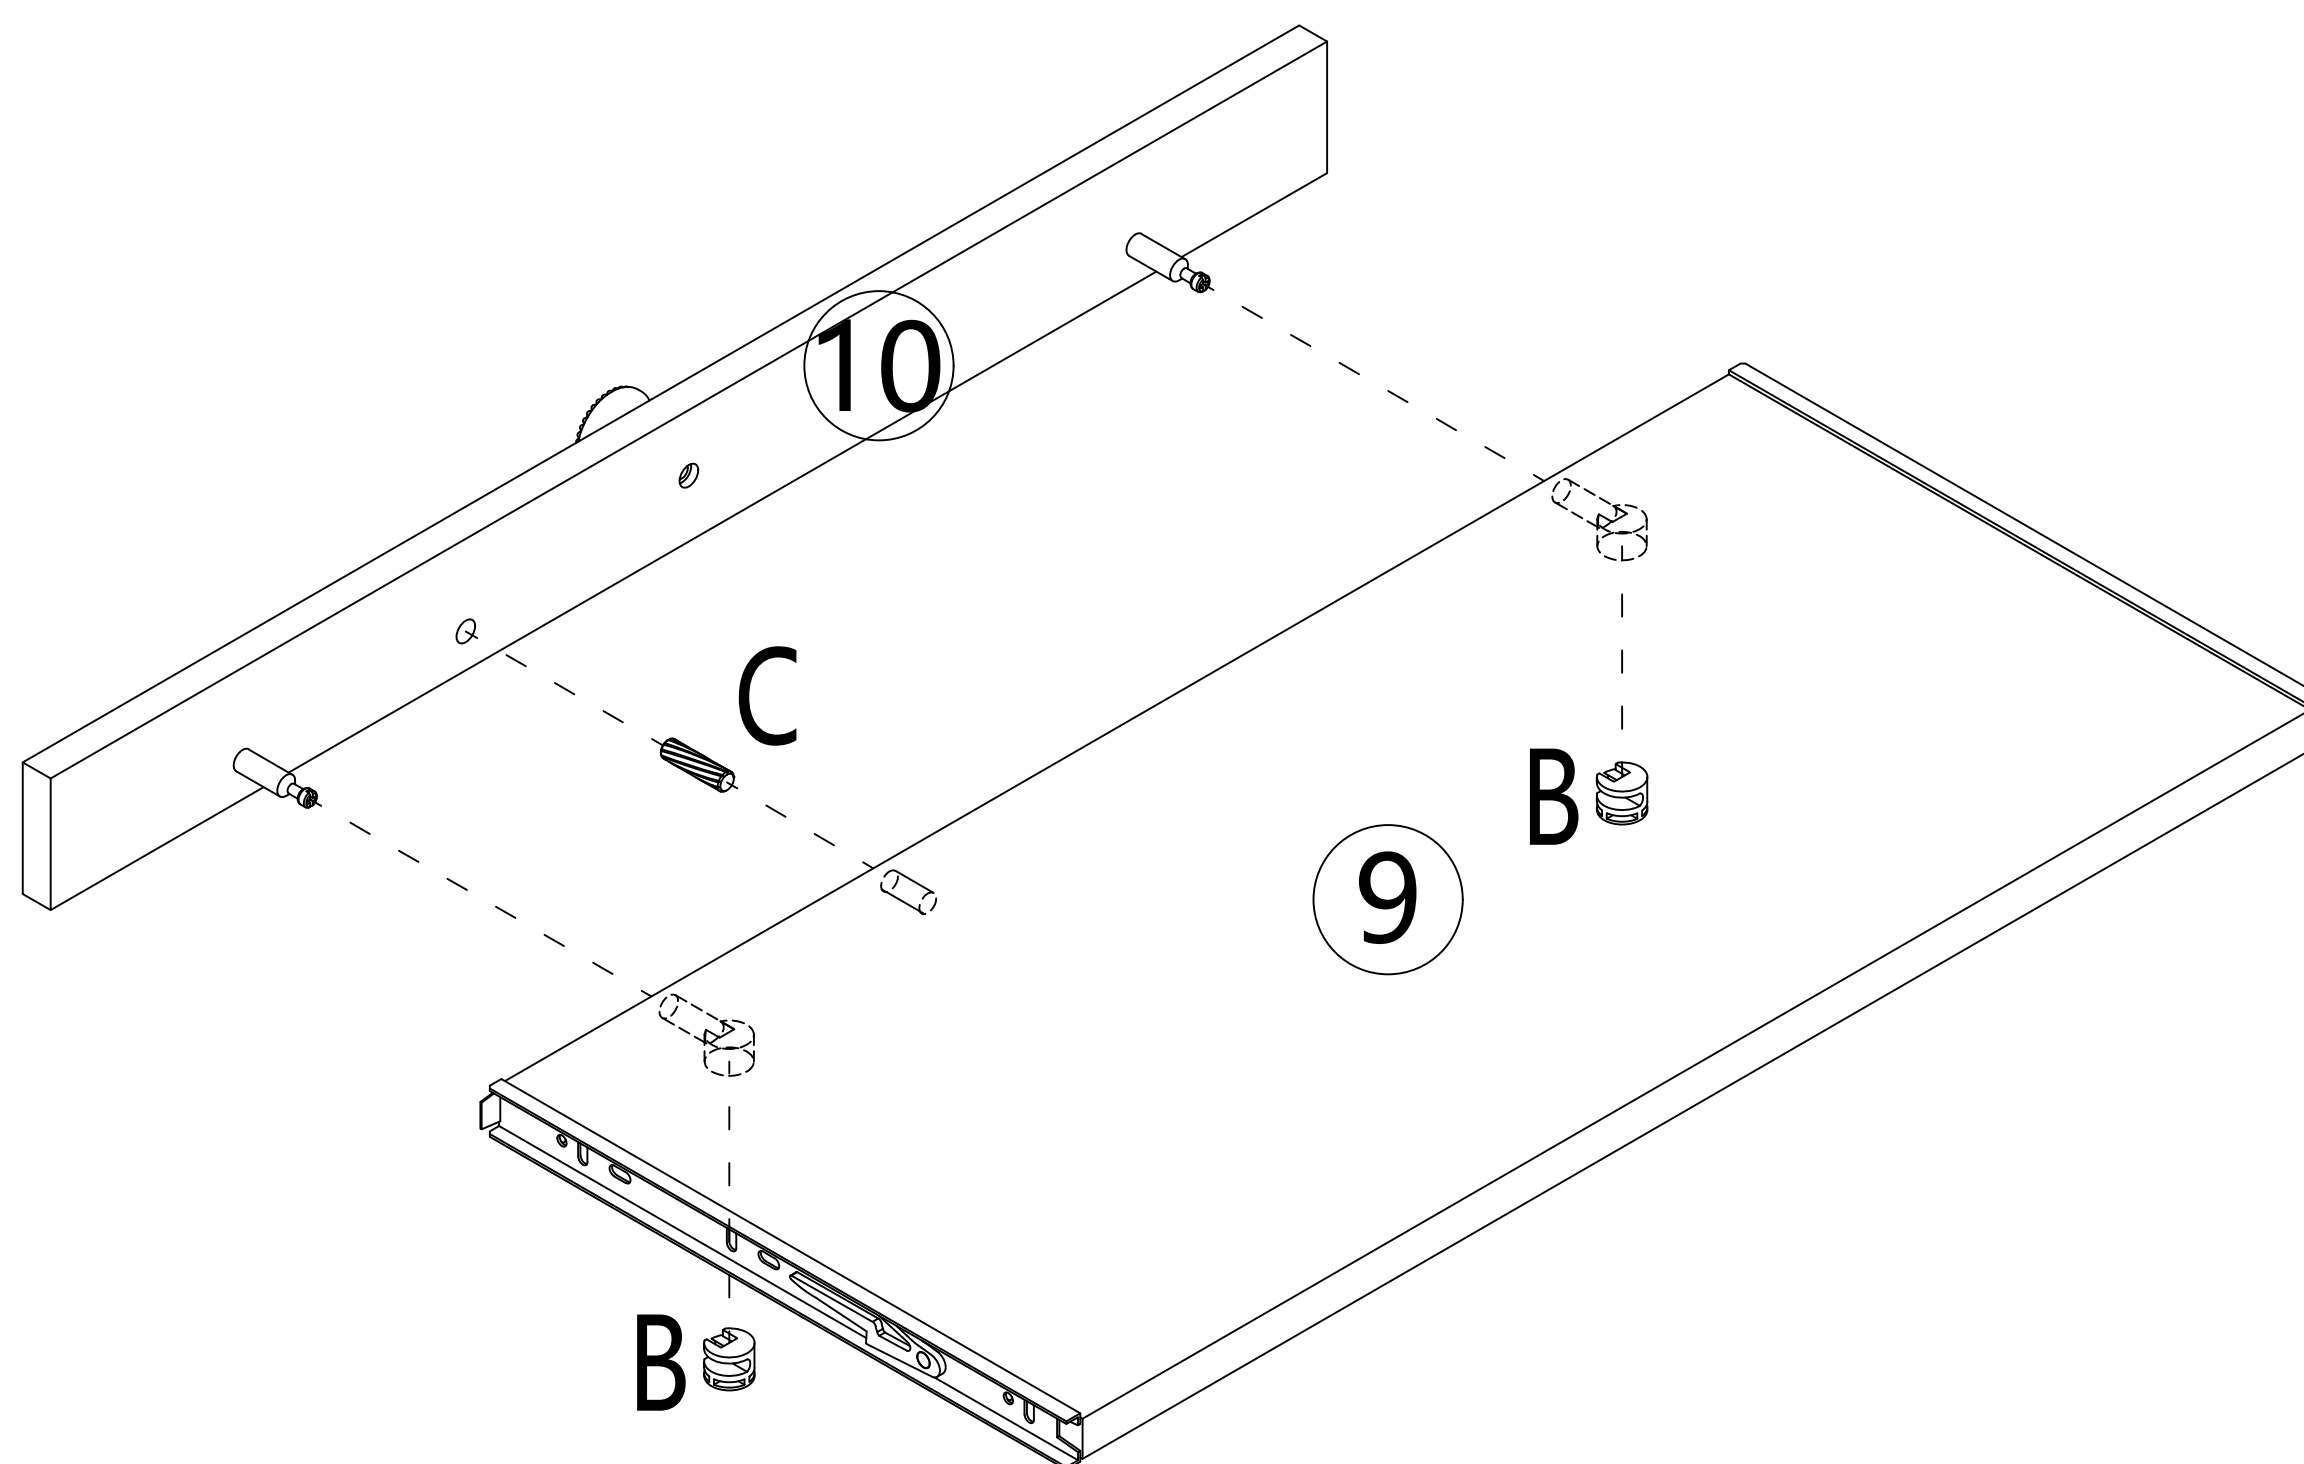


STEP#26

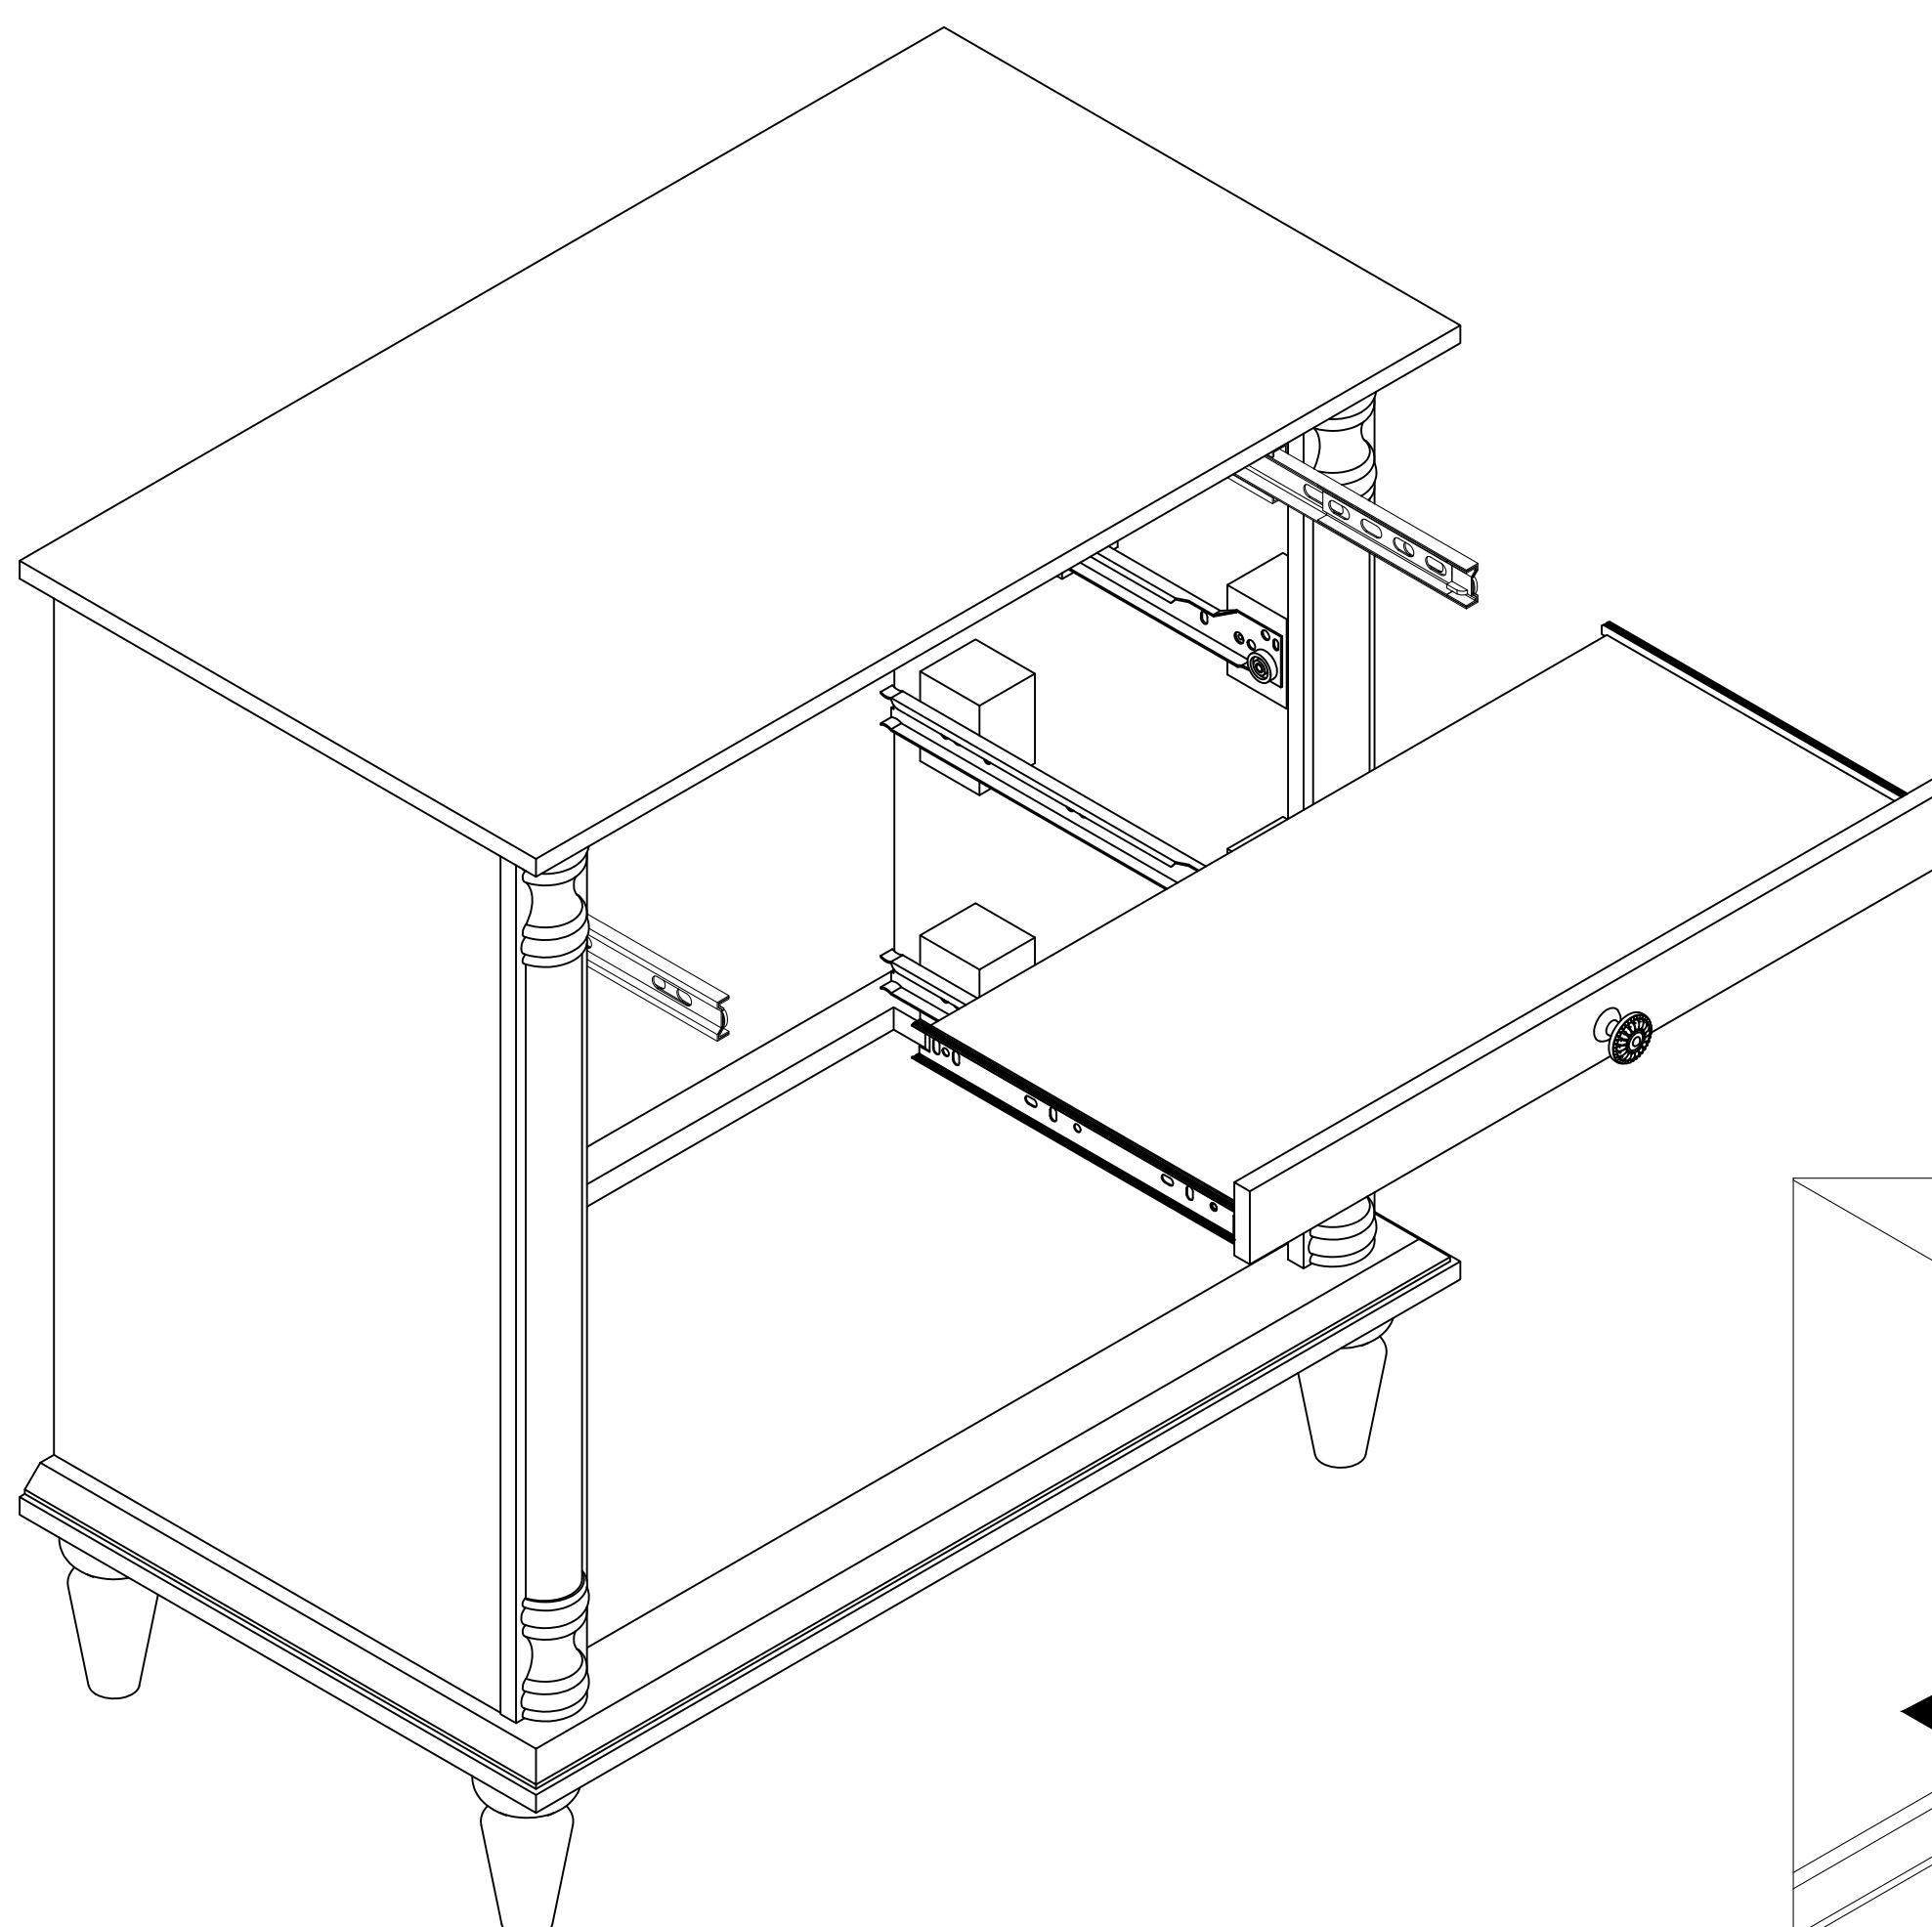

Line up the drawer rails with the main slides and insert both sides at once.

STEP#27

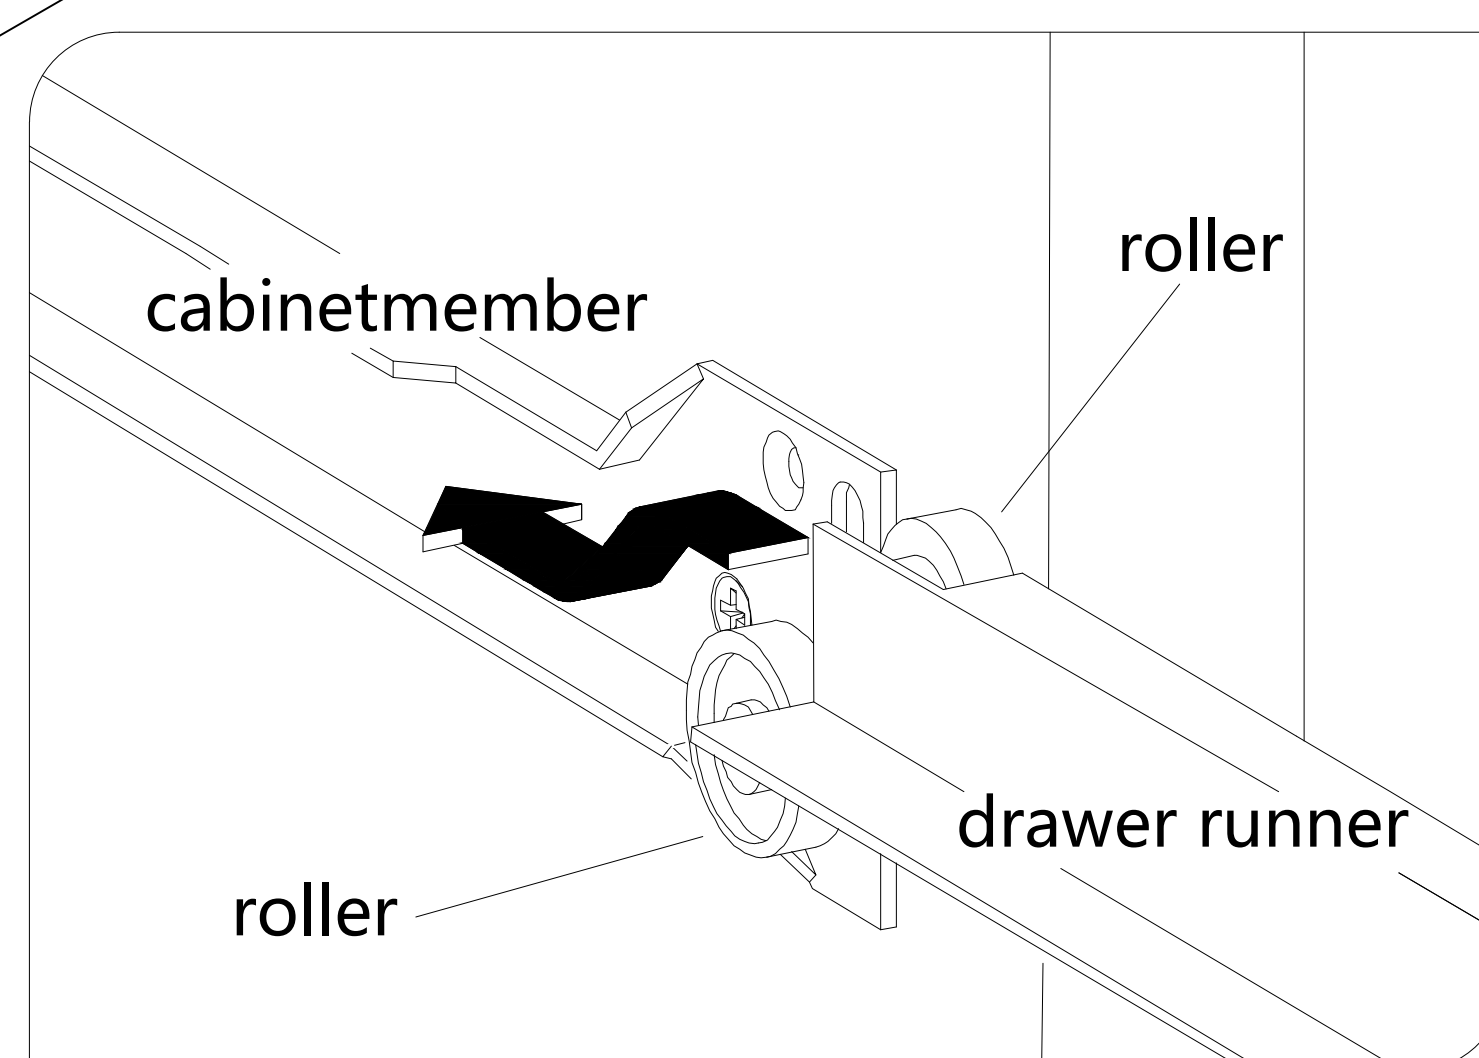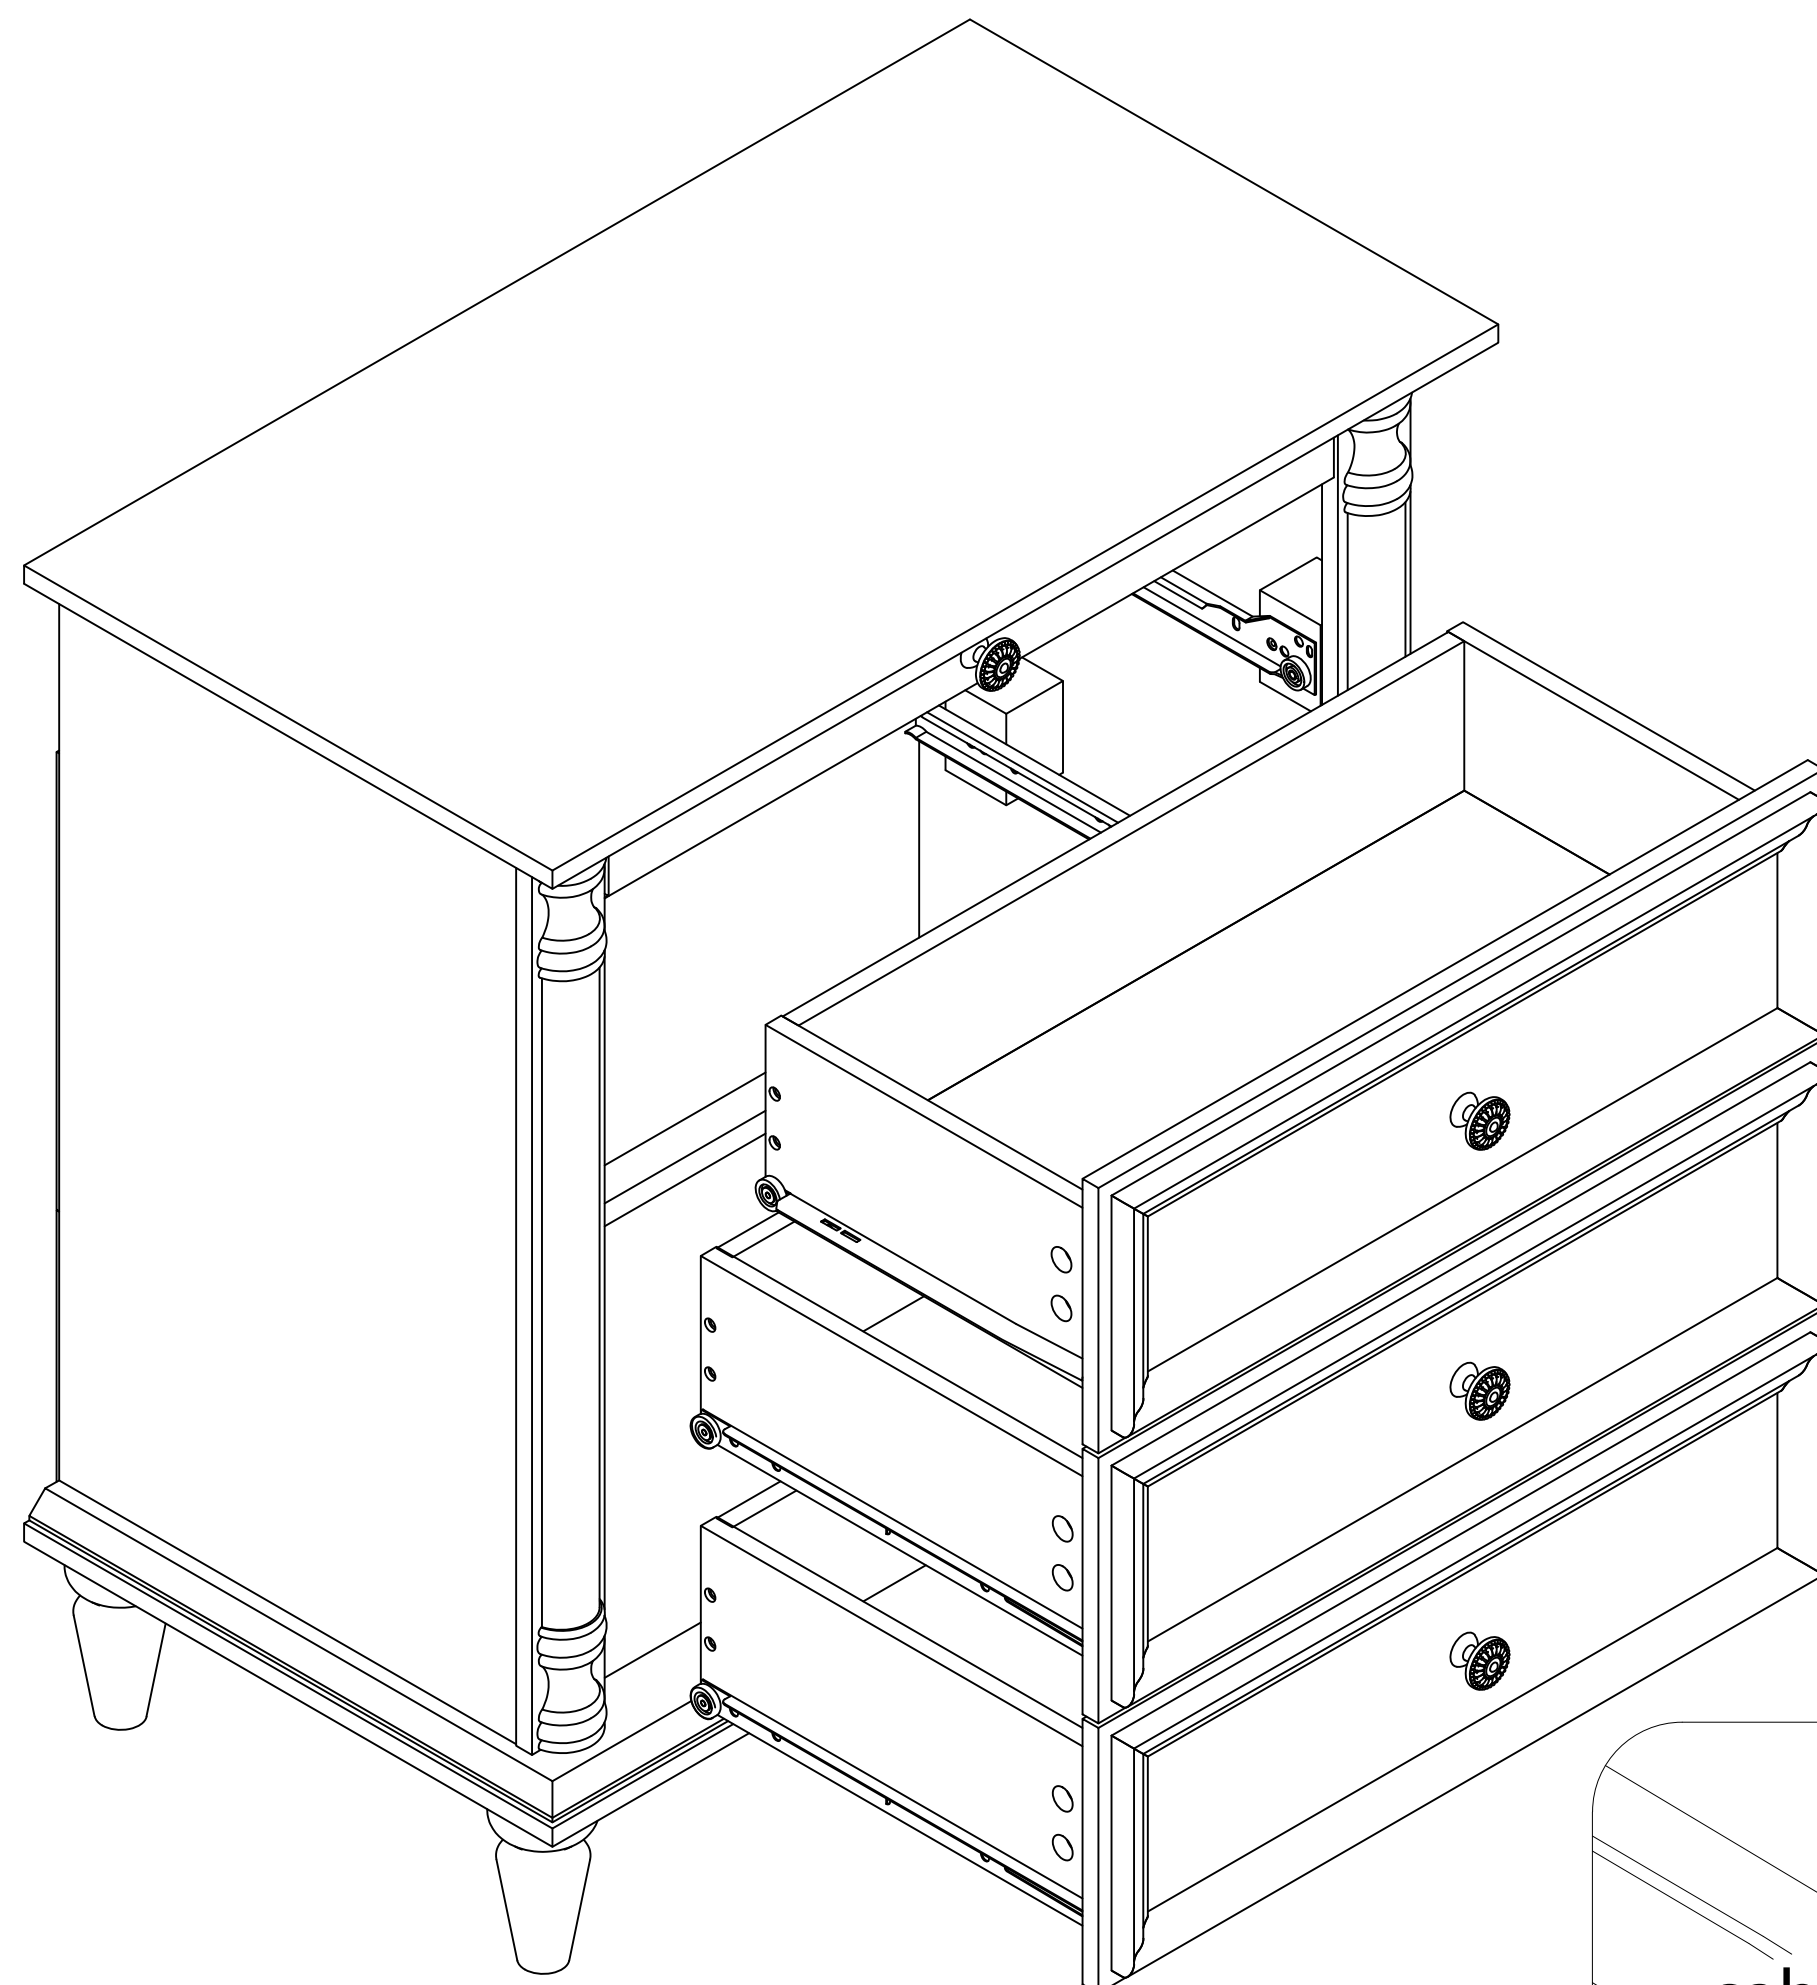

STEP#28

