


817-914#

Bathroom cabinet

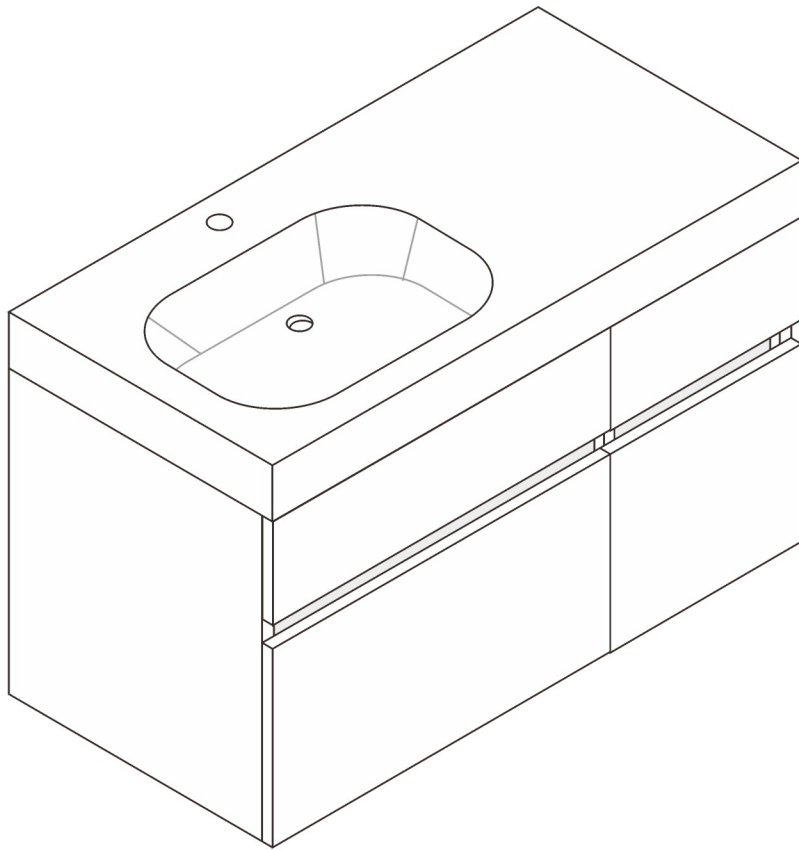


2 Persons


L798*W398*H400MM

Installation Instructions


Notes: Don't tighten screws completely at first, just in case parts were assembled wrongly and need disassemble. Tighten screws at last when all parts are put together.

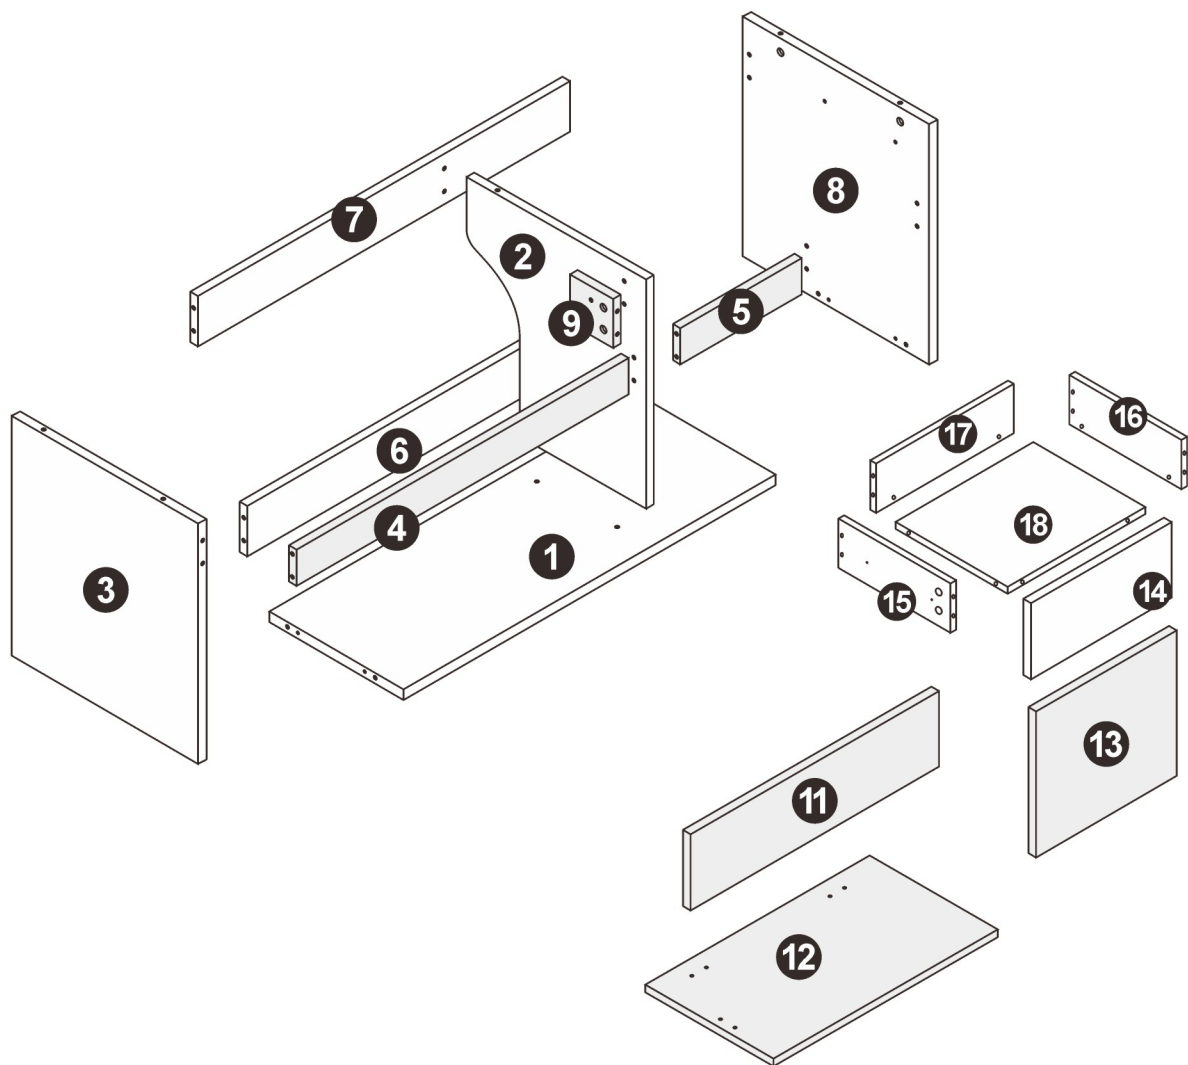


Disassembly and installation of accessories

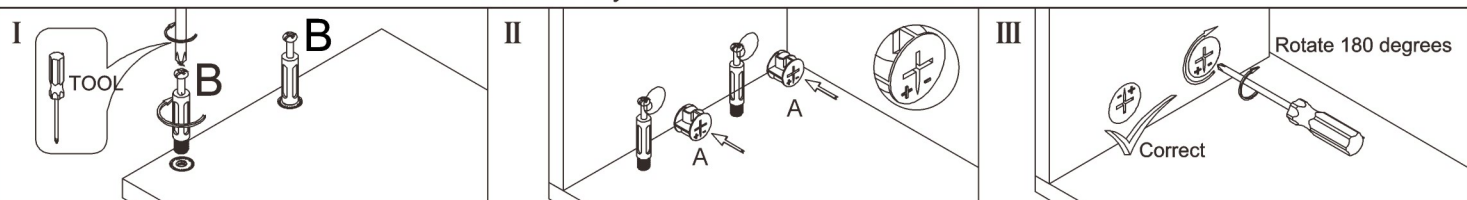


A 36PCS  15*10mm	B 36PCS  6*28mm	C 64PCS  3.5*14mm	D 6PCS  3.5*35mm	E 2PCS  6*25mm	F 4PCS  8*30mm	G 4PCS  7*38	H 1PCS  Pneumatic rod
I 2PCS  Three-section Rail	J 4PCS  Expansion screw	L 2PCS  Corner code	M 2PCS  Pendant	N 4PCS  Hinge			

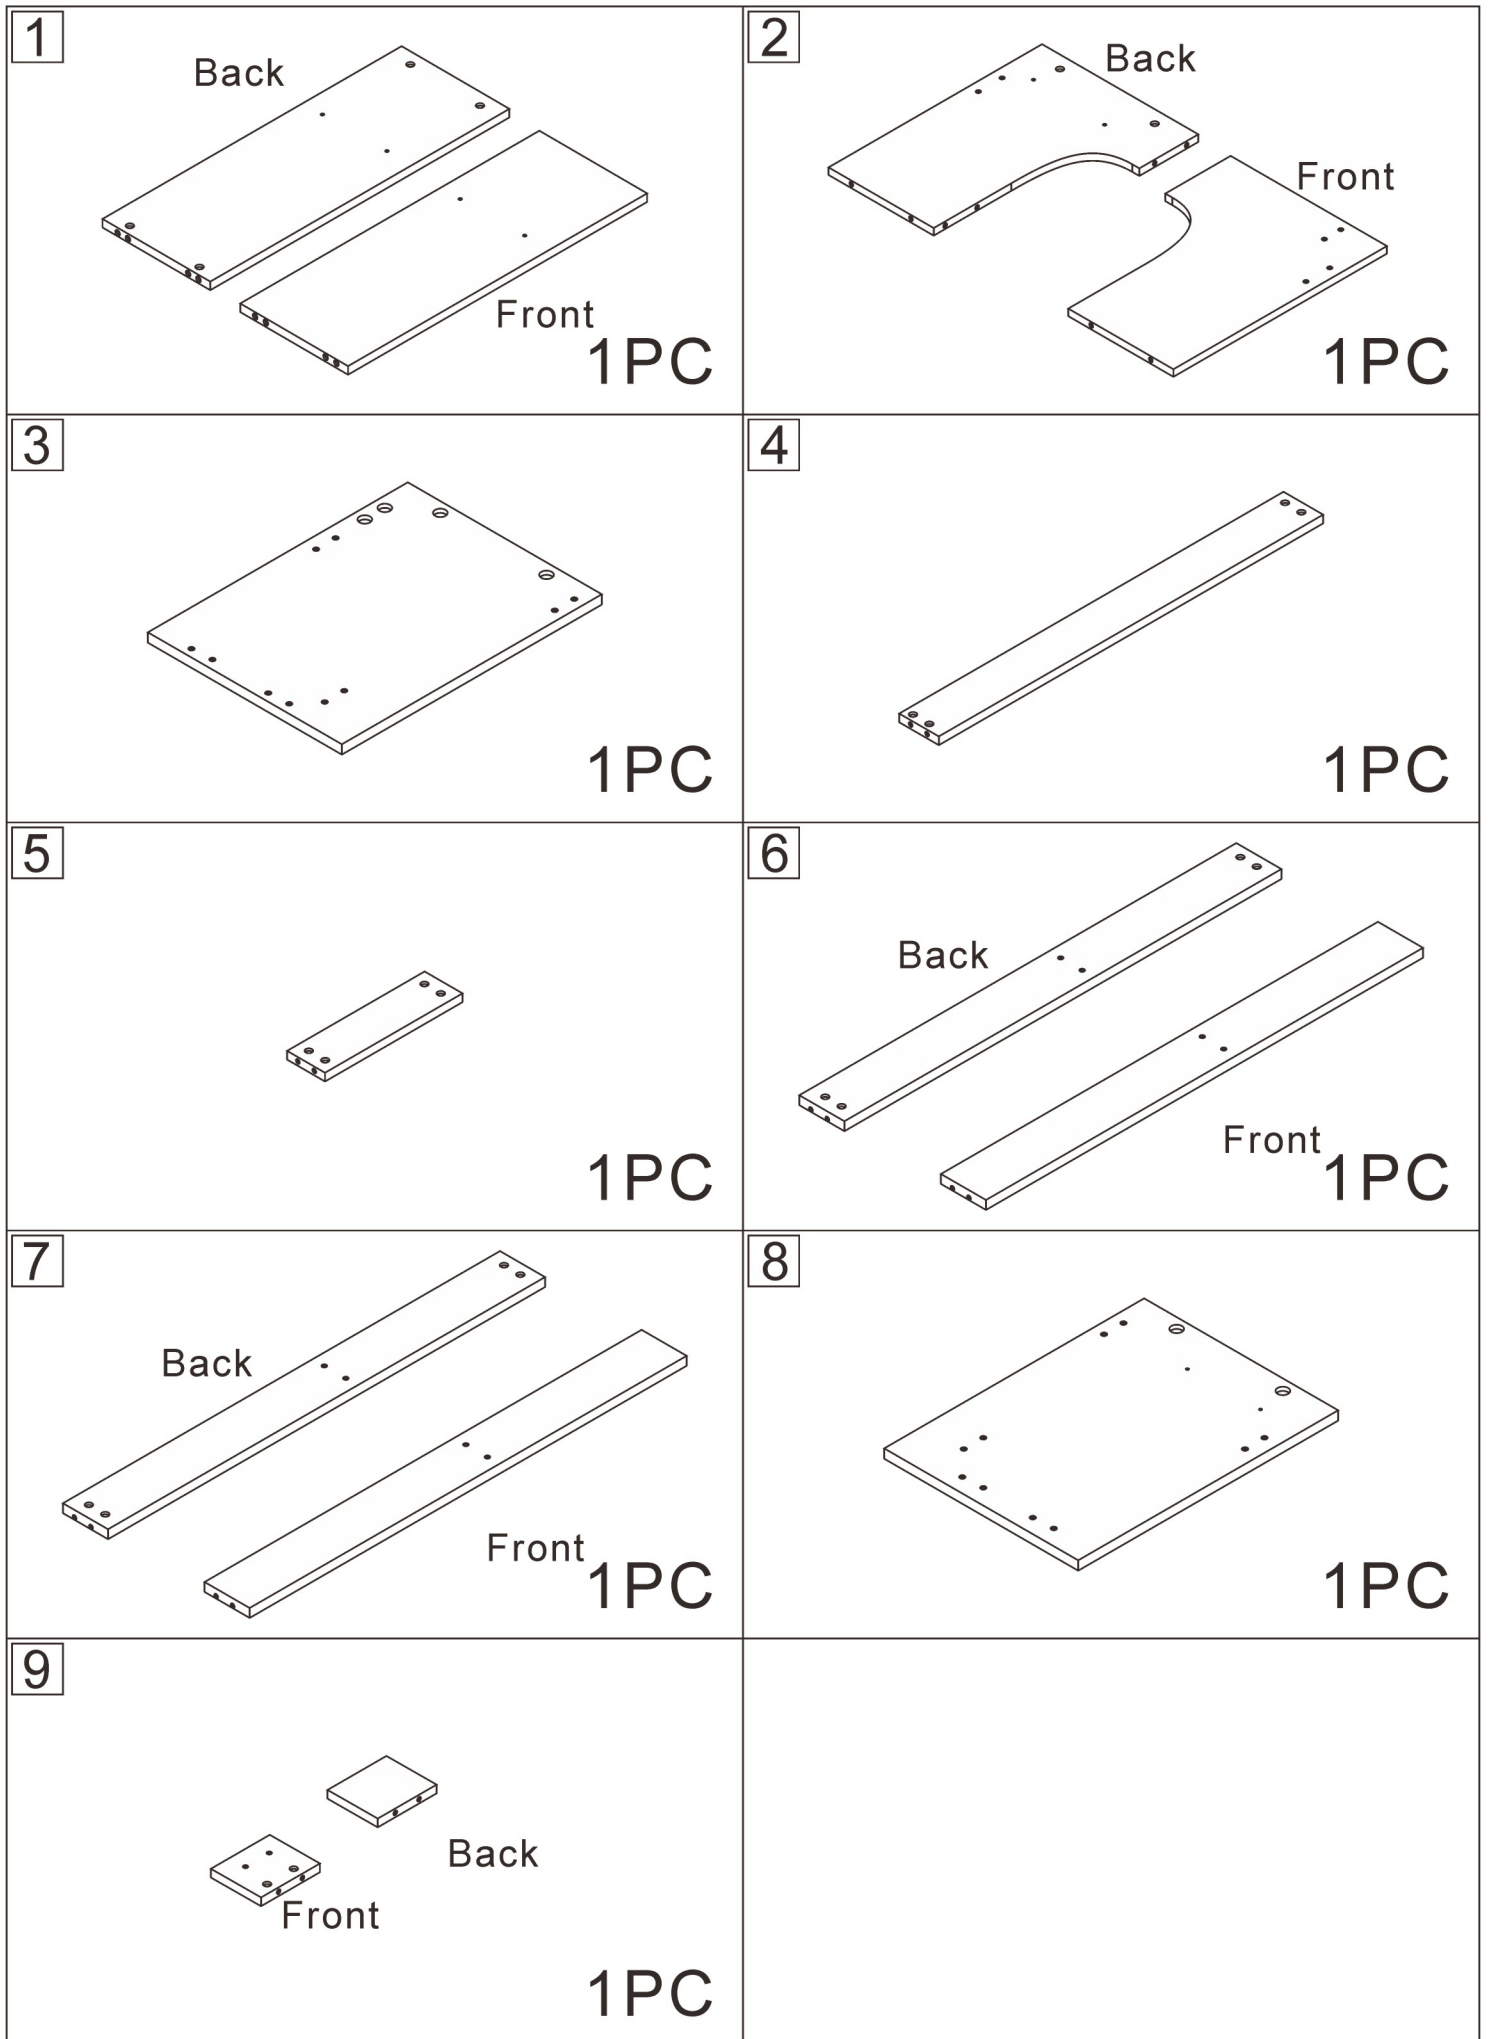


11

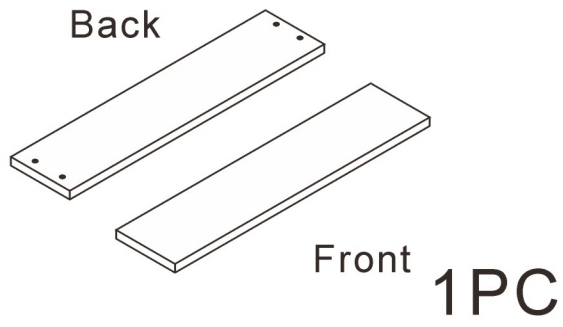


12

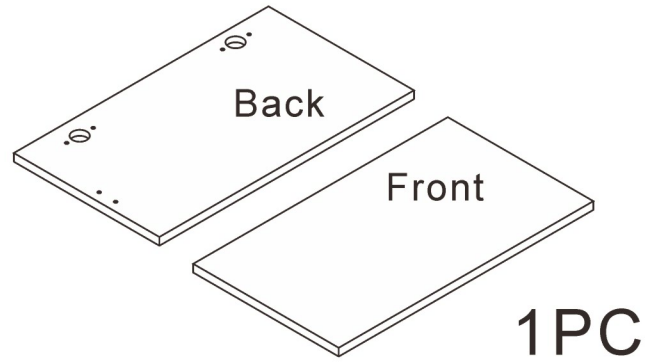


13

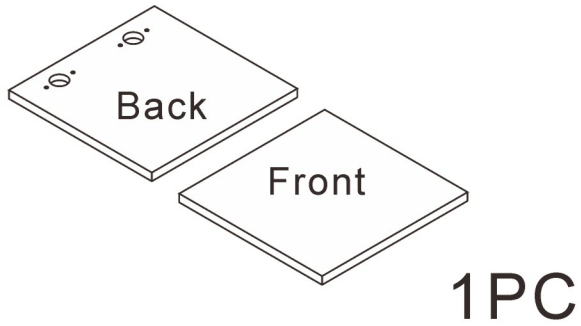


14

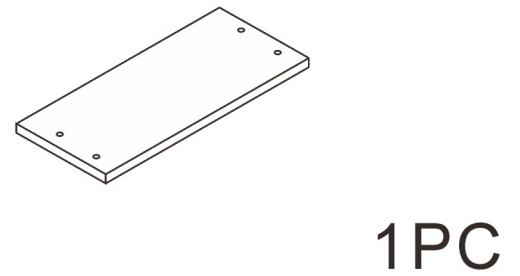


15

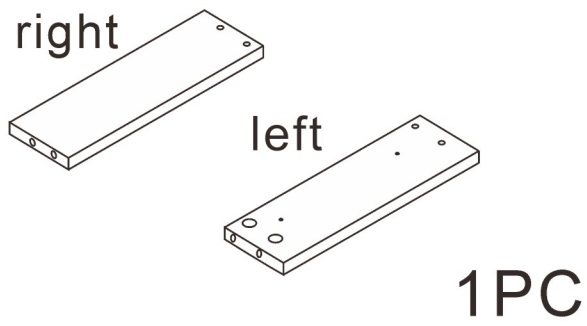


16

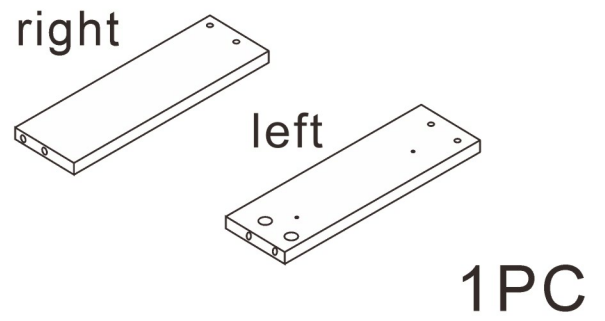









17

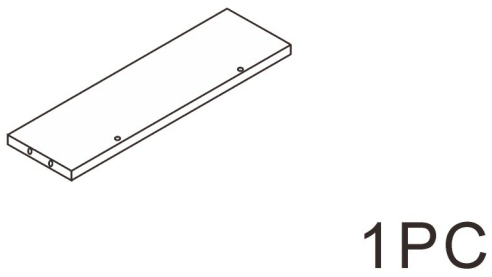

18

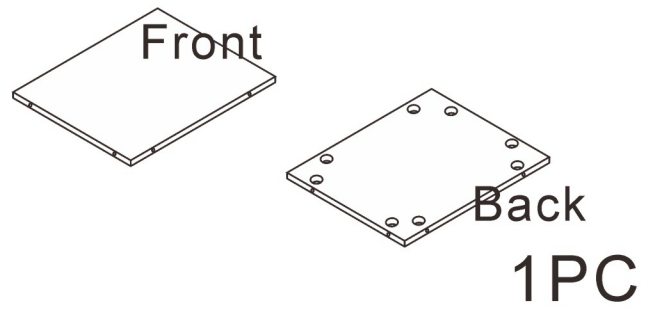


1

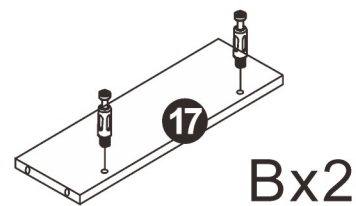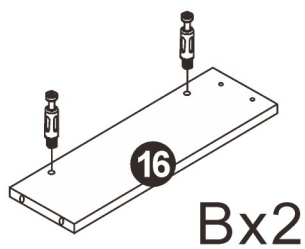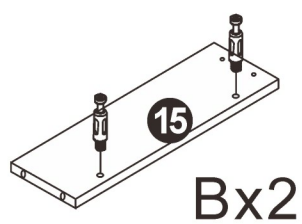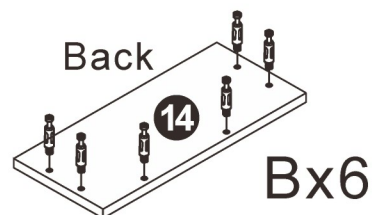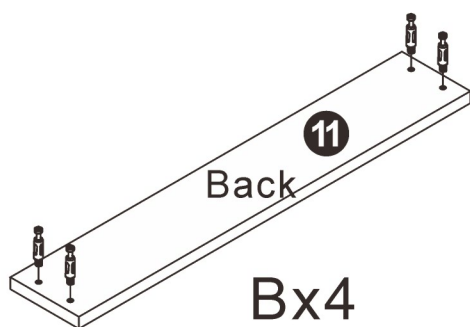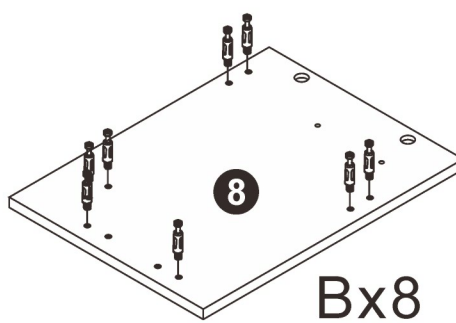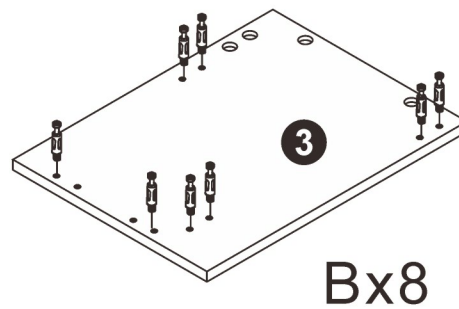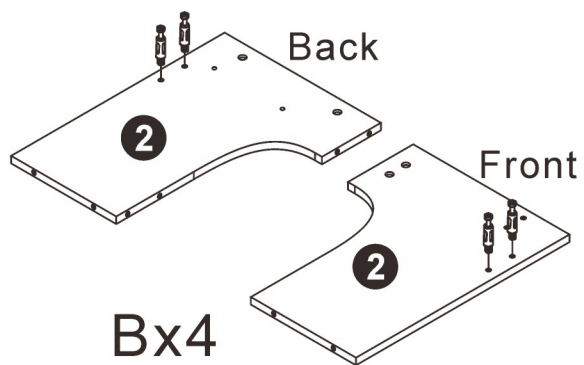


B	36PCS
	
6*28mm	

2

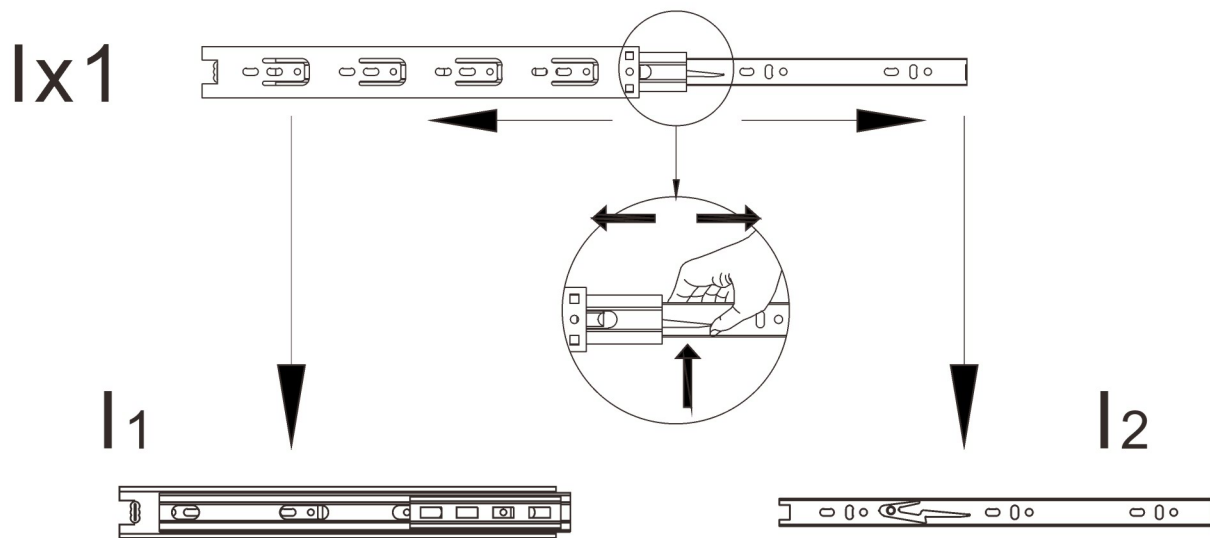

I ₁	2PCS
Three-section Rail	


3

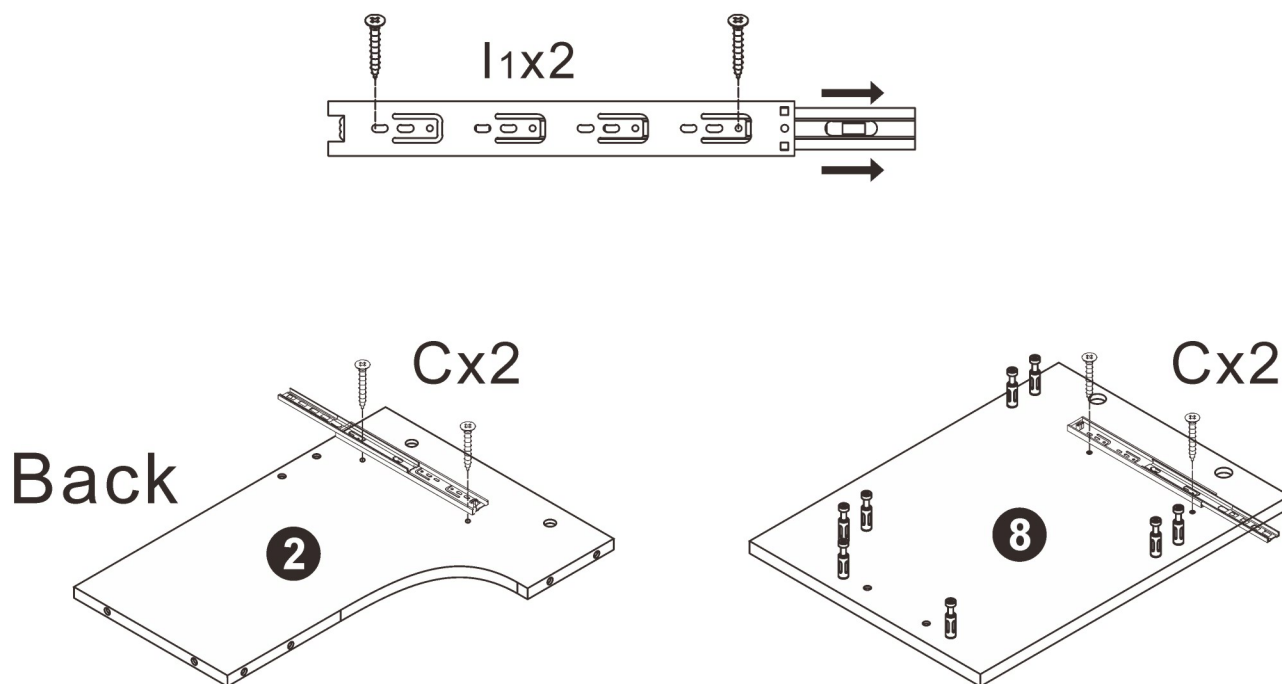

C	4PCS
3.5*14mm	


I ₁	2PCS
12 inch Three-section Rail	

4

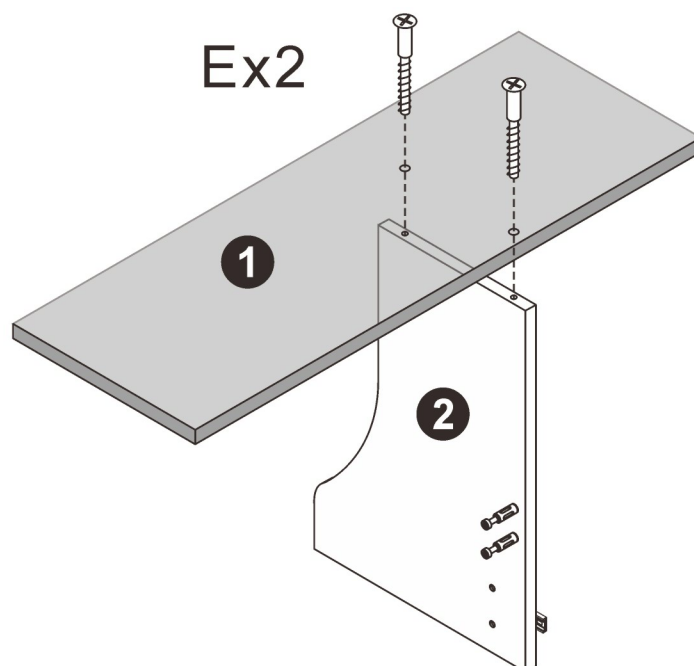


G	2PCS
	
7*38mm	

5

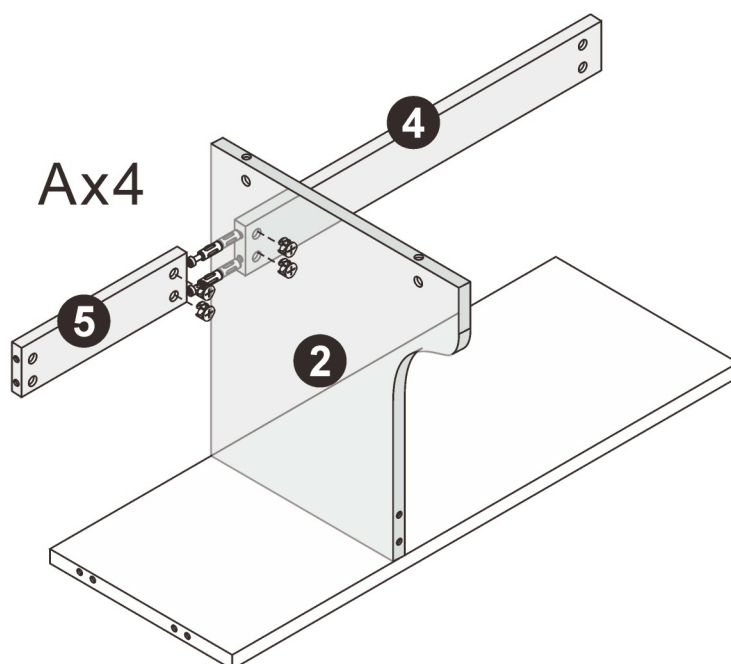


A	4PCS
	
15*10mm	

6

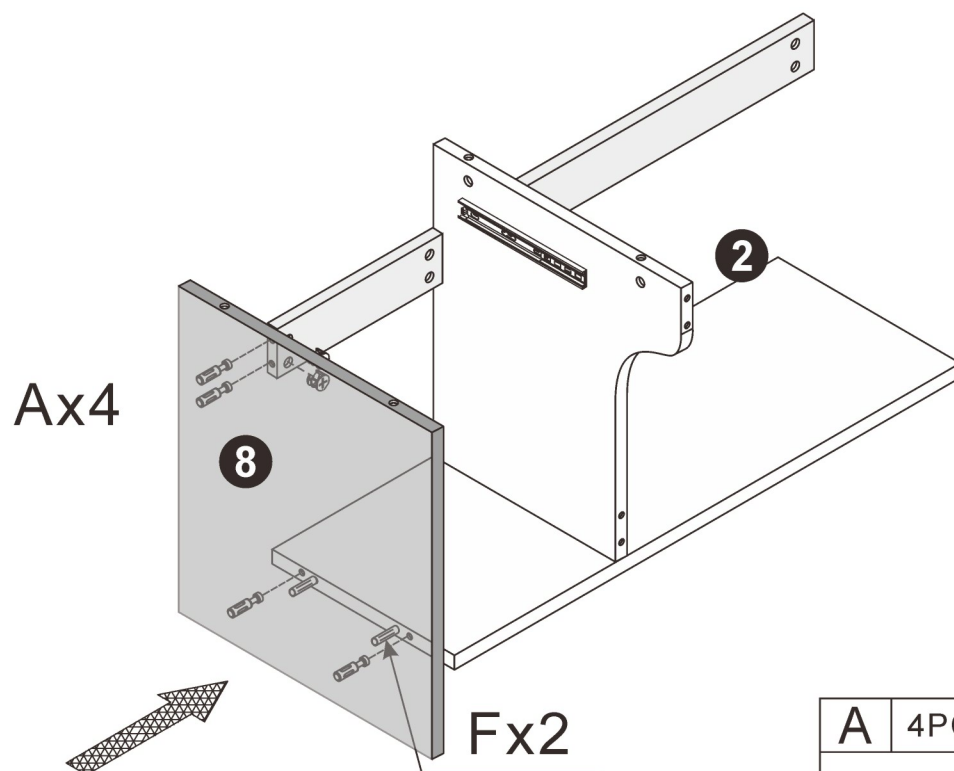


A	4PCS	F	2PCS
			
15*10mm		8*30mm	

7

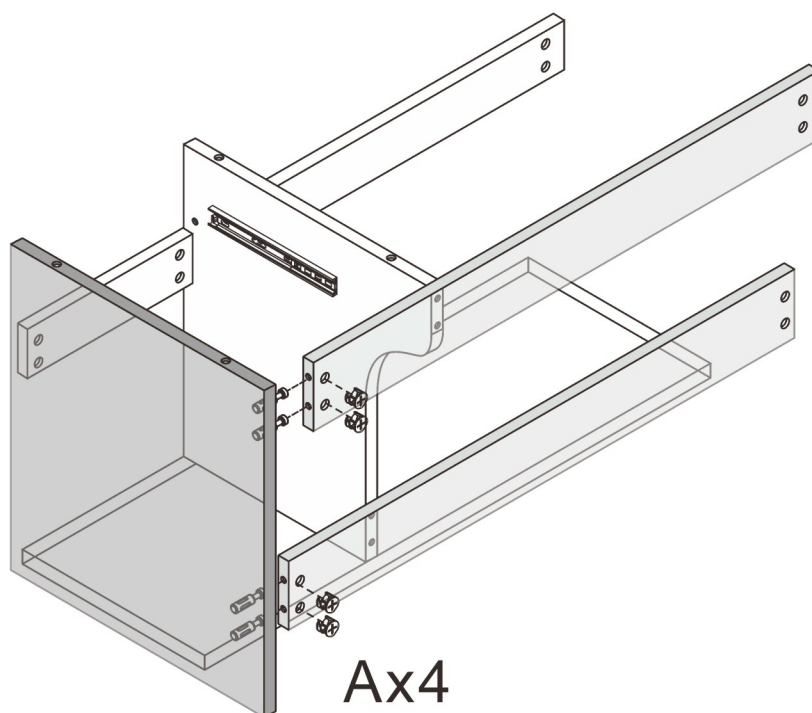

A	4PCS
	
15*10mm	

8

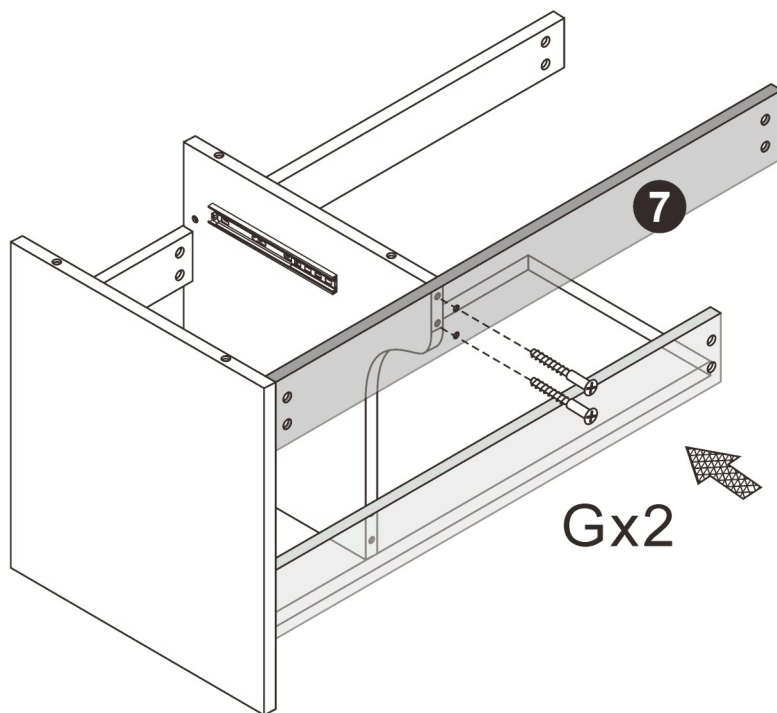


G 2PCS



7*38mm

9

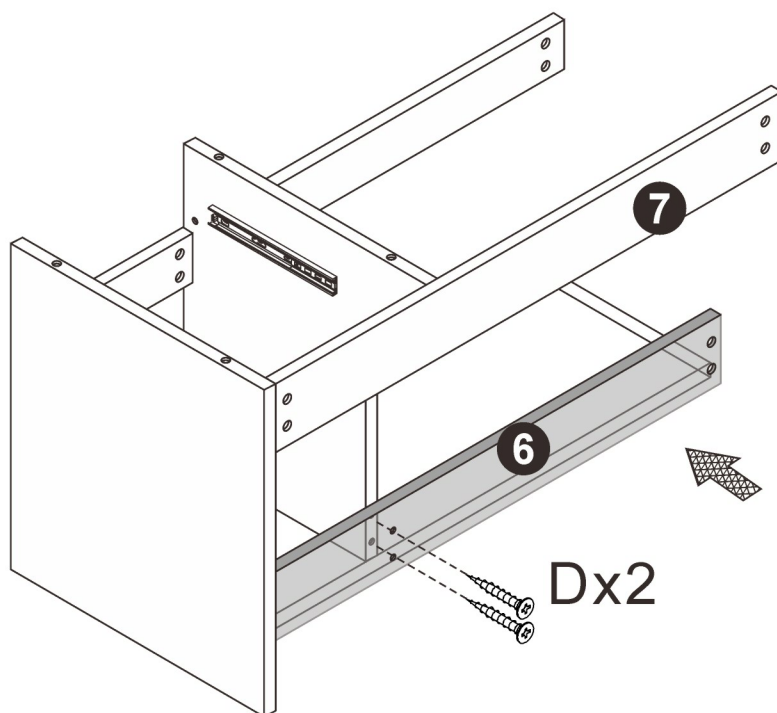


D 2PCS




3.5*30mm

10

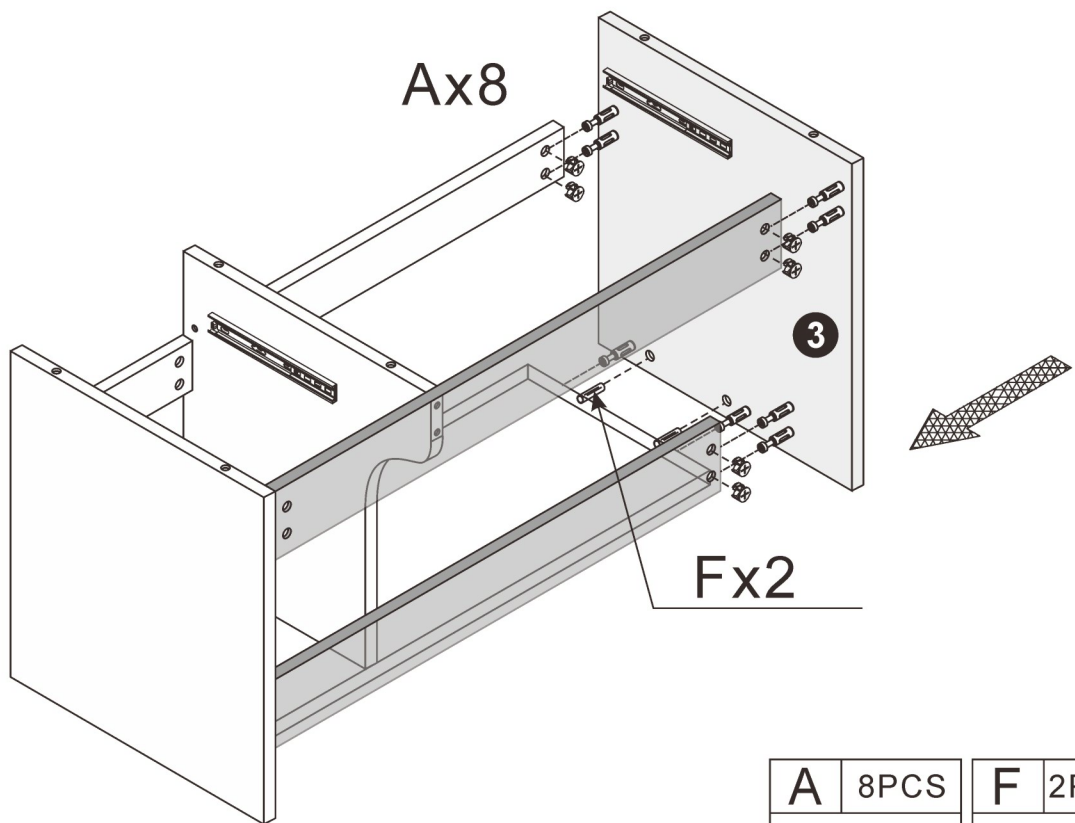


A	8PCS	F	2PCS
			
15*10mm		8*30mm	

11

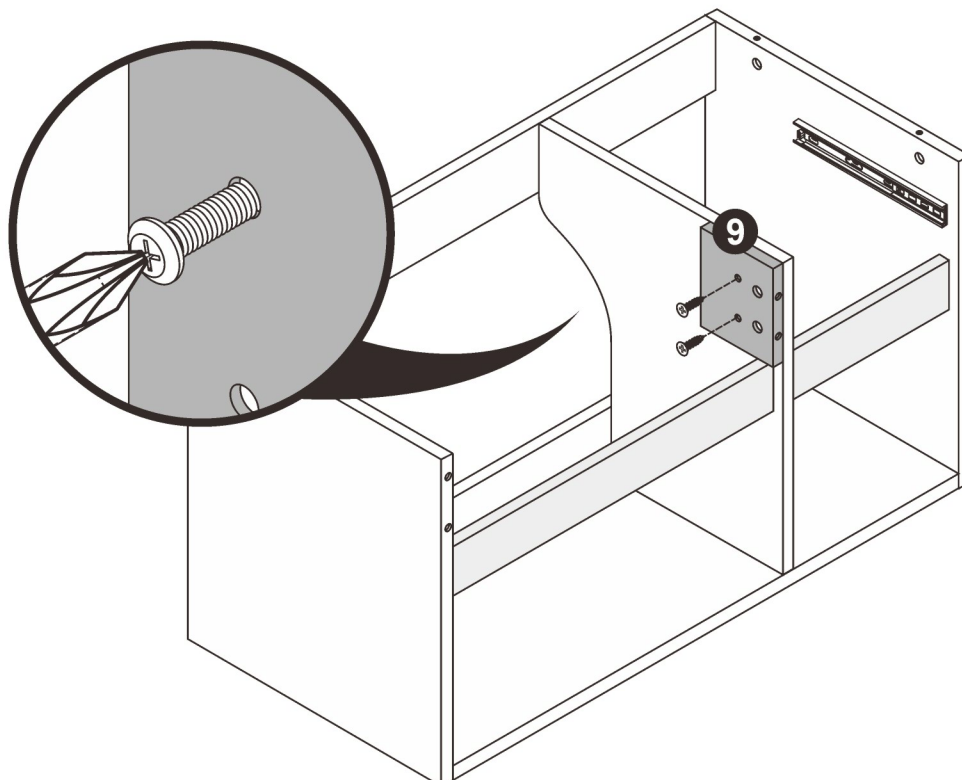

E	2PCS
	
6*25mm	



12

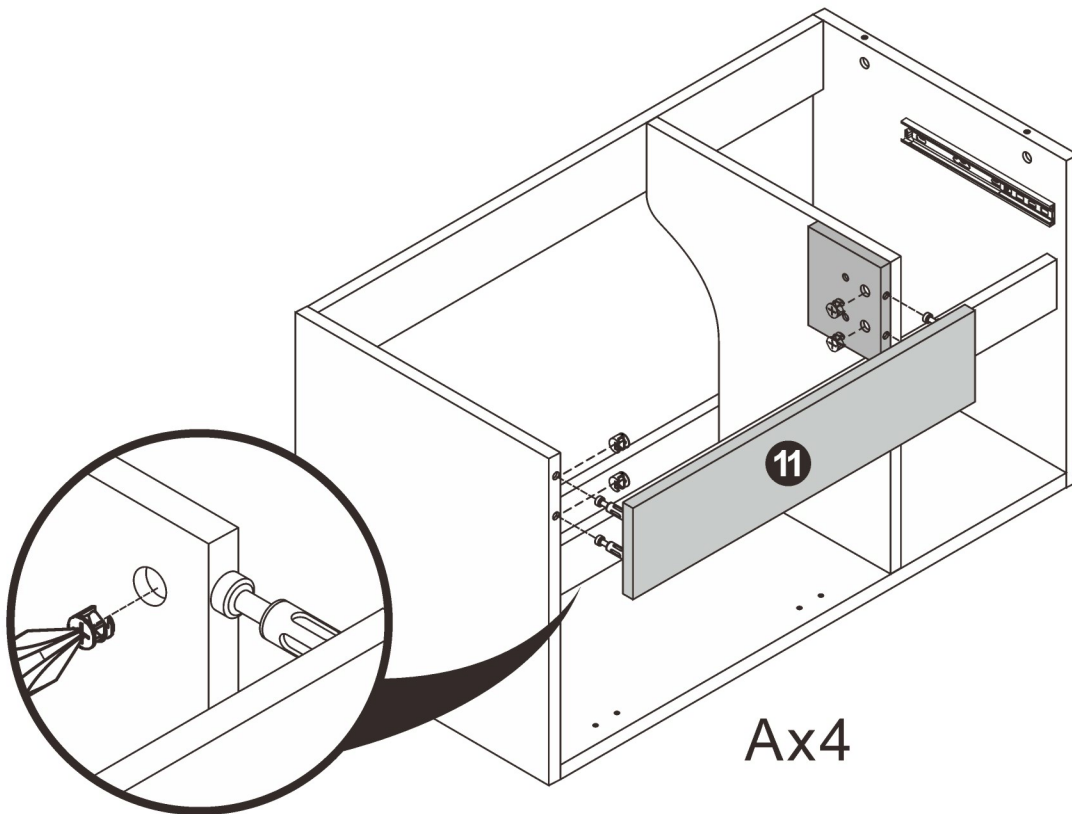


Ax4

A	4PCS
	
15*10mm	


13

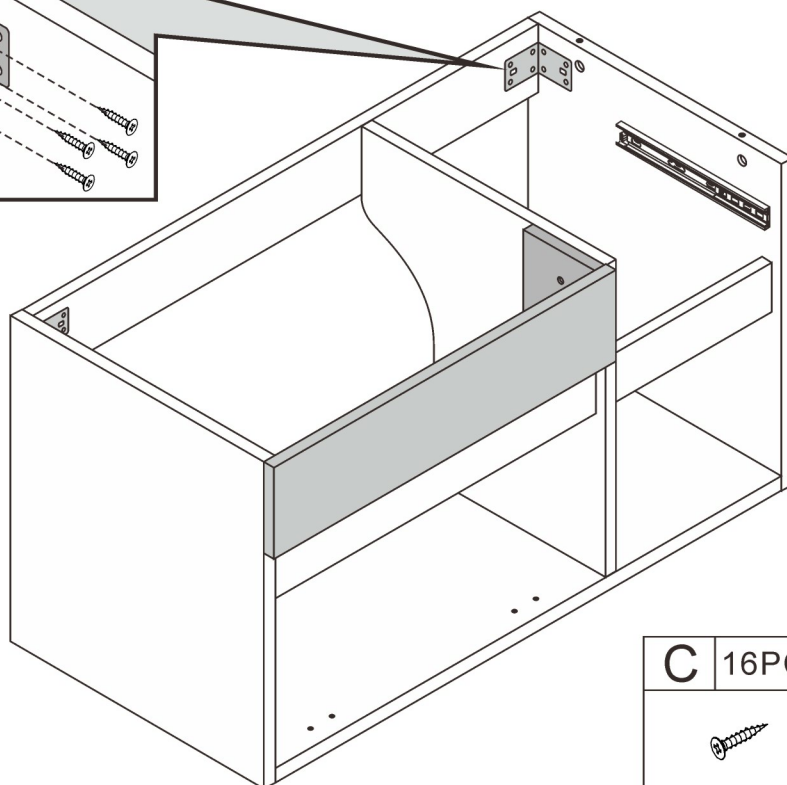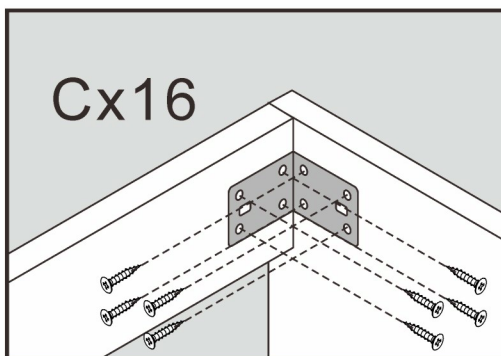

C	16PCS	L	2PCS
			
3.5*14mm		Corner code	

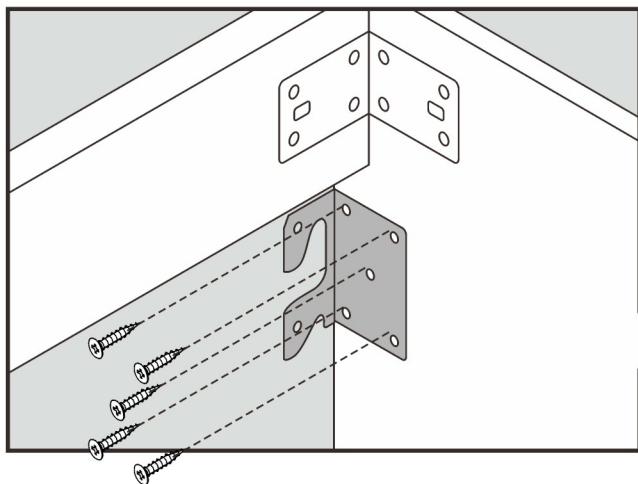


Cx10

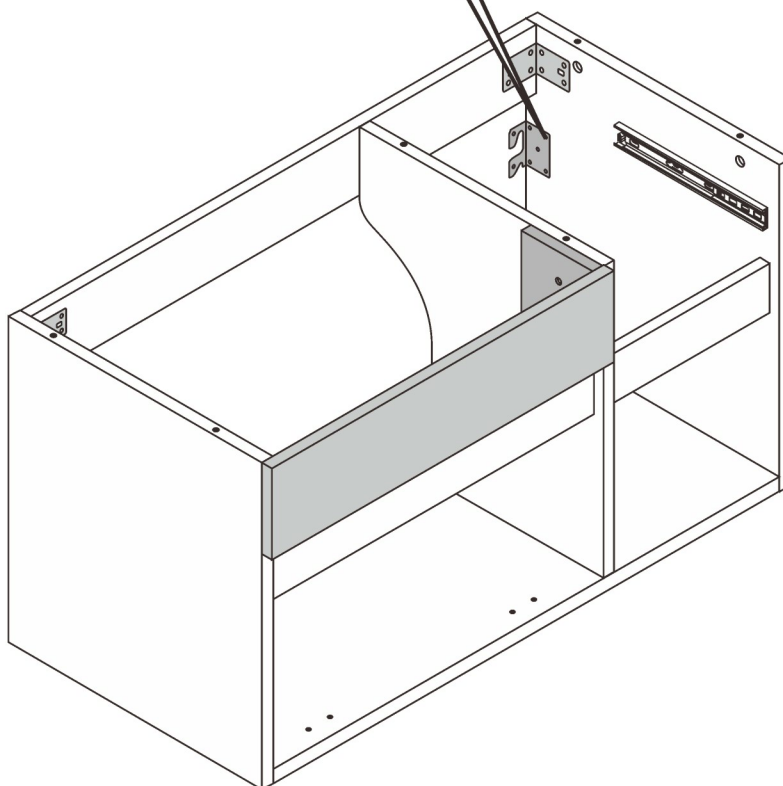


C	10PCS	M	2PCS
			
3.5*14mm		Pendant	

15

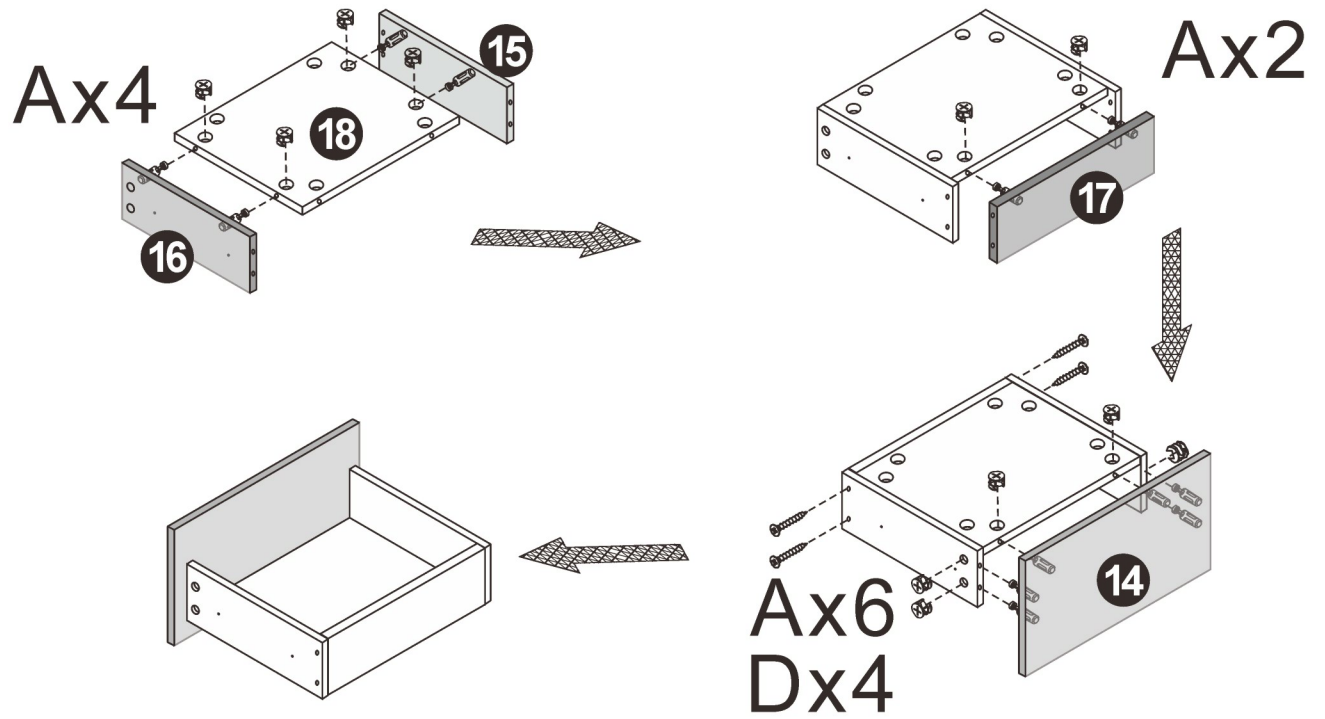





A	12PCS	D	4PCS
			
15*10mm		3.5*30mm	


16

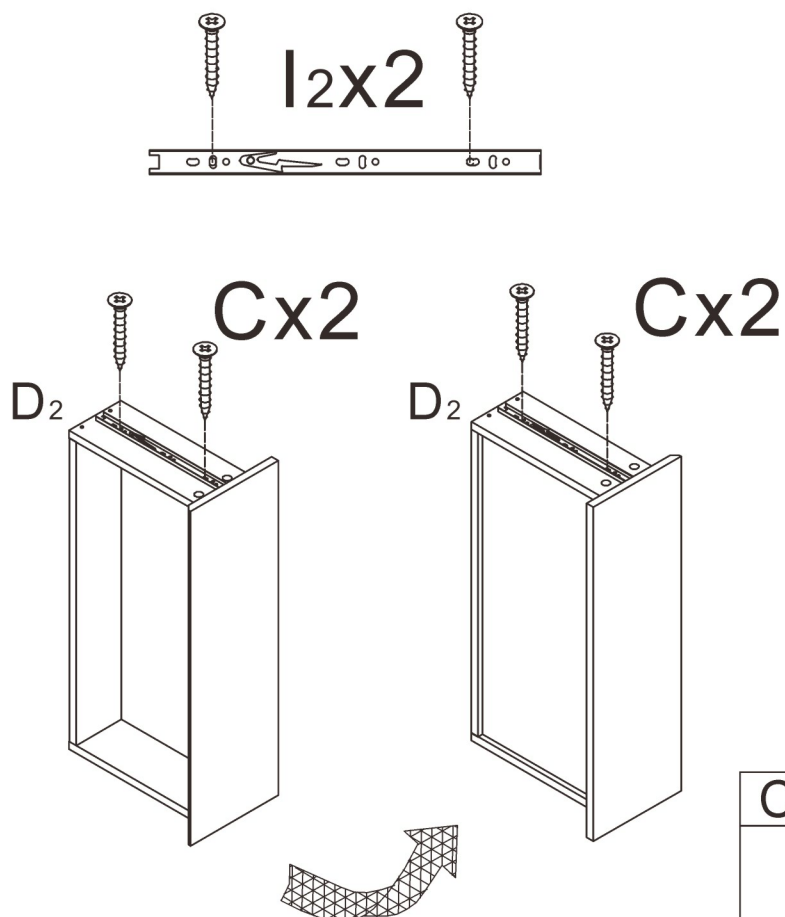

C	4PCS	I	2PCS
			
3.5*14mm		Three-section Rail	

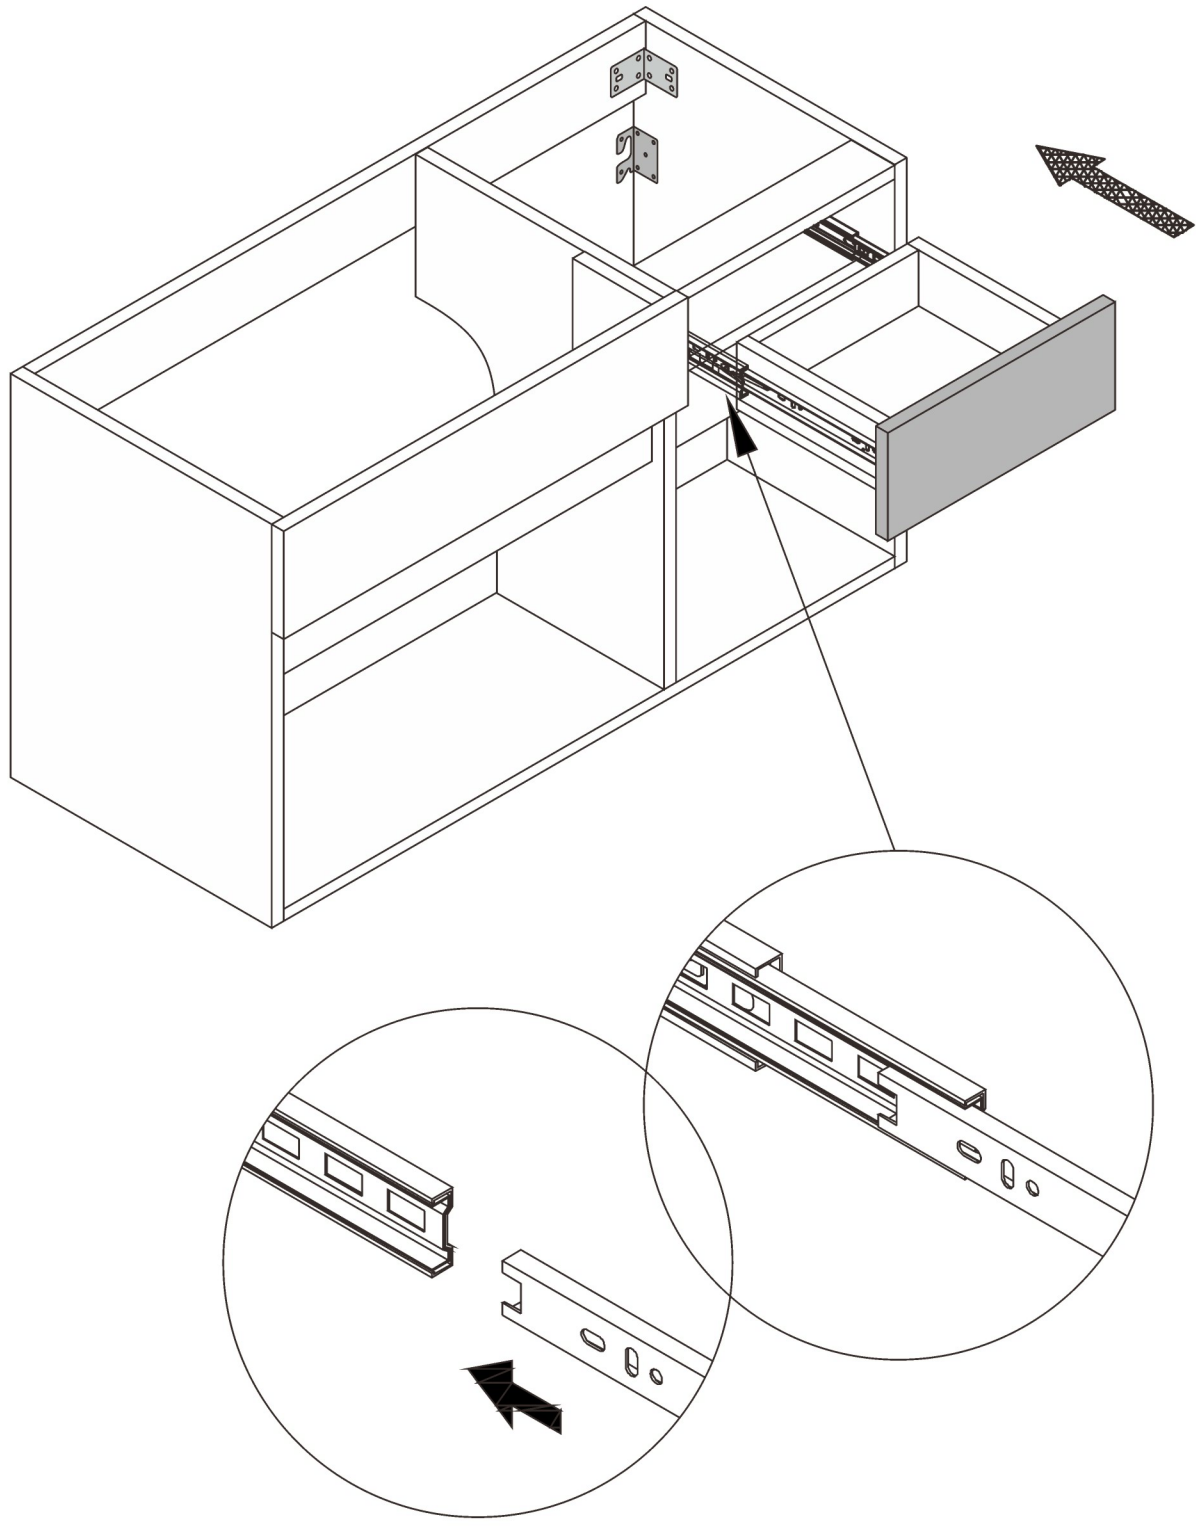

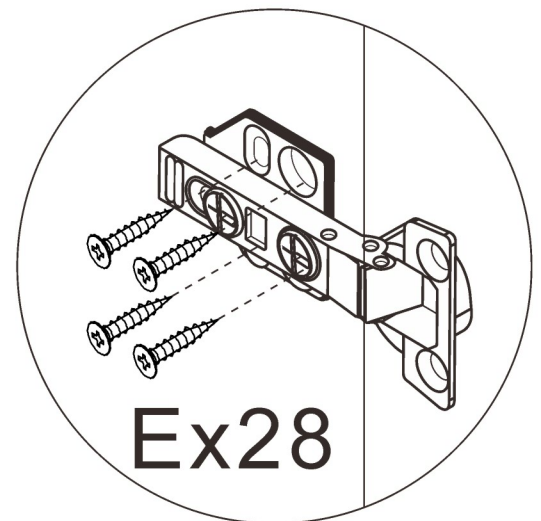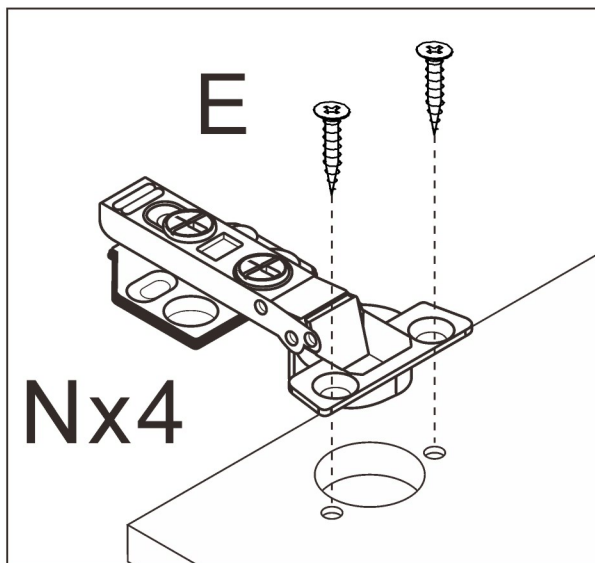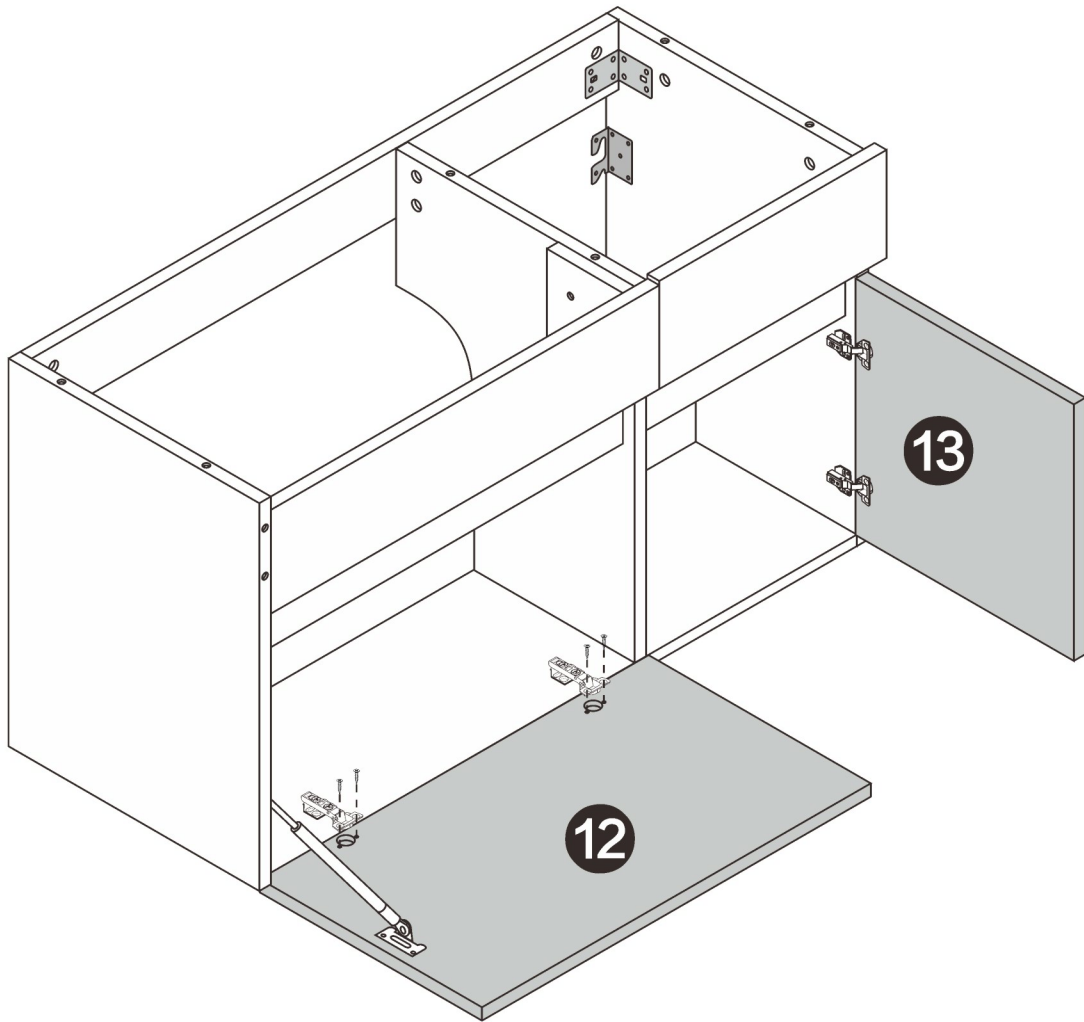



C	28PCS	N	4PCS	H	1PCS
					
3.5*14mm		Hinge		Pneumatic rod	

SPECIAL TIPS FOR DOOR ALIGNMENT


CONSEJOS ESPECIALES PARA LA ALINEACIÓN DE PUERTAS

CONSEILS SPÉCIAUX POUR L'ALIGNEMENT DES PORTES





- A. Lateral adjustment (Moving door left-right) by screw adjusting
 Ajuste lateral (Puerta móvil de izquierda a derecha) mediante tornillo de ajuste
 Réglage latéral (porte mobile gauche-droite) par réglage à vis

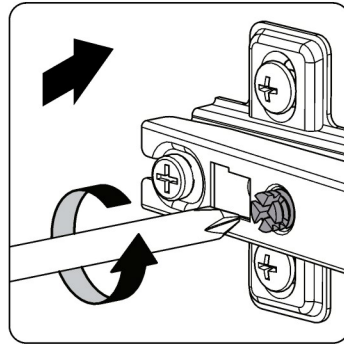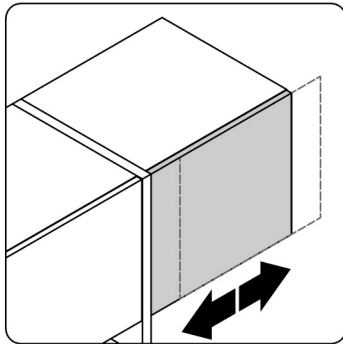





OR

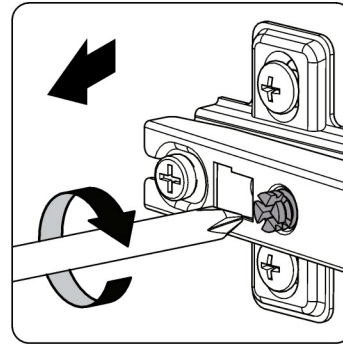


- B. Vertical adjustment (Moving door up-down) via the slot on the mounting plate
 Ajuste vertical (Puerta móvil arriba-abajo) a través de la ranura en la placa de montaje
 Réglage vertical (porte mobile de haut en bas) via la fente sur la plaque de montage

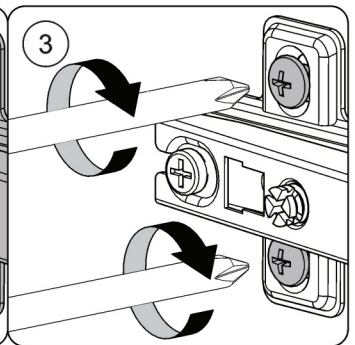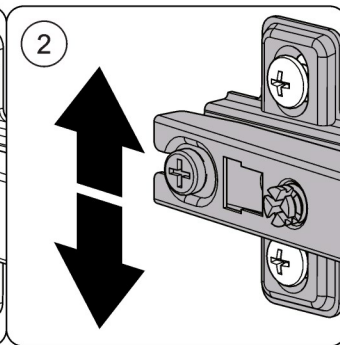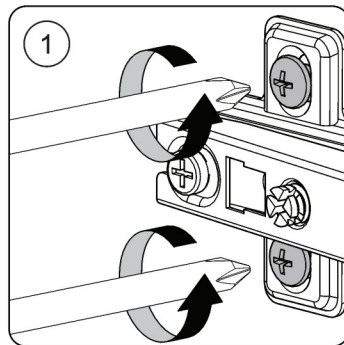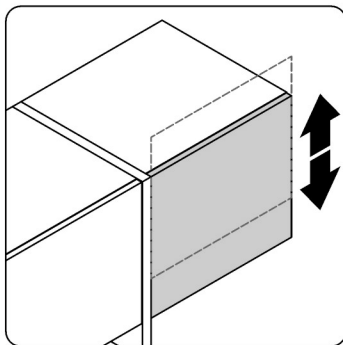


- C. Front-to-back adjustment (Spacing Door Off Cabinet) by slacking the hinge arm mounting screw
 Ajuste de adelante hacia atrás (espaciado entre la puerta y el gabinete) aflojando el tornillo de montaje del brazo de la bisagra
 Ajustement d'avant en arrière (espacement de la porte hors de l'armoire) en desserrant la vis de montage du bras de charnière

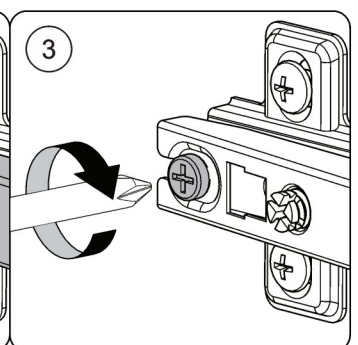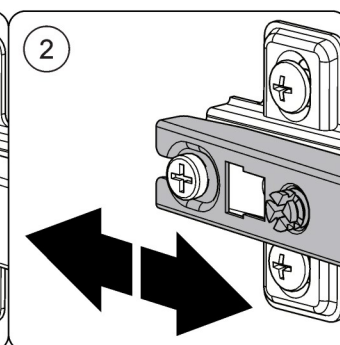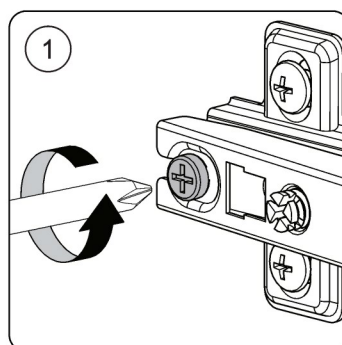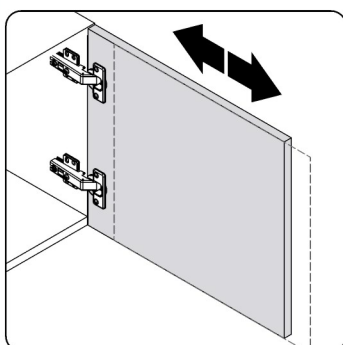

19

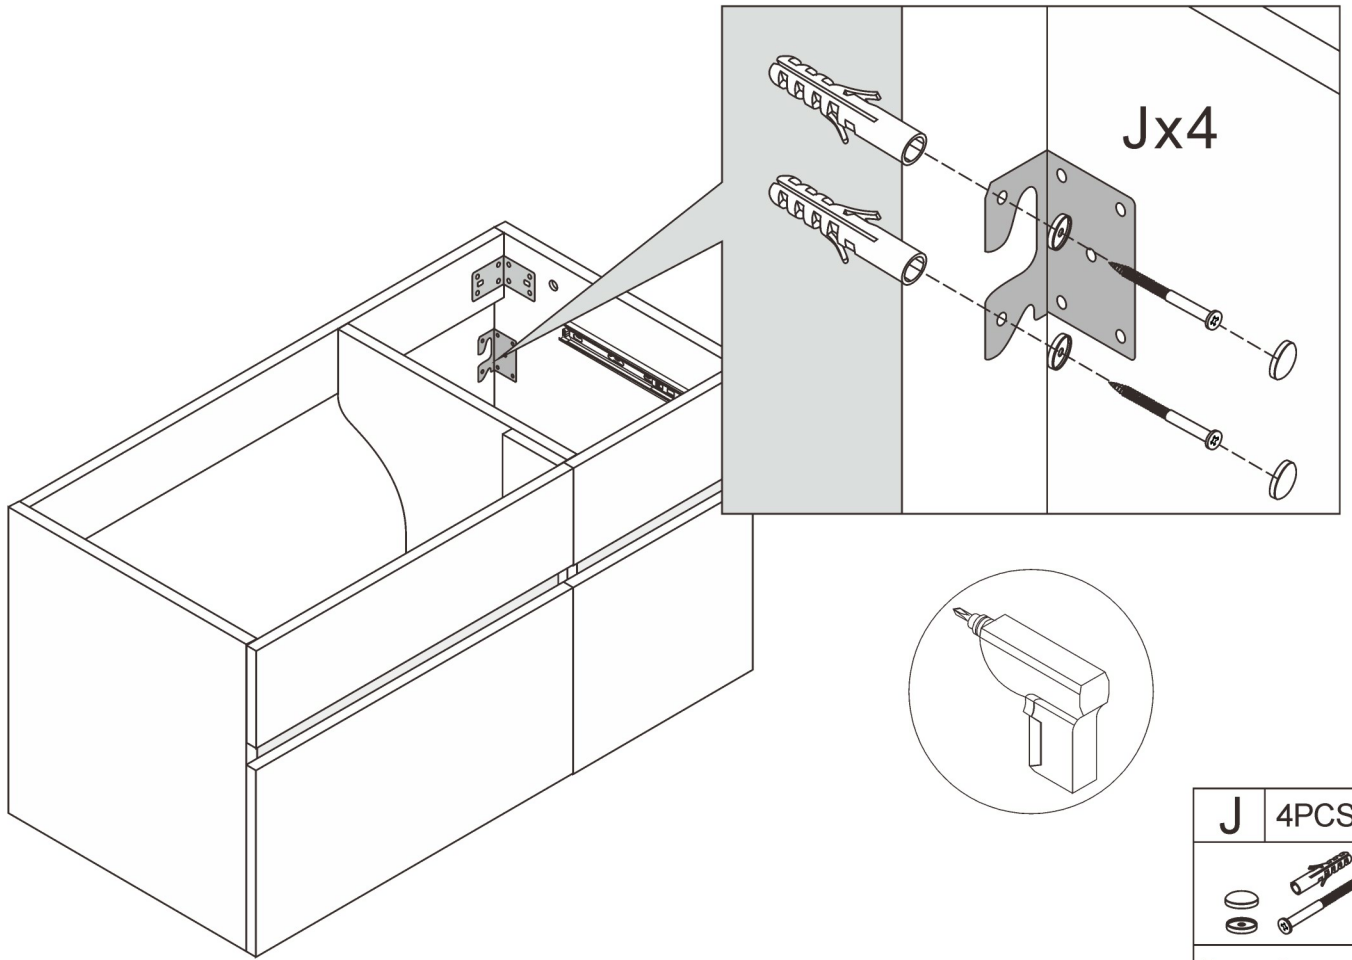

20

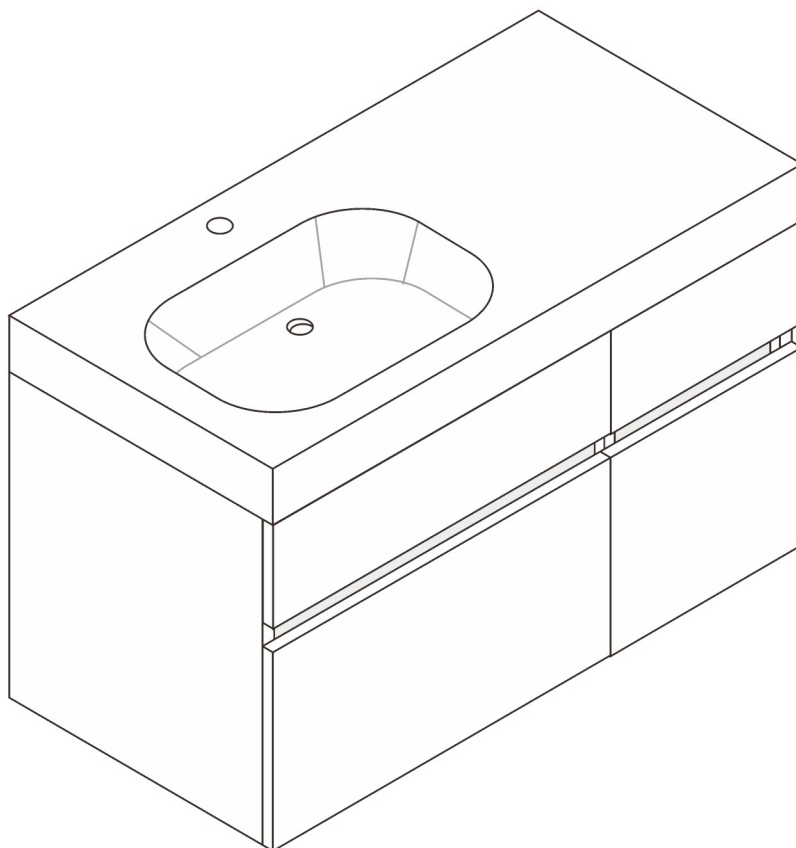

OK