




84034 Product Installation Instructions

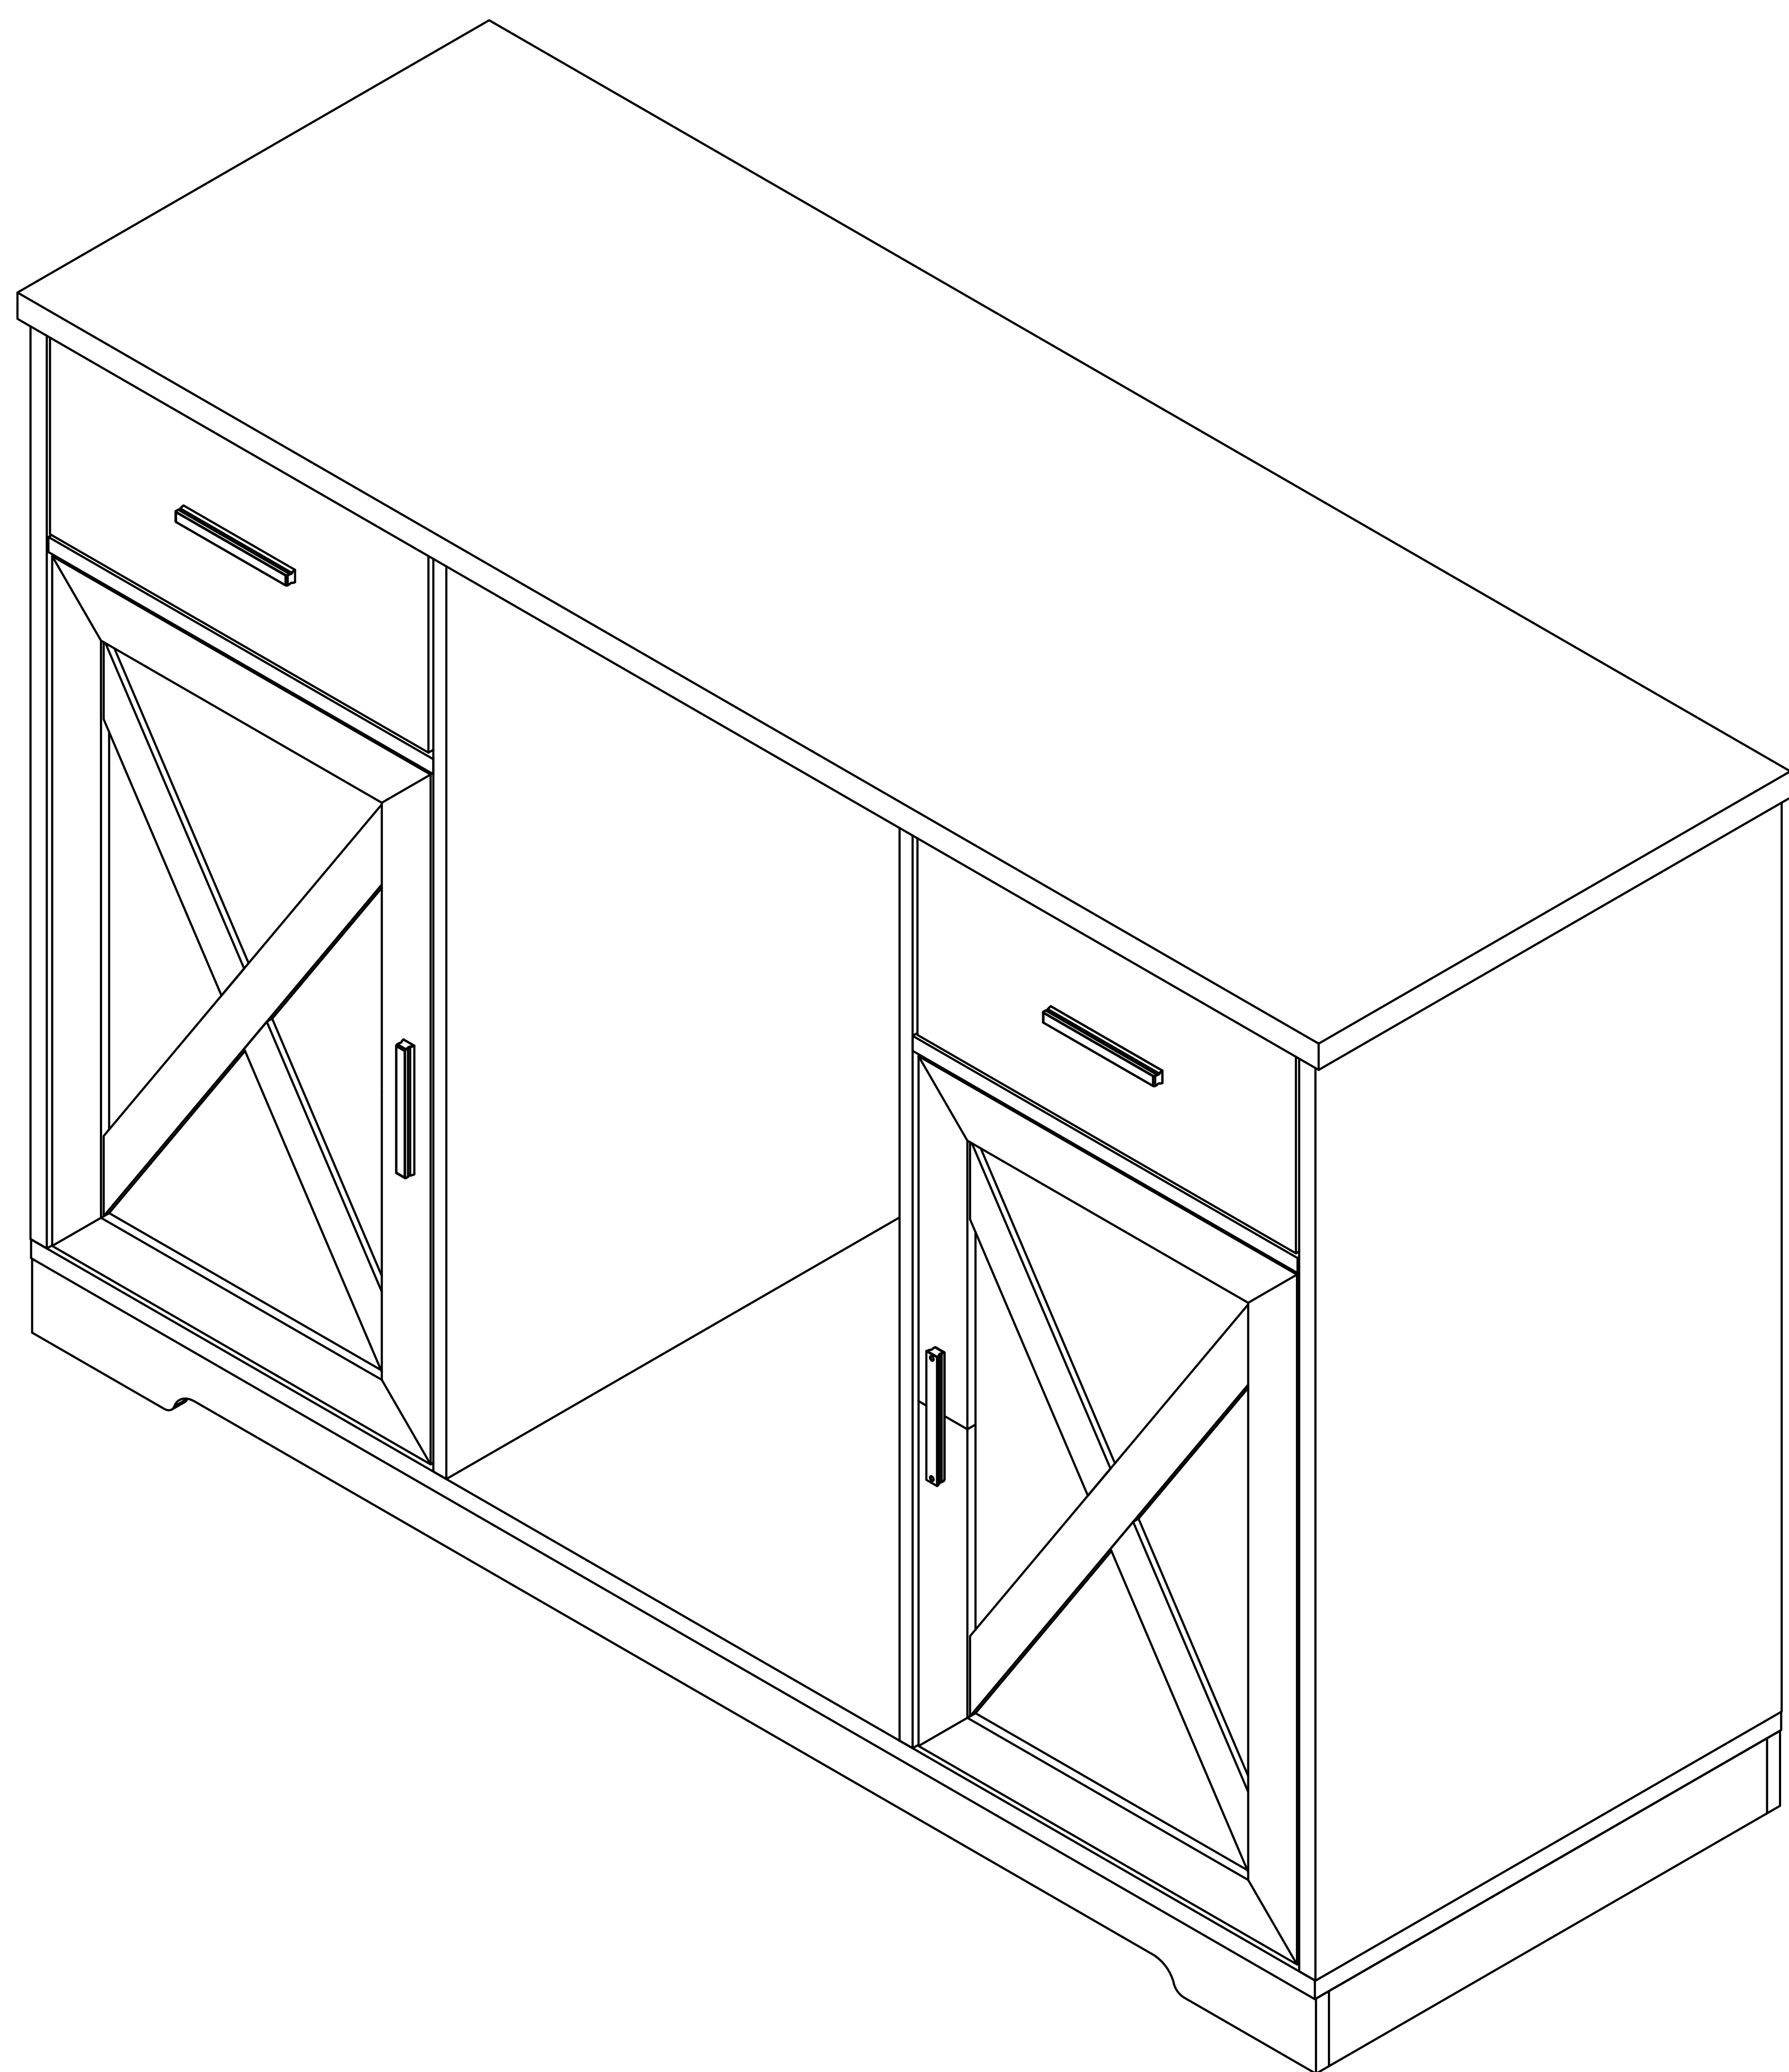


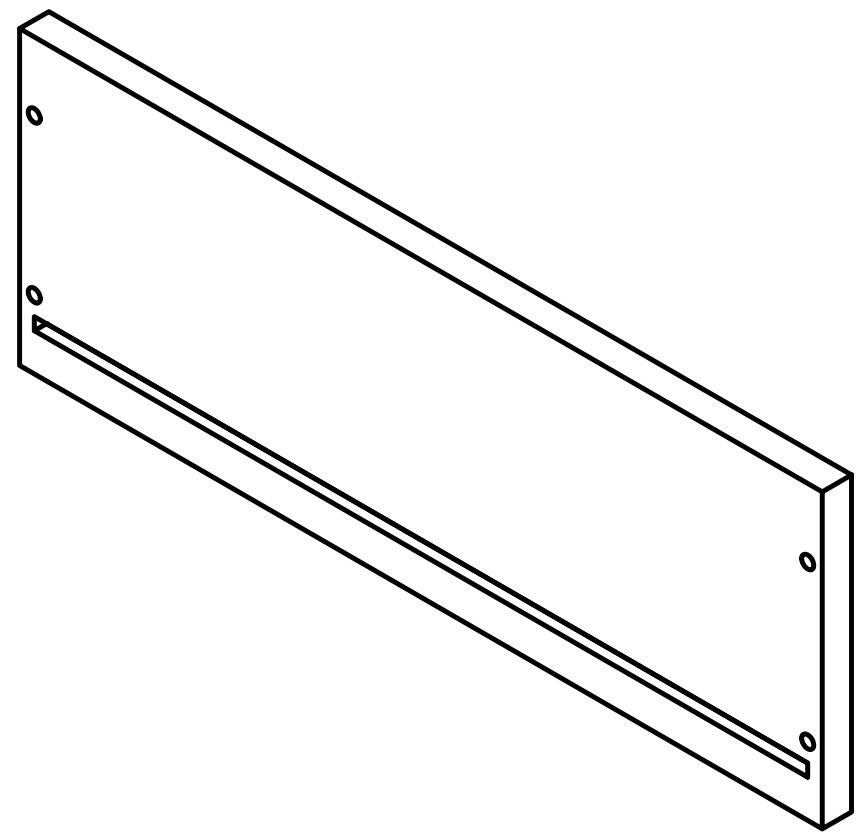


A x2

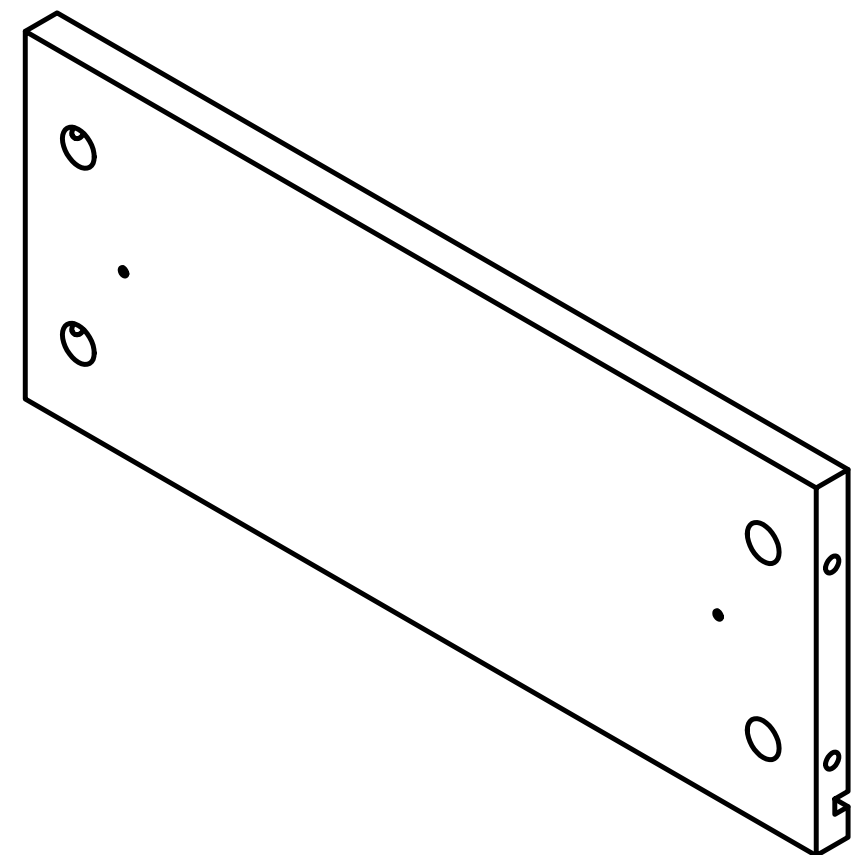


B x4

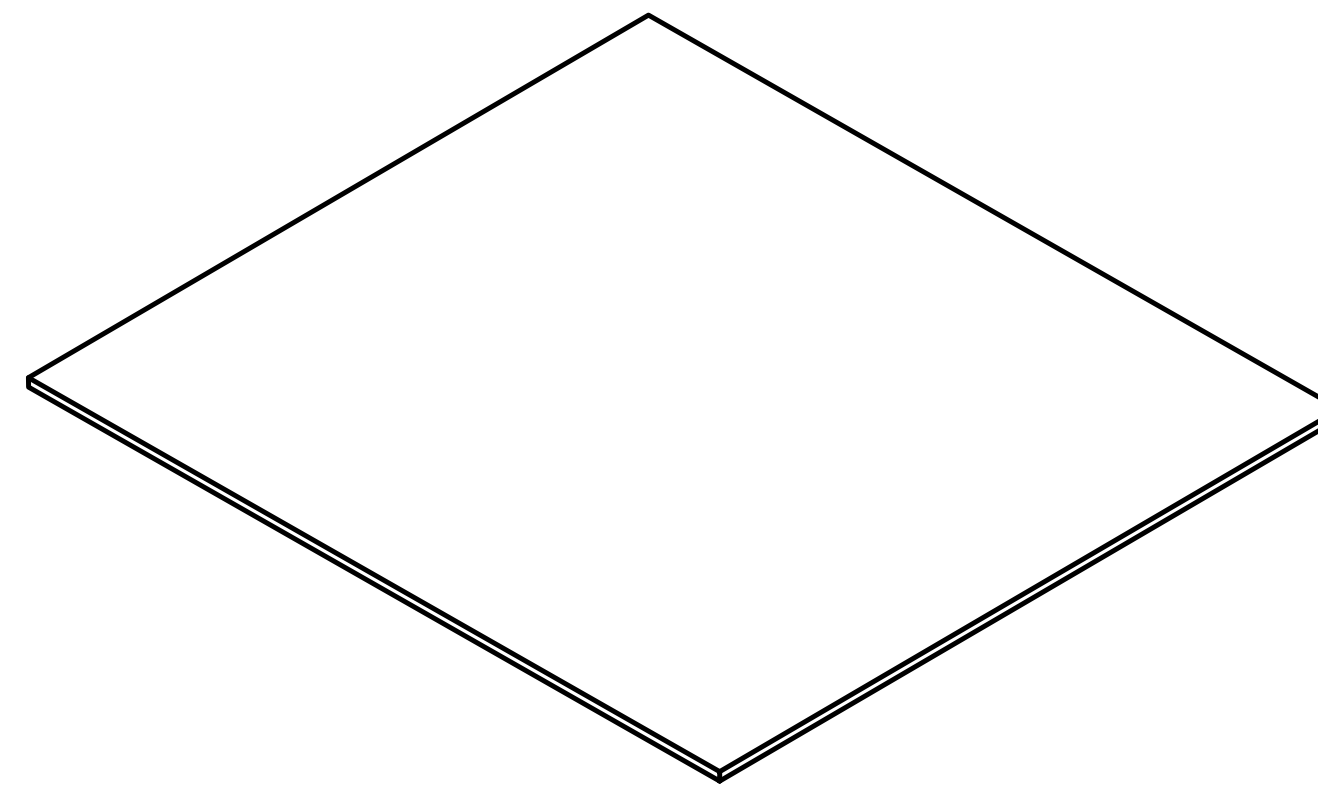


C x2

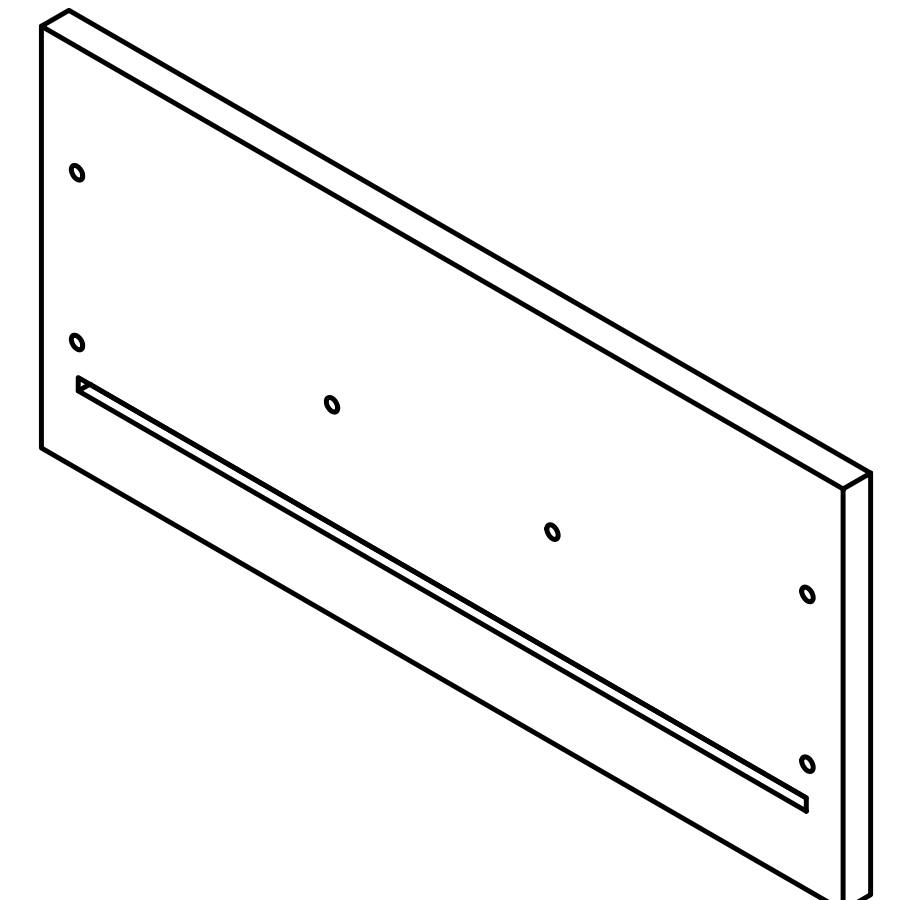


D x2

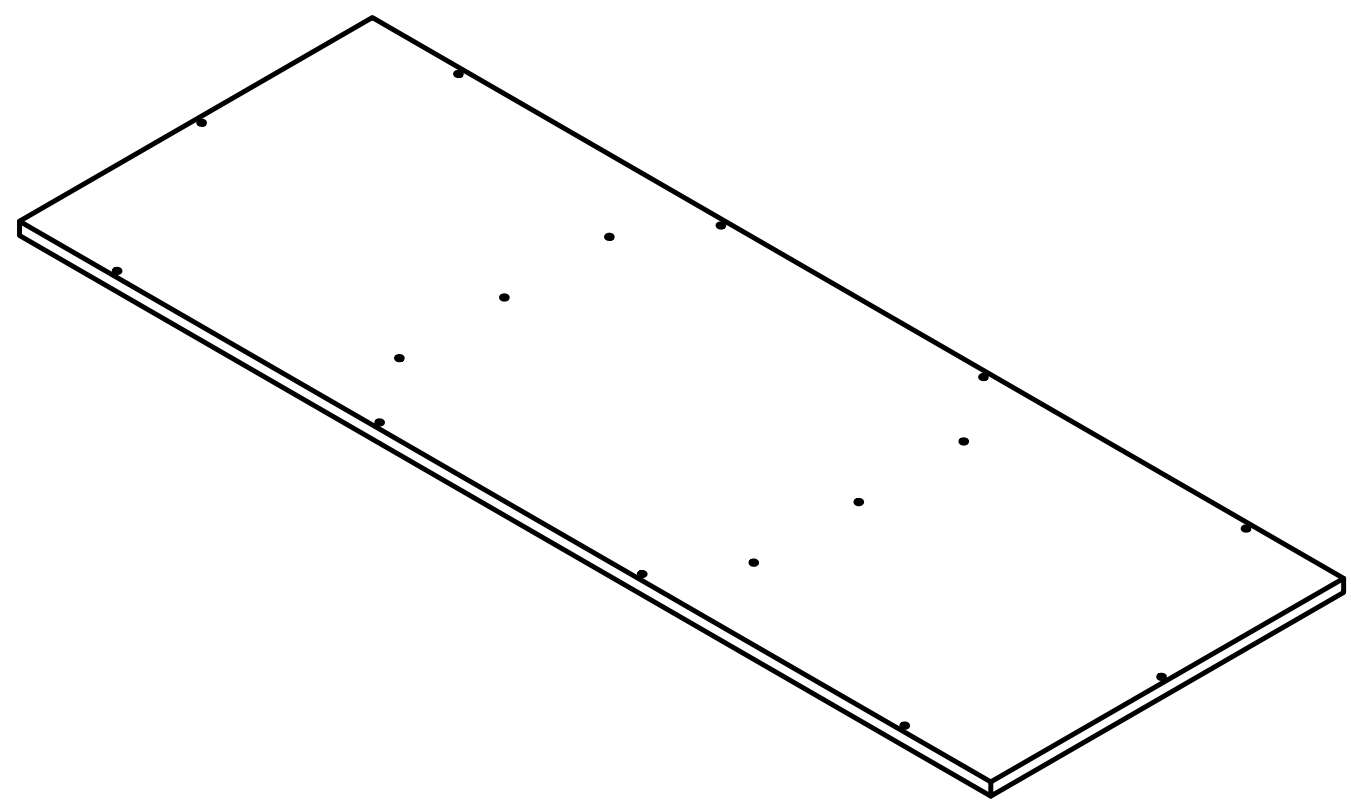


E x1

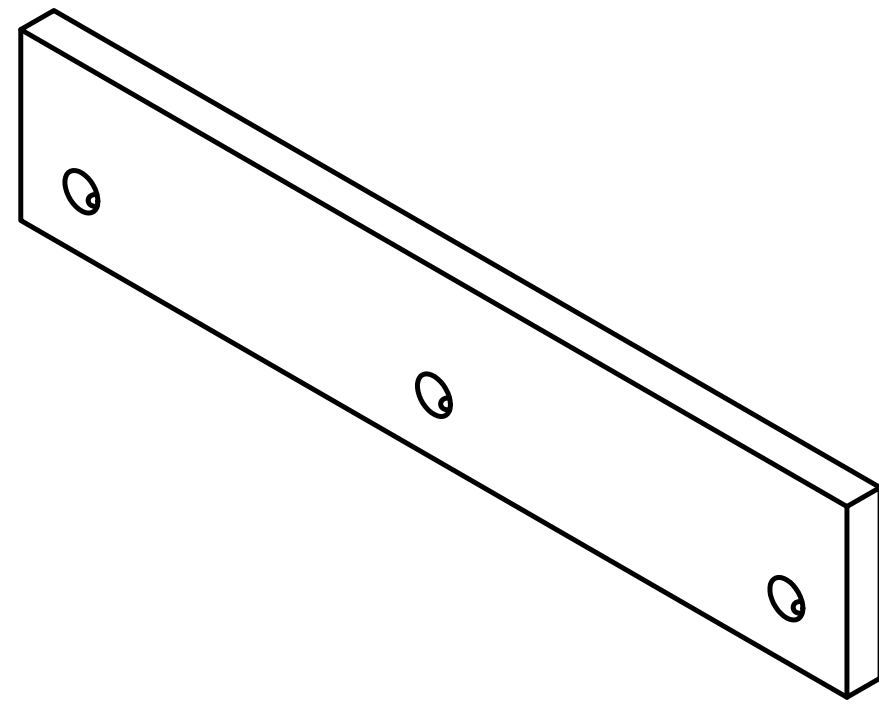


F x2

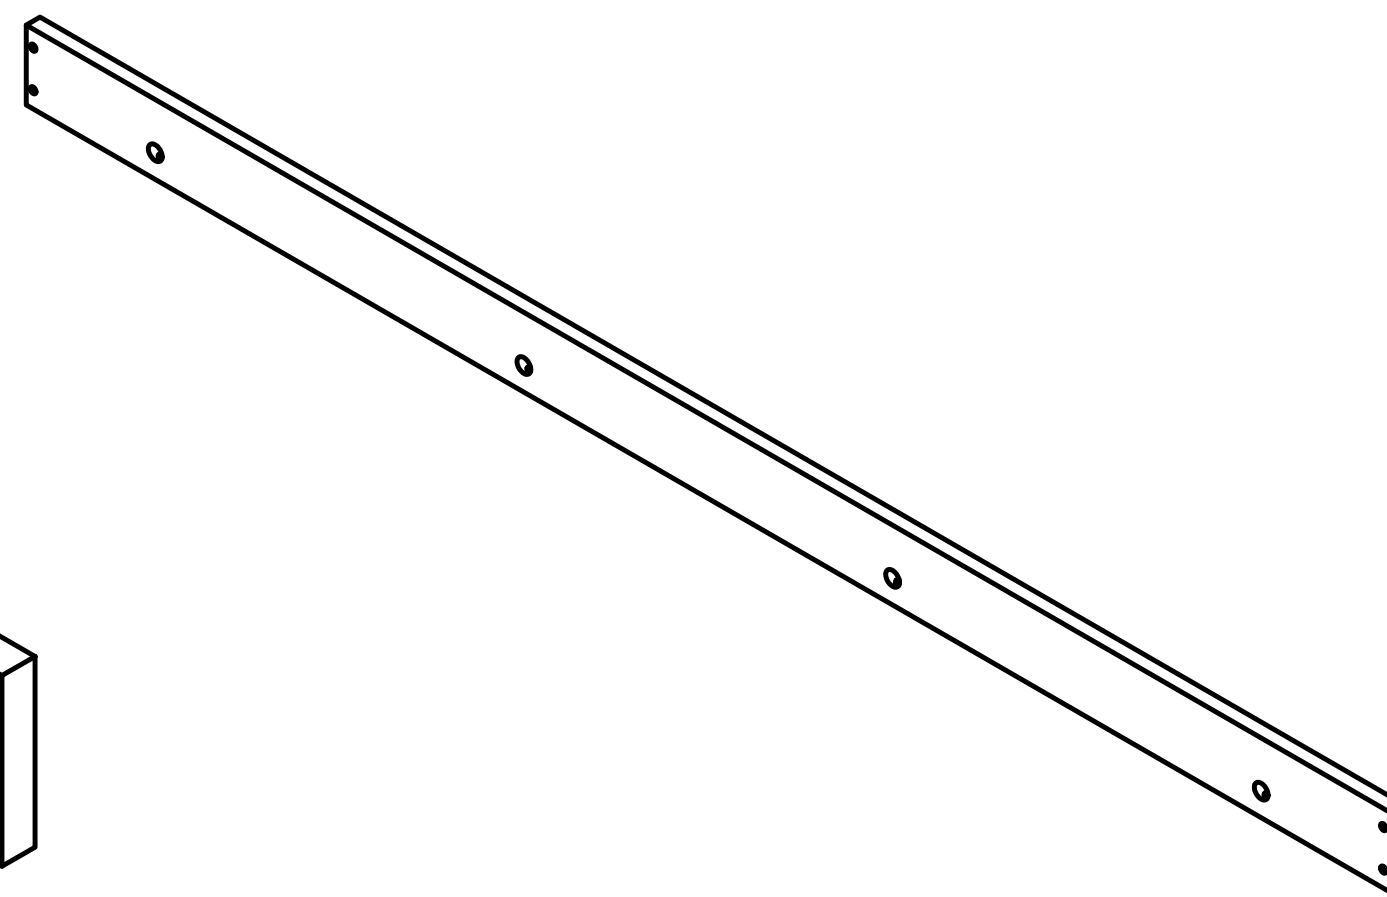


G x1

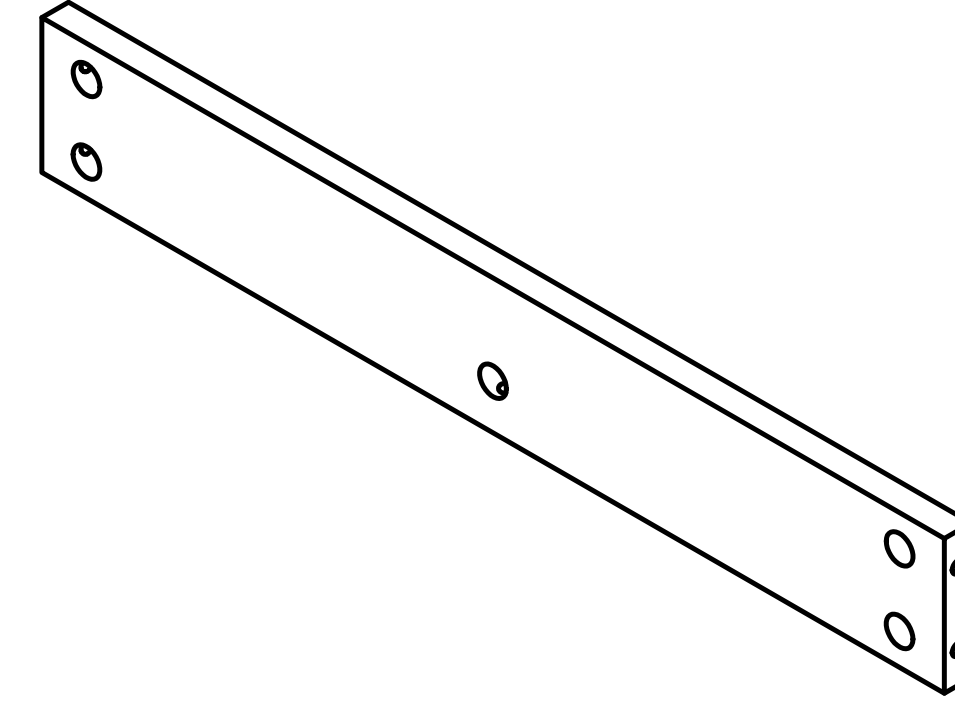


H x2

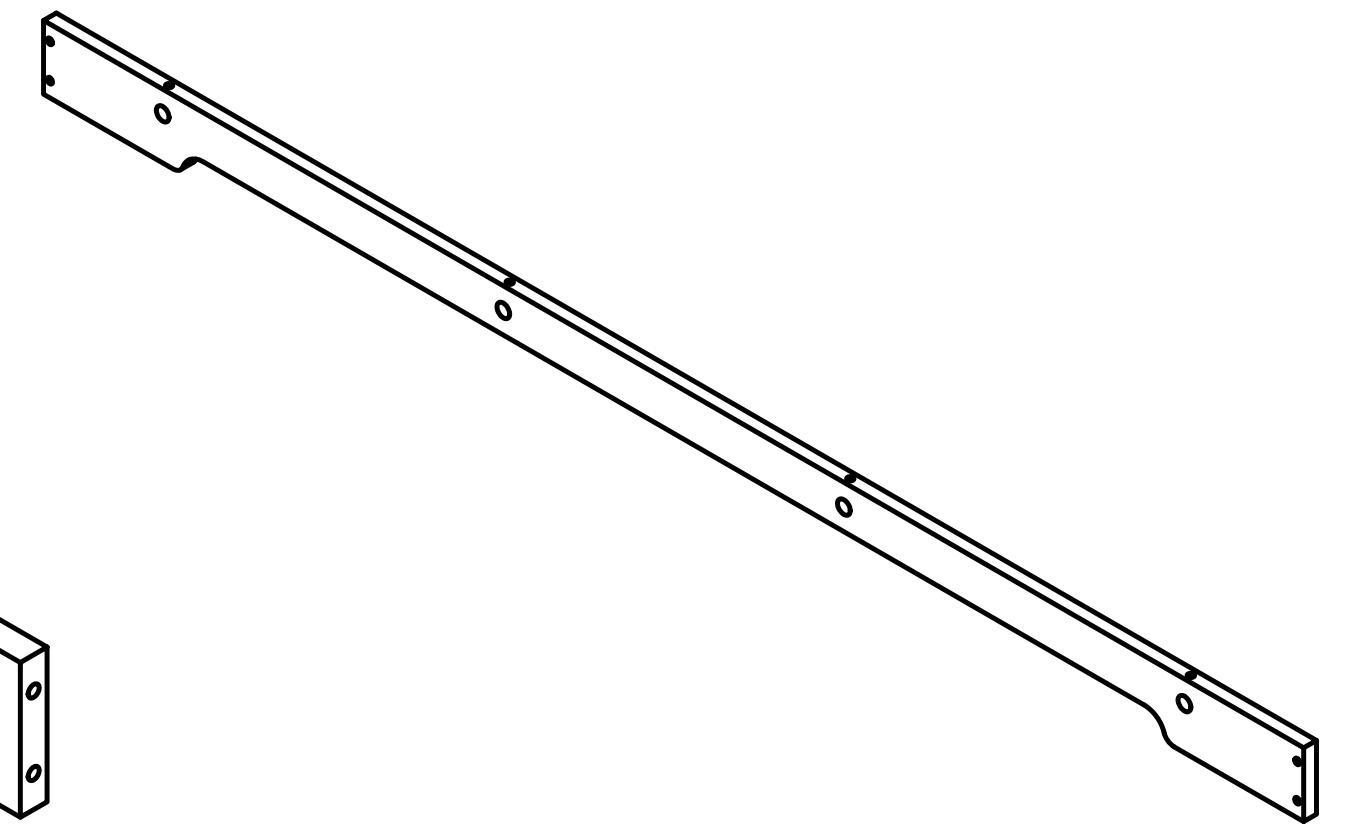


I x1

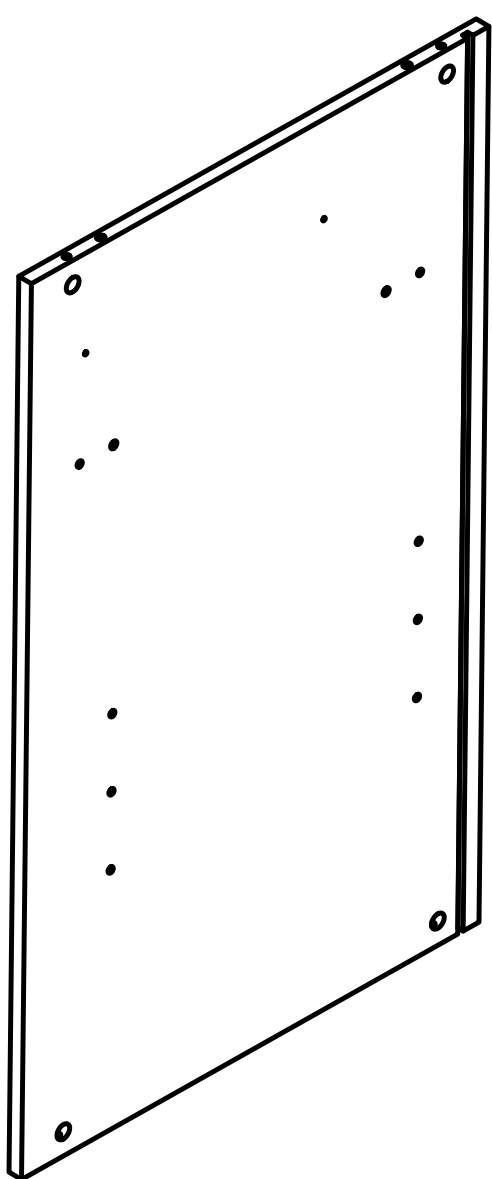


J x1

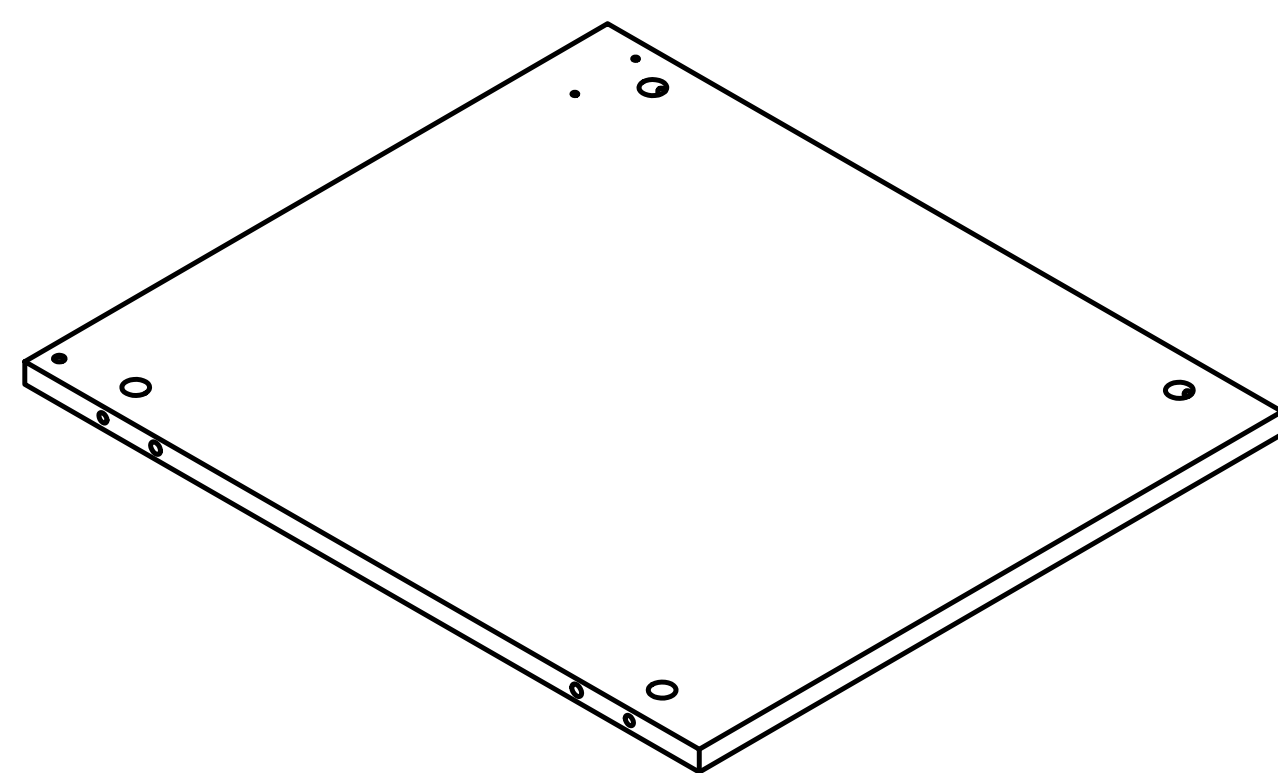


K x1

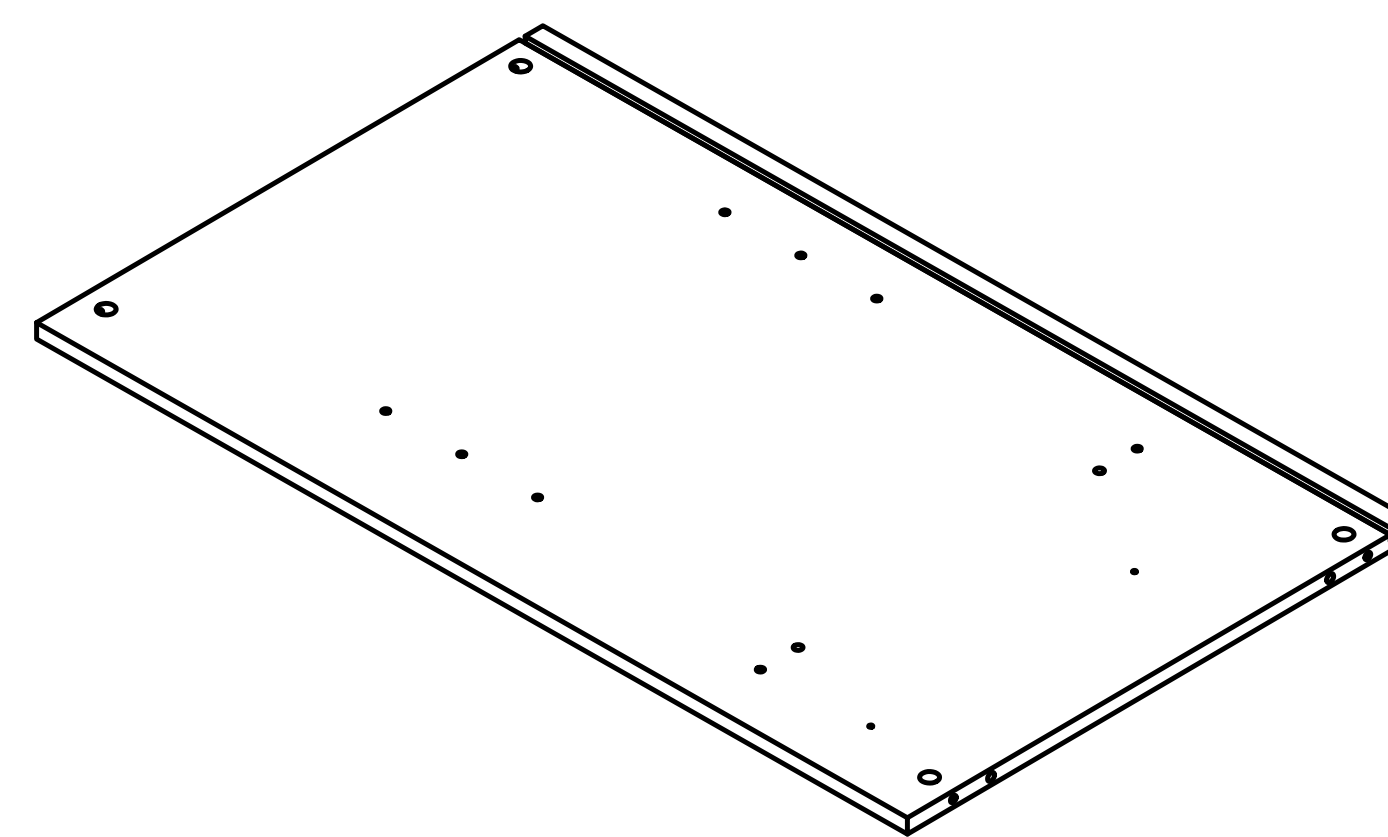


L x1

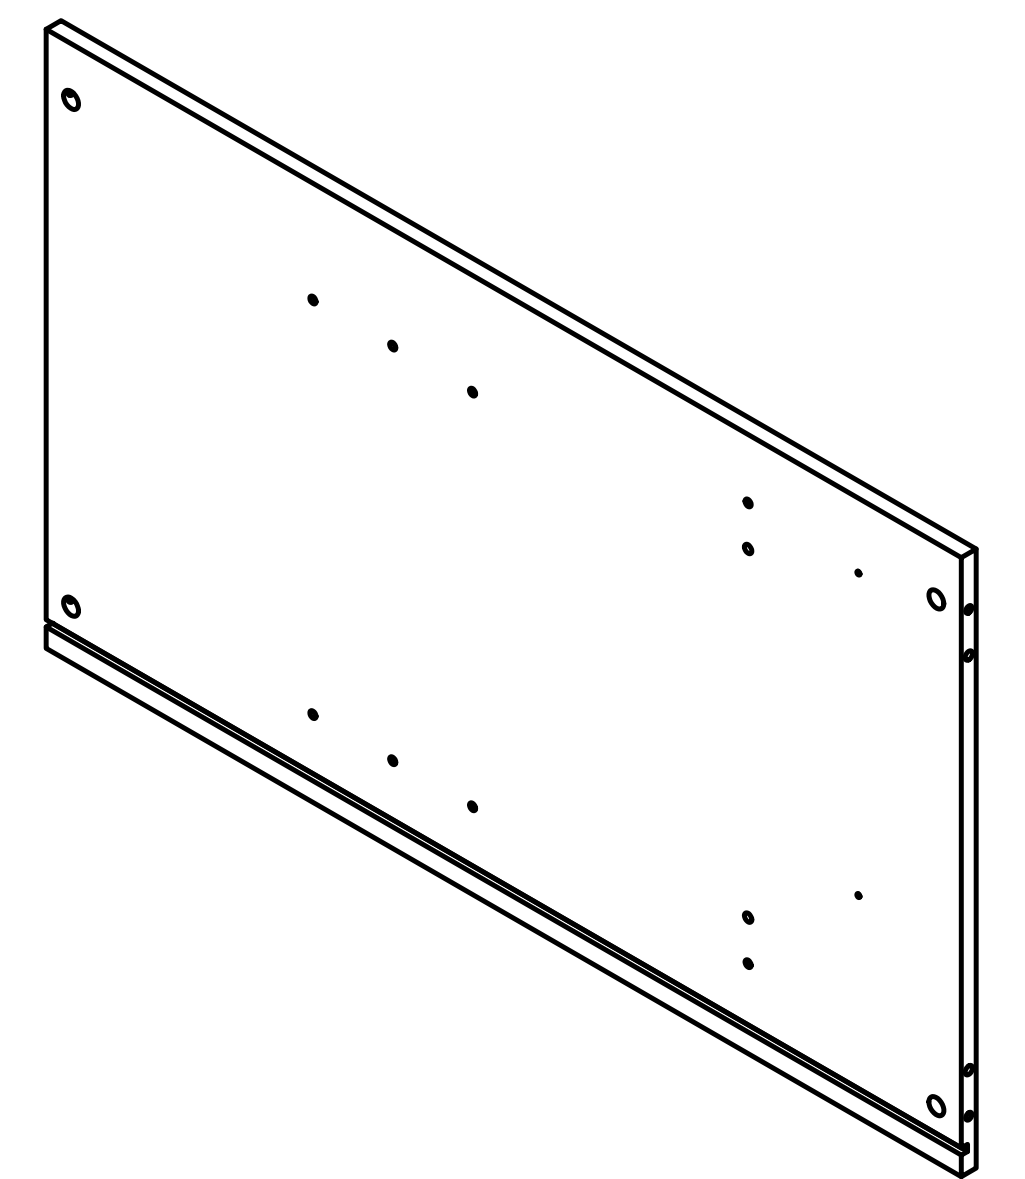


Mx1

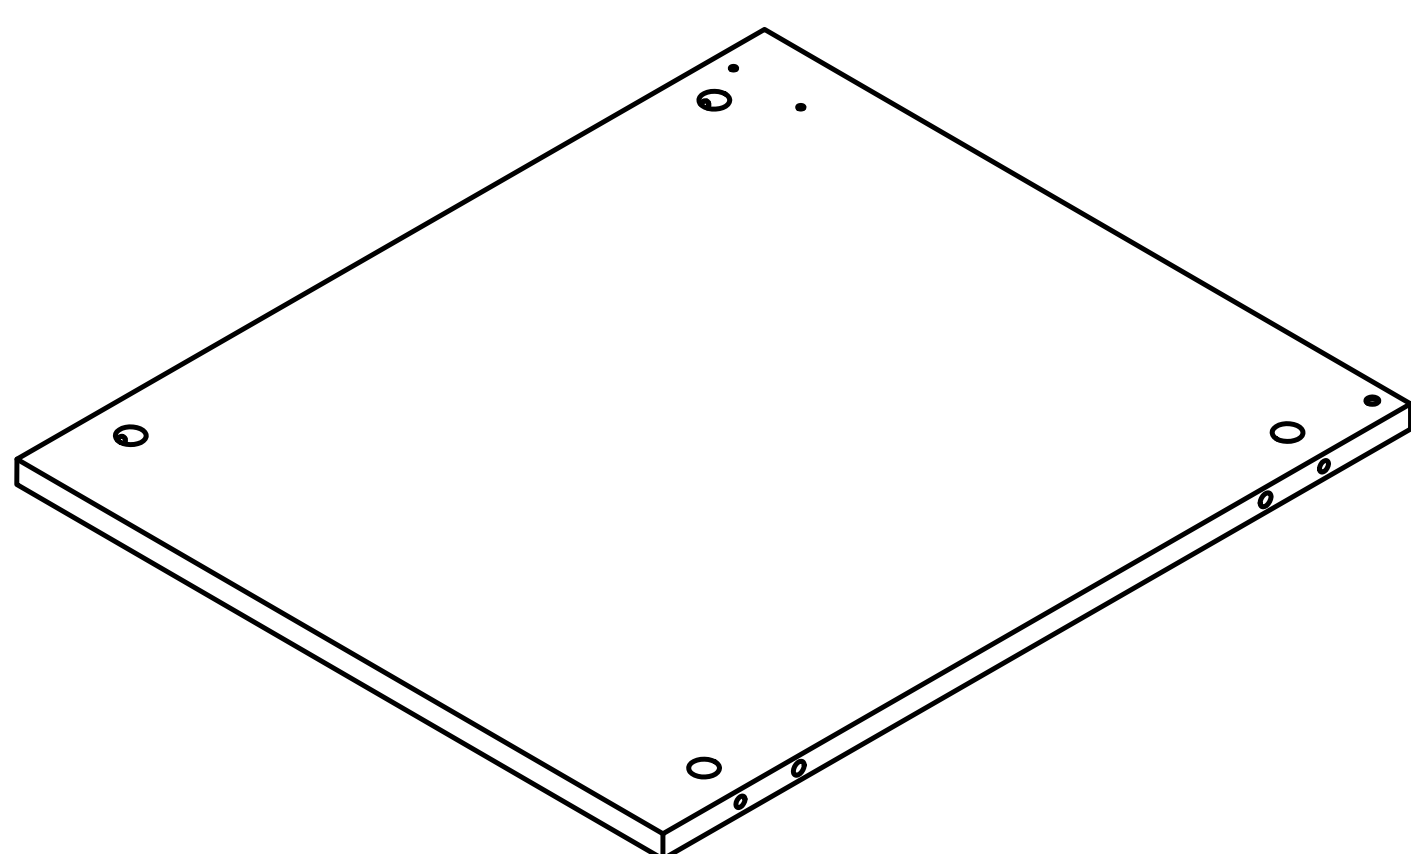


N x1

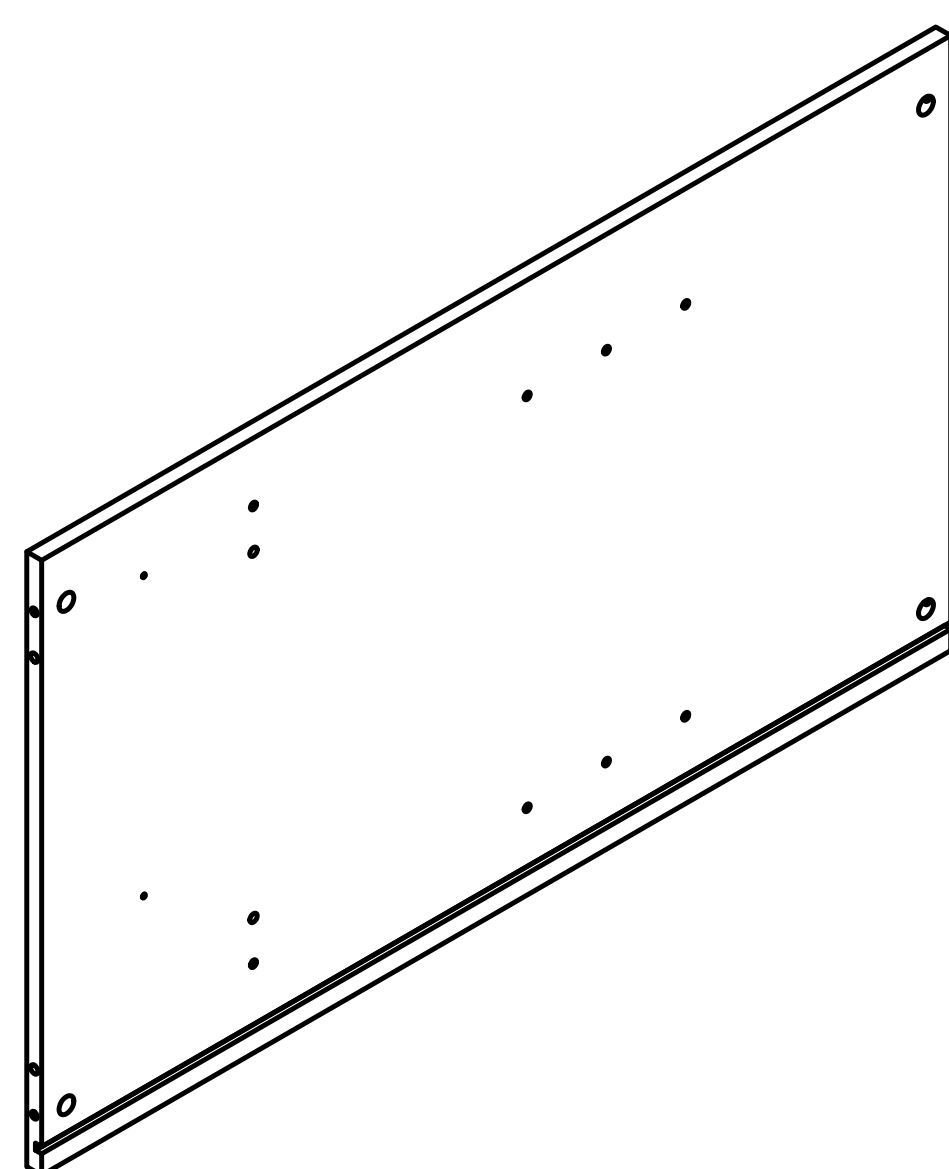


Ox1

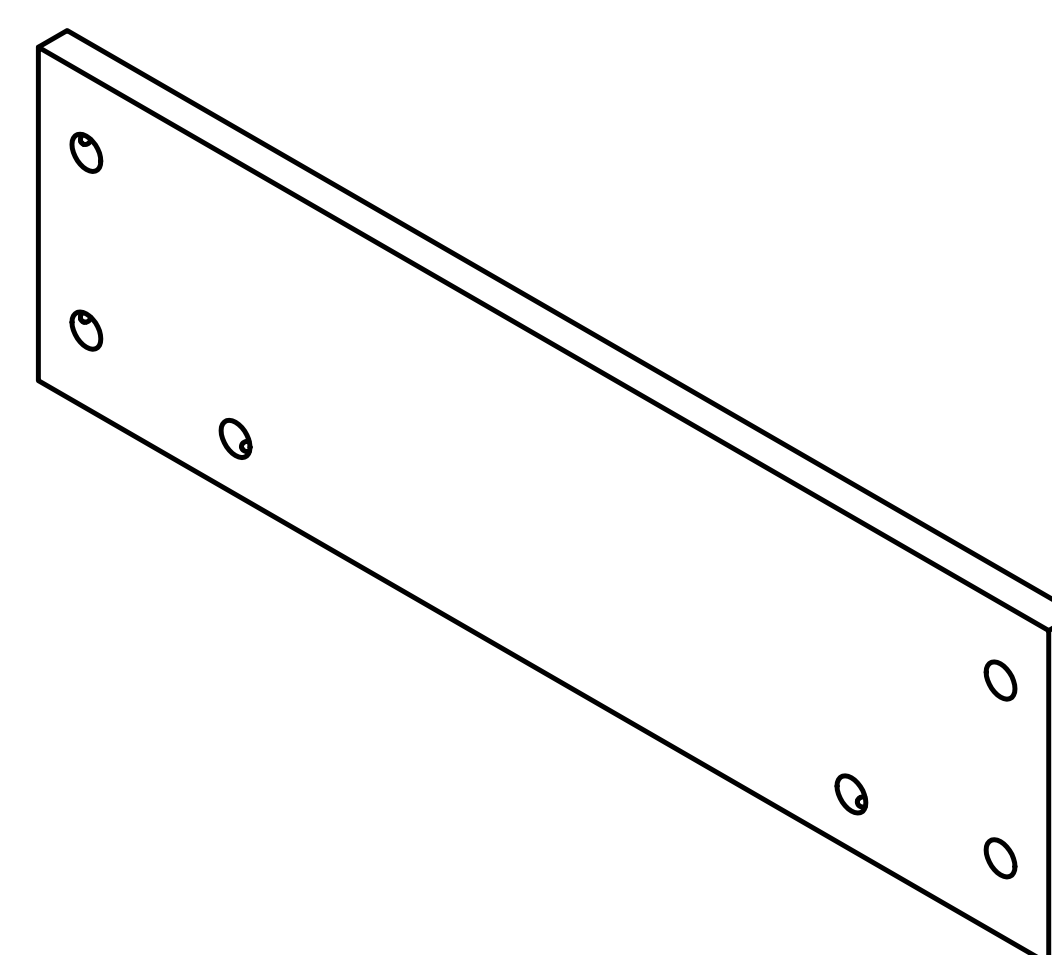


P x1

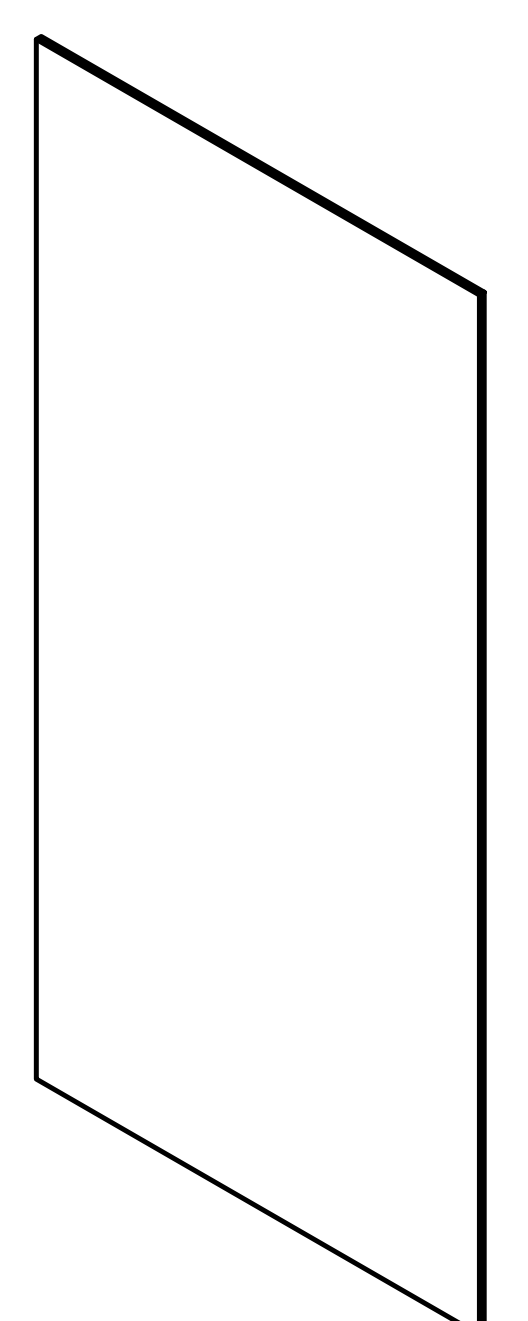


Qx2

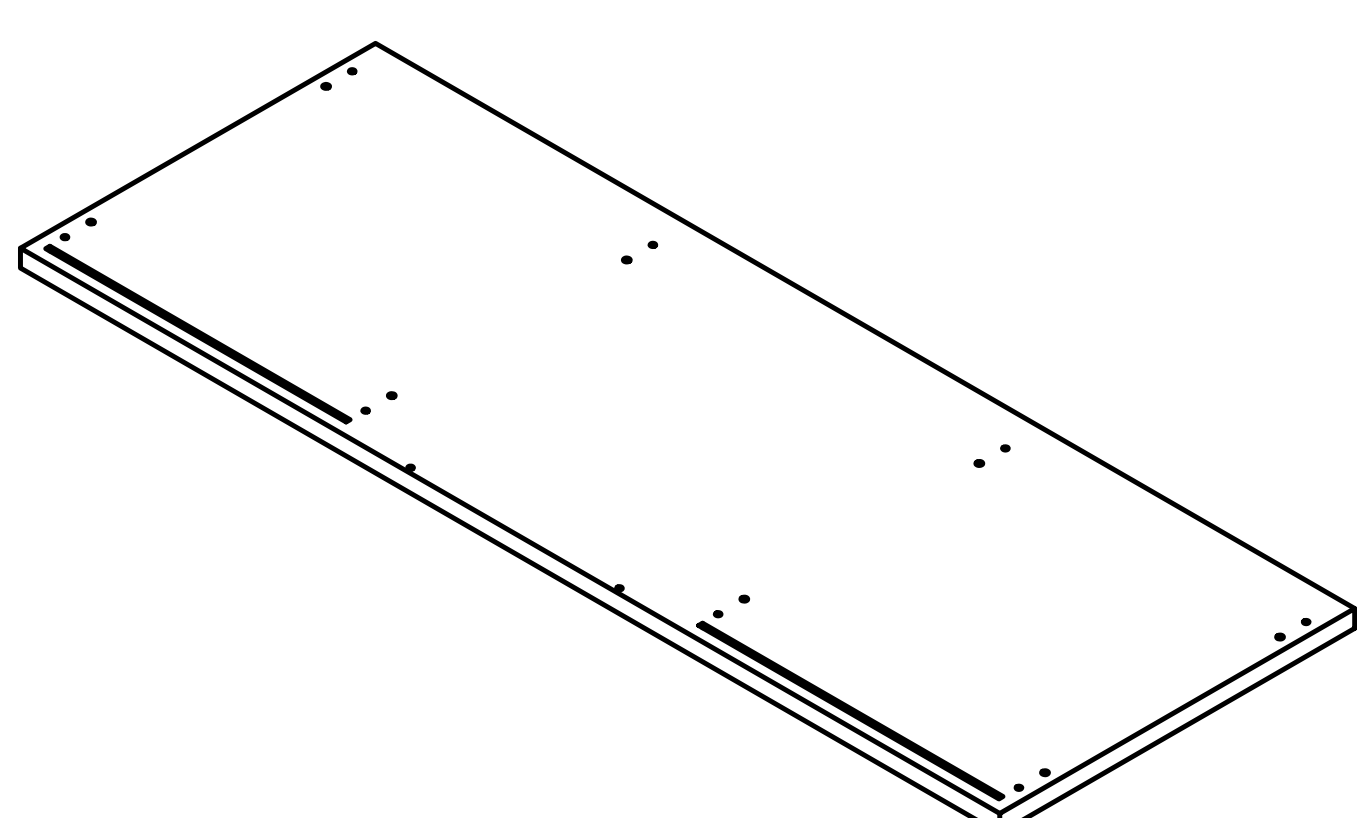


R x1

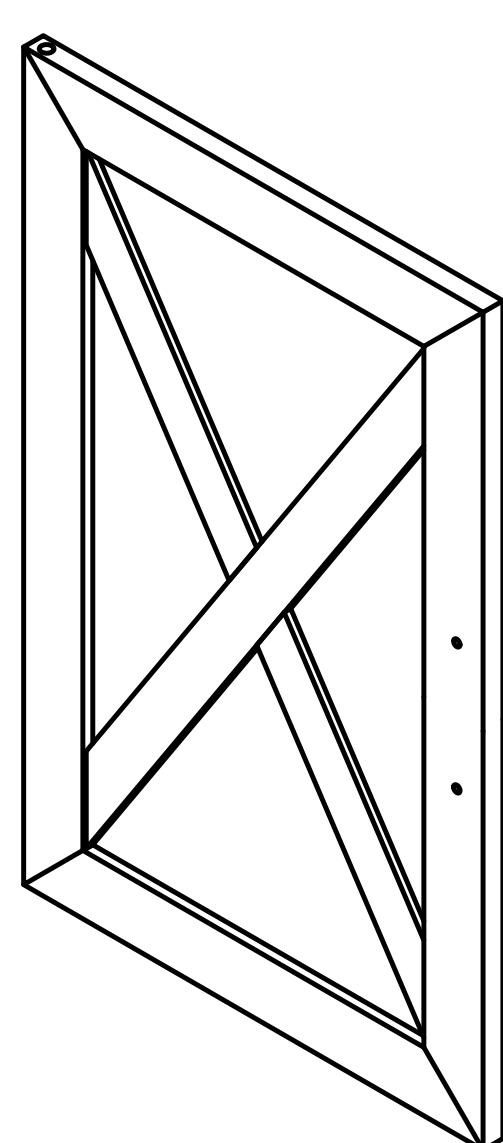


S x1

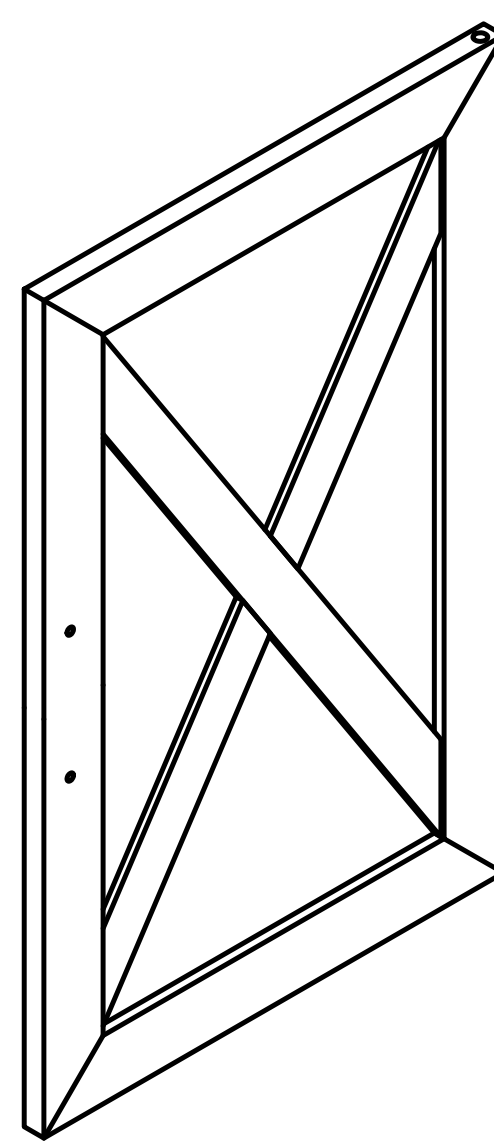

















T x1

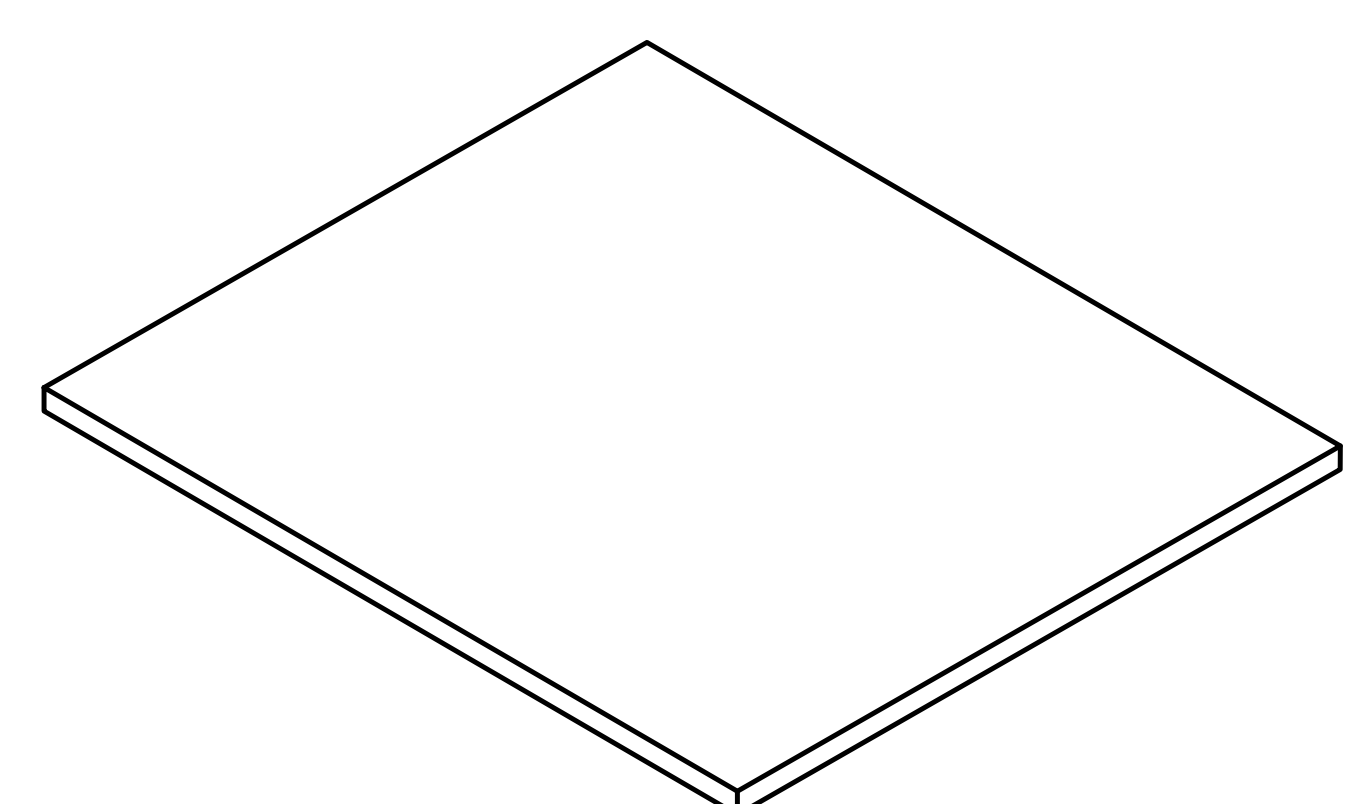


U x2

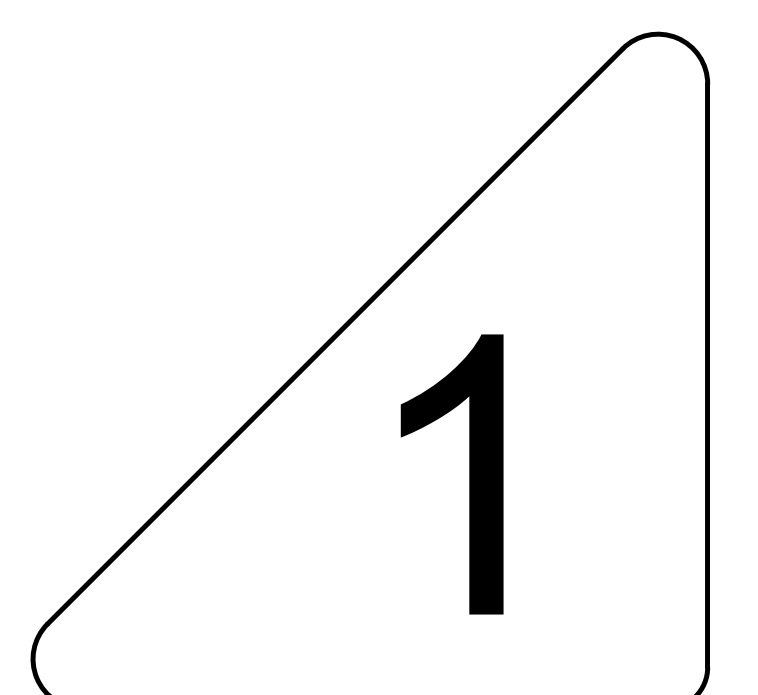

1

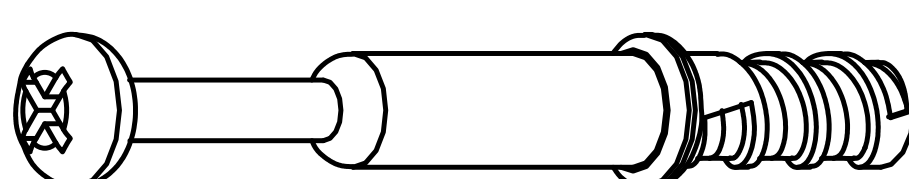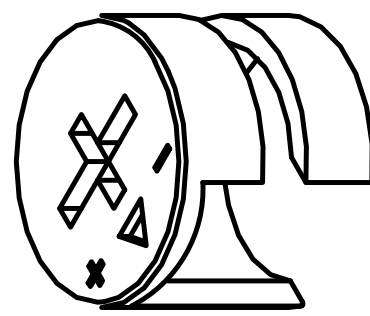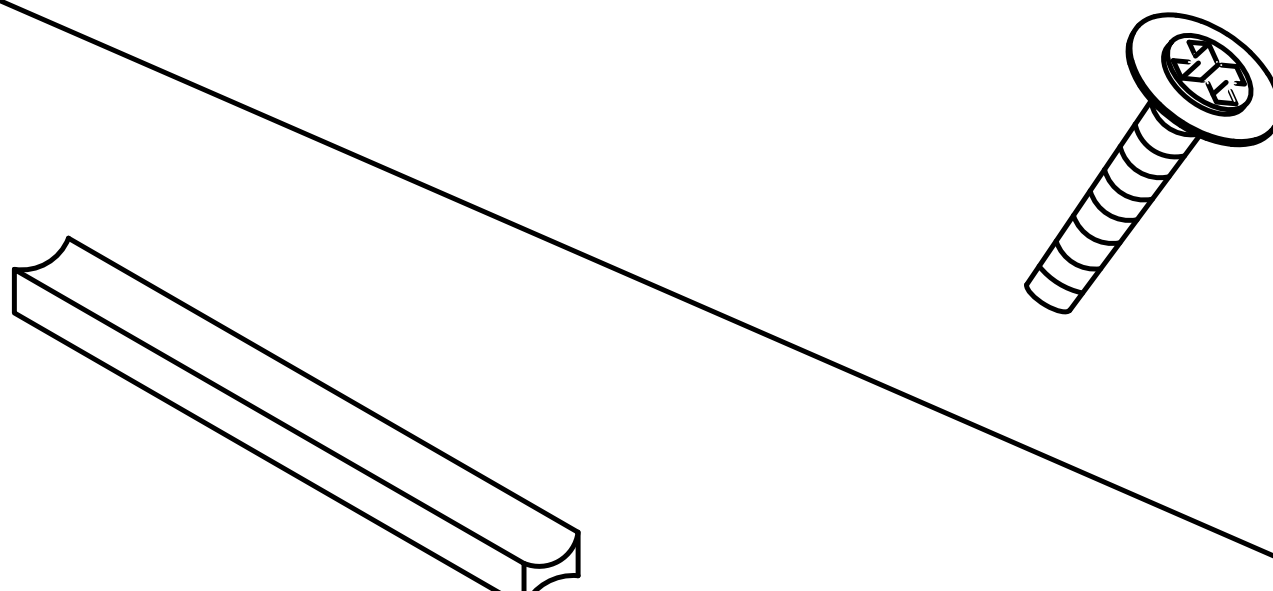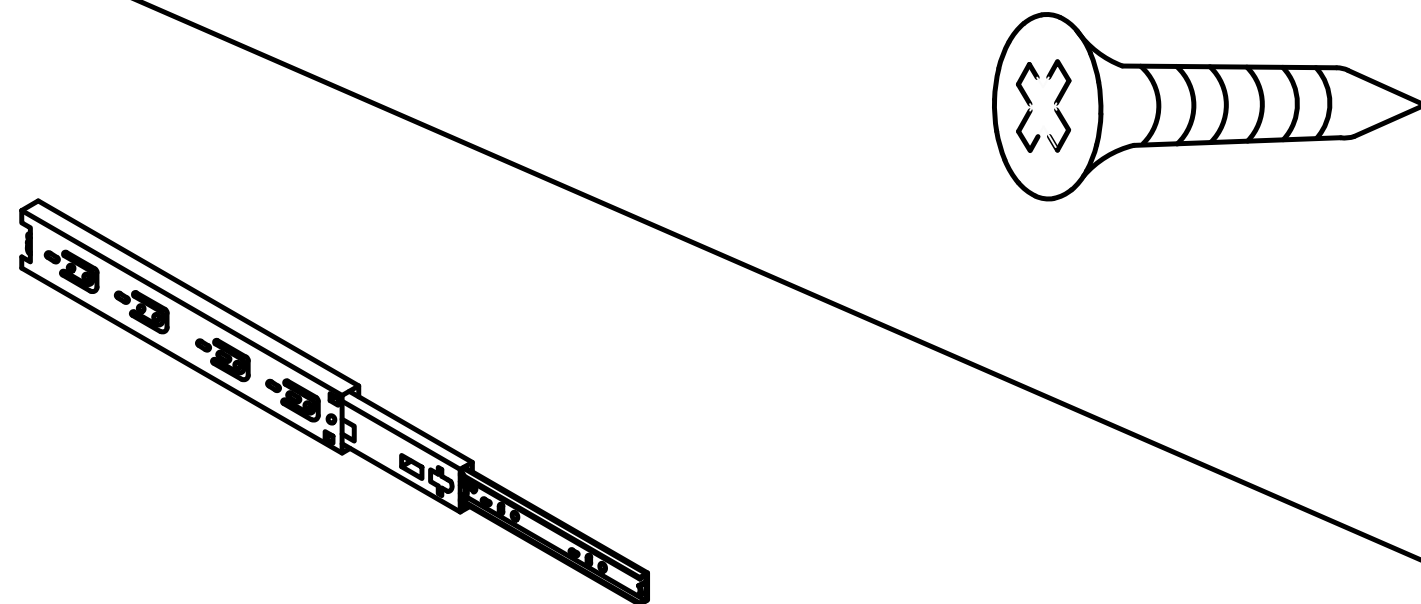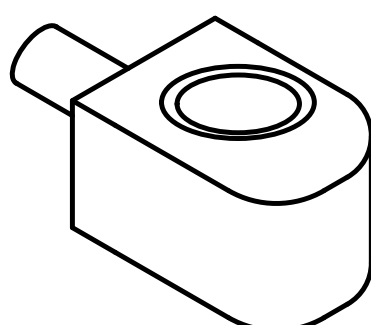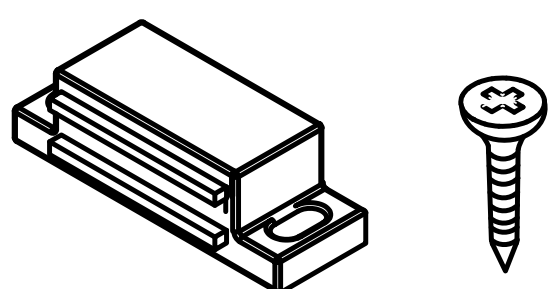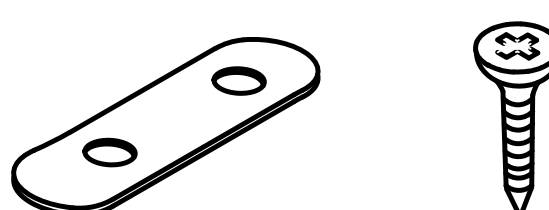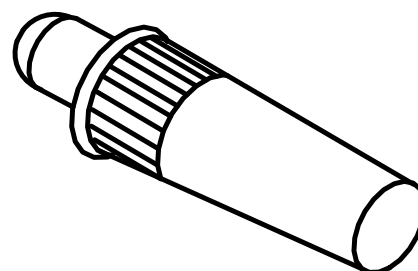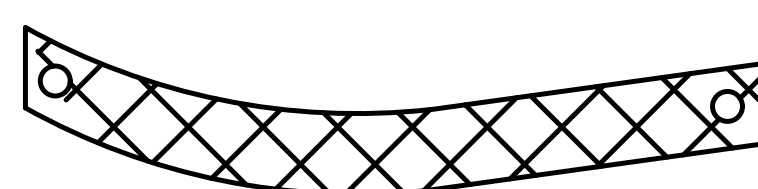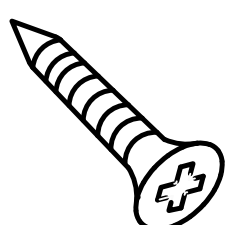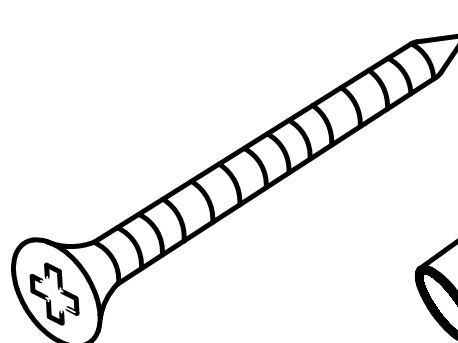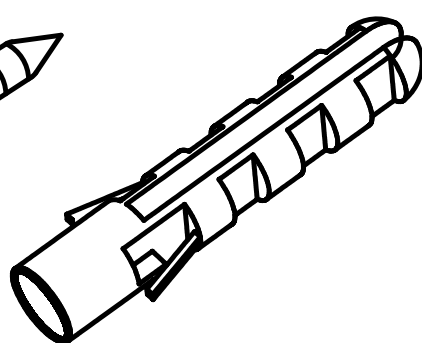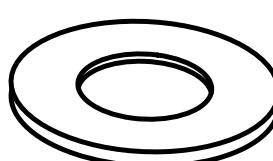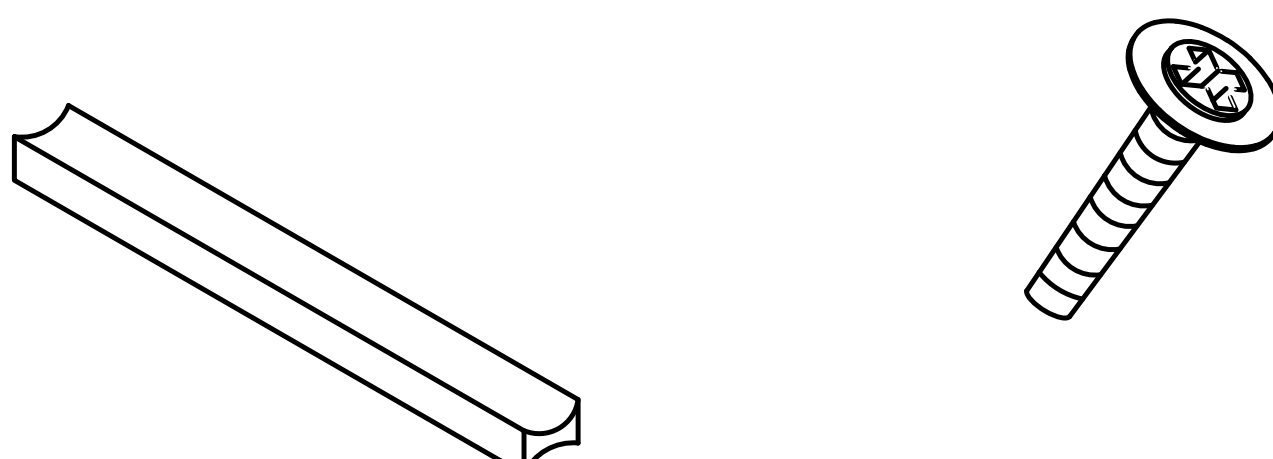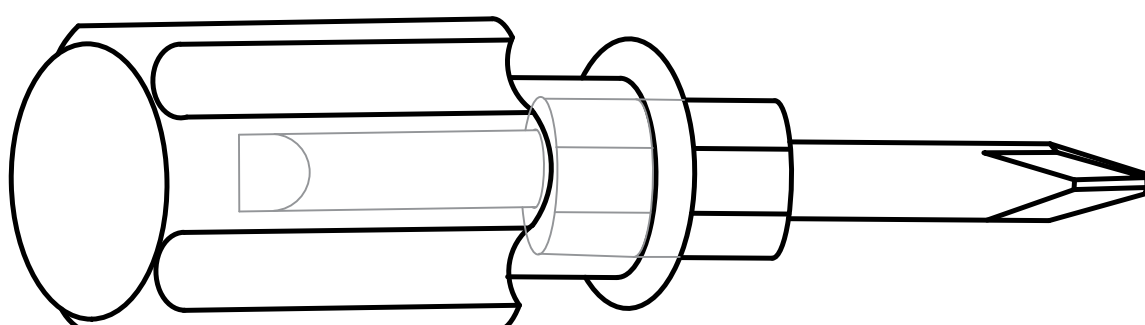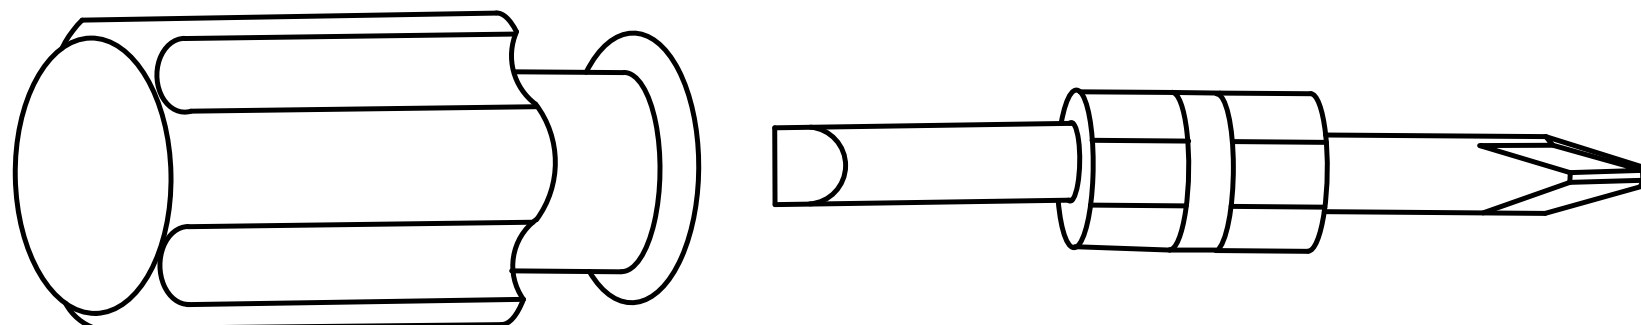
Accessories list						
①			Two In One Screw (6x28mm)		70pcs +7pcs	
②			Two In One Nut (10x12mm)		70pcs +7pcs	
③			Wood Chipping (6x30mm)		24pcs +4pcs	
④			Handle & Screw (4x16mm)		4pcs +2pcs 2pcs	
⑤			Guide rails & screws (3x12mm) 29cm		20pcs +4pcs 4pcs	
⑥			Non-slip pads (50x10x2mm)		8pcs +2pcs	
⑦			Laminate support nail		8pcs +2pcs	
⑧			Magnetic Attraction & Screw (B:3x14mm) Iron sheet & screw (3x10mm)		2pcs 4pcs +2pcs	2pcs 4pcs +2pcs
⑨			Door shaft		4pcs	
⑩			Fixing Clip & Screw (3x16mm)		16pcs +4pcs	
⑪	 1pcs  1pcs  1pcs  1pcs  2pcs		anti-tipping tape Screw & gasket (3.5x12mm) Screw (4x45mm)		1pcs	
⑫			Handle & Screw (4x18mm)		4pcs +2pcs 2pcs	
1pcs  ← →  Double-head screwdriver, use as required						
2						

Product structure decomposition

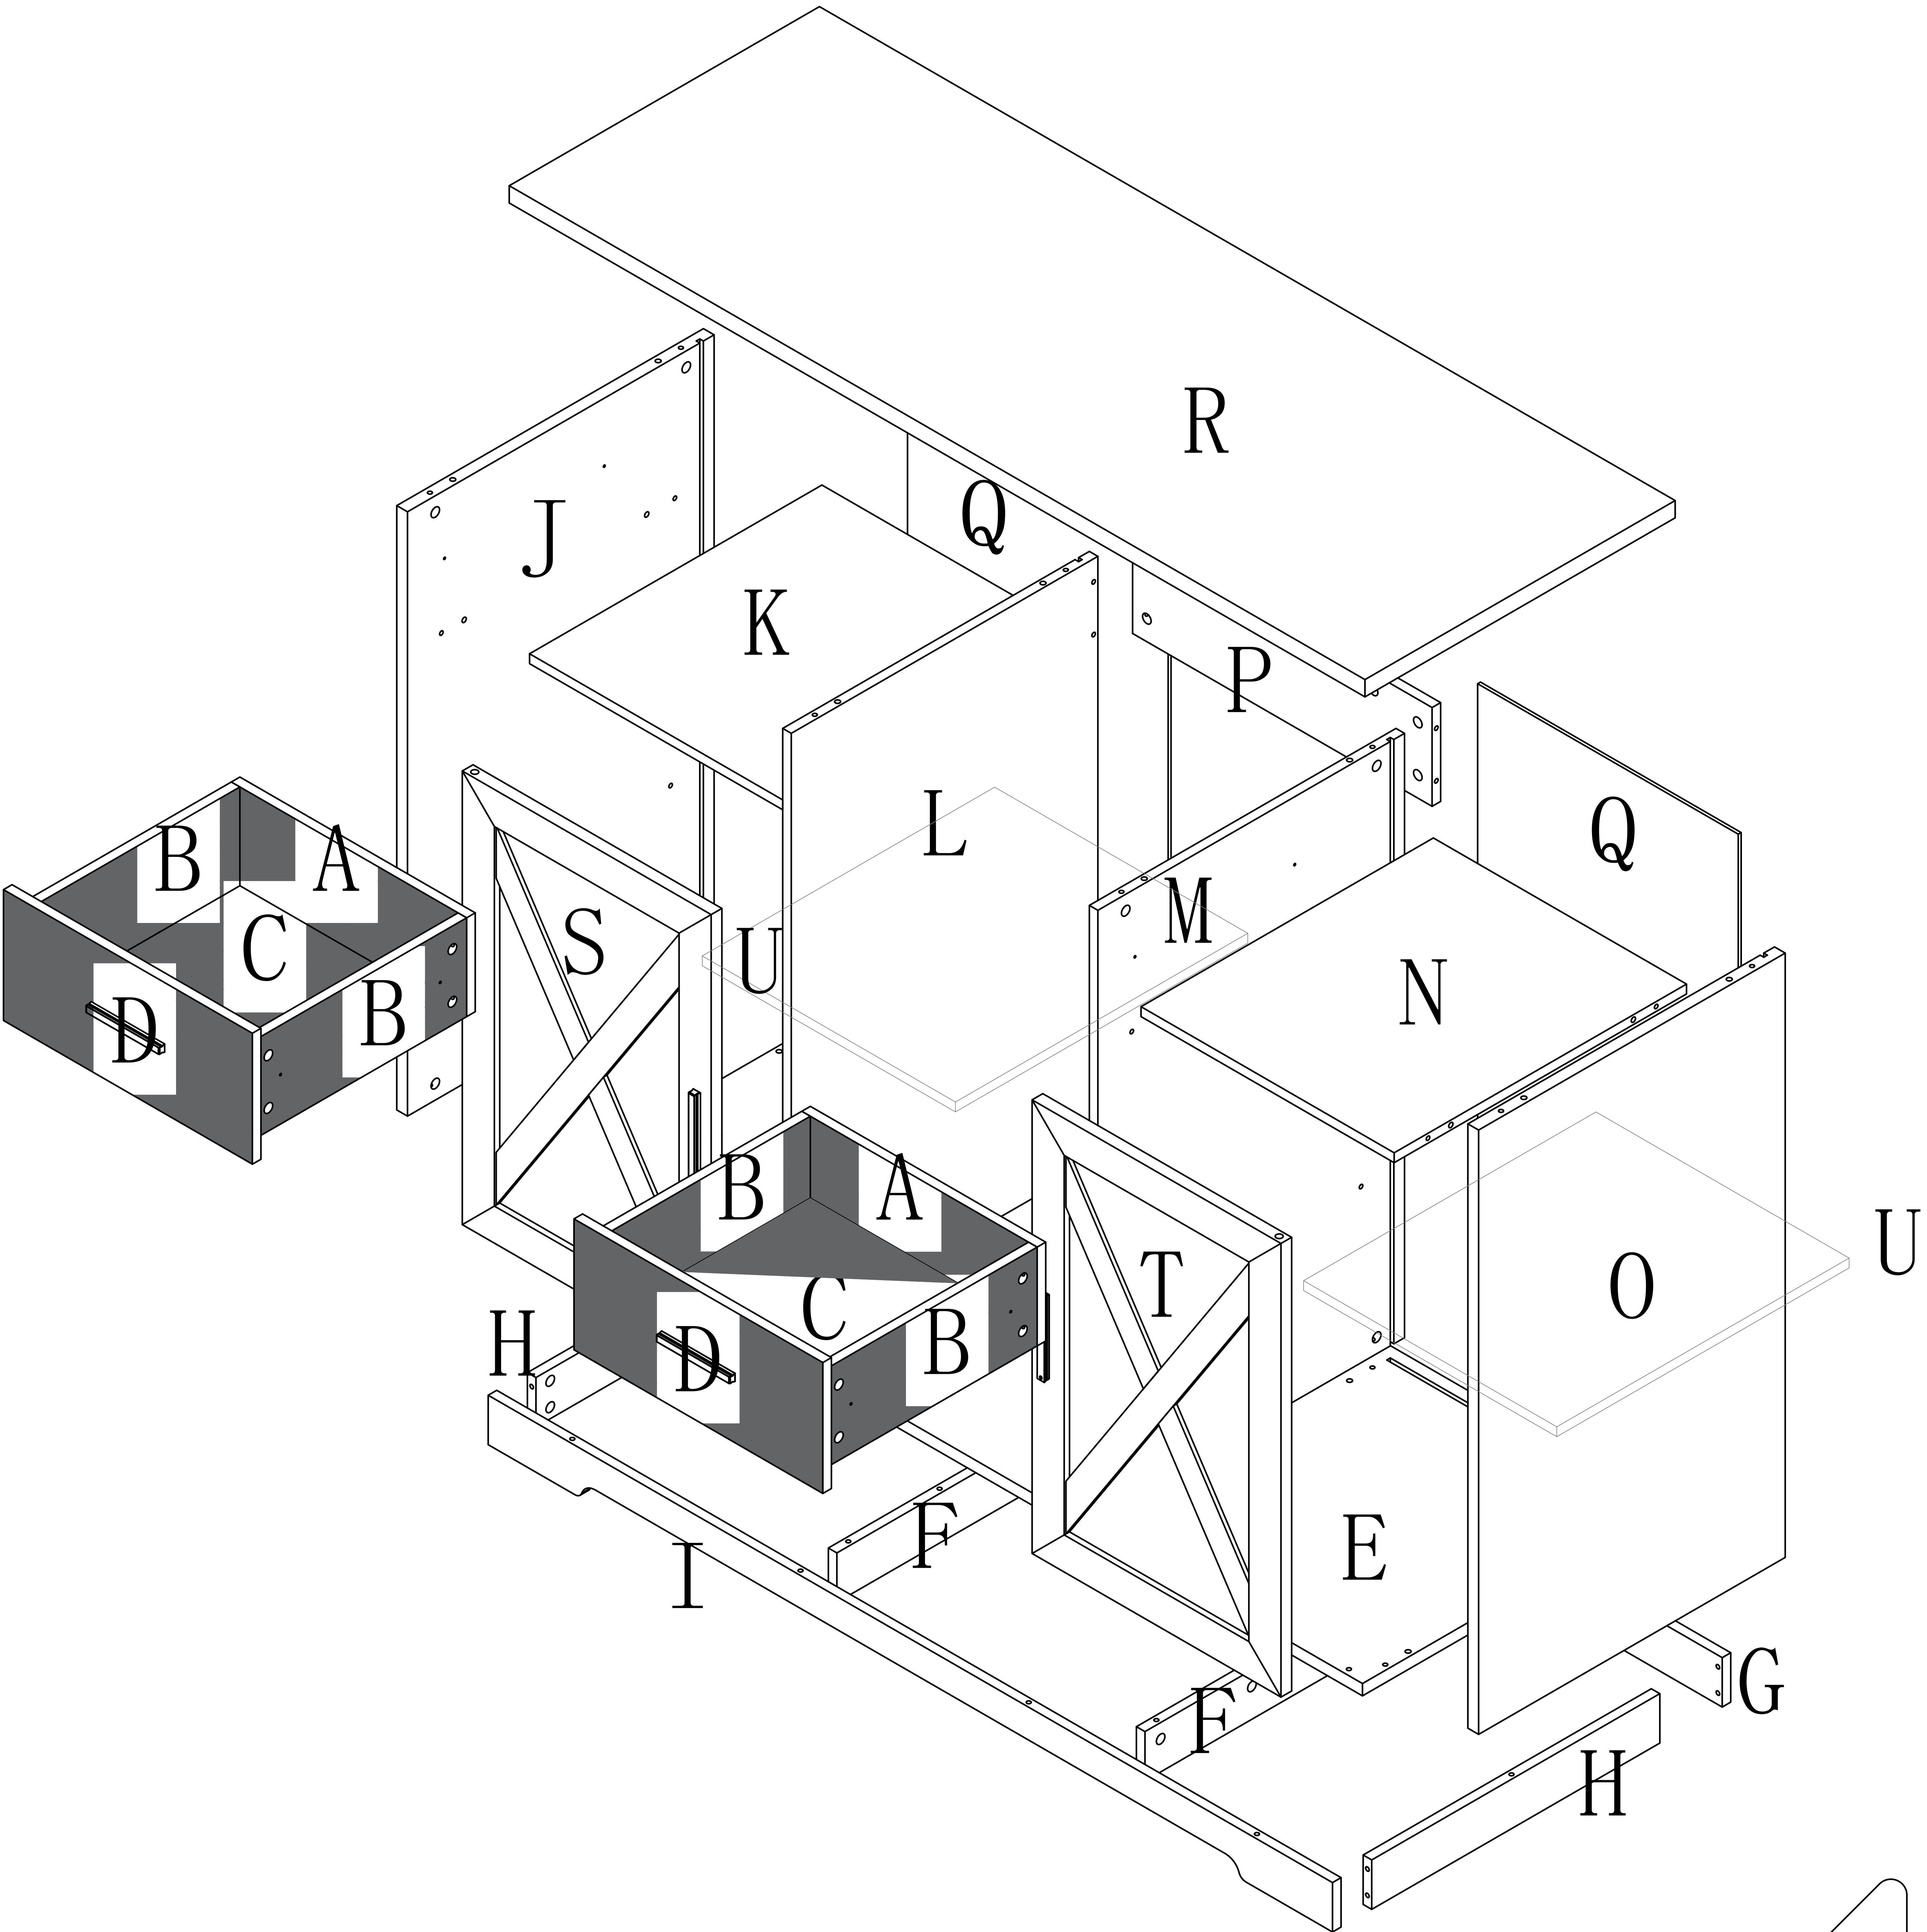


Use parts ① and ②




Step1

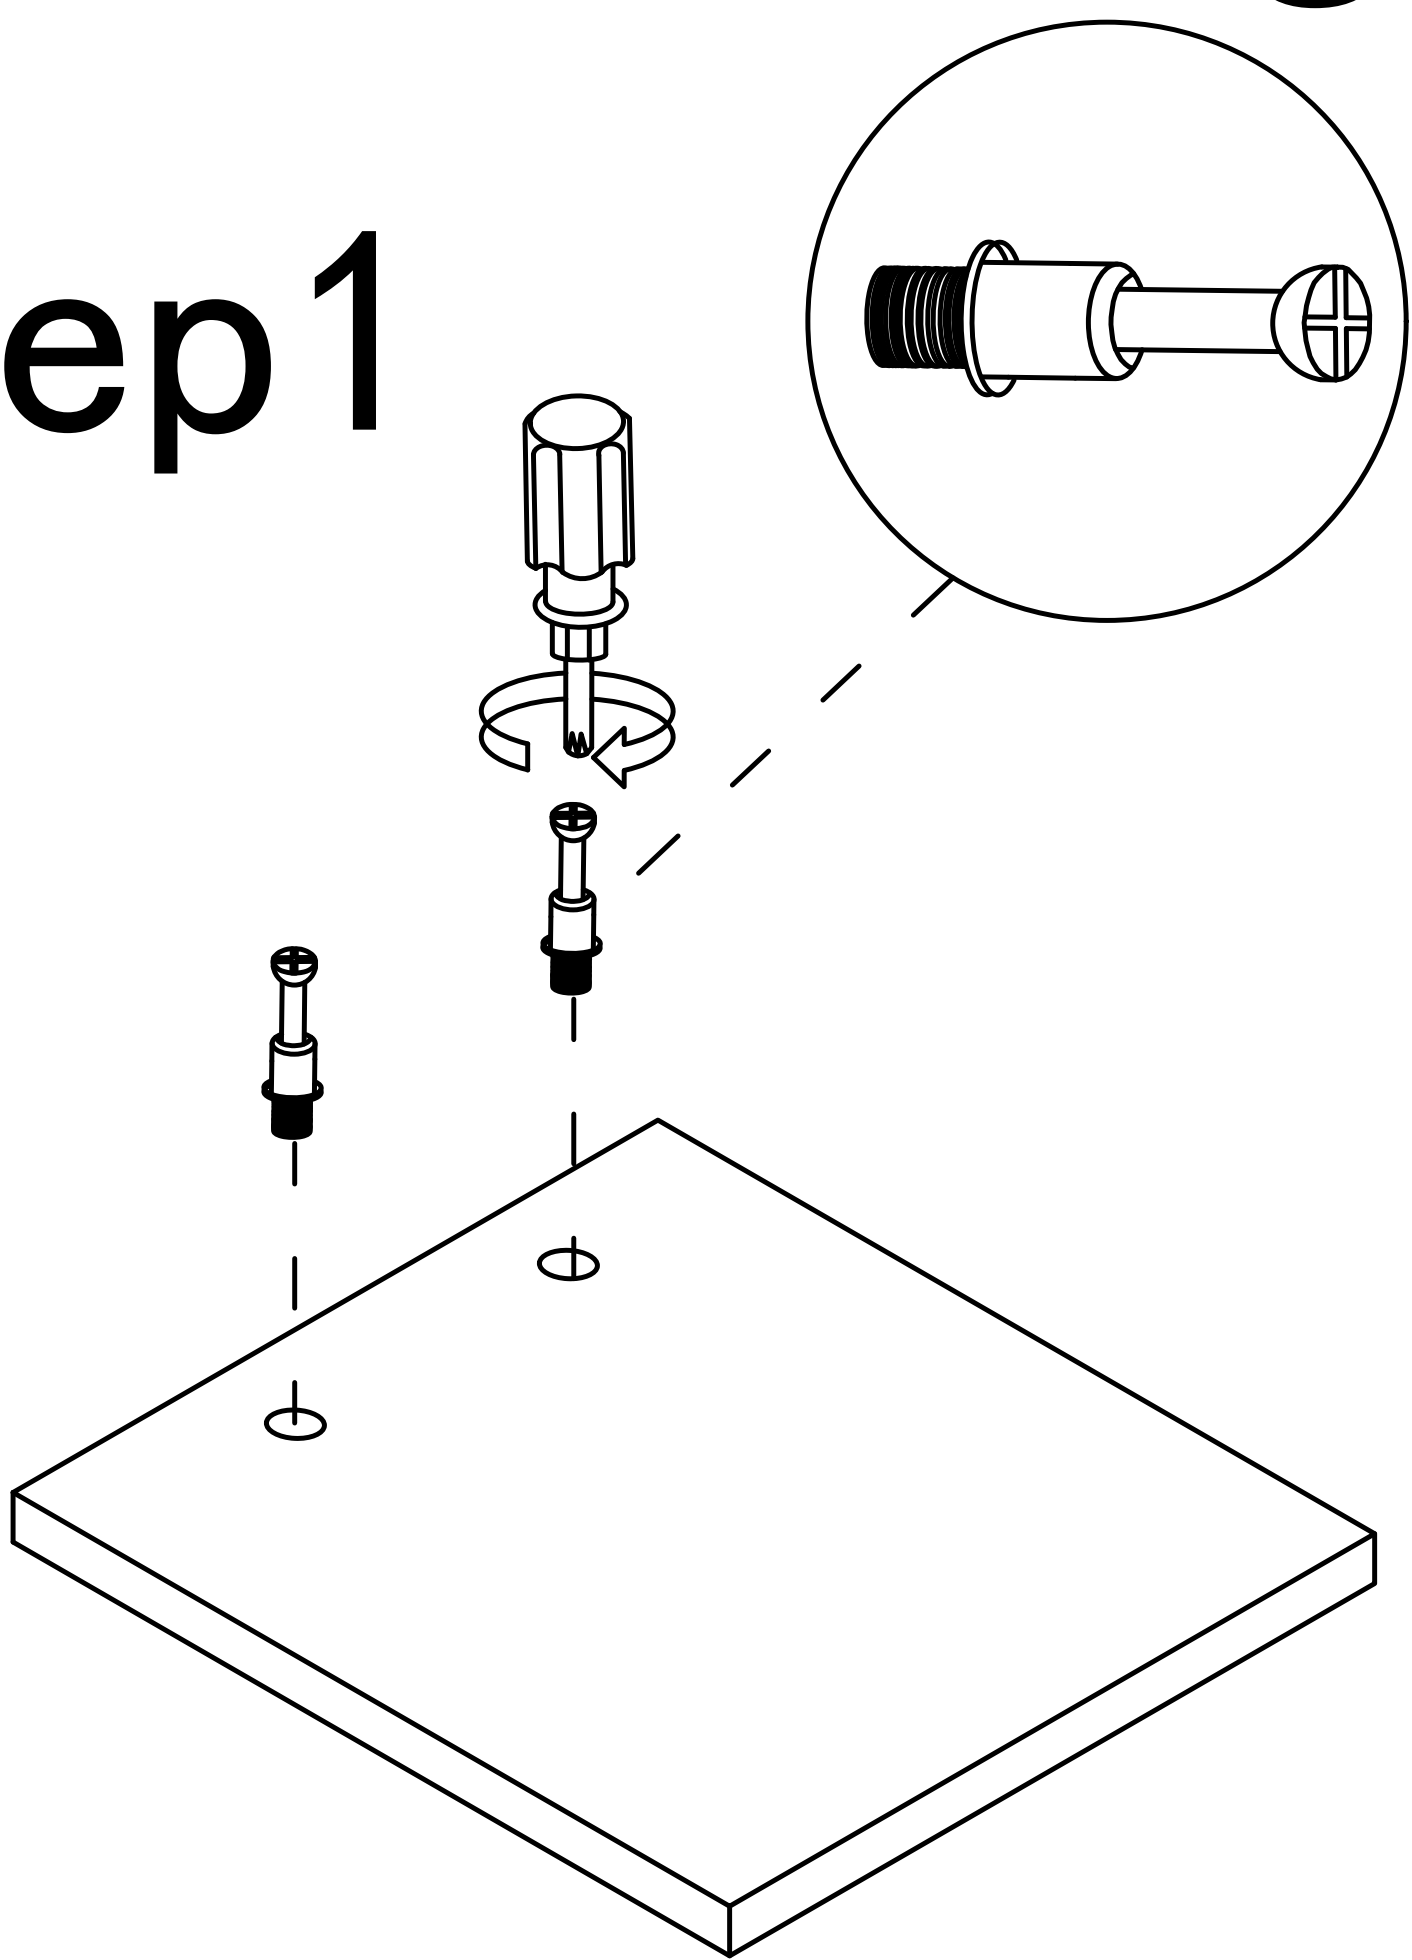

Step2

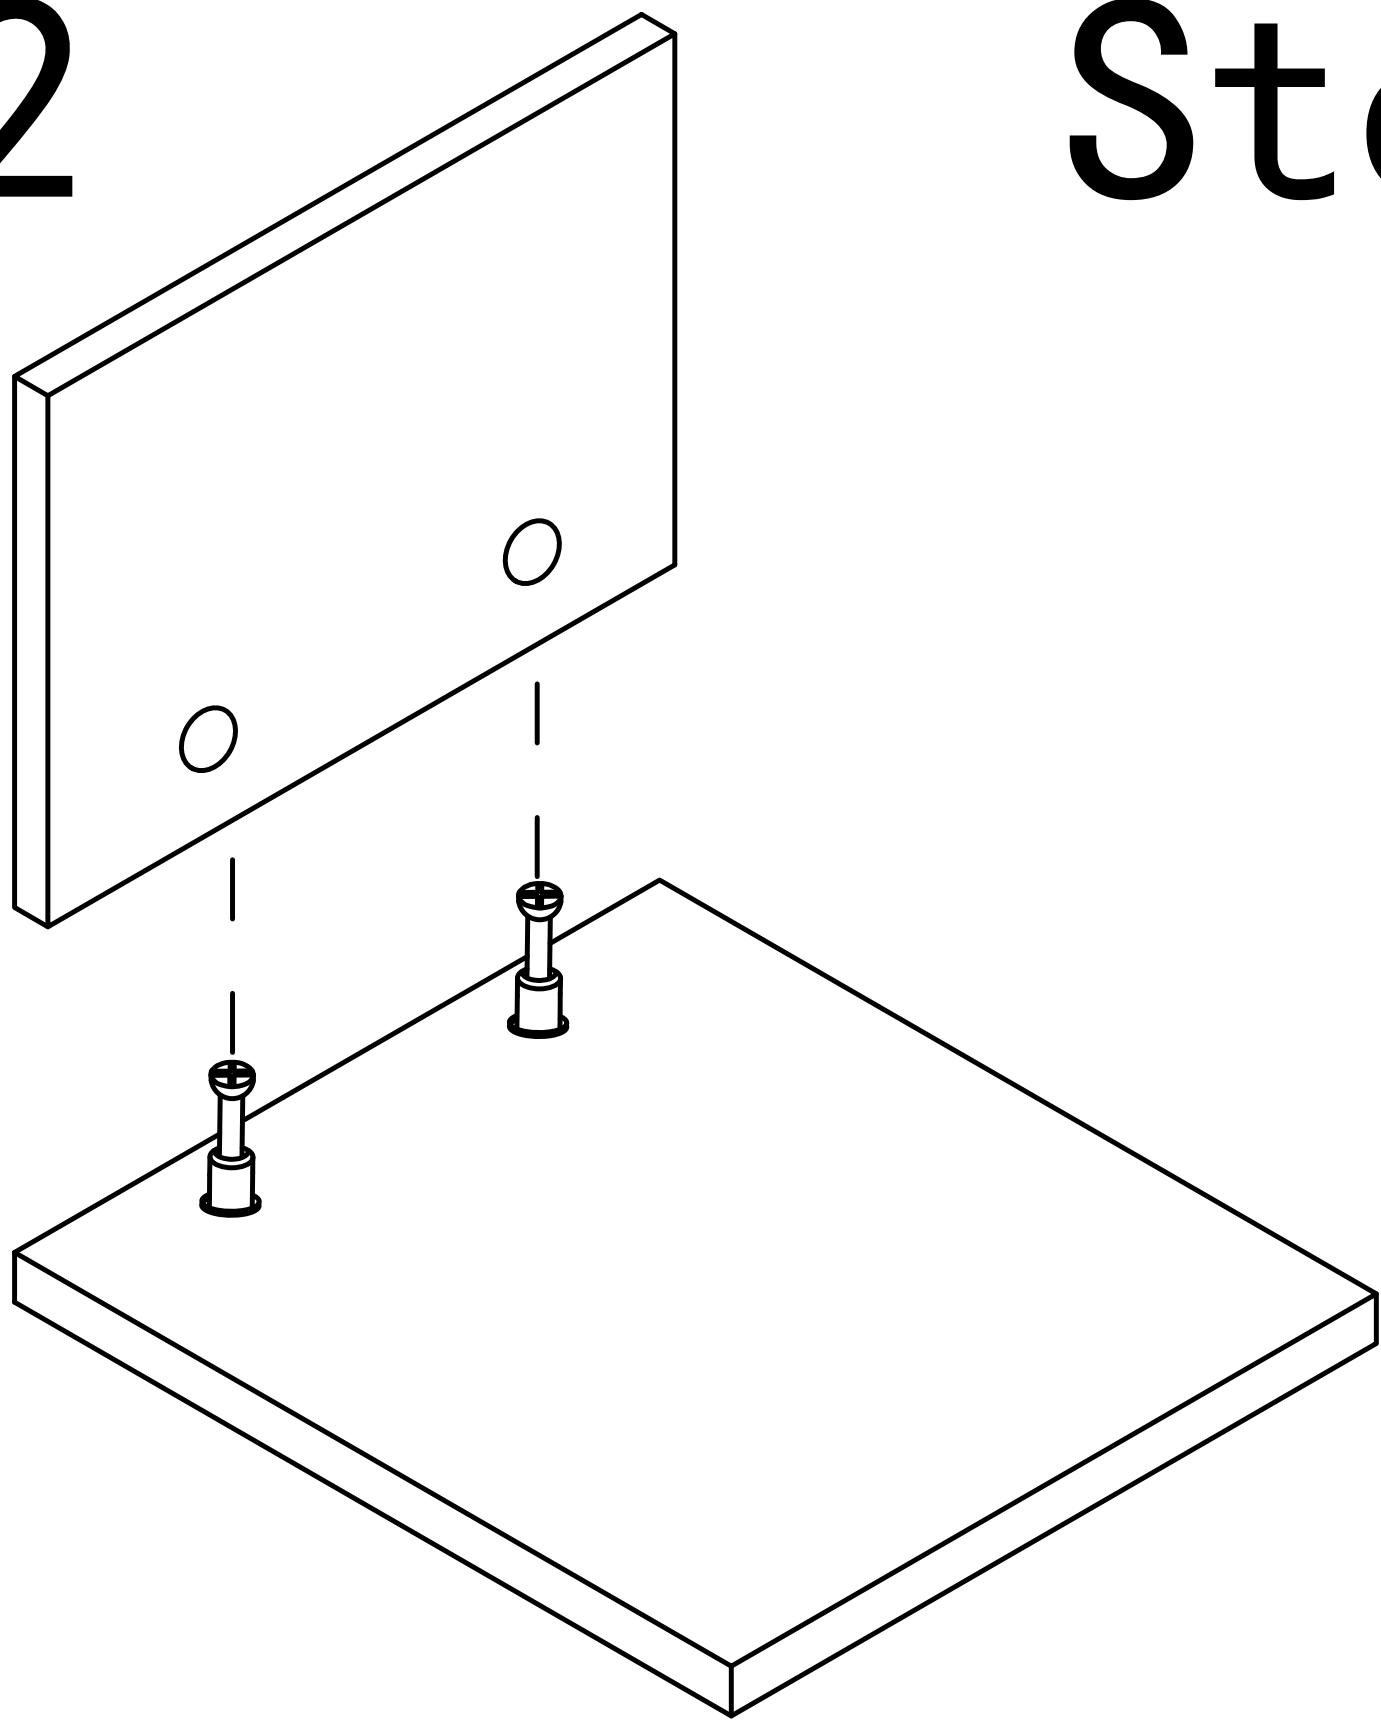



Step3

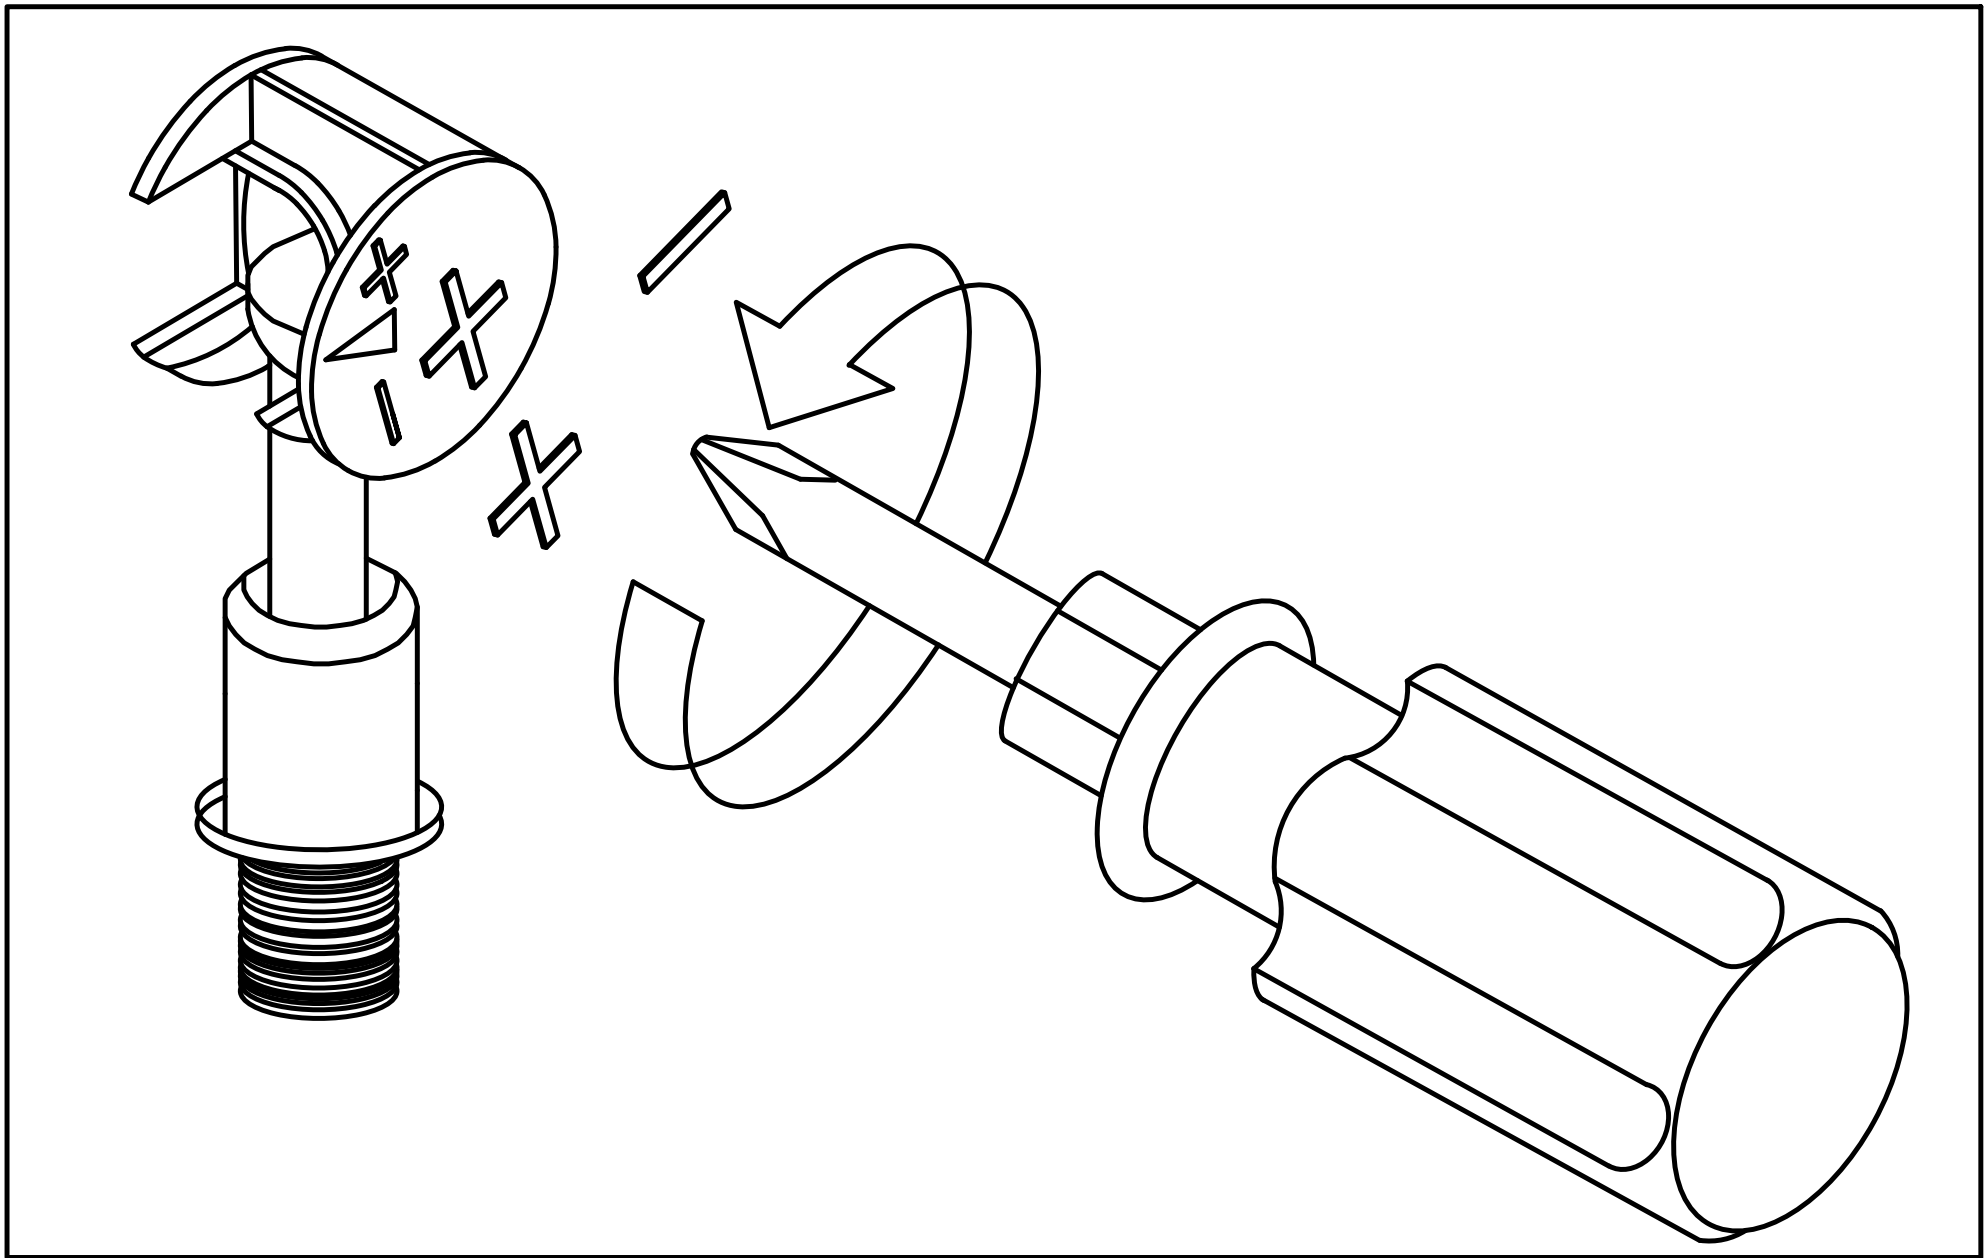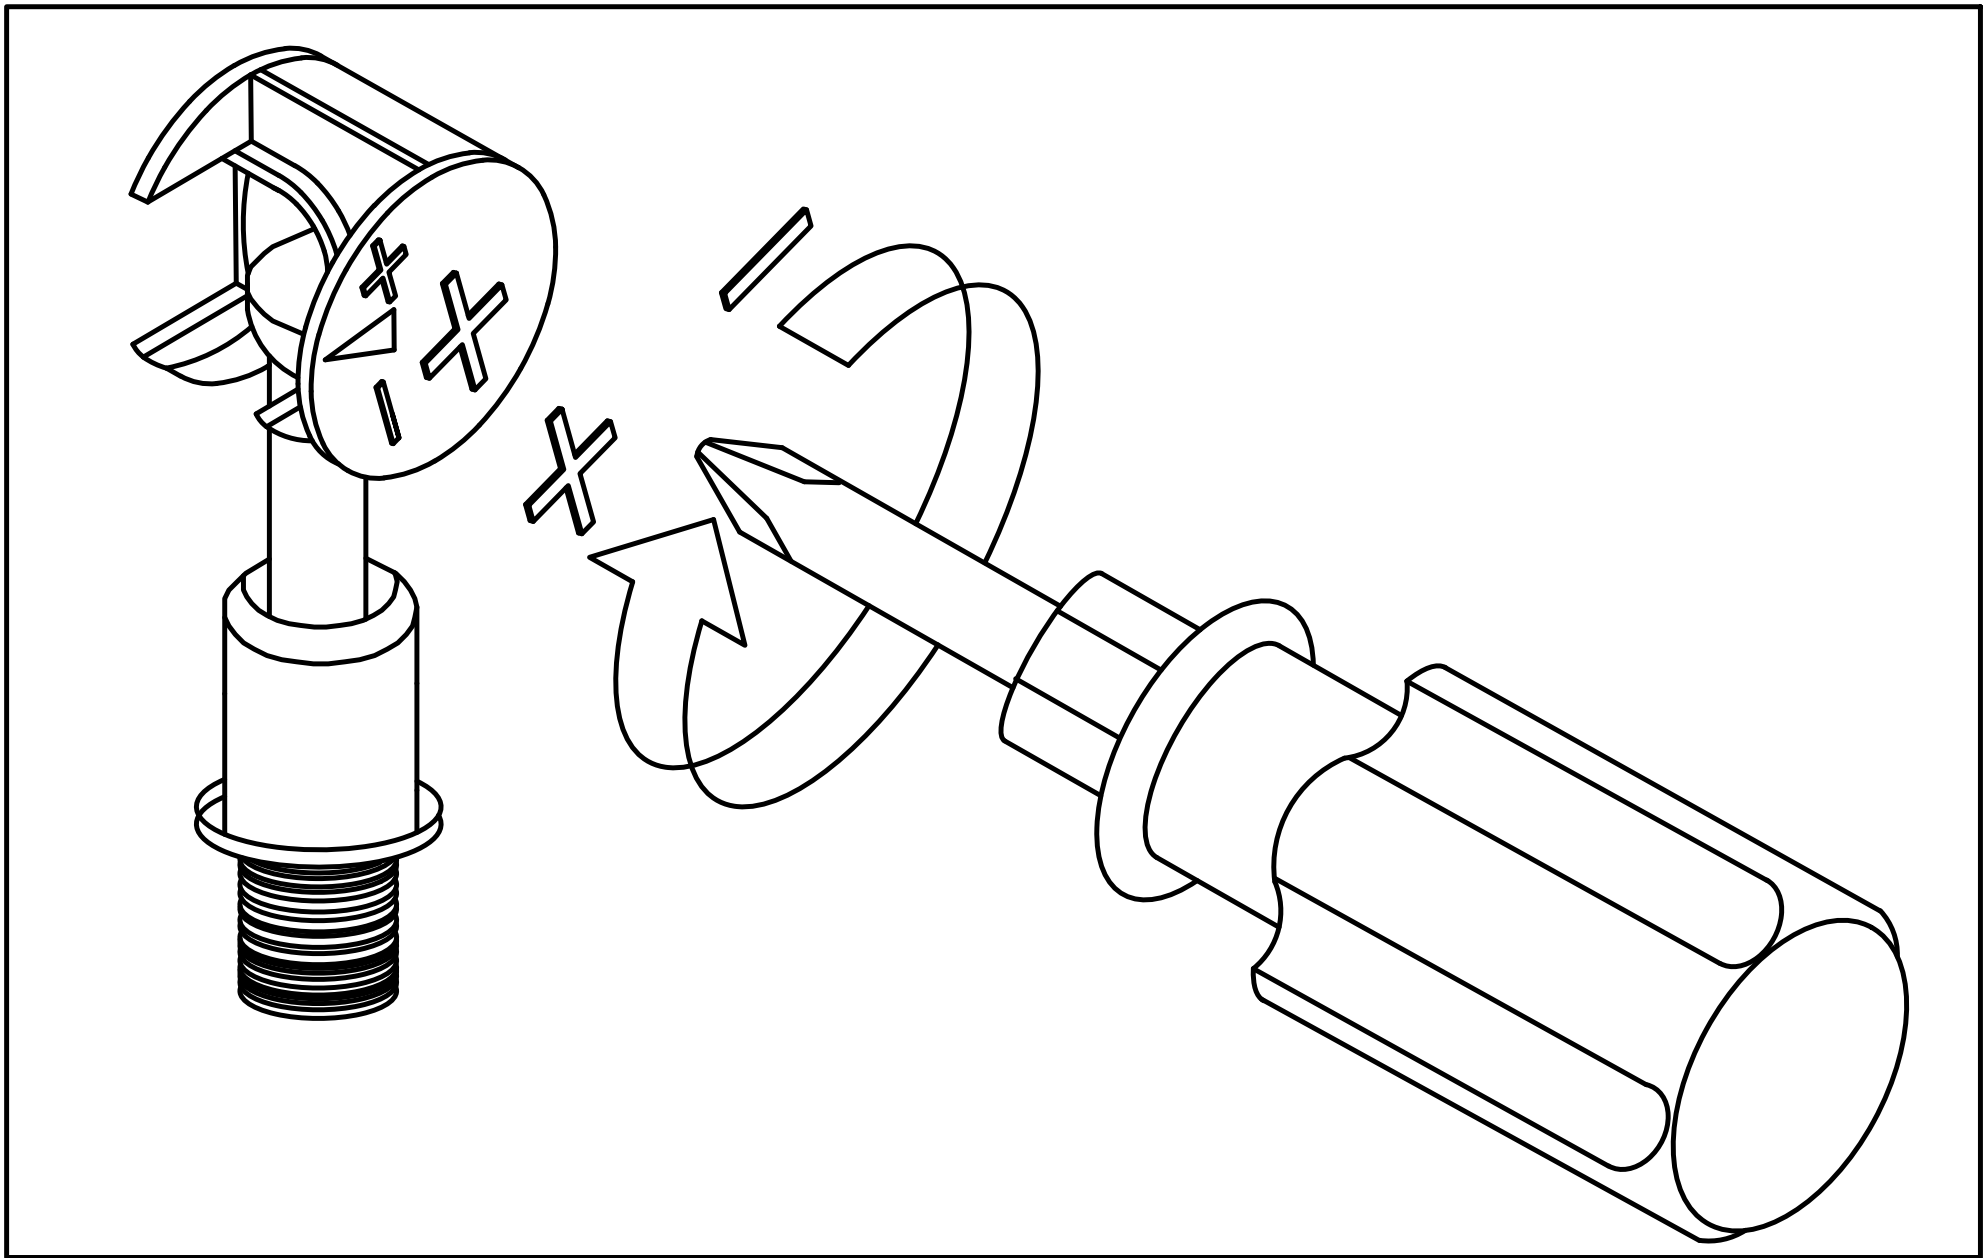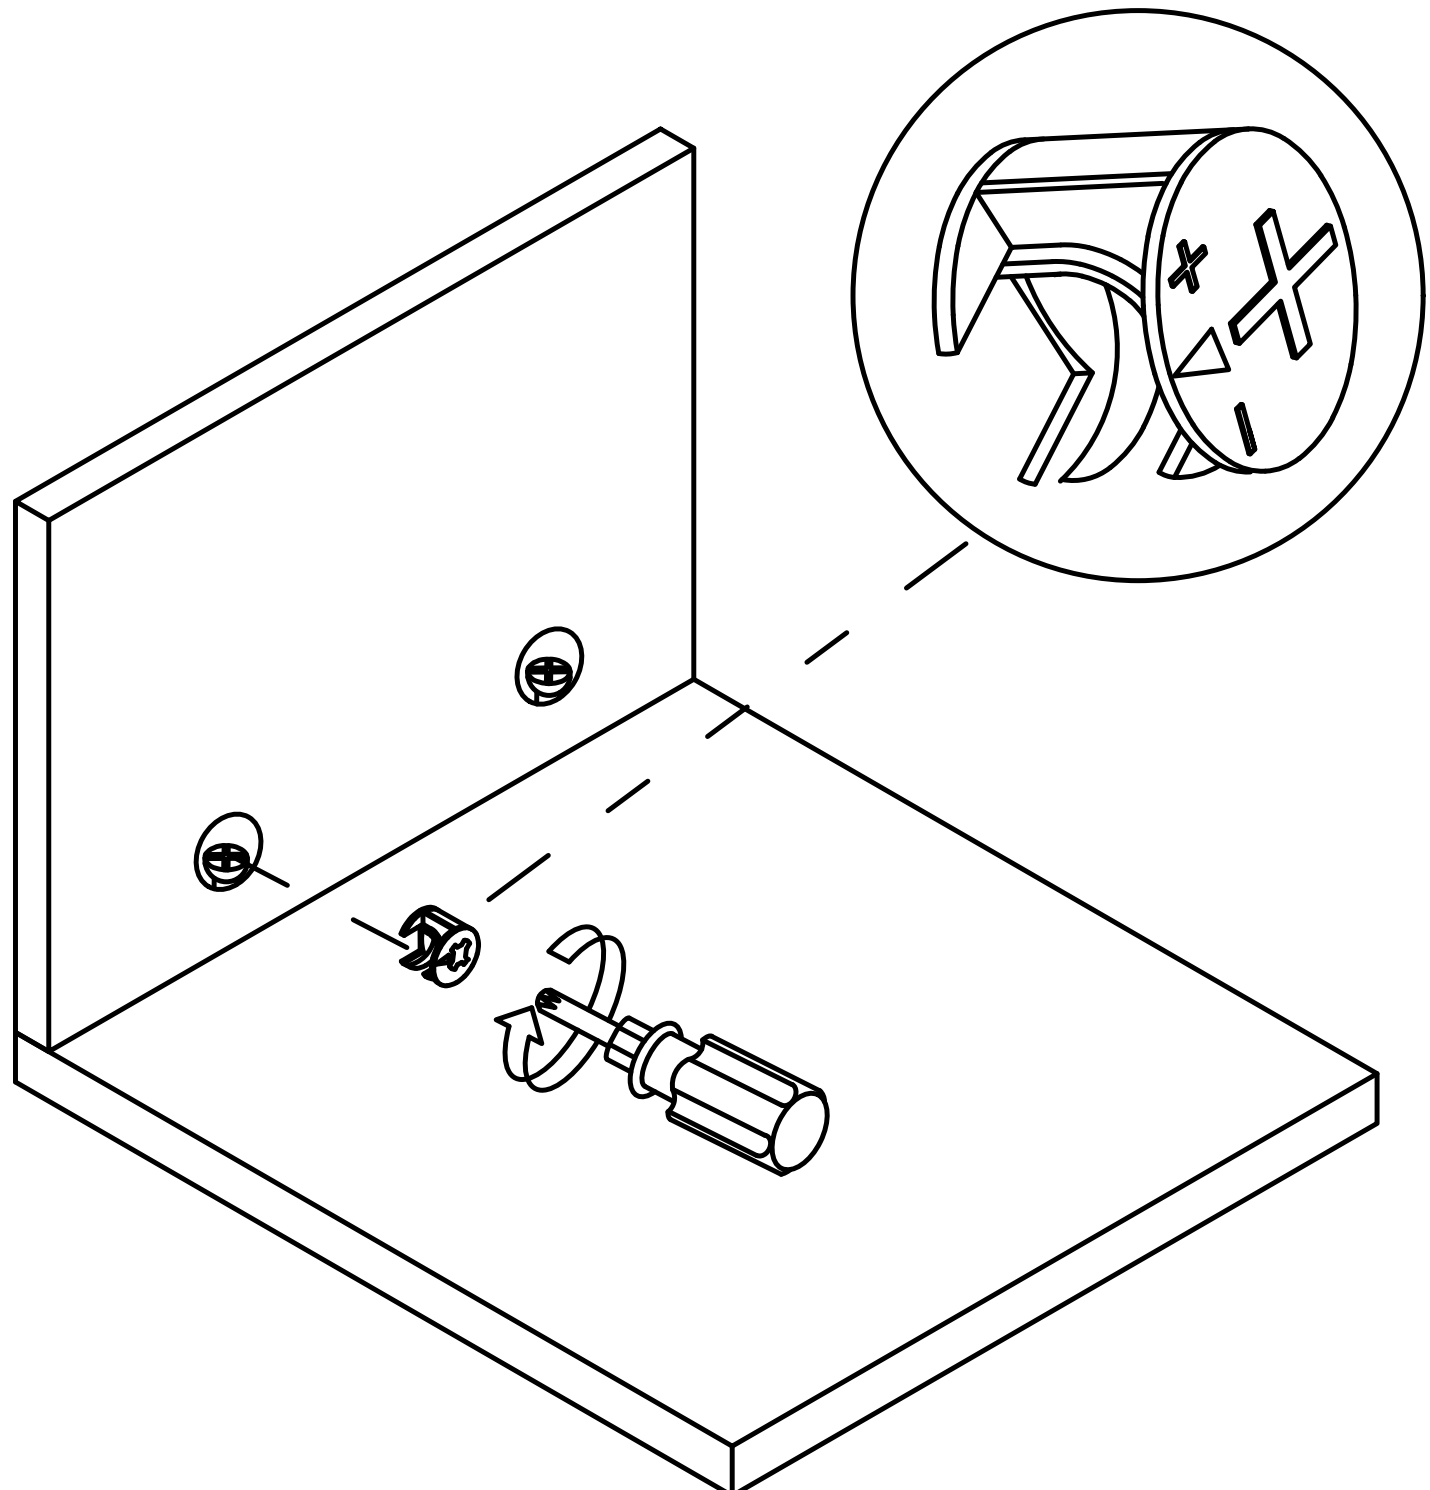


Use a screwdriver to lock in the direction of the "+" sign

Disassemble along the direction of "-" sign



Step 1

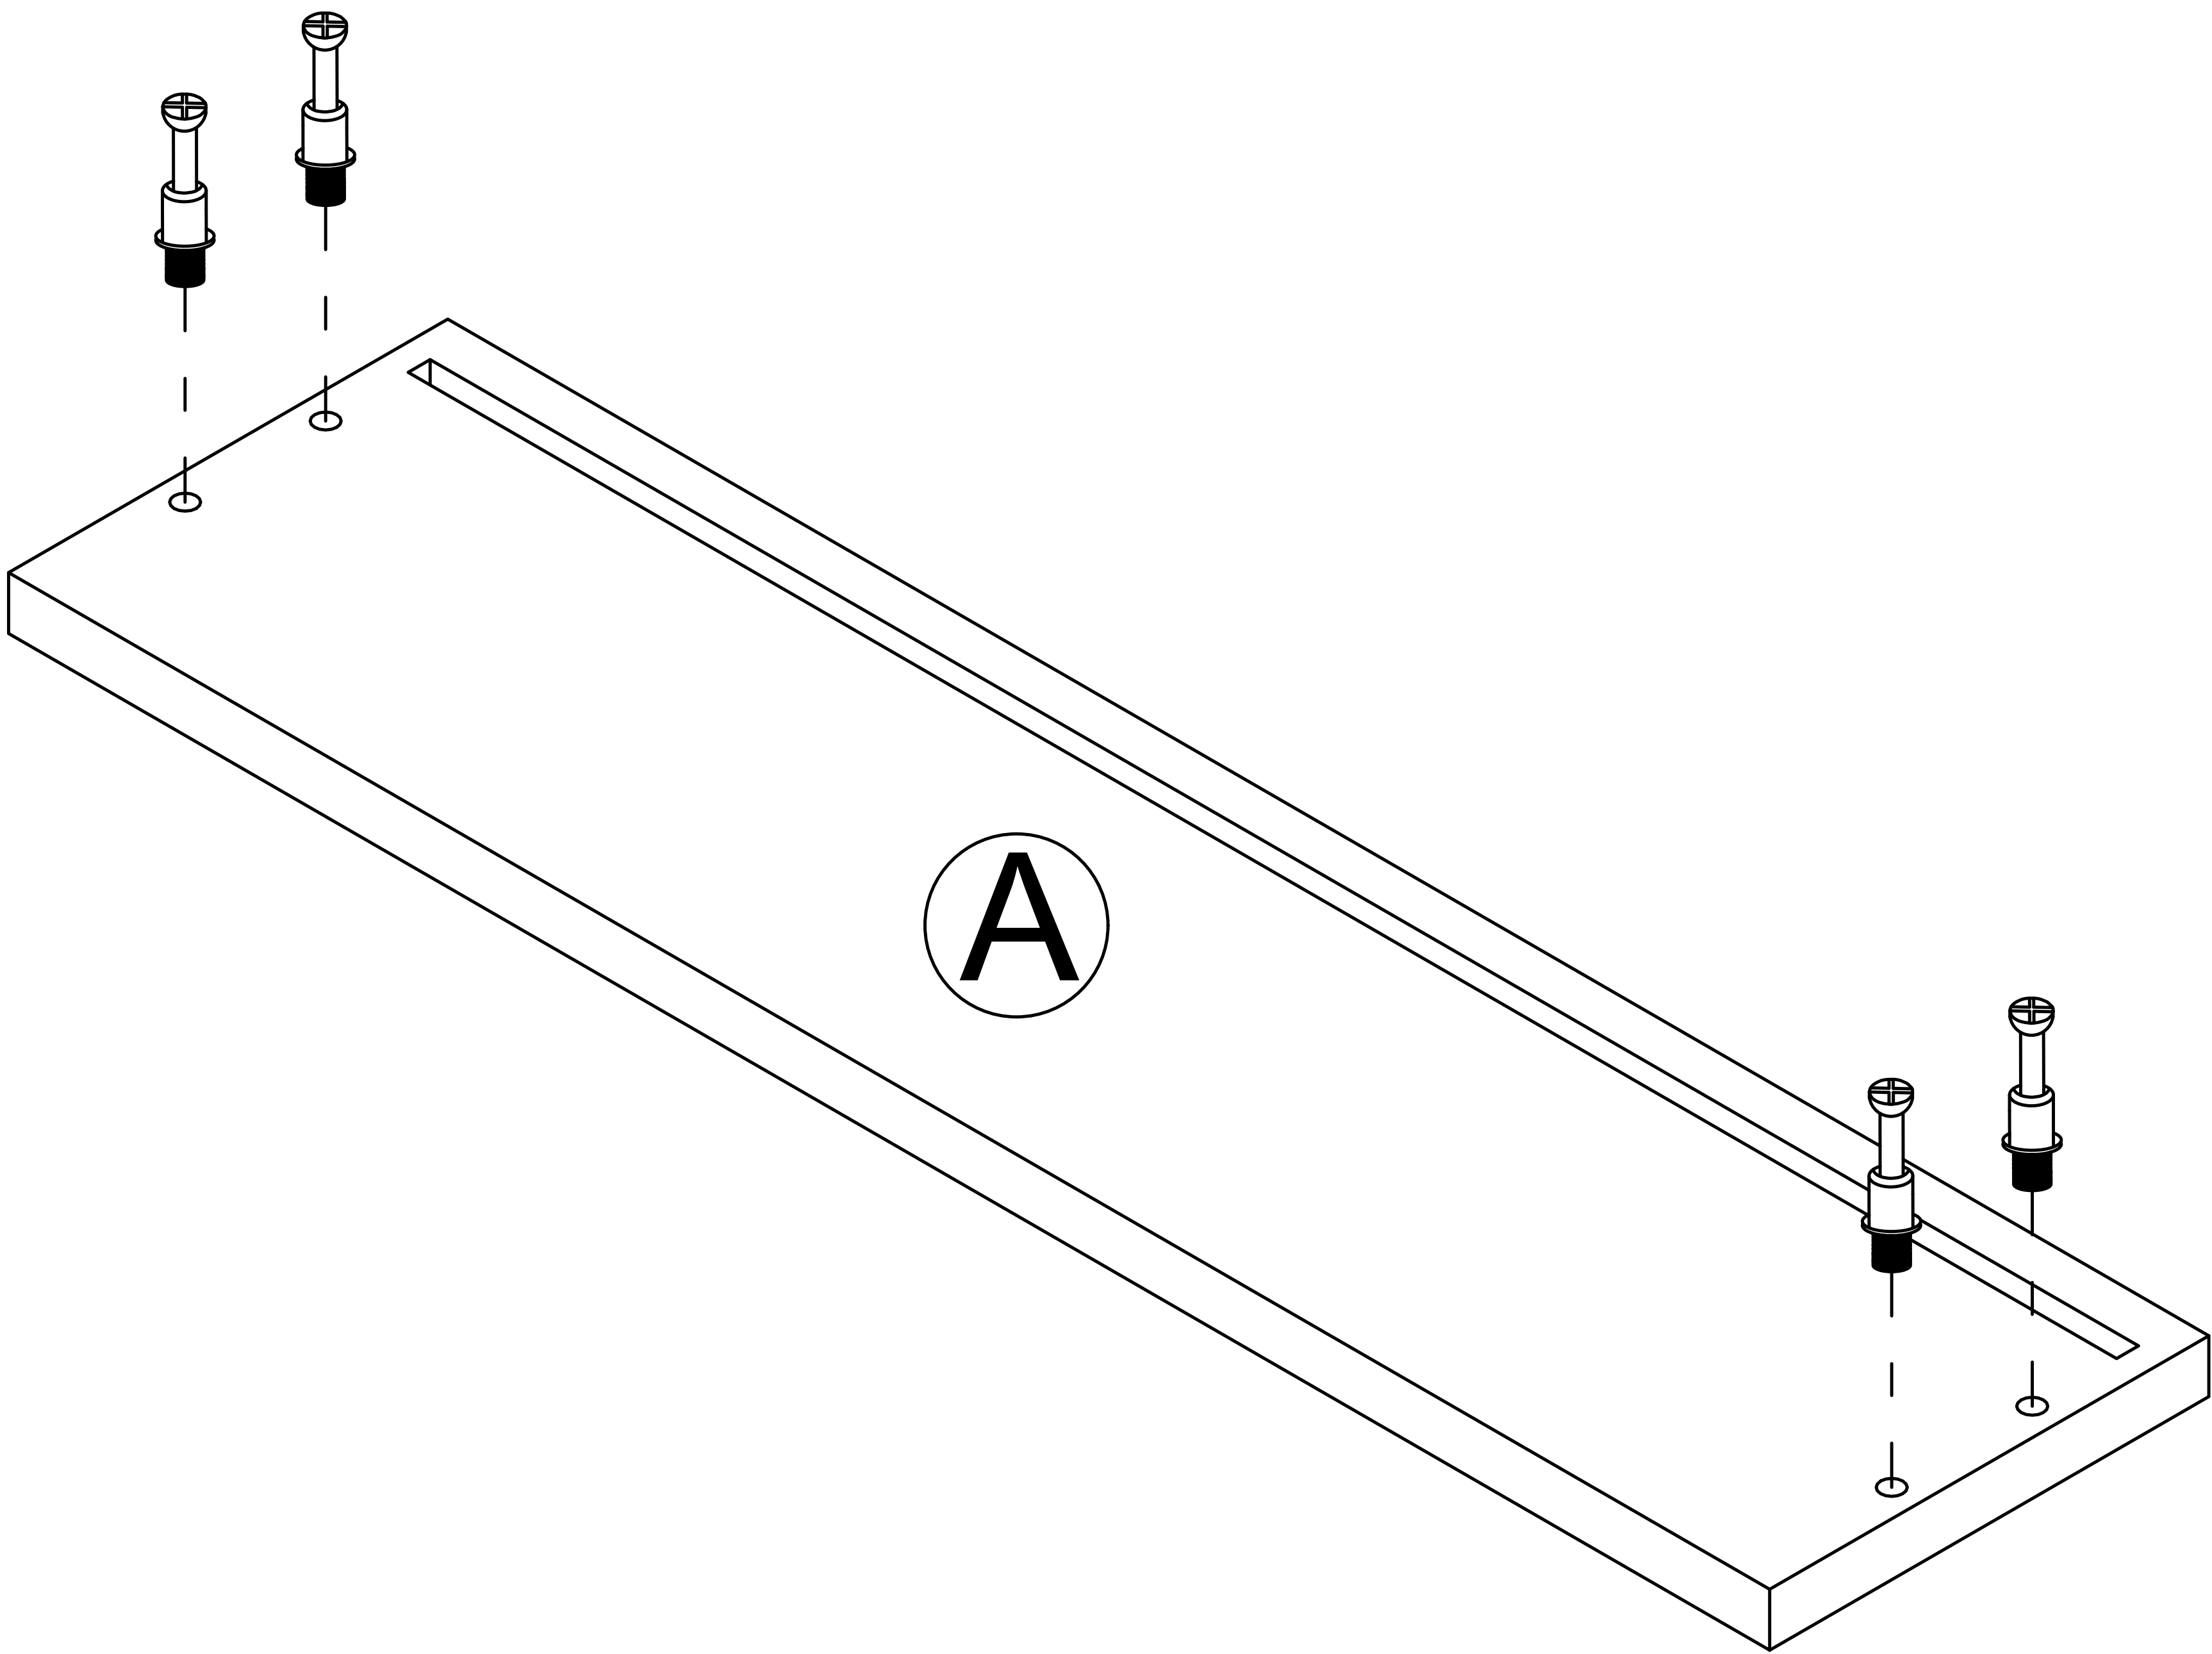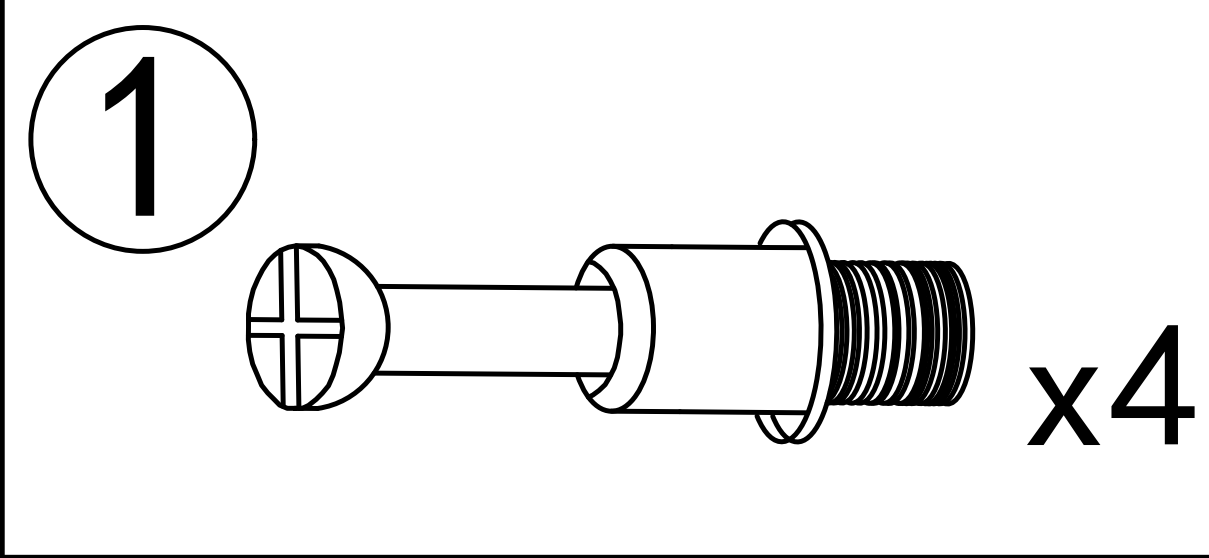



Step 2

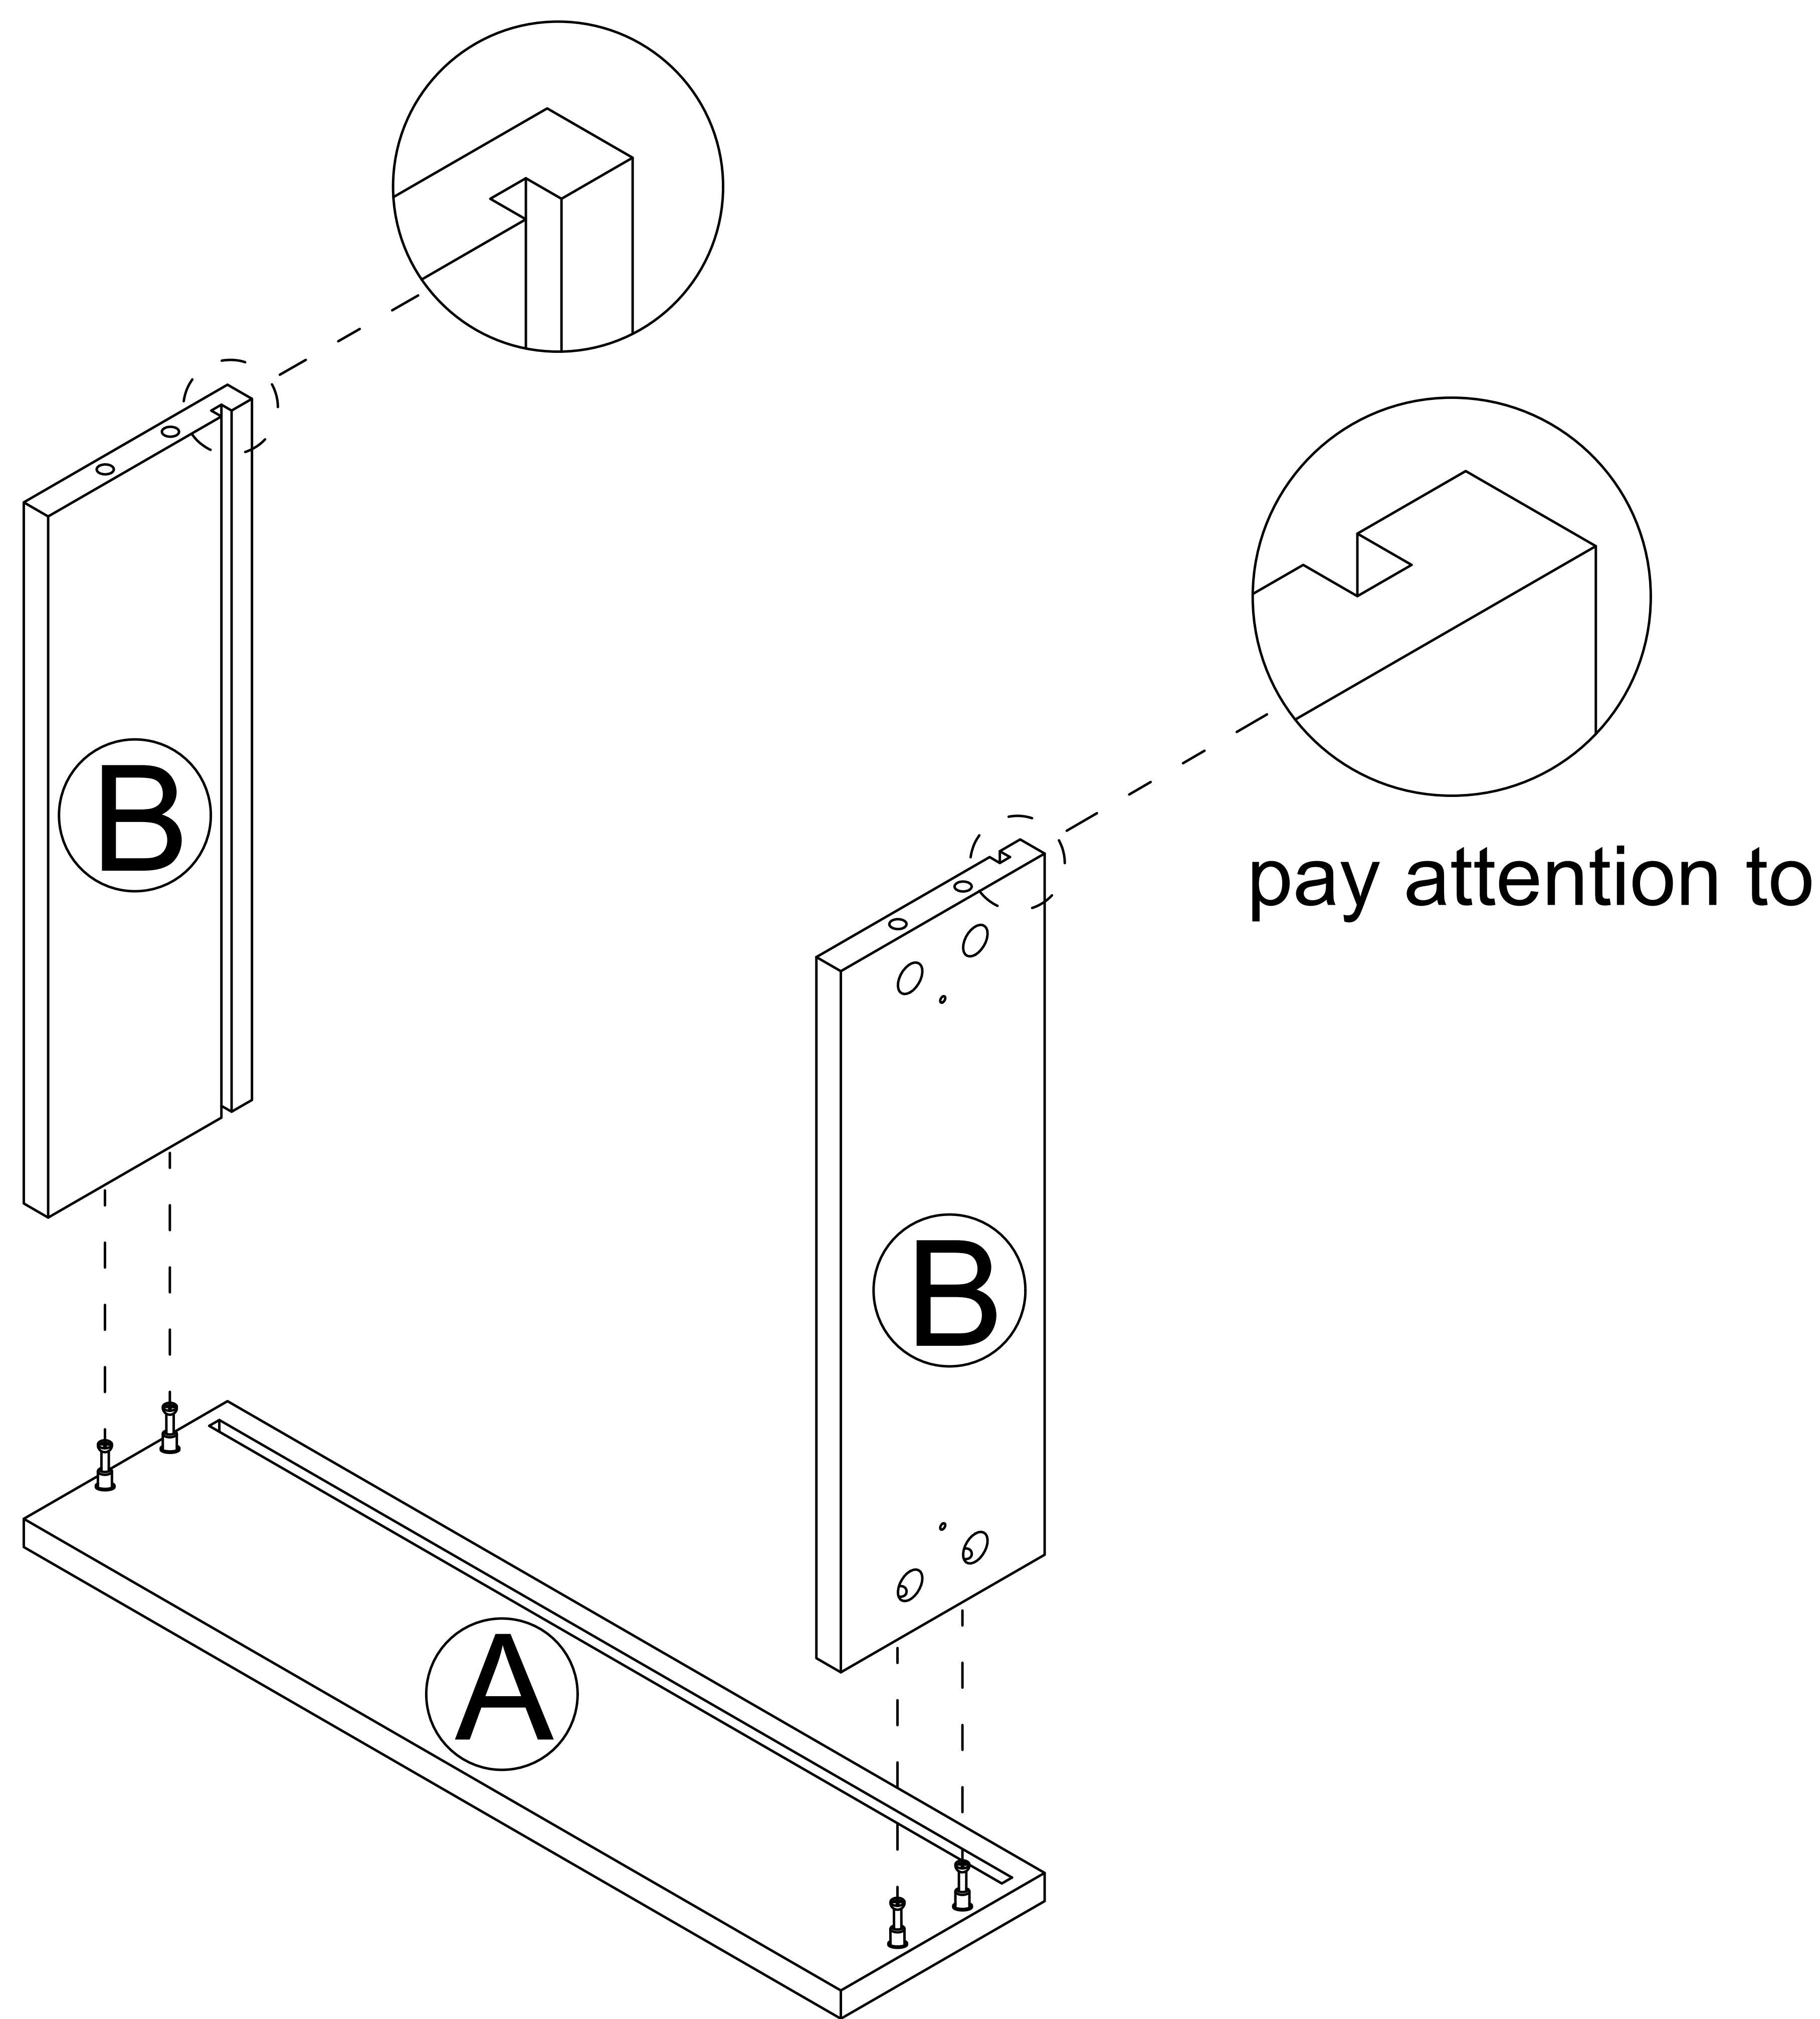



Step 3

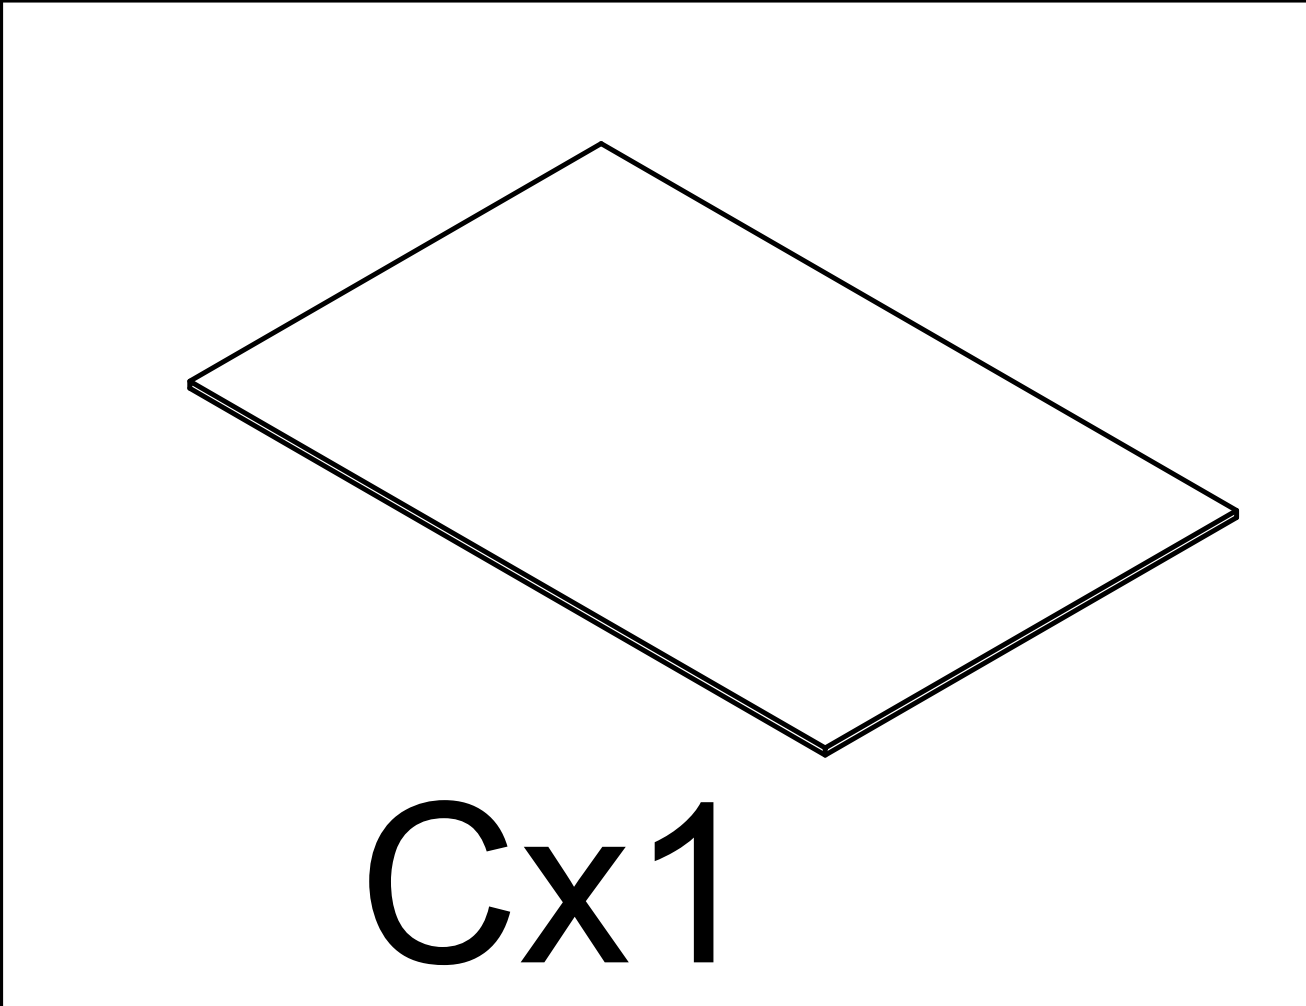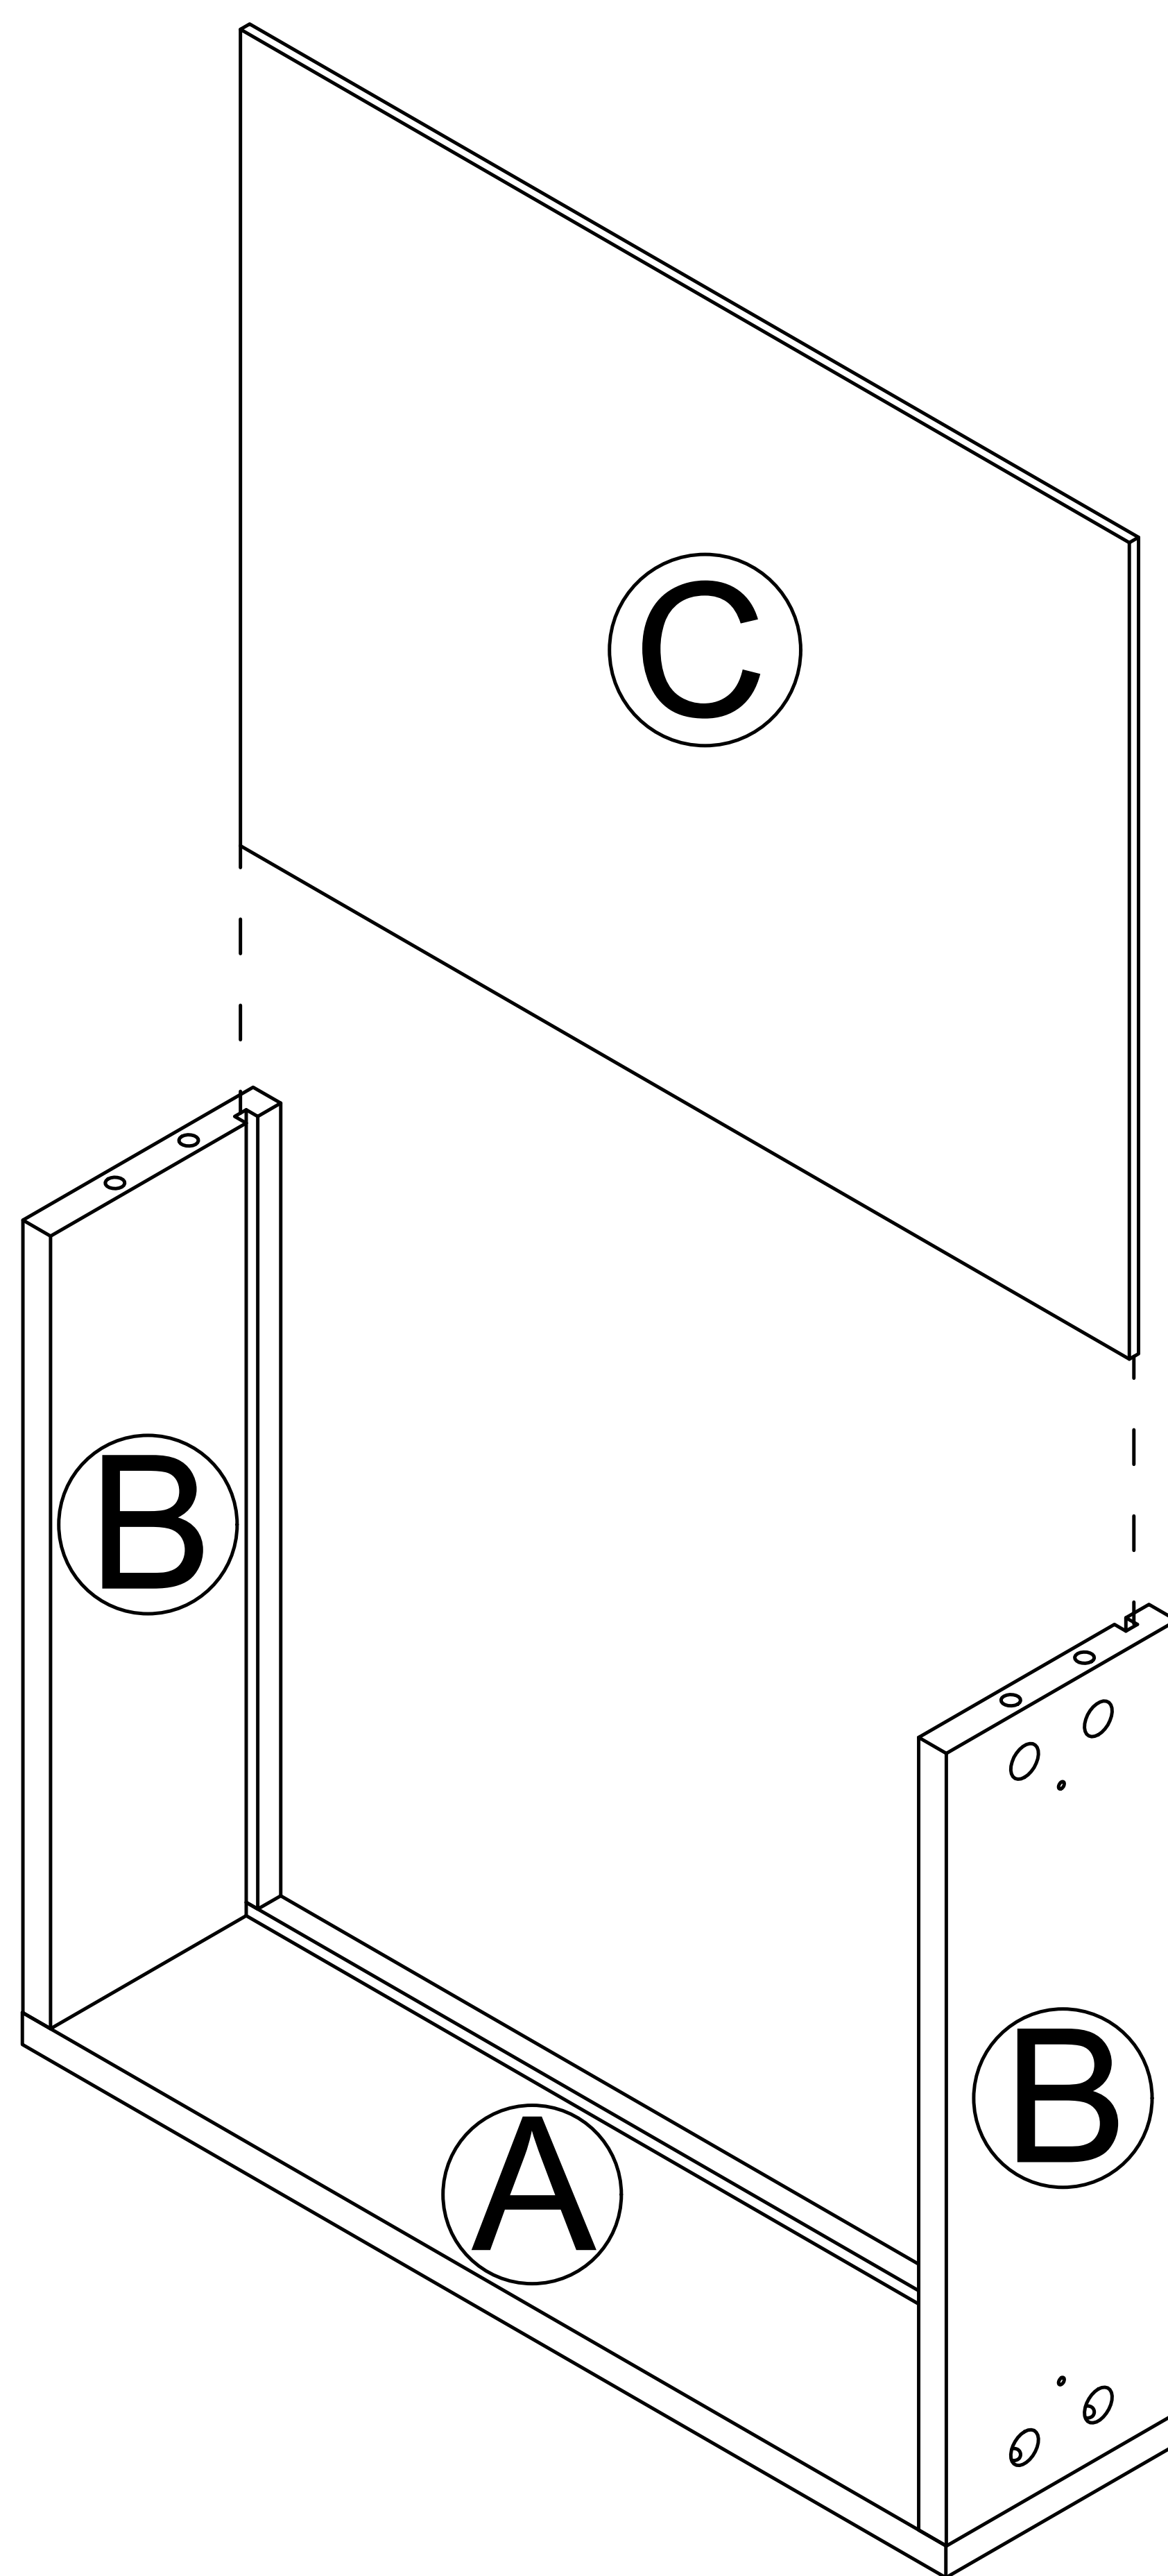

Step 4

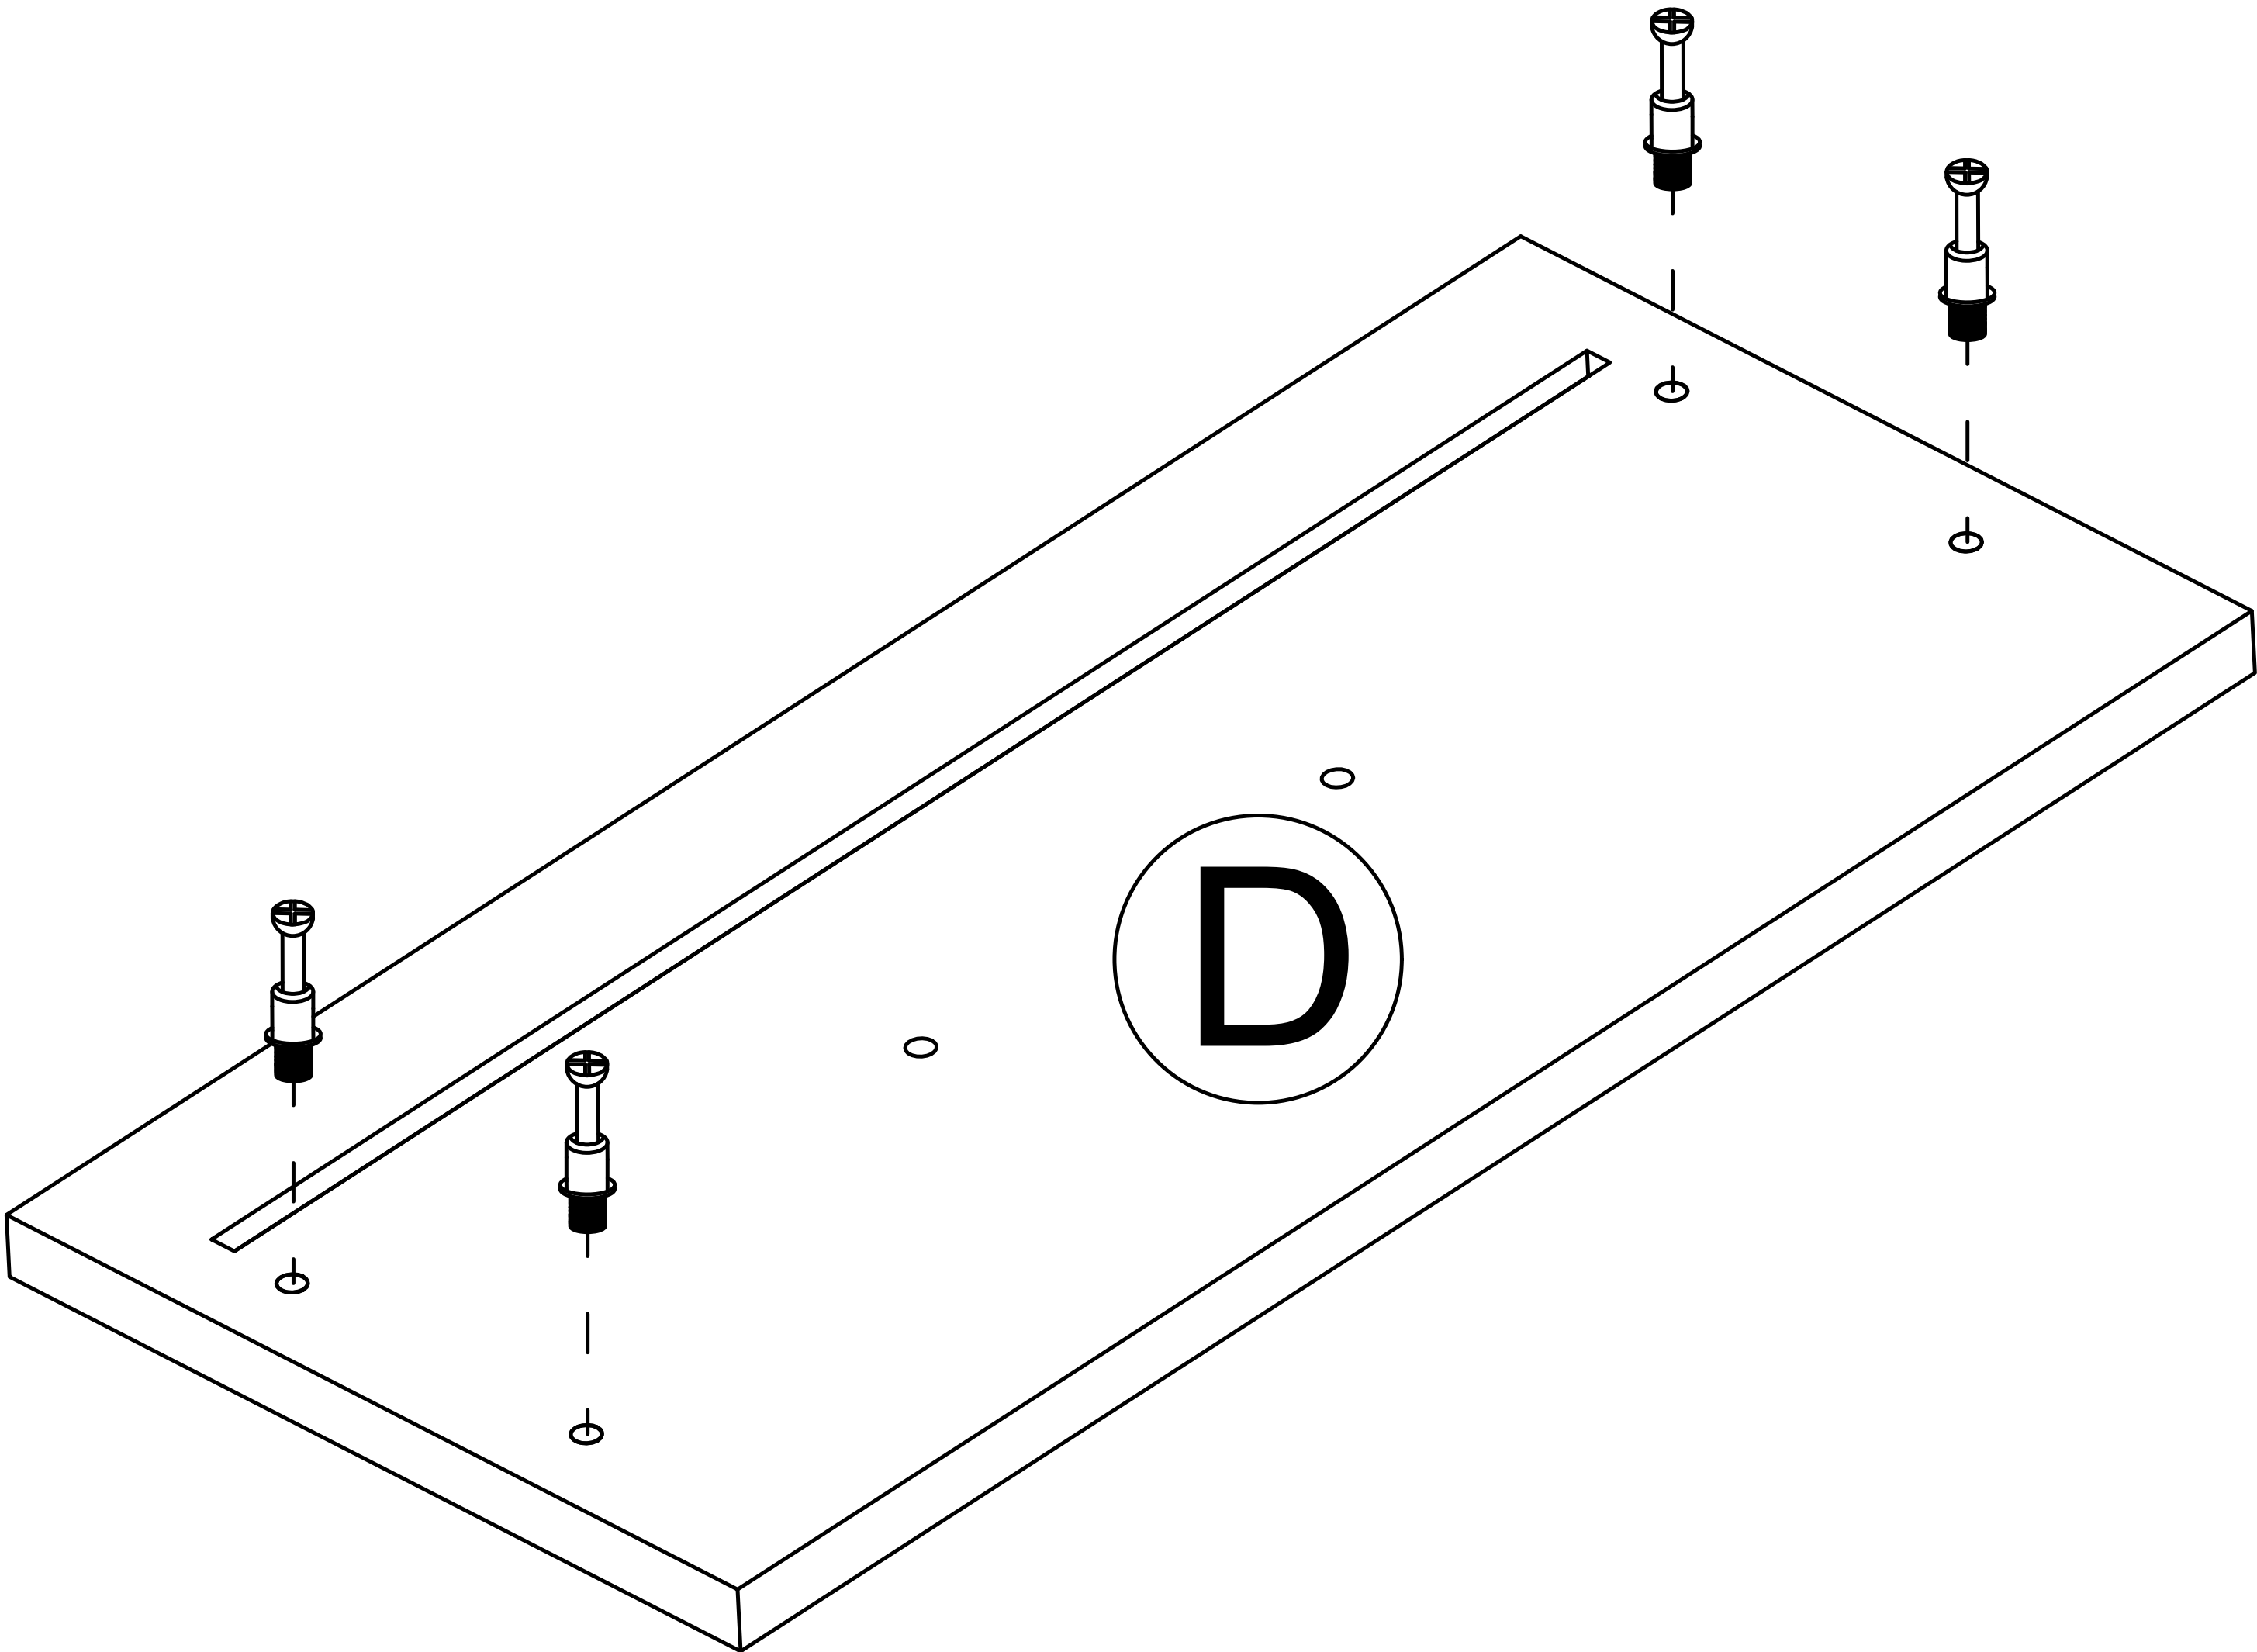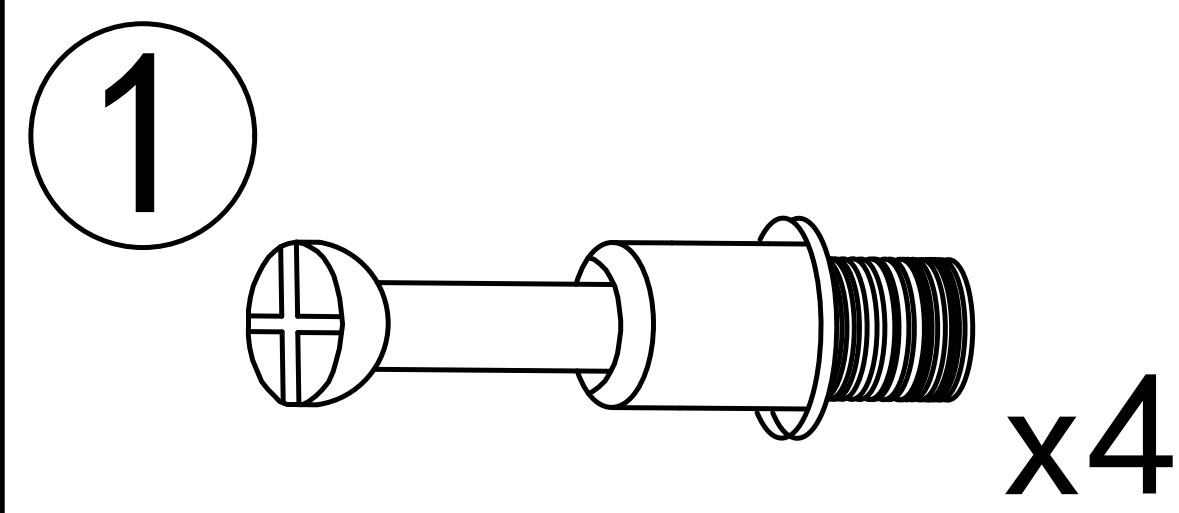


Step 5

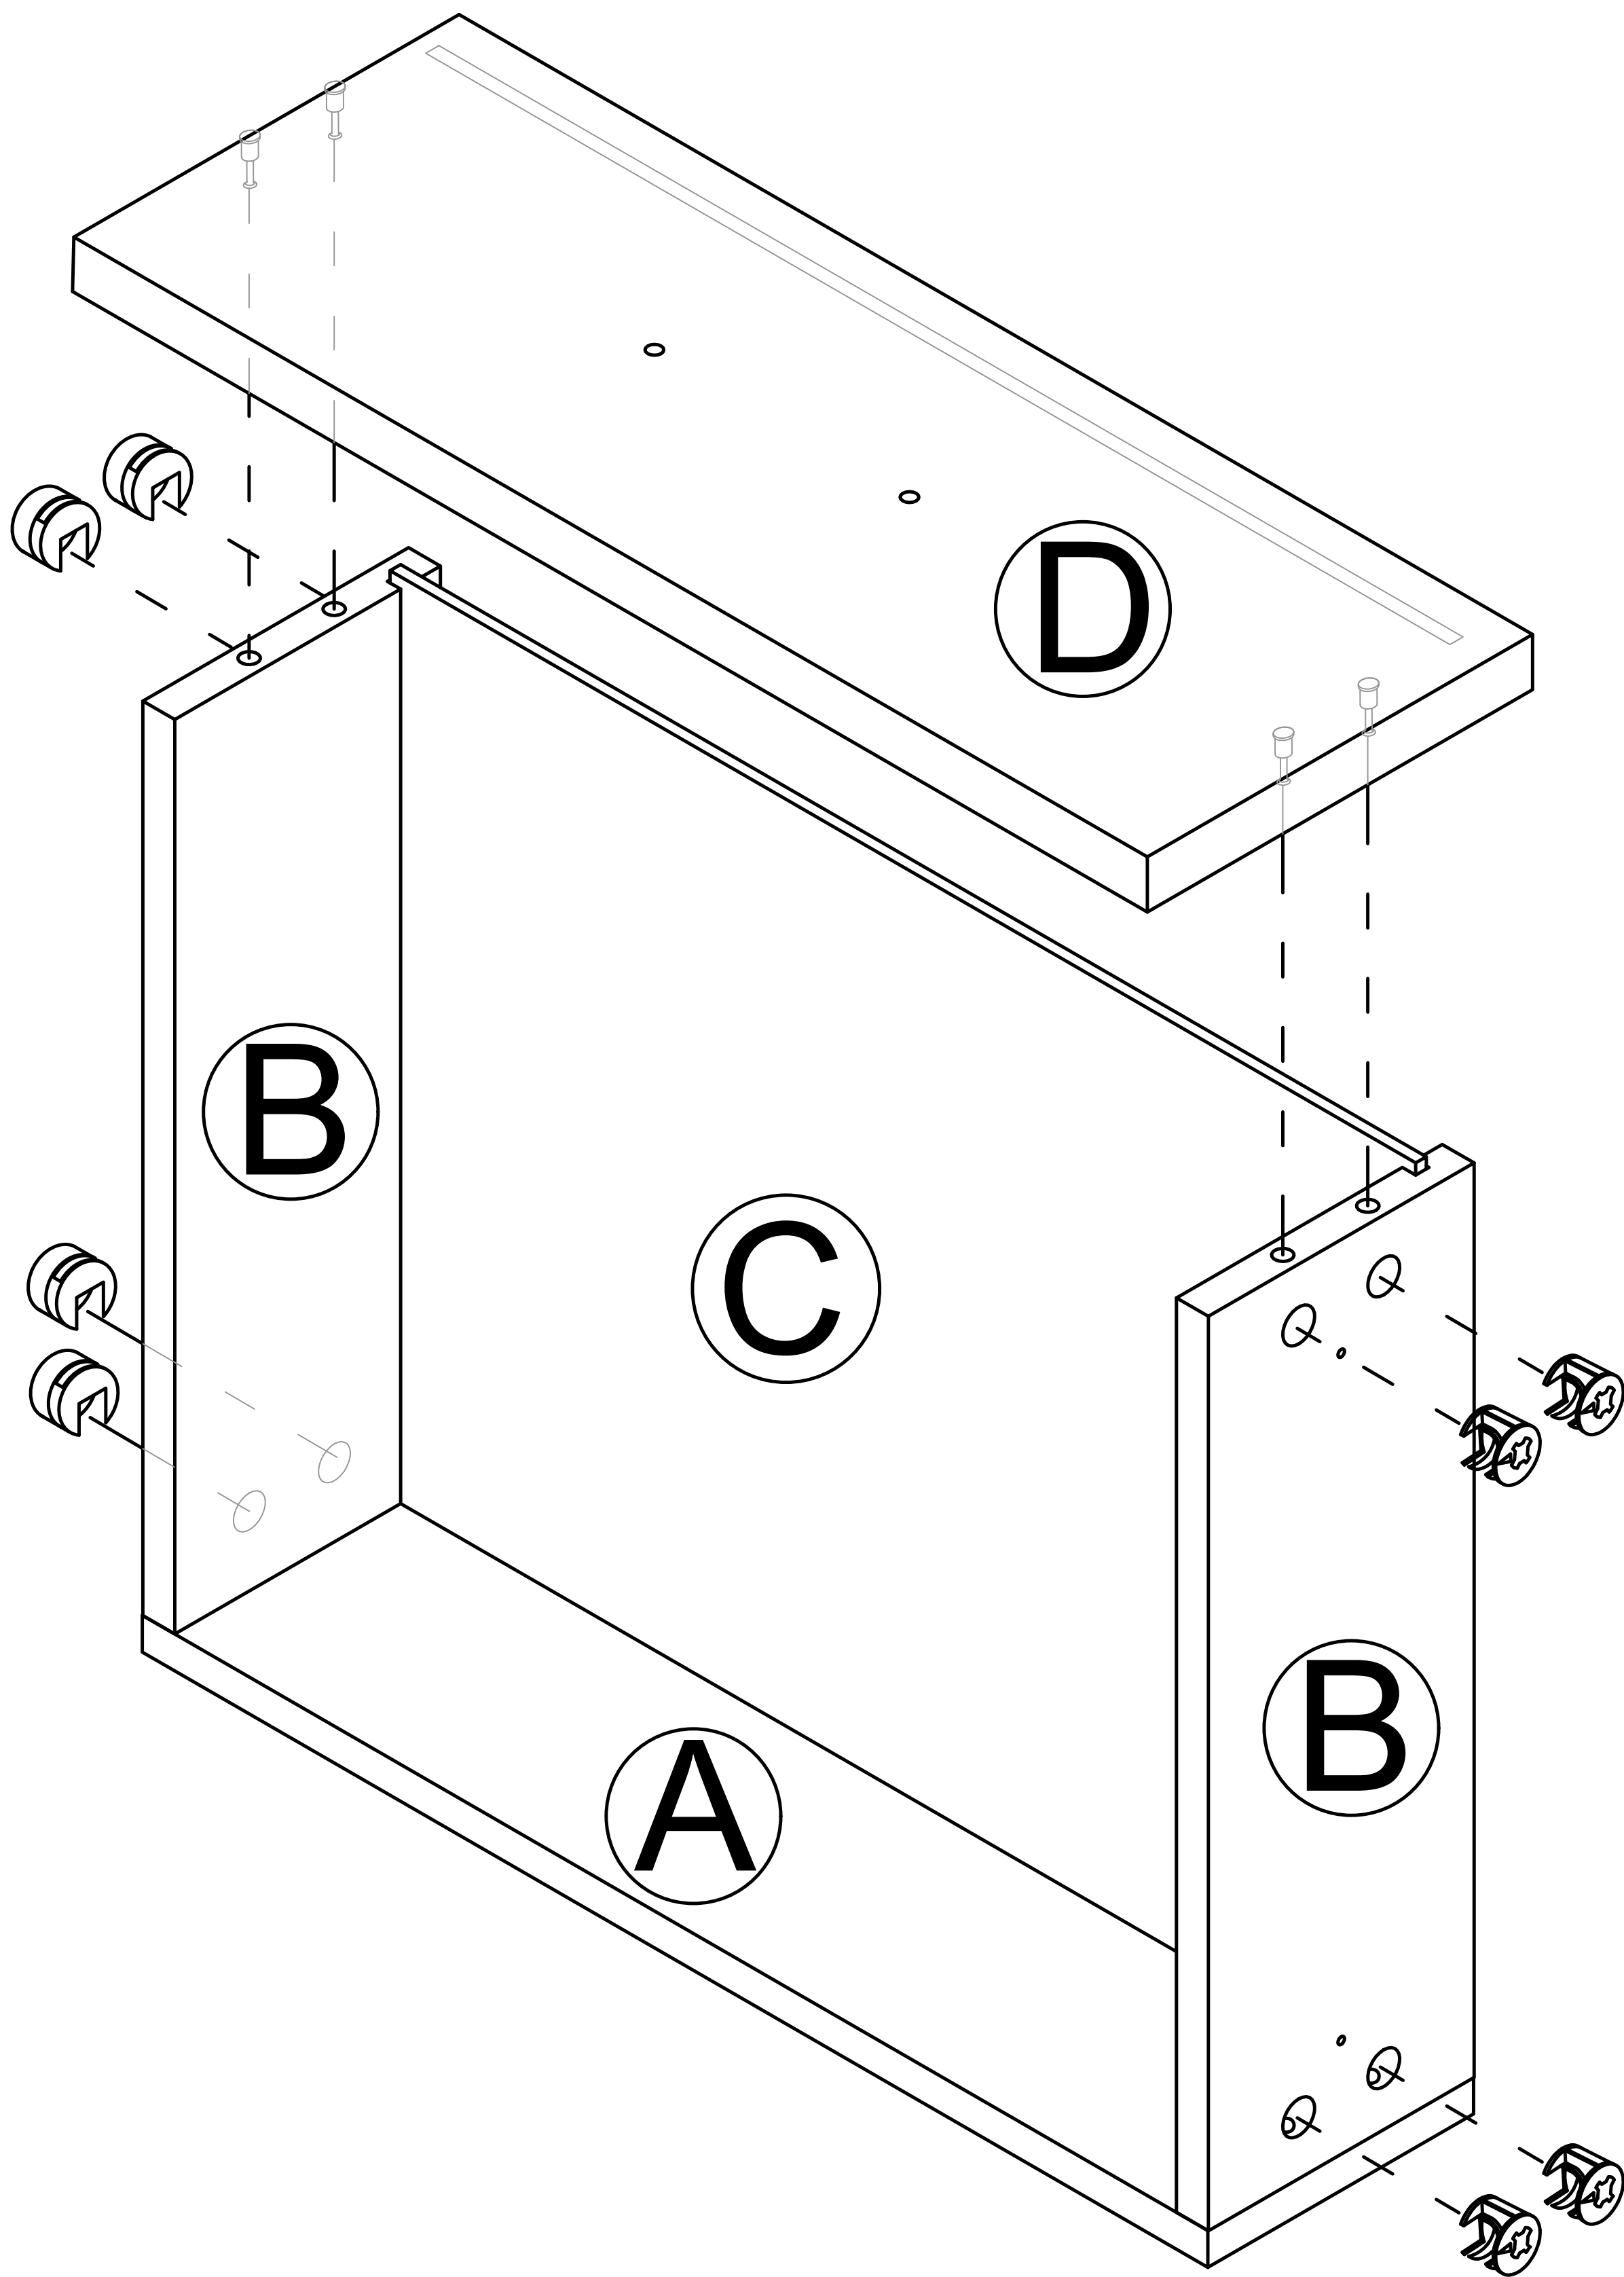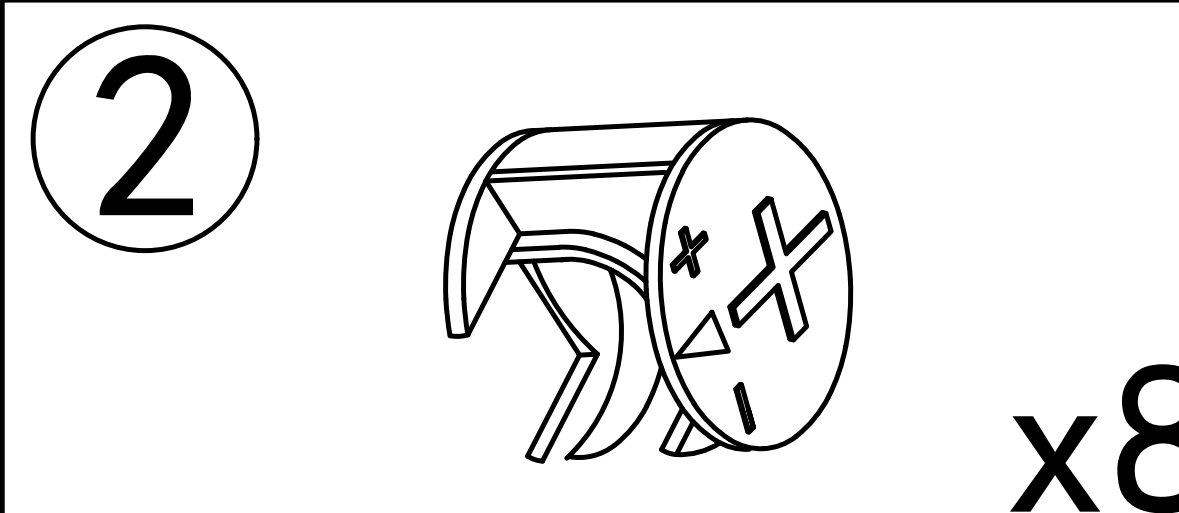


Use parts ⑤

Drawer rail breakdown diagram

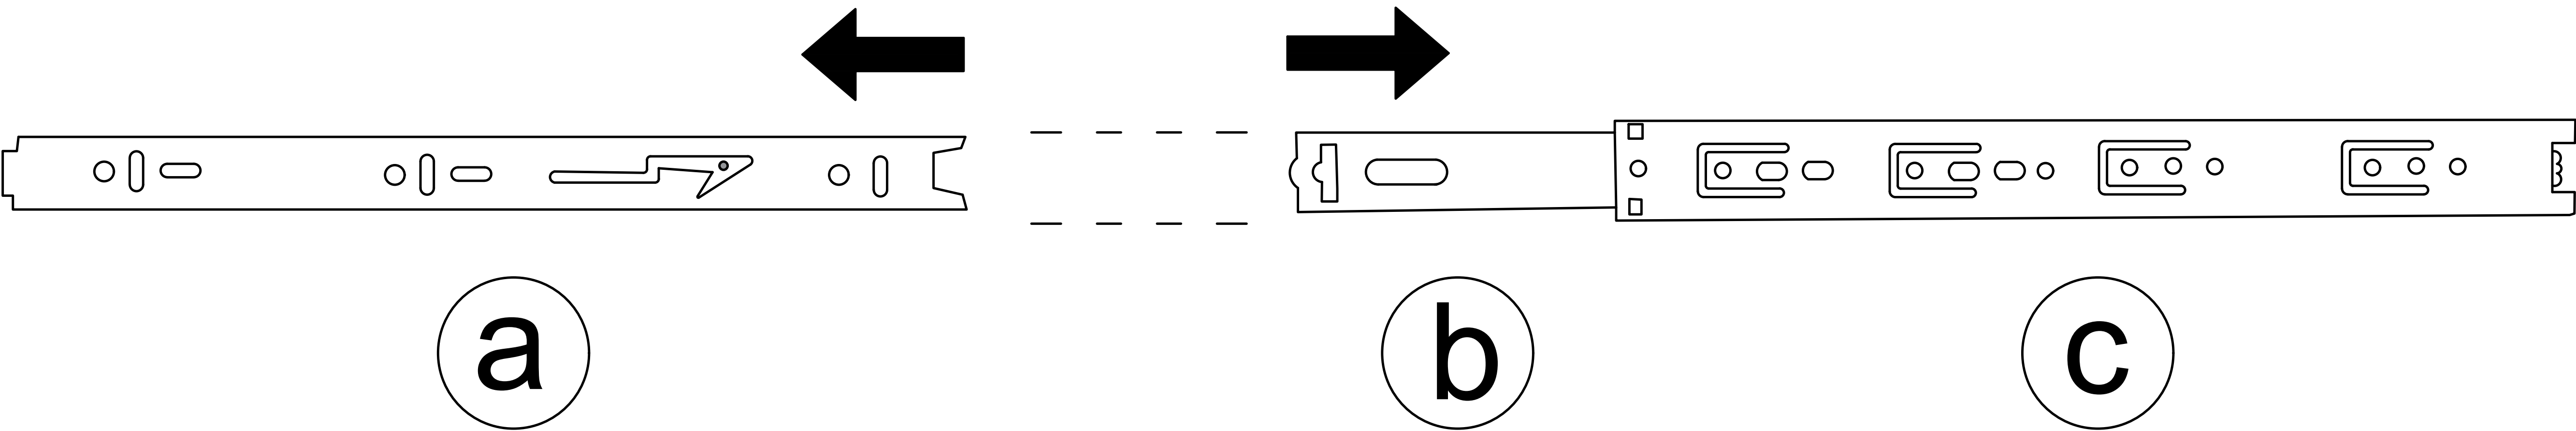


① Dismantle the schematic diagram

Step 1 : Pull the rails apart






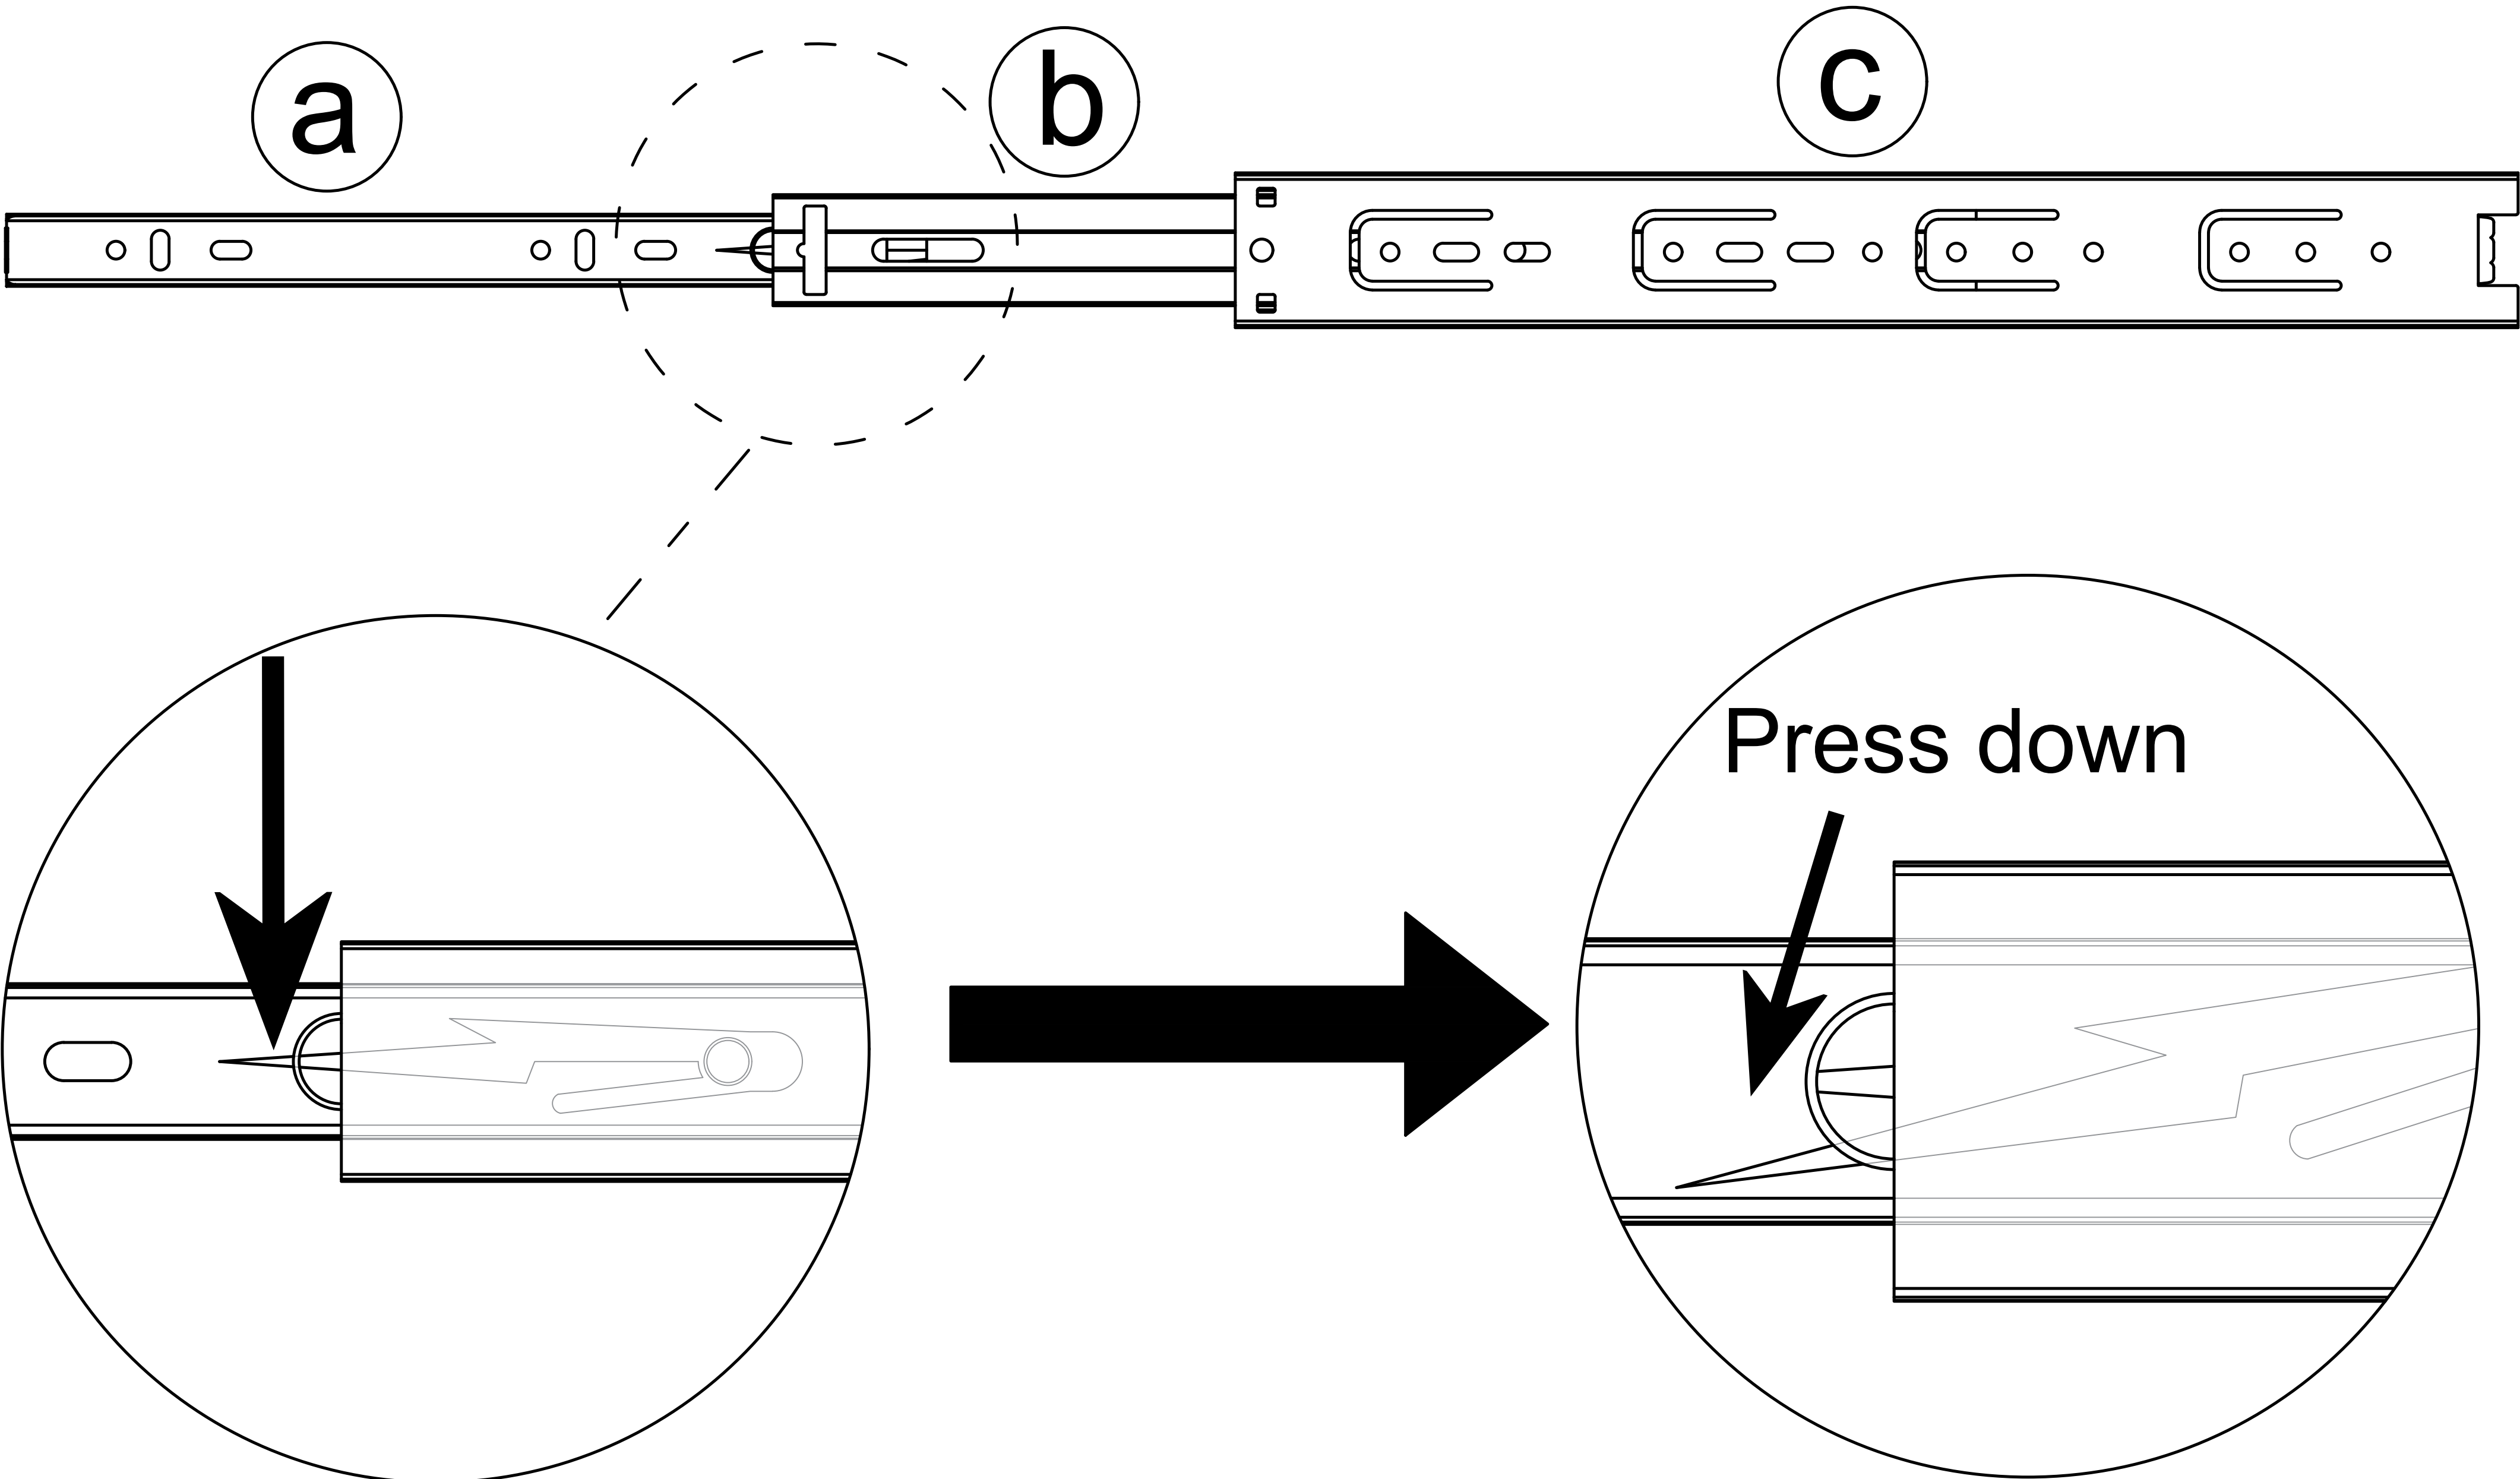


Step 2 : Press the nylon button and pull out (a).



Drawer rail decomposition completed schematic diagram

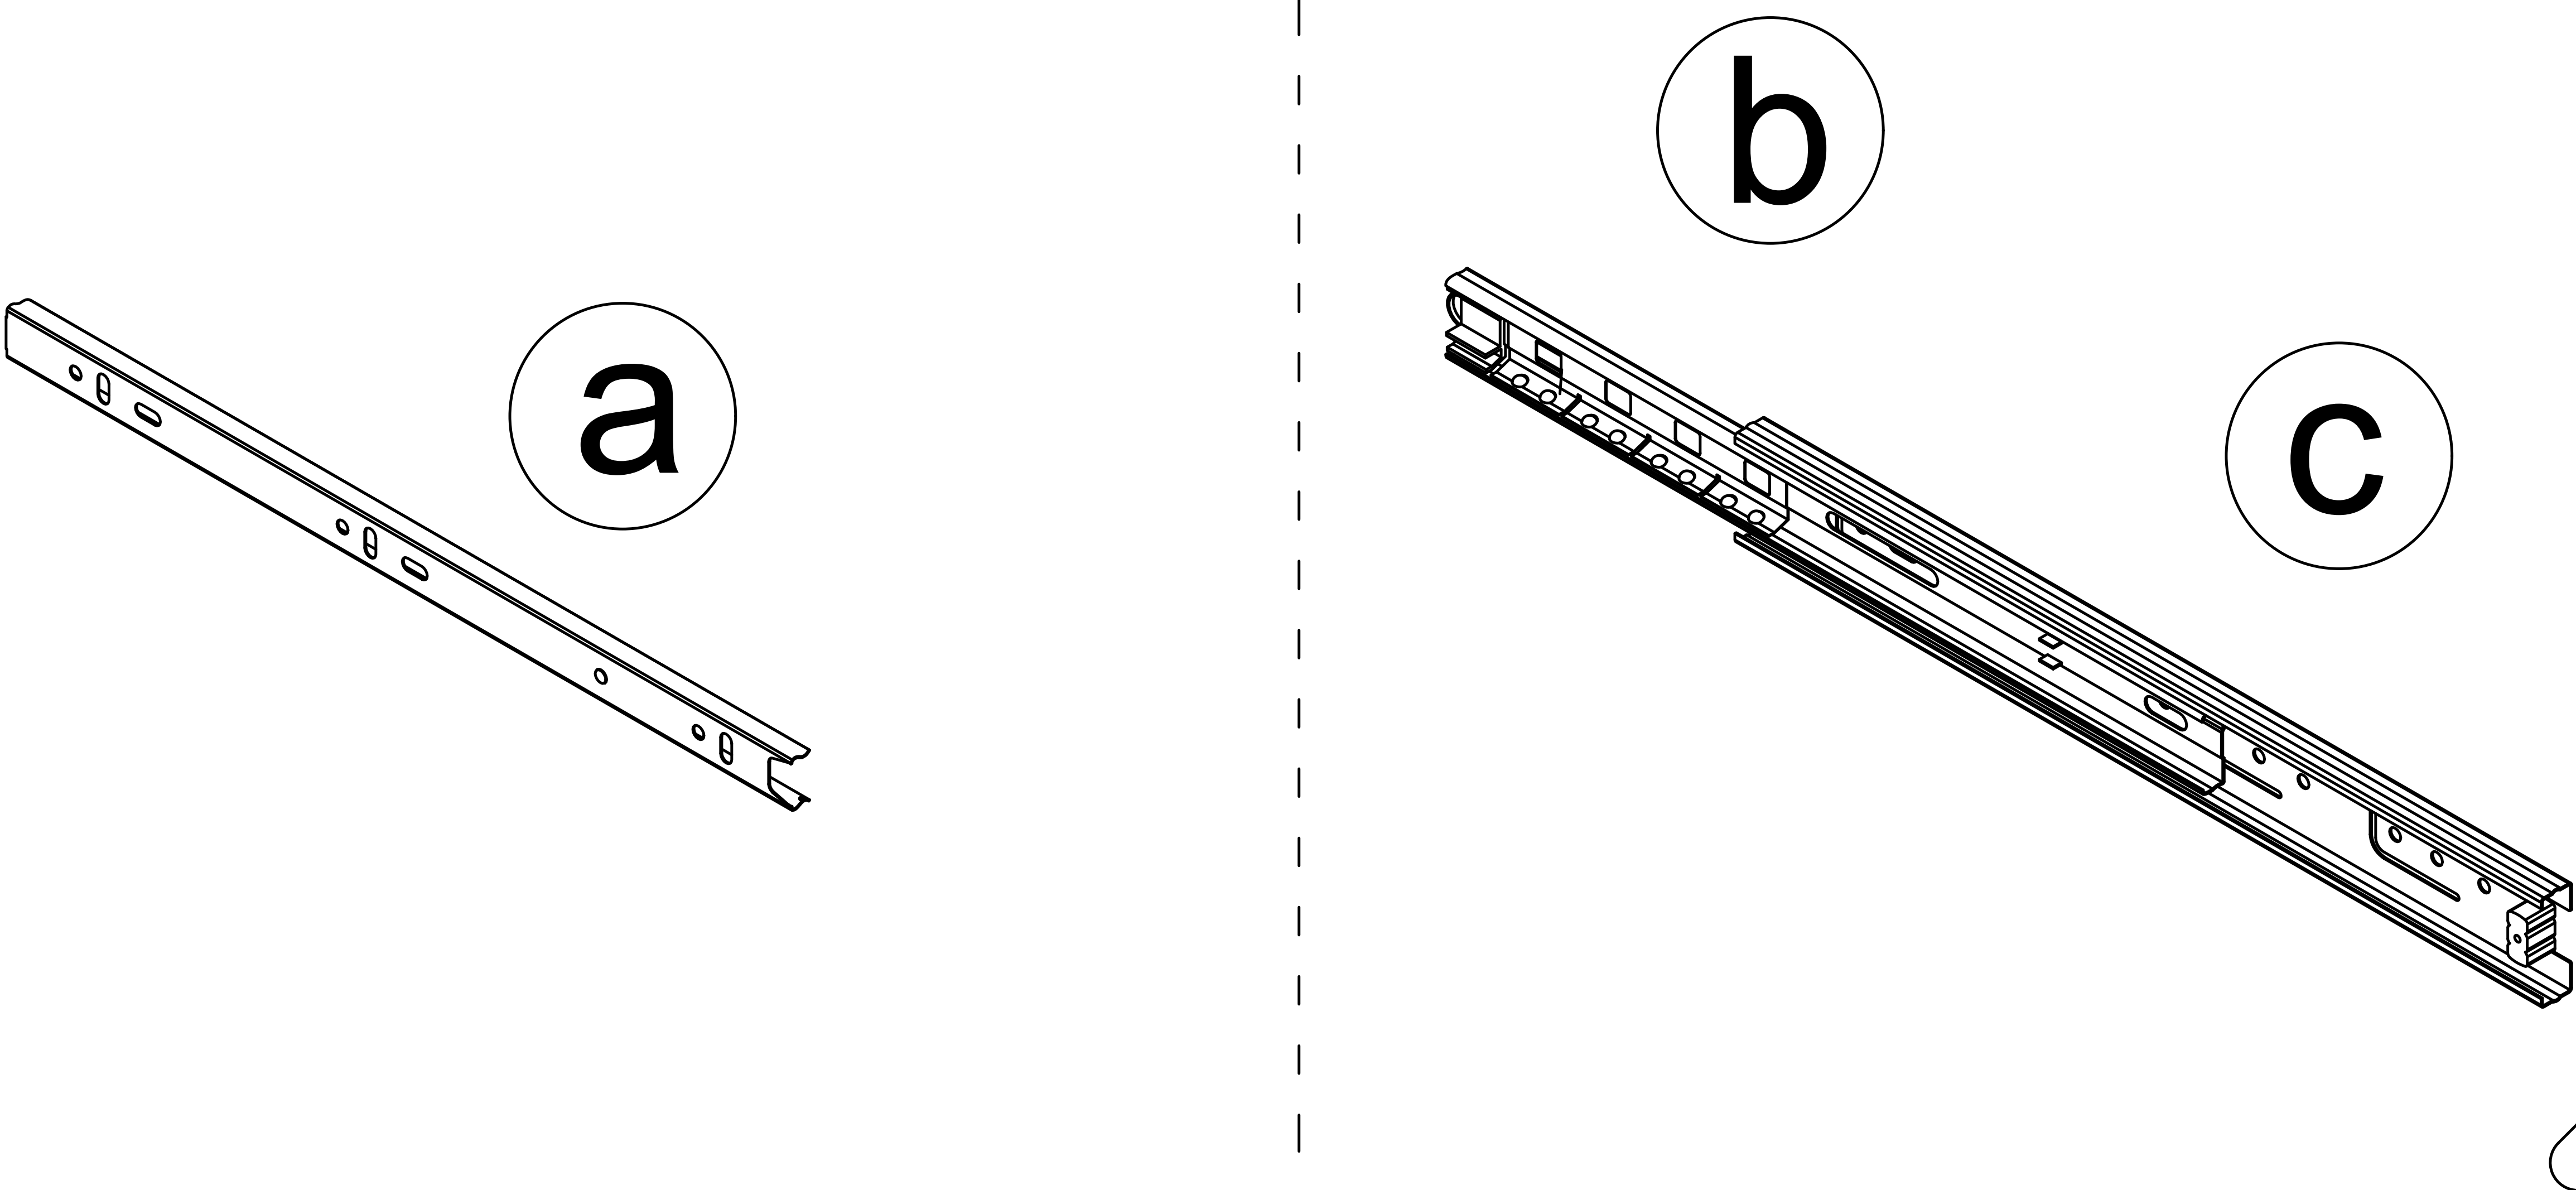

Step 6

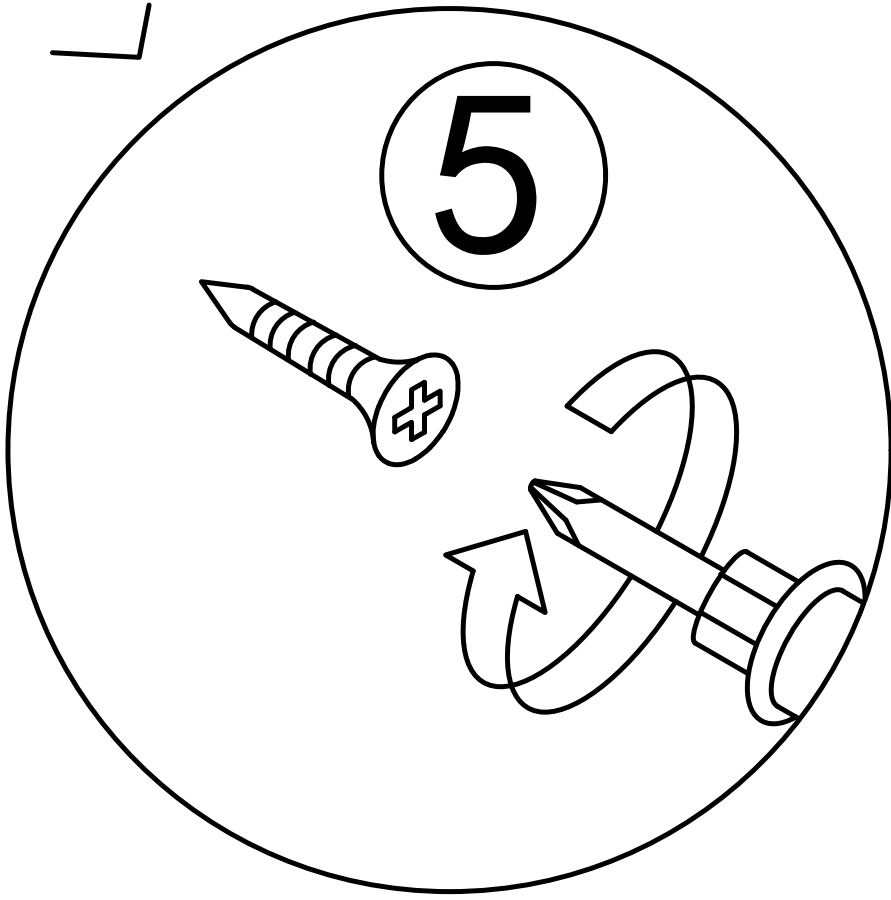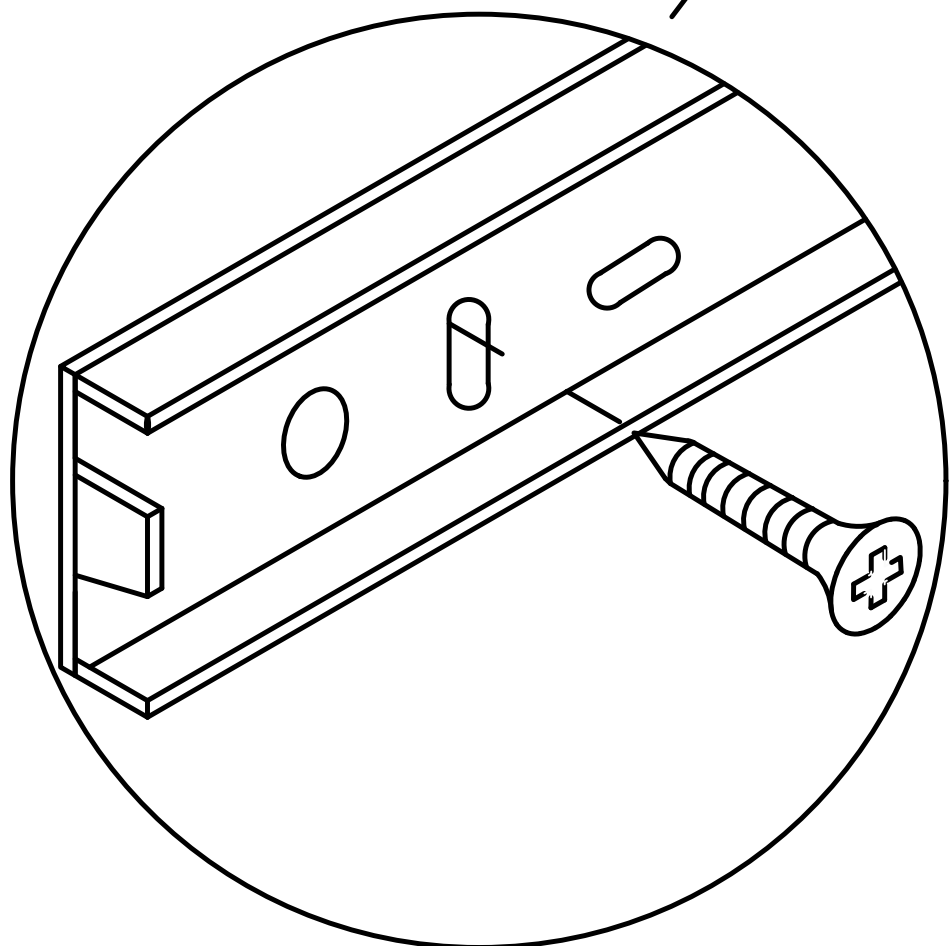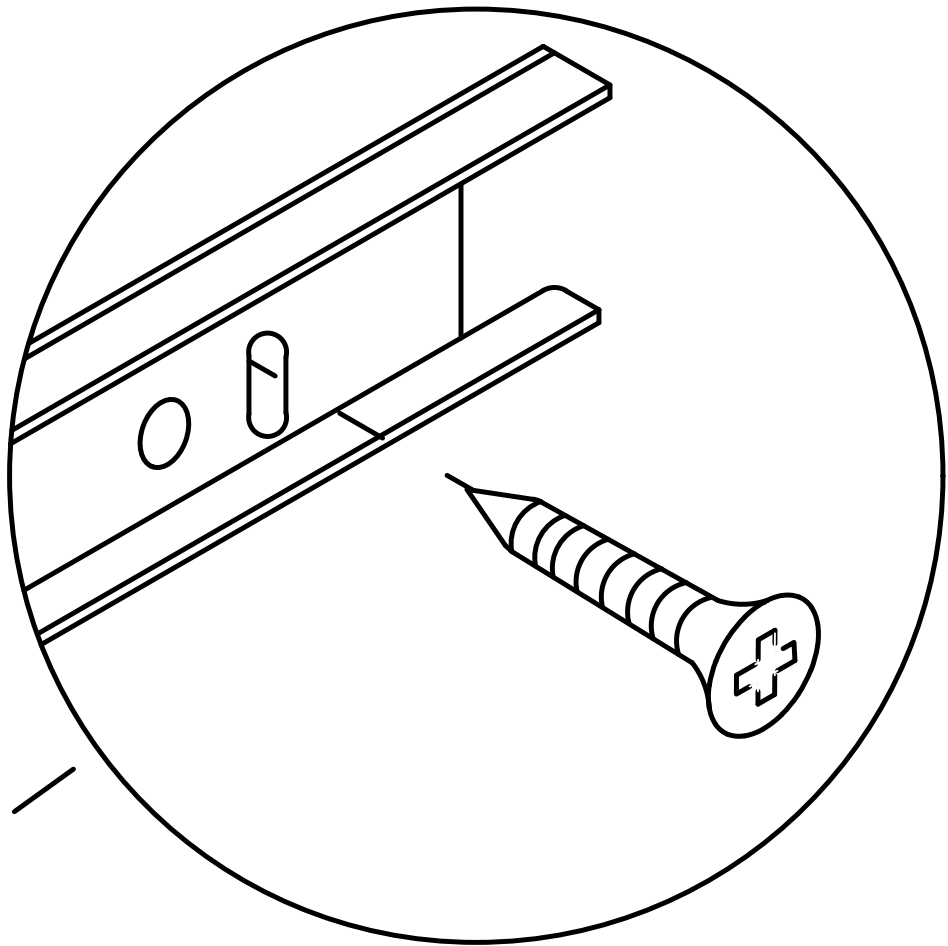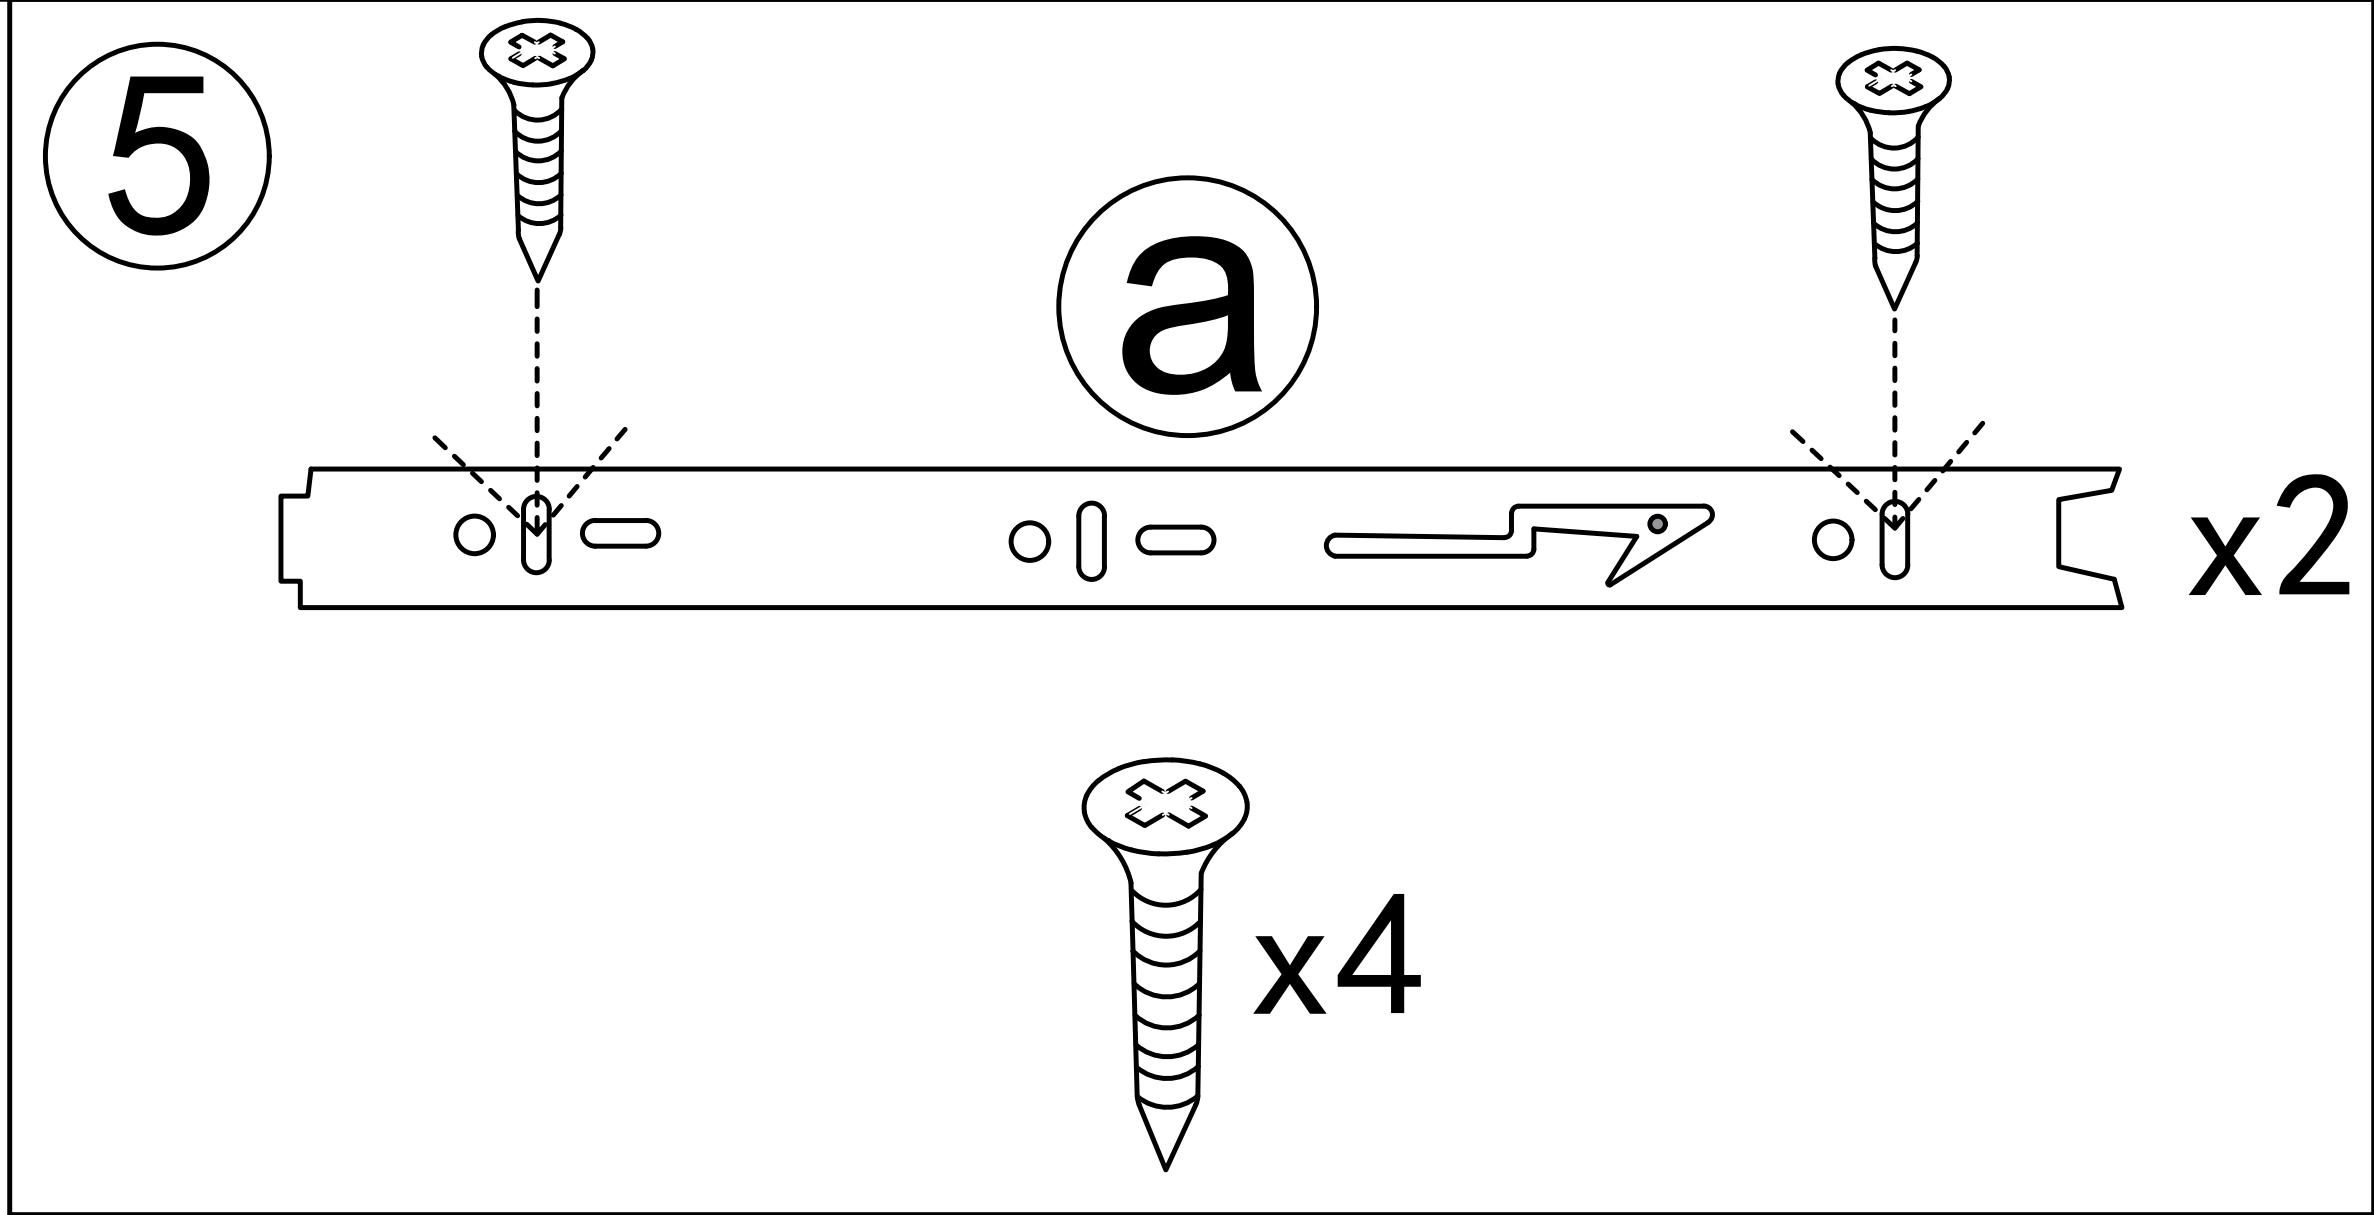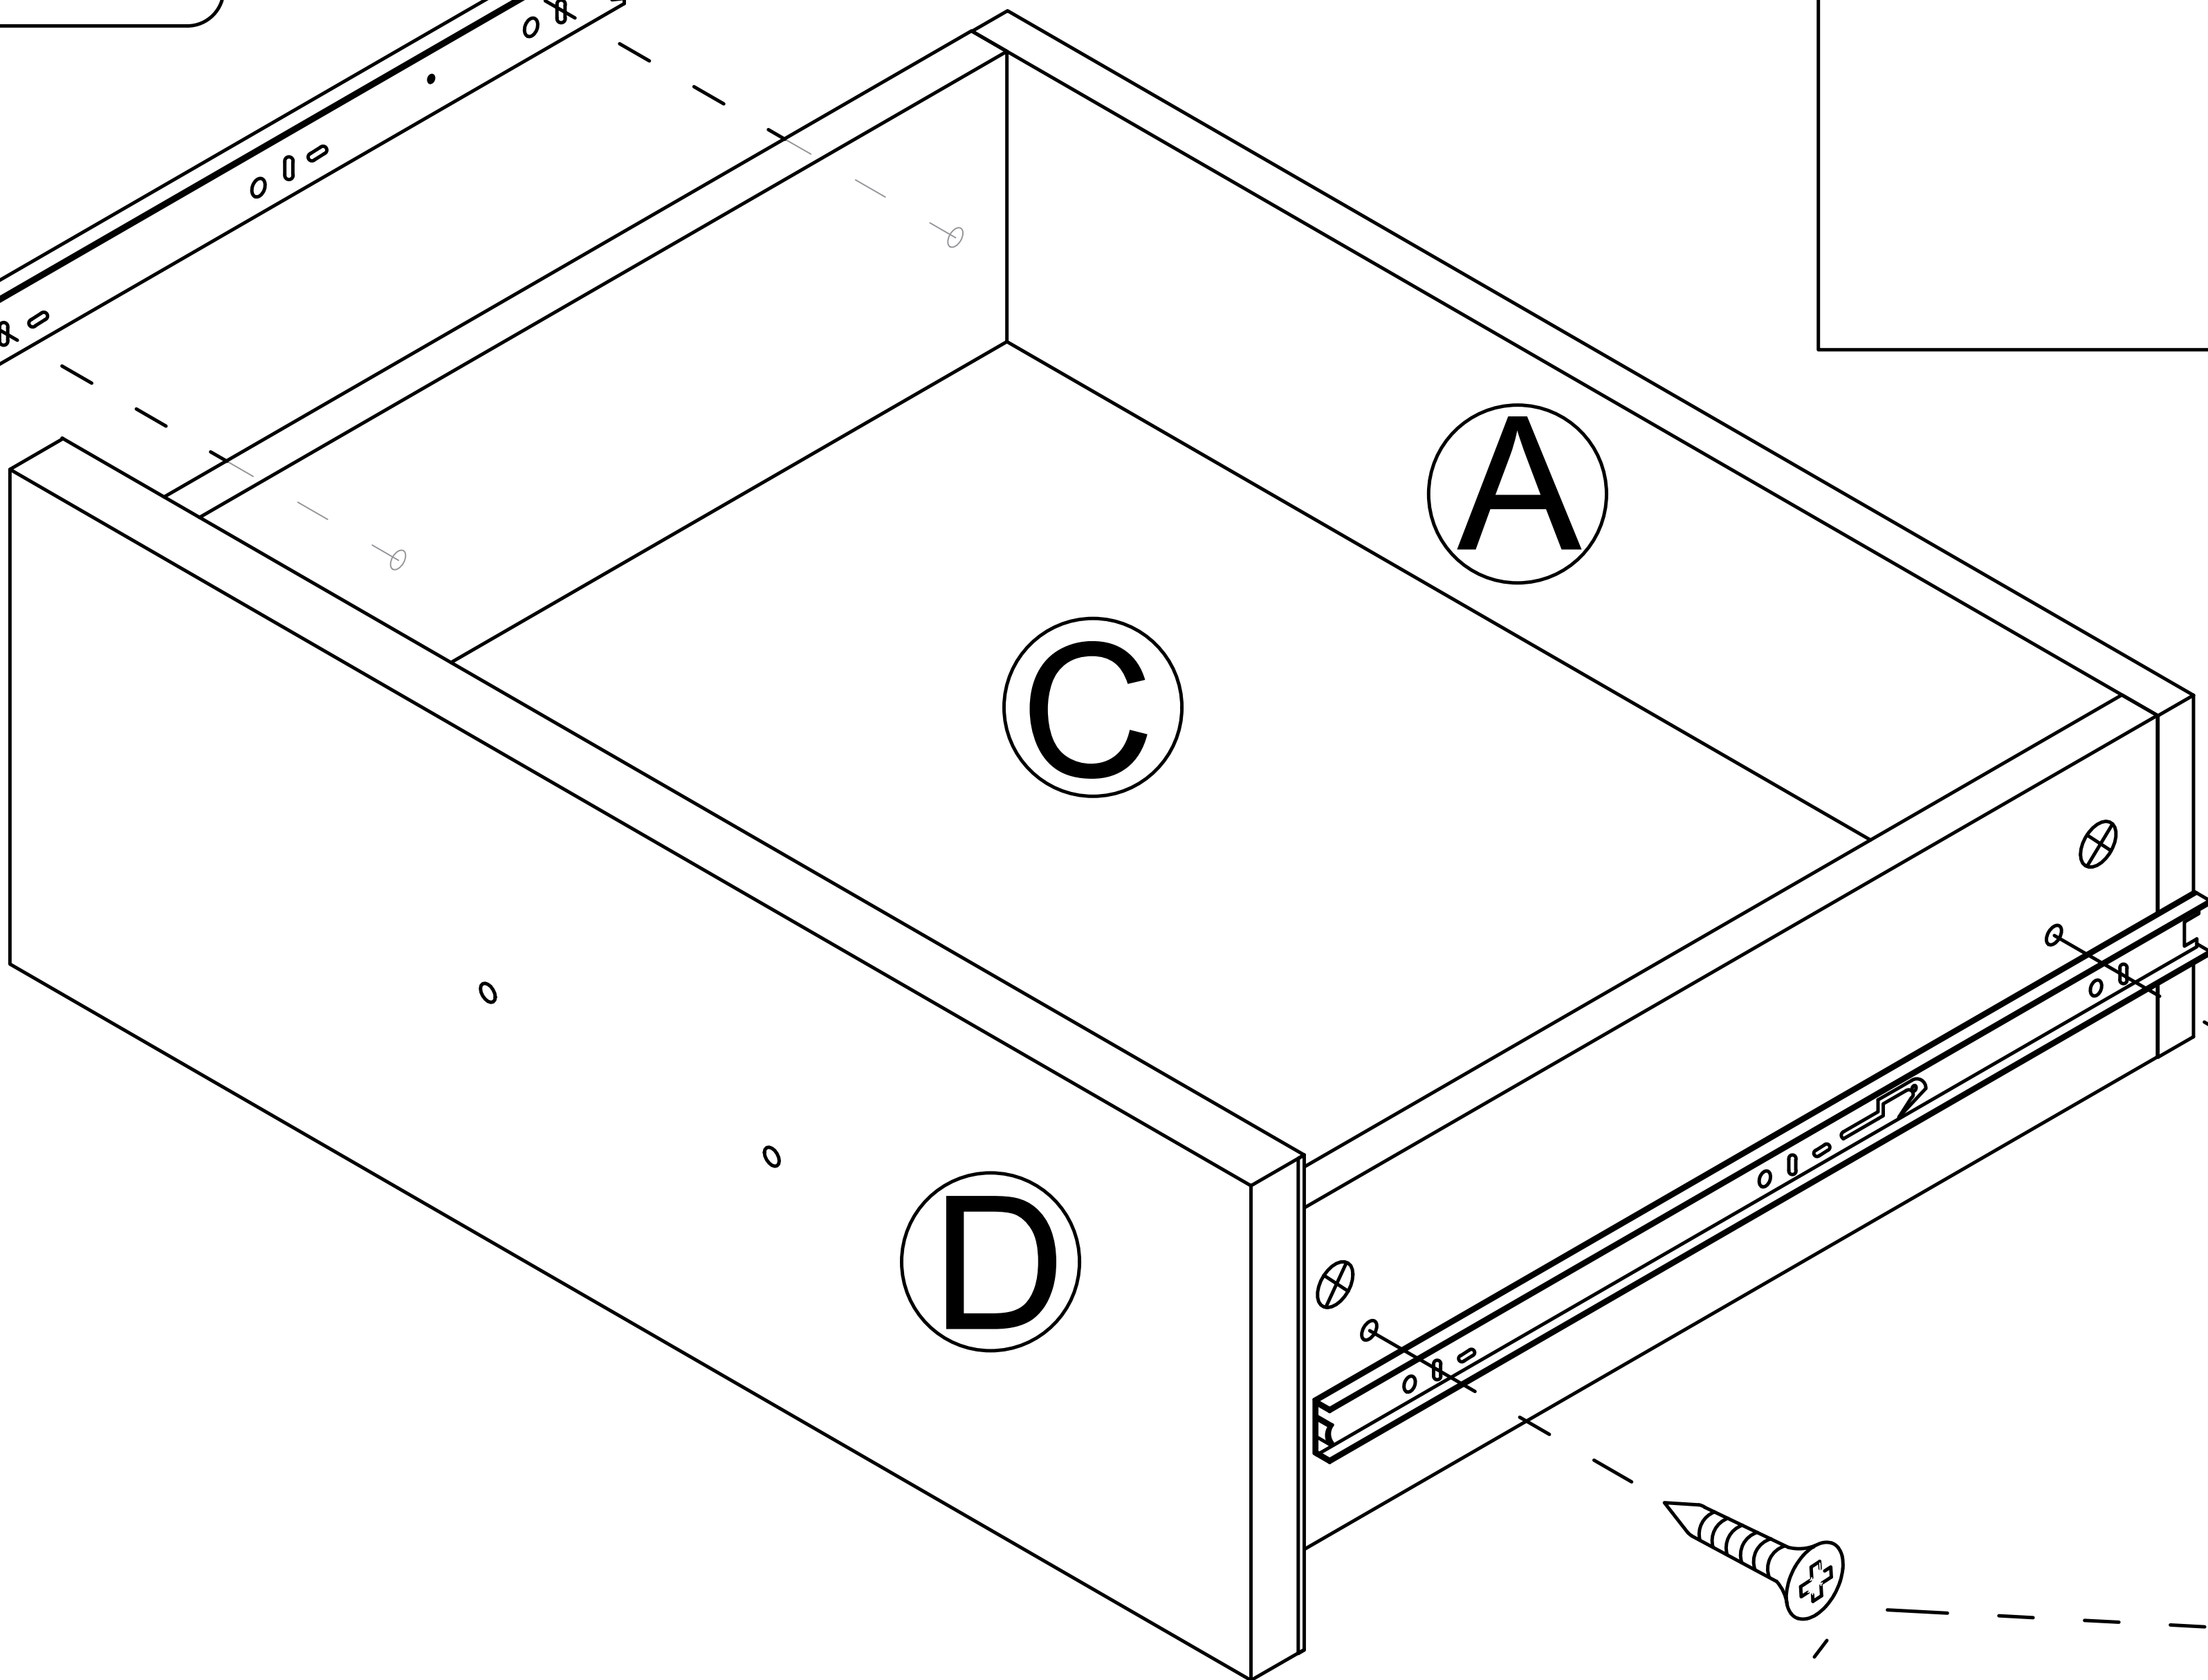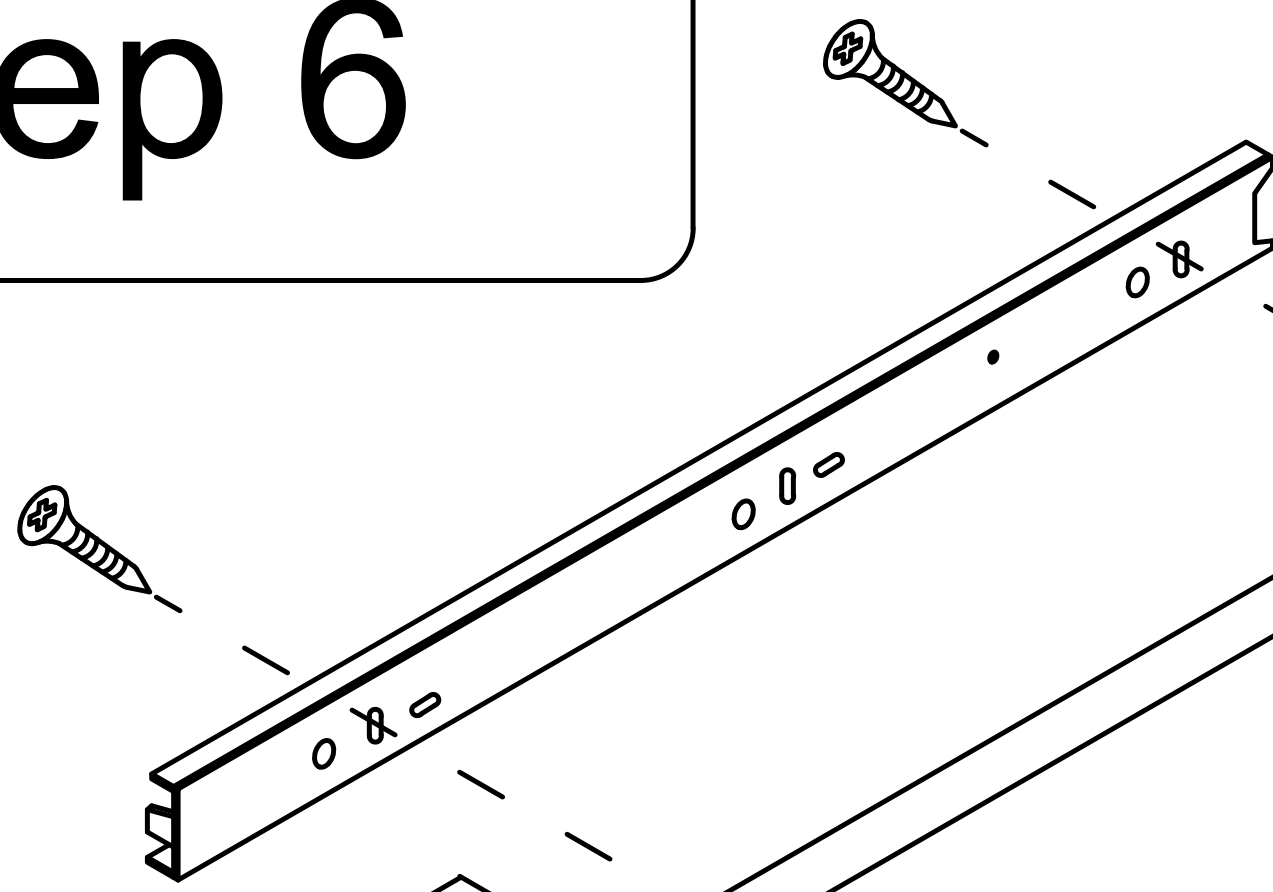


Step 7

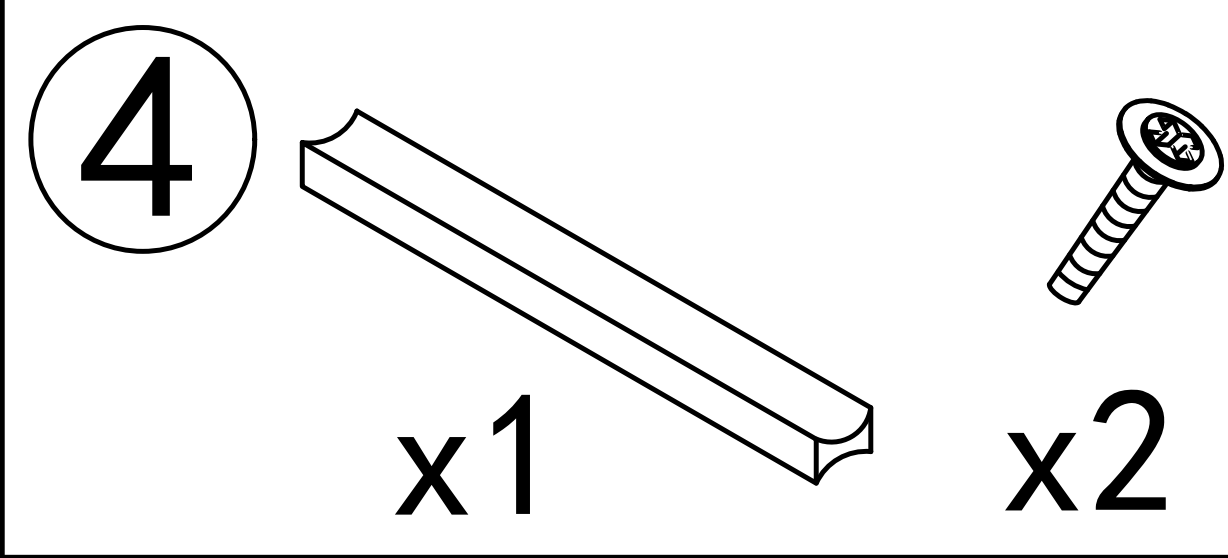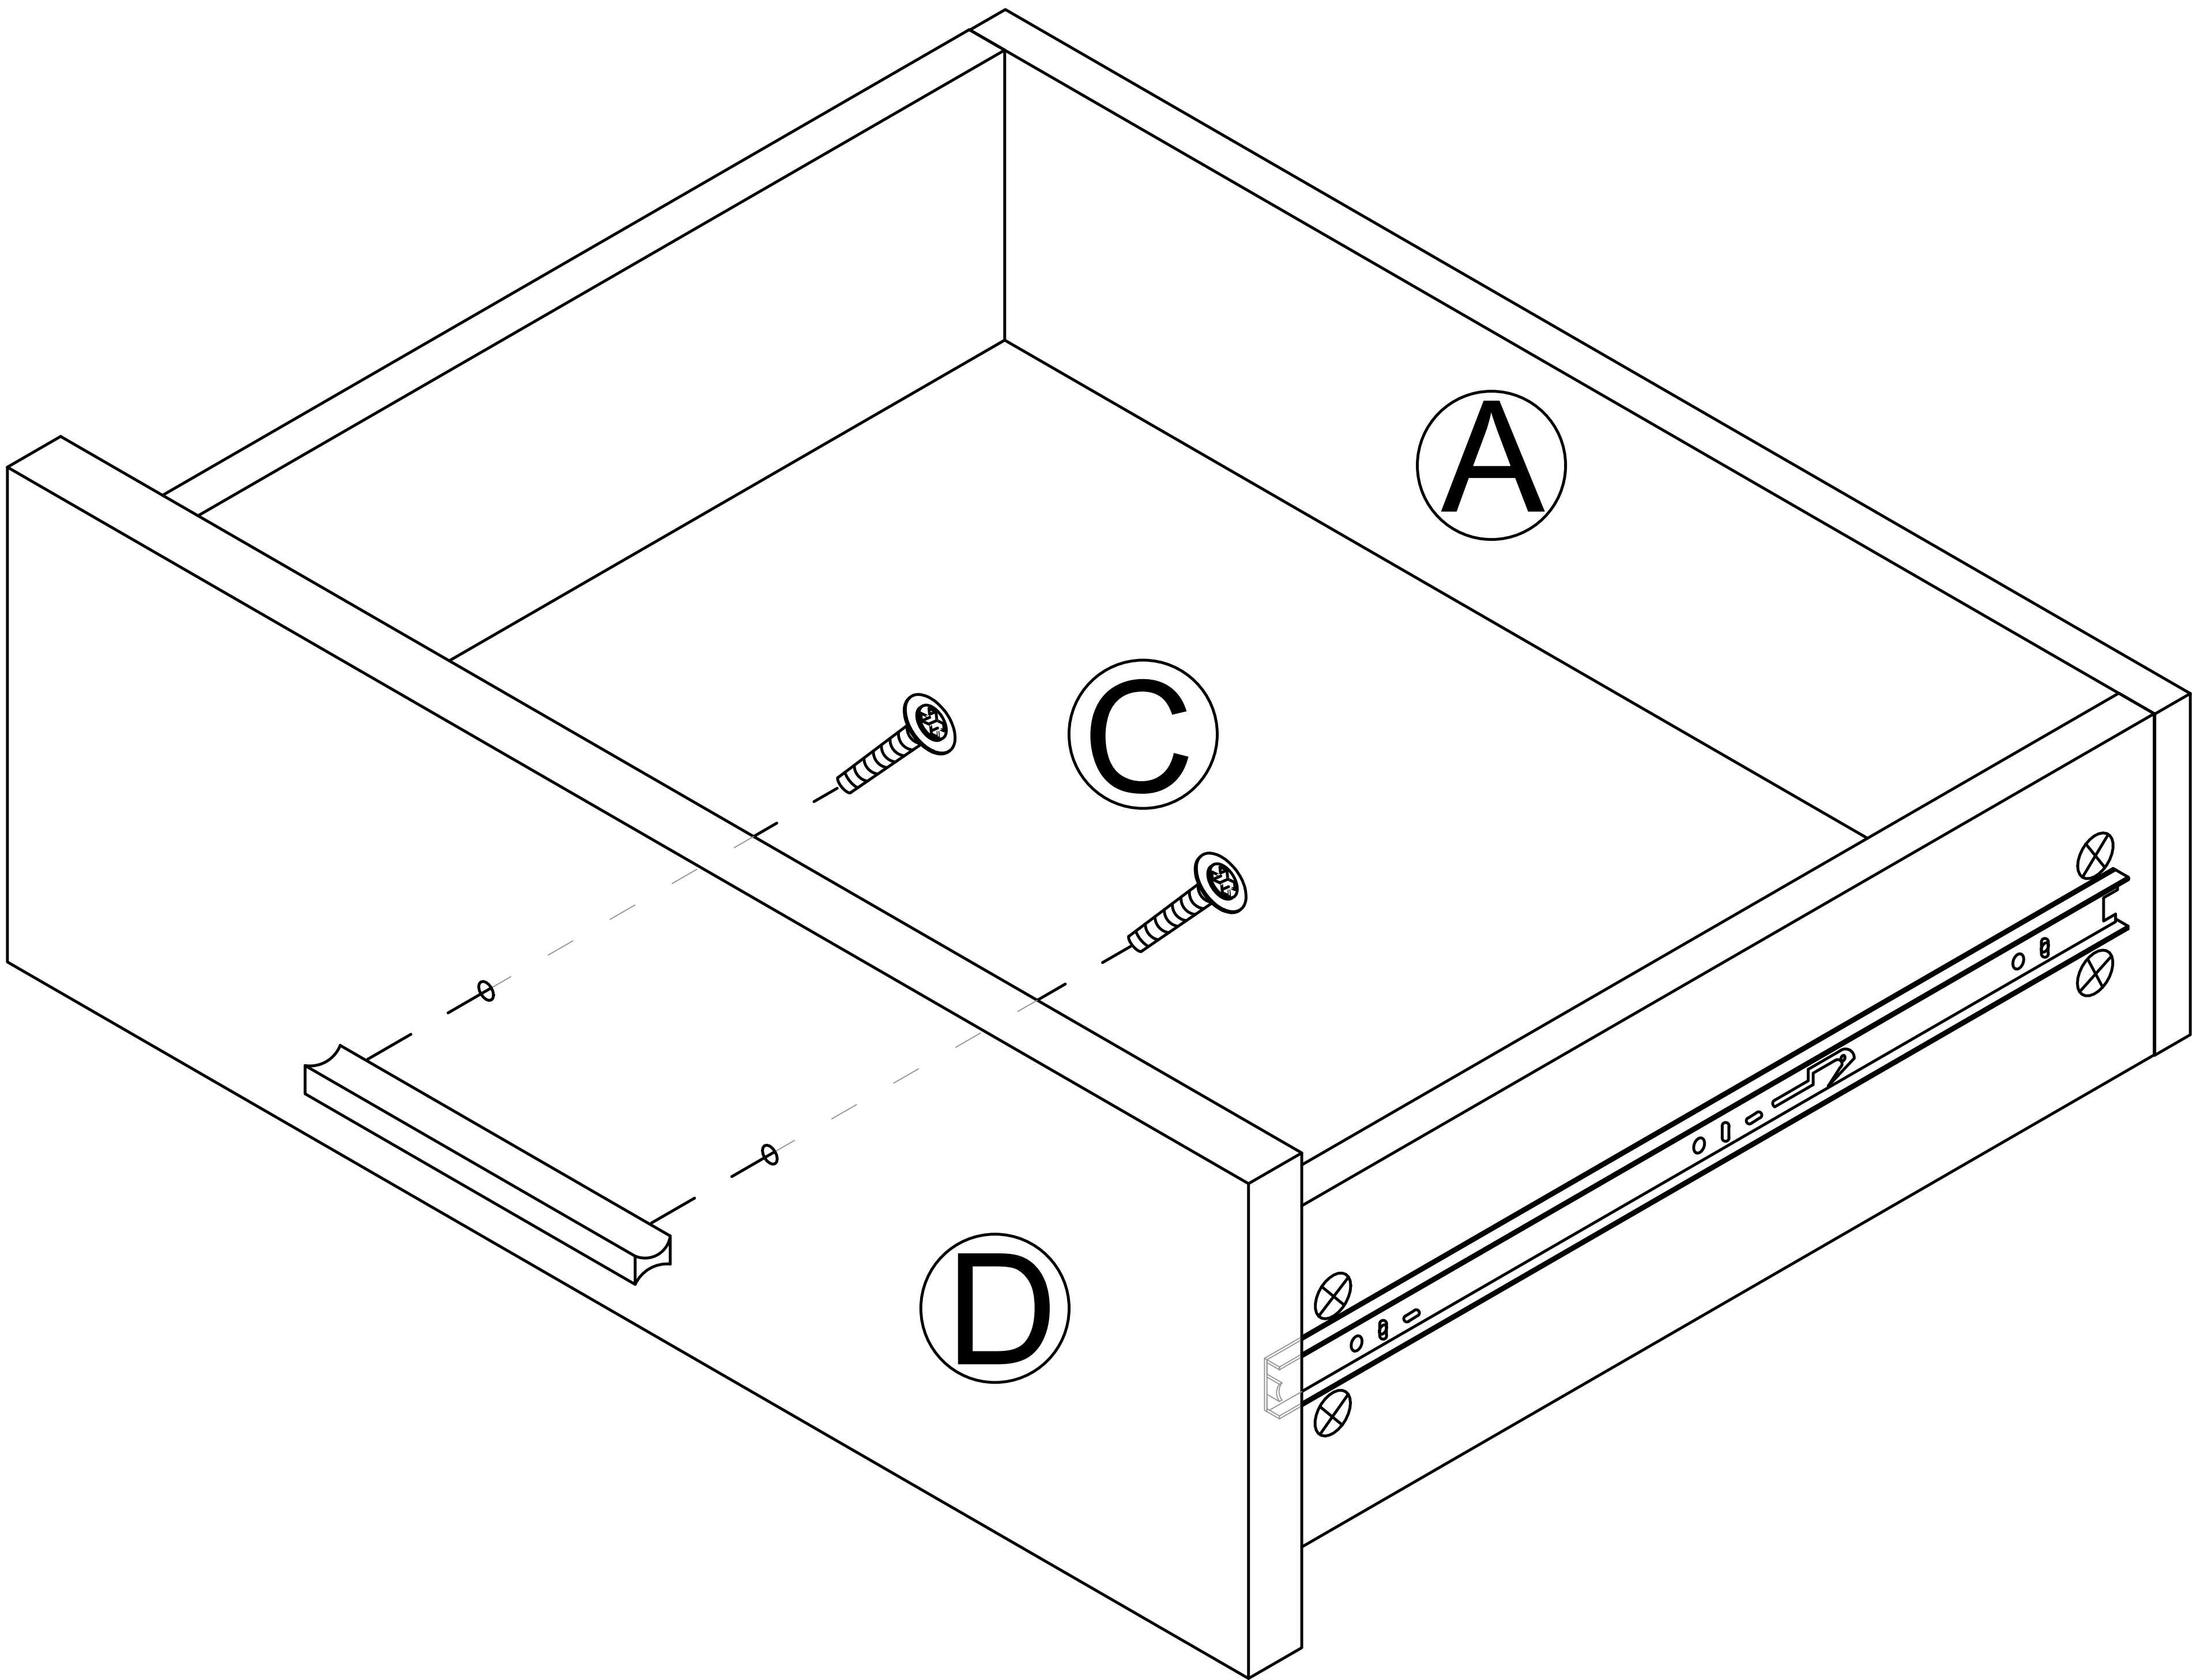


Step 8


- 1

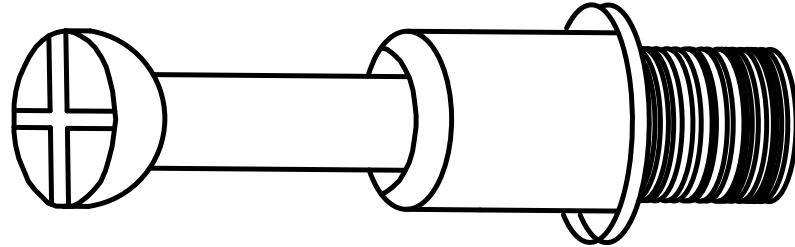


x8
- 2

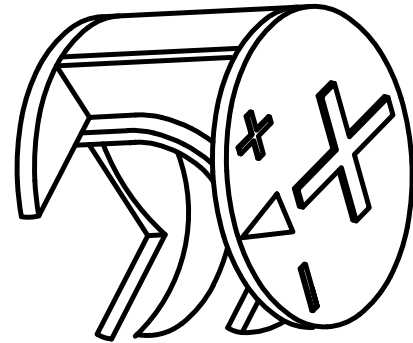




x8
- 4

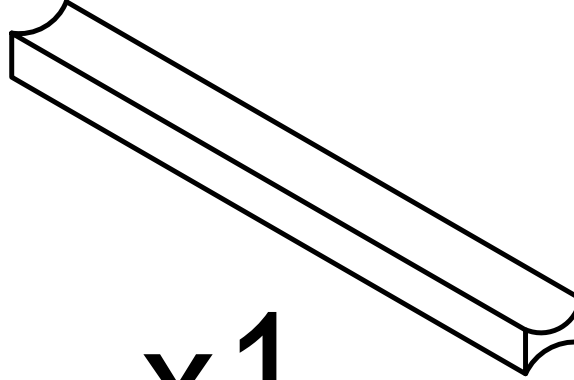

x1

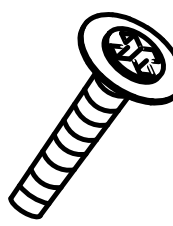

x2
- 5

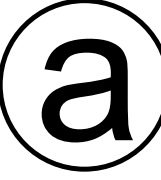




x2




x4

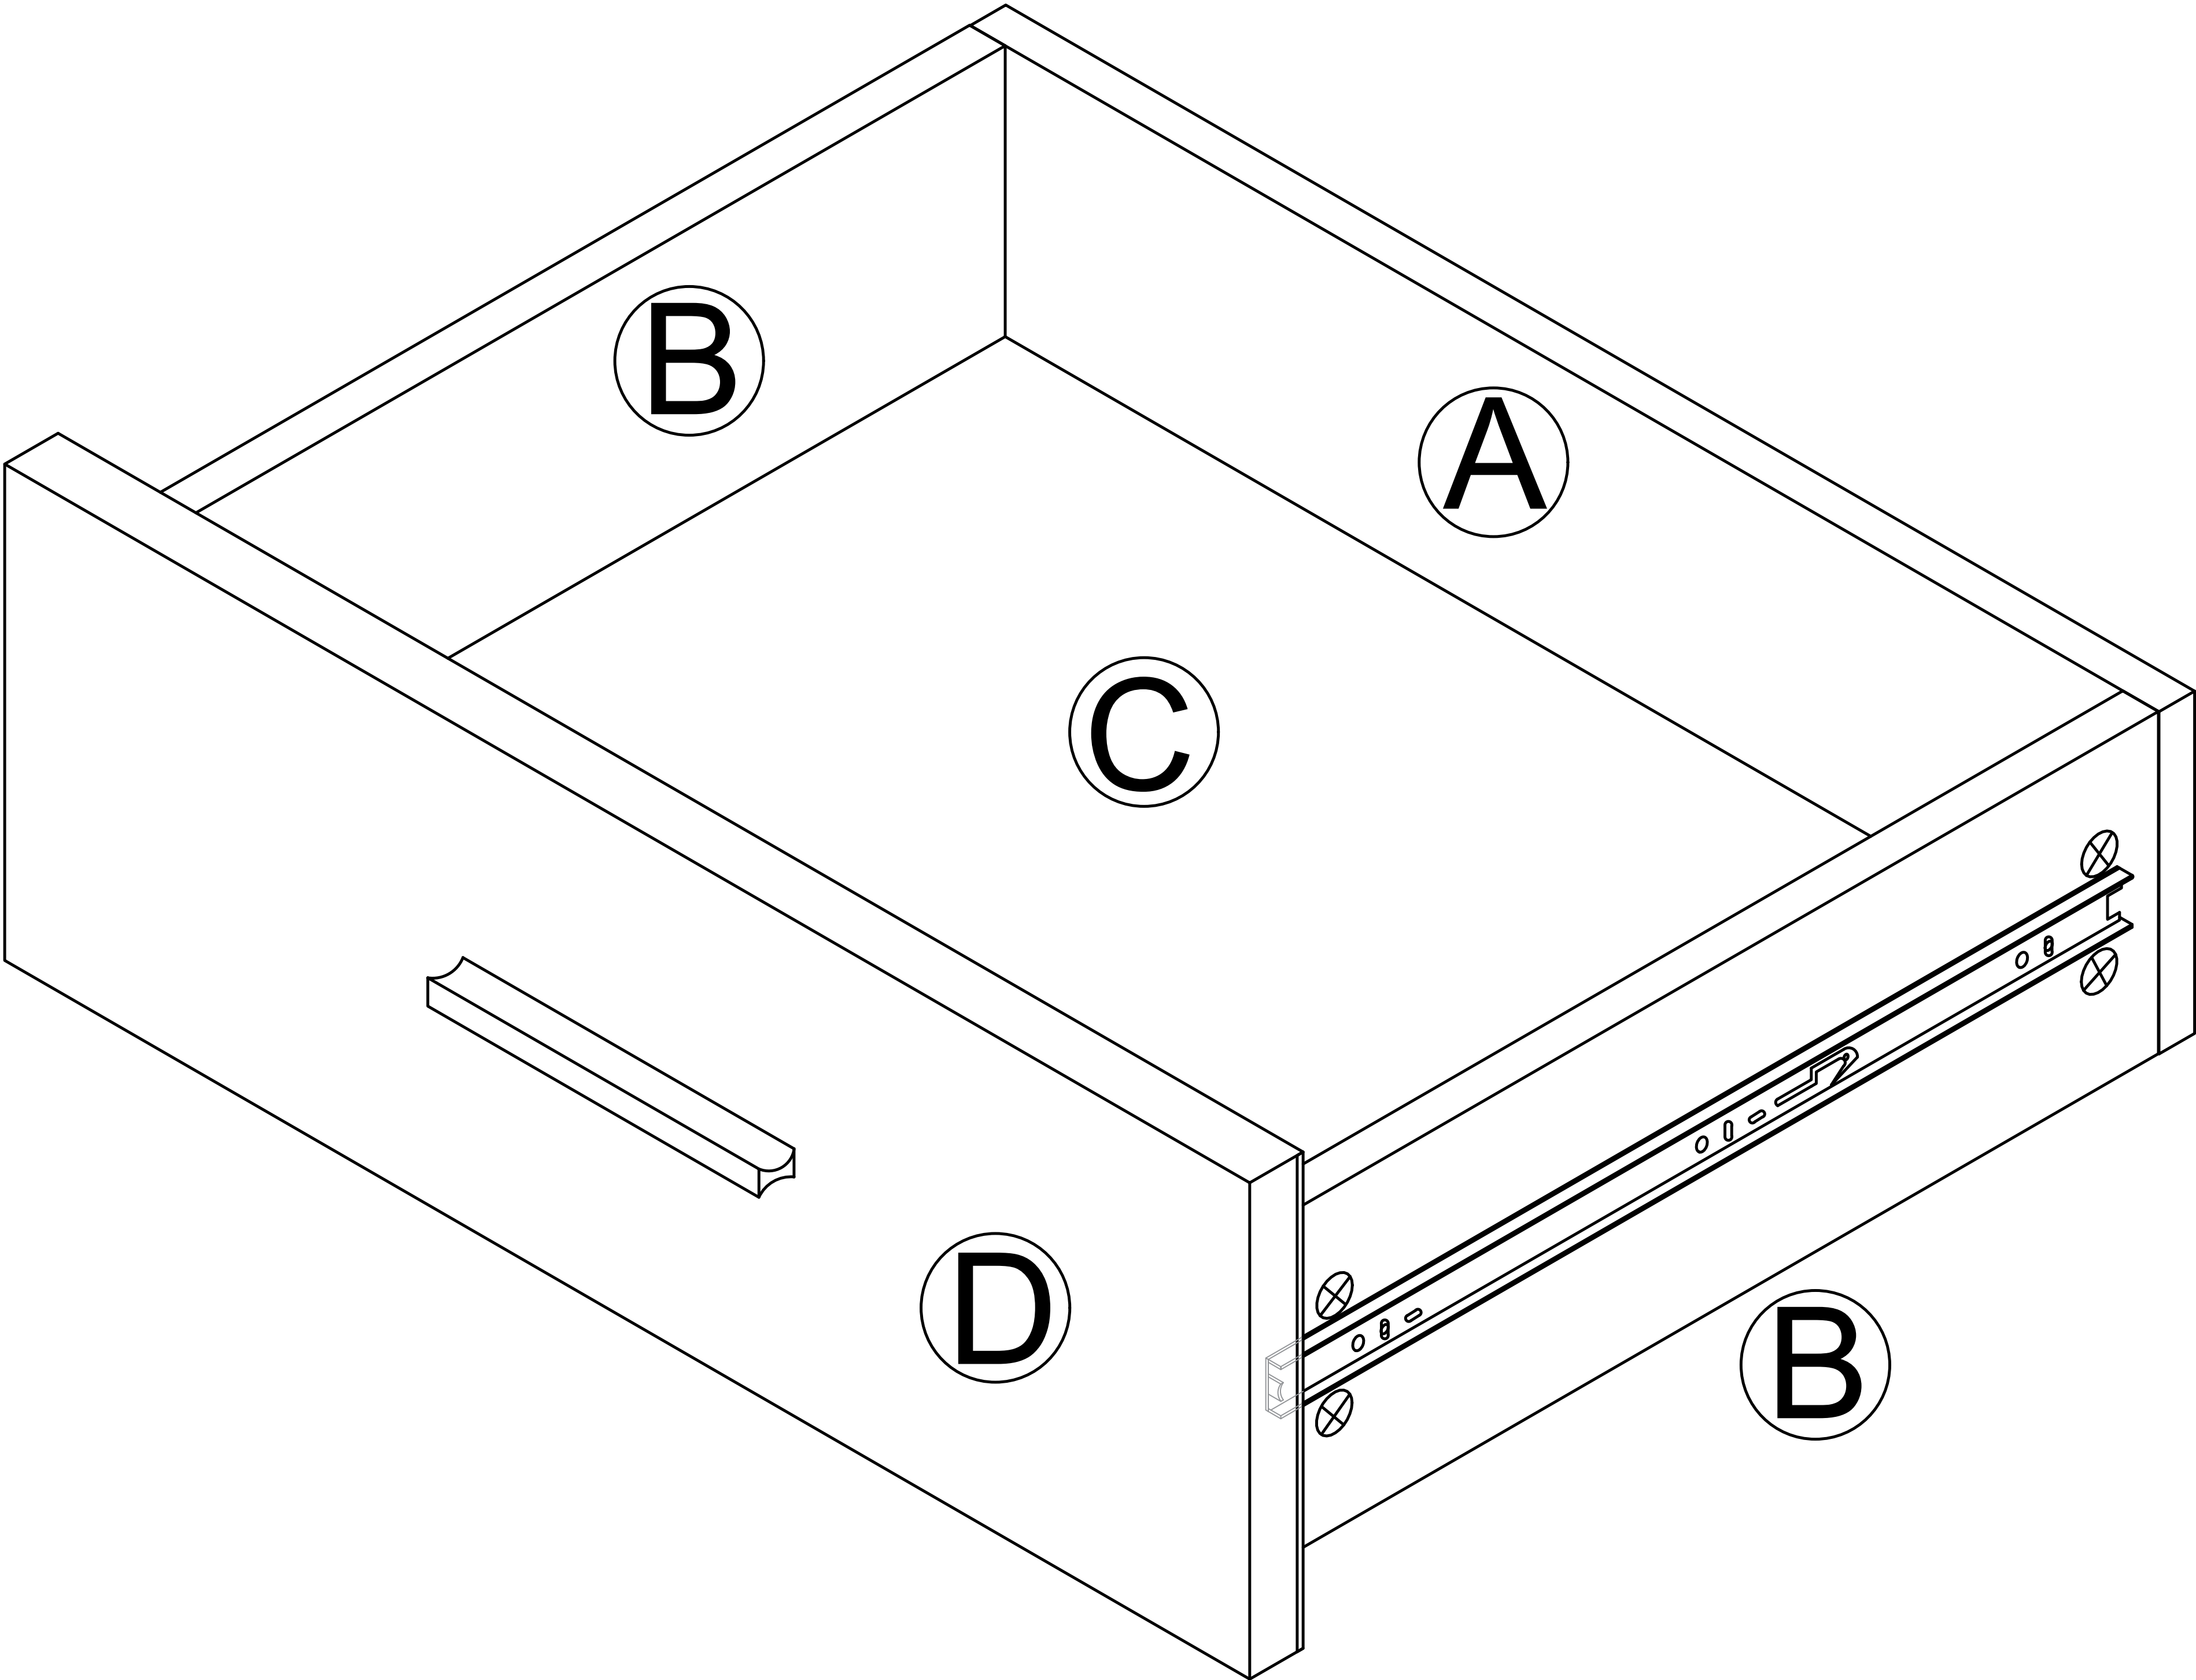

x2


Use the same way to install another drawer


Product structure decomposition

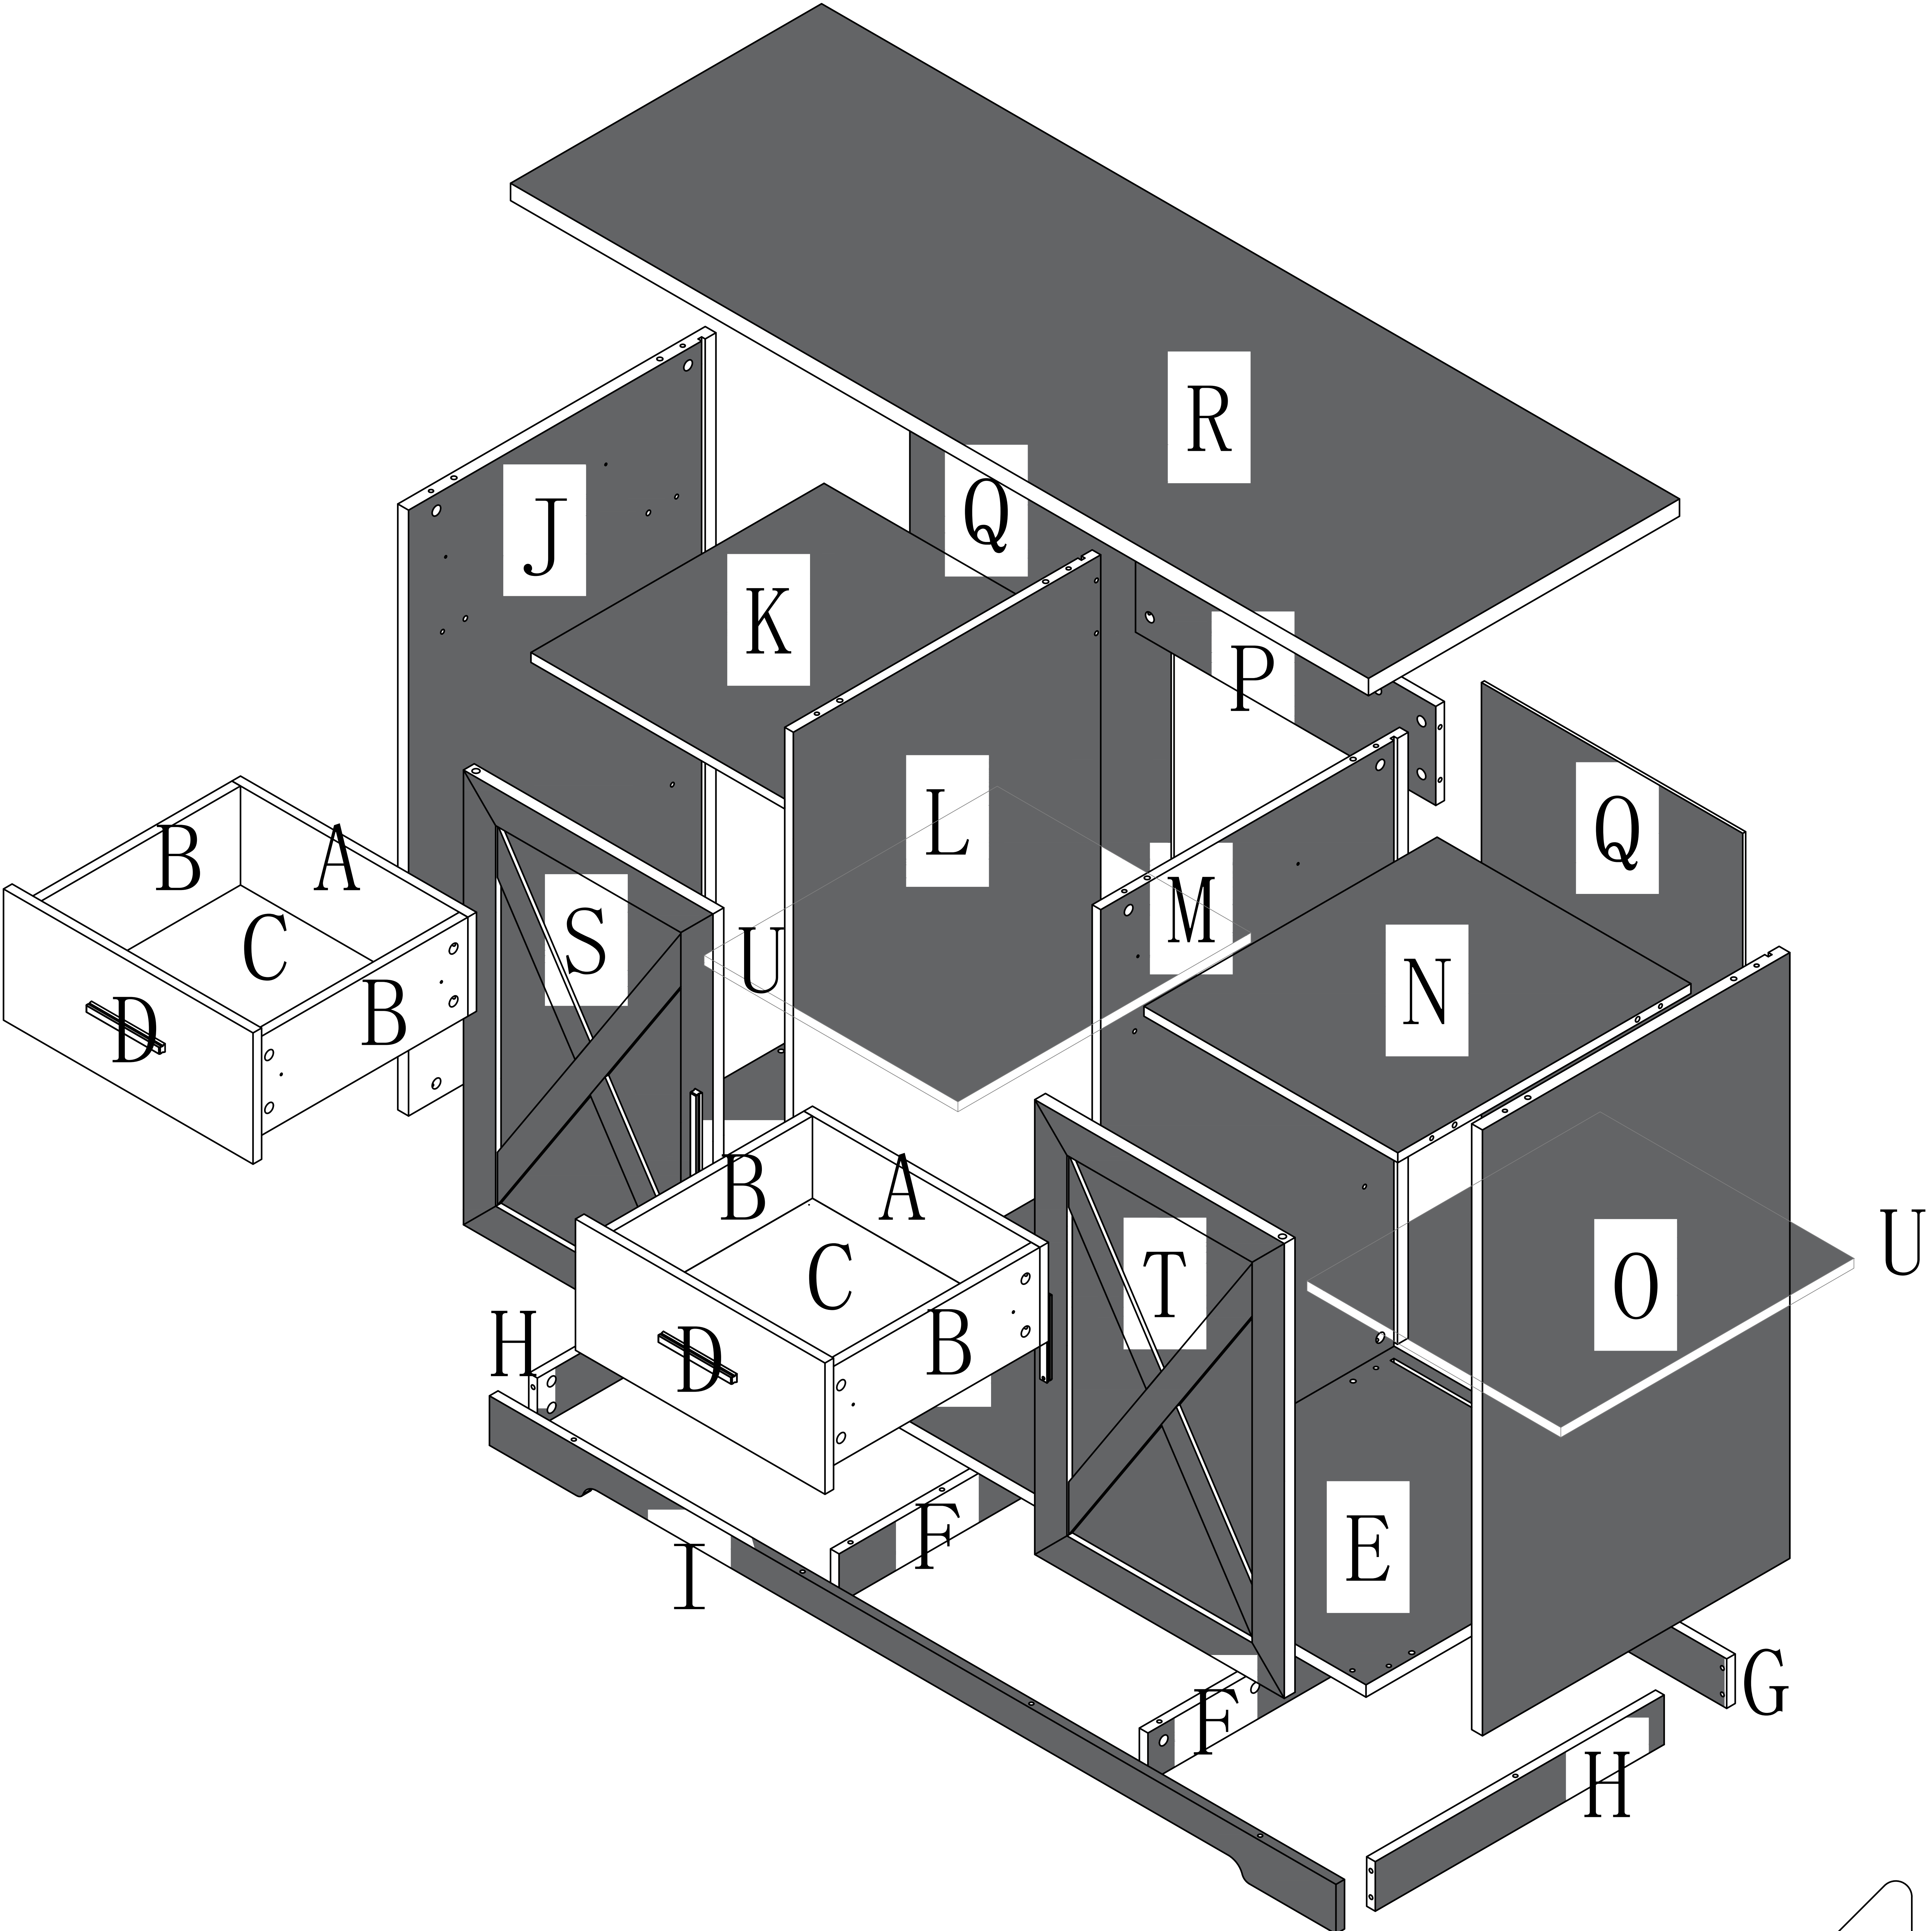

Step 9


1

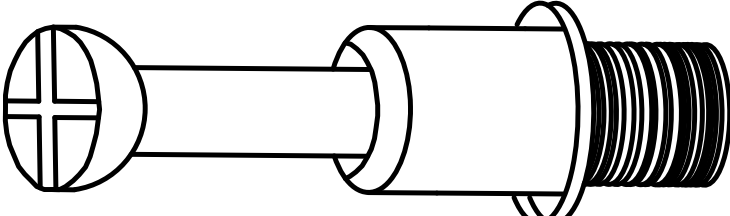
x8

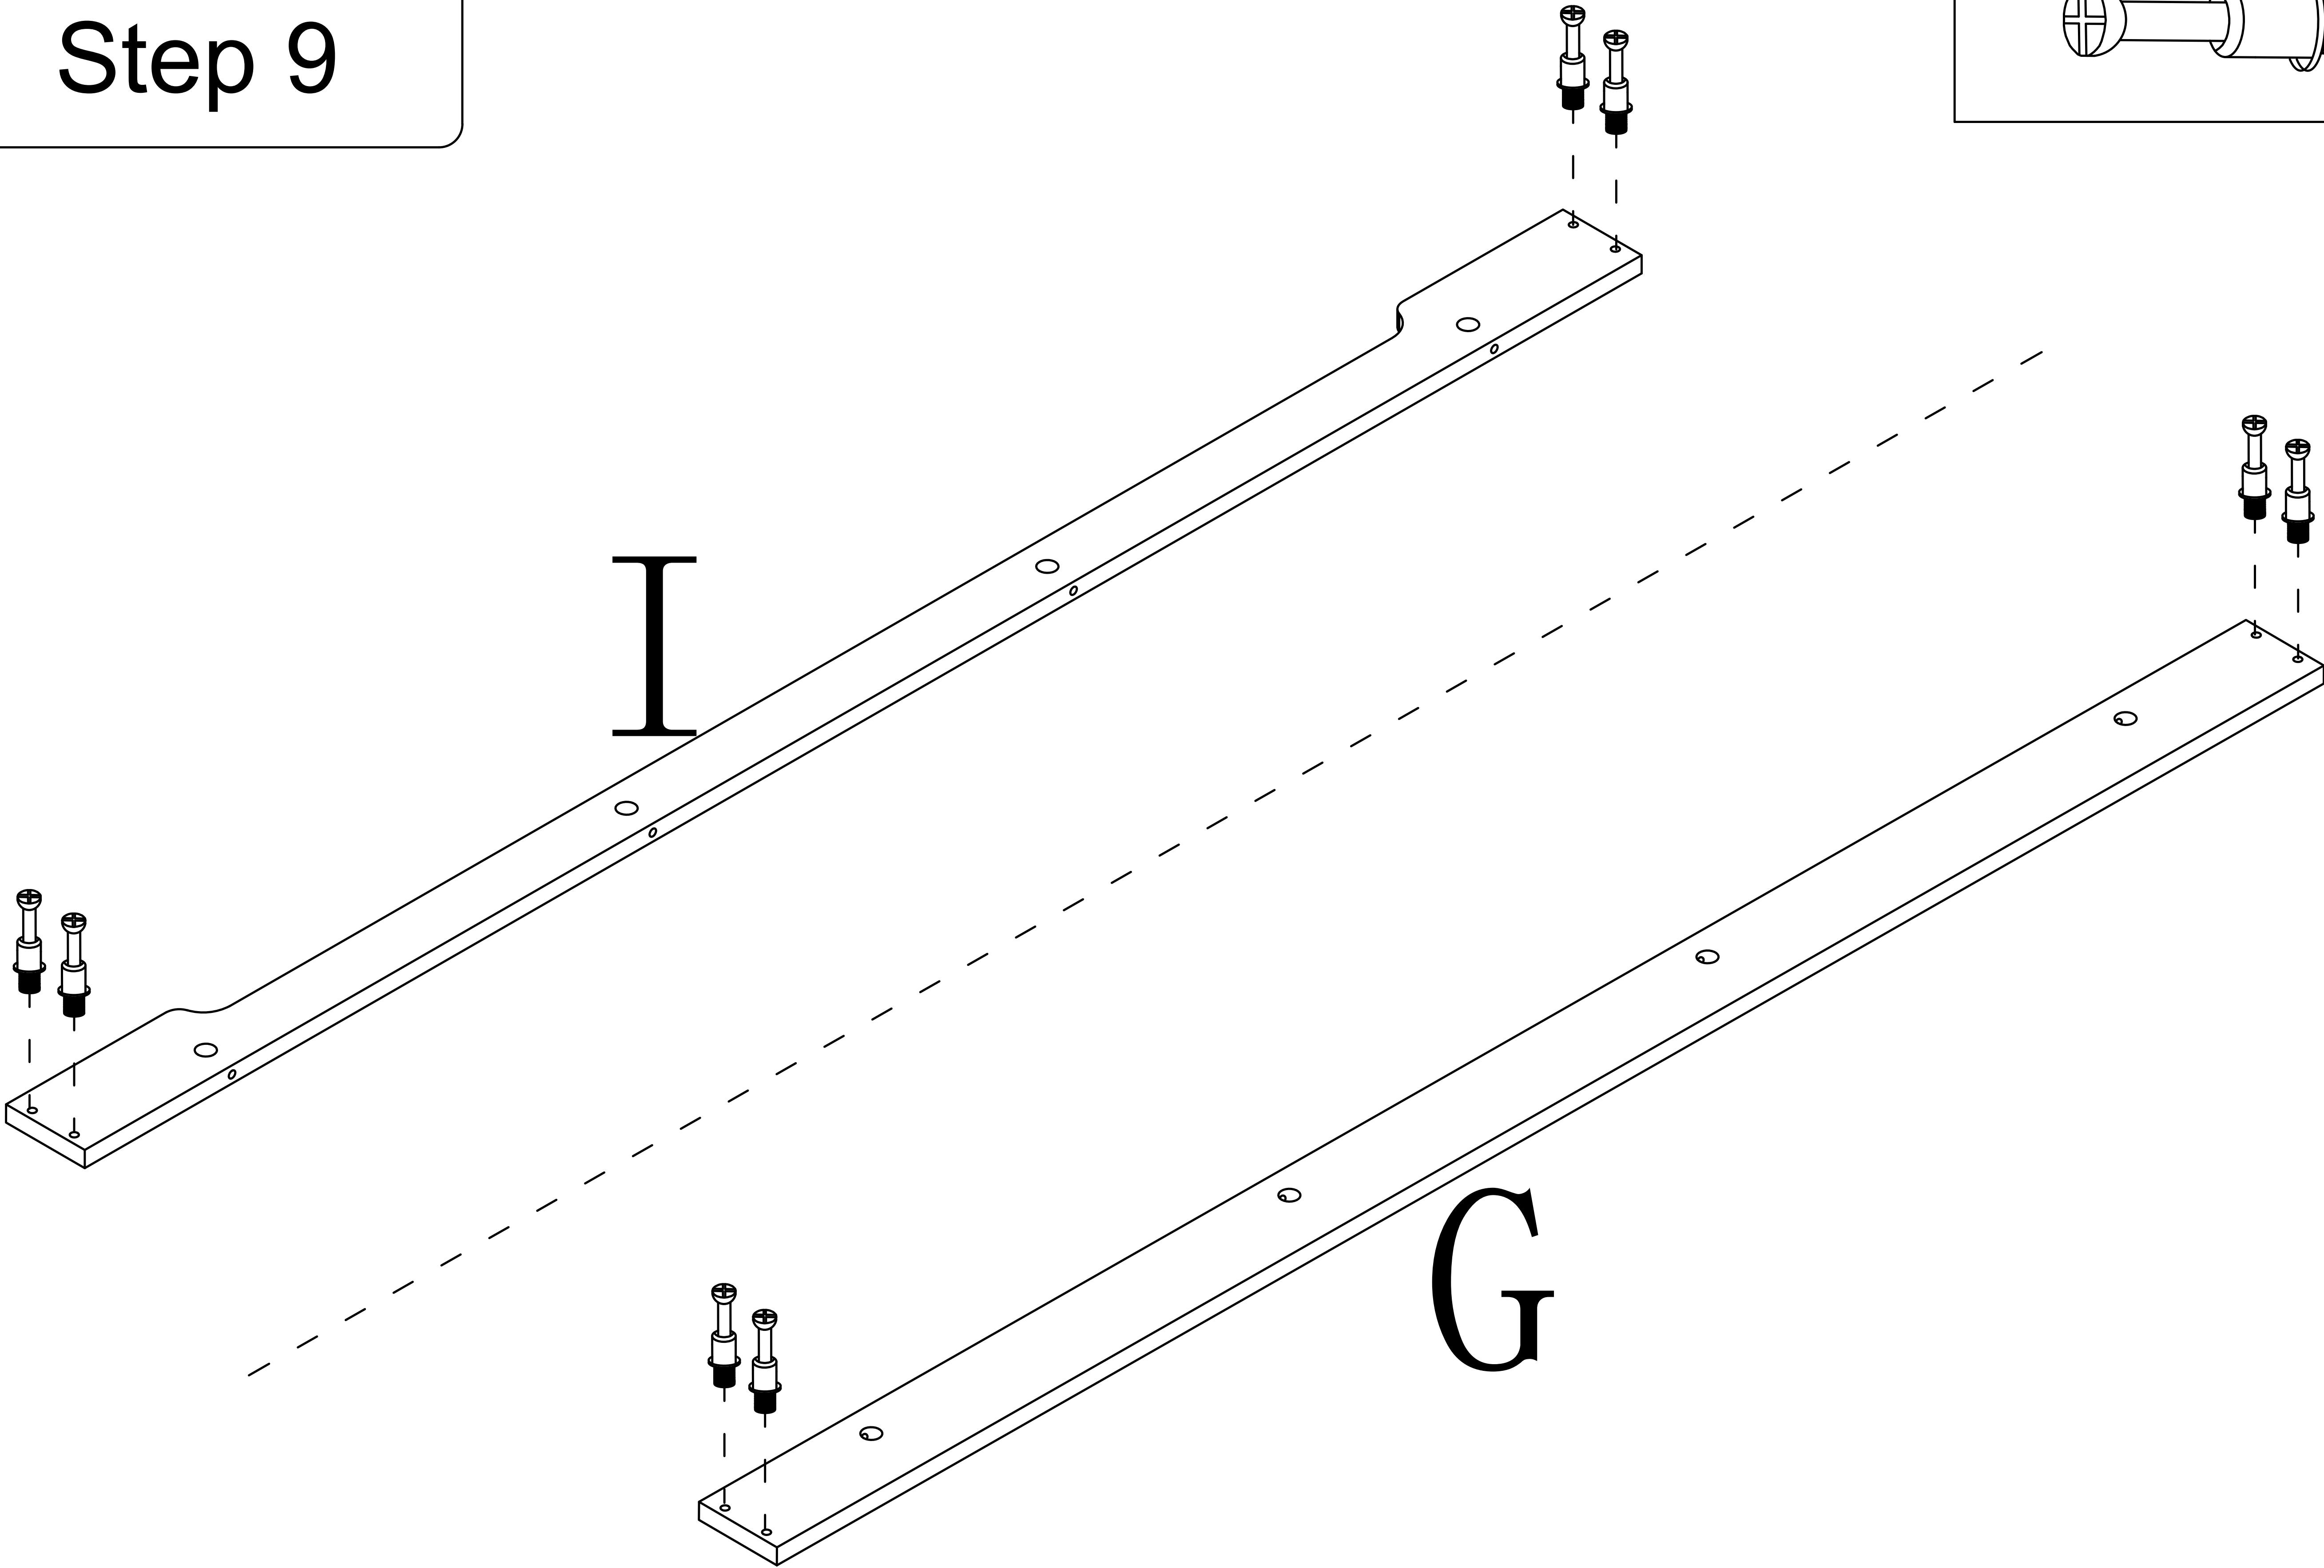



Step 10

2


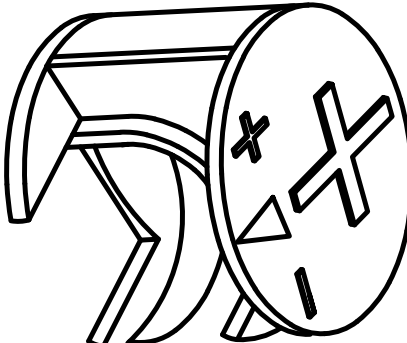
x8

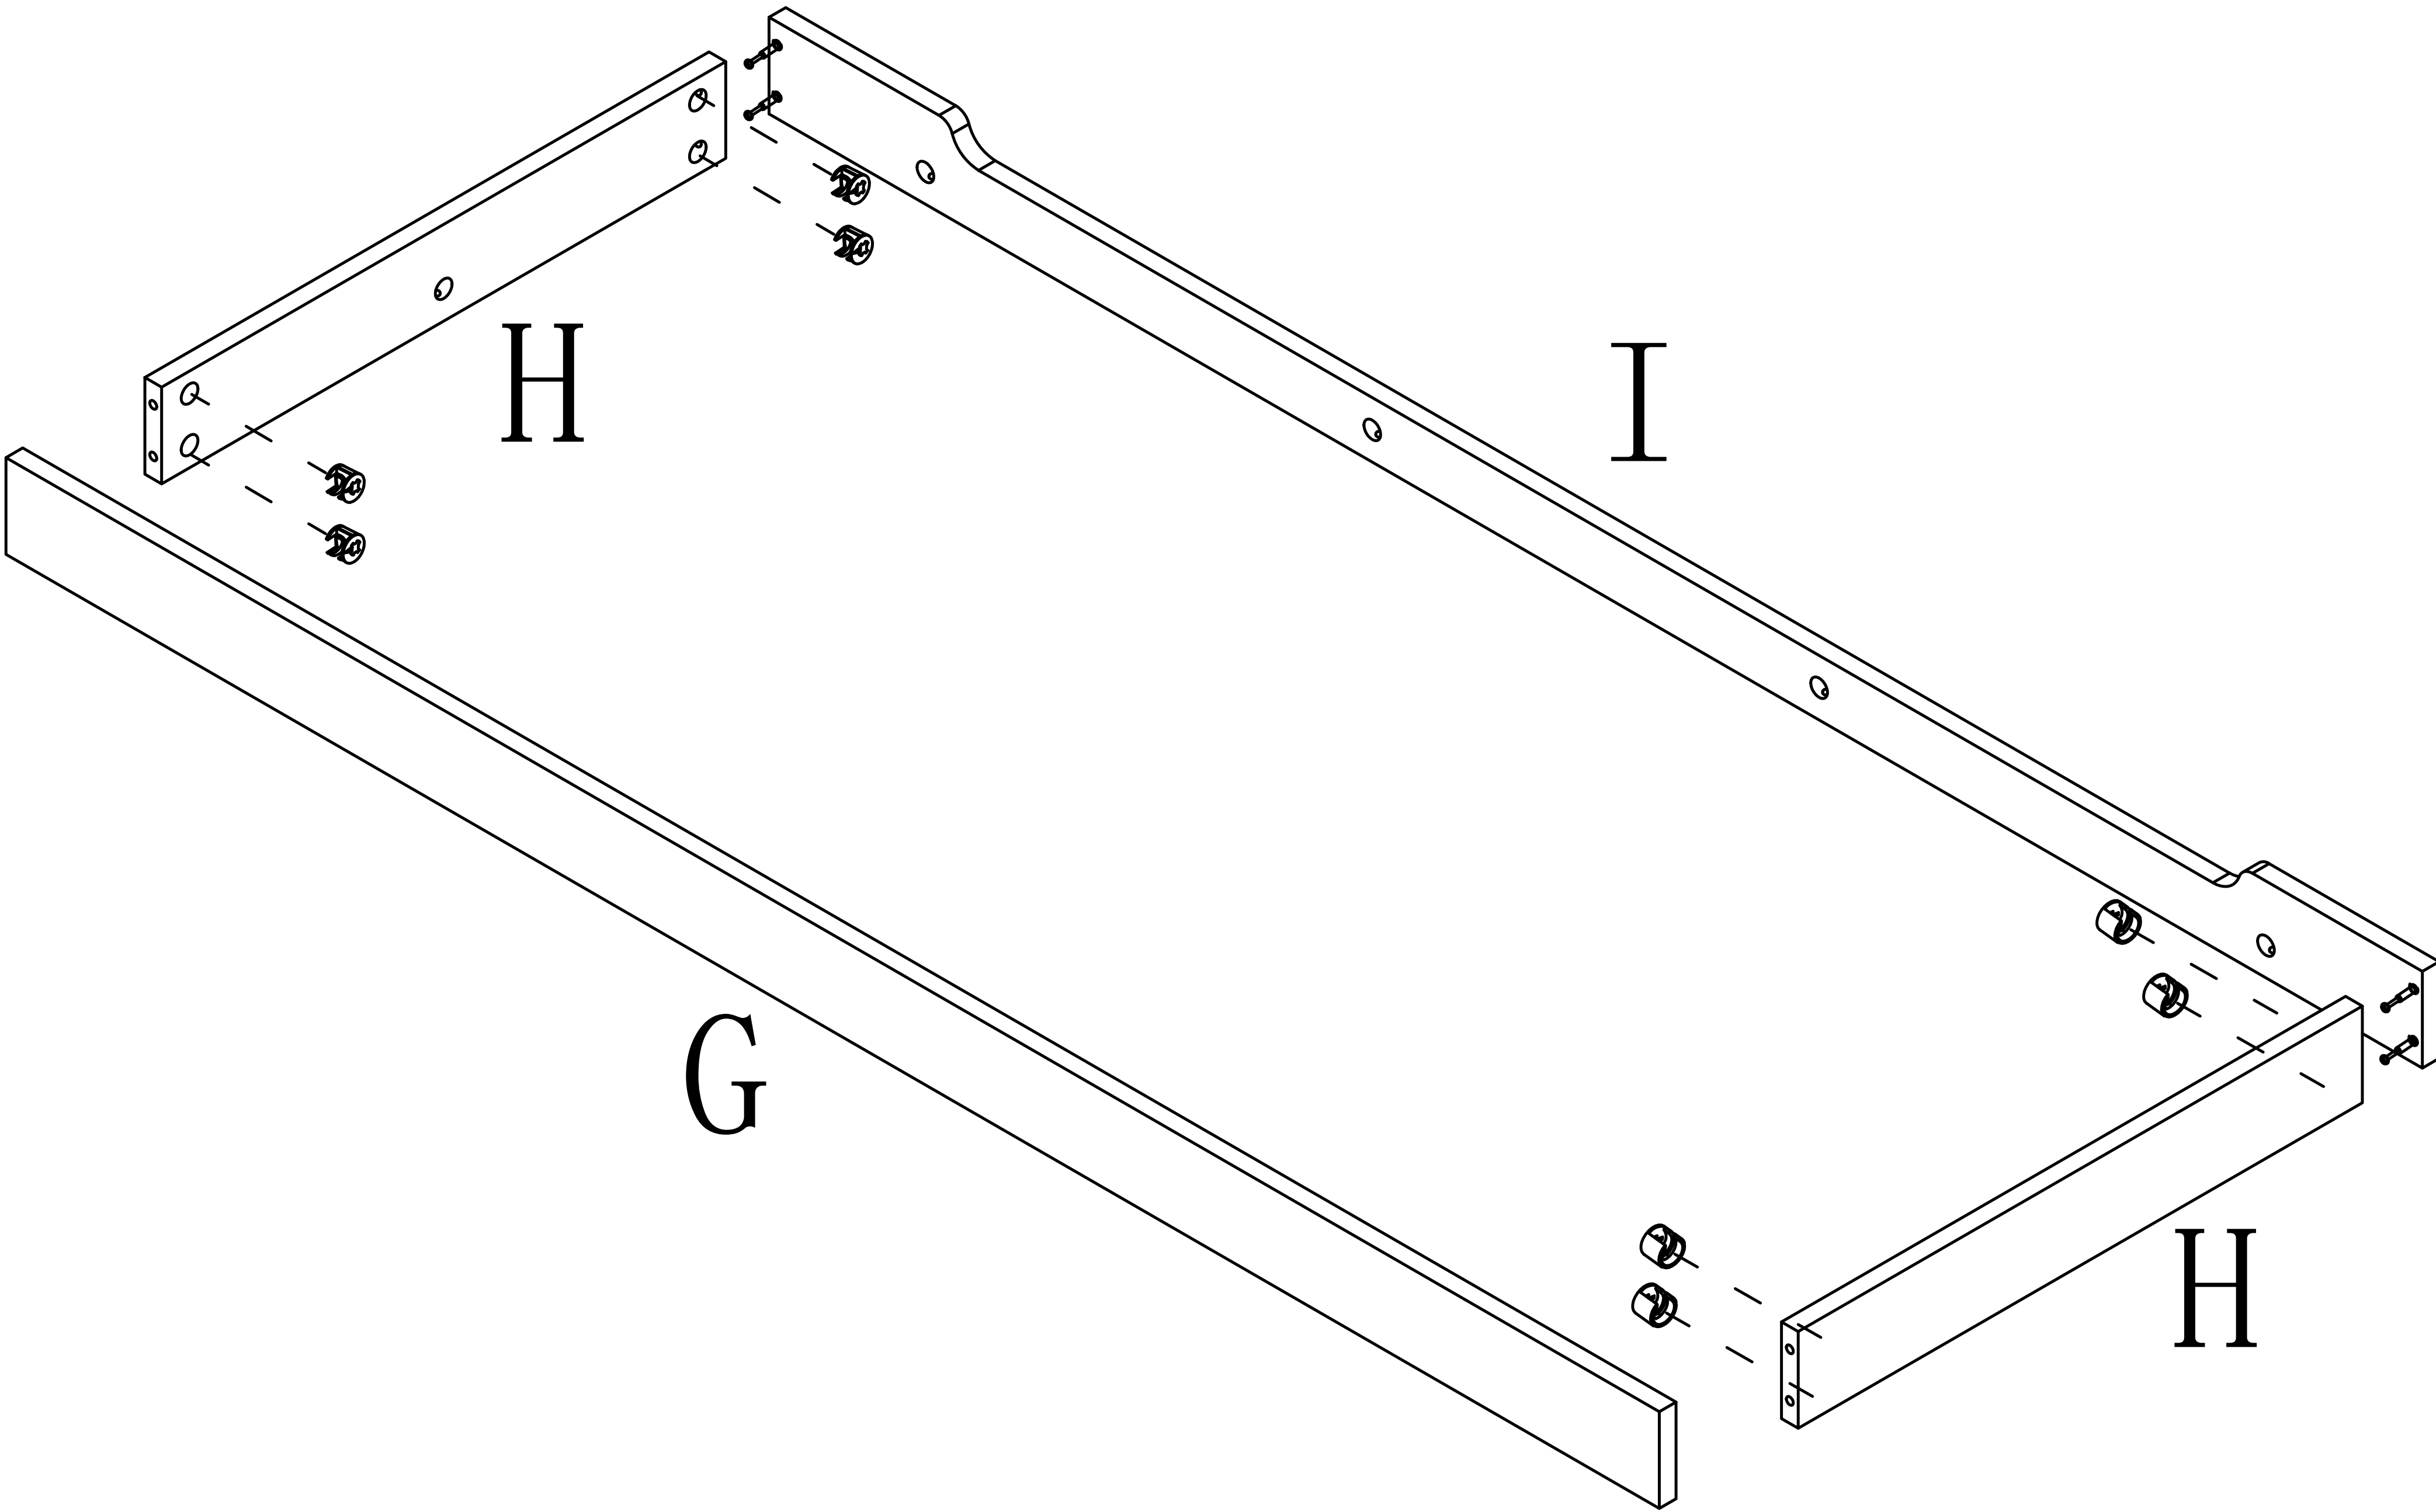

Step 11

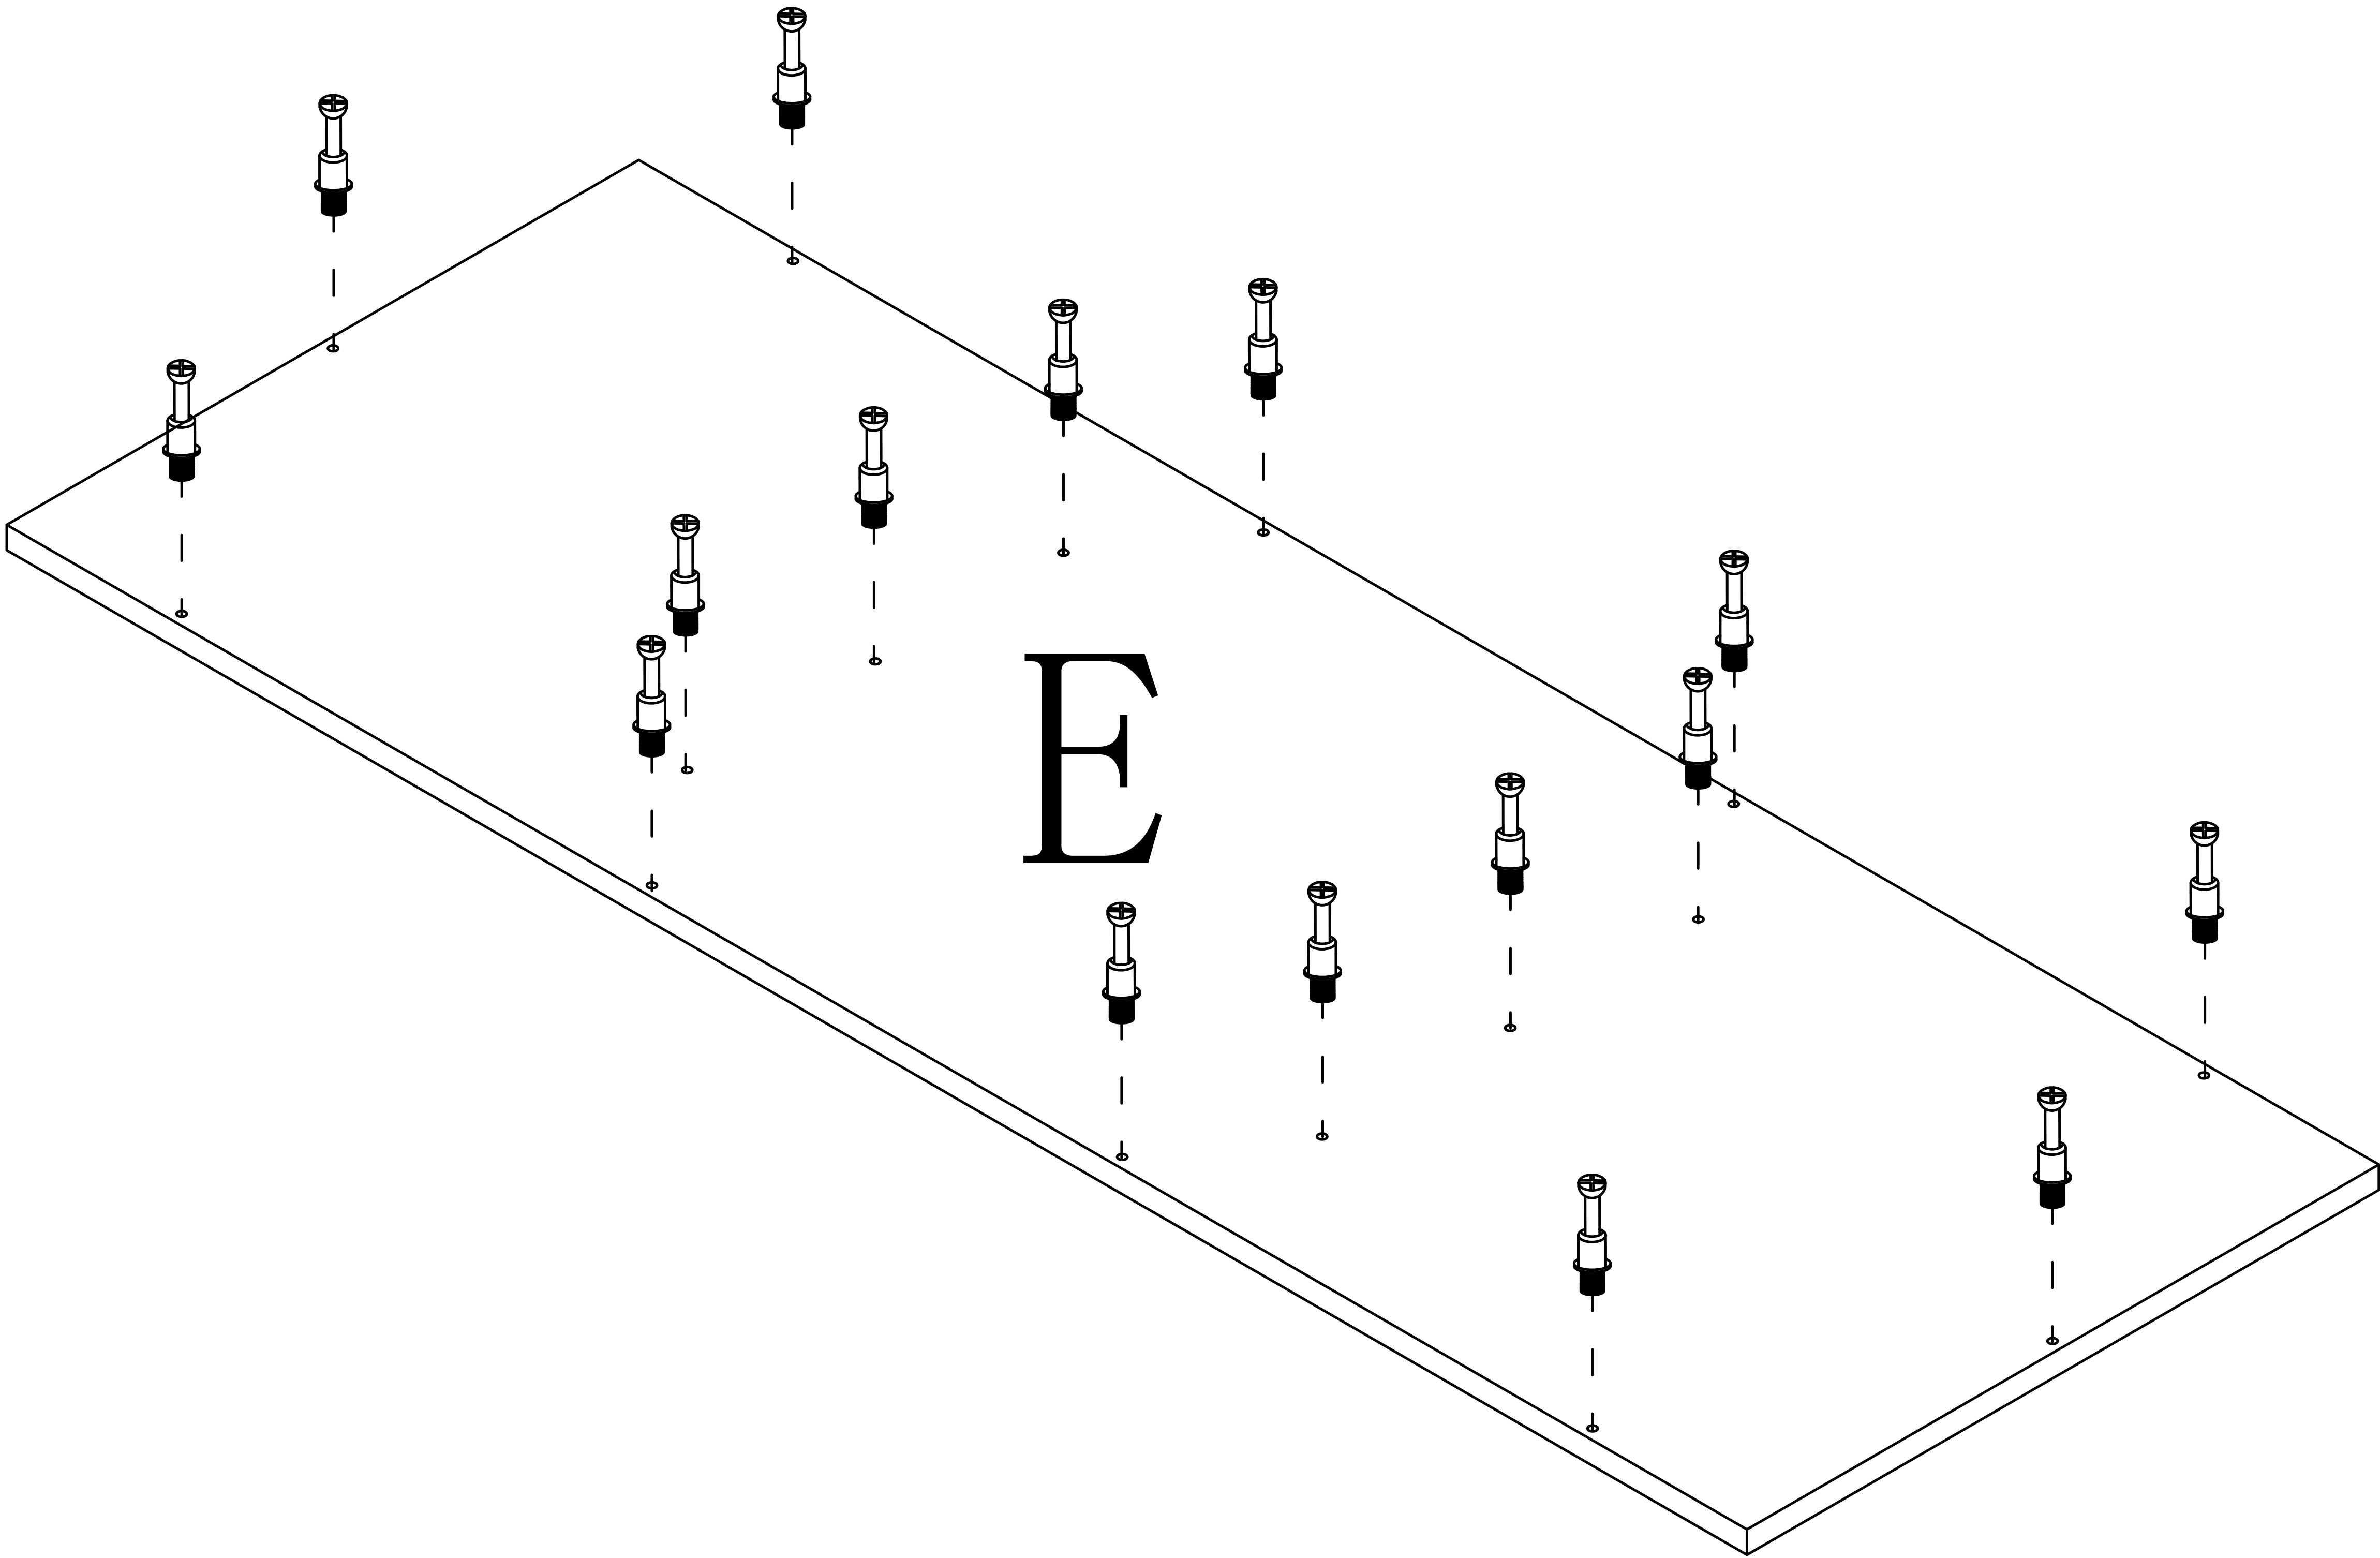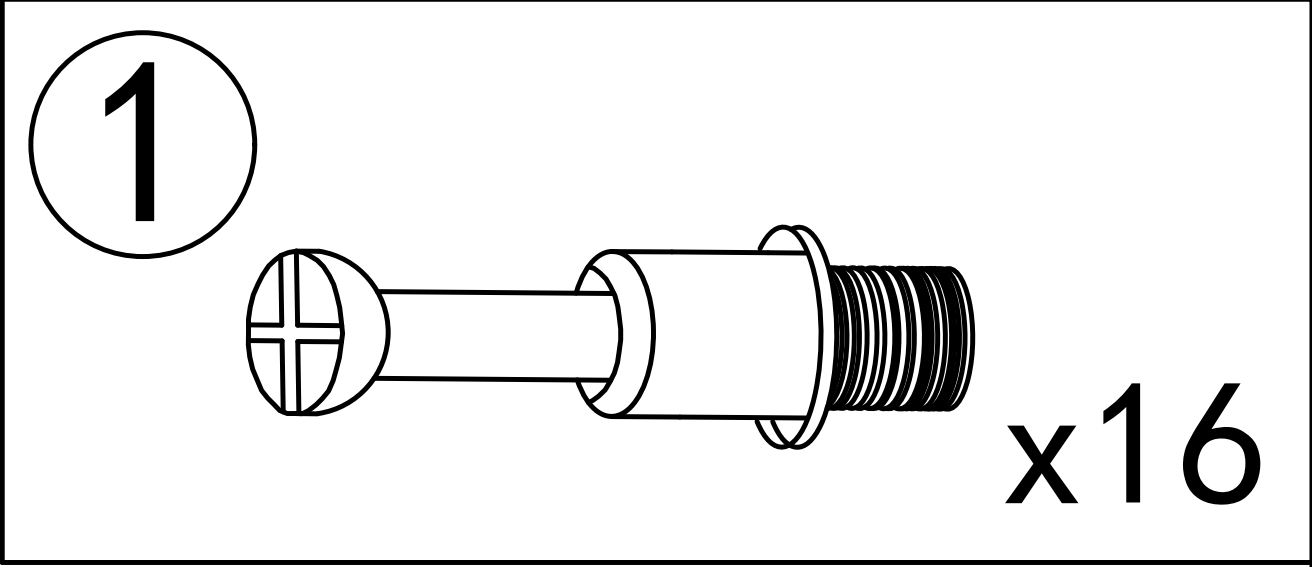


Step 12

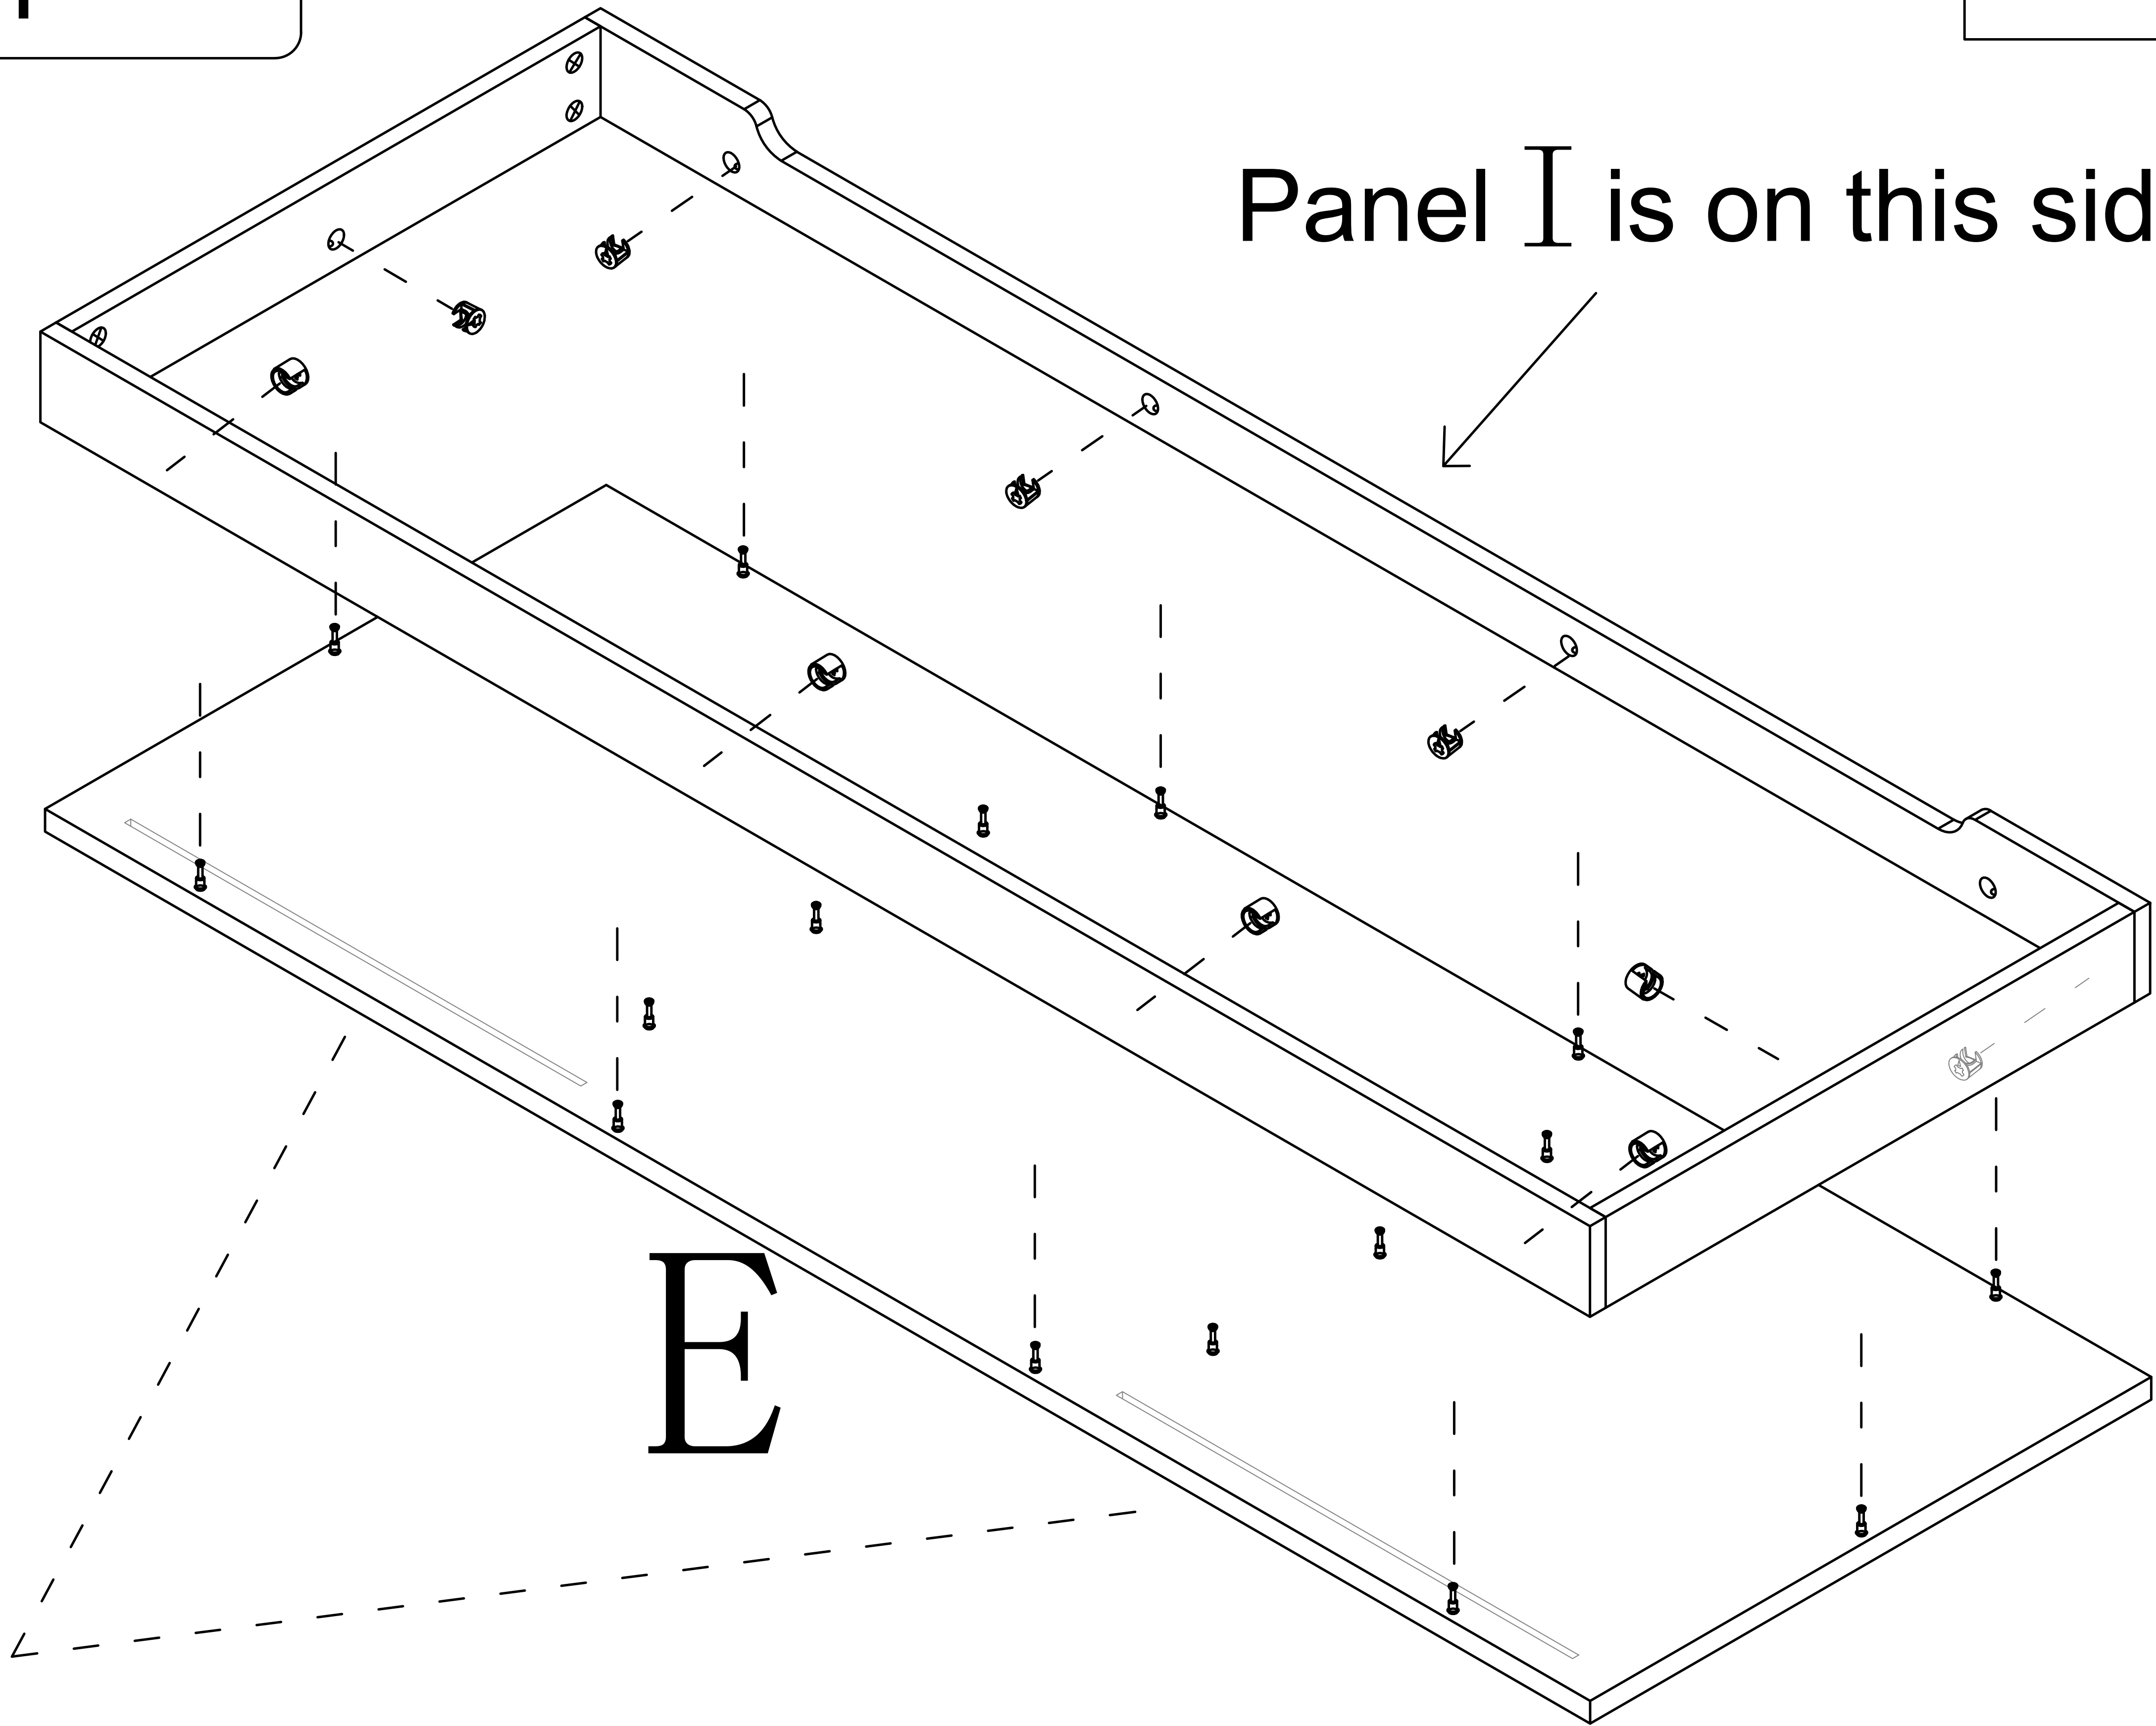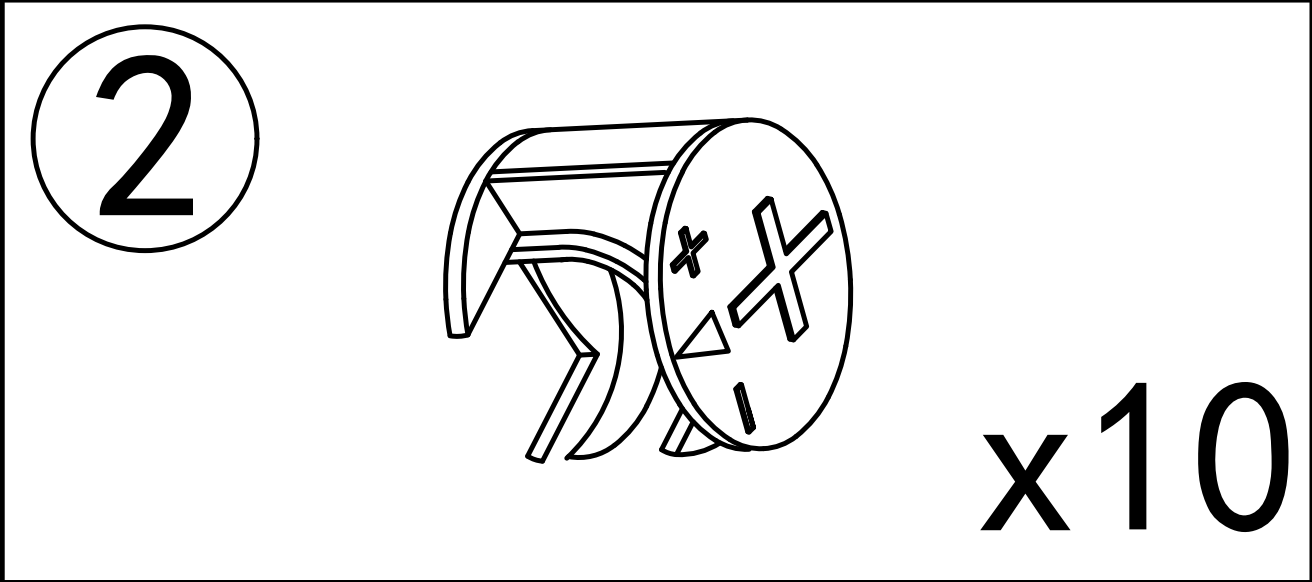


Please note that there is a groove on the back.

Step 13

2

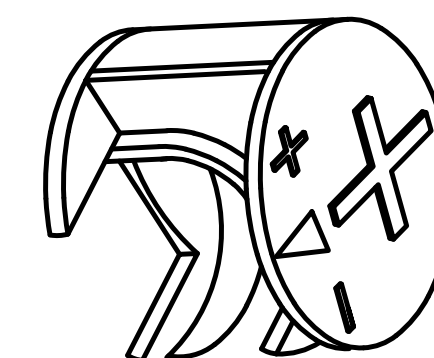


x6

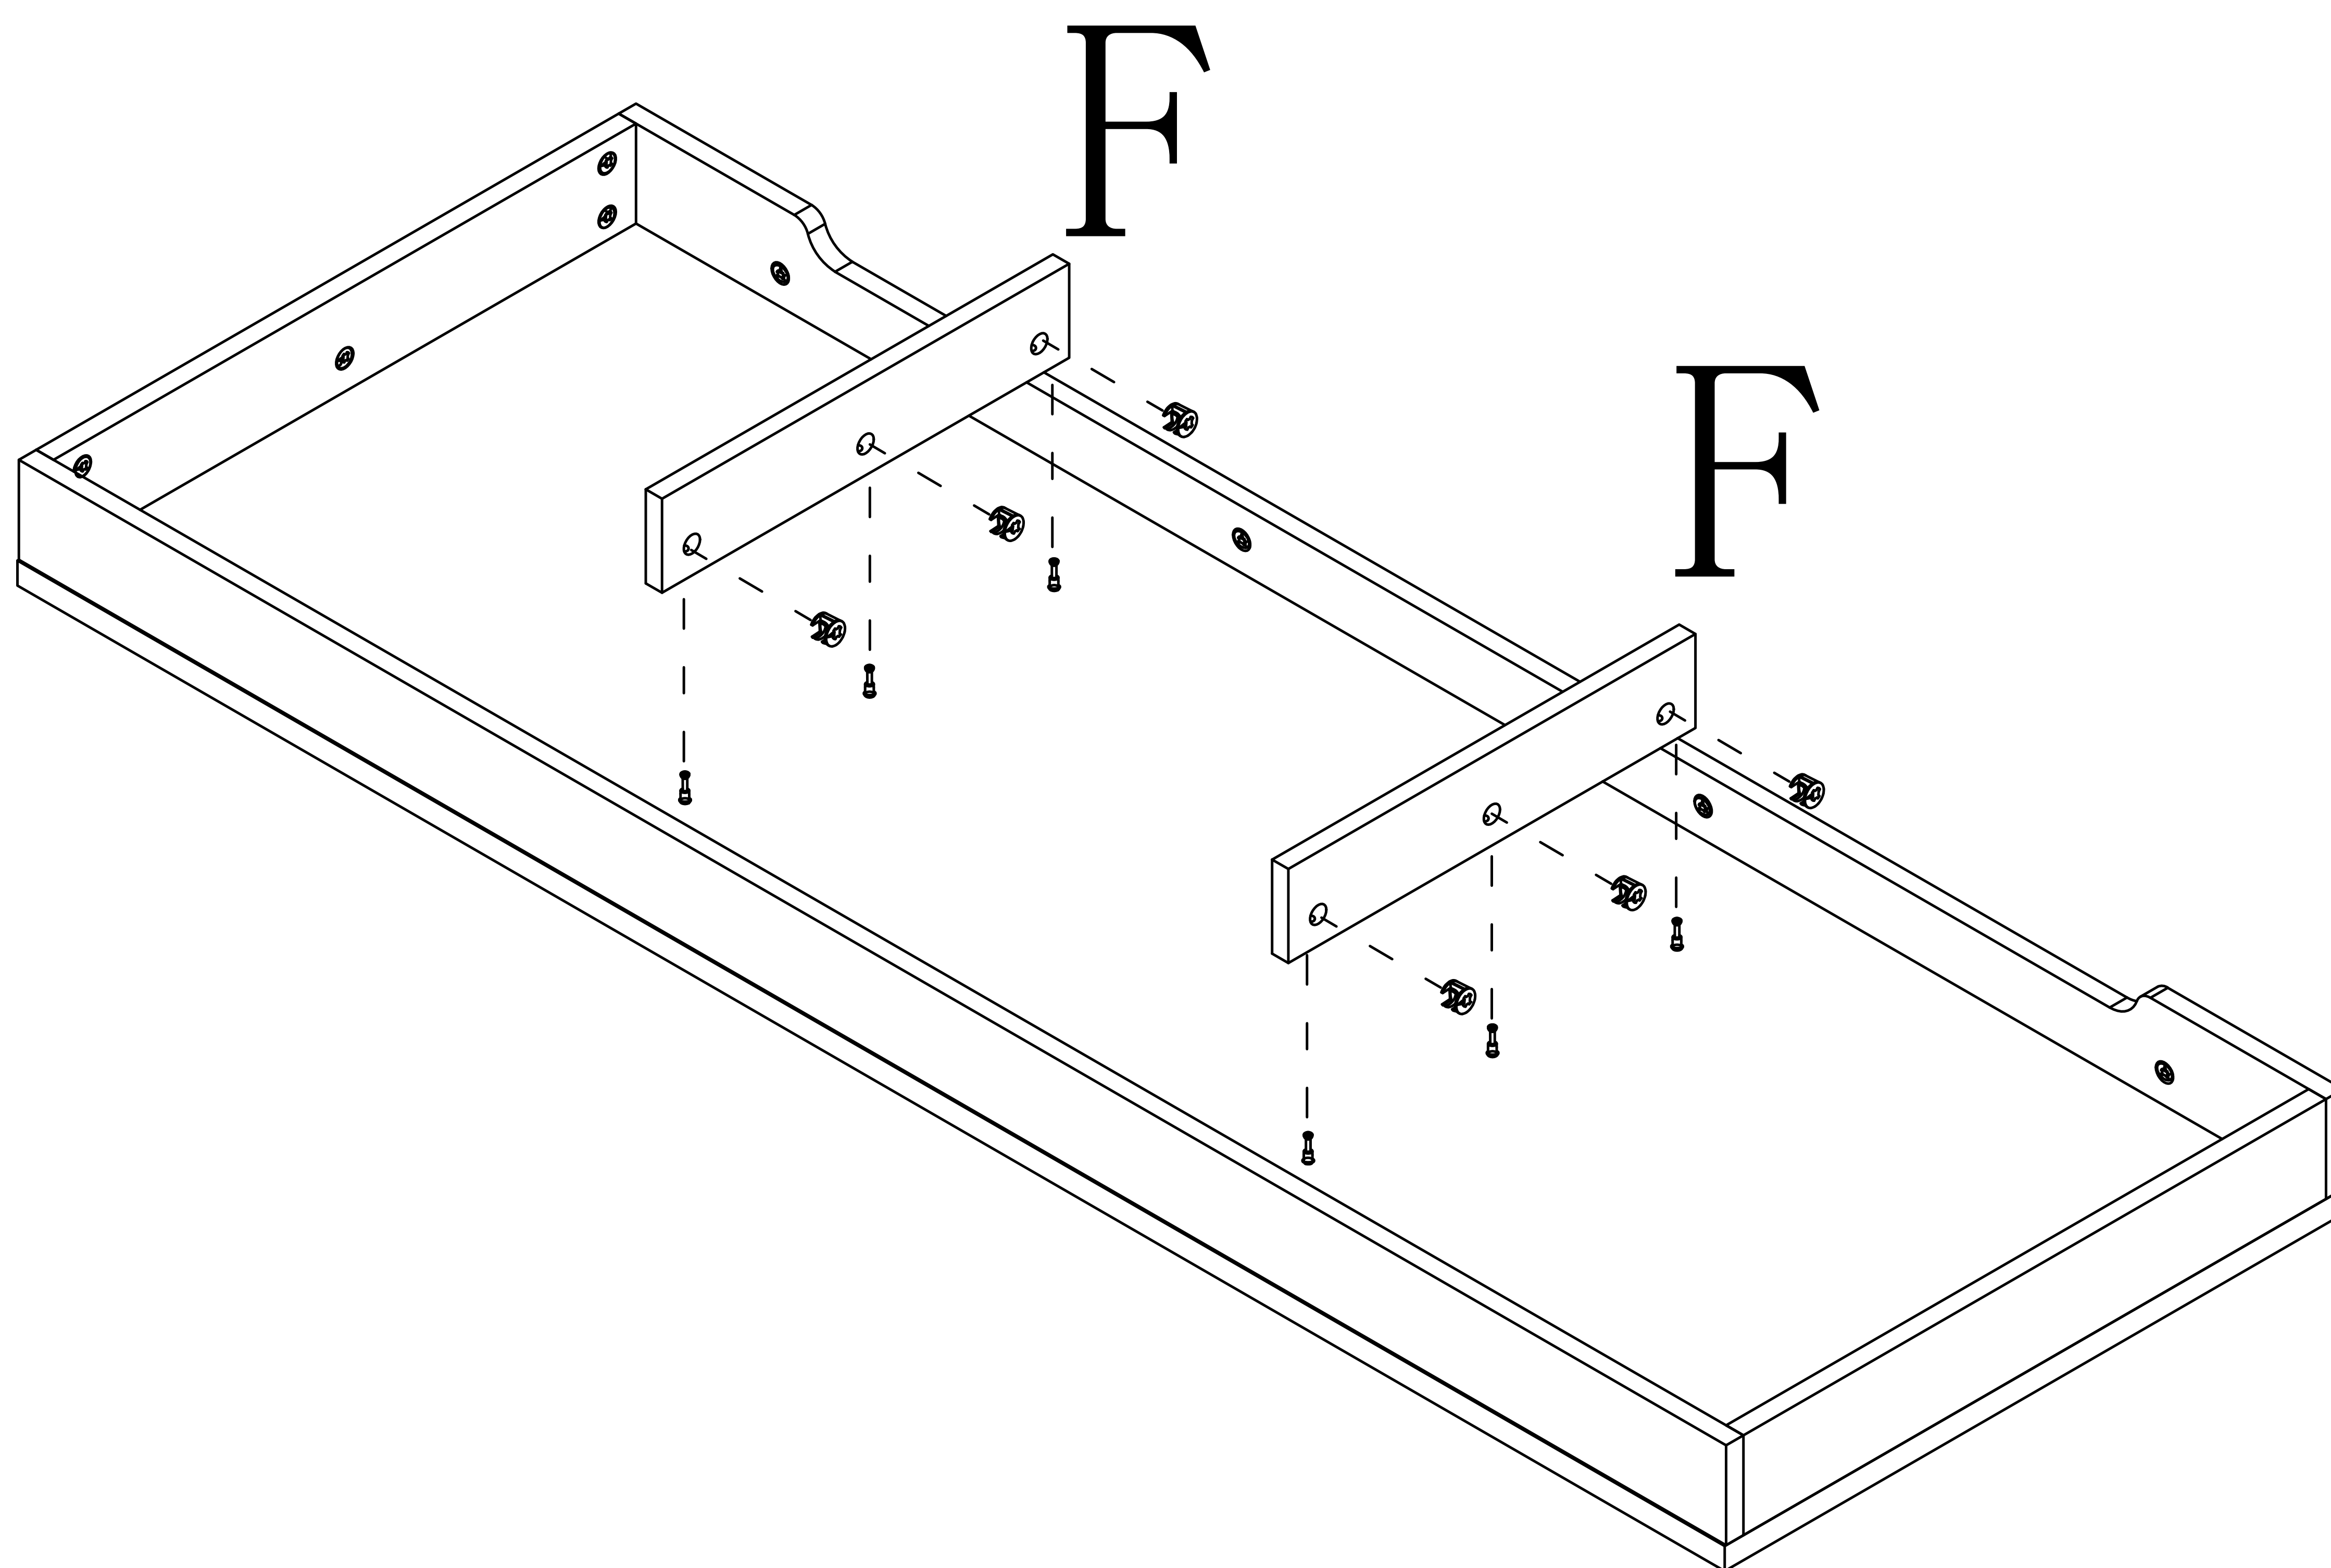


Step 14

6

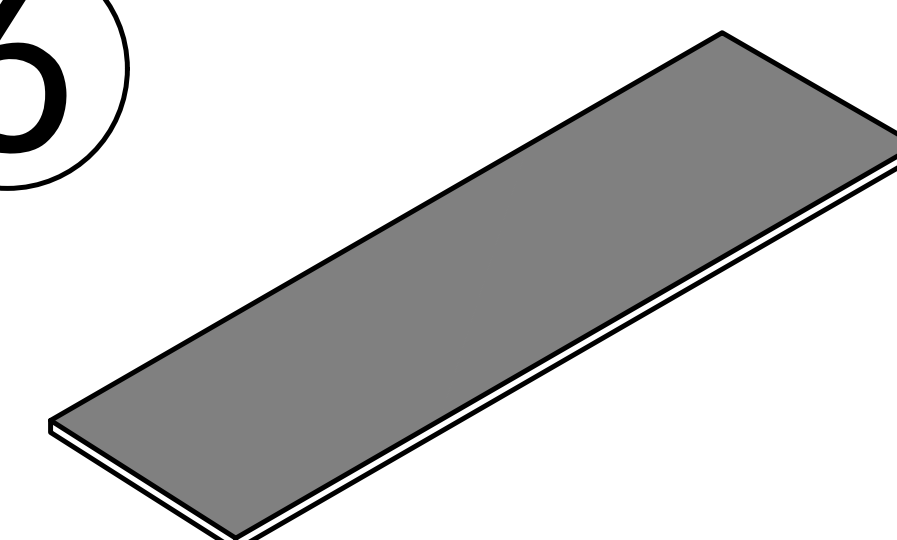



x8

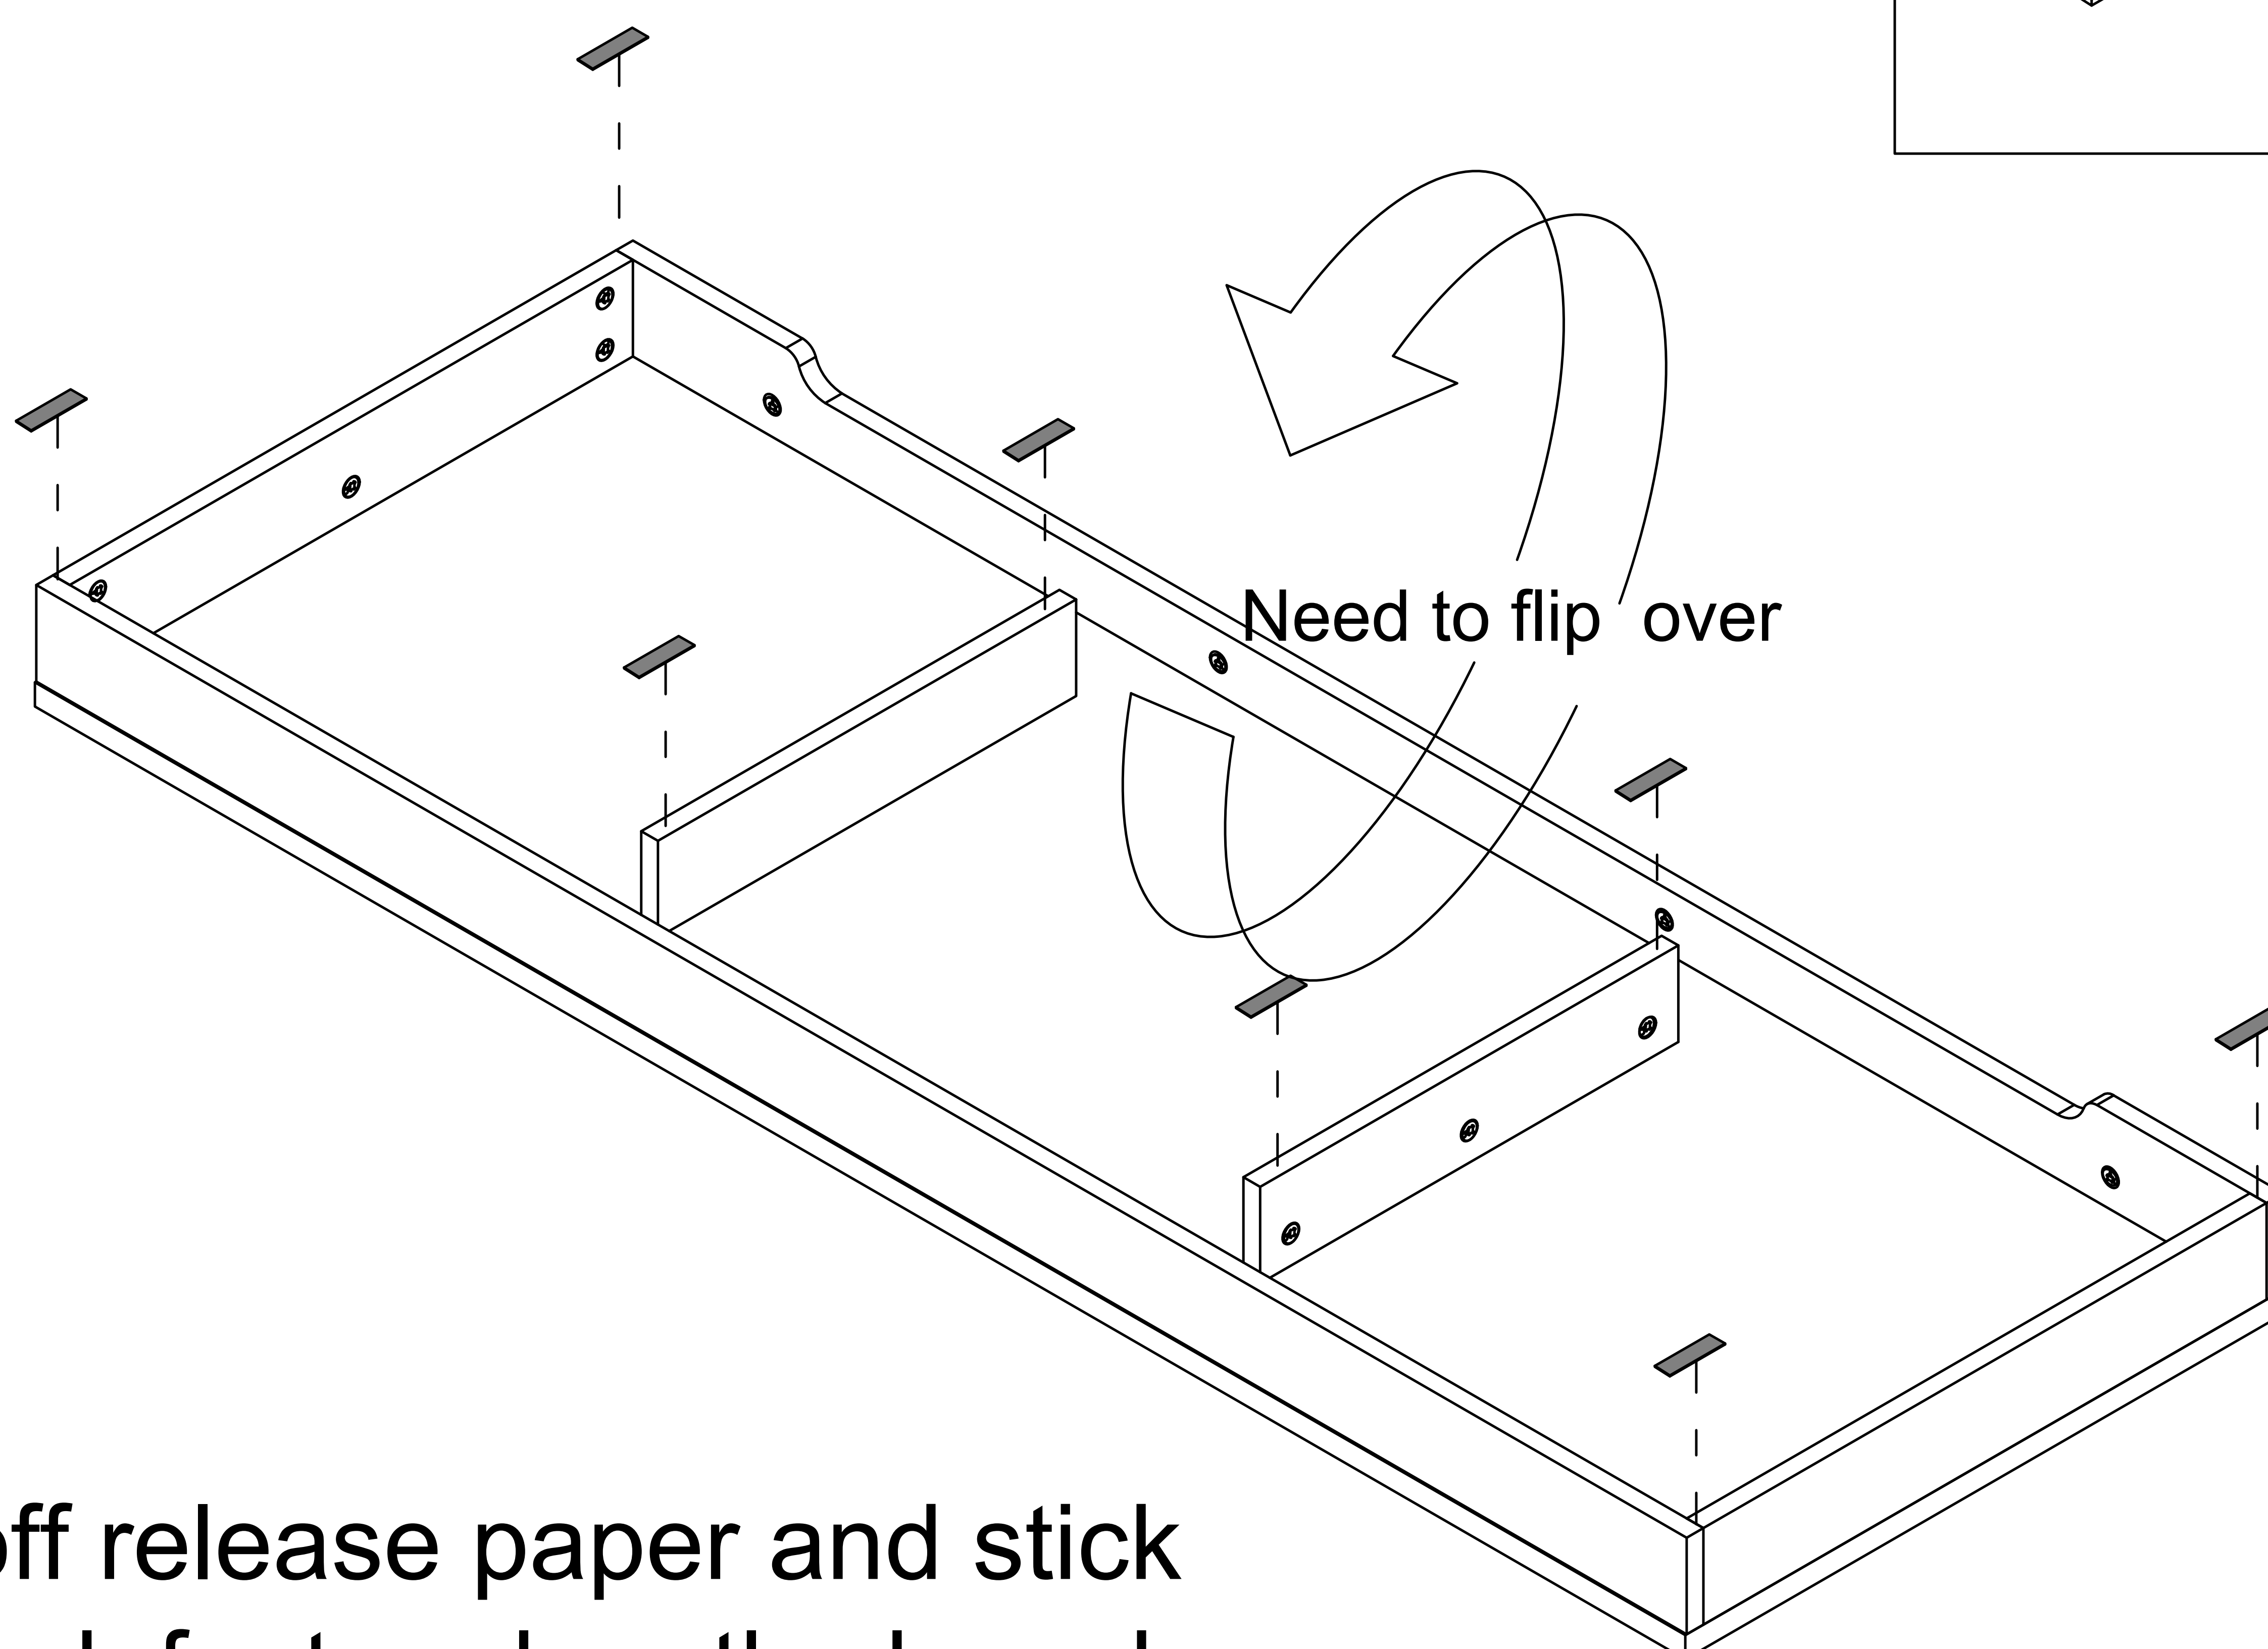



Tear off release paper and stick the black foot pad on the board

14






Step 15

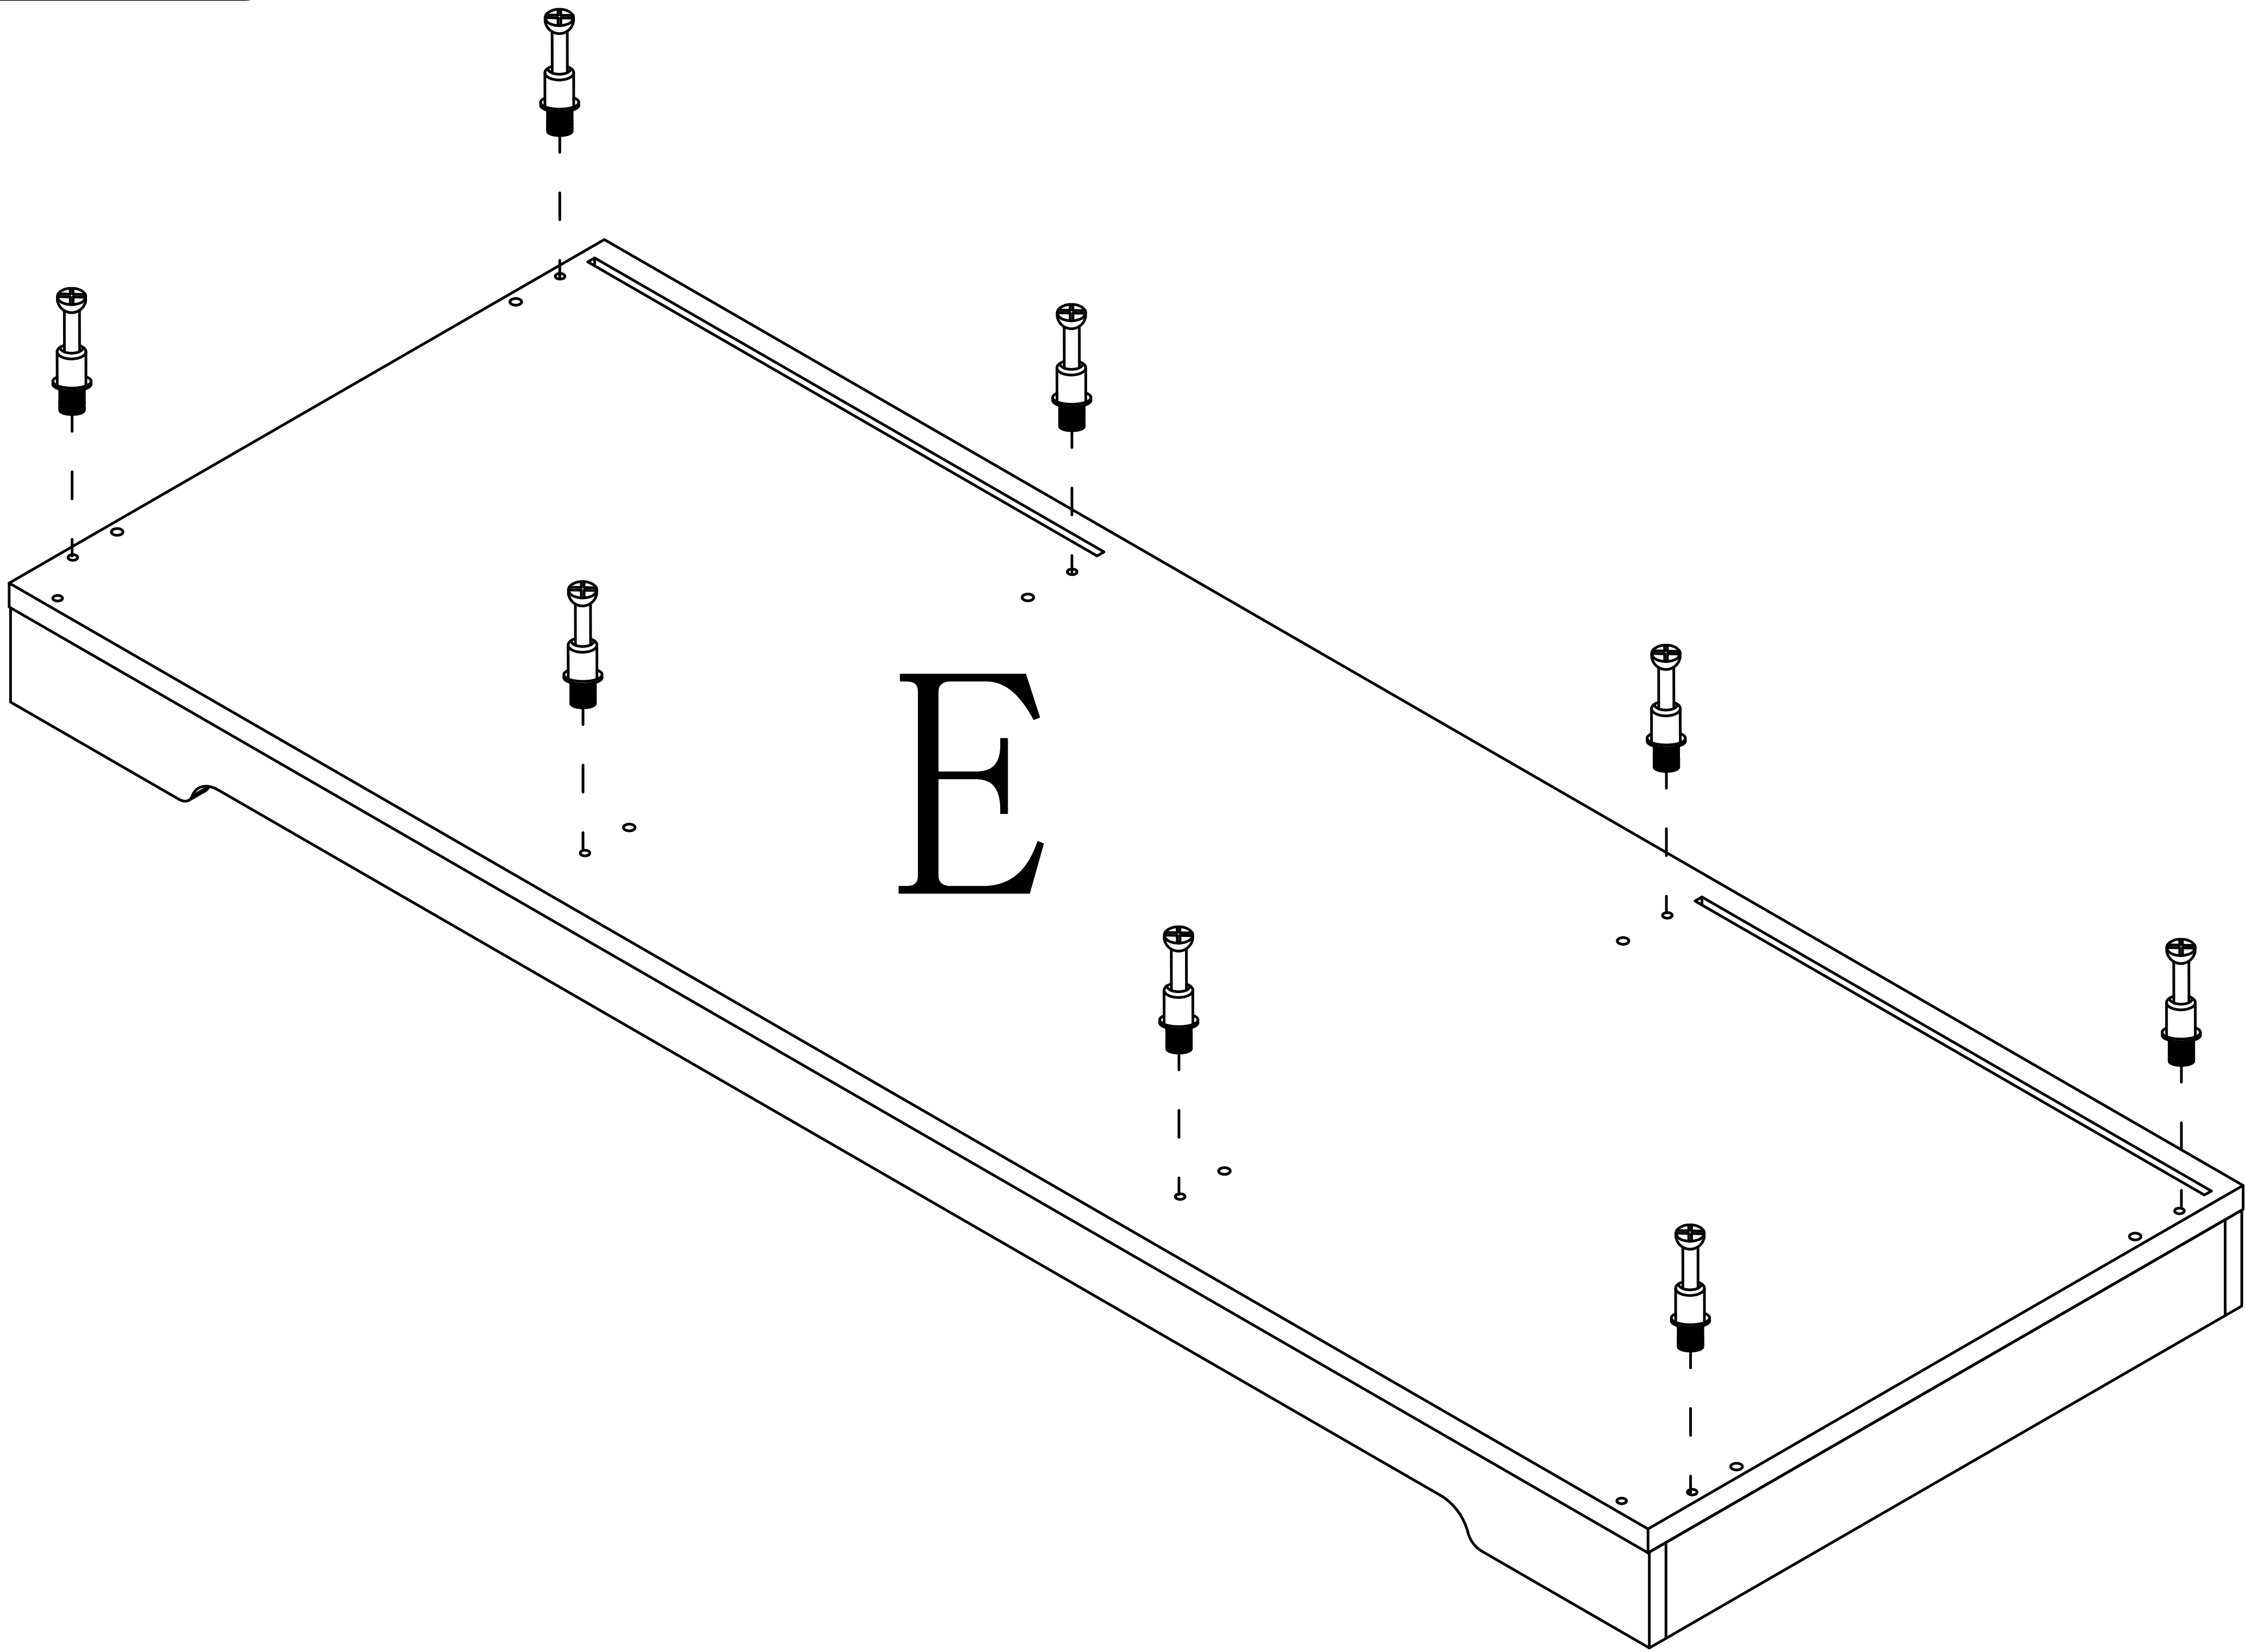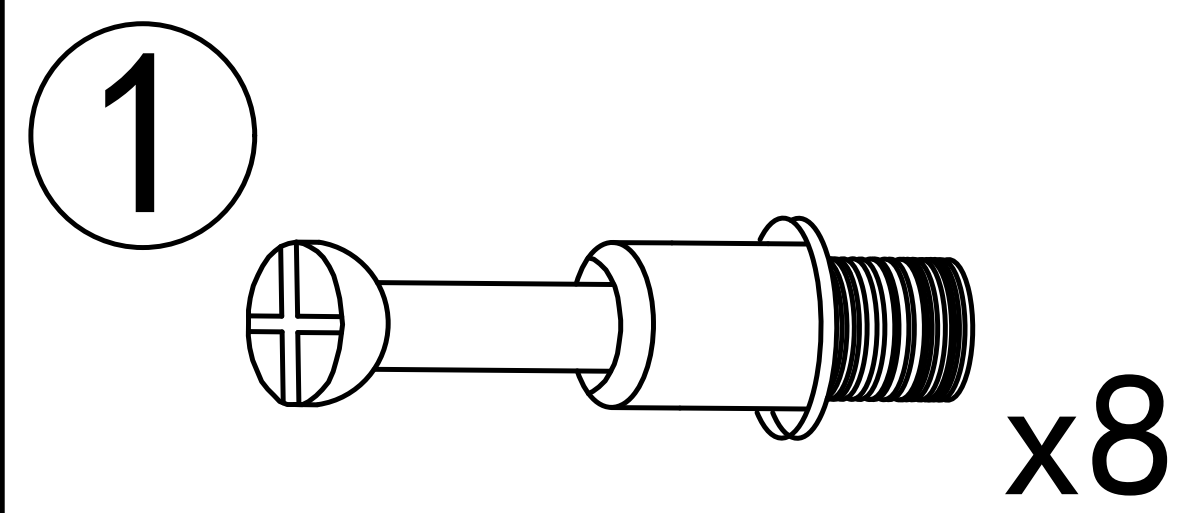





Step 16

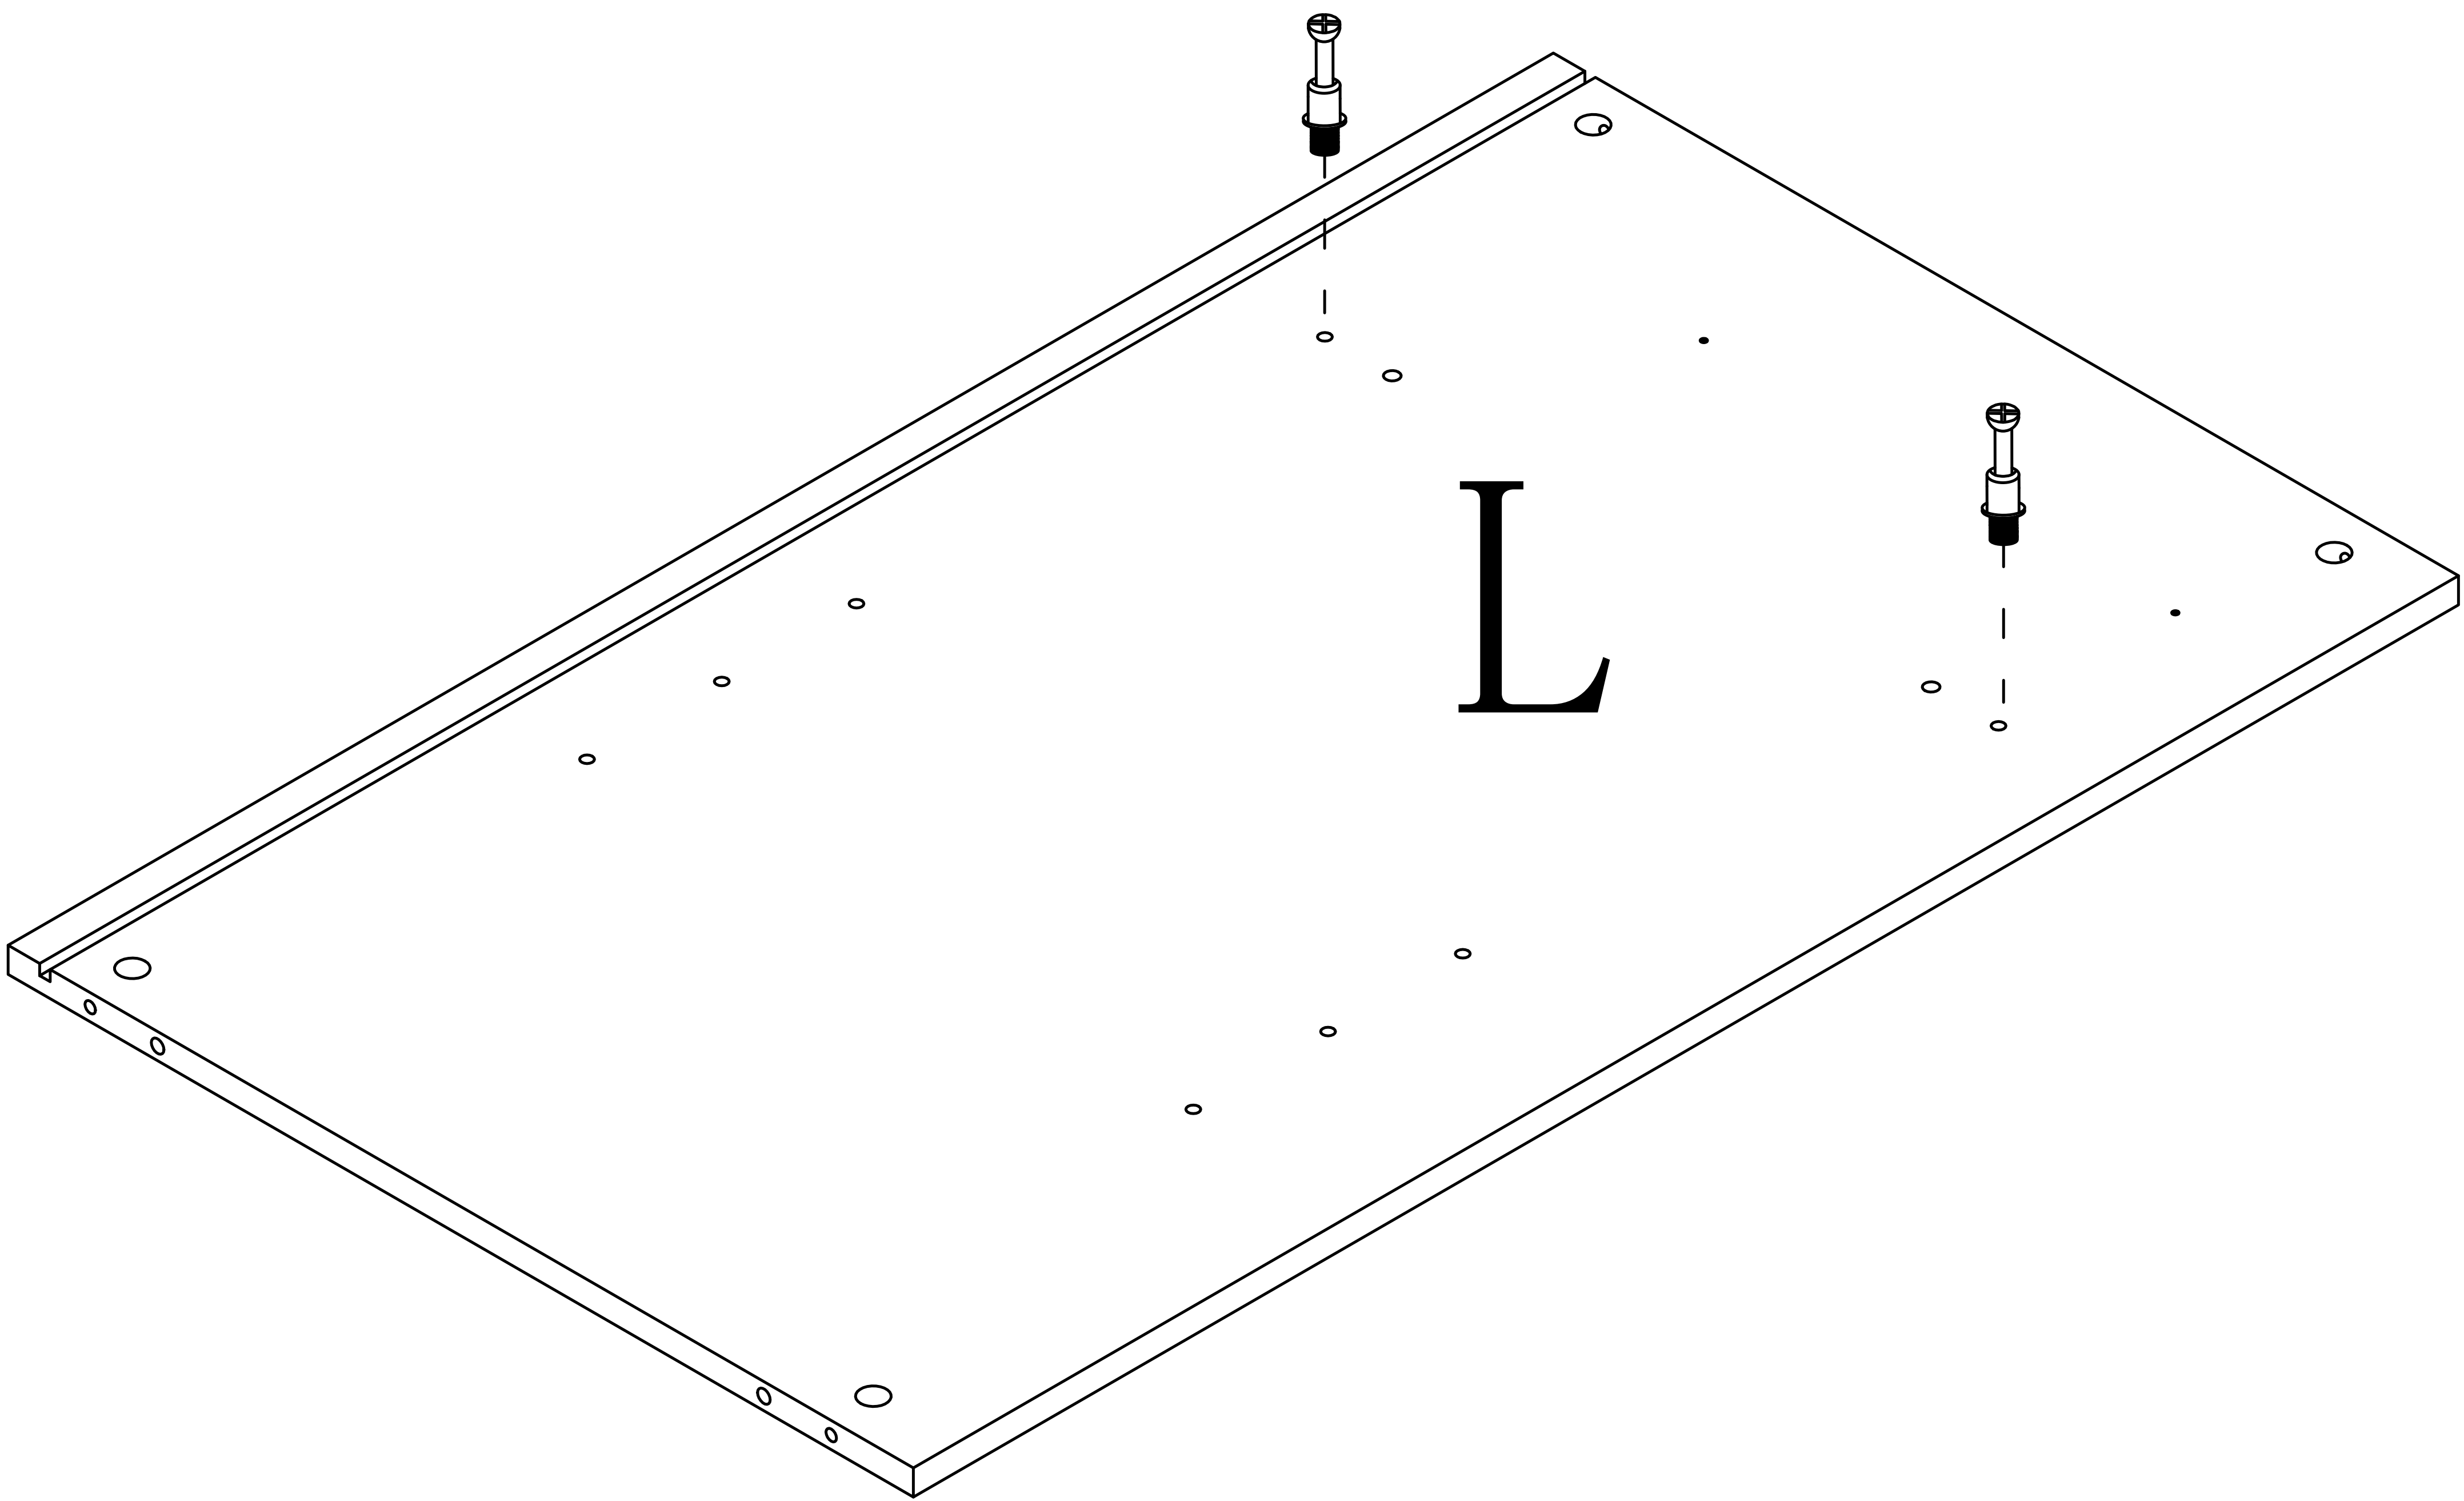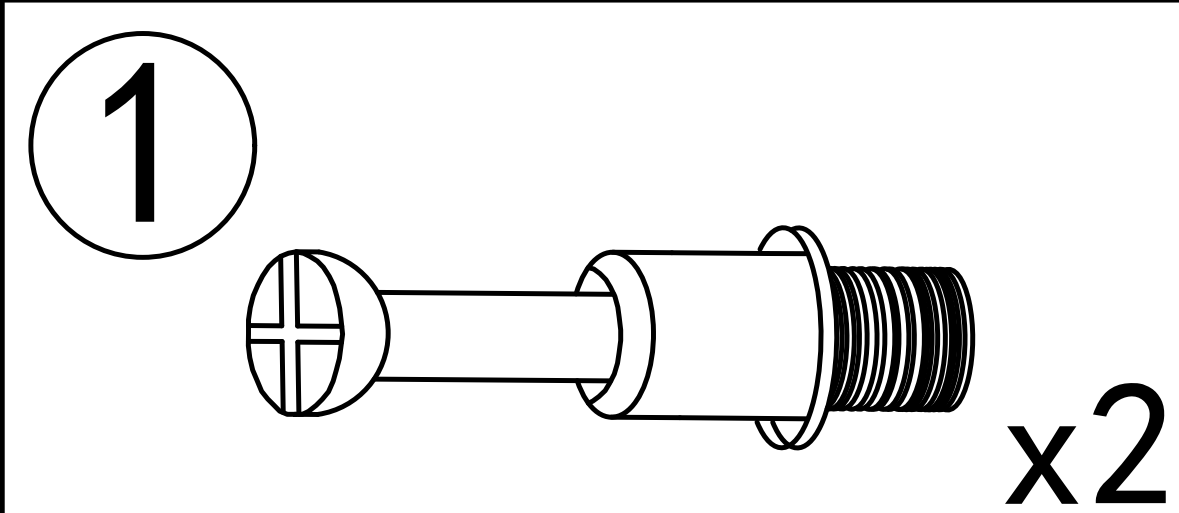


Step 17

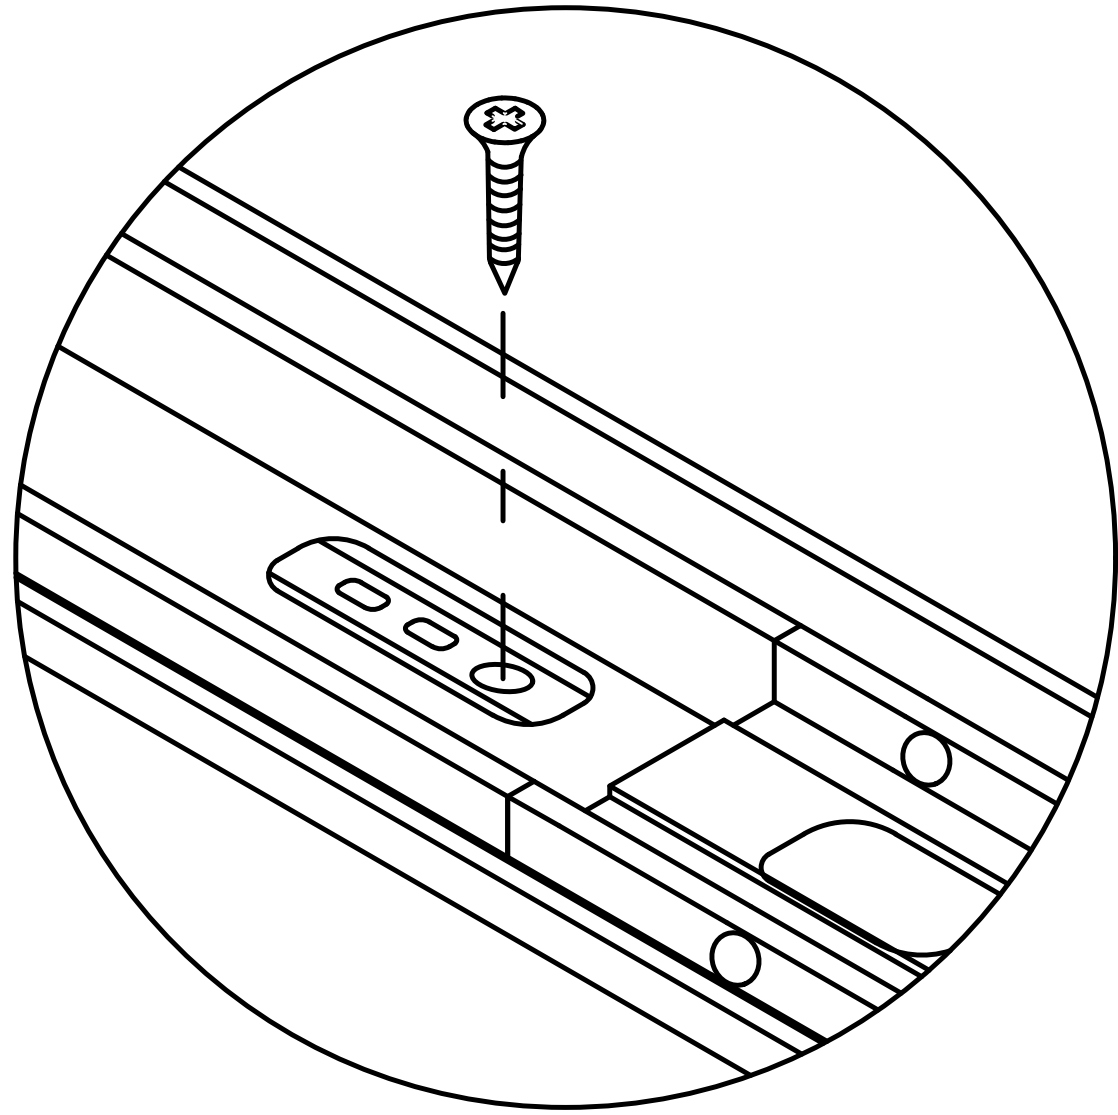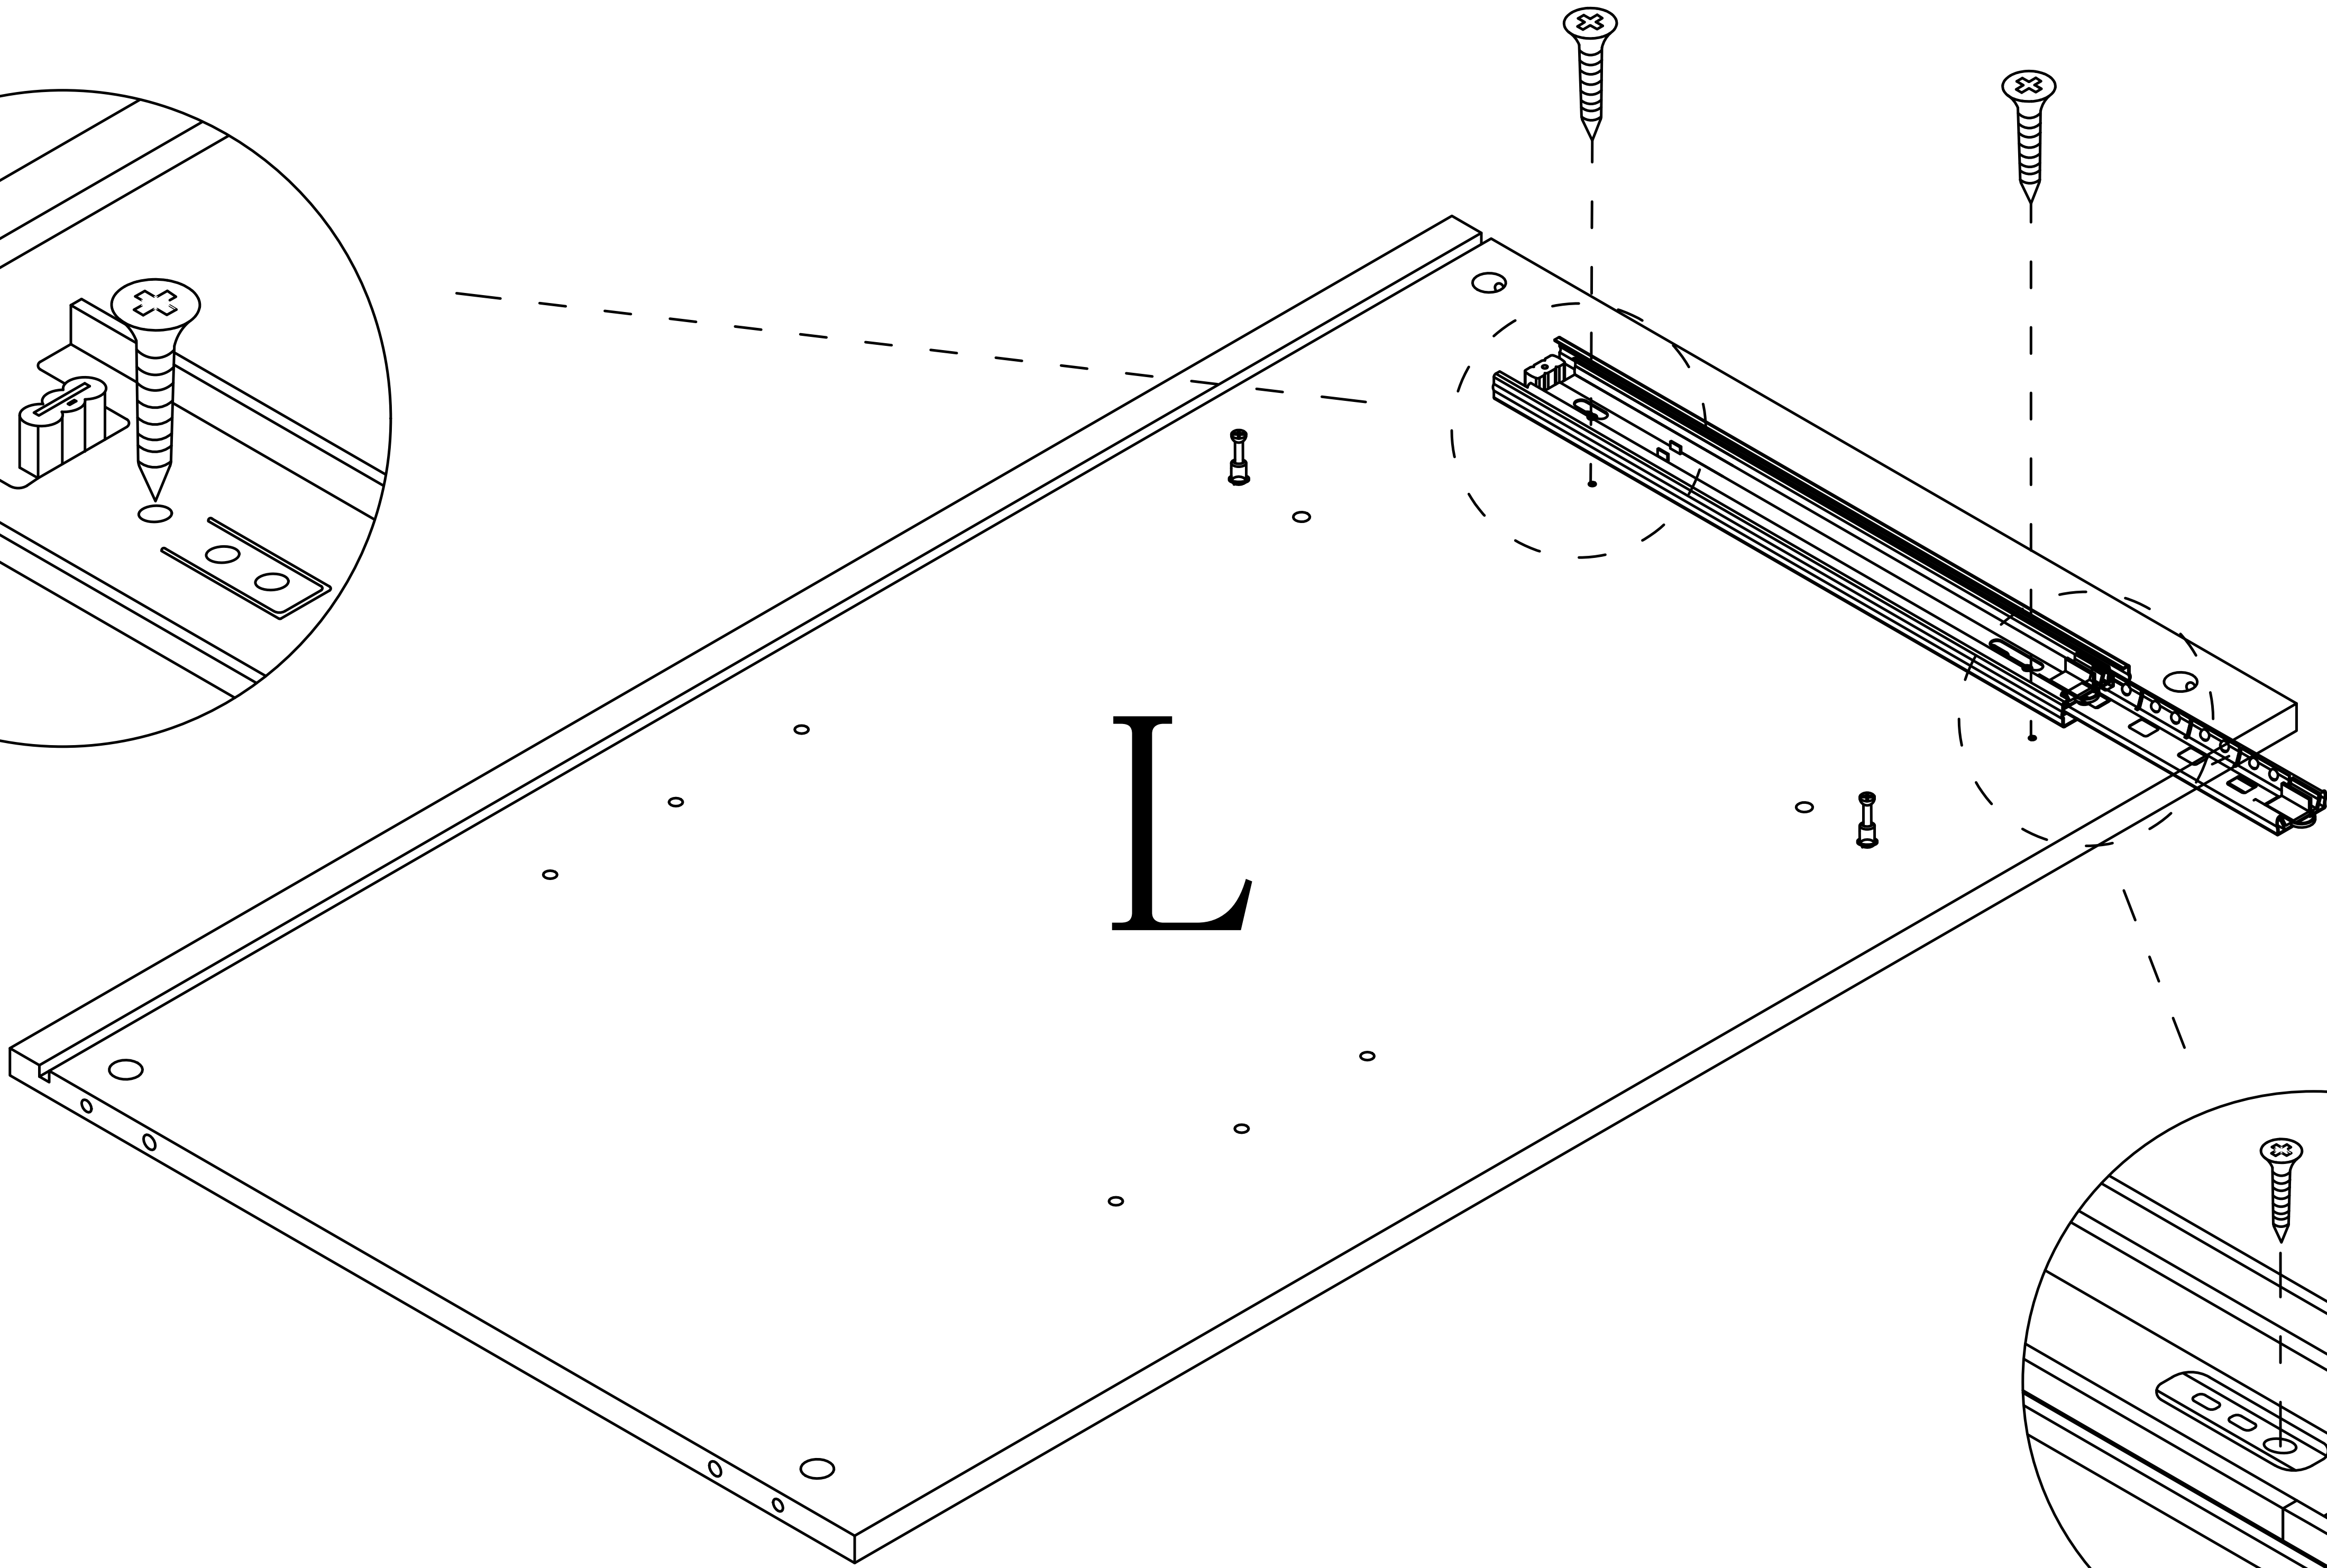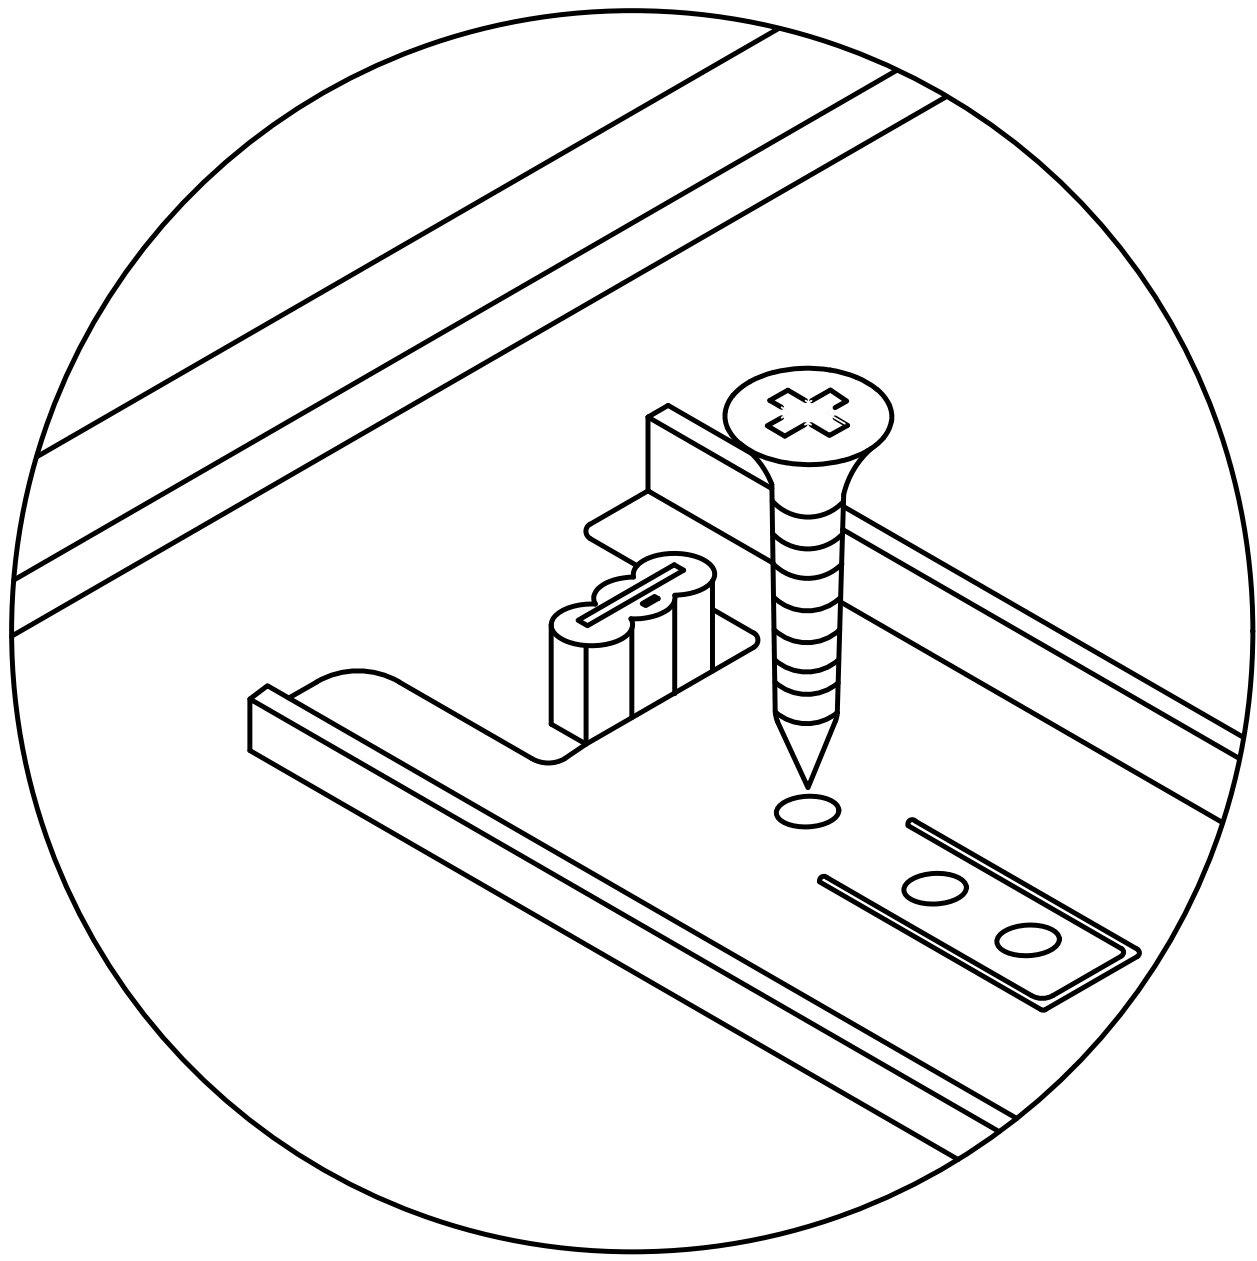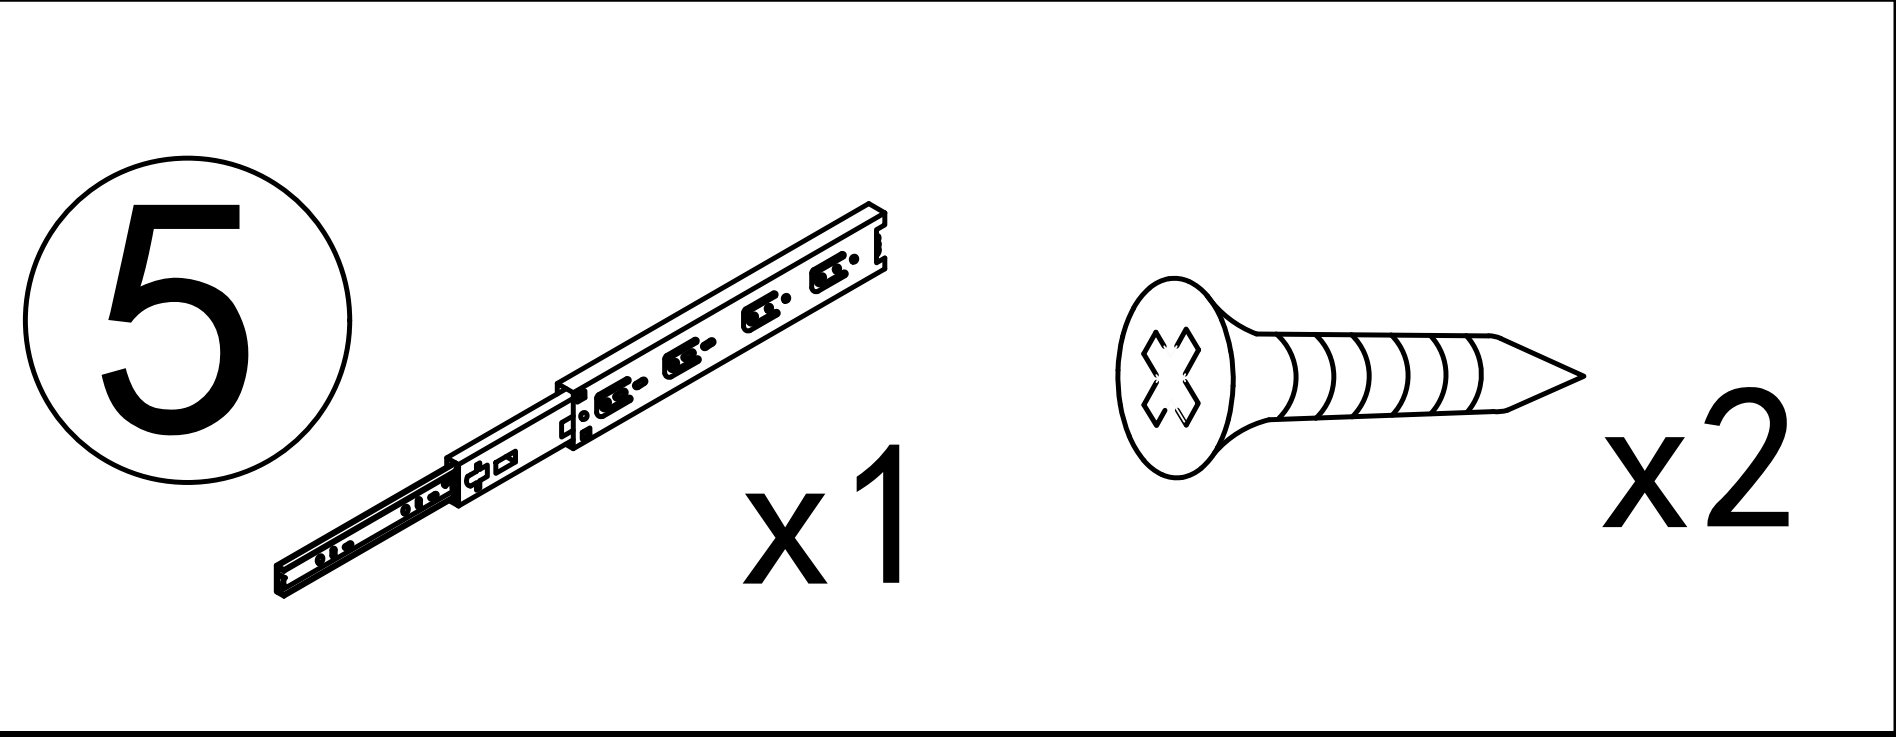
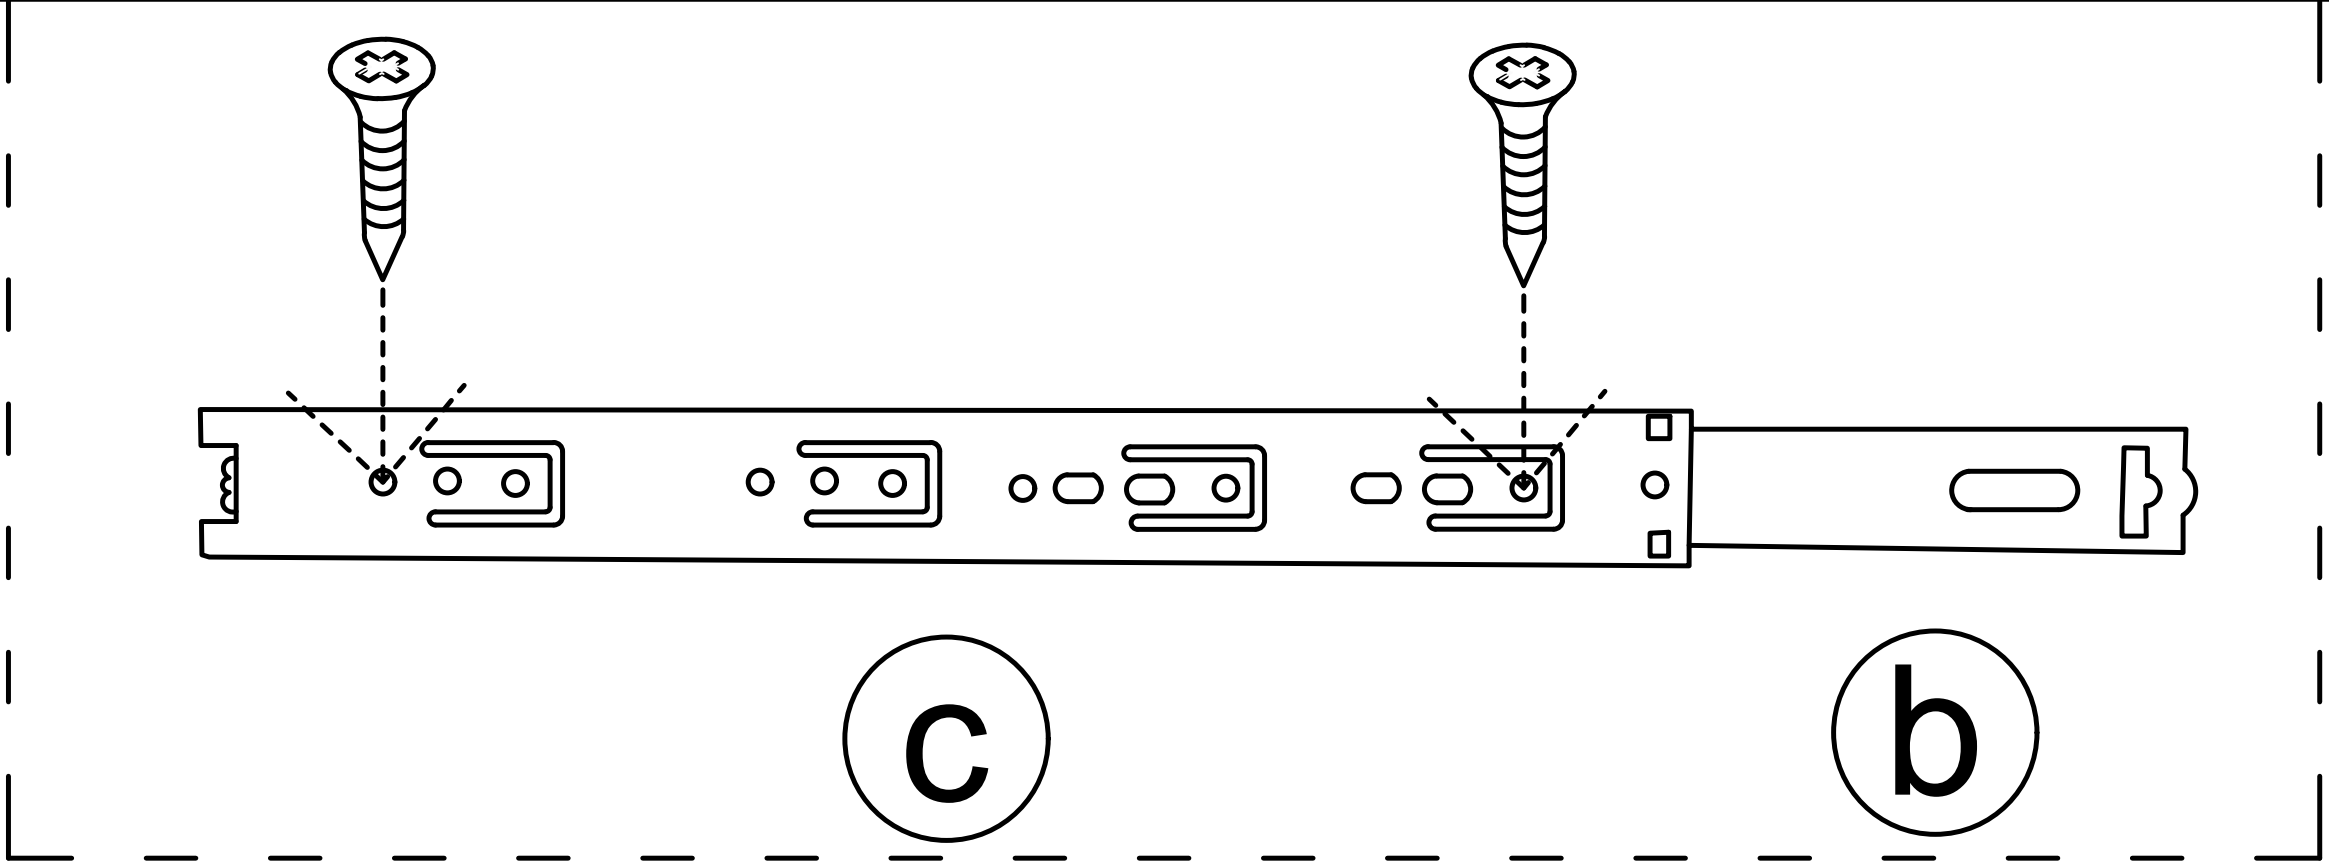


Step 18

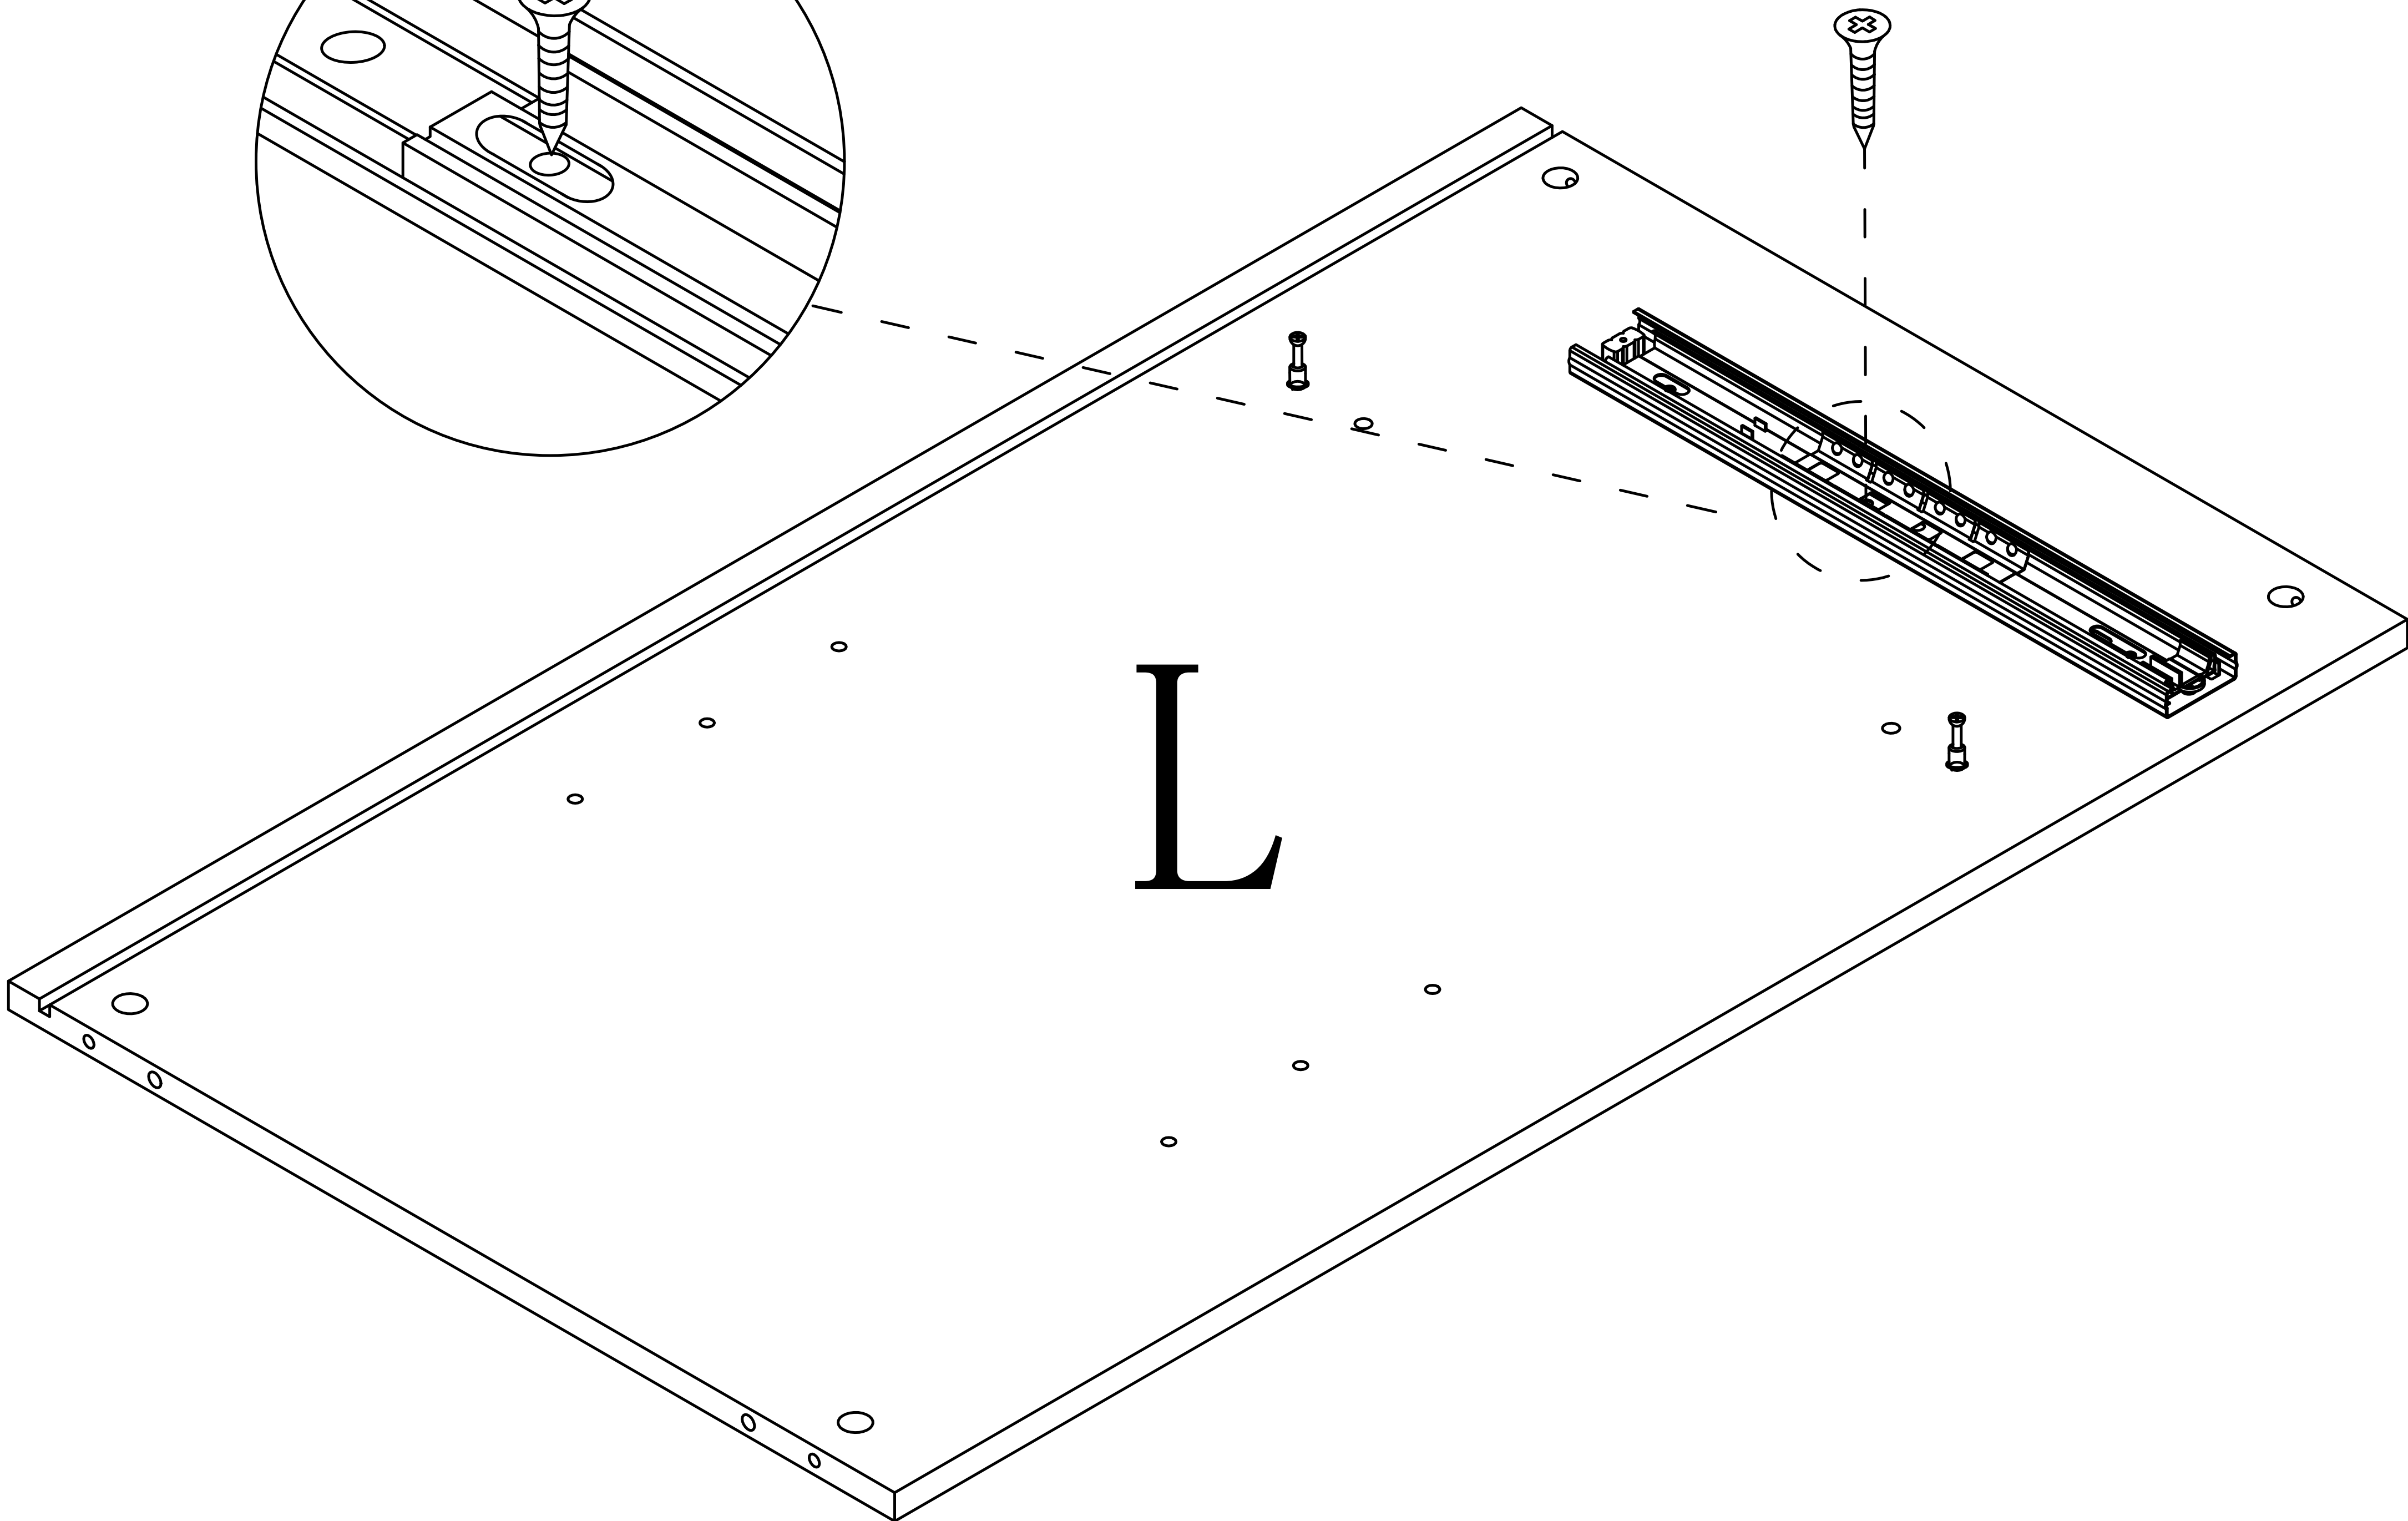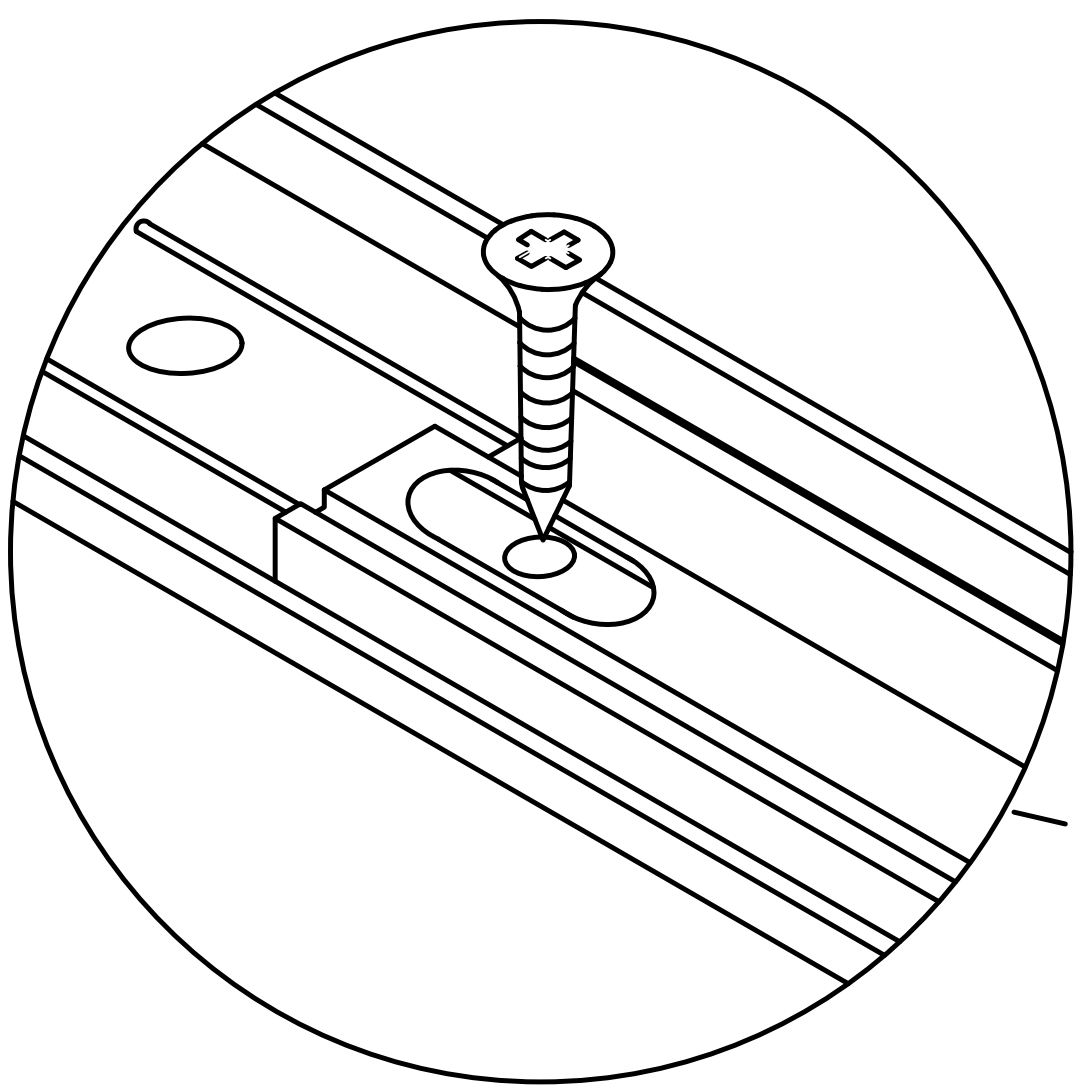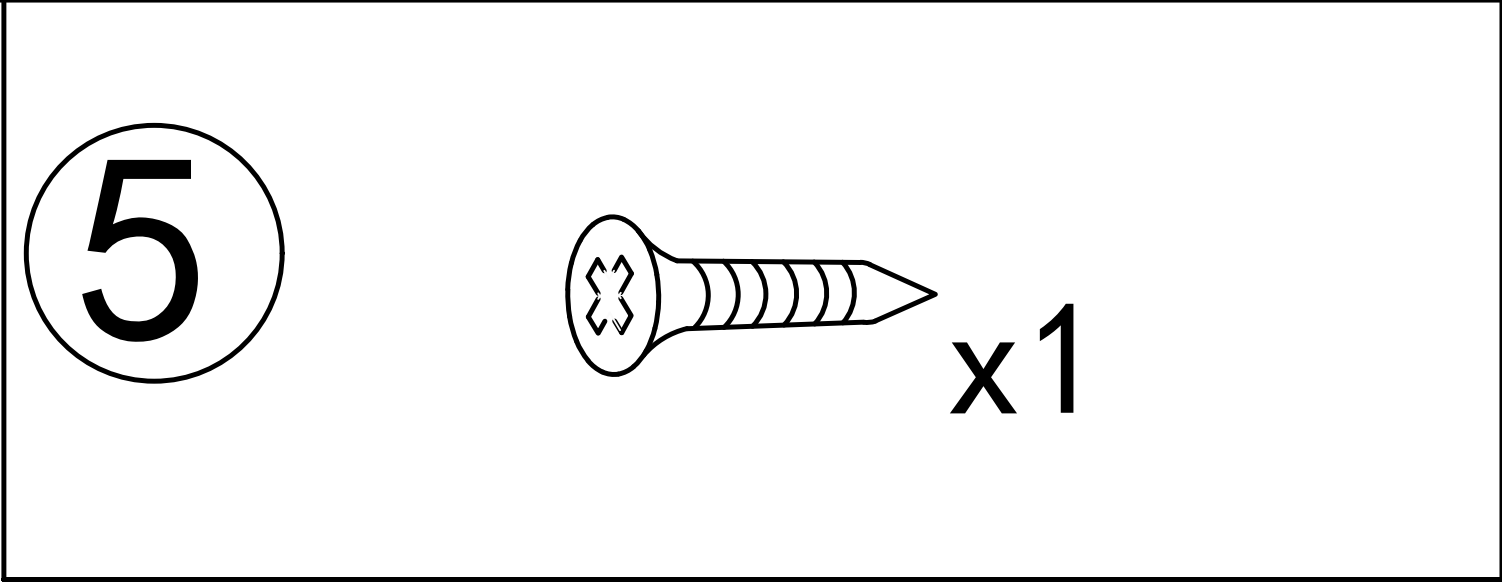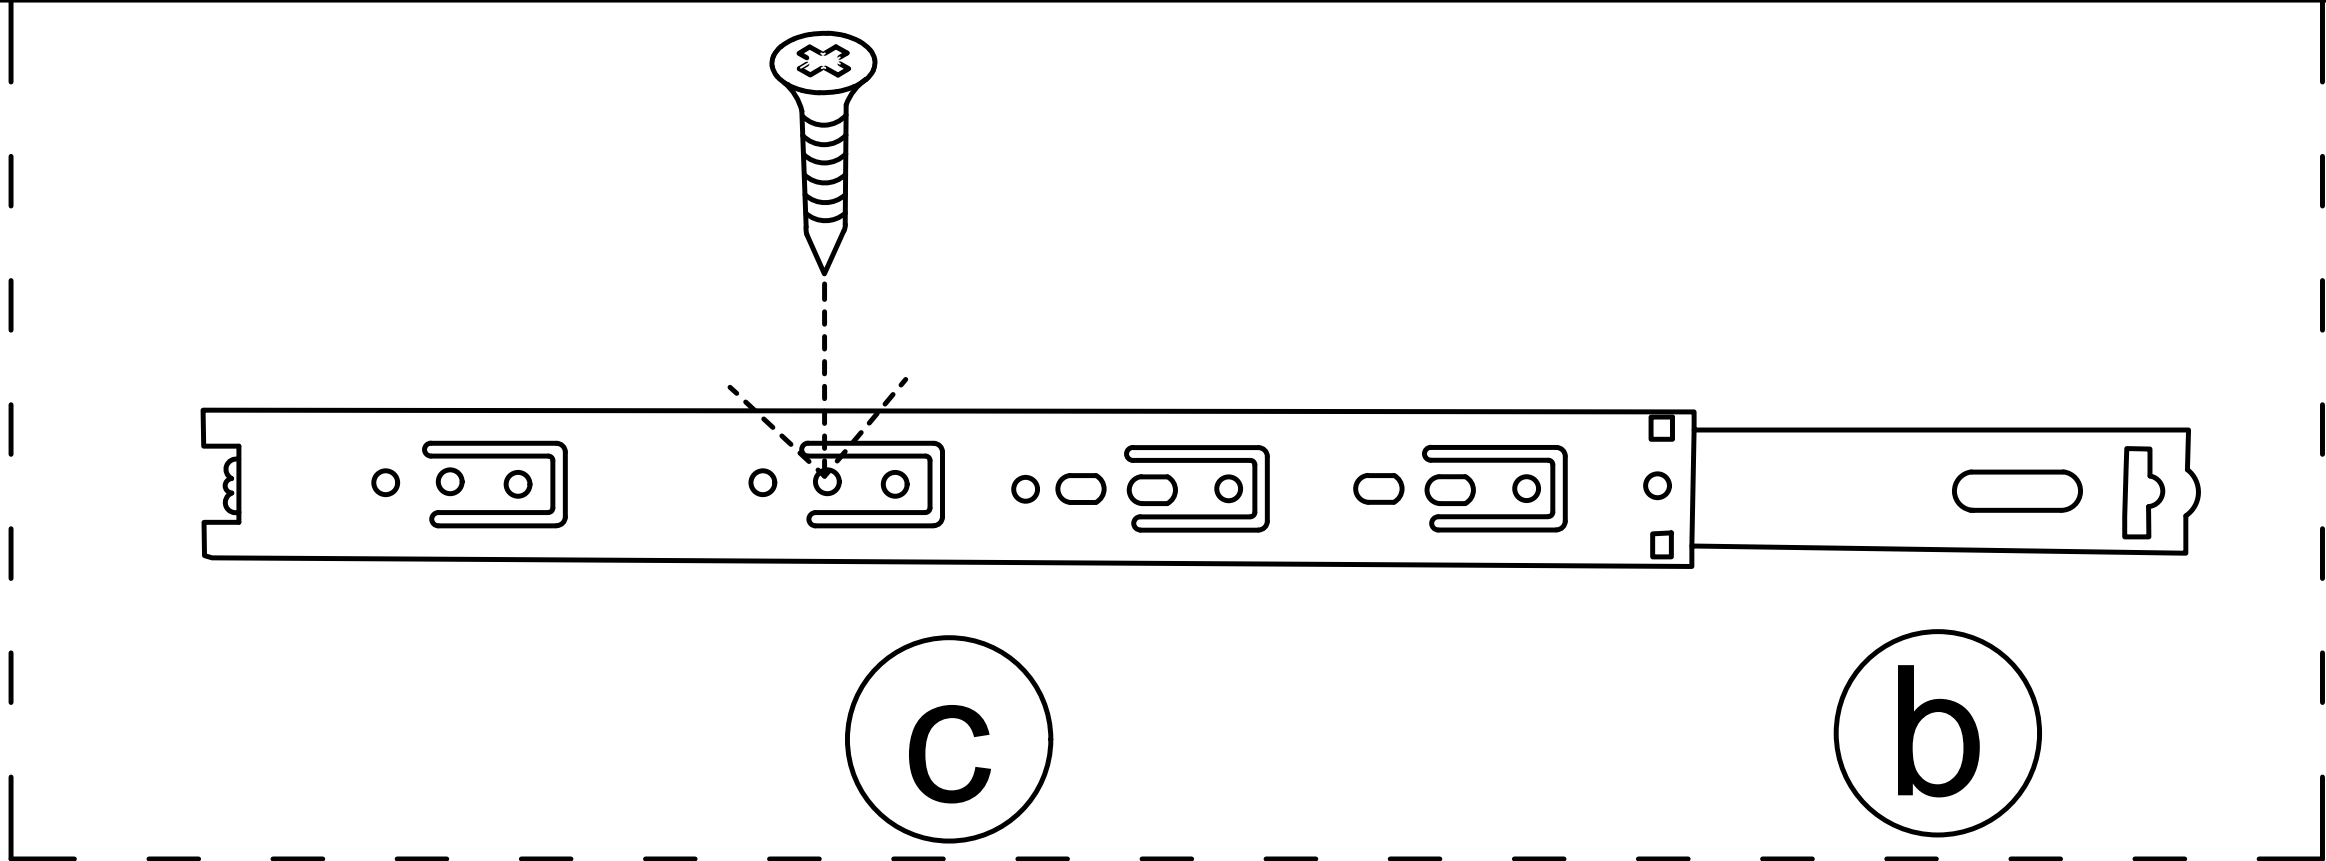



Step 19

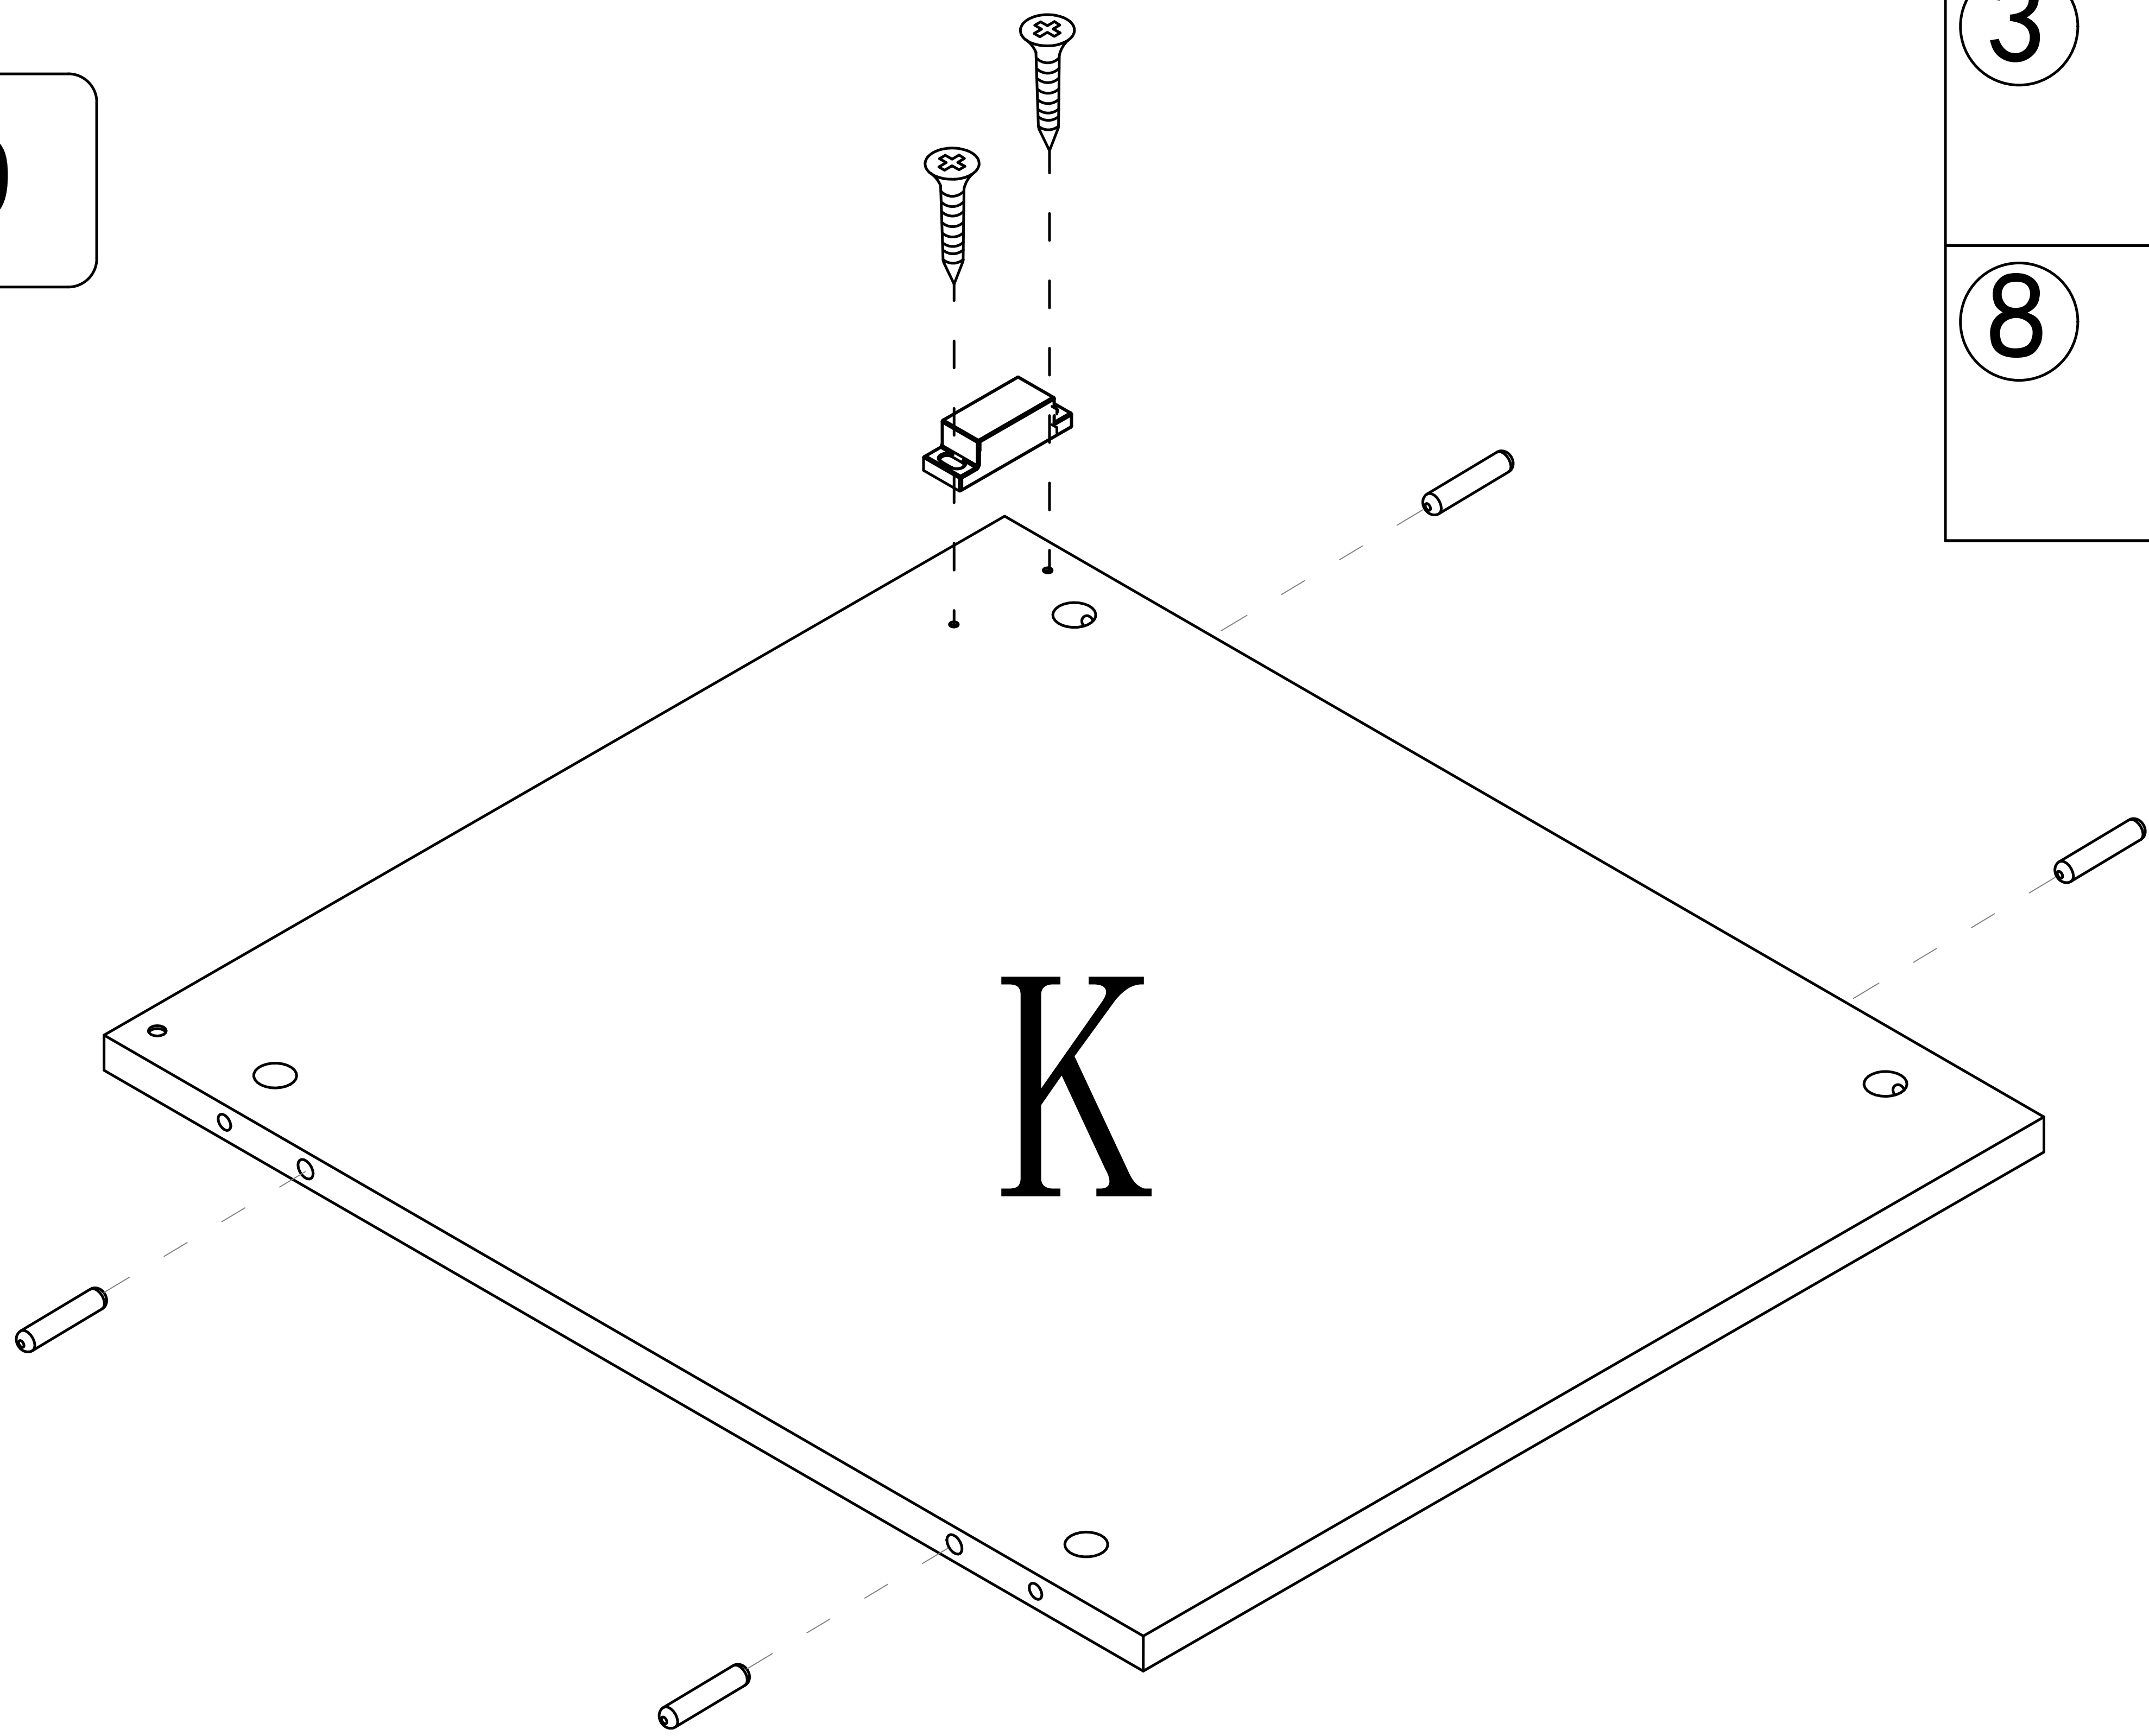


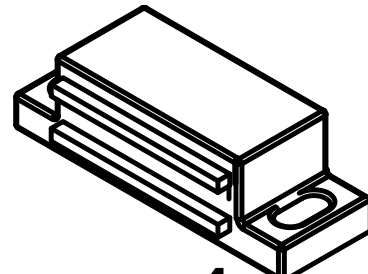- | | | |
|---|---|----|
| 3 |  | x4 |
| 8 |  | x1 |
| |  | x2 |



Step 20

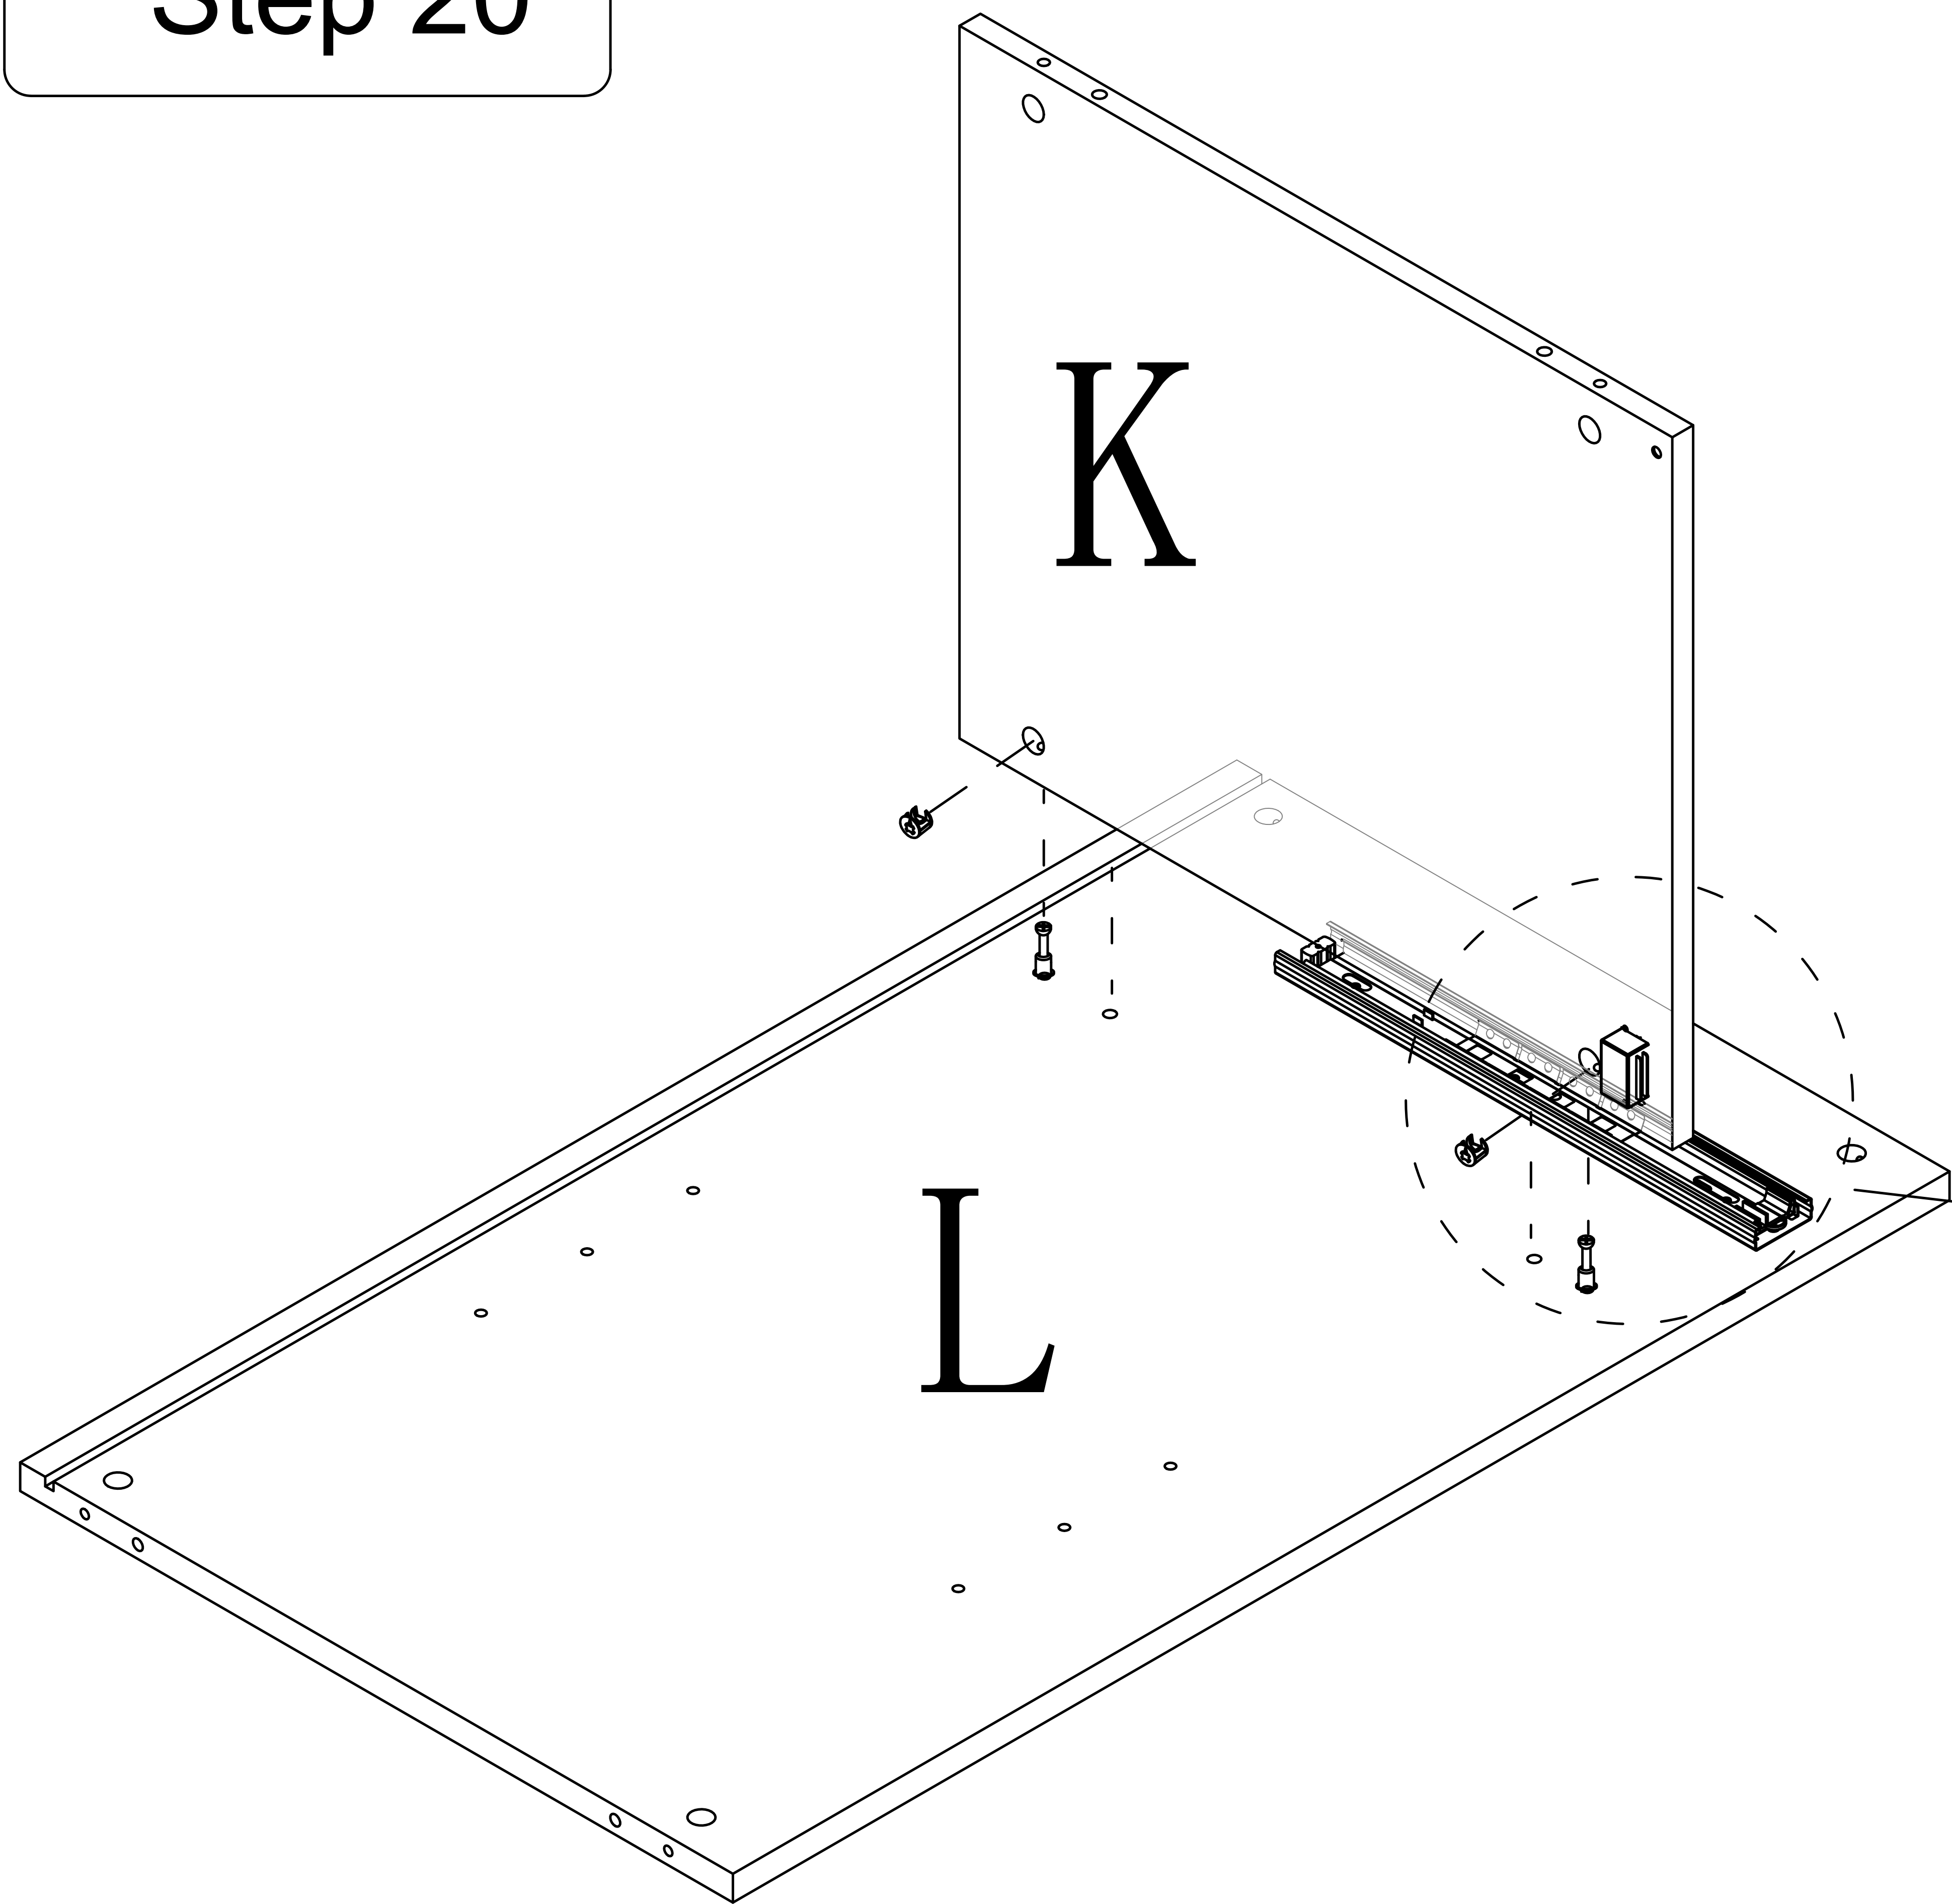



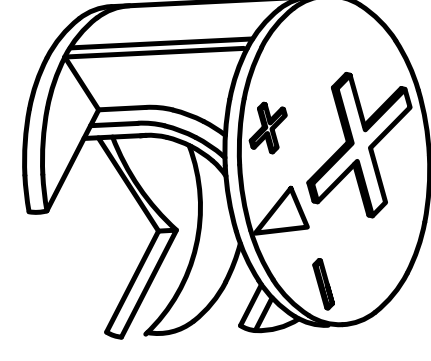
- | | | |
|---|---|----|
| 2 |  | x2 |
|---|---|----|

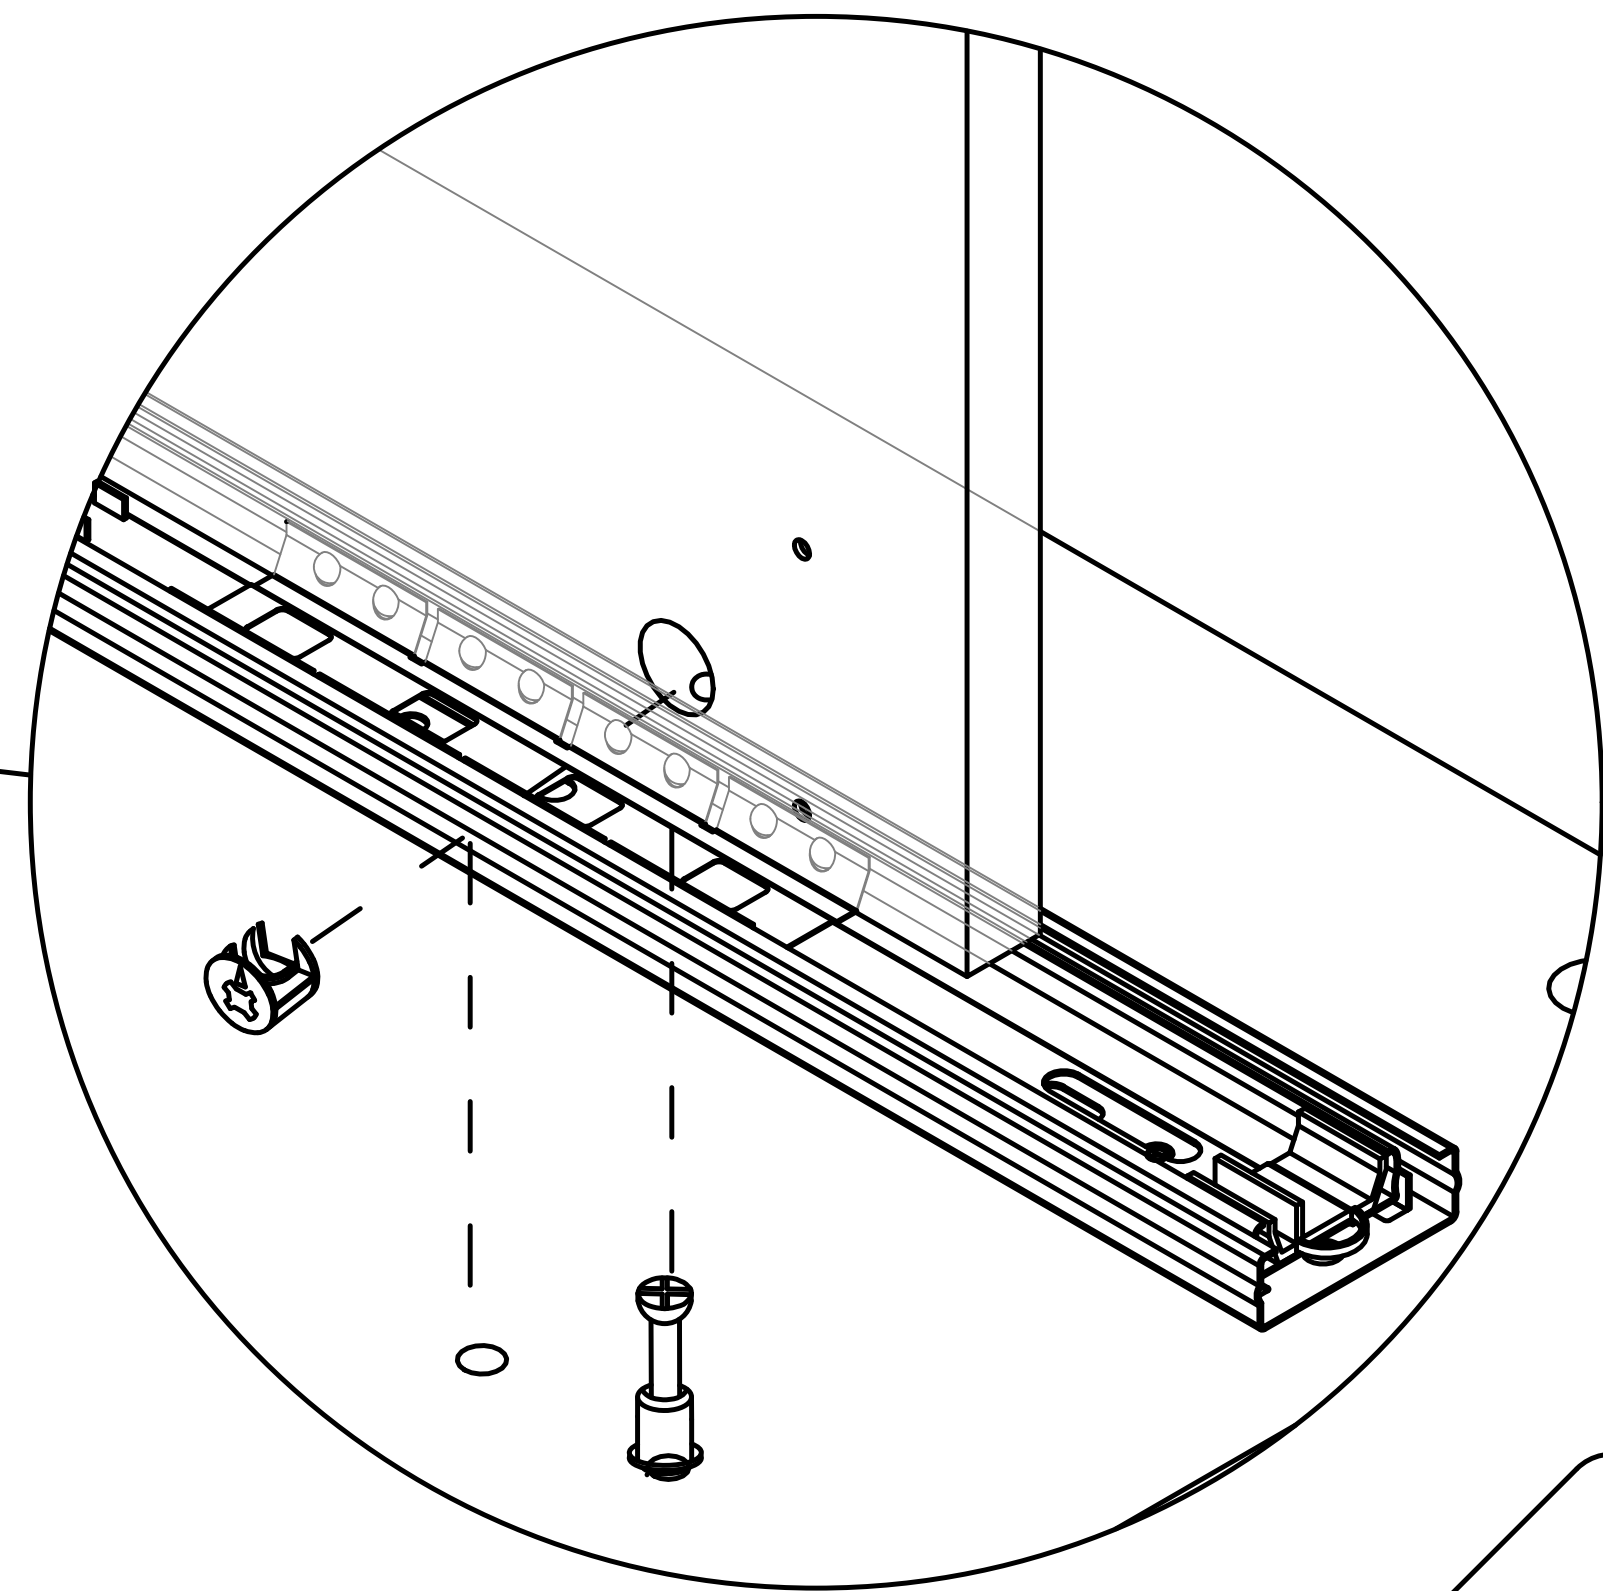


Step 21

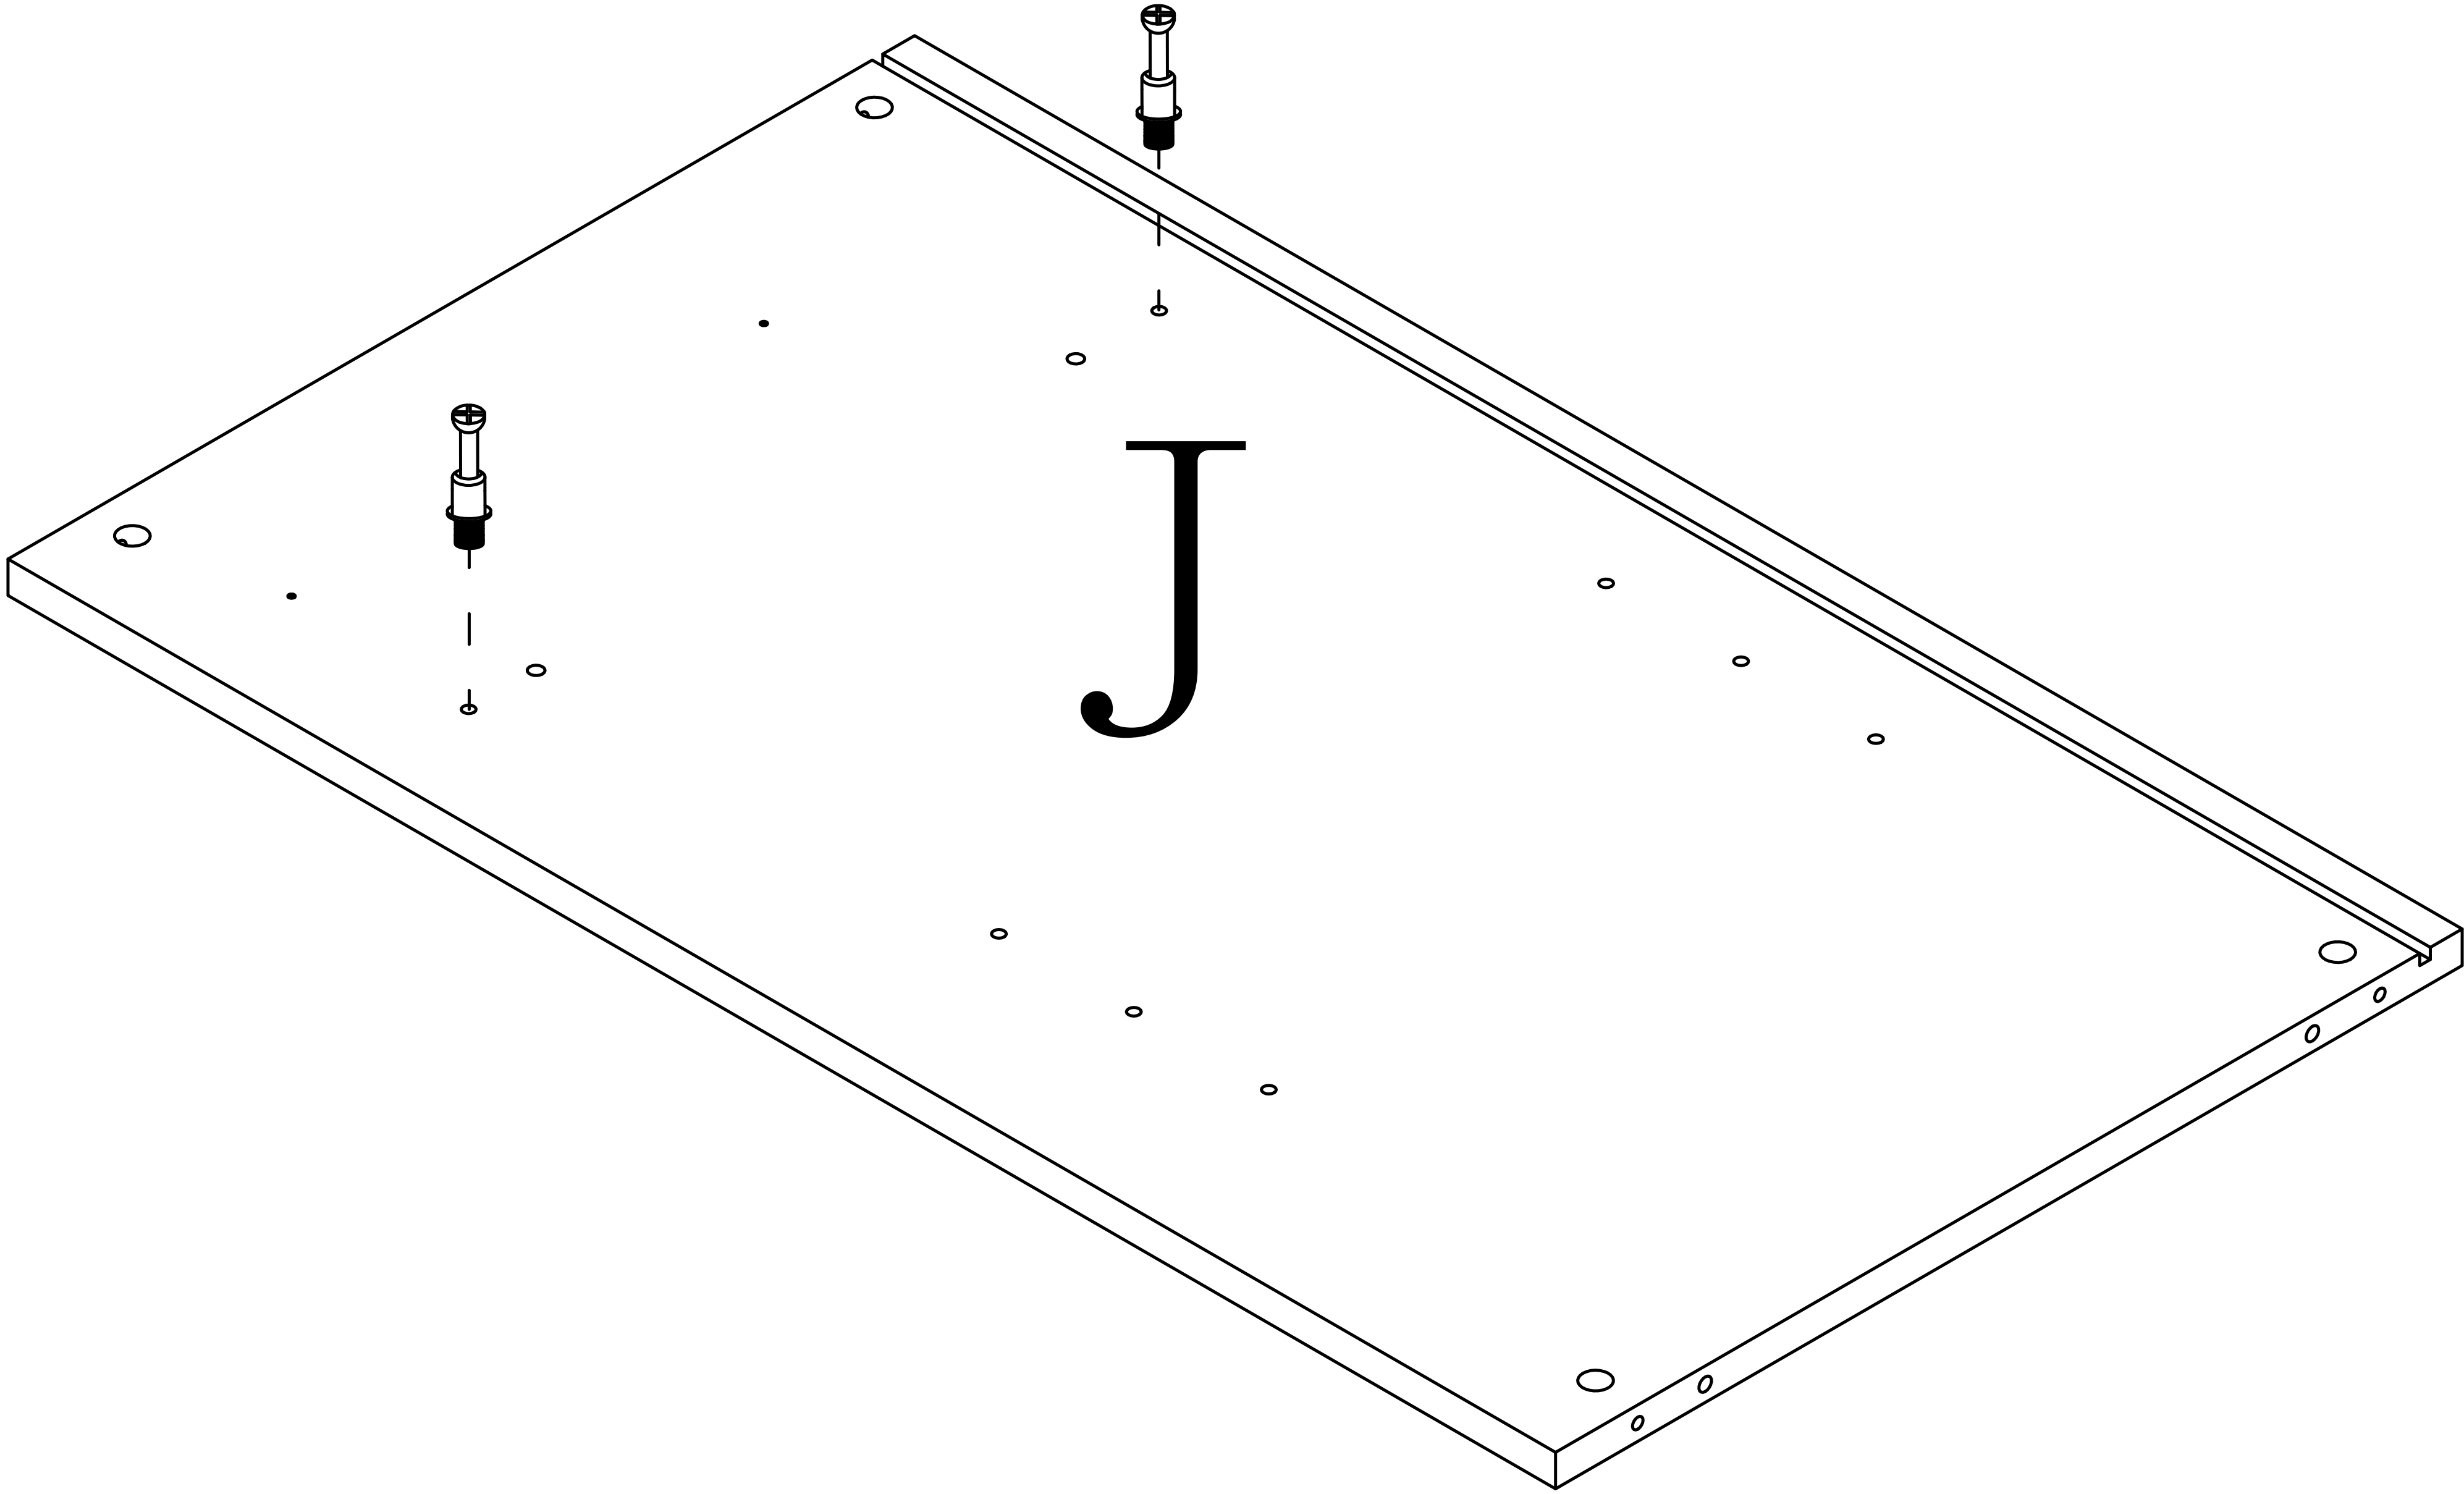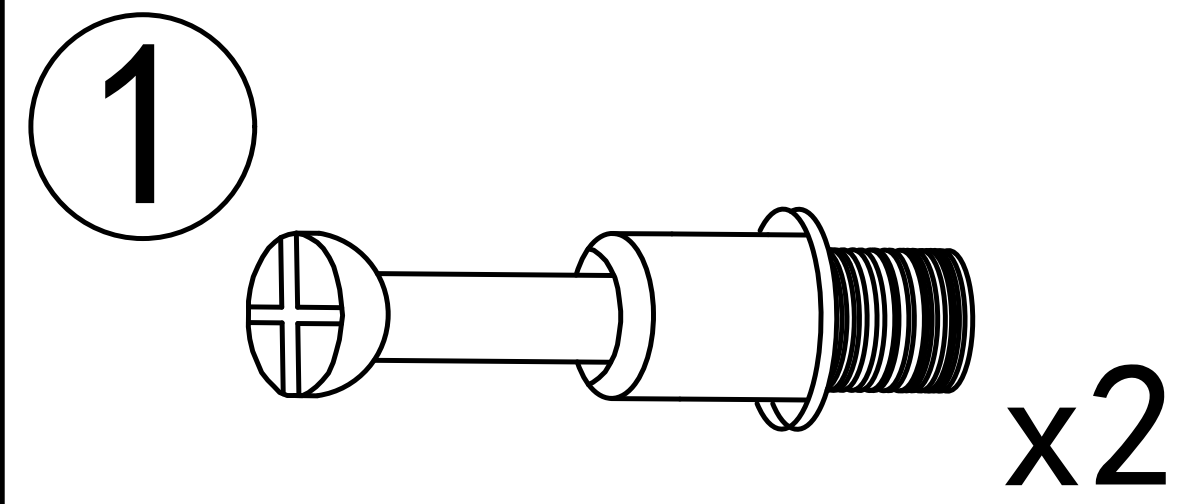



Step 22

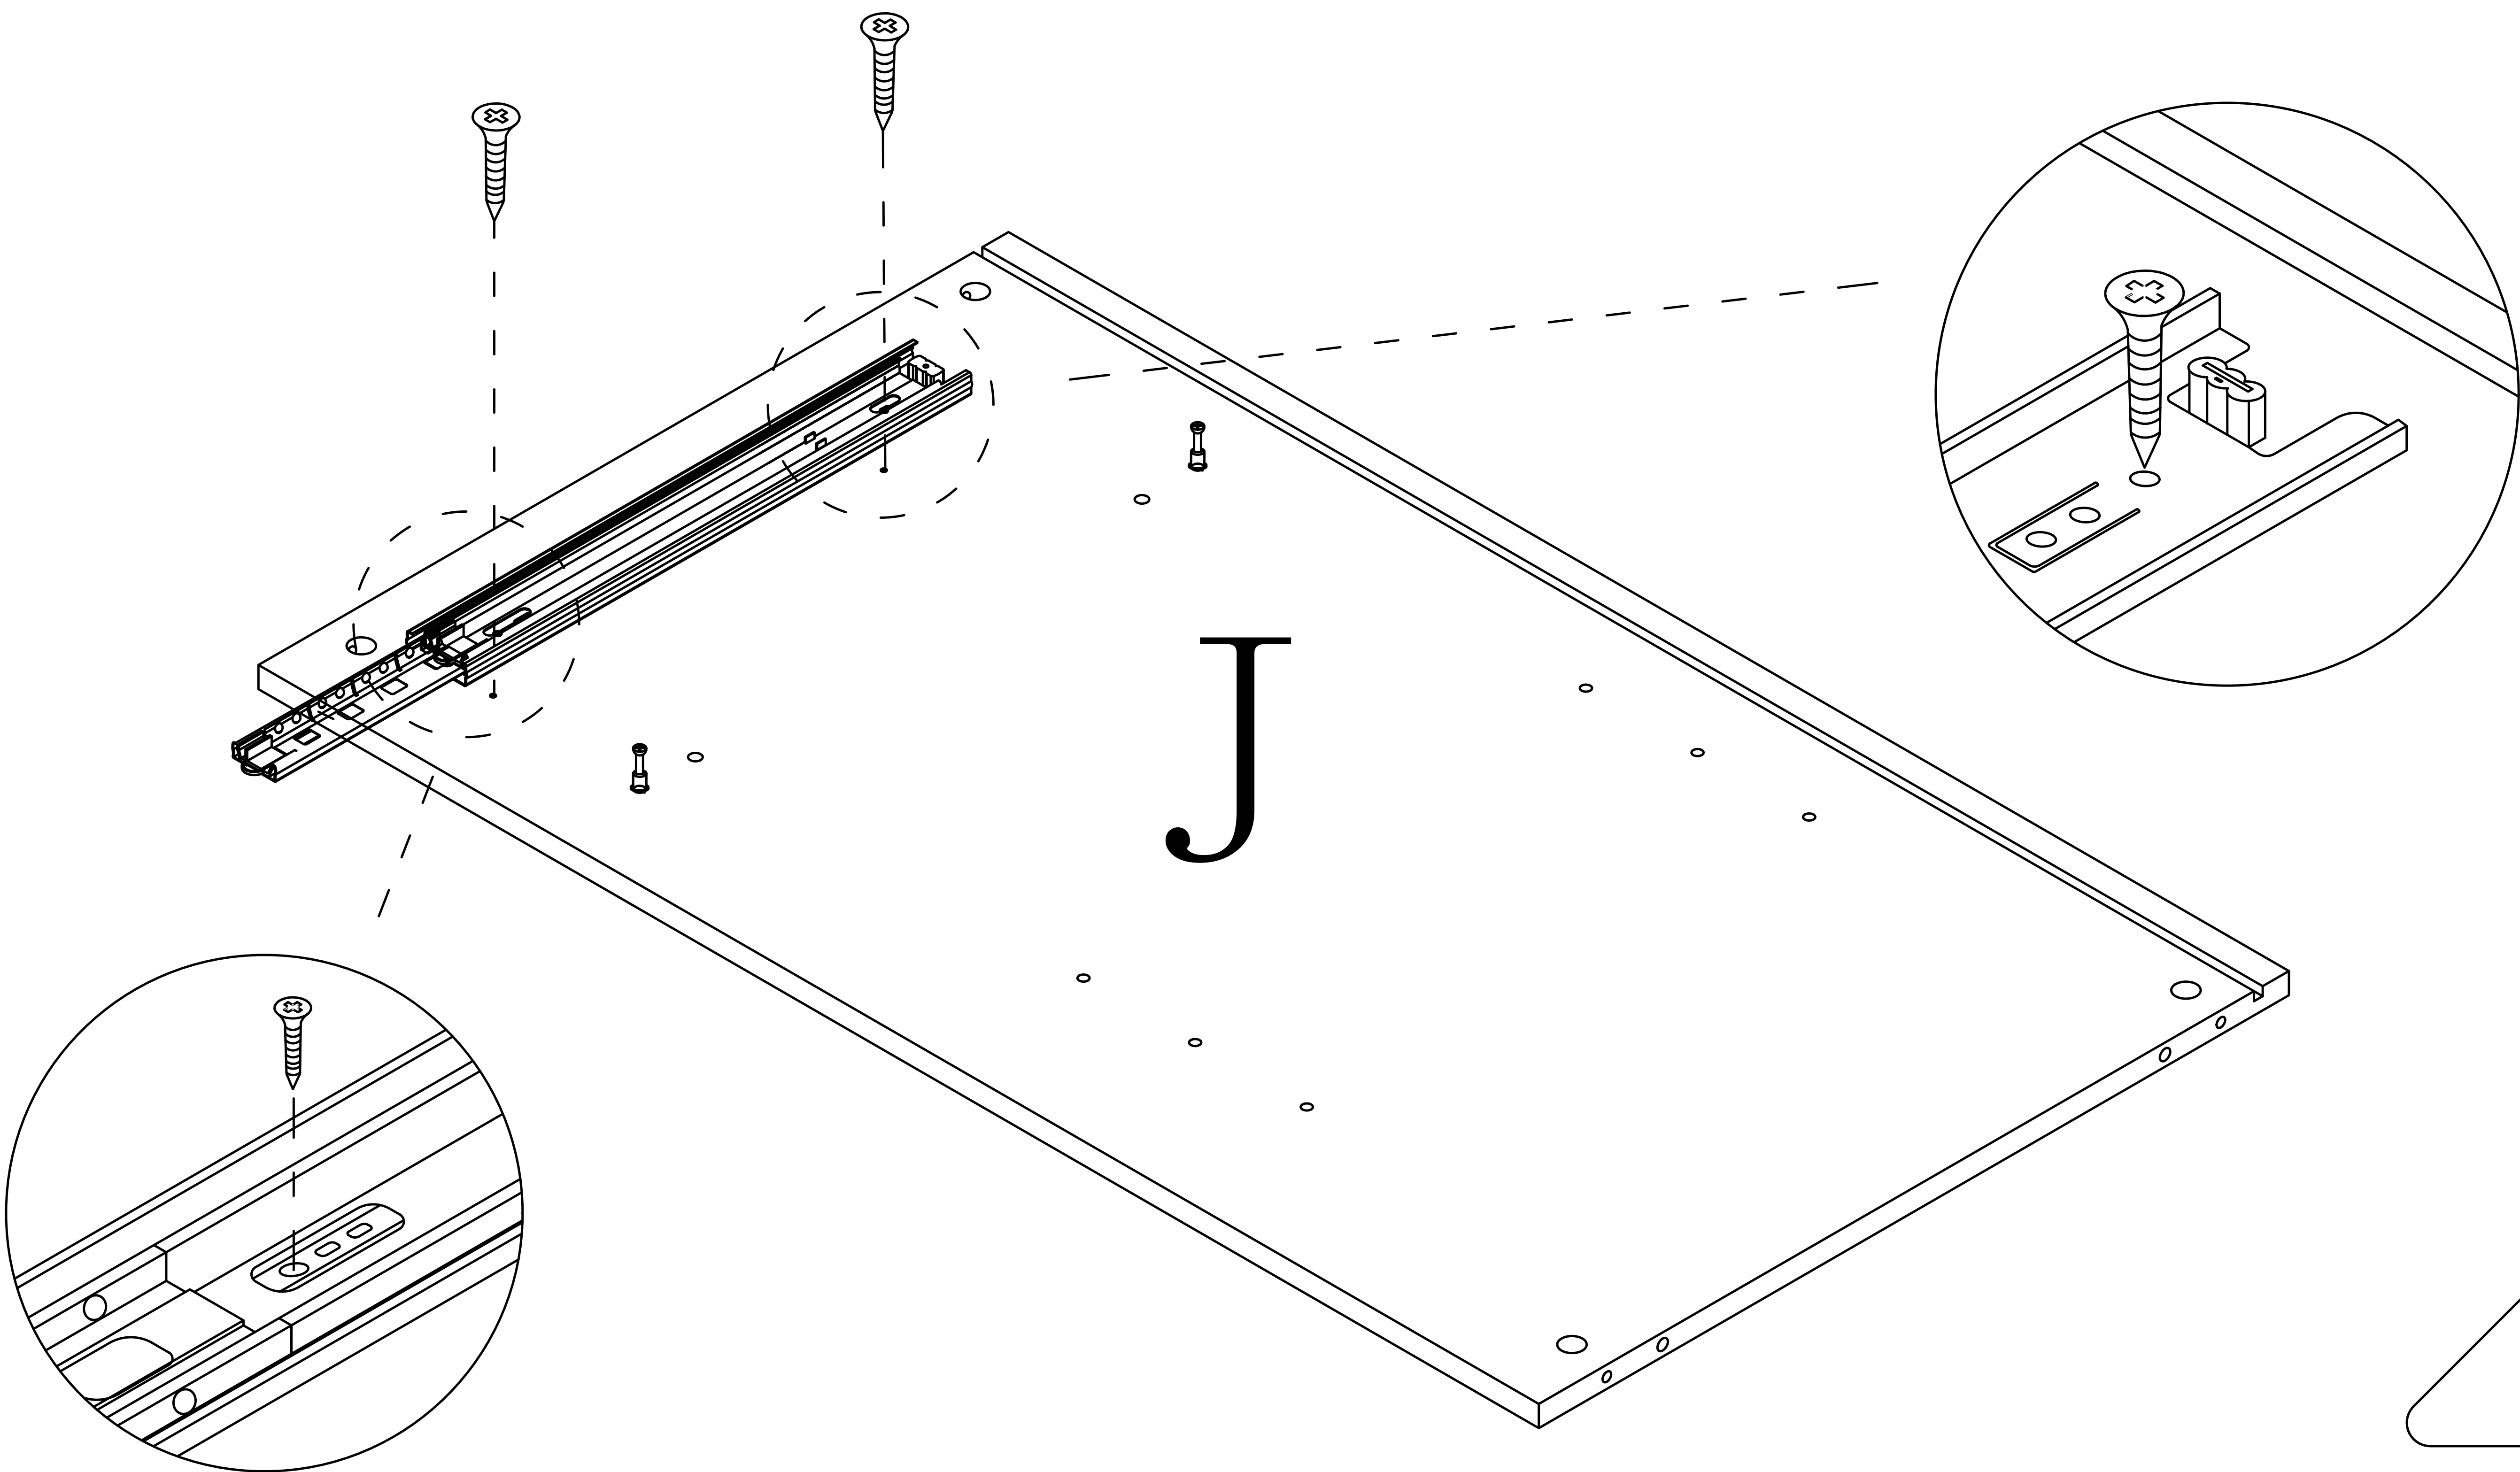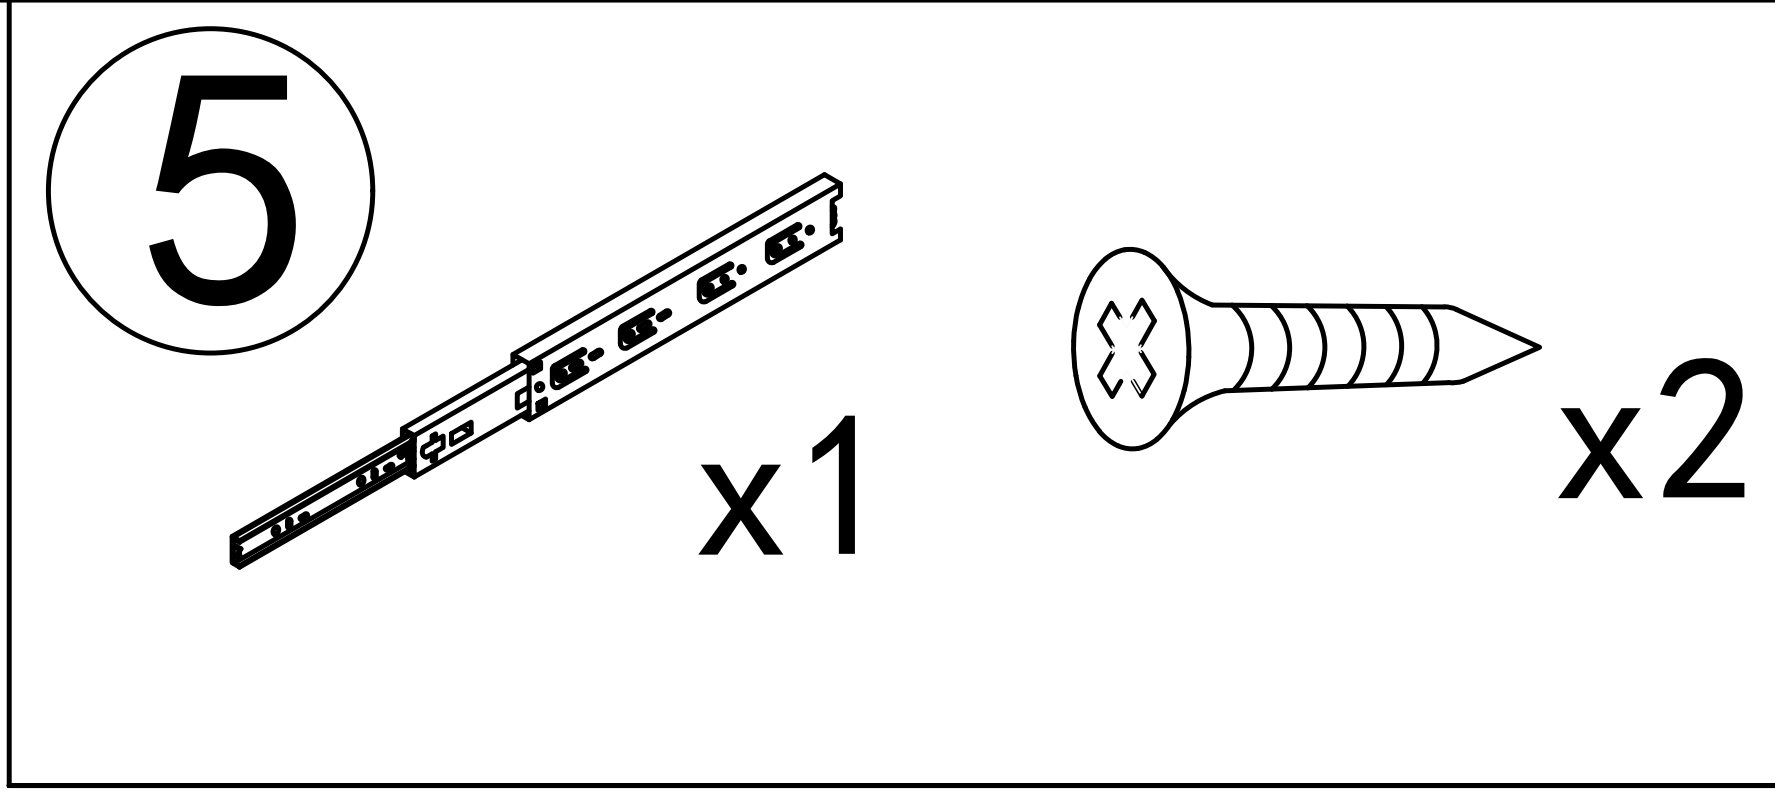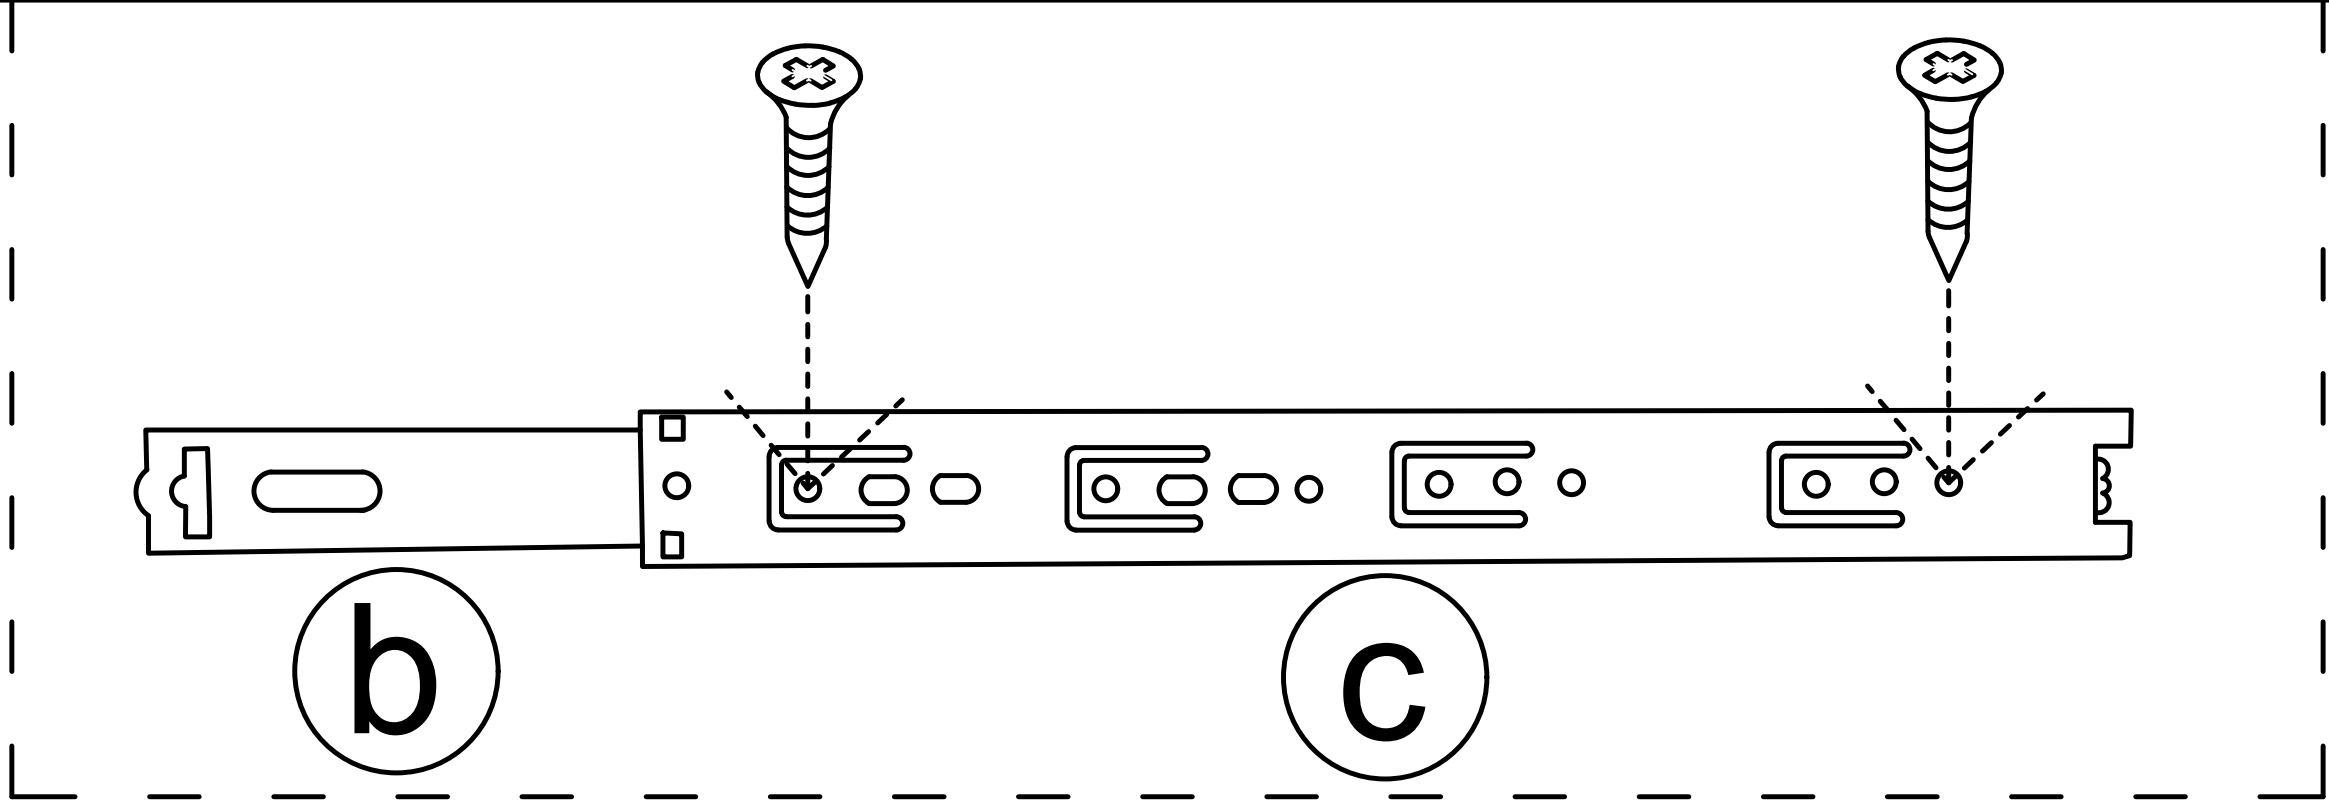

Step 23


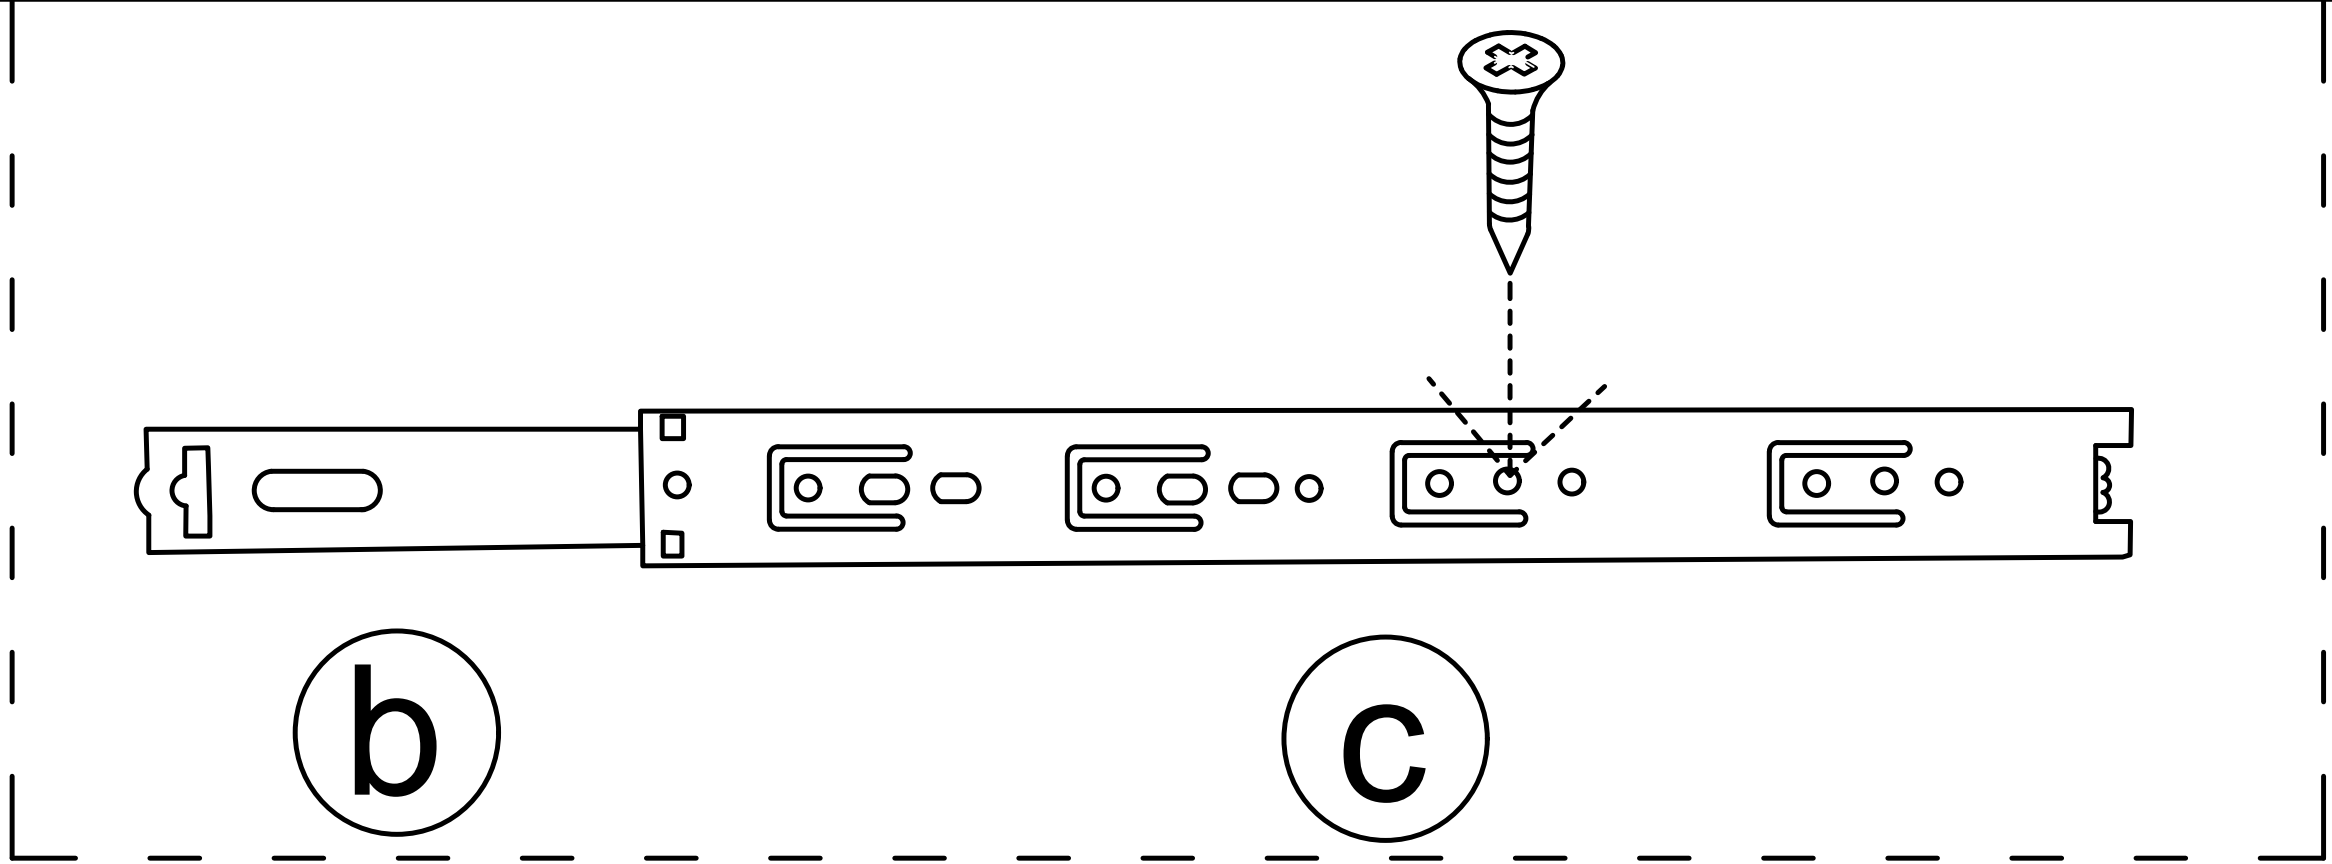


5

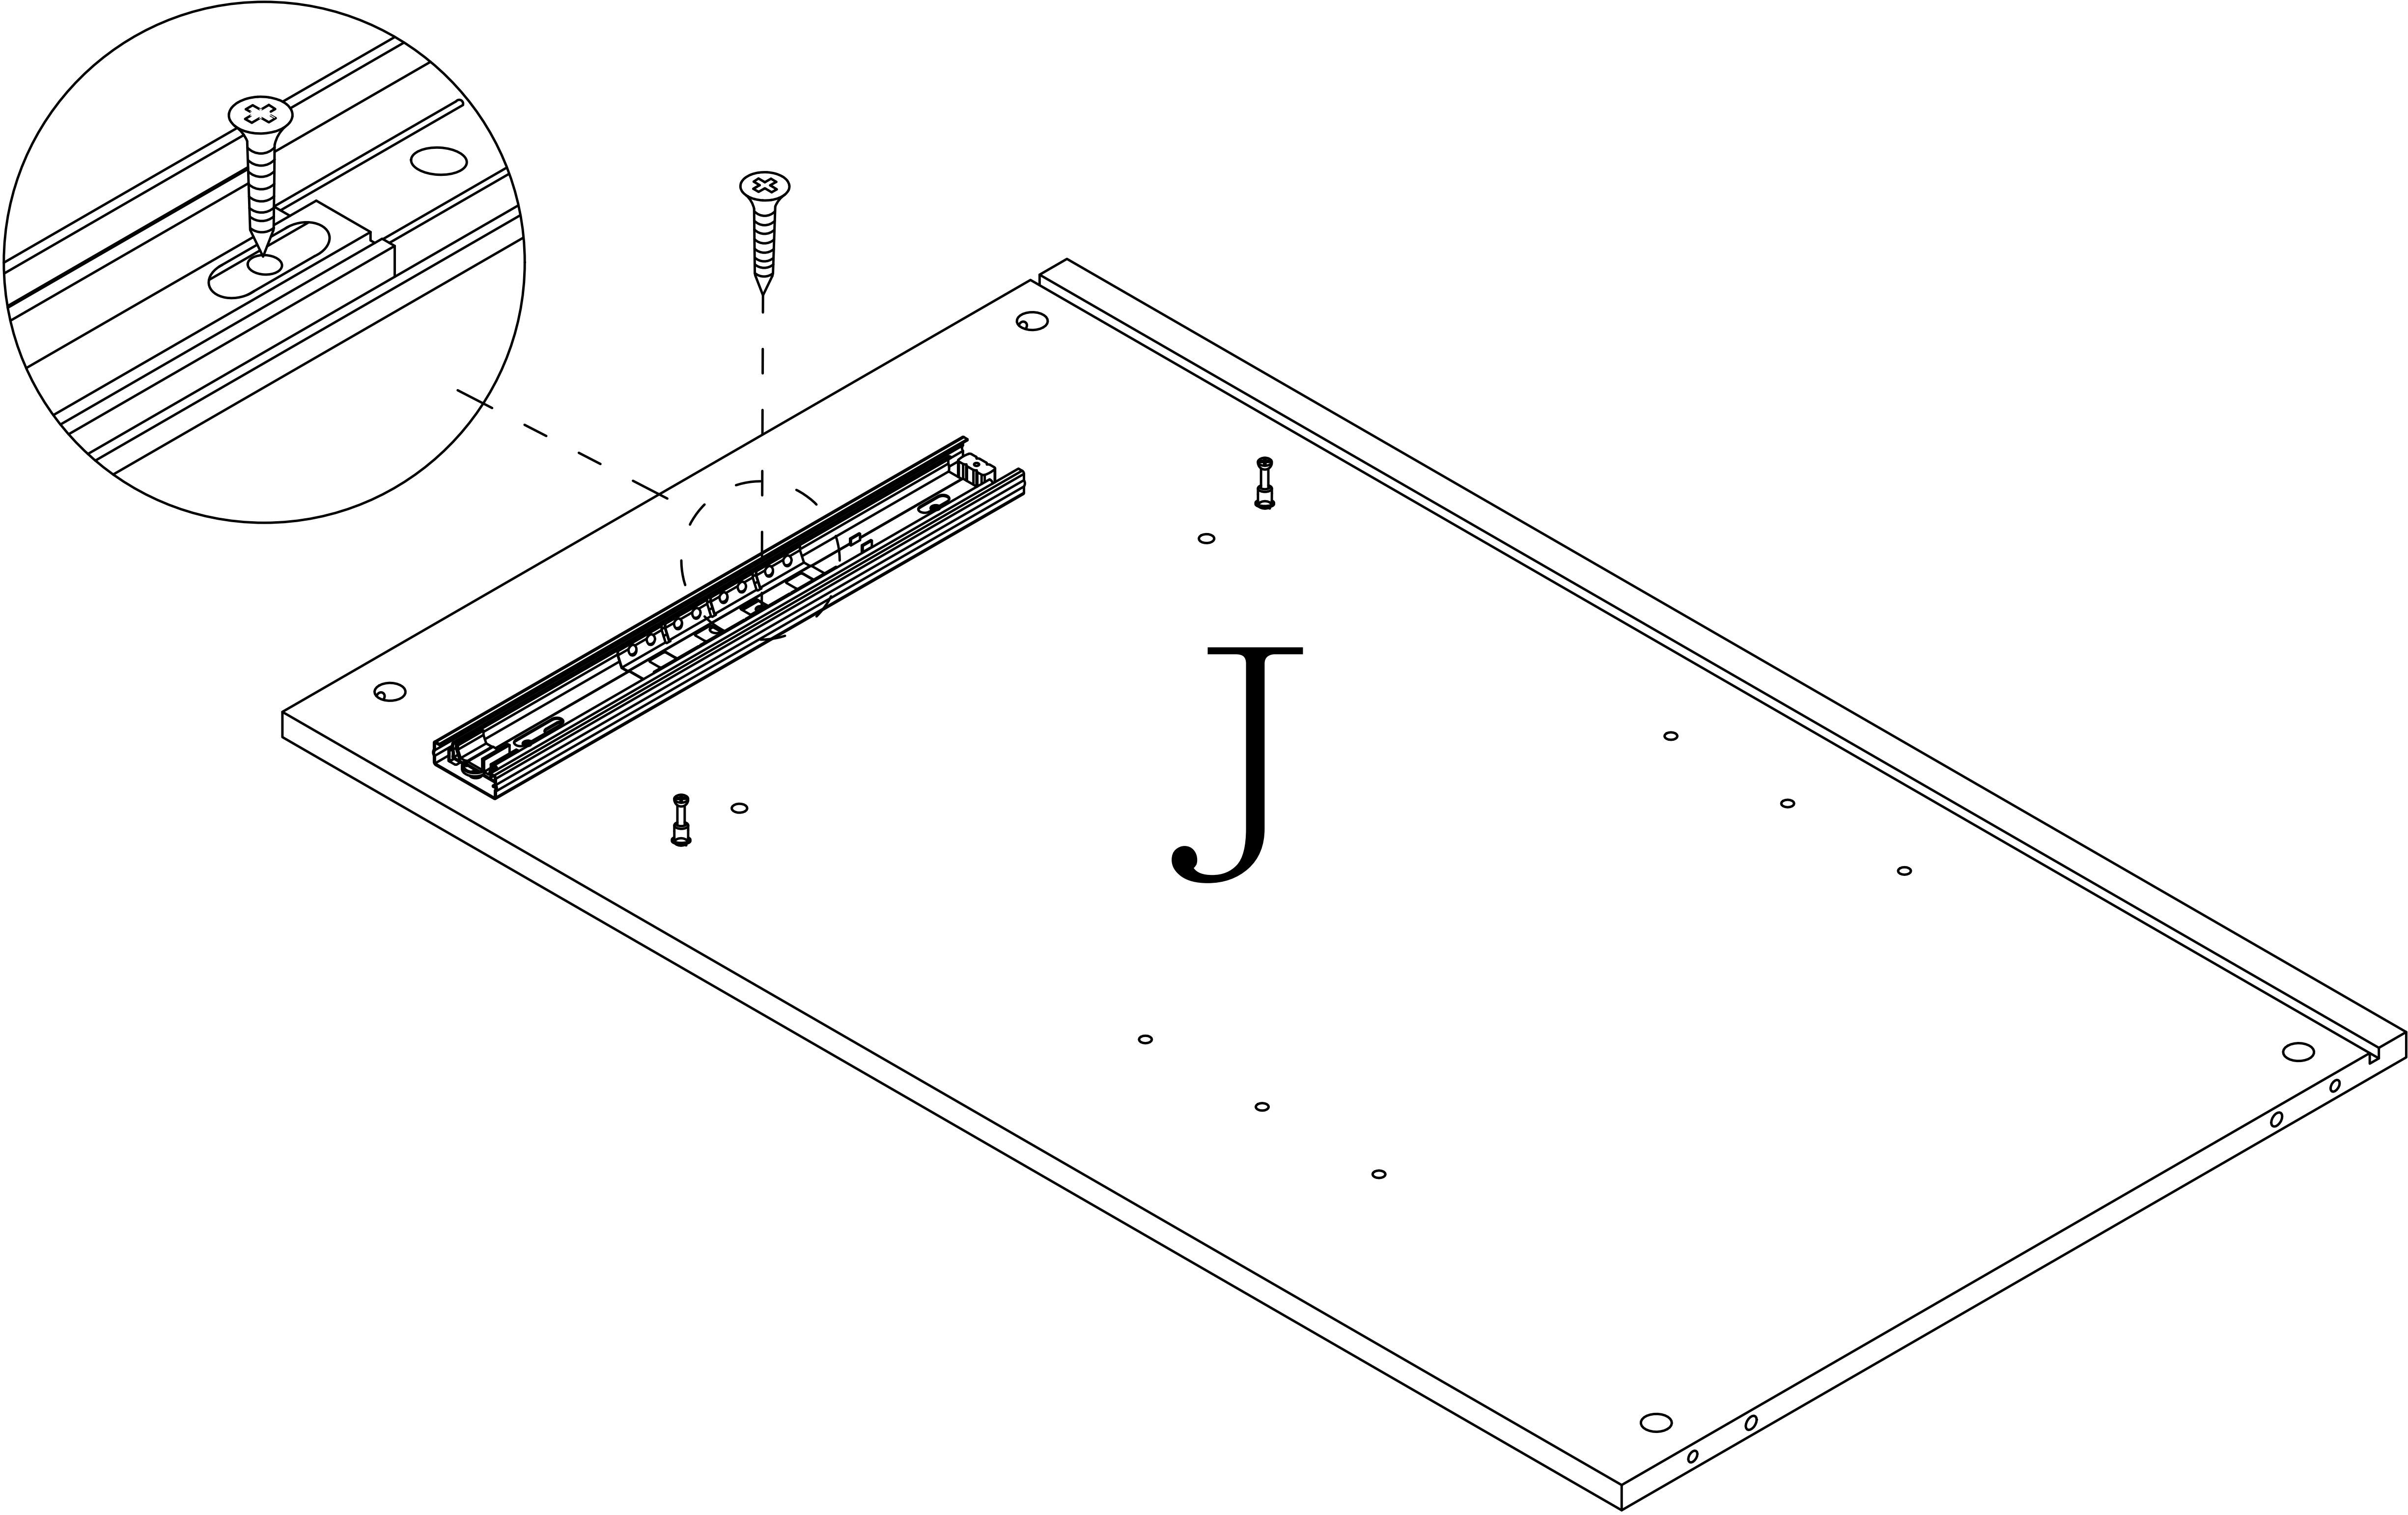
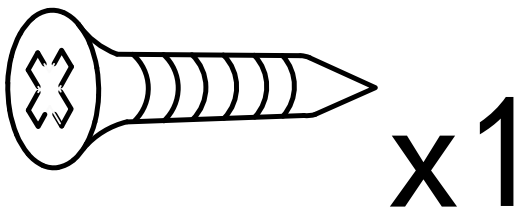


Step 24



2

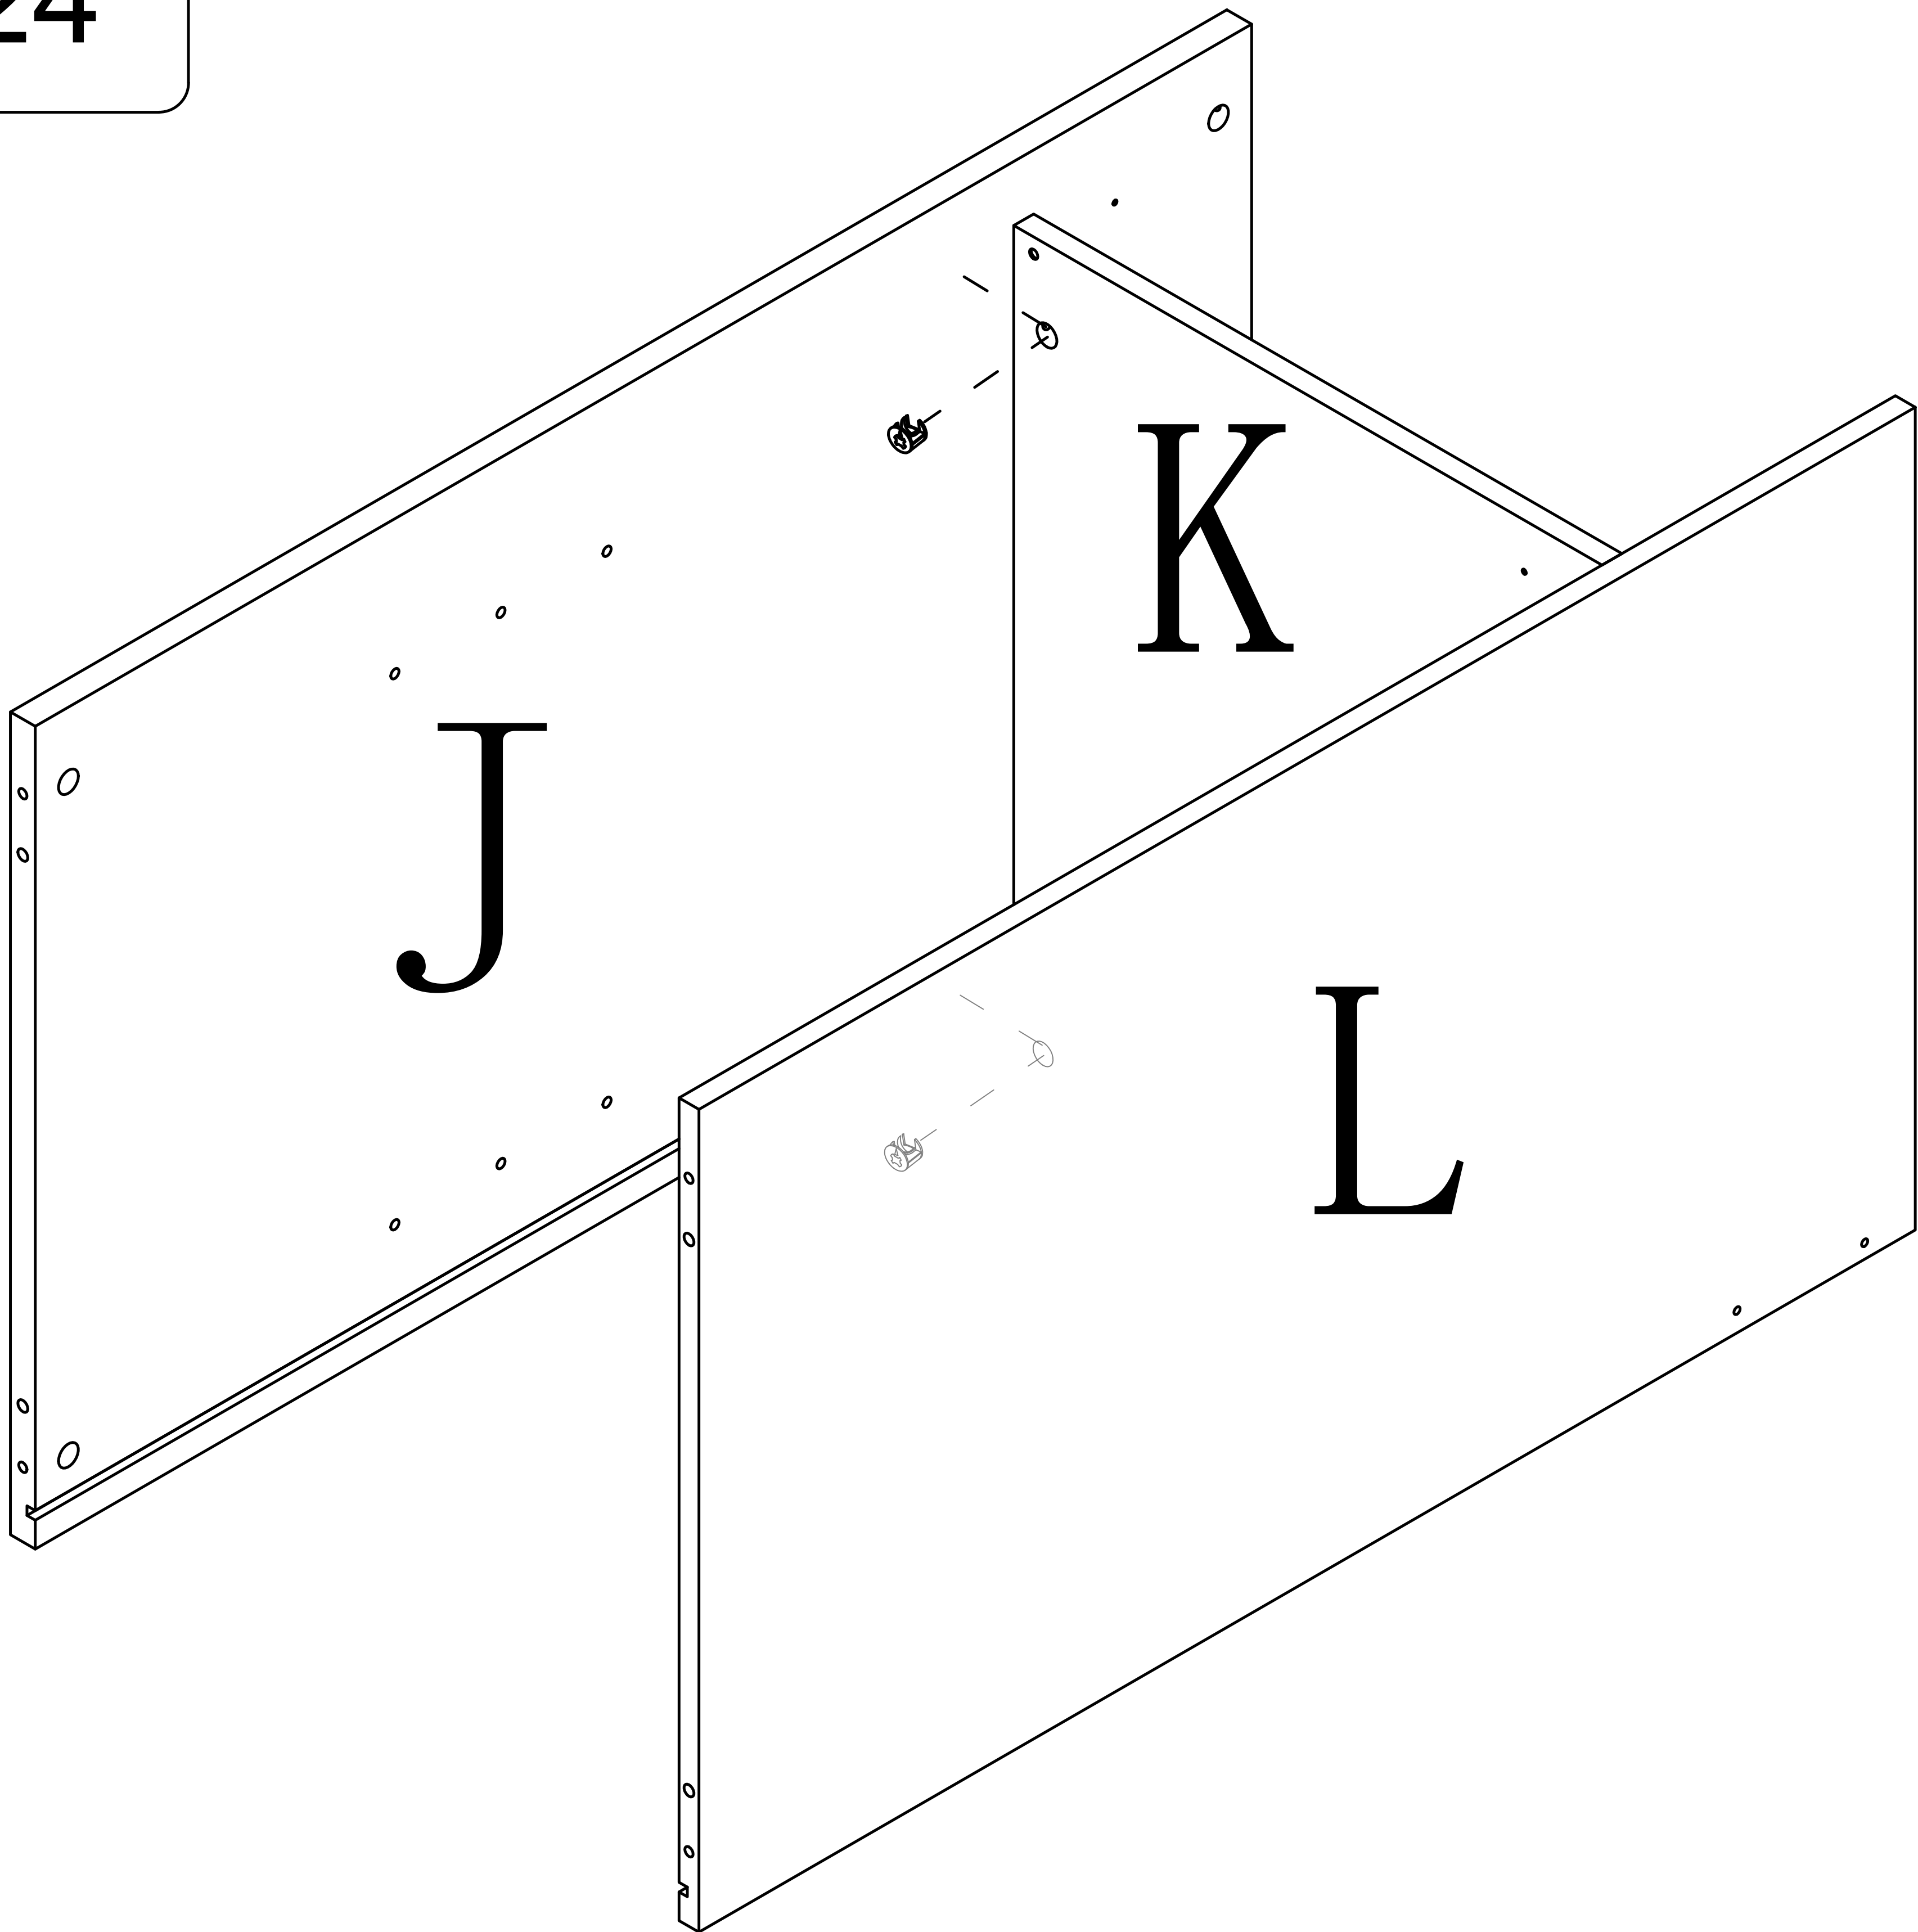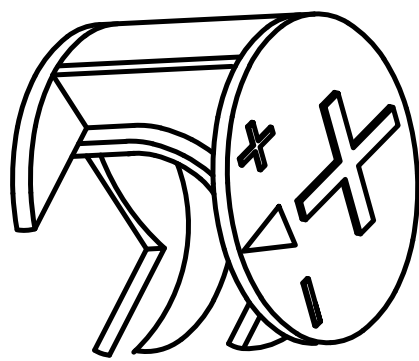




Step 25

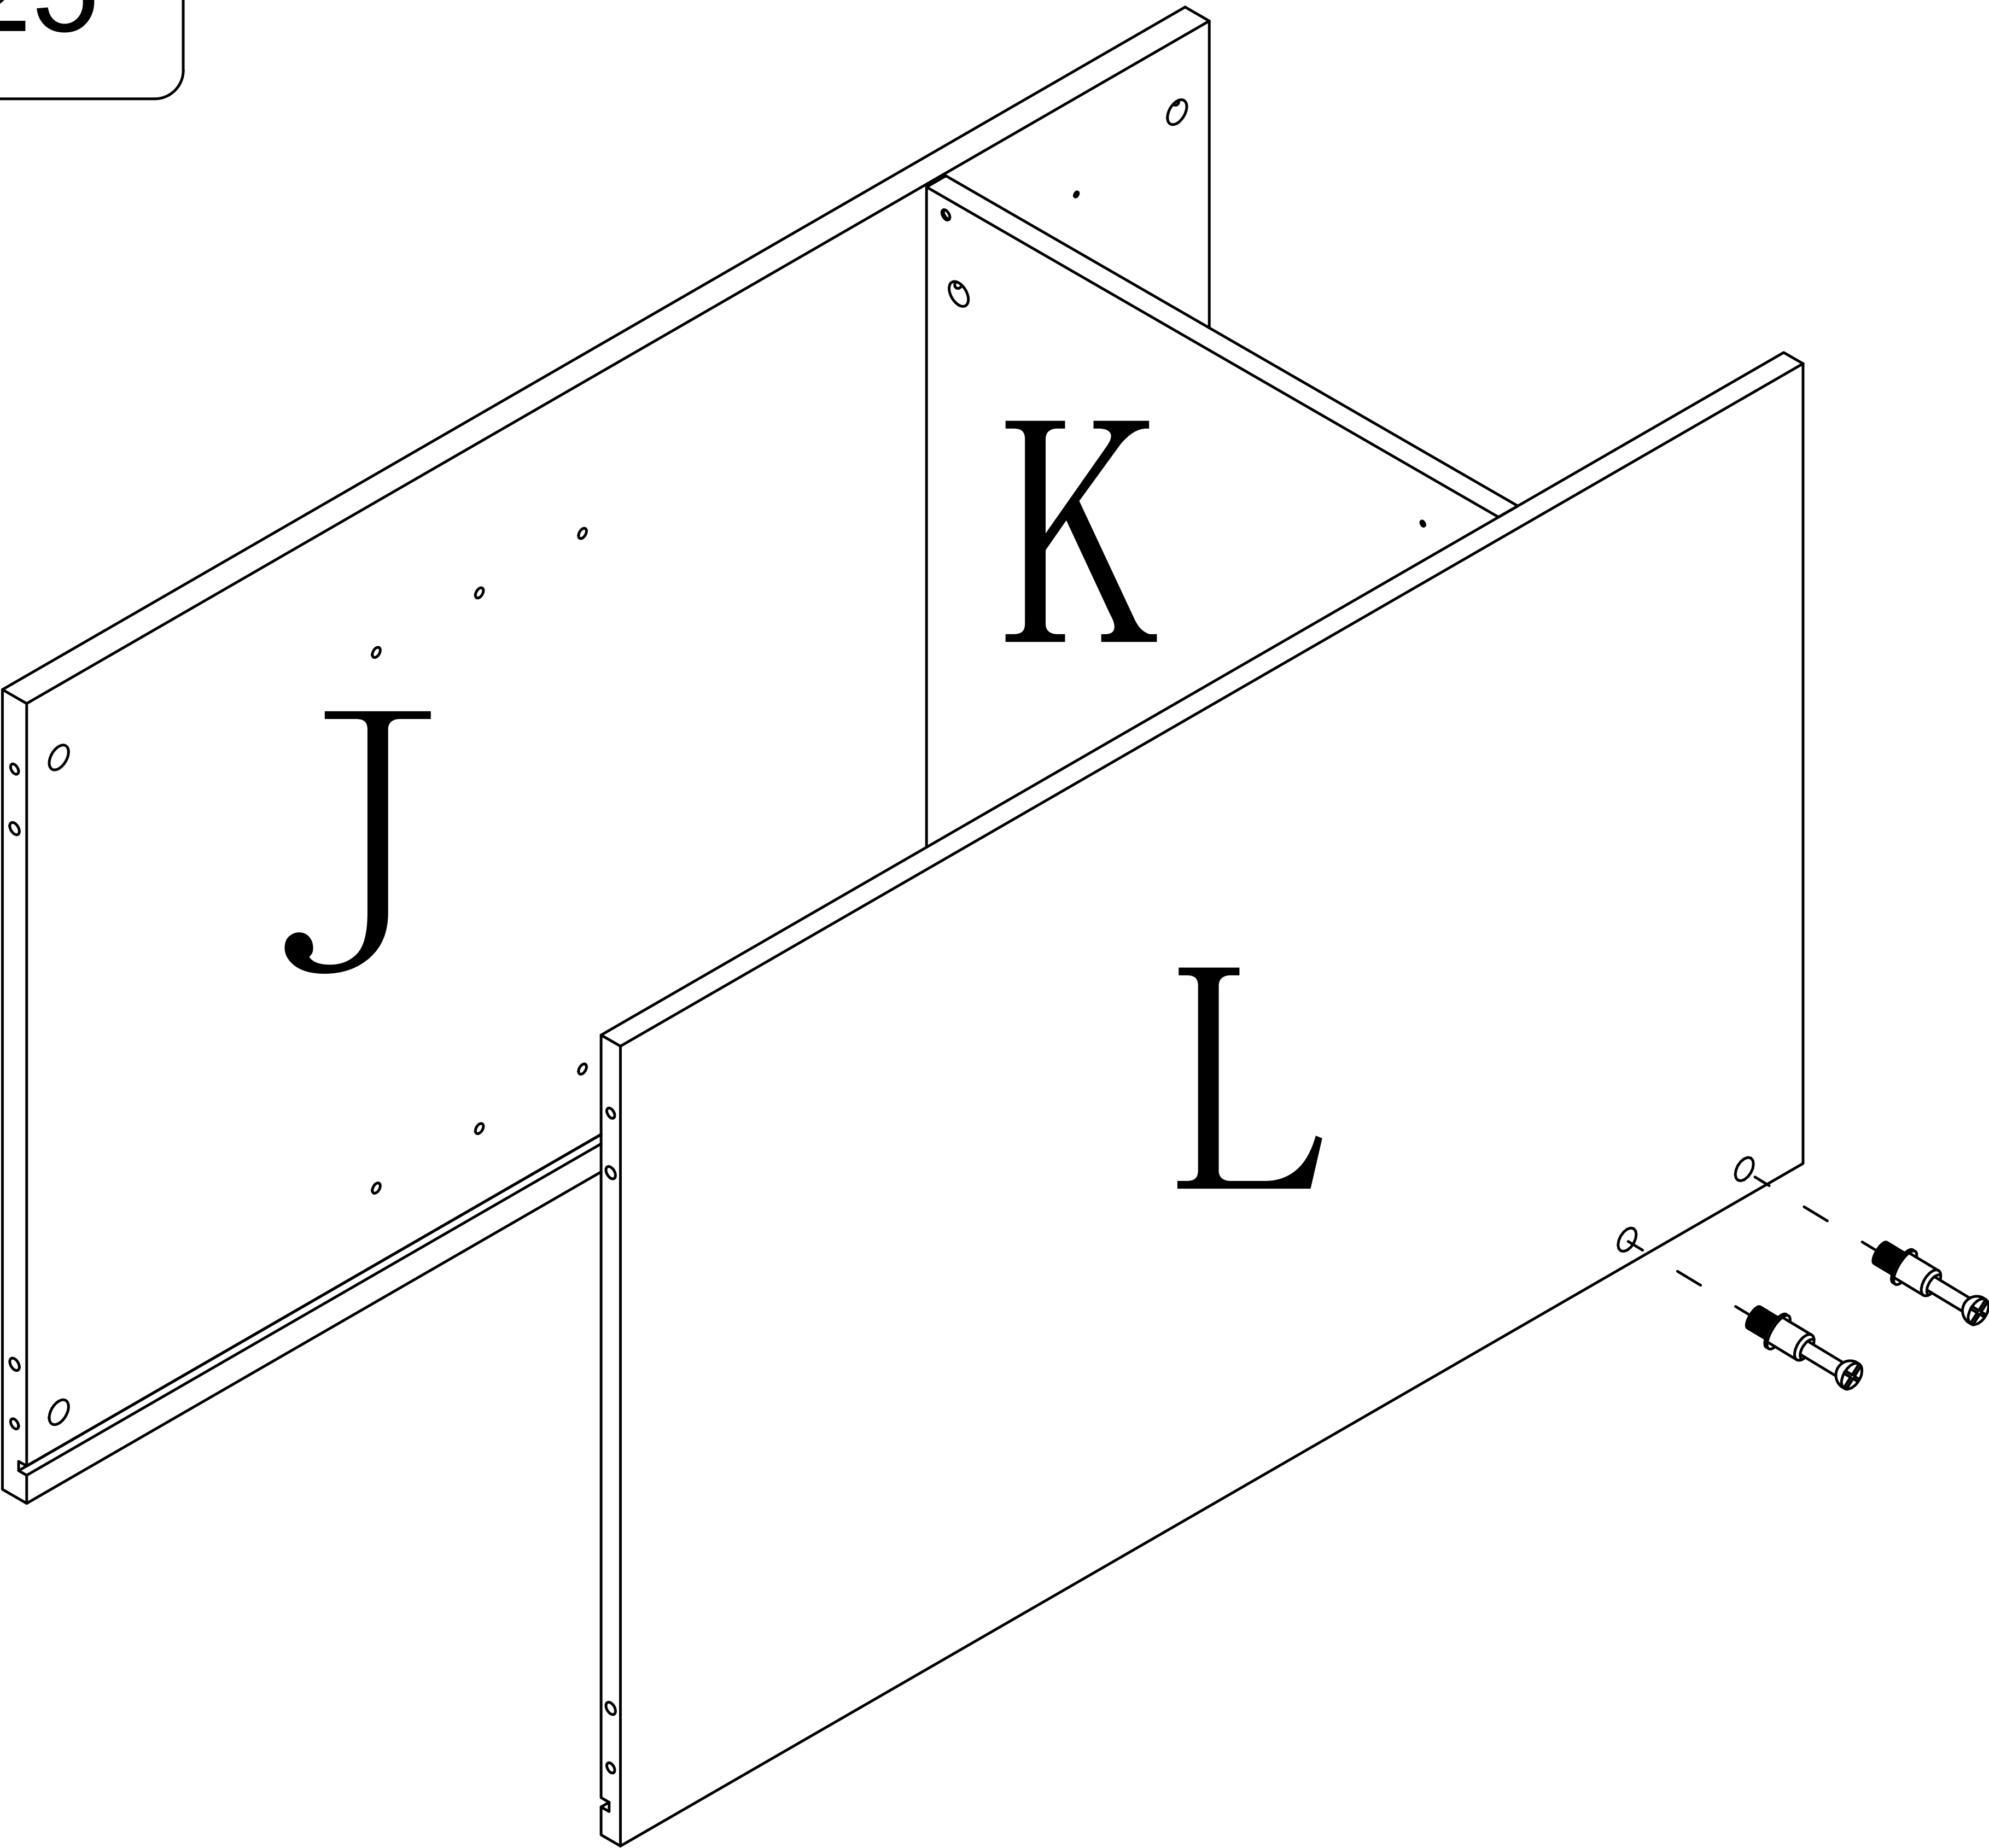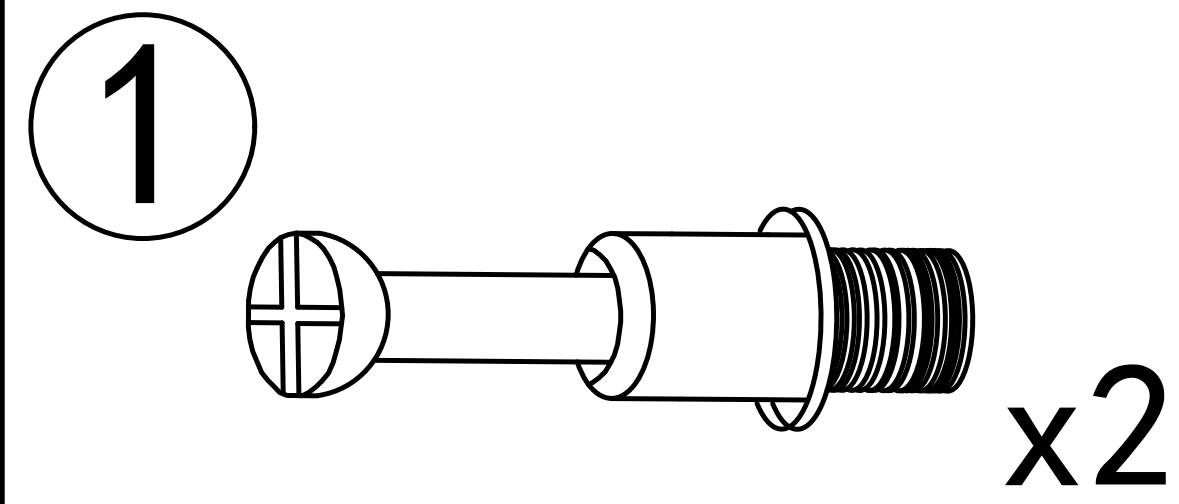




Step 26

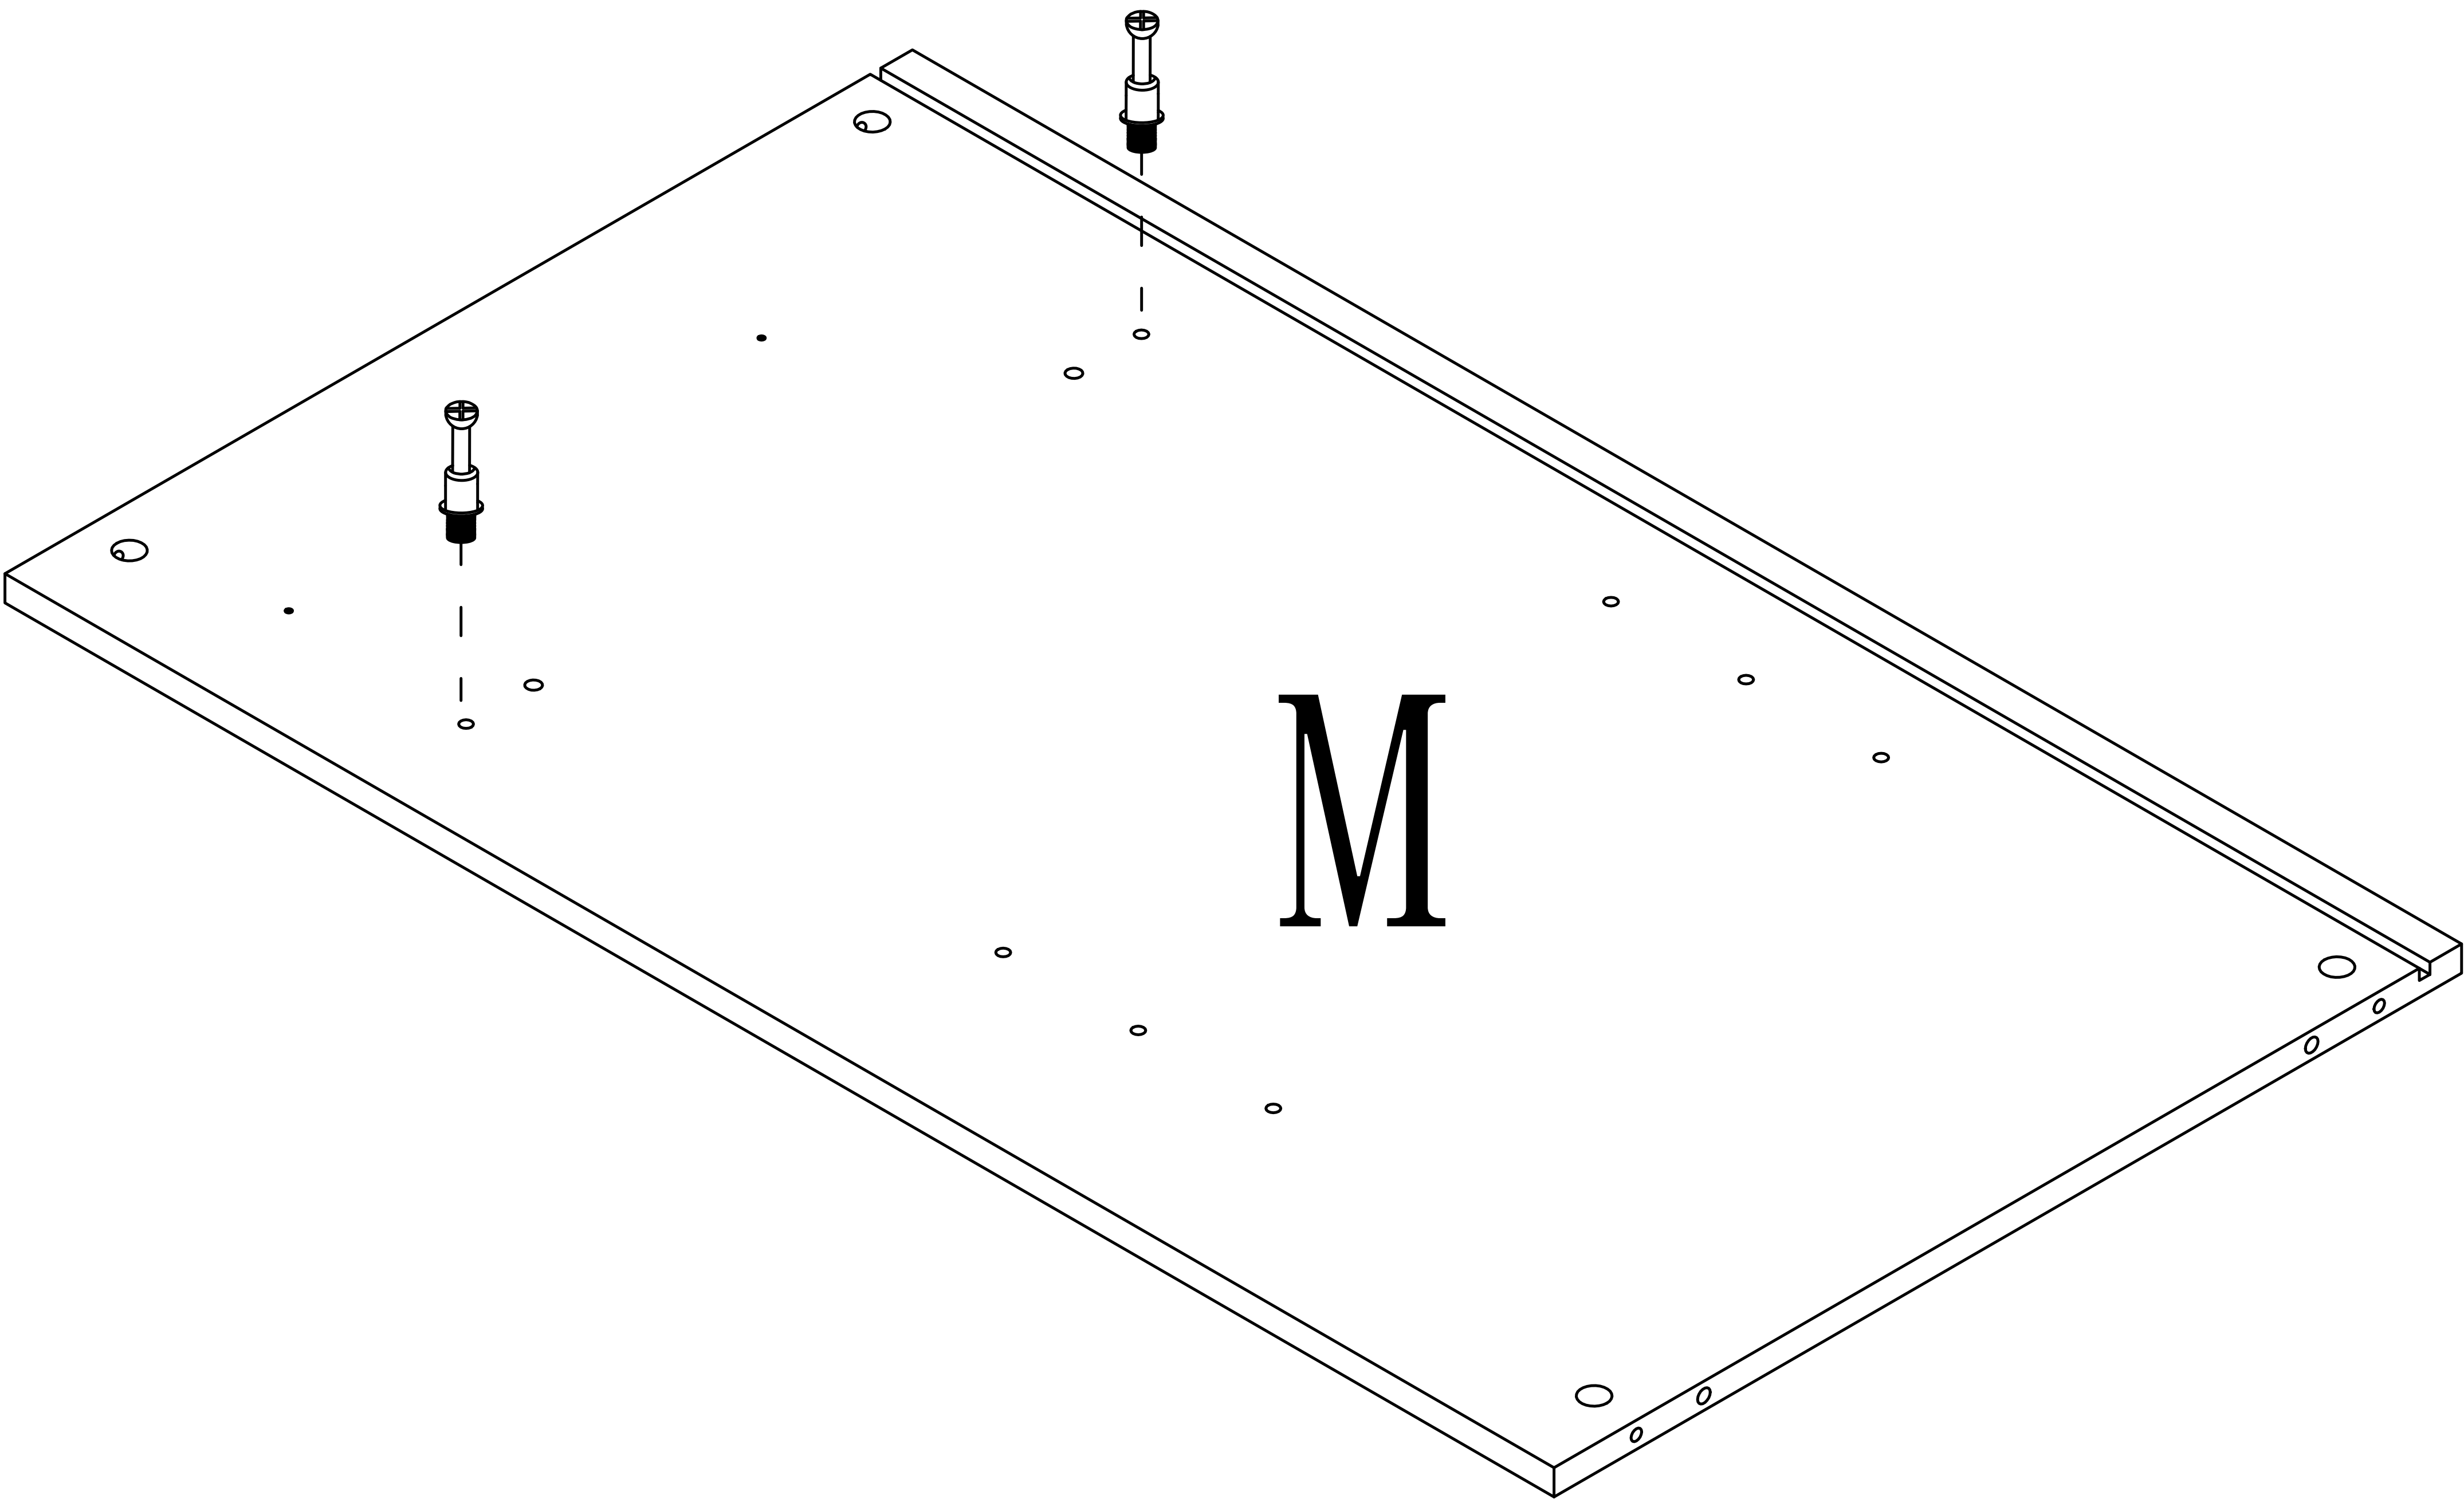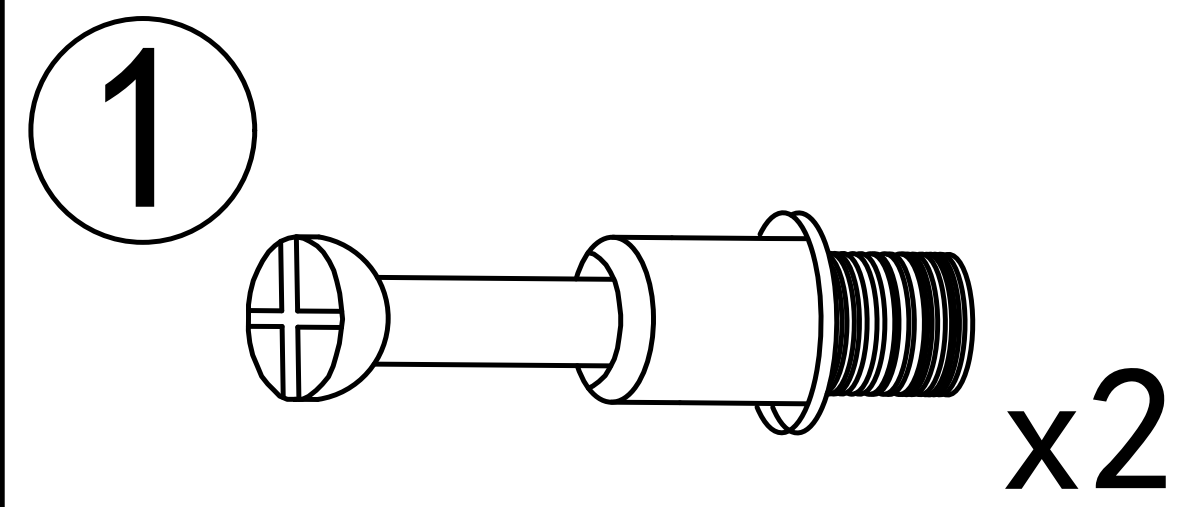

Step 27

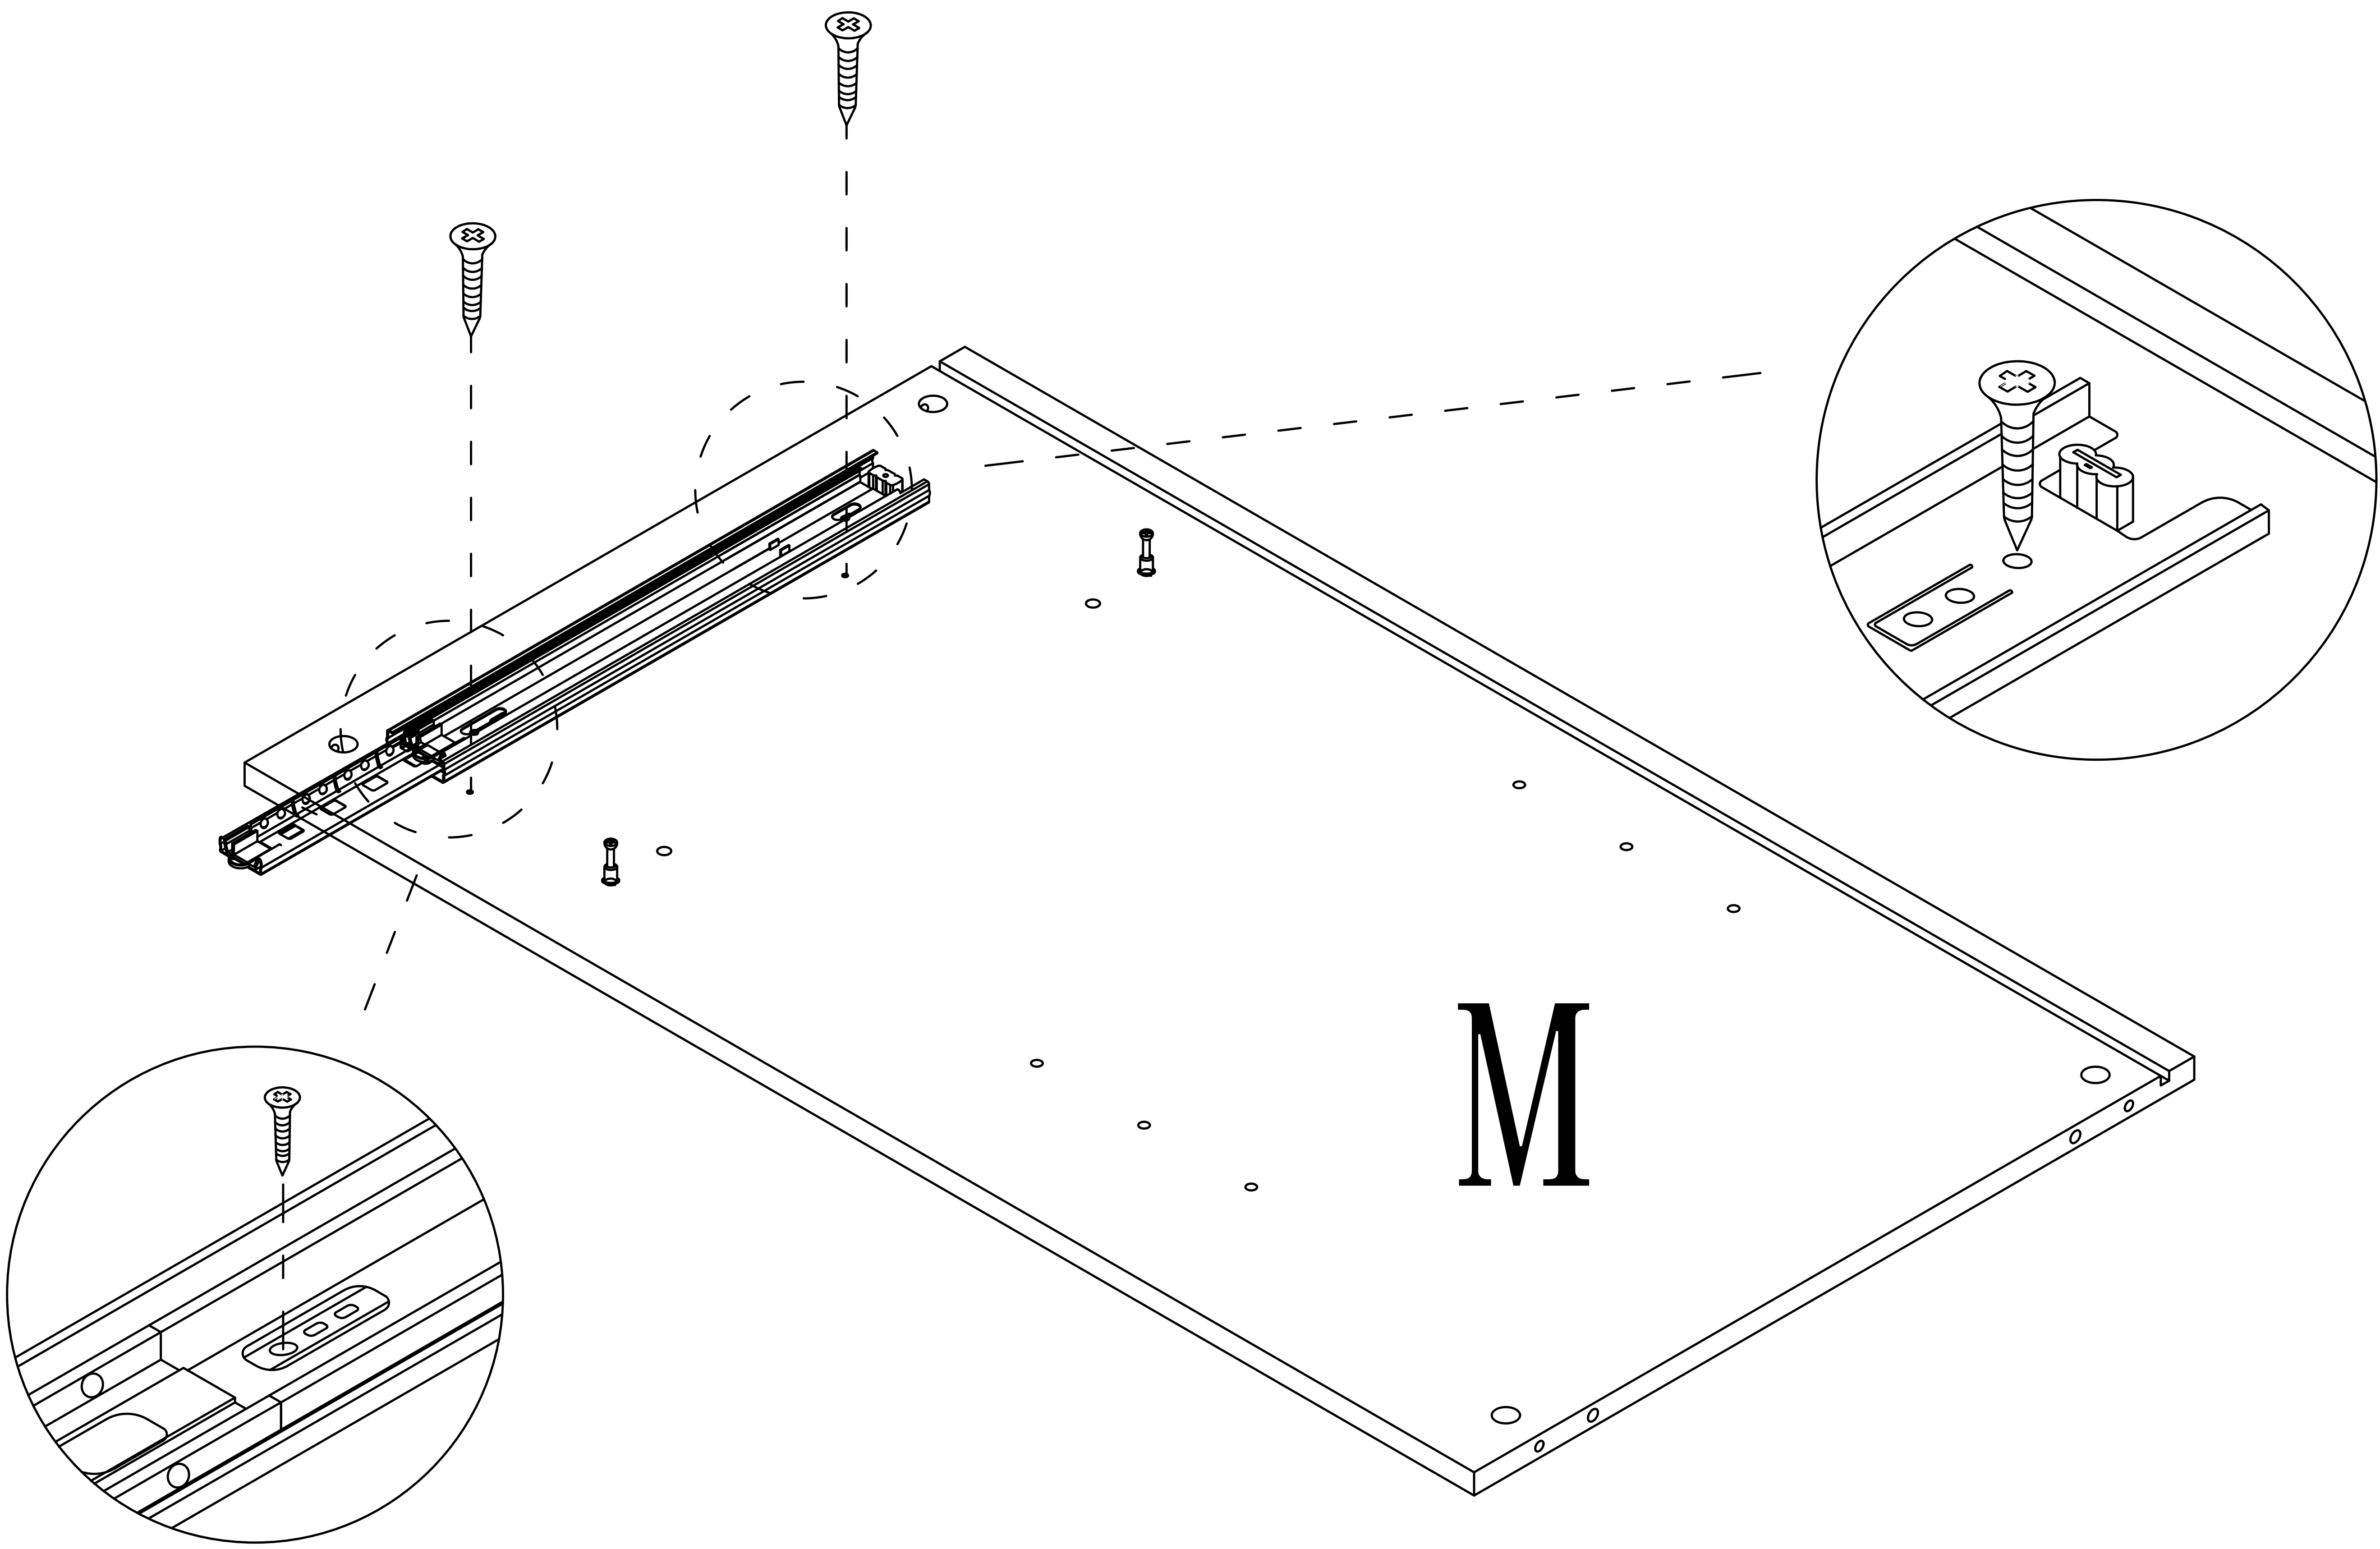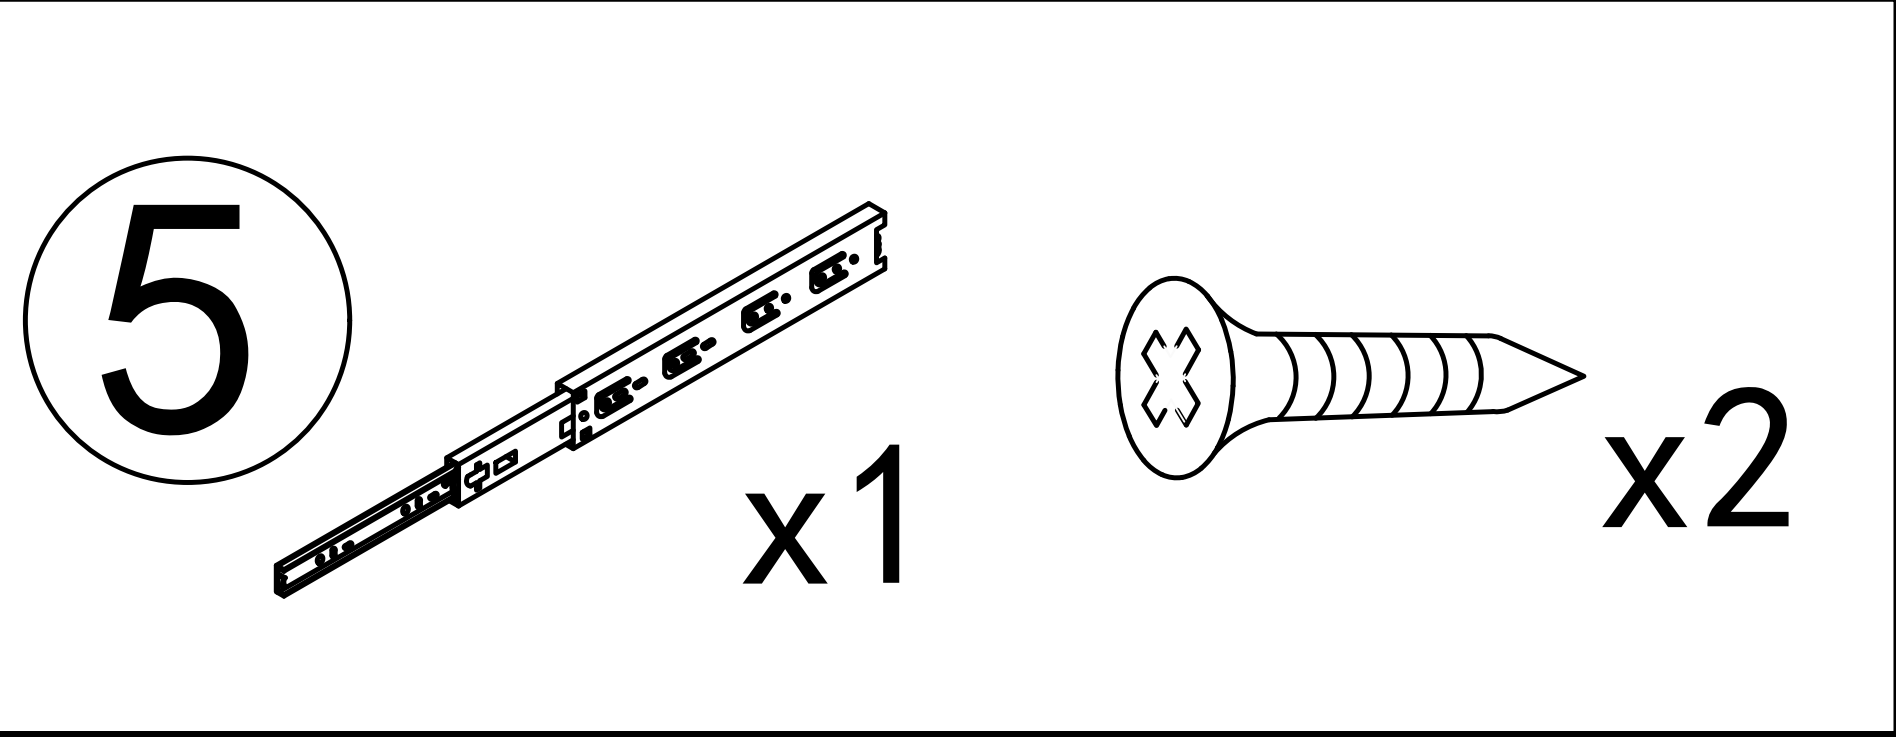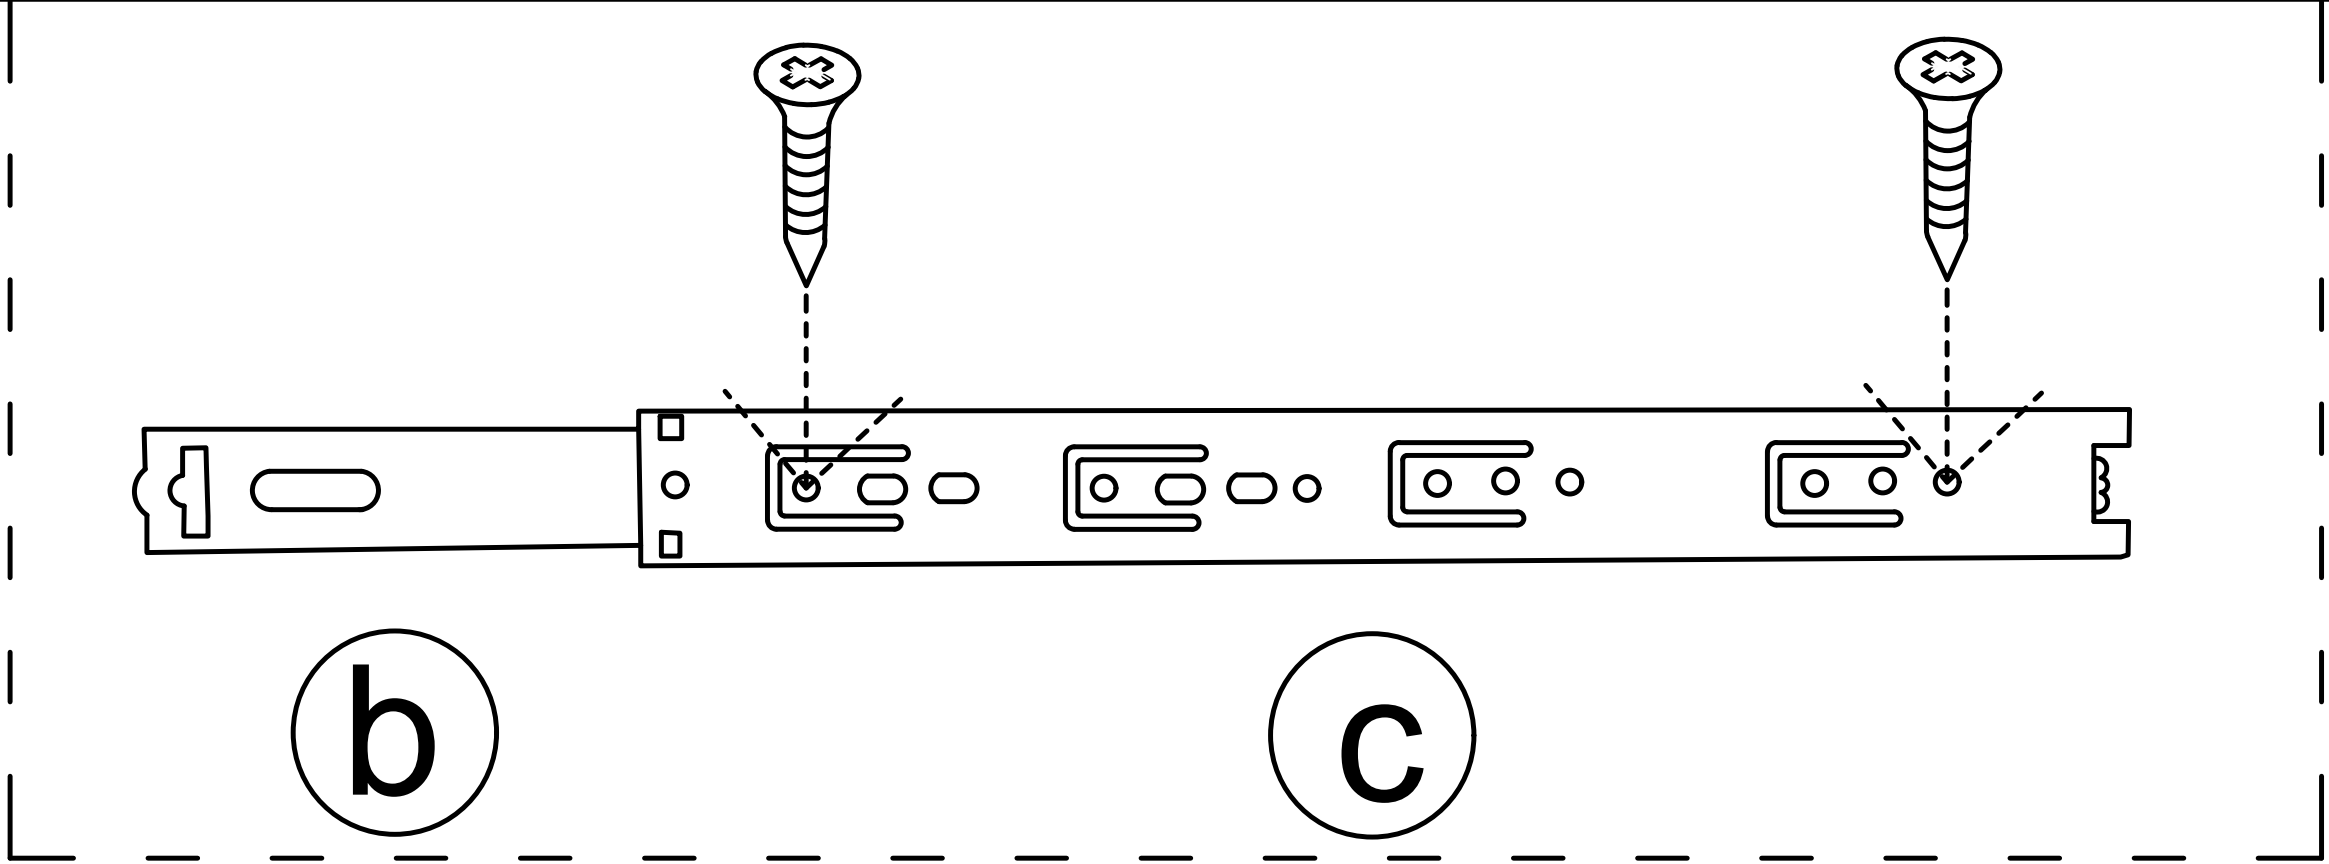

Step 28

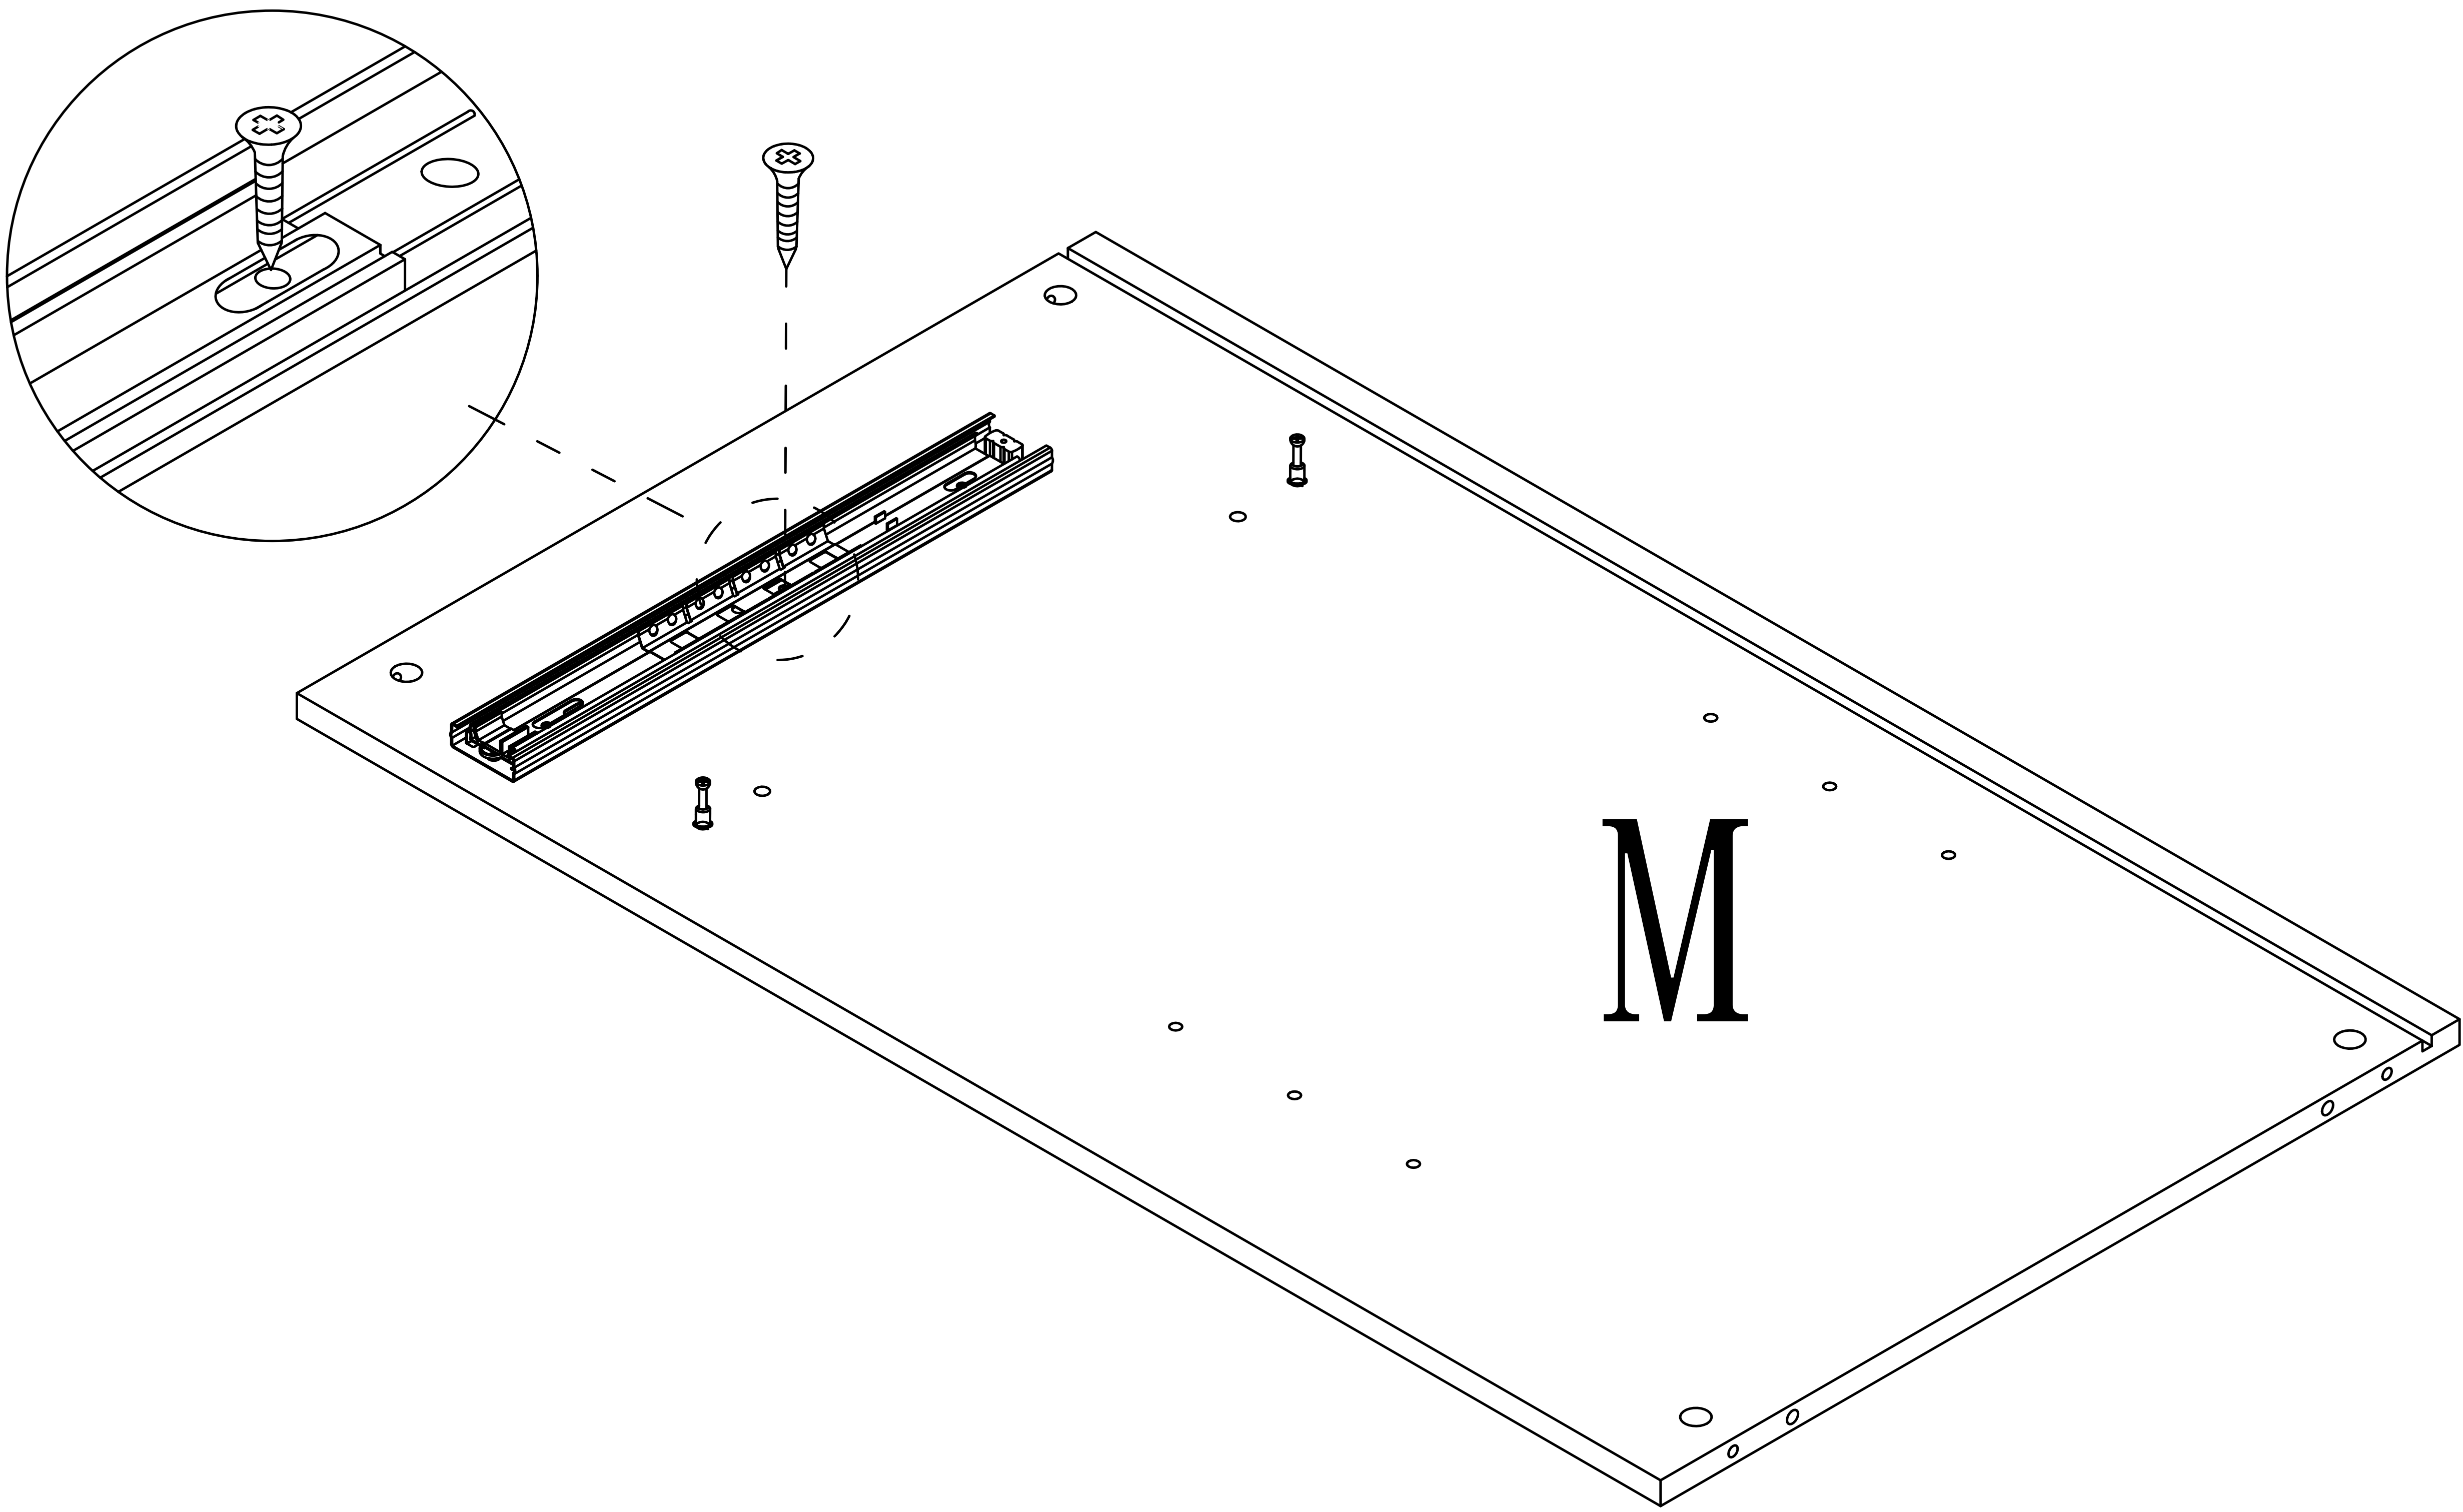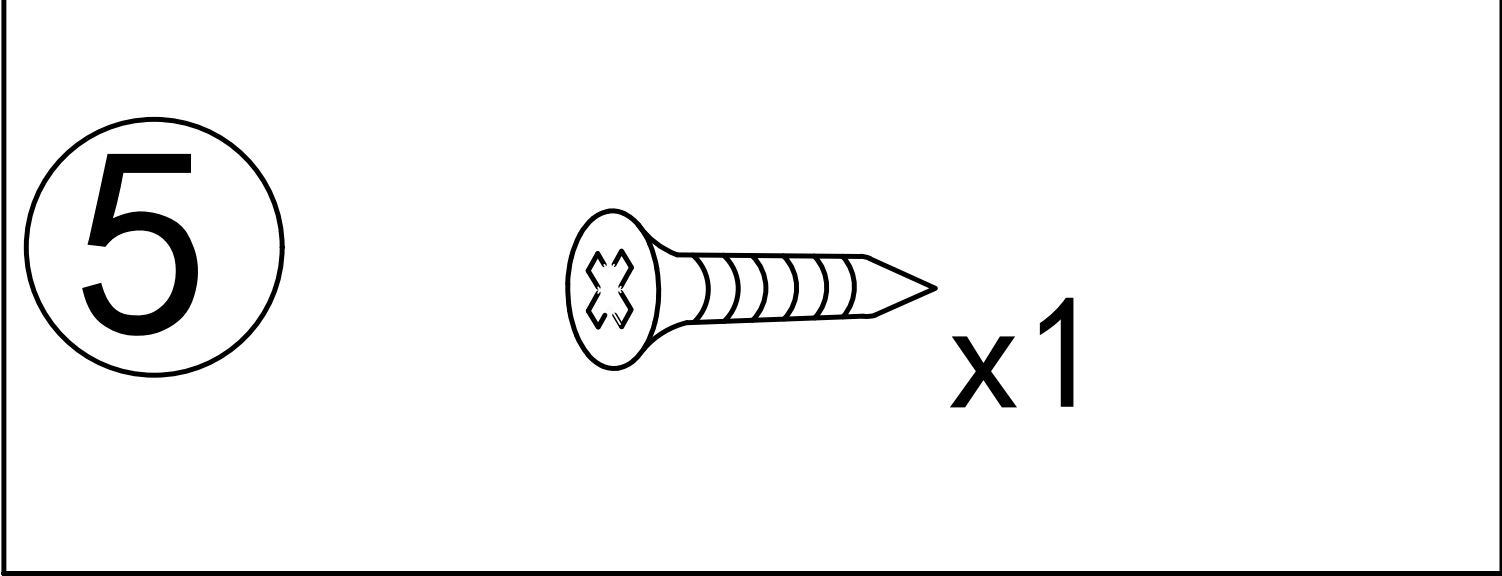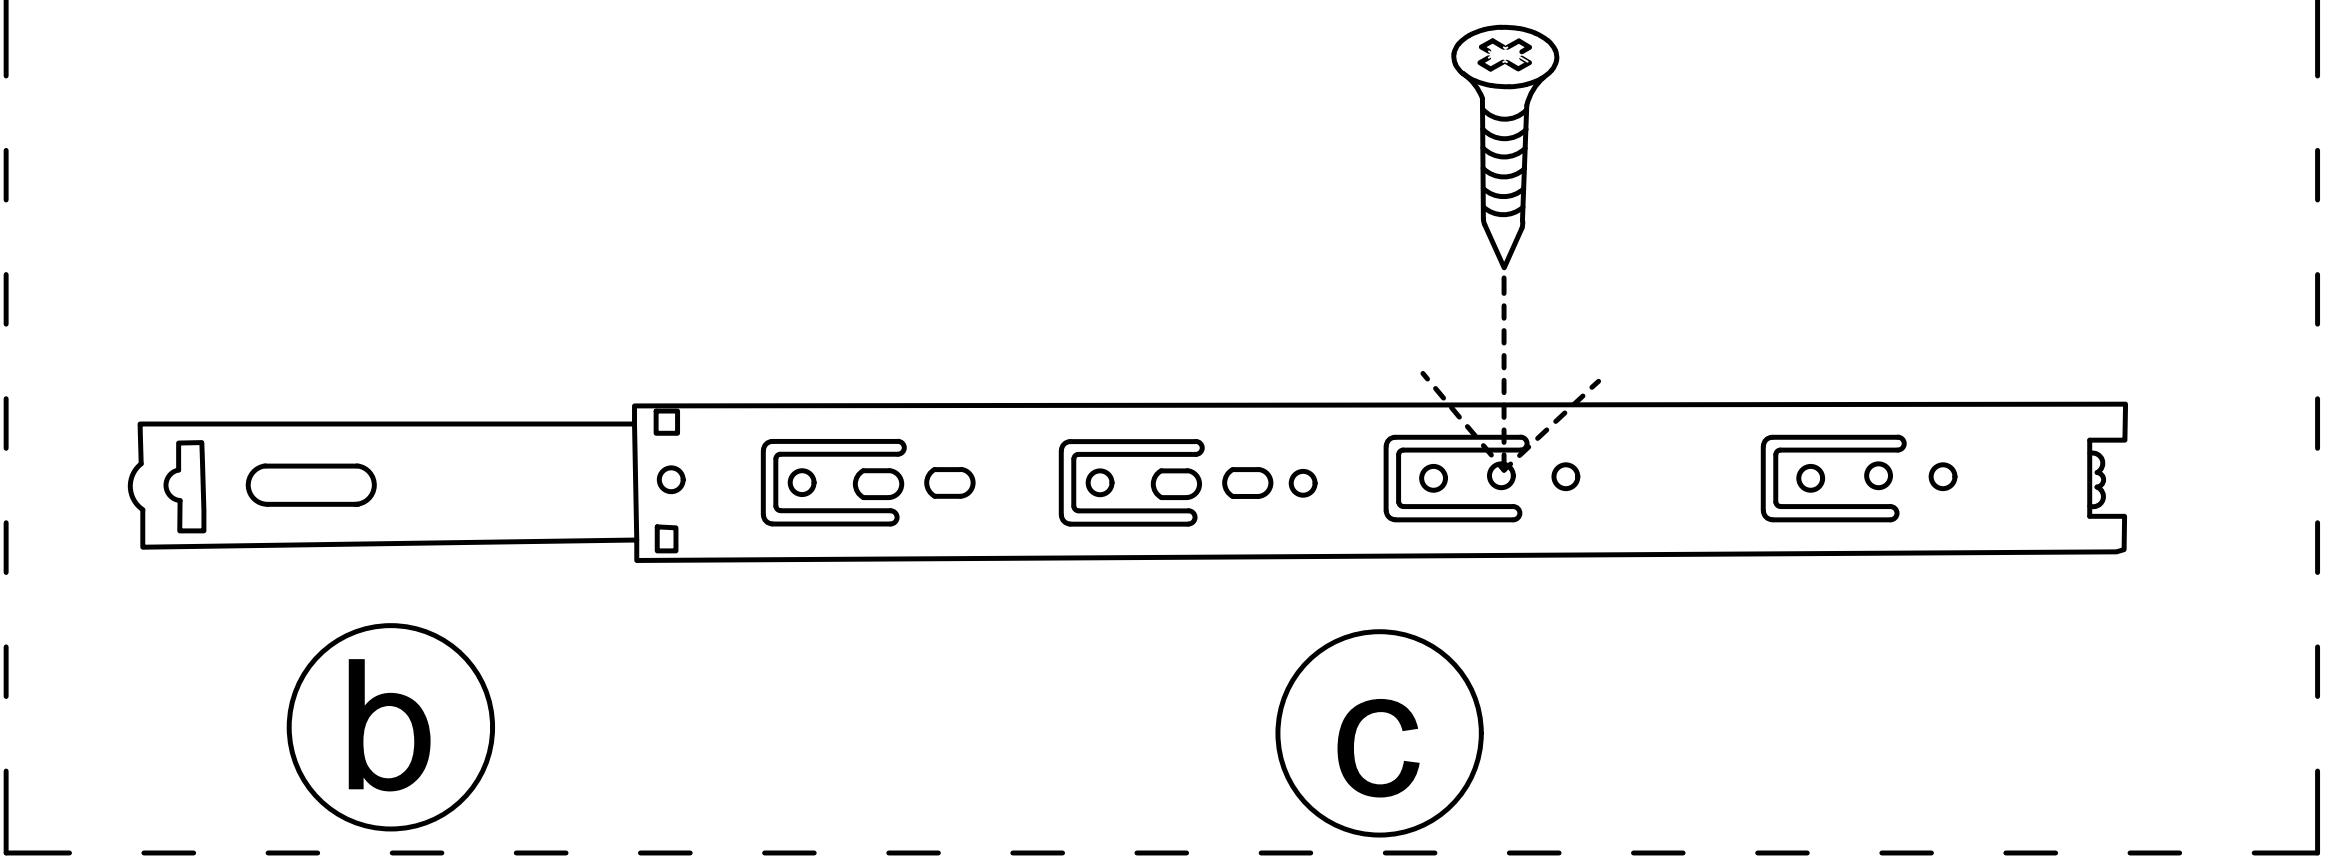



Step 29

- 3




x4
- 8

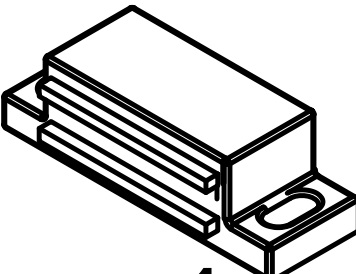


x1
- 

x2


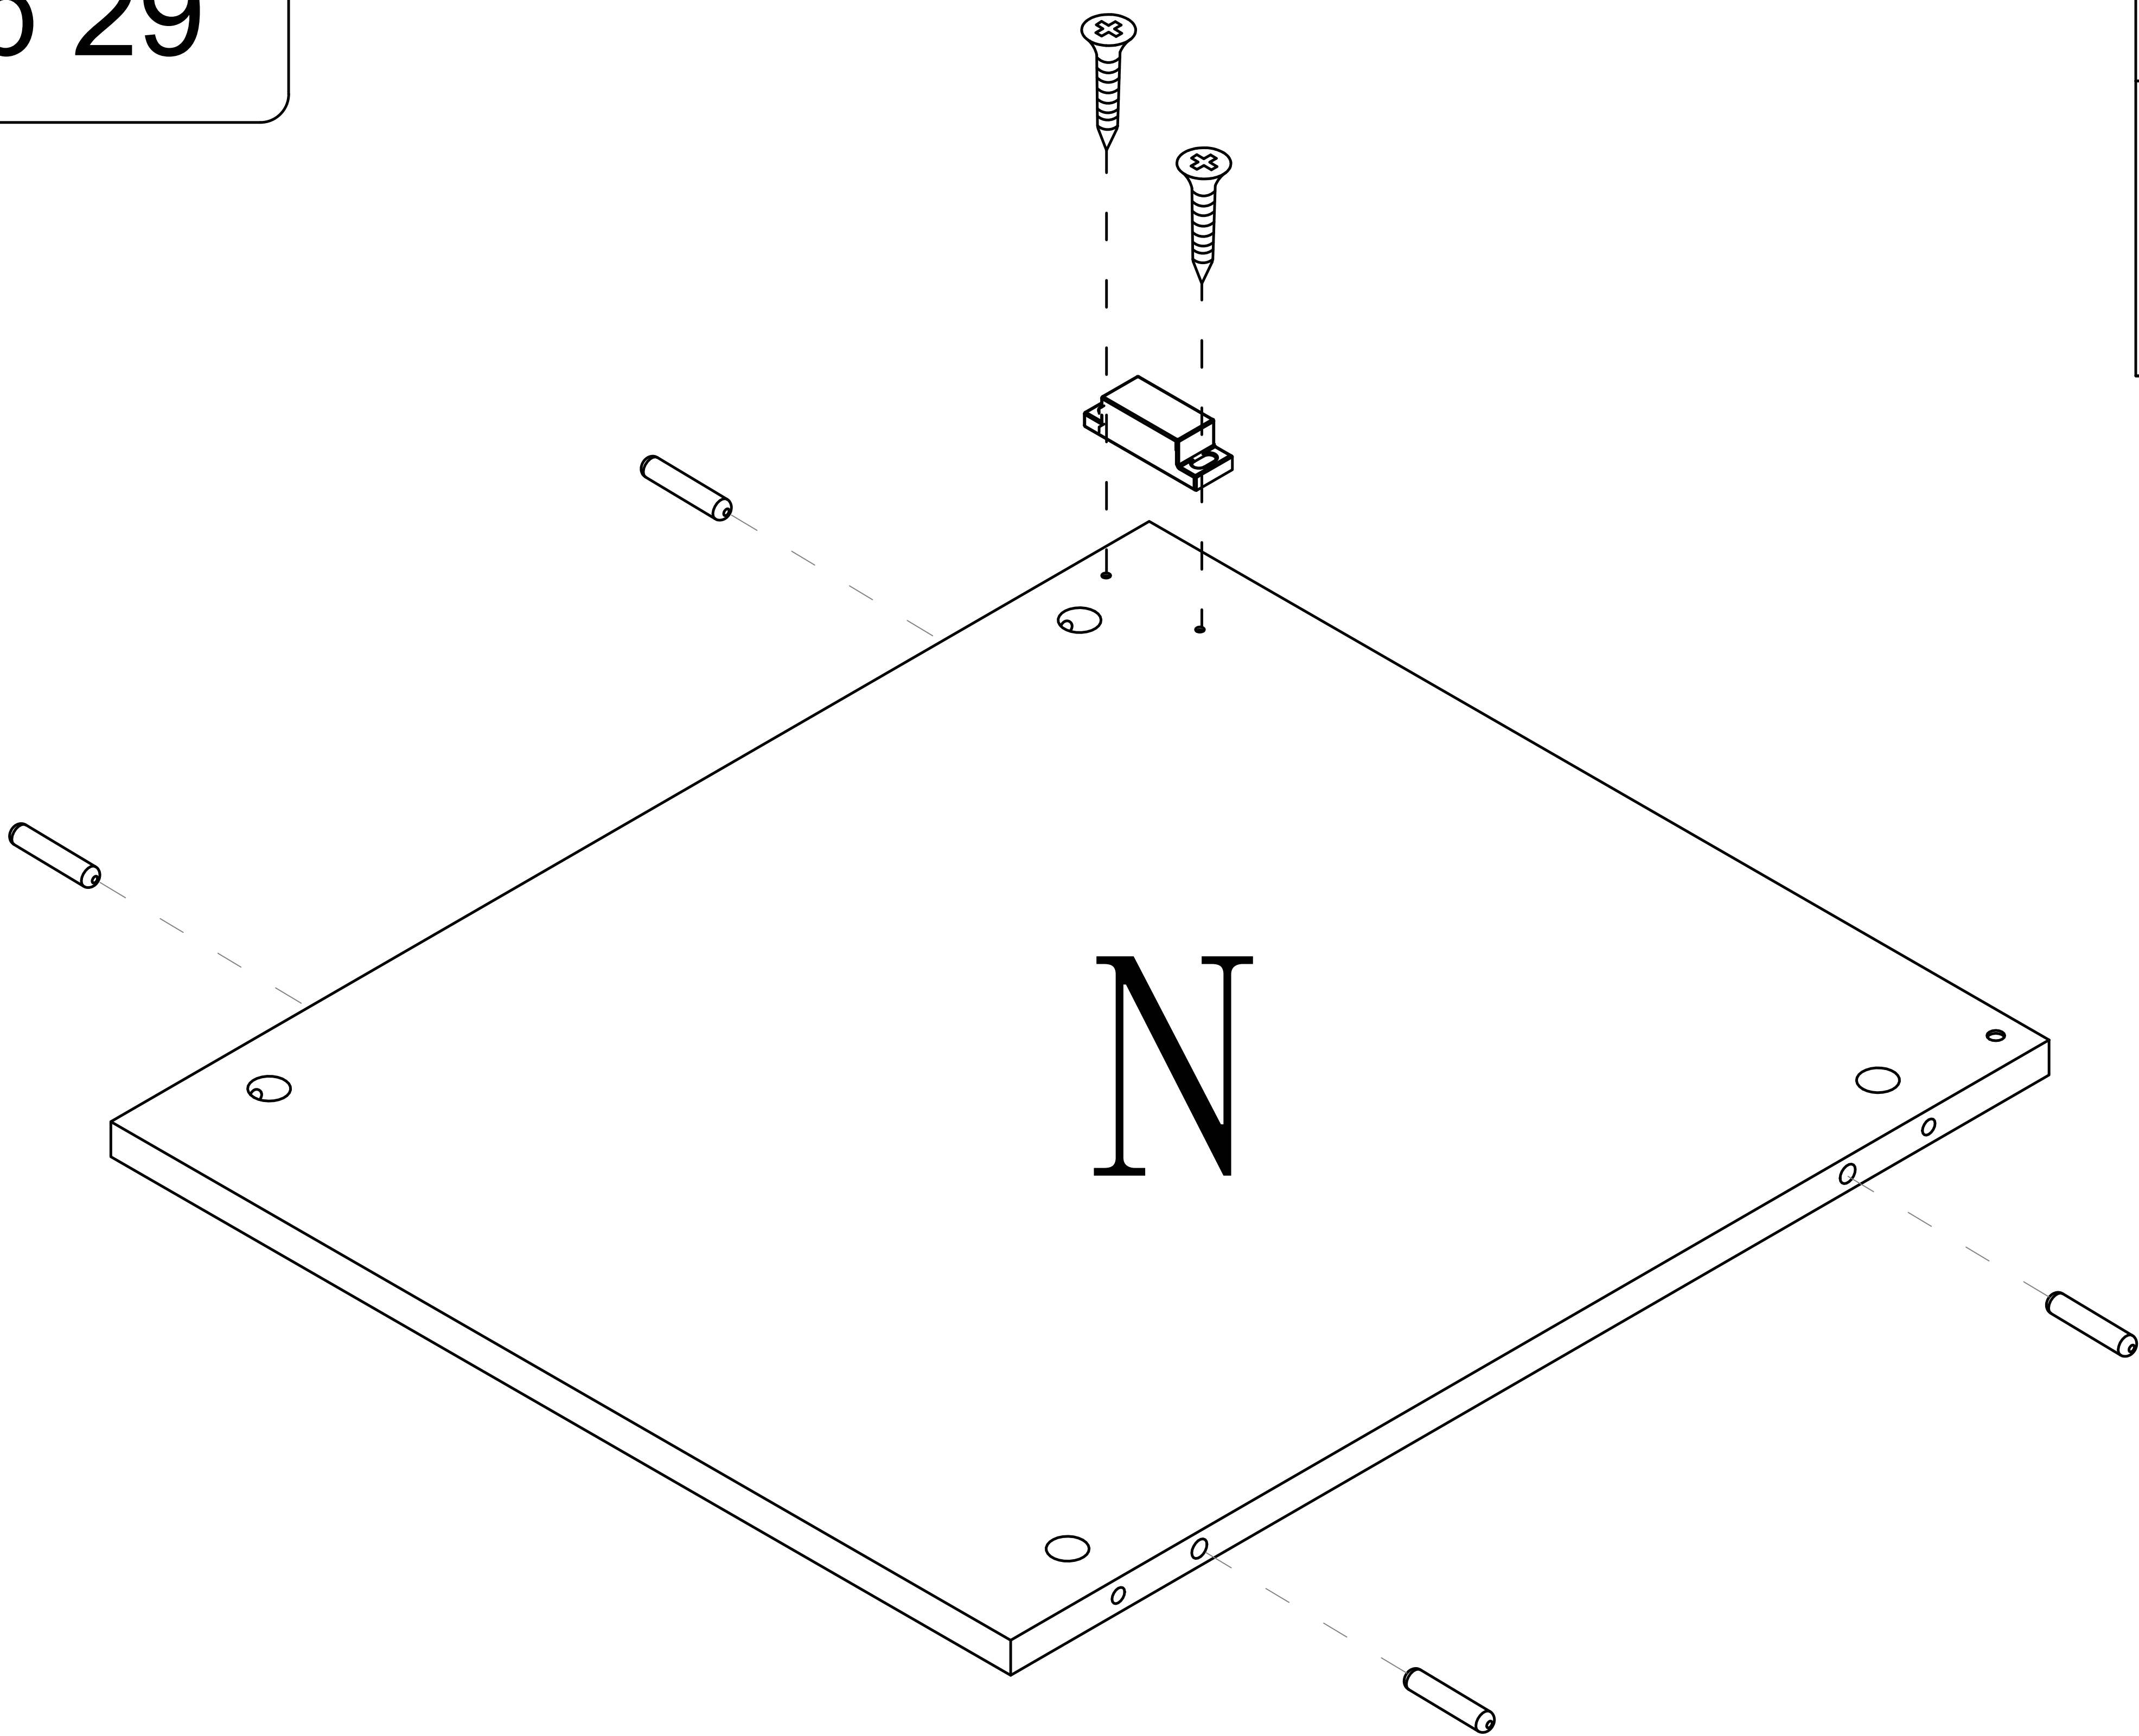


Step 30



- 2

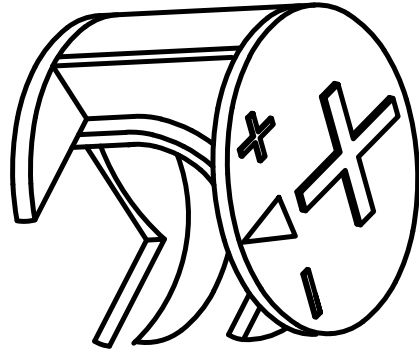




x2

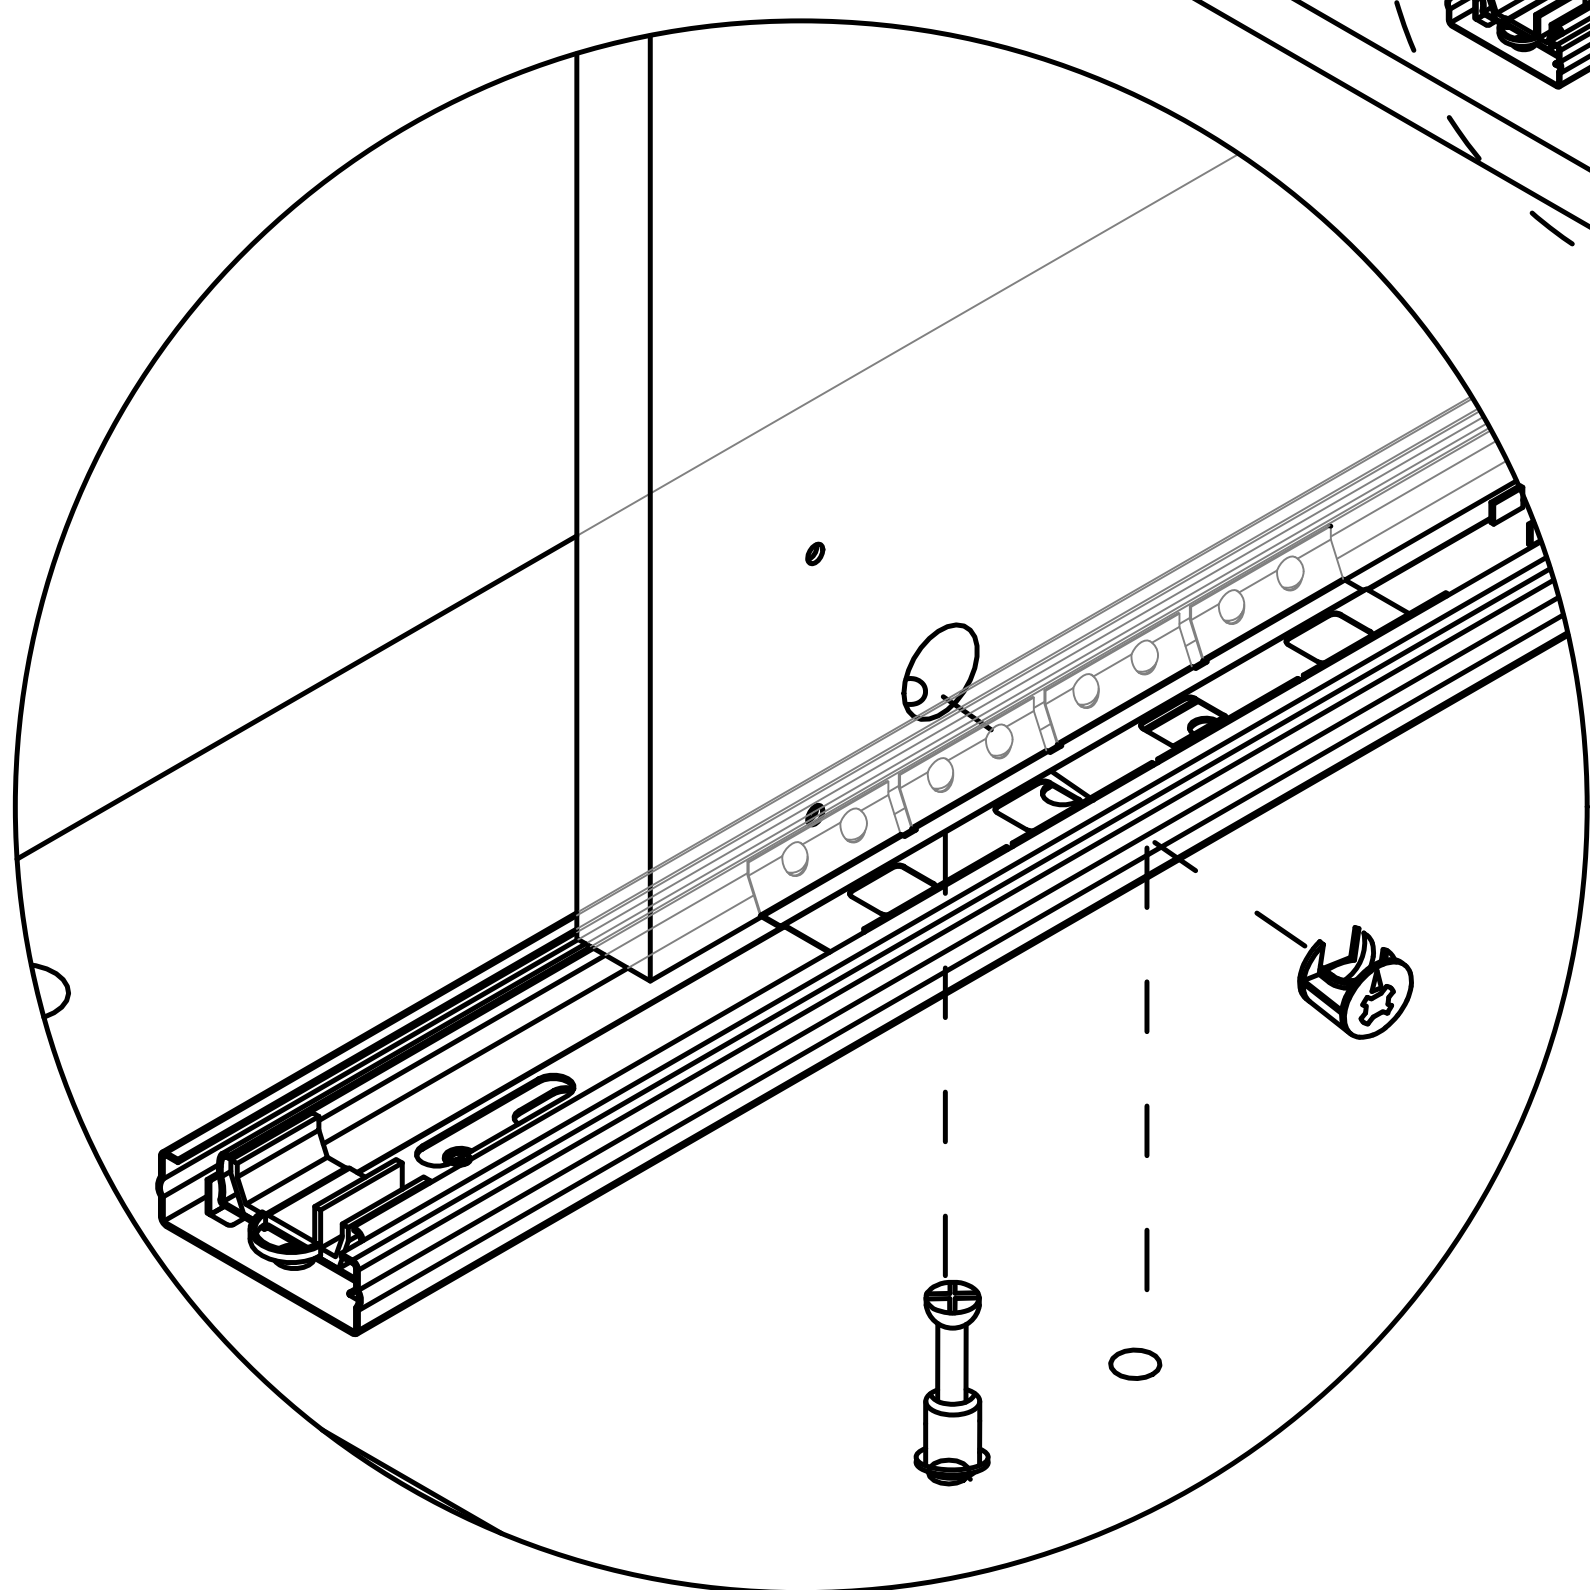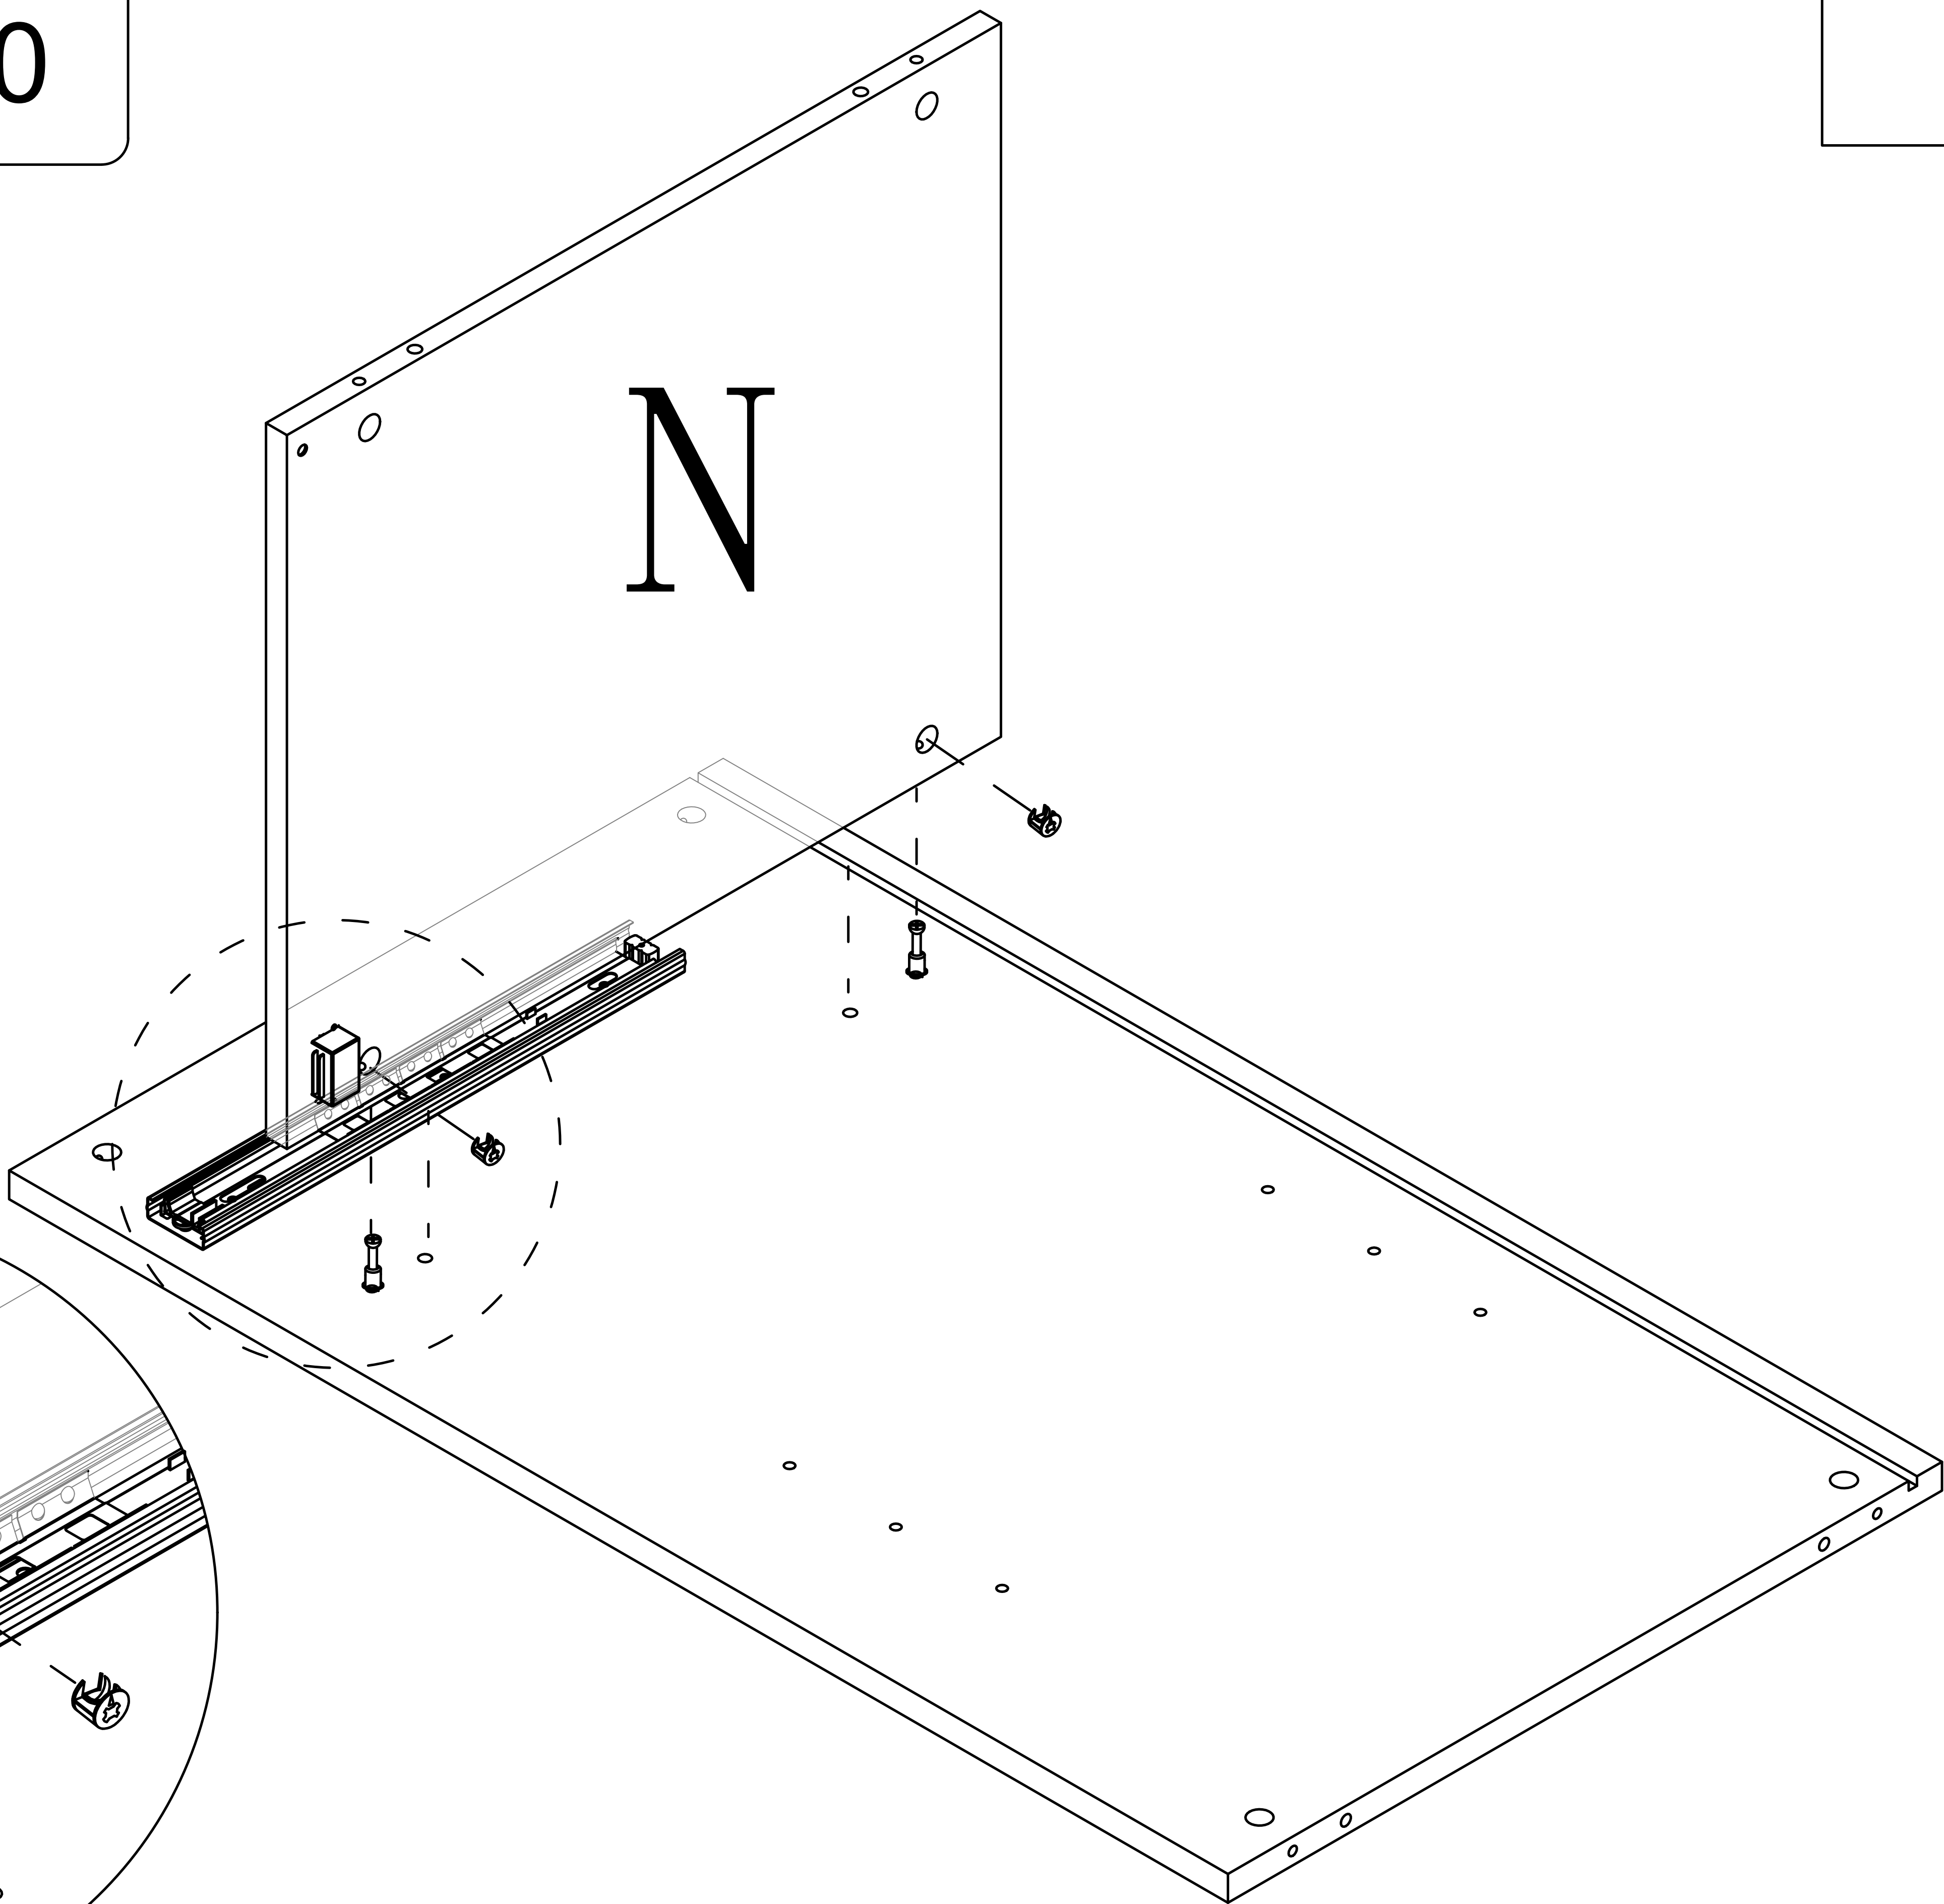


Step 31

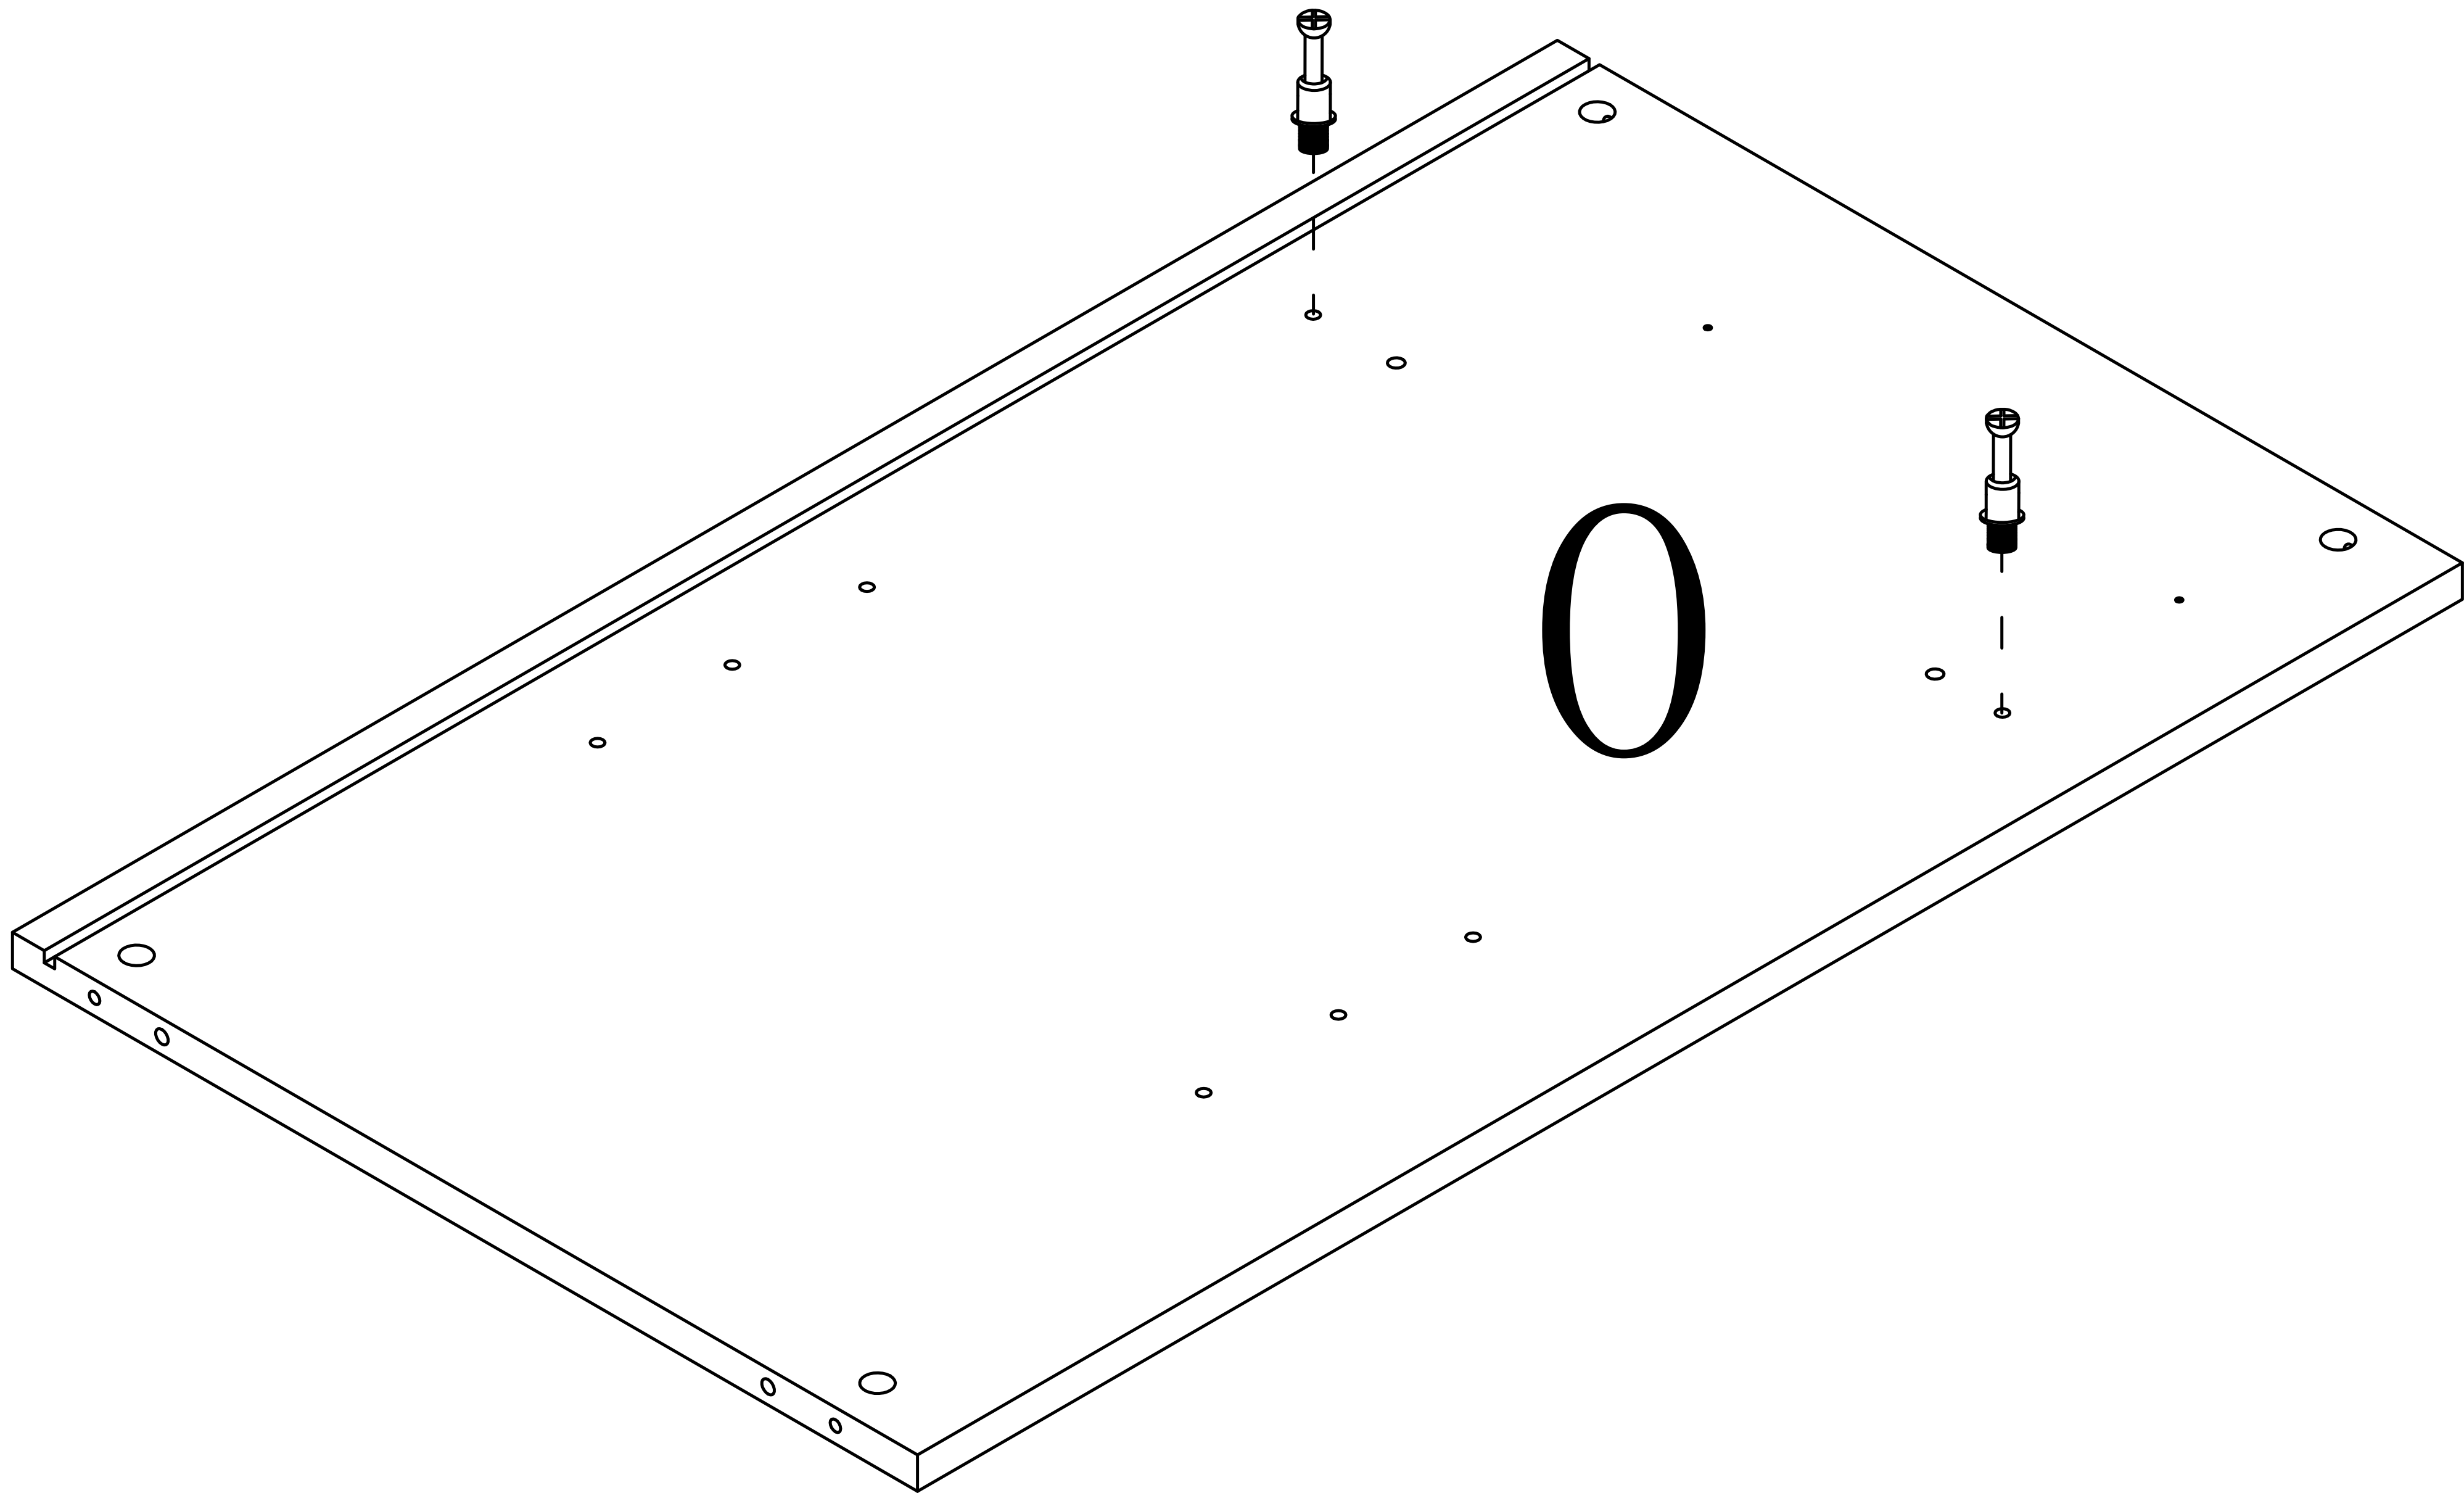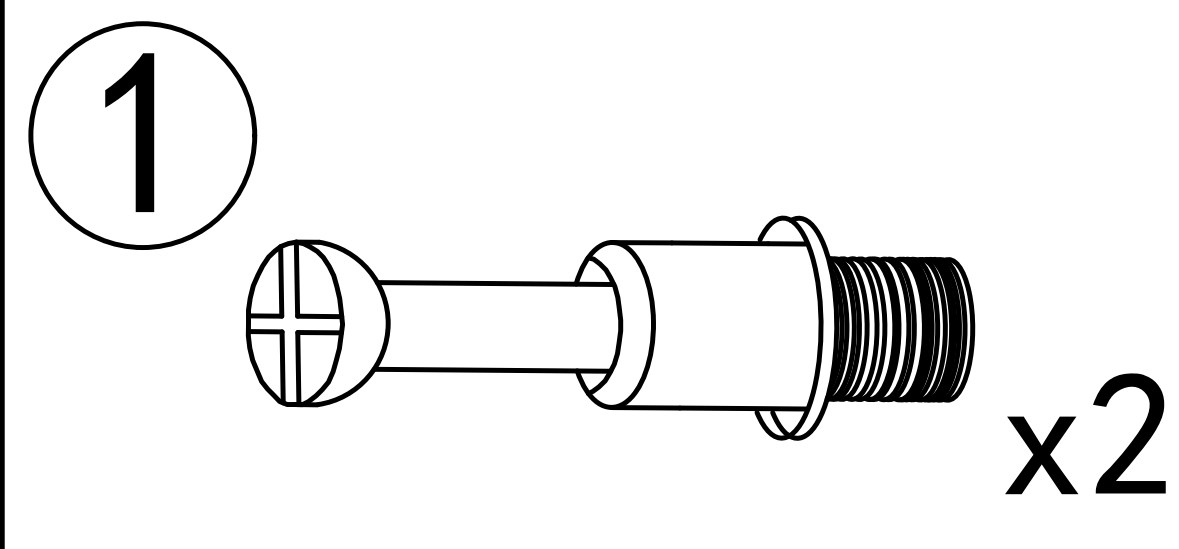



Step 32

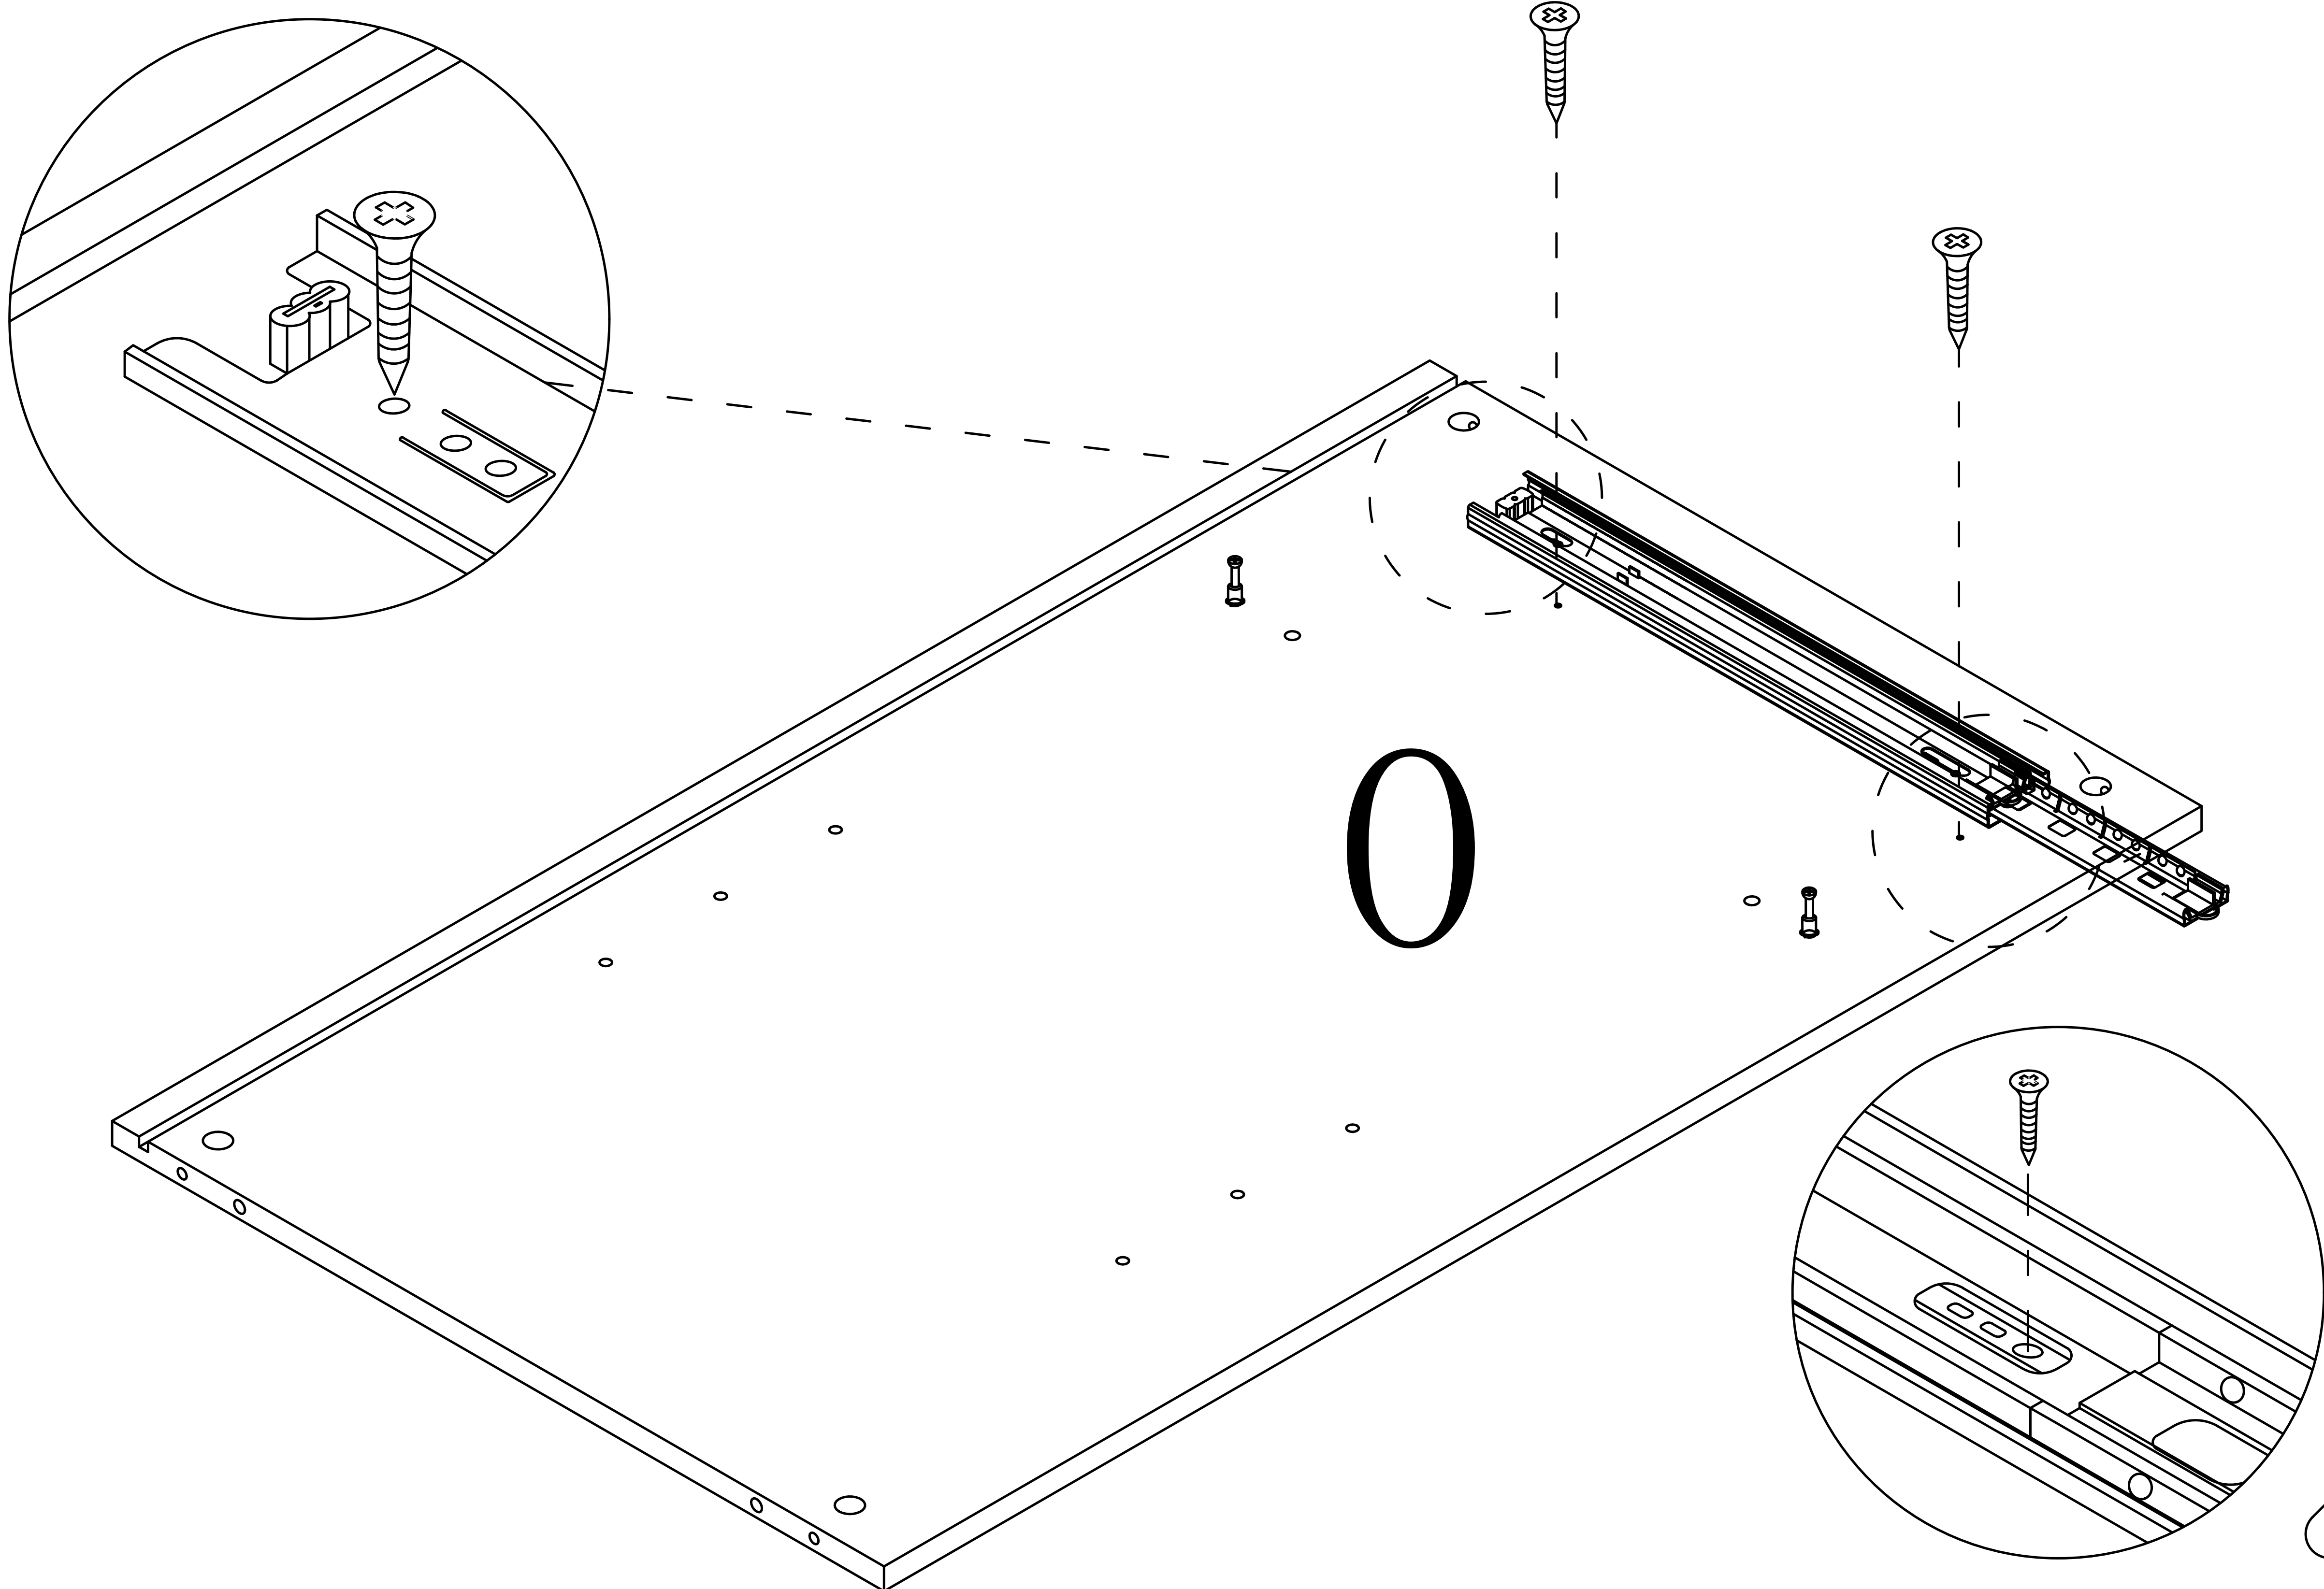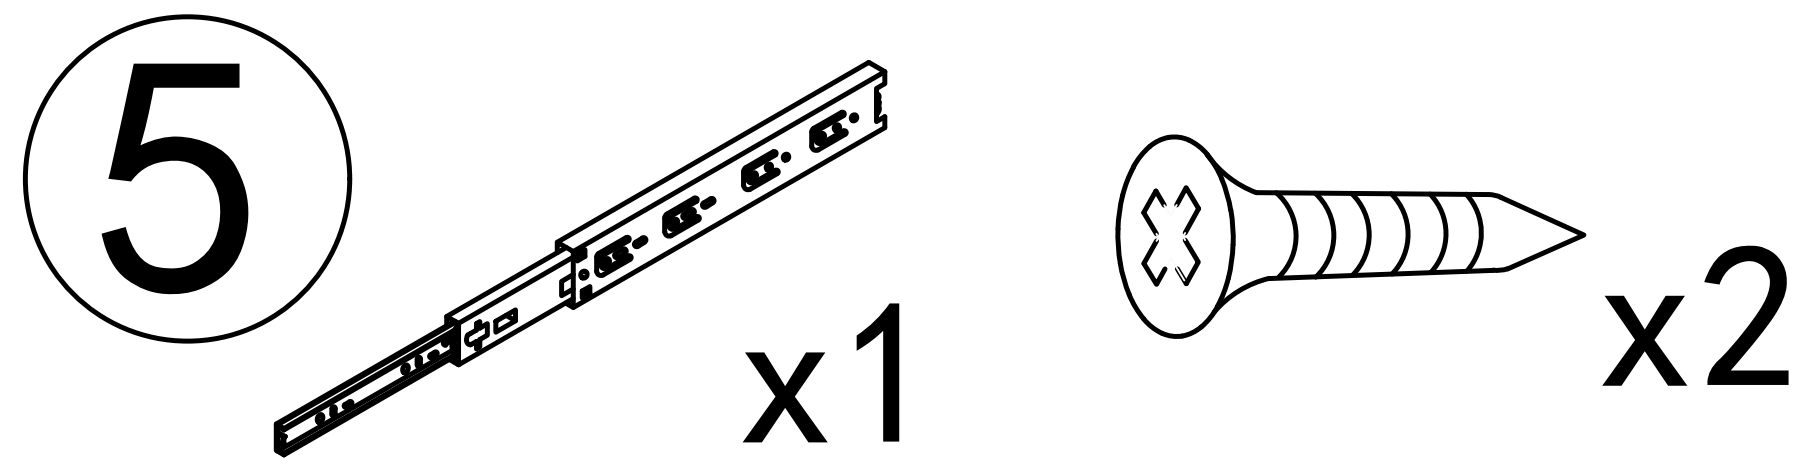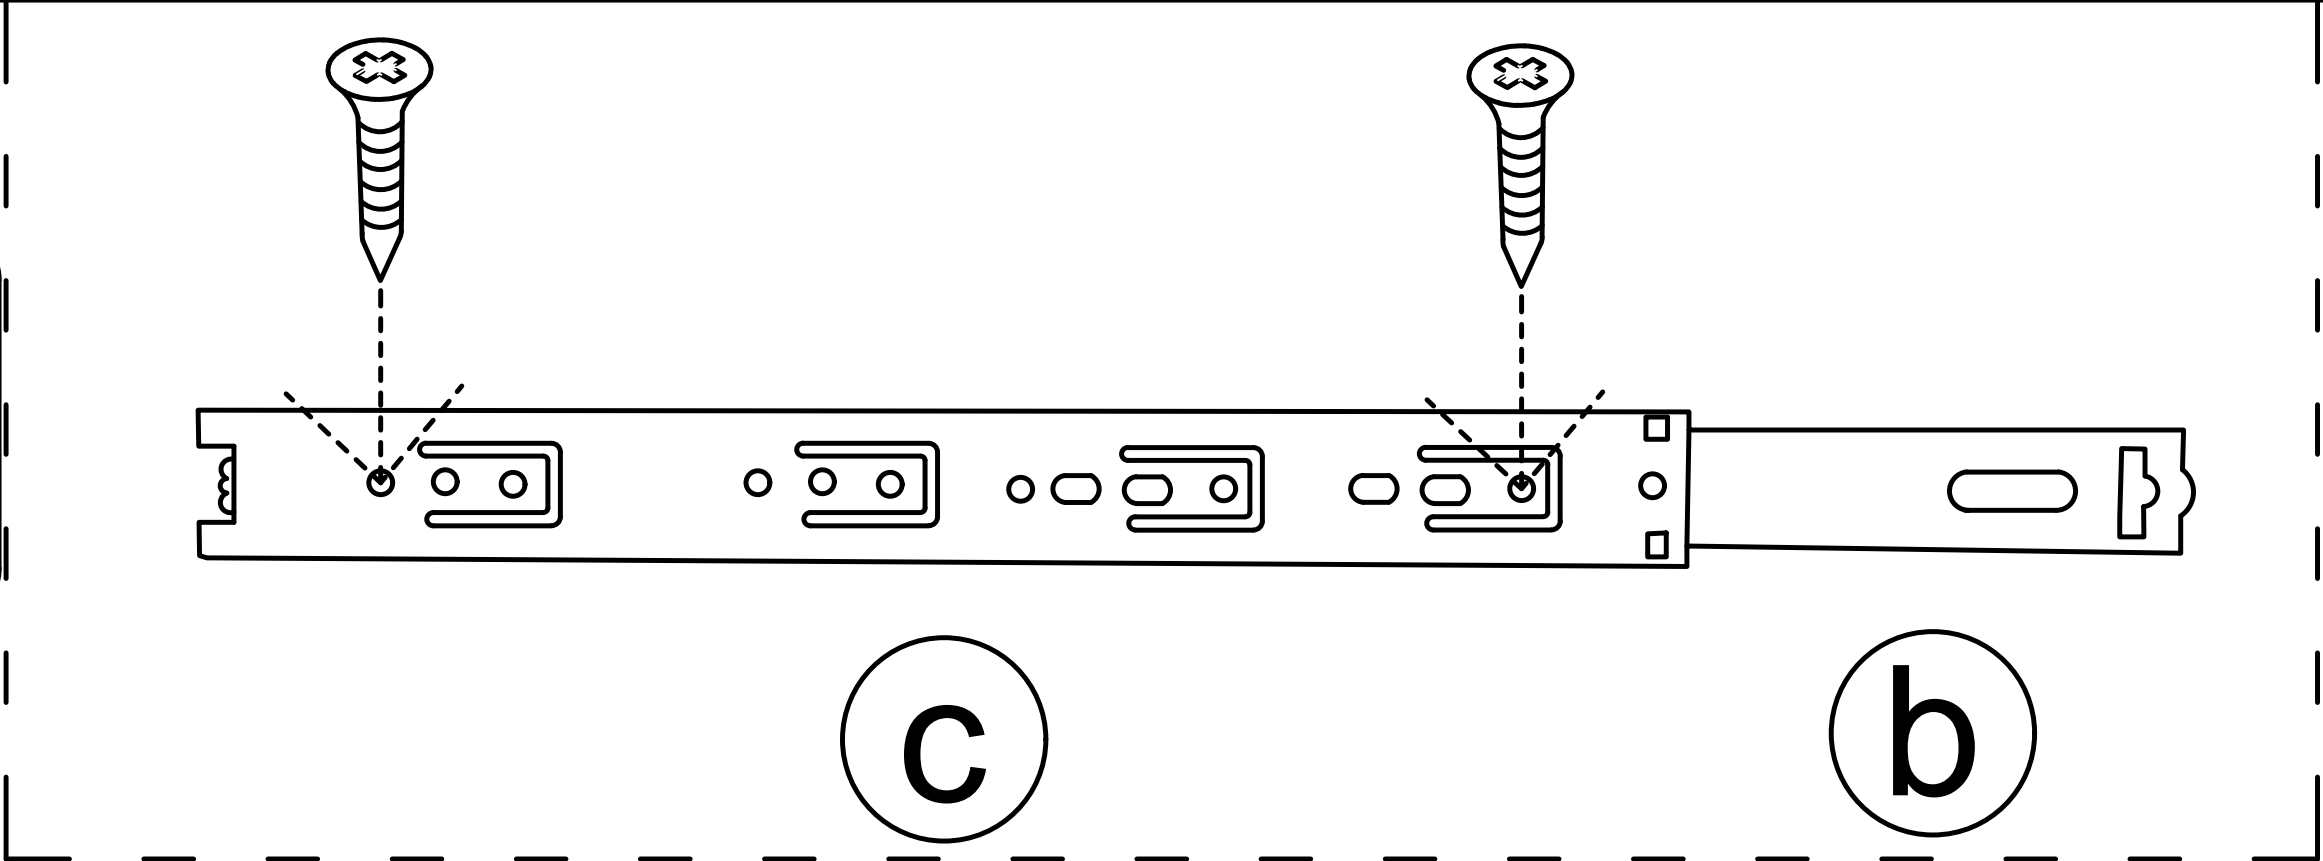

Step 33


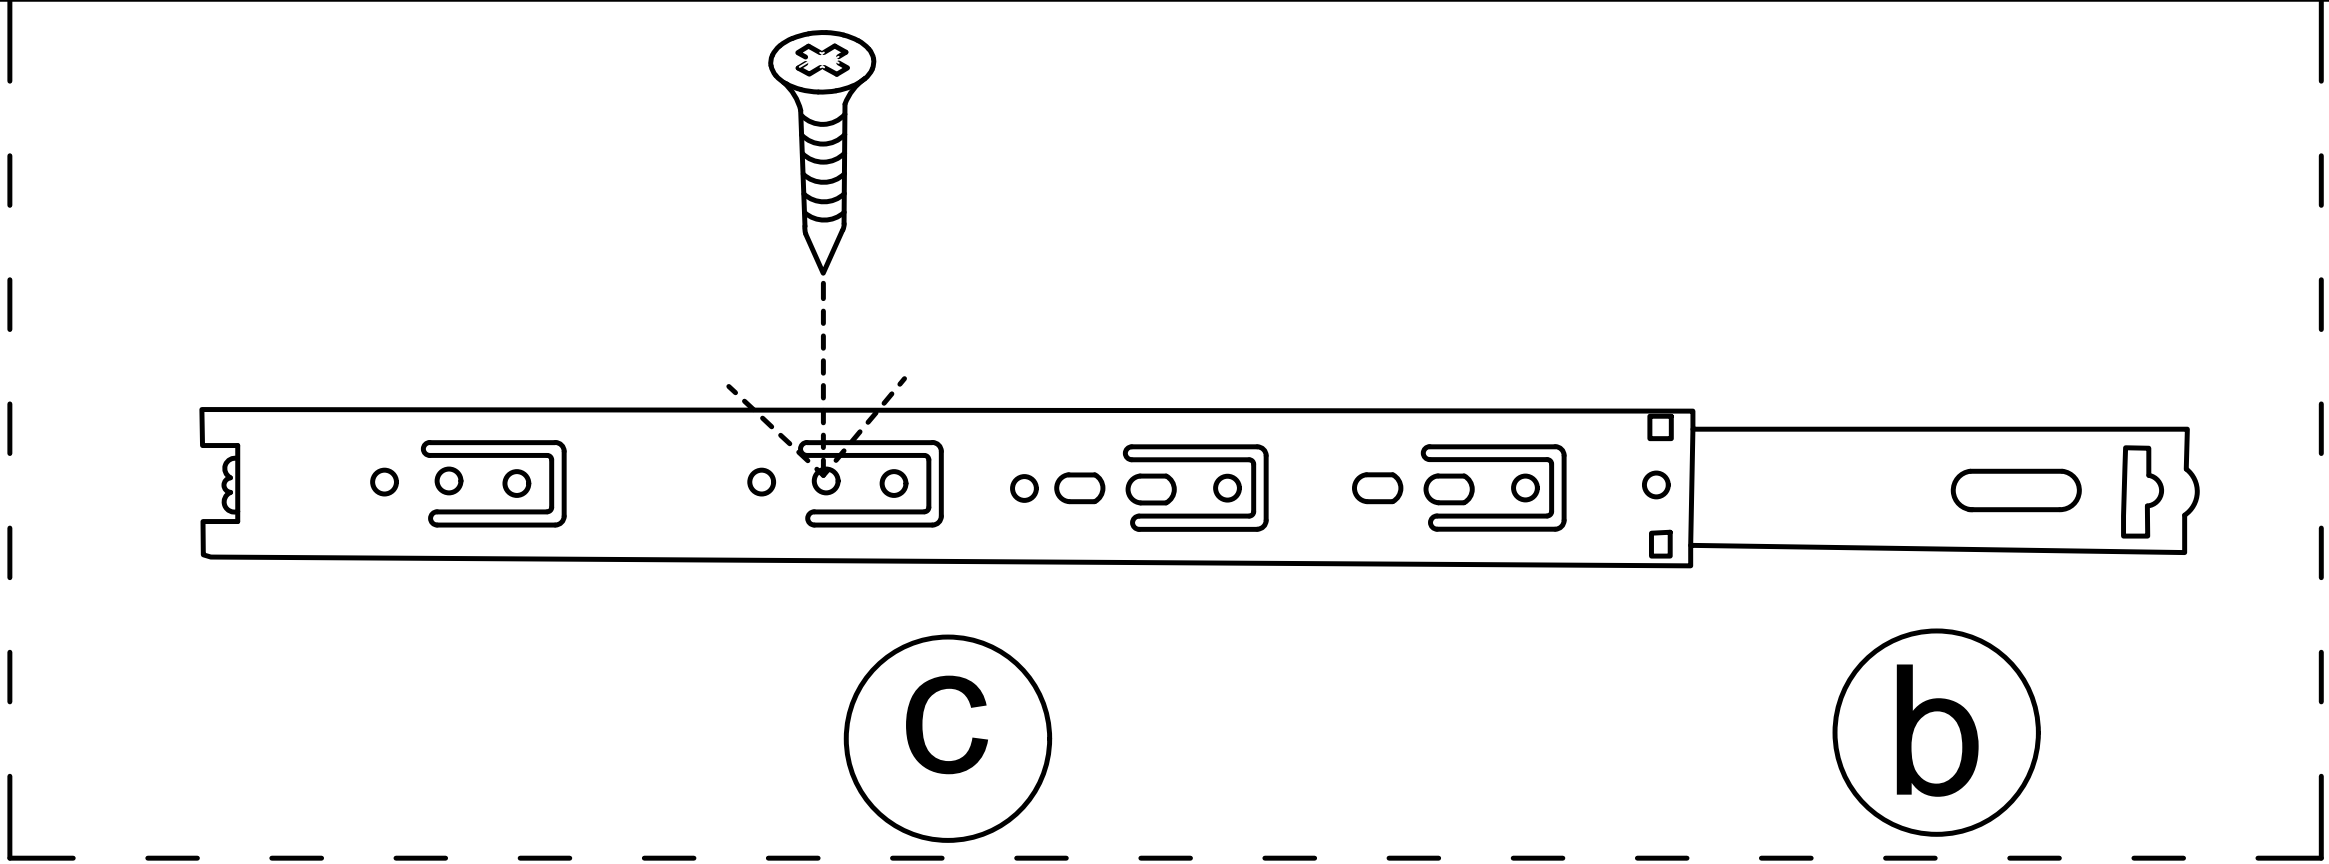


5

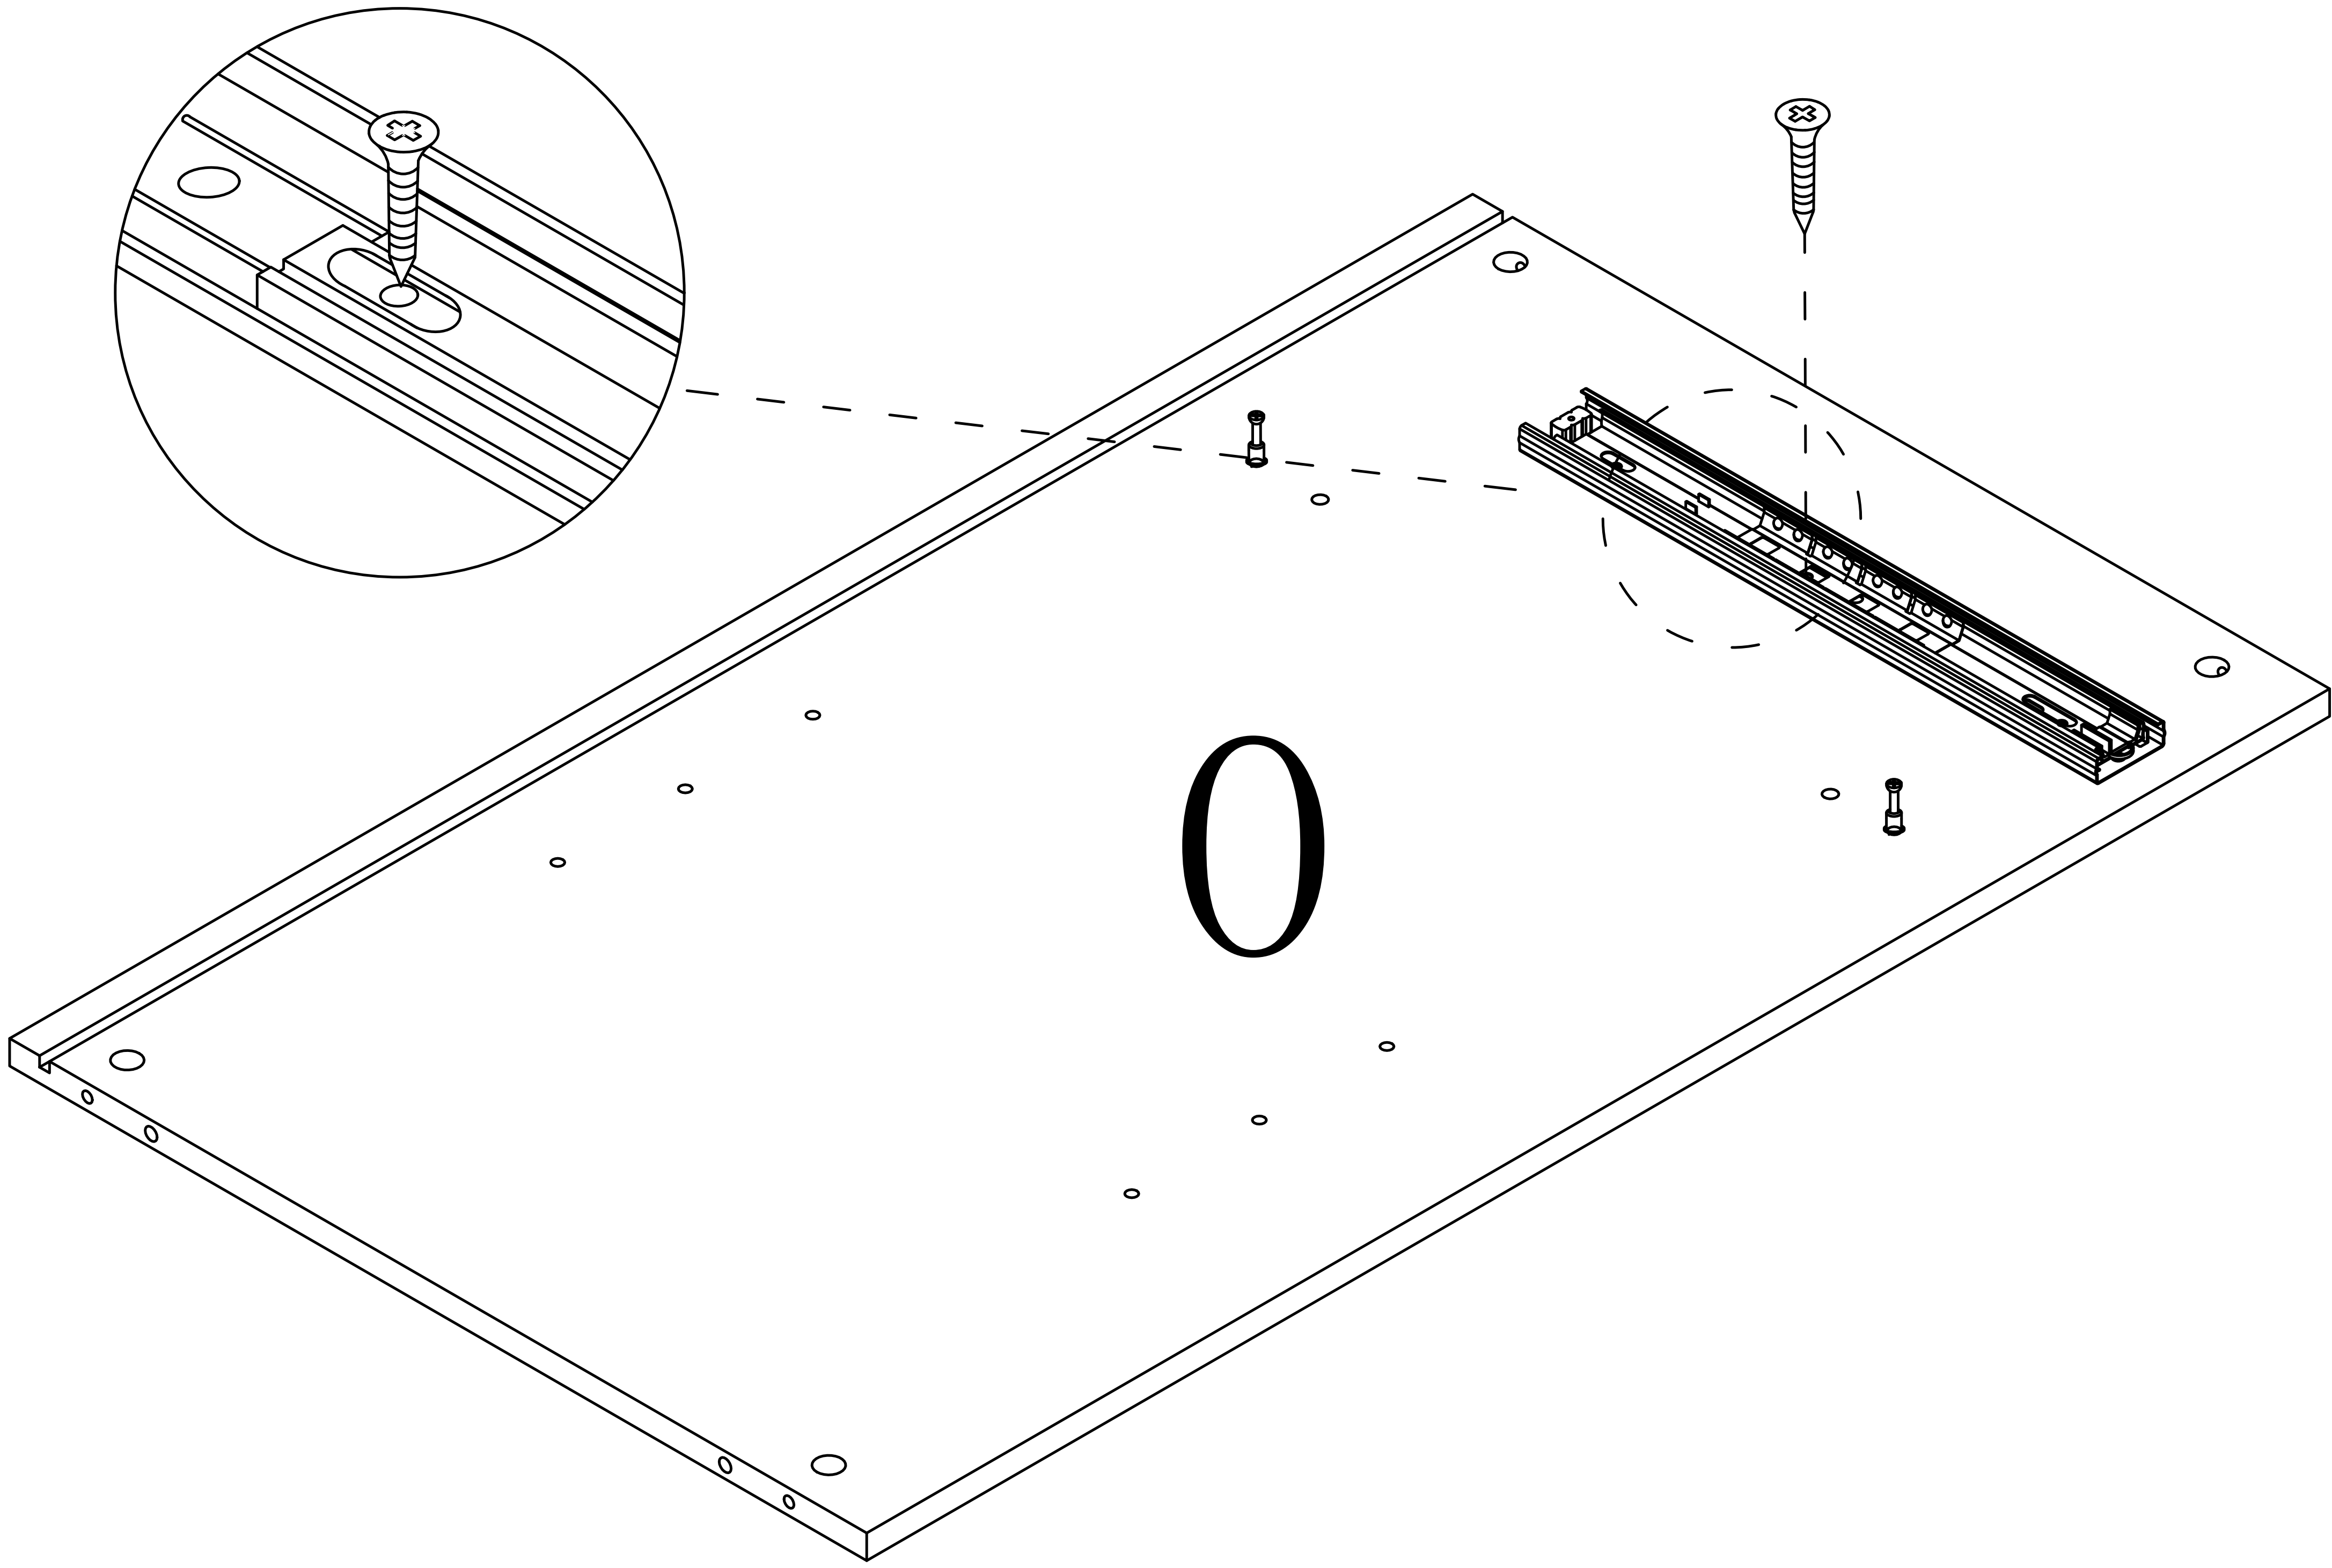
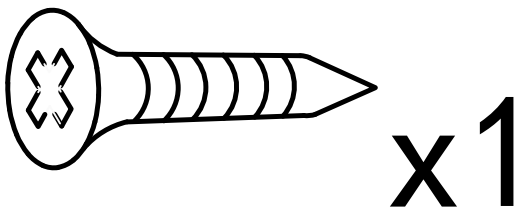


Step 34



2

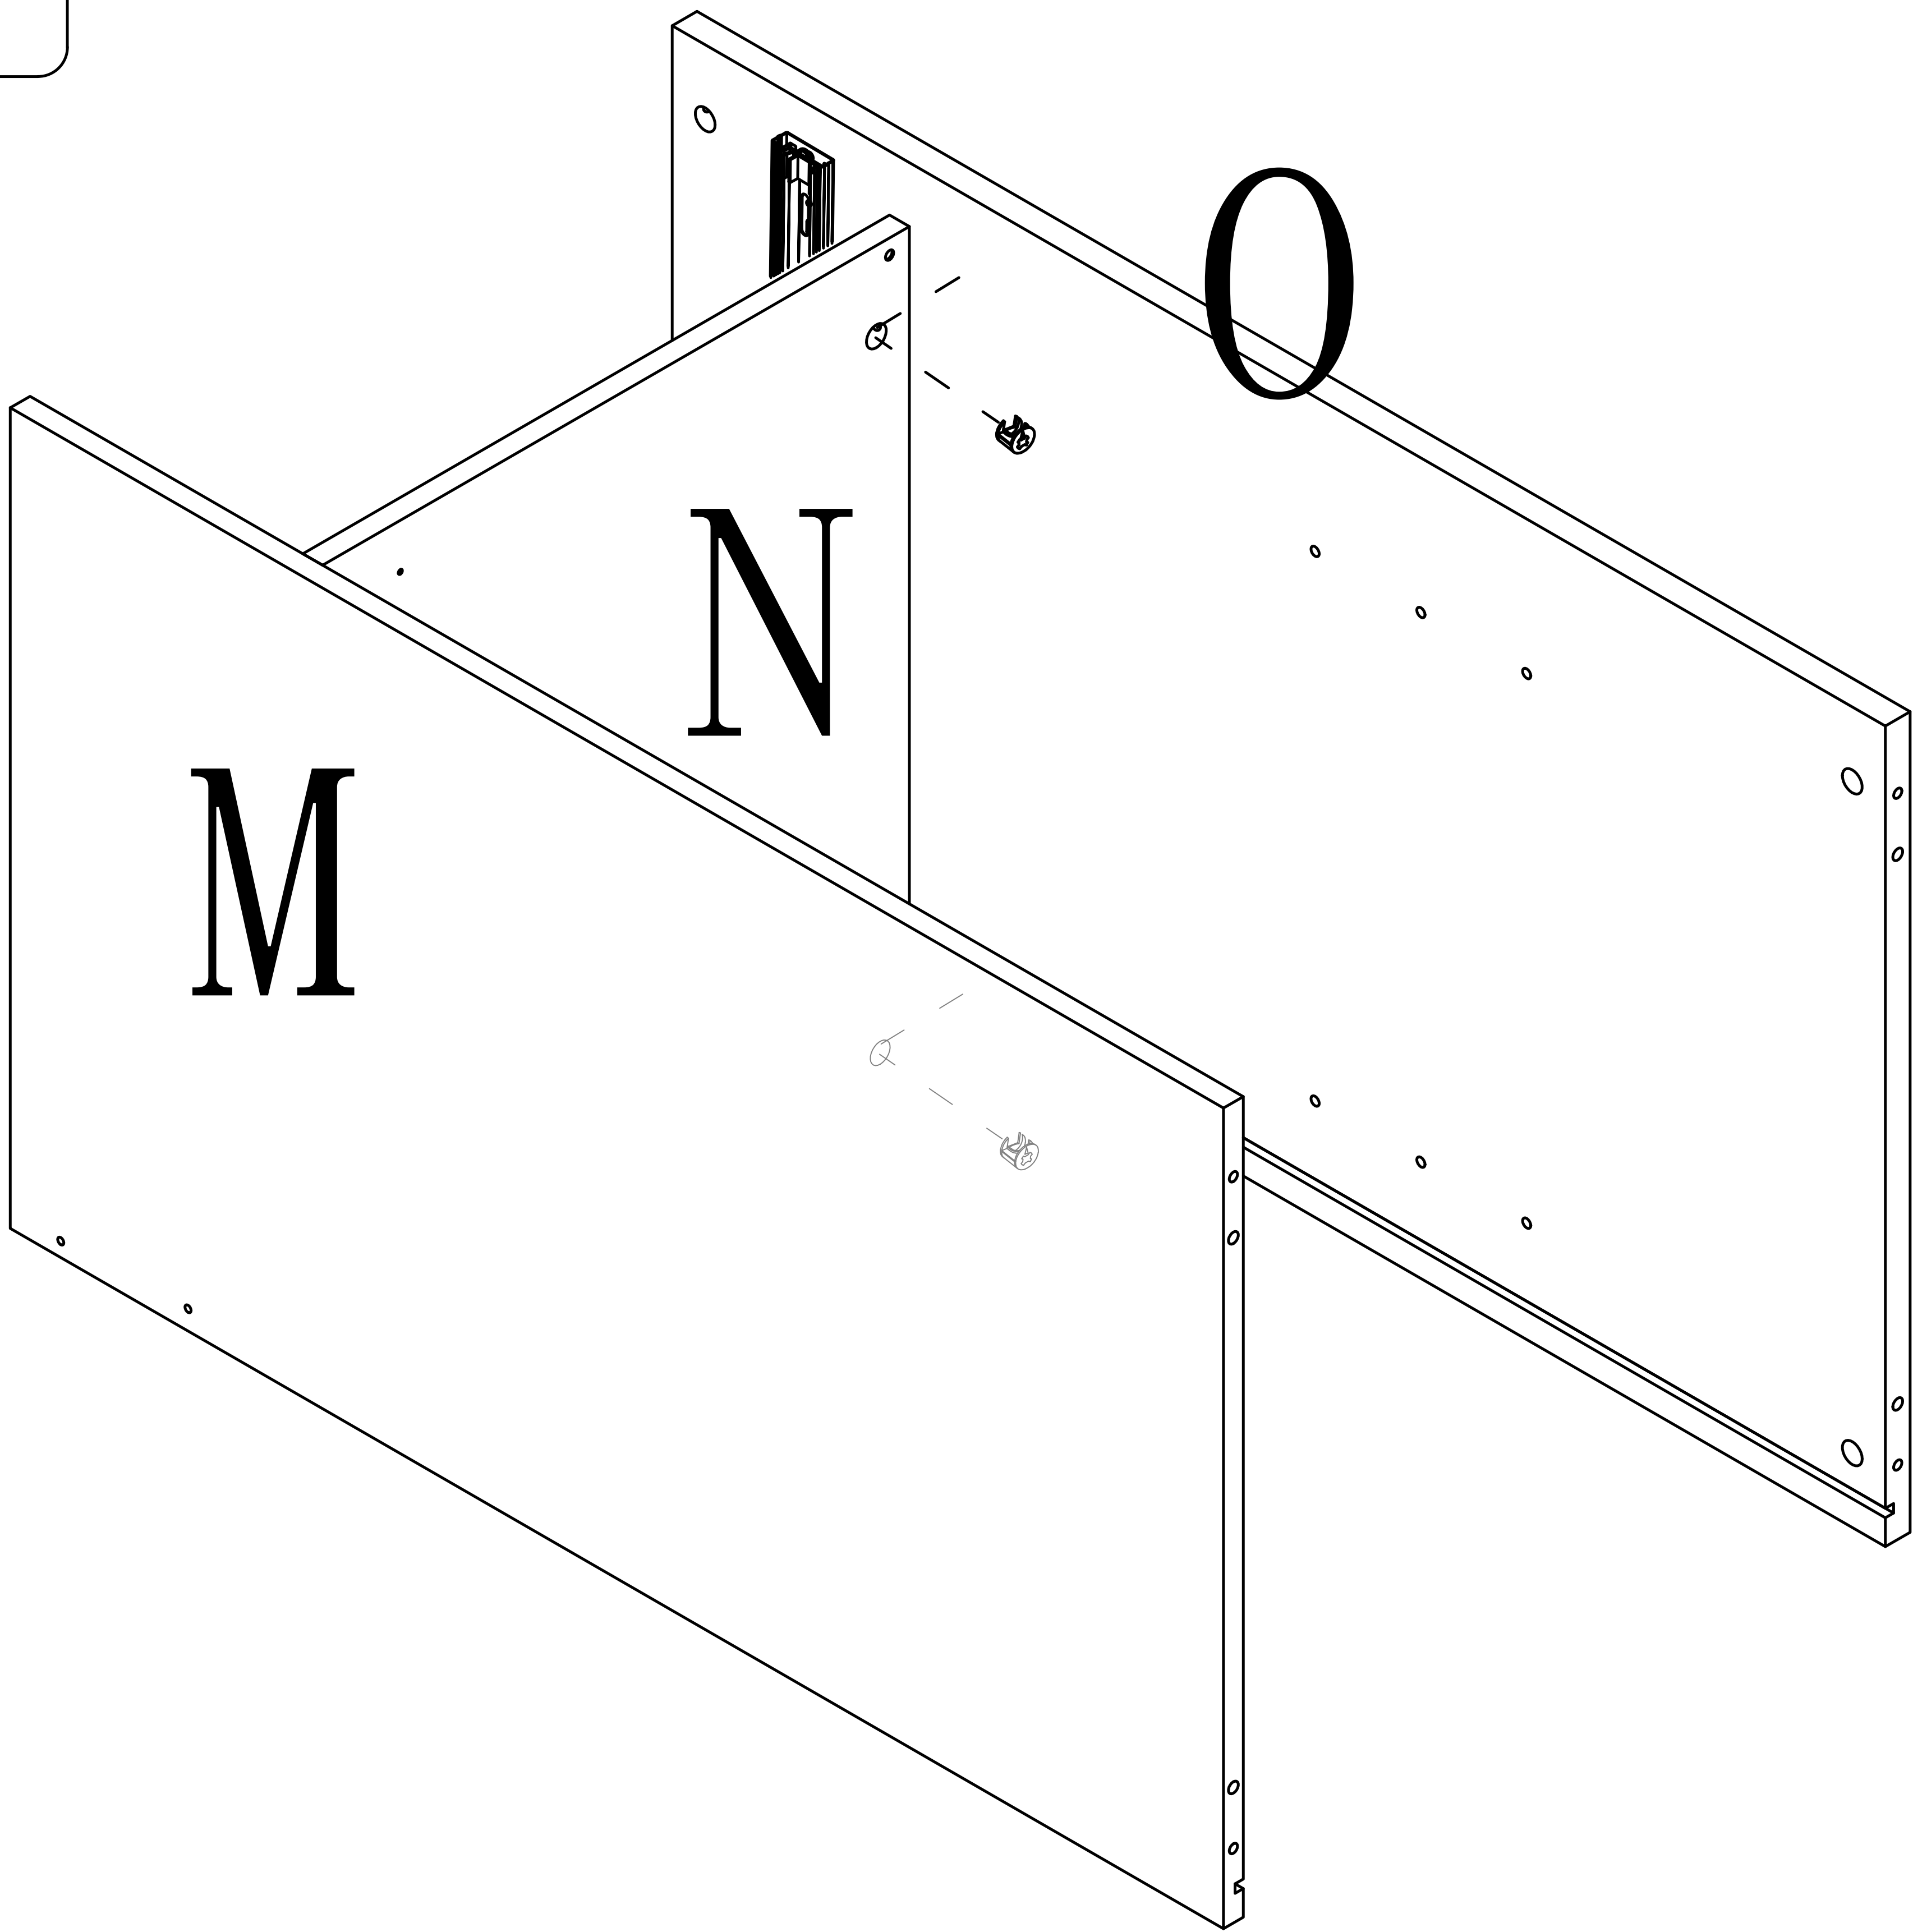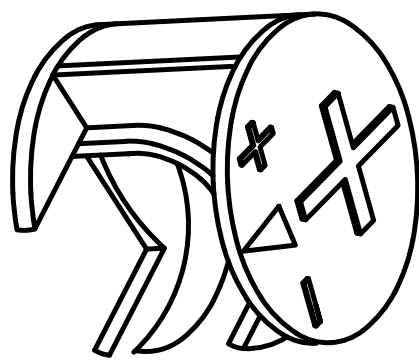

Step 35

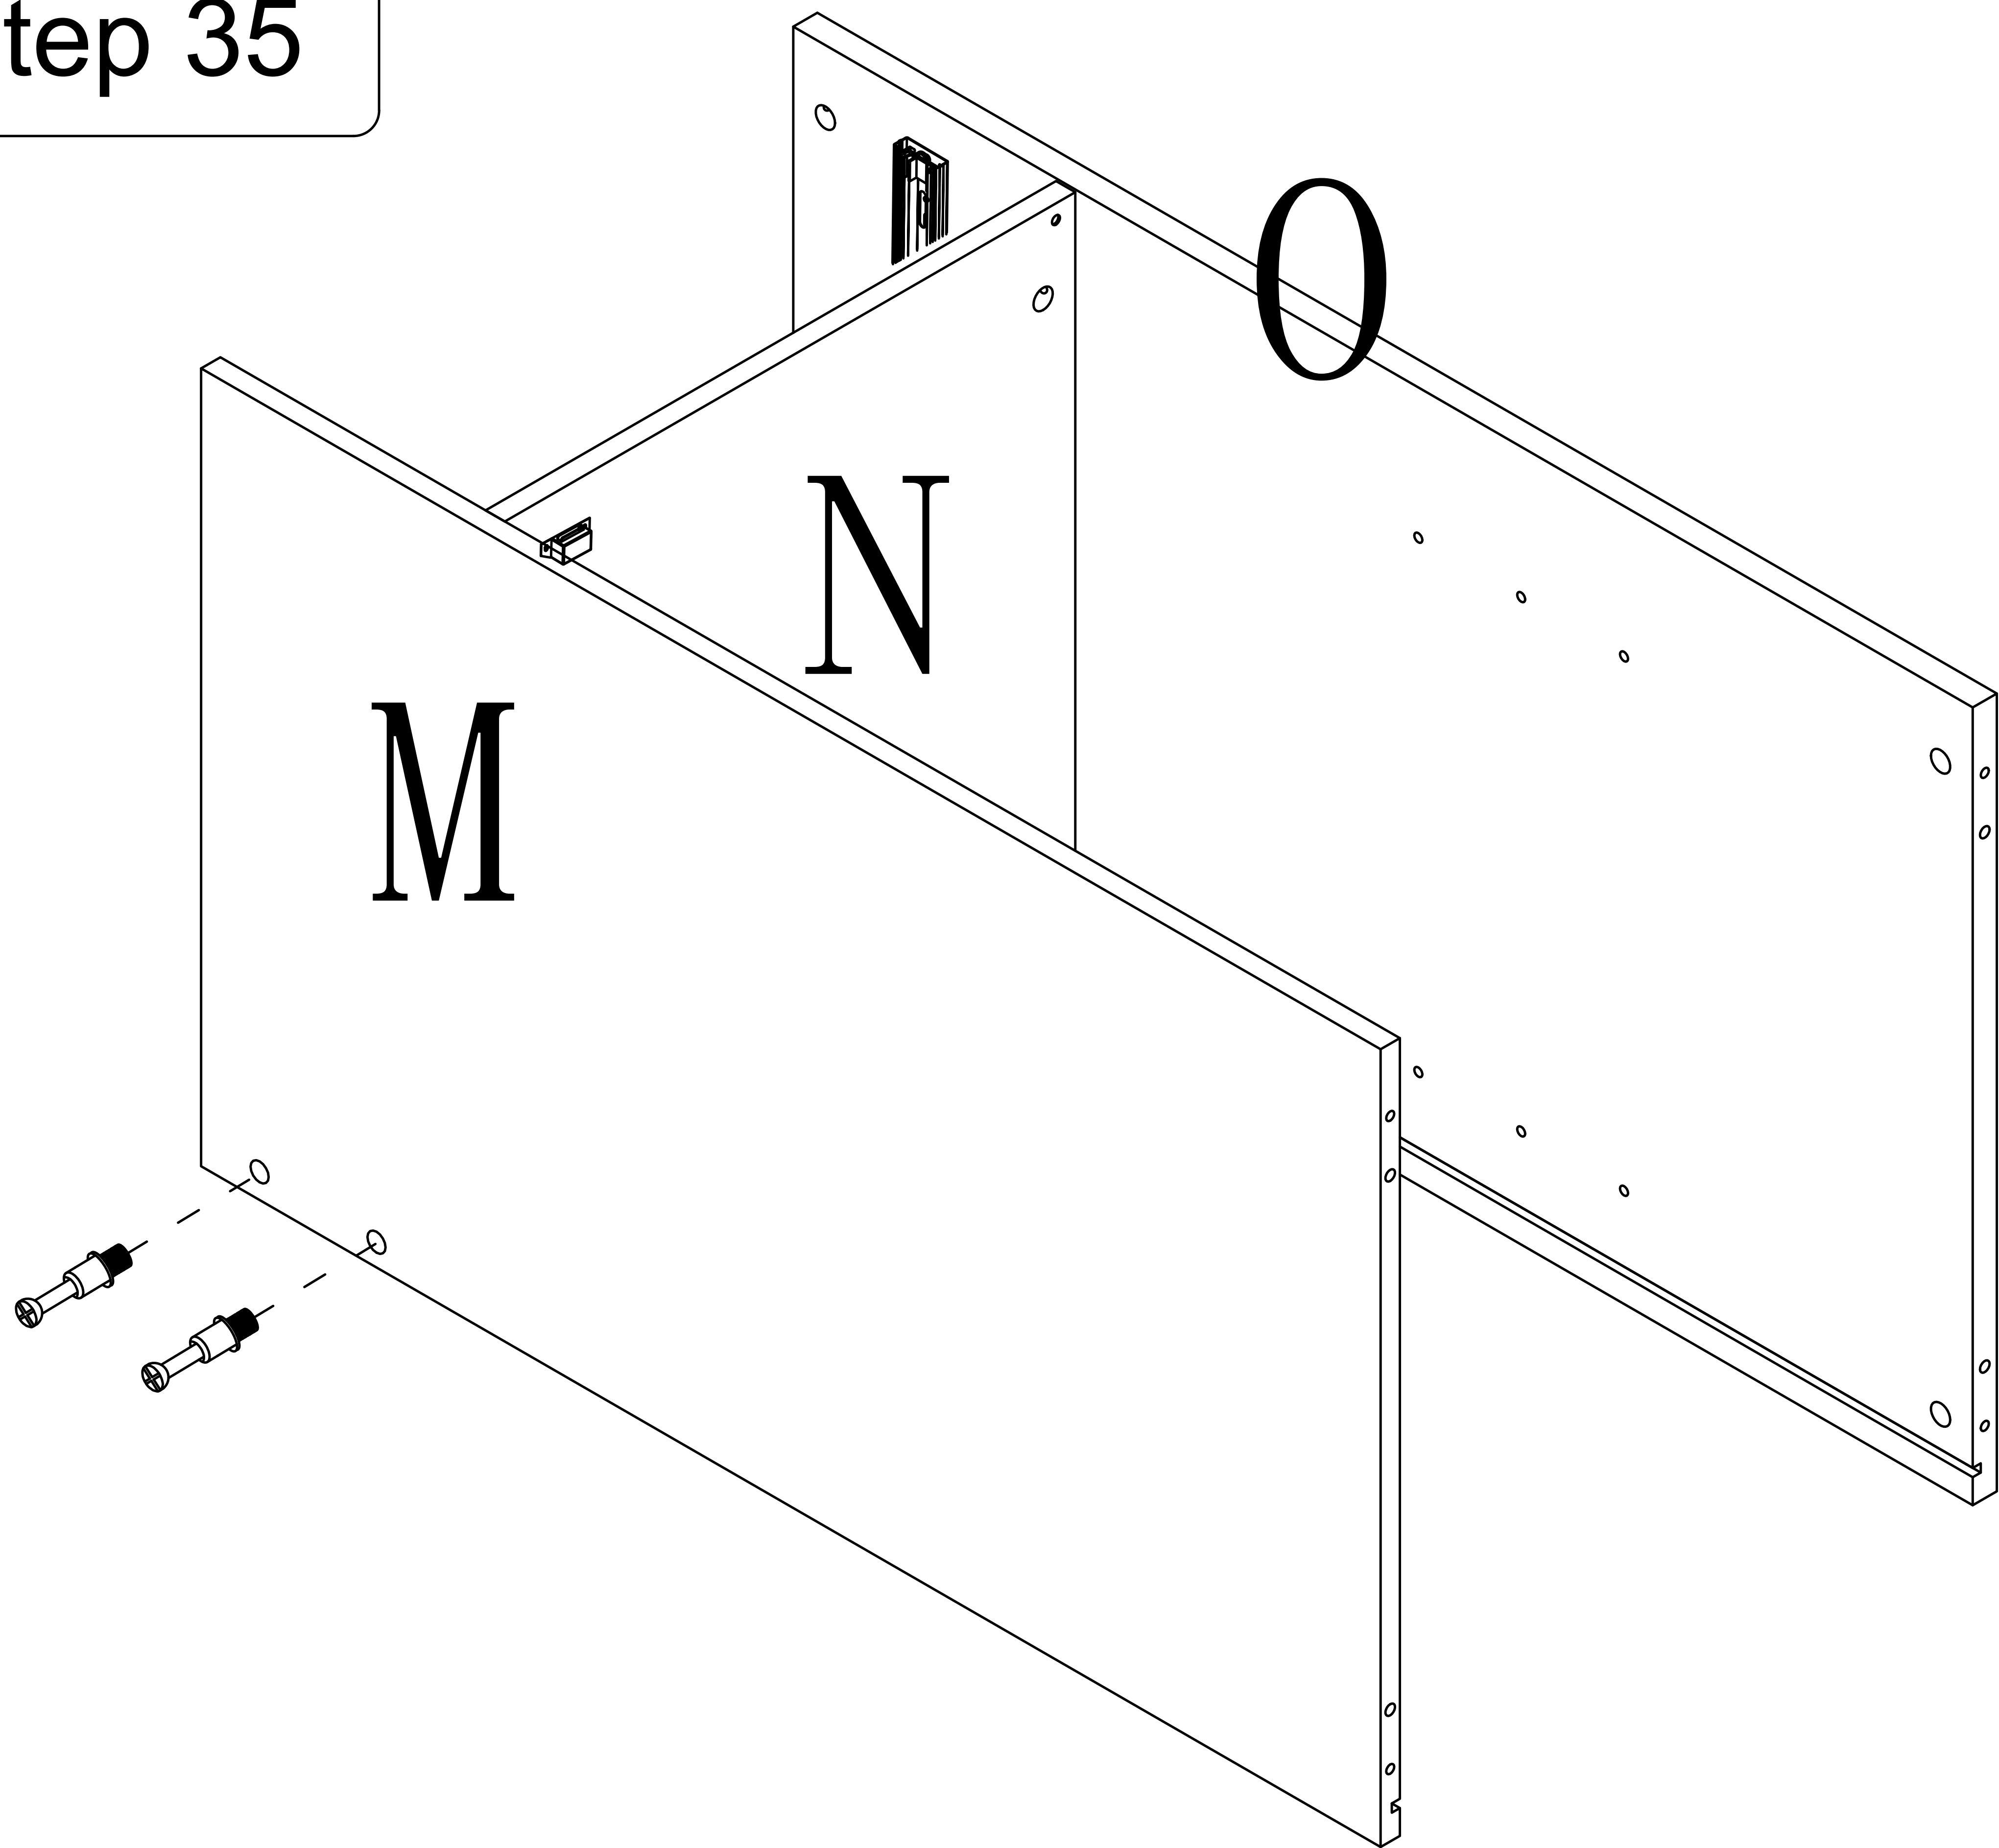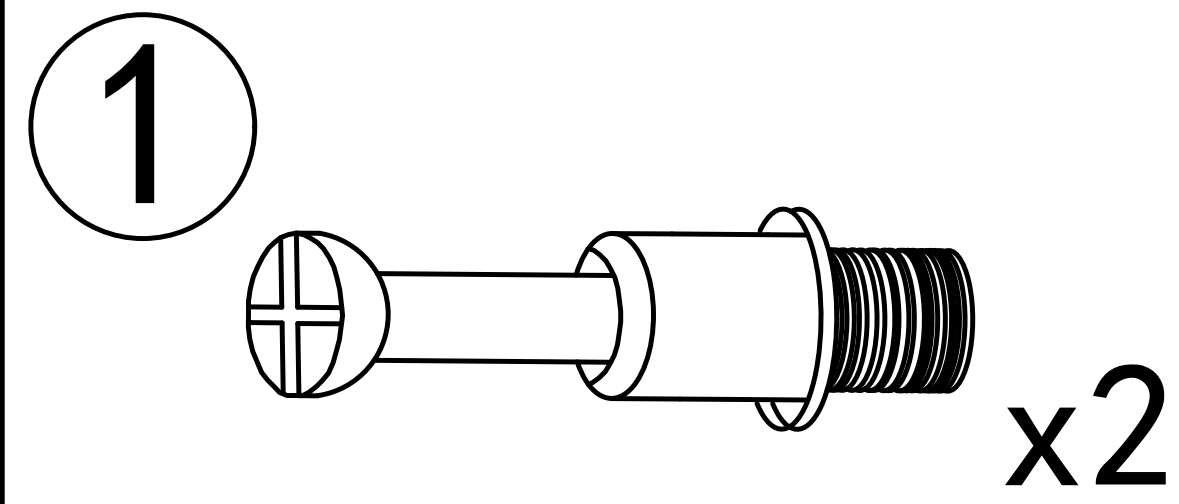


Step 36

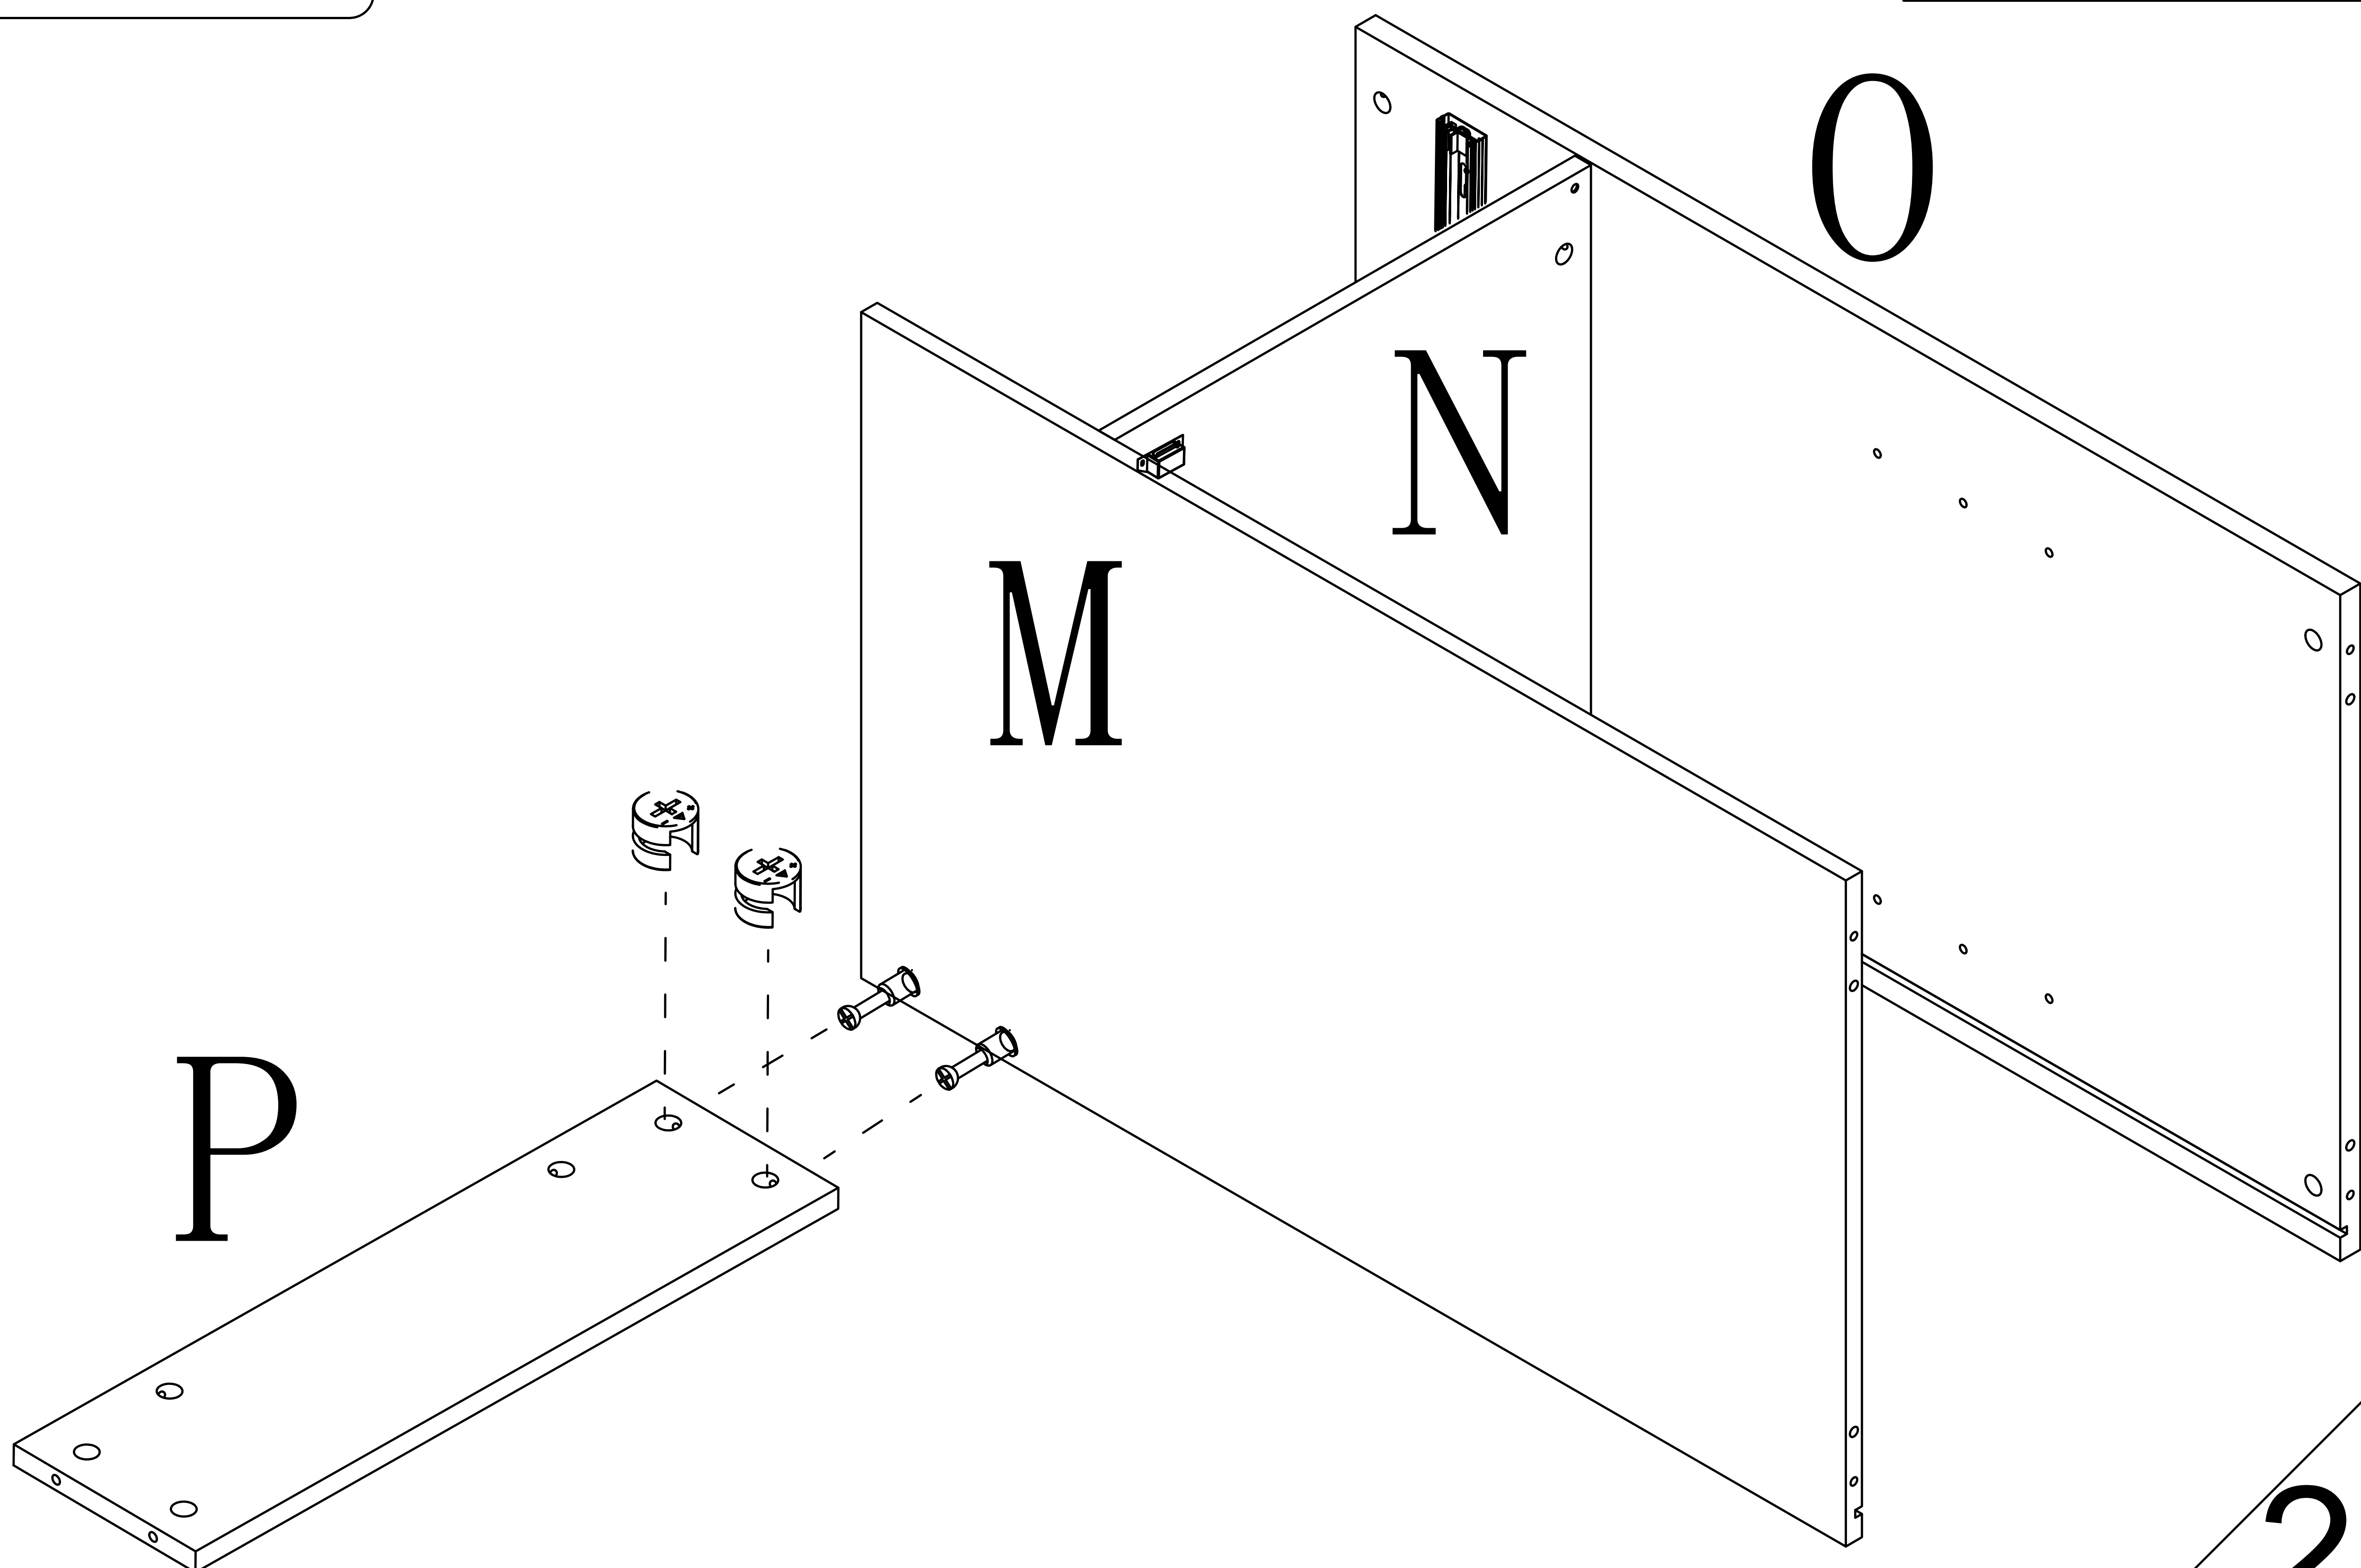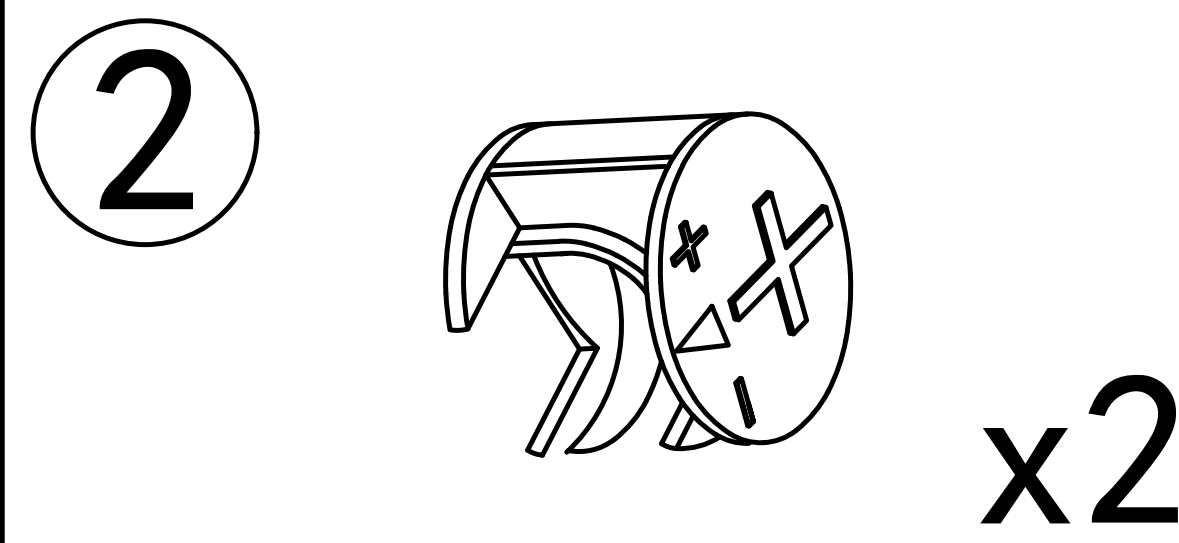


Step 37

2

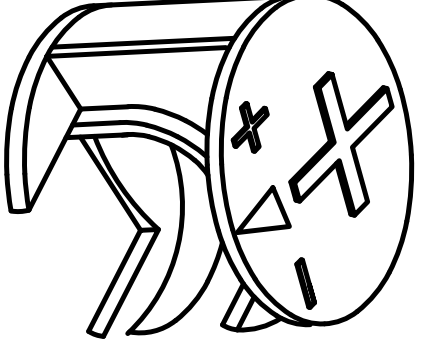


x2

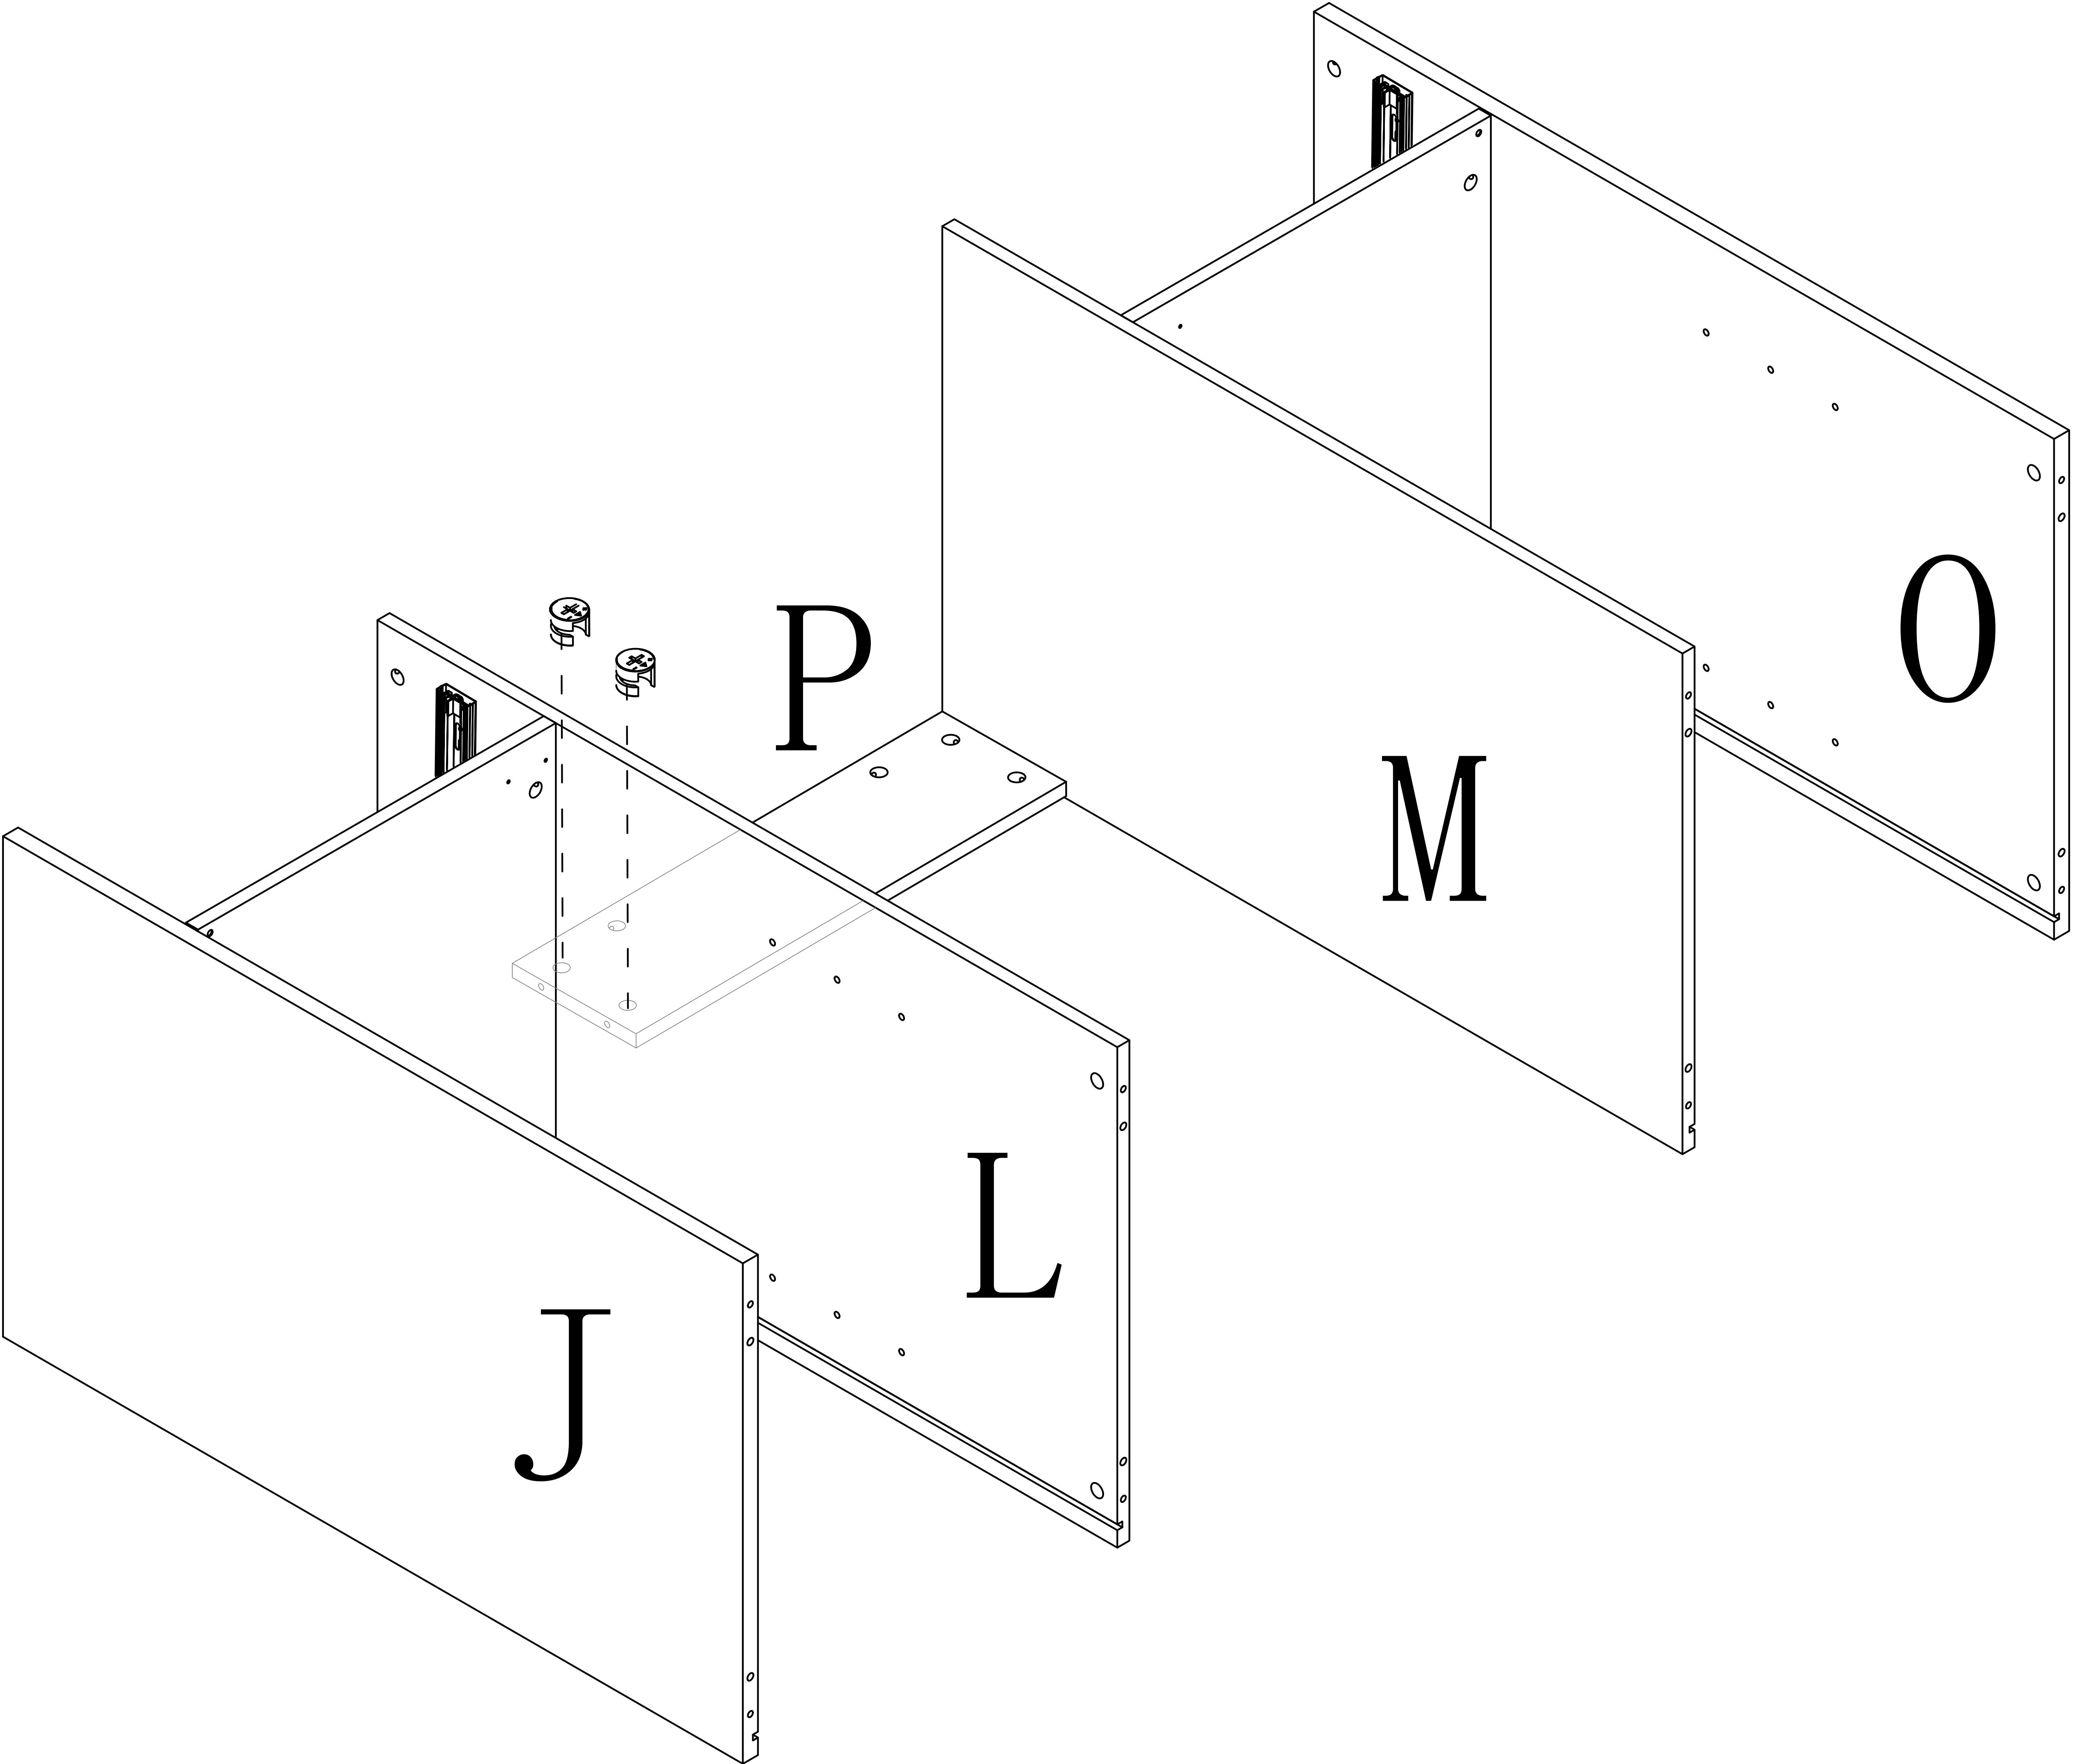


Step 38

3

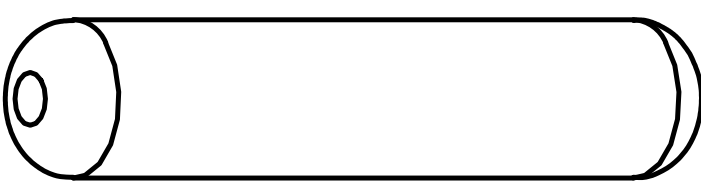


x8

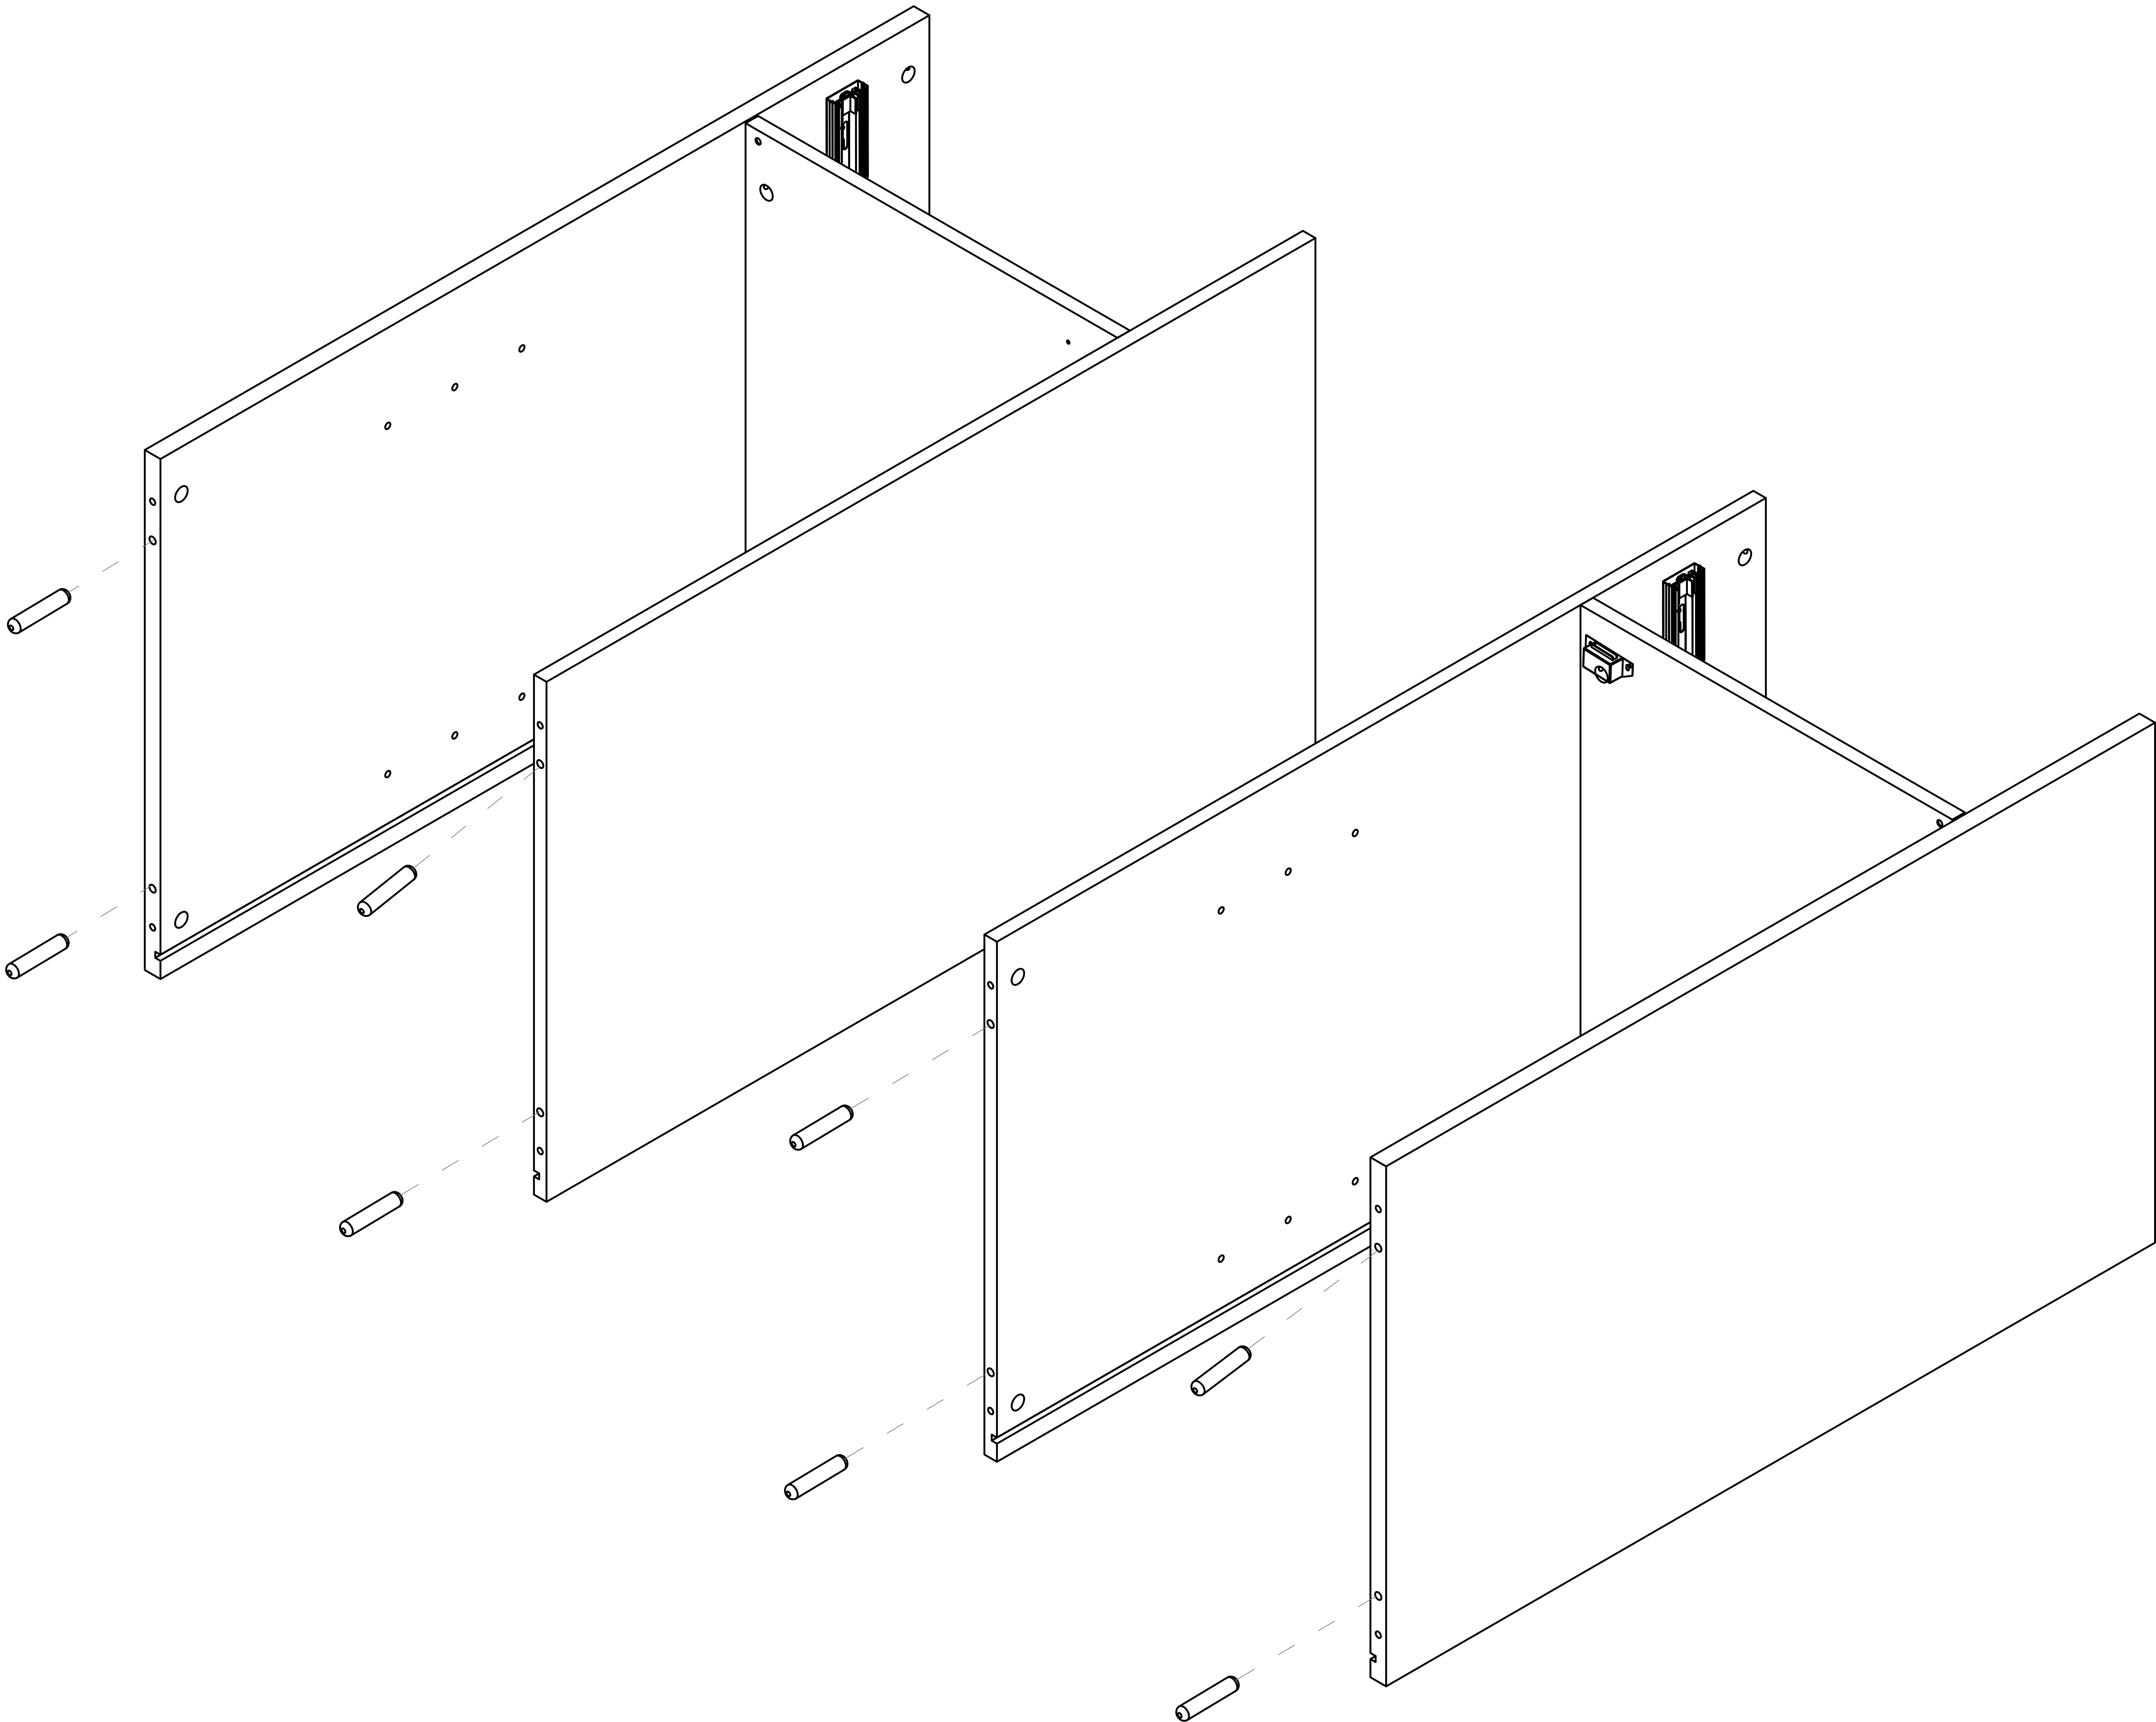


Step 39


2

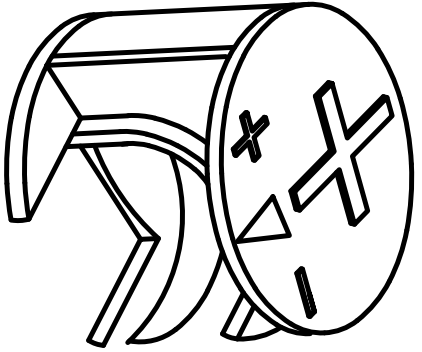

x8

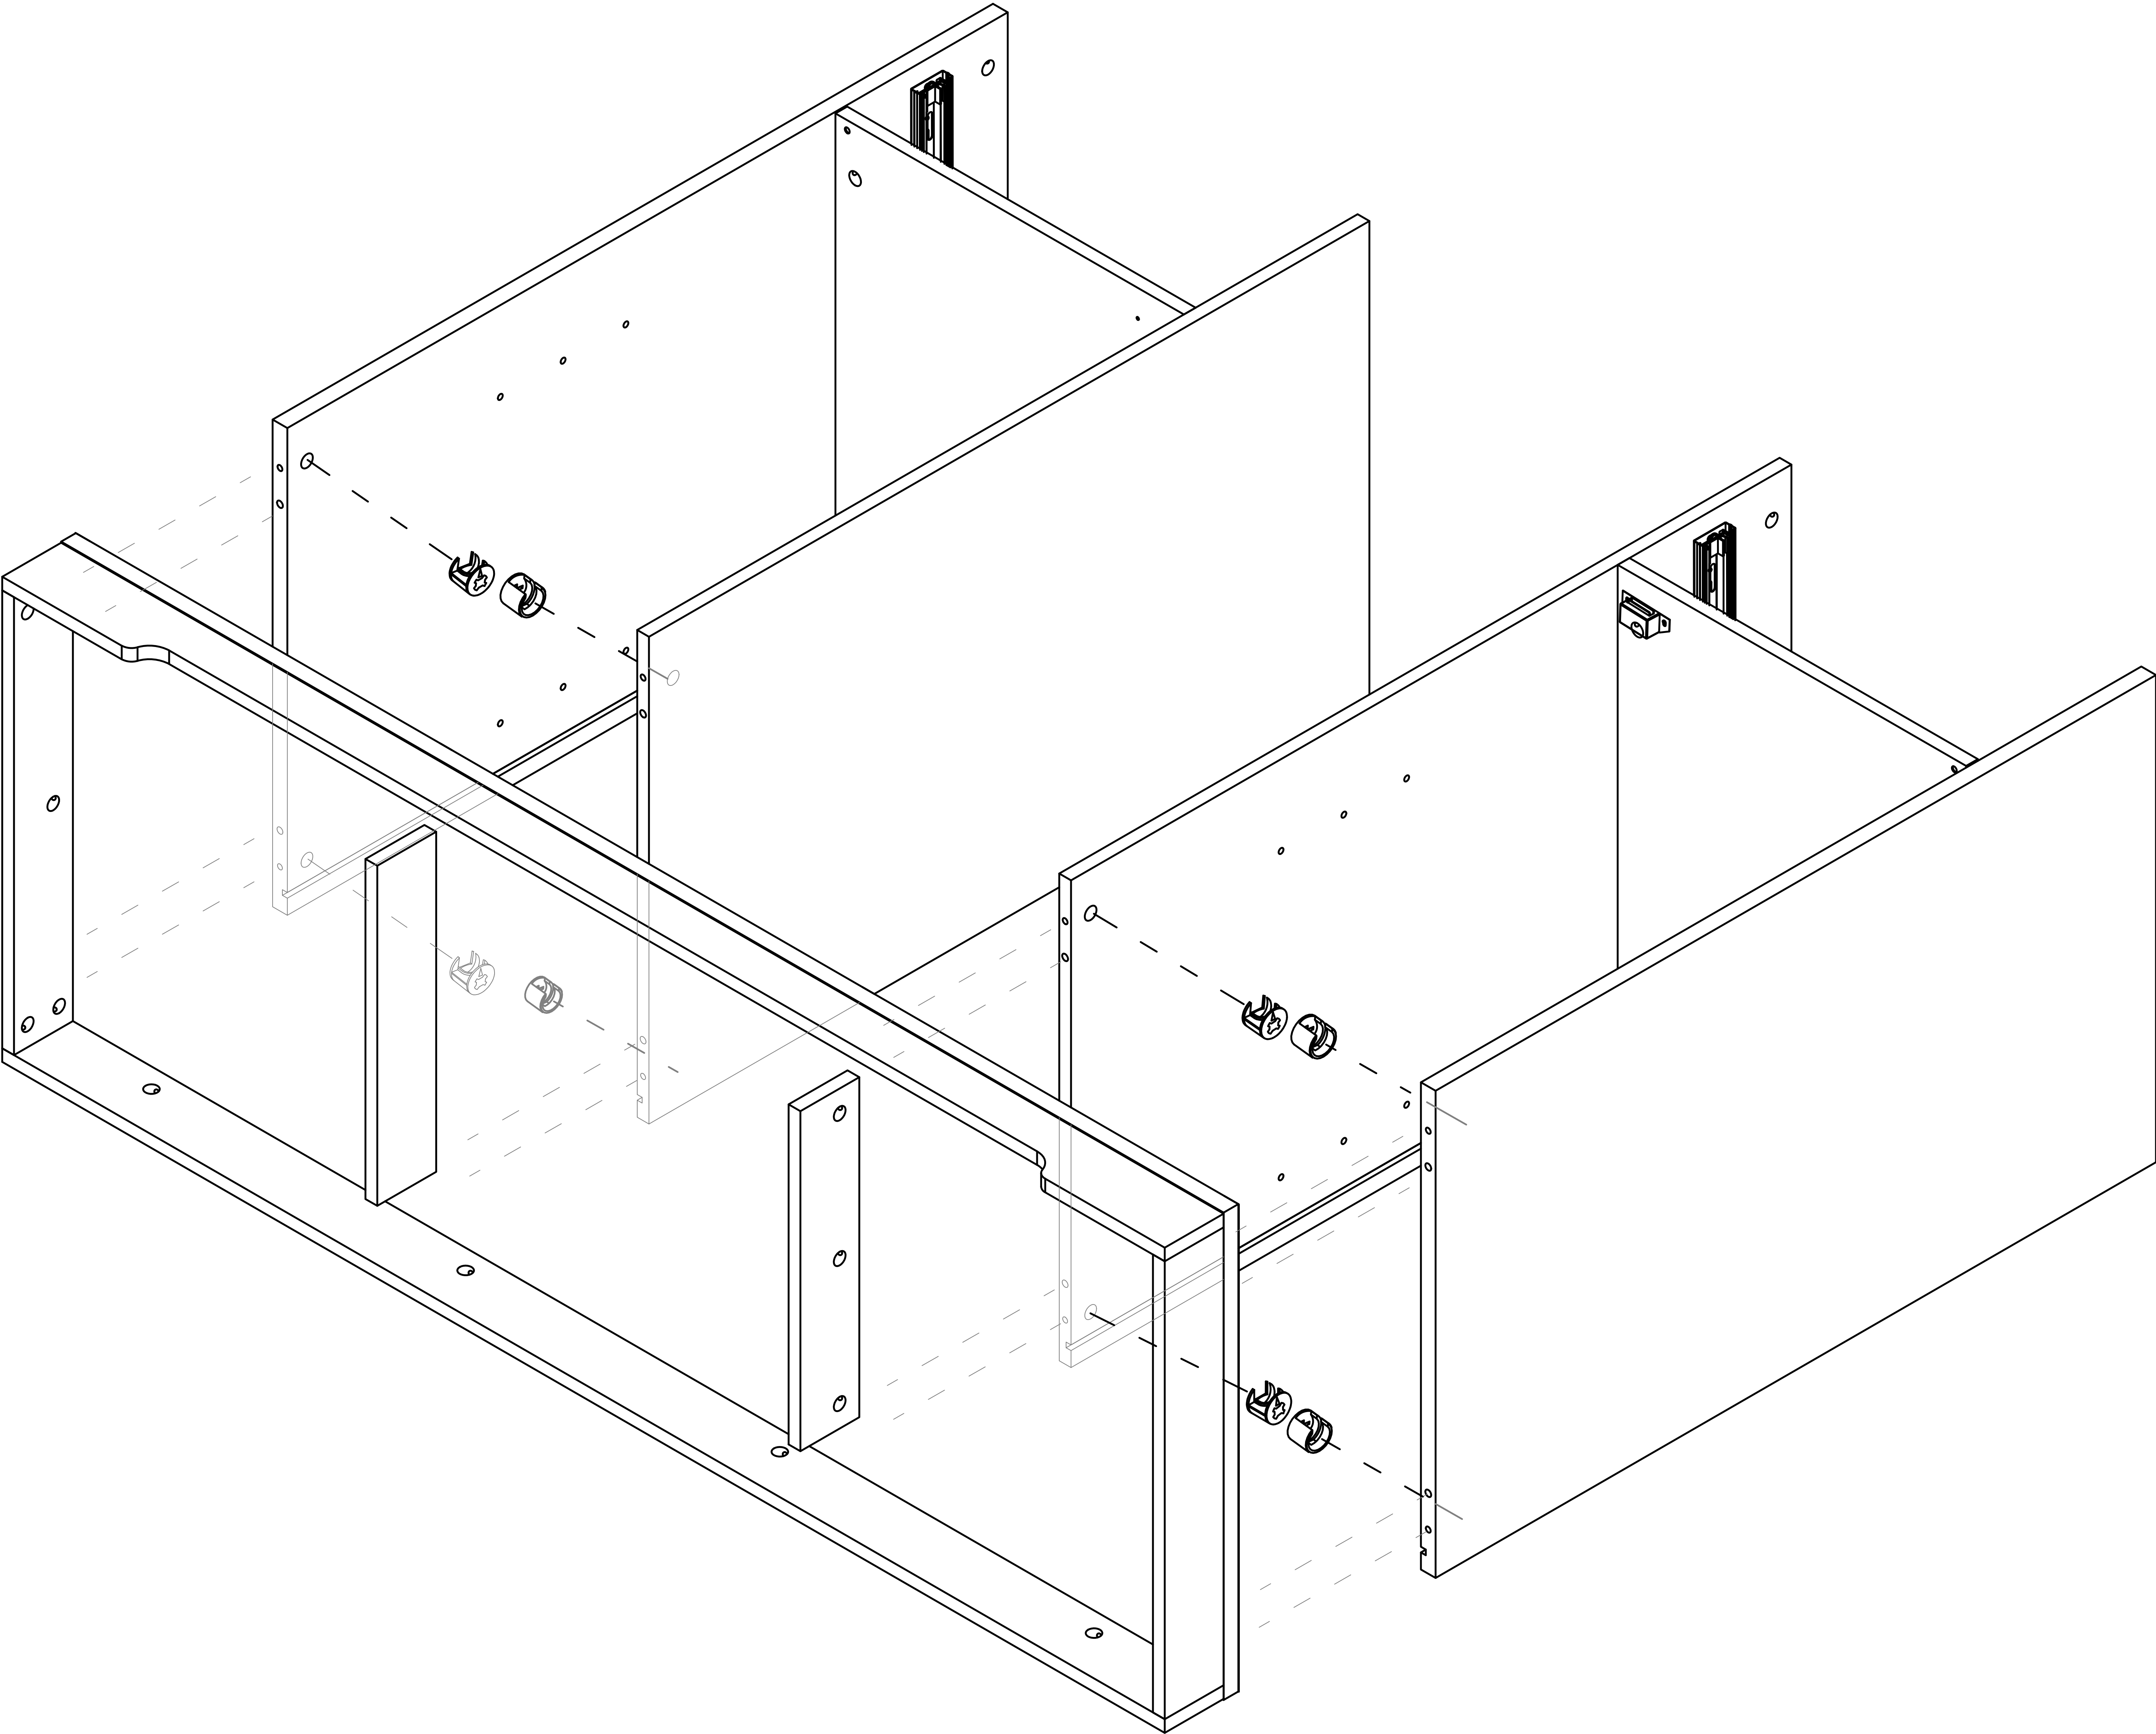

Step 40

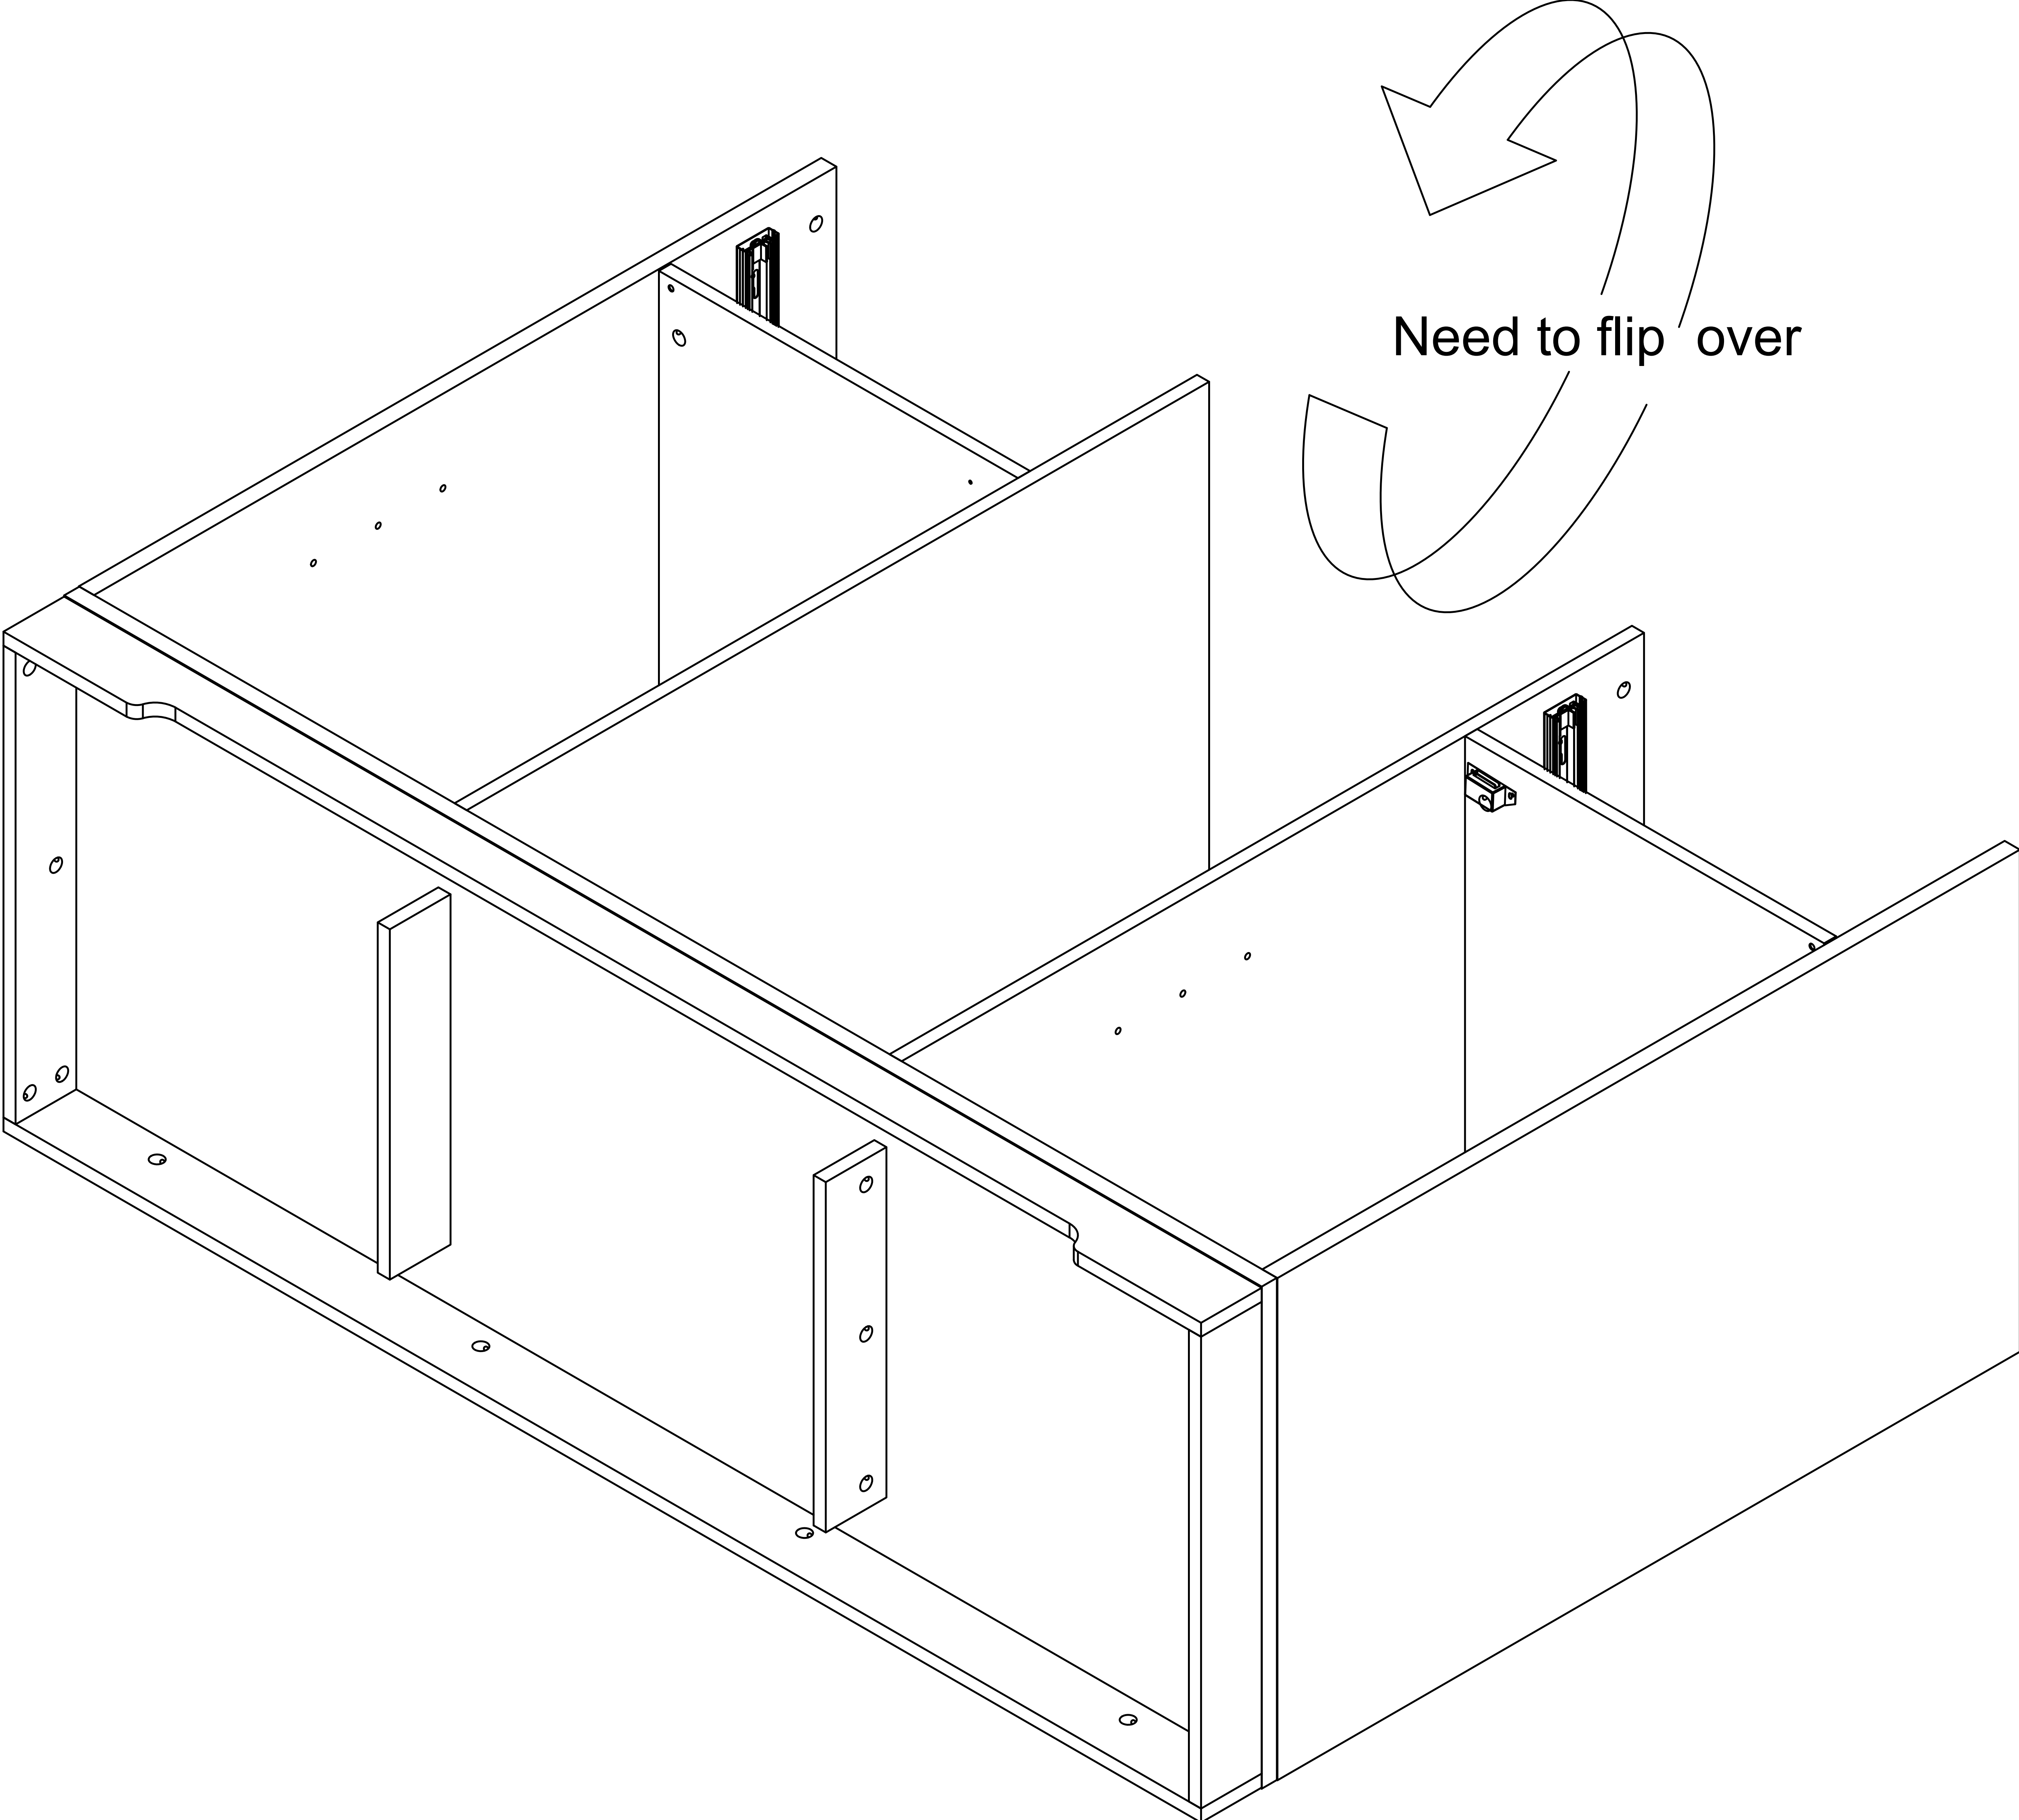


Step 41


3





x8

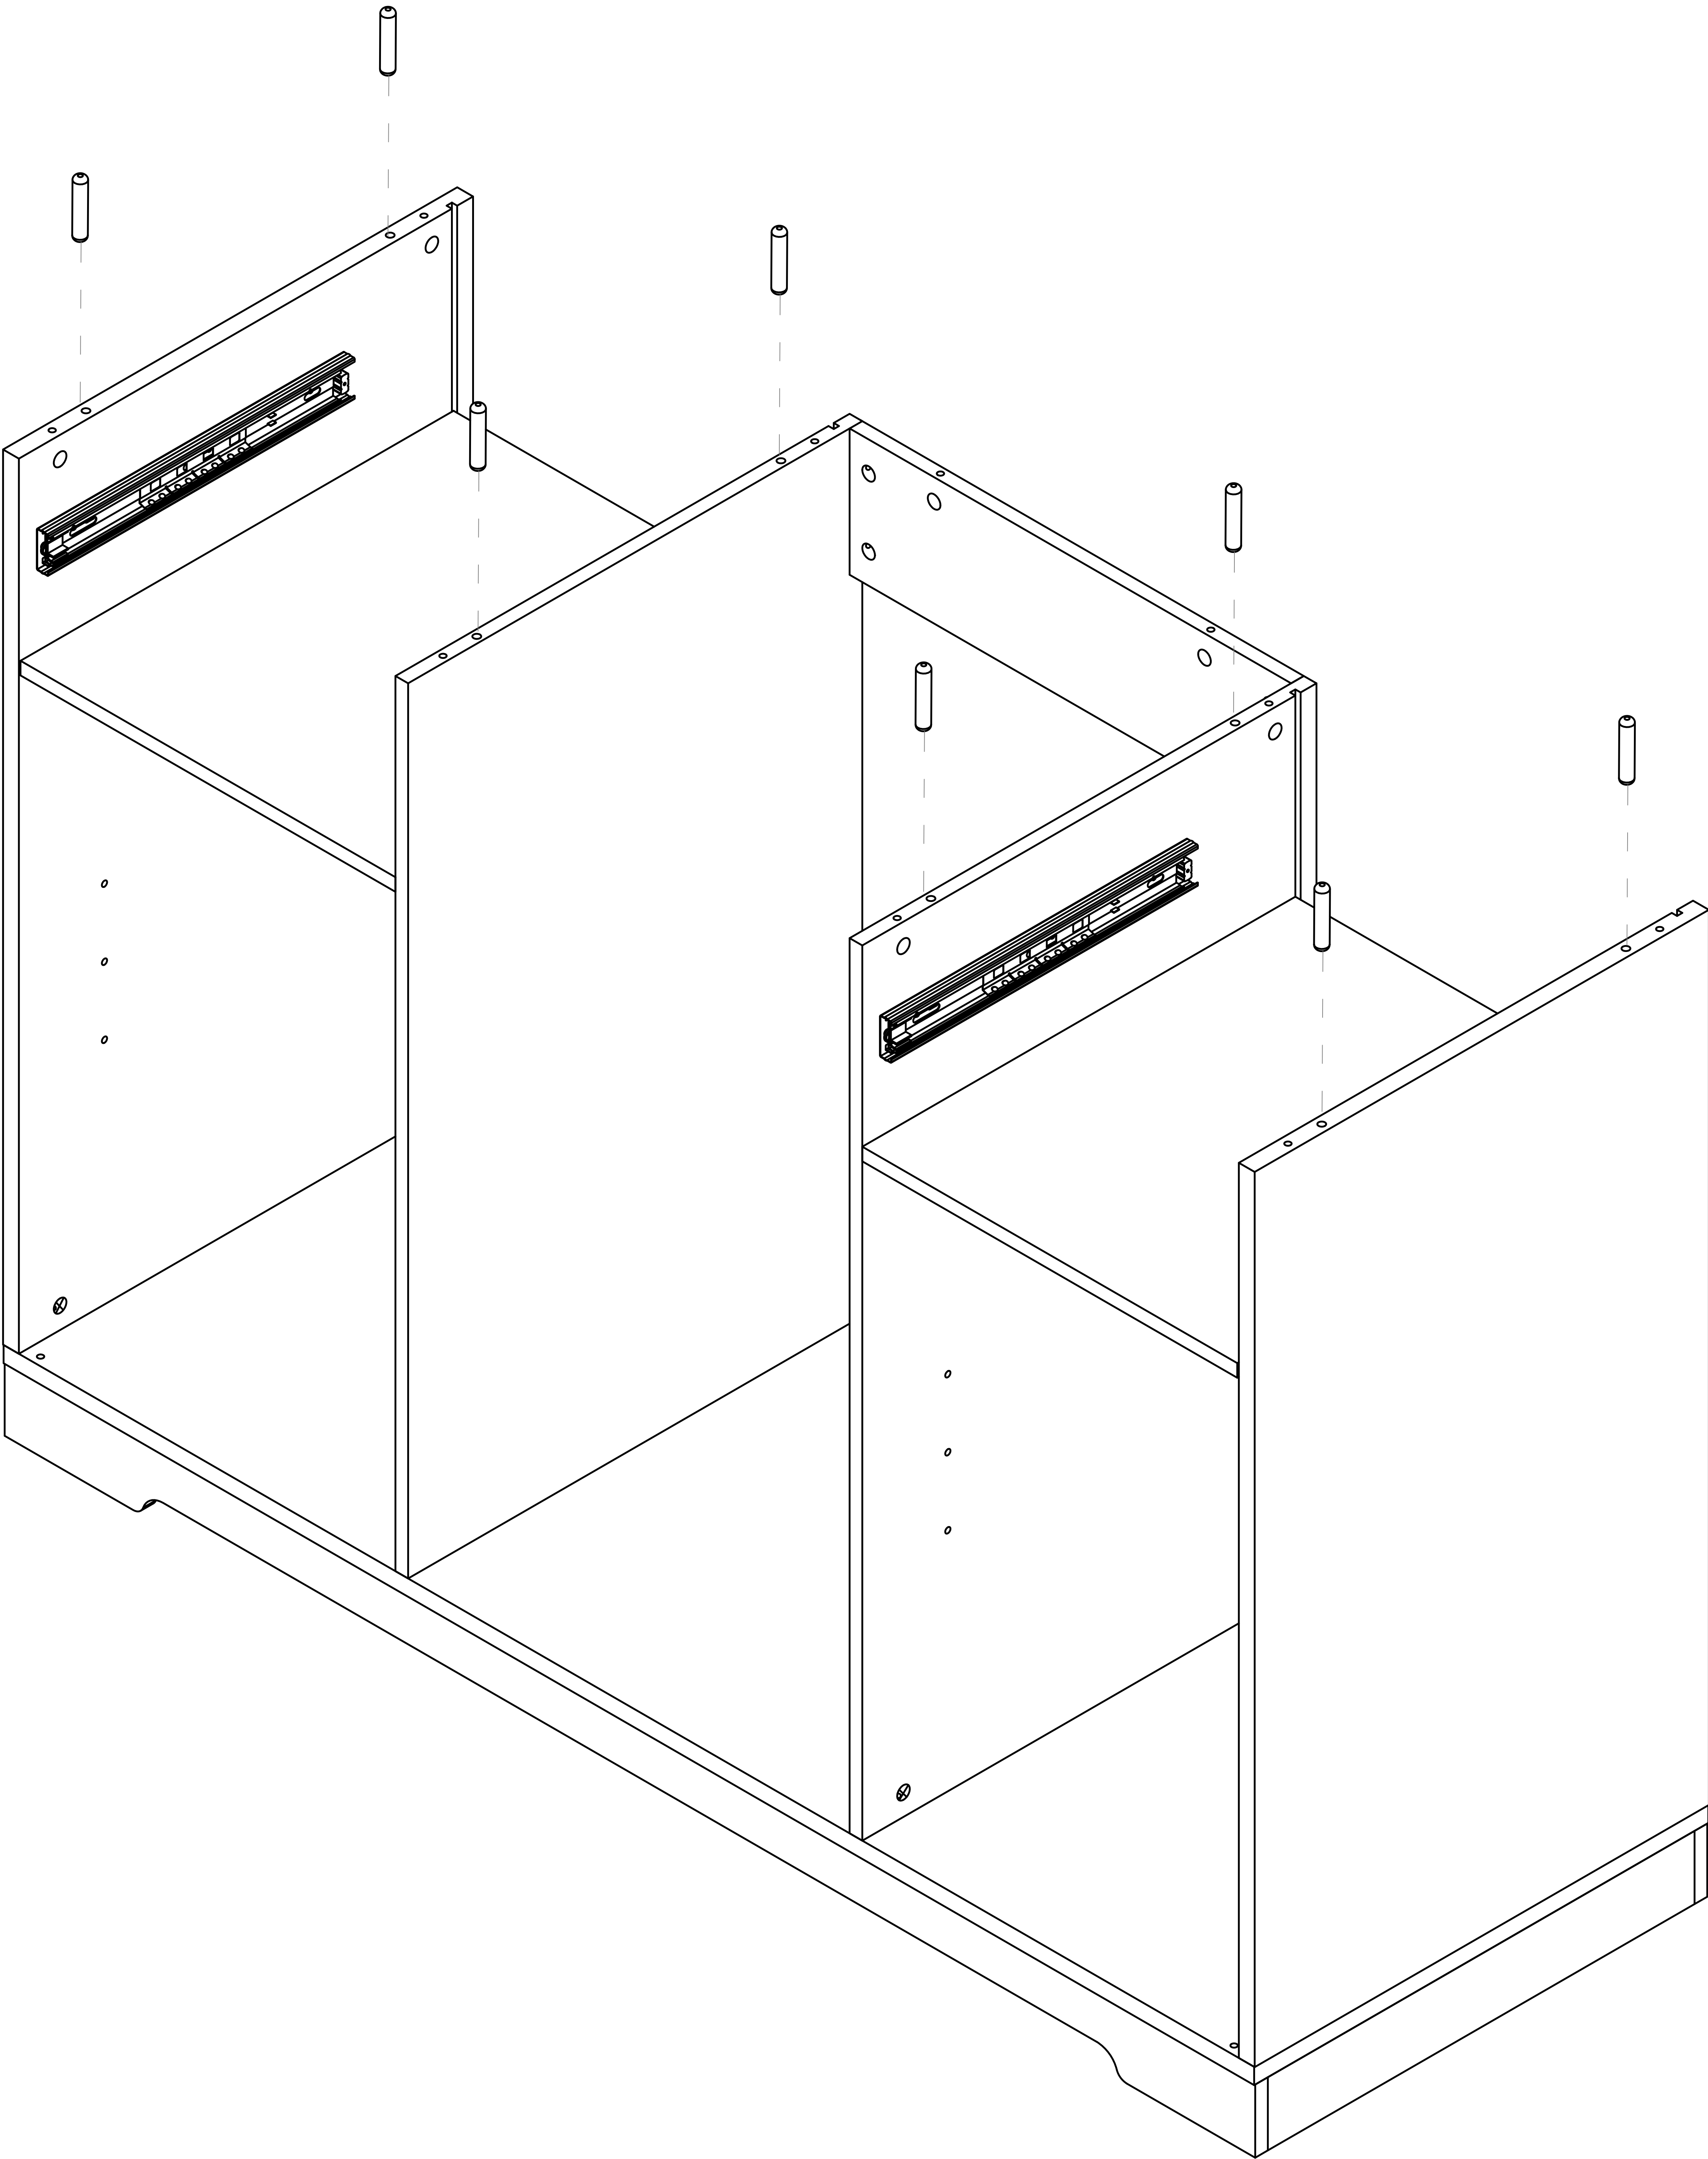

Step 42

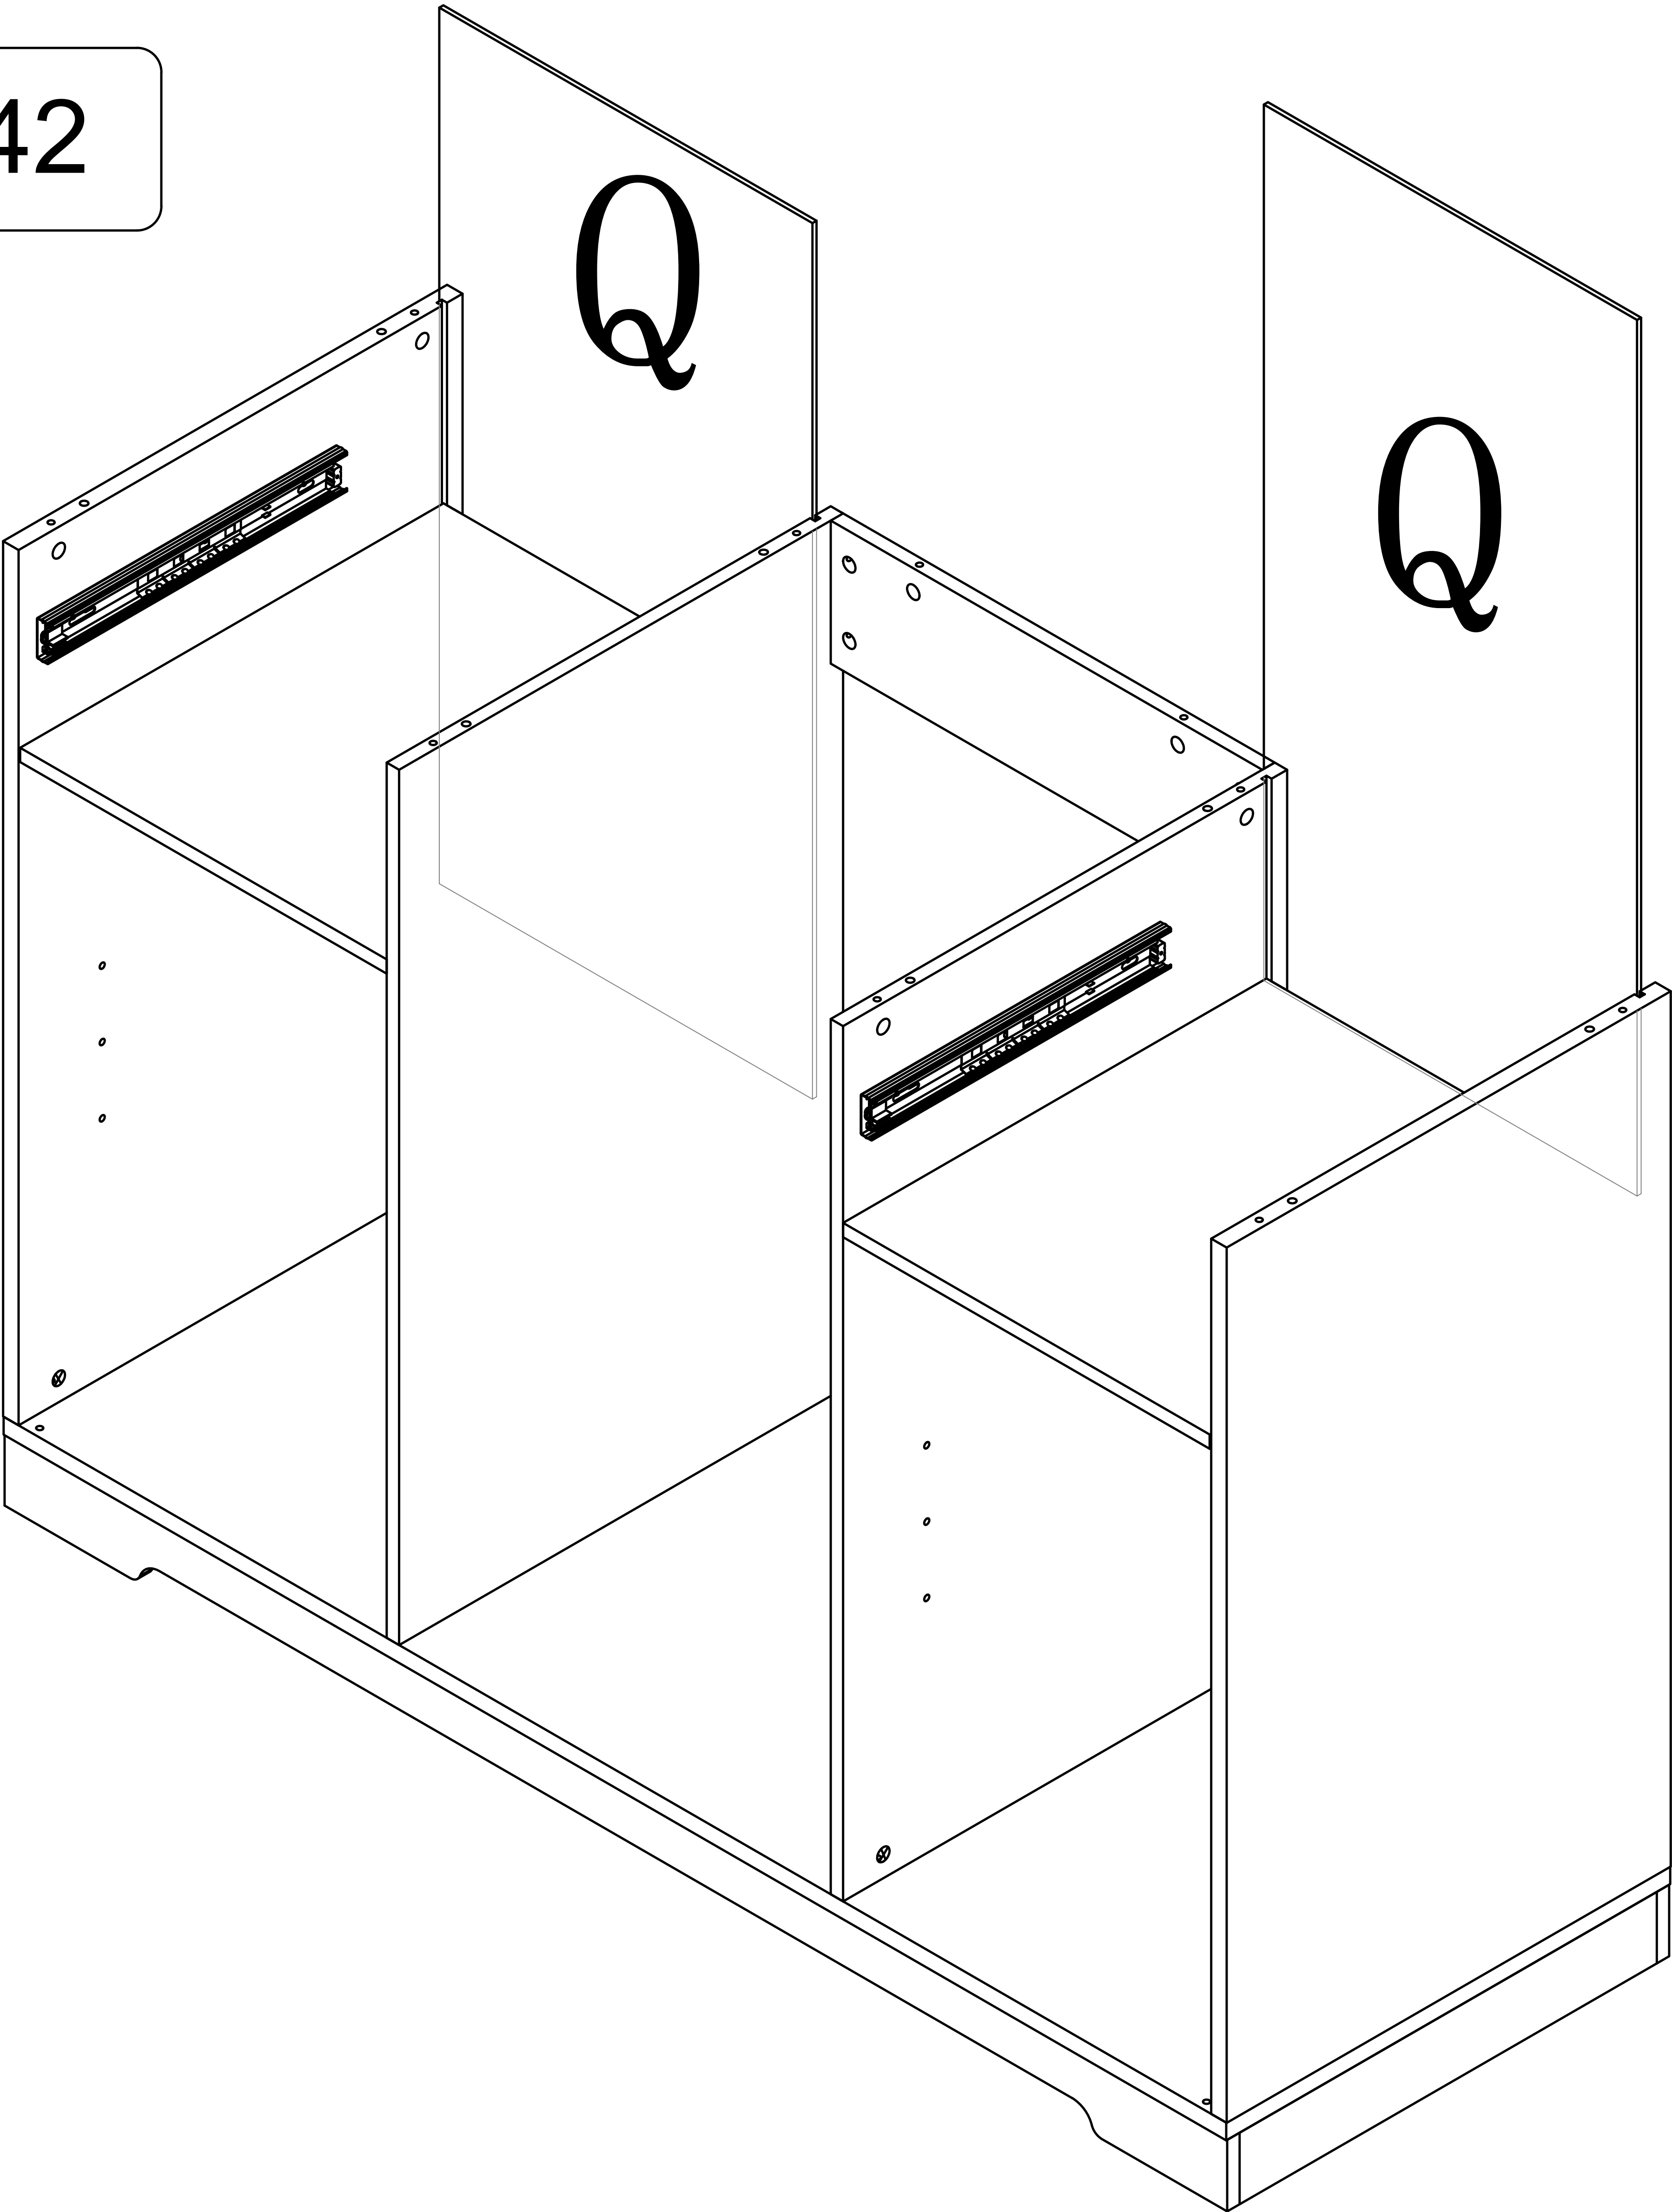


Step 43

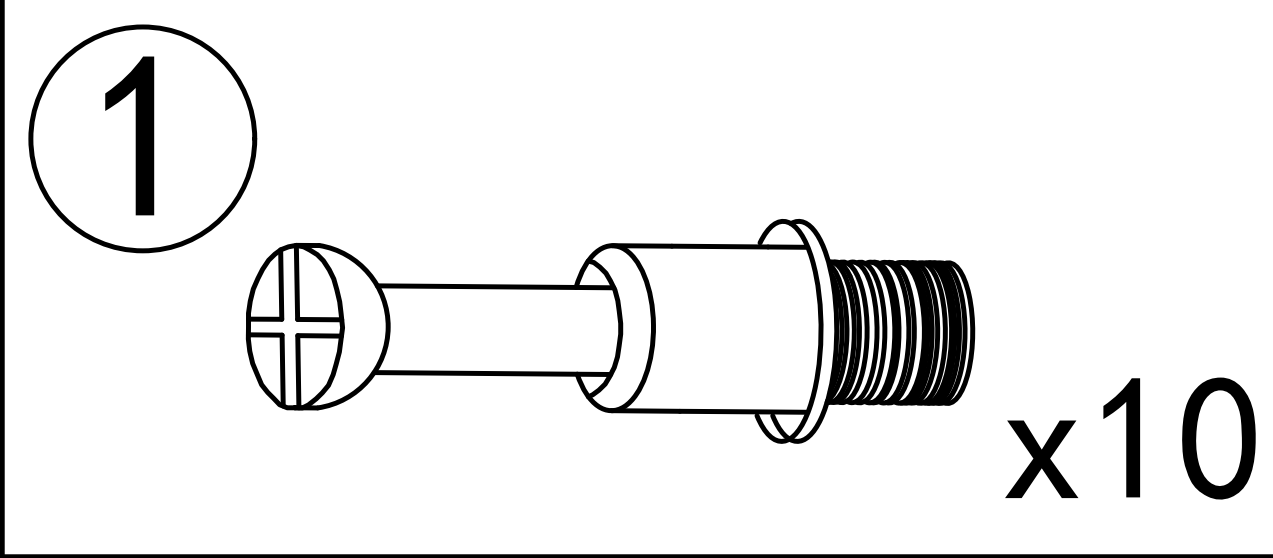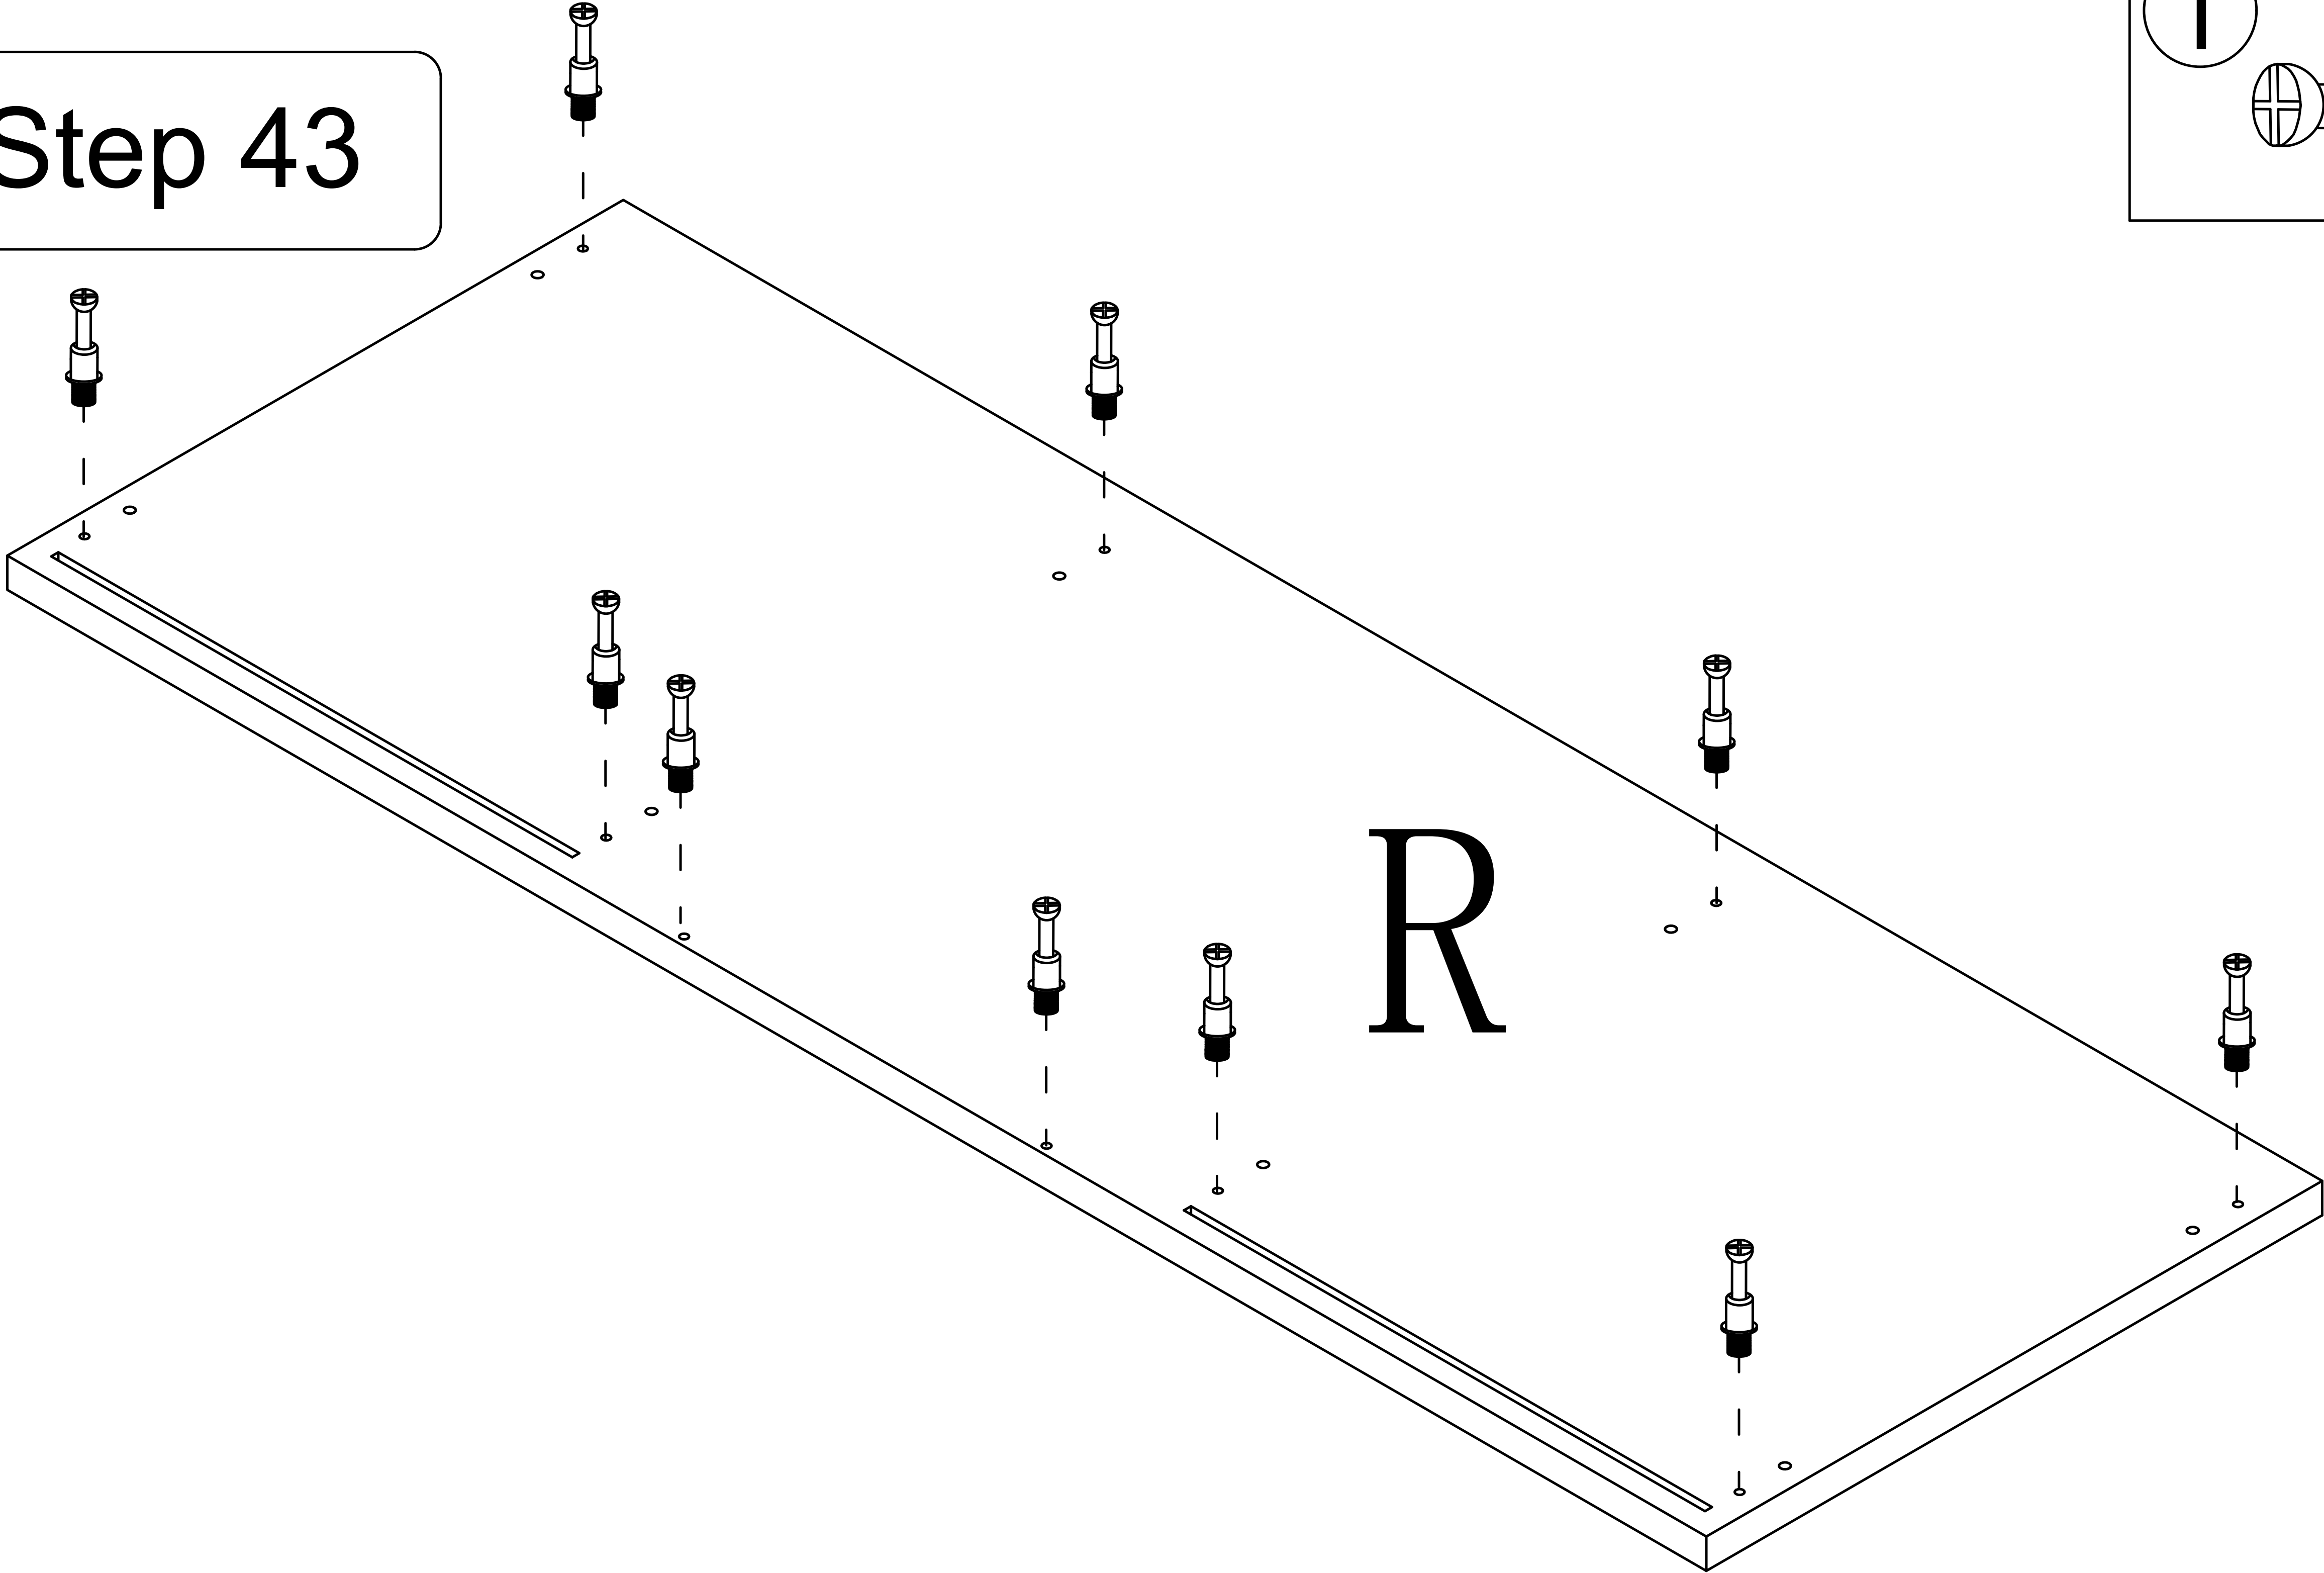


Step 44

2

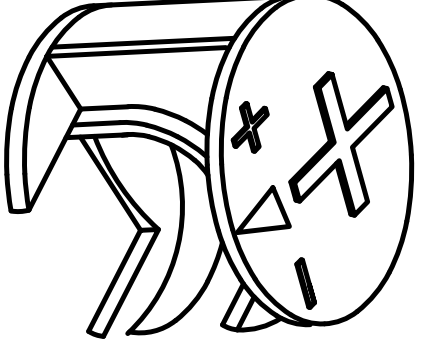


x10


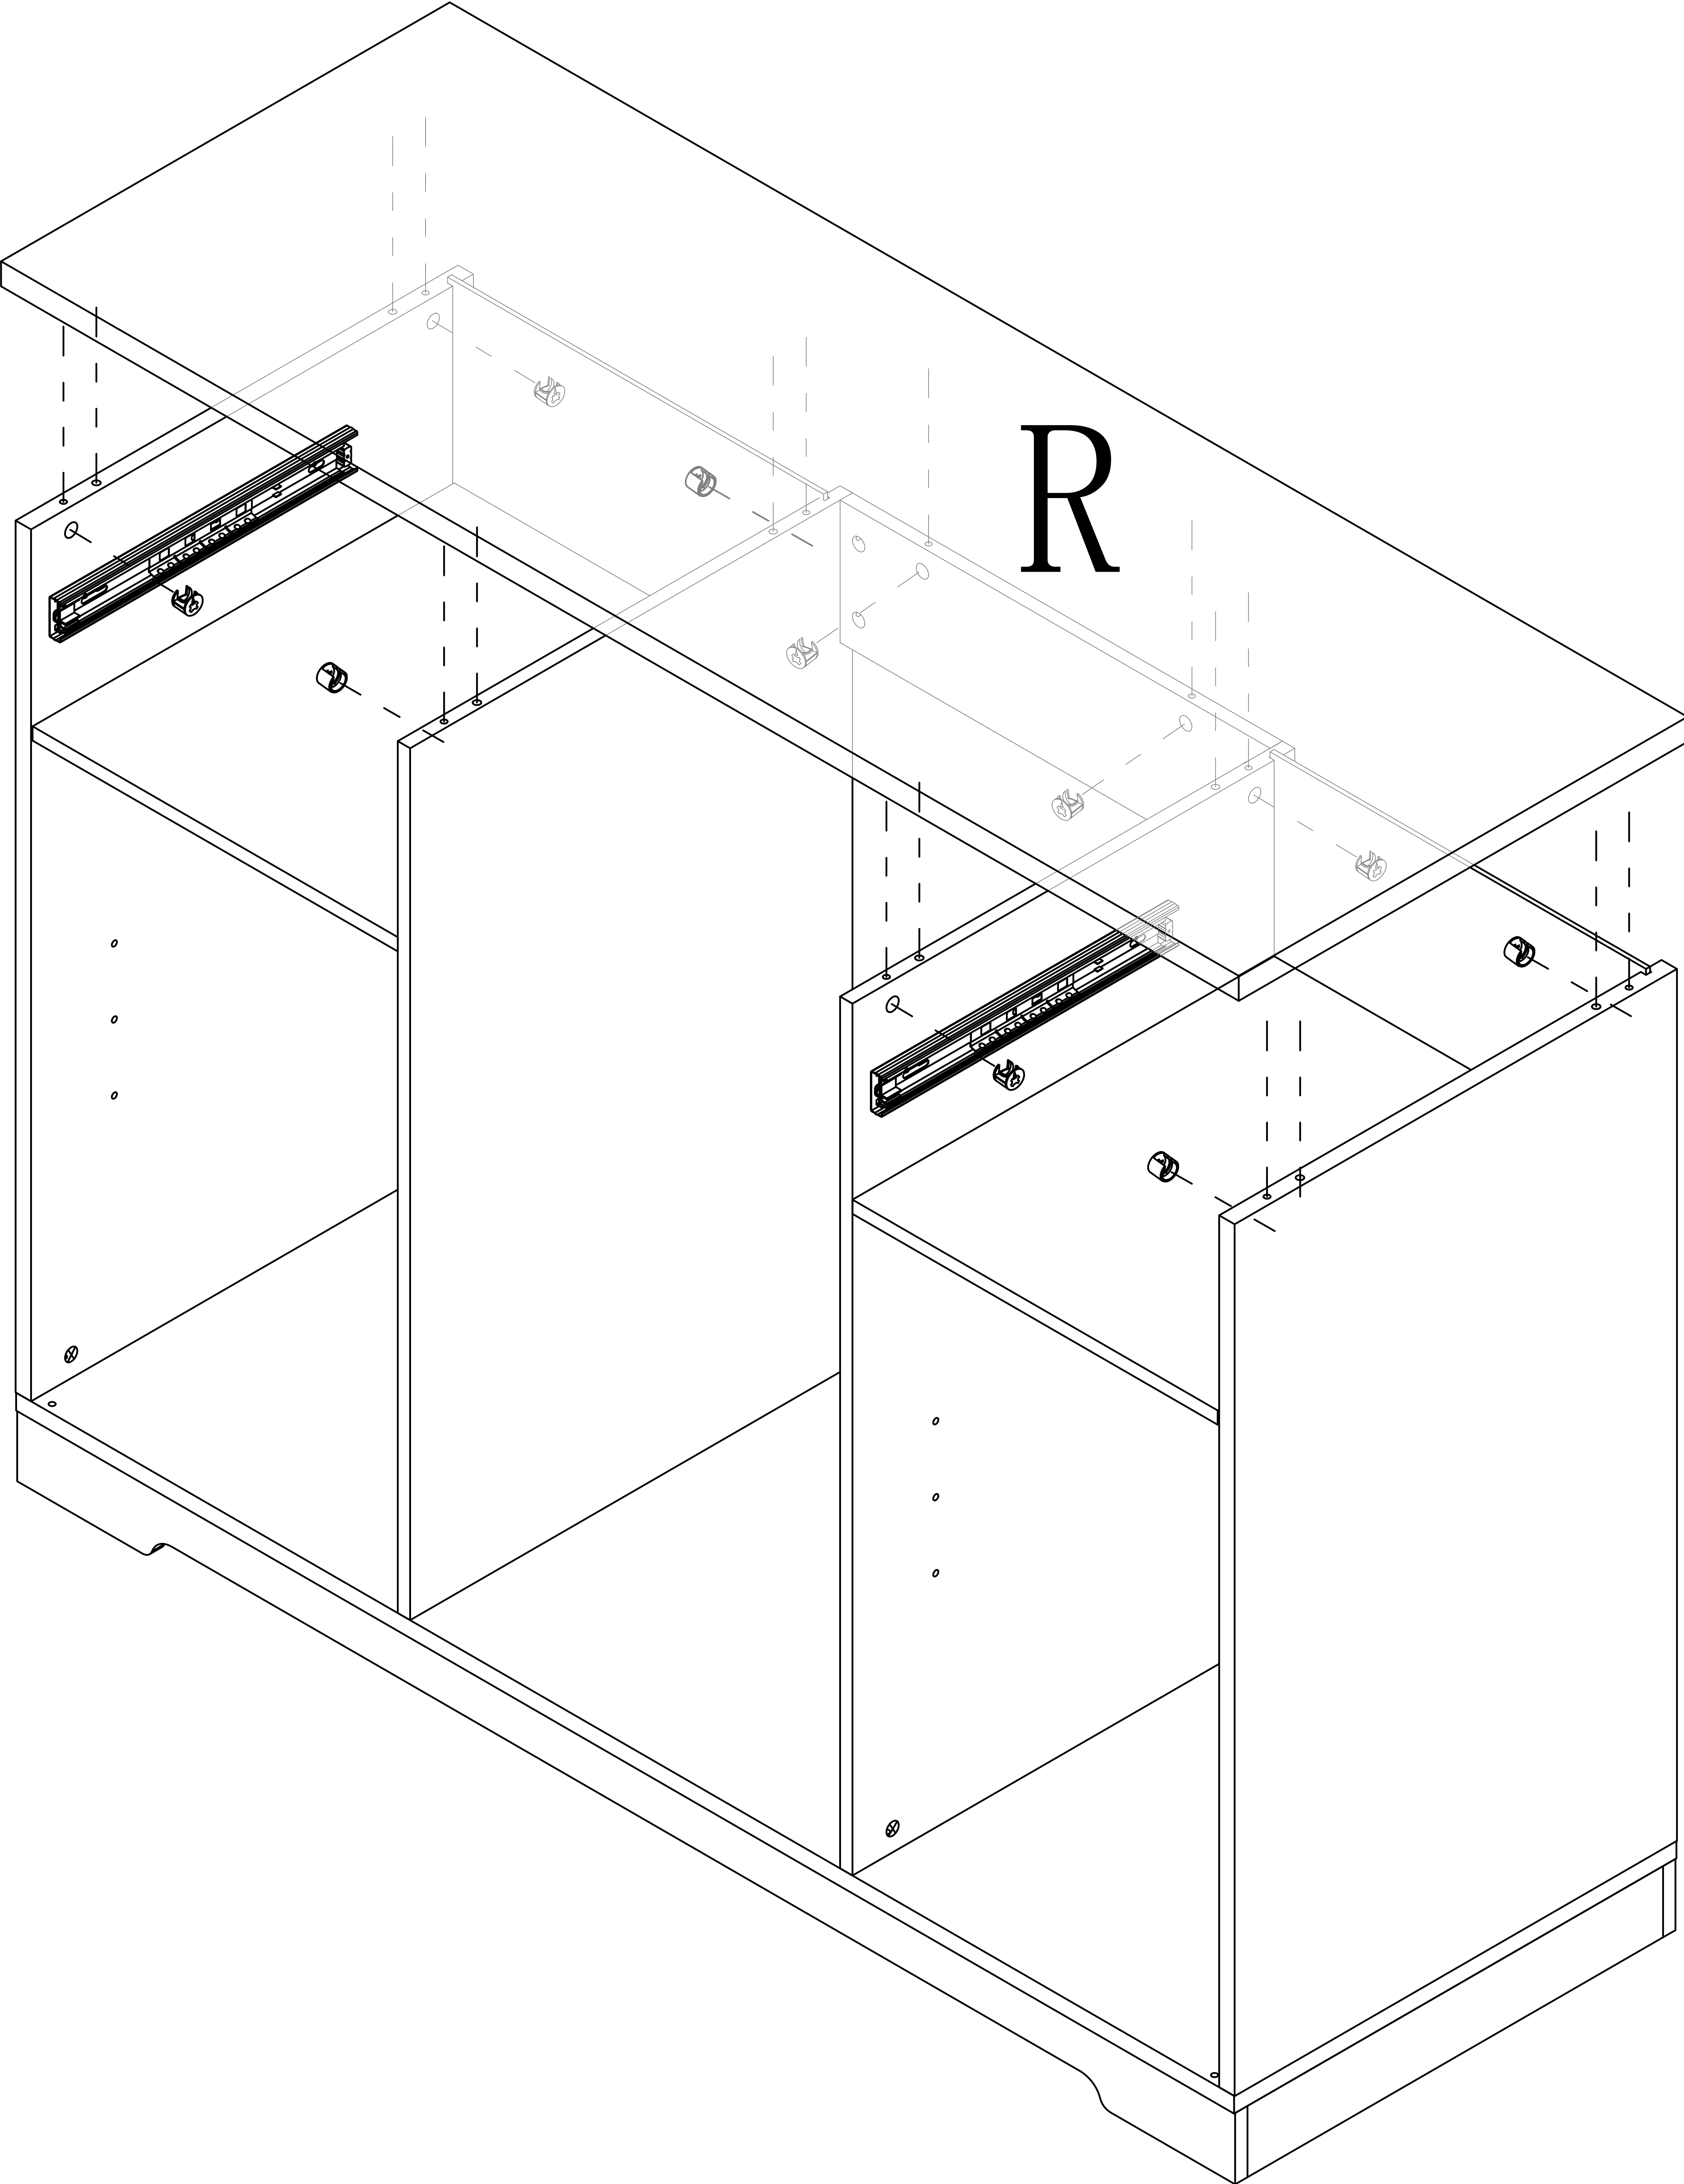


Step 45

7

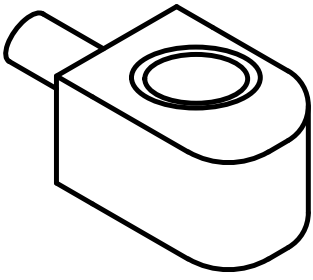


x8

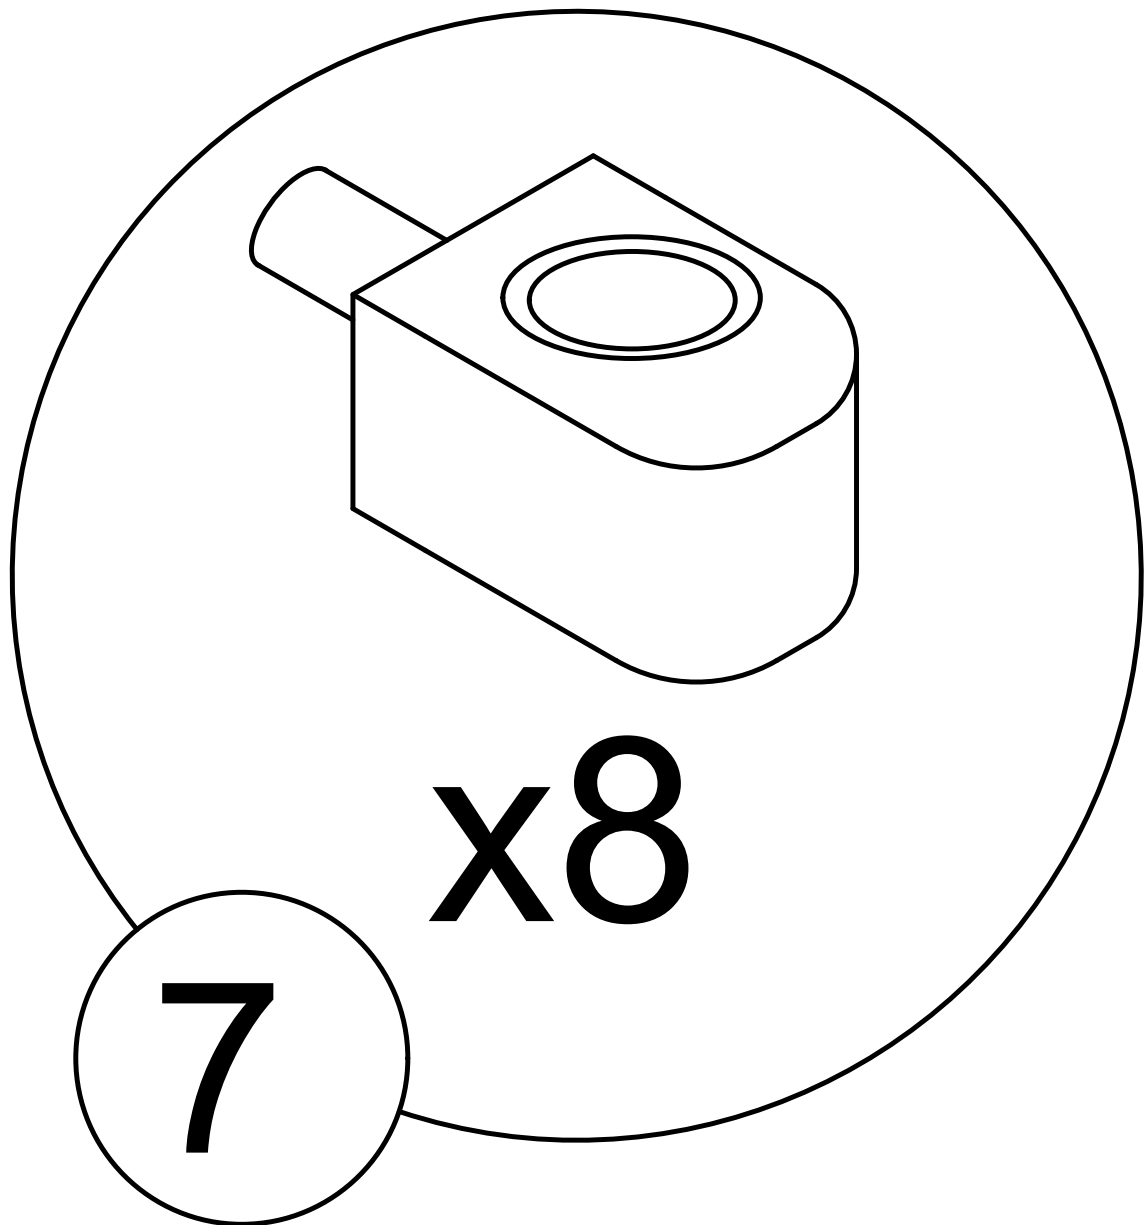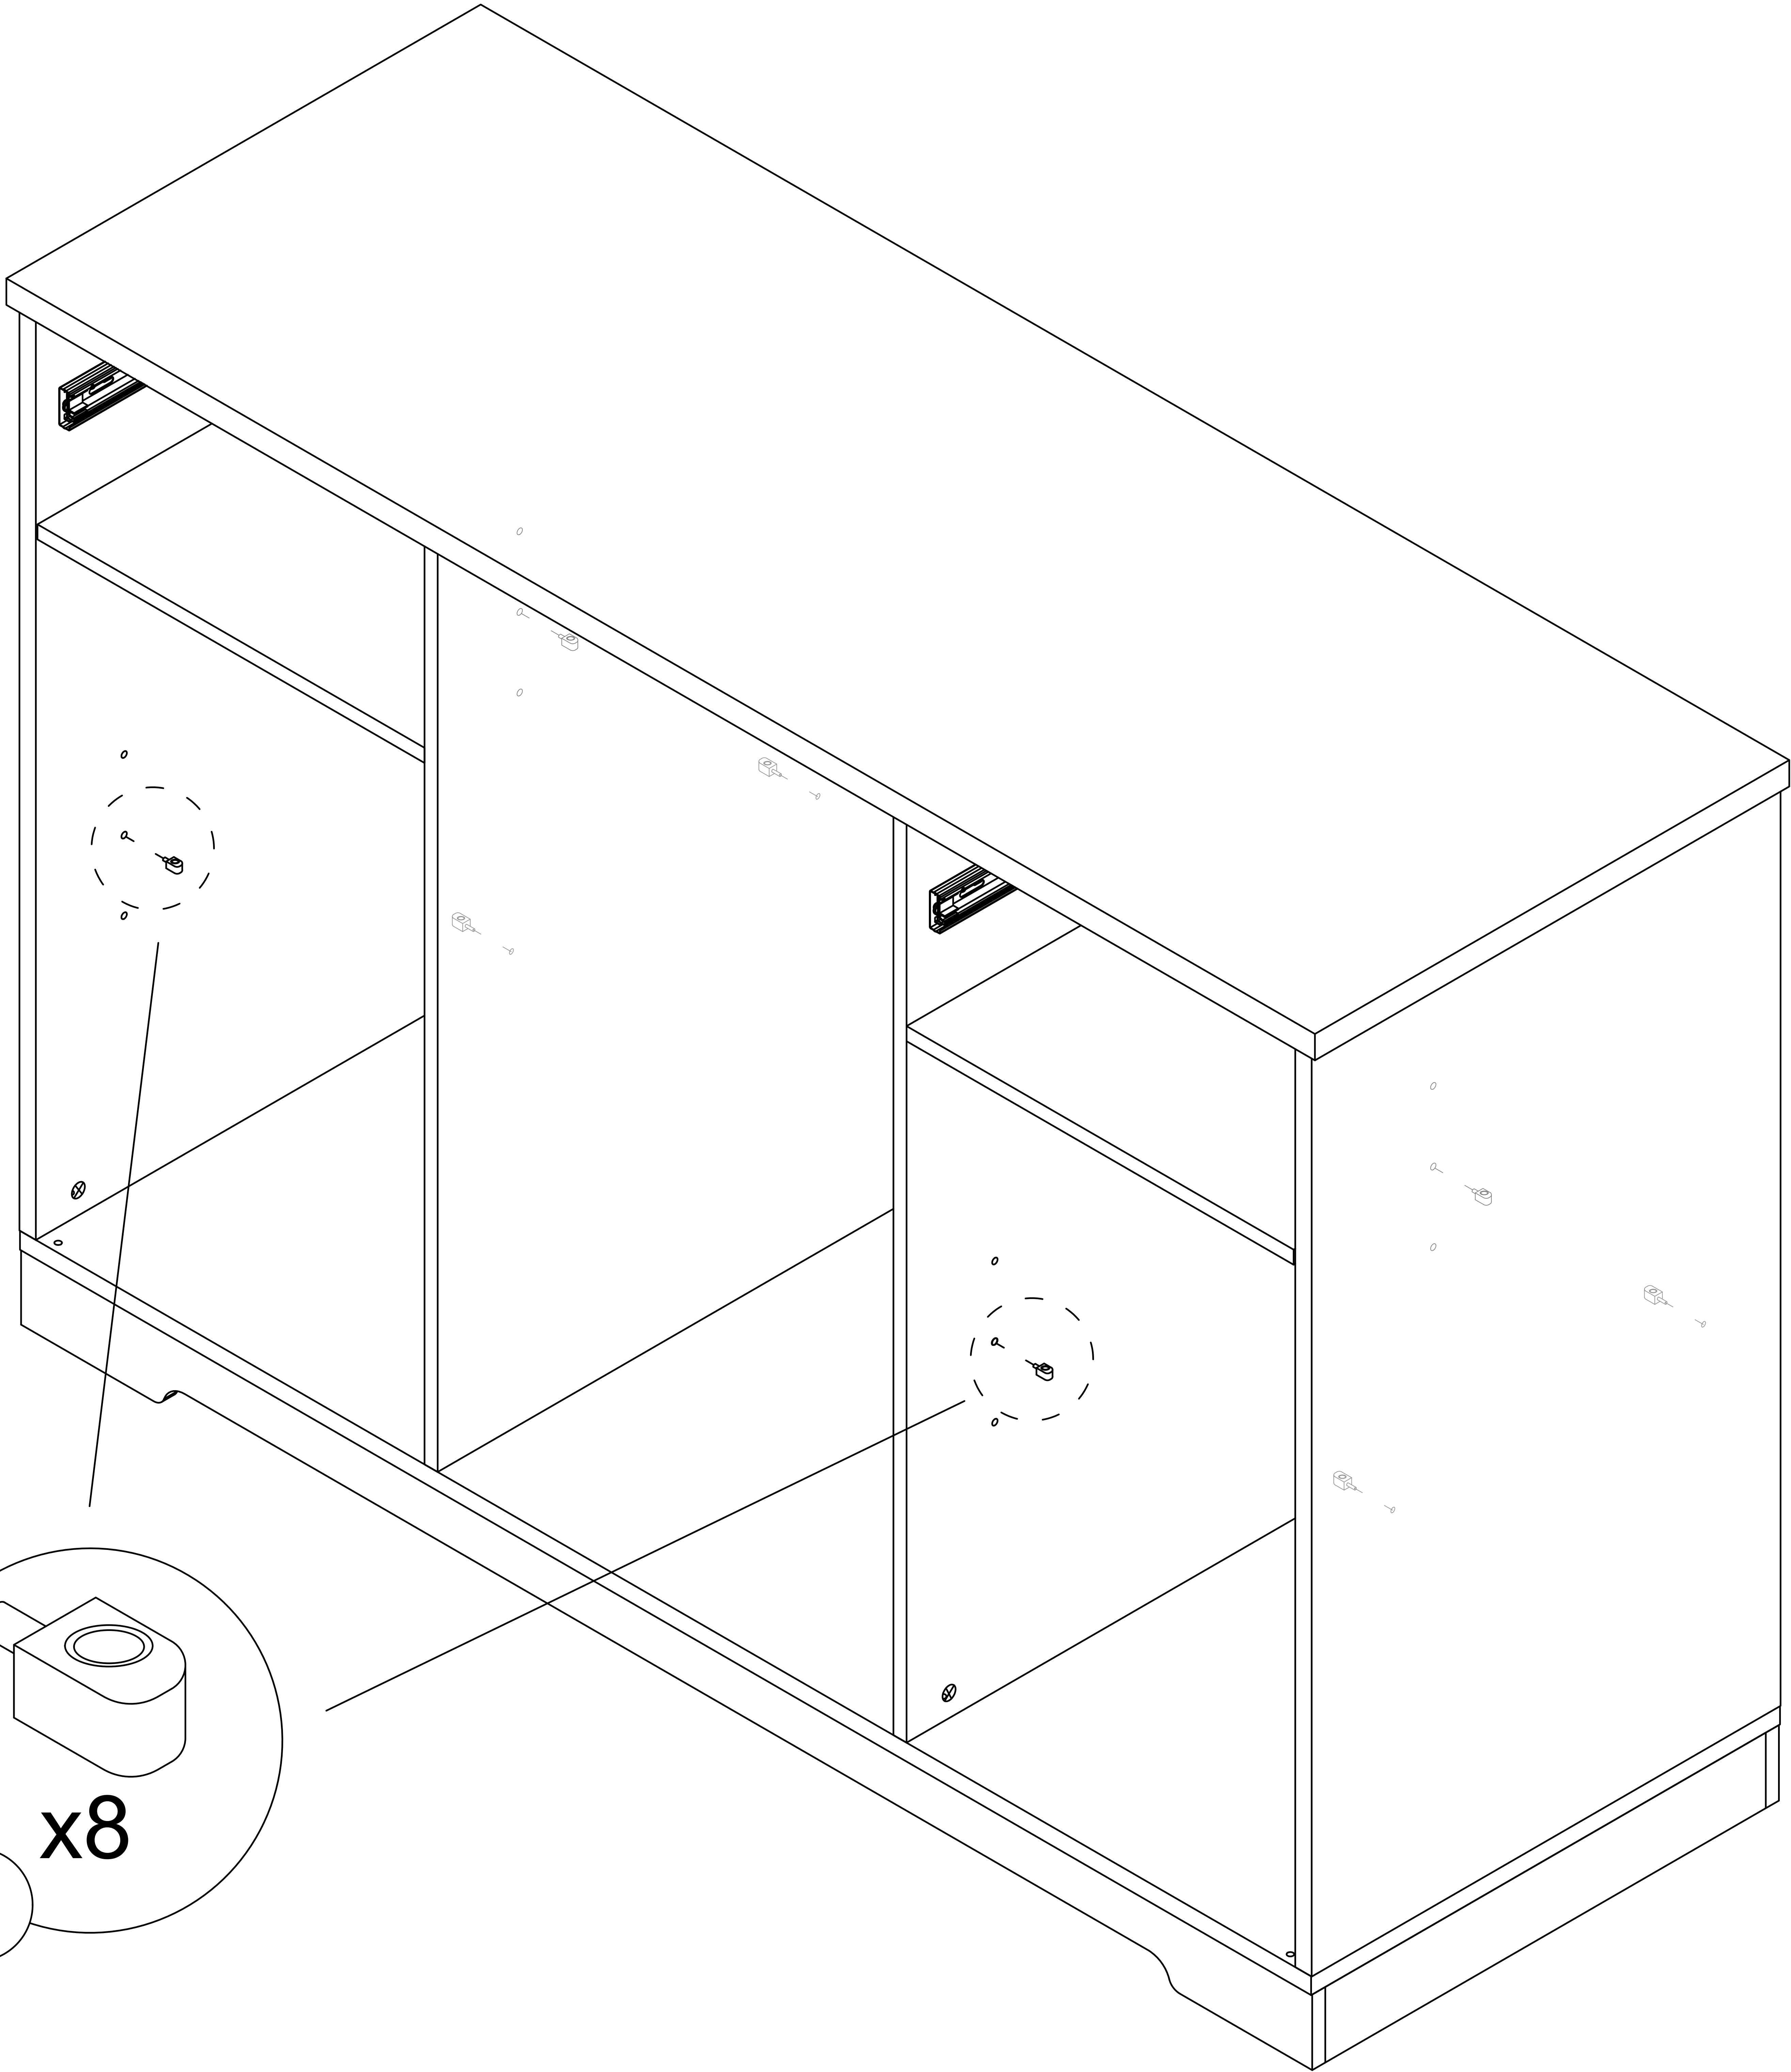

7


x8


Step 46

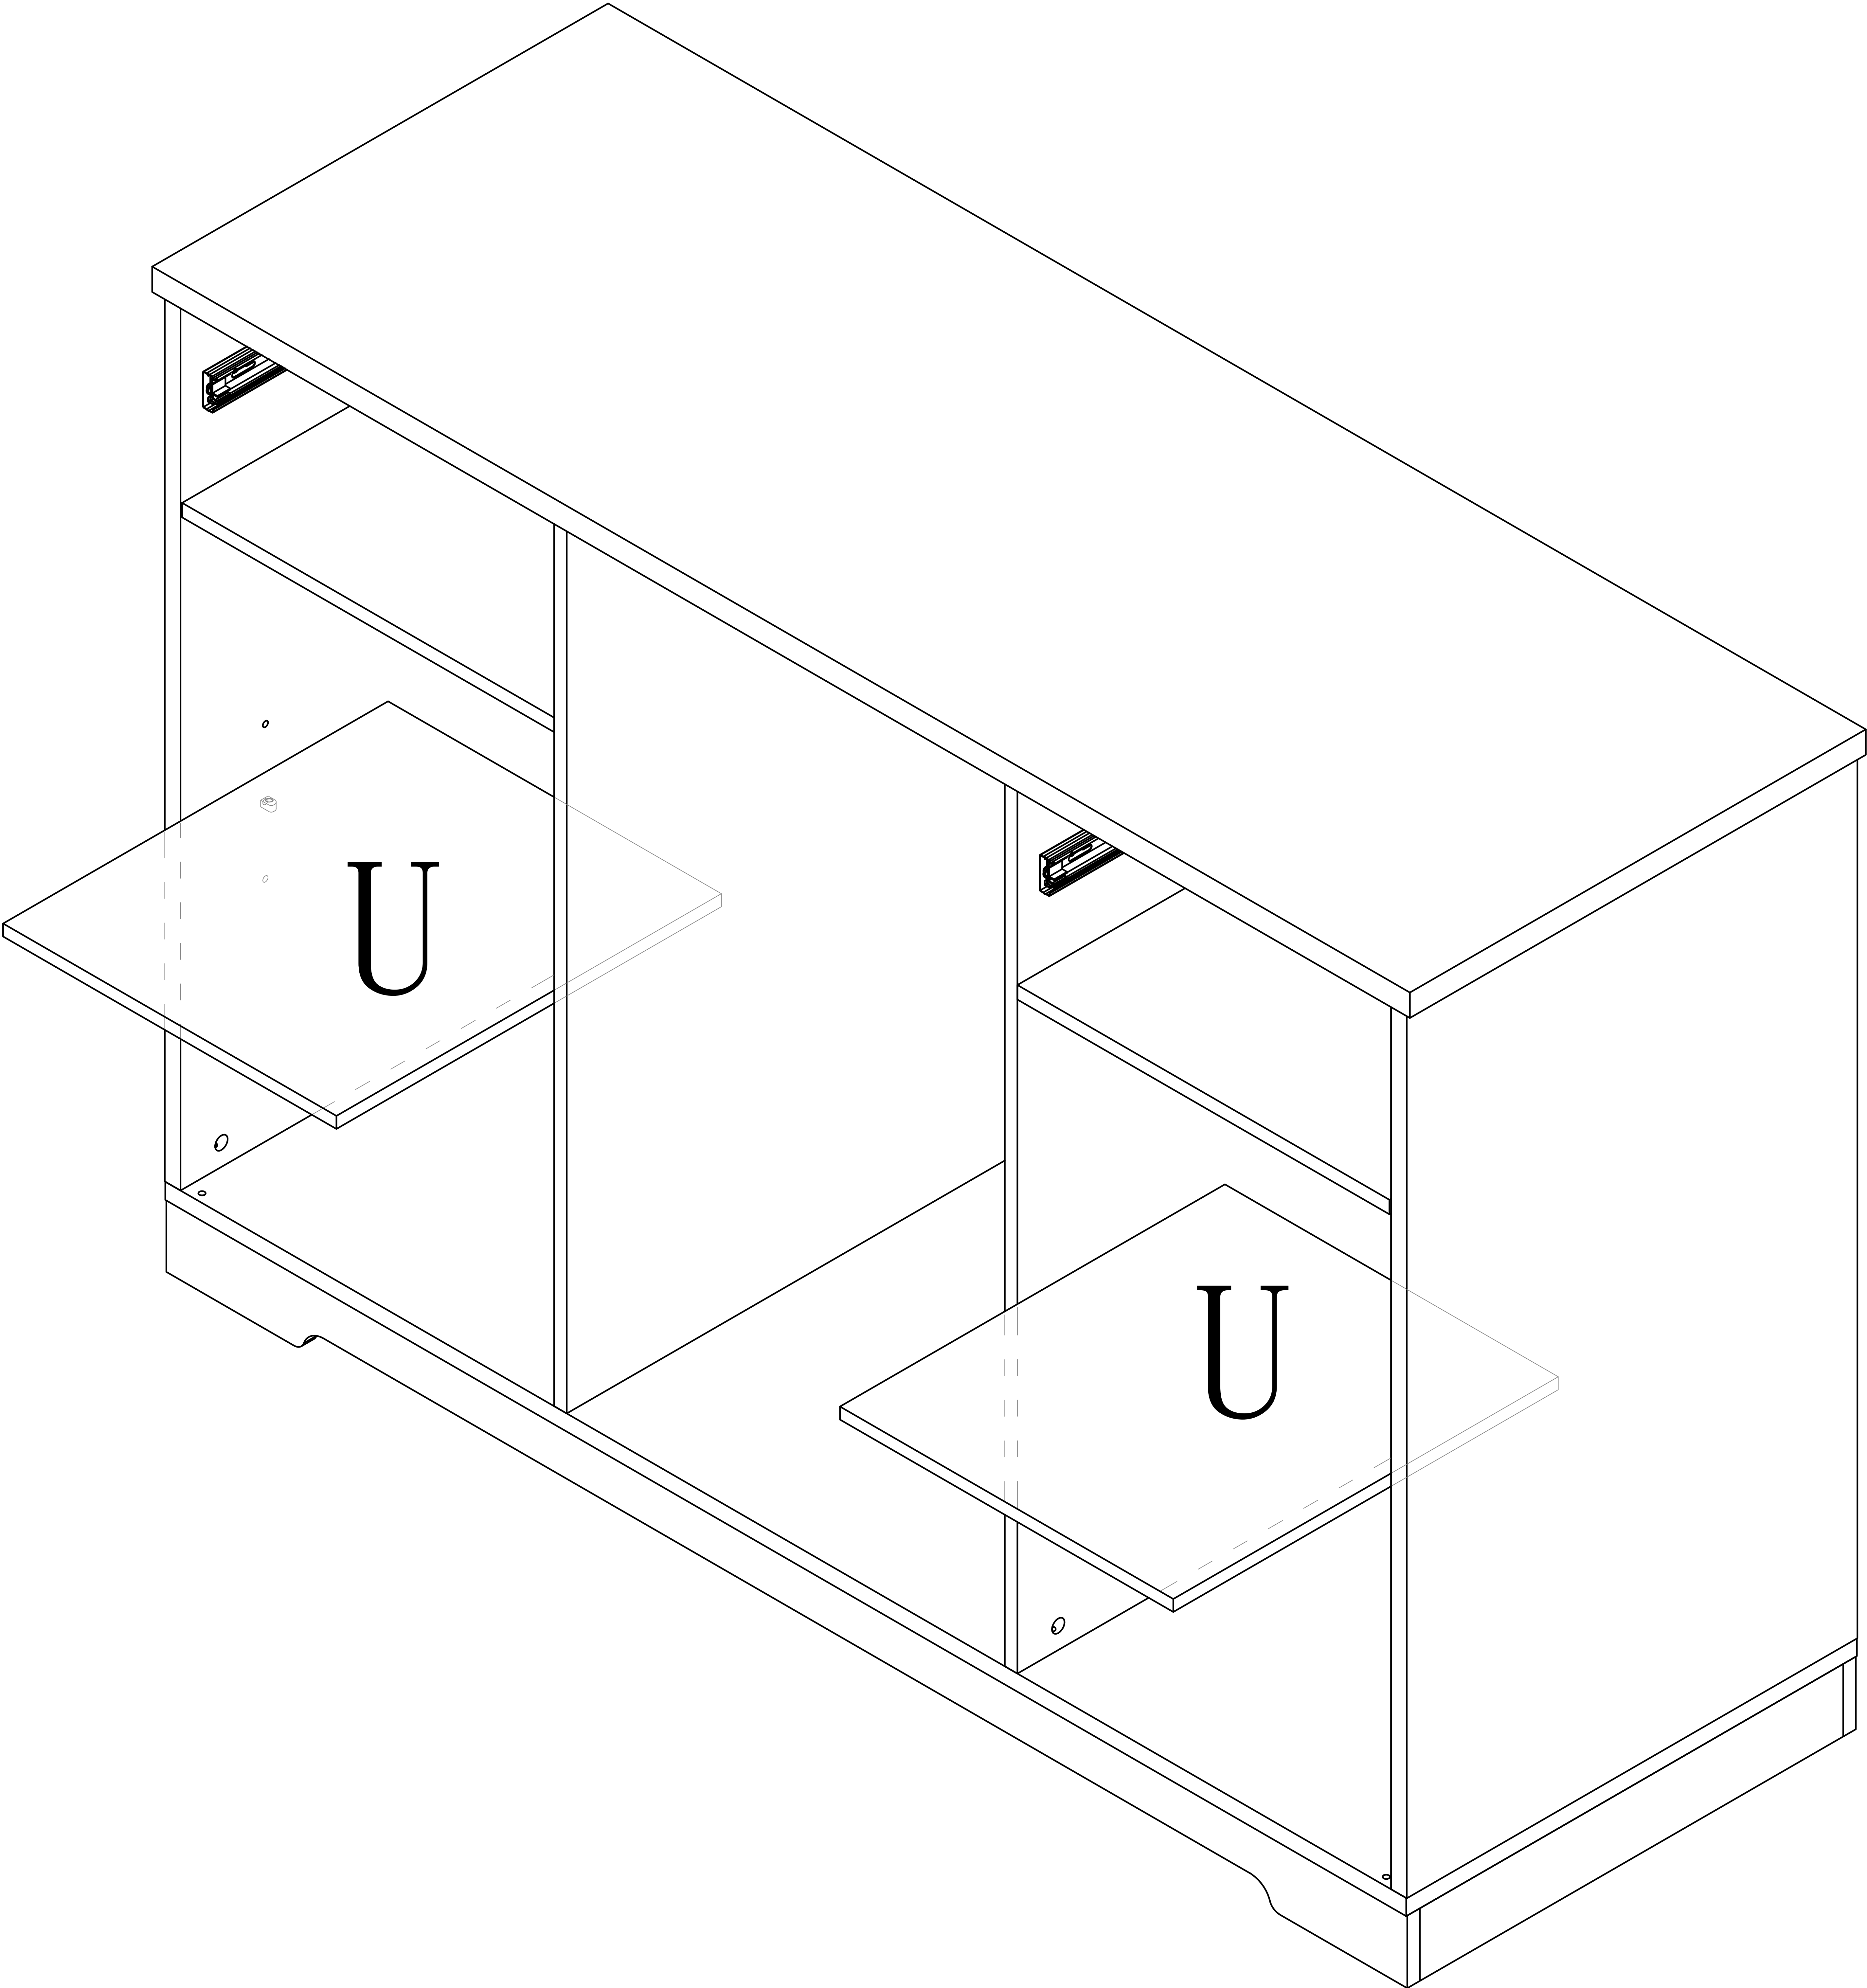


Step 47

8

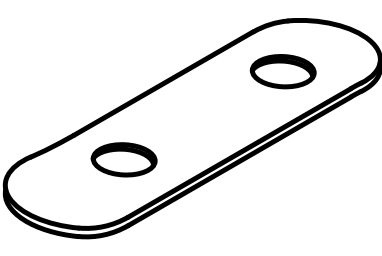

x1

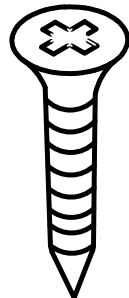

x2

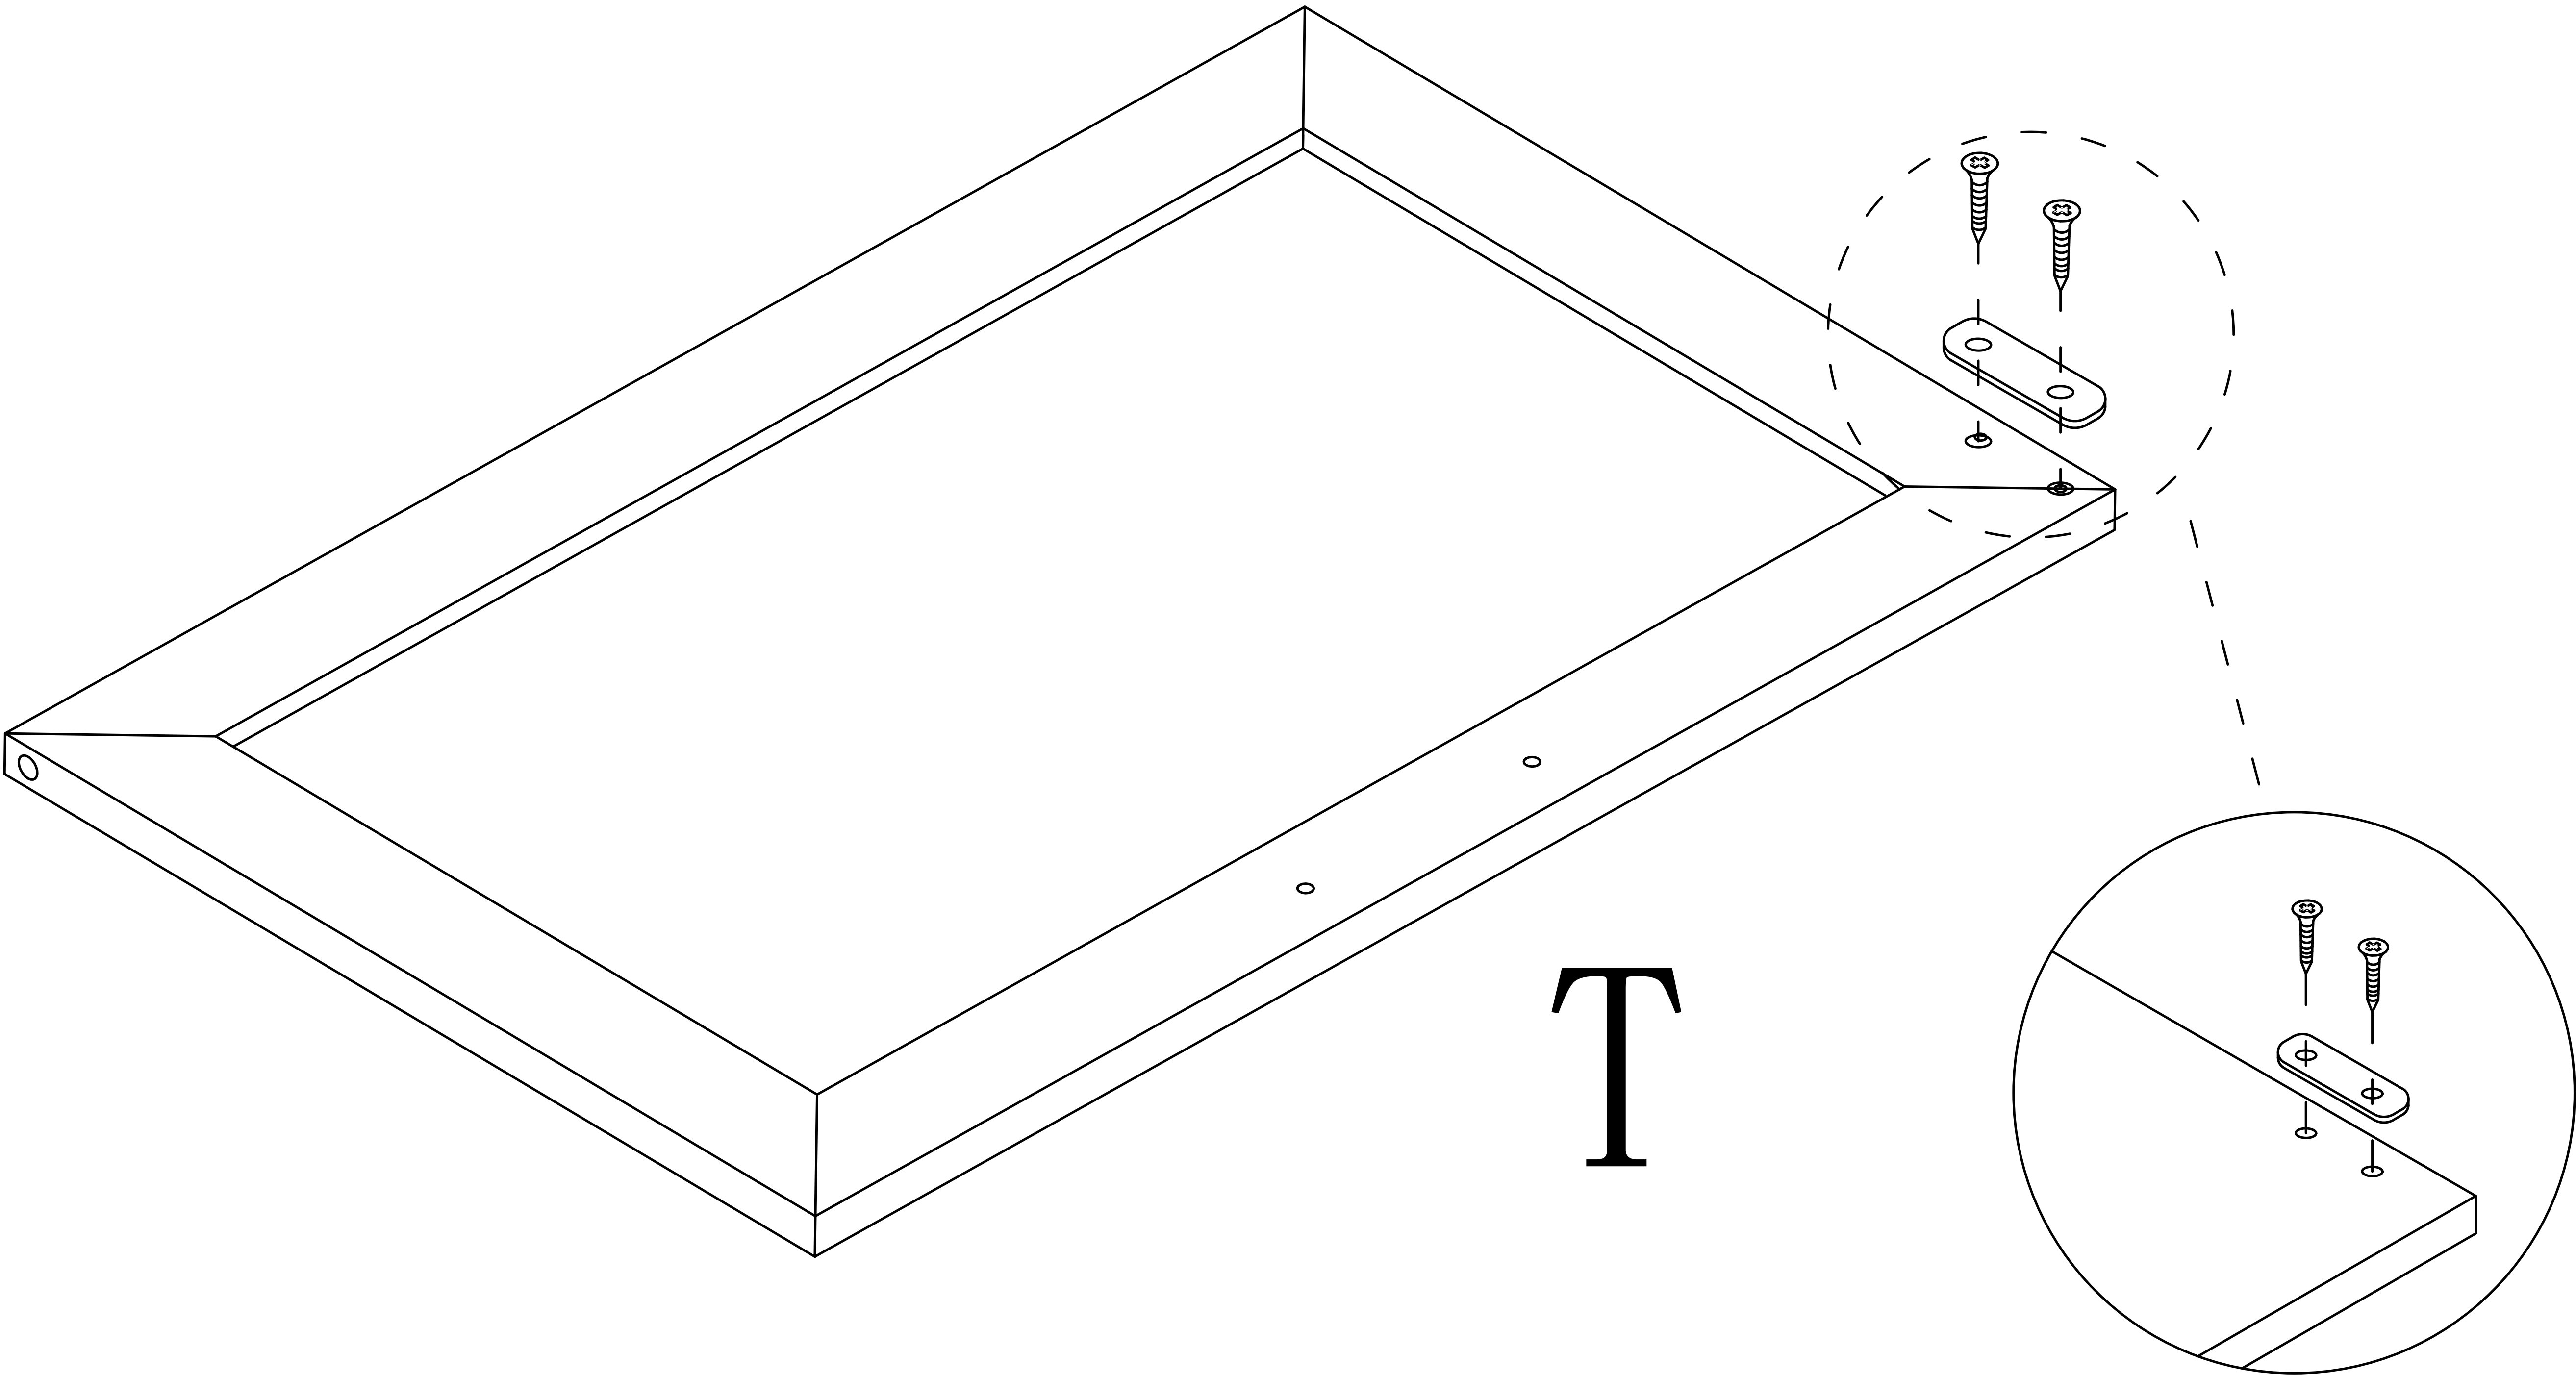


Step 48

8

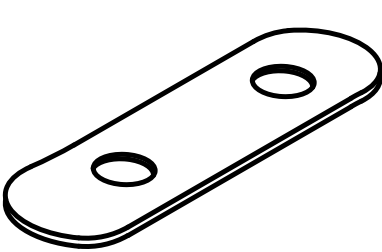

x1

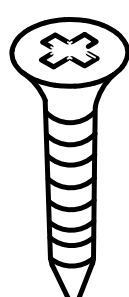
x2

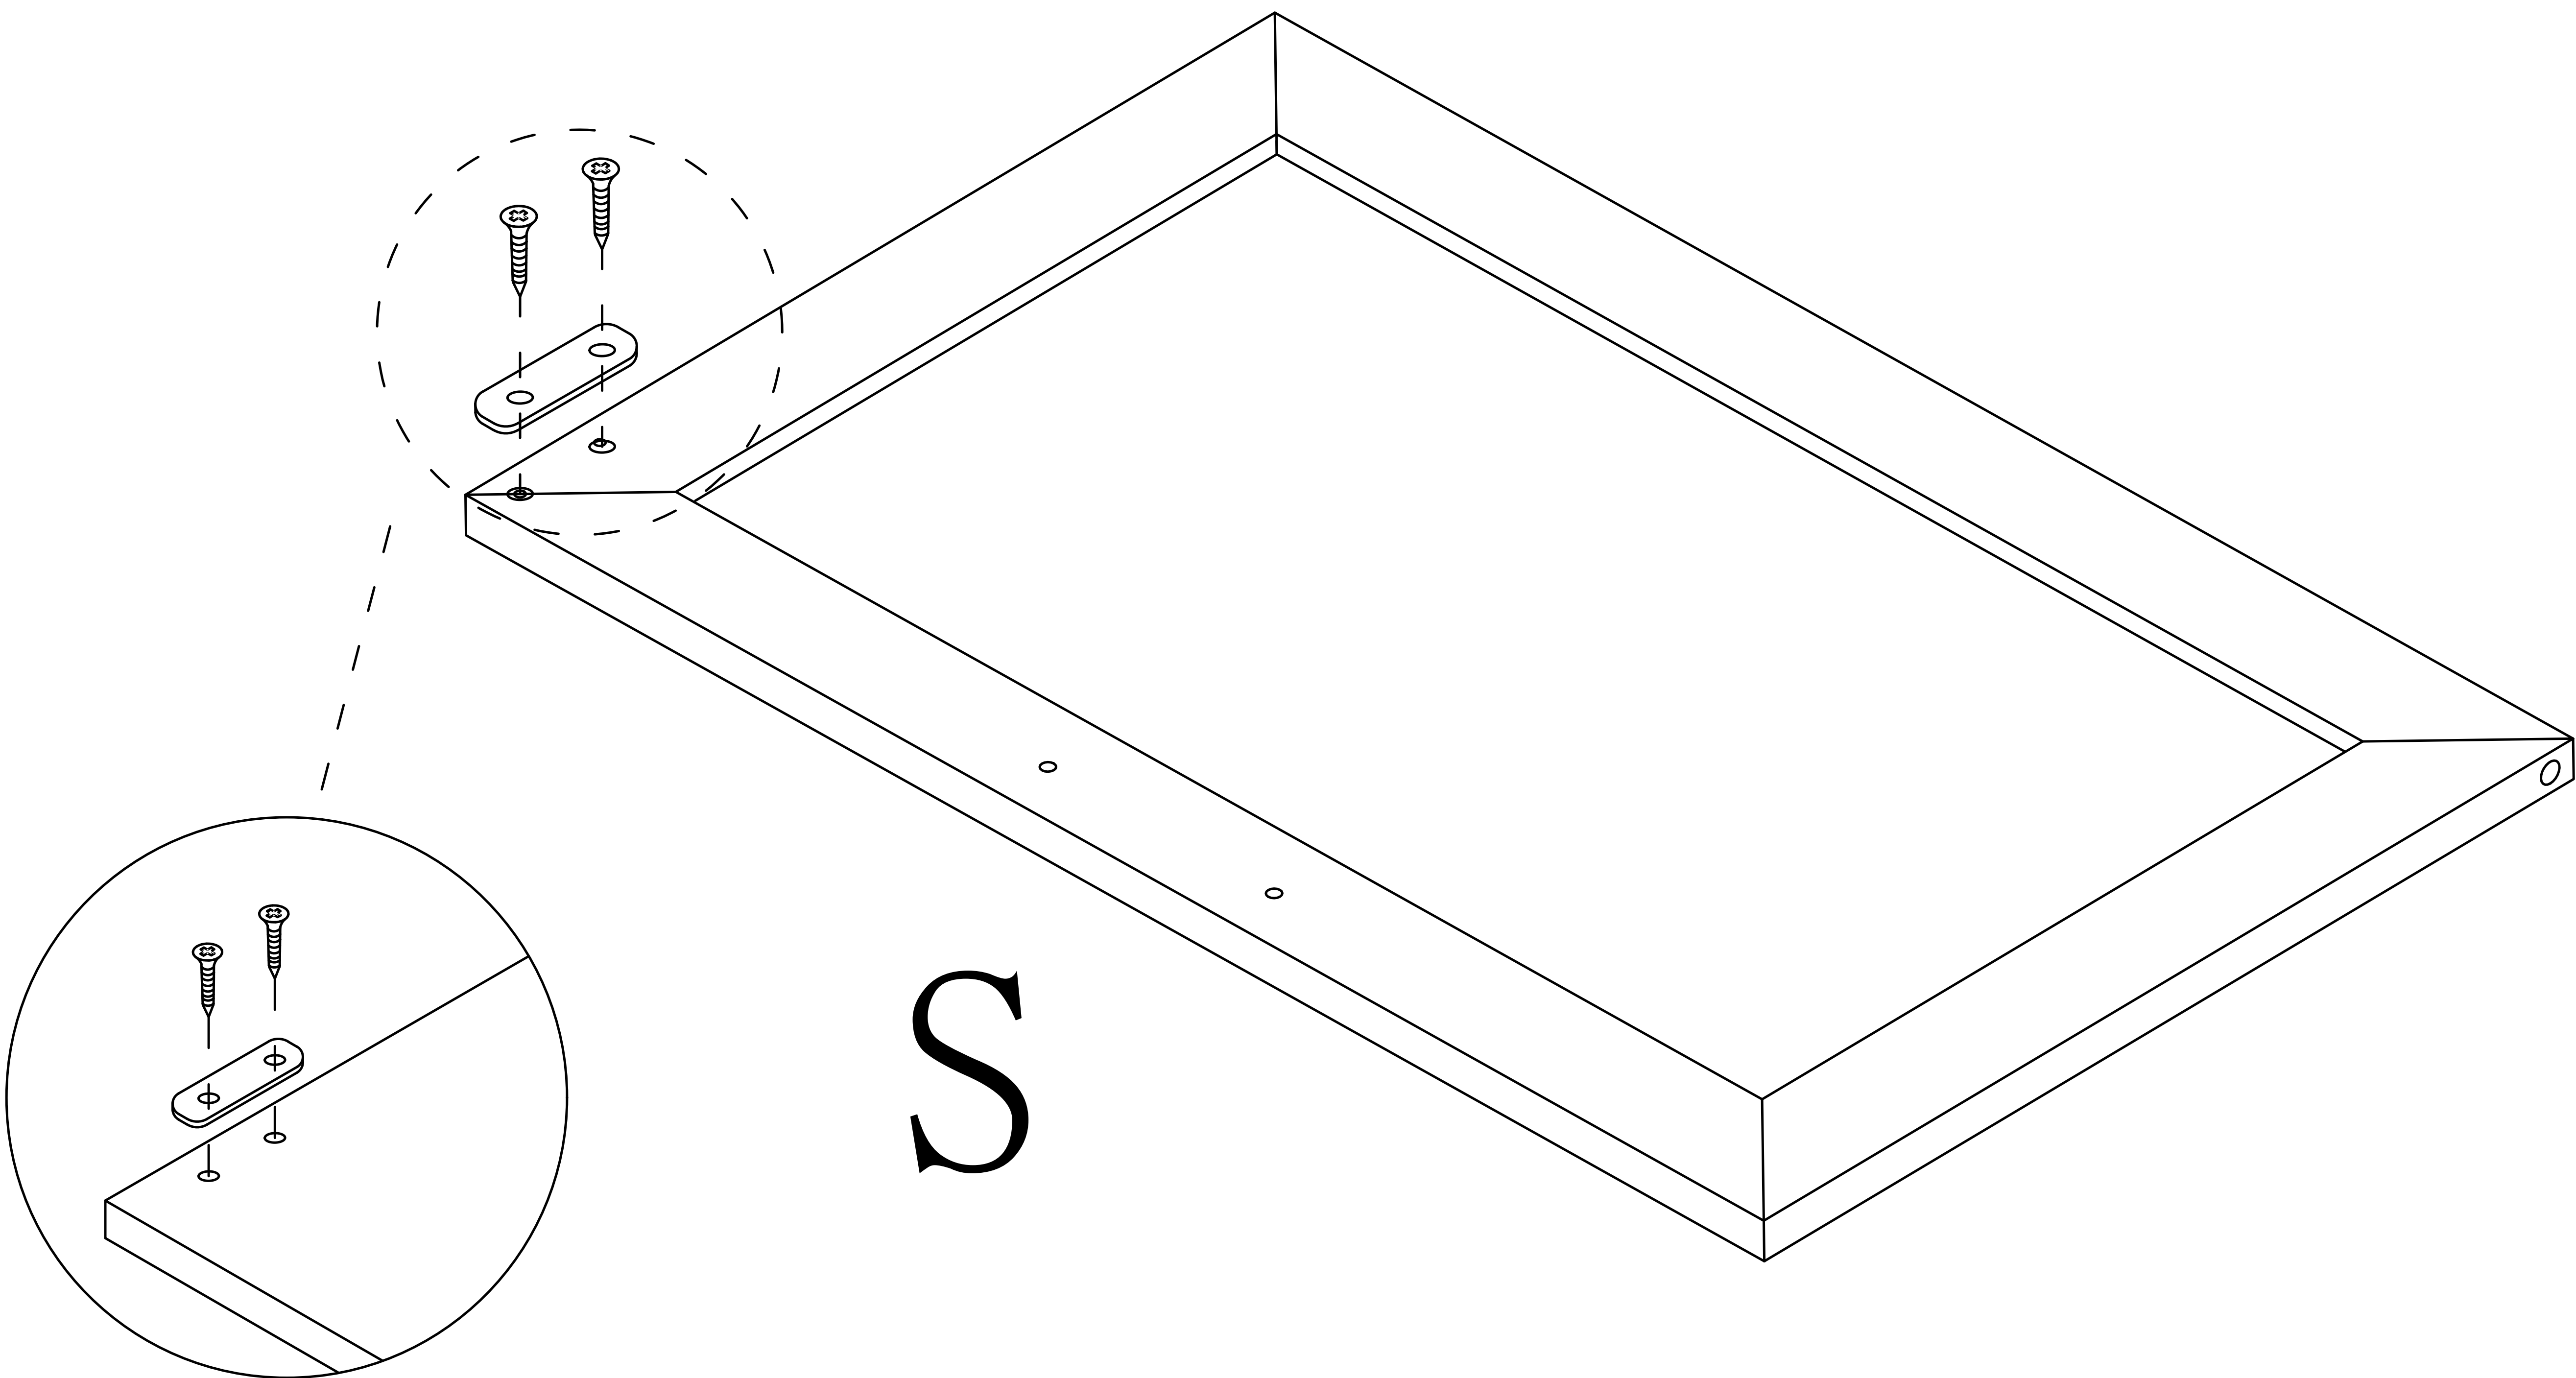


Step 49

9

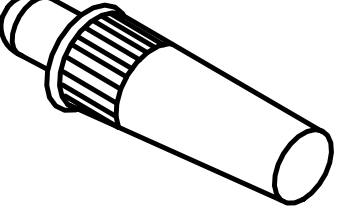


x2

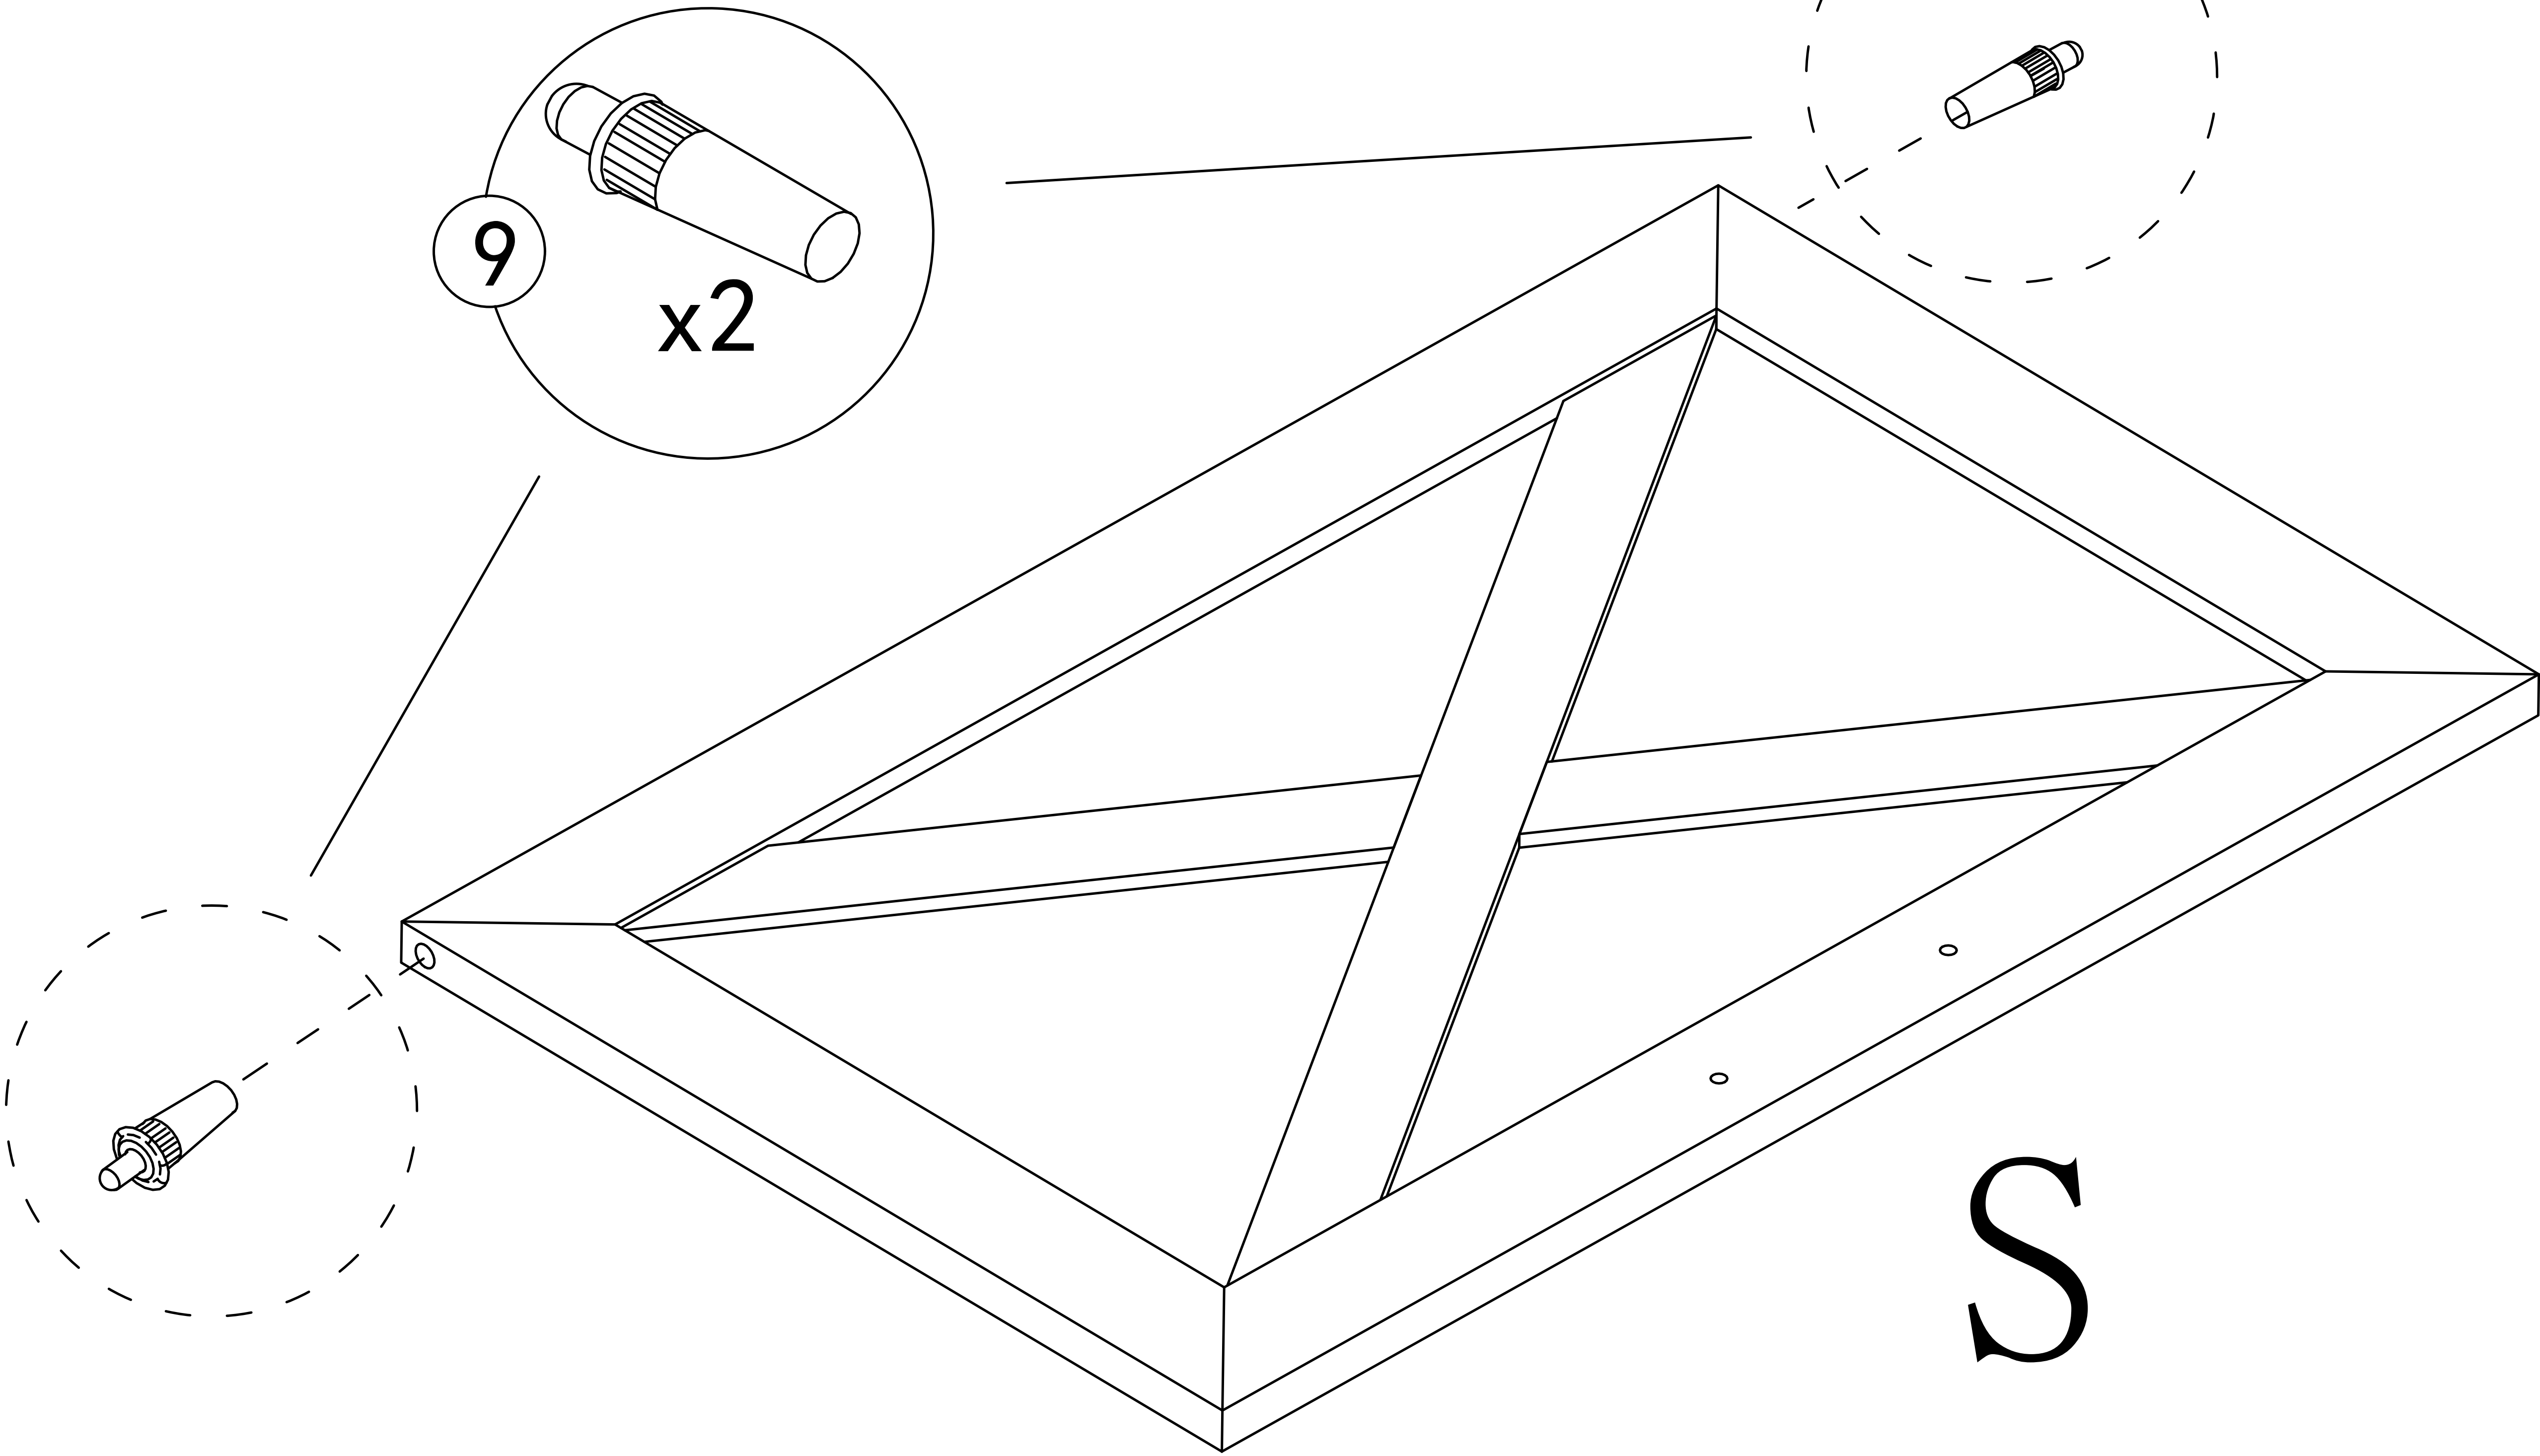


Step 50


12

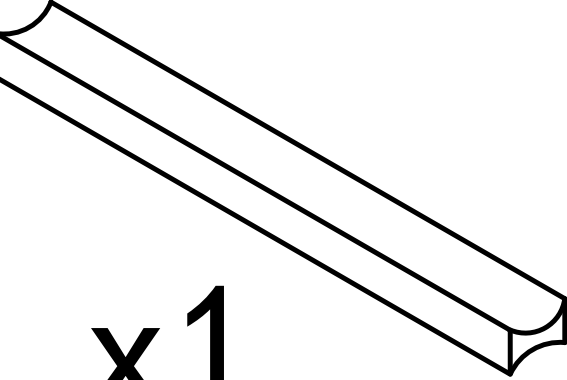

x1

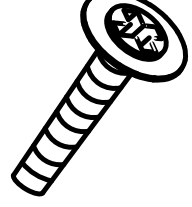


x2

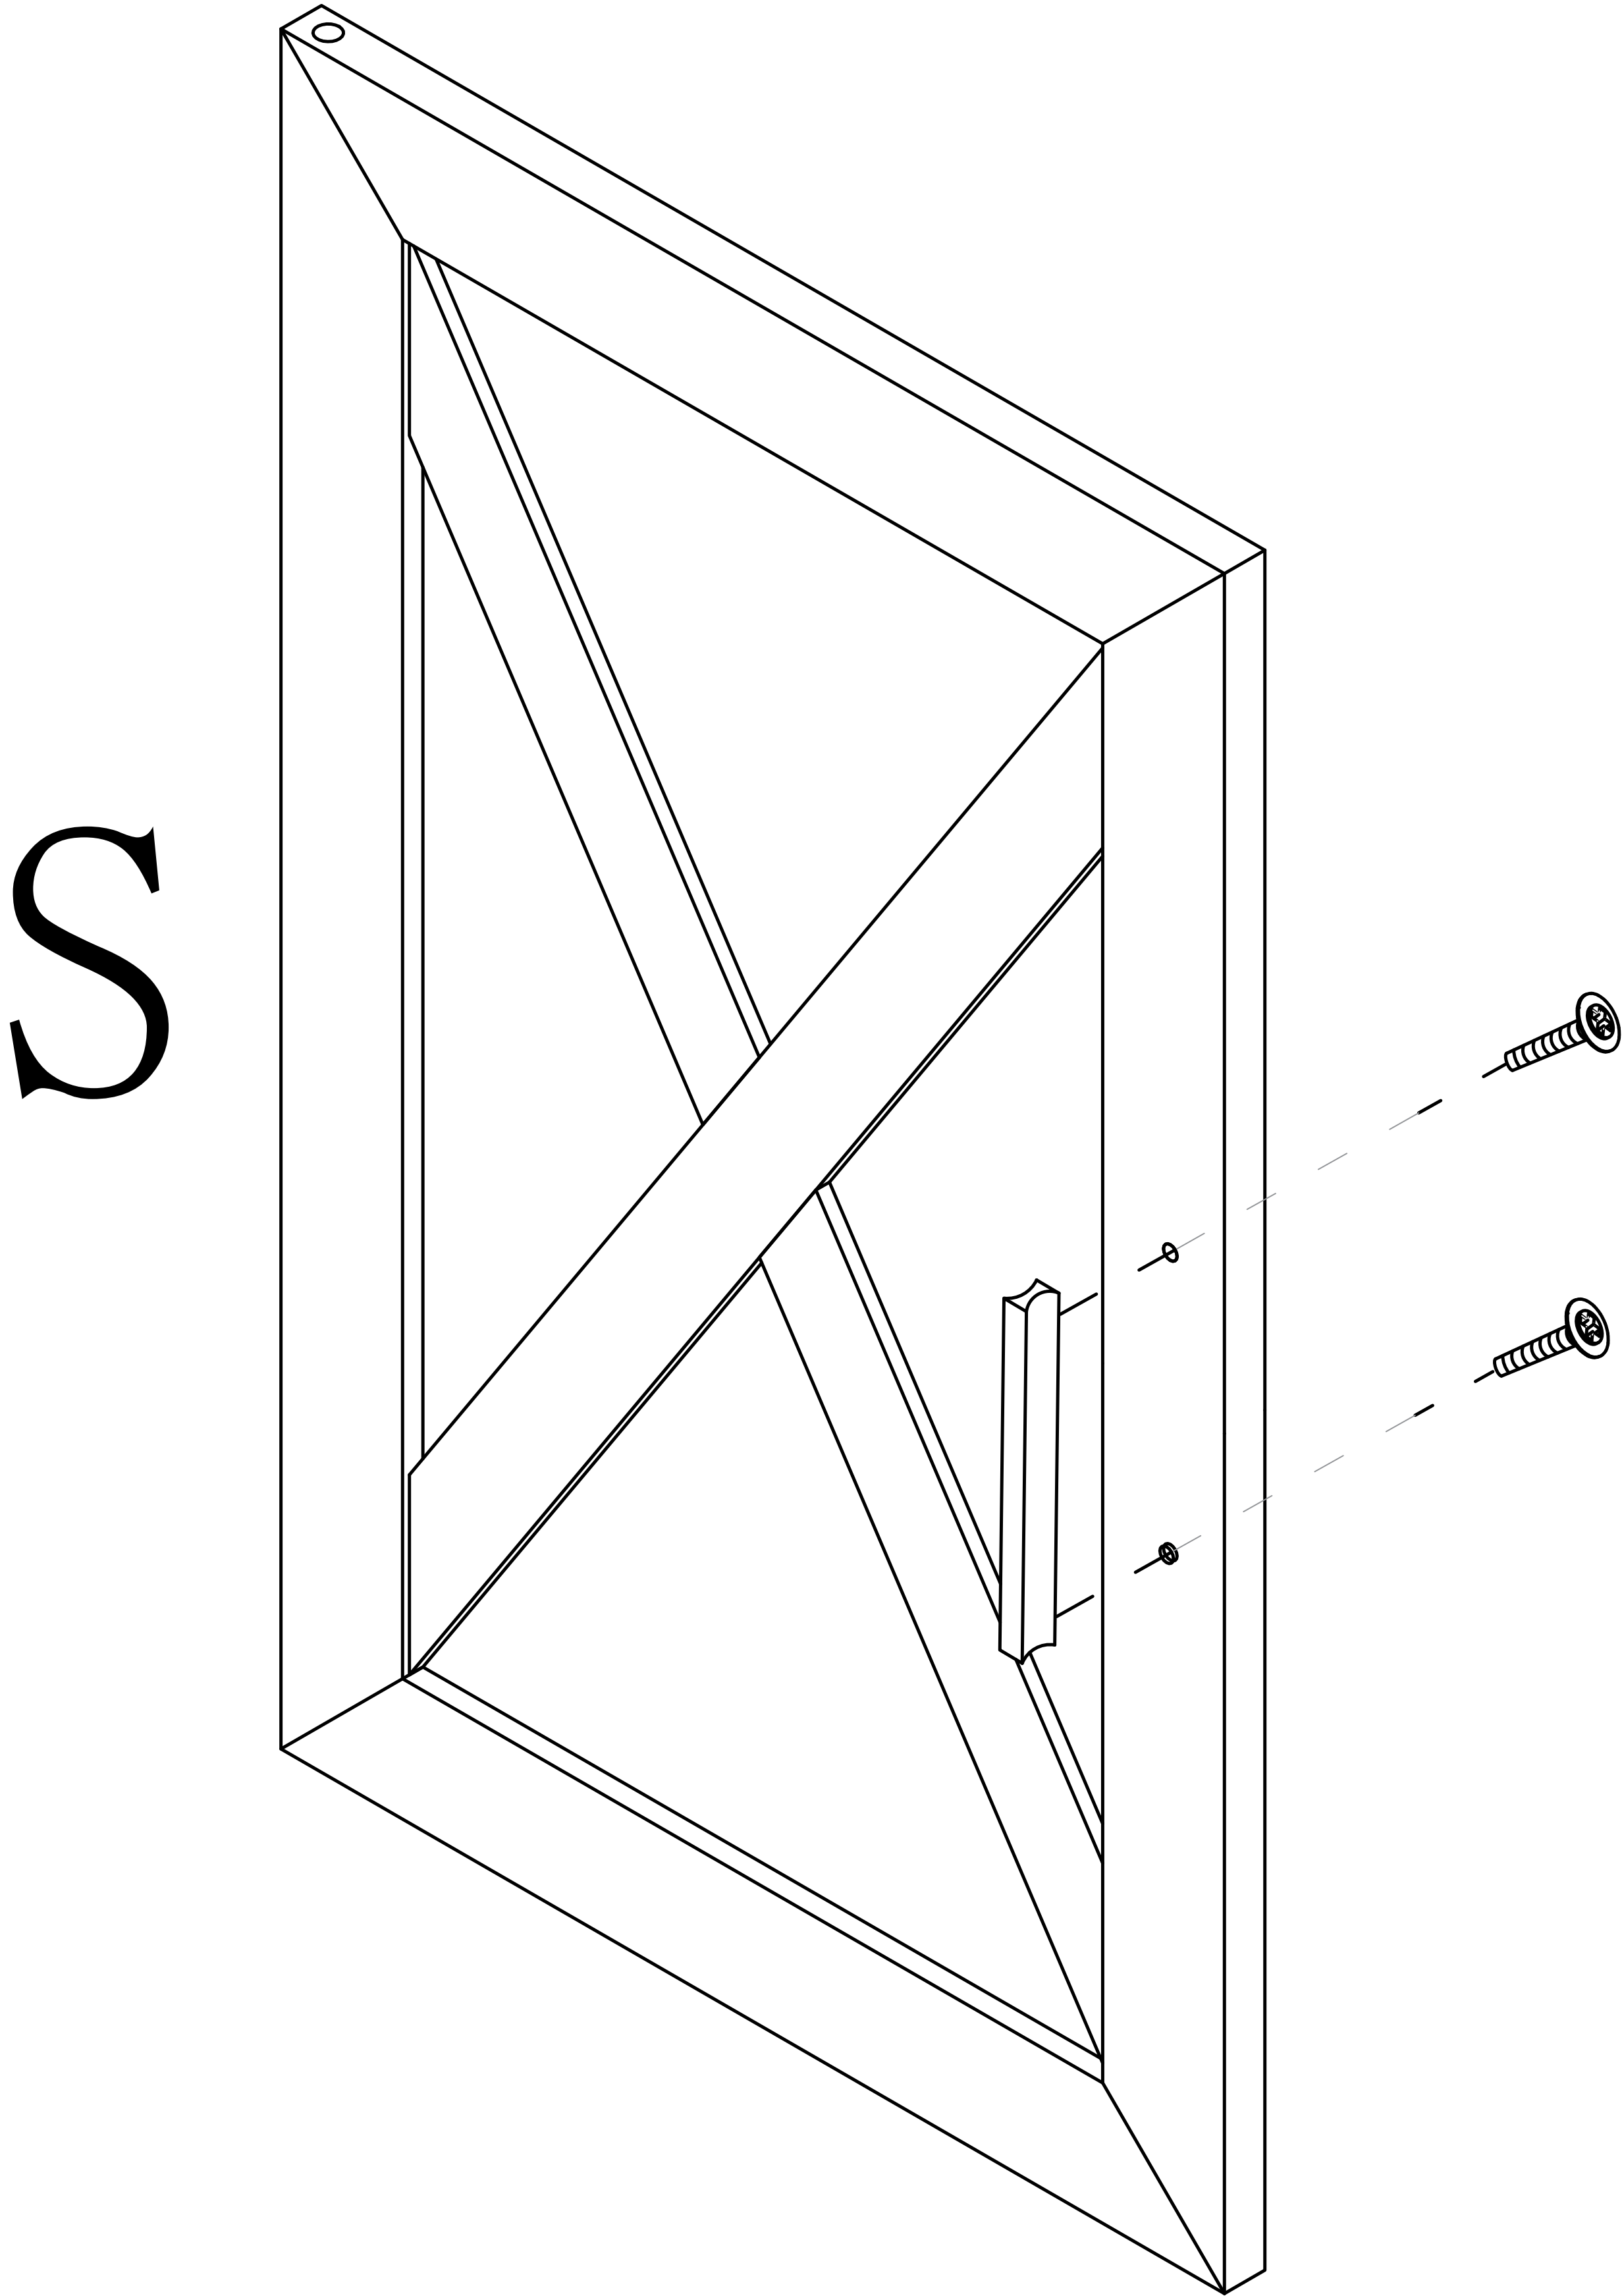


Step 51

9

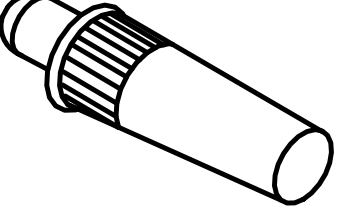


x2

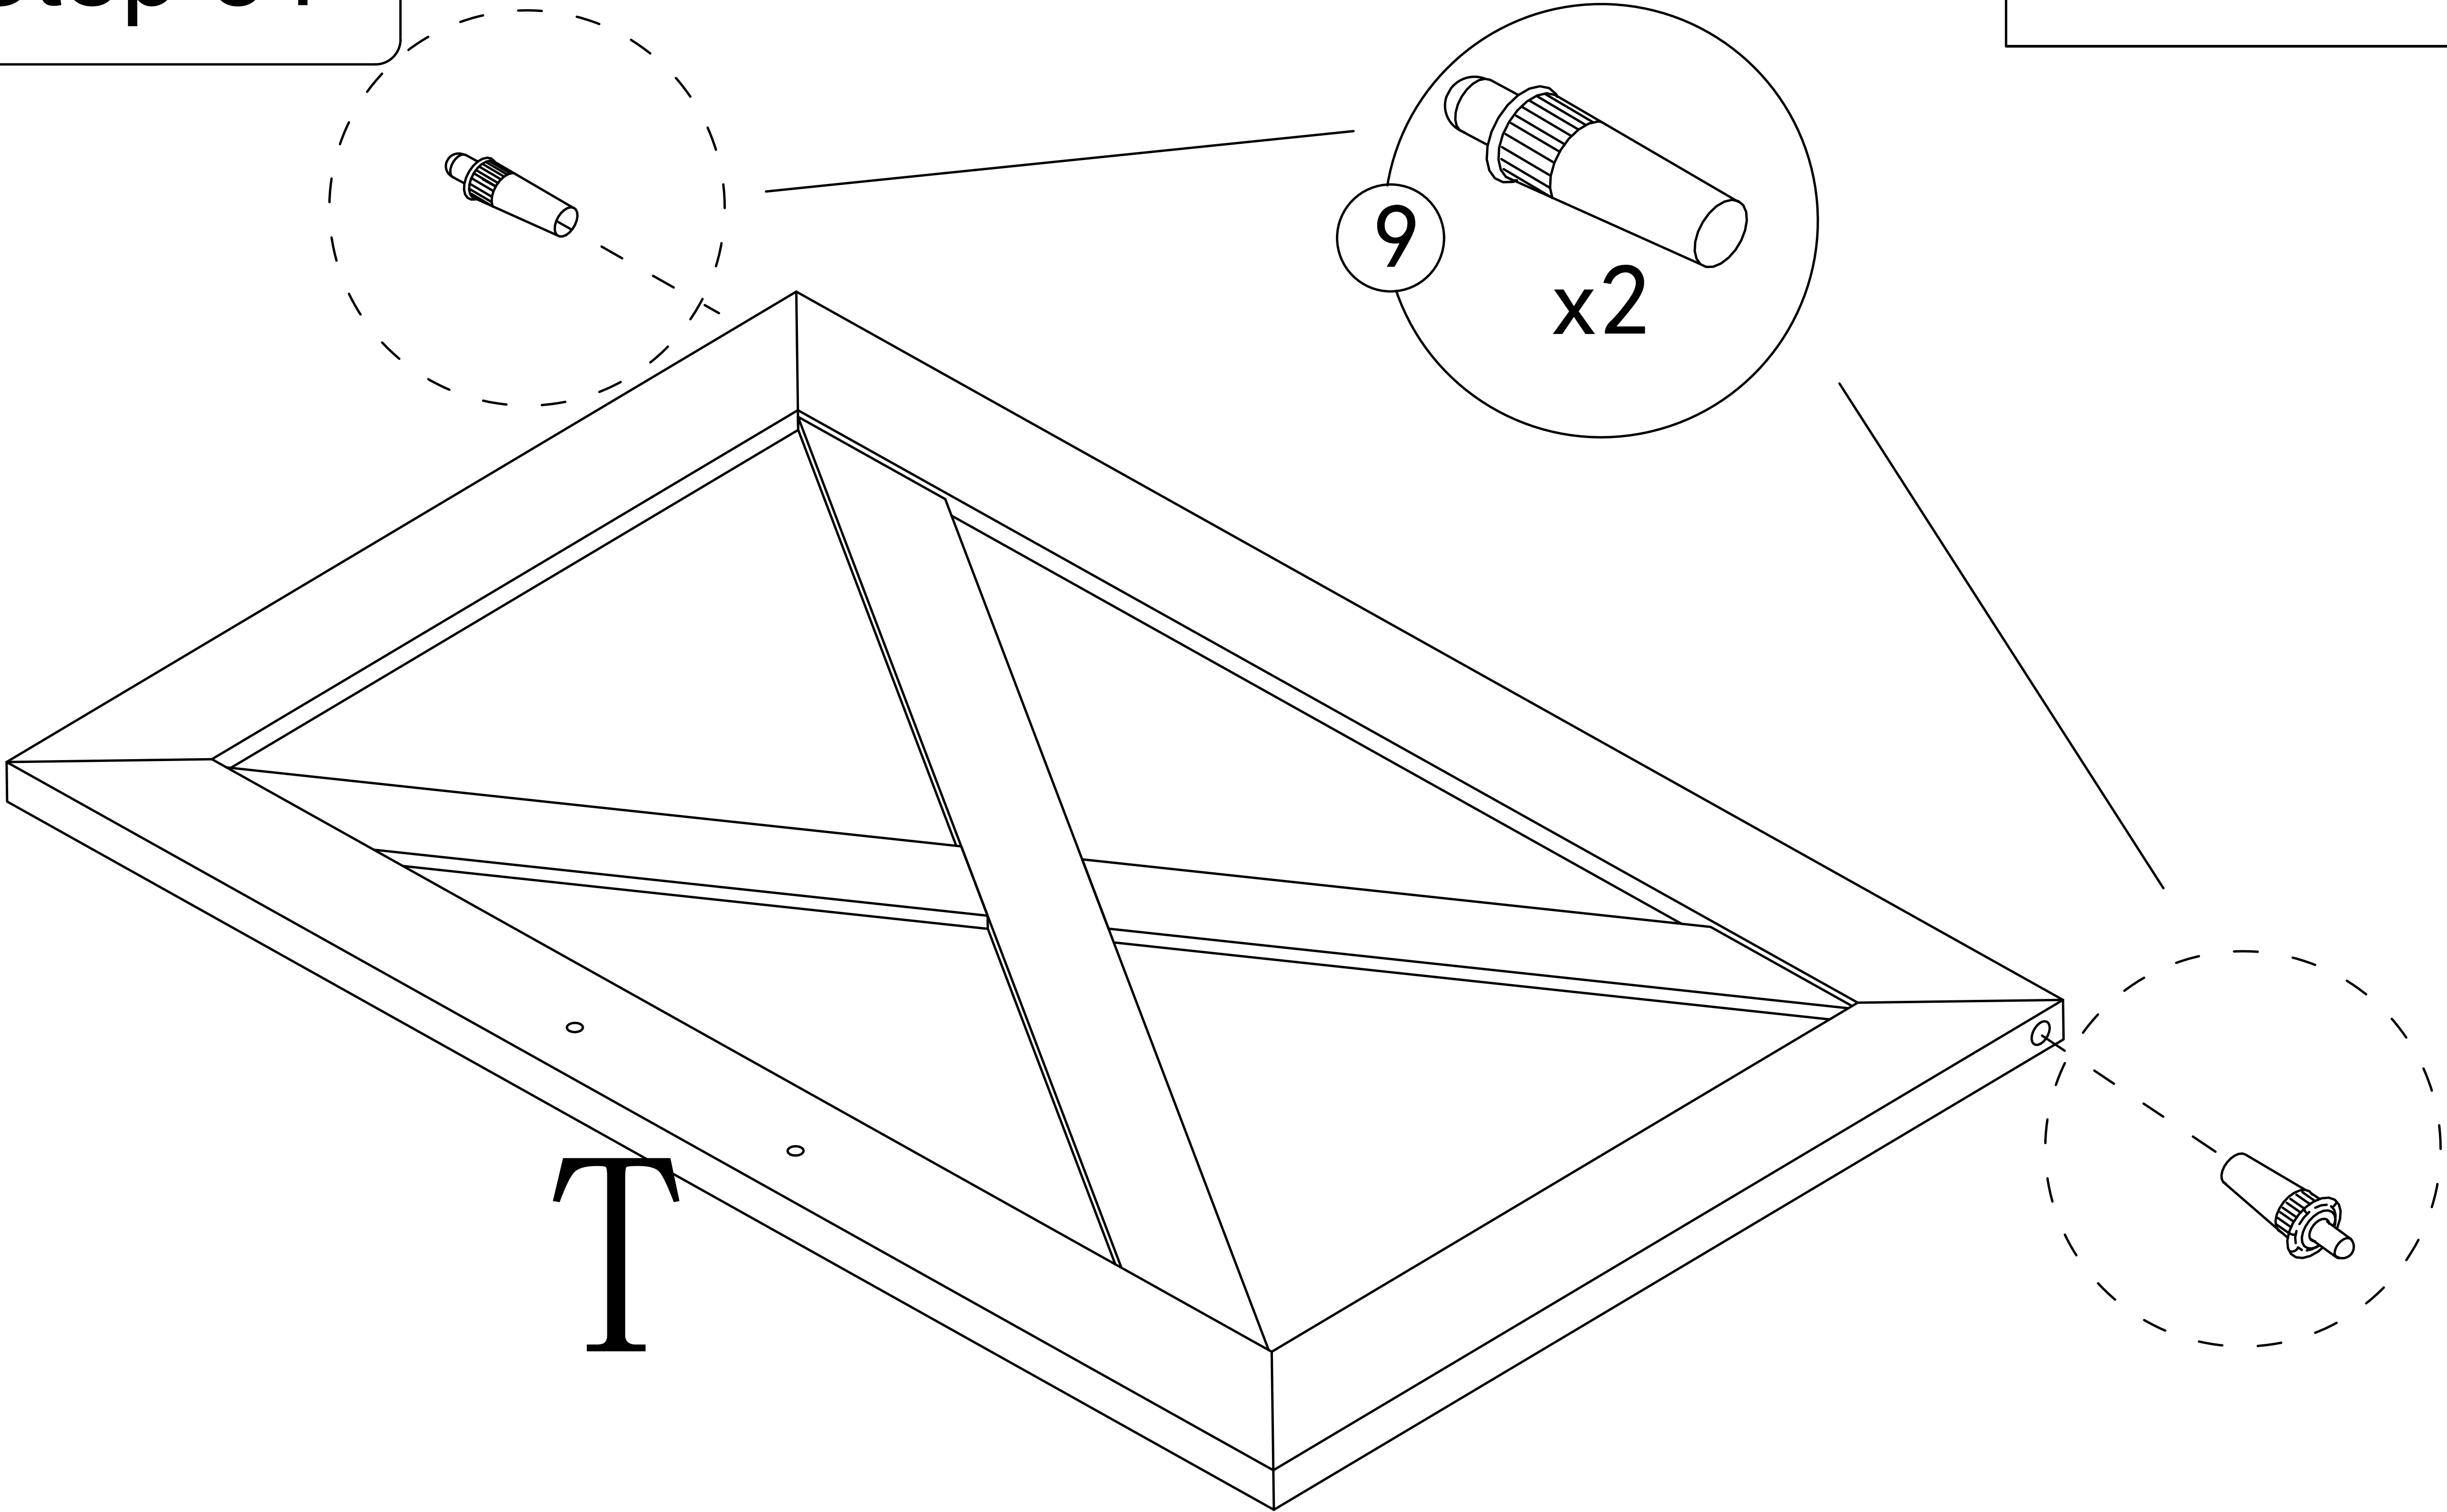


Step 52


12

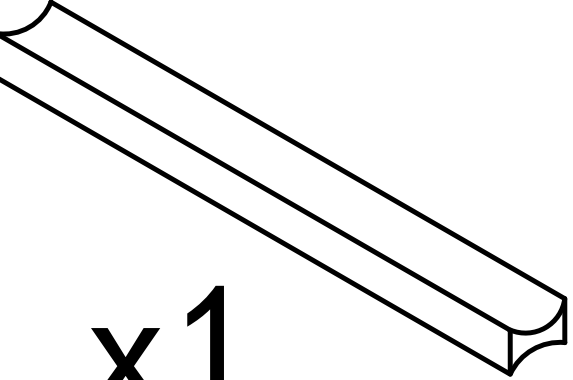



x1

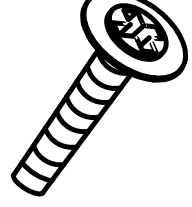



x2

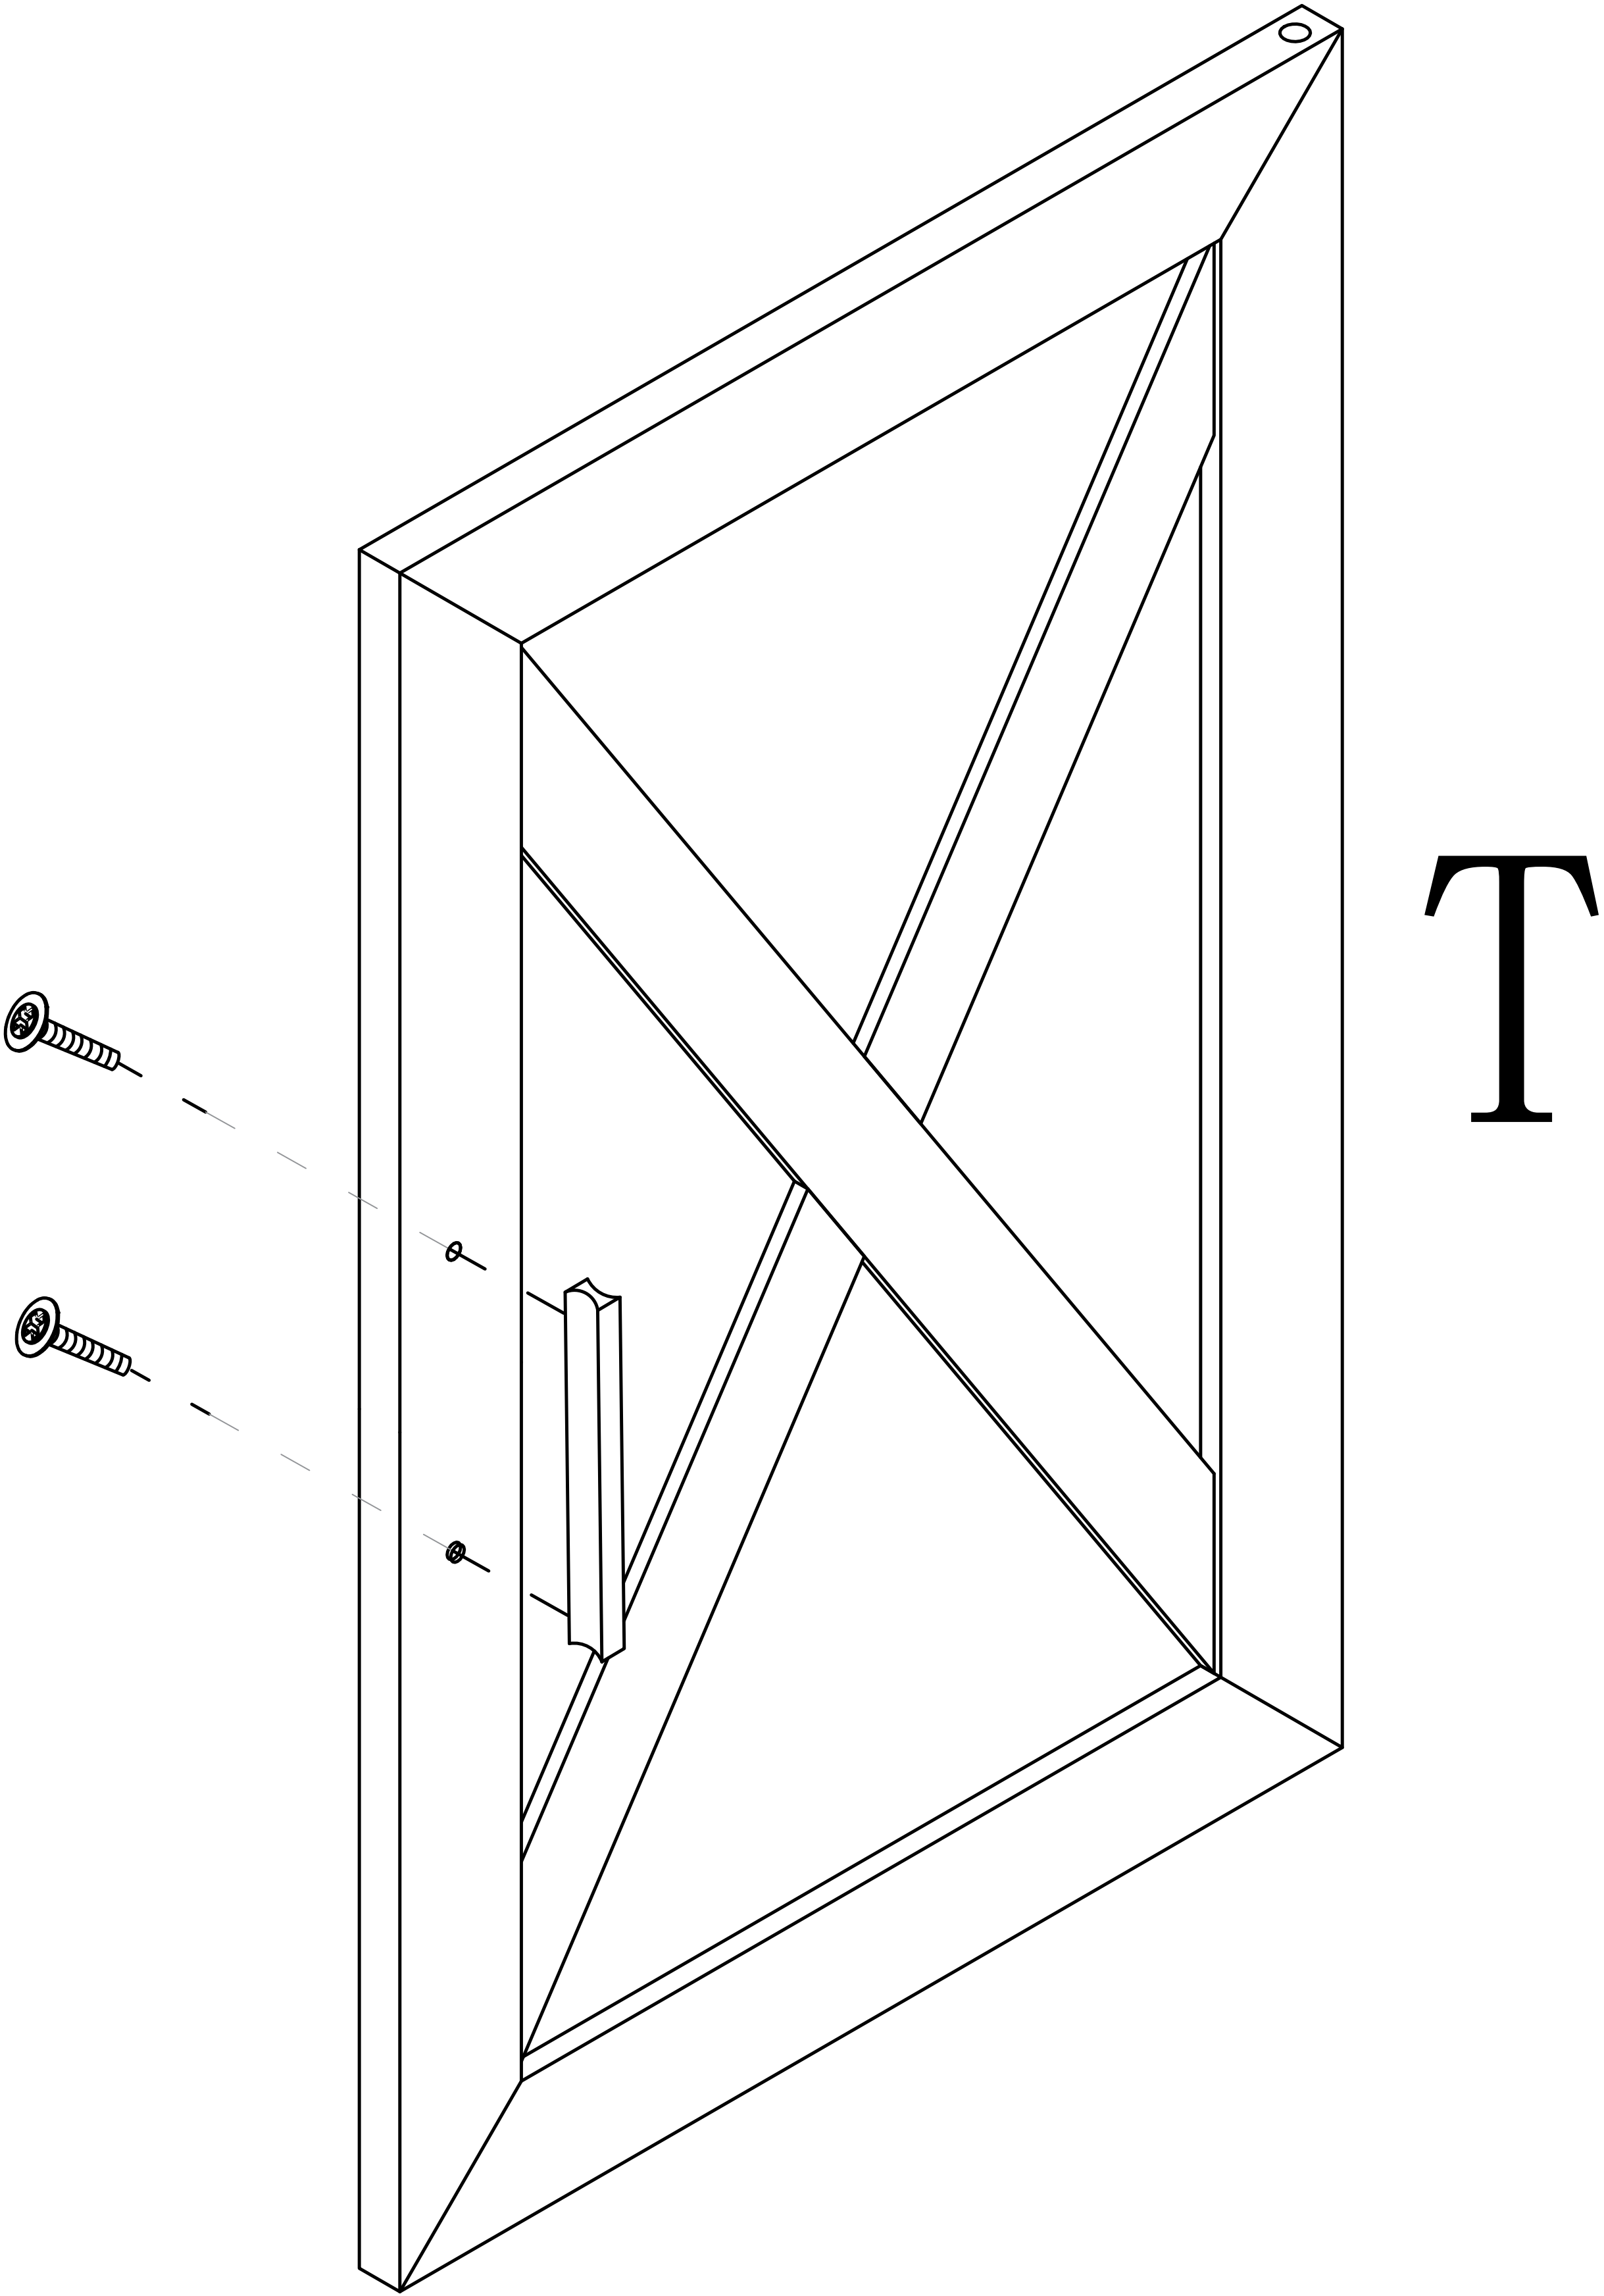

Step 53



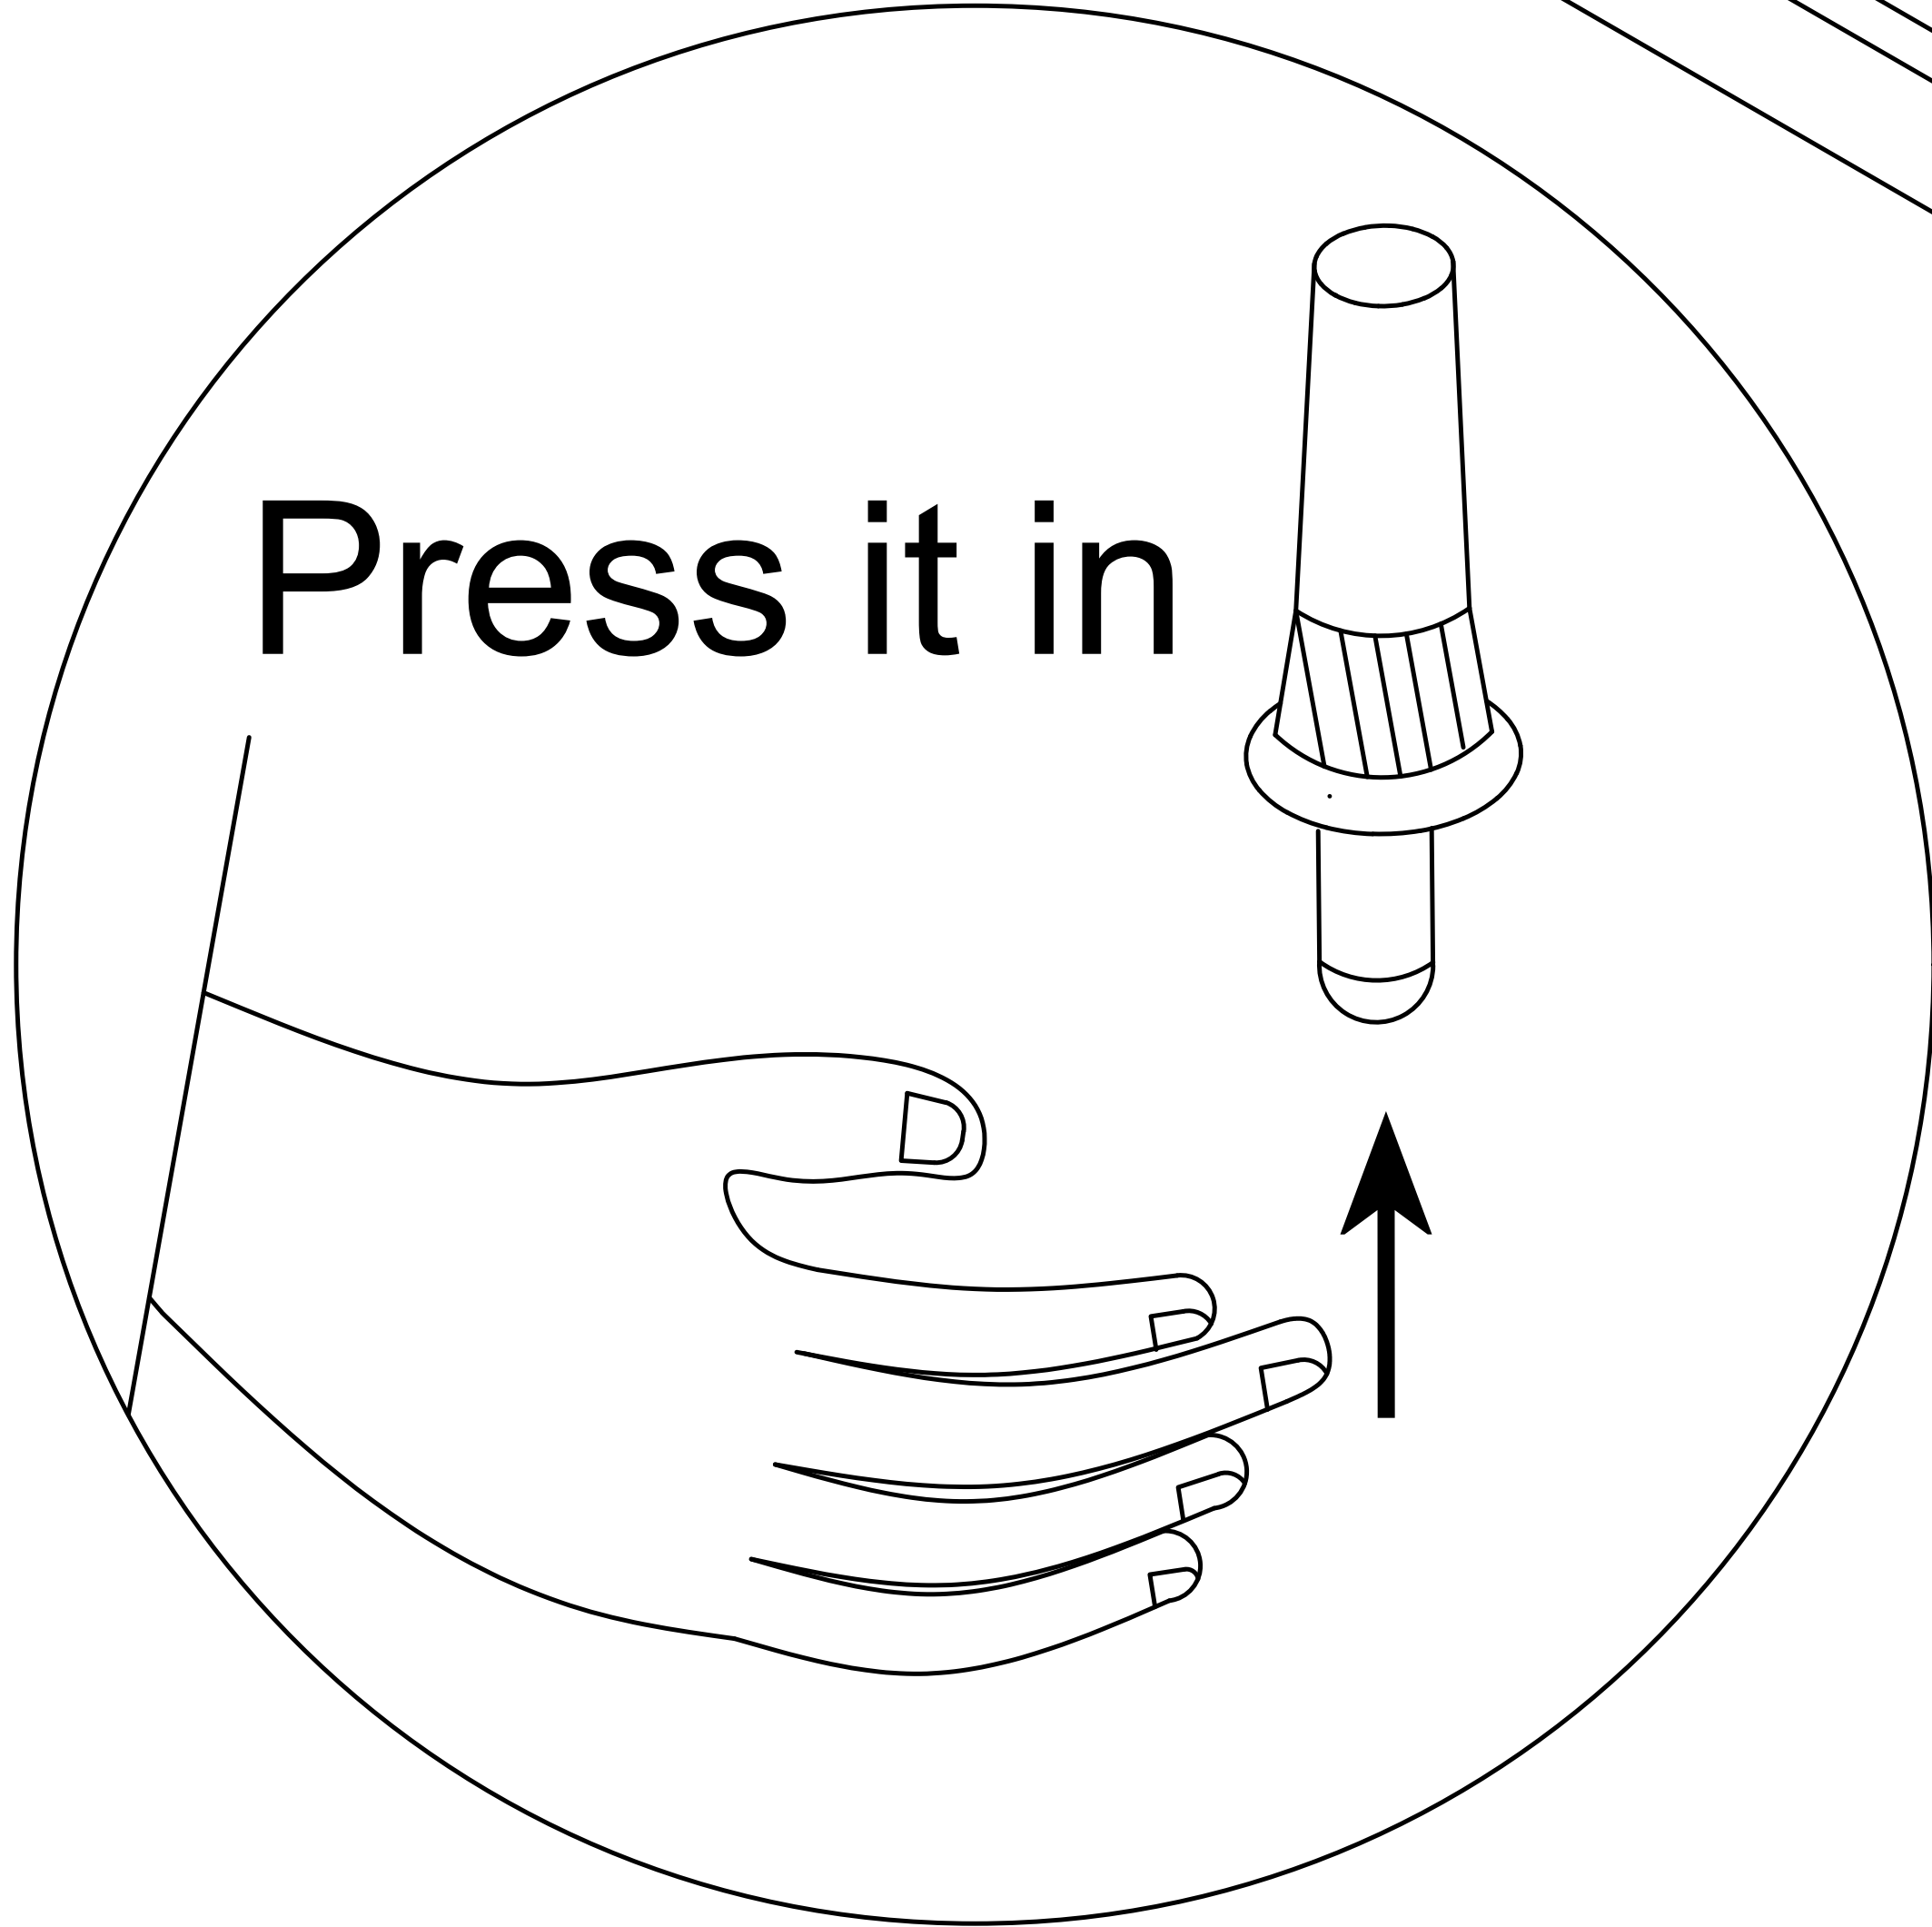
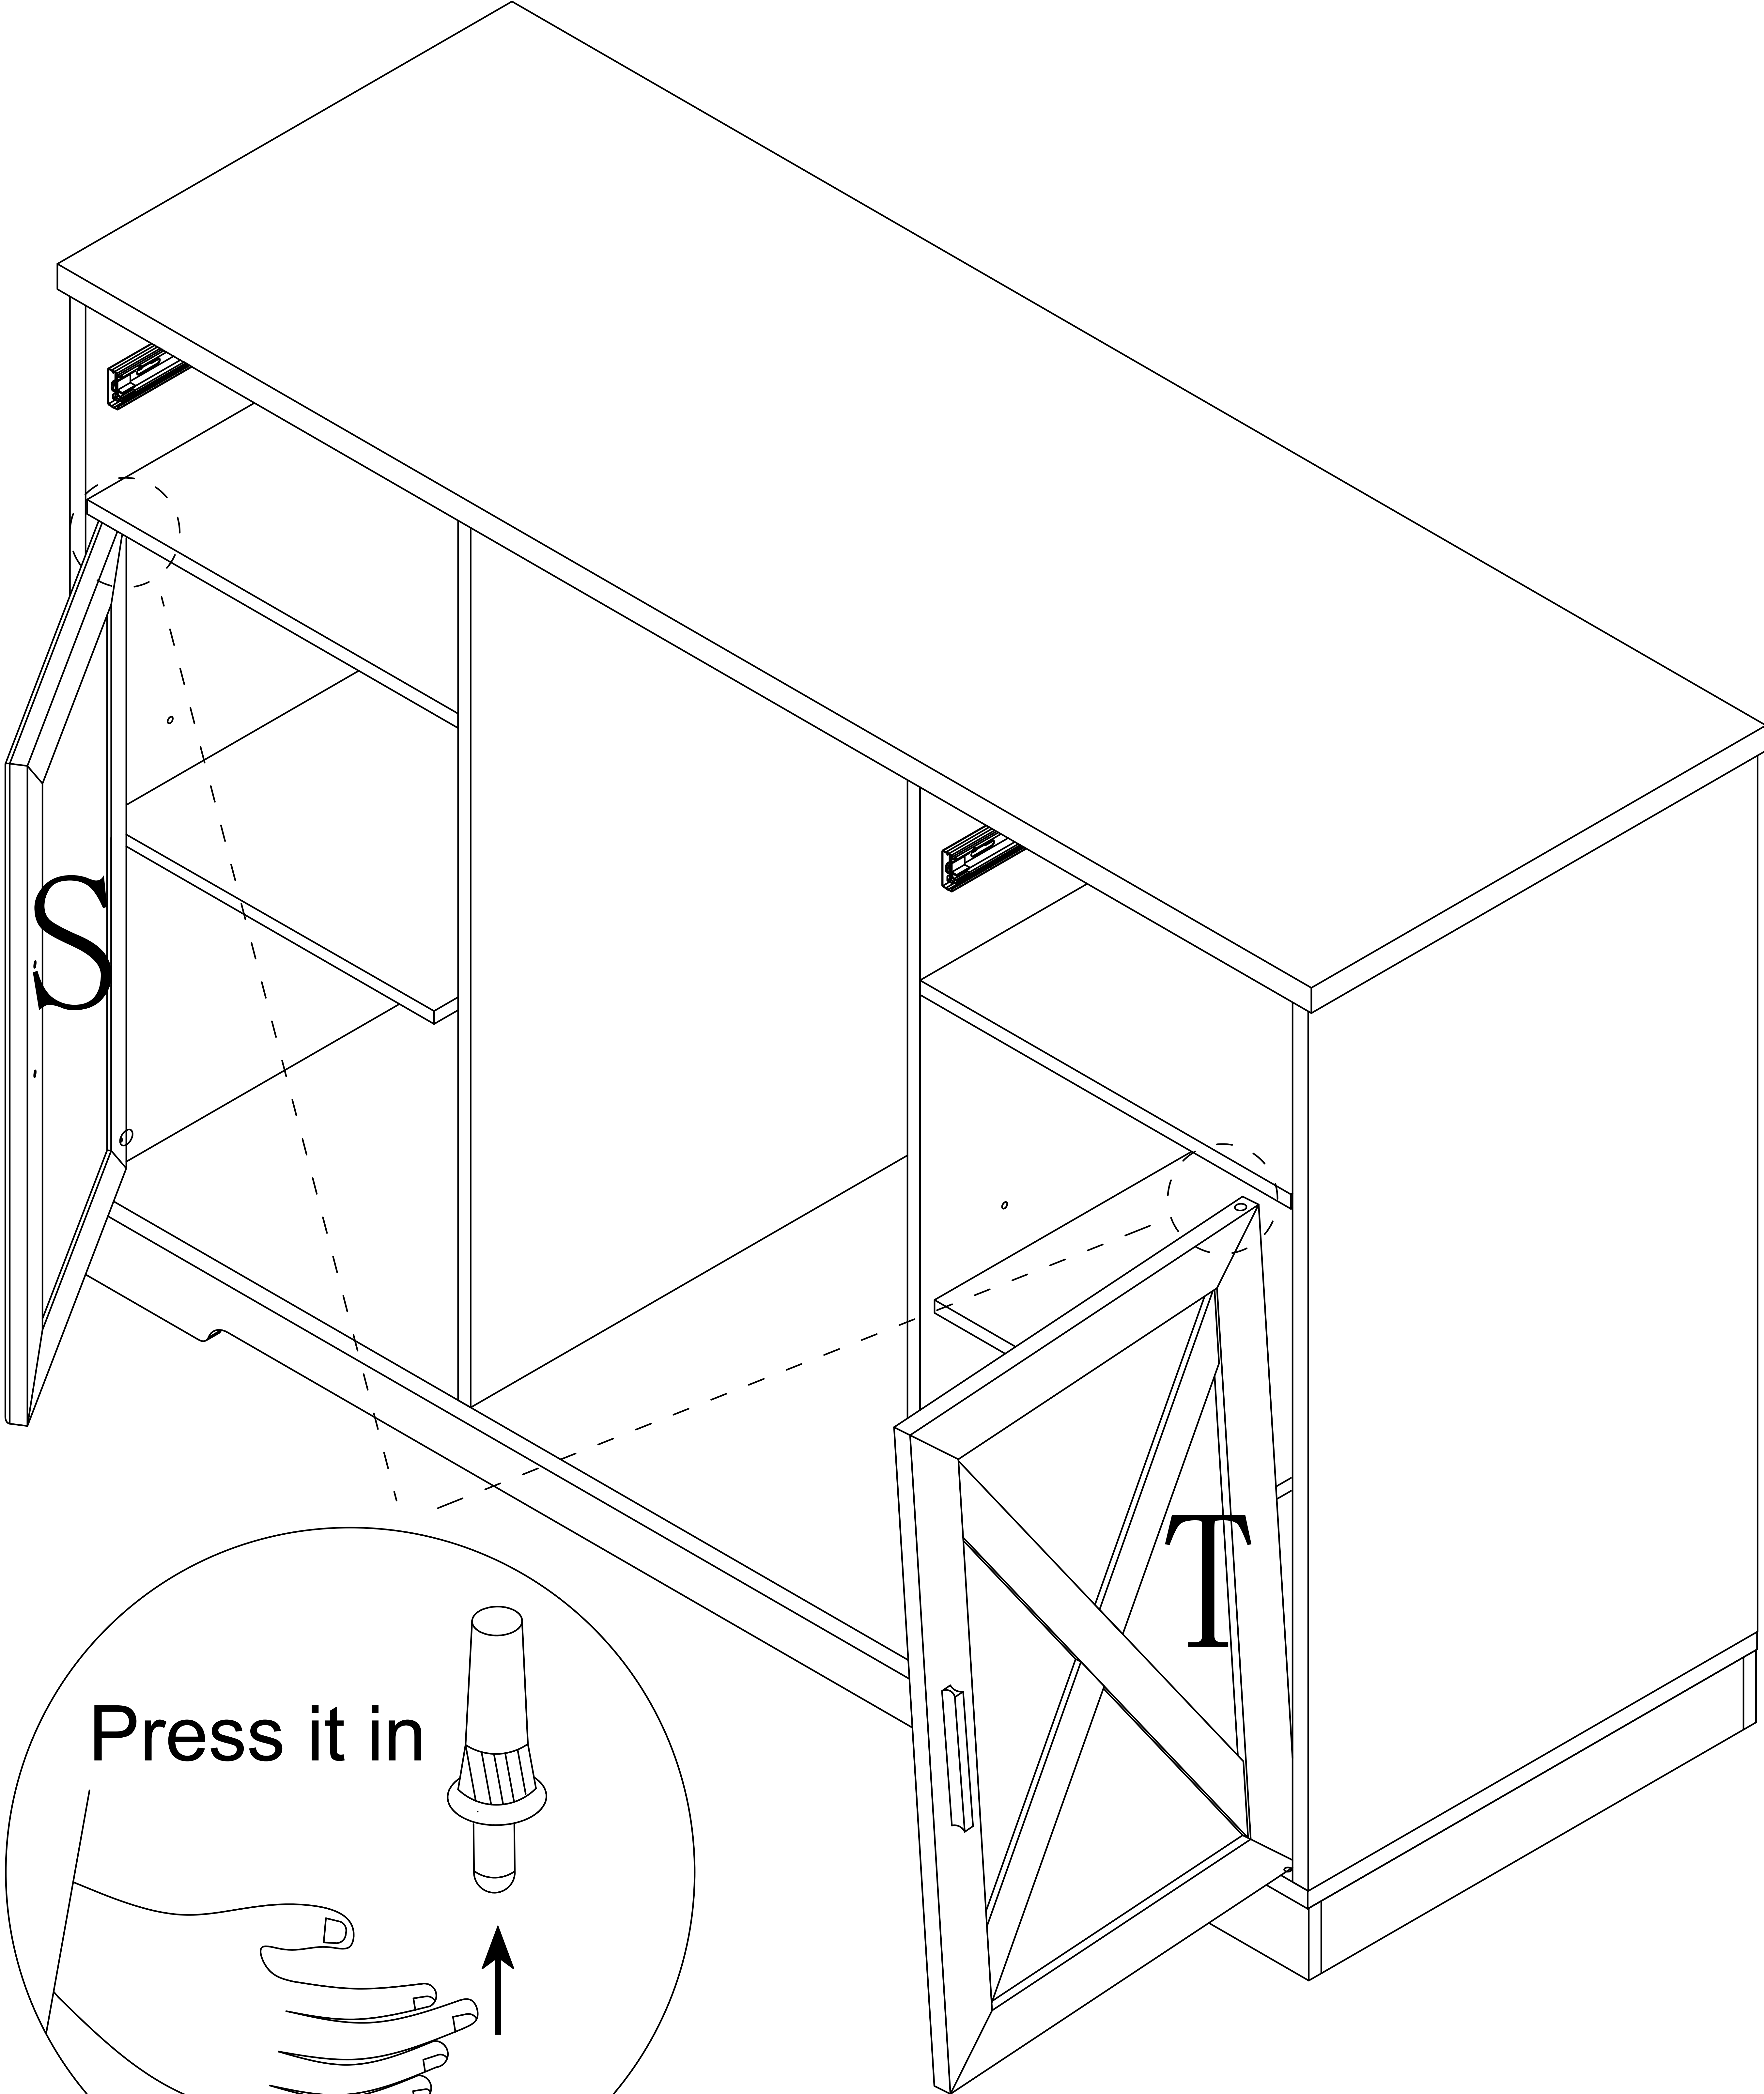


Step 54

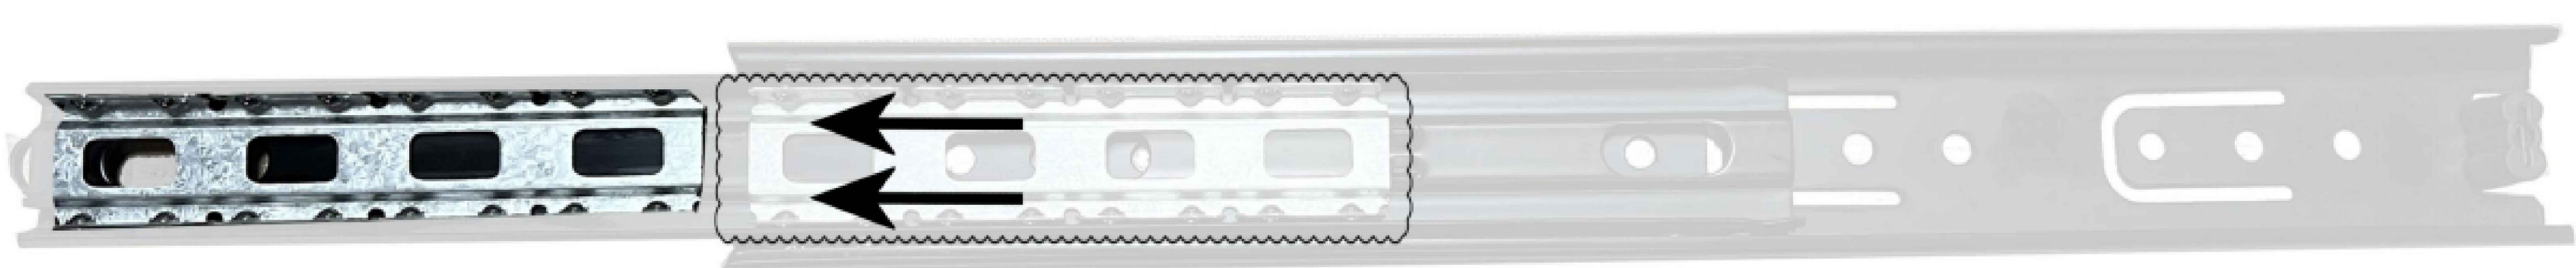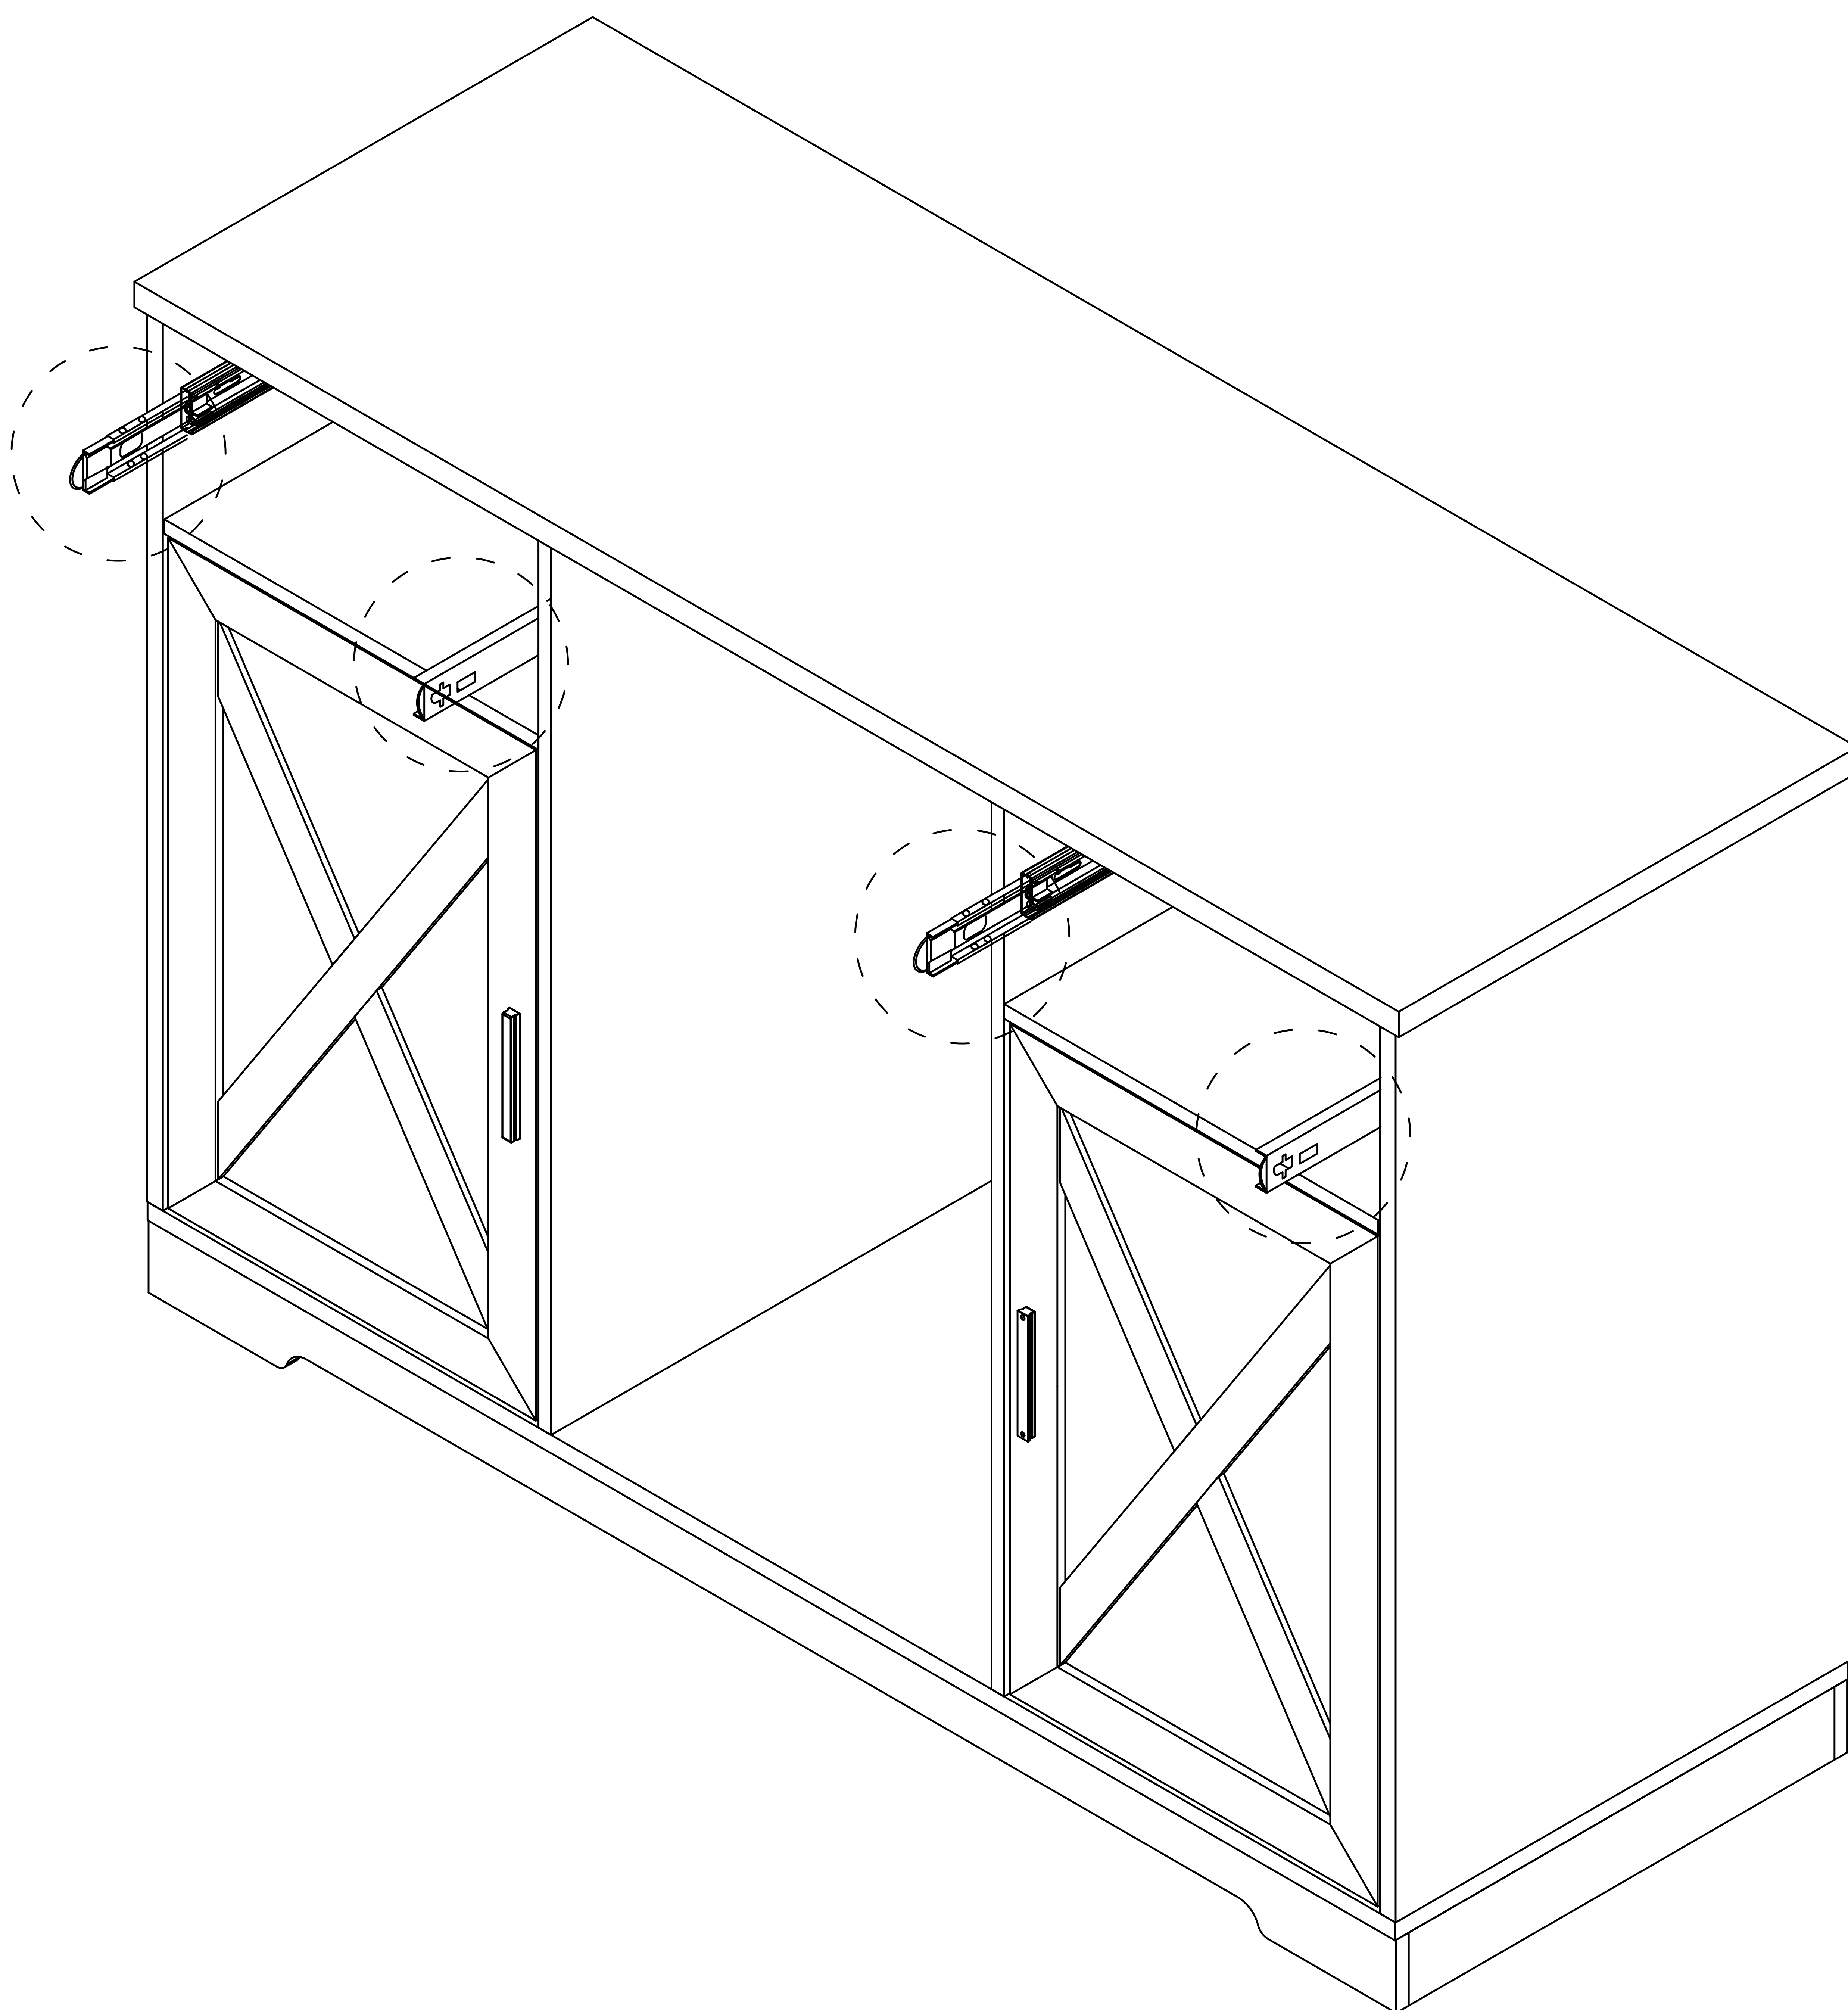

As shown, When installing the drawer,
pull the guide rail out first, Slide beads are also pulled out.


Step 55

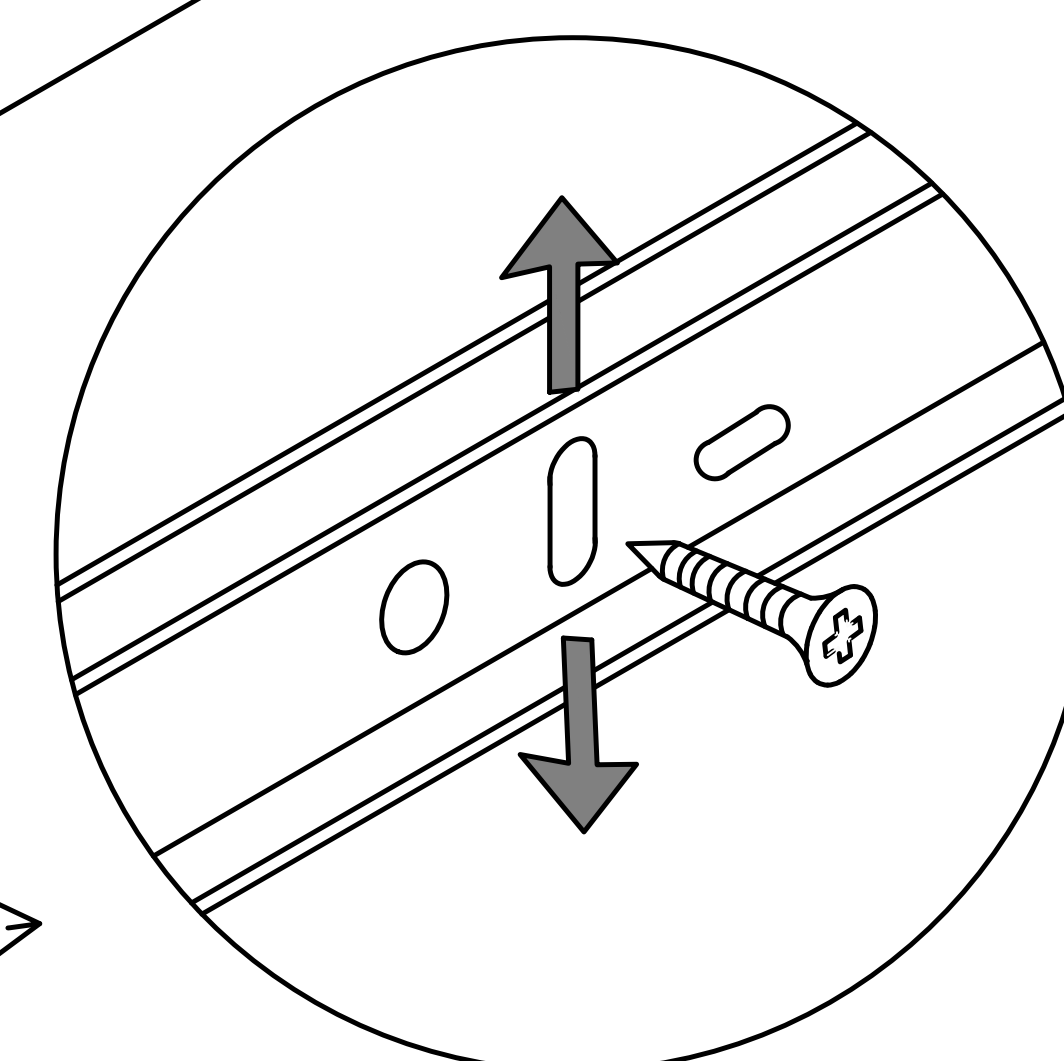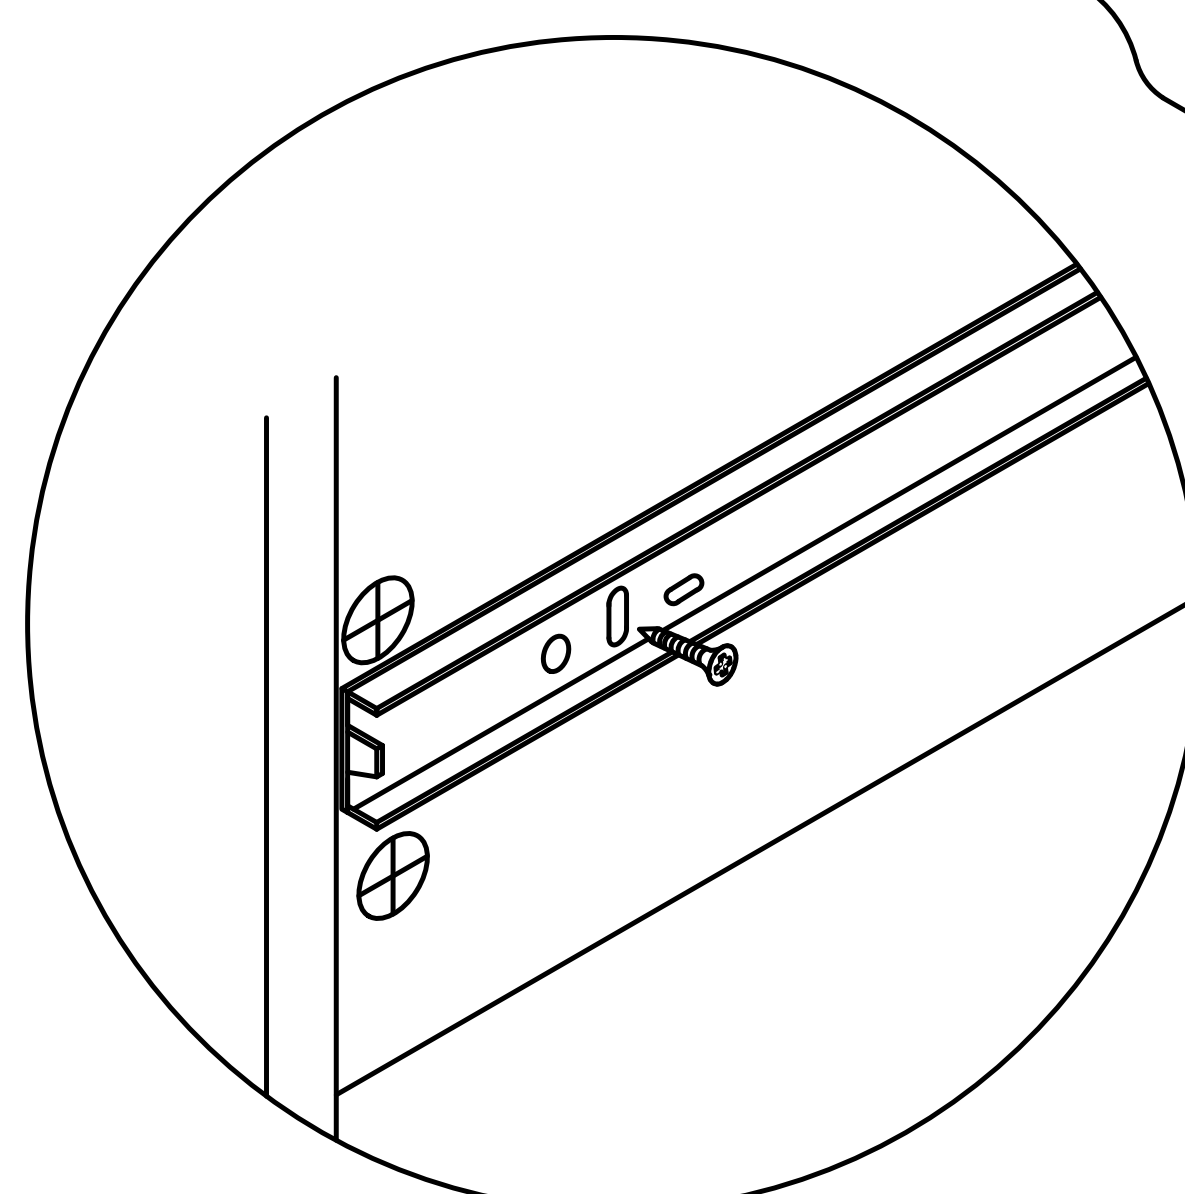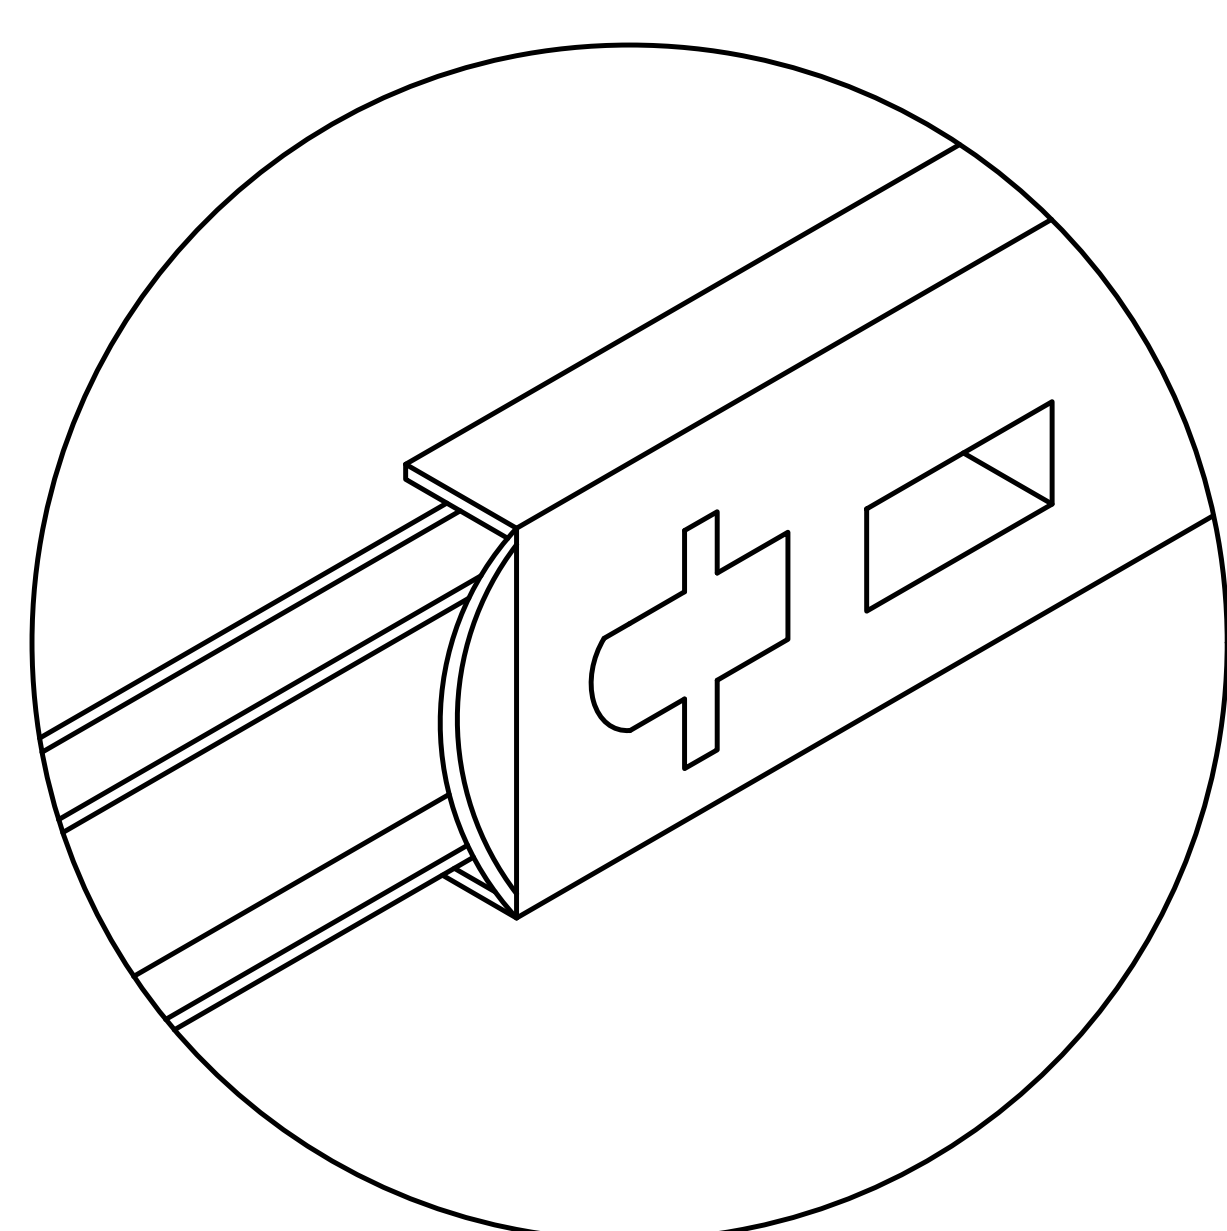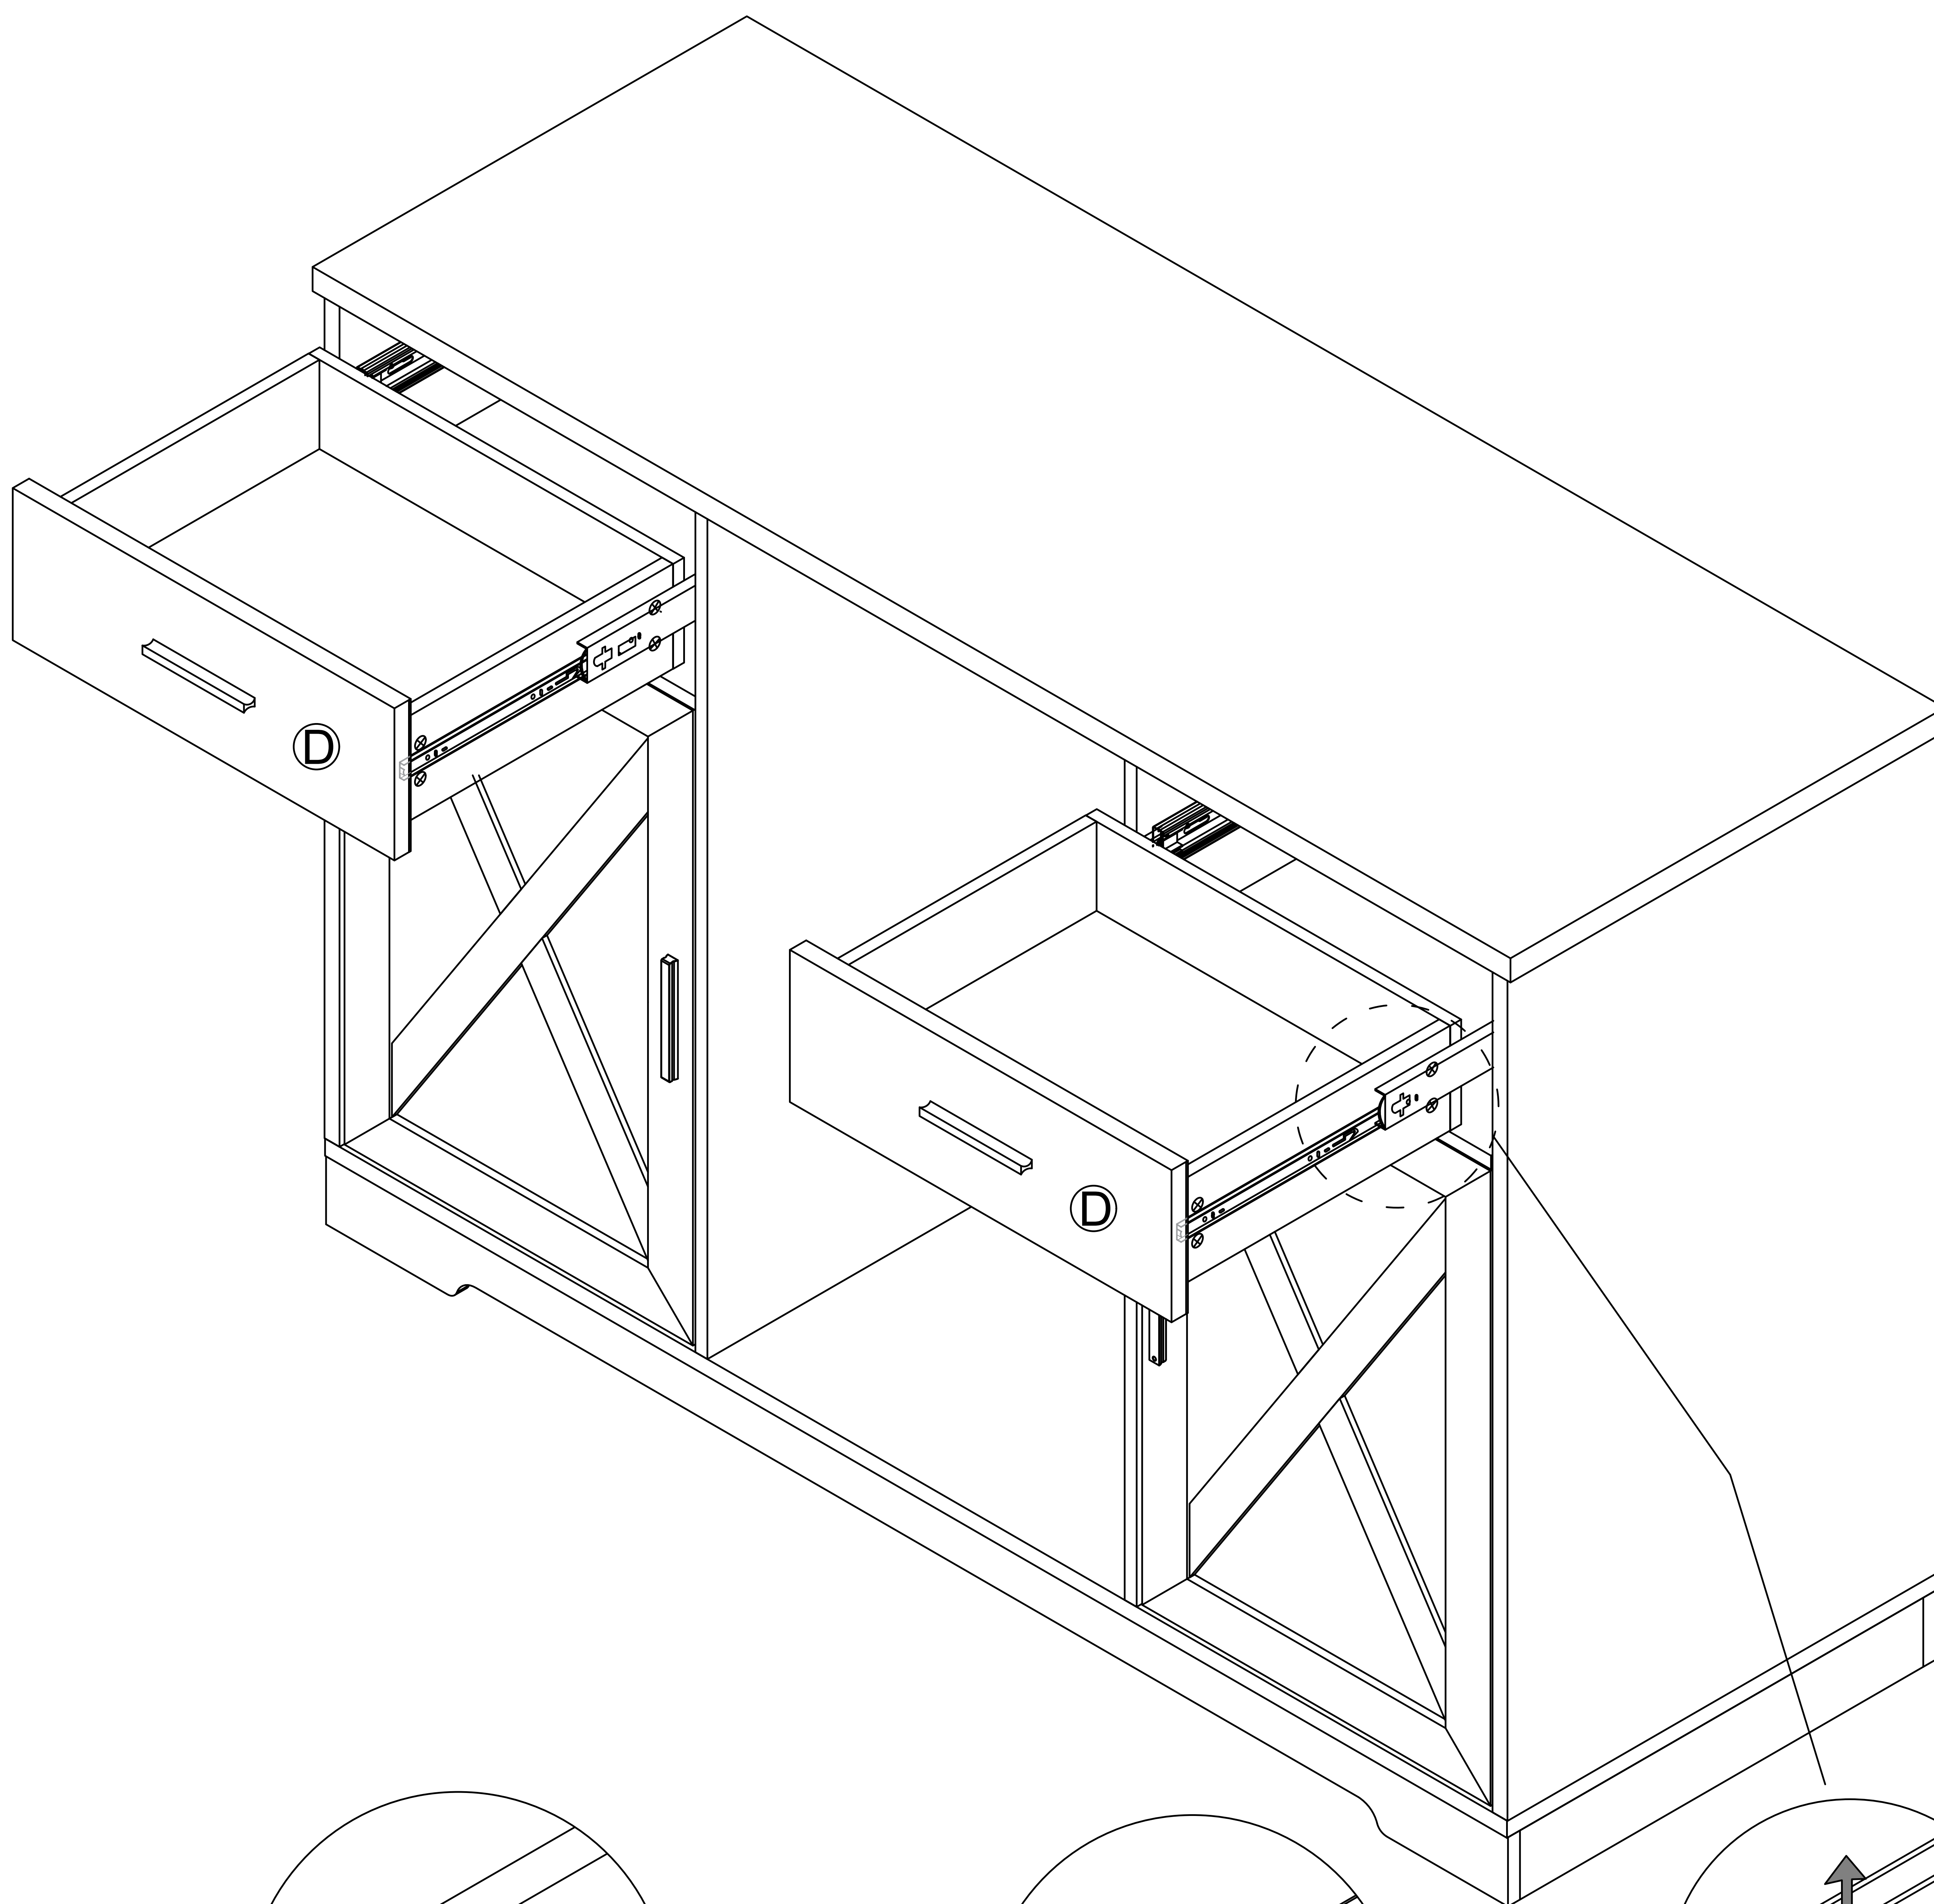


If a large gap is found after installing the drawer the slide rail can be moved up and down to adjust the gap

Step 56

10

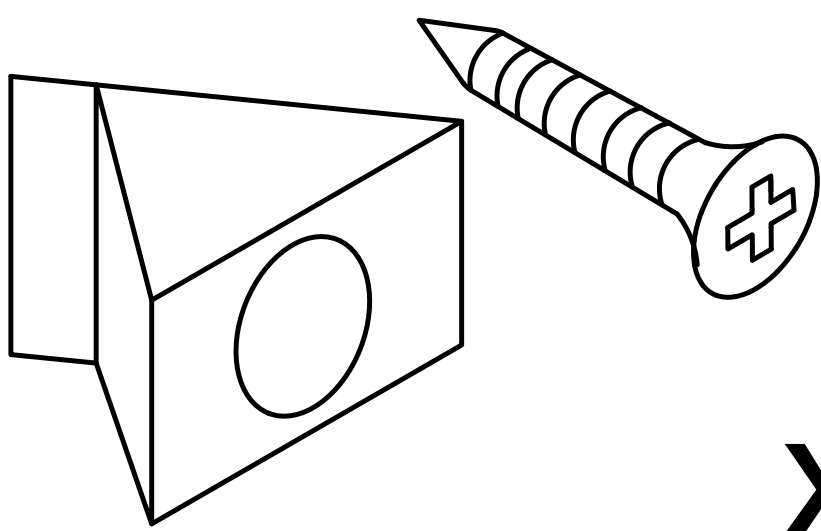


x16

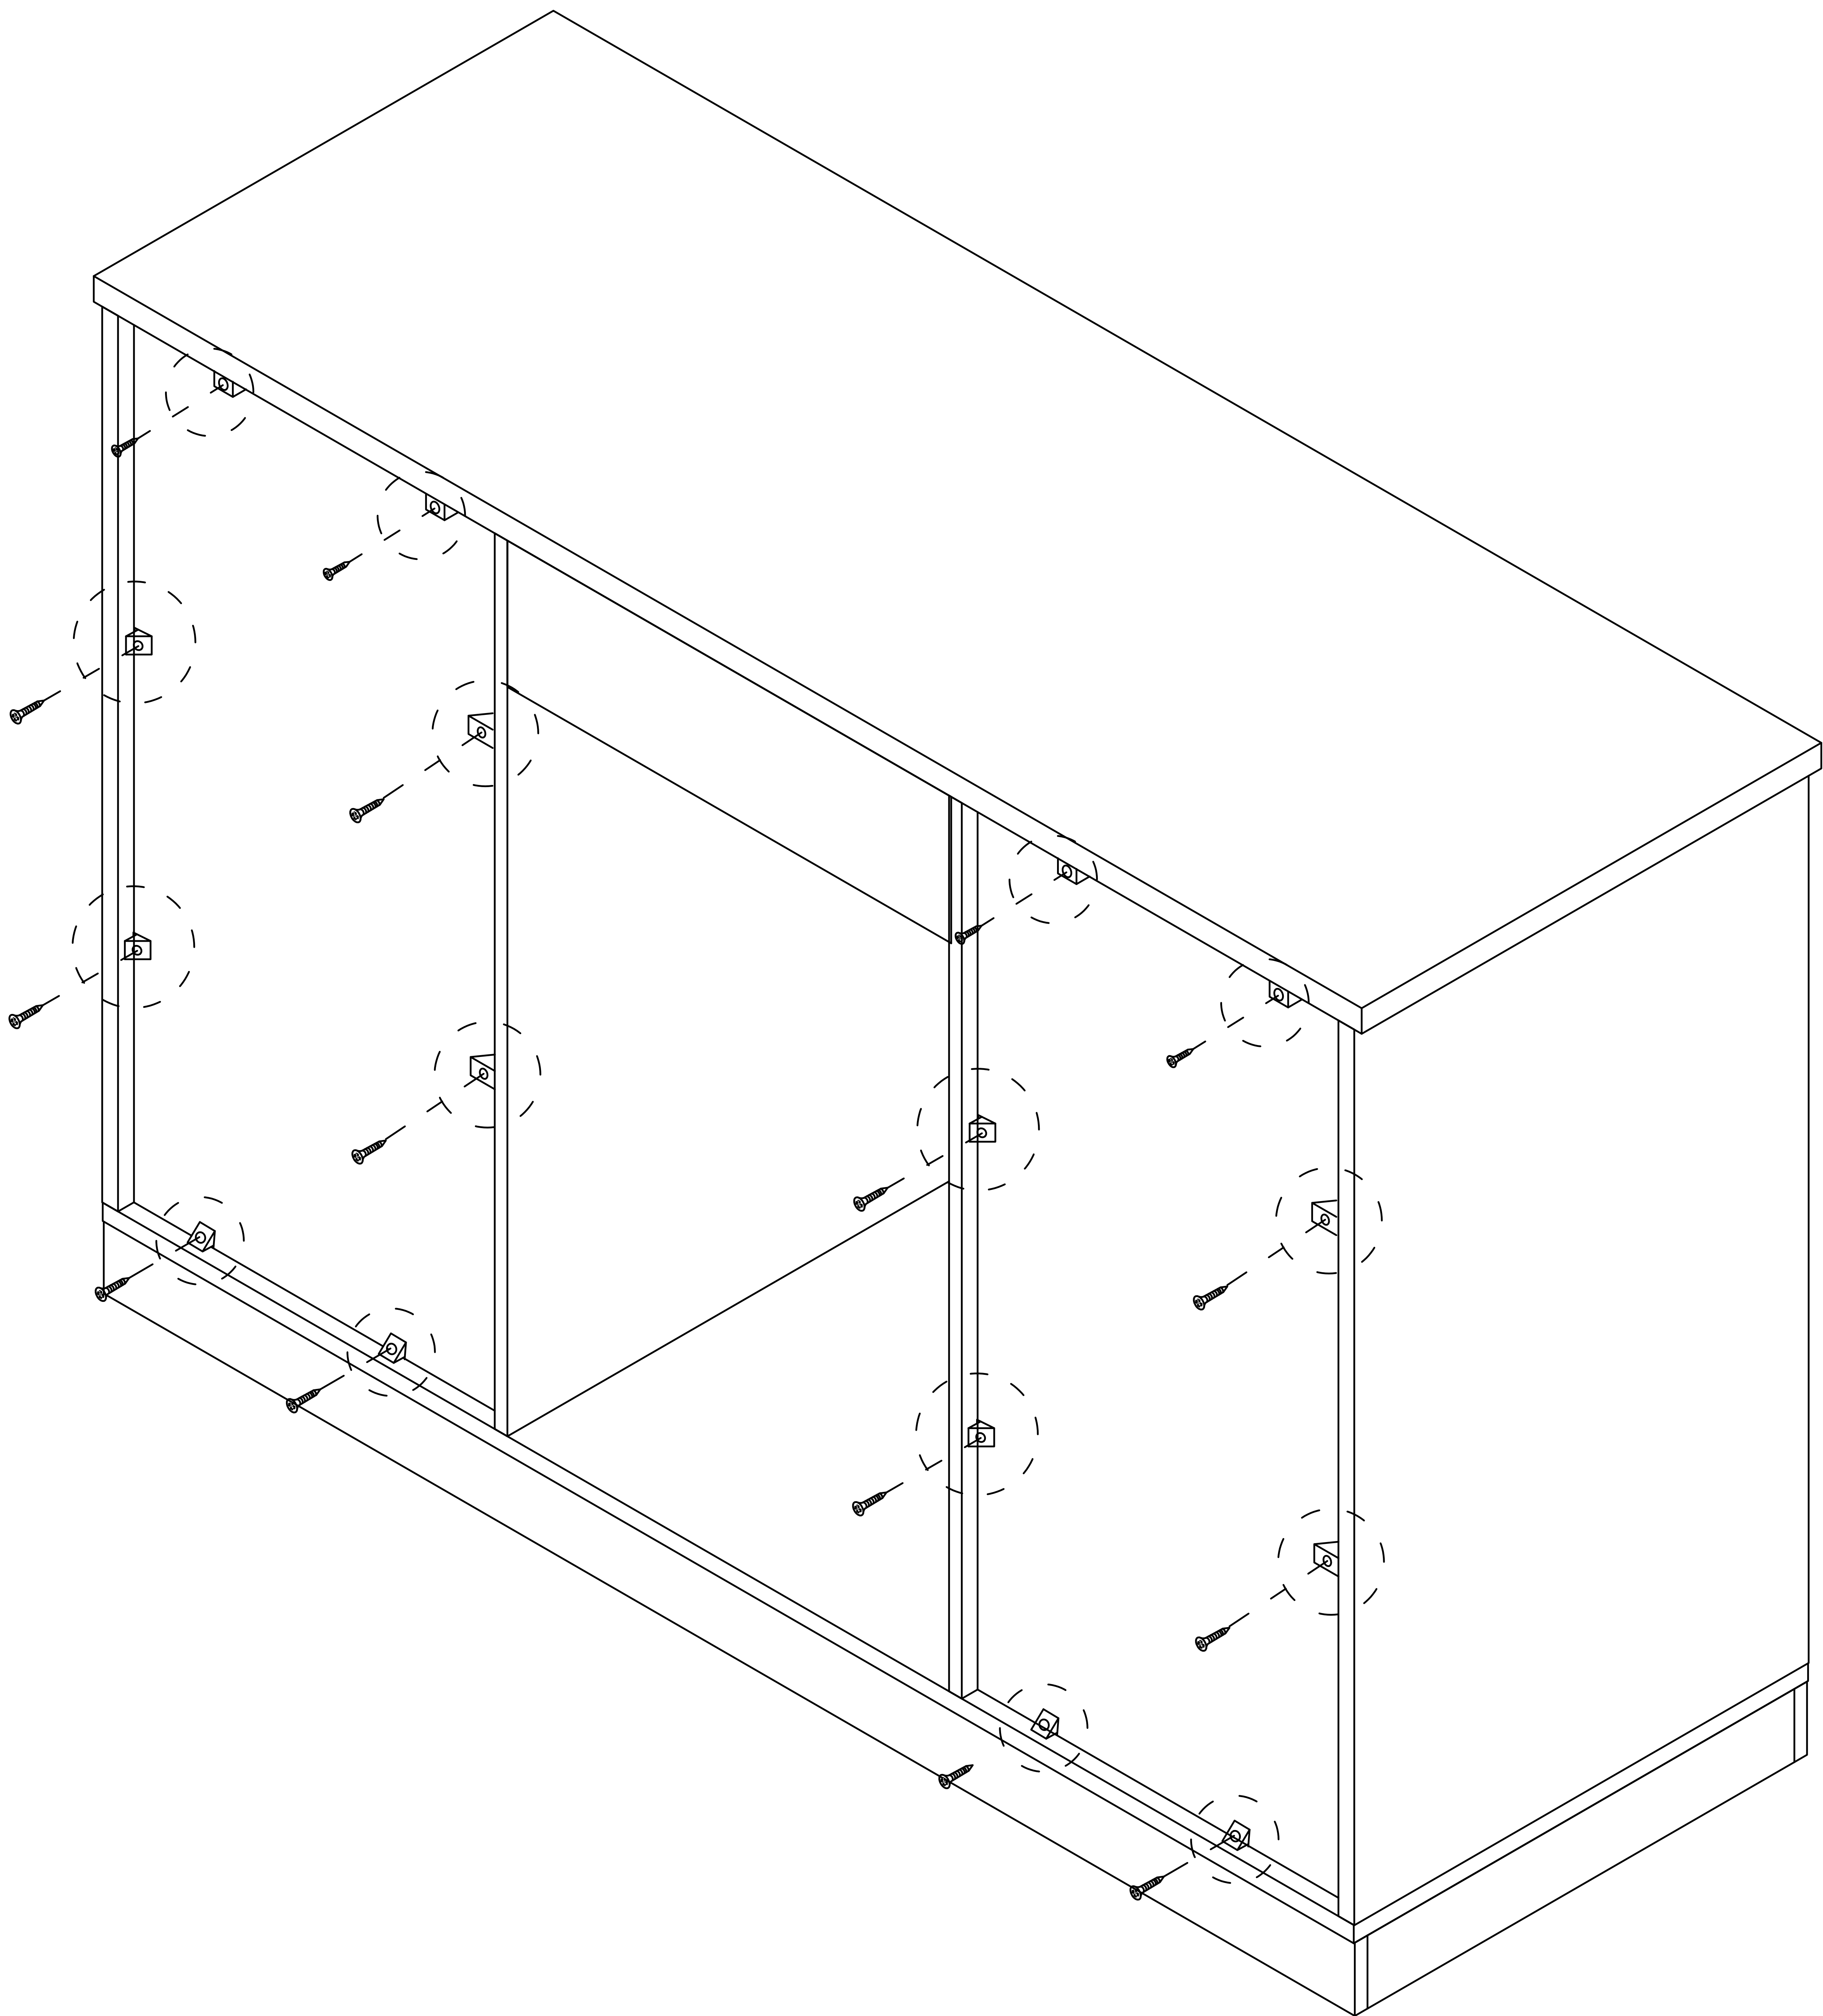


Step 57


11

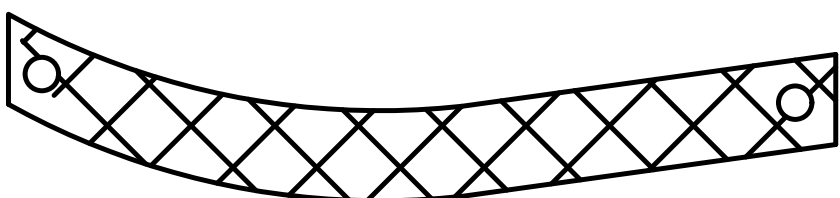


1pcs

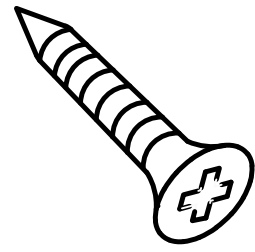

1pcs


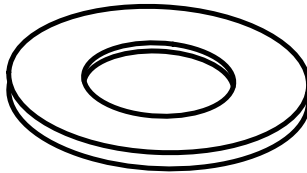


1pcs

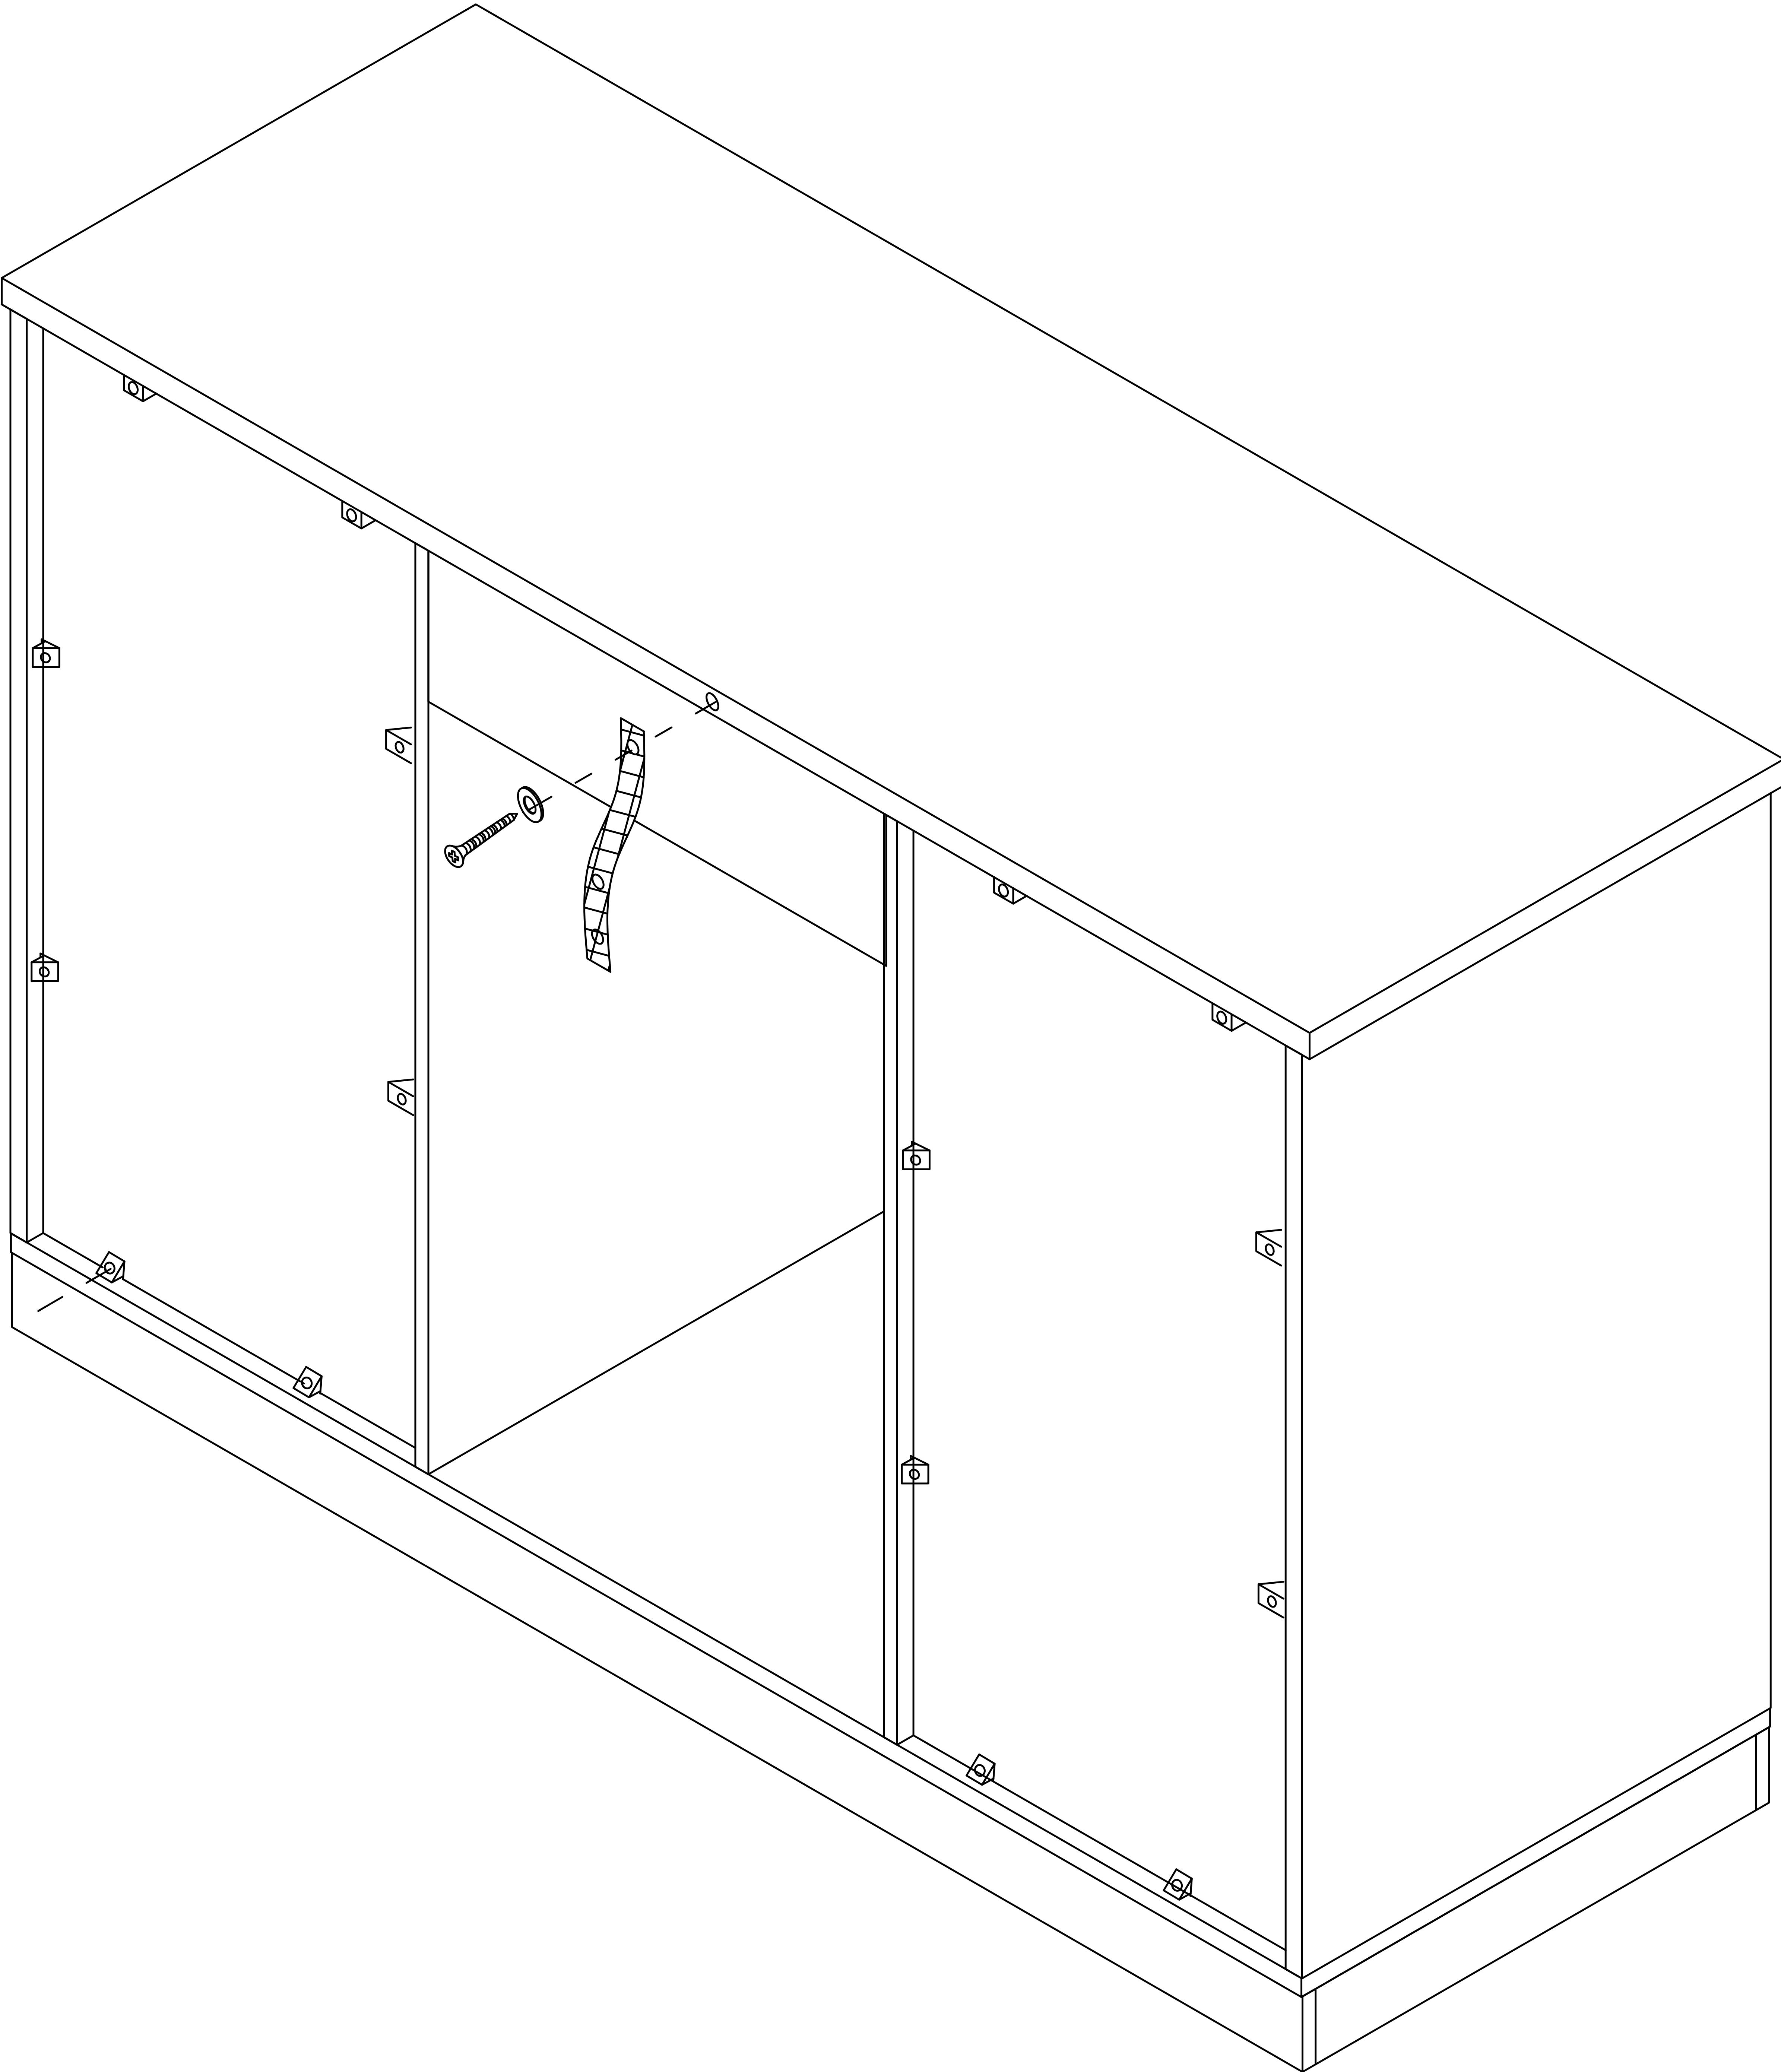

Step 58

use a ruler to measure the approximate height of the product on the wall, and then mark it with a pencil.

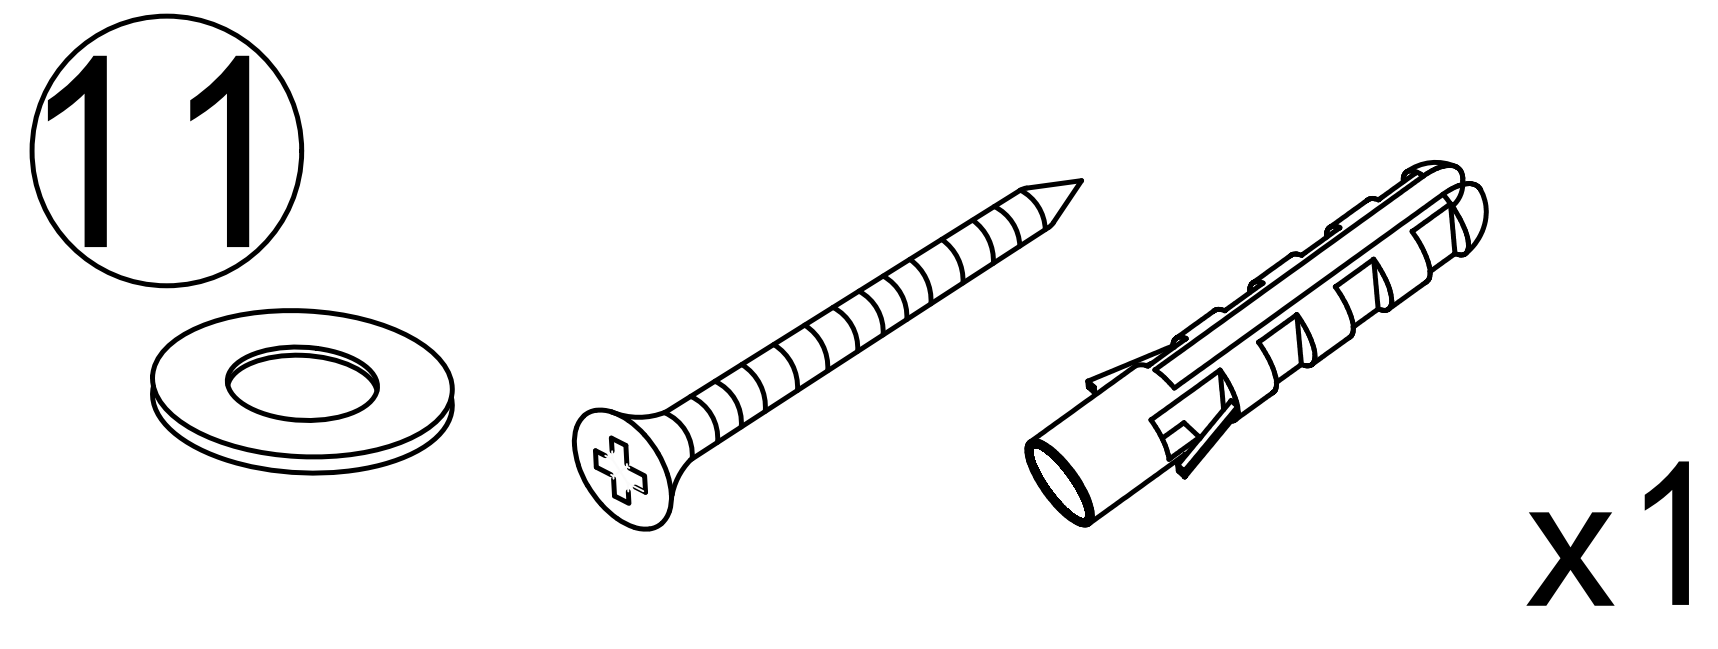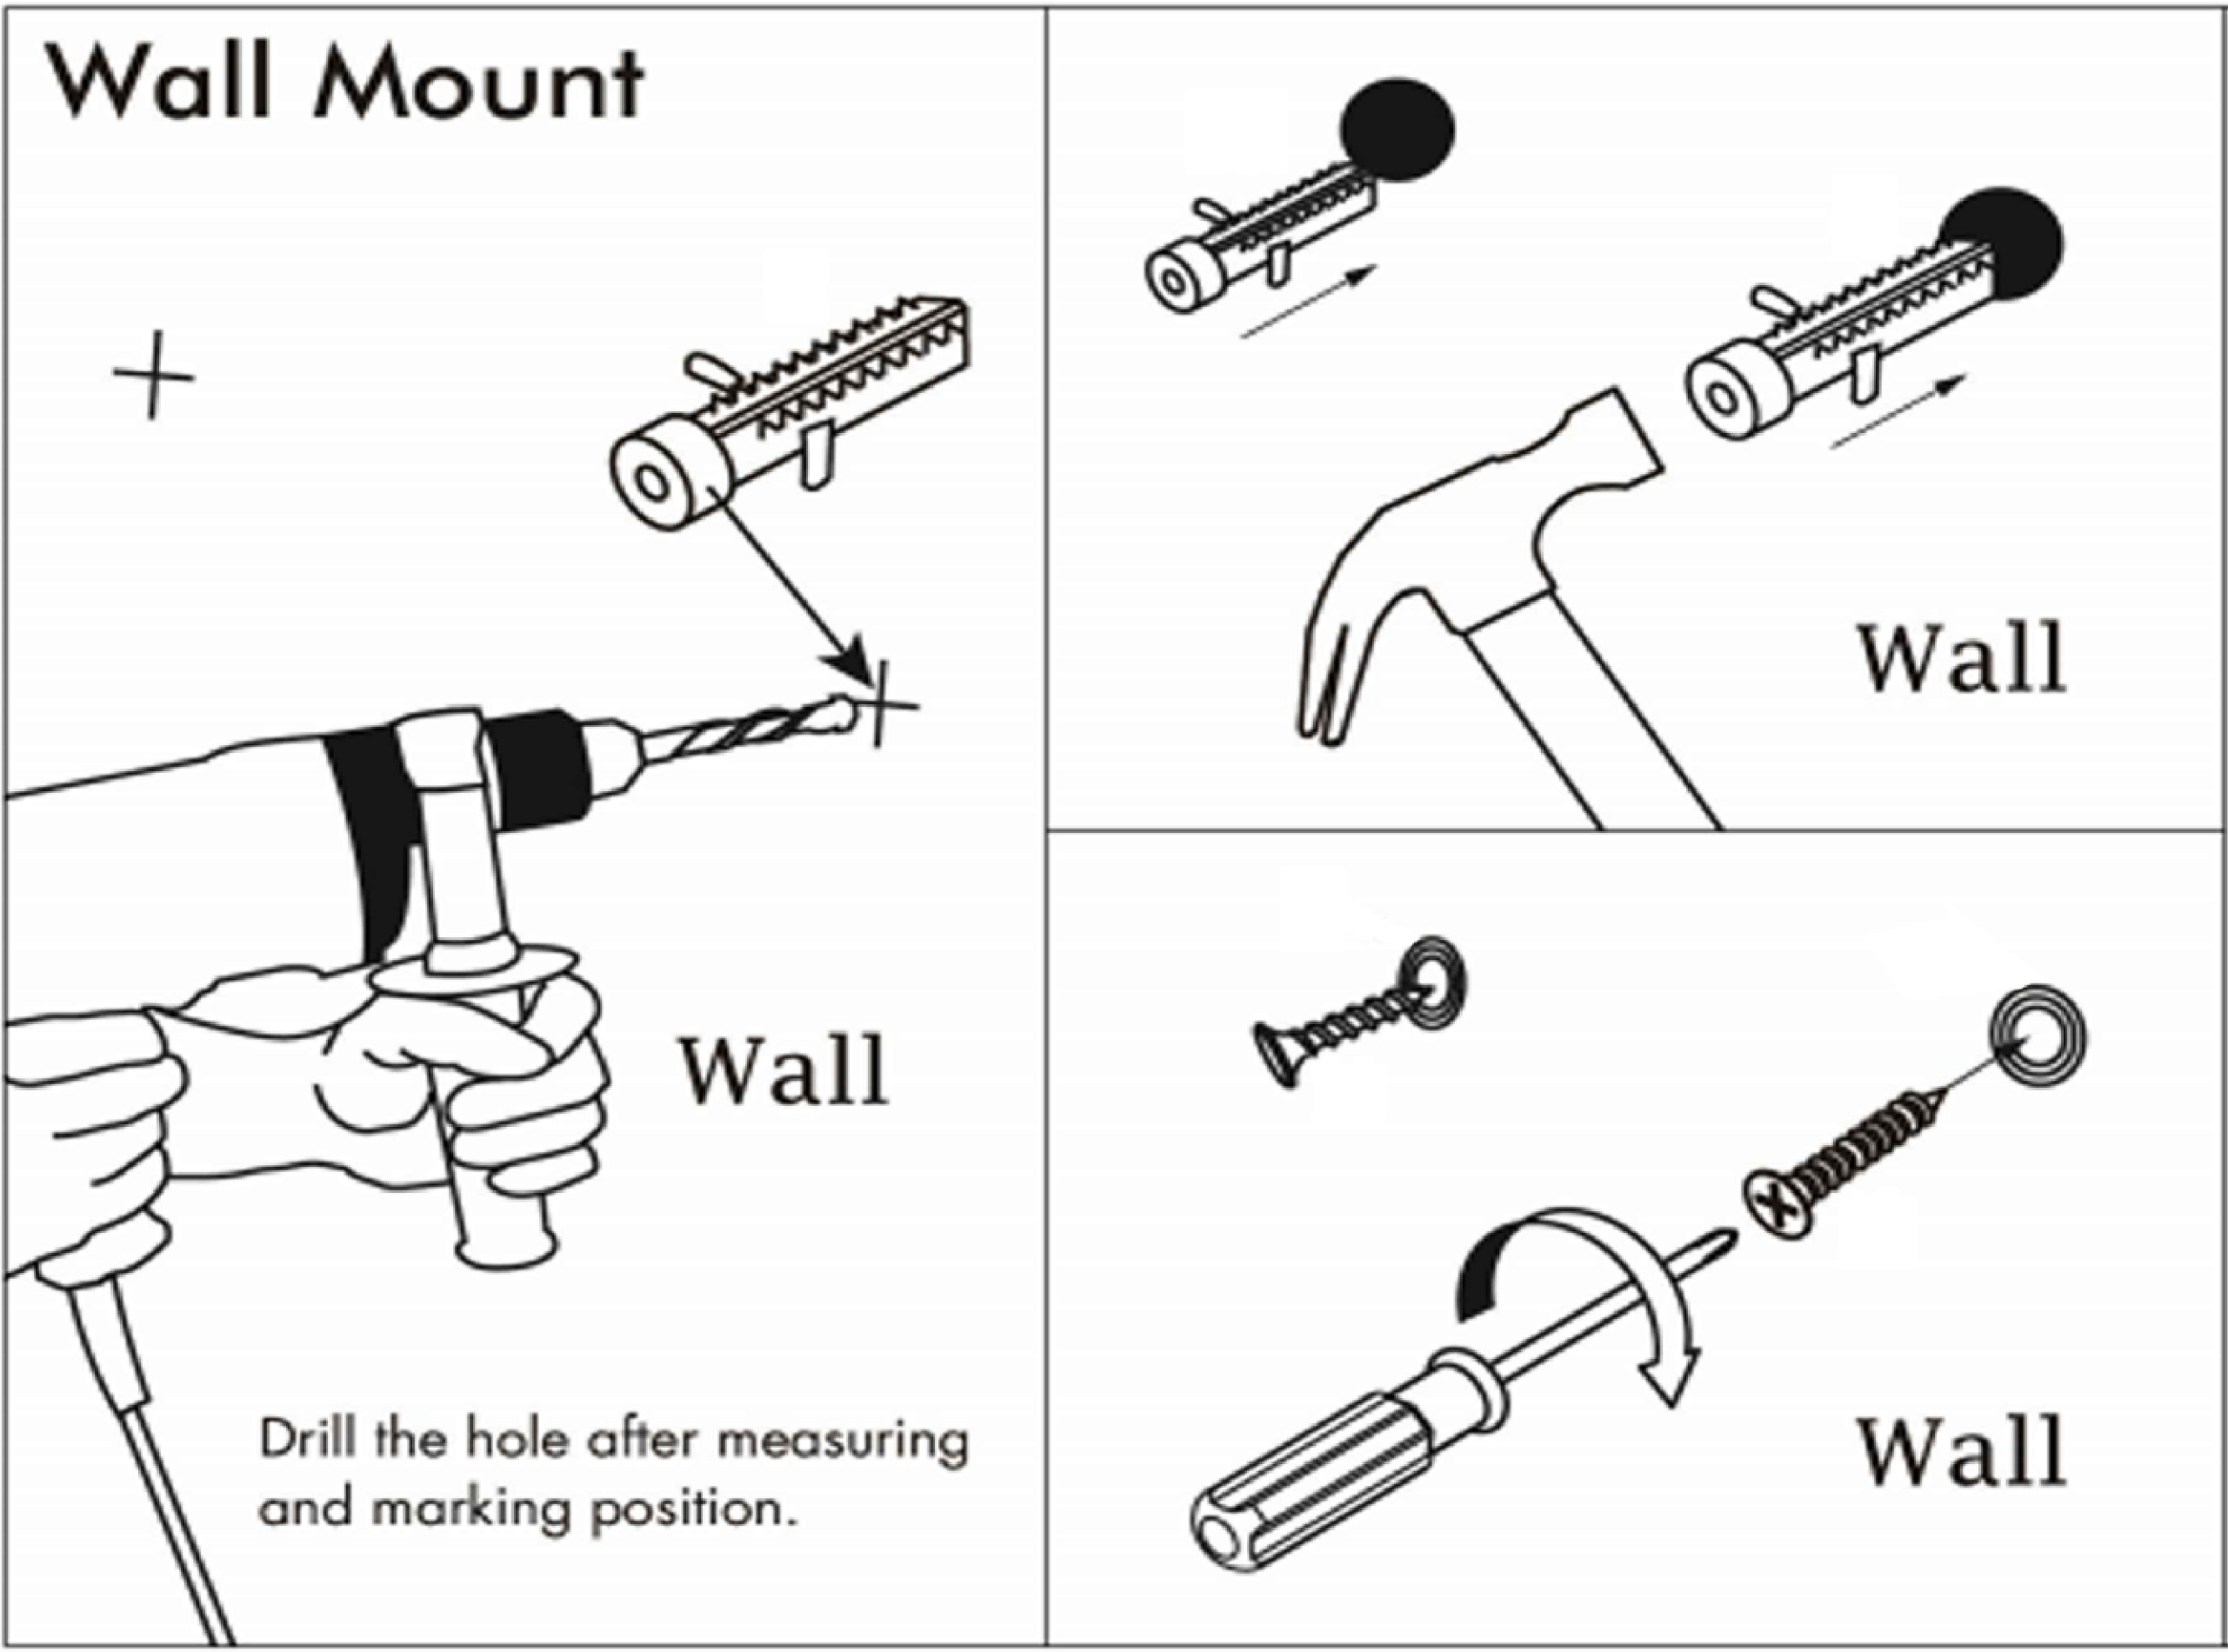

Put the expansion bolt into the hole.

Pass the matching screws through the "anti-rewind" and tighten them to fix them on the wall.

Use a tape drill to make holes in the wall that are suitable for the product screws.

