


Bed Frame with Storage Drawers

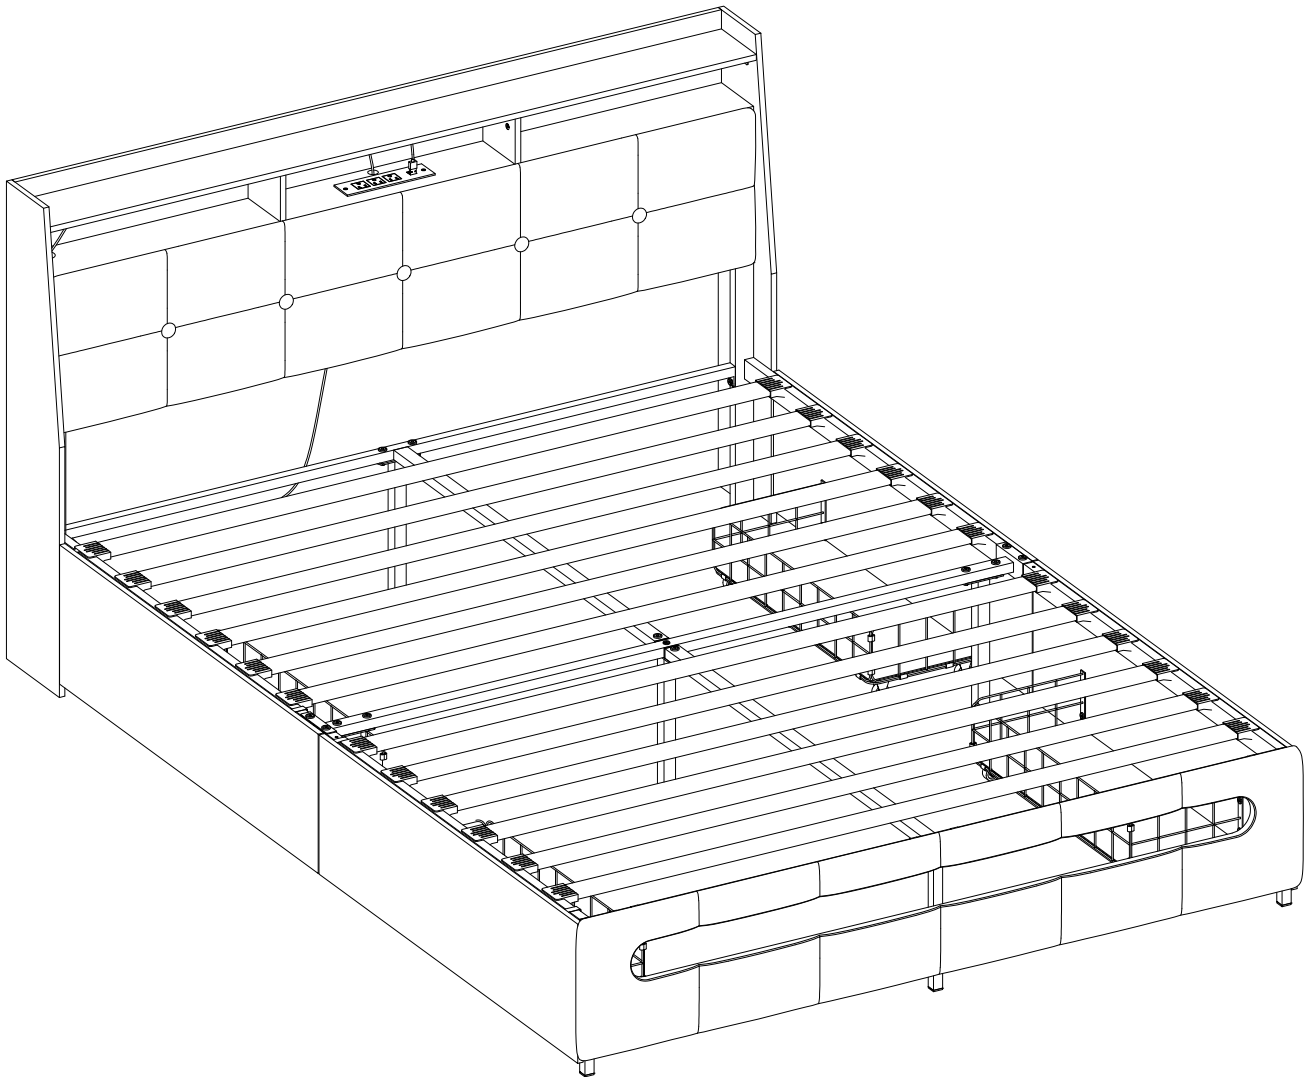

Assembly Manual


Thank you for your purchase at our store.
Please contact us directly if you have difficulty with assembly or need replacement parts.
Professional customer service is here to assist you.























Please attach your order ID or some photos related so that we could help you better.
















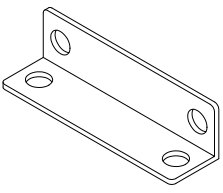

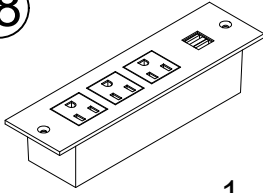
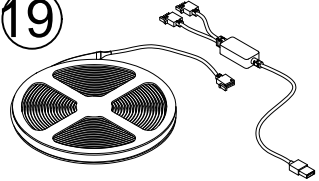
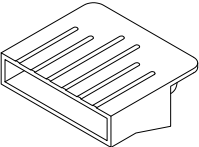
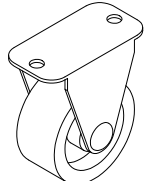

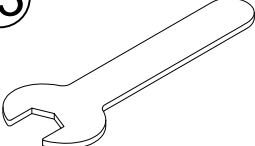
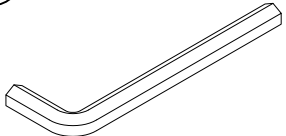

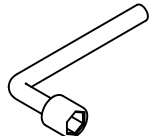
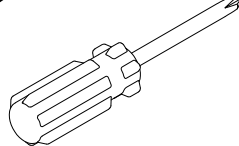

Two people are recommended to install, which will greatly improve your installation efficiency.

Tips Before Assembly



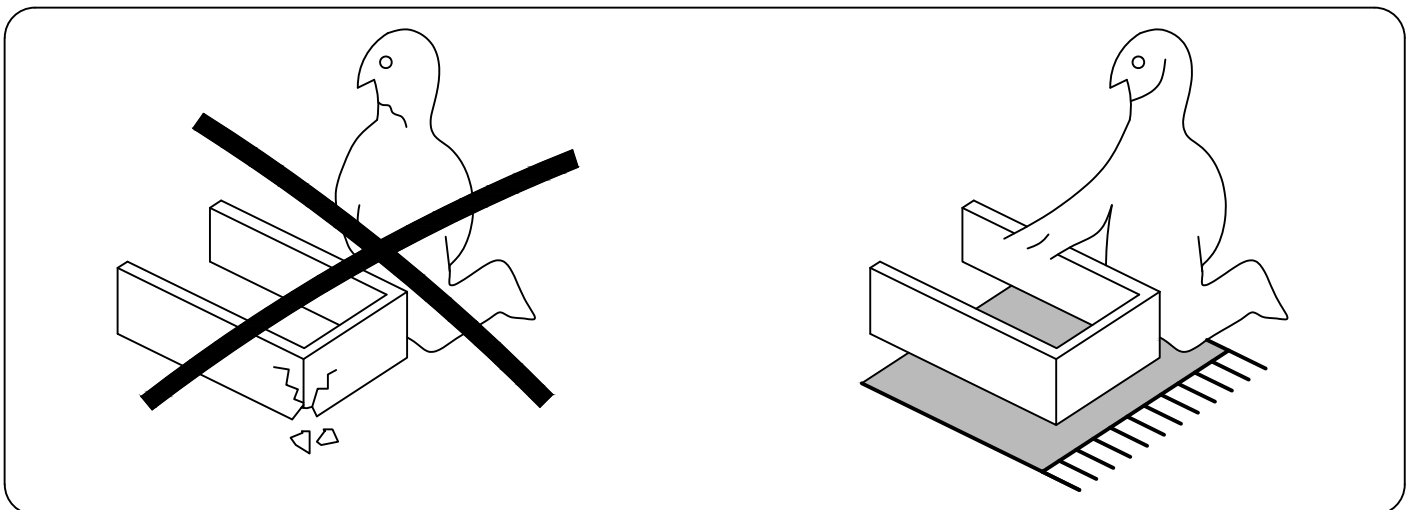
1. Read through each step carefully and follow the proper order.
2. Identify, sort and count all the parts with tags.
3. To avoid any scratching, putting a soft blanket on the floor is suggested.
4. If using a power drill or power screwdriver for the screwing, please be aware to slow down and stop when screw is tight. Failure to do so may result in stripping the screw.
5. Put the screws in loosely until all pieces are together and then tighten them all. It will save your time if you make a mistake while installing.

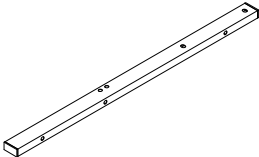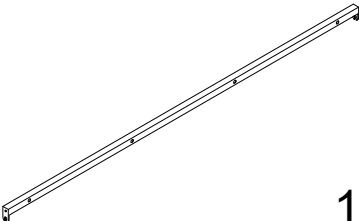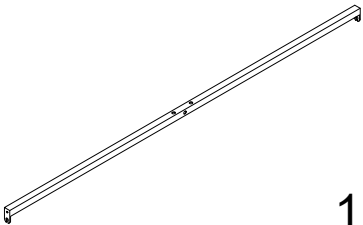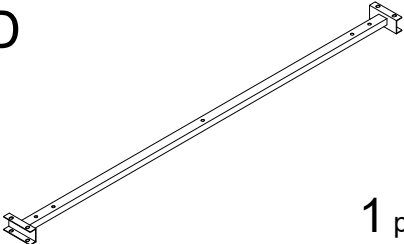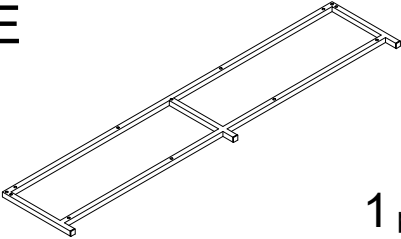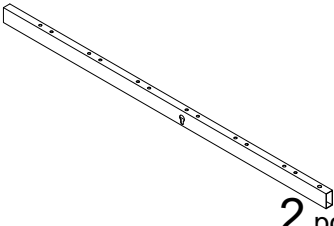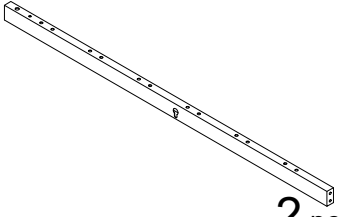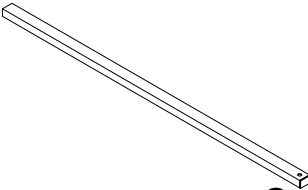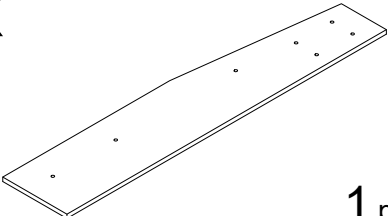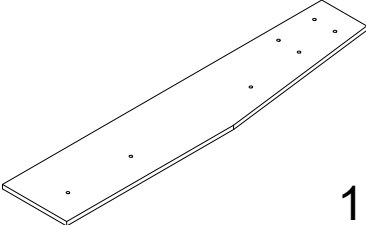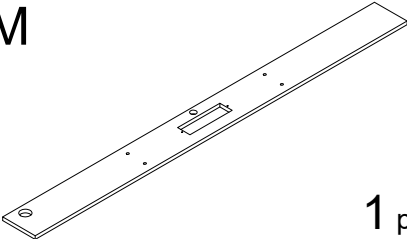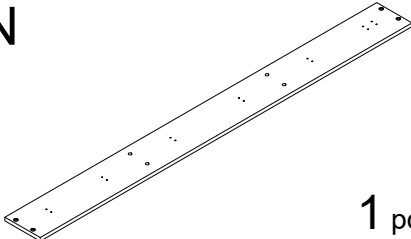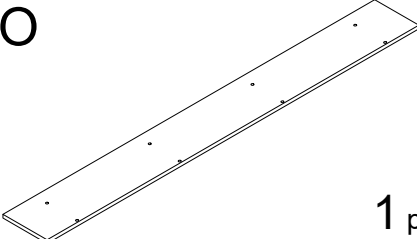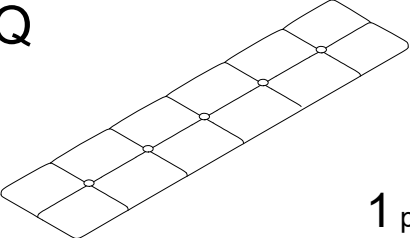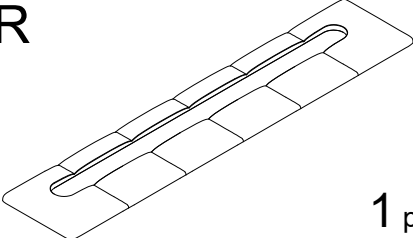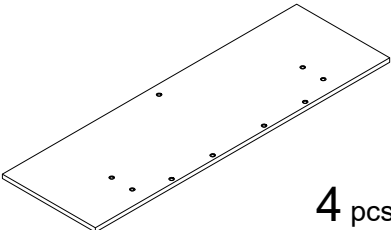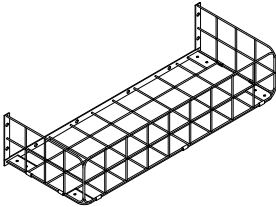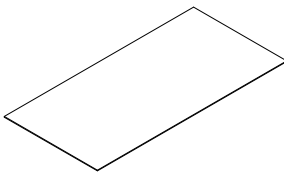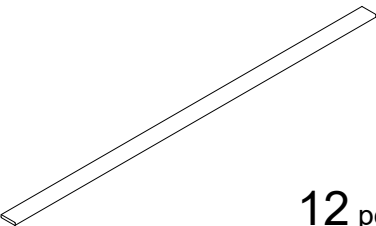

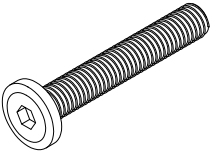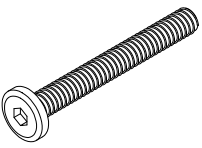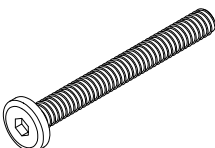
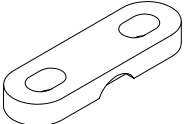
PART LIST		
A  2 pcs	B  1 pc	C  1 pc
D  1 pc	E  1 pc	F  2 pcs
G  2 pcs	H  2 pcs	I  3 pcs
J  1 pc	K  1 pc	L  1 pc
M  1 pc	N  1 pc	O  1 pc
P  2 pcs	Q  1 pc	R  1 pc
S  4 pcs	T  4 pcs	U  4 pcs
V  12 pcs		

HARDWARE LIST			
<div>①</div>  <div>M8x504 pcs</div>	<div>②</div>  <div>M812 pcs</div>	<div>③</div>  <div>M6x3511 pcs</div>	<div>④</div>  <div>M8x308 pcs</div>
<div>⑤</div>  <div>M6x502 pcs</div>	<div>⑥</div>  <div>M6x554 pcs</div>	<div>⑦</div>  <div>M6x3216 pcs</div>	<div>⑧</div>  <div>M3X1216 pcs</div>
<div>⑨</div>  <div>7 pcs</div>	<div>⑩</div>  <div>M6x1244 pcs</div>	<div>⑪</div>  <div>M6x254 pcs</div>	<div>⑫</div>  <div>M7x3812 pcs</div>
<div>⑬</div>  <div>16 pcs</div>	<div>⑭</div>  <div>M4x632 pcs</div>	<div>⑮</div>  <div>M6x104 pcs</div>	<div>⑯</div>  <div>6 pcs</div>
<div>⑰</div>  <div>M6x1012 pcs</div>	<div>⑱</div>  <div>1 pc</div>	<div>⑲</div>  <div>1.4M1 pc</div>	<div>⑳</div>  <div>24 pcs</div>
<div>㉑</div>  <div>16 pcs</div>	<div>㉒</div>  <div>9 pcs</div>	<div>㉓</div>  <div>14MM1 pc</div>	<div>㉔</div>  <div>M51 pc</div>
<div>㉕</div>  <div>M41 pc</div>	<div>㉖</div>  <div>M41 pc</div>	<div>㉗</div>  <div>1 pc</div>	<div>㉘</div>  <div>RF Remote Control1 pc</div>

STEP 1

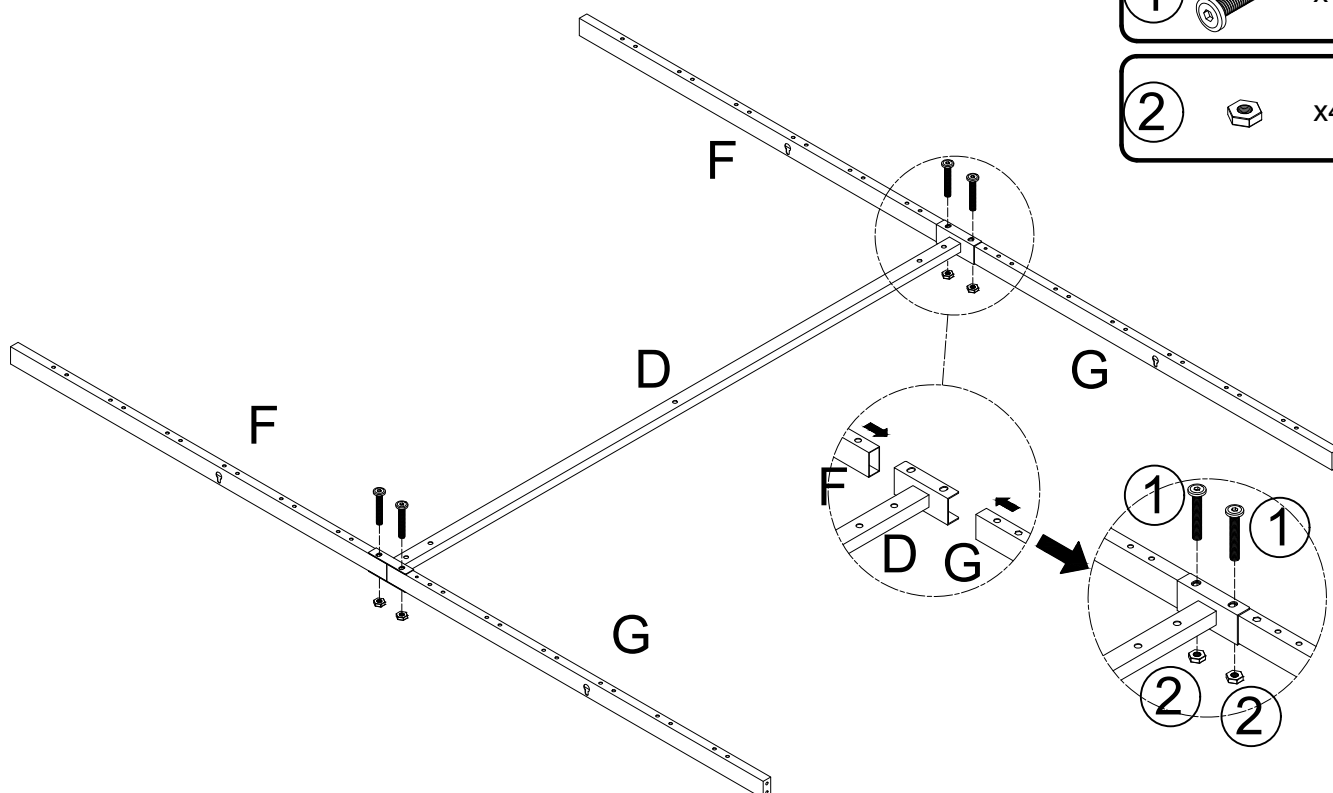




STEP 2

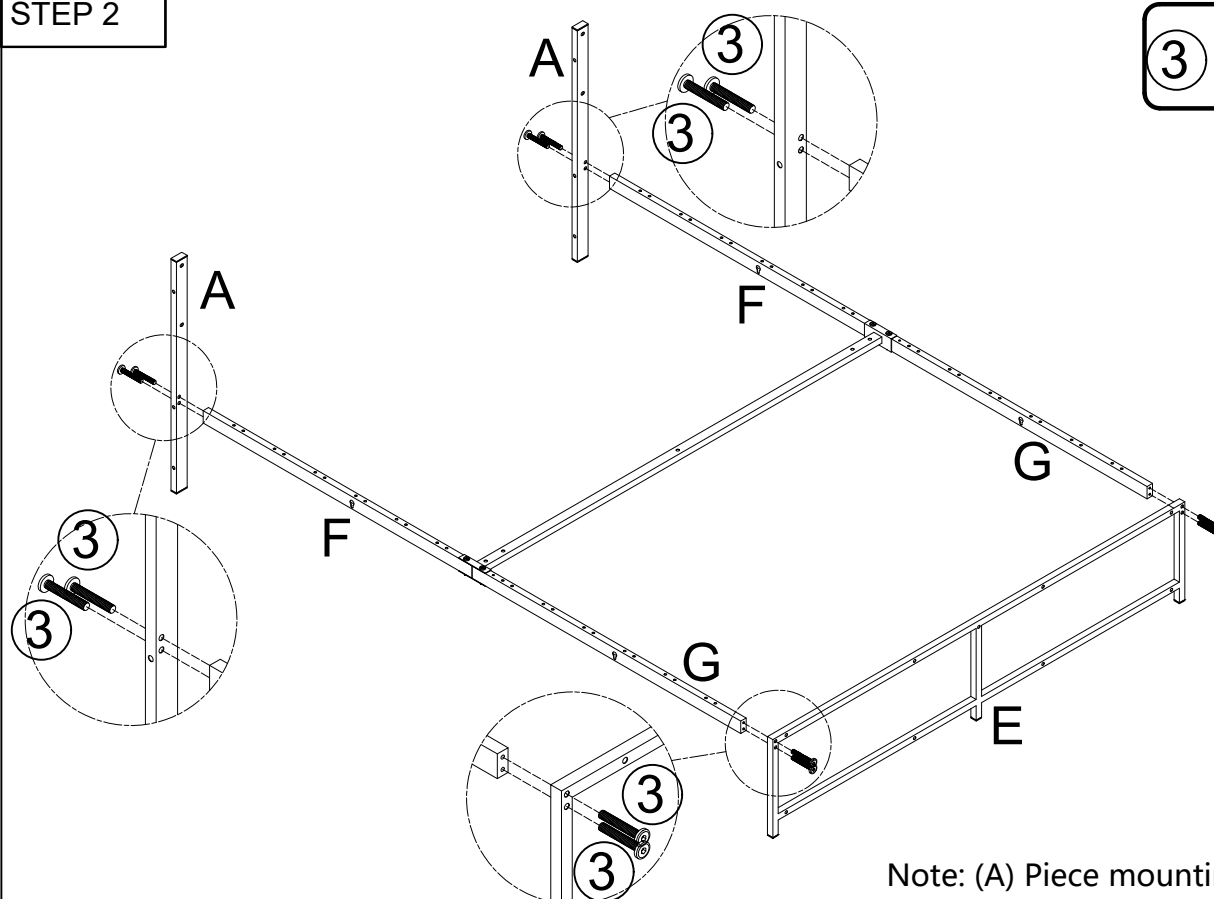



Note: (A) Piece mounting direction


STEP 3

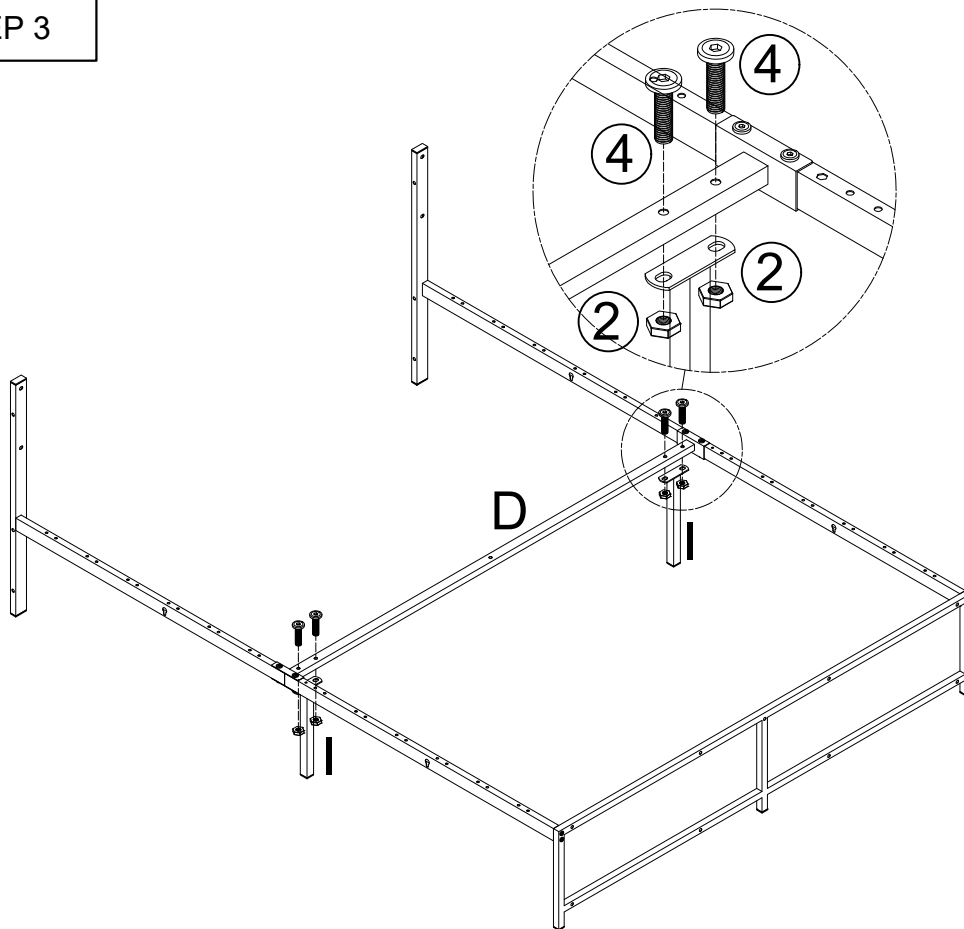

STEP 4

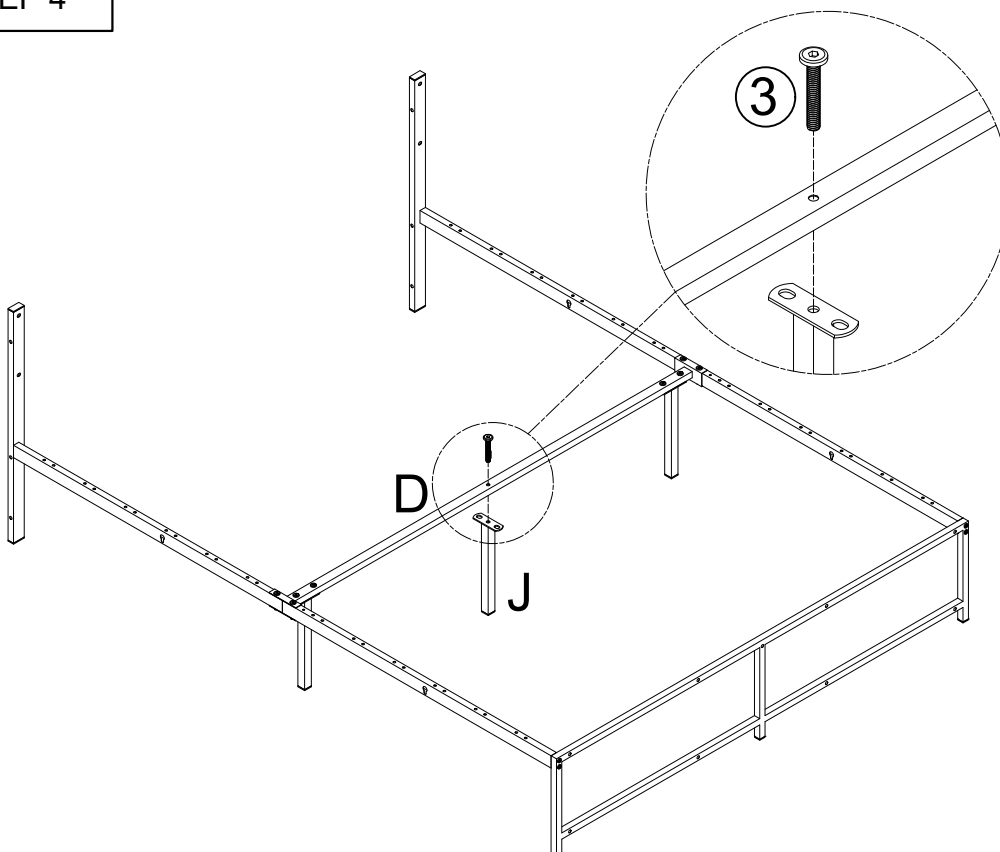


STEP 5

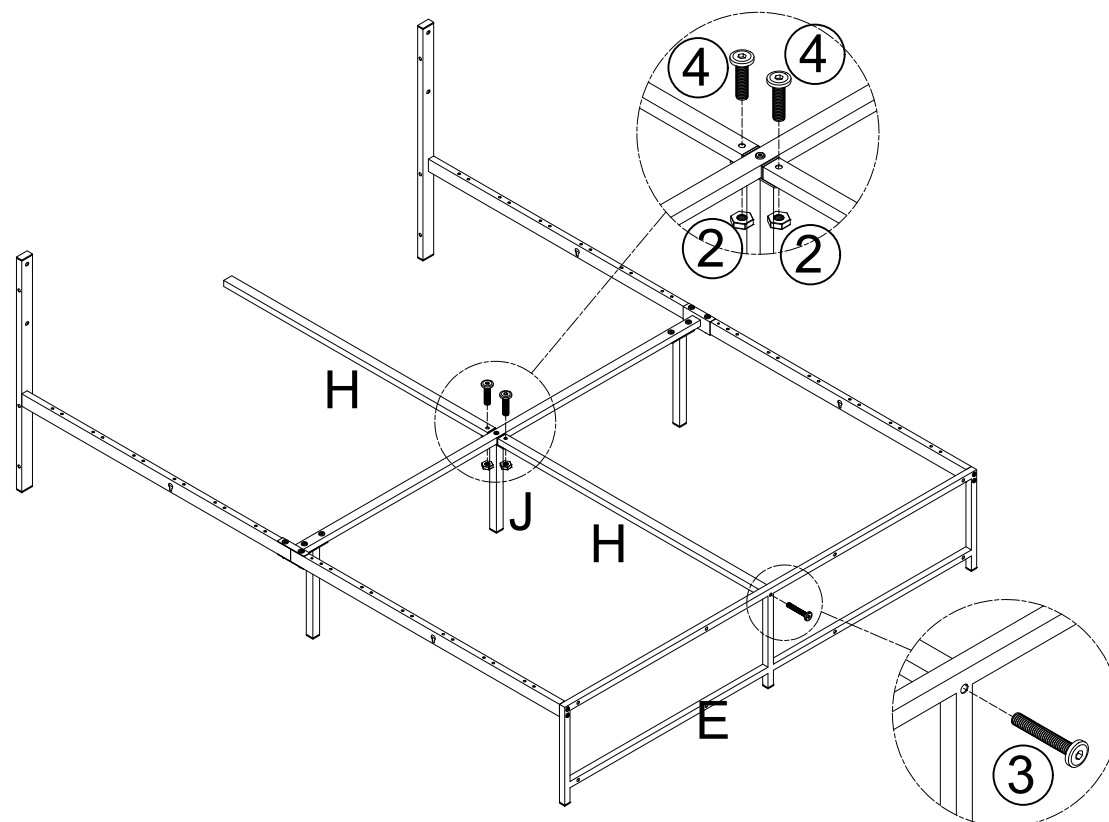

- 2  x2
 - 4  x2
 - 3  x1


STEP 6

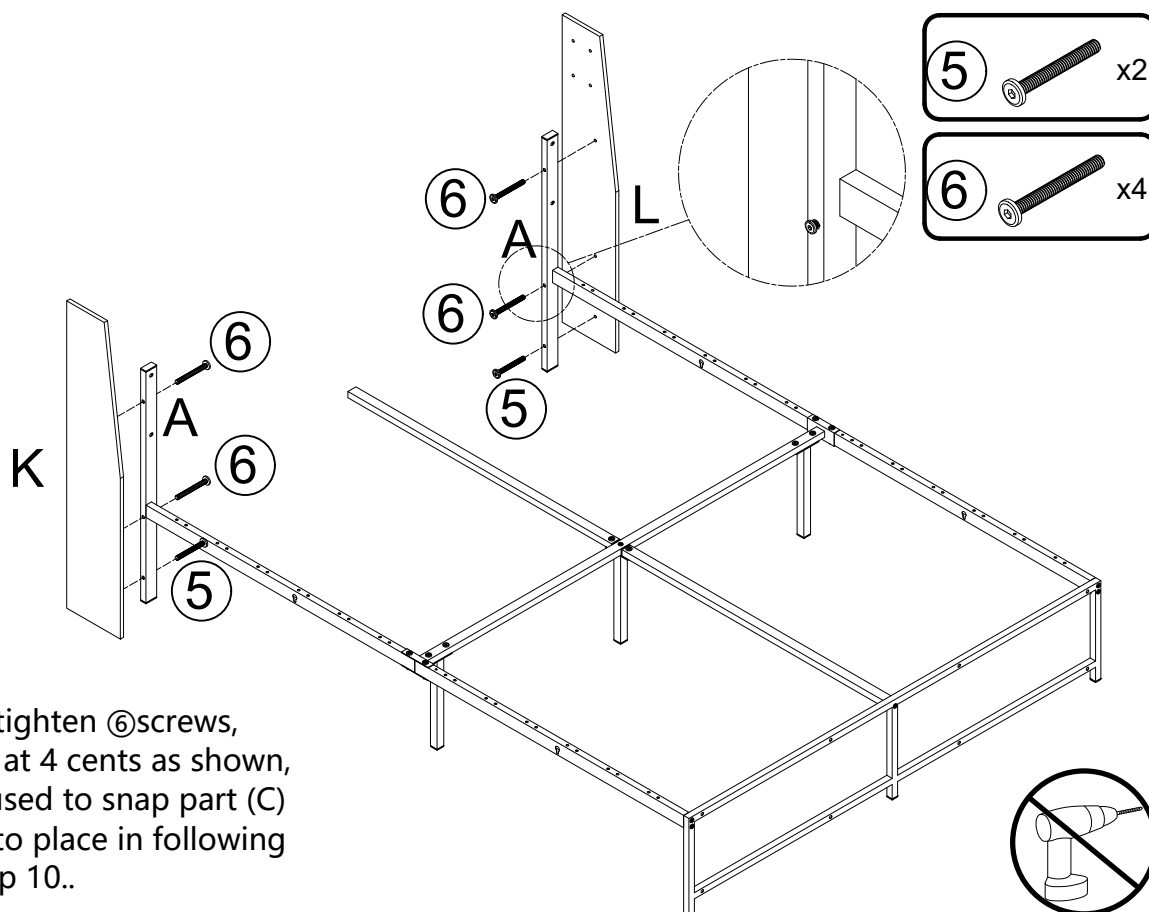



Don't fully tighten ⑥screws, leave them at 4 cents as shown, which are used to snap part (C) /part (B) into place in following step 7 / step 10..






STEP 7

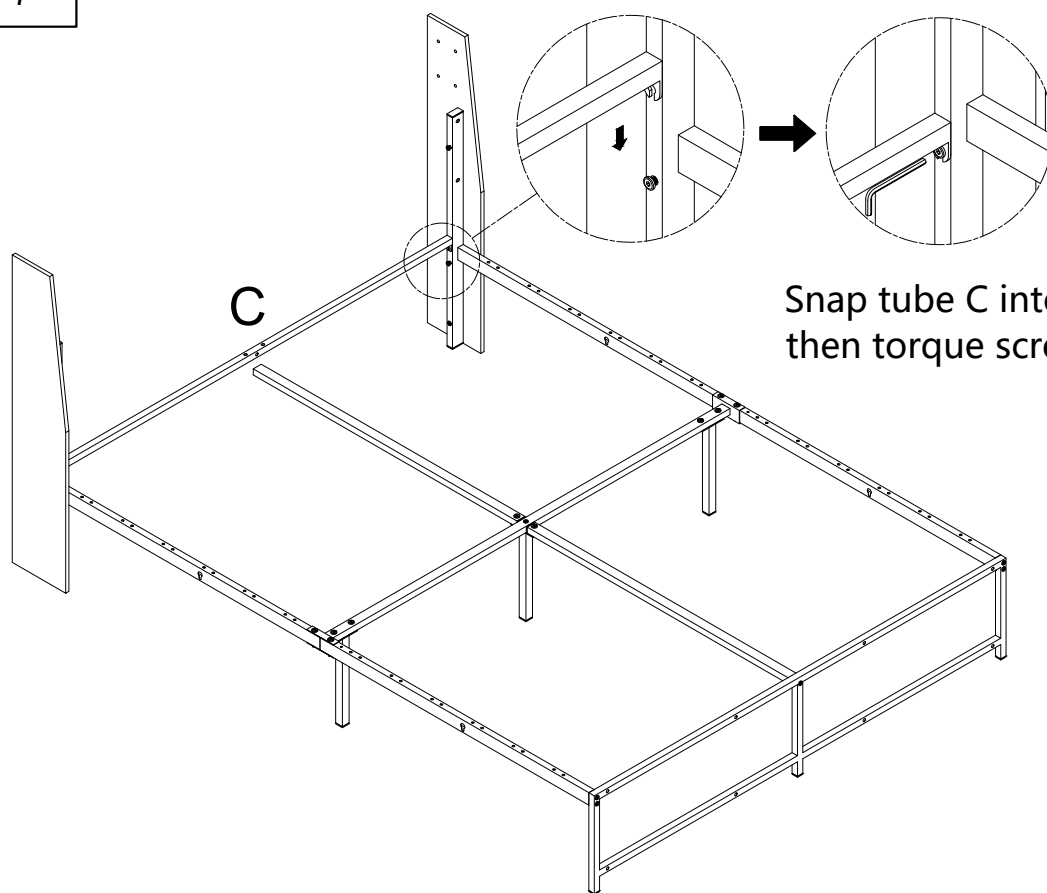


STEP 8

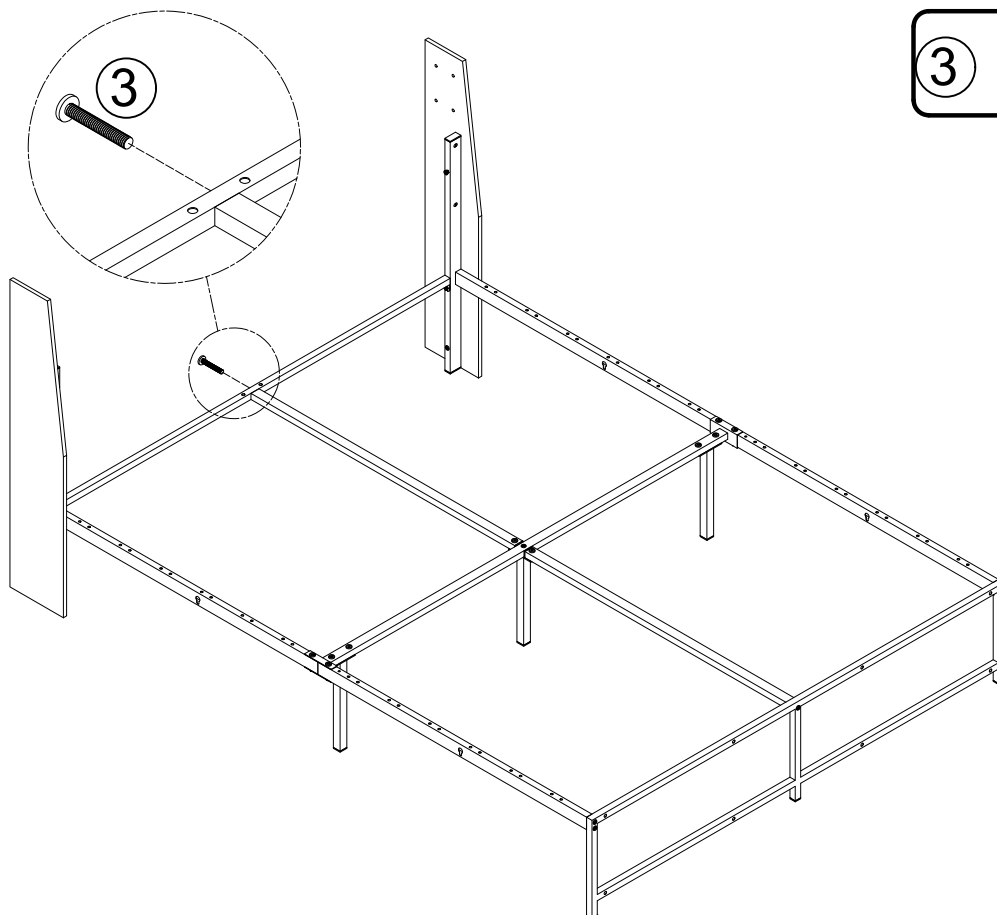

STEP 9

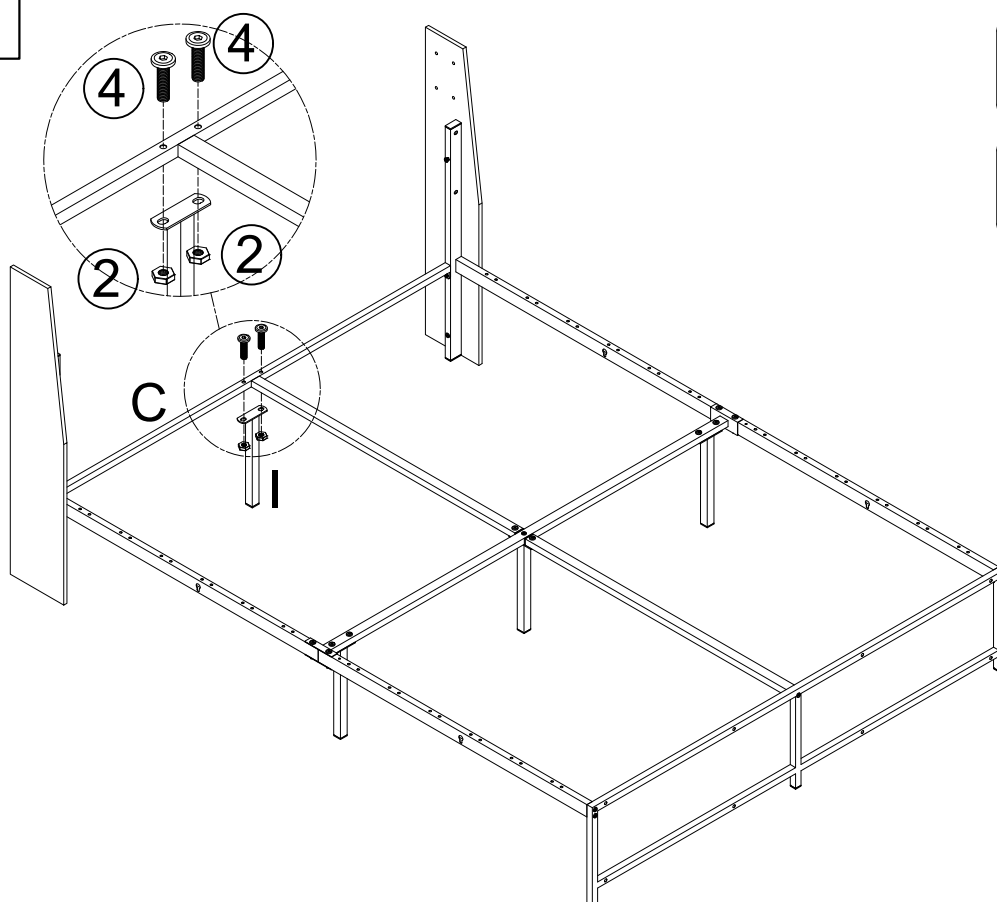


STEP 10

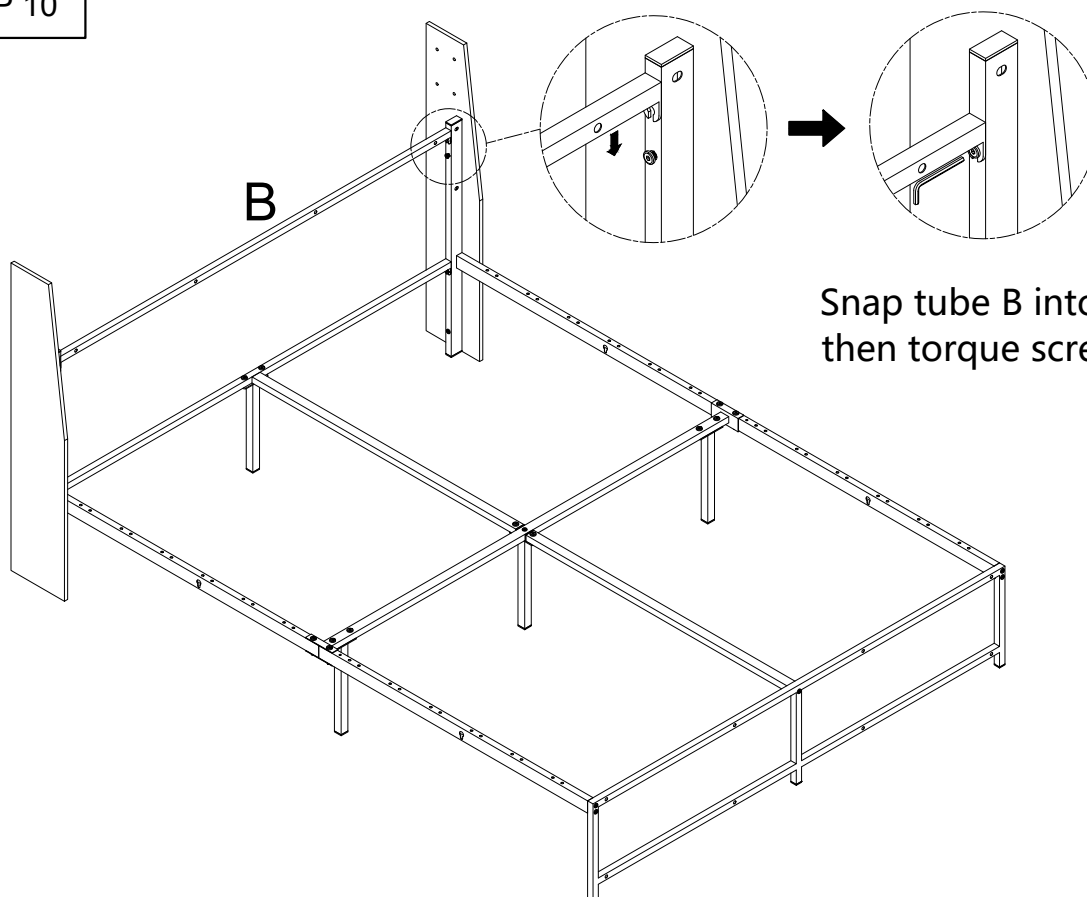



Snap tube B into screw #6,
then torque screw #6




STEP 11

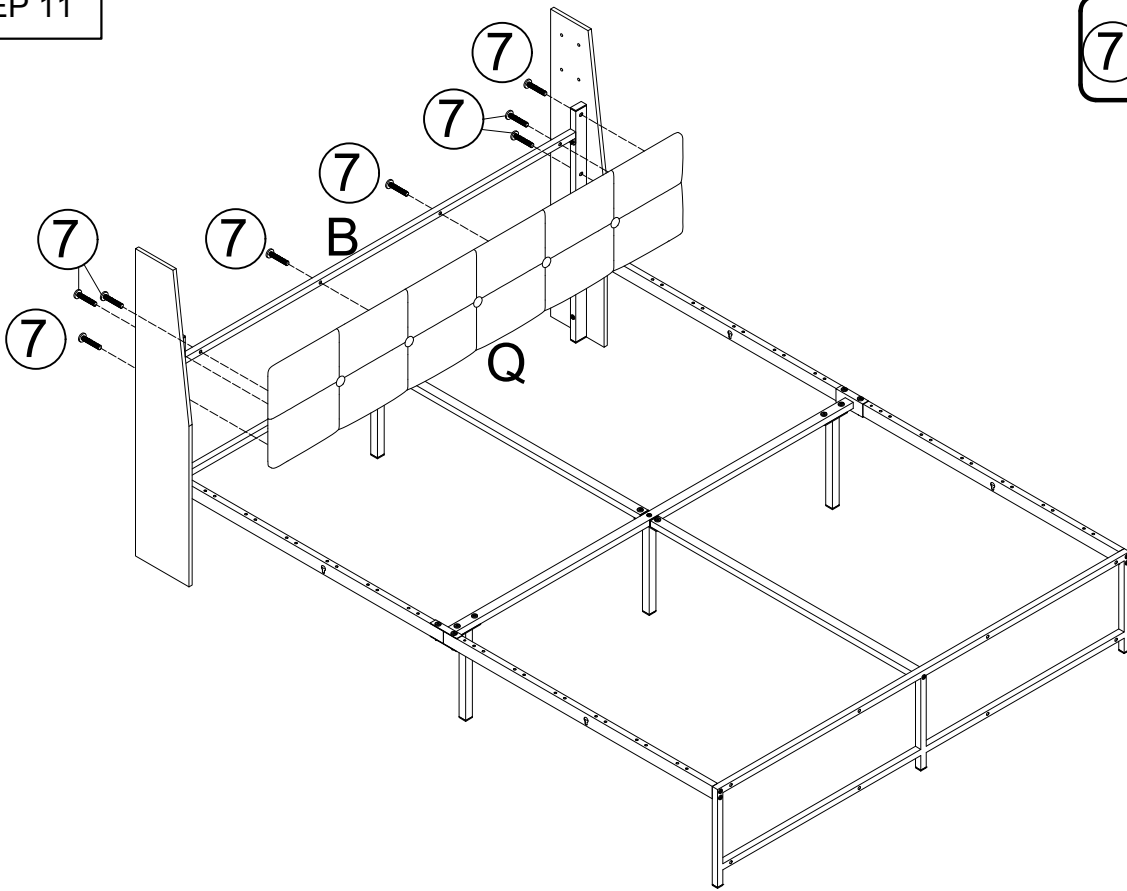

STEP 12

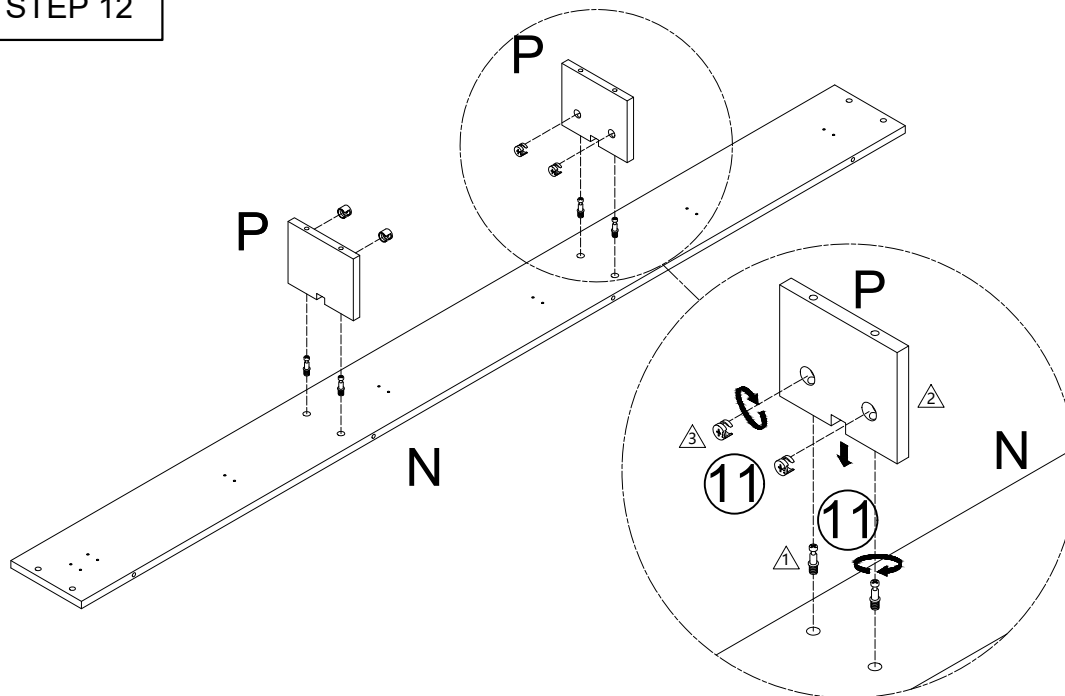





Use a screwdriver to install the screw into the (N) plate piece rubber gasket and tighten it, connect the (P) plate piece to the (N) plate piece, and then install the eccentric wheel into the (P) plate piece and tighten it clockwise.

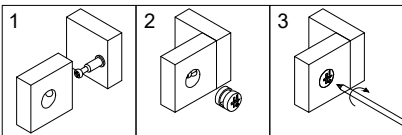

Please point the arrow upward to the mounting hole when installing Part (11), then use screwdriver to tighten it in the "+" direction.

Cam Lock Fastening System




STEP 13

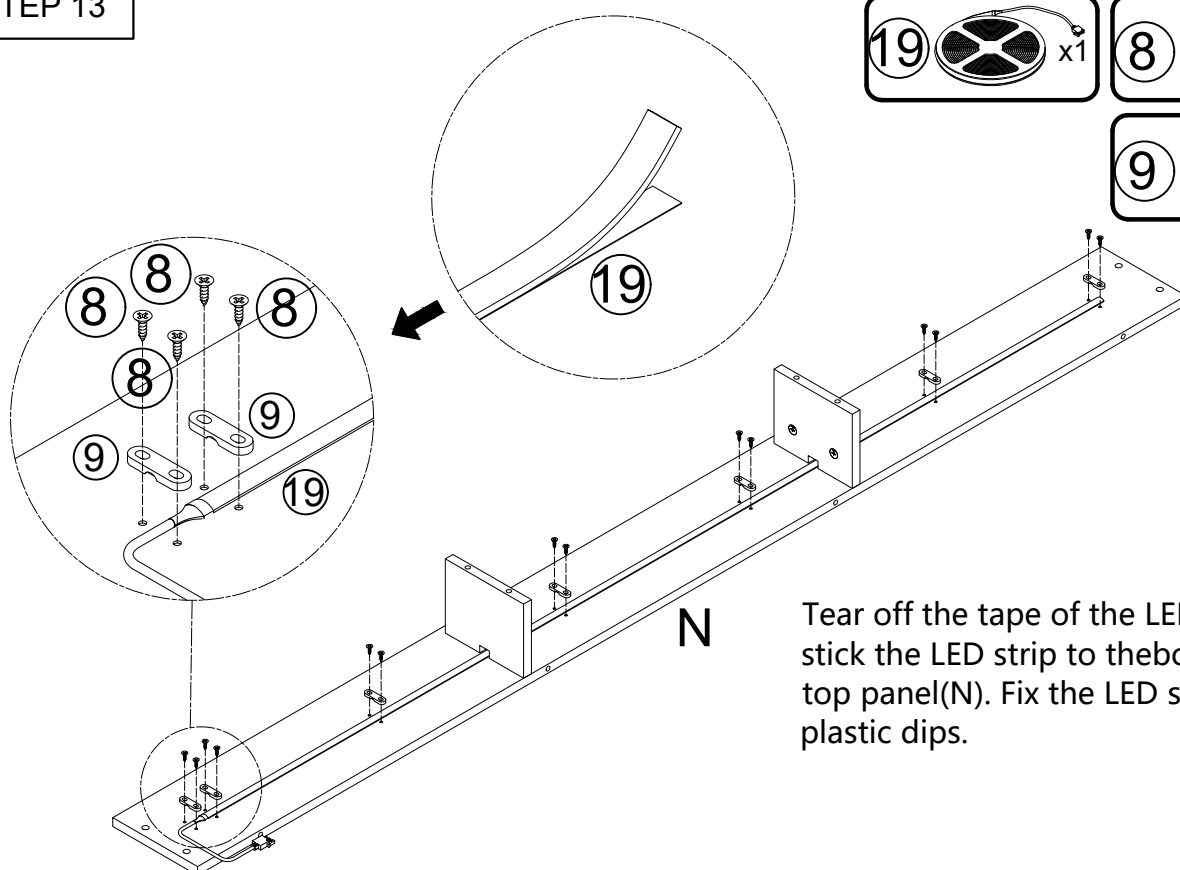




Tear off the tape of the LED strip, stick the LED strip to the bottom of top panel(N). Fix the LED strip with plastic dips.





STEP 14

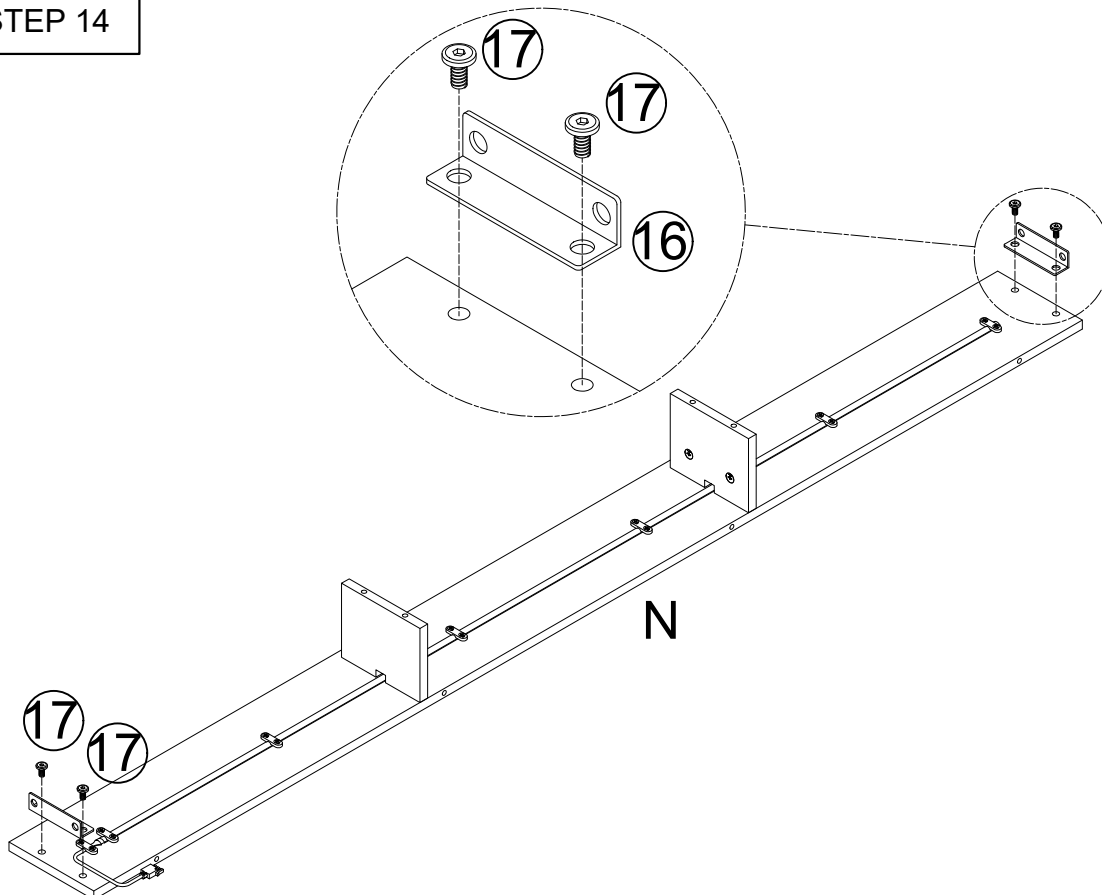




STEP 15

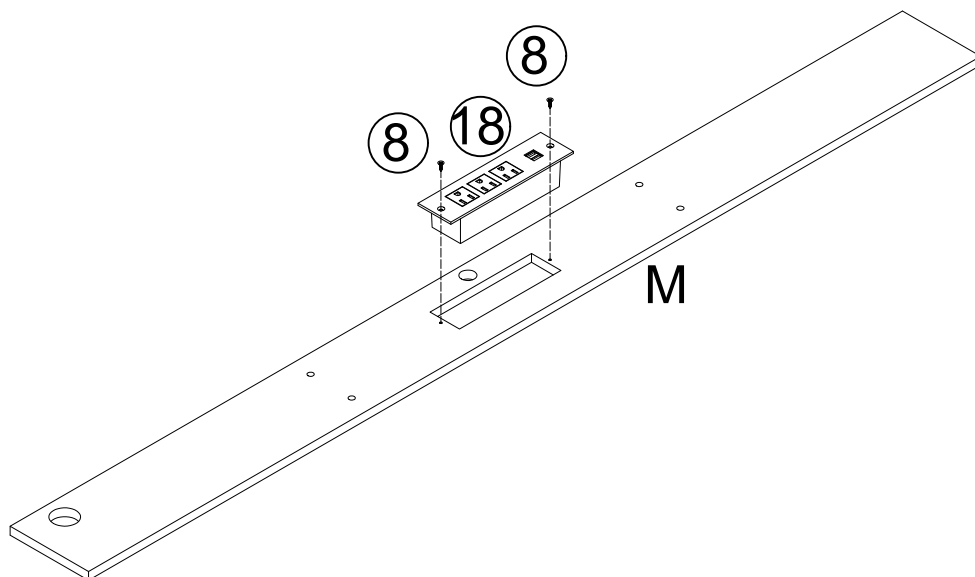



STEP 16

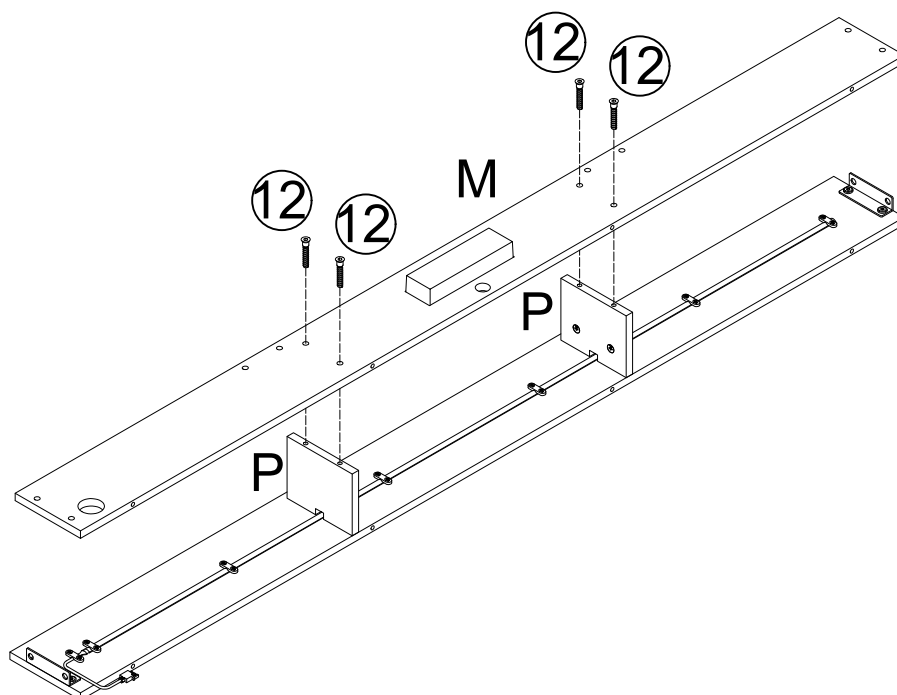



STEP 17

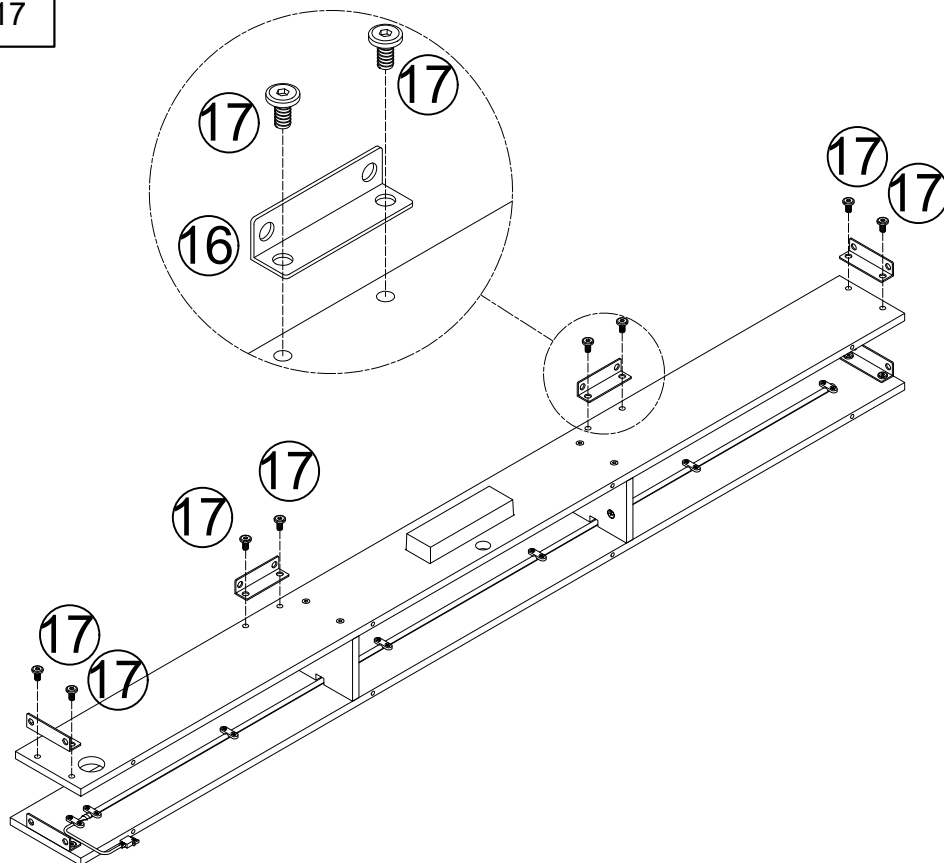




STEP 18

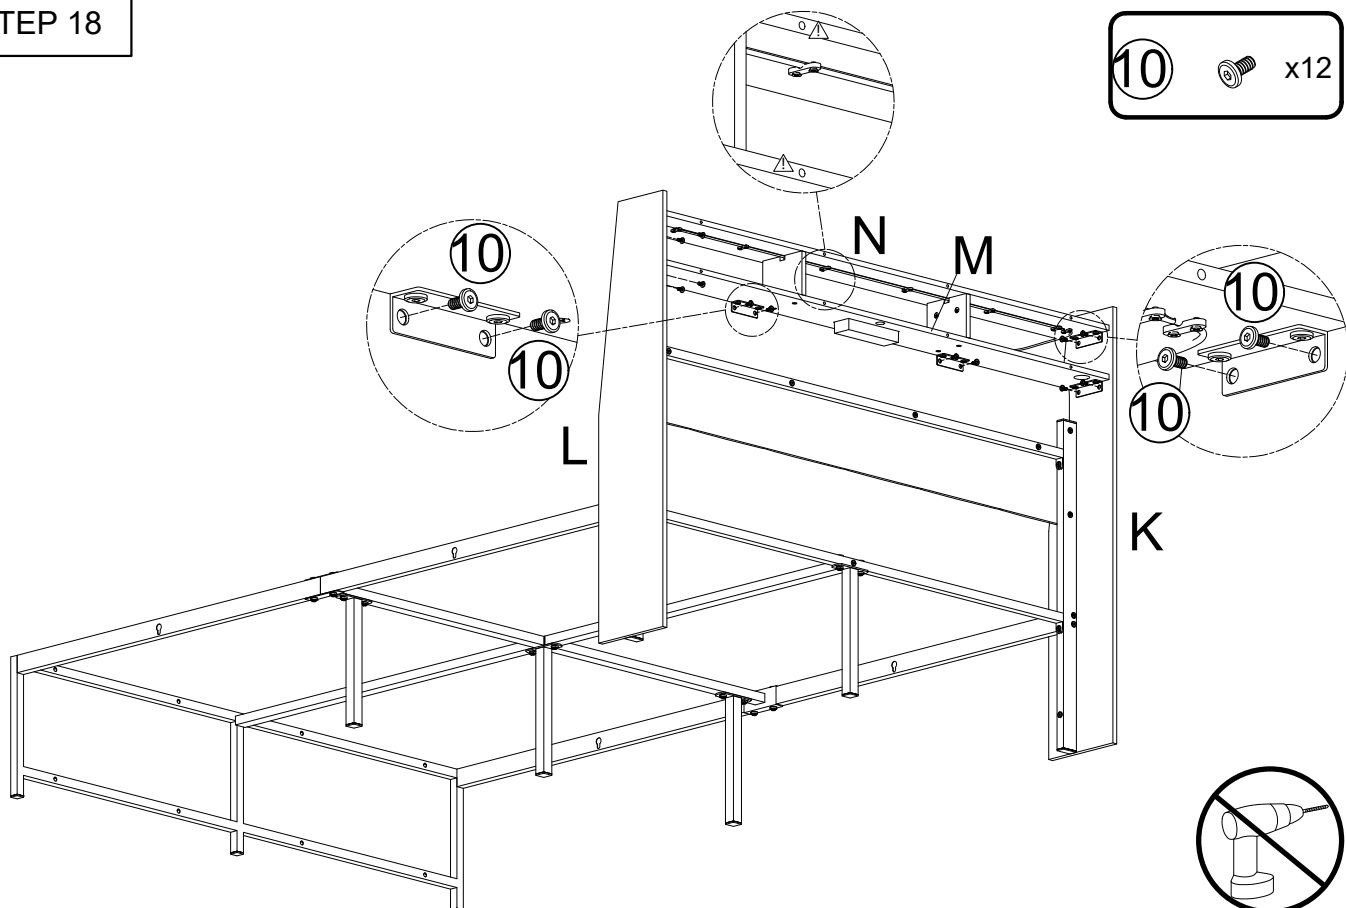

STEP 19

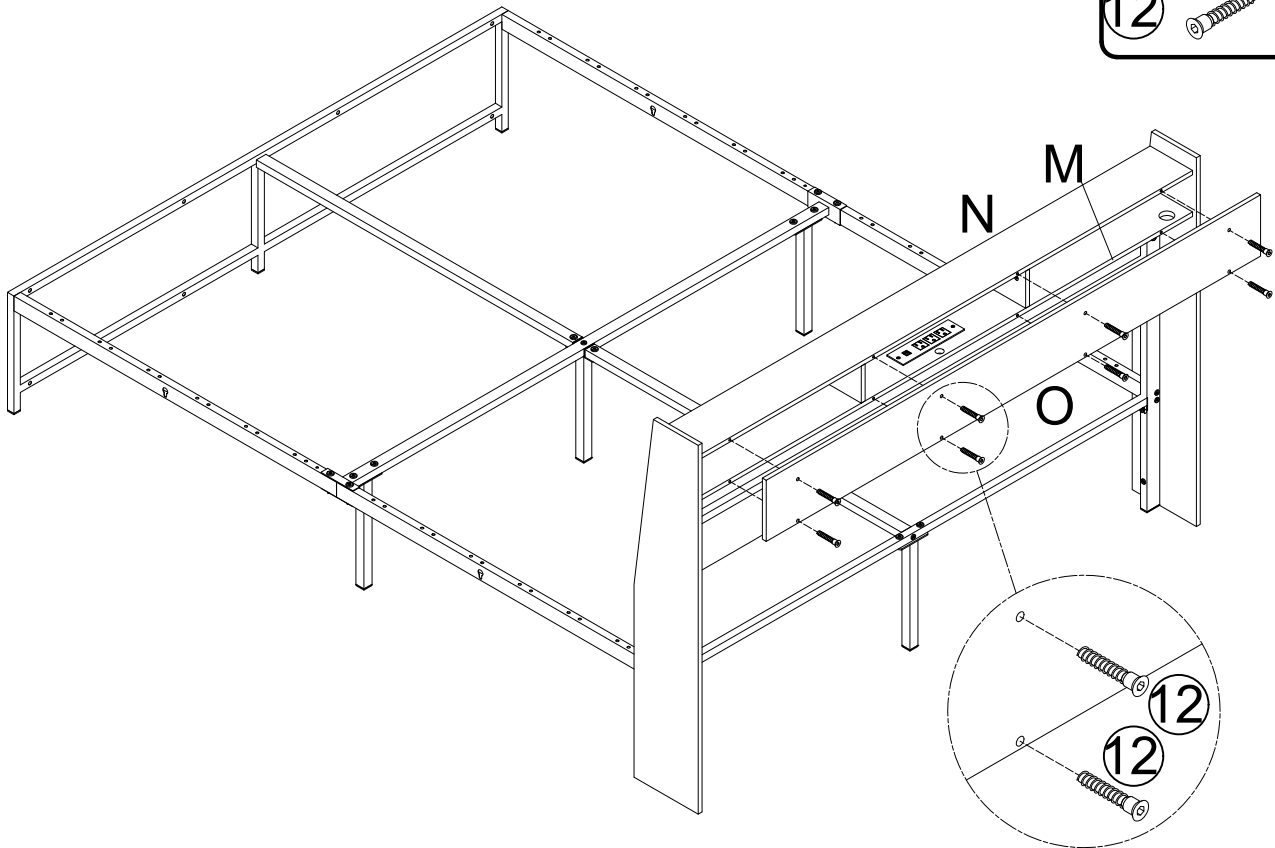


STEP 20

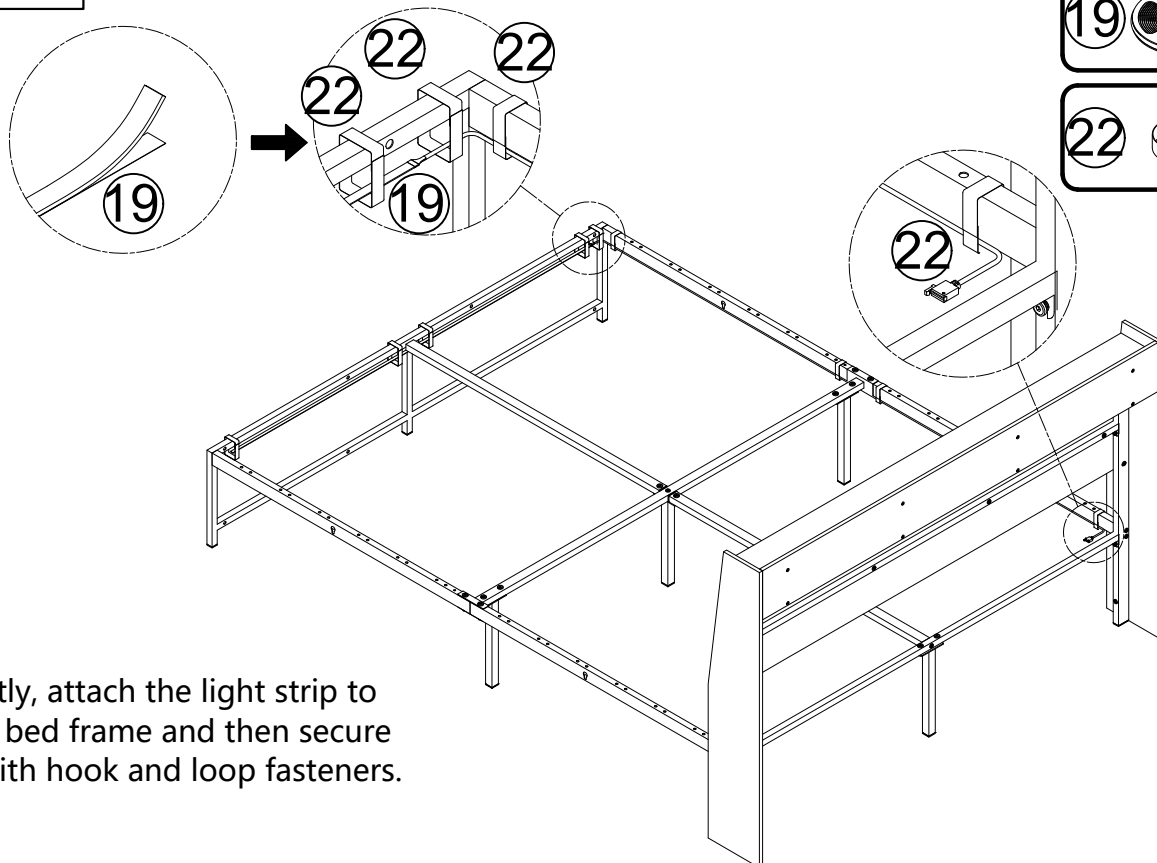


Firstly, attach the light strip to the bed frame and then secure it with hook and loop fasteners.



STEP 21

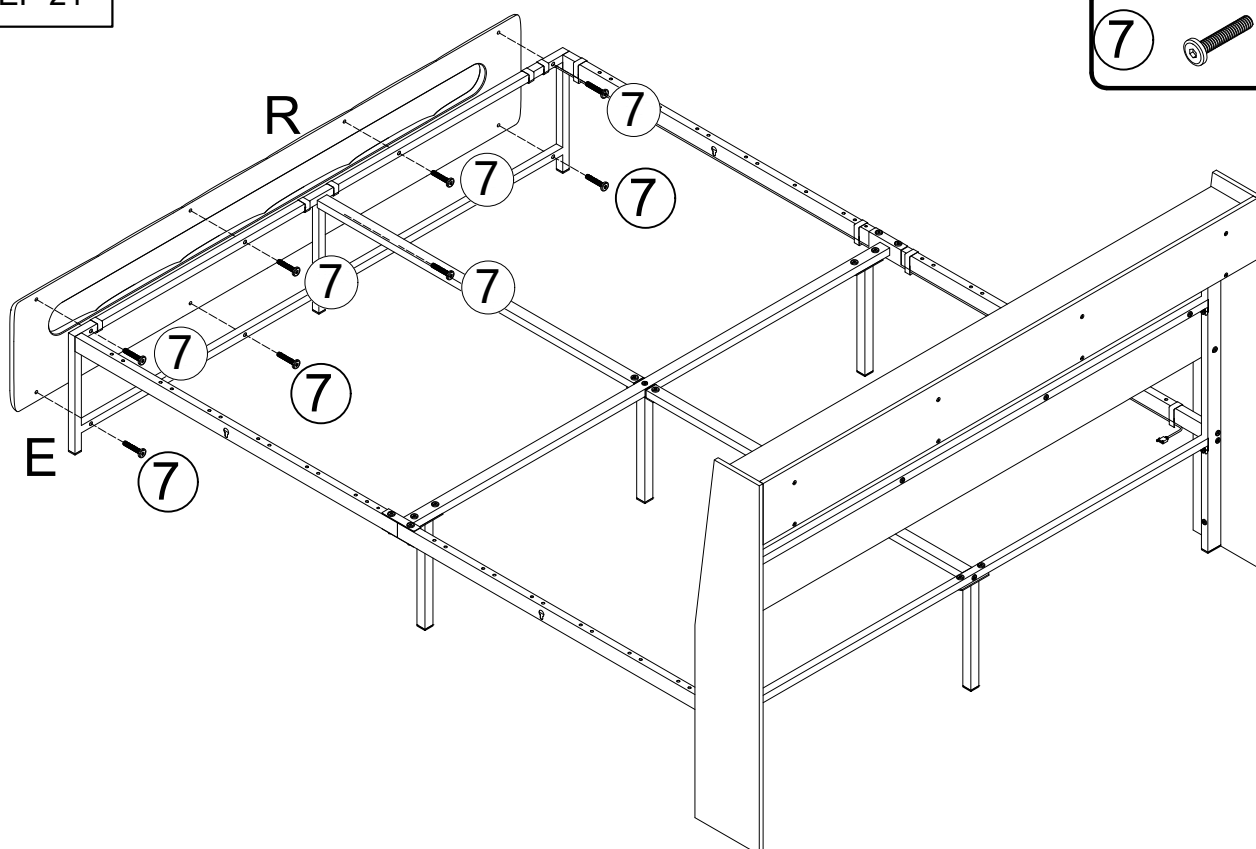

STEP 22

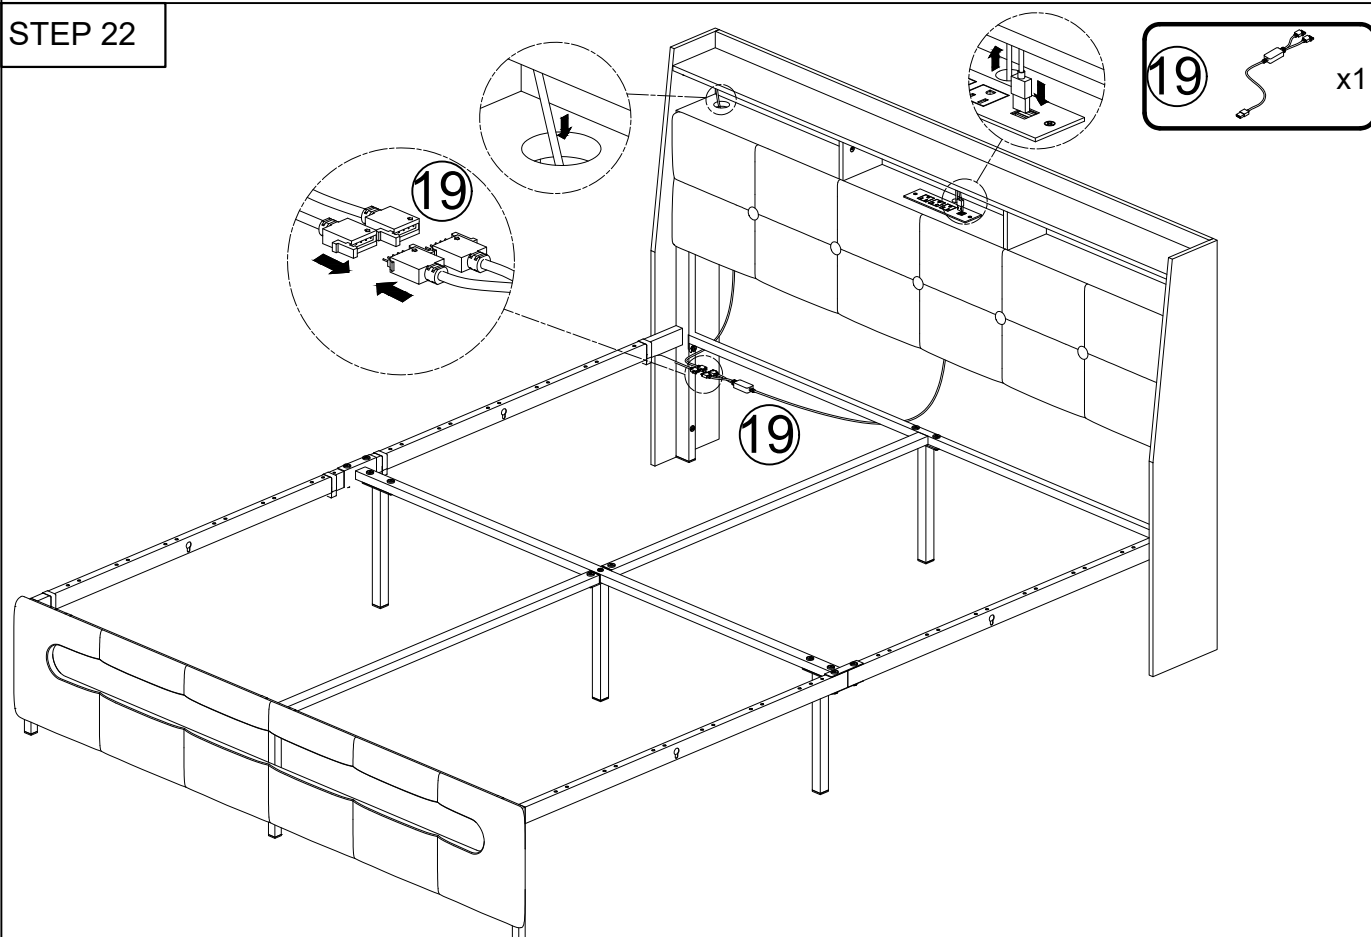


STEP 23

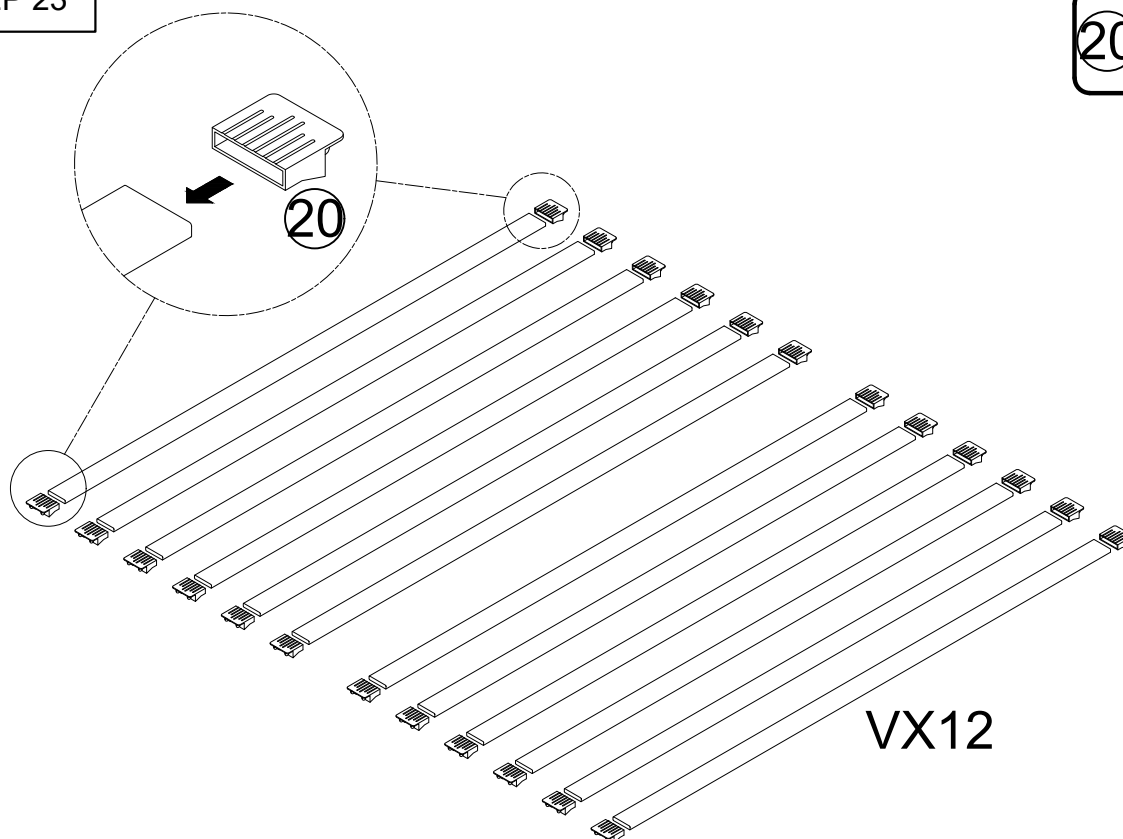

STEP 24

Align the holes and press down hard or hit them with a hammer

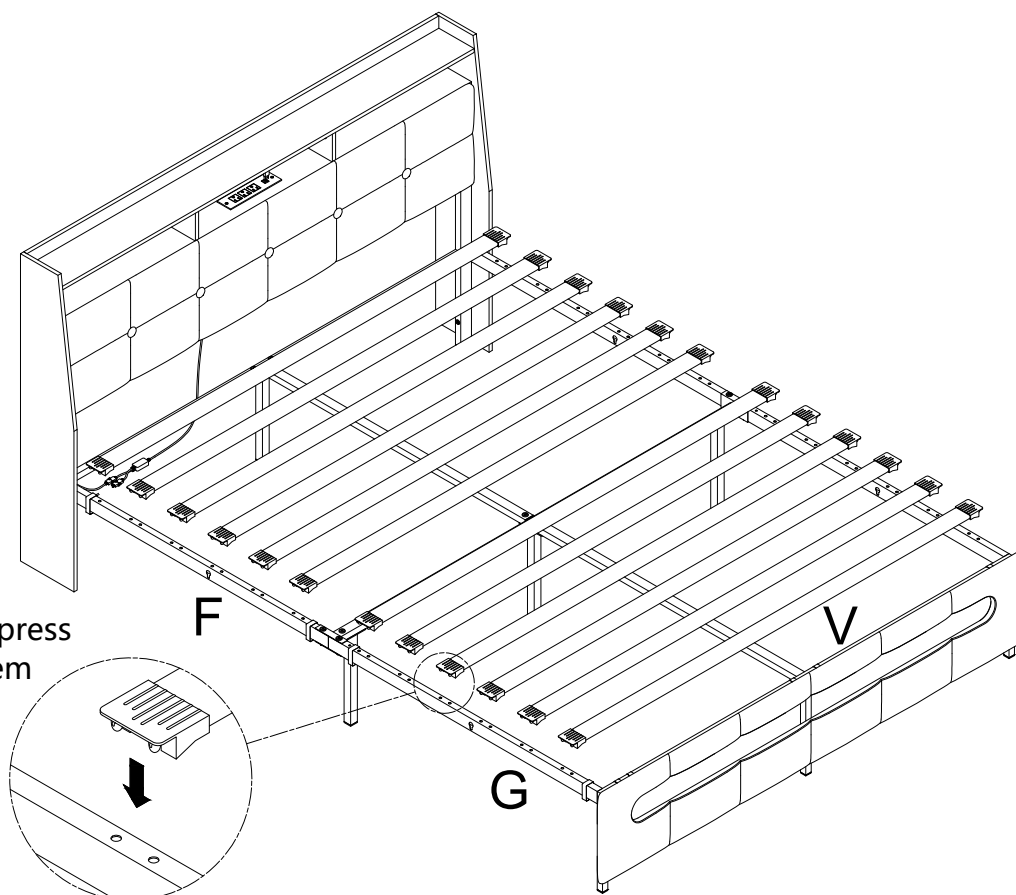





STEP 25

13



x16

Open the wire drawer

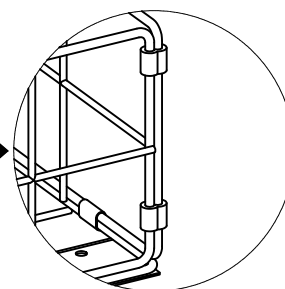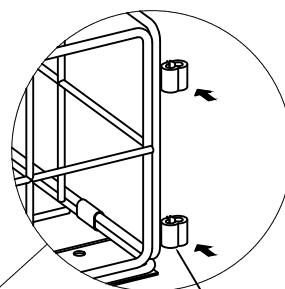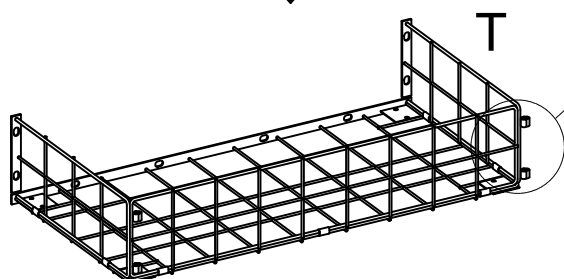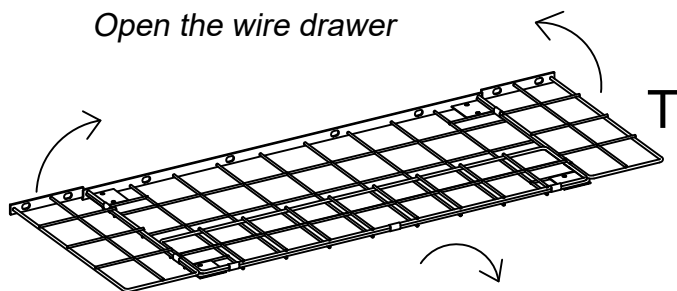

Press the plastic hook into the wire frame.

STEP 26

14





x32


21




x16

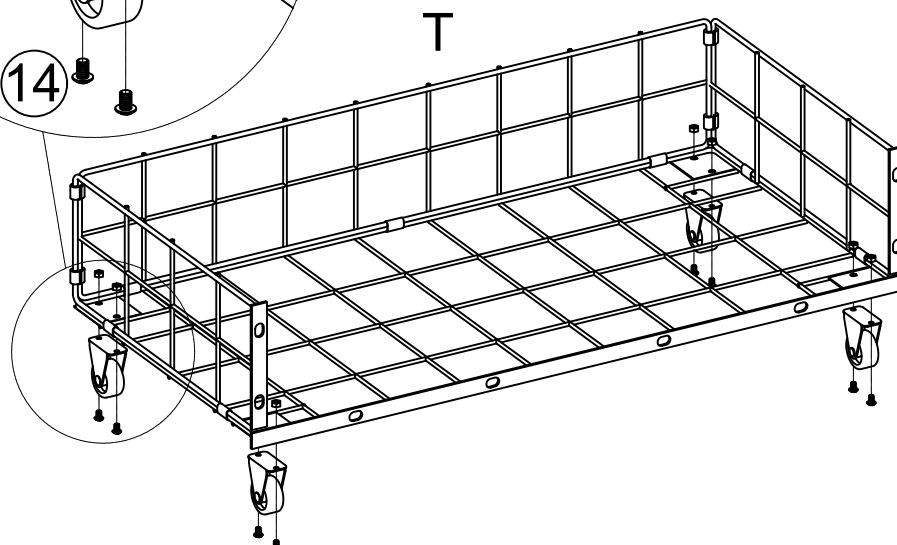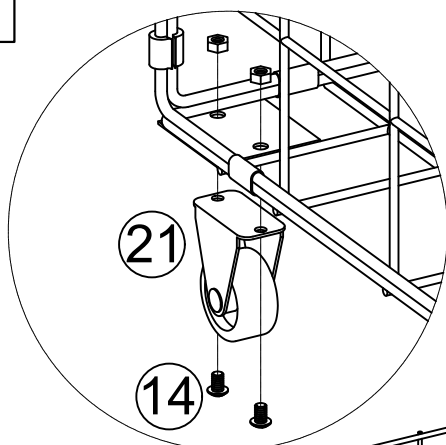


STEP 27

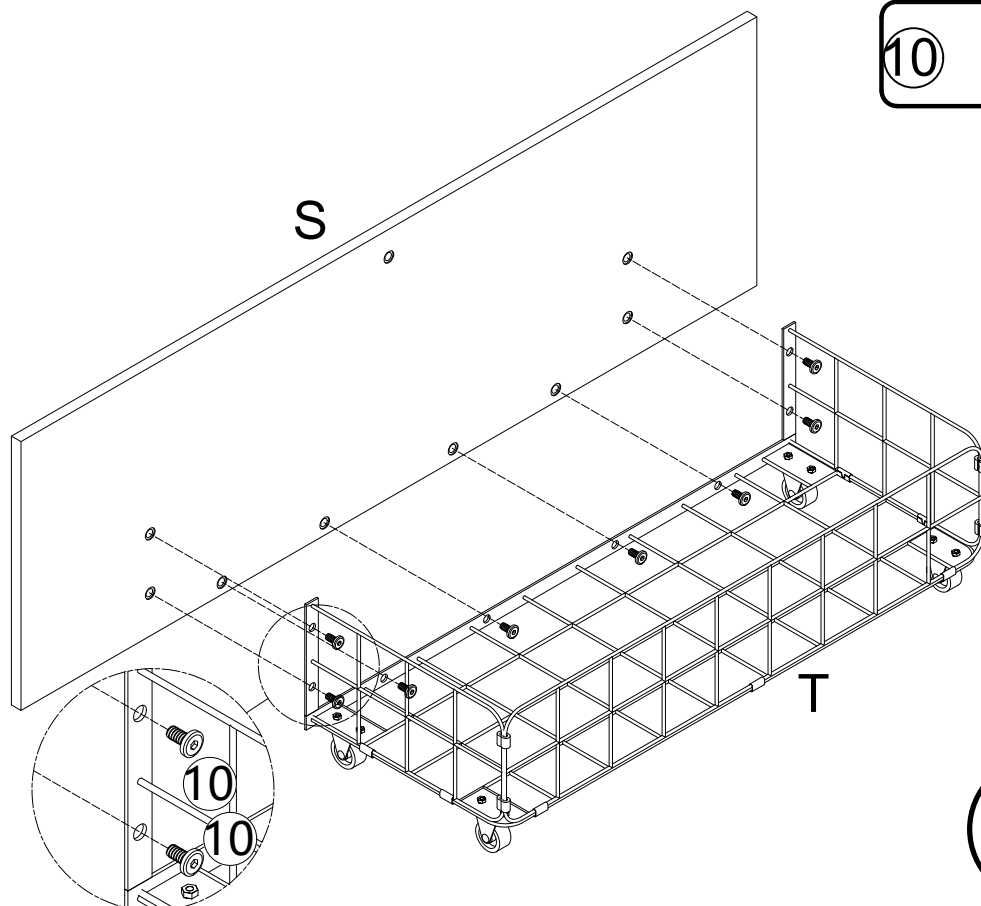


STEP 28

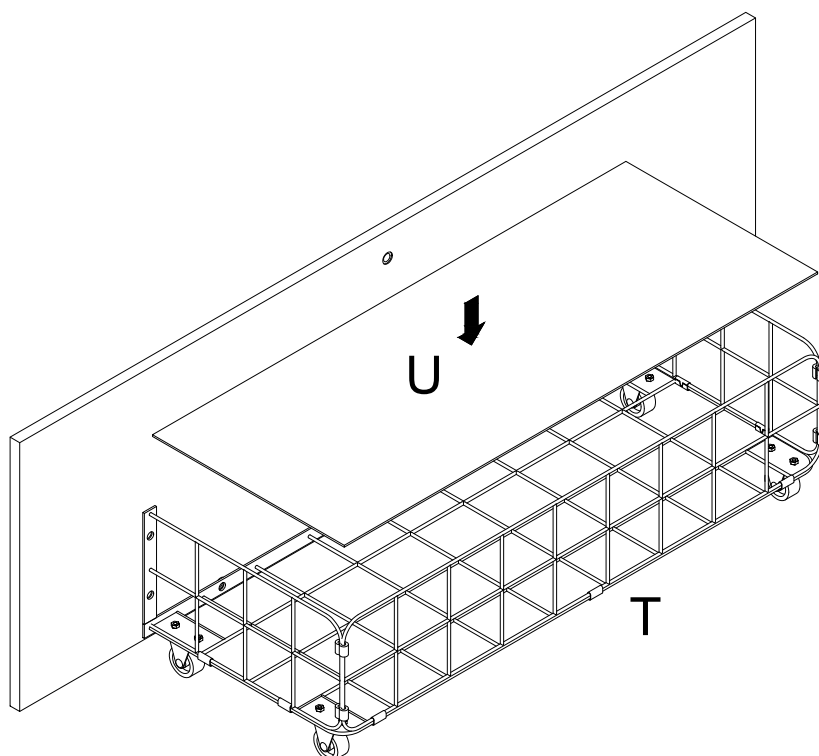


STEP 29

15  x4

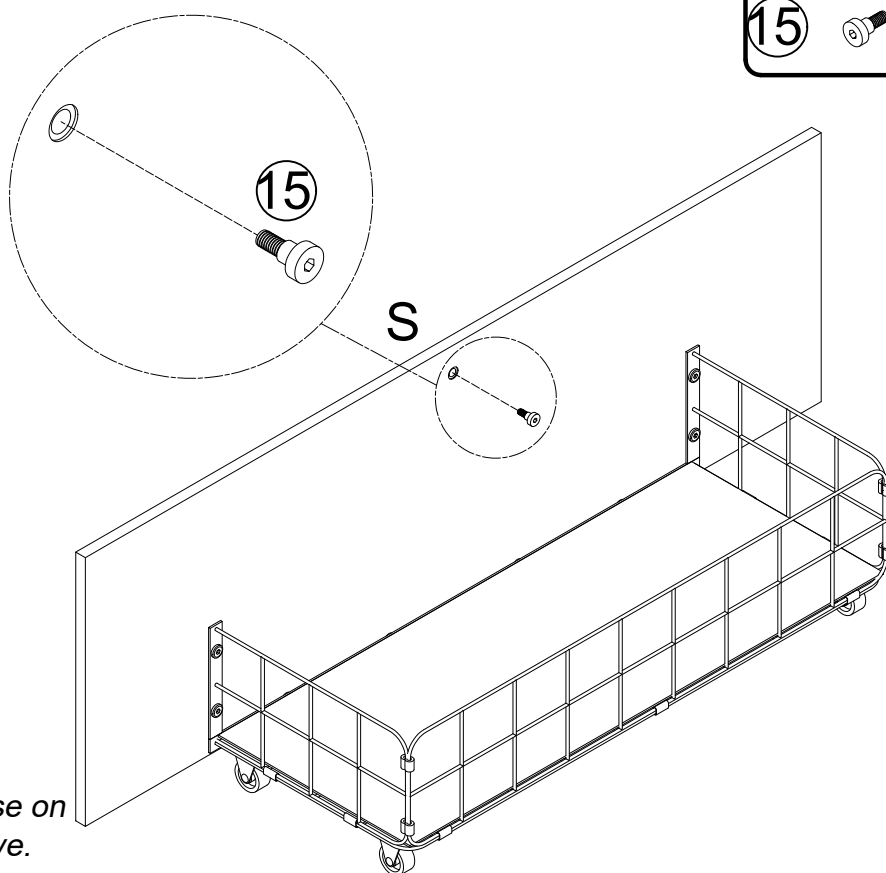

NOTICE:
The installation for all the four storage drawers is base on the five steps (25-29) above.

STEP 30

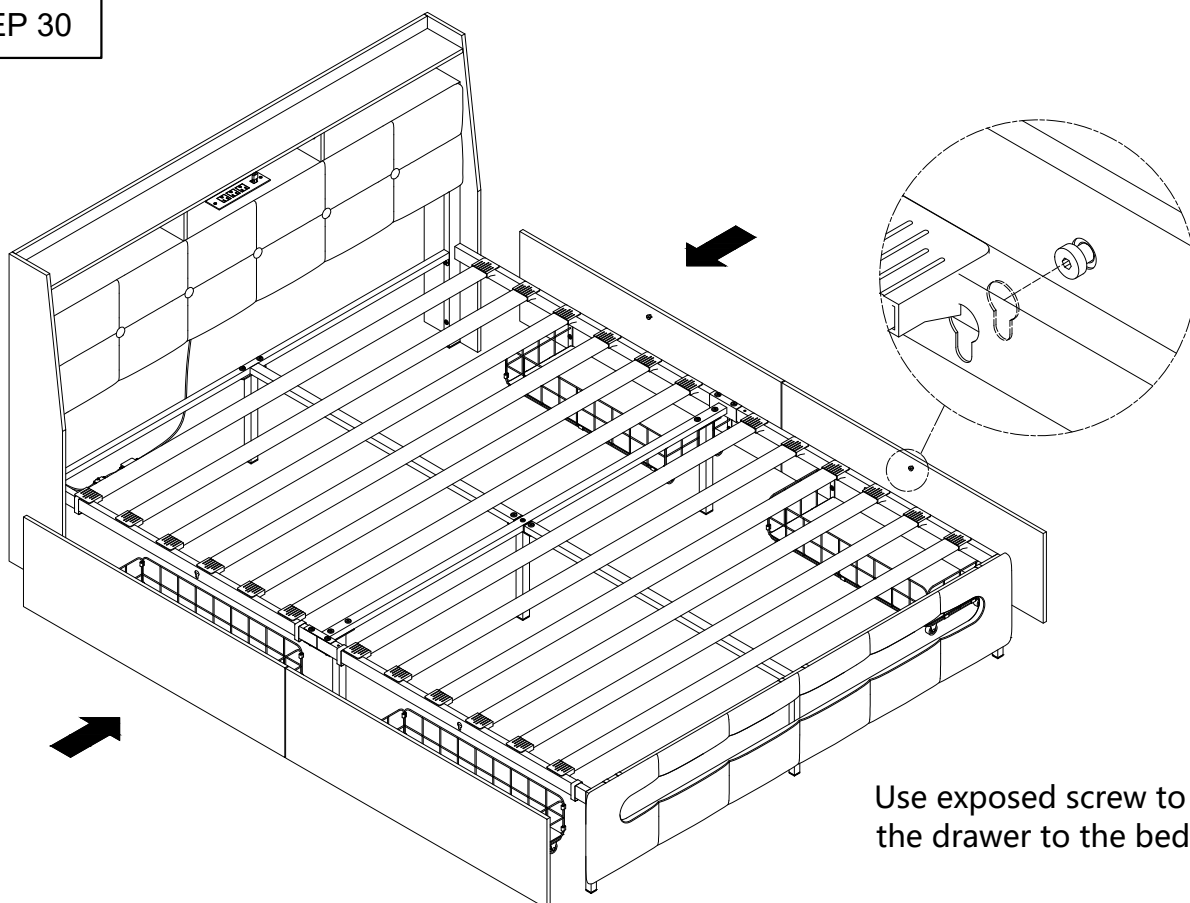

Use exposed screw to secure the drawer to the bed frame.