




60"-72" ALUMINUM DOUBLE CURVED ROD

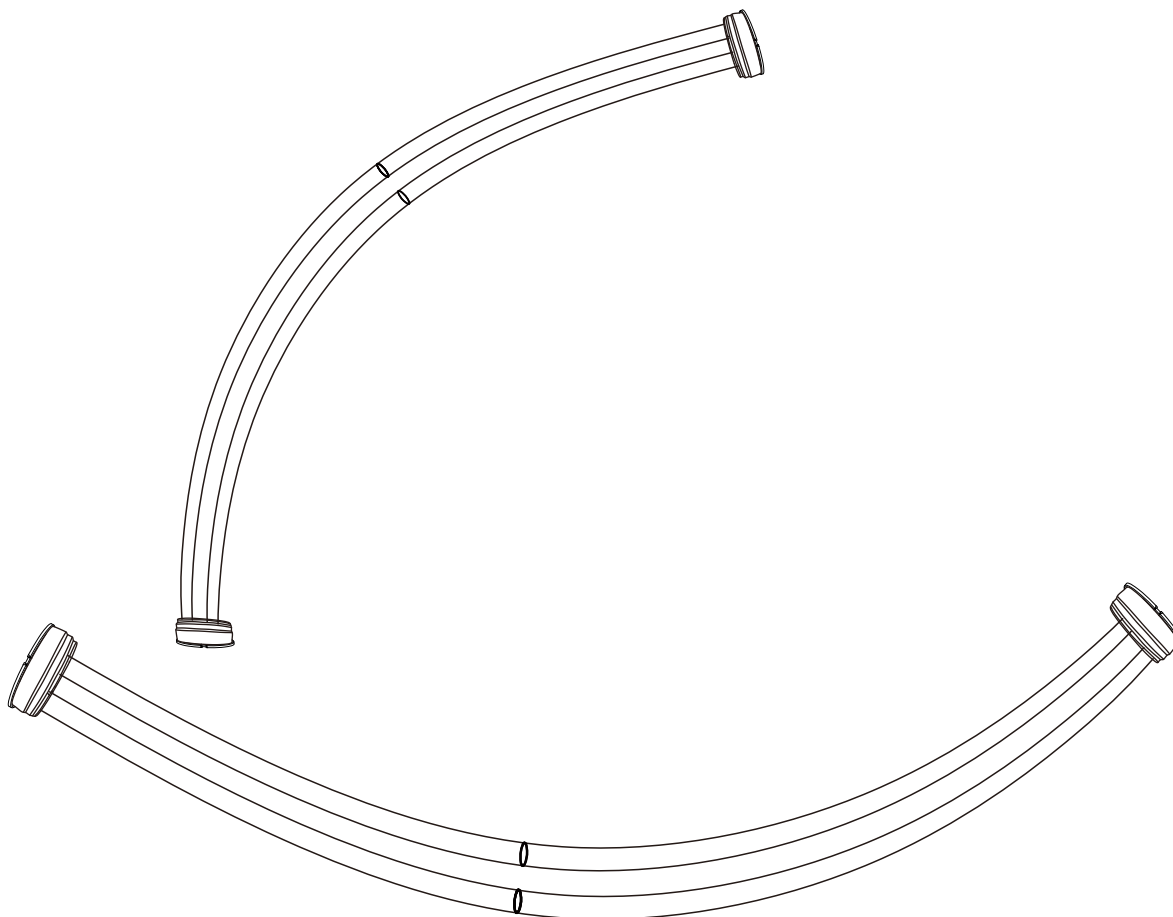

Thank you for purchasing Utopia Alley Products. Please contact us if you have difficulty with assembly or need replacement parts. Utopia Alley customer service is here to assist you.

Email: CustomerService@utopiaalley.com

Please attach your name and Order ID so that we can assist you better .



SAFETY INFORMATION

Please read and understand this entire manual before attempting to assemble, operate, or install the product.


WARNING

- Follow the installation instructions carefully. Proper installation is the installer's responsibility.


PREPARATION

Before beginning the assembly of this product, make sure all parts are present. Compare parts with the package contents and hardware contents list. If any part is missing or damaged, do not attempt to assemble the product.


Tools Required
Not included

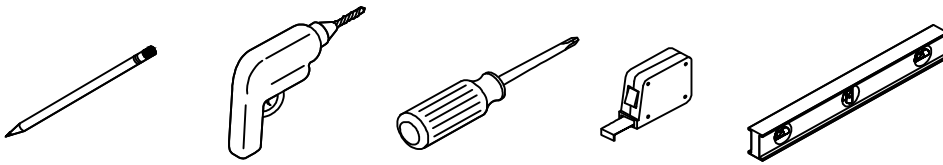

Parts Supplied

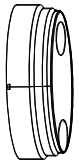

(A)
2 Decorative Covers



(B)
2 Mounting Brackets



(C)
4 Pin nuts






(D)
4 Pin Fastening screws




(E)
4 Wall Anchors



(F)
4 Mounting Screws

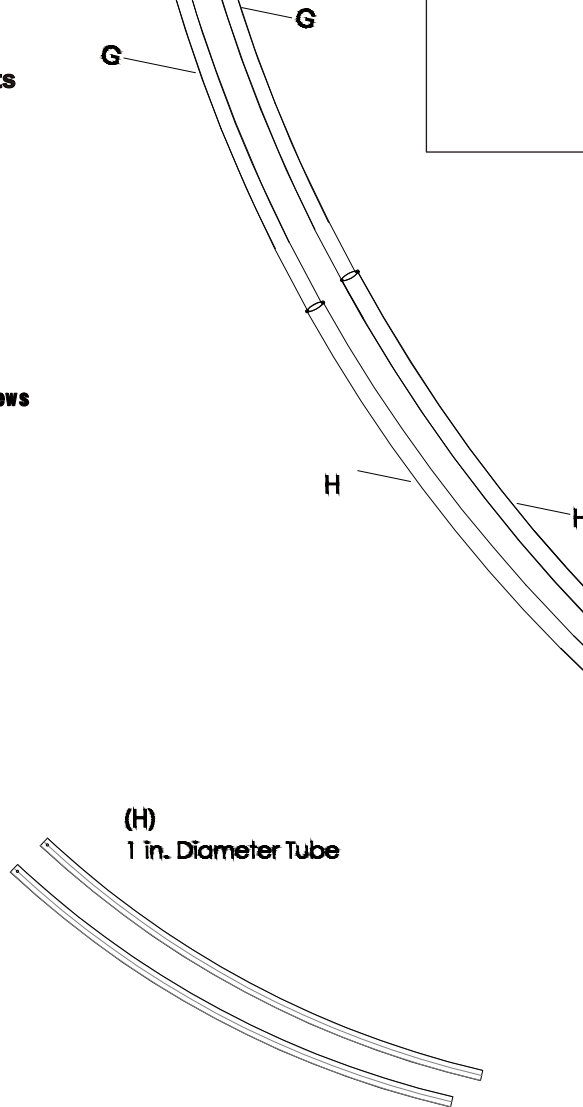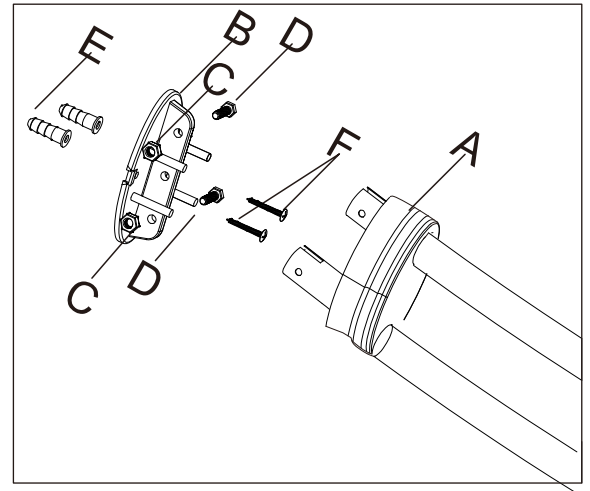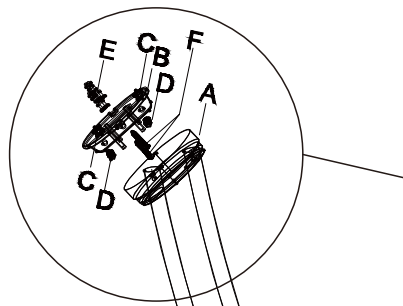


(H)
1 in. Diameter Tube

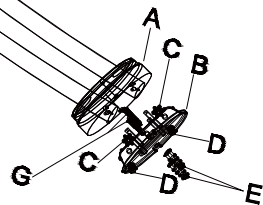


(G)
7/8 in. Diameter Tube


Tools Required

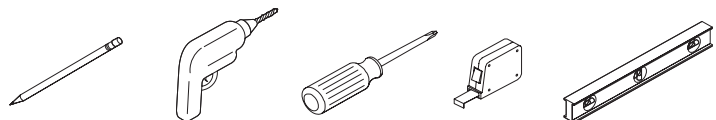

1. Measure up 65 in. above the front of the tub ledge.
Draw 2" vertical line down.

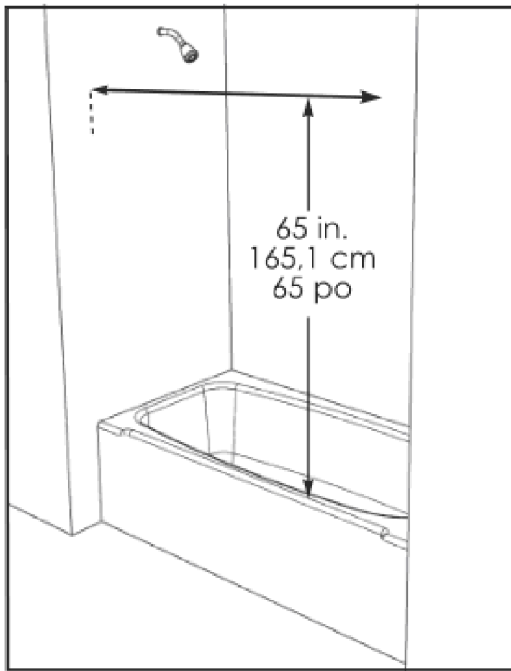


2. Hold the mounting bracket against the wall so that the mark is centered in the screw hole. Mark the location of both holes. Repeat the same step on the other side.

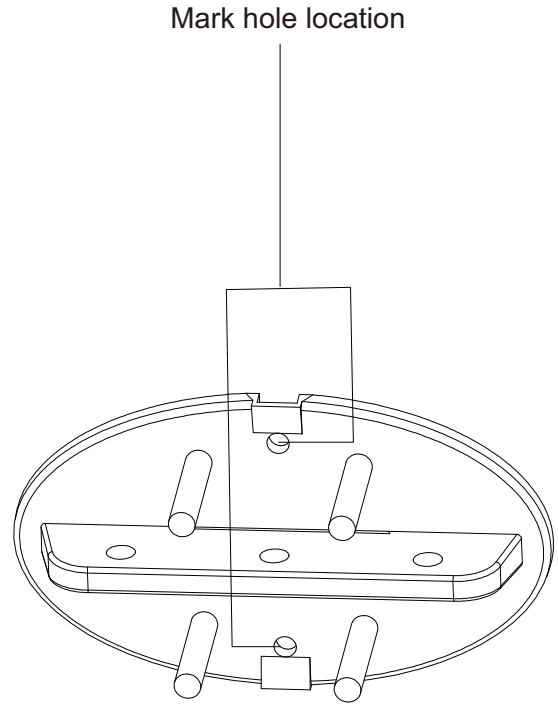


3. Drill the 2 marked spots for each mounting bracket.
Insert drywall anchors (E) in the holes (unless screw will go directly into a stud).


Note: use a 9/32 inch (7mm) drill bit for drywall anchor installation. Use a 5/64 inch (2mm) drill bit for direct stud installation.

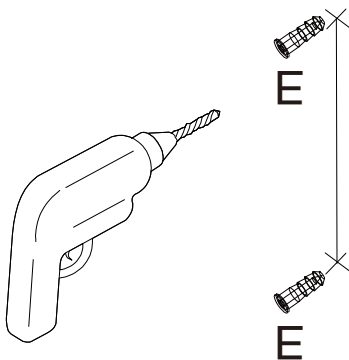


4. Fasten both mounting brackets (B) to the wall, using 2 mounting screws (F) each.

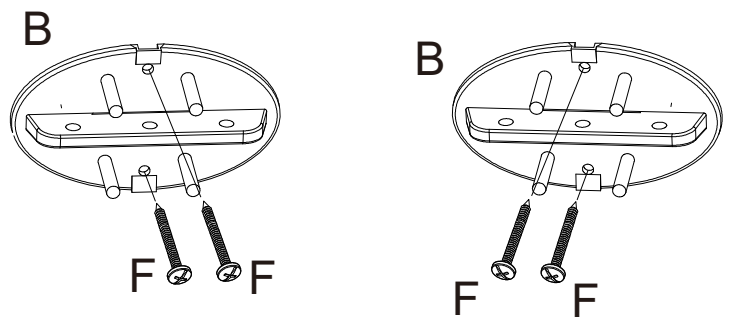

5. Put the cover (A) into the two rods (H) and (G).

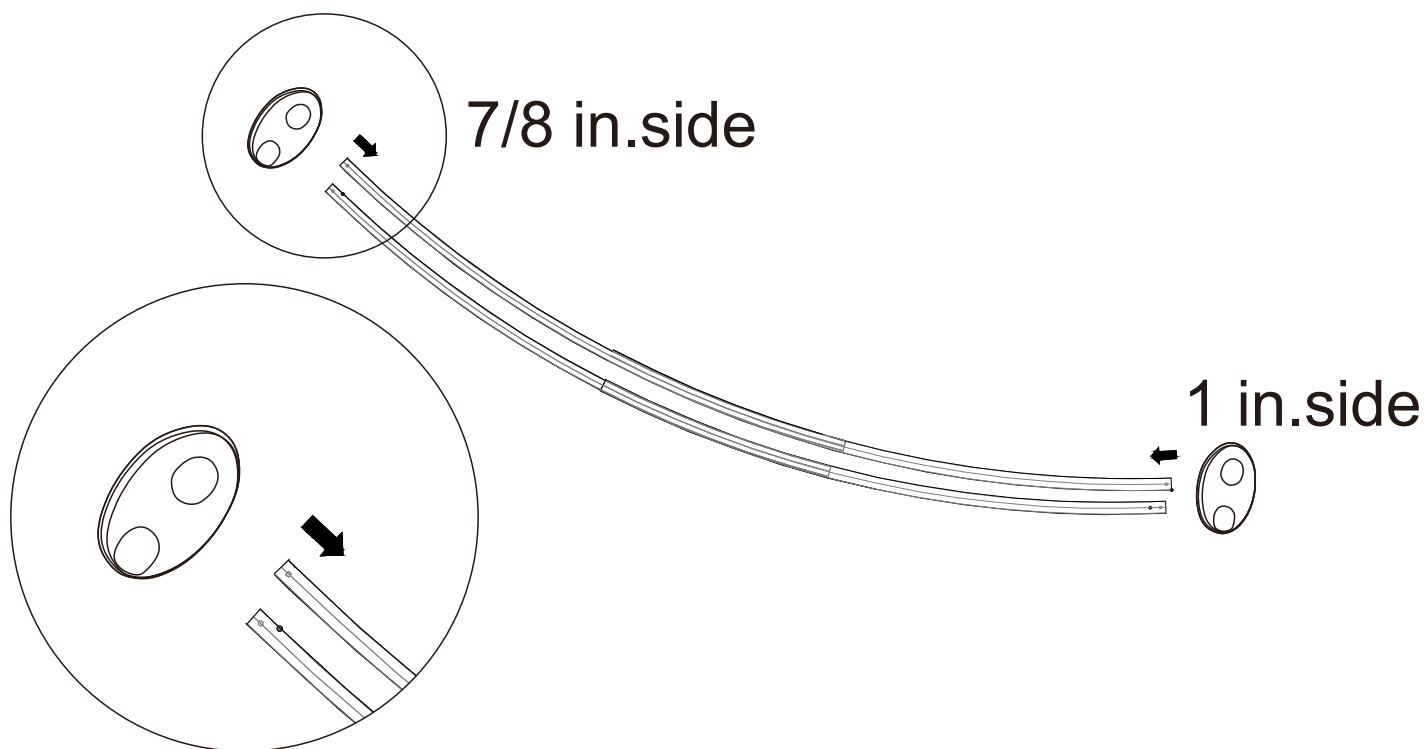

6. Screw pin nuts (C) into pin fastening screws (D) on each side, tighten the 4 pin screws on both brackets to level the rods.

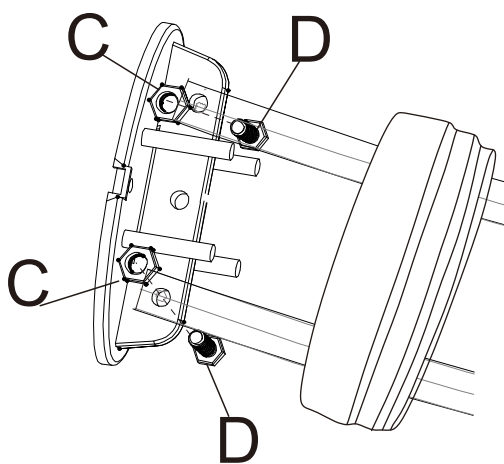

7. Fasten the cover to the bracket.

