




Prefer video instructions?
View our video page!















Questions or concerns?
Contact us directly!

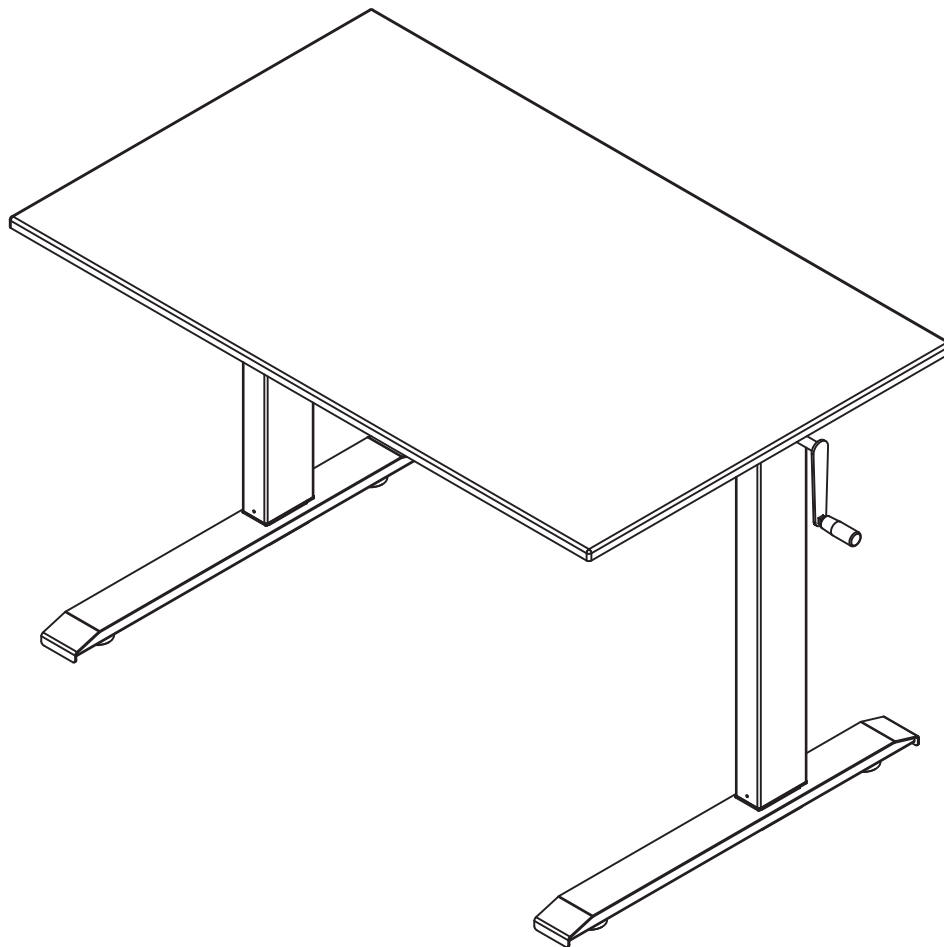

High Speed Crank Desk

PARTS INCLUDED

NOT TO SCALE

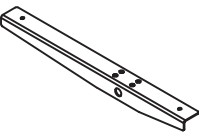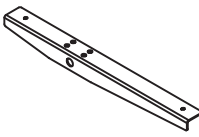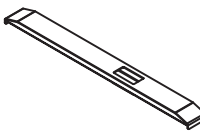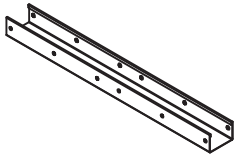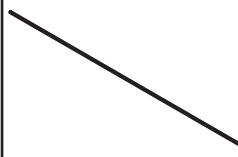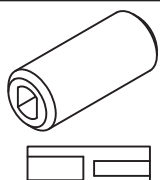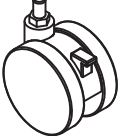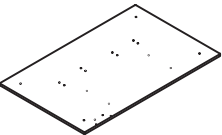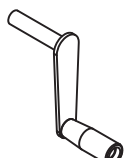A QTY: 1	B QTY: 1	C QTY: 1	D QTY: 1	E QTY: 2
				
F QTY: 2	G QTY: 1	H QTY: 1	I QTY: 1	J QTY: 2
				
K QTY: 4	L QTY: 2	M QTY: 2	N QTY: 1*	O QTY: 1
			 Ships separate box	


HARDWARE INCLUDED

NOT TO SCALE, COLOR MAY VARY





1 QTY: 8	2 QTY: 6	3 QTY: 6	4 QTY: 10	5 QTY: 22
M6-65 	M8-20 		M8-15 	M6-12 

TOOLS INCLUDED



TOOLS REQUIRED

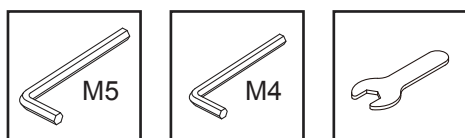



1

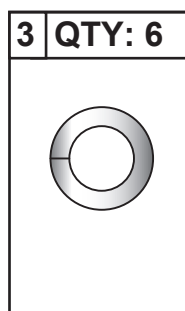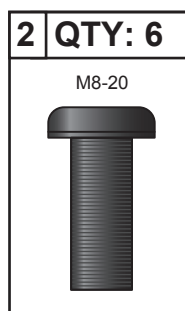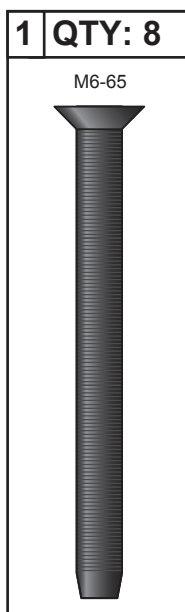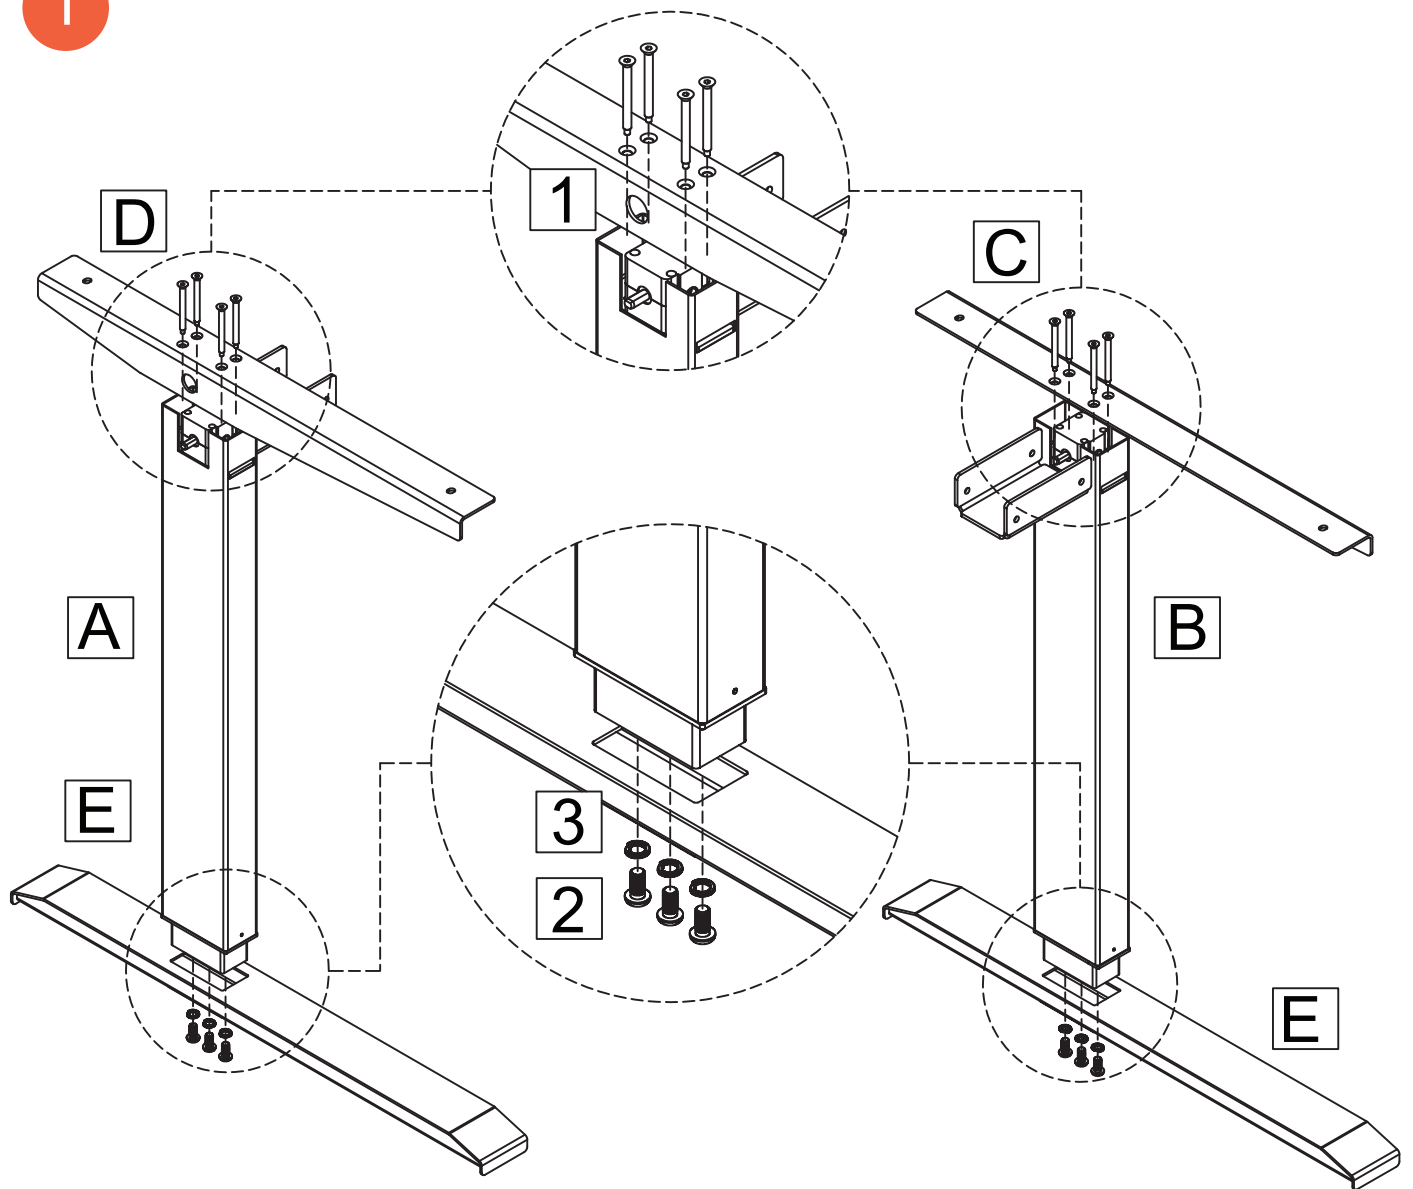



2

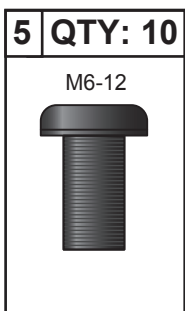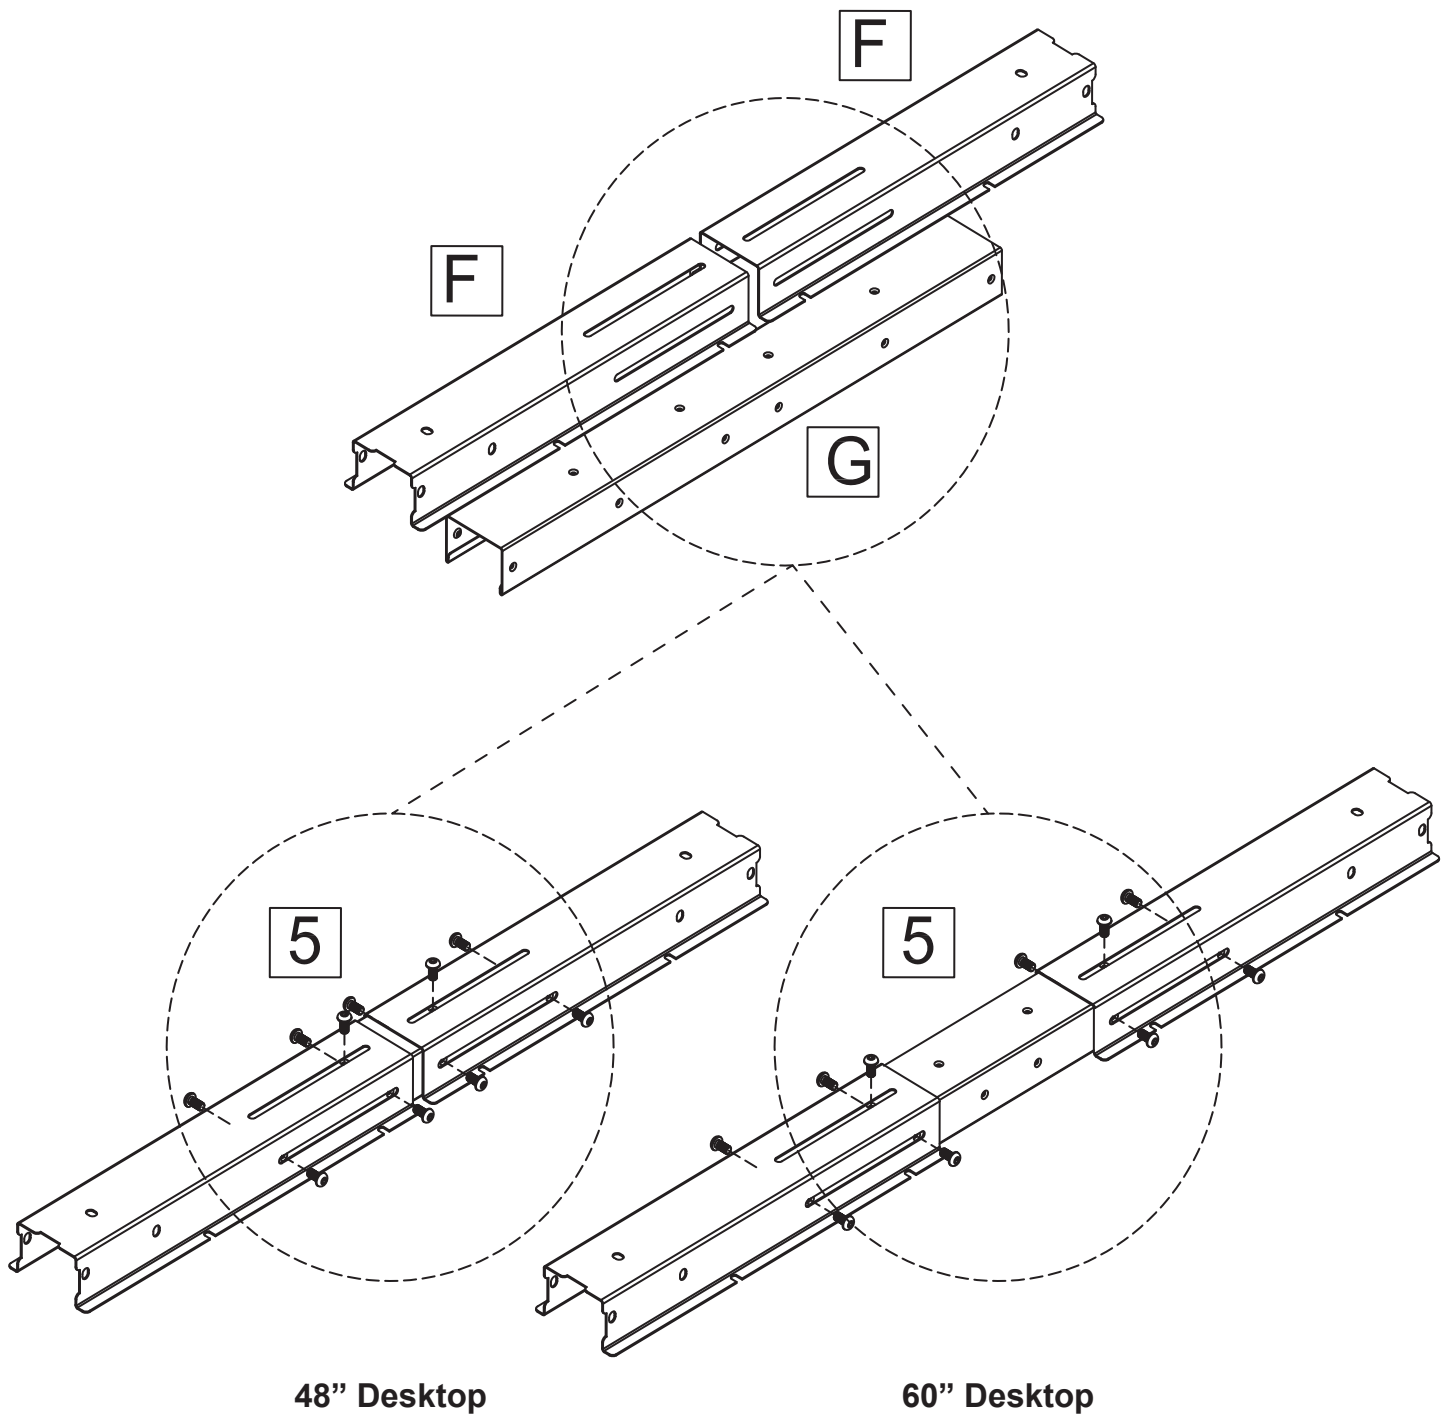

3

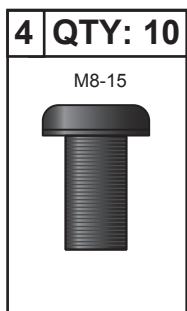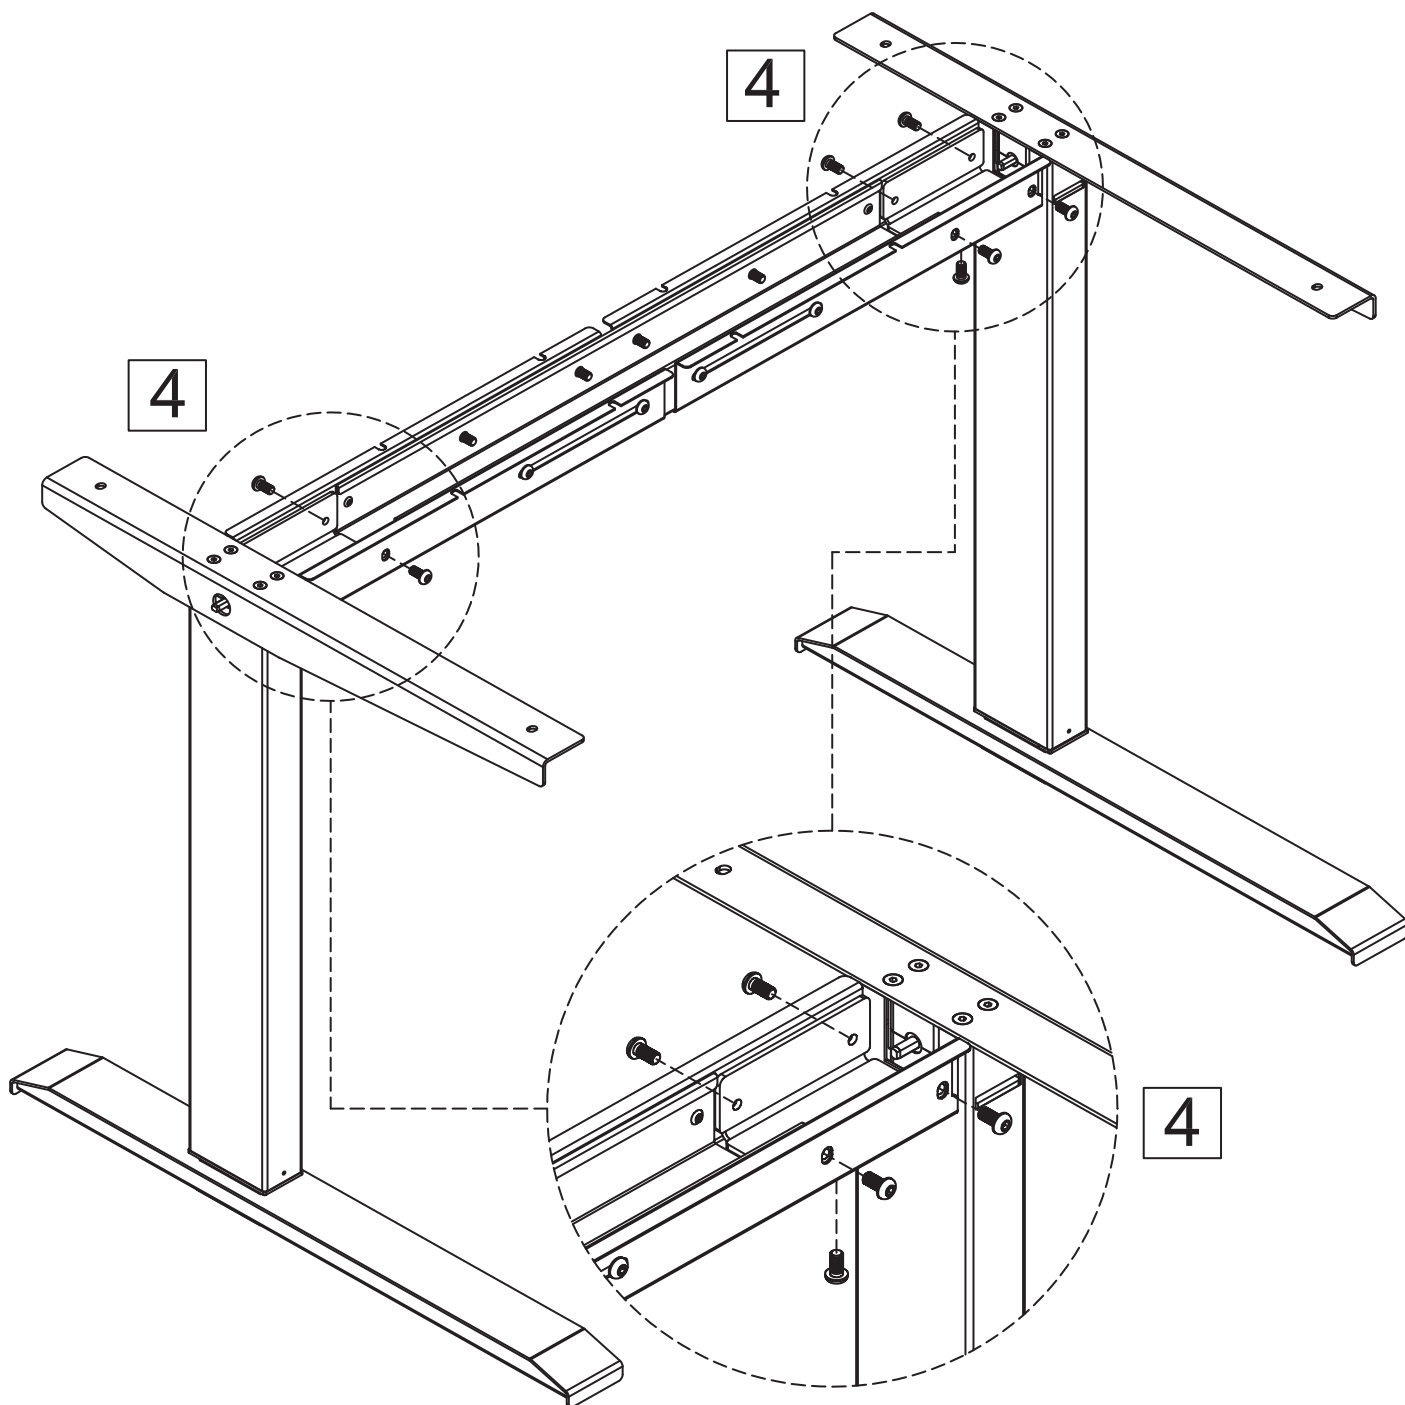


4

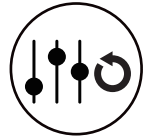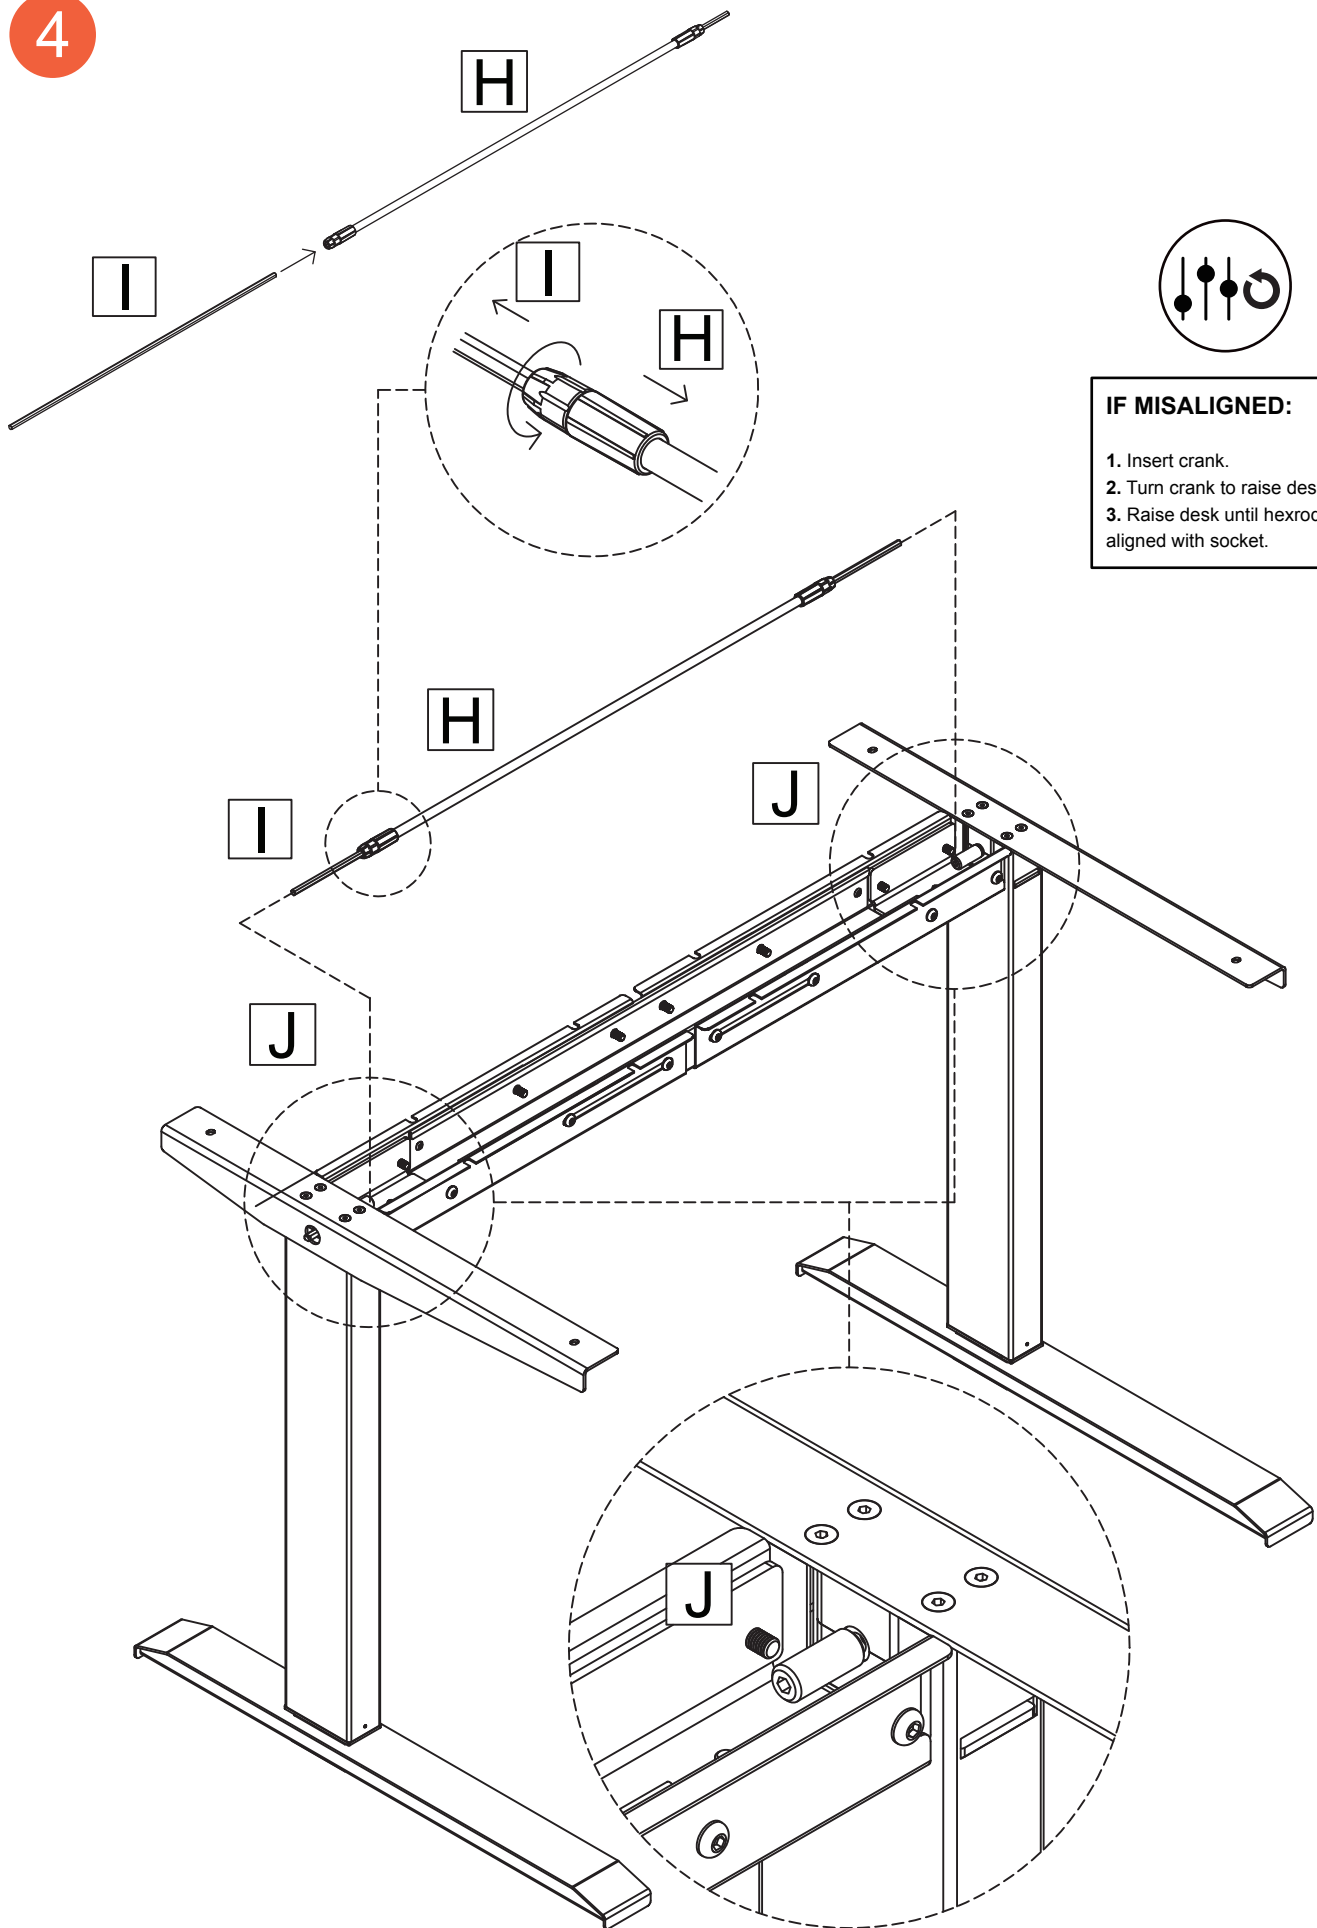

IF MISALIGNED:

1. Insert crank.
2. Turn crank to raise desk.
3. Raise desk until hexrod is aligned with socket.

5

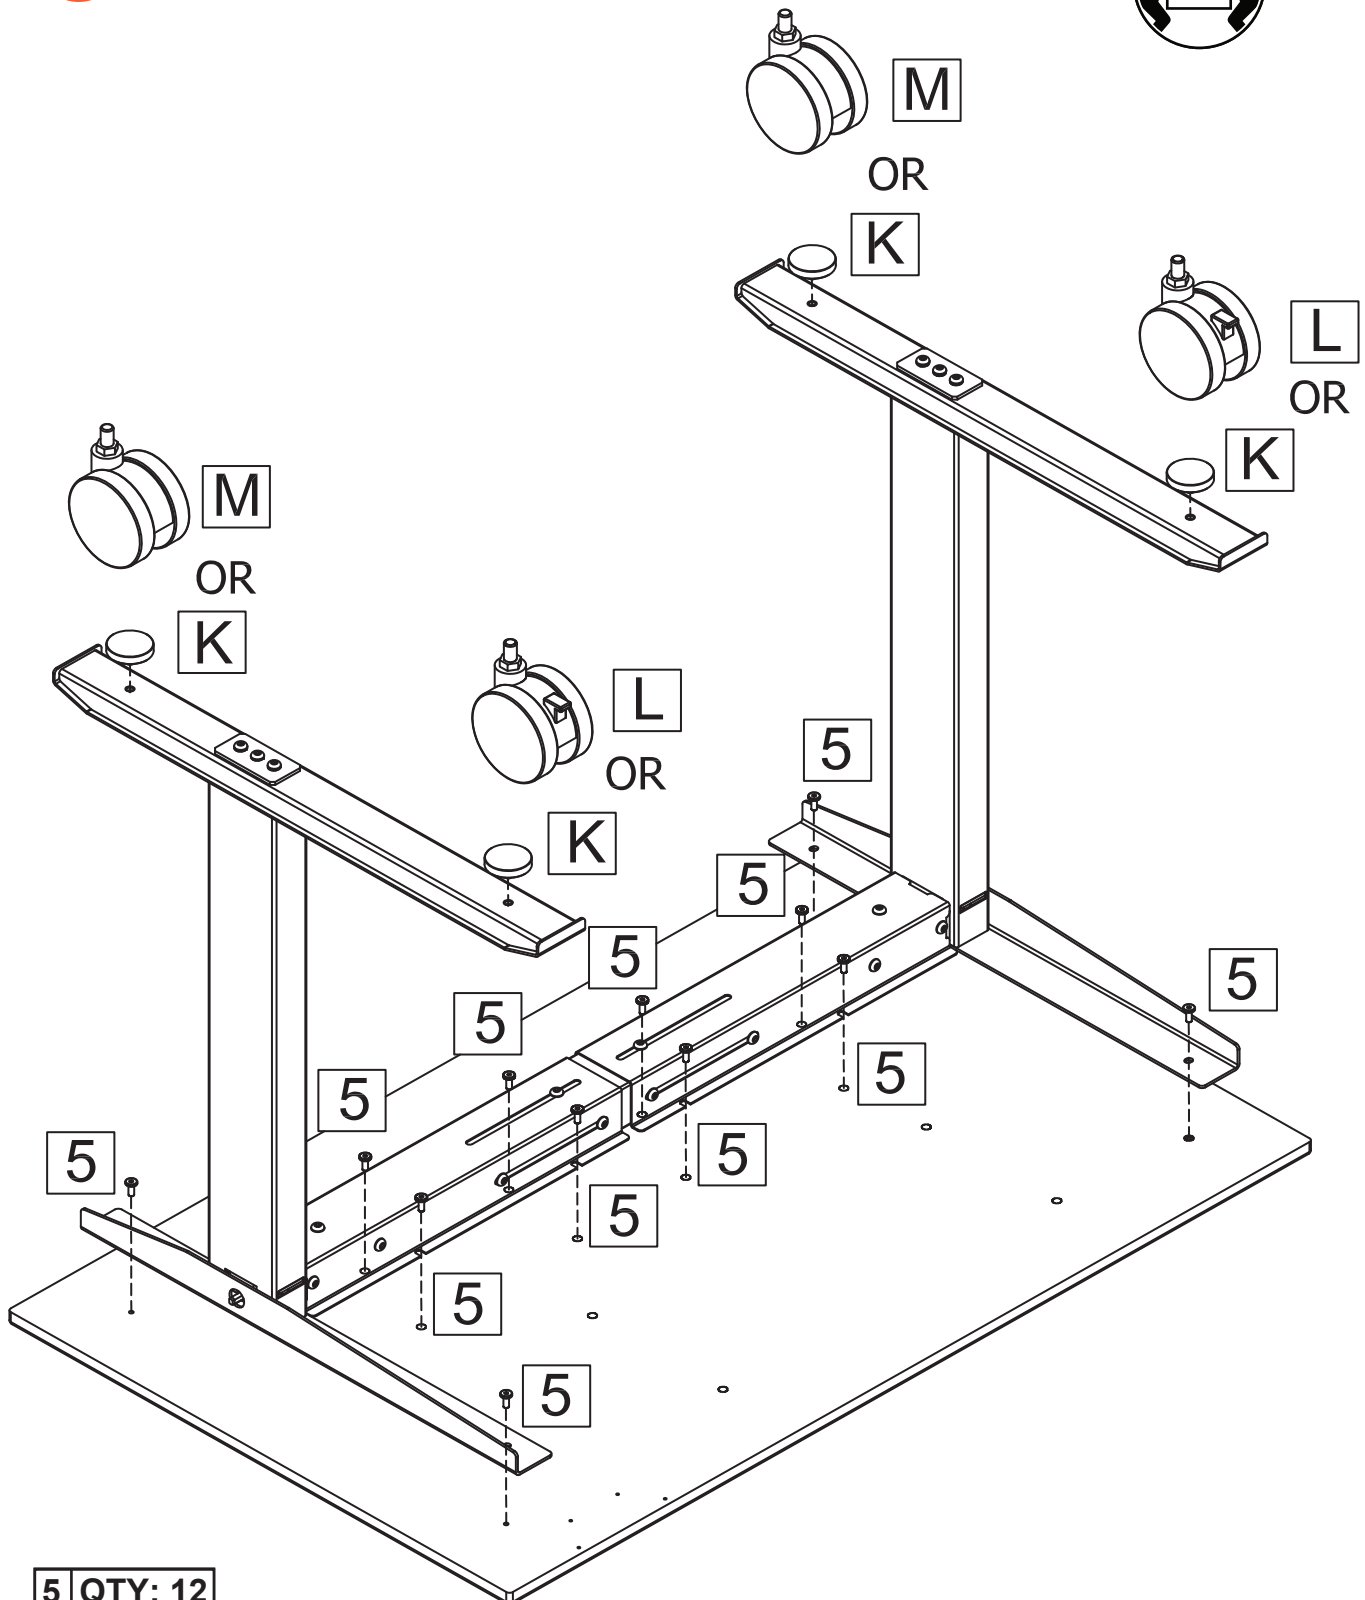

5	QTY: 12
M6-12	

6

