

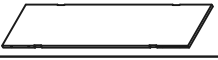
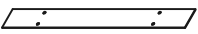
CARE AND MAINTENANCE

Spot clean using a mild water-free solvent. Only a professional cleaner should undertake a complete overall cleaning.  
The use of steam or water-based cleaners may cause excessive shrinking or staining.

NOTICE

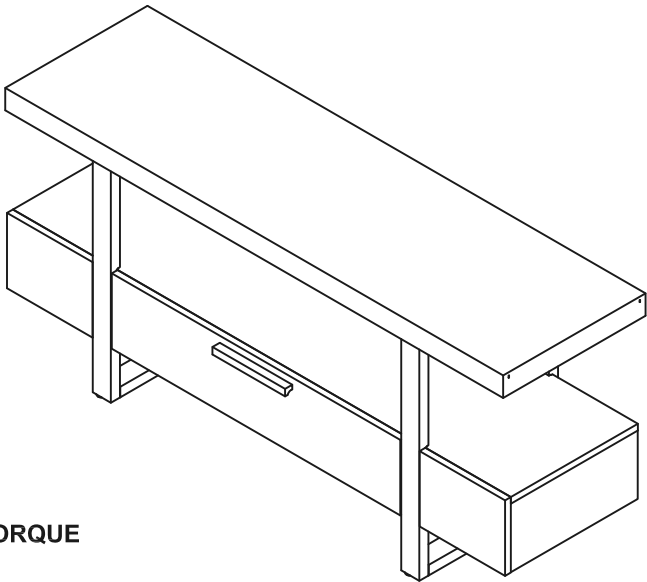
- \* Please make sure that you have all parts indicated before you begin assembly of this item.
- \* This item should be assembled on a soft surface to prevent scratching the finish during assembly.
- \* This item may require periodic tightening.

Part List

| PIECE | DESCRIPTION       | PICTURE                                                                             | QUANTITY |
|-------|-------------------|-------------------------------------------------------------------------------------|----------|
| A     | TOP PANEL         |    | 1X       |
| B     | SHELF             |    | 1X       |
| C     | LEFT PANEL        |    | 1X       |
| D     | RIGHT PANEL       |    | 1X       |
| E     | LEFT DIVIDER      |  | 1X       |
| F     | RIGHT DIVIDER     |  | 1X       |
| G     | LEFT FRONT PANEL  |  | 1X       |
| H     | RIGHT FRONT PANEL |  | 1X       |
| I     | BOTTOM ASSEMBLY   |  | 1X       |
| J     | BACK PANEL        |  | 1X       |
| K     | LEG               |  | 4X       |
| L     | SUPPORT LEG       |  | 2X       |



Model# MED5003A  
Product Dimensions: 54"W x 15 1/2"D x 24"H



WEIGHT CAPACITY :  
TOP : 110 LBS  
DRAWER : 30 LBS  
SHELF : 40 LBS

WARNING: DO NOT OVER TORQUE  
BOLTS/SCREWS

| PIECE | DESCRIPTION    | PICTURE                                                                               | QUANTITY |
|-------|----------------|---------------------------------------------------------------------------------------|----------|
| M     | DRAWER FRONT   |  | 1X       |
| N     | DRAWER LEFT    |  | 1X       |
| O     | DRAWER RIGHT   |  | 1X       |
| P     | DRAWER BACK    |  | 1X       |
| Q     | DRAWER BASE    |  | 1X       |
| R     | DRAWER SUPPORT |  | 1X       |

CARE AND MAINTENANCE

Spot clean using a mild water-free solvent. Only a professional cleaner should undertake a complete overall cleaning.  
The use of steam or water-based cleaners may cause excessive shrinking or staining.

NOTICE

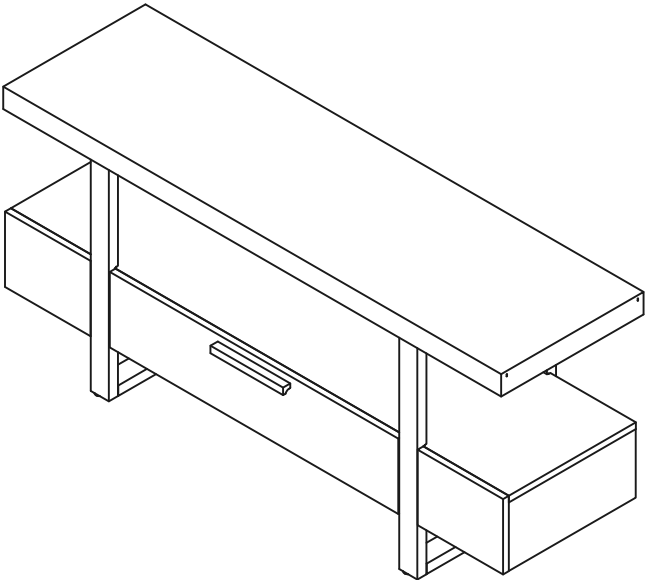
- \* Please make sure that you have all parts indicated before you begin assembly of this item.
- \* This item should be assembled on a soft surface to prevent scratching the finish during assembly.
- \* This item may require periodic tightening.

Hardware List

| PIECE | DESCRIPTION             | PICTURE                                                                                     | QUANTITY |
|-------|-------------------------|---------------------------------------------------------------------------------------------|----------|
| 1     | 50 MM BOLT              | M6x50mm    | 8X       |
| 2     | 40 MM BOLT              | M6x40mm    | 4X       |
| 3     | 25 MM BOLT              | M6x25mm    | 8X       |
| 4     | 1 1/2" ROUND HEAD SCREW | M4x38mm    | 6X       |
| 5     | 1 1/4" FLAT HEAD SCREW  | M3x32mm    | 11X      |
| 6     | 3/4" FLAT HEAD SCREW    | M3x19mm   | 6X       |
| 7     | 5/8" FLAT HEAD SCREW    | M3x16mm  | 10X      |
| 8     | CAMBOLT                 |          | 28X      |
| 9     | CAMLOCK                 |          | 28X      |
| 10    | MACHINE SCREW           | M4x25mm  | 2X       |
| 11    | HANDLE                  |          | 1X       |
| 12    | DOWEL                   |          | 16X      |
| 13    | WEDGE                   |          | 10X      |
| 14    | SPRING WASHER           |          | 20X      |
| 15    | FLAT WASHER             |          | 20X      |
| 16    | ALLEN KEY               |          | 1X       |

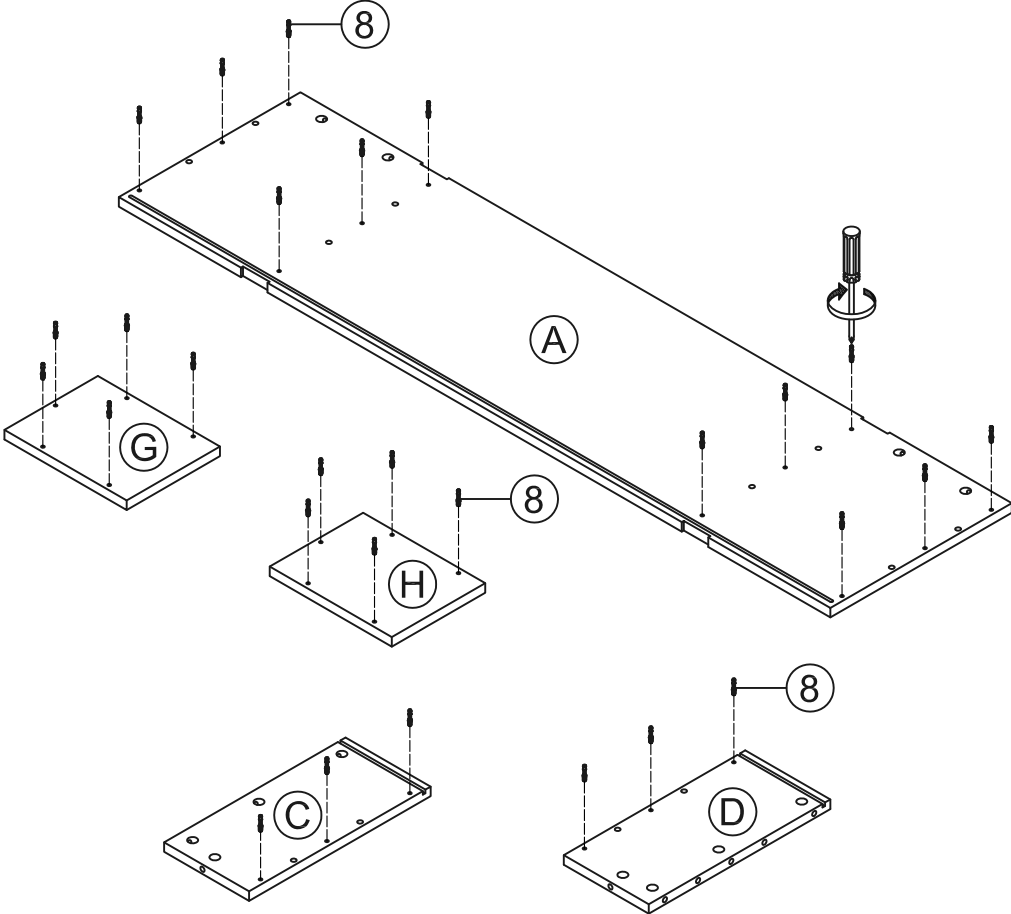
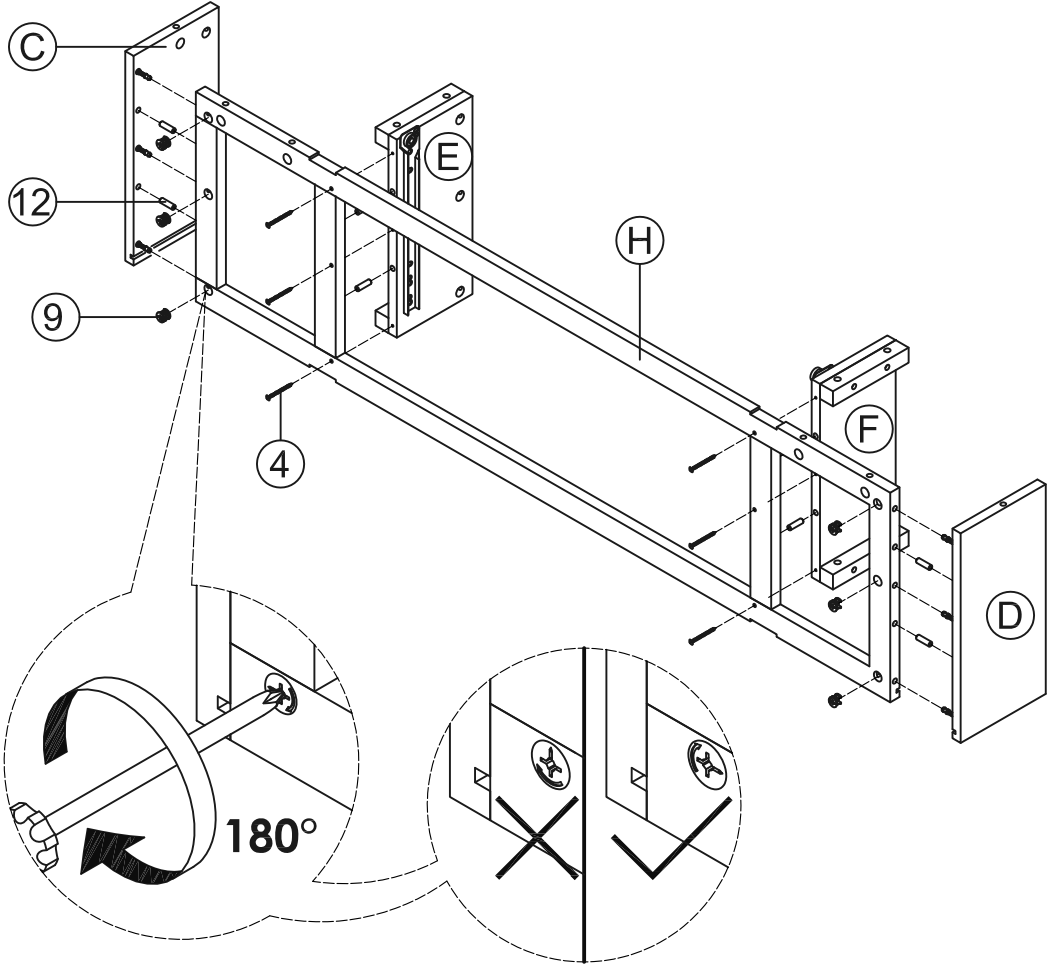


Model# MED5003A  
Product Dimensions: 54"W x 15,1/2"D x 24"H



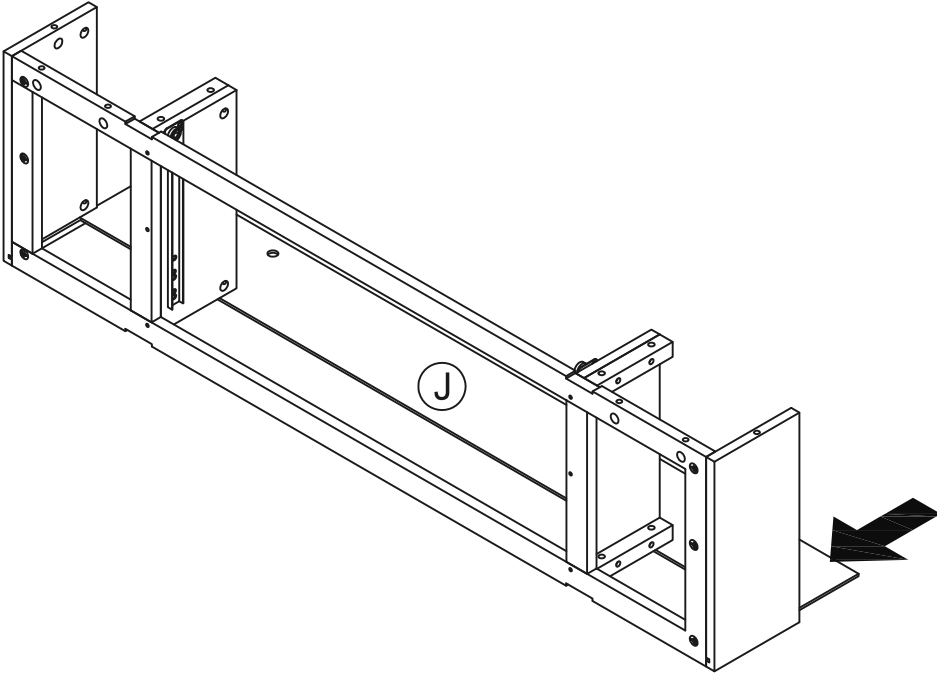
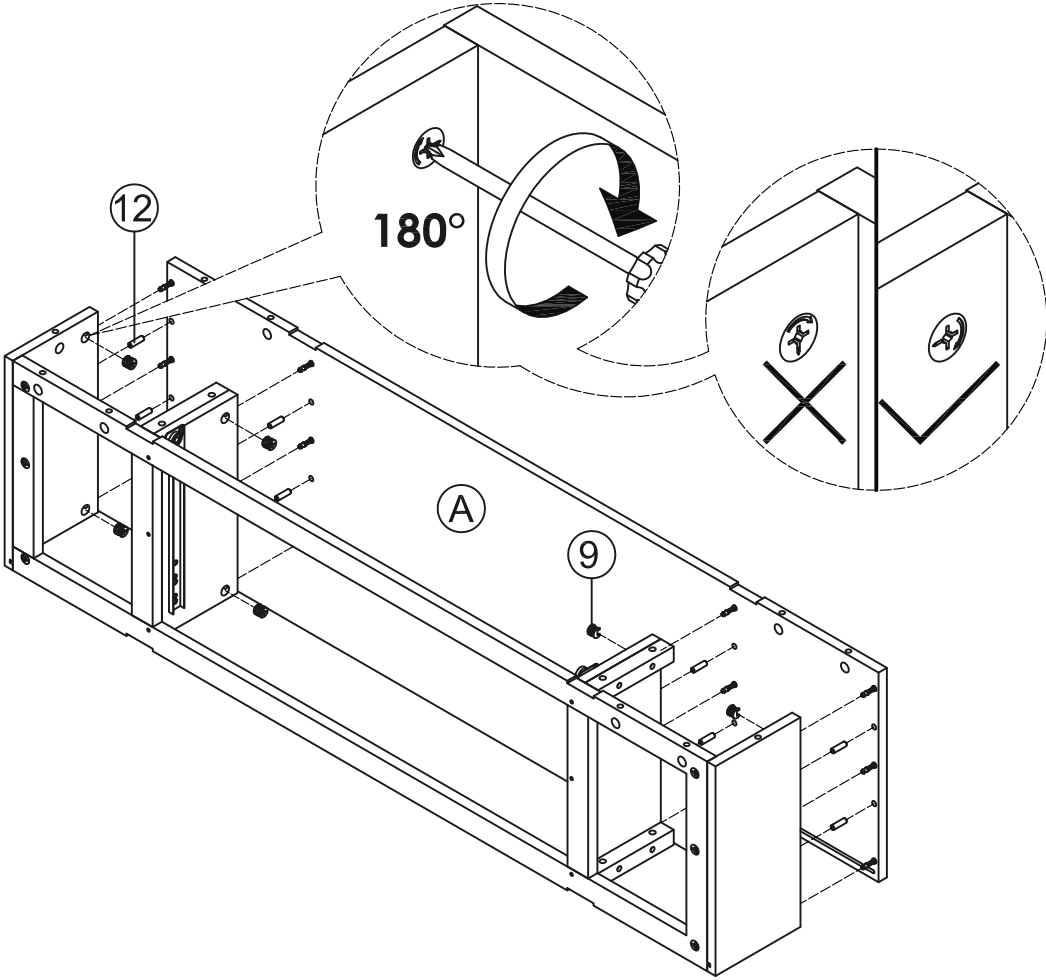
**PREPARATION**

Before beginning assembly of product, make sure all parts are present. Compare parts with package contents list and hardware contents list.  
If any part is missing or damaged, do not attempt to assemble the product.  
Estimated Assembly Time: 60 minutes.  
Tools Required for Assembly : Phillips Screwdriver

|                                                                                                        |                                                                                                                                                                                                   |
|--------------------------------------------------------------------------------------------------------|---------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
|                     |                                                                                                               |
| <p><b>STEP 1</b> ATTACH CAMBOLTS TO TOP PANEL, LEFT AND RIGHT PANELS, LEFT AND RIGHT FRONT PANELS.</p> | <p><b>STEP 2</b> ATTACH LEFT AND RIGHT PANELS TO BOTTOM ASSEMBLY USING CAM LOCKS AND DOWELS.<br/>ATTACH LEFT AND RIGHT DIVIDERS TO BOTTOM ASSEMBLY USING 1 1/2" ROUND HEAD SCREWS AND DOWELS.</p> |

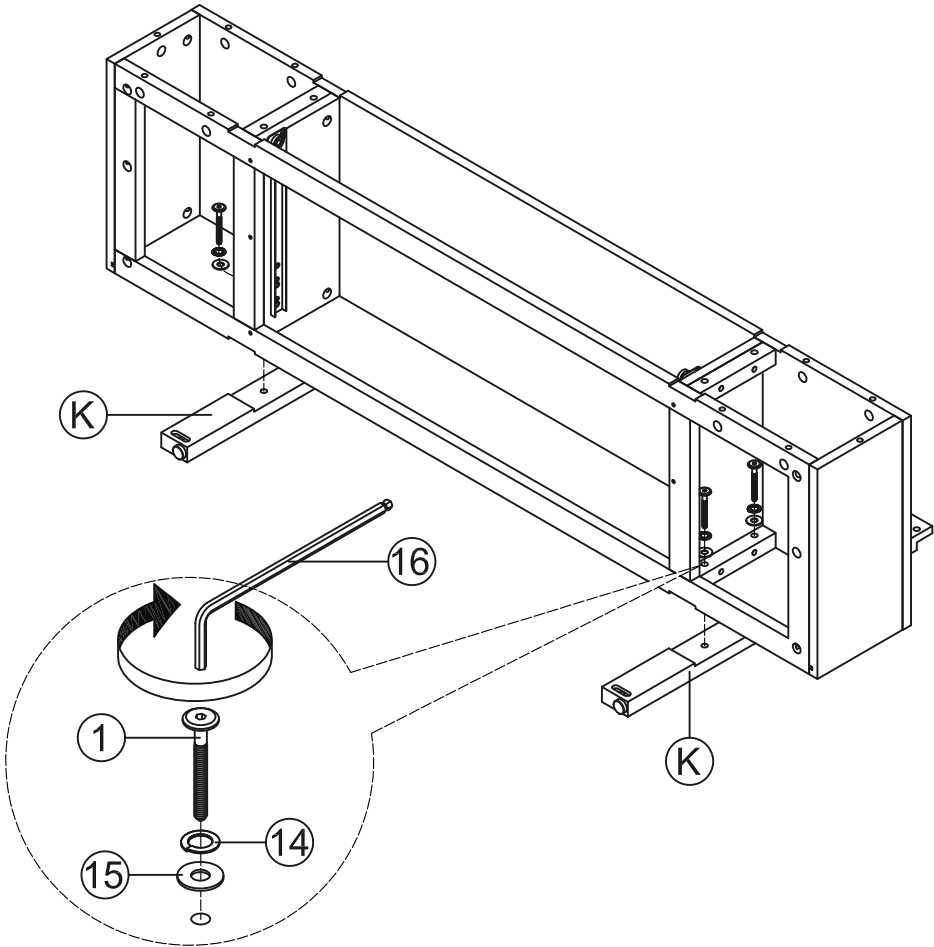
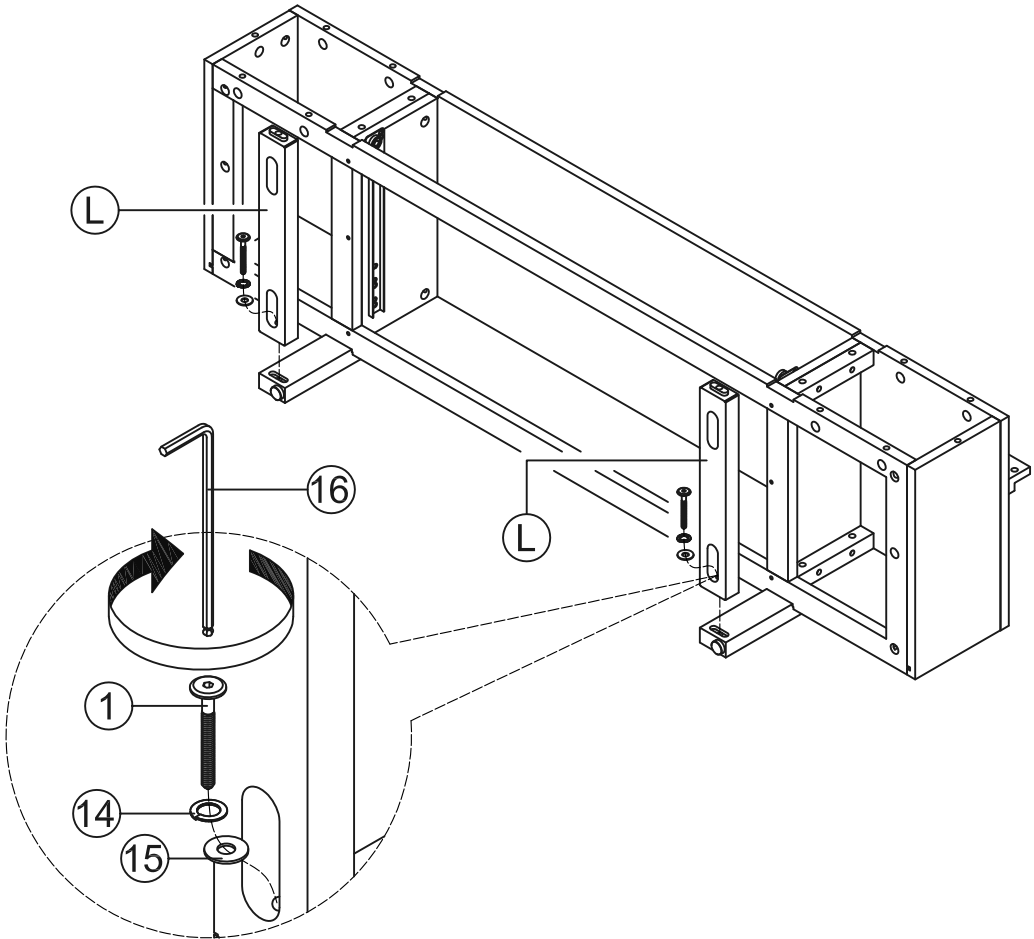
**PREPARATION**

Before beginning assembly of product, make sure all parts are present. Compare parts with package contents list and hardware contents list.  
If any part is missing or damaged, do not attempt to assemble the product.  
Estimated Assembly Time: 60 minutes.  
Tools Required for Assembly : Phillips Screwdriver

|                                                                                                                                                                                                                                                                                                                                                        |                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                             |
|--------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|-------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
|  <p>The diagram shows a perspective view of a metal frame assembly. A long horizontal bar, labeled with a circled 'J', is being inserted into a groove on the side of the frame. A large black arrow points to the right, indicating the direction of movement.</p> |  <p>The diagram shows a perspective view of the metal frame assembly with the top panel being attached. The top panel is labeled with a circled 'A'. Two circular callouts provide details: the left callout shows a camlock being rotated 180 degrees, indicated by a curved arrow and the text '180°'; the right callout shows two camlocks, one with an 'X' over it (indicating incorrect placement) and one with a checkmark (indicating correct placement). A label '12' points to a dowel being inserted into the top panel, and a label '9' points to a camlock being attached to the side of the top panel.</p> |
| <p><b>STEP 3</b> SLIDE BACK PANEL INTO THE GROOVE OF UNIT.</p>                                                                                                                                                                                                                                                                                         | <p><b>STEP 4</b> ATTACH TOP PANEL TO UNIT USING CAMLOCKS AND DOWELS.</p>                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                    |

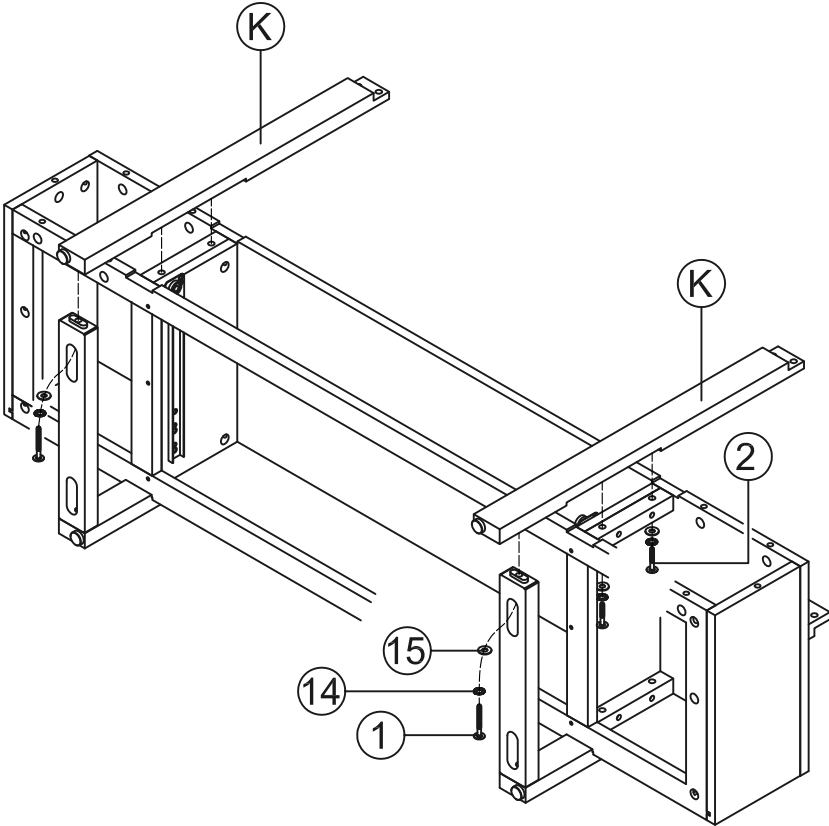
**PREPARATION**

Before beginning assembly of product, make sure all parts are present. Compare parts with package contents list and hardware contents list.  
If any part is missing or damaged, do not attempt to assemble the product.  
Estimated Assembly Time: 60 minutes.  
Tools Required for Assembly : Phillips Screwdriver

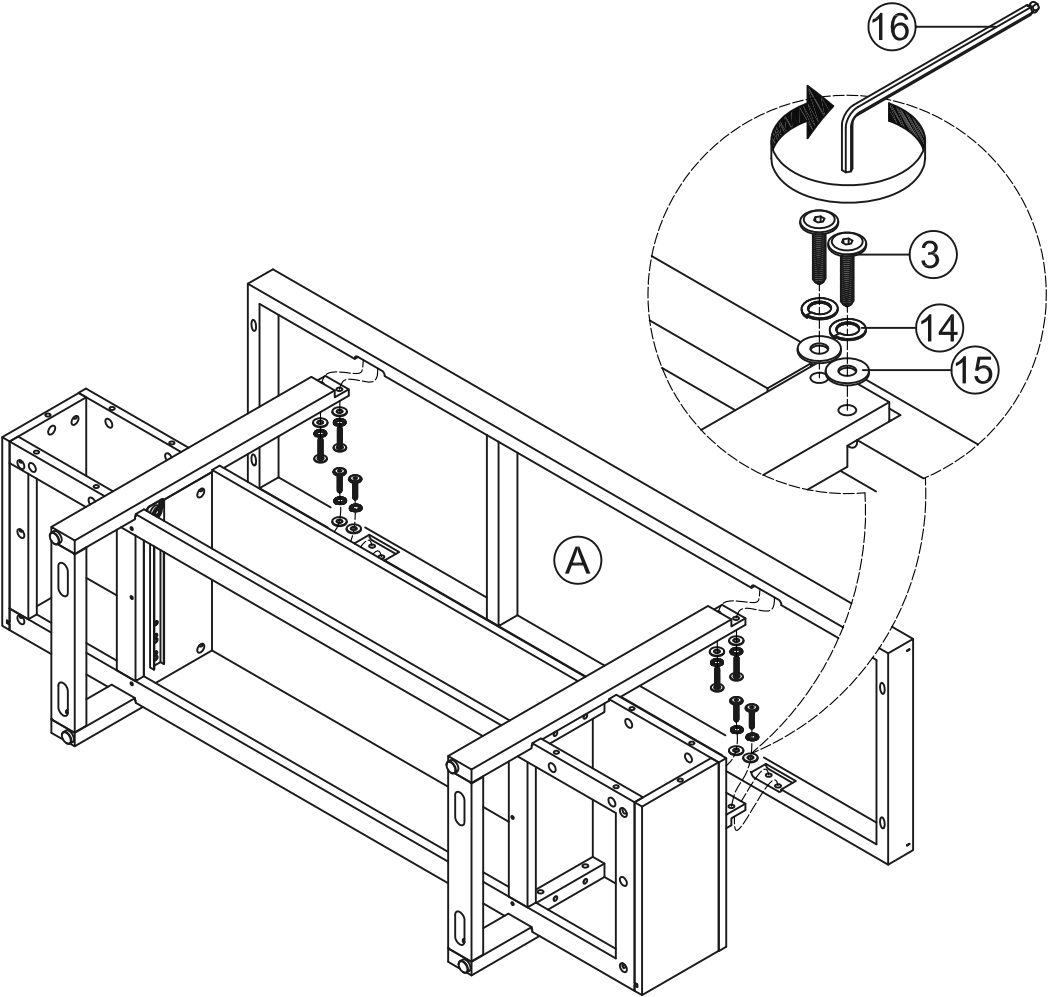
|                                                                                                                                 |                                                                                                                                         |
|---------------------------------------------------------------------------------------------------------------------------------|-----------------------------------------------------------------------------------------------------------------------------------------|
|                                              |                                                     |
| <p><b>STEP 5</b> ATTACH UNIT TO LEGS USING 50 MM BOLTS, SPRING WASHERS AND FLAT WASHERS, TIGHTEN THE BOLTS USING ALLEN KEY.</p> | <p><b>STEP 6</b> ATTACH SUPPORT LEGS TO UNIT USING 50 MM BOLTS, SPRING WASHERS AND FLAT WASHERS. TIGHTEN THE BOLTS USING ALLEN KEY.</p> |

**PREPARATION**

Before beginning assembly of product, make sure all parts are present. Compare parts with package contents list and hardware contents list.  
If any part is missing or damaged, do not attempt to assemble the product.  
Estimated Assembly Time: 60 minutes.  
Tools Required for Assembly : Phillips Screwdriver



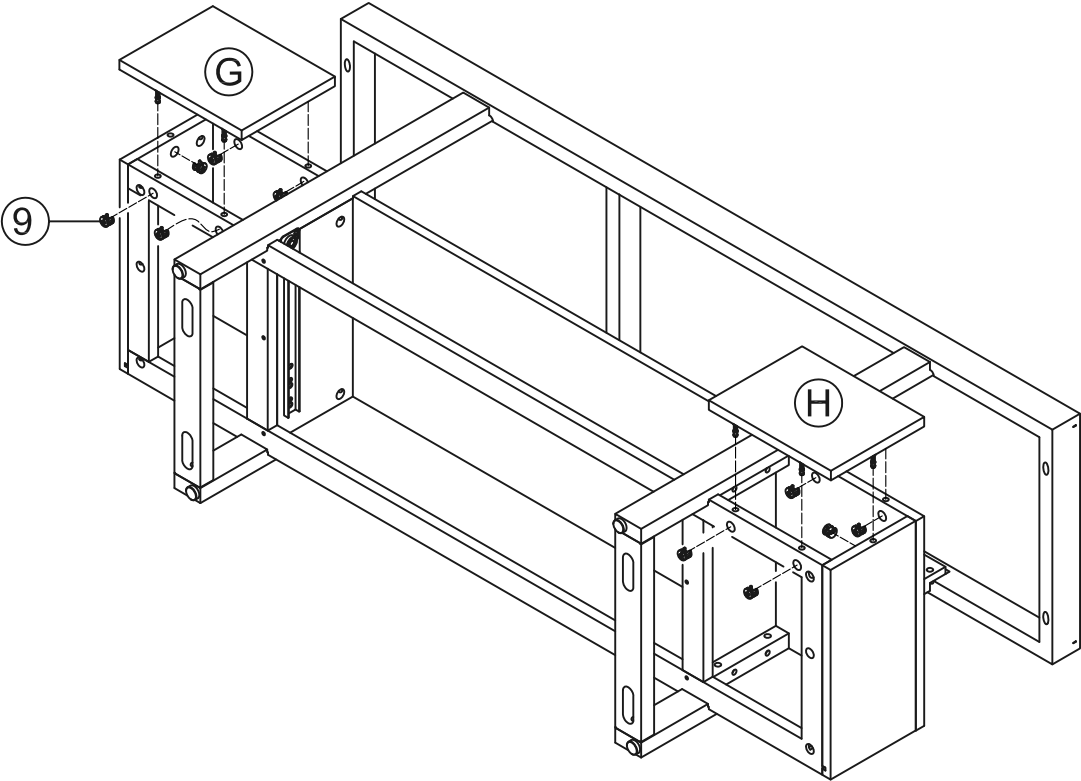
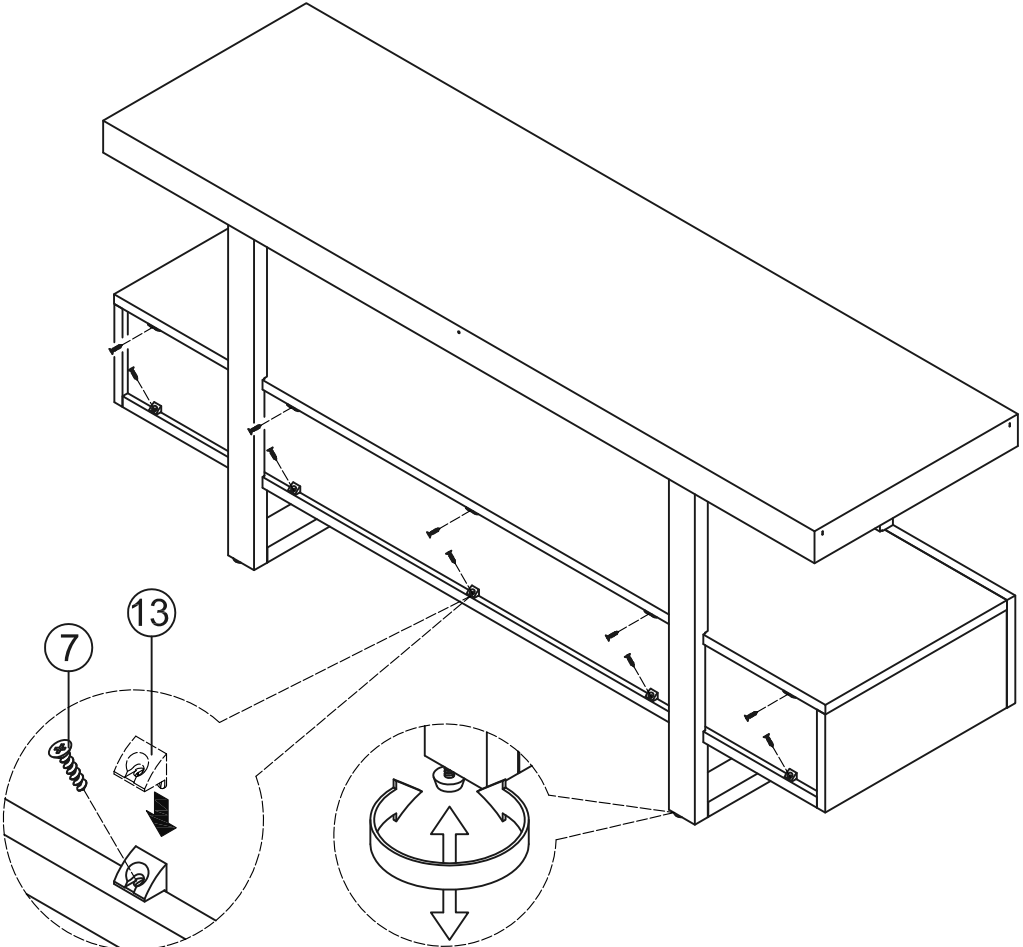
**STEP 7** ATTACH LEGS TO UNIT USING 50 MM BOLTS, 40 MM BOLTS, SPRING WASHERS AND FLAT WASHERS. TURN THE BOLTS USING ALLEN KEY.  
**NOTE:** DO NOT OVER TIGHTEN THE BOLTS.



**STEP 8** ATTACH TOP PANEL TO UNIT USING 25 MM BOLTS, SPRING WASHERS AND FLAT WASHERS. TIGHTEN THE BOLTS USING ALLEN.  
**NOTE:** TIGHTEN ALL THE BOLTS COMPLETELY USING ALLEN KEY.

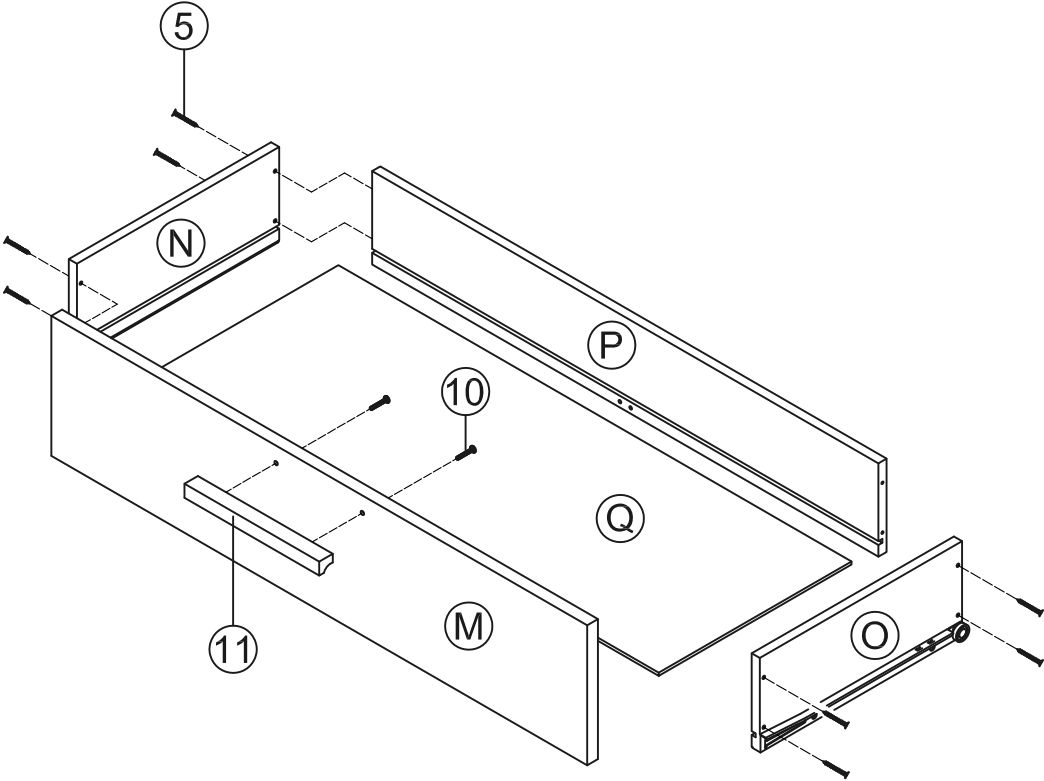
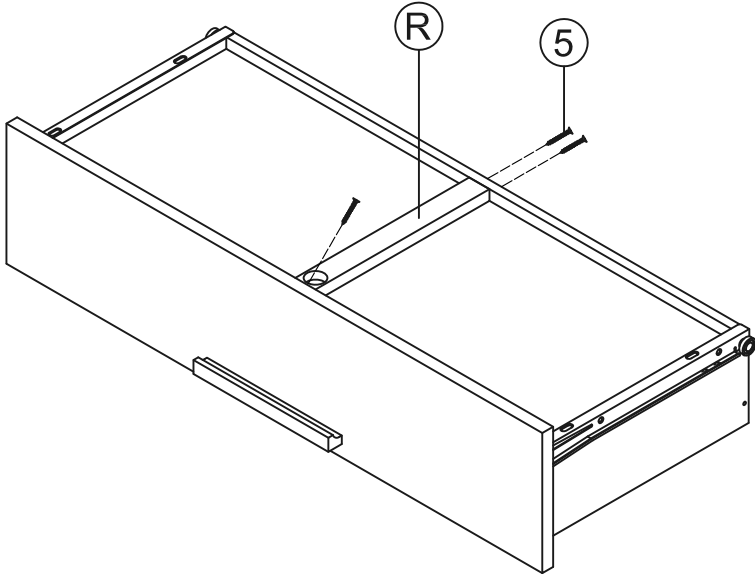
**PREPARATION**

Before beginning assembly of product, make sure all parts are present. Compare parts with package contents list and hardware contents list.  
If any part is missing or damaged, do not attempt to assemble the product.  
Estimated Assembly Time: 60 minutes.  
Tools Required for Assembly : Phillips Screwdriver

|                                                                                     |                                                                                                                                                                  |
|-------------------------------------------------------------------------------------|------------------------------------------------------------------------------------------------------------------------------------------------------------------|
|  |                                                                              |
| <p><b>STEP 9</b> ATTACH FRONT PANELS TO UNIT USING CAMLOCKS.</p>                    | <p><b>STEP 10</b> ATTACH WEDGES TO UNIT USING 5/8" FLAT HEAD SCREWS. ADJUST THE ADJUSTER THAT HAS ALREADY BEEN ASSEMBLED TO THE LEGS TO STABILIZE YOUR UNIT.</p> |

**PREPARATION**

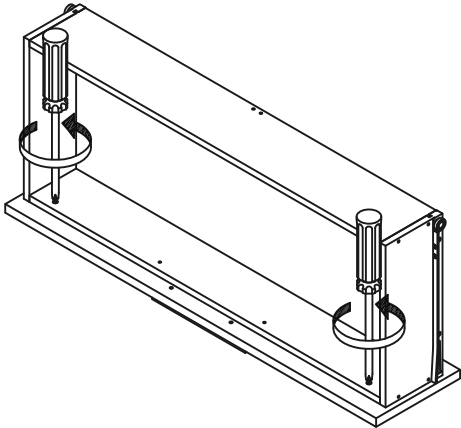
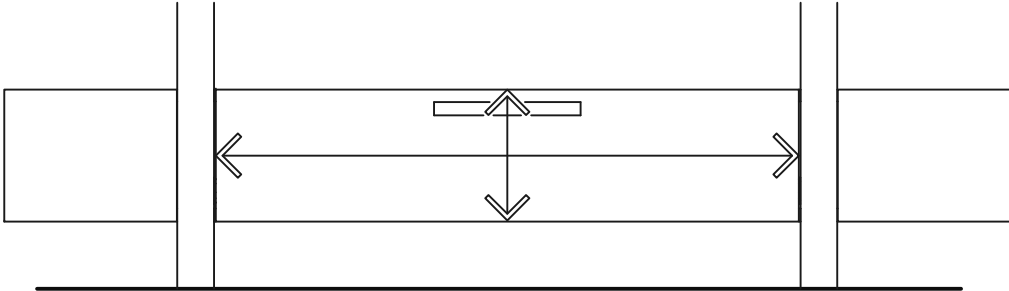
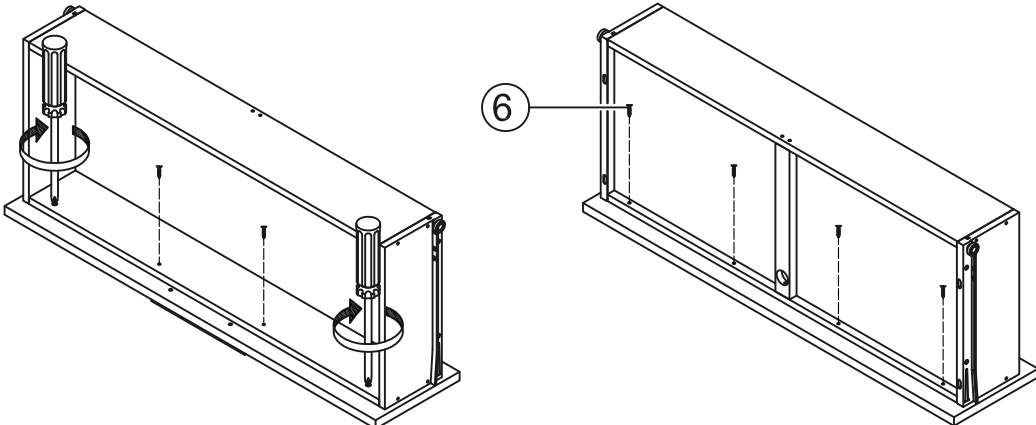
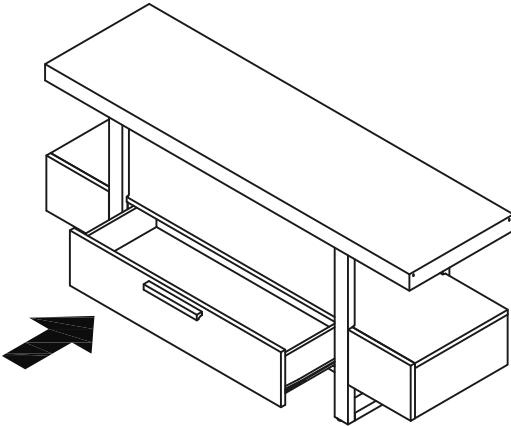
Before beginning assembly of product, make sure all parts are present. Compare parts with package contents list and hardware contents list.  
If any part is missing or damaged, do not attempt to assemble the product.  
Estimated Assembly Time: 60 minutes.  
Tools Required for Assembly : Phillips Screwdriver

|                                                                                                                                                                                                                                                                                 |                                                                                                           |
|---------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|-----------------------------------------------------------------------------------------------------------|
|                                                                                                                                                                                              |                       |
| <p><b>STEP 11</b> ATTACH HANDLE TO DRAWER FRONT USING MACHINE SCREWS.<br/>ATTACH DRAWER LEFT AND RIGHT TO DRAWER BACK USING 1 1/4" FLAT HEAD SCREWS.<br/>SLIDE DRAWER BASE INTO THE GROOVE.<br/>ATTACH DRAWER FRONT TO DRAWER LEFT AND RIGHT USING 1 1/4" FLAT HEAD SCREWS.</p> | <p><b>STEP 12</b> ATTACH DRAWER SUPPORTS TO THE BOTTOM SIDE OF DRAWERS USING 1 1/4" FLAT HEAD SCREWS.</p> |



**PREPARATION**

Before beginning assembly of product, make sure all parts are present. Compare parts with package contents list and hardware contents list.  
If any part is missing or damaged, do not attempt to assemble the product.  
Estimated Assembly Time: 60 minutes.  
Tools Required for Assembly : Phillips Screwdriver

|                                                                                                                                                                                                             |                                                                                                                                                                 |
|-------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|-----------------------------------------------------------------------------------------------------------------------------------------------------------------|
|                                                                                                                            |                                                                              |
| <p><b>STEP 13</b> LOOSEN SLIGHTLY THE SCREWS PRE-INSTALLED ON THE BACK OF THE DRAWER FRONTS.</p>                                                                                                            | <p><b>STEP 14</b> INSERT THE DRAWER INTO THE UNIT, THEN ADJUST THE DRAWER FRONT PANEL LEFT OR RIGHT AND UP OR DOWN UNTIL THE DRAWER GAPS LOOK PROPORTIONAL.</p> |
|                                                                                                                          |                                                                             |
| <p><b>STEP 15</b> PULL THE DRAWER OPEN SLOWLY AND RE-TIGHTEN THE SCREWS FROM STEP 11. MAKE SURE THE FRONT PANEL DOES NOT MOVE AND LOCK THE DRAWER FRONT PANEL INTO POSITION WITH 3/4" FLAT HEAD SCREWS.</p> | <p><b>STEP 16</b> SLIDE THE DRAWER INTO UNIT.</p>                                                                                                               |