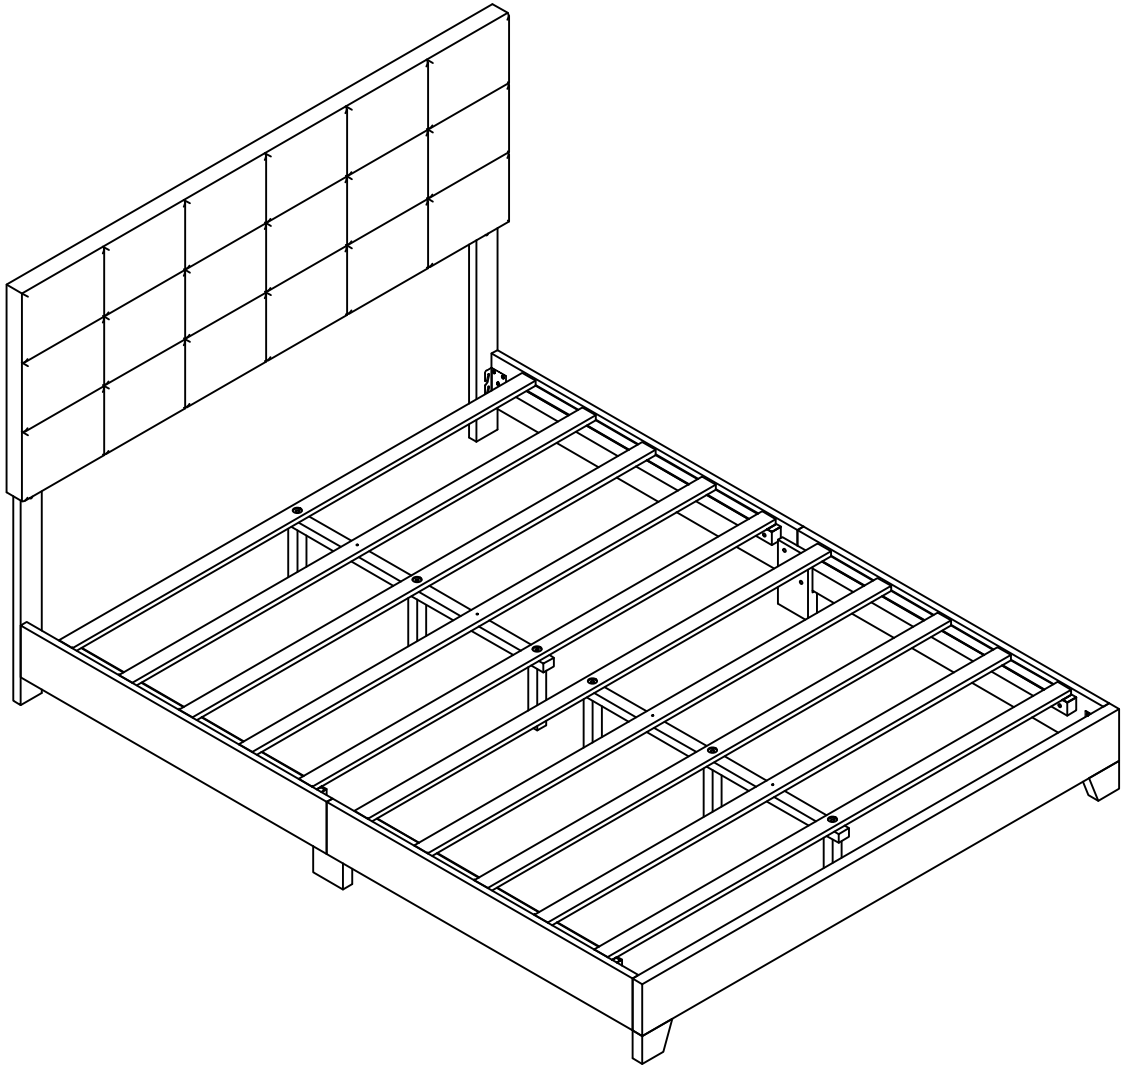


BED ASSEMBLY INSTRUCTIONS

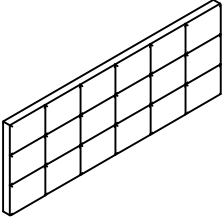
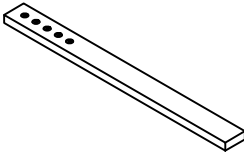
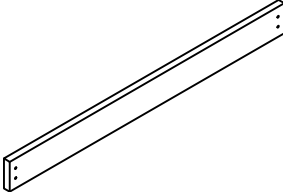
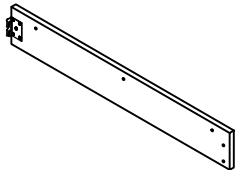
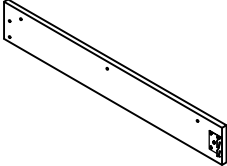
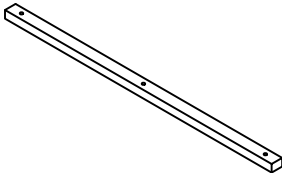
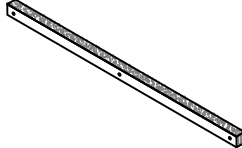
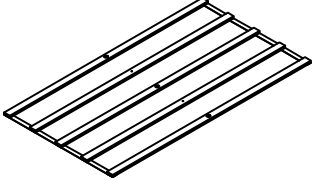




THANK YOU FOR PURCHASING BED





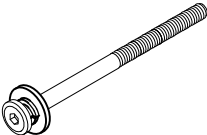


WARNING

- No rough tools or corrosive detergent for cleaning.
- The package contains some heavy parts and sharp-edged parts, please be careful when assembling to avoid any physical injury around you.
- Please strictly observe the steps of the instructions.
- Do not use a broken item and contact our customer service for guidance.

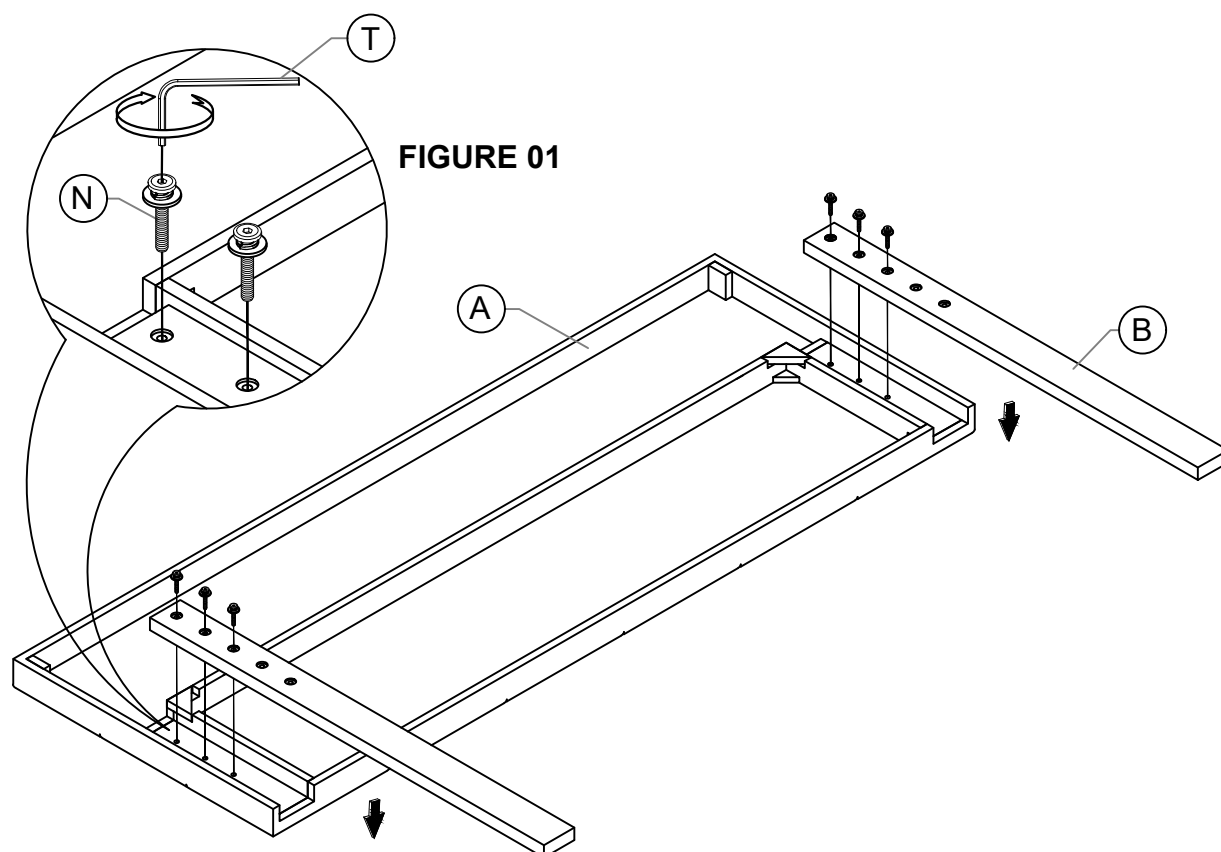
PART LIST

 (A): 1PCS	 (B): 2PCS	 (C): 1PCS	 (D): 2PCS
 (D1): 2PCS	 (E): 2PCS	 (F): 4PCS	 (G): 2 SET
 (H): 2PCS	 (I): 2PCS	 (J): 6PCS	

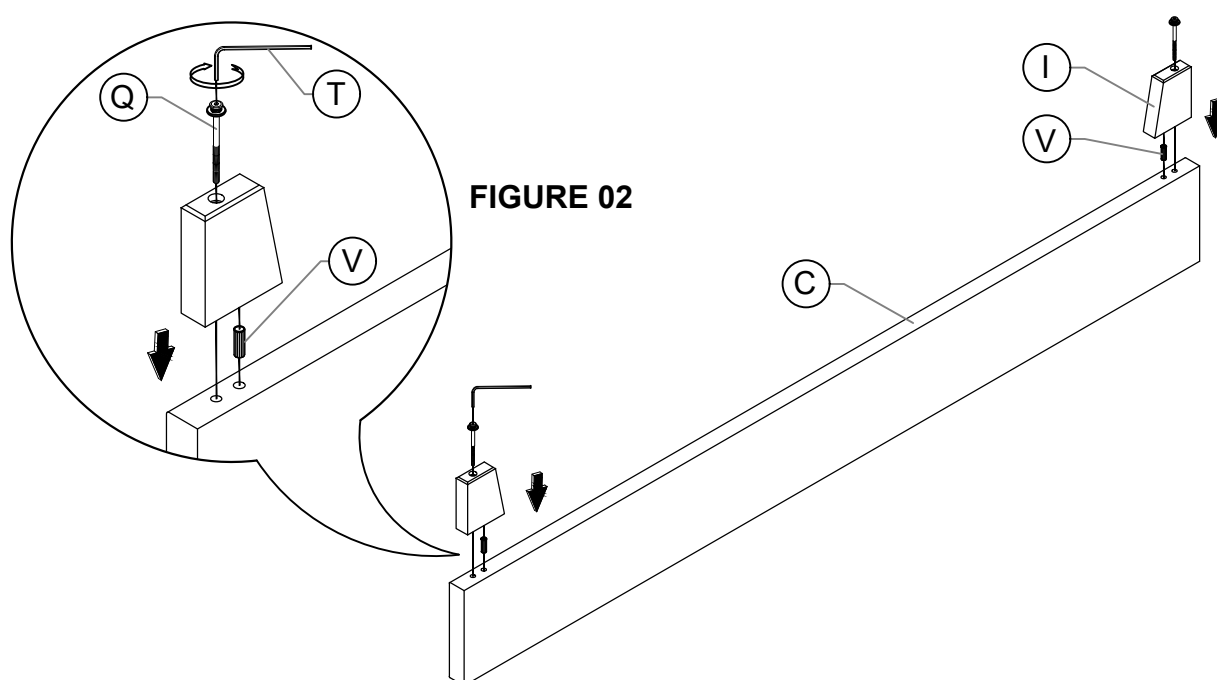
HARDWARE LIST

5/16" x 25mm  (M): 8PCS	5/16" x 40mm  (N): 6PCS	1/4" x 35mm  (O): 8PCS	1/4" x 40mm  (P): 12PCS
1/4" x 110mm  (Q): 2PCS	4 x 35mm  (S): 4PCS	L5  (T): 1PCS	 (U): 1PCS
 (V): 2PCS			

Step1: Install the leg (B) to the Headboard panel (A) by using the Allen bolt (N) with lock washer, flat washer and Allen key (T). See **FIGURE 01**.



Step2: Install the leg (I) wood dowel (V) to the Footboard panel (C) by using the Allen bolt (Q) with lock washer, flat washer and Allen key (T). See **FIGURE 02**.



Step3: Insert set of the bolts (M) with lock washer, flat washer into the fixed nuts on the headboard/footboard by manually. NOTE: Do not fully tighten the bolts, leave at least 10mm visible so that you can hanger hook on the bolts. See **FIGURE 03-A/B**.

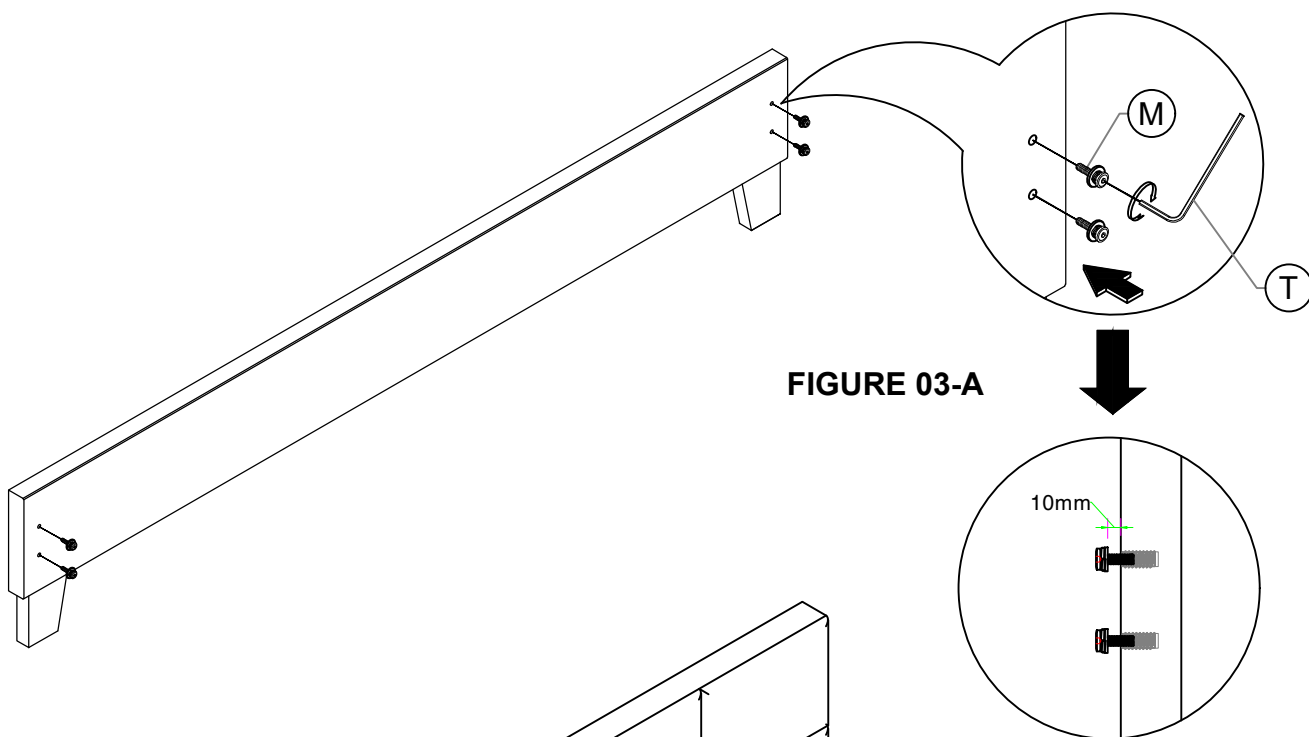


FIGURE 03-A

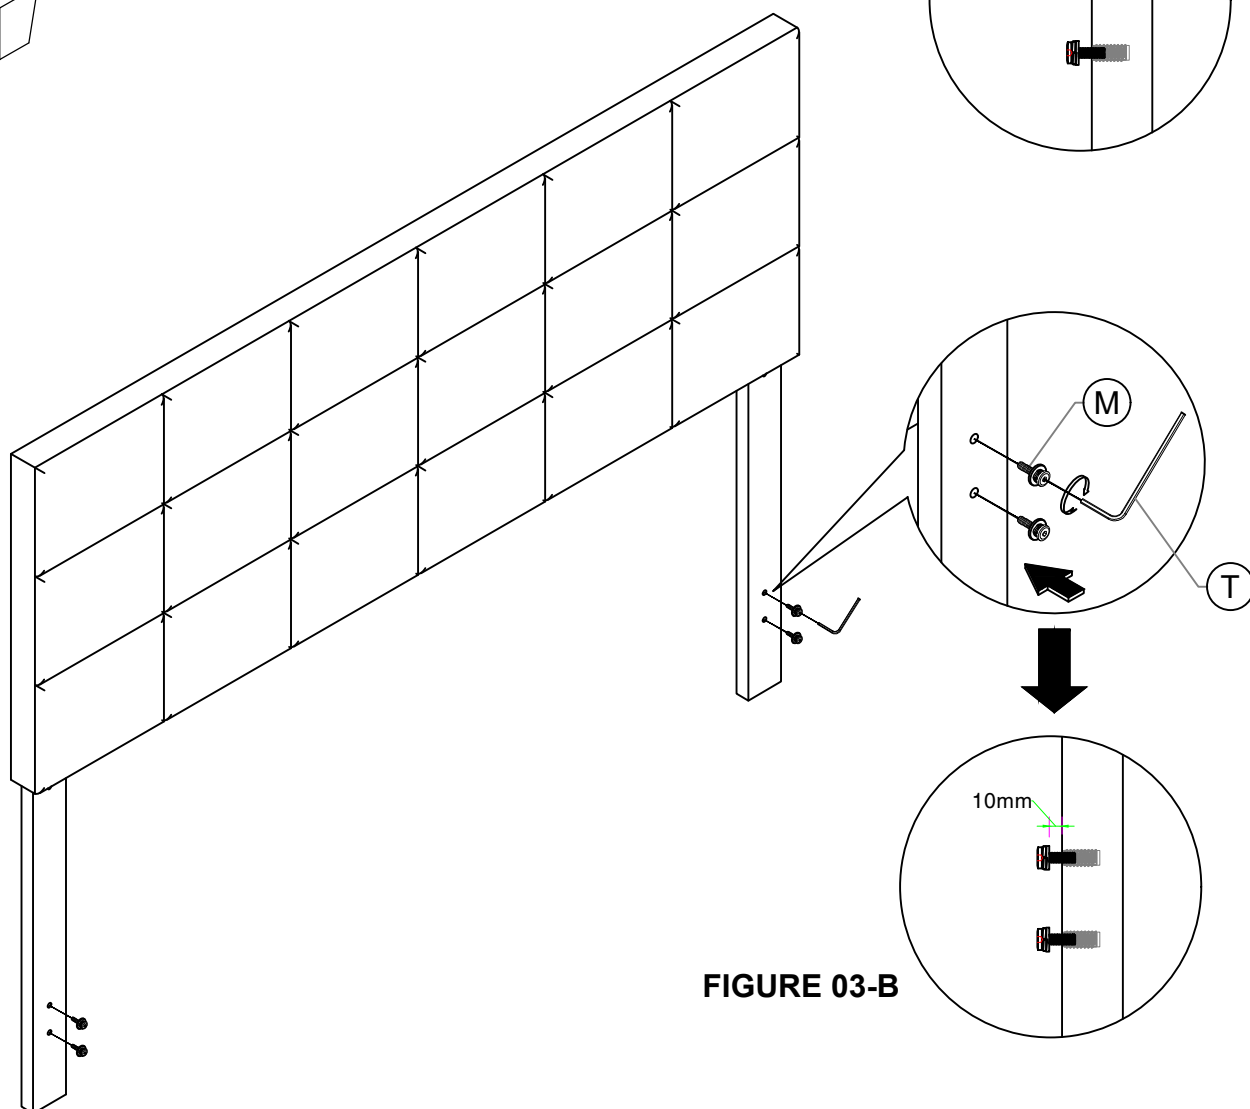
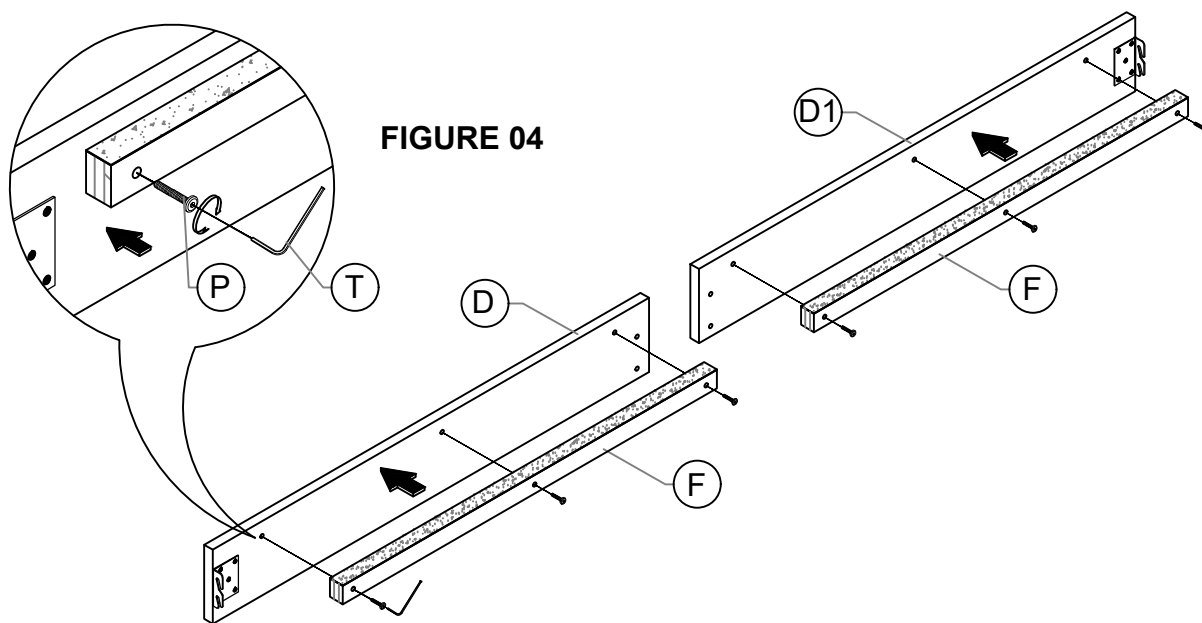
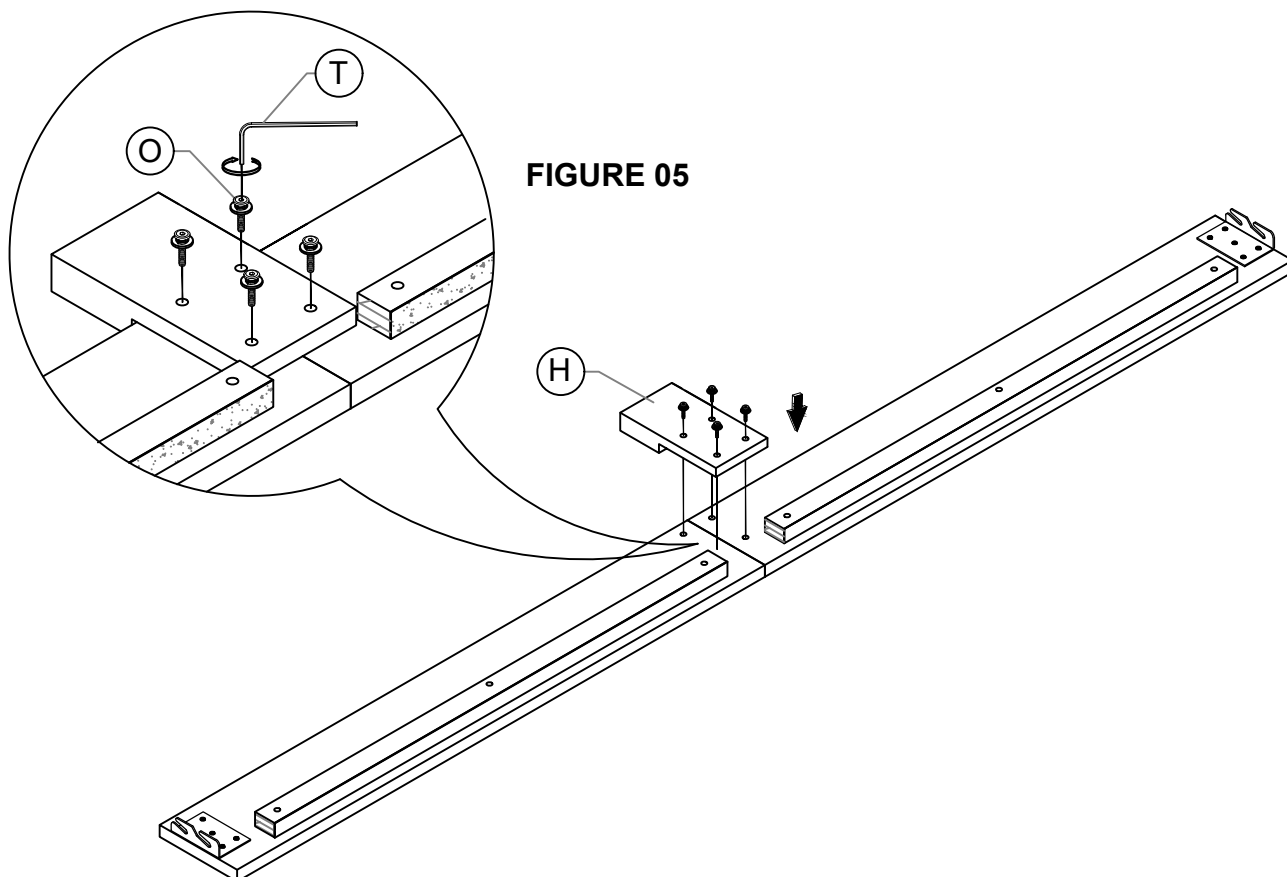


FIGURE 03-B

Step4: Install the rail support (F) to the side rail (D/D1) by using the Allen bolt (P) and Allen key (T). See **FIGURE 04**.



Step5: Install the leg support (H) to the side rail by using the Allen bolt (O) with lock washer, flat washer and Allen key (T). See **FIGURE 05**.



Step6: Raise the side rail (D/D1) up , bring the side rail and align the hook on the side rail to the bolts. Once the side rail is set, tighten all bolts by using a Allen key (T) as **FIGURE 06**.

After assembly, re-tighten all bolts for a snug fit. DO NOT OVER TIGHTEN.

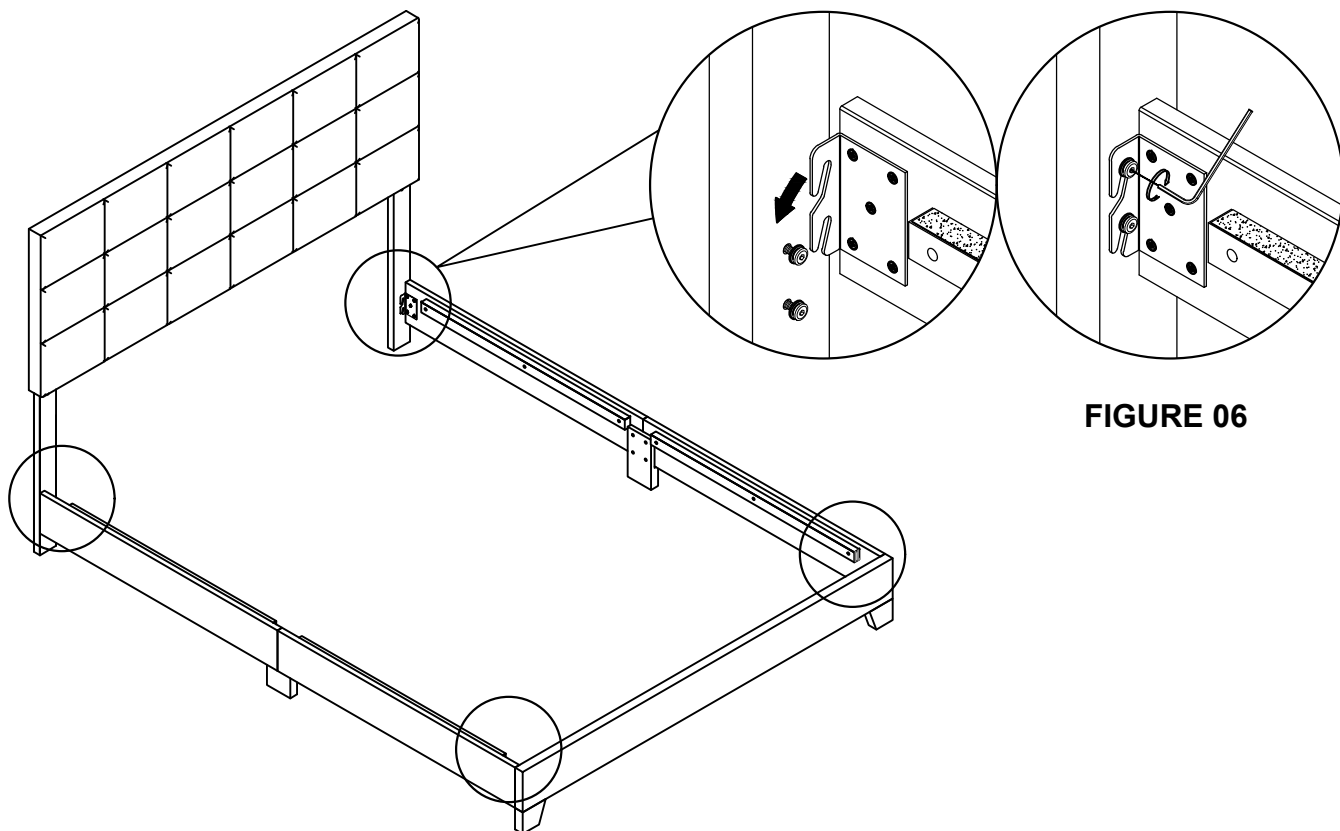


FIGURE 06

Step7: Install the center rail (E) to the slat set (G) by using the screw (S) and tighten by the center legs (J) .See **FIGURE 07-A/B**.

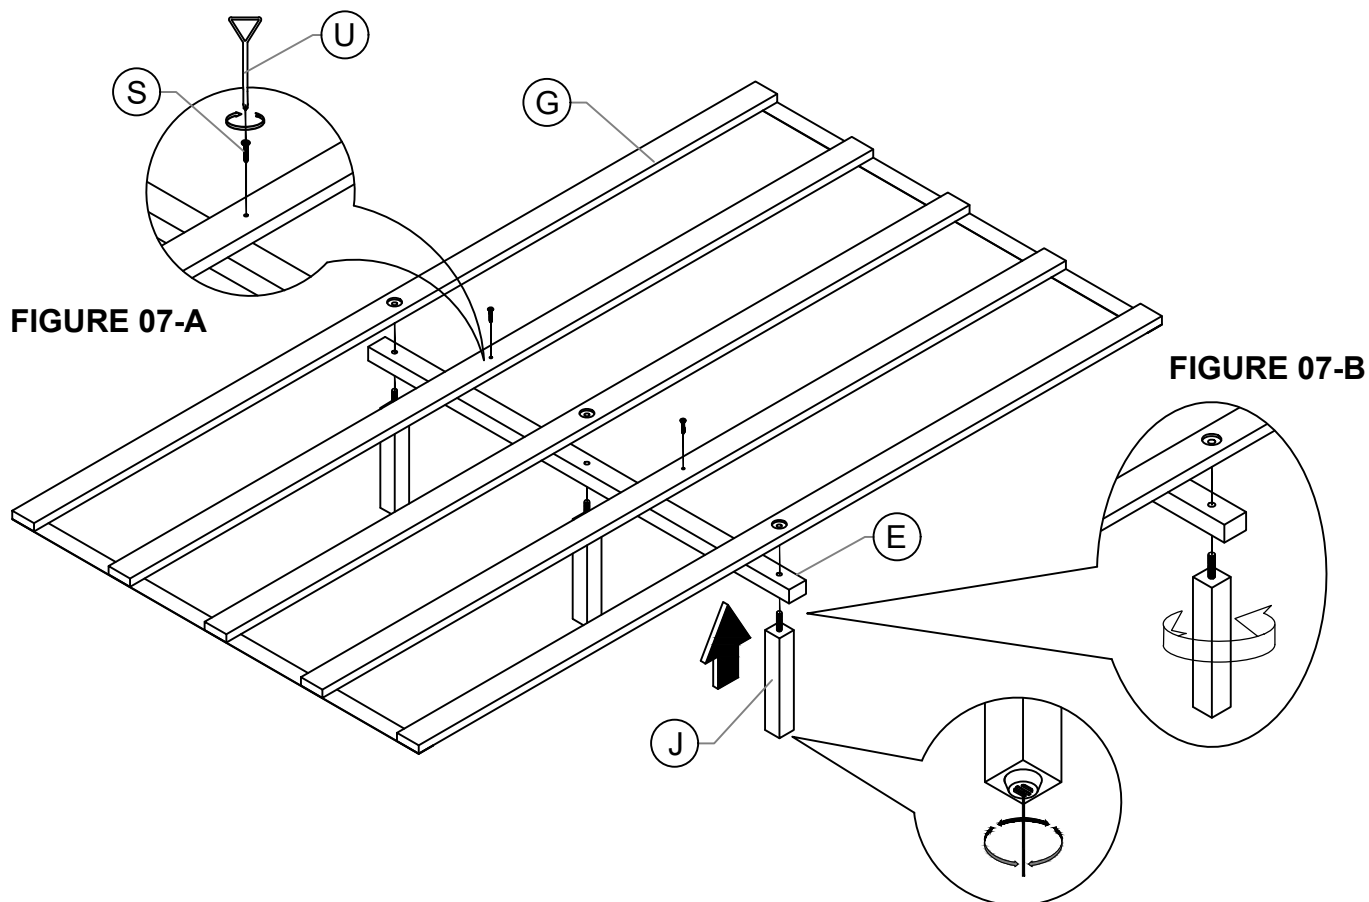
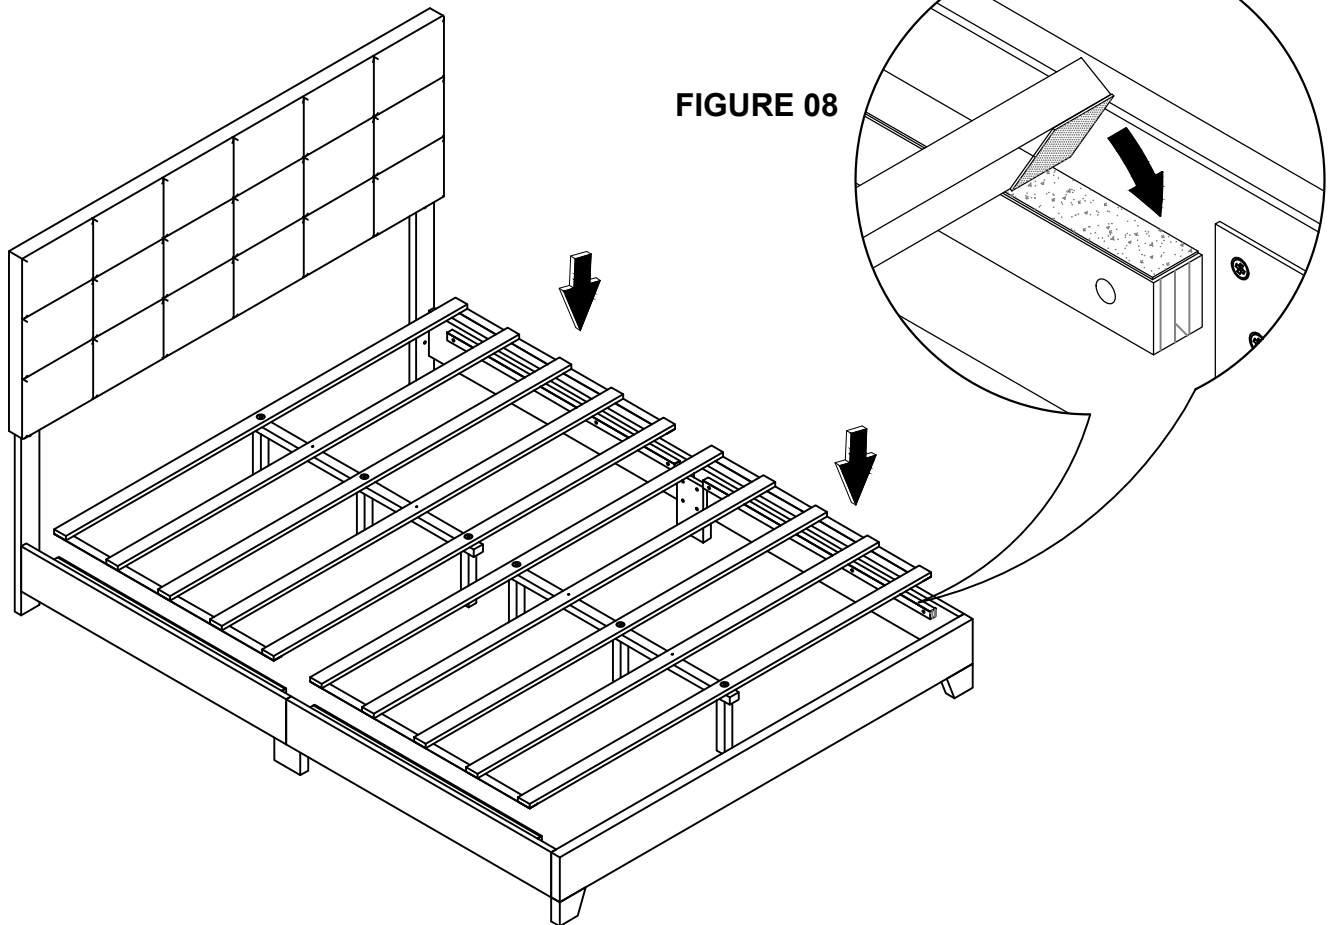


FIGURE 07-A

FIGURE 07-B

Step8: Install the slat set to the bed. See **FIGURE 08**.



ASSEMBLE COMPLETE.

