


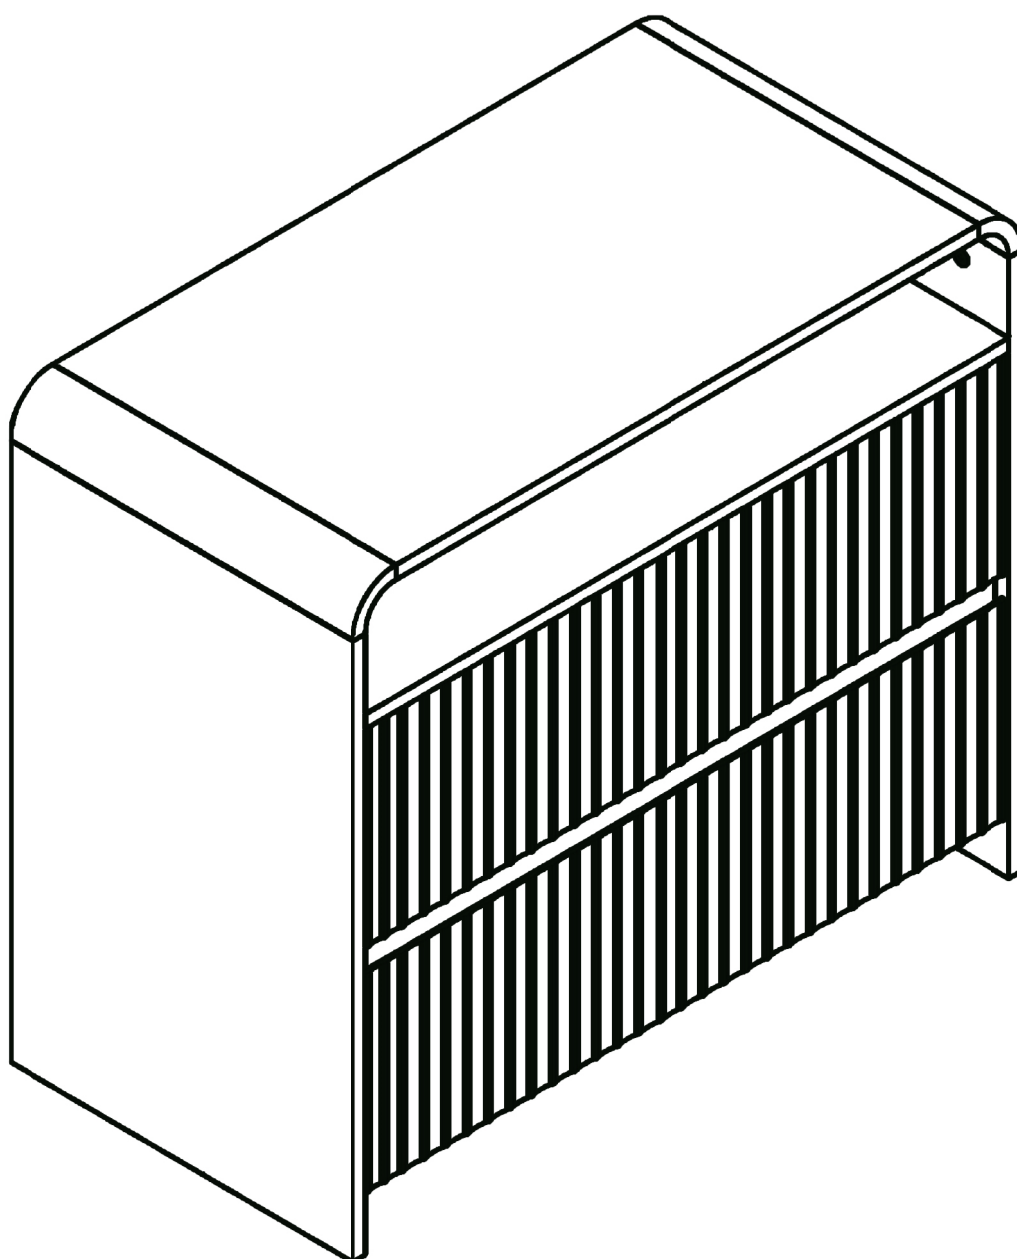

Introduction:


To ensure smooth, safe installation and prolong the product's service life, please read this manual carefully before starting assembly and follow the instructions strictly. We recommend keeping this manual for future disassembly, reassembly, or maintenance reference.

Assembly Preparation:



- 1. Check Accessories:** After opening the package, please verify all panels, screws, connectors, and other parts against the included parts list one by one.
- 2. Installation Environment:** Choose a flat and well-lit area. Perform assembly on a soft surface (such as carpet, foam mat) to prevent scratching the floor or product surfaces.


Safety Precautions:

- 1. Keep all assembly parts (especially screws and small fittings) out of reach of children to prevent accidental swallowing or injury.**
- 2. The product is not stable until fully assembled. Do not move or tilt it during the assembly process.**
- 3. In each step, first loosely hand-tighten all screws (do not fully tighten them), then confirm that all panels are properly aligned before evenly tightening the screws one by one.**
- 4. When using a screwdriver or power drill, operate at low speed and with light force. Insert screws vertically. Do not over-tighten to avoid damaging screw holes or panels.**

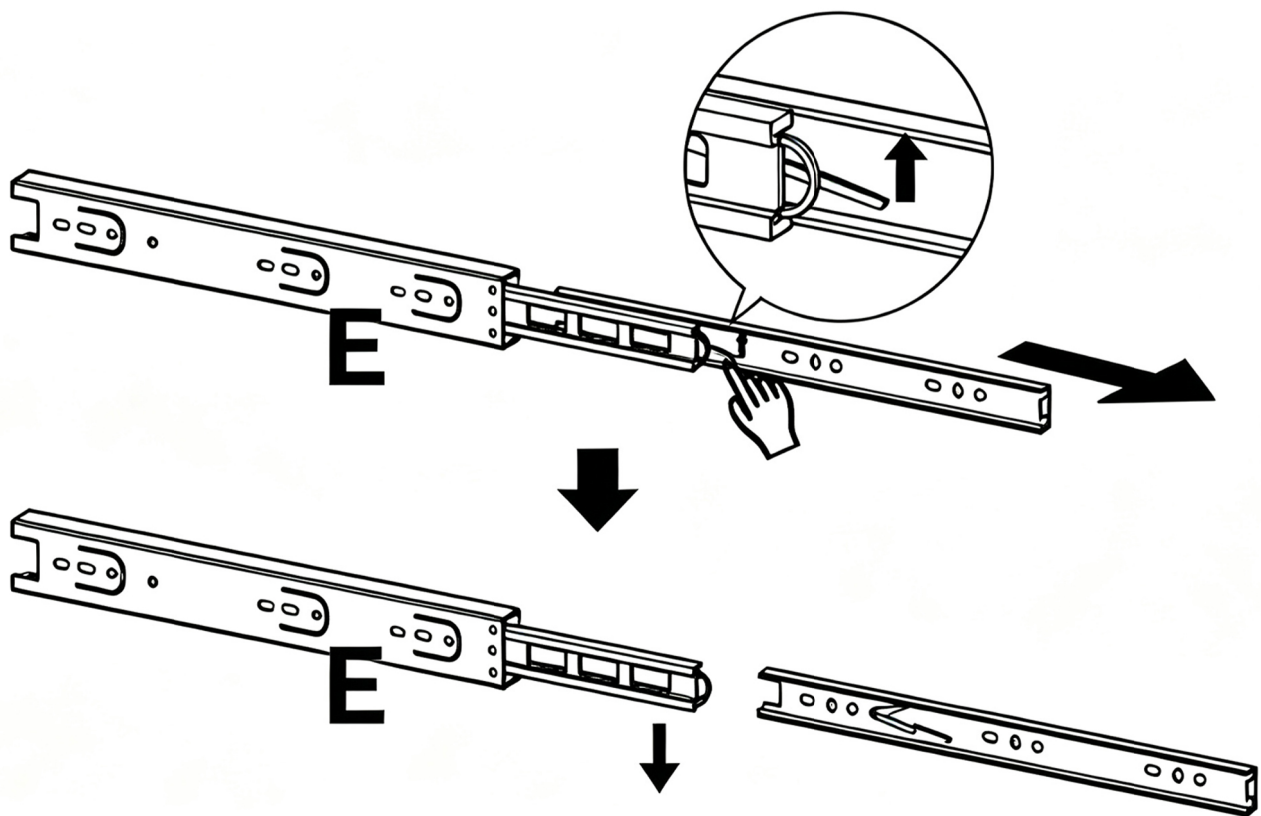

**This Cam Lock Fastening System
will be used throughout the
assembly process**

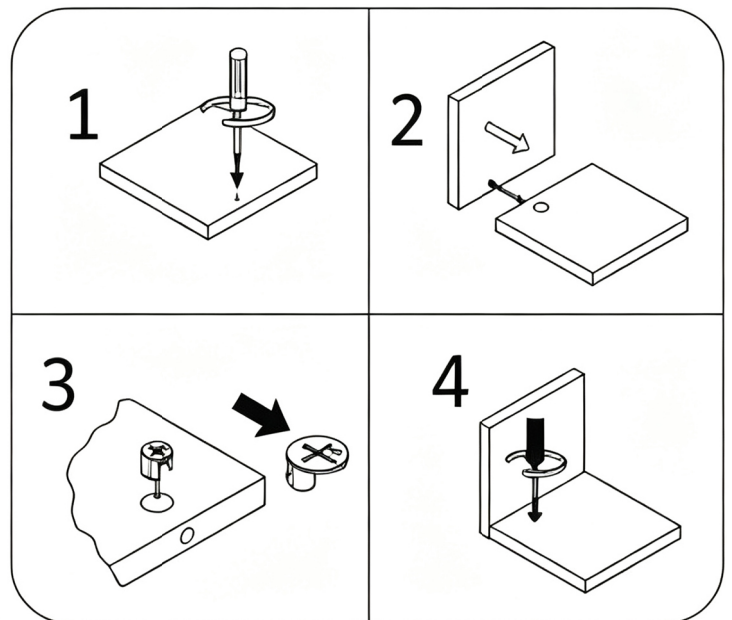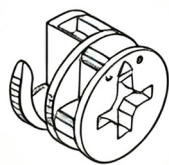

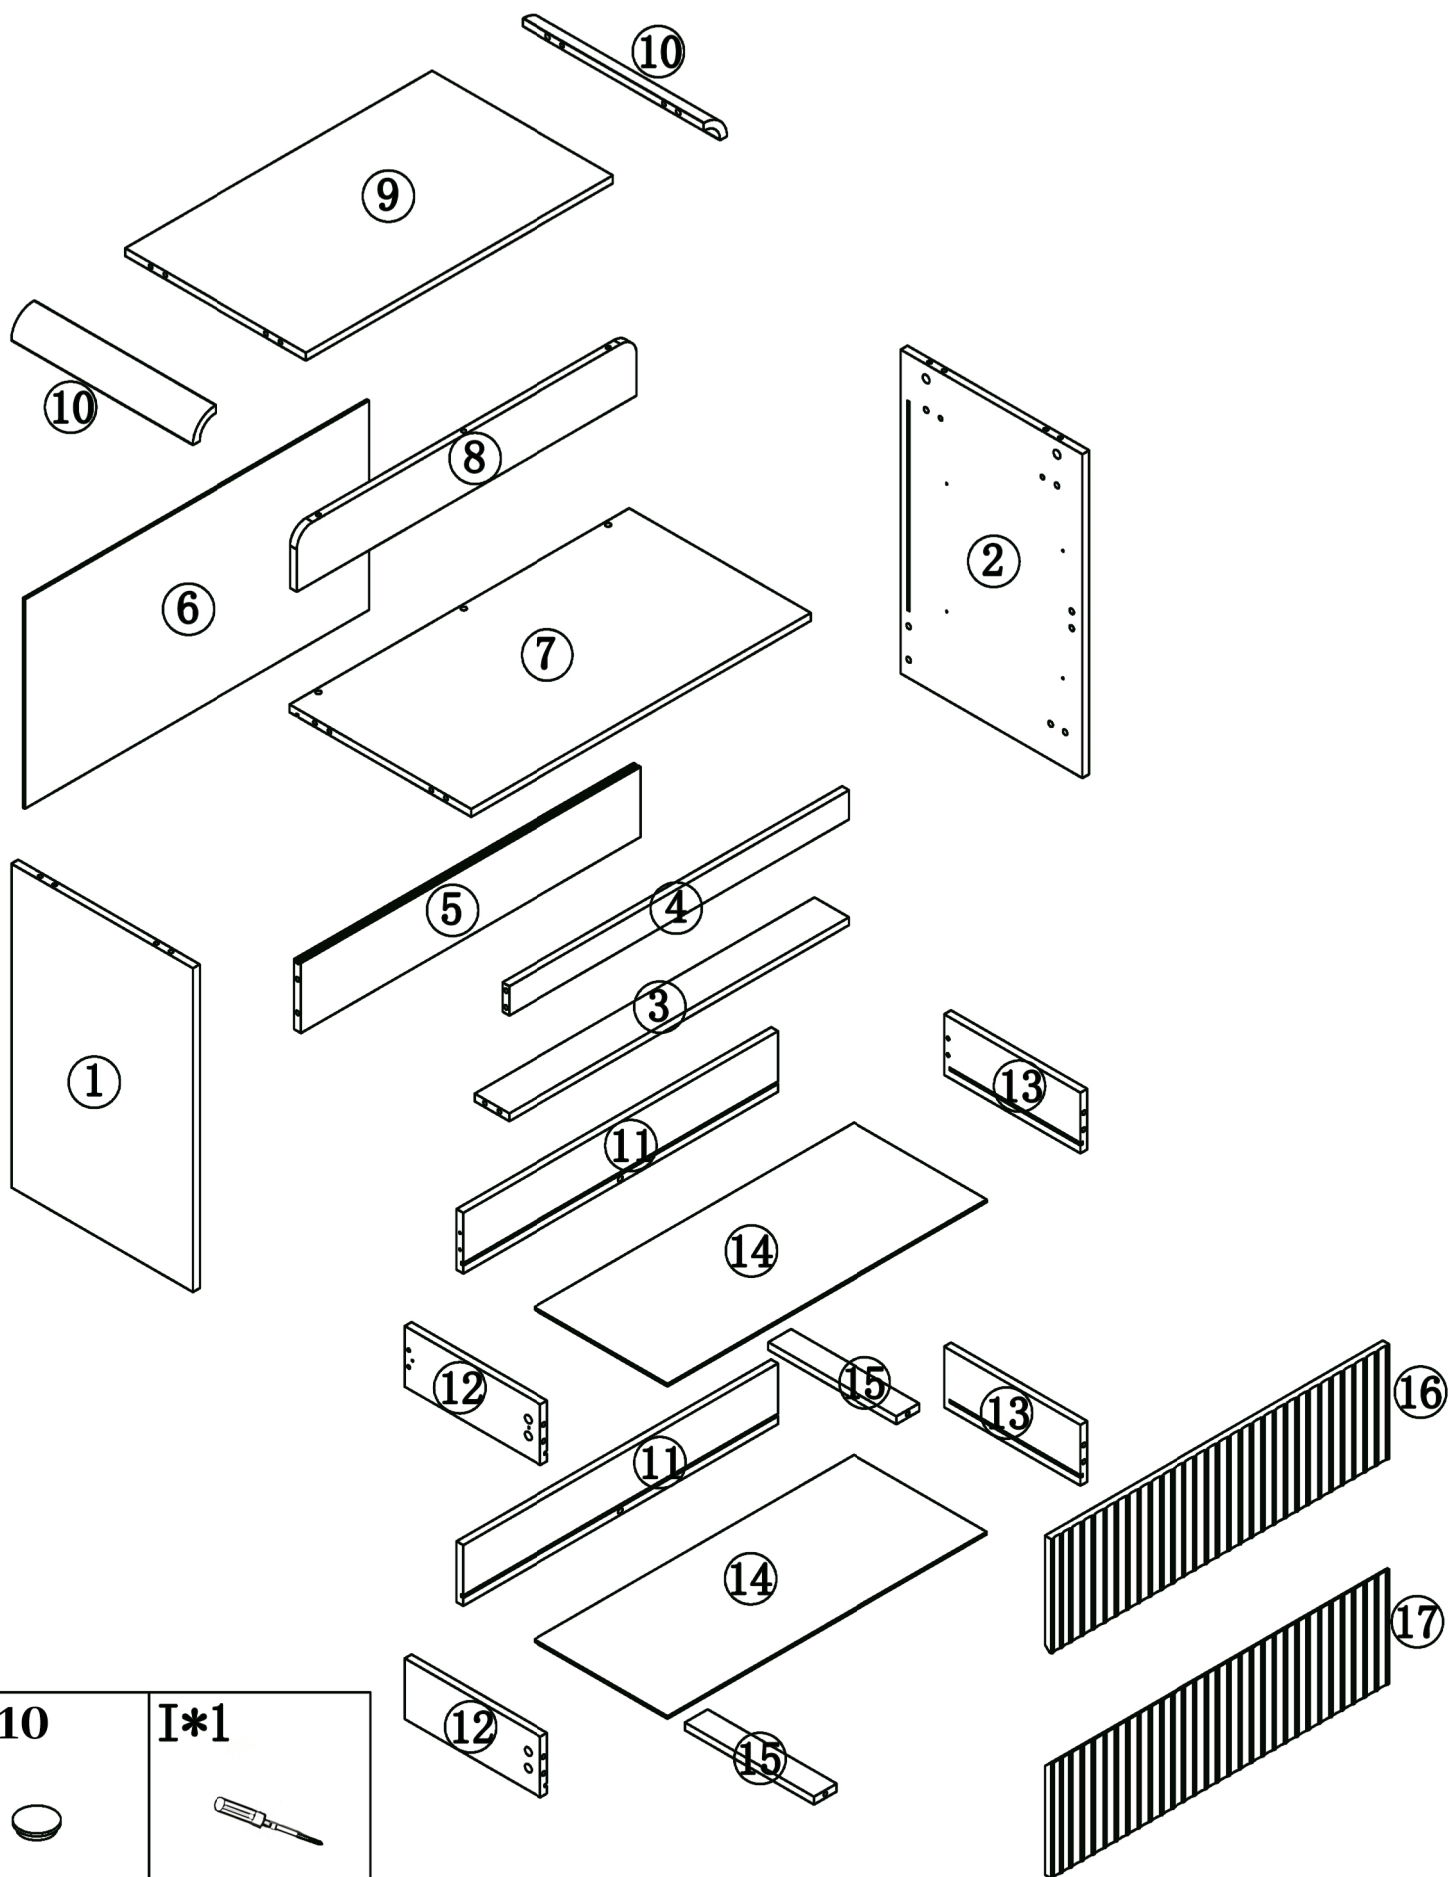

H*10



I*1



A*42



B*42



C*12



ø8*30

D*24



ø3*14

E*4



300















F*8




ø3*40


G*1

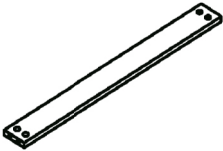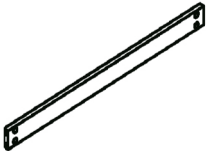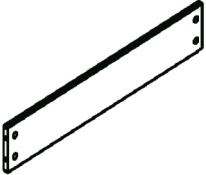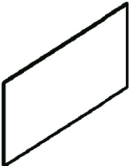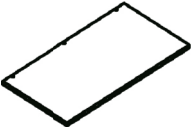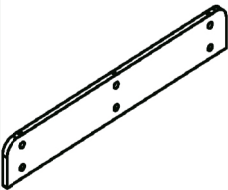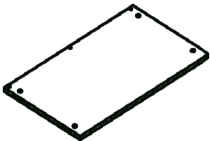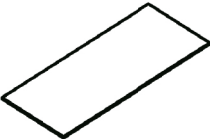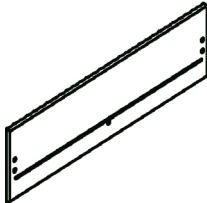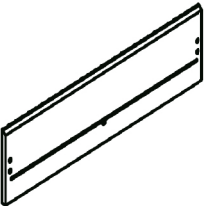


①		1	②		1	③		1	④		1
⑤		1	⑥		1	⑦		1	⑧		1
⑨		1	⑩		2	⑪		2	⑫		2
⑬		2	⑭		2	⑮		2	⑯		1
⑰		1	⑱		2	⑲		2	⑳		2
㉑		2	㉒		2	㉓		2			


1

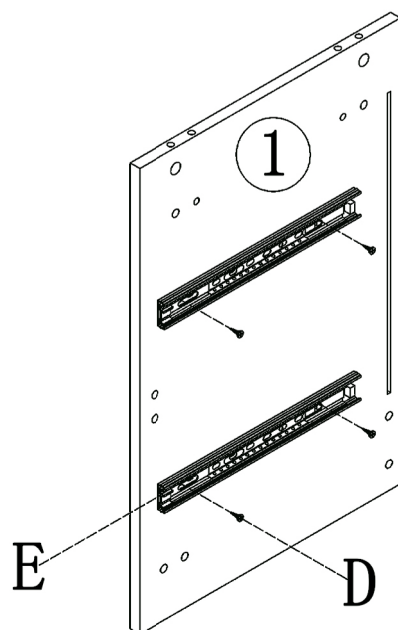


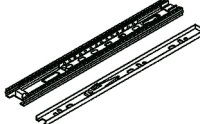
D*24	E*4
	
Ø3*14	300

2

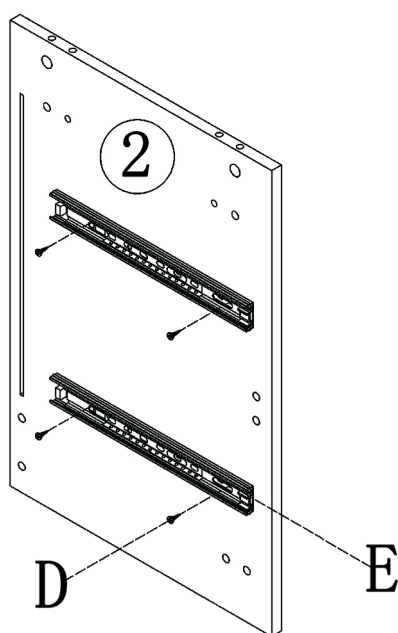

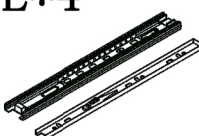D*24	E*4
	
Ø3*14	300

3

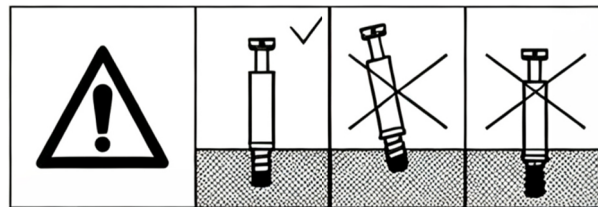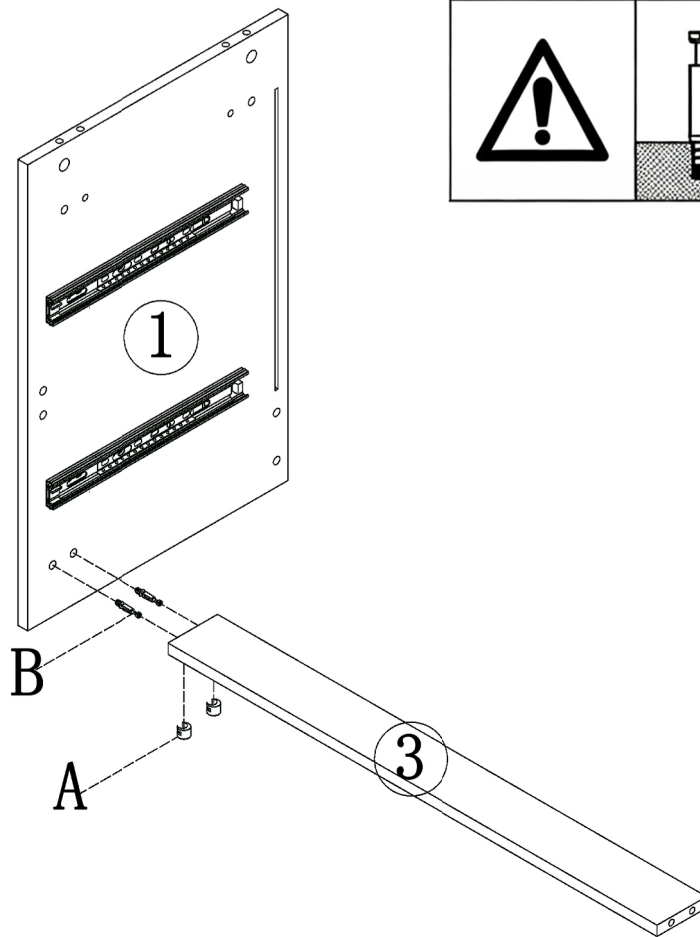



A*42



B*42



4

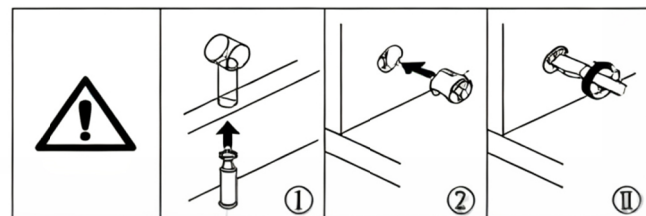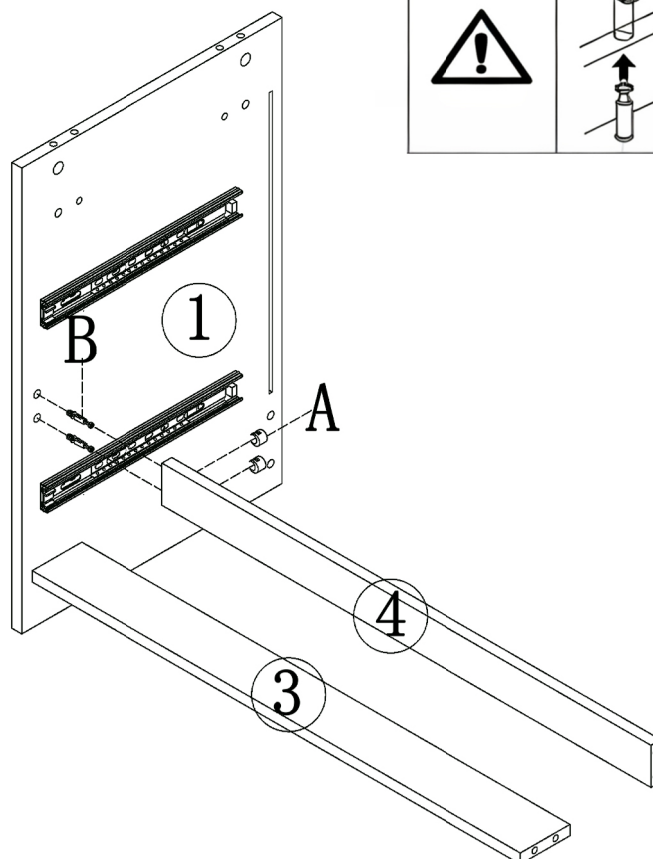


A*42



B*42



5

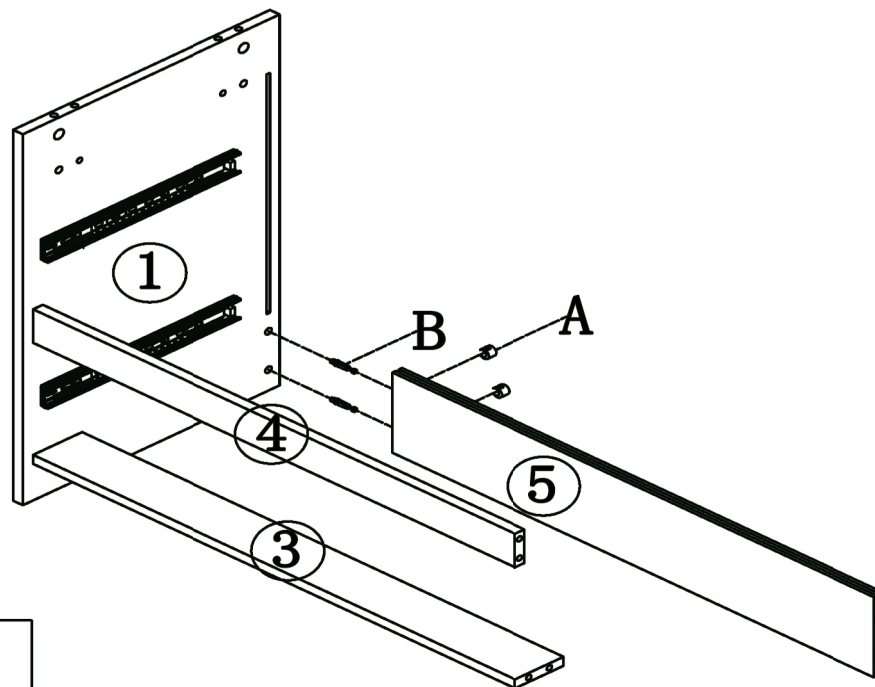


A*42




B*42



6

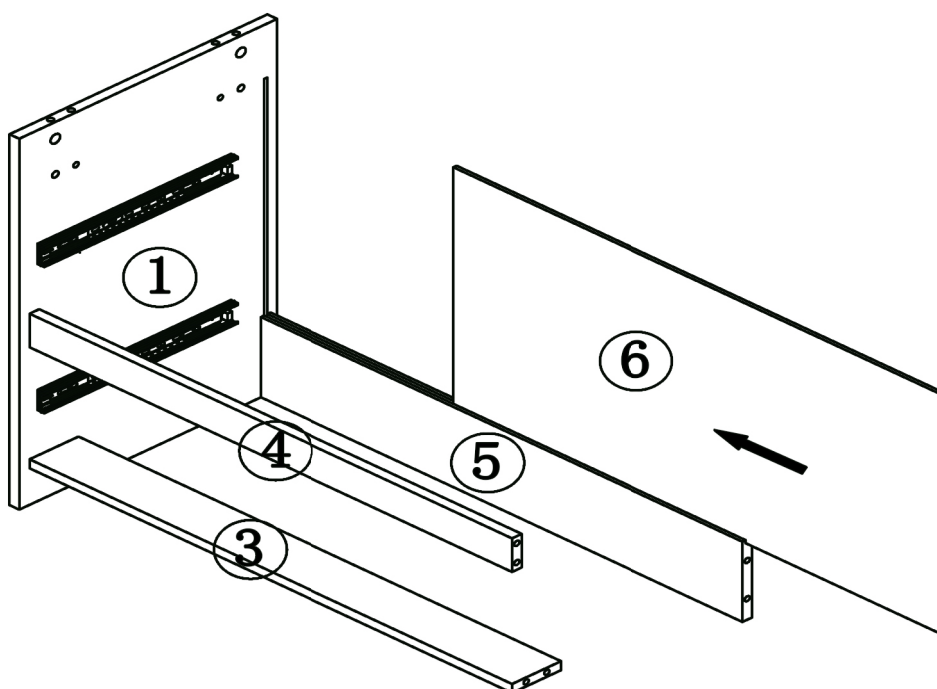


7

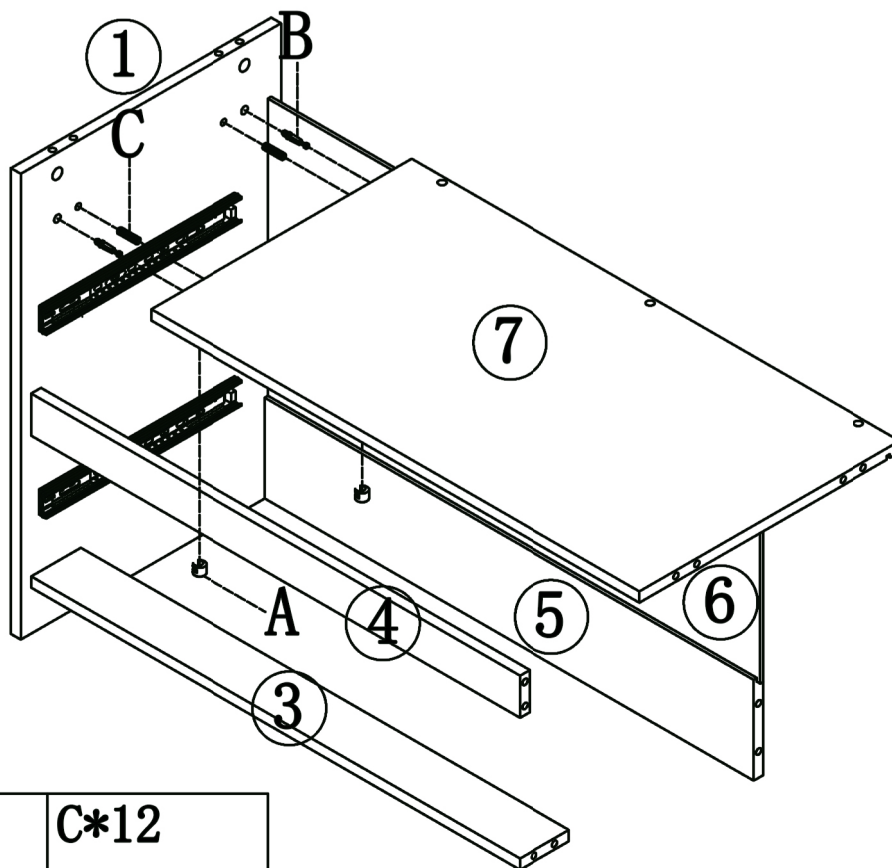


A*42	B*42	C*12
		
		ø8*30

8

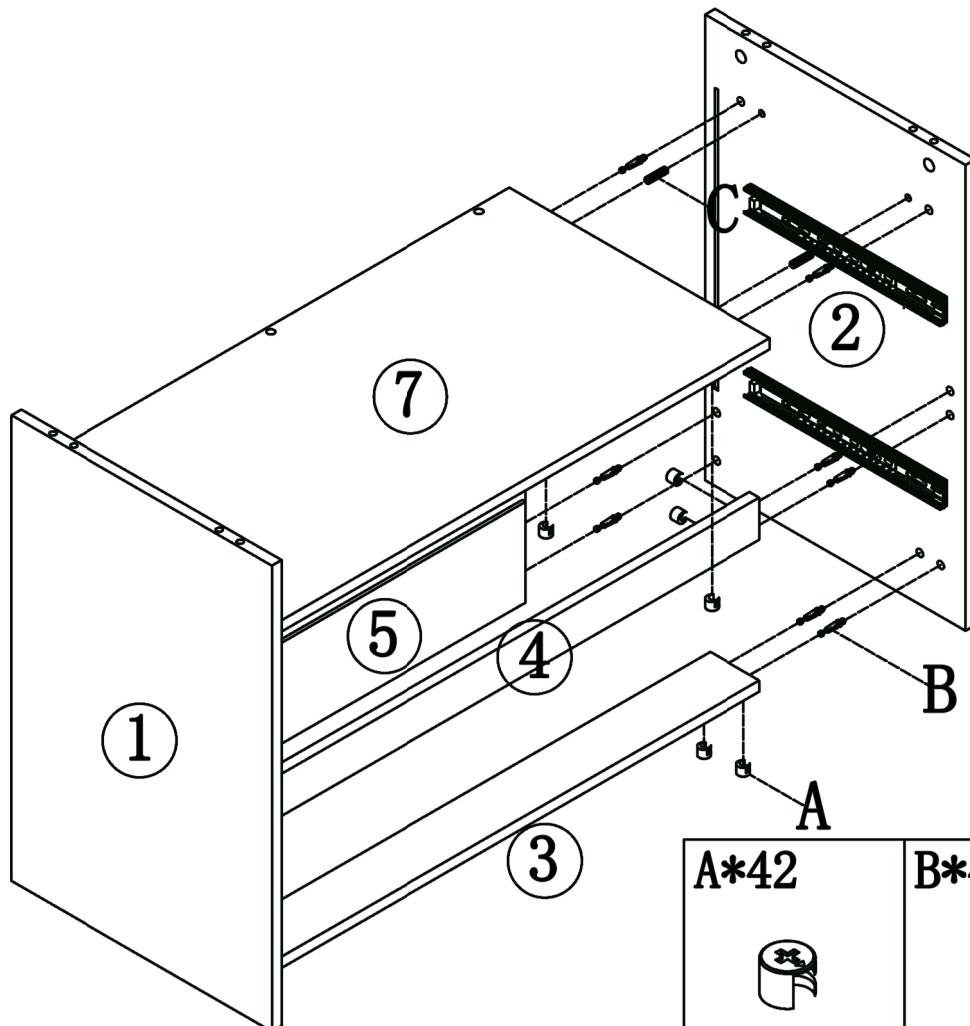

A*42	B*42	C*12
		
		ø8*30

9

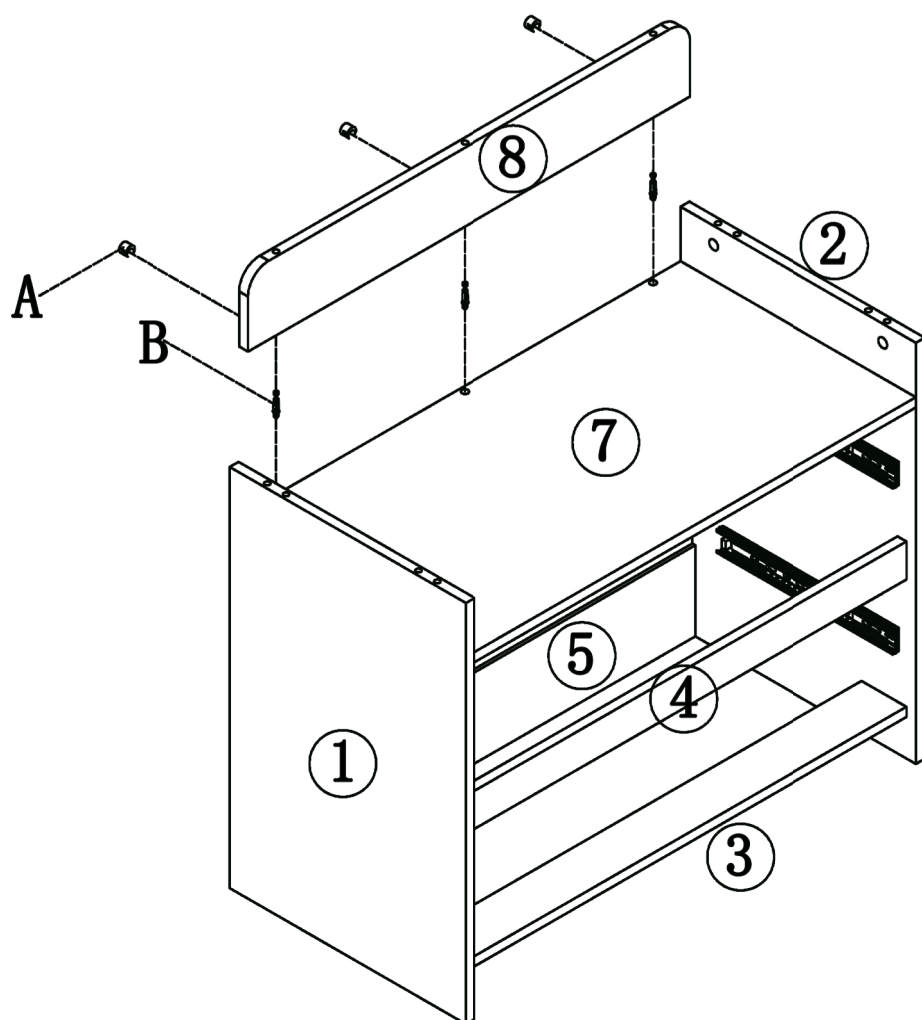


A*42



B*42



10

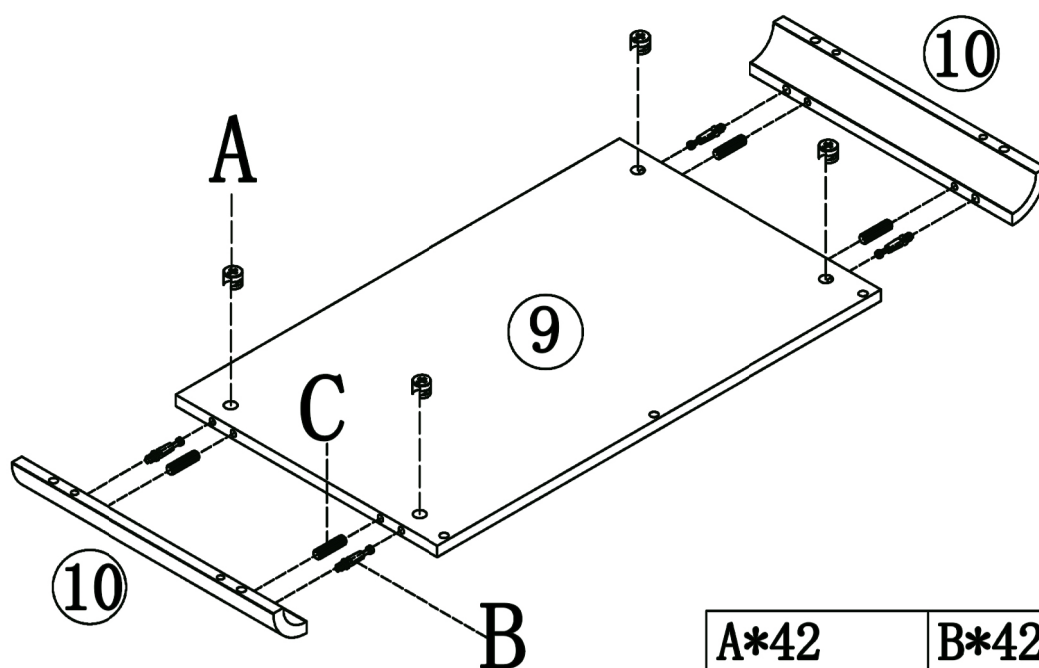

A*42




B*42



C*12




ø8*30

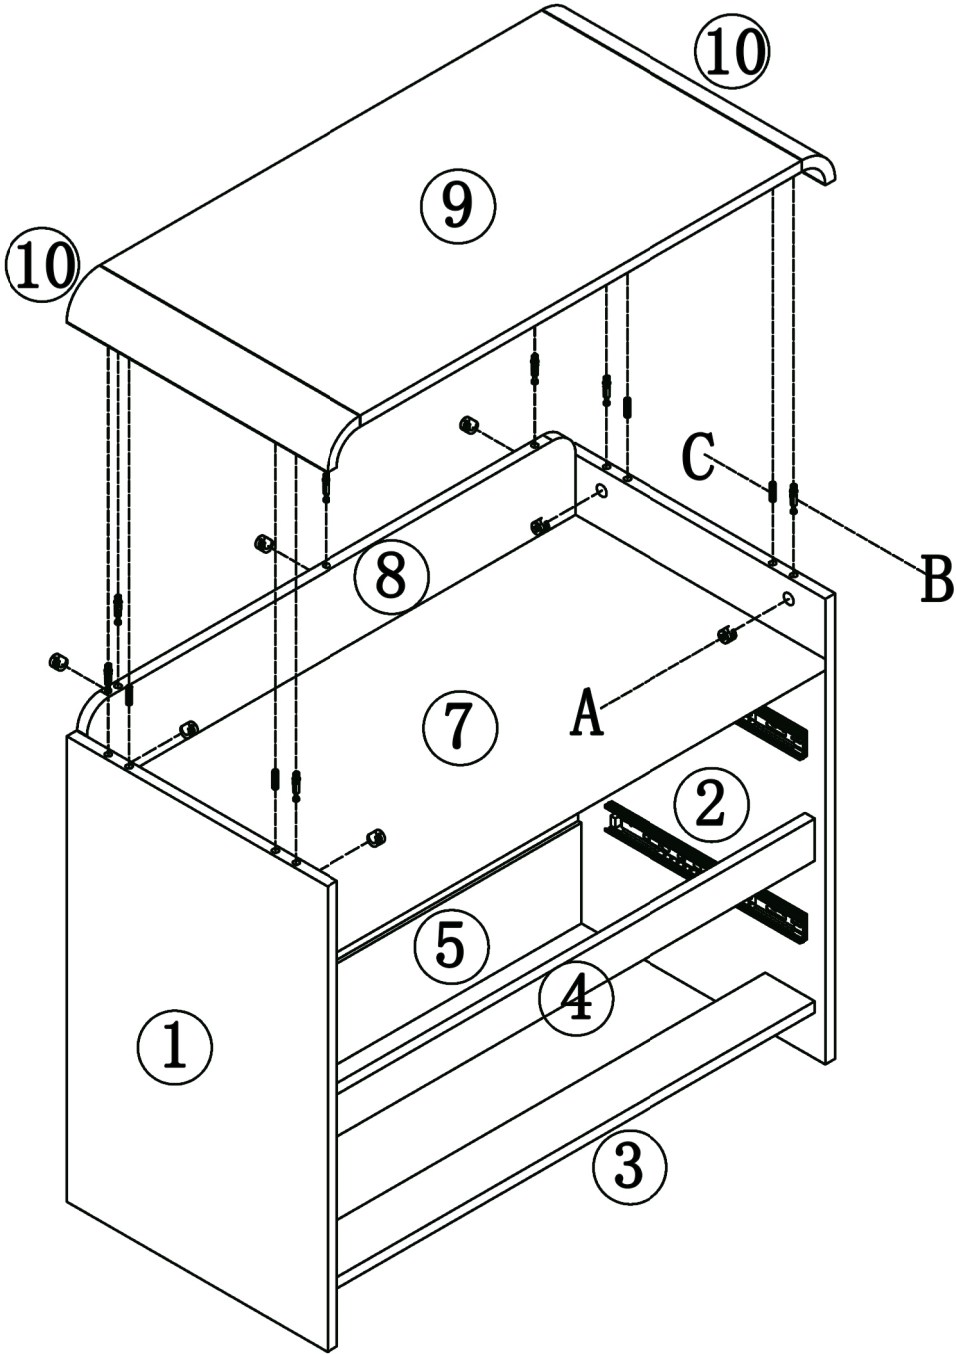

When installing the top panel, if the interior of the cabinet is dark, use a flashlight or phone light for better visibility to ensure accurate hole alignment.


A*42	B*42	C*12
		
		ø8*30

12

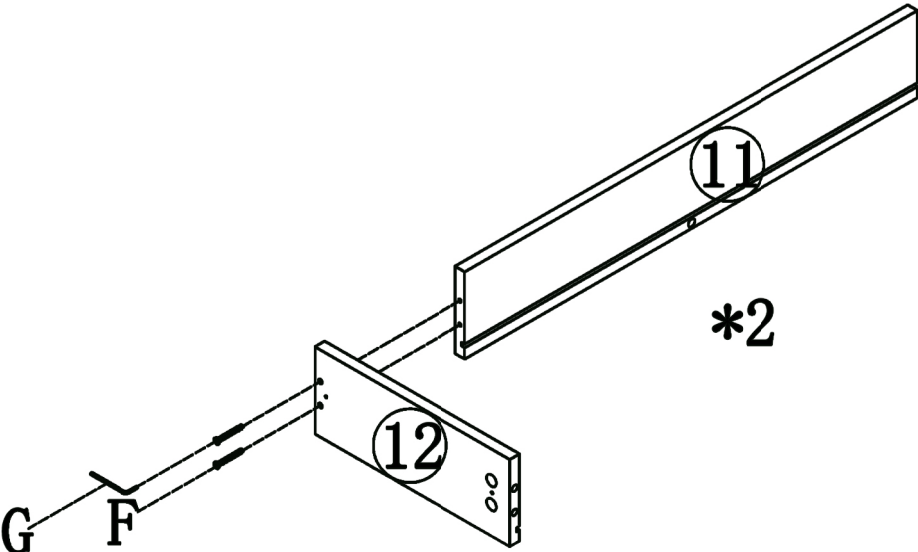


F*8	G*1
	
ø3*40	

13

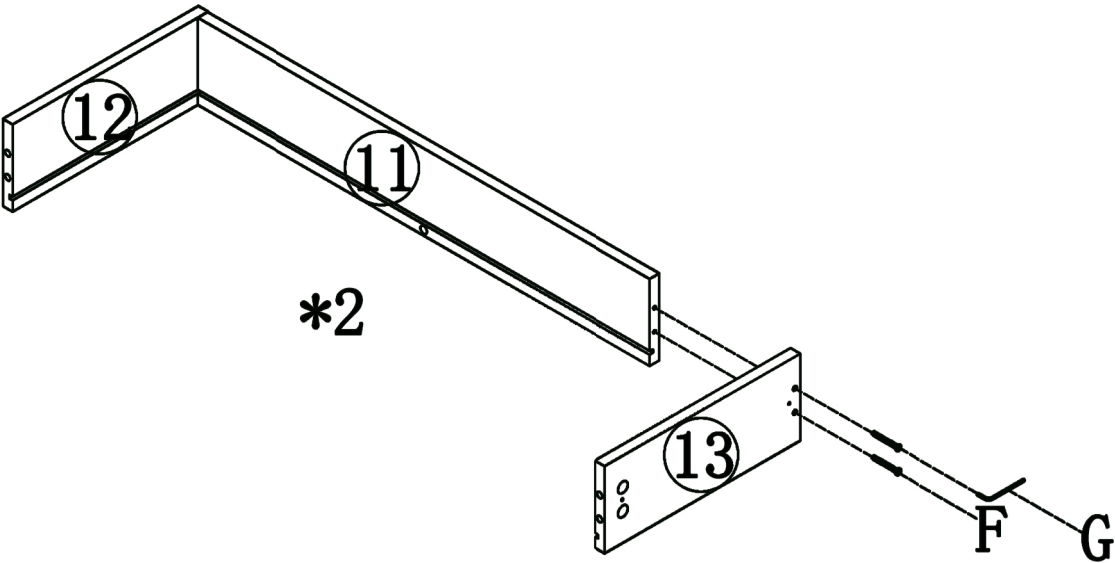

F*8	G*1
	
ø3*40	

14

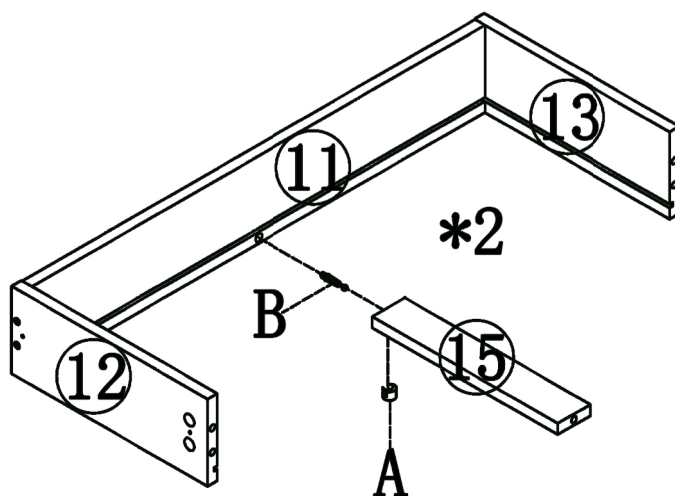


A*42




B*42



15

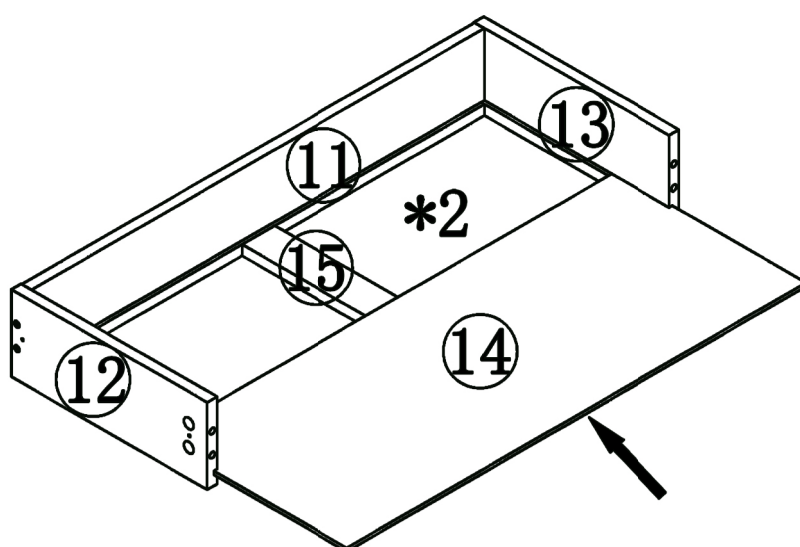


16

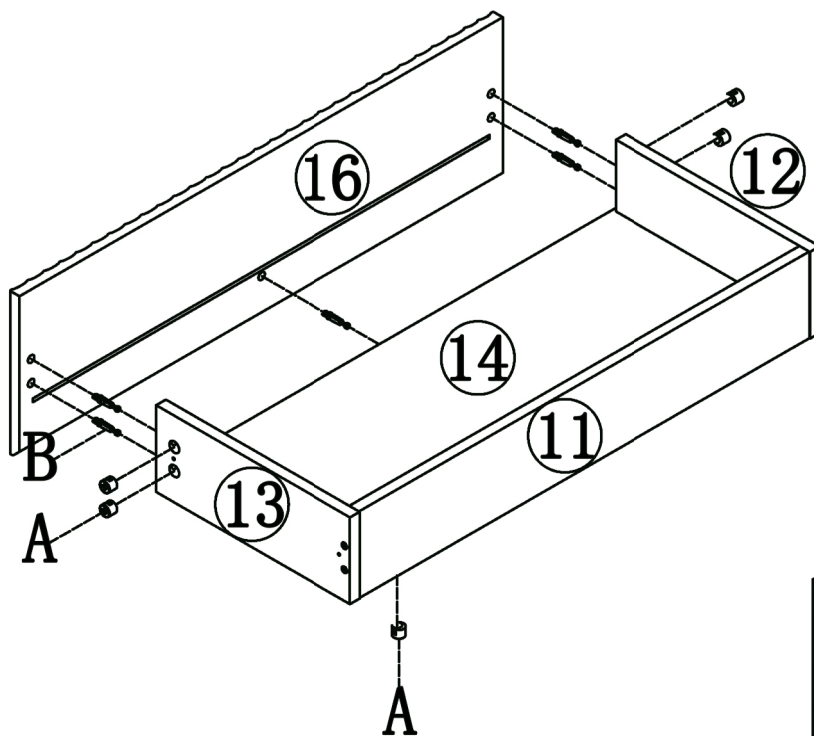


A*42	B*42
	

17

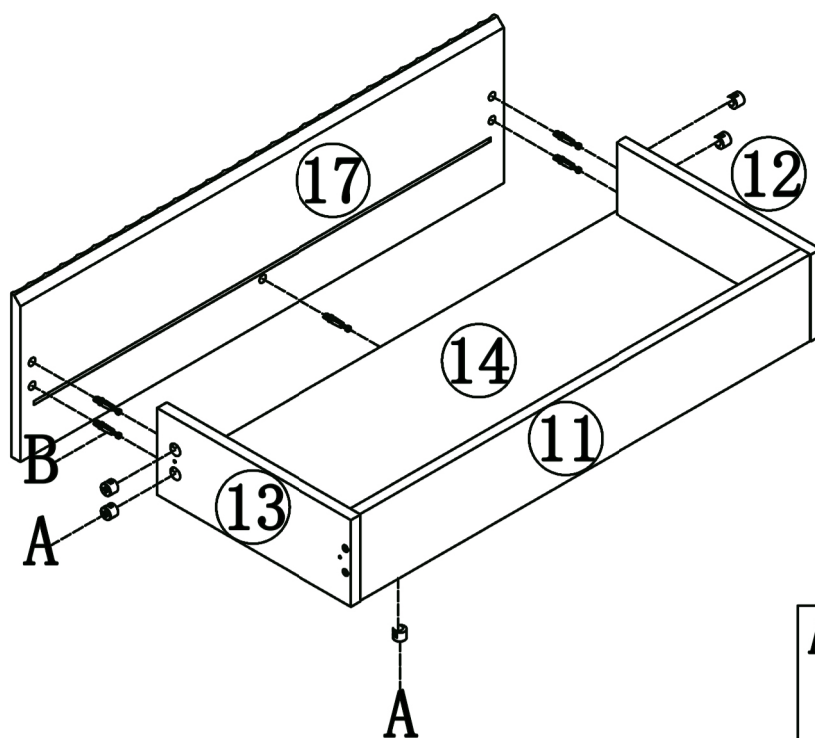

A*42	B*42
	

18

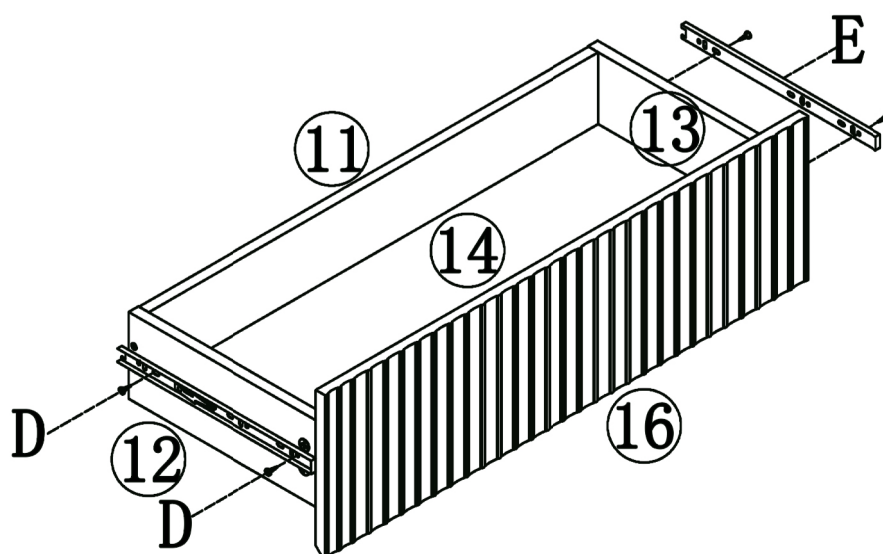

D*24


Ø3*14

E*4

300

When installing the drawer slides on both sides, please align and secure them strictly according to the corresponding hole positions marked in the manual.
If the markings in the manual are unclear, refer to the installation video available on the product page.

19

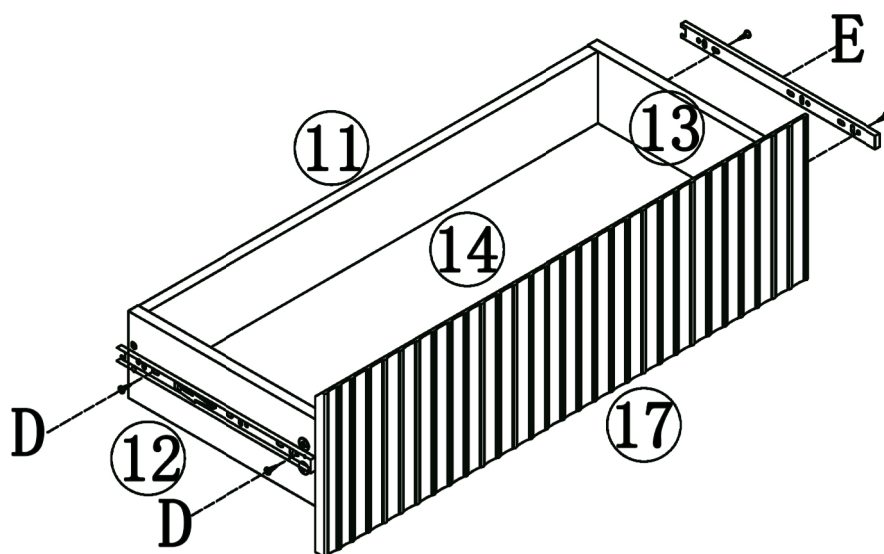


D*24

Ø3*14

E*4

300

20

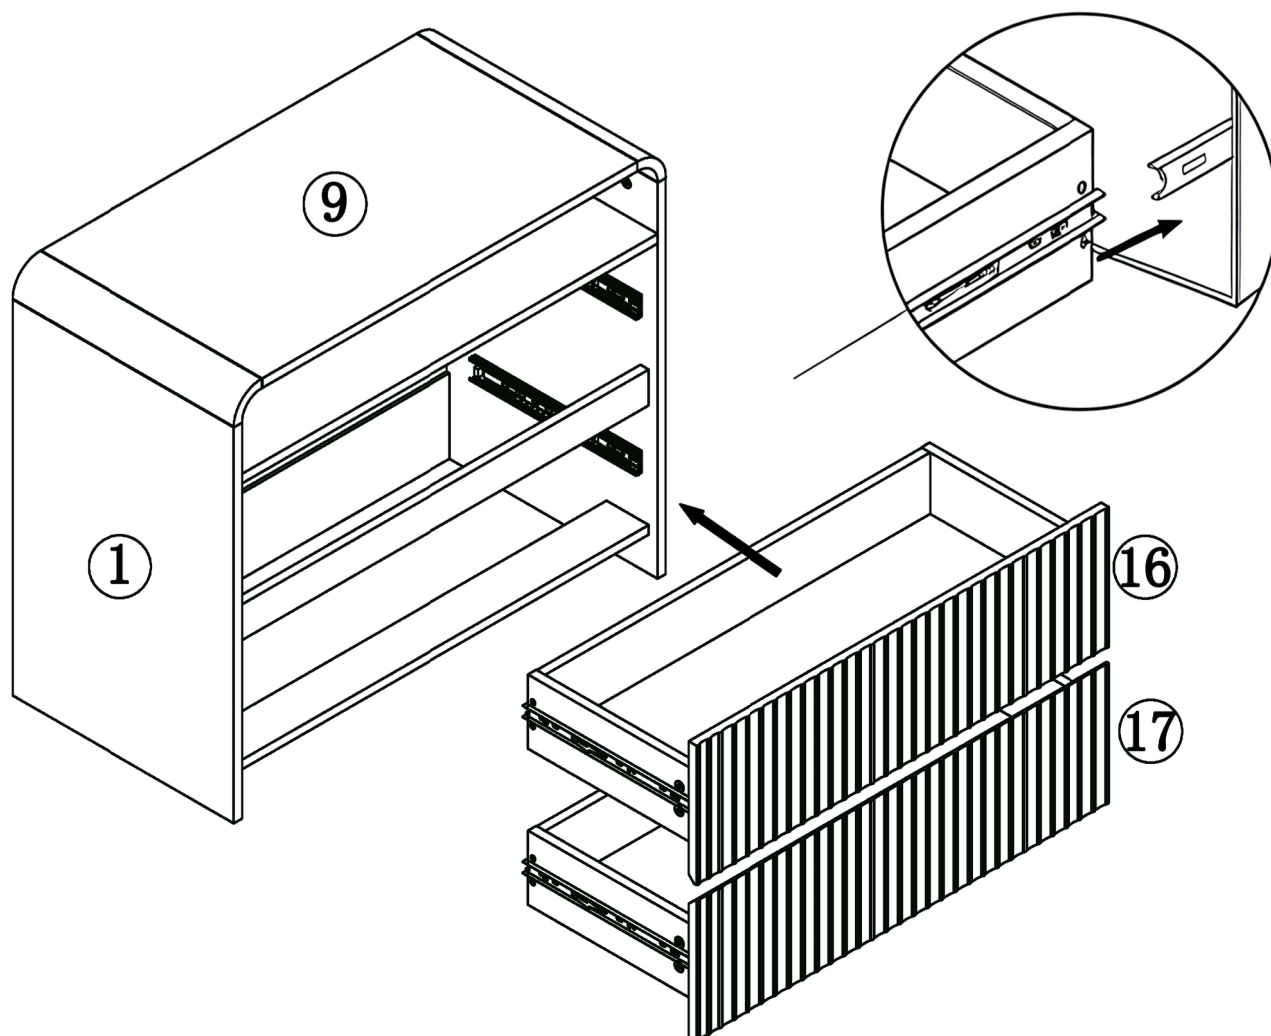

21

