


# Headboard Assembly Instructions

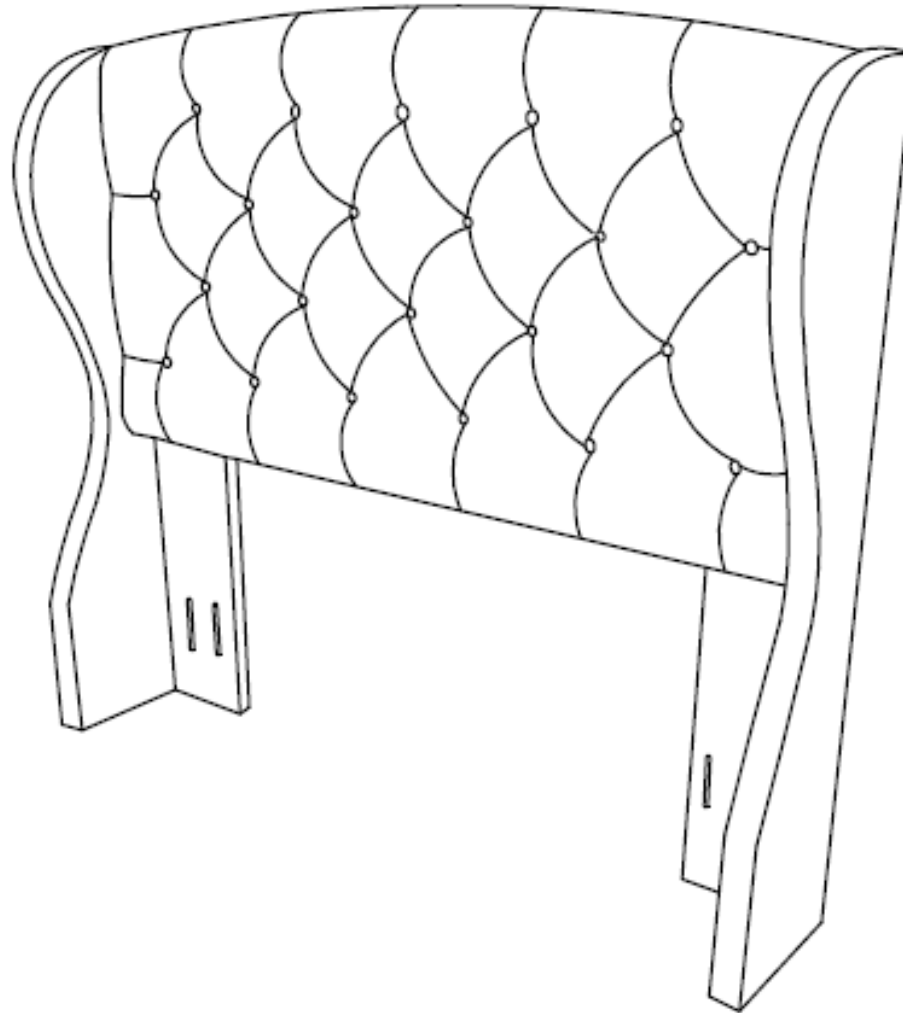


# **Headboard Assembly Instructions**

NOTE: Place all parts on a clean and smooth surface (rug, carpet) to avoid the parts from being scratched.


NOTE: Follow assembly instructions step by step.

NOTE: Do not completely tighten screws until the headboard is fully set up.

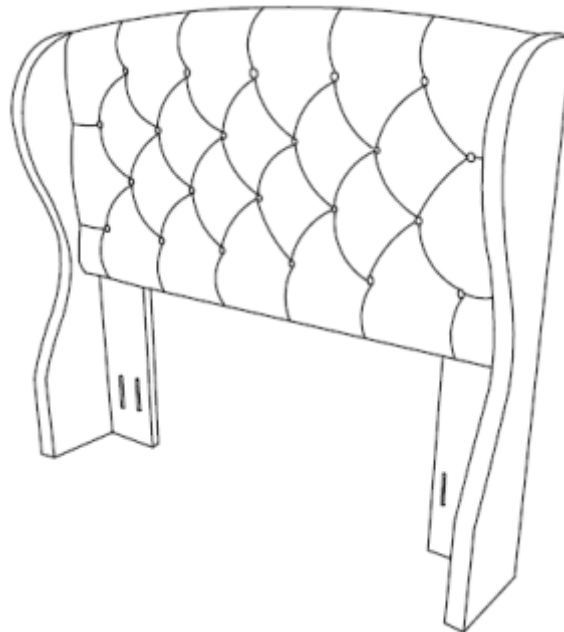


# Headboard Assembly Instructions


## PART LIST:

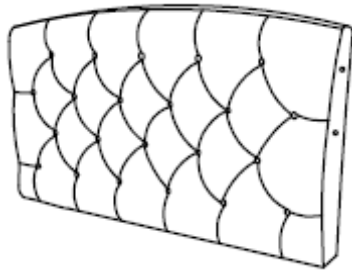

① Headboard 1pc

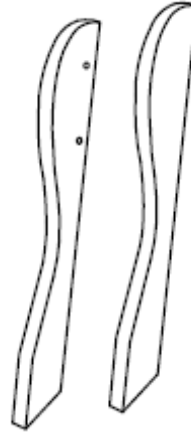



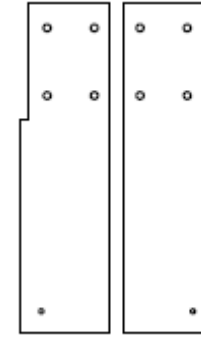





② Wings 2pcs




③ Legs 2pcs

## HARDWARE LIST:


LABEL	PICTURE	DESCRIPTION	QTY	LABEL	PICTURE	DESCRIPTION	QTY
A		2" BOLT	<b>12</b>	E		SML FLAT WASHER	<b>4</b>
B		ALLEN WRENCH	<b>1</b>	F		LRG FLAT WASHER	<b>16</b>
C		HEX NUT (to attach headboard to metal bed frame)	<b>4</b>	G		2-1/2" BOLT (to attach headboard to metal bed frame)	<b>4</b>
D		3/4" BOLT	<b>4</b>	H		METAL PLATE	<b>2</b>

# Headboard Assembly Instructions

STEP 1: Attach the two legs to the headboard using the 8- 2" bolts and small washers making sure the hole on the bottom of the leg is on the outside edge  
(See below diagram)

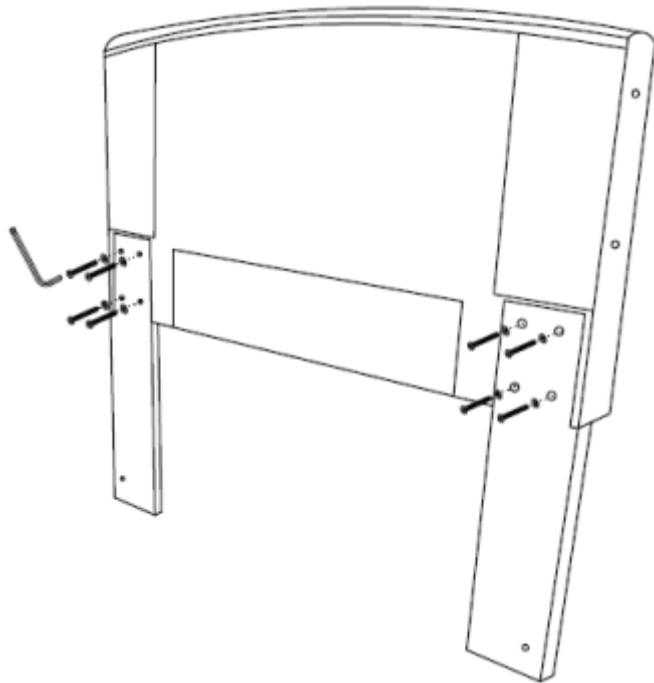


STEP 2: Now attach the wings, first remove the velcro panel on the top corners of the backside of the headboard. Using 4- 2" bolts and small washers, attach the wings to the headboard (see diagram)

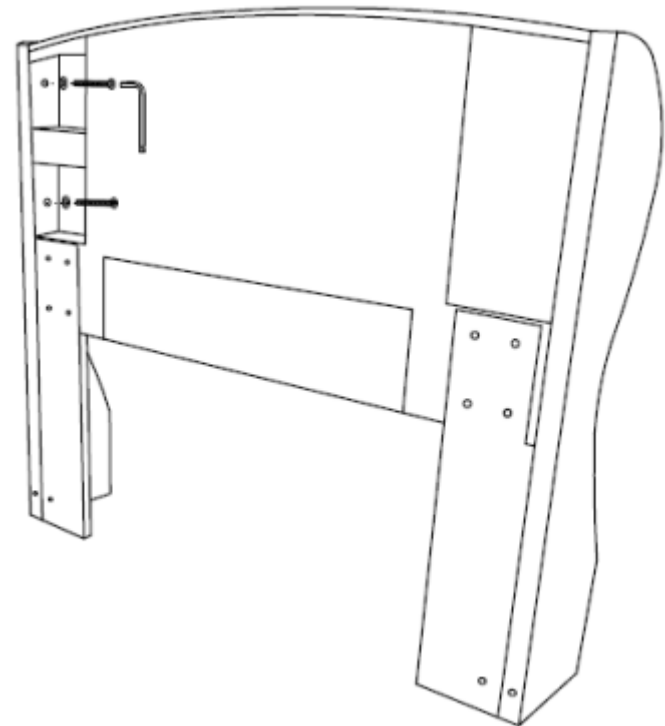

# Headboard Assembly Instructions

STEP 3: After the wings are attached at the top, secure the bottom of the wing to the bottom of the legs using the metal plates and 3/4" bolts (see diagram)

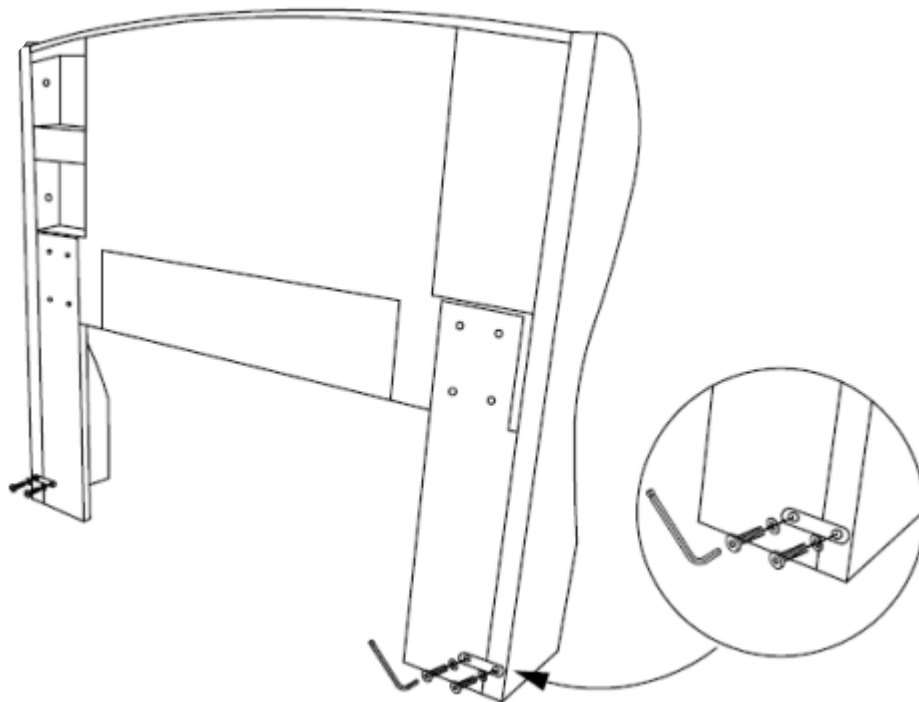

STEP 4: After headboard is fully assembled, align slots at the bottom of headboard legs with attachment holes on metal bedframe, use the provided 2-1/2" bolts, washers & hex nuts to attach headboard to metal bed frame.

