
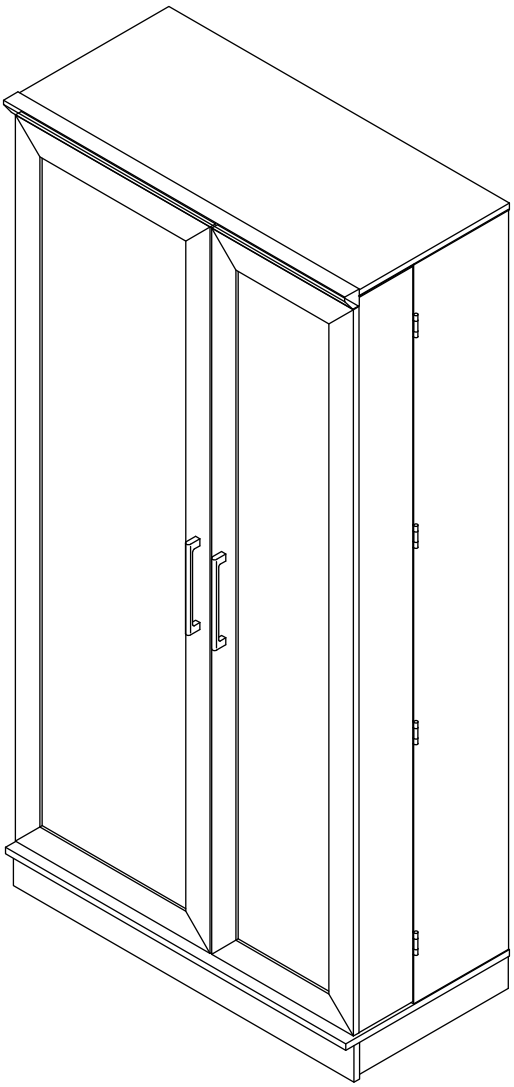


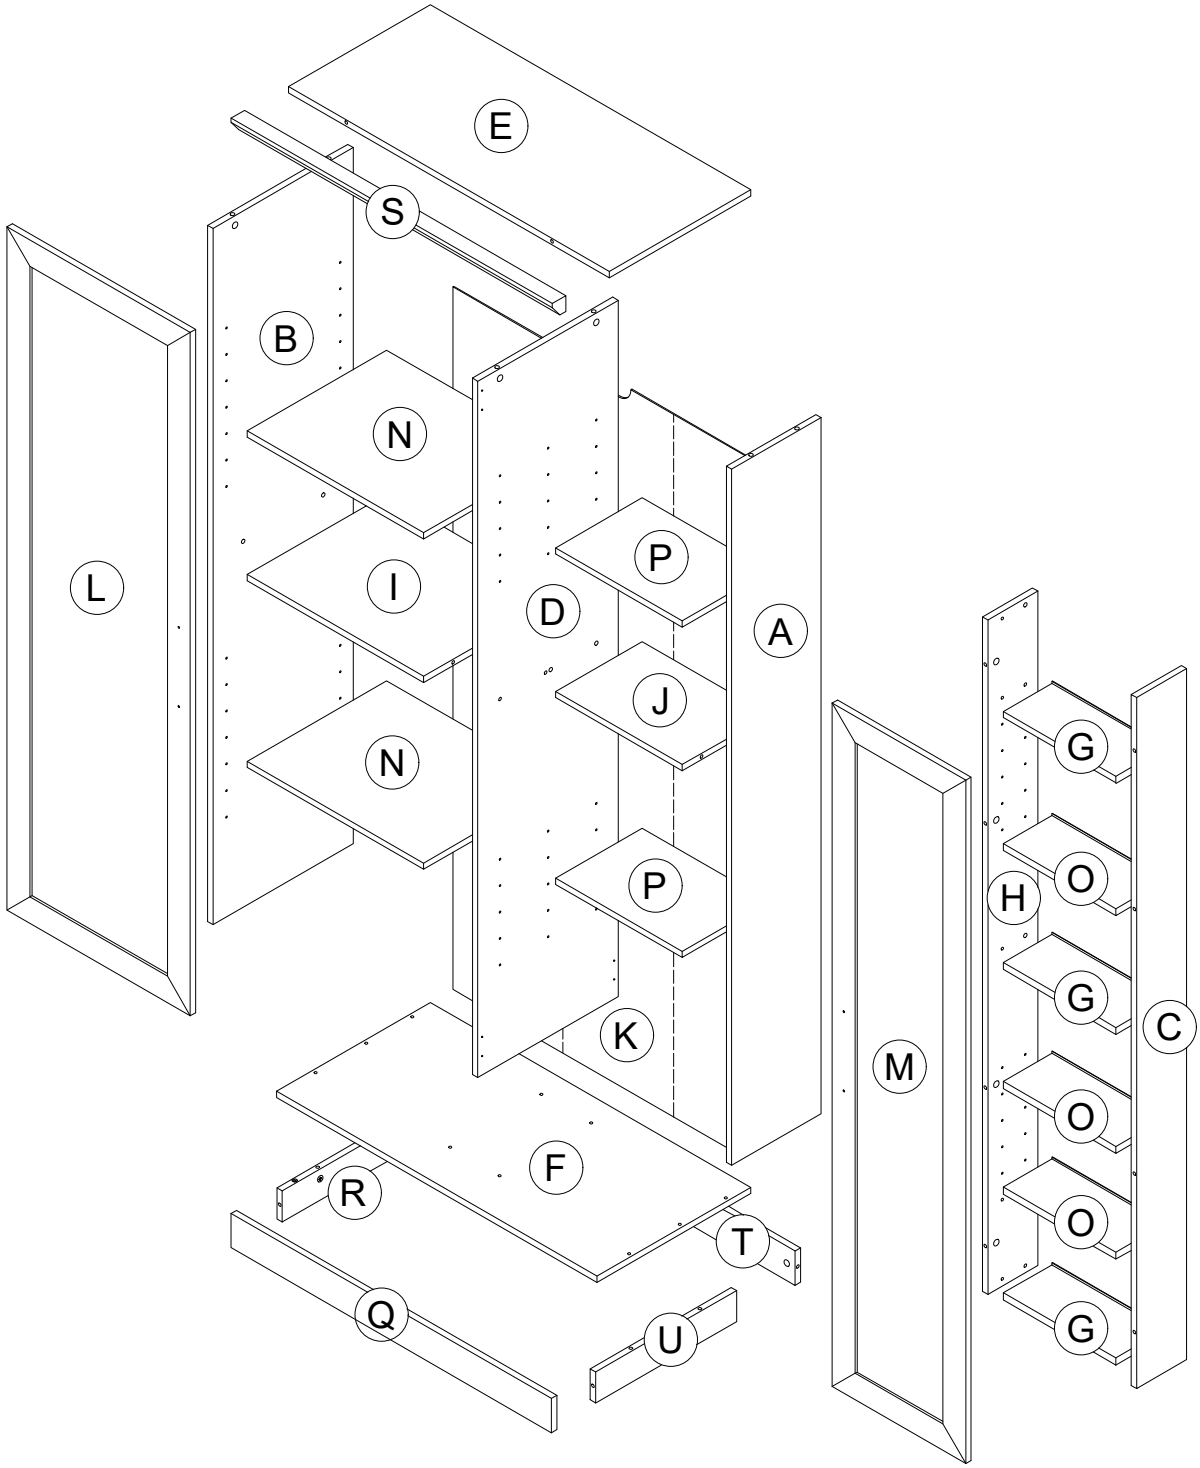


MODEL: SC24006



E
S
B
L
N
I
N
P
D
J
P
K
A
M
G
O
H
G
C
O
O
G
F
R
T
Q
U

HARDWARE LIST


1 x 40

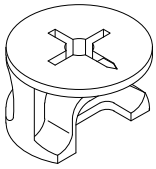


2 x 40



3 x 10

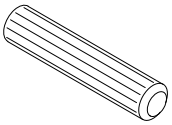


4 x 28




5 x 34


6 x 2

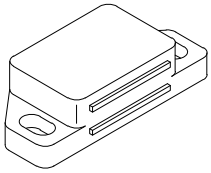


7 x 2



8 x 4

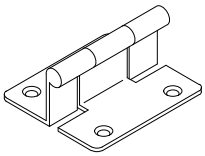


9 x 2

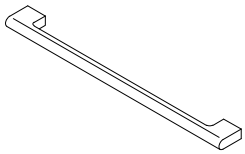


10 x 3




11 x 3




12 x 4

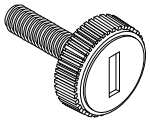

13 x 3

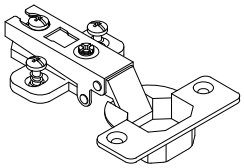

14 x 6




15 x 4




HARDWARE LIST

16 x 28




17 x 4




---

96 x 1

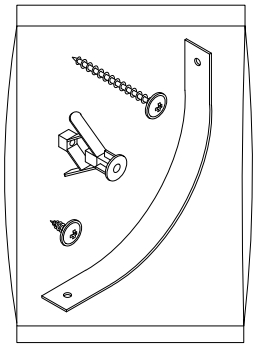


You have the option to assemble the Storage Cabinet with the LARGE DOOR on the LEFT or the LARGE DOOR on the RIGHT.

LARGE DOOR OF LEFT

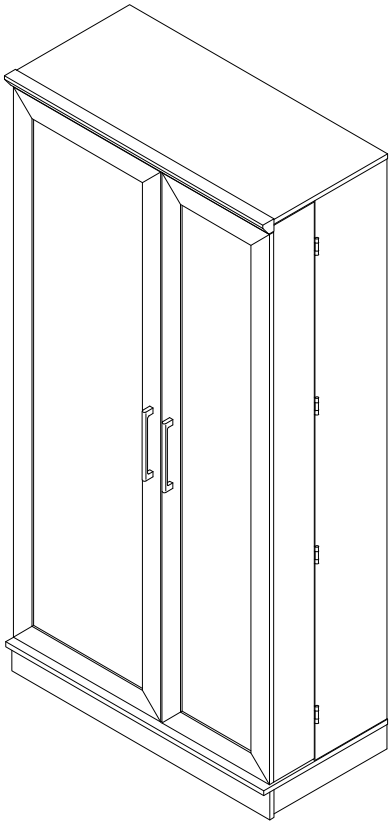

STEP 1 - 25


LARGE DOOR OF RIGHT

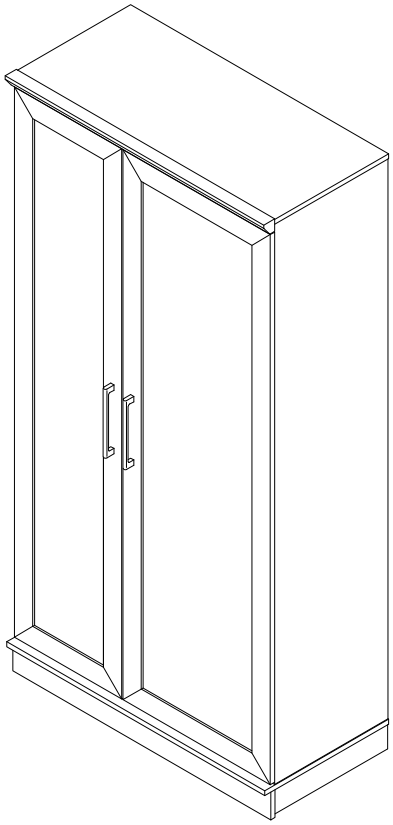

STEP 26 - 50

Step 1

LARGE DOOR OF LEFT

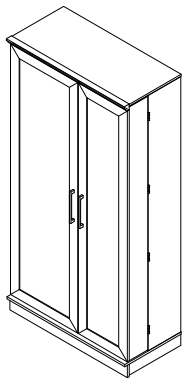

The arrow in the HIDDEN CAM must point toward the hole in the edge of the board.

Arrow

1

x 4

Arrow

1

x 2

B

D

I

Arrow

1


x 2


2


x 4

Step 2

LARGE DOOR OF LEFT

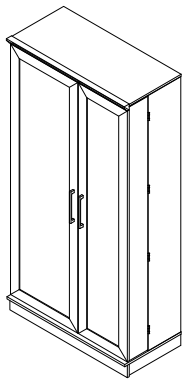


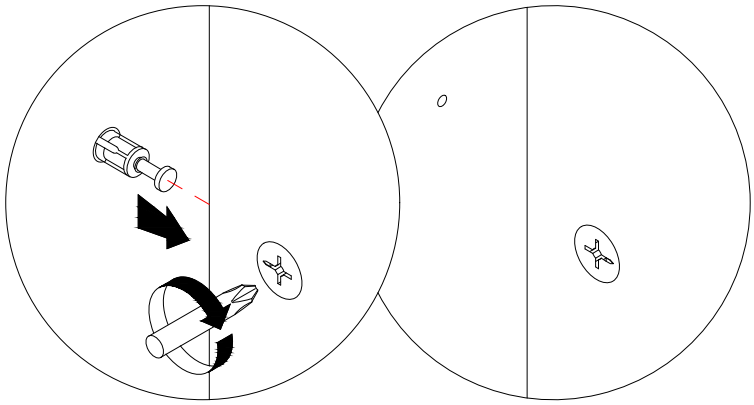

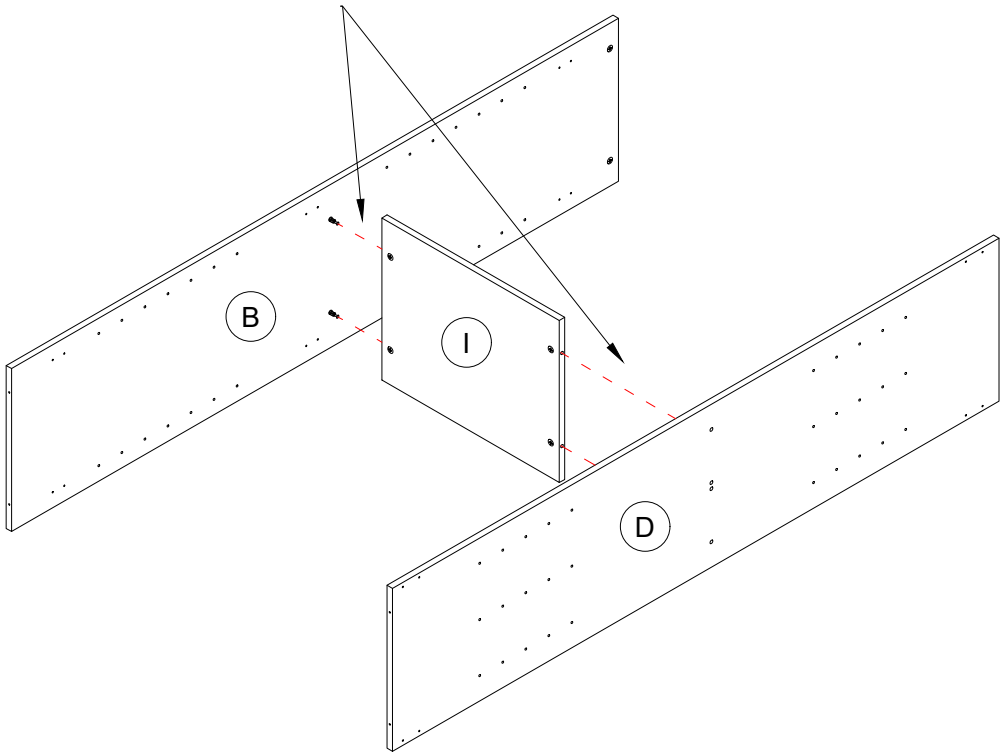


Step 3

LARGE DOOR OF LEFT

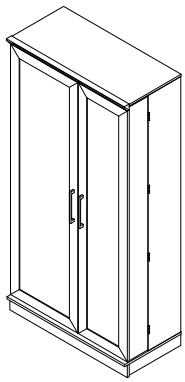



The arrow in the HIDDEN CAM must point toward the hole in the edge of the board.

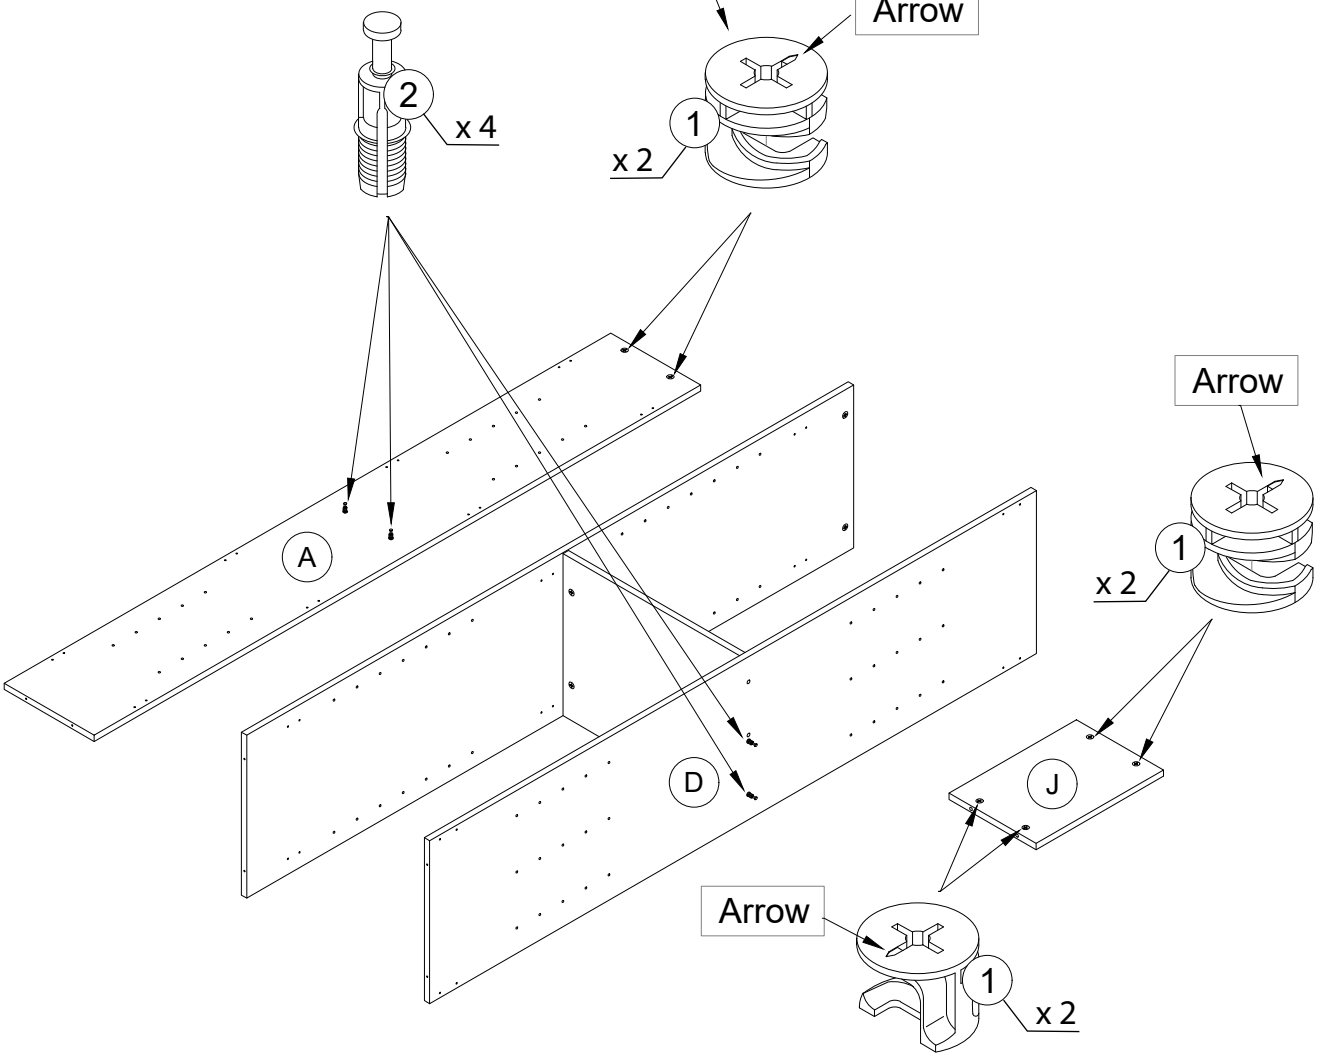

Step 4


LARGE DOOR OF LEFT

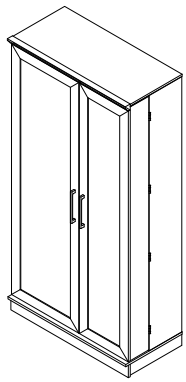


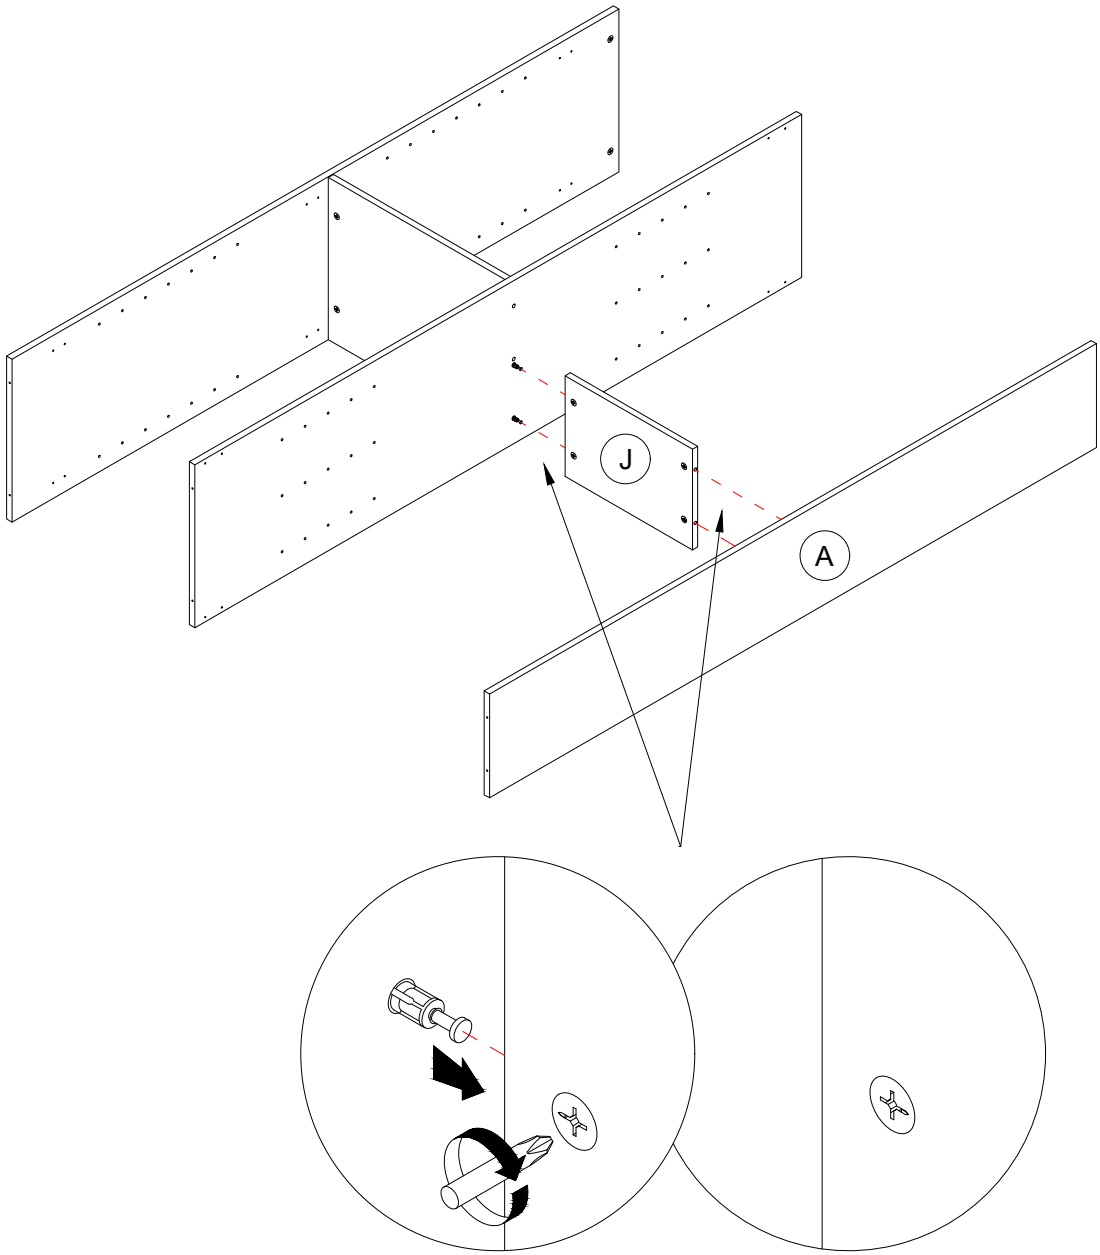


Step 5

LARGE DOOR OF LEFT

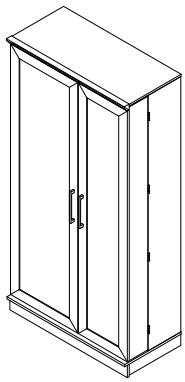


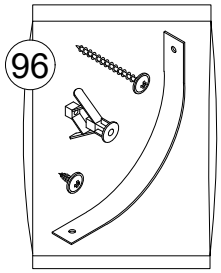

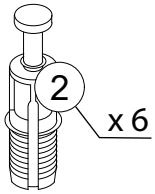


Safety strap

Use the short screw through the hole in the strap and into the TOP (E).

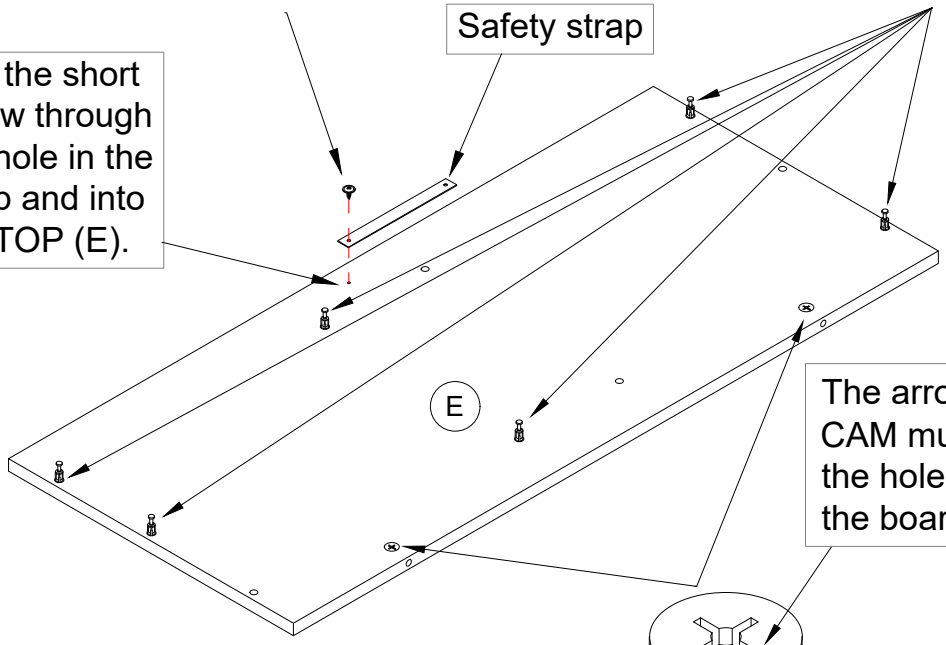



The arrow in the HIDDEN CAM must point toward the hole in the edge of the board.

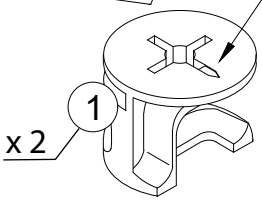


Step 6

LARGE DOOR OF LEFT

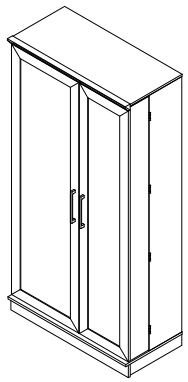


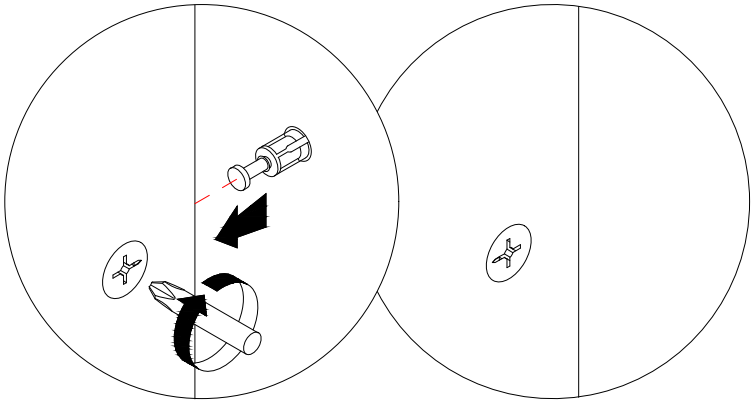


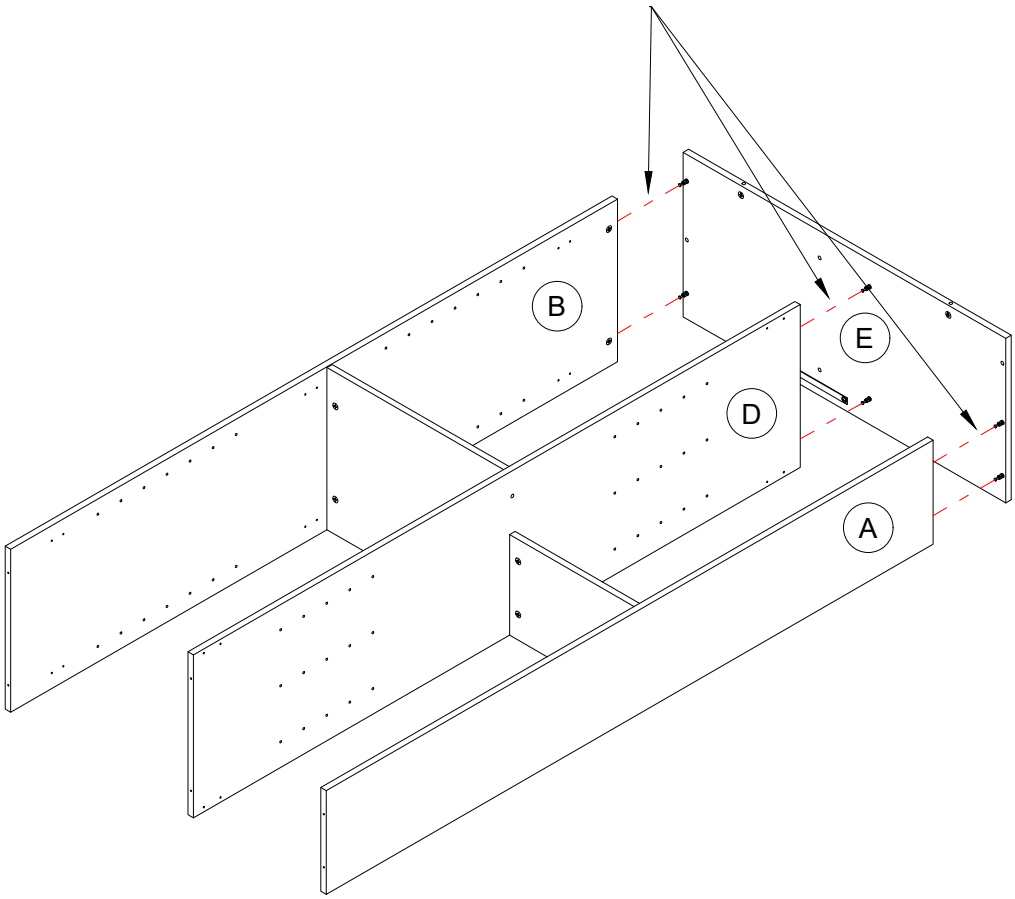

Step 7


LARGE DOOR OF LEFT

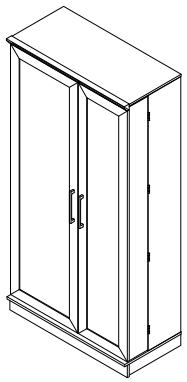


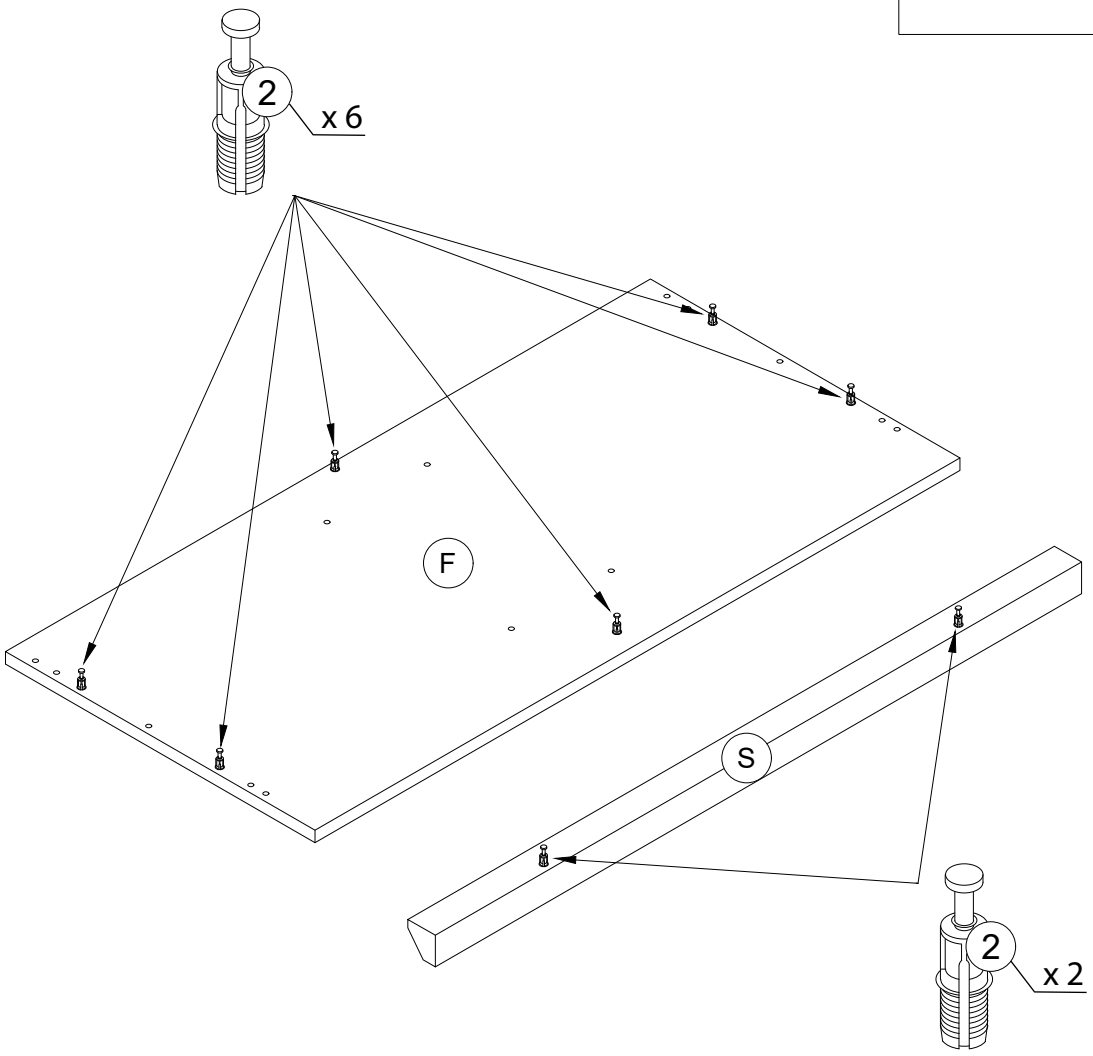


Step 8

LARGE DOOR OF LEFT

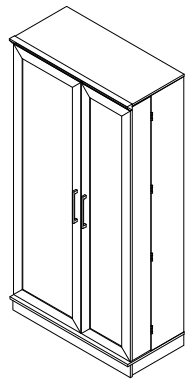


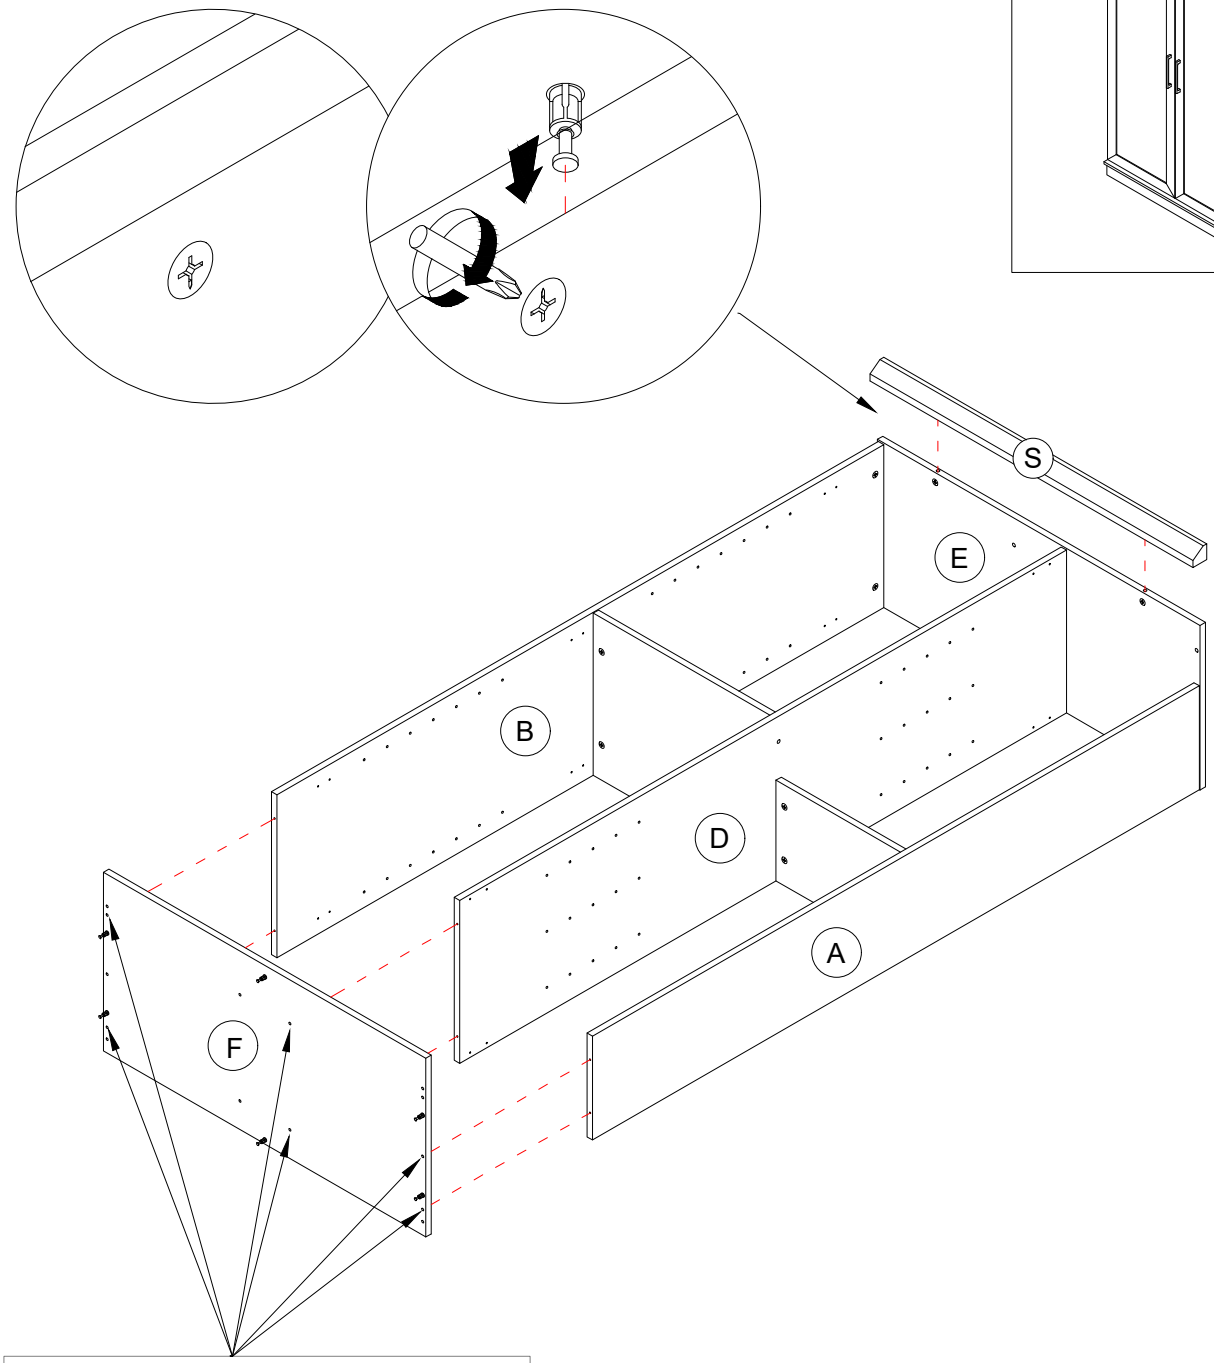

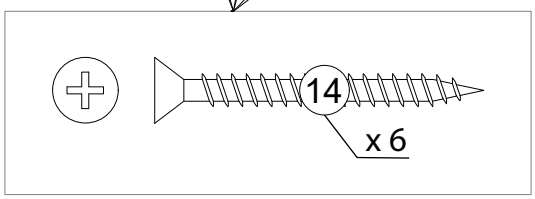


Step 9

LARGE DOOR OF LEFT

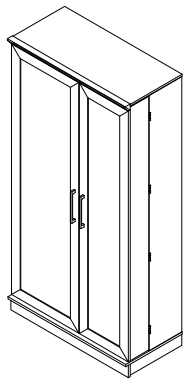


Step 10


LARGE DOOR OF LEFT

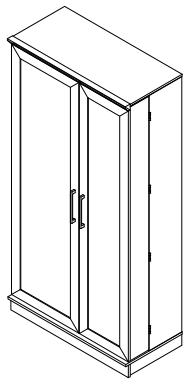

Step 11


LARGE DOOR OF LEFT

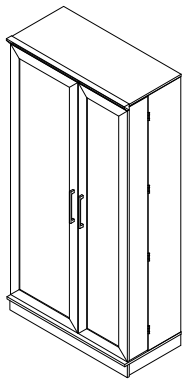


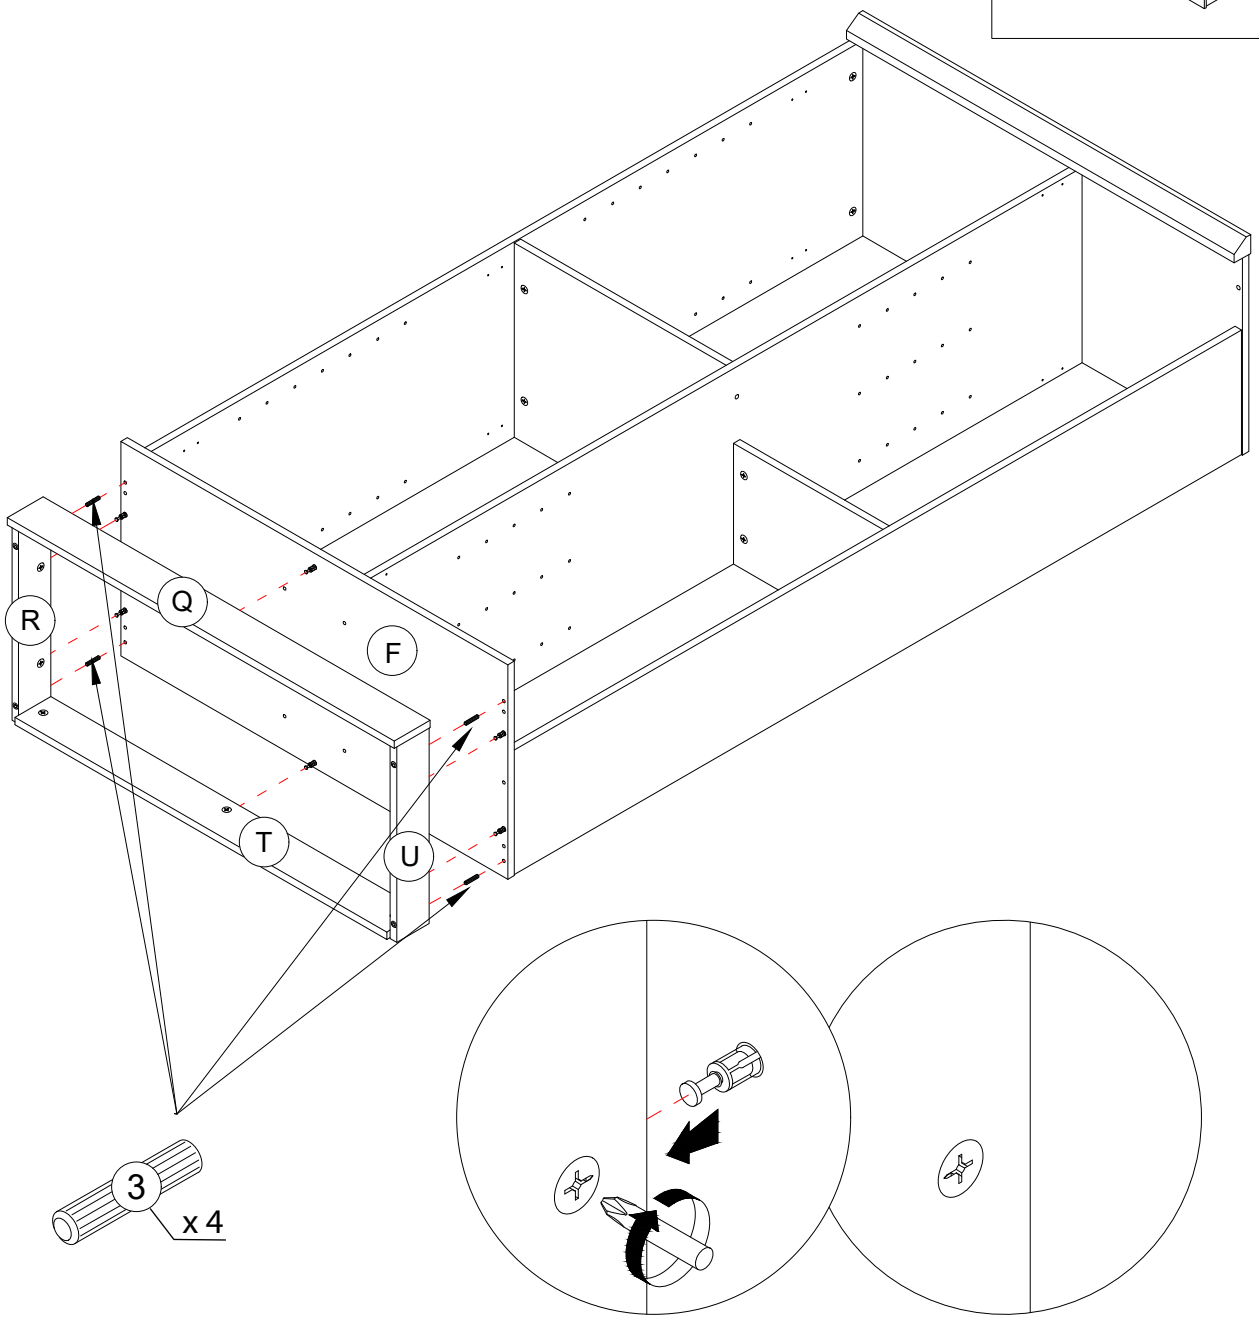

Step 12


LARGE DOOR OF LEFT

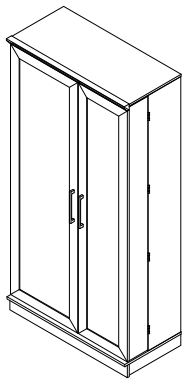


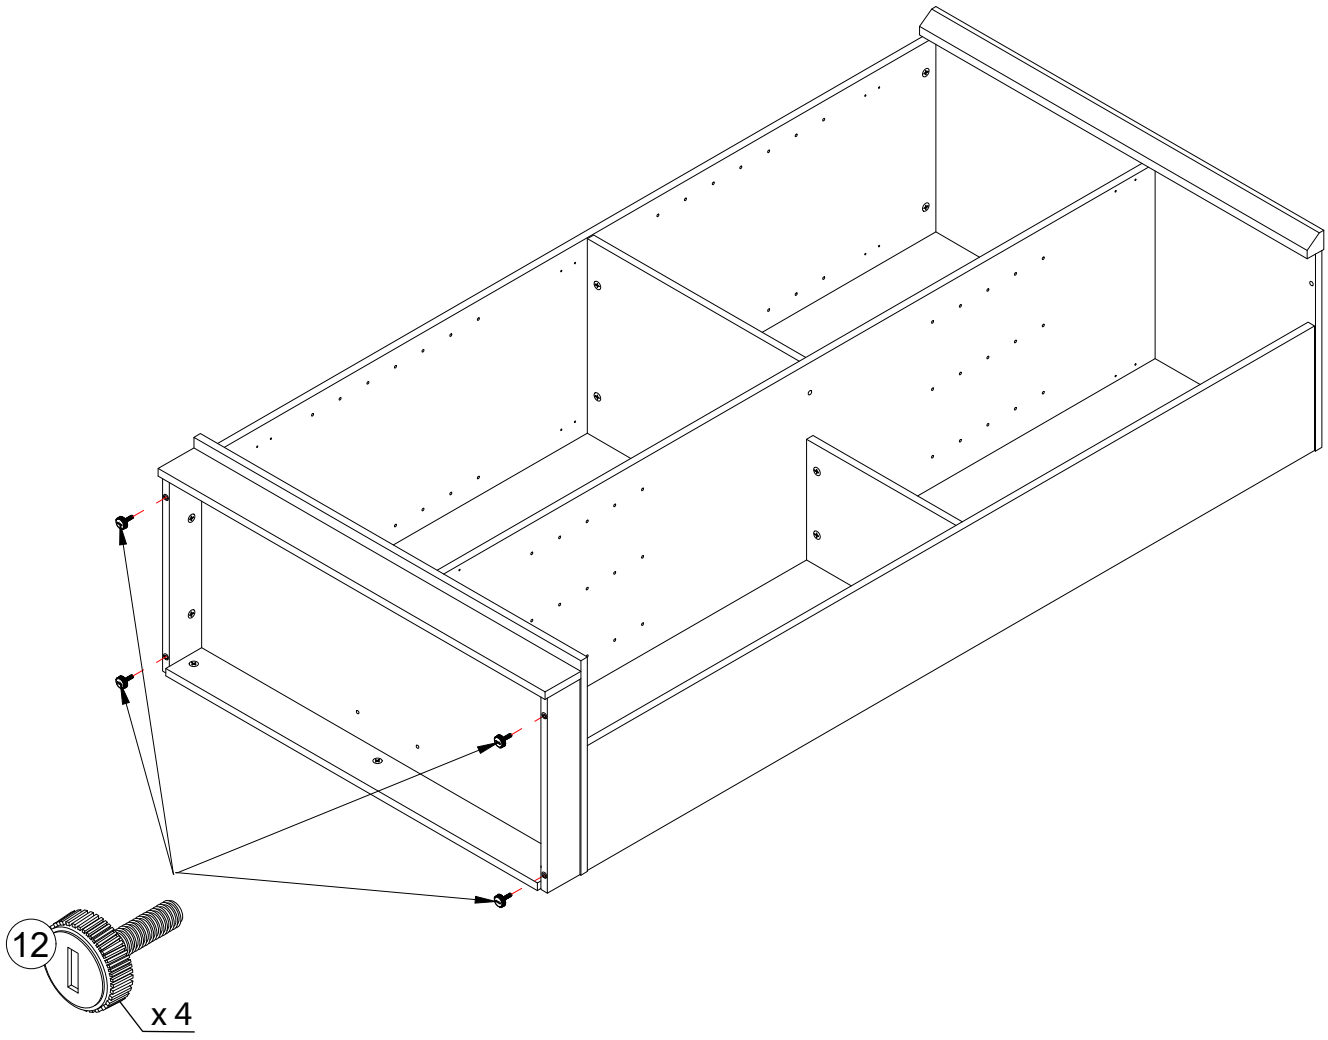

Step 13


LARGE DOOR OF LEFT

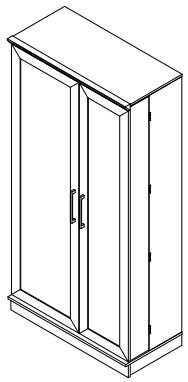


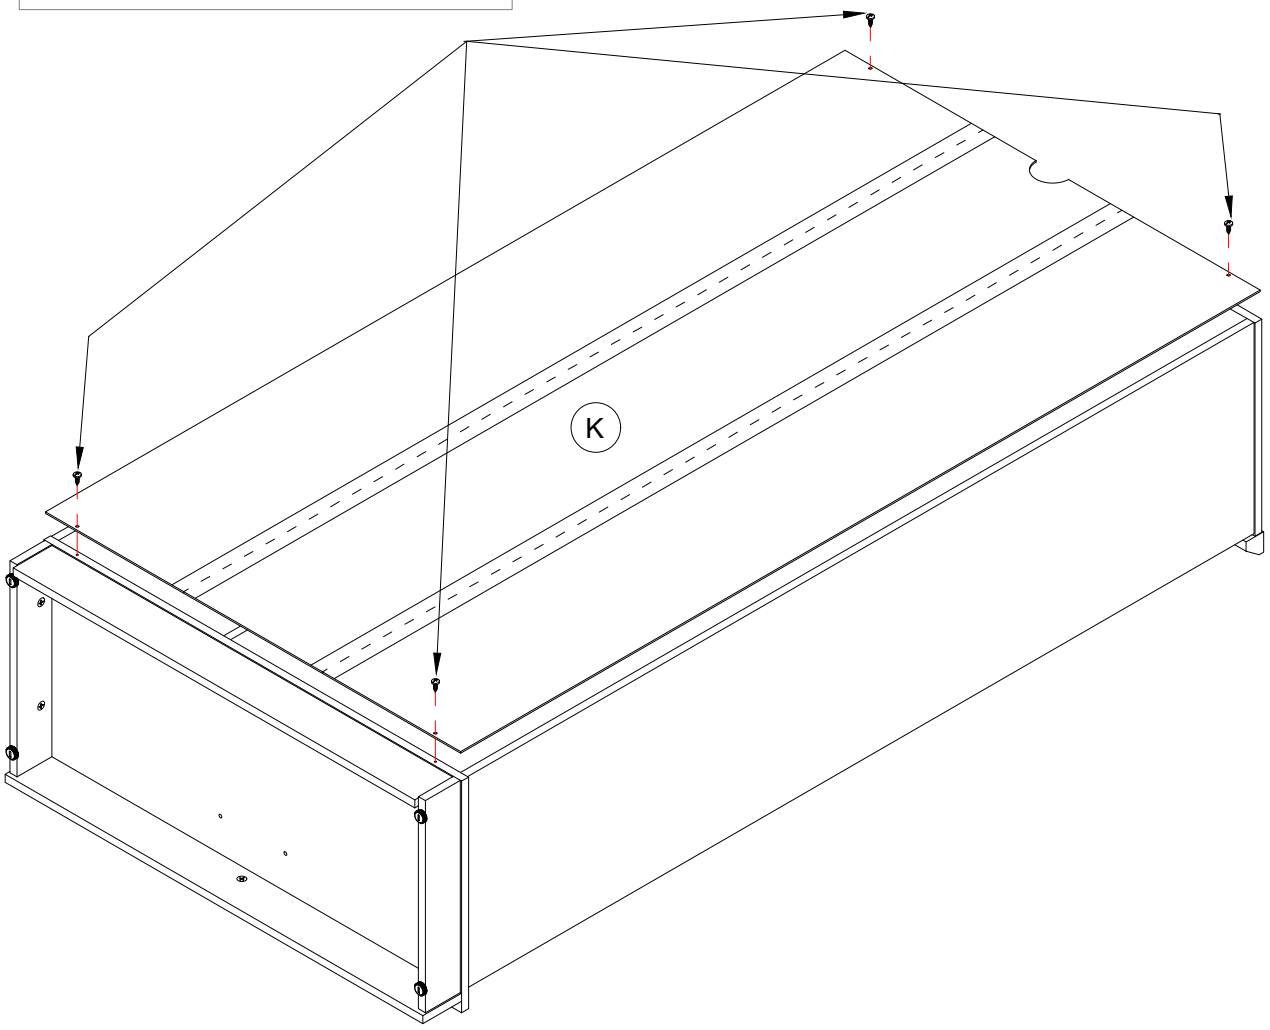



Step 14

LARGE DOOR OF LEFT

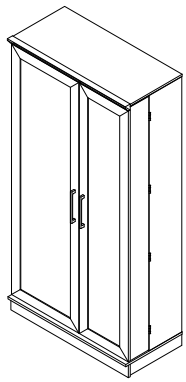

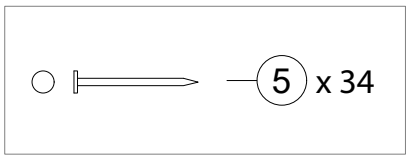


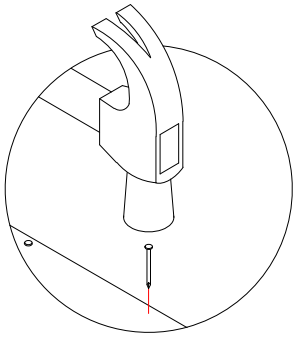


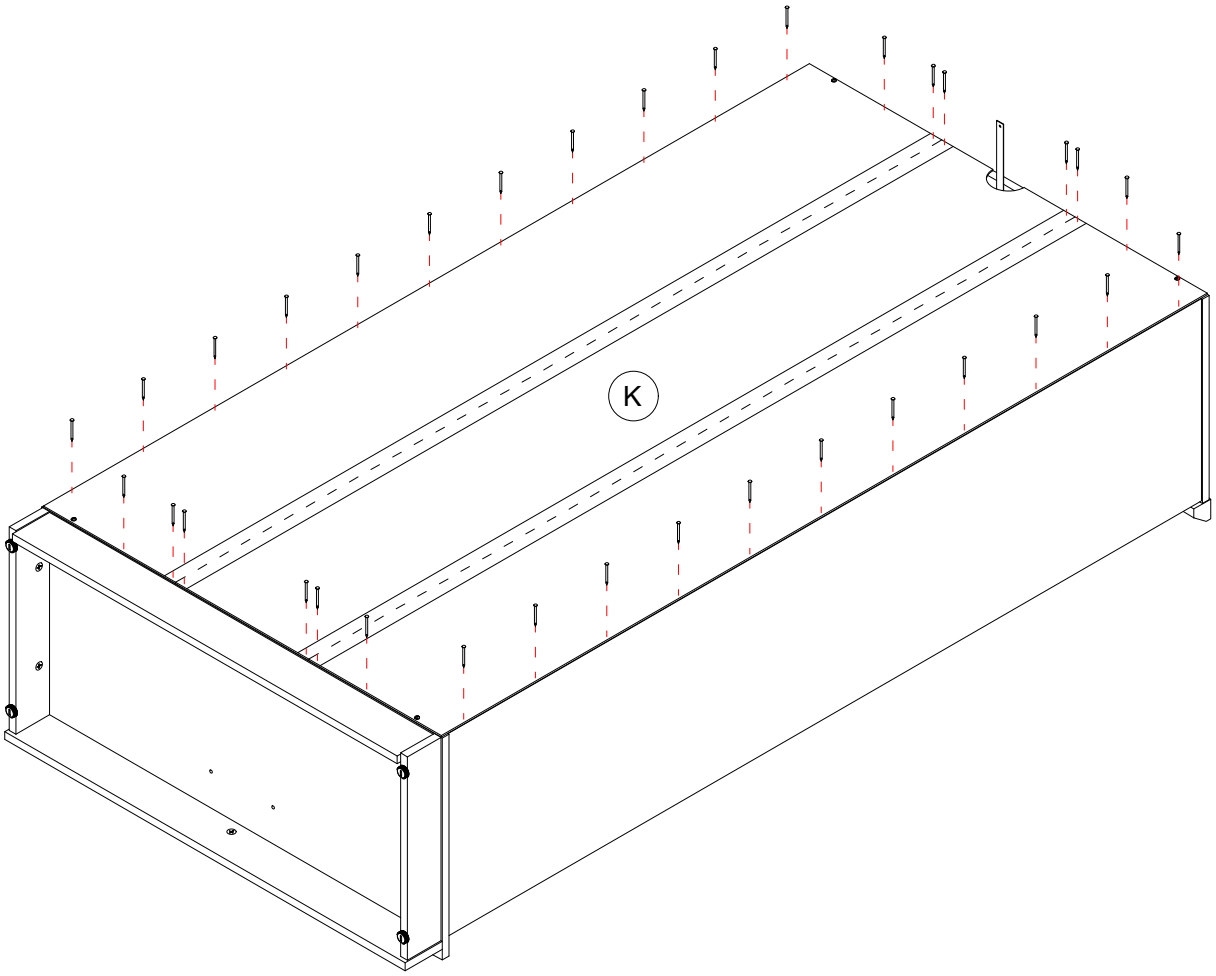

Step 15

LARGE DOOR OF LEFT

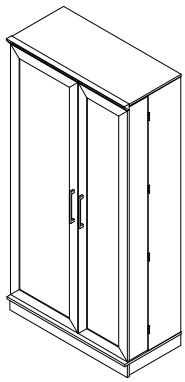


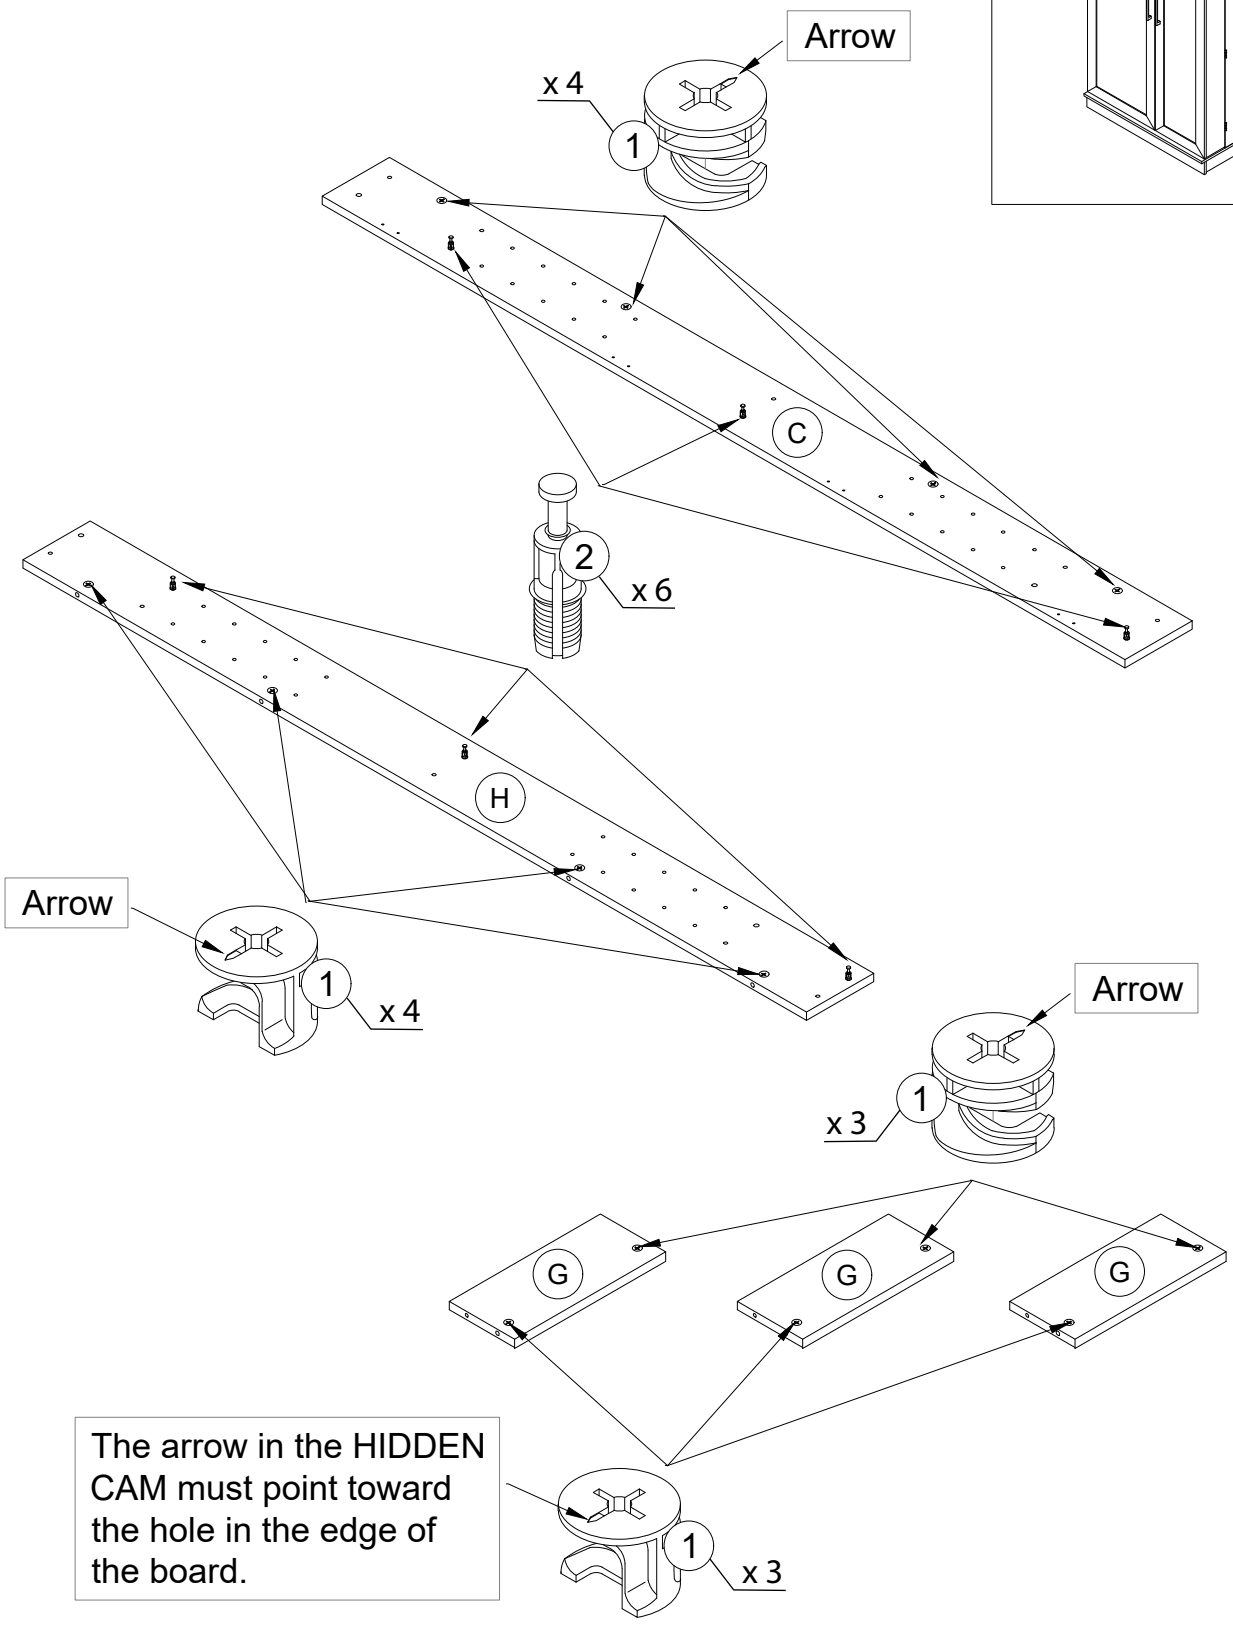



The arrow in the HIDDEN CAM must point toward the hole in the edge of the board.

Step 16

LARGE DOOR OF LEFT

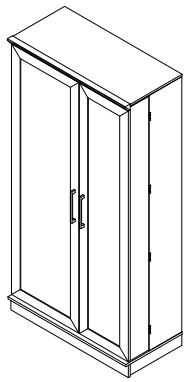


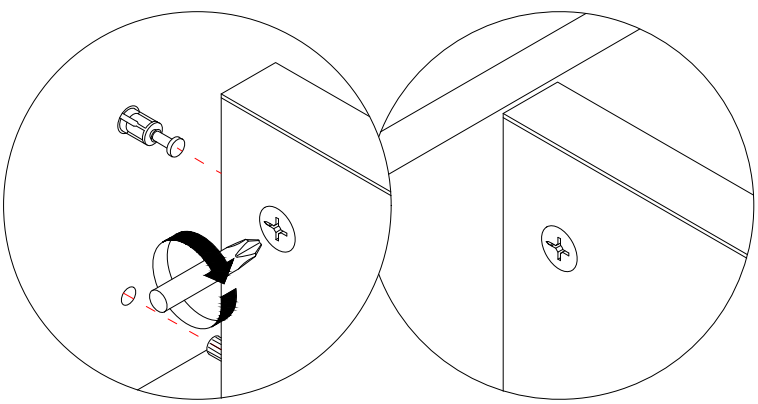


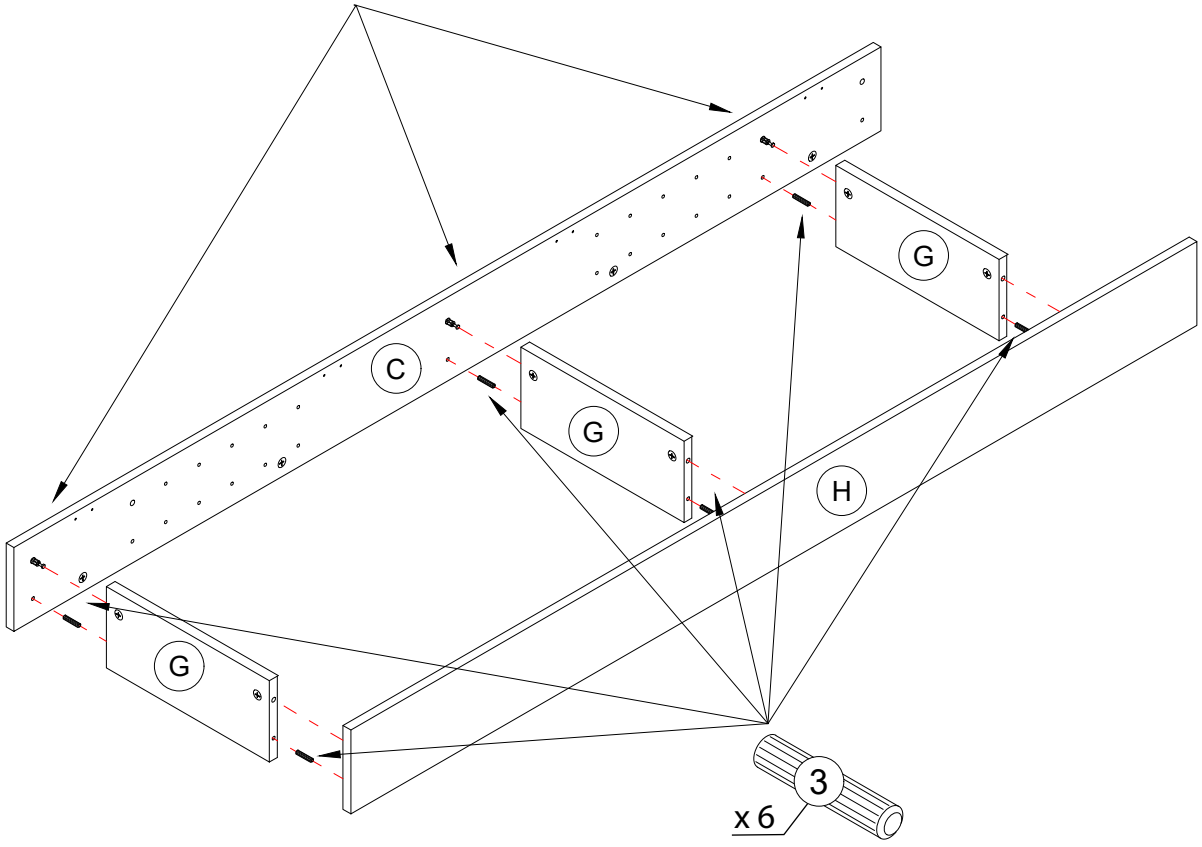

Step 17


LARGE DOOR OF LEFT

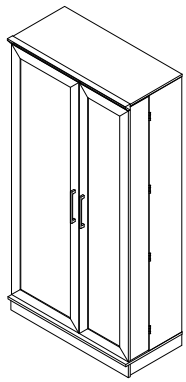

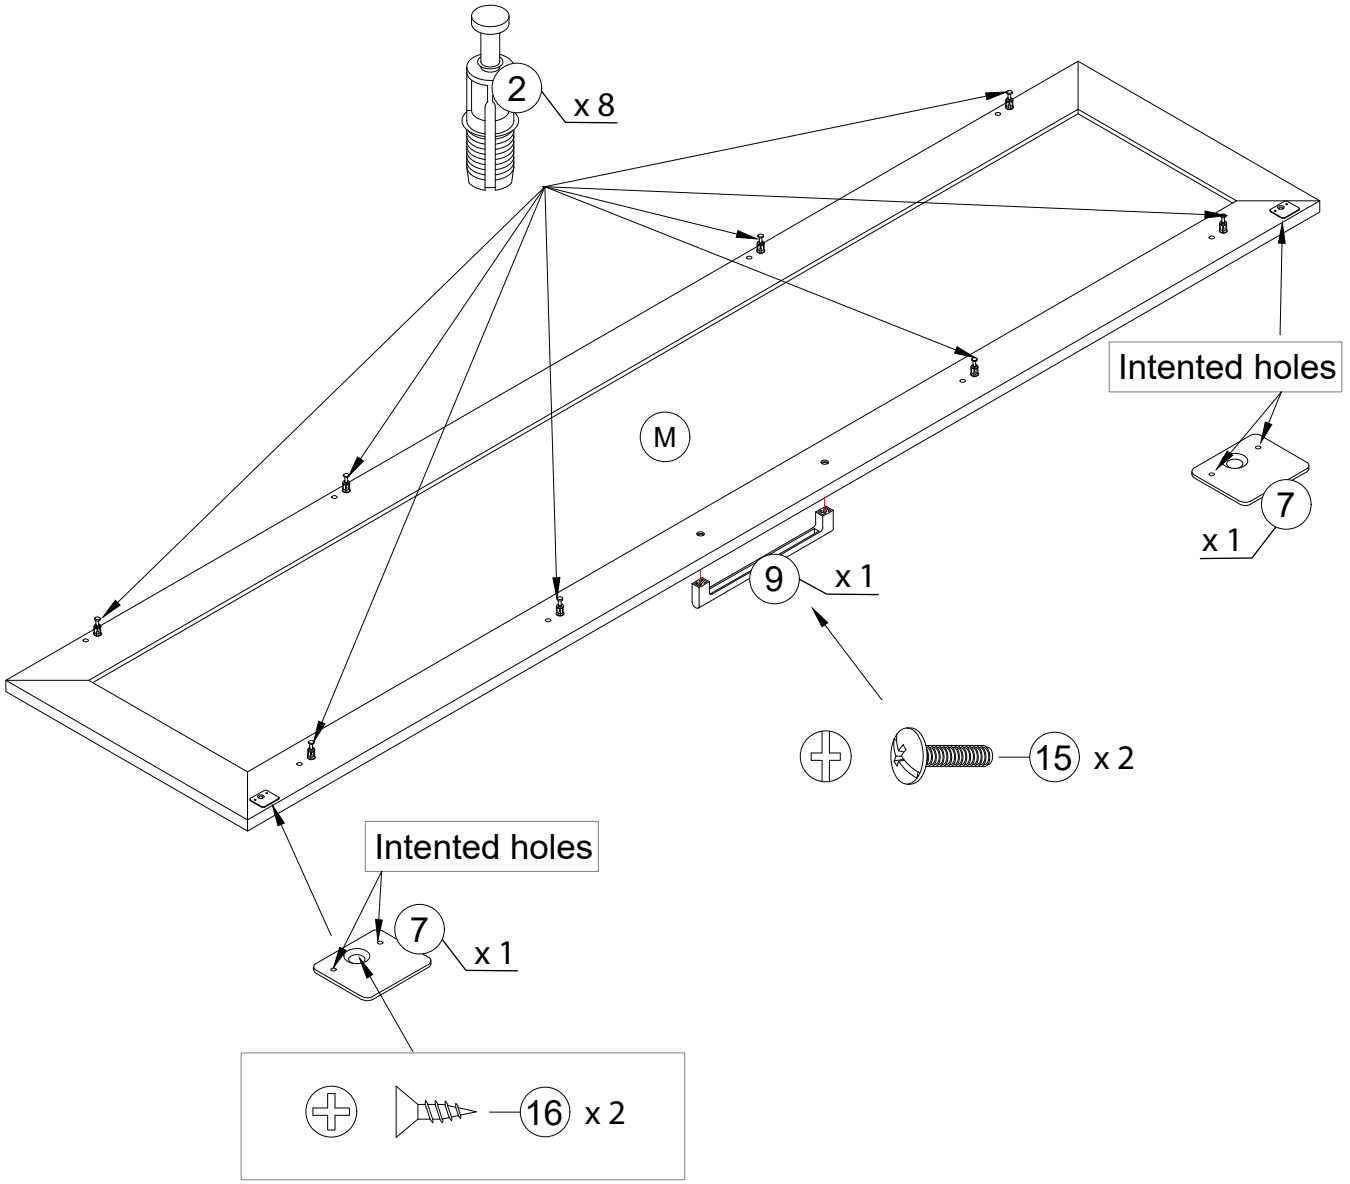

Step 18

LARGE DOOR OF LEFT

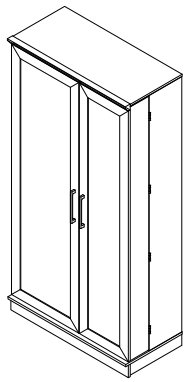

x 4


8


16 x 8

M

Step 19

LARGE DOOR OF LEFT

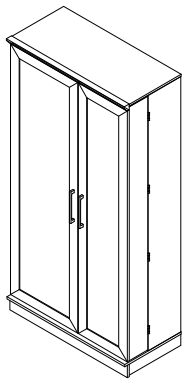


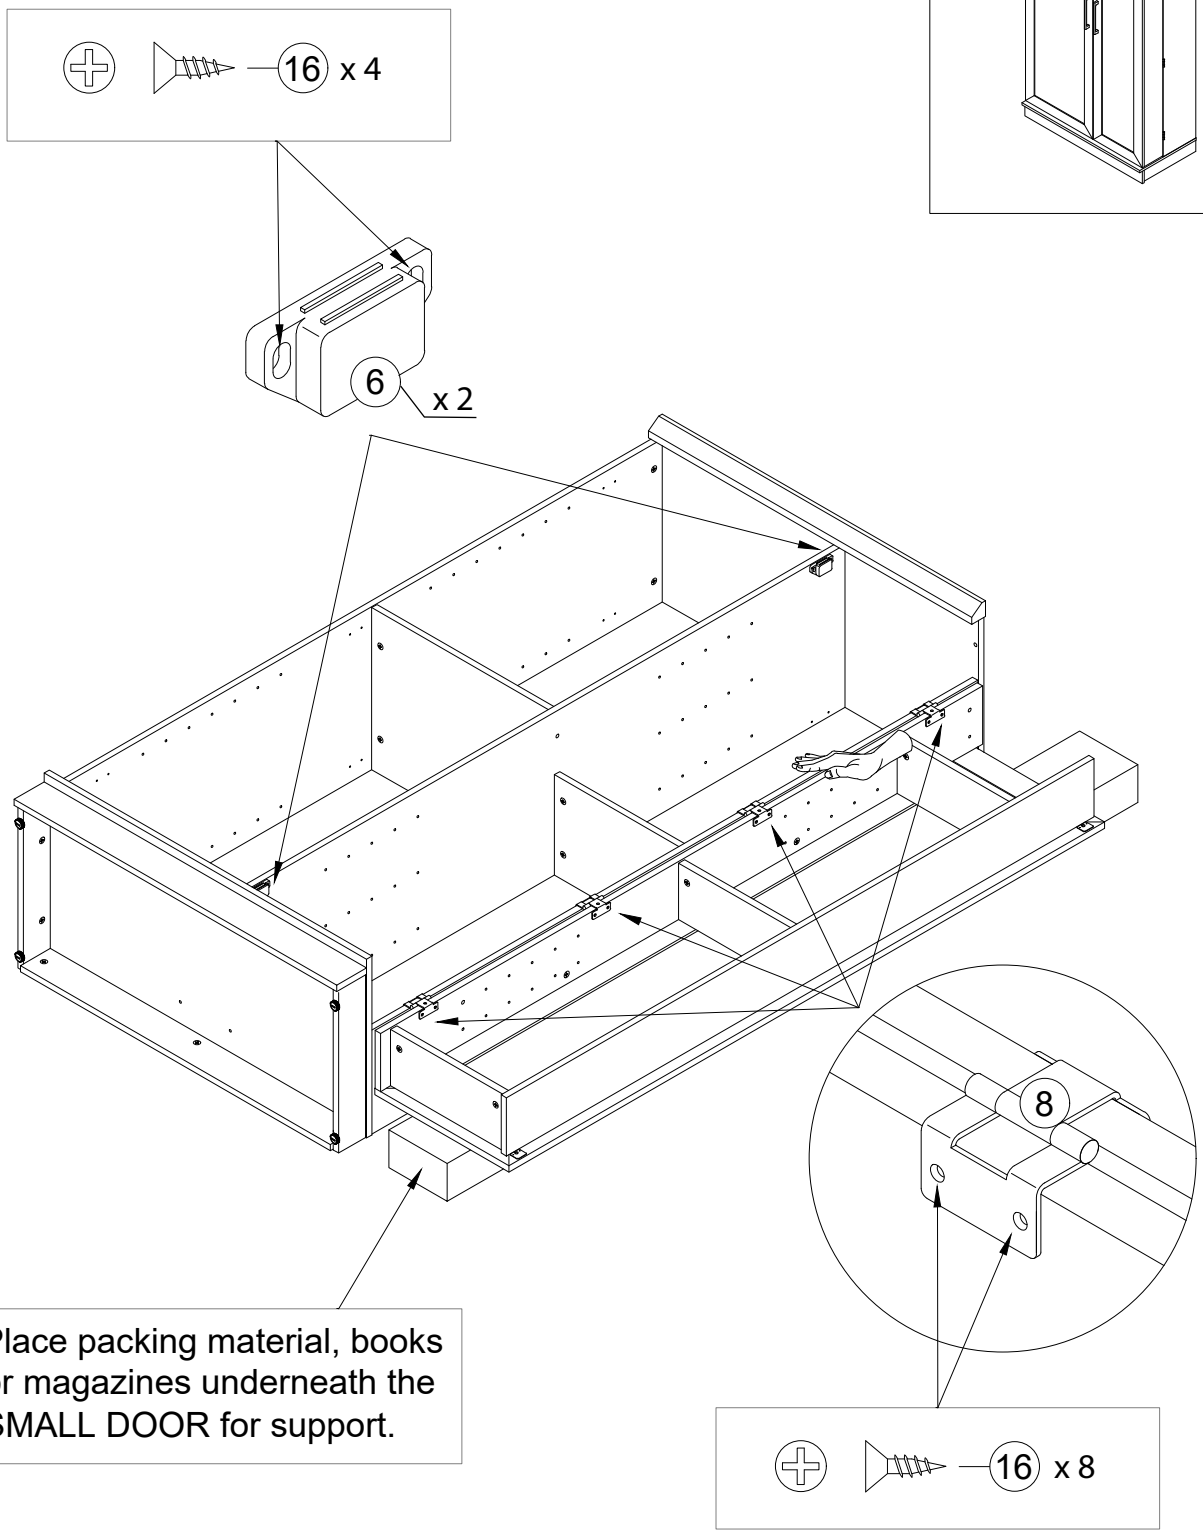


Place packing material, books or magazines underneath the SMALL DOOR for support.

Step 20


LARGE DOOR OF LEFT

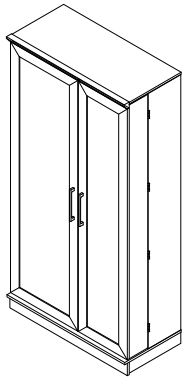


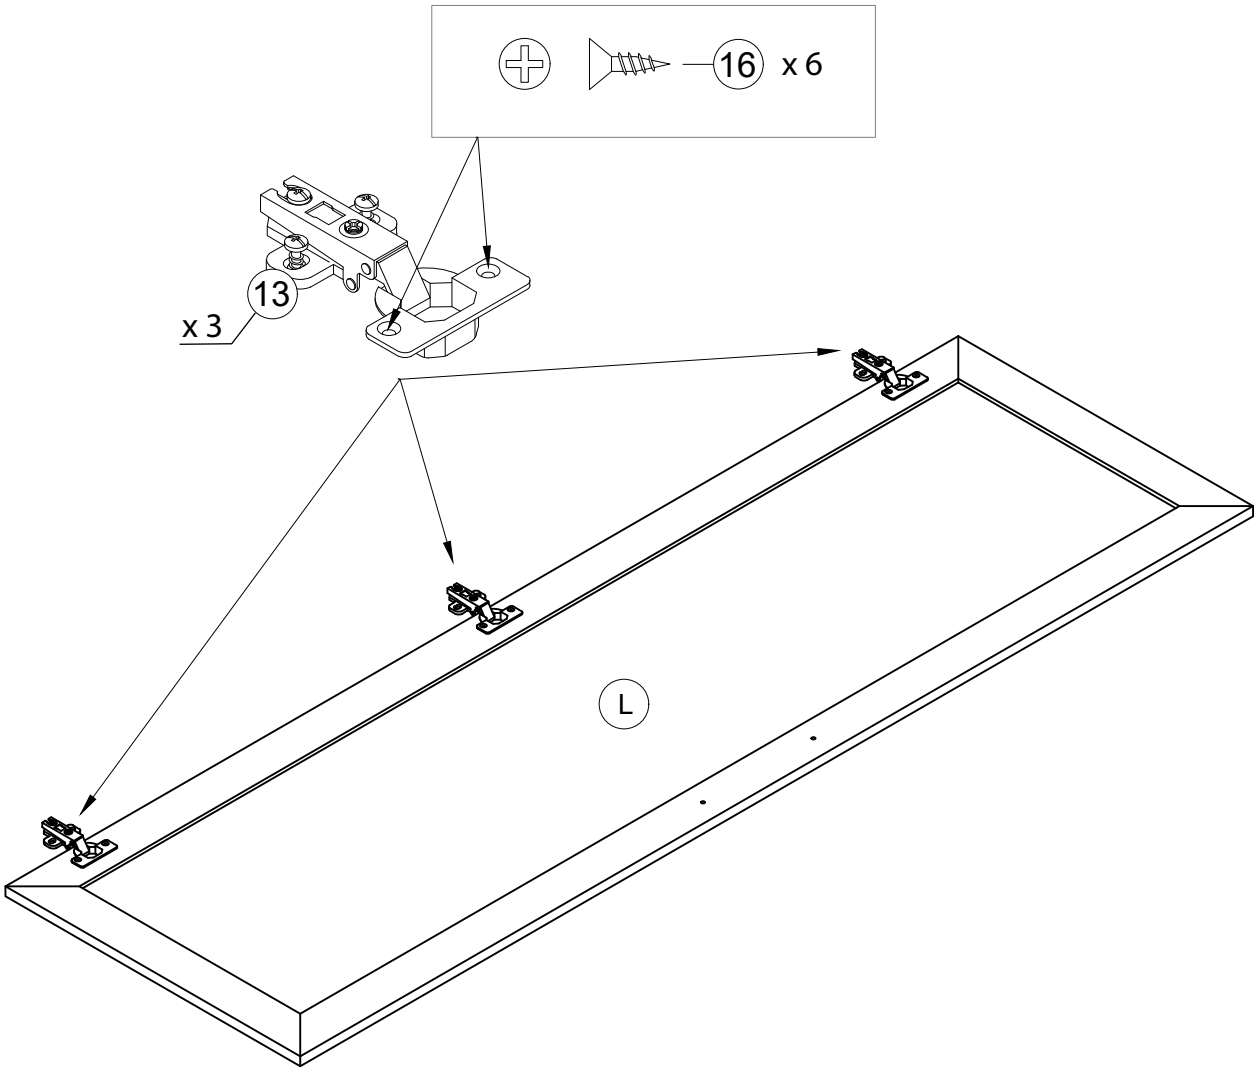

Step 21


LARGE DOOR OF LEFT

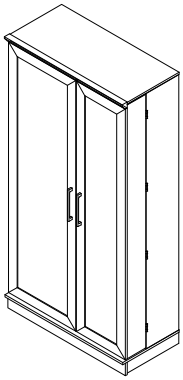


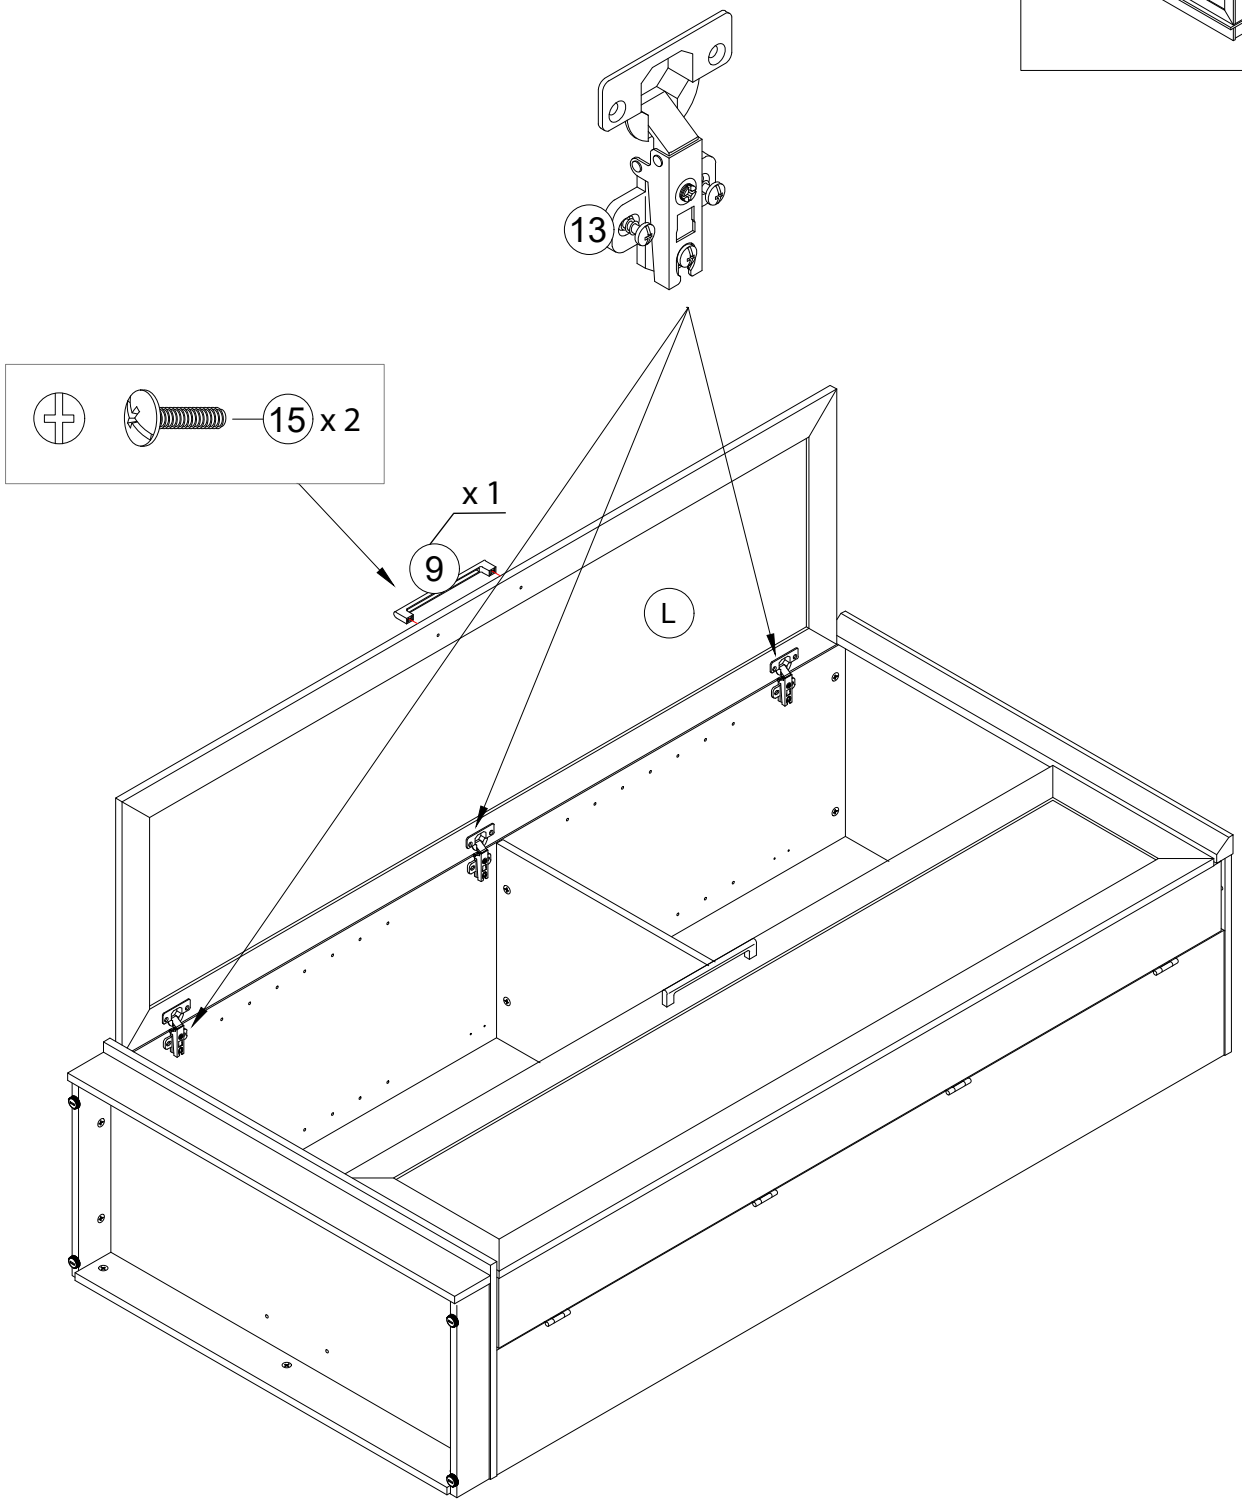


Step 22

LARGE DOOR OF LEFT

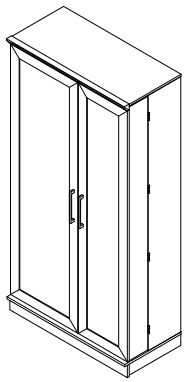

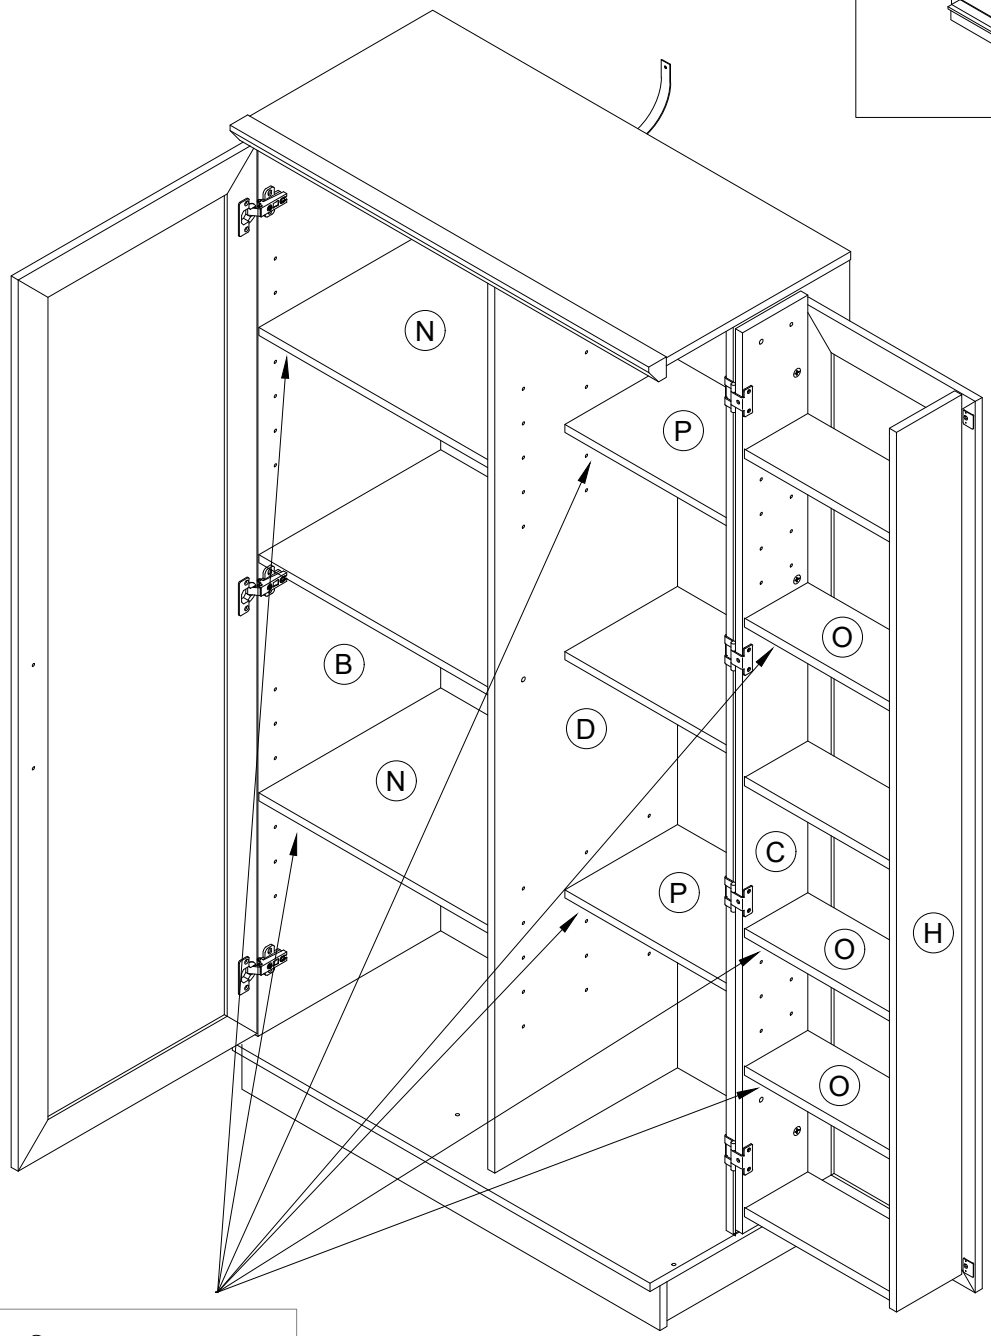





4 x 28

Step 23


LARGE DOOR OF LEFT

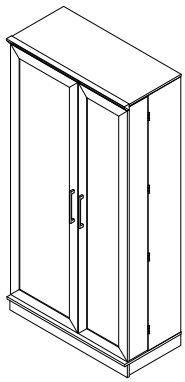

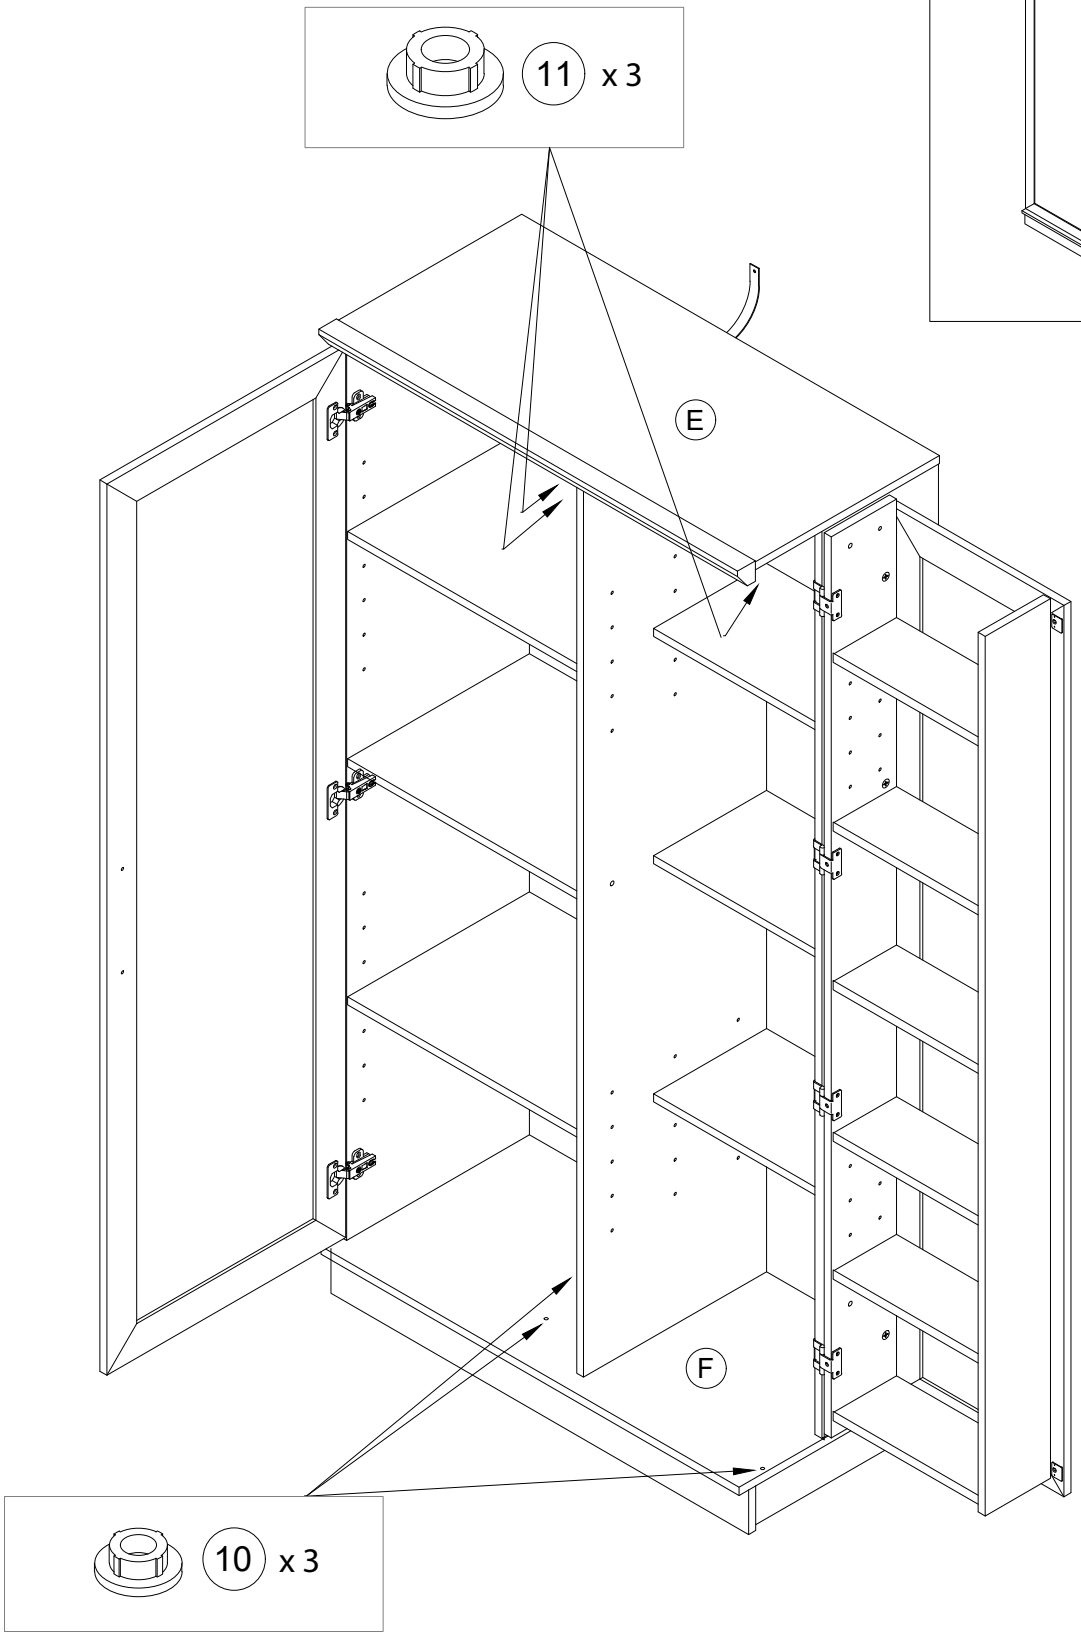


Step 24


LARGE DOOR OF LEFT

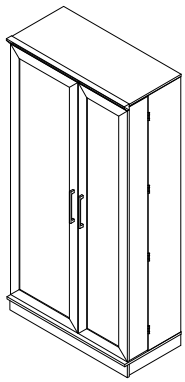


Electric drill with 1/8" bit

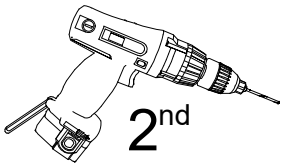


2nd

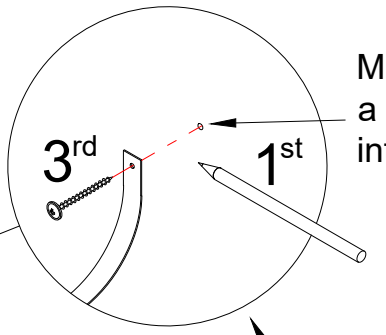


Mark and drill
a 1/8" hole
into the wall.

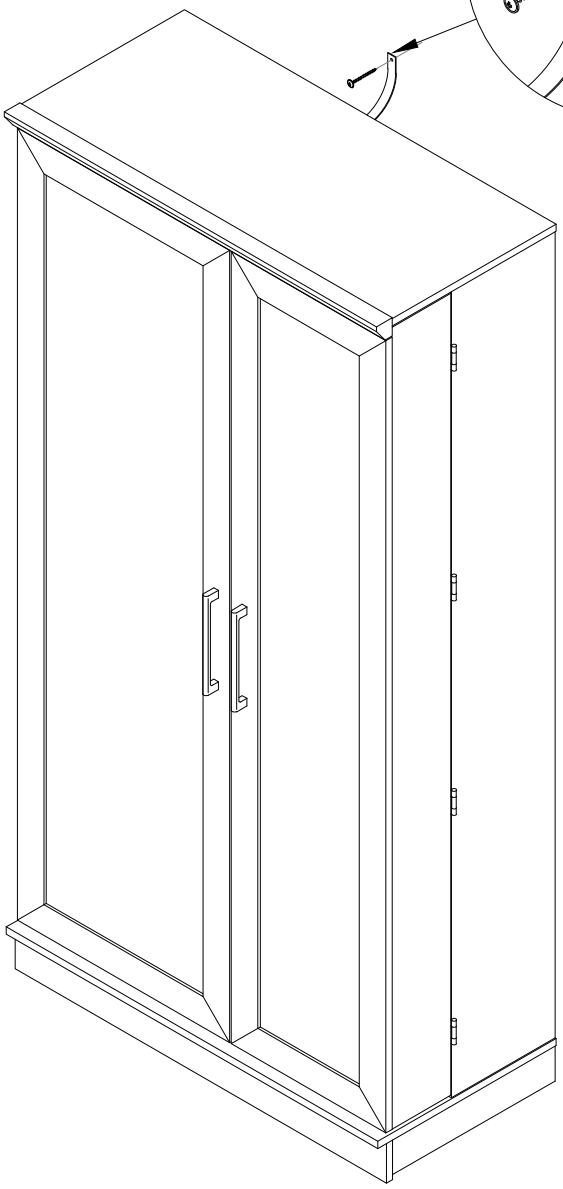

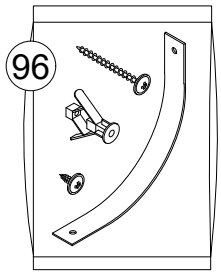


Step 25

LARGE DOOR OF LEFT

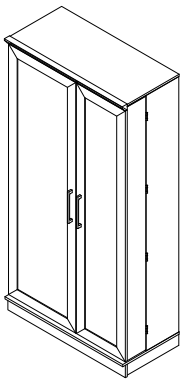

Electric drill with 3/8" bit

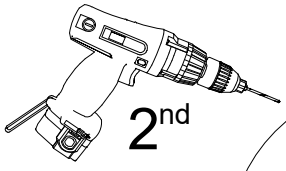


2nd


Mark and drill
a 3/8" hole
into the wall.


3rd

4th

1st

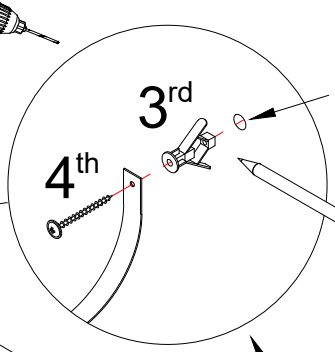


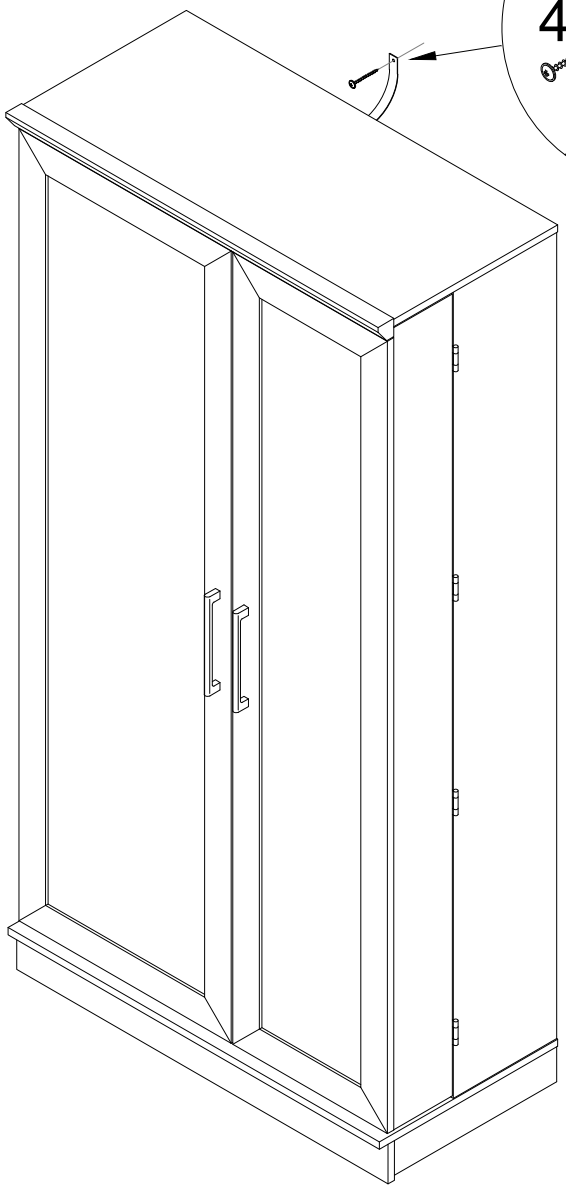

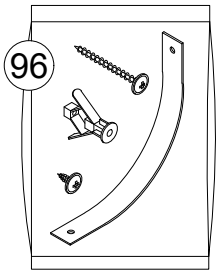


Step 26

LARGE DOOR OF RIGHT

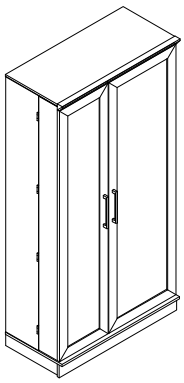



The arrow in the HIDDEN CAM must point toward the hole in the edge of the board.

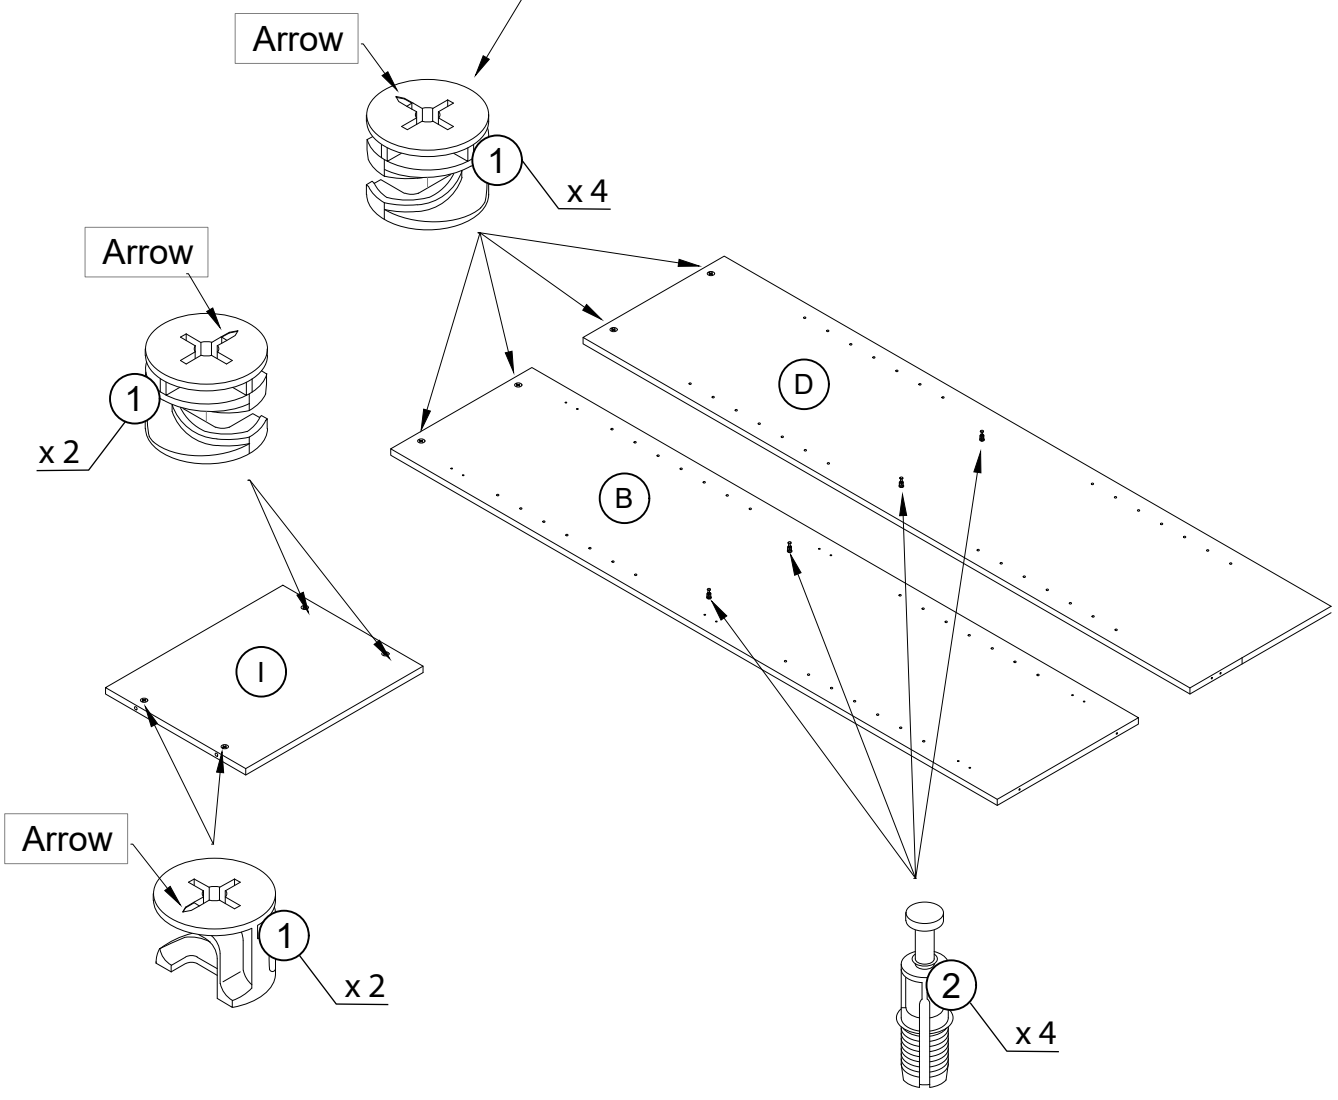


Step 27

LARGE DOOR OF RIGHT

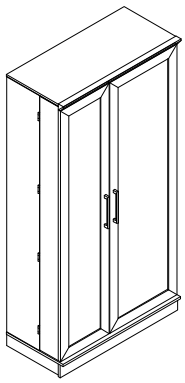


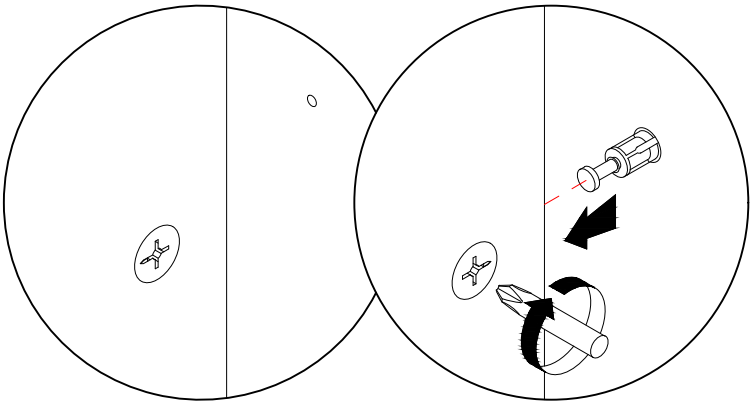

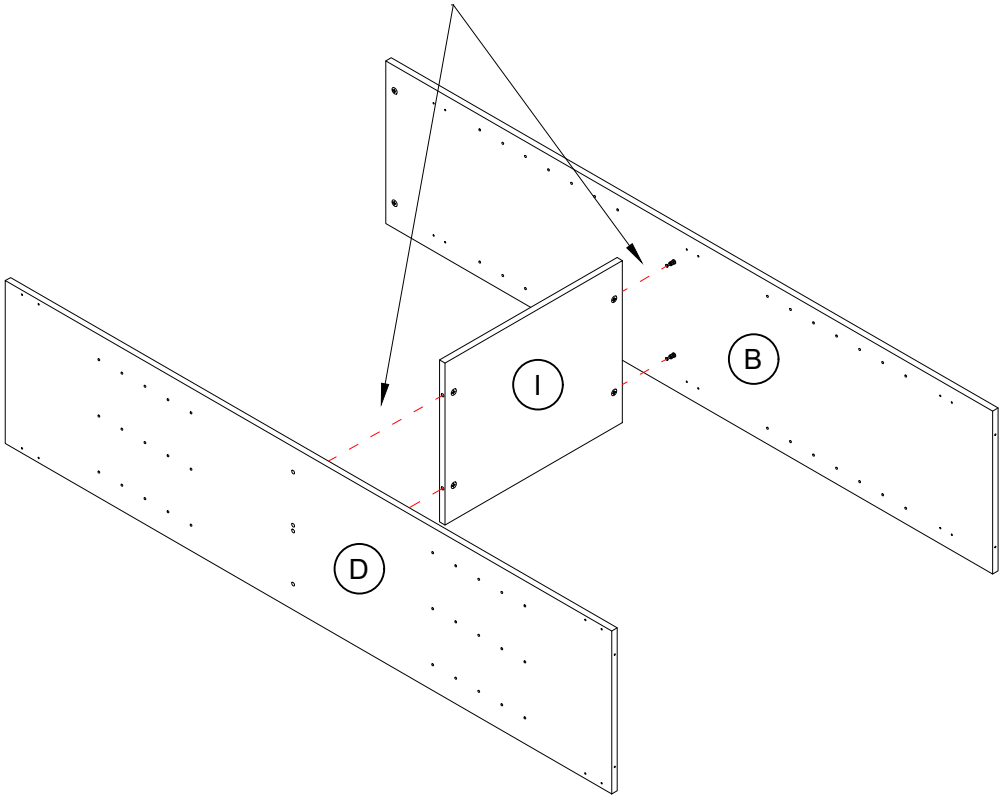


Step 28


LARGE DOOR OF RIGHT

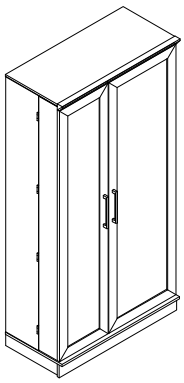


Step 29

LARGE DOOR OF RIGHT

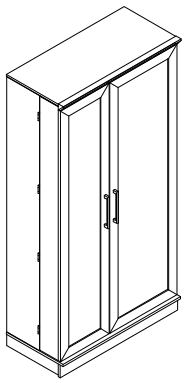


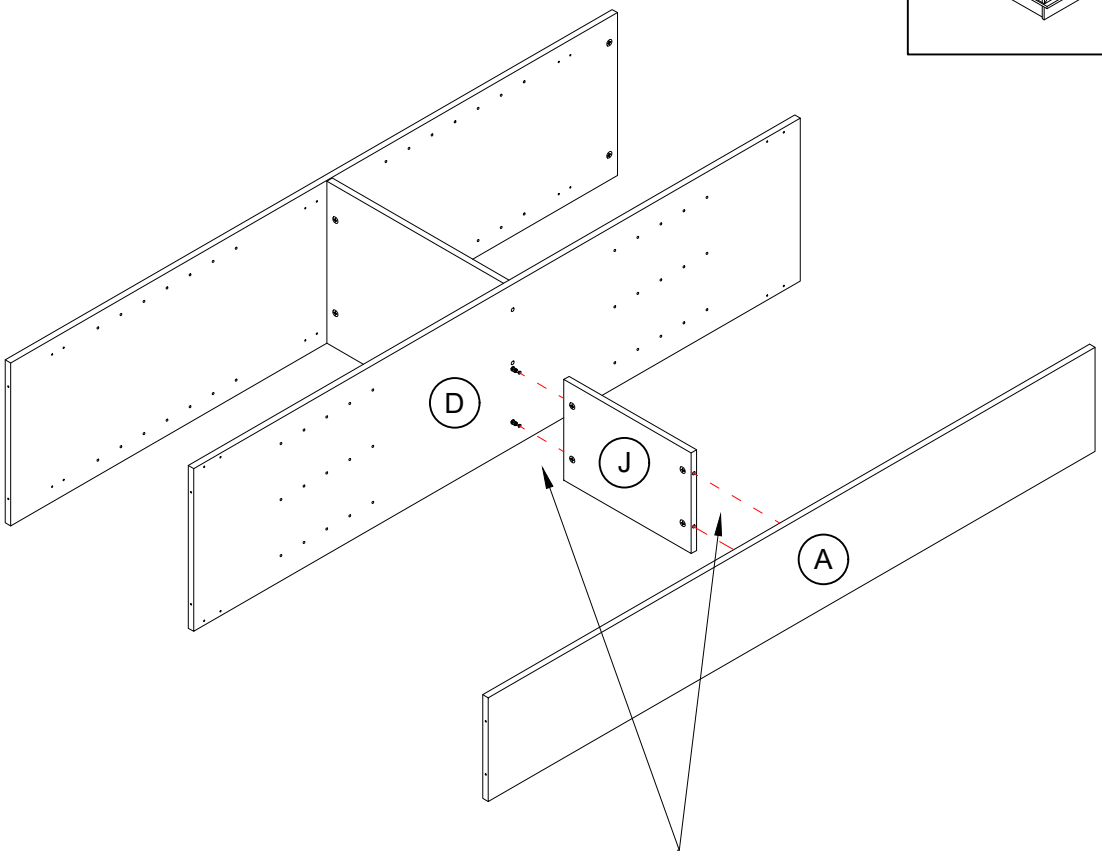


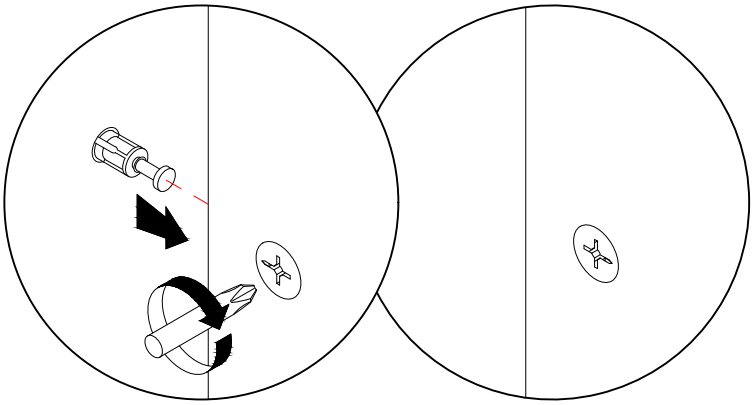

Step 30


LARGE DOOR OF RIGHT

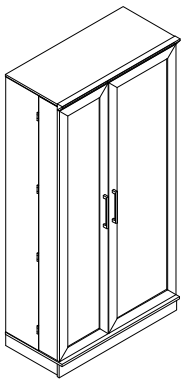


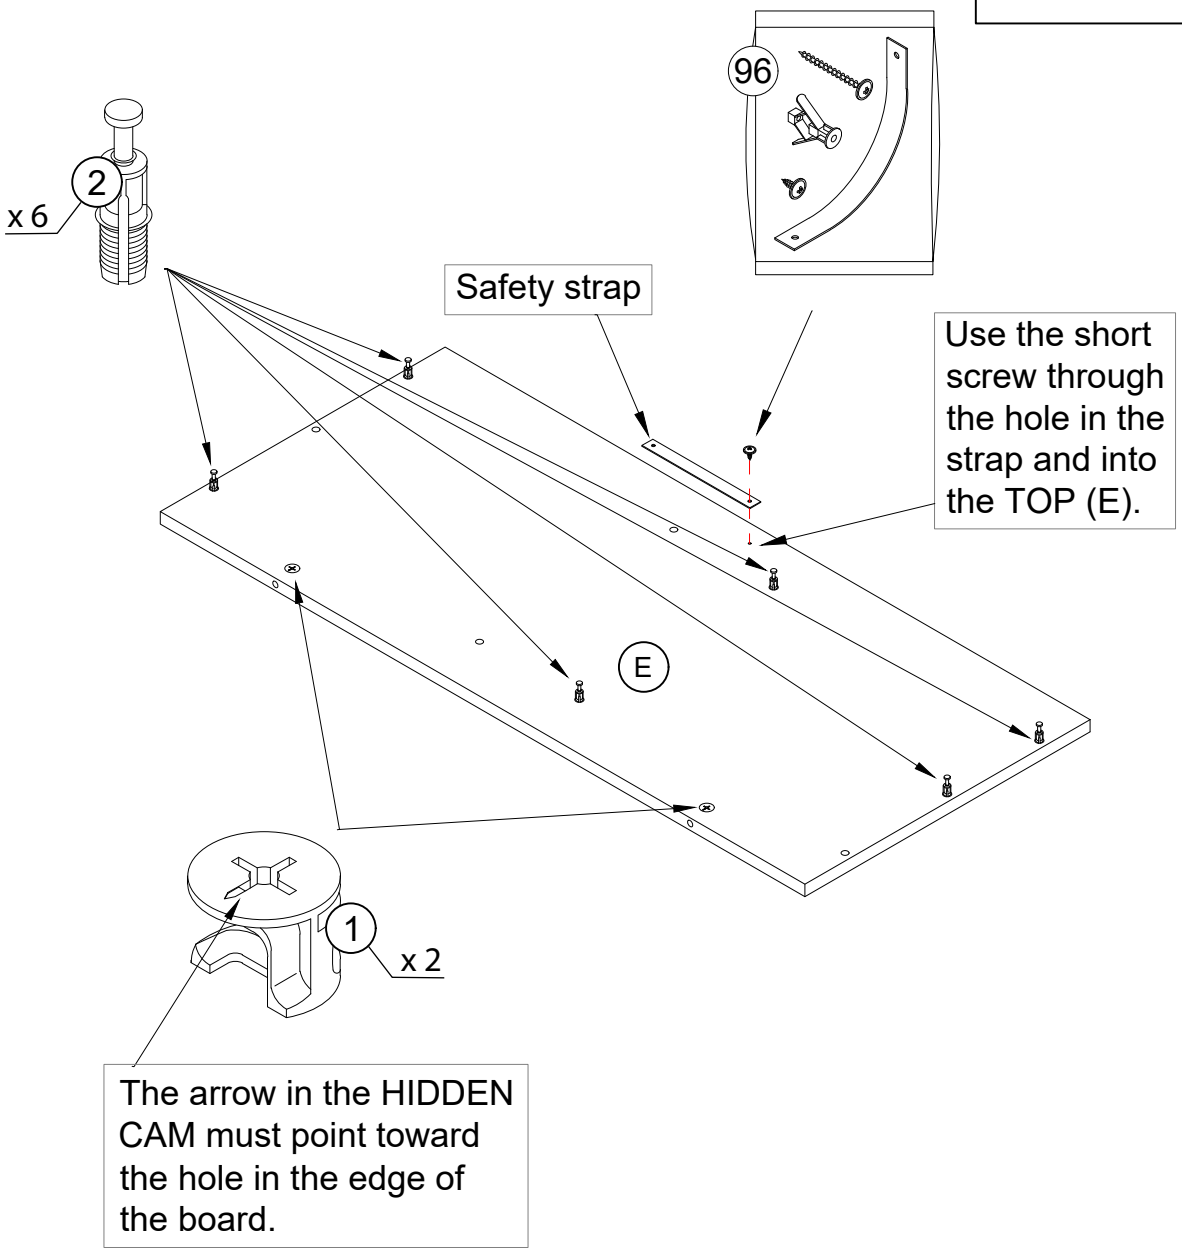


Step 31

LARGE DOOR OF RIGHT

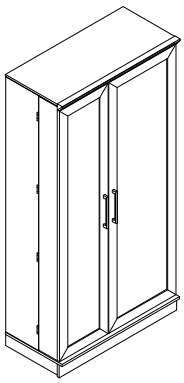


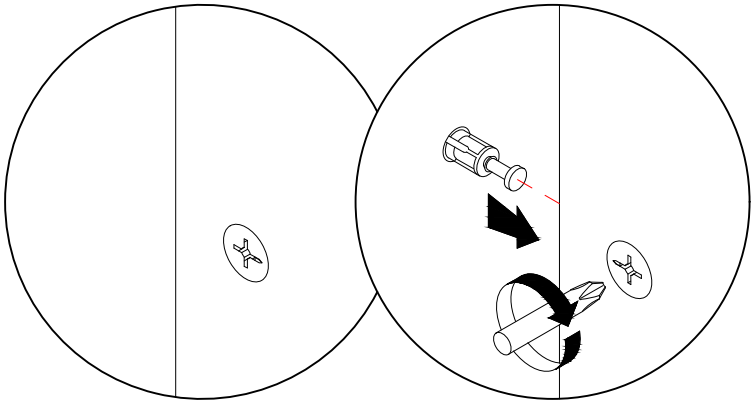


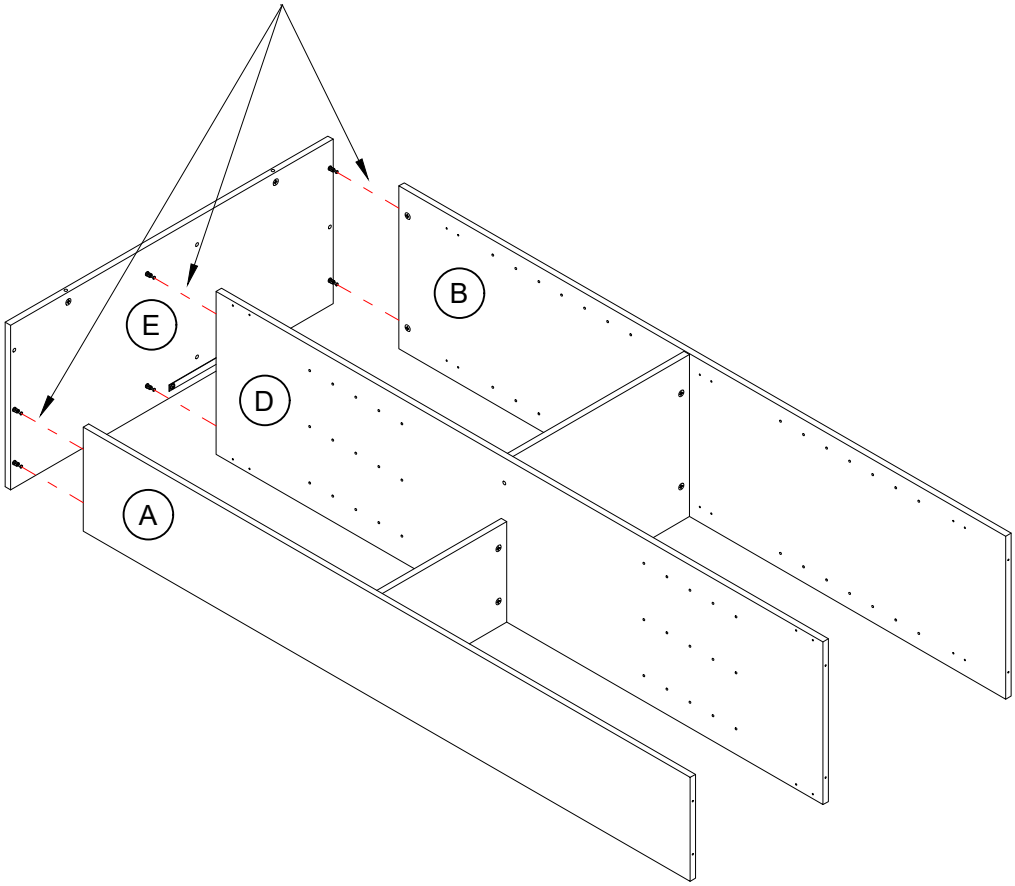

Step 32


LARGE DOOR OF RIGHT

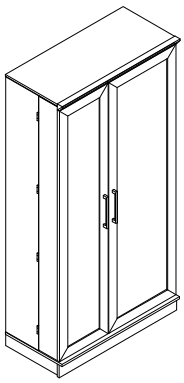


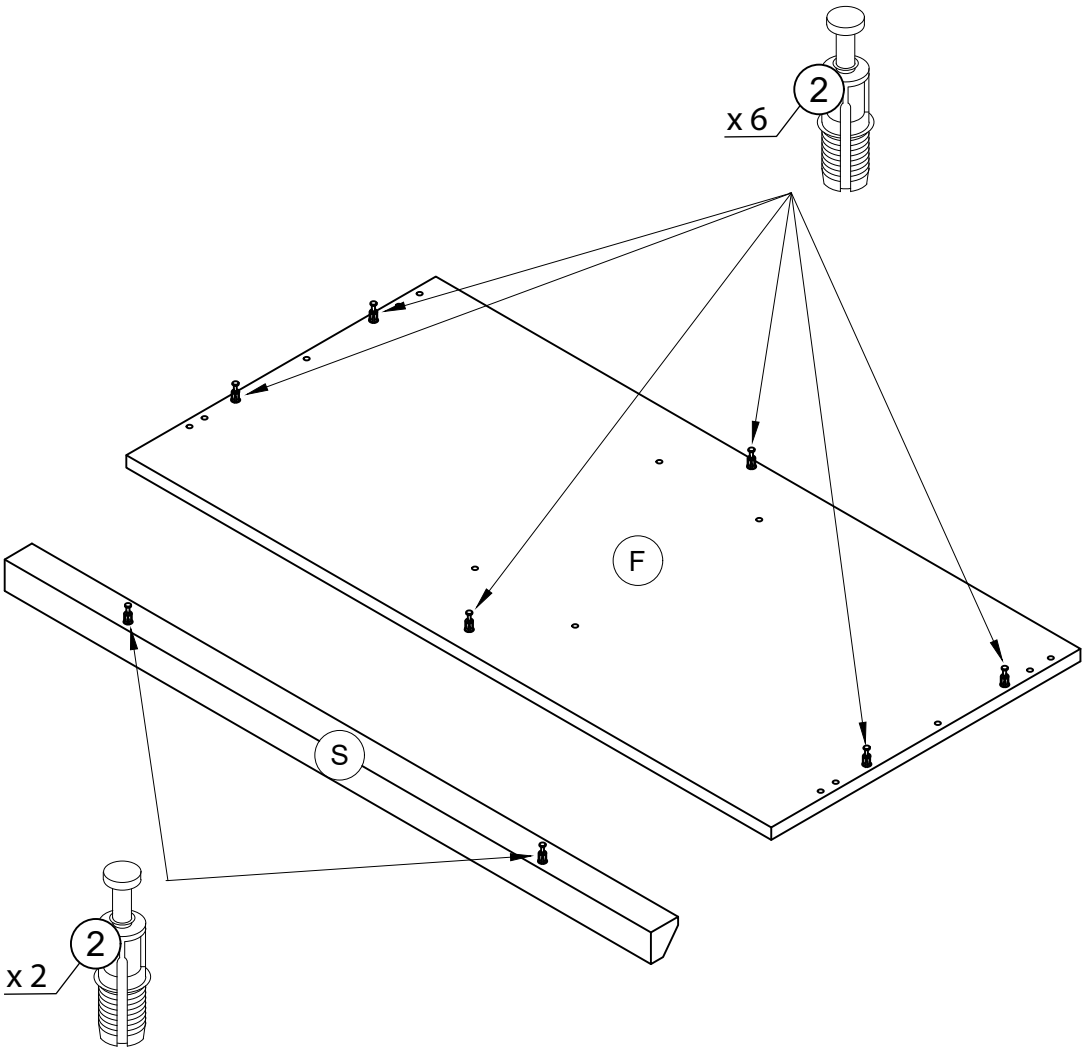


Step 33

LARGE DOOR OF RIGHT

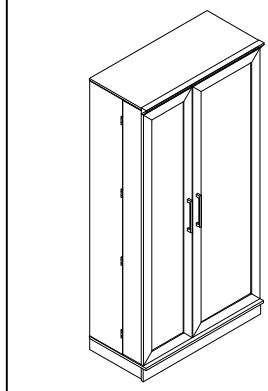


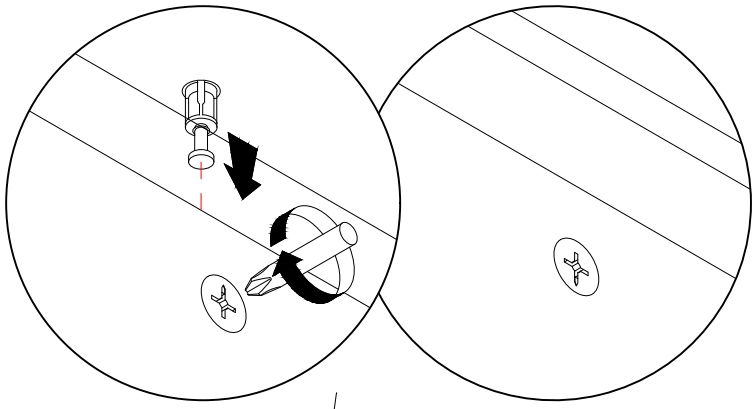

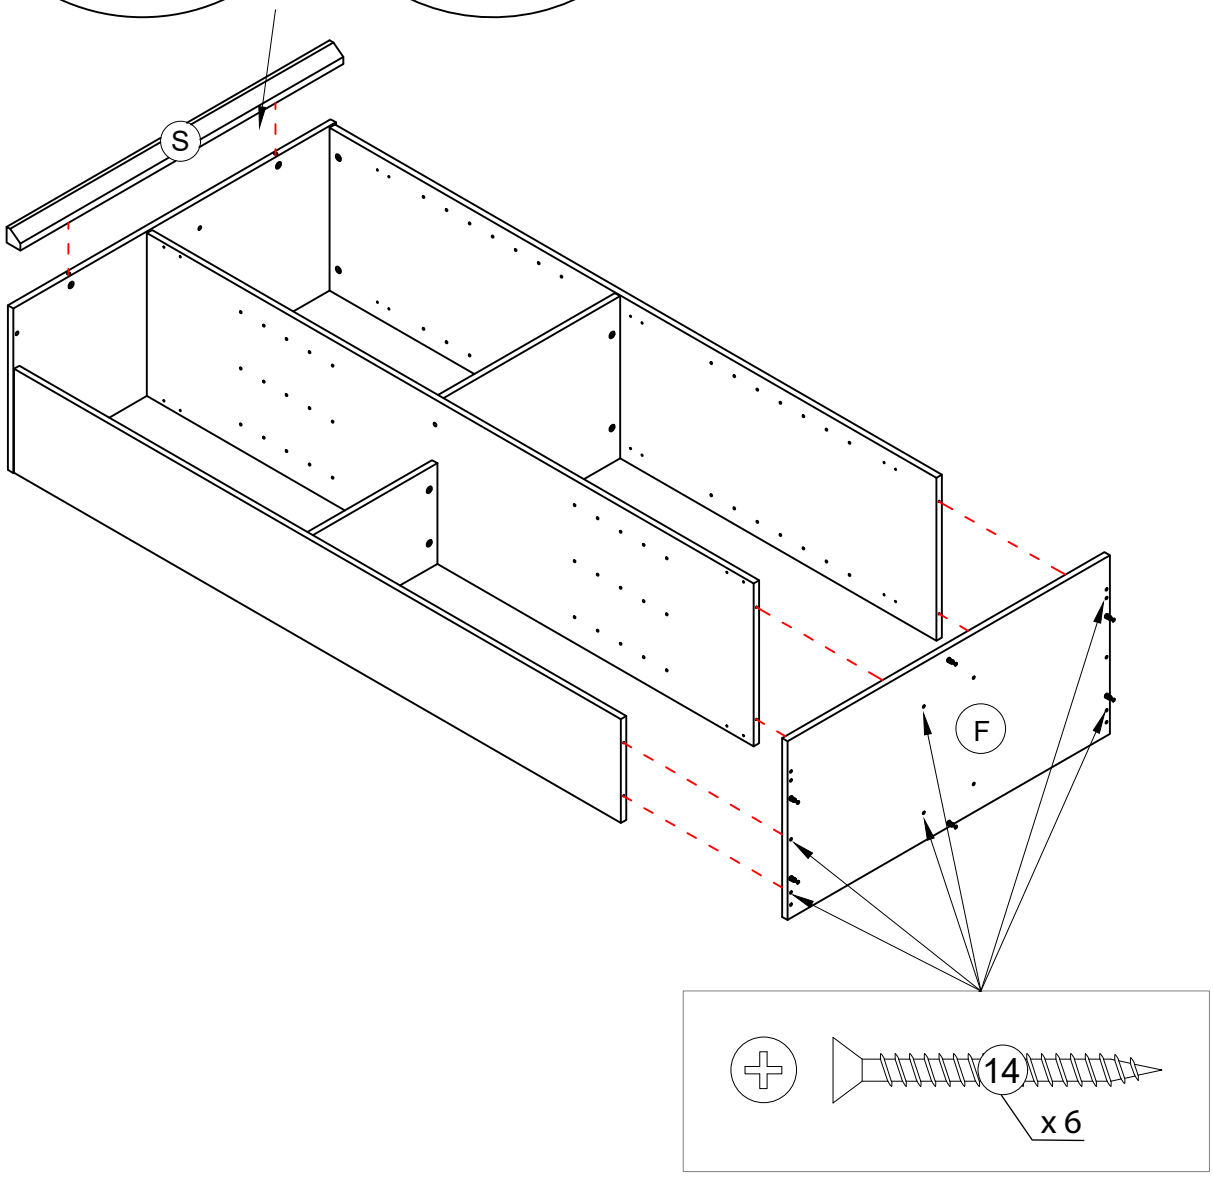


Step 34

LARGE DOOR OF RIGHT

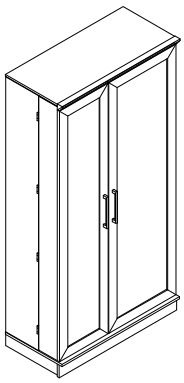


Step 35


LARGE DOOR OF RIGHT

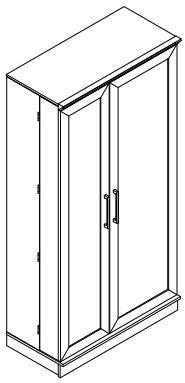

Step 36


LARGE DOOR OF RIGHT

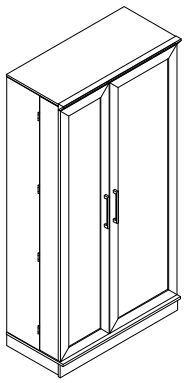


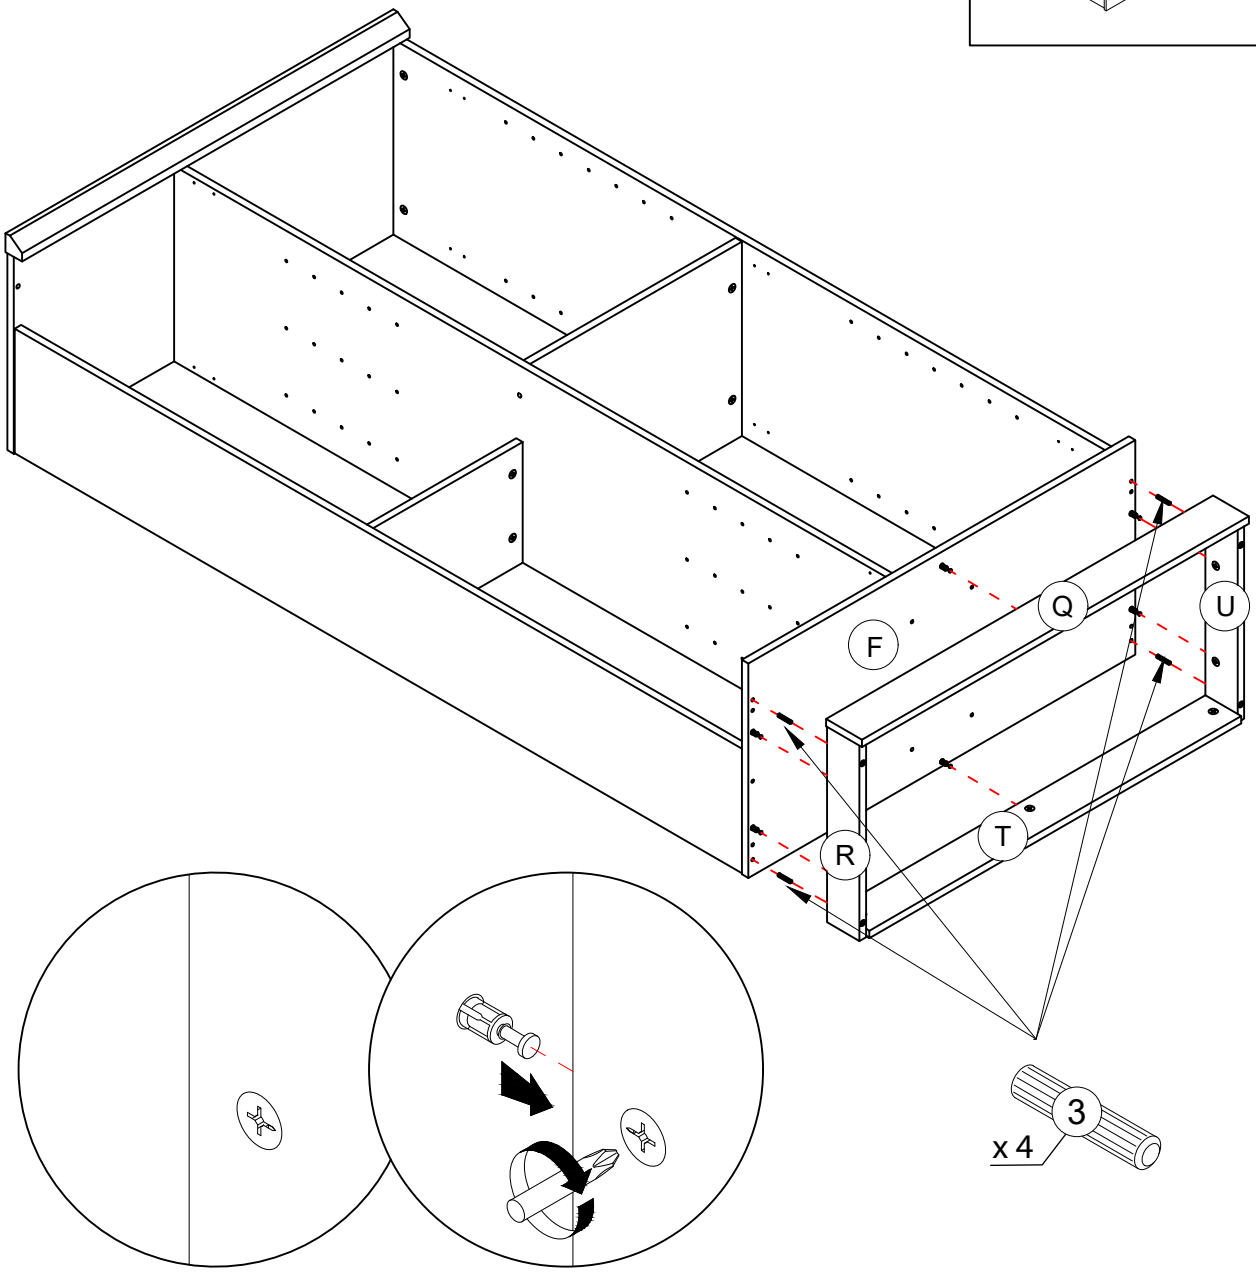

Step 37


LARGE DOOR OF RIGHT

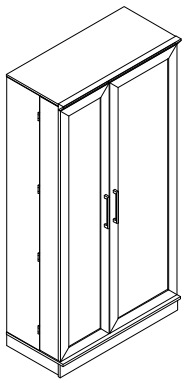


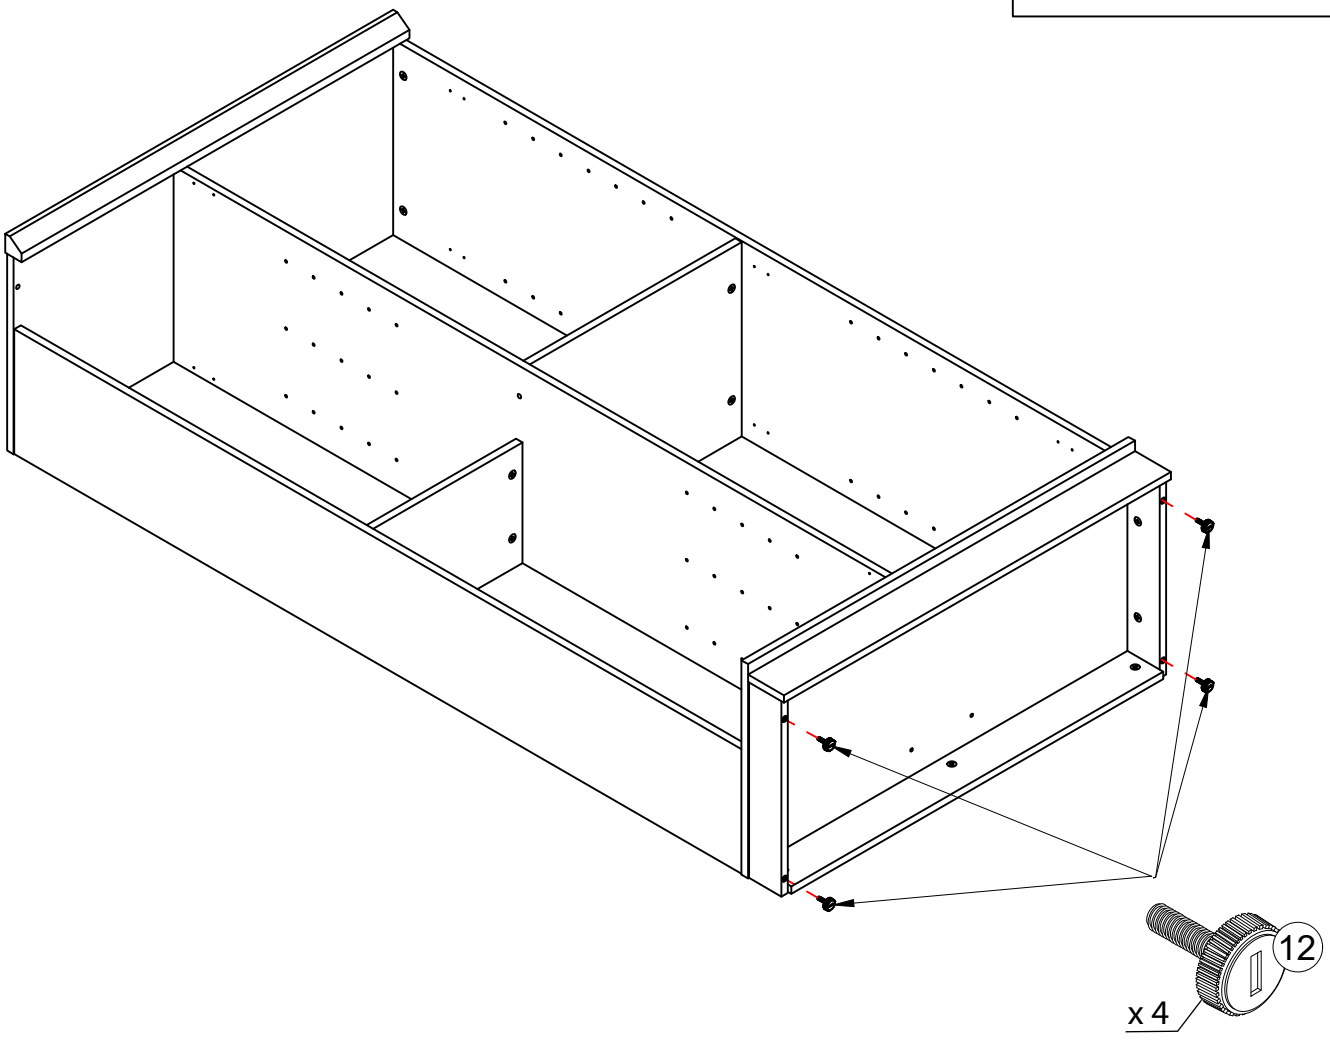


Step 38

LARGE DOOR OF RIGHT

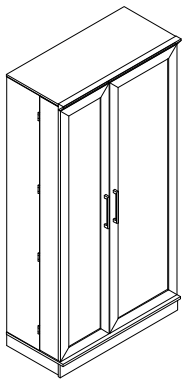


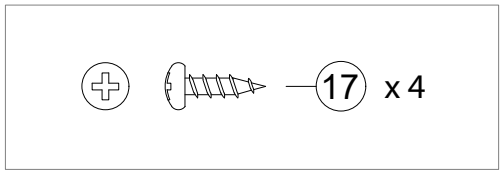


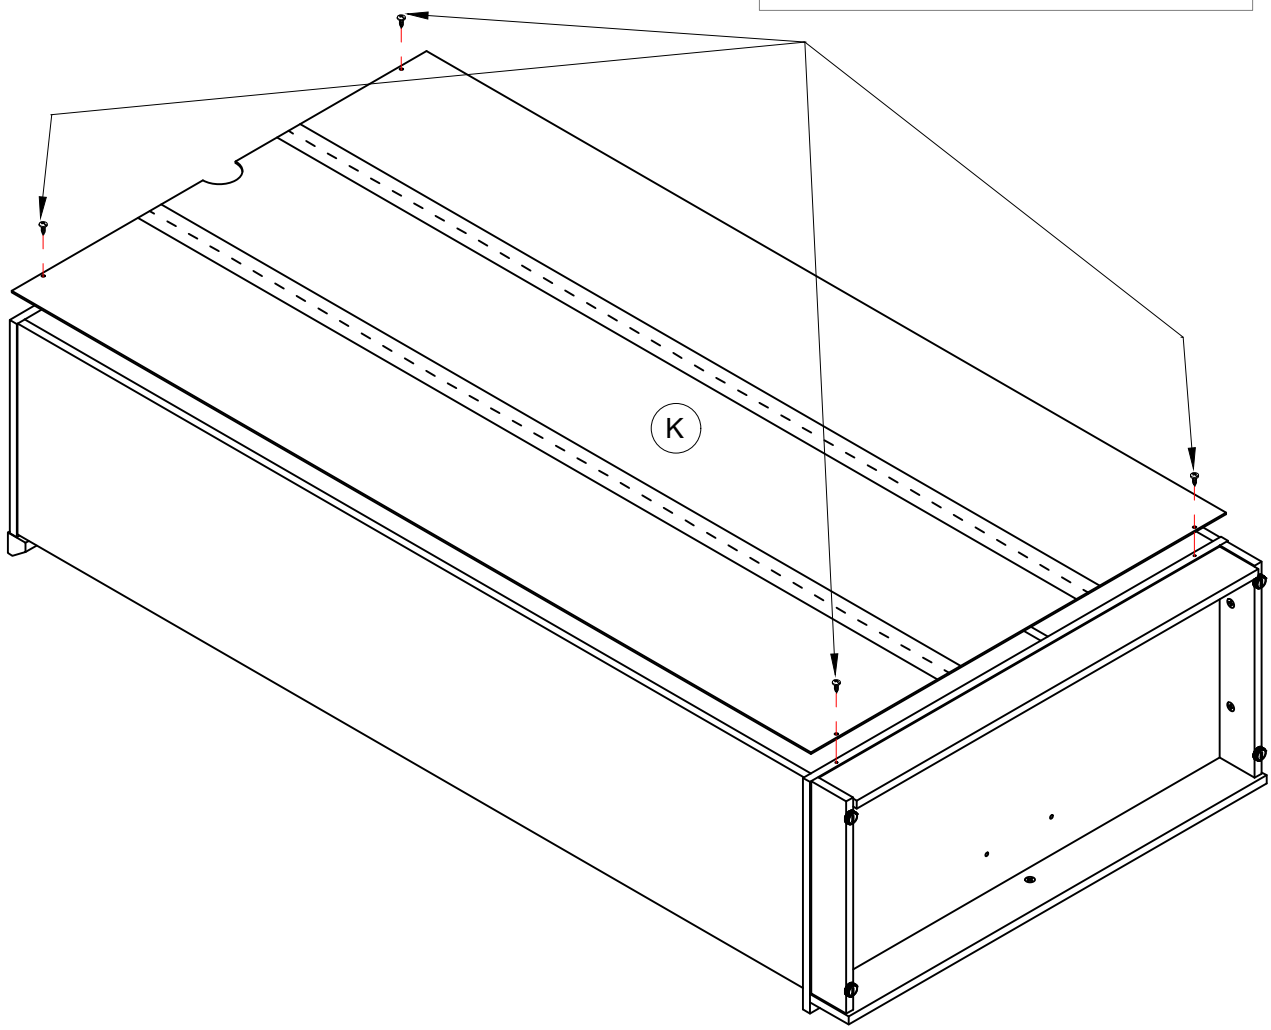



Step 39

LARGE DOOR OF RIGHT

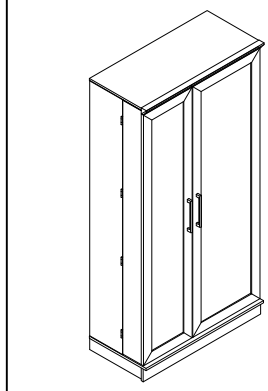

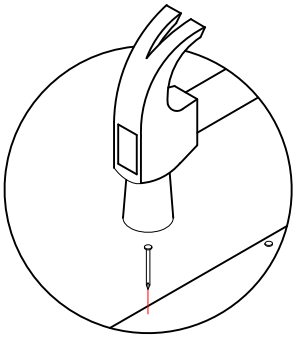


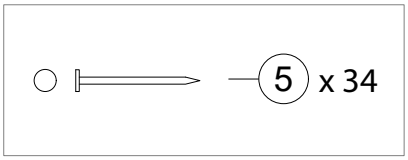

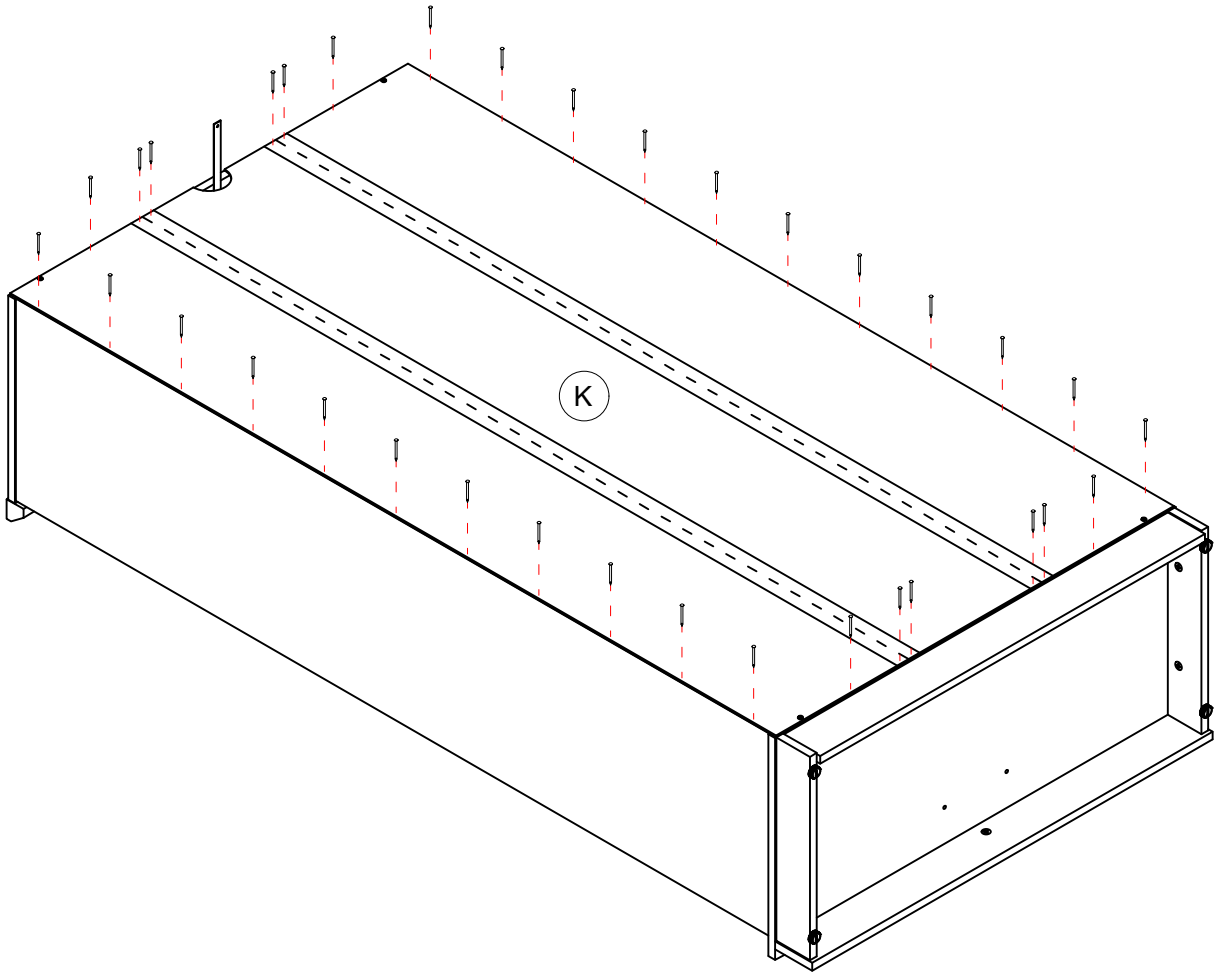


Step 40


LARGE DOOR OF RIGHT

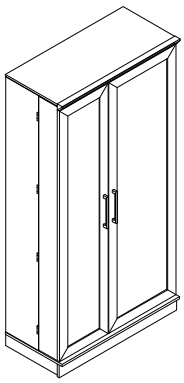

Step 41


LARGE DOOR OF RIGHT

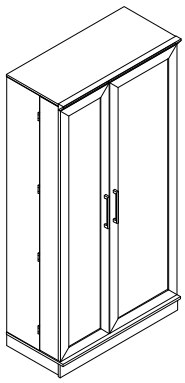


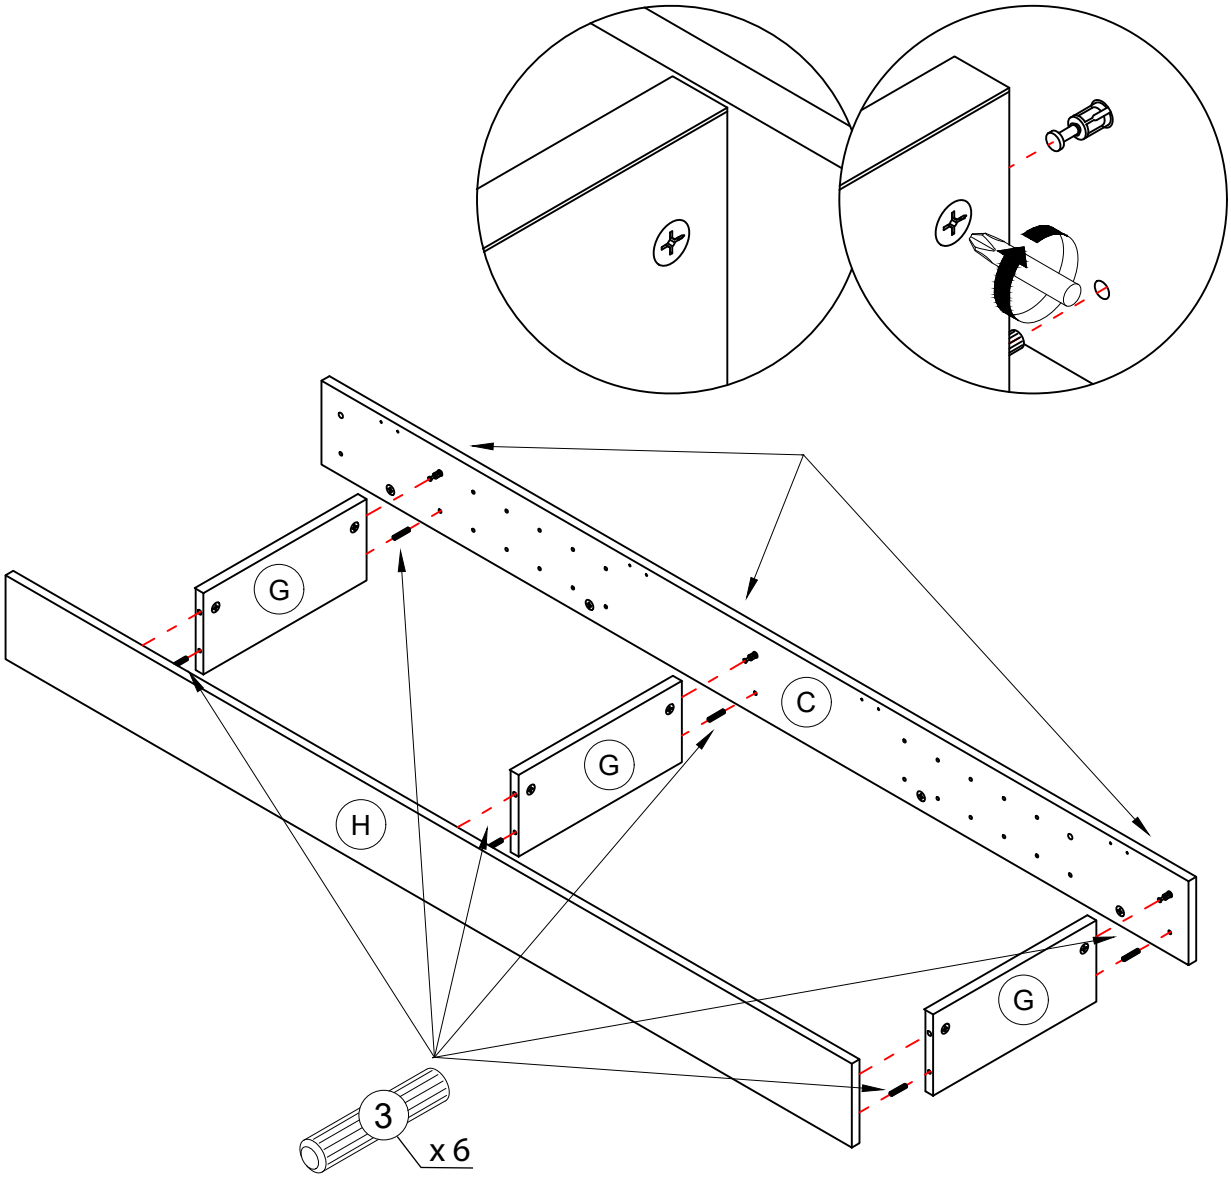

Step 42


LARGE DOOR OF RIGHT

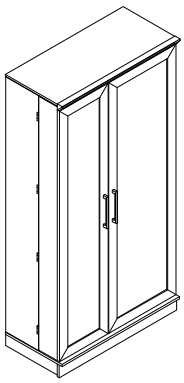


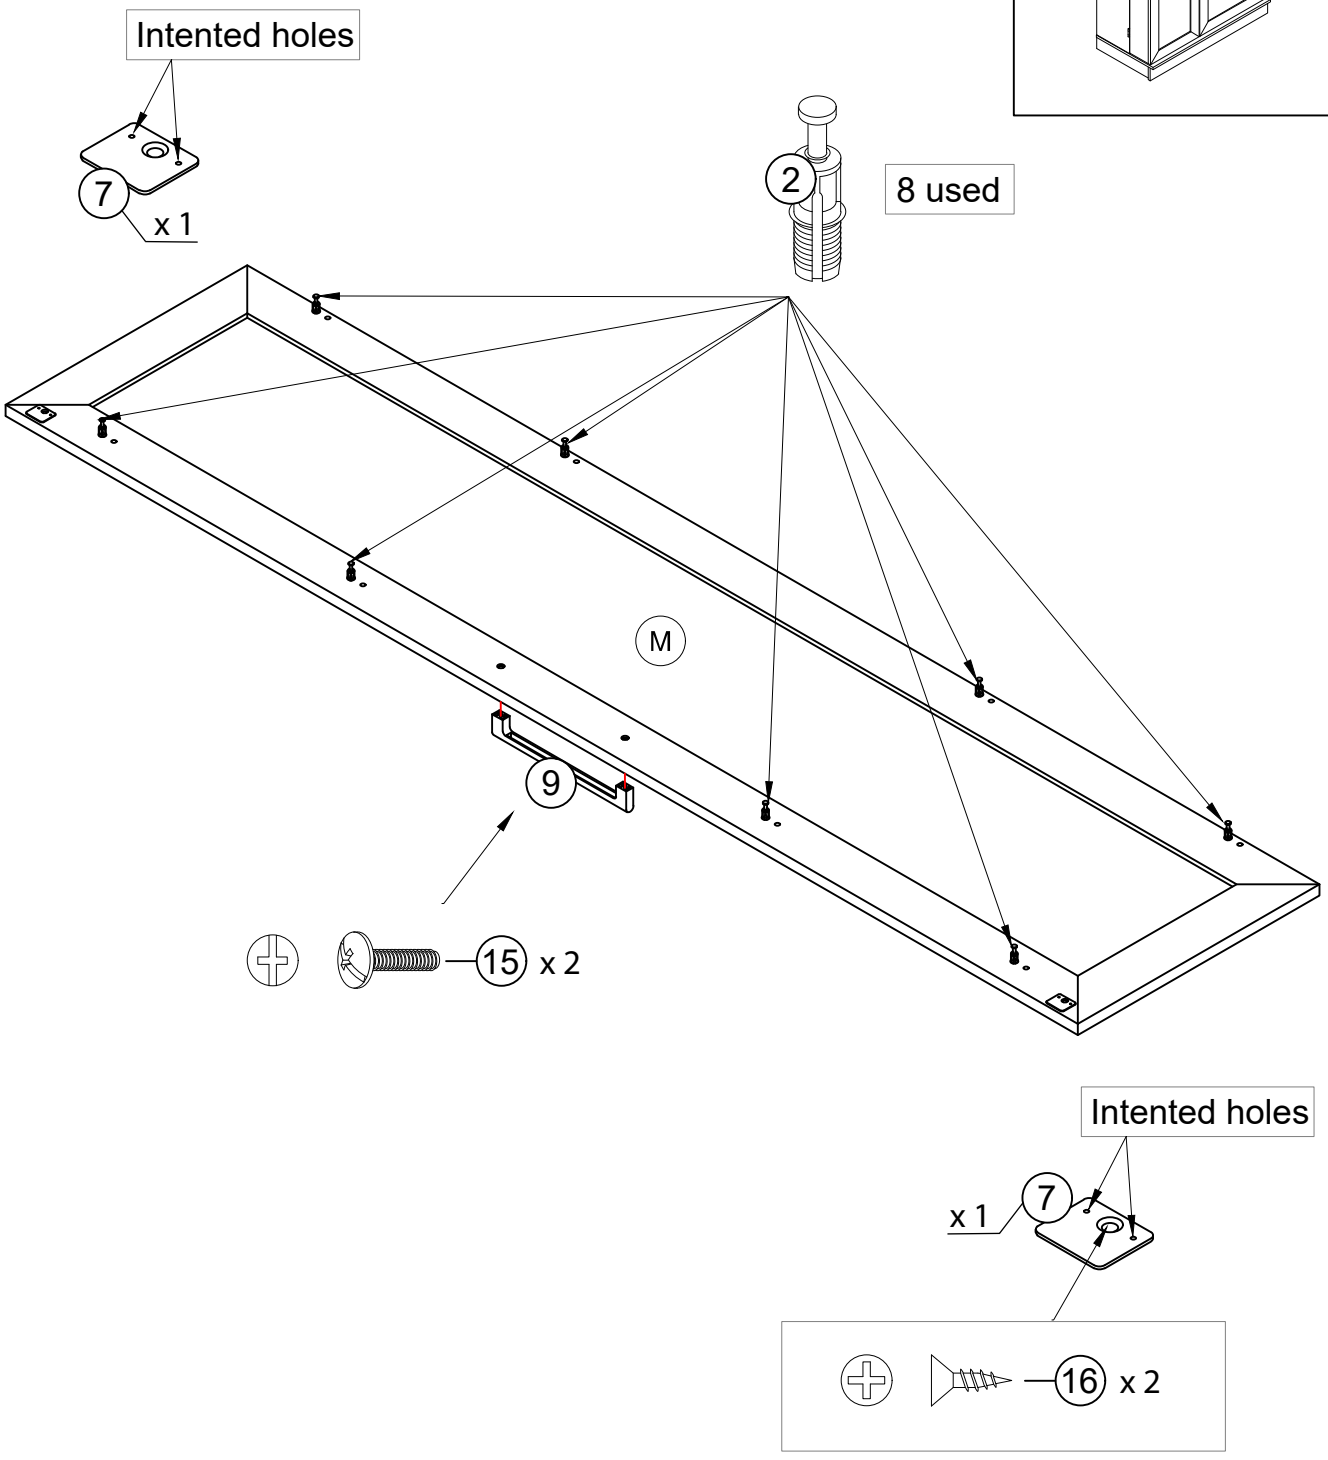



Step 43

LARGE DOOR OF RIGHT

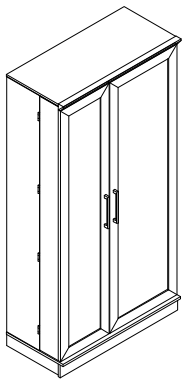

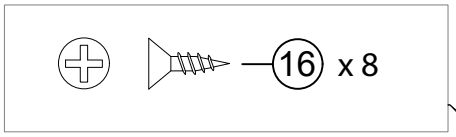


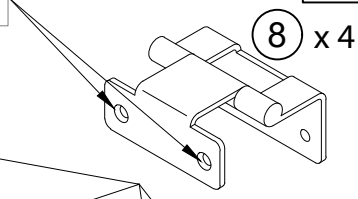


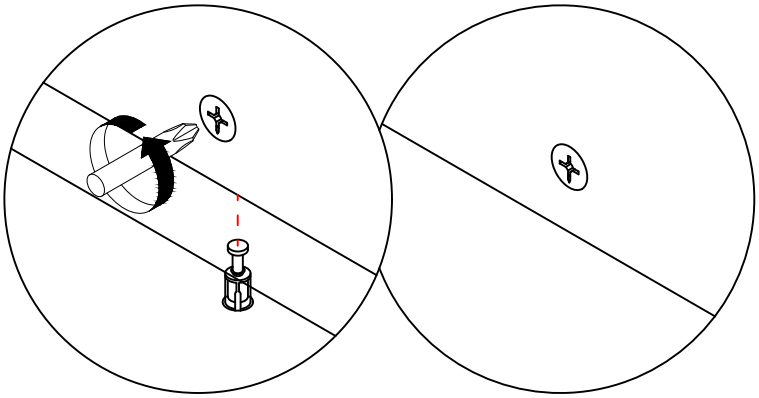



Step 44

LARGE DOOR OF RIGHT

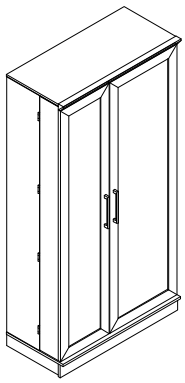


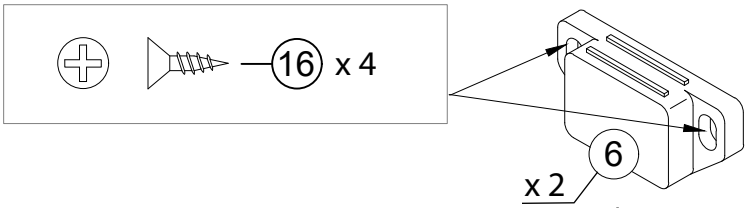

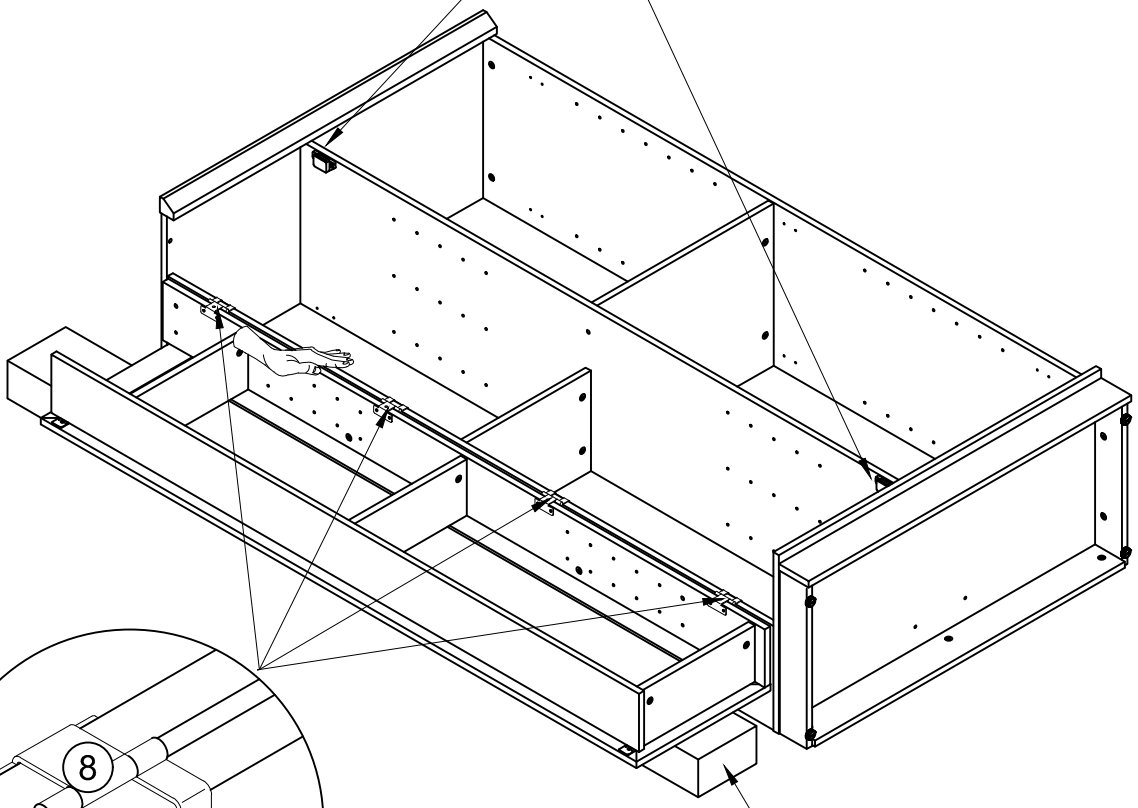

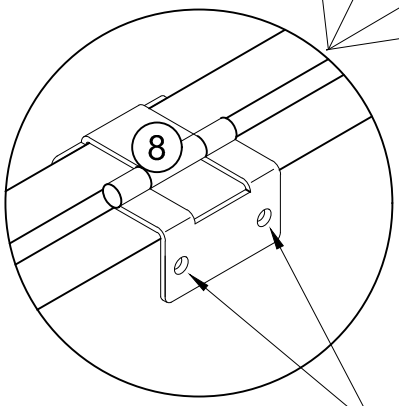



Place packing material, books or magazines underneath the SMALL DOOR for support.

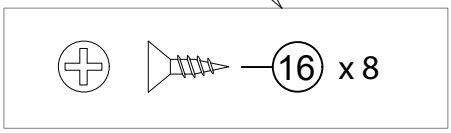

Step 45


LARGE DOOR OF RIGHT

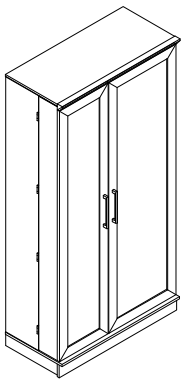


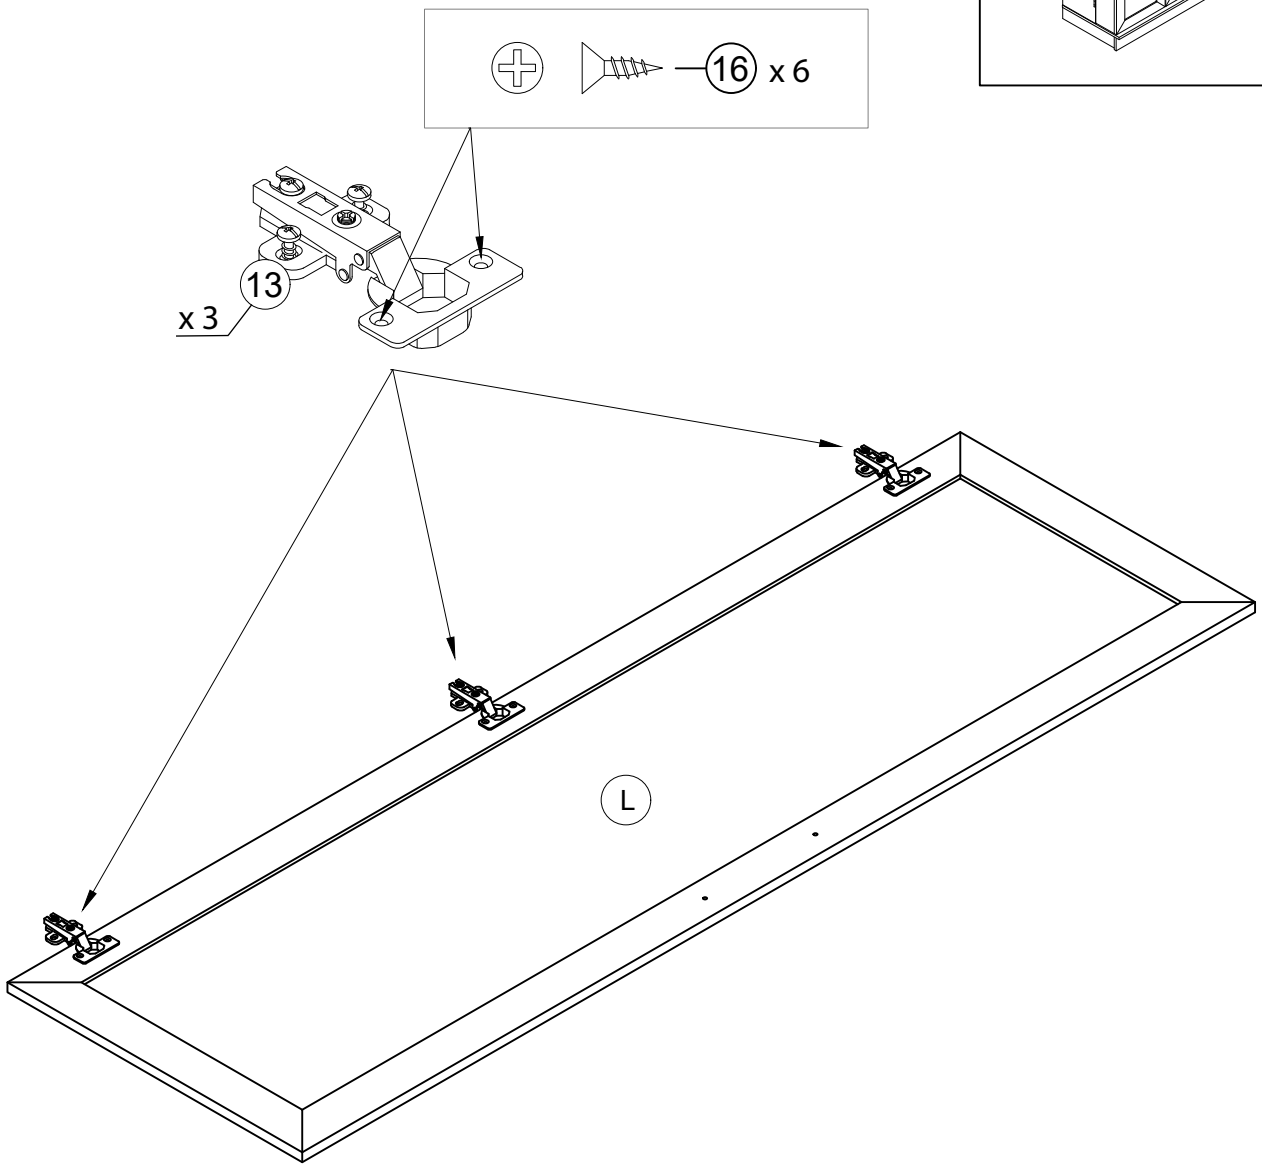

Step 46


LARGE DOOR OF RIGHT

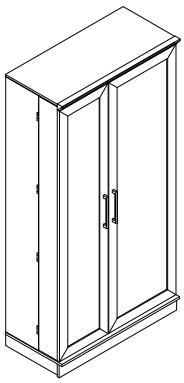


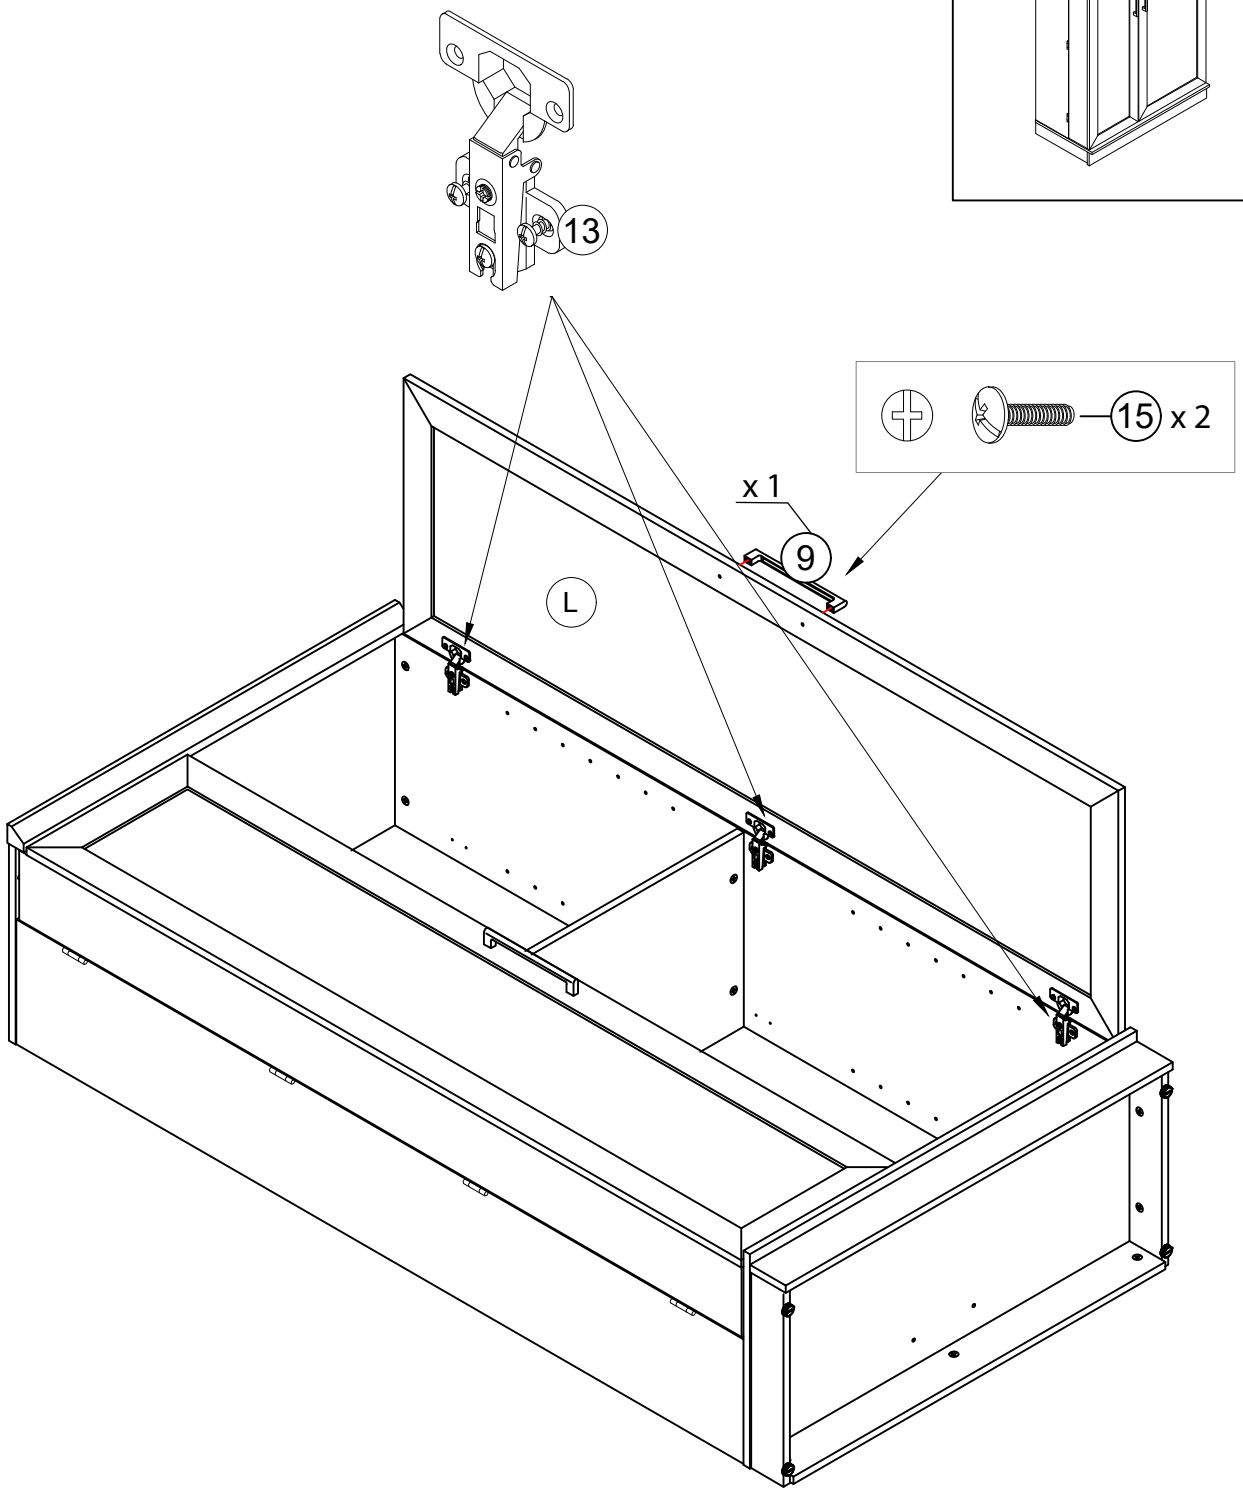


Step 47

LARGE DOOR OF RIGHT

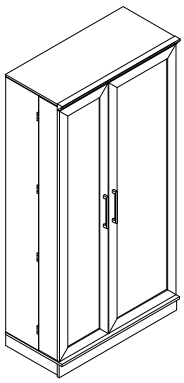


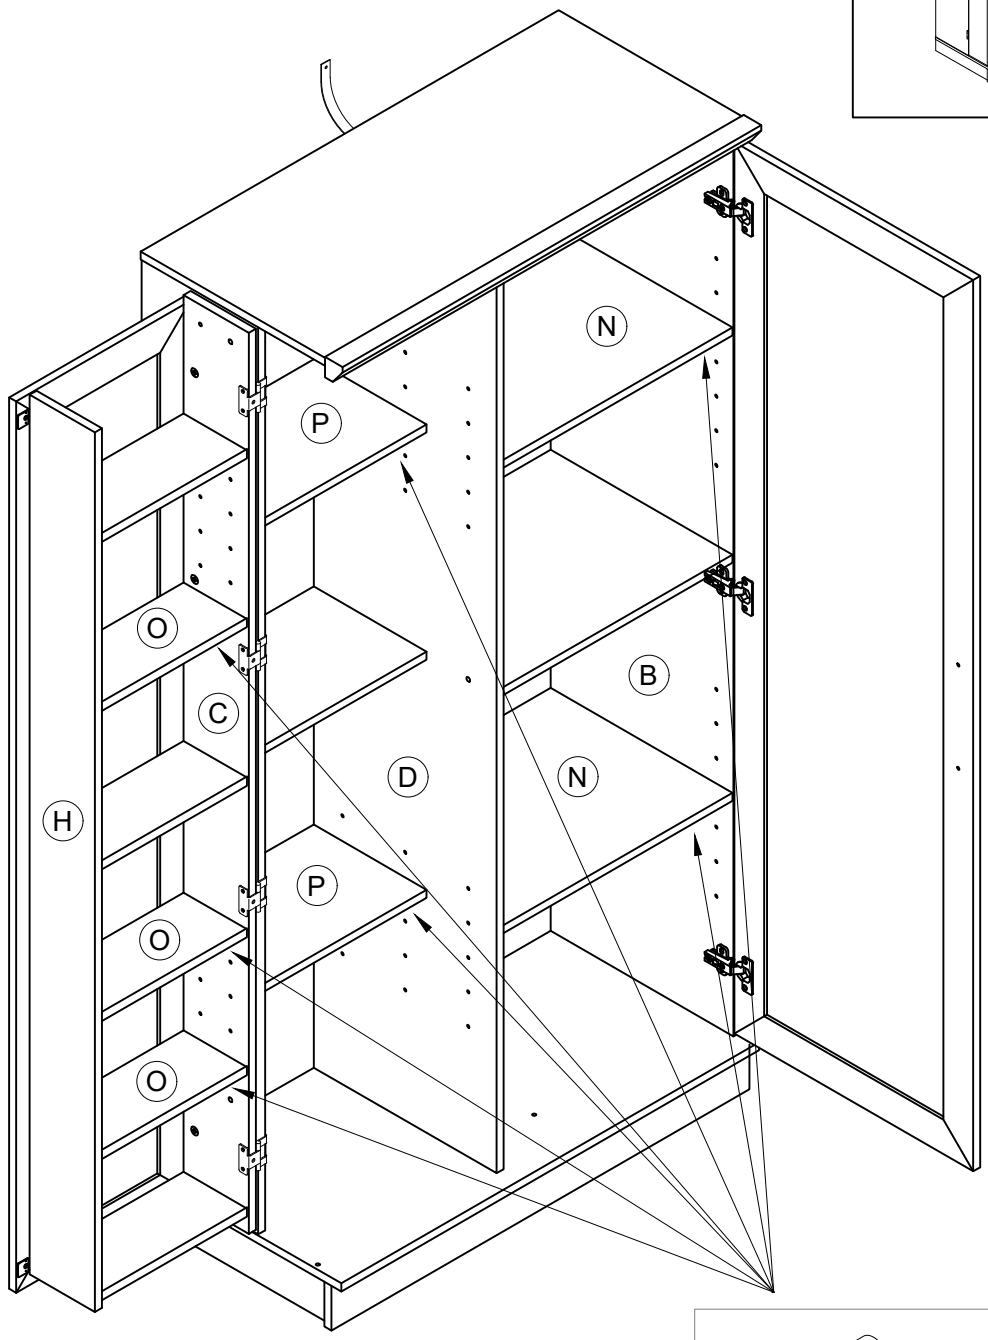


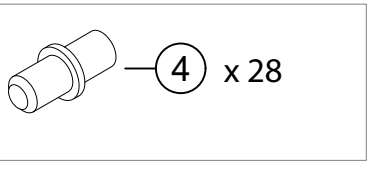

Step 48


LARGE DOOR OF RIGHT

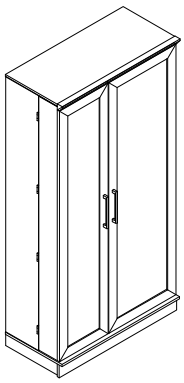

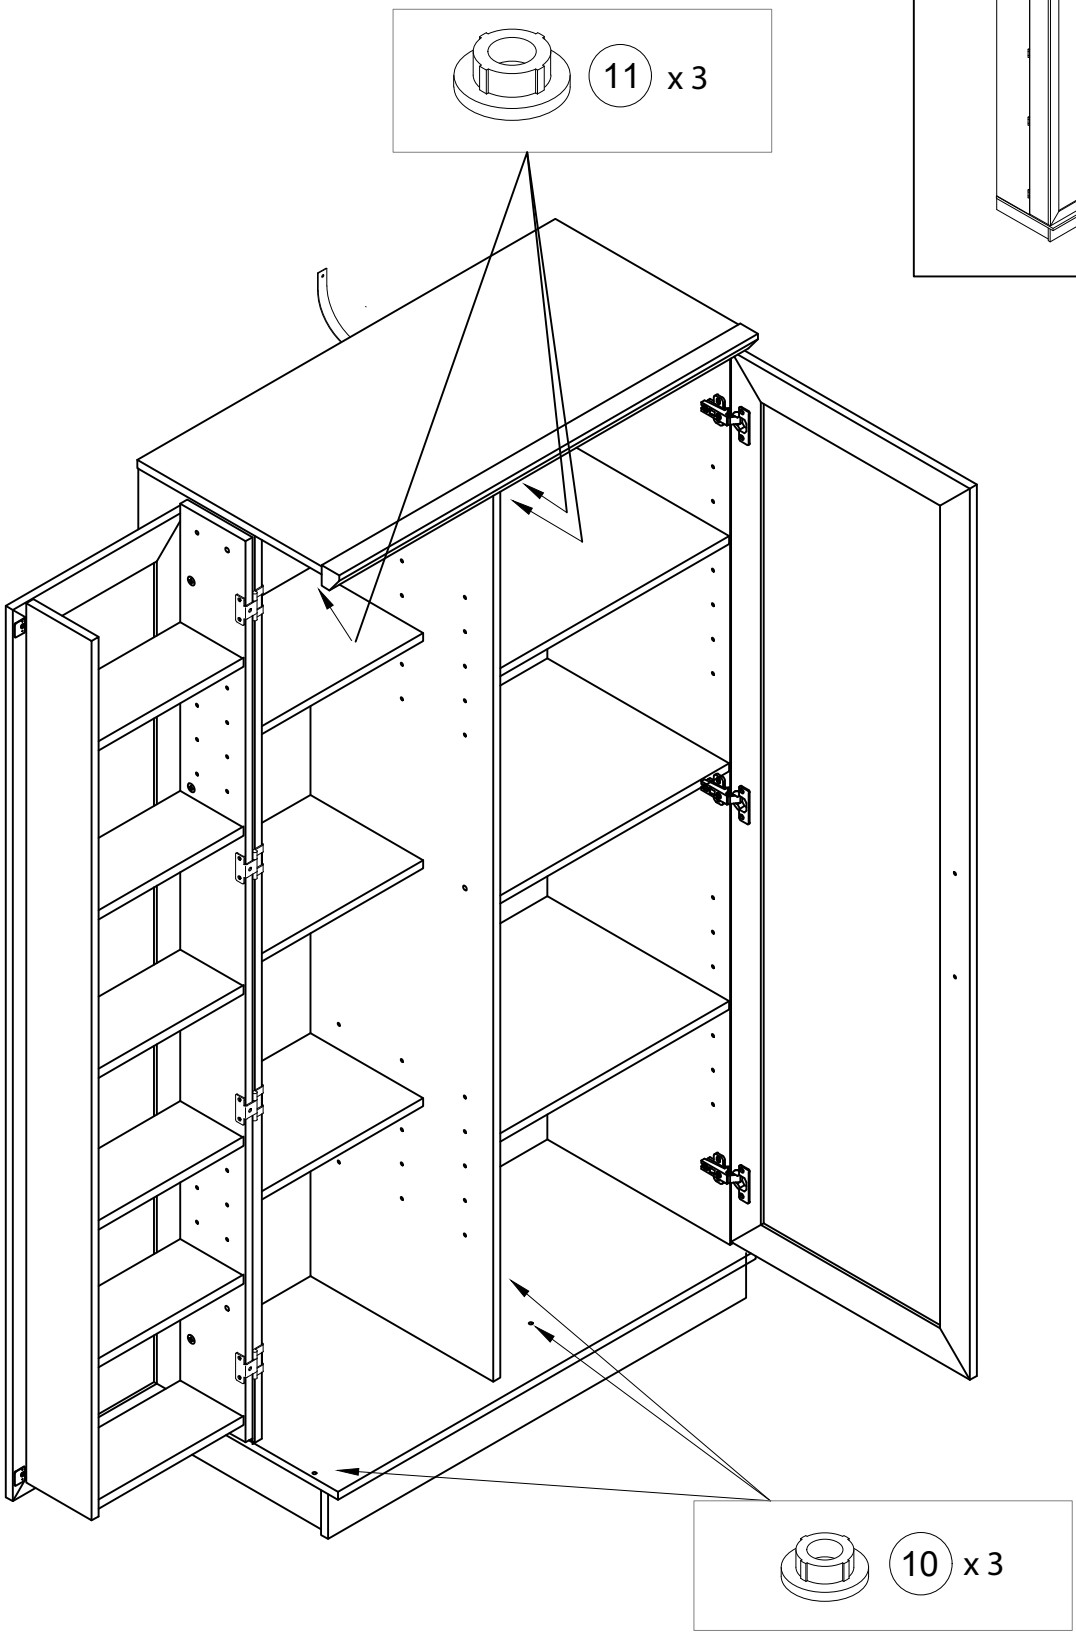


Step 49


LARGE DOOR OF RIGHT

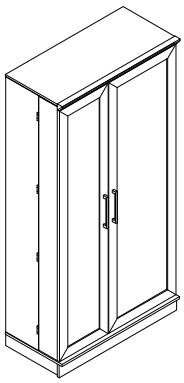



Electric drill with 1/8" bit

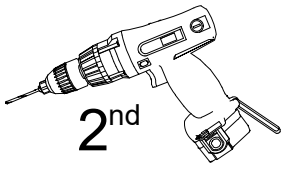

Mark and drill
a 1/8" hole
into the wall.

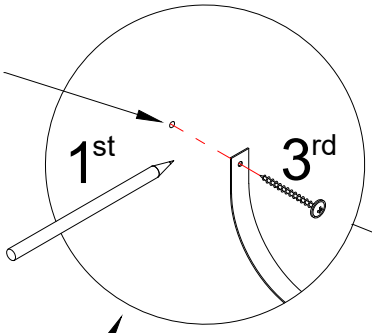


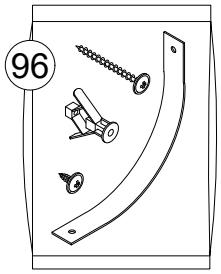

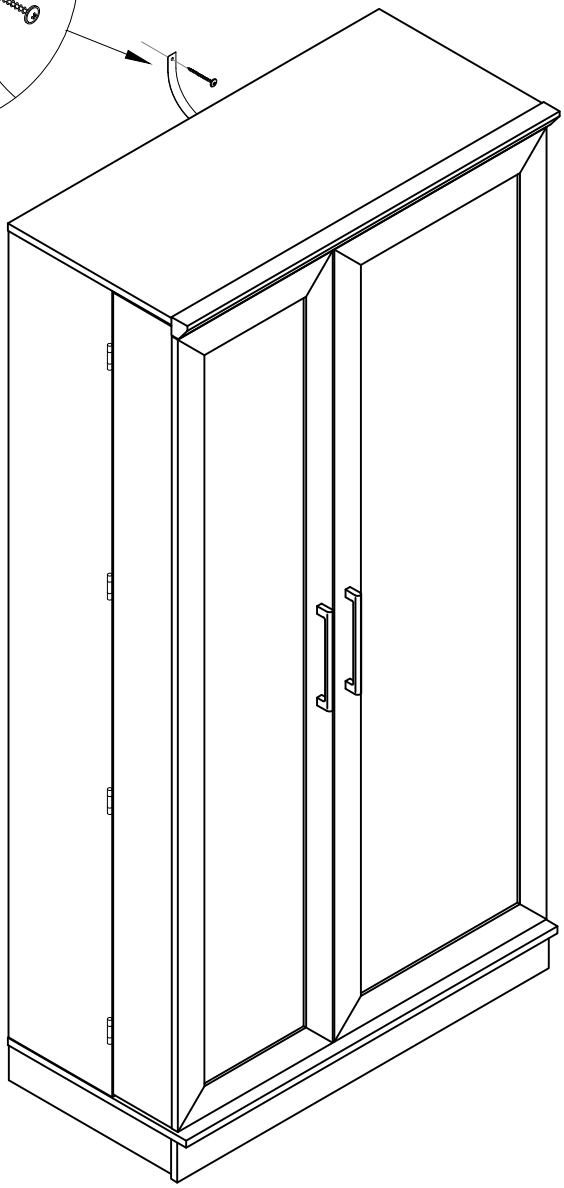


Step 50


LARGE DOOR OF RIGHT

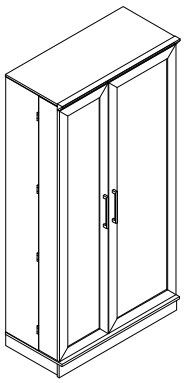



Electric drill with 3/8" bit

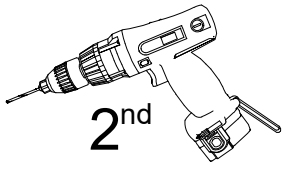


Mark and drill
a 3/8" hole
into the wall.

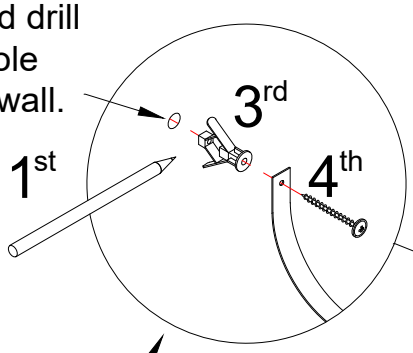

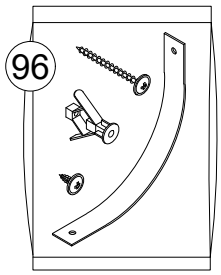

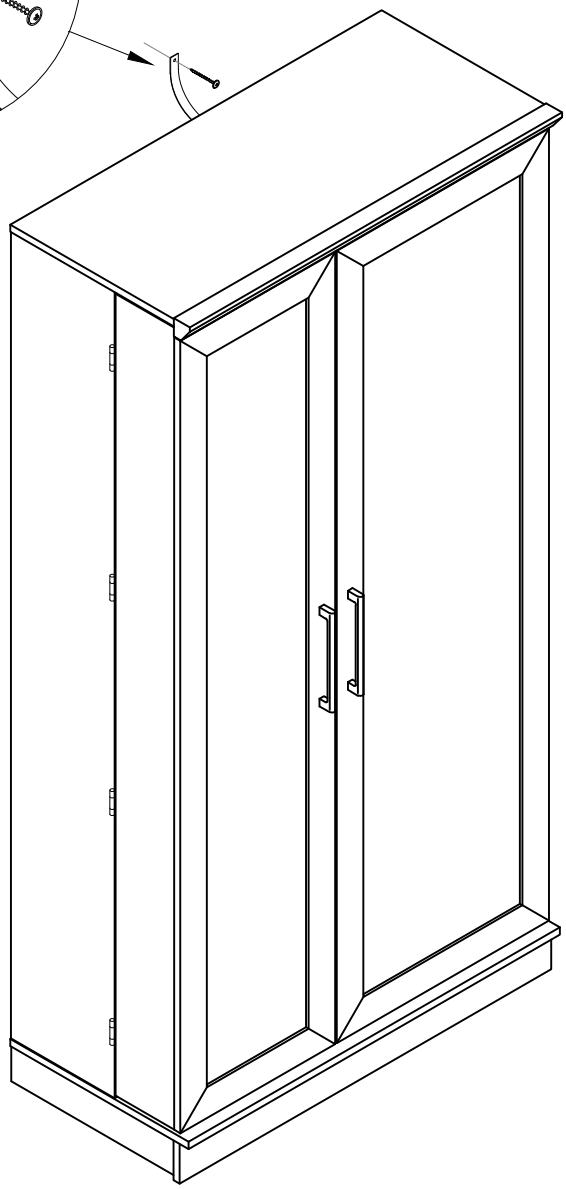

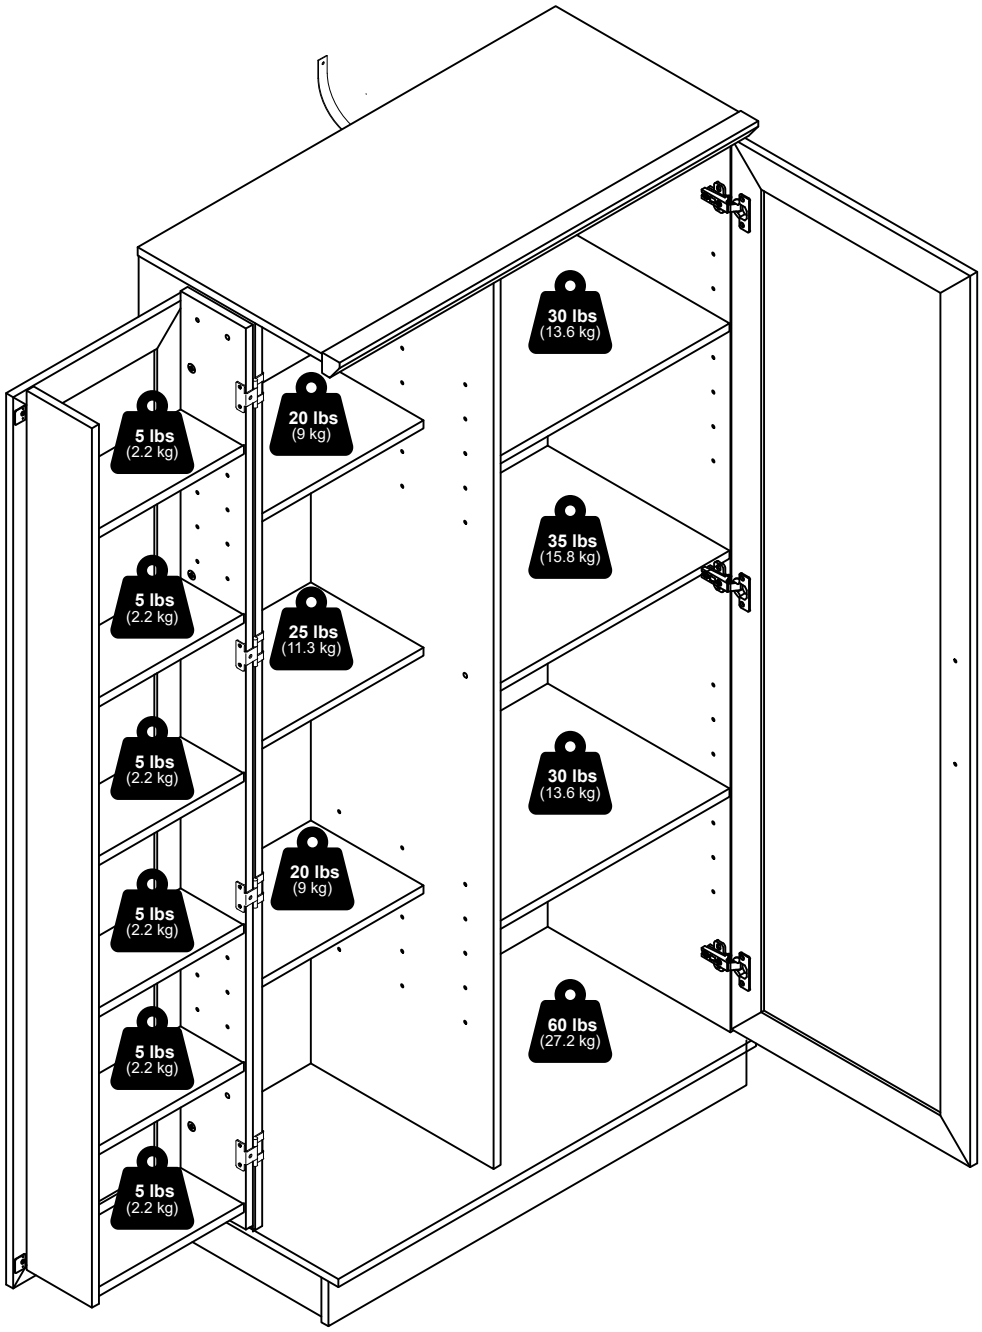
30 lbs
(13.6 kg)
20 lbs
(9 kg)
5 lbs
(2.2 kg)
35 lbs
(15.8 kg)
5 lbs
(2.2 kg)
25 lbs
(11.3 kg)
5 lbs
(2.2 kg)
30 lbs
(13.6 kg)
20 lbs
(9 kg)
5 lbs
(2.2 kg)
5 lbs
(2.2 kg)
60 lbs
(27.2 kg)
5 lbs
(2.2 kg)