


6 x 4 Metal Garden Shed_16017GR

Instructions for Assembly

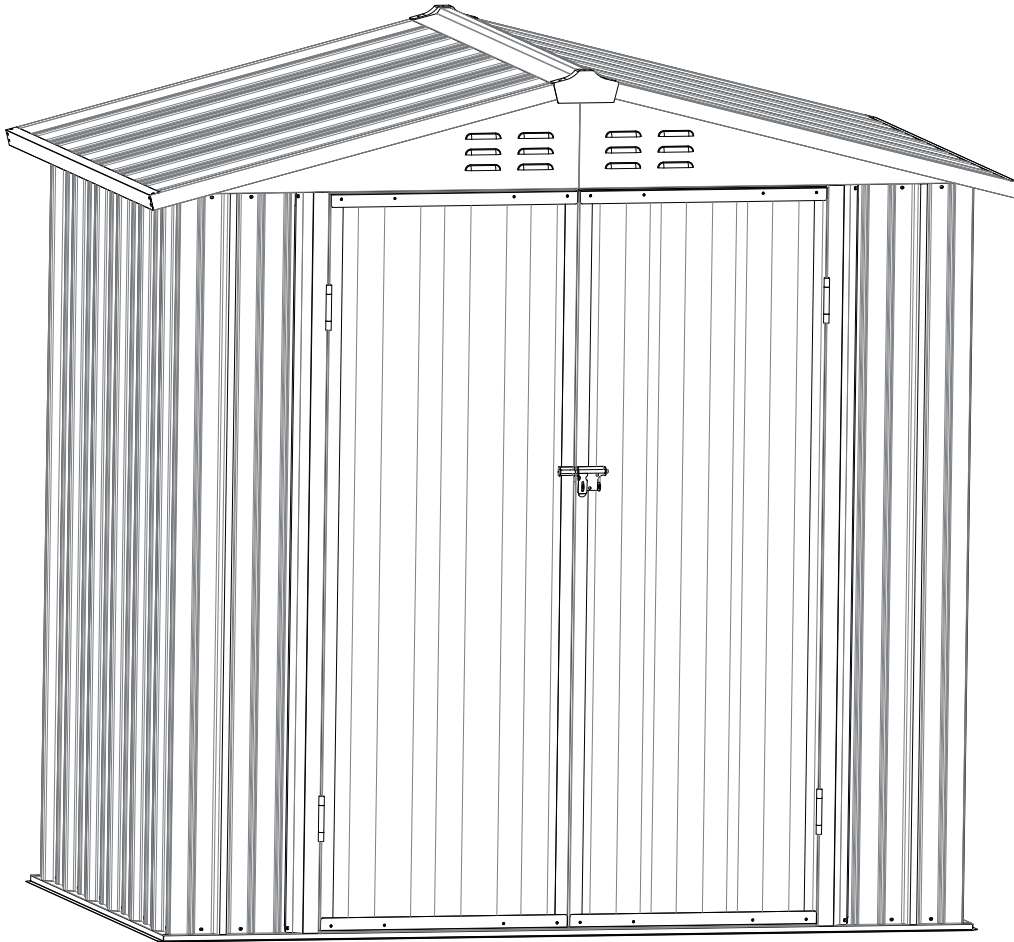

Requires two people and takes 2-3 hours for Installation.

You will receive totally 2 boxes, please make sure you get 1x (A) box and 1x (B) box before assembly. Just feel free to contact us if you have any problem, we will try our best to help you solve the issue.

Tall Walk in Shed

Quick & Easy Assembly

Ridge Reinforced Walls

Available in Various Sizes

PLAN AHEAD

Before beginning installation, check local building codes regarding footings, location and other requirements.

Study and understand this instruction.

Important information and helpful tips will make your installation easier and more enjoyable.


Tools and Materials: There are some basic tools and materials you will need for the installation. Decide which method of anchoring and the type of foundation you wish to use in order to form a complete list of the materials you will need.

BEFORE YOU BEGIN








Assembly Instruction: Instructions are supplied in this manual and contain all appropriate information for your installation. Review all instructions before you begin, and during assembly, follow the step sequence carefully for correct results.




Parts List: Check to be sure that you have all the necessary parts and quantities in your package. These are packaged within the carton. Note that extra fasteners have been supplied for your convenience.

Explosion Diagram: All parts except screws and bolts are shown in this diagram, review all parts before you begin. Familiarize yourself with the hardware and fasteners for easier use during installation.

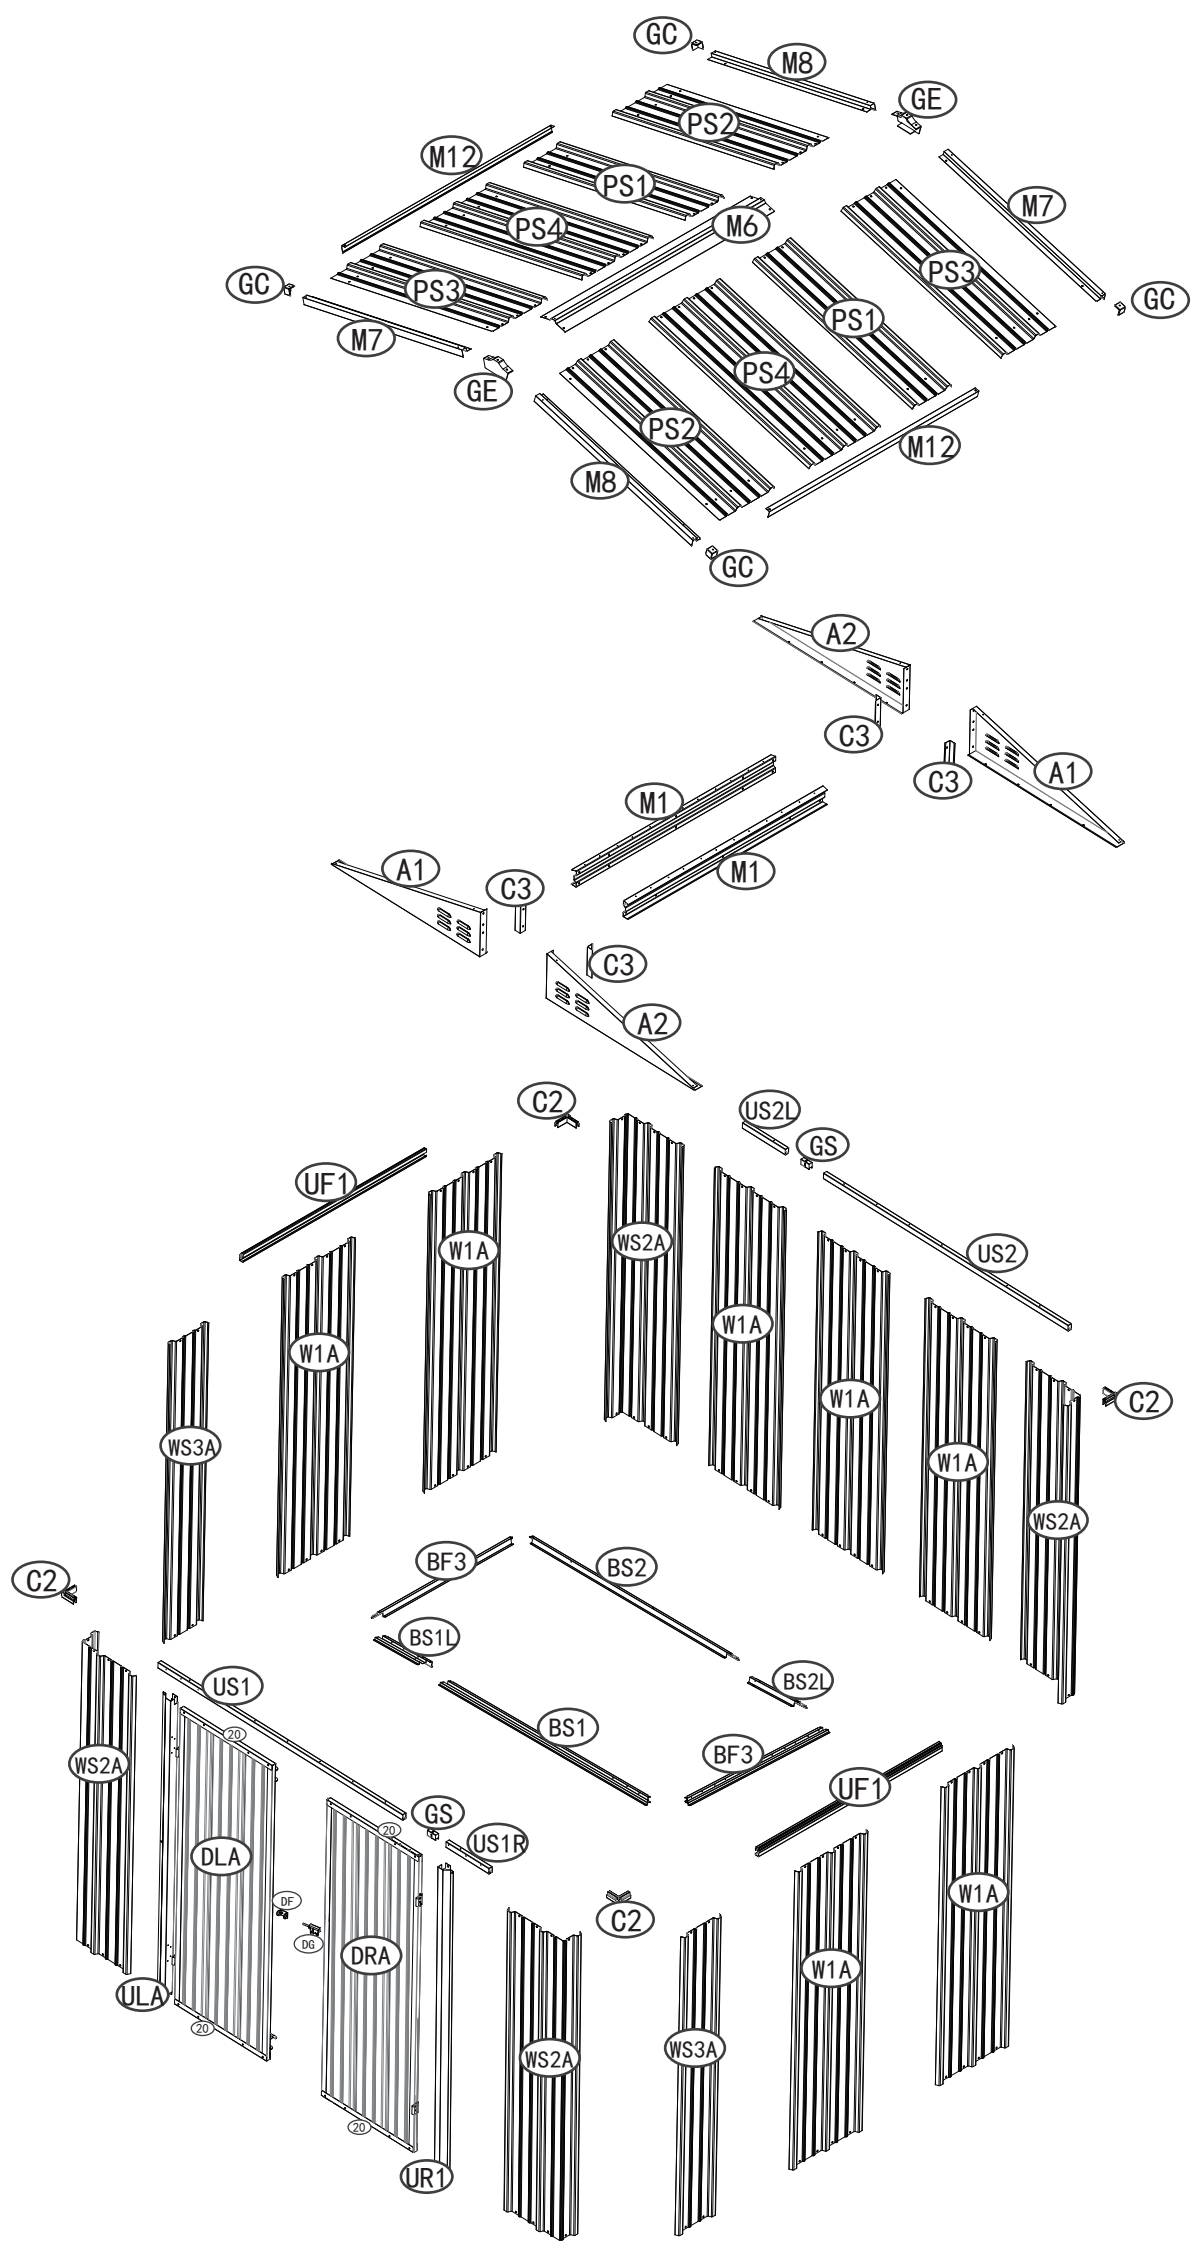


parts list


PART	NO.	Qty.
	A1	2
	A2	2
	BS1	1
	BS1L	1
	BS2	1
	BS2L	1
	BF3	2
	C2	4
	C3	4
	DRA	1
	DLA	1
	US1	1
	US1R	1
	US2	1
	US2L	1
	UF1	2
	ULA	1
	DC	2
	V1	50
	V2	200
	UR1	1
	20	4
	DG	1

PART	NO.	Qty.
	W1A	7
	WS2A	4
	WS3A	2
	PS1	2
	PS2	2
	PS3	2
	PS4	2
	M1	2
	M6	1
	M7	2
	M8	2
	M12	2
	GC	4
	GE	2
	GS	2
	F1	208
	F2	14
	F3	32
	DH	4
	DX2	4
	F4	5
	DF	1




PART	NO.	Qty.
	BS1	1
	BS1L	1
	F1	2
	V2	2

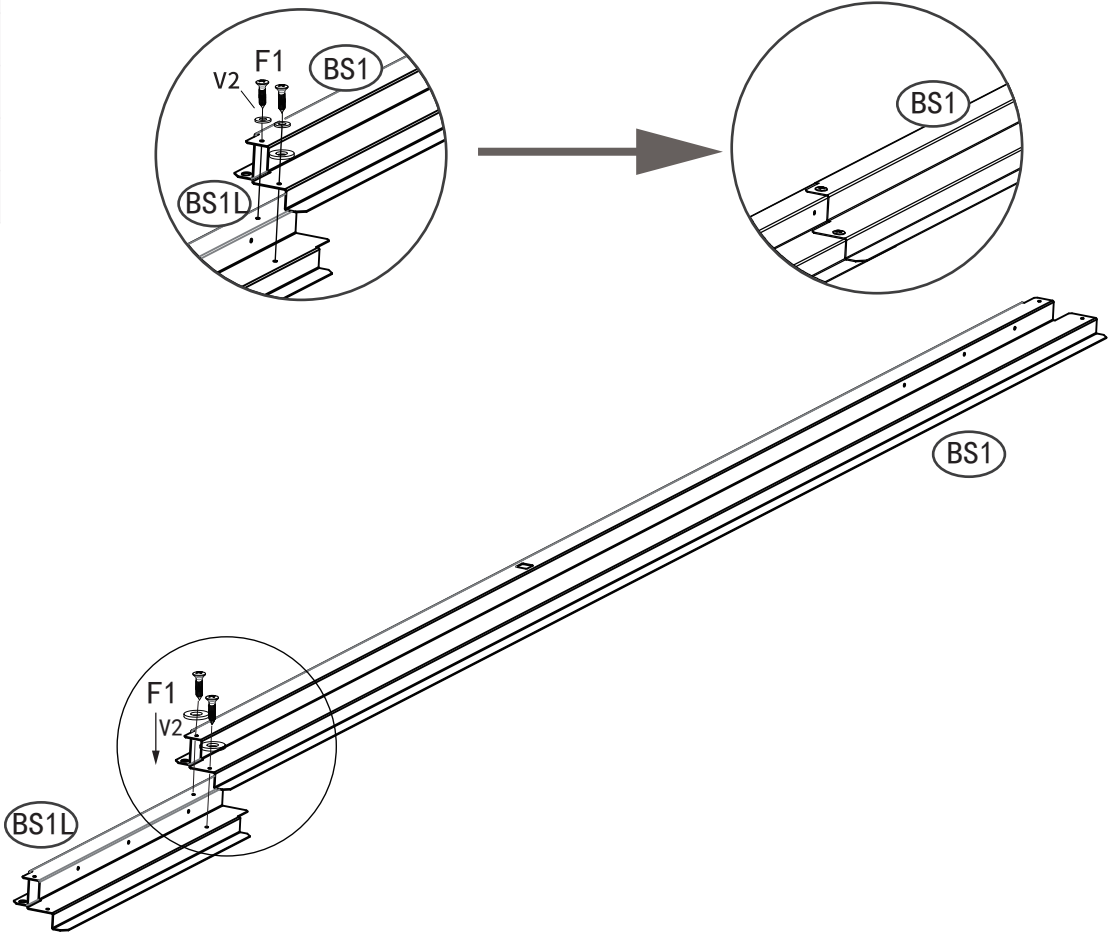




PART	NO.	Qty.
	BS2	1
	BS2L	1
	F1	2
	V2	2

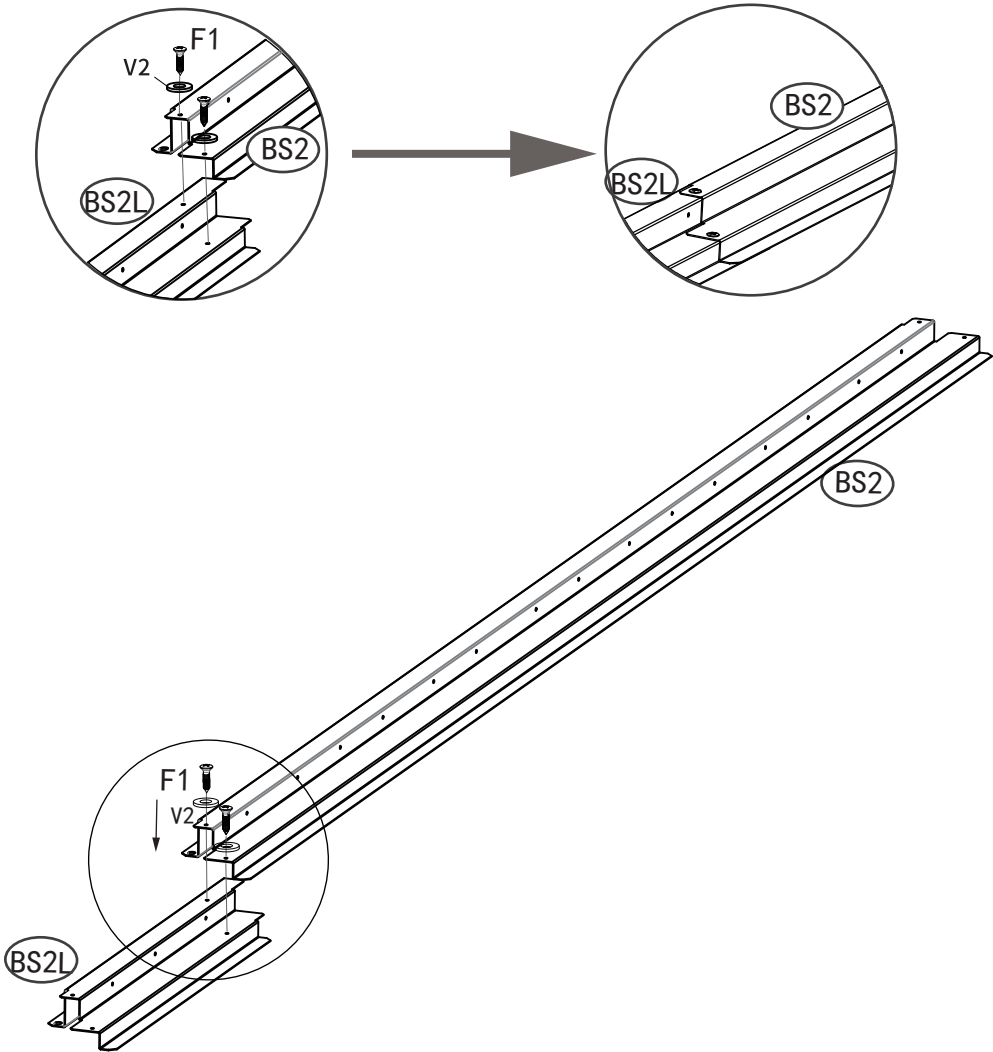


PART	NO.	Qty.
	BF3	1
	F1	4
	V2	4

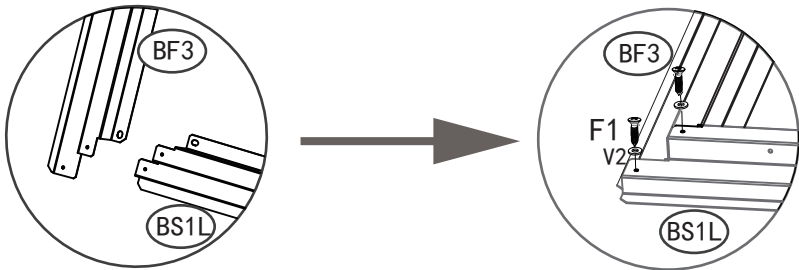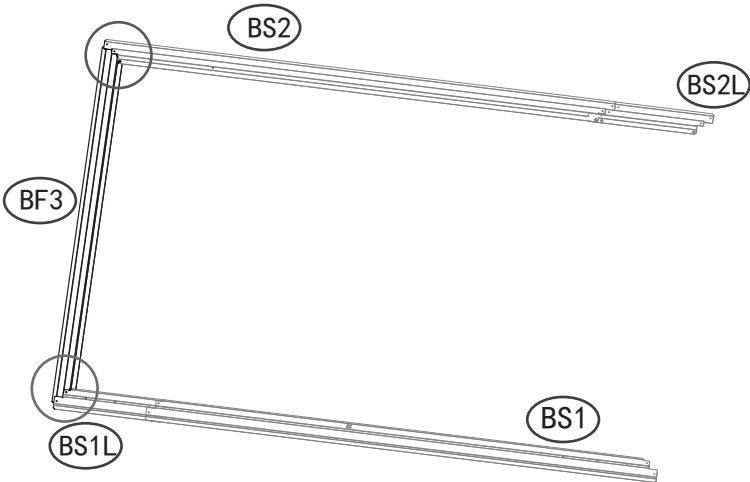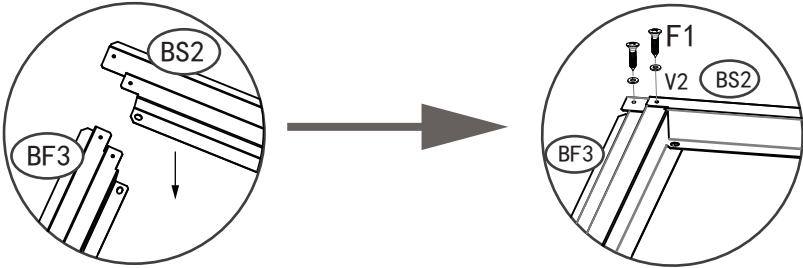


PART	NO.	Qty.
	BF3	1
	F1	4
	V2	4

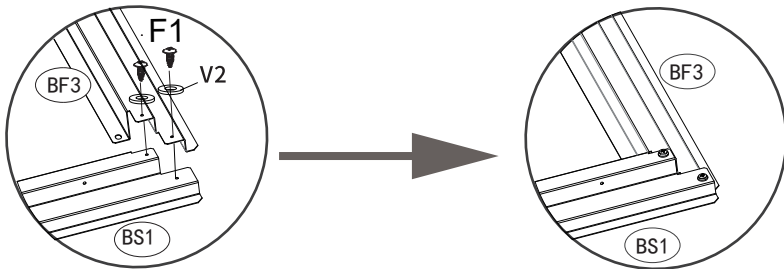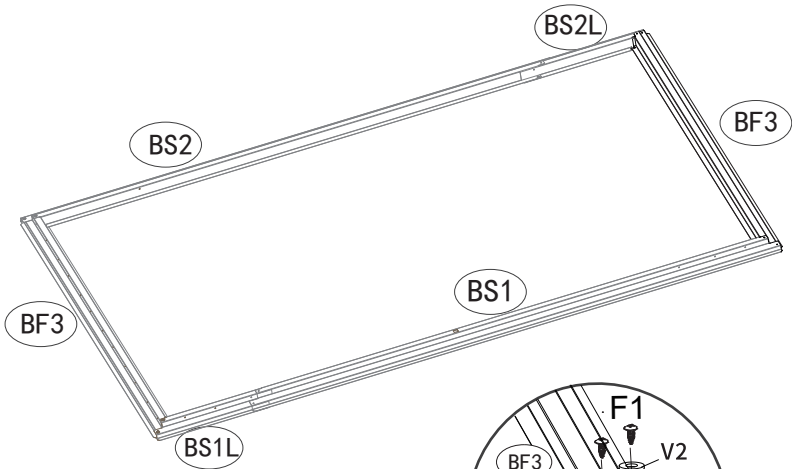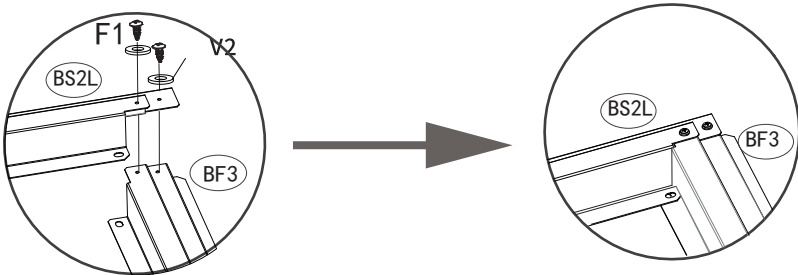


PART	NO.	Qty.
	WS2A	1
	F1	3
	V2	3

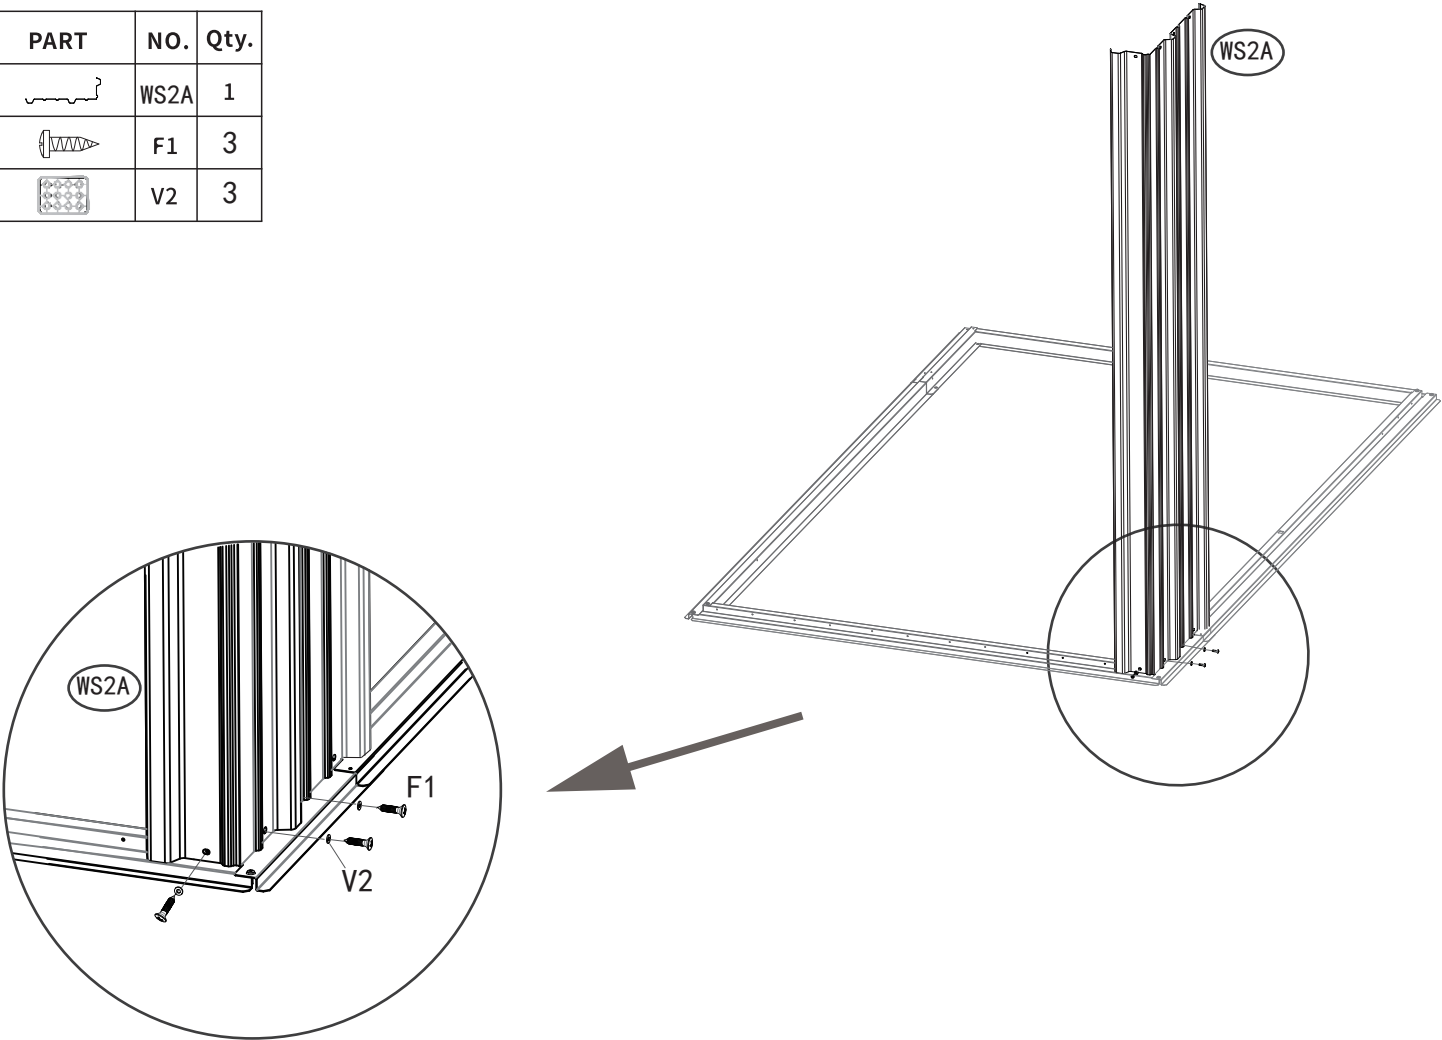


PART	NO.	Qty.
	WS2A	1
	F1	3
	V2	3

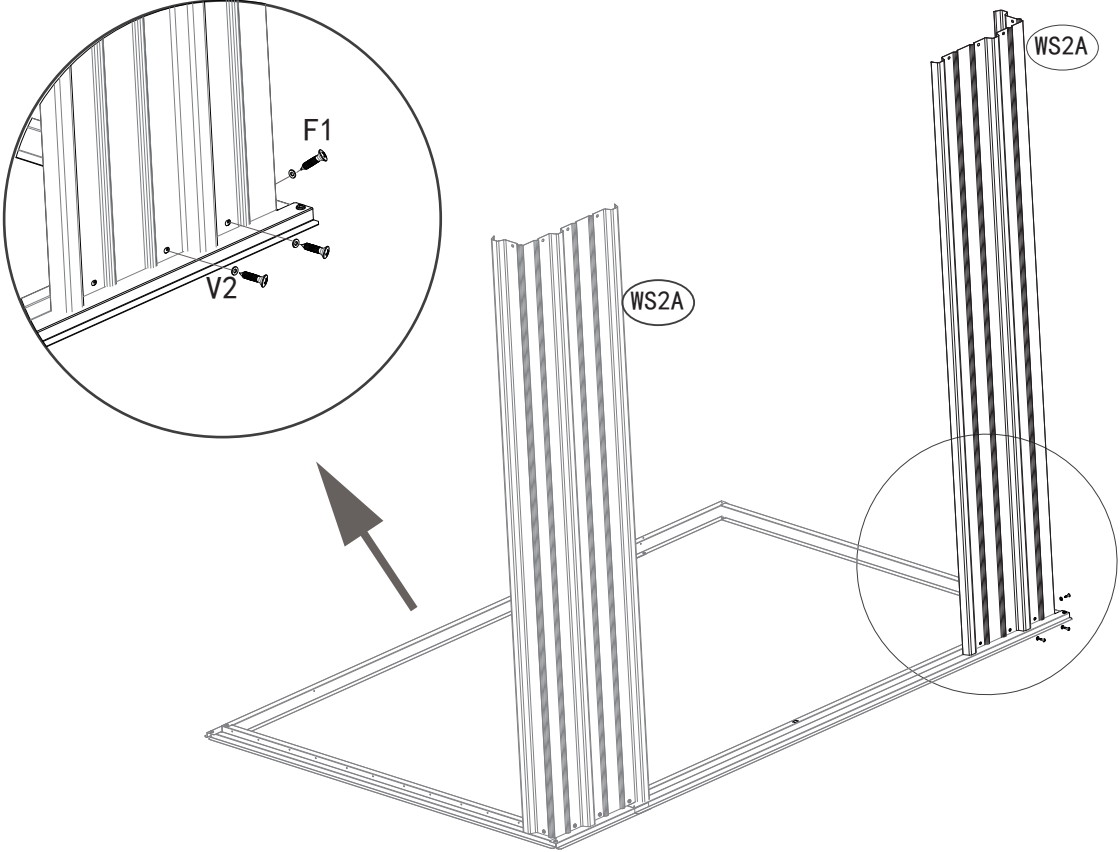




PART	NO.	Qty.
	WS2A	1
	F1	4
	V2	4

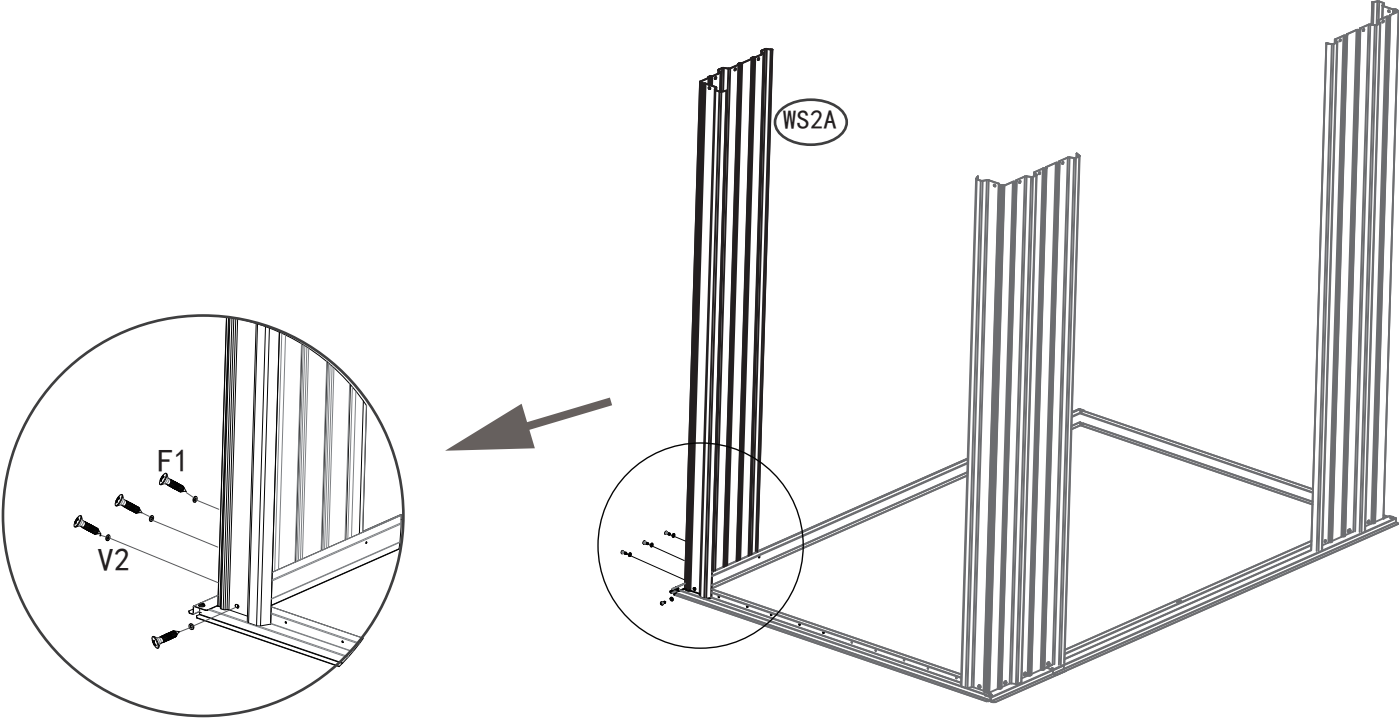




PART	NO.	Qty.
	WS2A	1
	F1	4
	V2	4

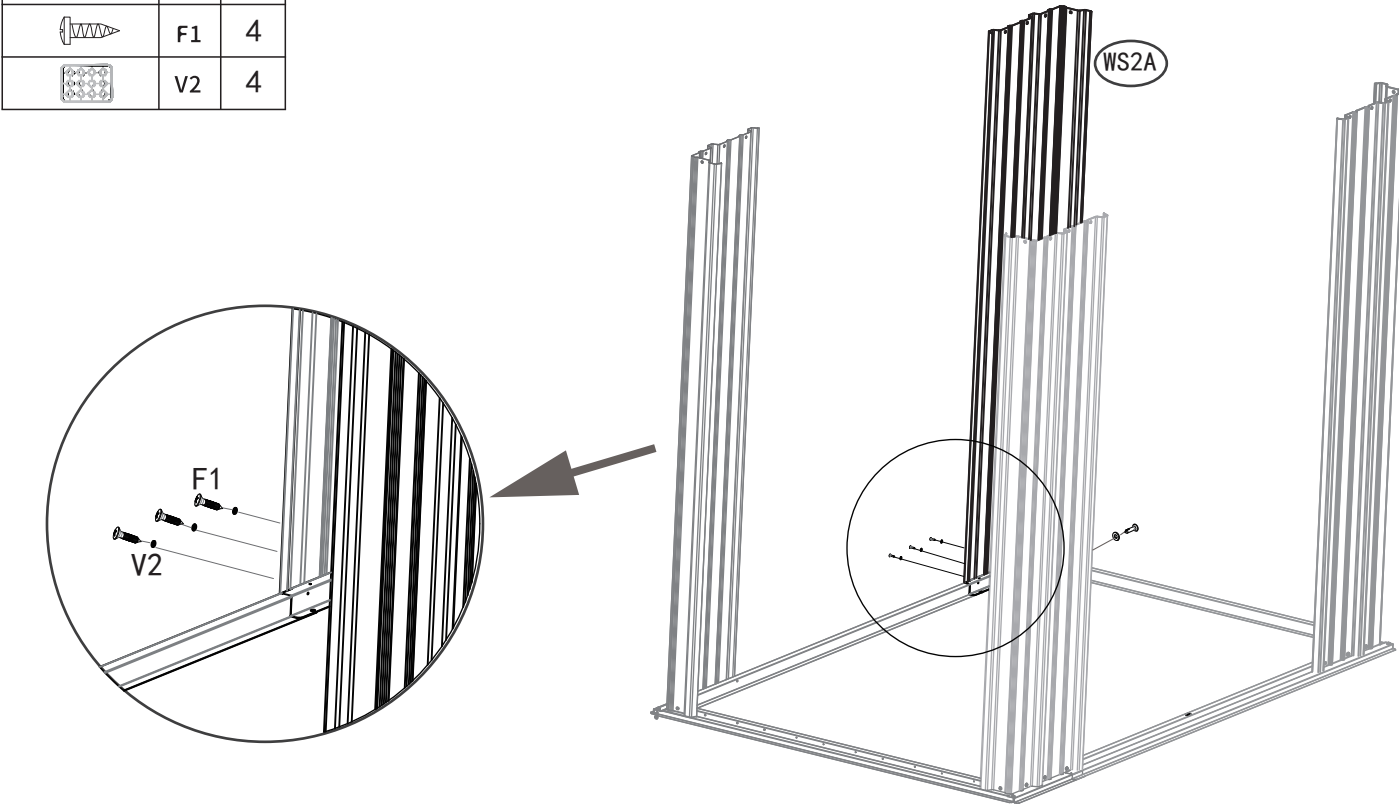




PART	NO.	Qty.
	US1	1
	C2	1
	F1	2
	V2	2

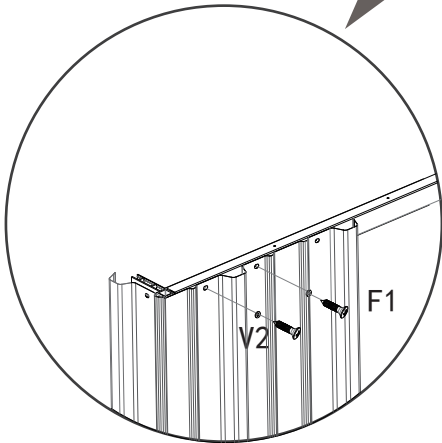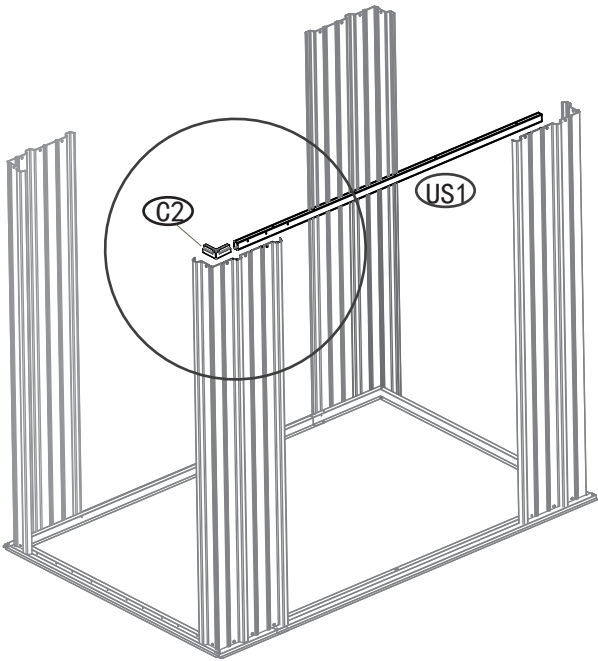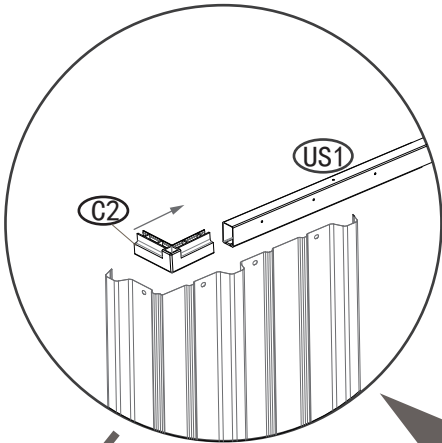




PART	NO.	Qty.
	US1R	1
	C2	1
	GS	1
	F1	2
	V2	2

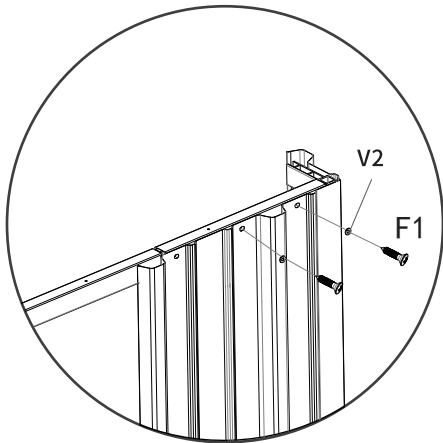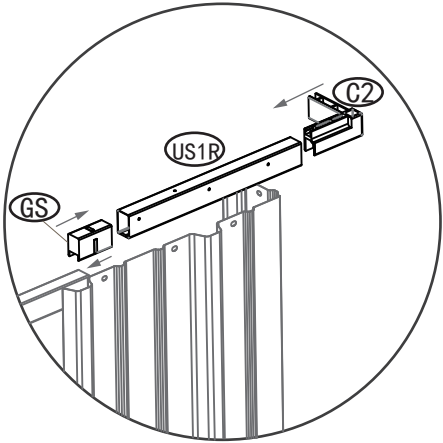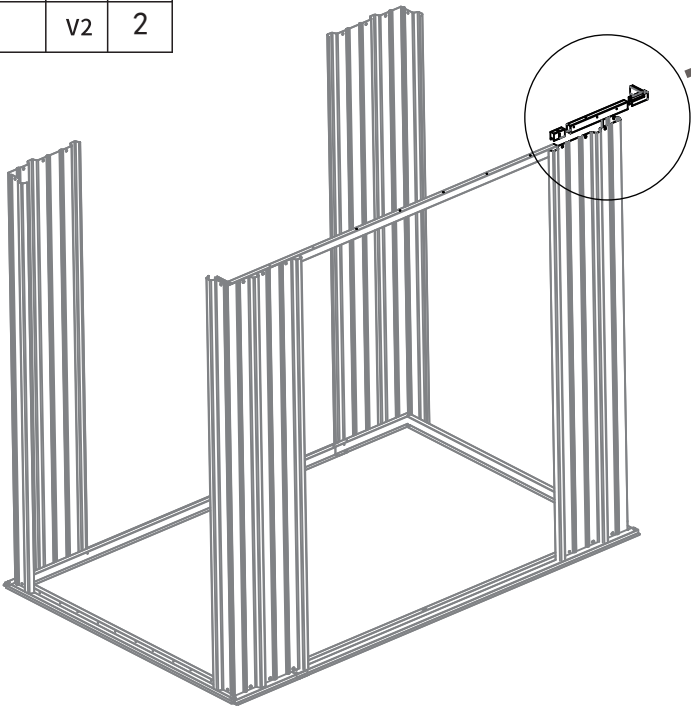




PART	NO.	Qty.
	US2	1
	C2	1
	F1	2
	V2	2

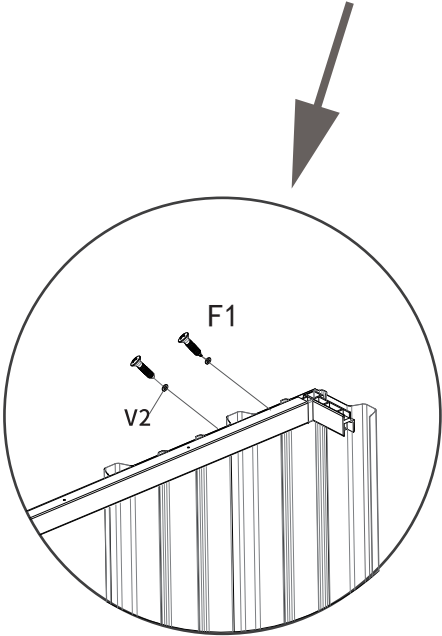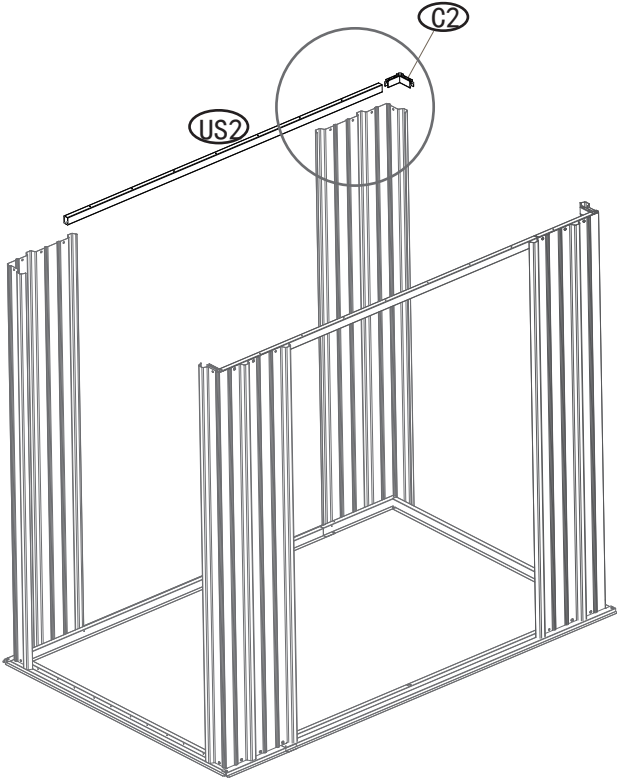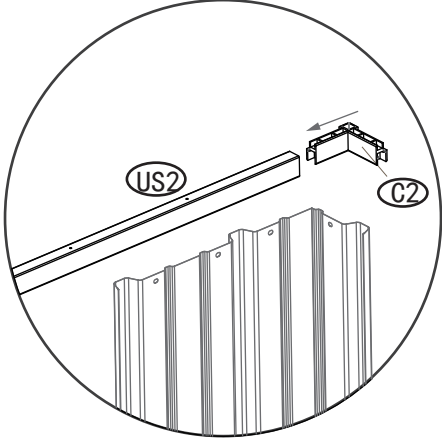





PART	NO.	Qty.
	US2L	1
	C2	1
	GS	1
	F1	2
	V2	2

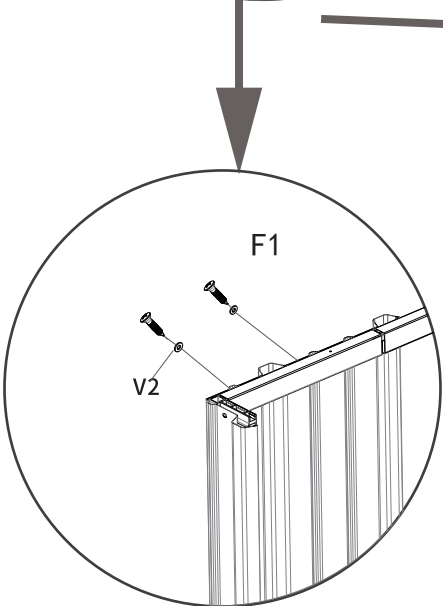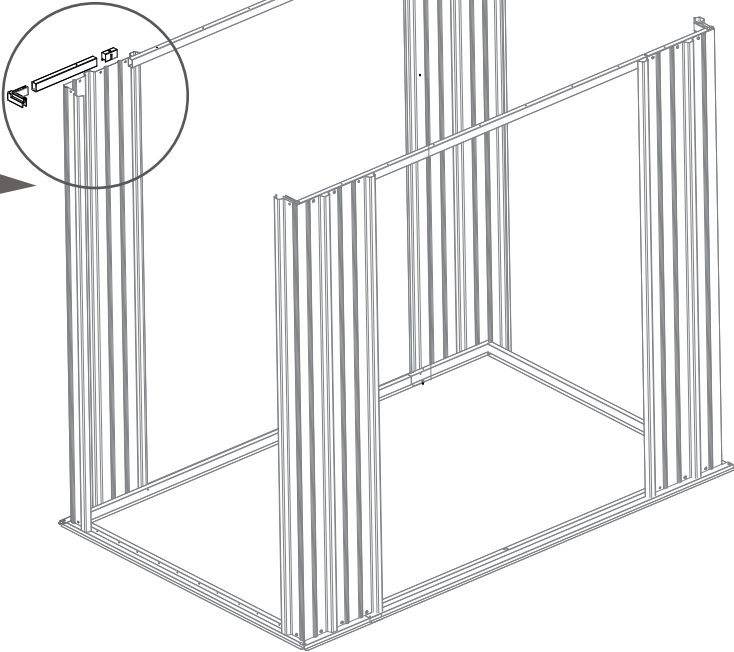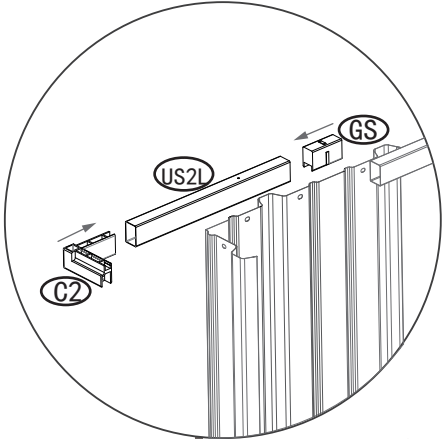



PART	NO.	Qty.
	UF1	1
	F1	2
	V2	2

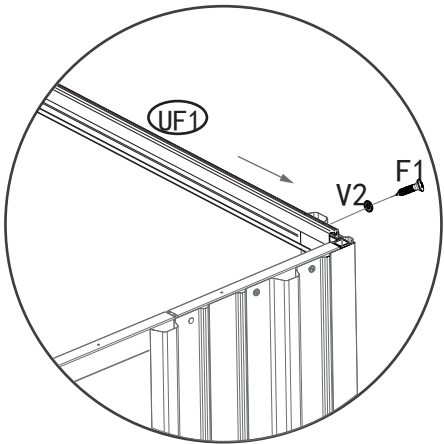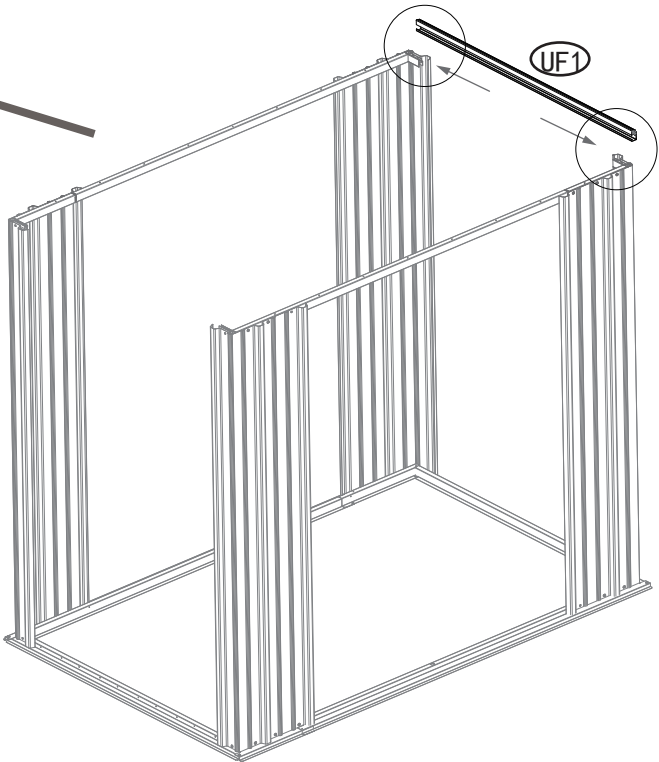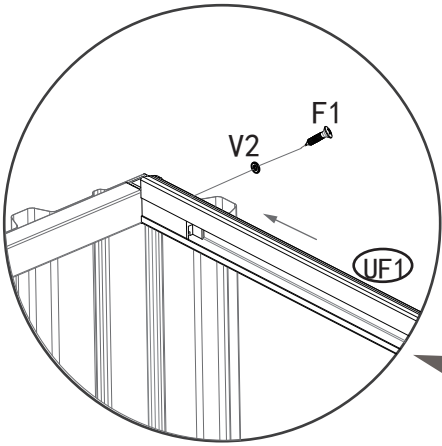



PART	NO.	Qty.
	UF1	1
	F1	2
	V2	2

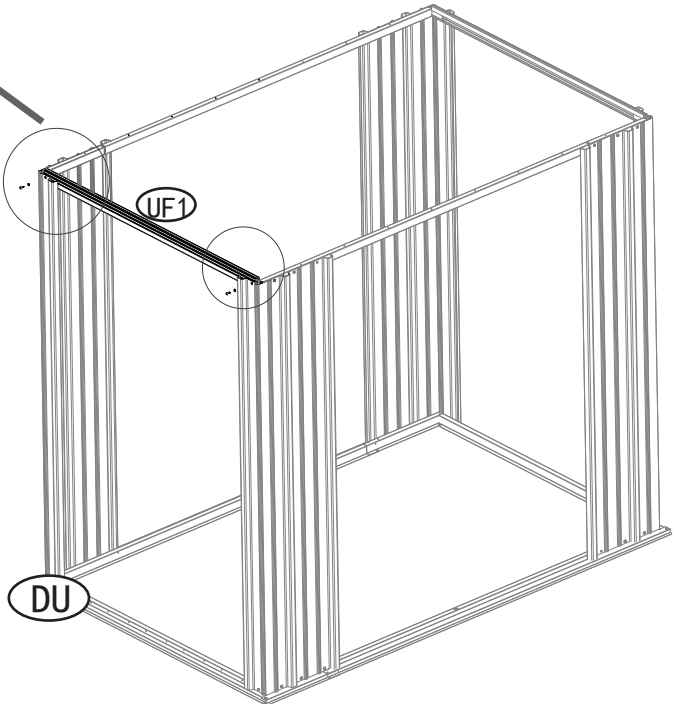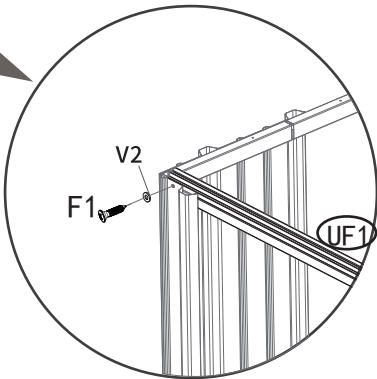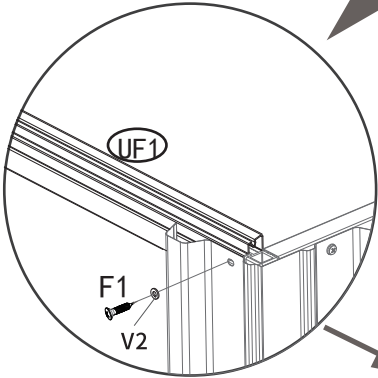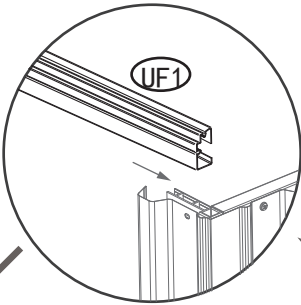


PART	NO.	Qty.
	UR1	1
	F1	2
	V2	2

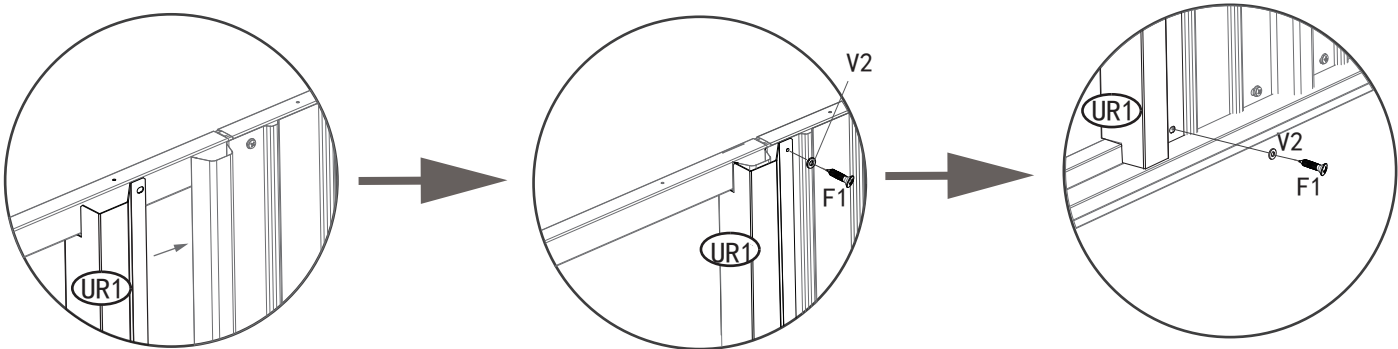
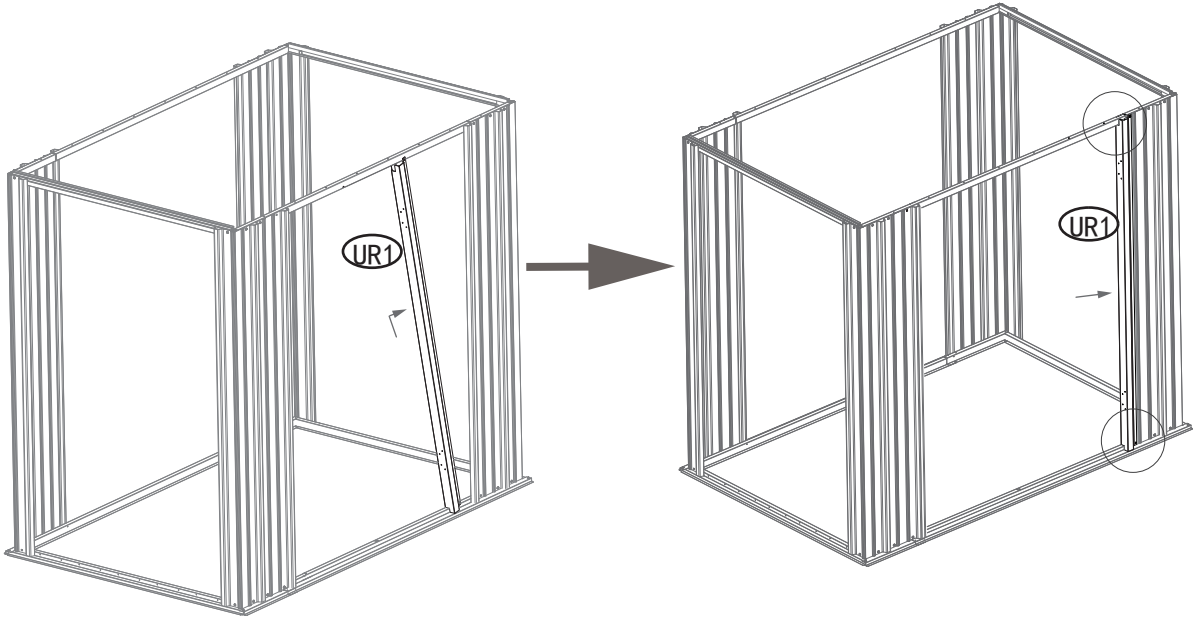



PART	NO.	Qty.
	ULA	1
	F1	2
	V2	2

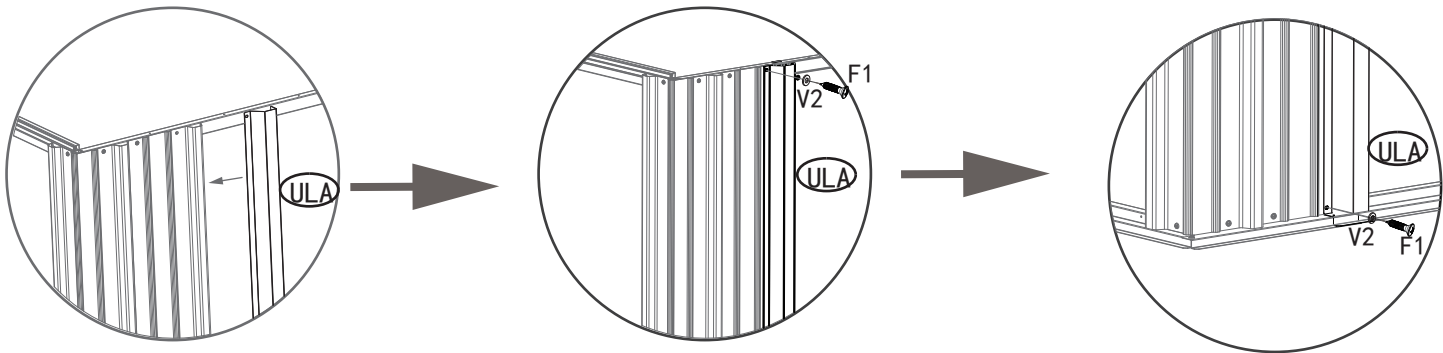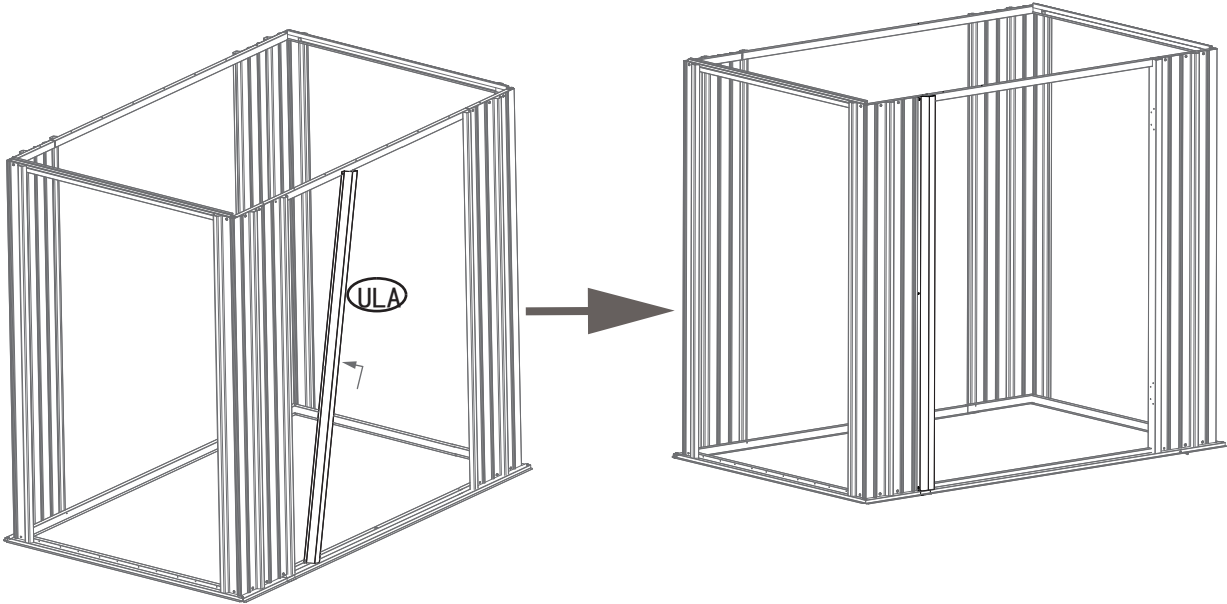


PART	NO.	Qty.
	W1A	7
	WS3A	2
	F1	64
	V2	64

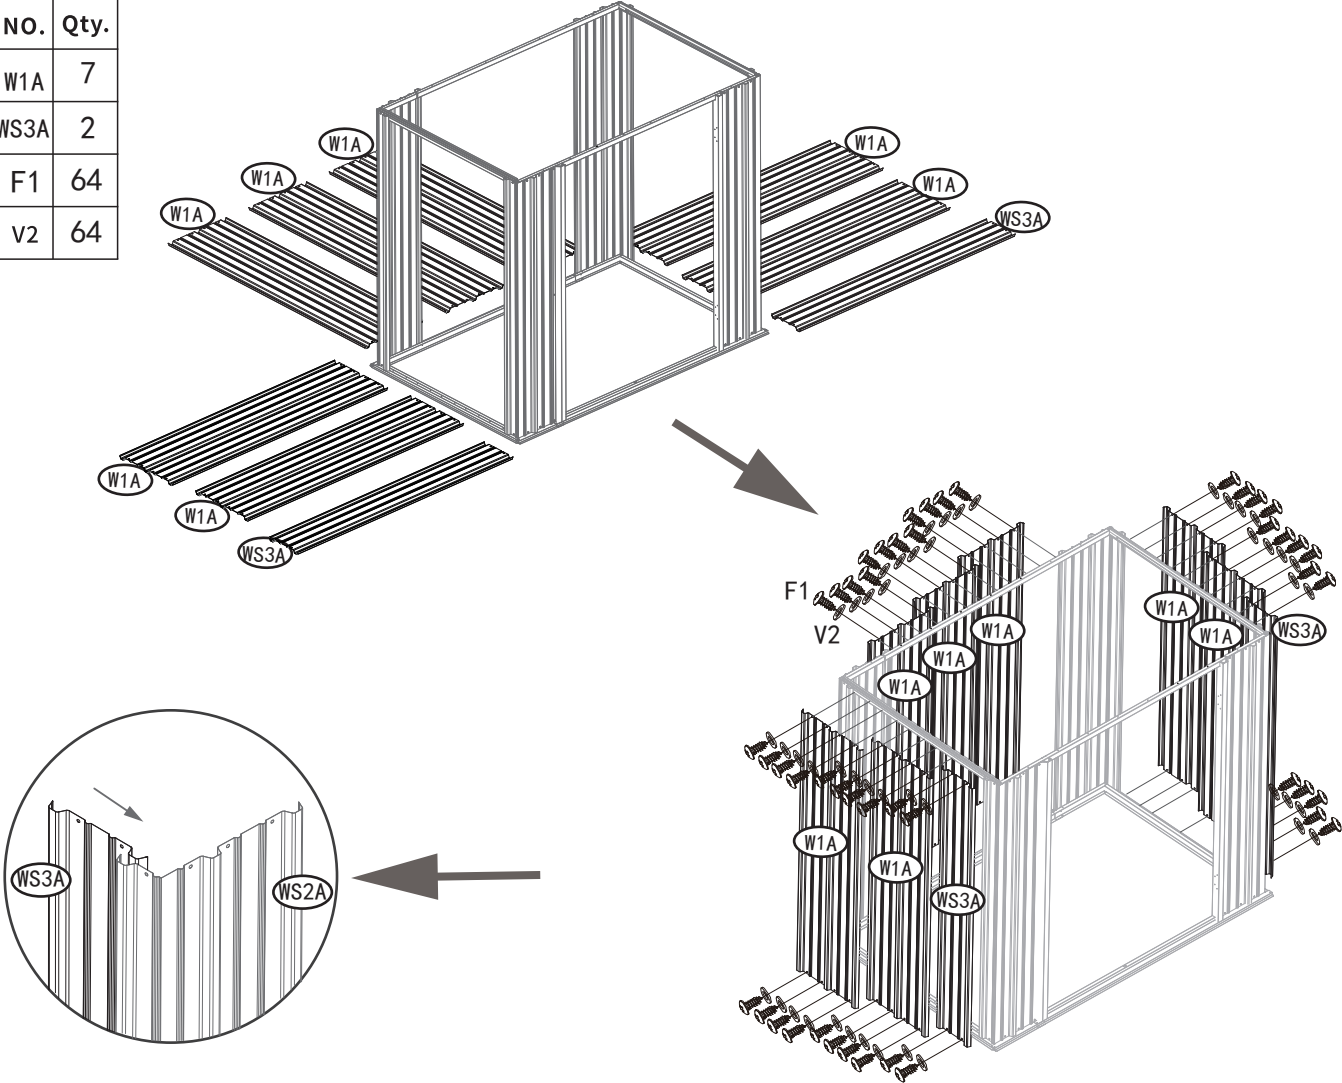


PART	NO.	Qty.
	A1	1
	A2	1
	C3	2
	F2	4

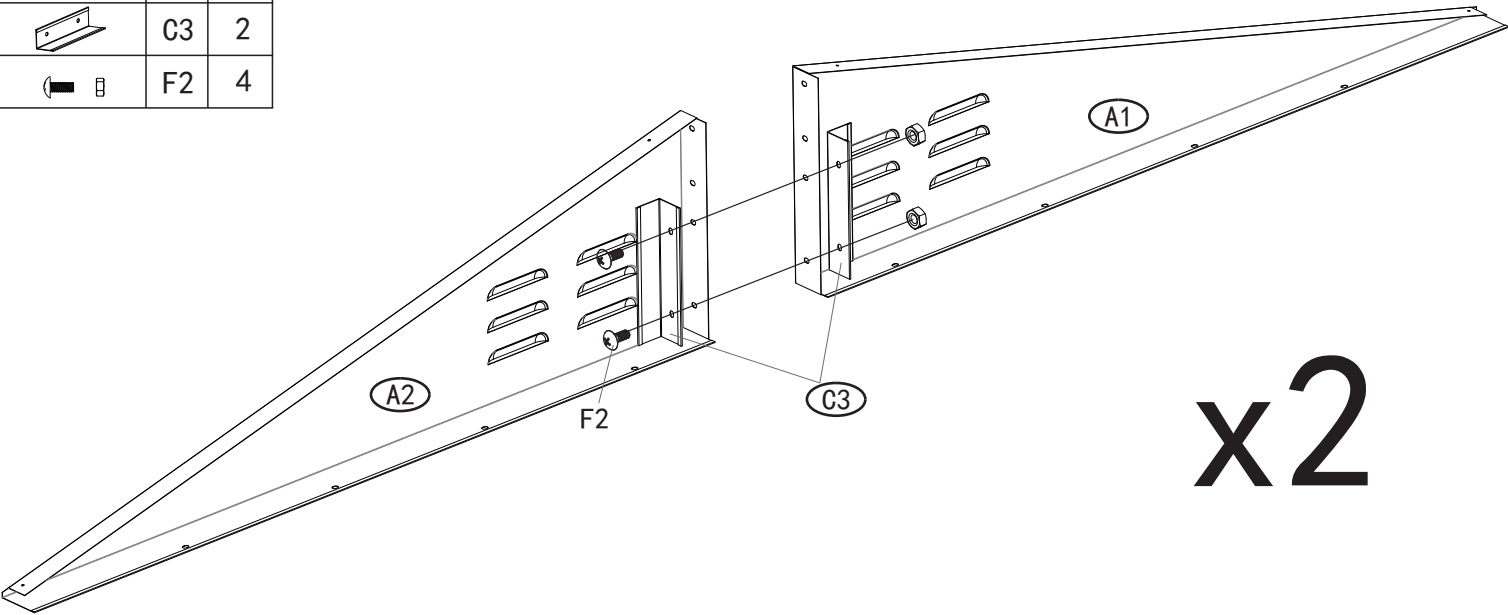


PART	NO.	Qty.
	M1	2
	F2	6


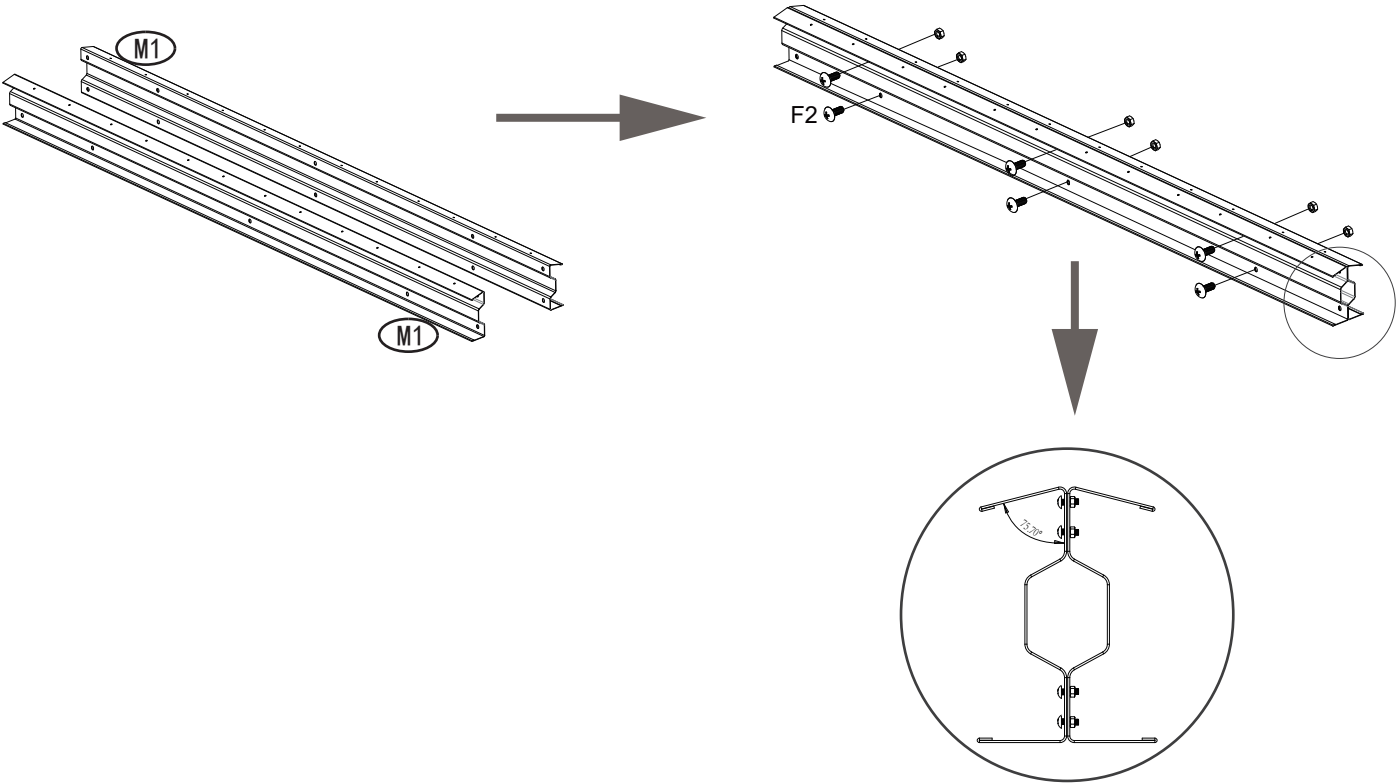



PART	NO.	Qty.
	F2	4

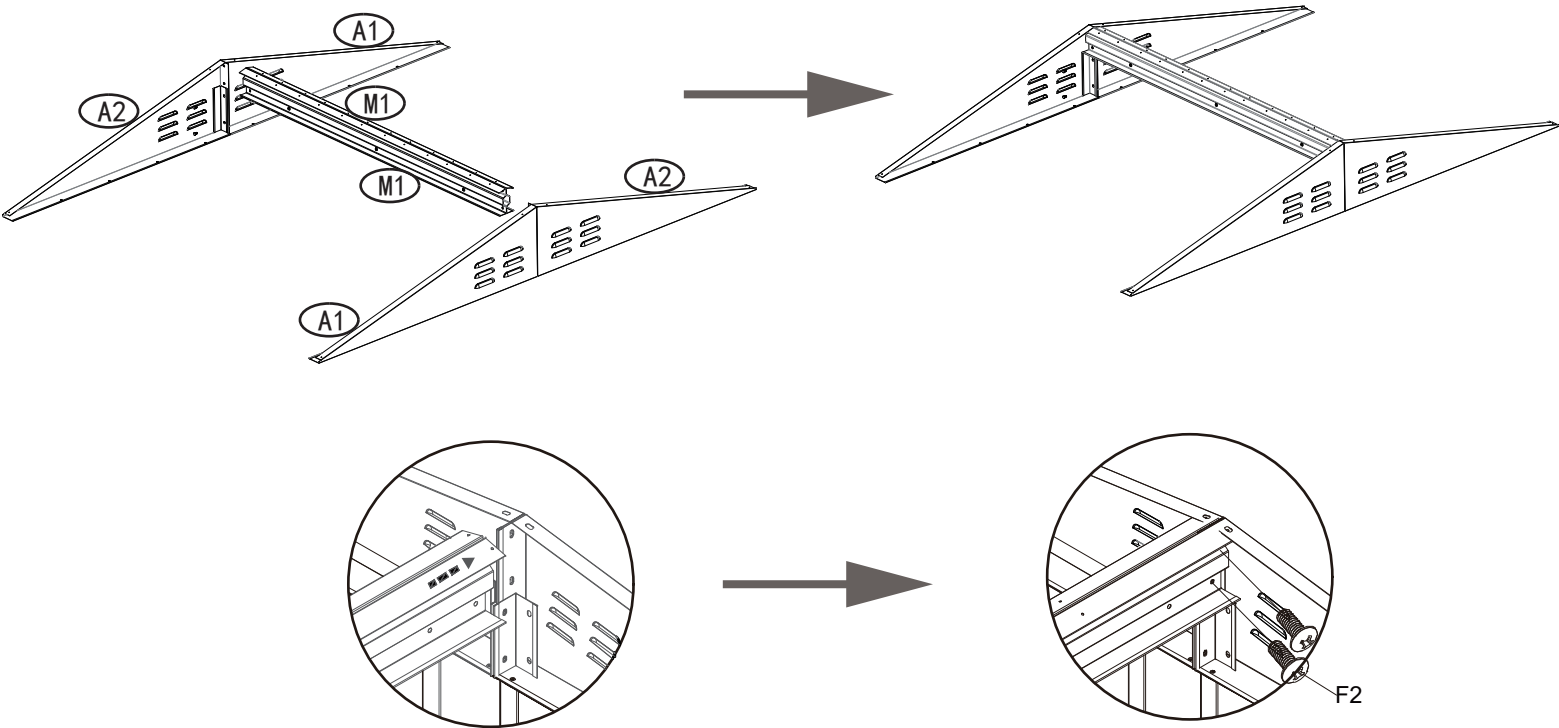




PART	NO.	Qty.
	F1	16


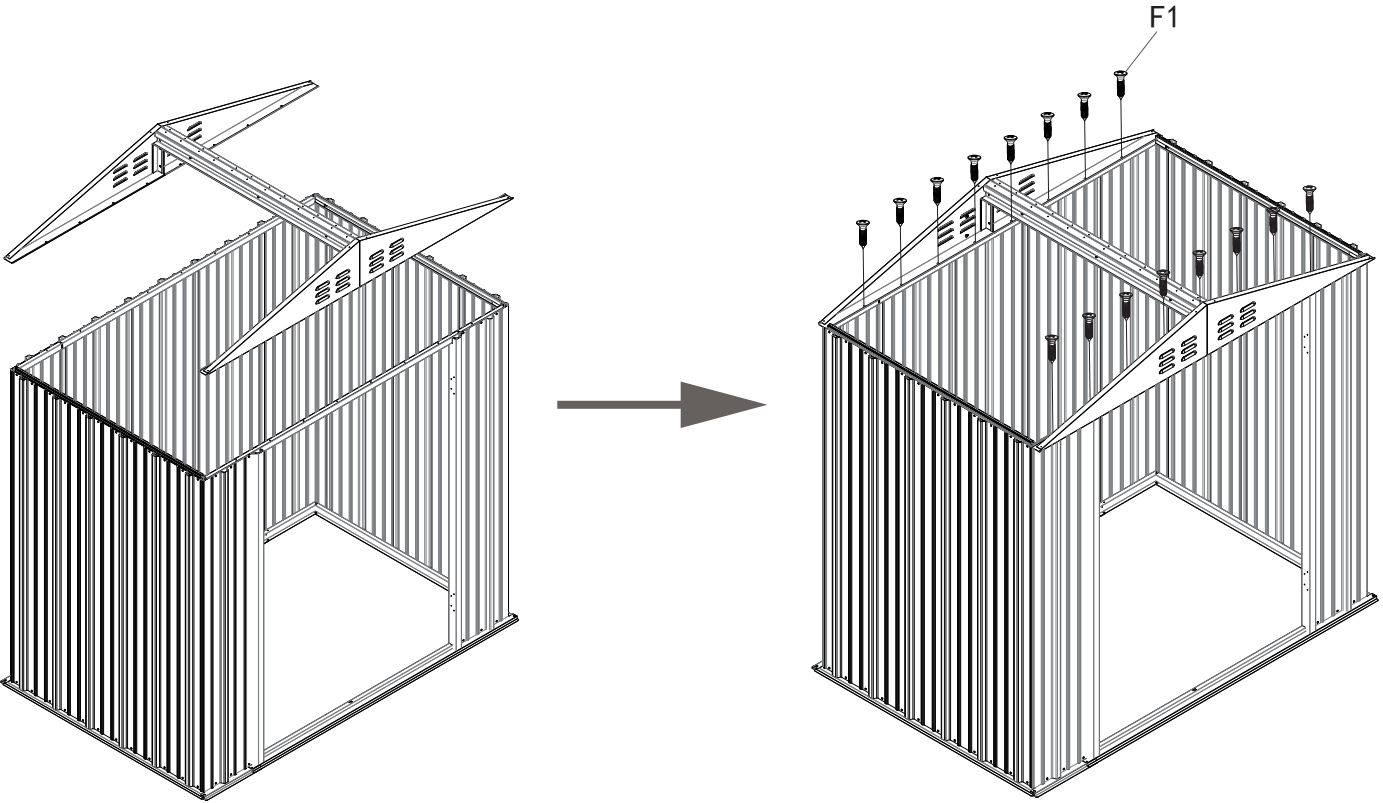




PART	NO.	Qty.
	PS2	1
	PS3	1
	F1	12
	V2	12

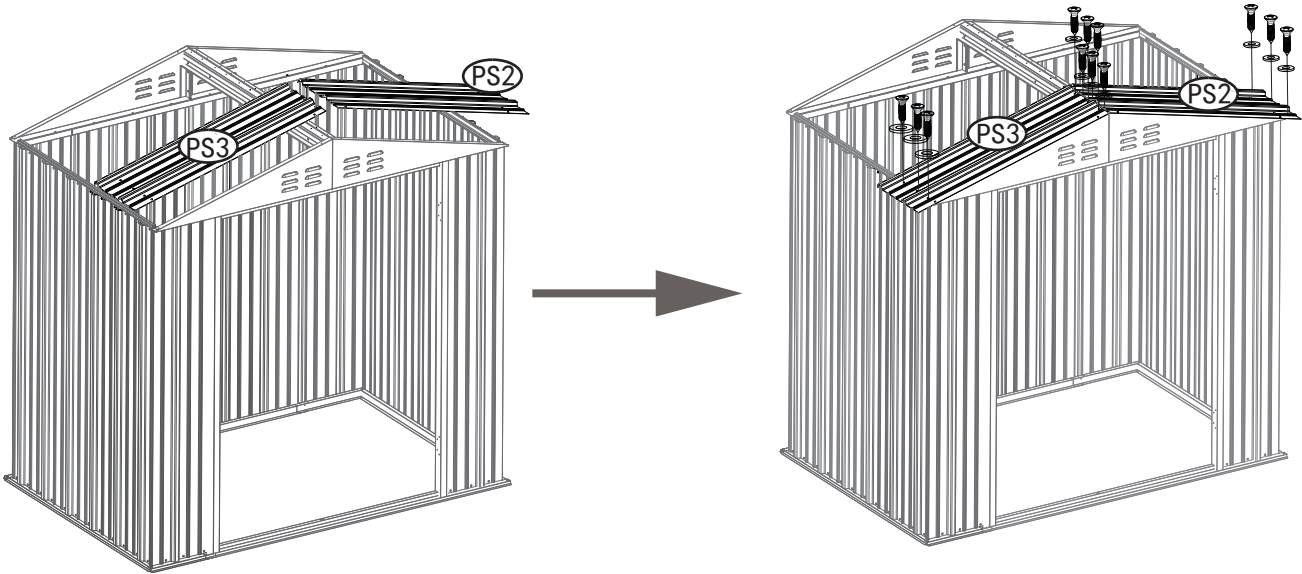


PART	NO.	Qty.
	PS4	2
	PS1	2
	F1	12
	V2	12

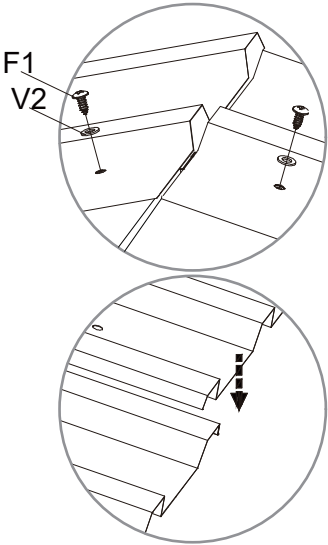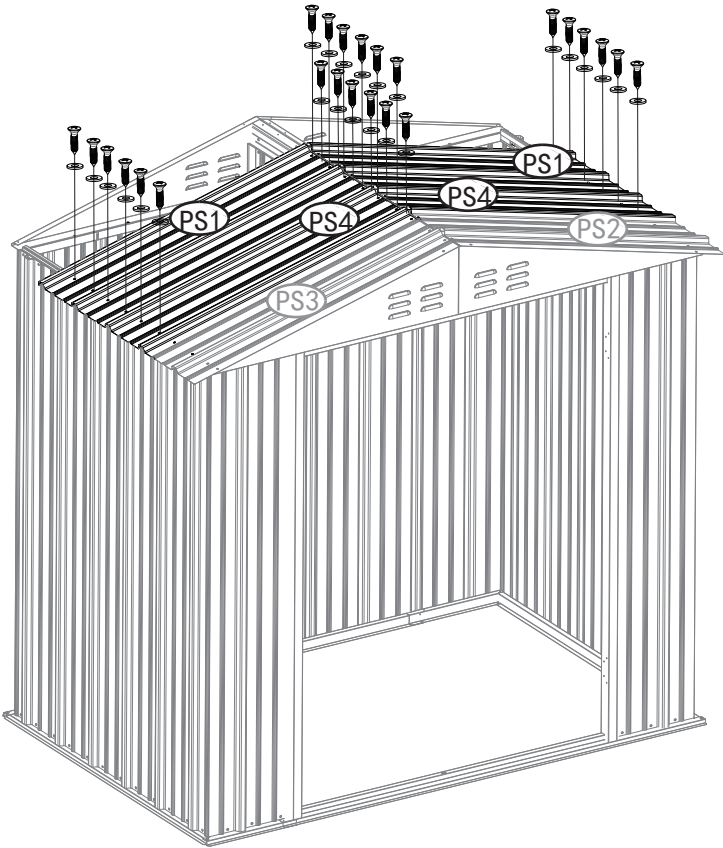



PART	NO.	Qty.
	PS2	1
	PS3	1
	F1	12
	V2	12

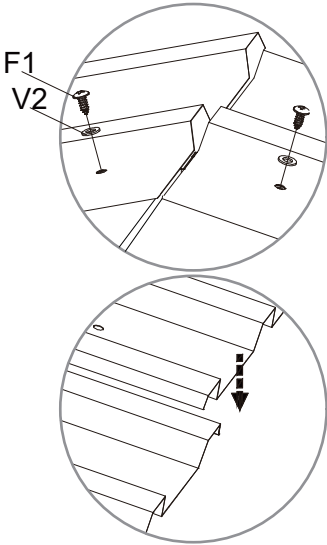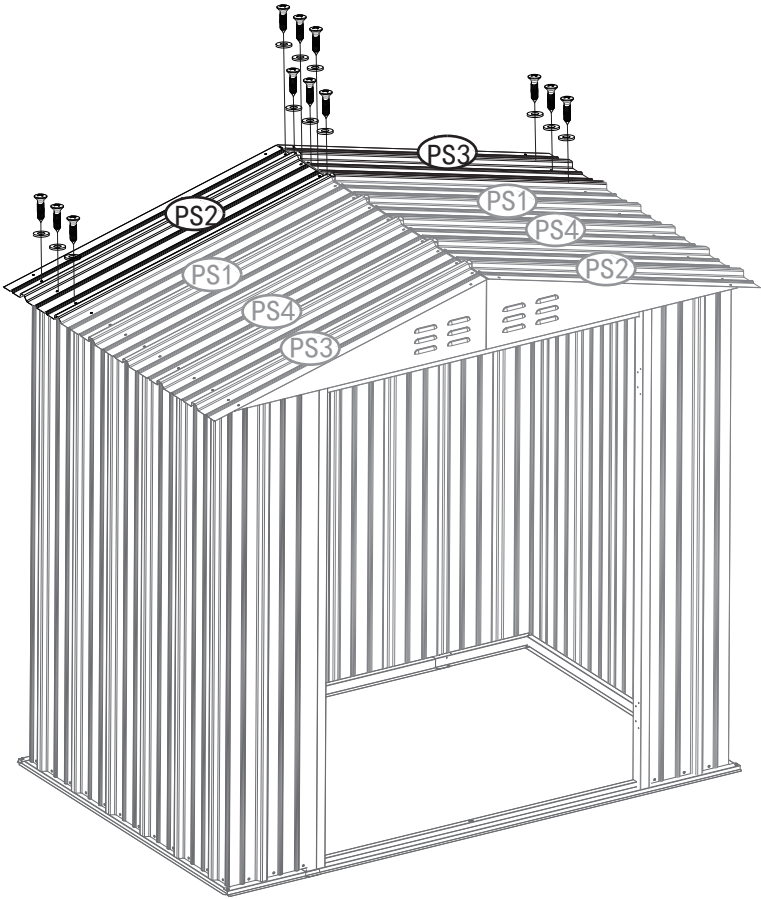

PART	NO.	Qty.
	M7	2
	M8	2
	F1	8
	V2	8


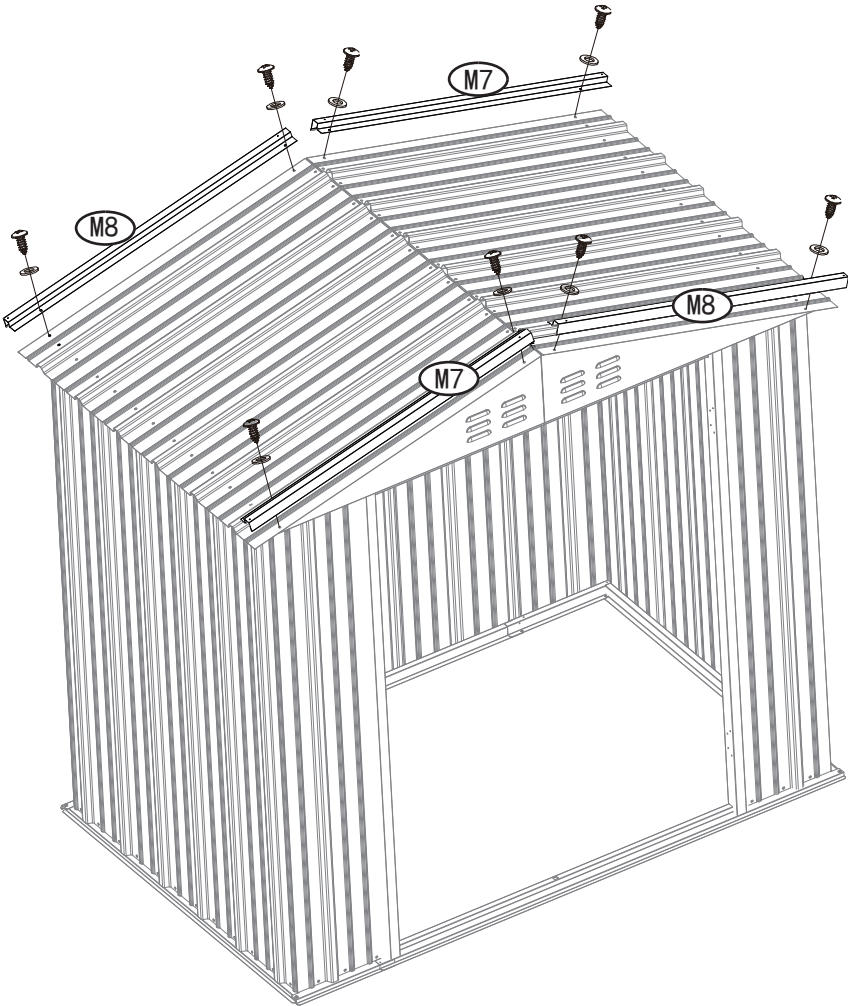


PART	NO.	Qty.
	GE	2
	M6	1
	F1	6
	V2	6

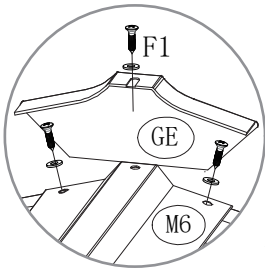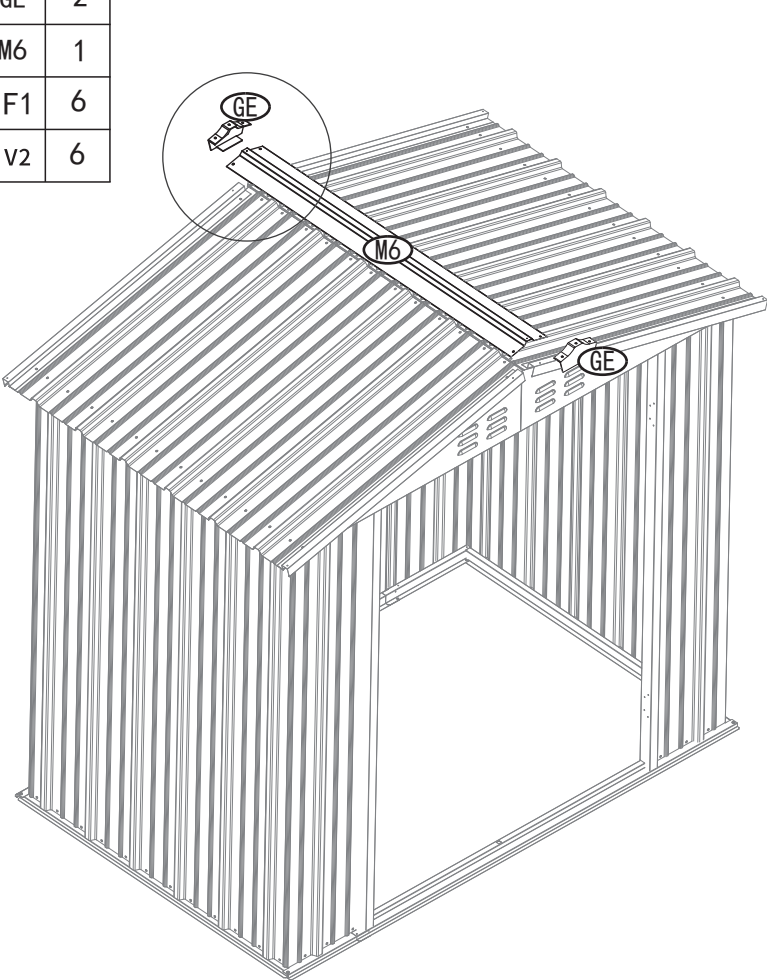



X2


PART	NO.	Qty.
	M12	2
	GC	4
	F1	8
	V2	8

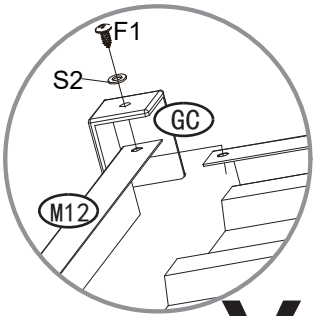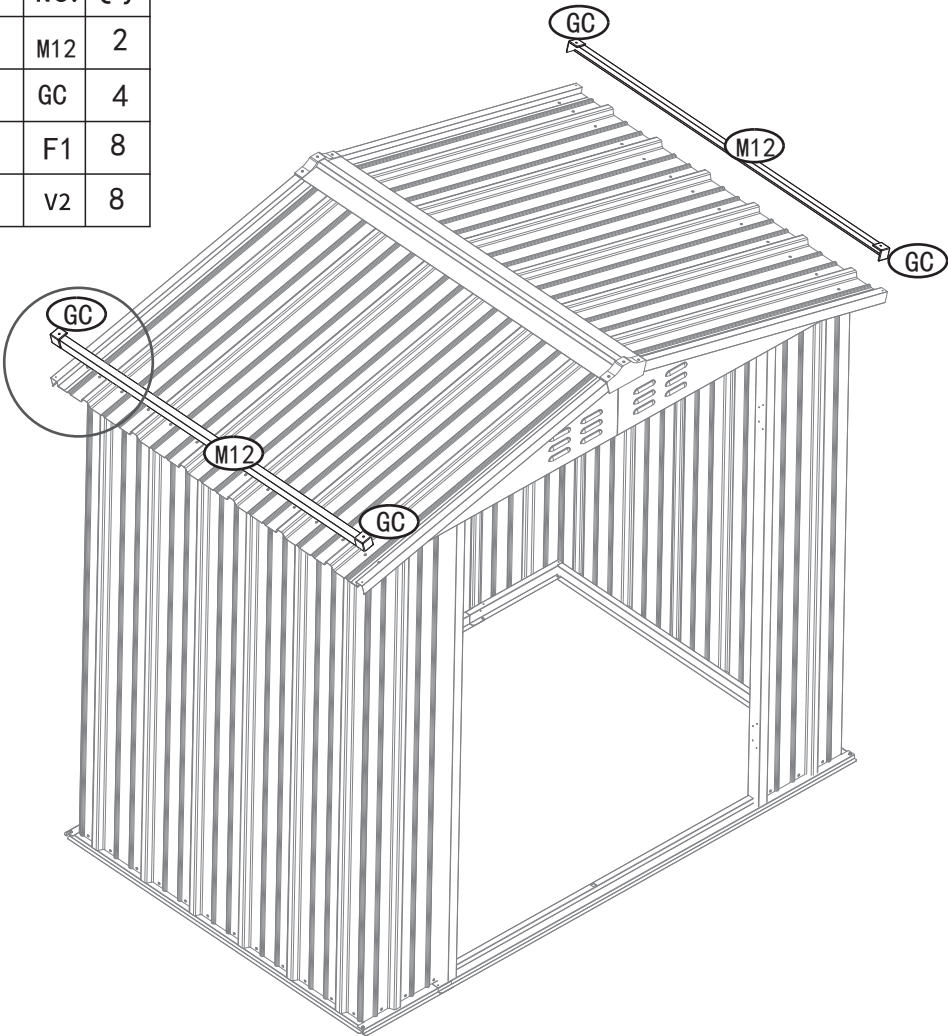

X4

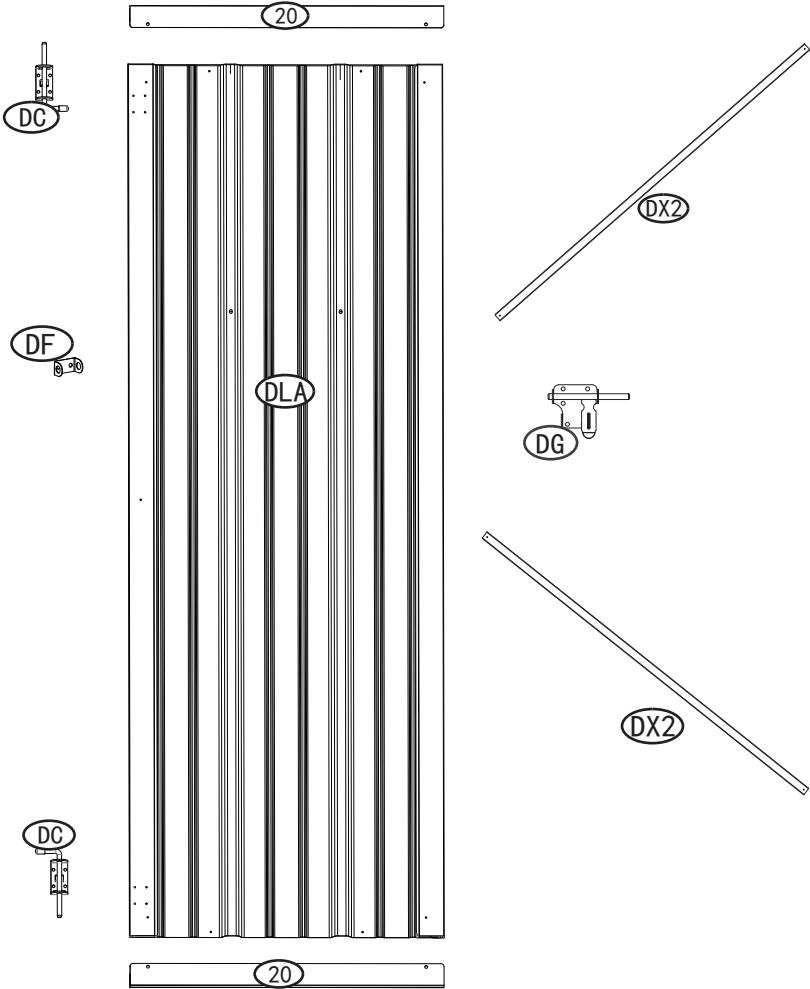


PART	NO.	Qty.
	20	2
	DLA	1
	F1	10


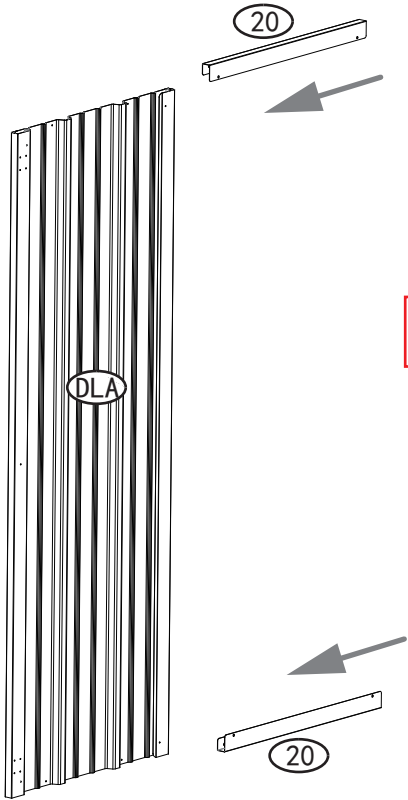


Note: make clear the front and back of the door panel


PART	NO.	Qty.
	DF	1
	F4	2
	F1	10




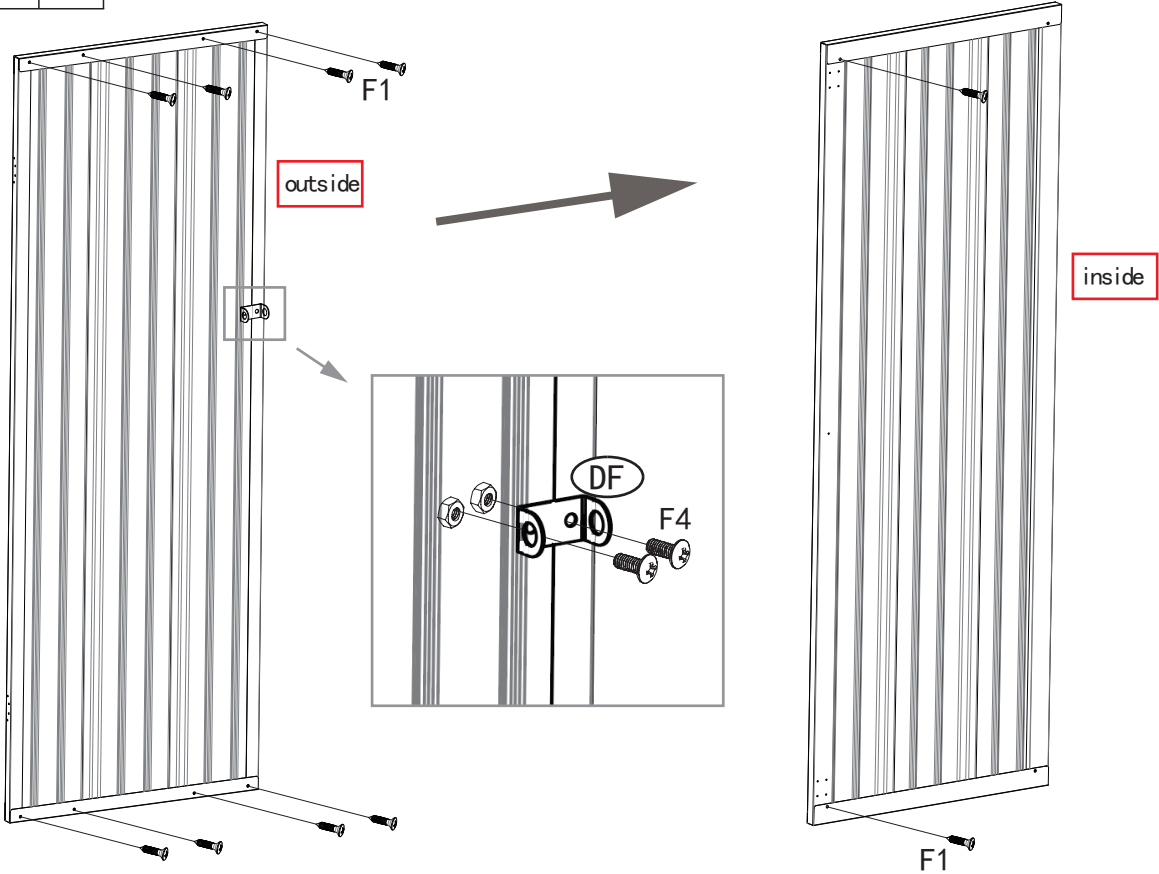






PART	NO.	Qty.
	DX2	2
	DH	2
	F1	4
	F3	8

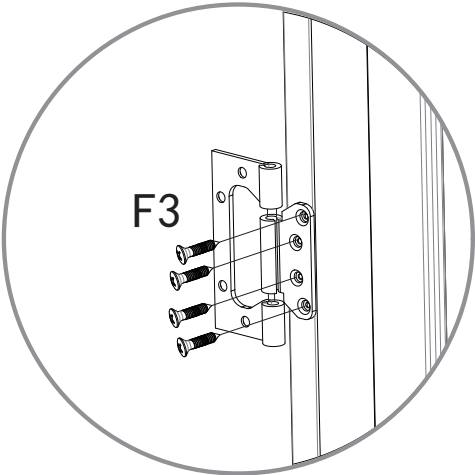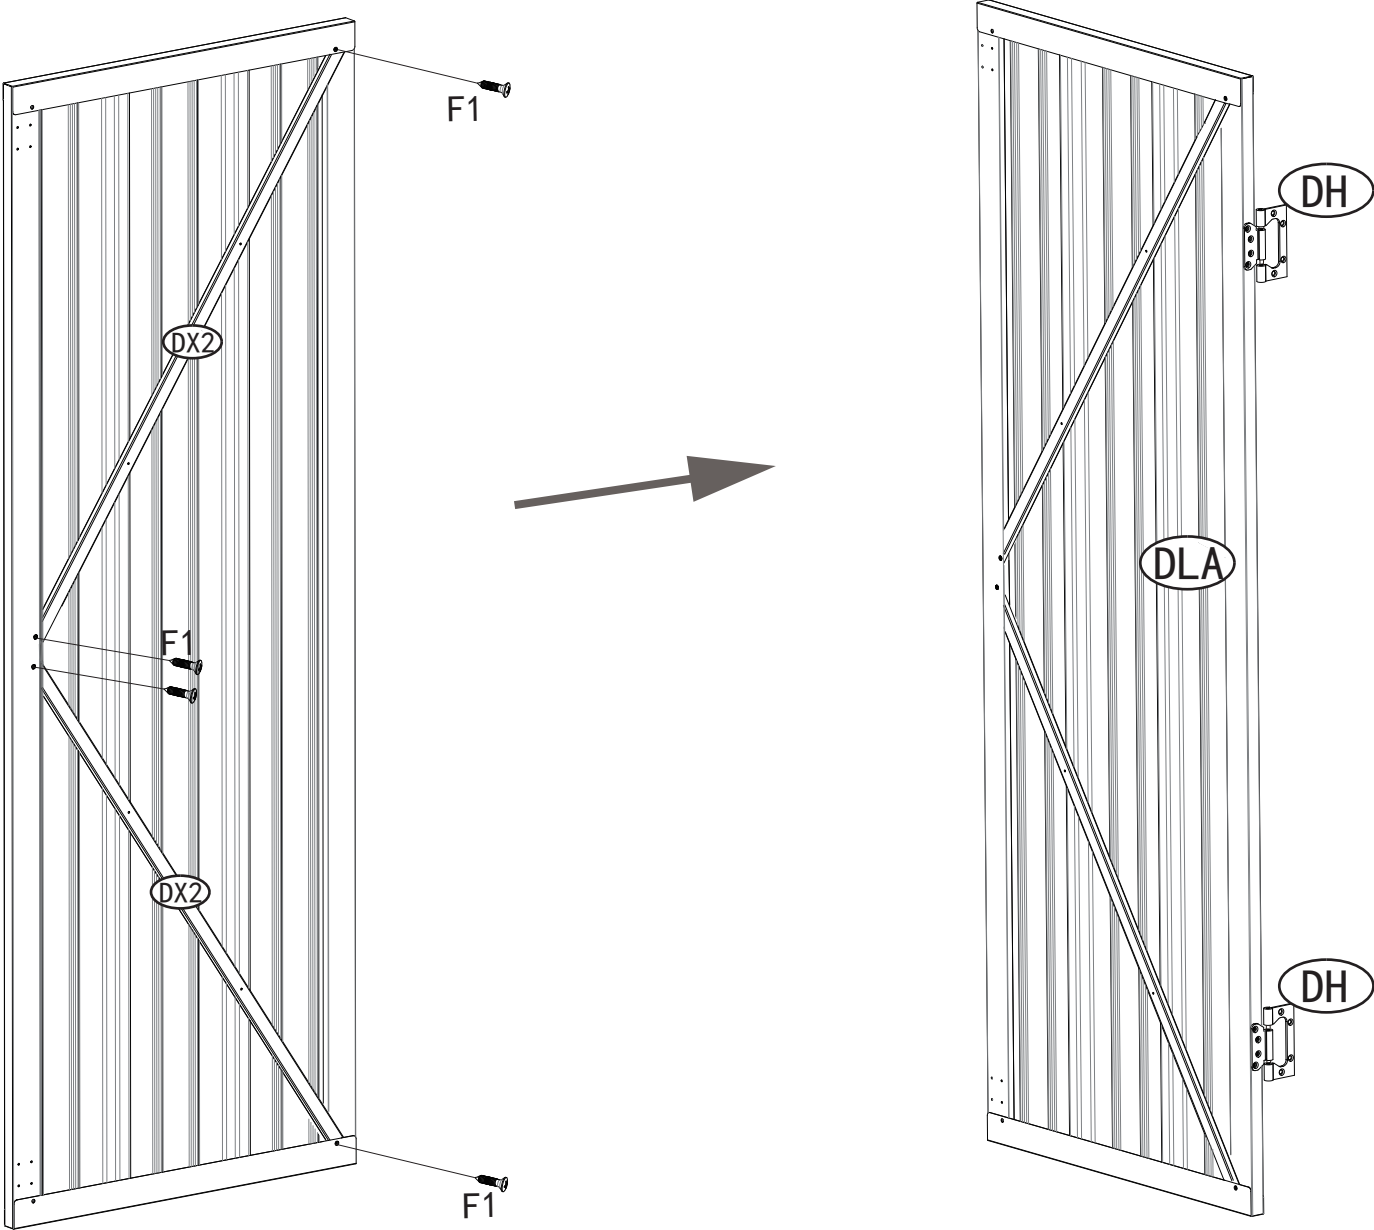



X2

PART	NO.	Qty.
	DC	2
	F1	8

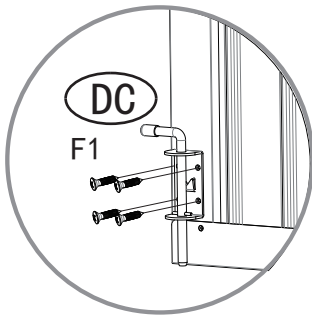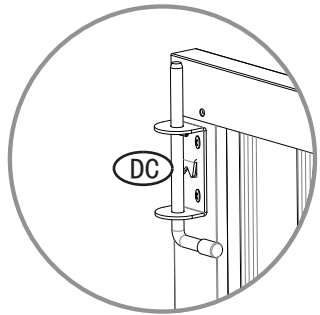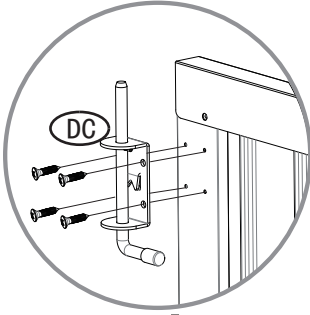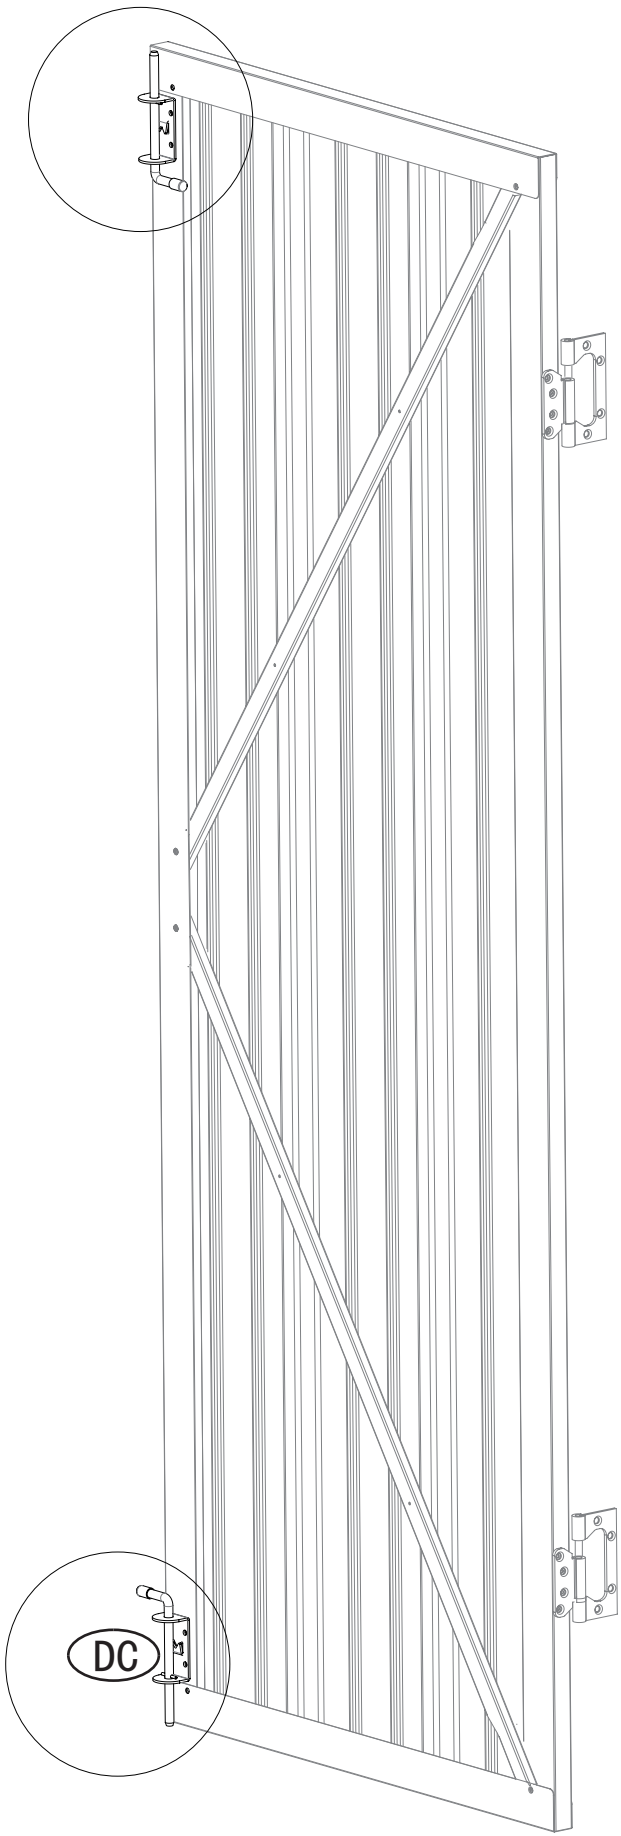

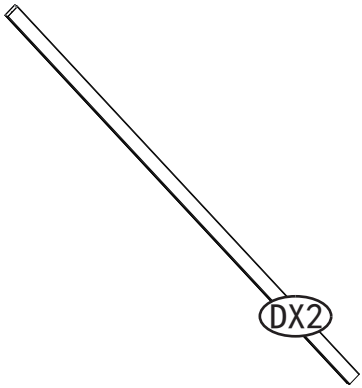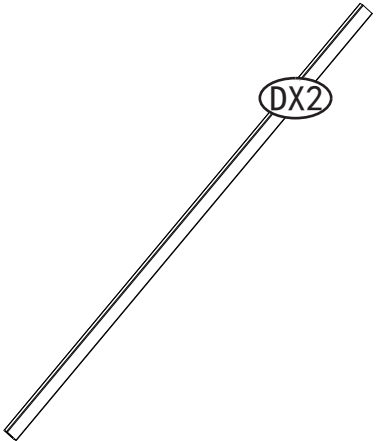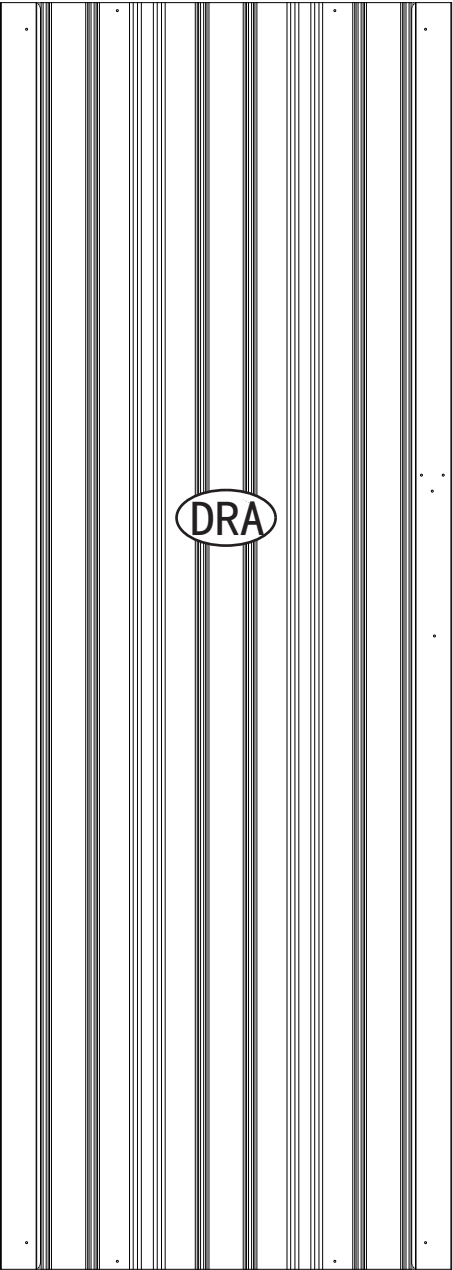


PART	NO.	Qty.
	20	2
	DRA	1
	F1	10


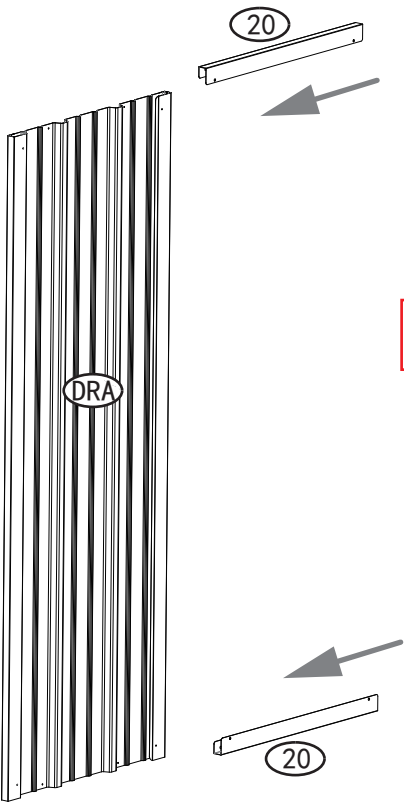


Note: make clear the front and back of the door panel


PART	NO.	Qty.
	DG	1
	F4	3
	F1	10

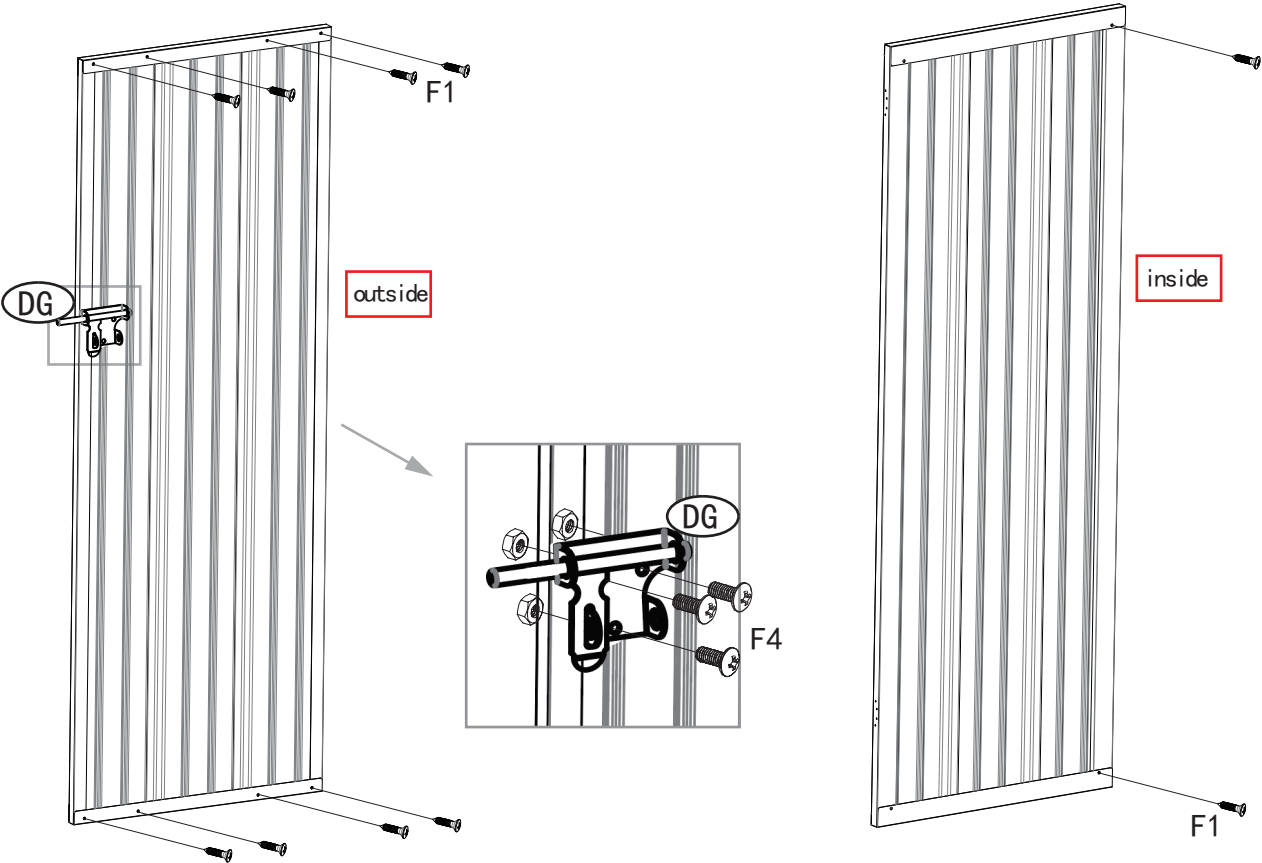


PART	NO.	Qty.
	DX2	2
	DH	2
	F1	4
	F3	8

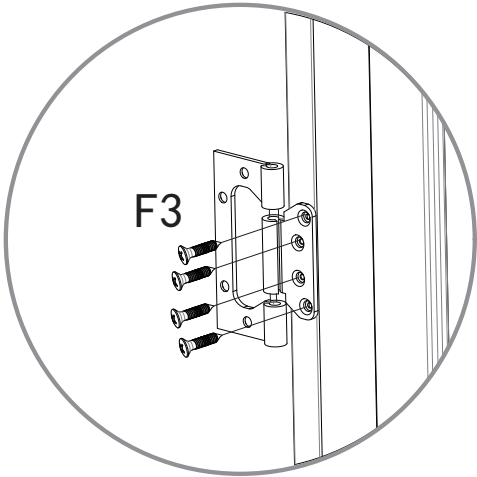
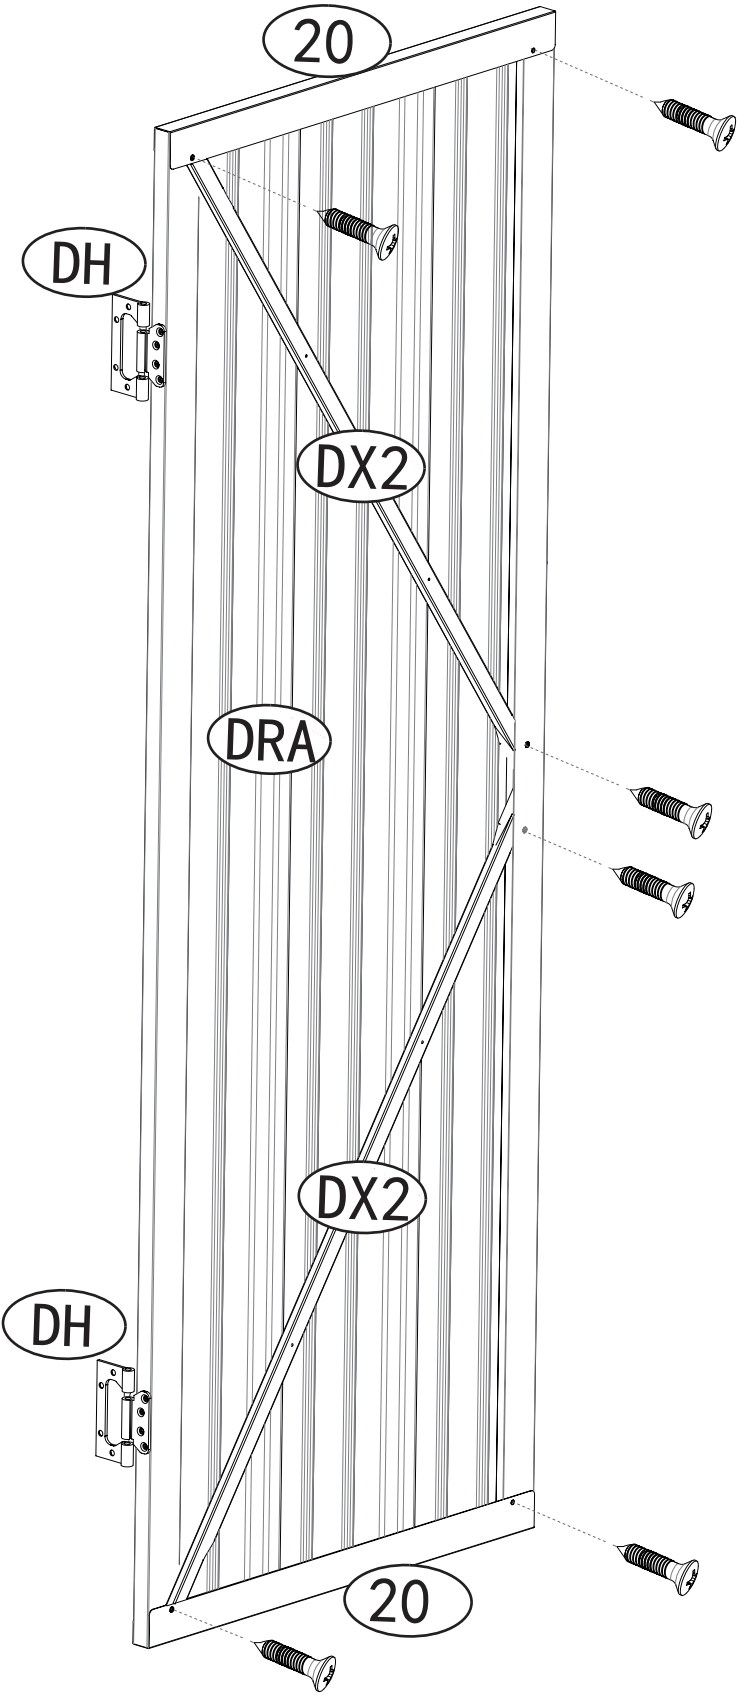


X2

PART	NO.	Qty.
	DRA	1
	DLA	1
	F3	16

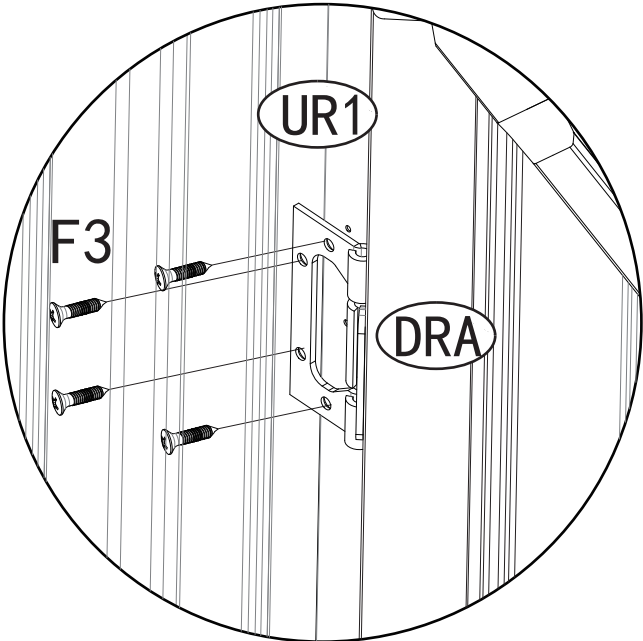

X4

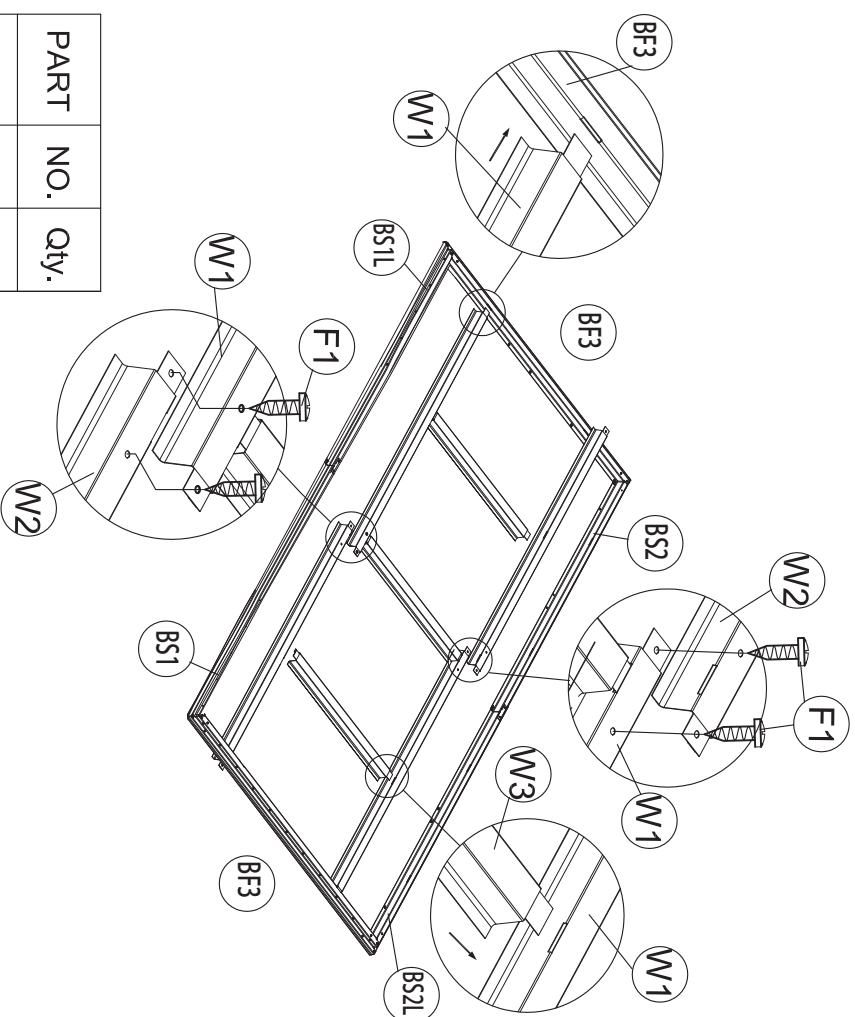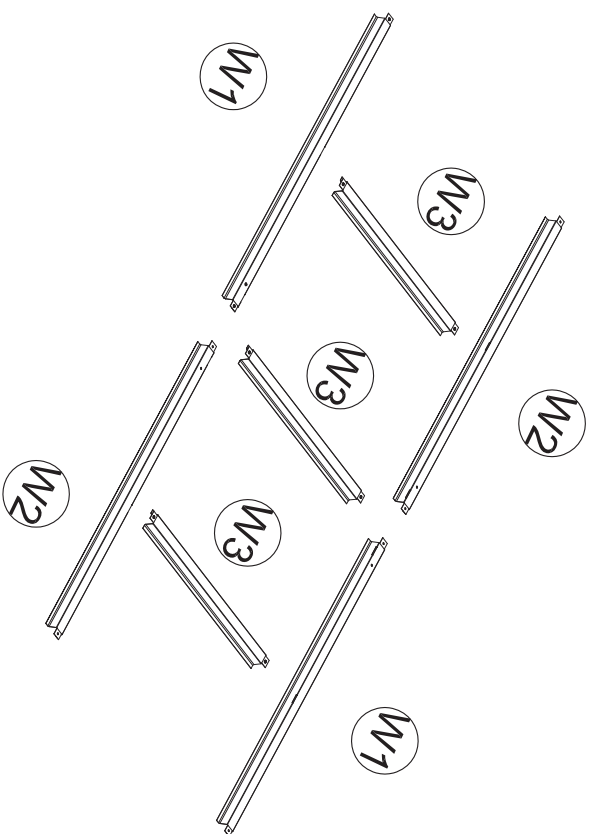

PART	NO.	Qty.
	F1	4
	W1	2
	W2	2
	W3	3
	W7	2