






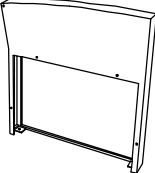
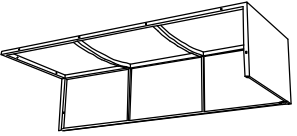
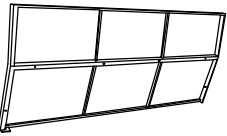
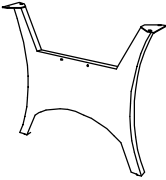



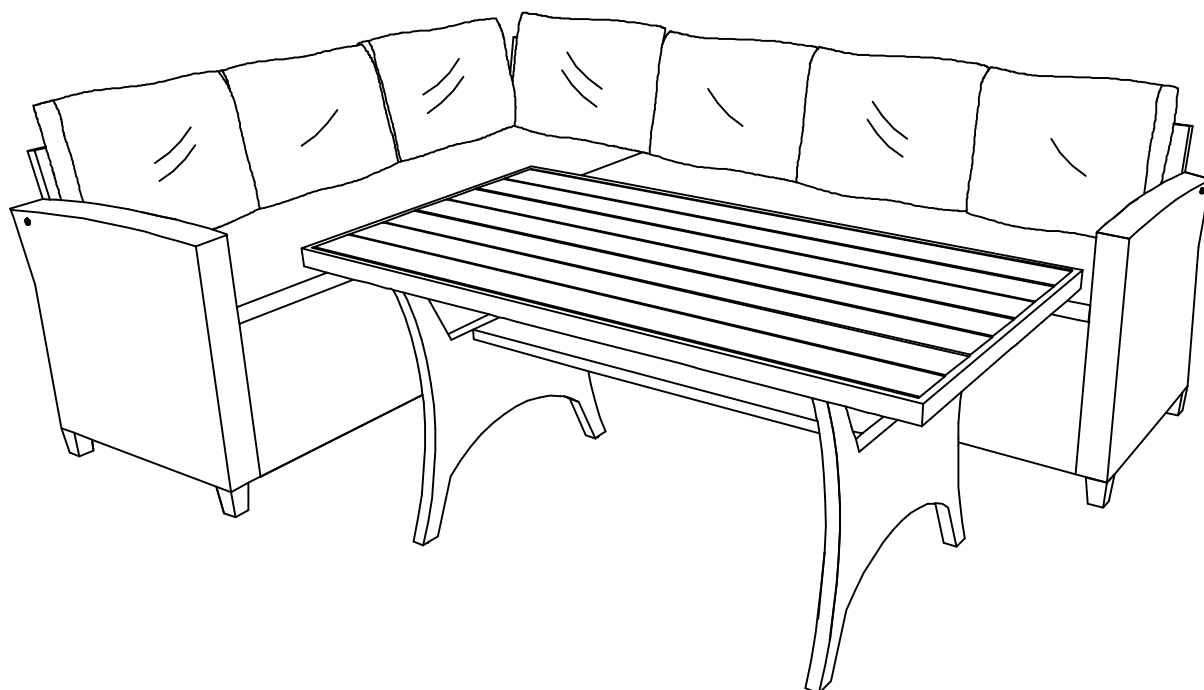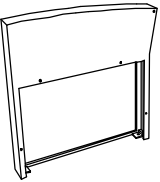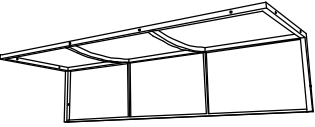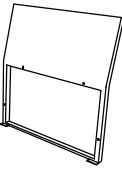

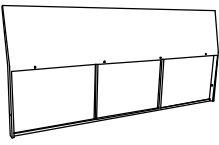








ASSEMBLY INSTRUCTION


L SOFA SETS



Part List & Hardware



<p>A</p>  <p>(1pc)</p>	<p>B</p>  <p>(1pc)</p>	<p>C</p>  <p>(1pc)</p>	<p>D</p>  <p>(1pc)</p>
<p>E</p>  <p>(2pcs)</p>	<p>F</p>  <p>(7pcs)</p>	<p>G</p>  <p>(1pc)</p>	<p>H</p>  <p>(1pc)</p>
<p>I</p>  <p>(1pc)</p>	<p>X</p>  <p>(2pcs)</p>	<p>Y</p>  <p>(1pc)</p>	<p>Z</p>  <p>(1pc)</p>
<p>1</p>  <p>M6x40 mm</p> <p>(18pcs)</p>	<p>2</p>  <p>M6x35 mm</p> <p>(7pcs)</p>	<p>3</p>  <p>M6x110 mm</p> <p>(2pcs)</p>	<p>4</p>  <p>M6x55 mm</p> <p>(8pcs)</p>
<p>5</p>  <p>Ø6 x 14 mm</p> <p>(27pcs)</p>	<p>6</p>  <p>(8pcs)</p>	<p>7</p>  <p>(2pcs)</p>	<p>8</p>  <p>Allenkey 4 x 60</p> <p>(3pcs)</p>
<p>9</p>  <p>M8x20 mm</p> <p>(8pcs)</p>	<p>10</p>  <p>Ø8 x 16 mm</p> <p>(8pcs)</p>		

STEP 1:

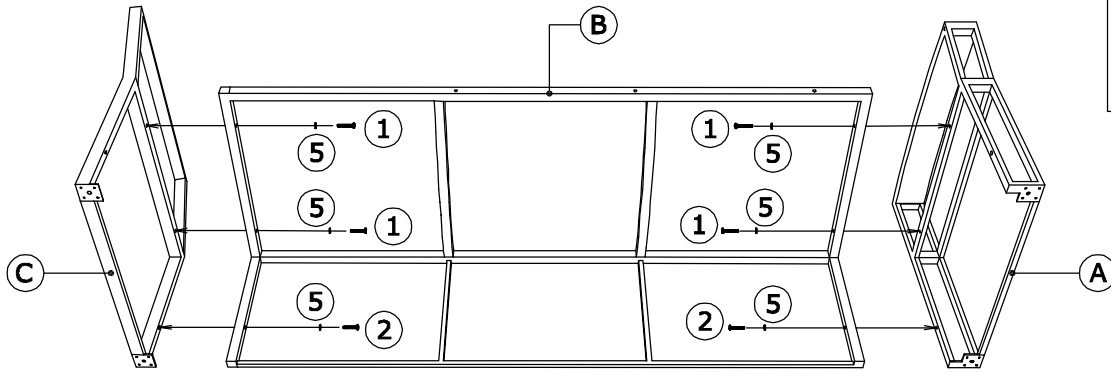



- ① *4
- ② *2
- ⑤ *6

STEP 2:

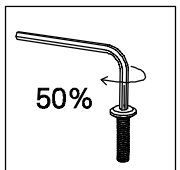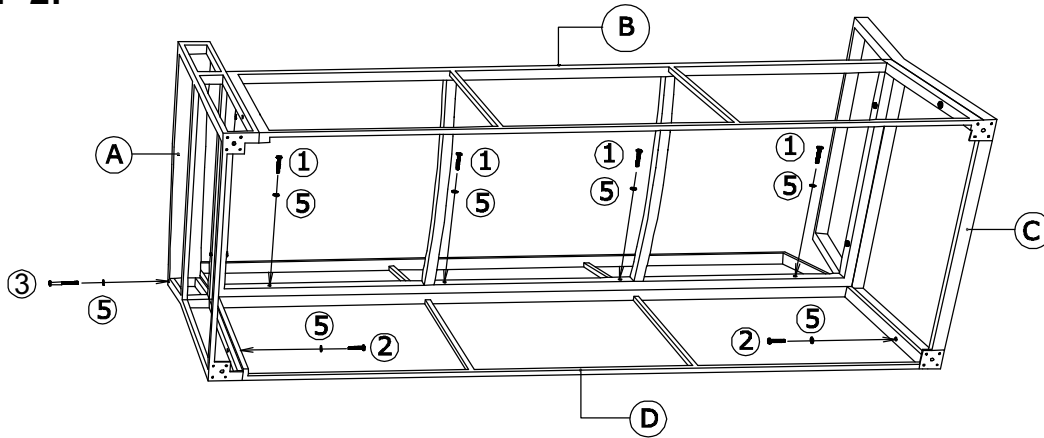



- ① *4
- ② *2
- ③ *1
- ⑤ *7

STEP 3:

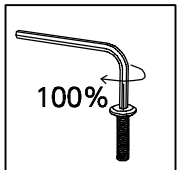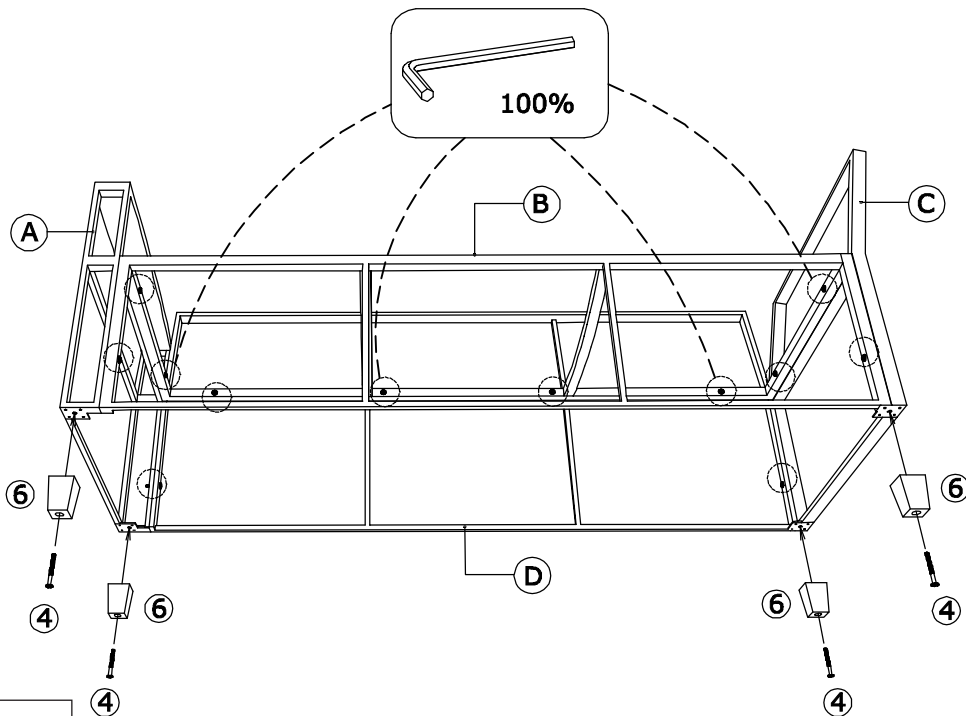



- ④ *4
- ⑥ *4

STEP 4:

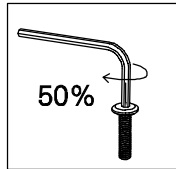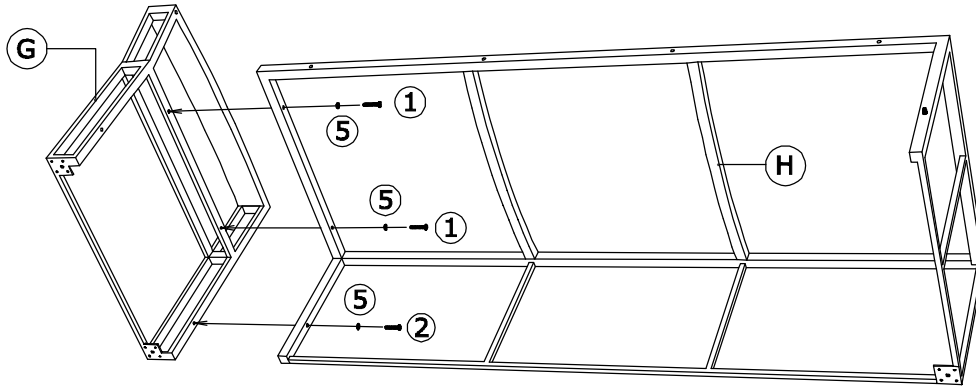



- ① *2
- ② *1
- ⑤ *3

STEP 5:

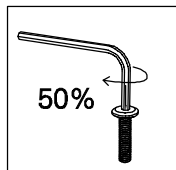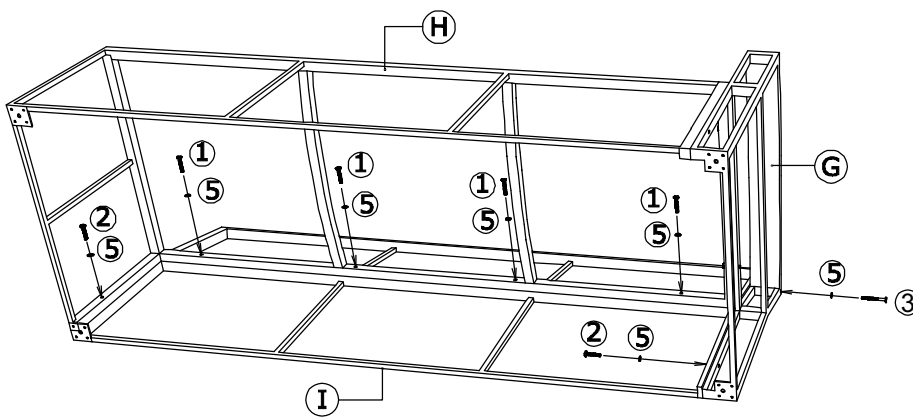


- ① *4
- ② *2
- ③ *1
- ⑤ *7

STEP 6:

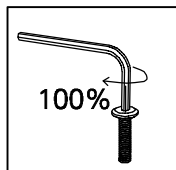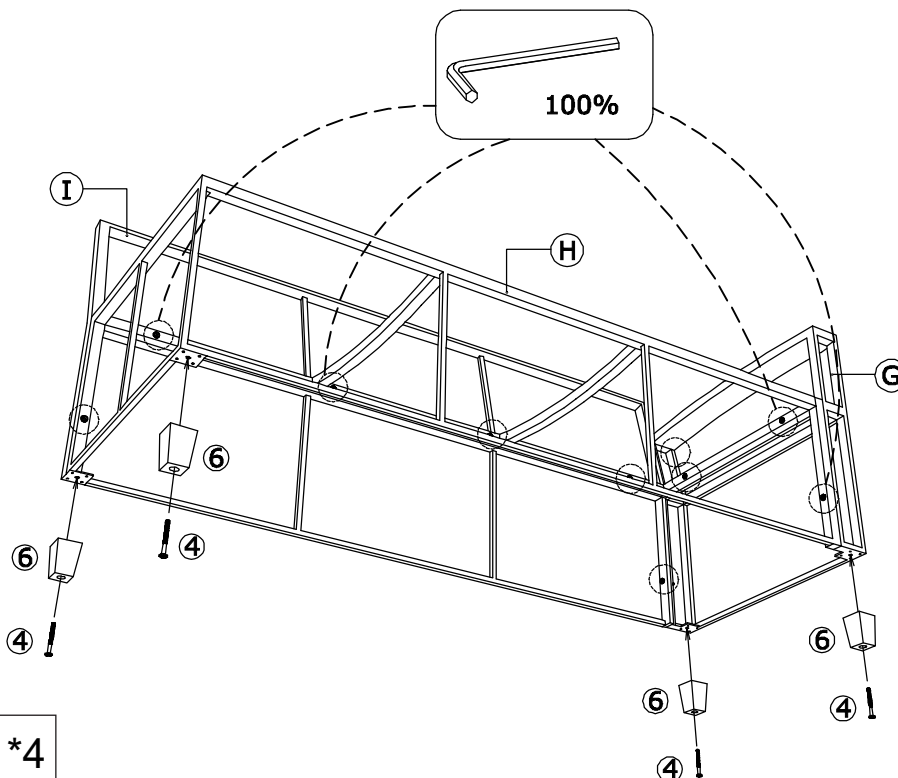


- ④ *4
- ⑥ *4

STEP 7:


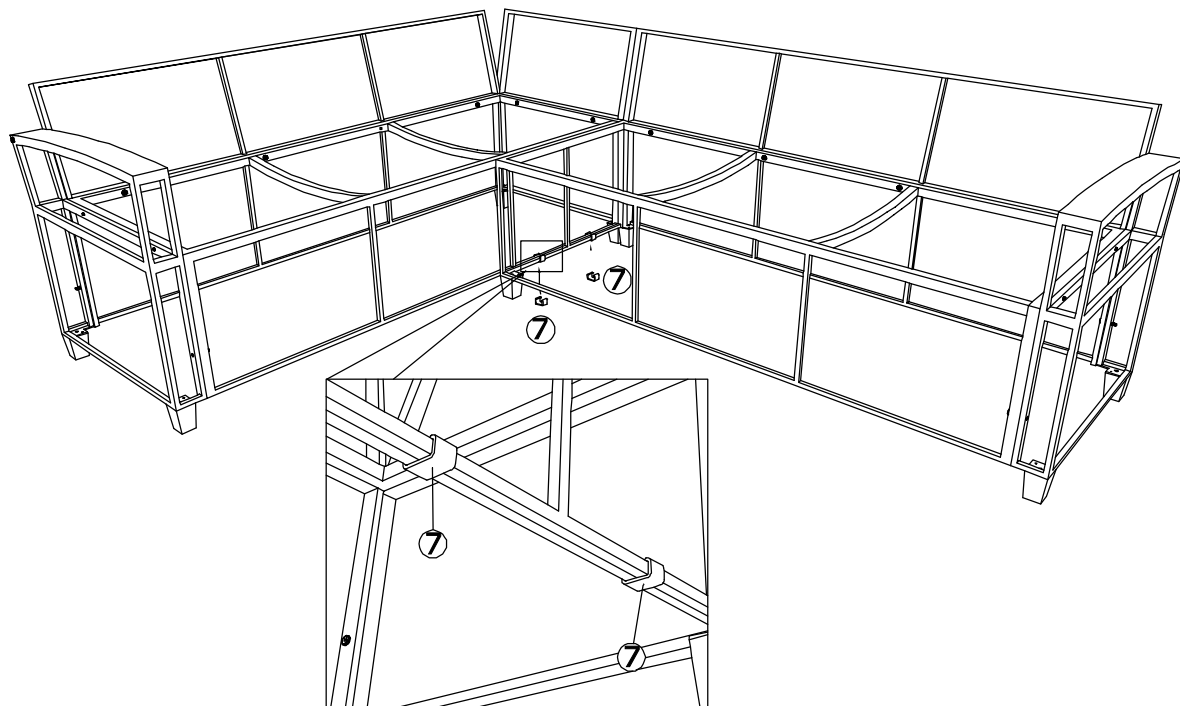


⑦*2

STEP 8:


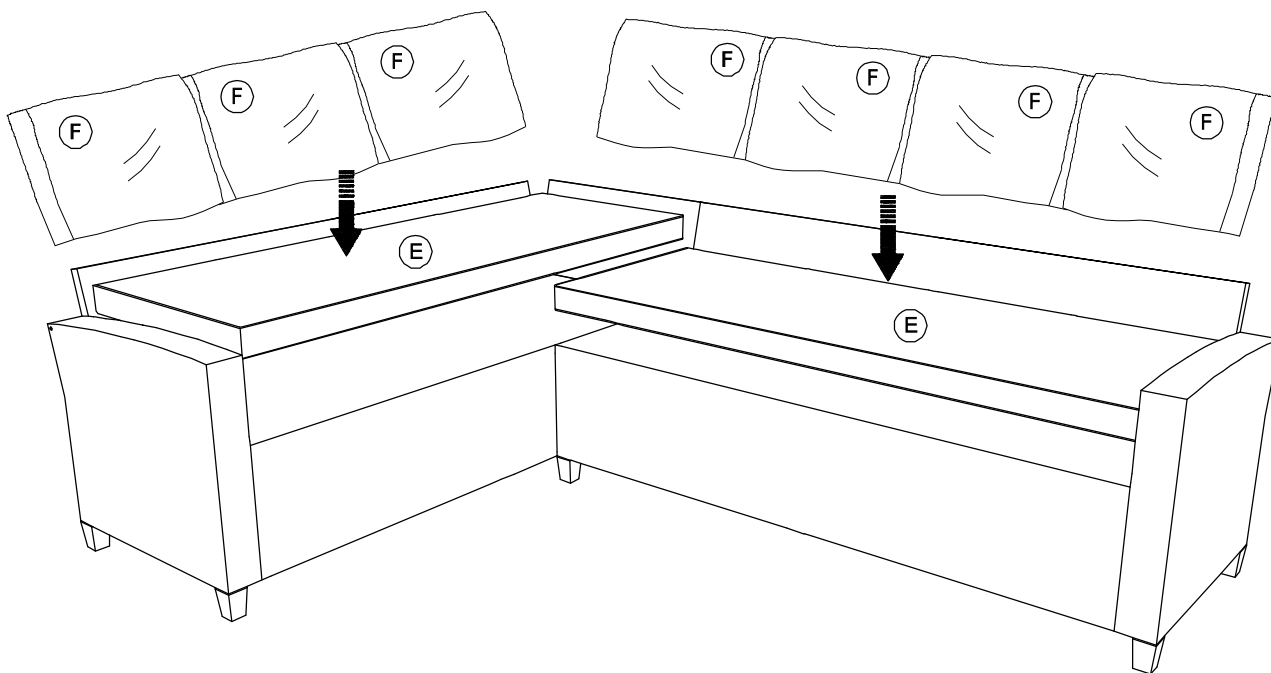


STEP 9:

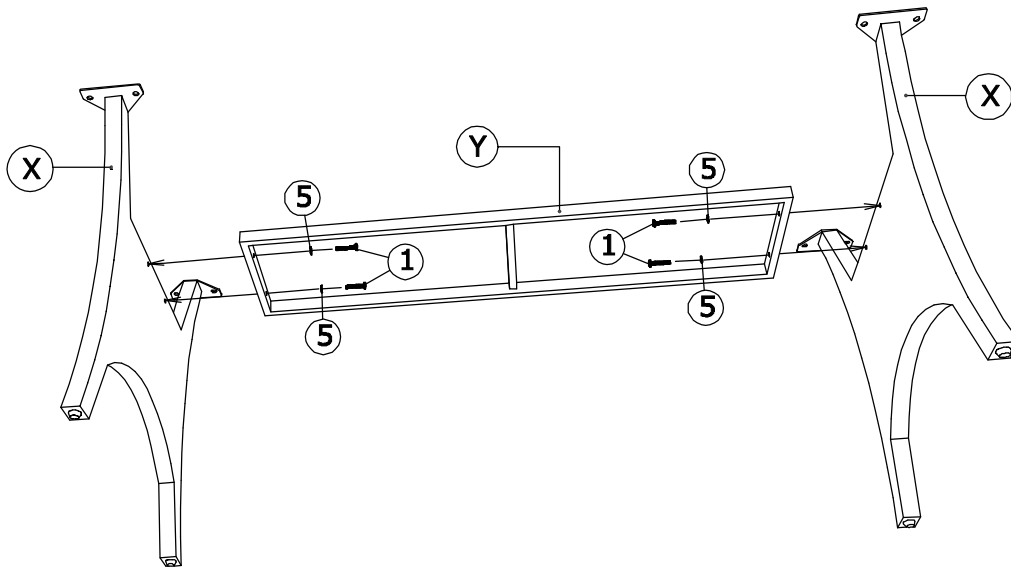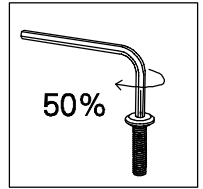

① *4 ⑤ *4

STEP 10:

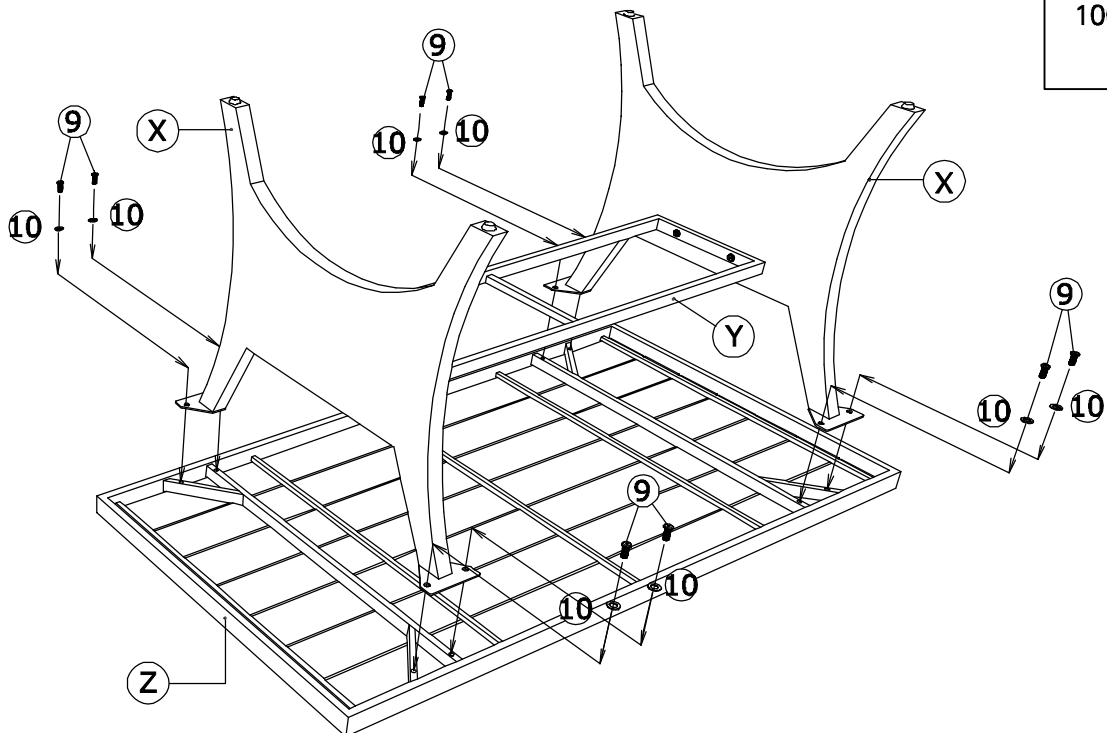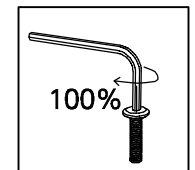

⑨ *8 ⑩ *8