

installation instructions:

PVC Fretwork Wall Panels

SAFETY INSTRUCTIONS

- Make sure to use the correct tools recommended.
- Wear proper protective gear.
- Follow fixture, power tools, paint manufacturers' instructions, and users manuals.
- Use common sense and follow good construction practices.

TOOL & MATERIAL CHECKLIST

- ☐ Standard power grab adhesive
- ☐ Utility Knife, Circular Saw, or Table Saw
- ☐ 100% acrylic paint
- ☐ Power drill or hammer
- ☐ Fine sandpaper
- ☐ Small brad nails
- ☐ Chalk line and measuring tape

SPECIAL INSTRUCTIONS AND NOTES

- It is highly recommended that you paint or finish the panels before installation.
- Recommended use of 100% acrylic latex paint for PVC products.
- Clean the installation surface and back of panel of any debris with a clean cloth.
- Make sure the surface and the back of the panel are completely dry before installation.
- Before installing, acclimate the PVC panels in the room where you will be installing them.
- In most applications you will have to trim some panels. Cut them with a standard utility knife or power tool, such as a table saw. Sand cut edge to remove debris.
- Depending on your installation method, use standard power grip adhesive and small brad nails.

STEP BY STEP INSTRUCTIONS

- Smooth installation surface with sandpaper by removing excessive bumps or texture. Wipe wall clean to clear debris.
- We recommend laying out the desired layout before installation. Mark the installation points using a chalk line or straight edge and level.
 - A.** For single panels, start at either the top or bottom corner at the edge of the wall and work towards the opposite corner (Diagram A).
 - B.** For 2-piece panel sets start at the center and work out (Diagram B).
- Apply a small amount of adhesive to the back of the panel and secure with small brad nails. (Follow adhesive manufacturer's instructions for proper application.)
 - A.** Install panels side by side. (Diagram C).
 - B.** OR for a different look leave a gap between each panel. (Diagram D).

EXAMPLE INSTALLATION DIAGRAMS

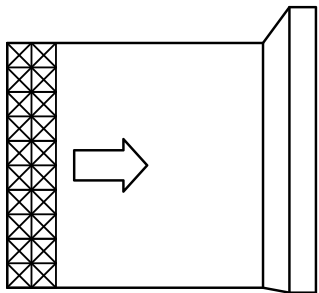


Diagram A

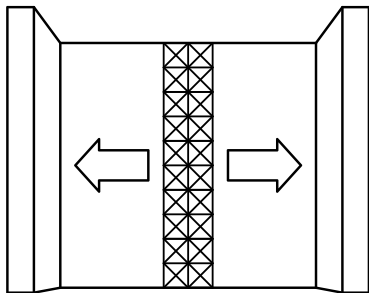


Diagram B

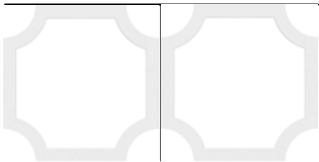


Diagram C


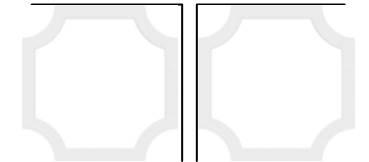


Diagram D

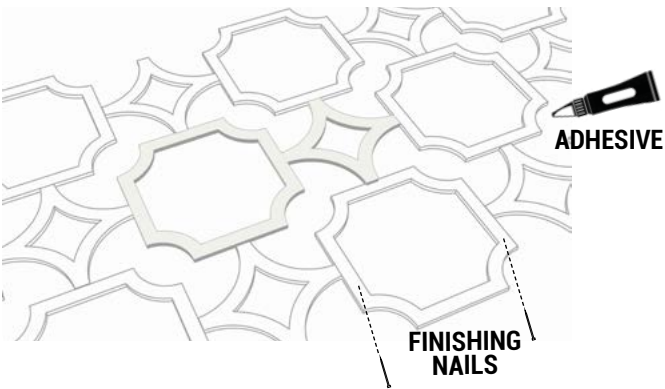

installation instructions:

Wood Fretwork Wall Panels

SAFETY INSTRUCTIONS

- Make sure to use the correct tools recommended.
- Wear proper protective gear.
- Follow fixture, power tools, paint manufacturers' instructions, and users manuals.
- Use common sense and follow good construction practices.

TOOL & MATERIAL CHECKLIST

- ☐ Standard power grab adhesive
- ☐ Circular Saw or Table Saw
- ☐ Paint or quality wood stain
- ☐ Paint brush or roller
- ☐ Power drill or hammer
- ☐ Fine sandpaper
- ☐ Small brad nails
- ☐ Chalk line and measuring tape

SPECIAL INSTRUCTIONS AND NOTES

- It is highly recommended that you paint or stain the panels before installation.
- It is recommended for finishing to use quality paint for MDF panels and stain for all other wood species.
- Make sure the surface and the back of the panel are completely dry before installation.
- Before installing, acclimate the wood panels in the room where you will be installing them.
- In most applications you will have to trim some panels. Cut them with a standard table saw or power tool. Sand cut edge to remove debris.
- Depending on your installation method, use standard power grip adhesive and small brad nails.

STEP BY STEP INSTRUCTIONS

- Prime and paint wood fretwork before installing or use quality stain for wood species other than MDF. Touch up paint or stain as needed after installation.
- Smooth installation surface with sandpaper by removing excessive bumps or texture. Wipe wall clean to clear debris.
- We recommend laying out the desired layout before installation. Mark the installation points using a chalk line or straight edge and level.
 - A.** For single panels, start at either the top or bottom corner at the edge of the wall and work towards the opposite corner (Diagram A).
 - B.** For 2-piece panel sets start at the center and work out (Diagram B).
- Apply a small amount of adhesive to the back of the panel and secure with small brad nails. (Follow adhesive manufacturer's instructions for proper application.)
 - A.** Install panels side by side. (Diagram C).
 - B.** OR for a different look leave a gap between each panel. (Diagram D).

EXAMPLE INSTALLATION DIAGRAMS

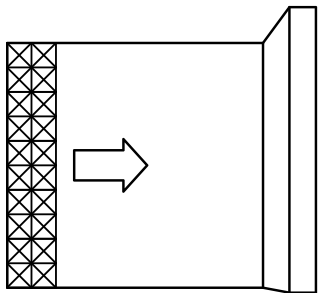


Diagram A

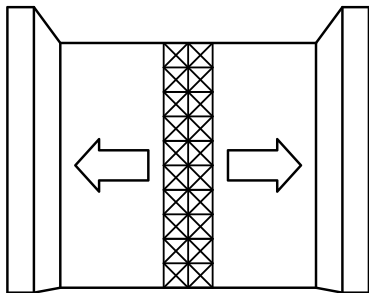


Diagram B

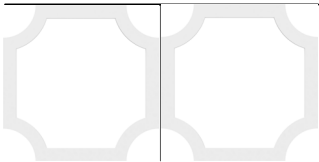


Diagram C

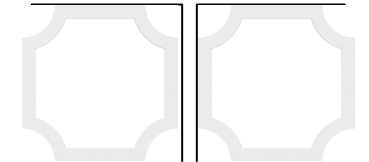


Diagram D

