

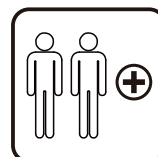
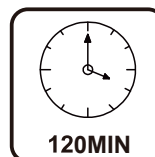
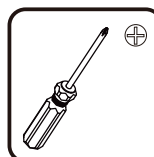


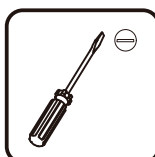


Please note: Items cannot be returned once assembled.

HLG117


Version:1.0

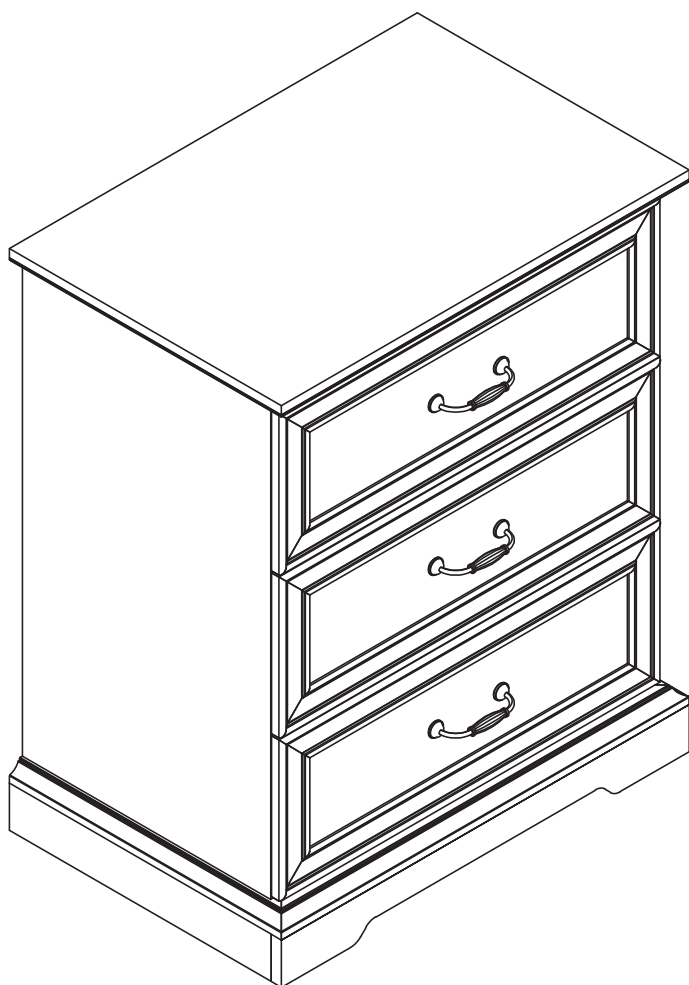


EN_IMPORTANT, RETAIN FOR FUTURE REFERENCE: READ CAREFULLY.

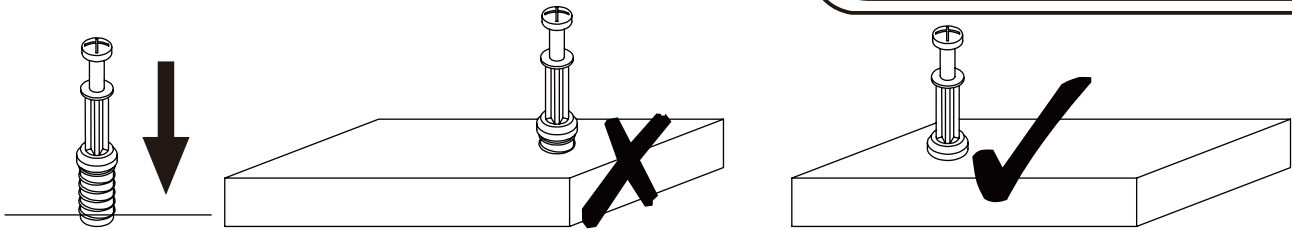


EN_QUICKFIT: Tighten quickfit until shoulder is flush with panel. Do not overtighten or undertighten.

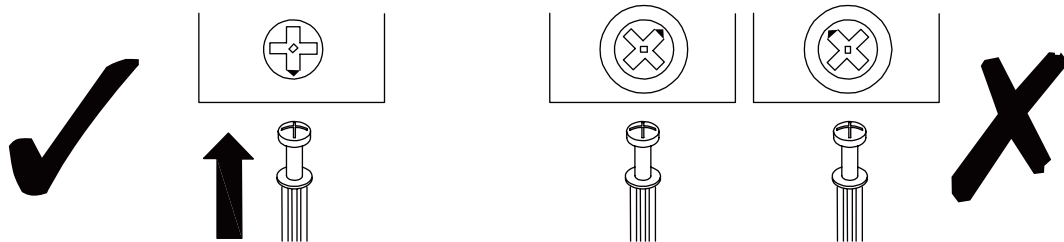










EN_CAM LOCK: When fitting cam lock, ensure starting position is correct before you insert connecting quickfit.




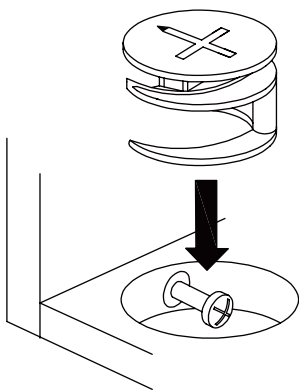




EN_Quickfit head should be in the centre of the cam lock when the two panels are joined.
Cam lock should be inserted before quickfit.











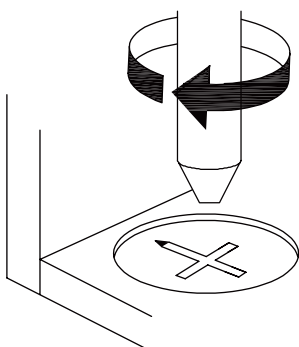





EN_Turn cam lock clockwise to tighten.

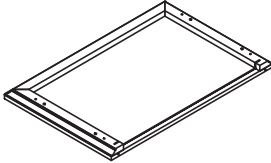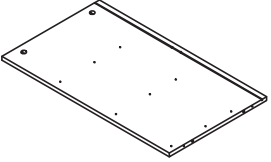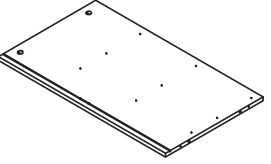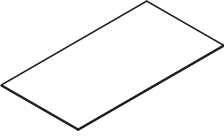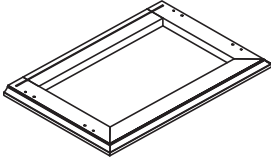NO.	PARTS	QTY	SPARE
1		x1	
2		x1	
3		x1	
4		x2	
5		x1	
6		x1	
8		x1	
9		x1	
10		x1	
11		x3	

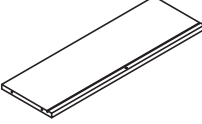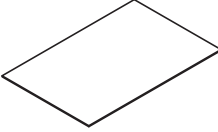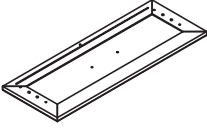NO.	PARTS	QTY	SPARE
12		x3	
13		x3	
14		x3	
15		x3	
16		x3	
	 Hardware Kit	x1	



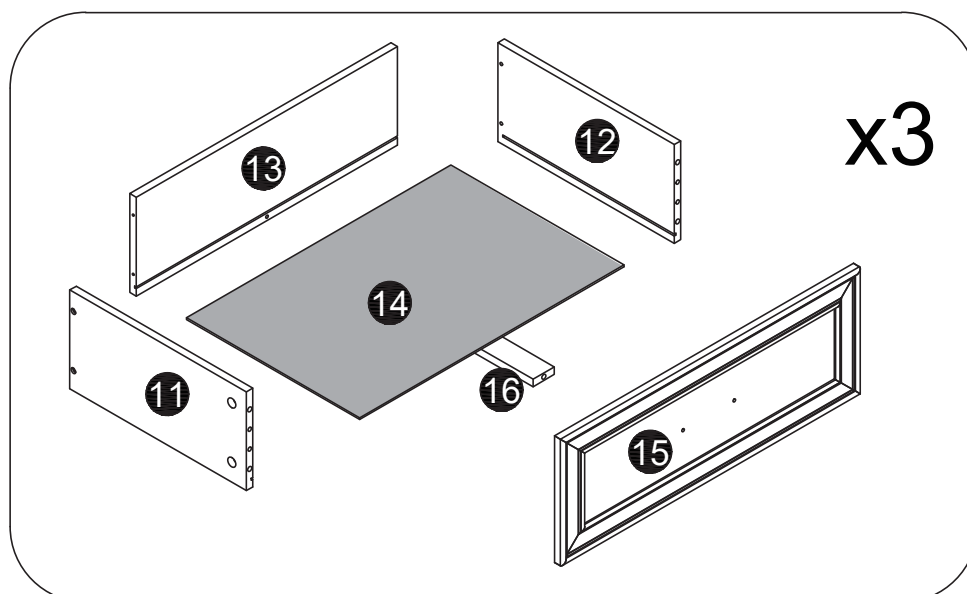
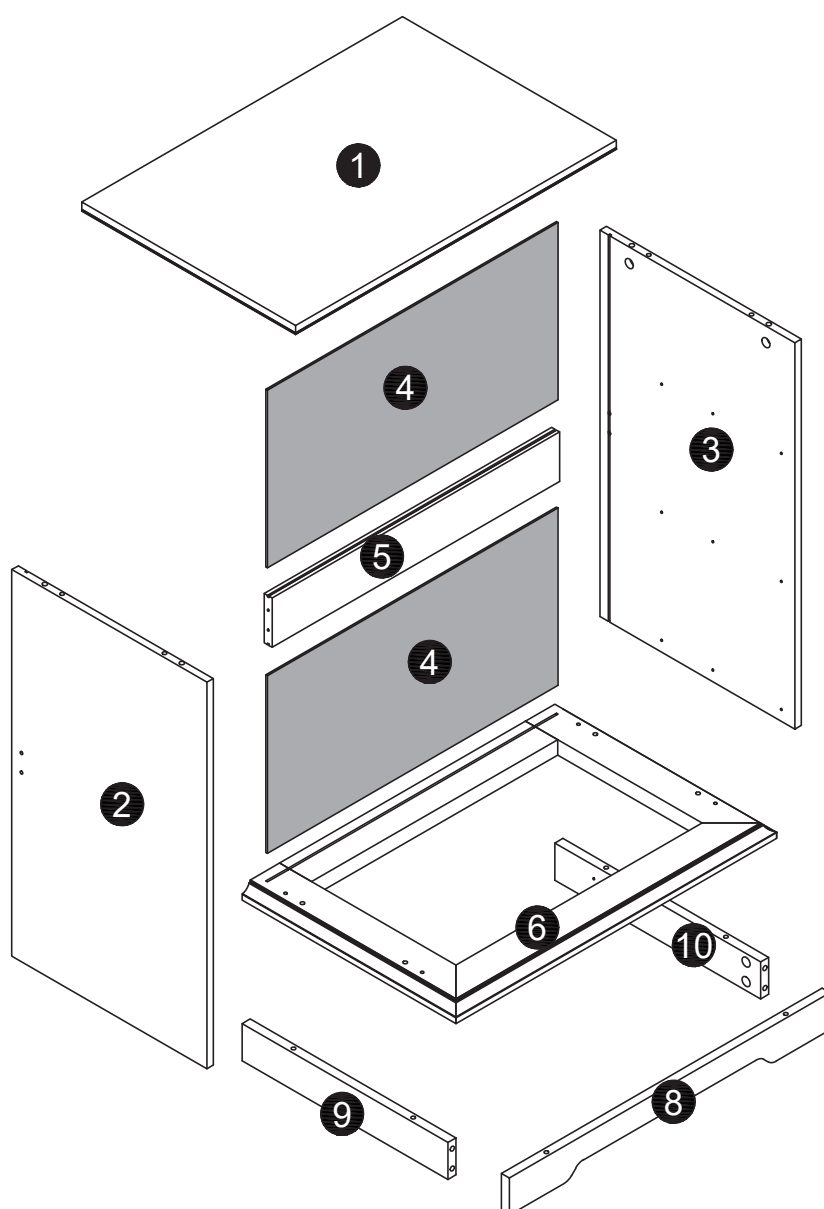




A x23 Ø6x35mm +2(spare)	B x23 Ø15x10mm +2(spare)	C x26 Ø6x30mm +2(spare)	D x17 Ø4x35mm +1(spare)	E x48 Ø3.5x12mm +4(spare)	F x3
					
G x8 Ø3x16mm +1(spare)	H x6	I x4 Ø15mm +3(spare)	J x2 Ø4x14mm	K x2	L x2 Ø6x30mm
 G-1					
M x8 Ø5x50mm +1(spare)	CL x3 L300mm	CR x3 L300mm	DL x3 L300mm	DR x3 L300mm	
					

A x15	B x15	C x12	D x15
			

01


x3

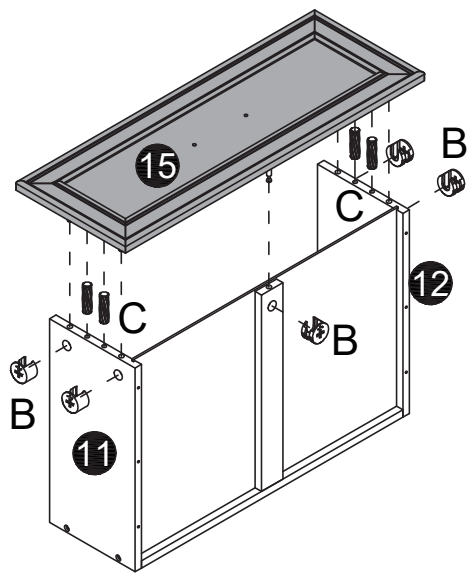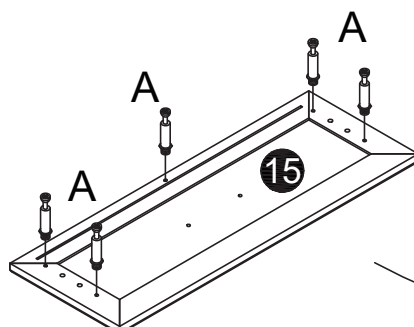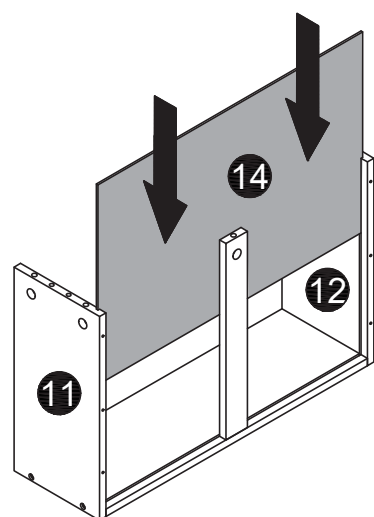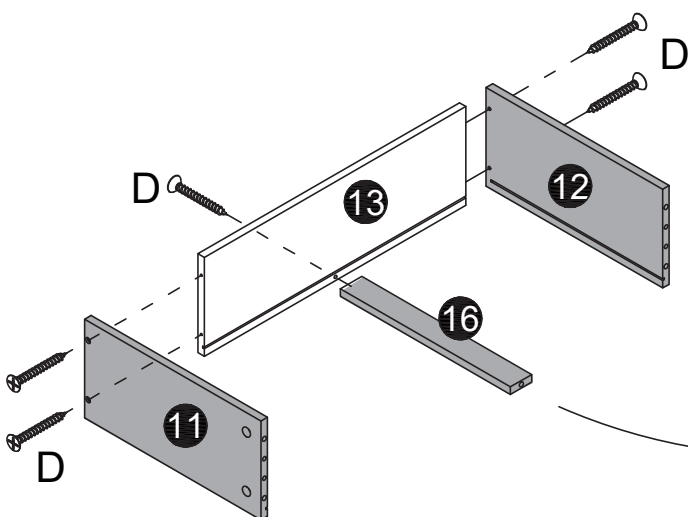

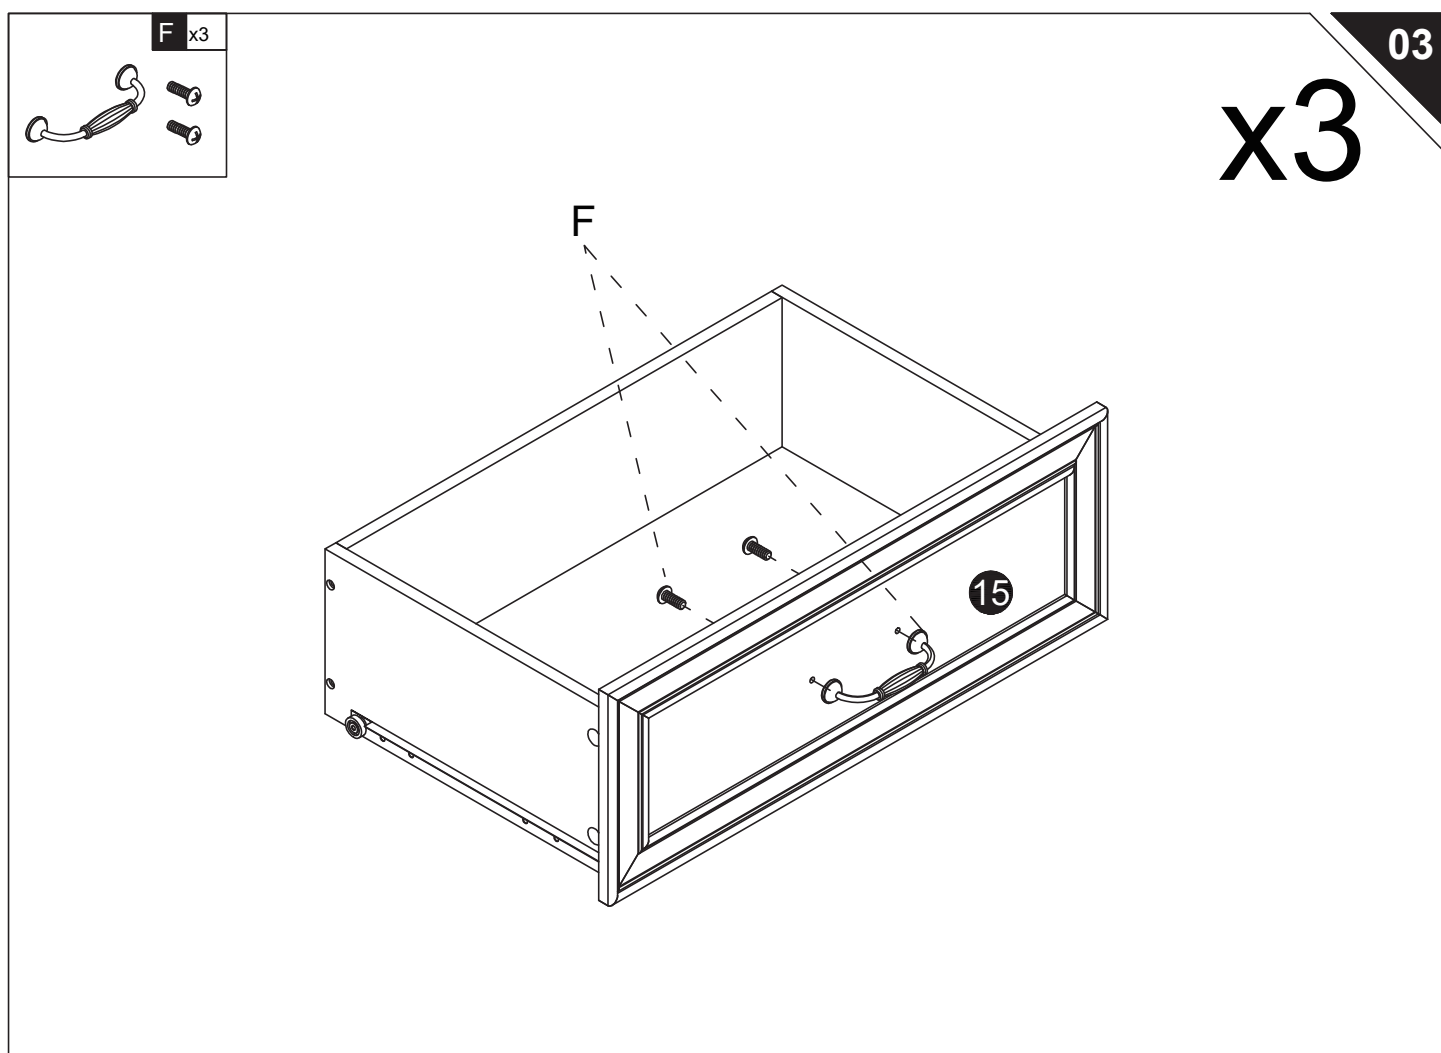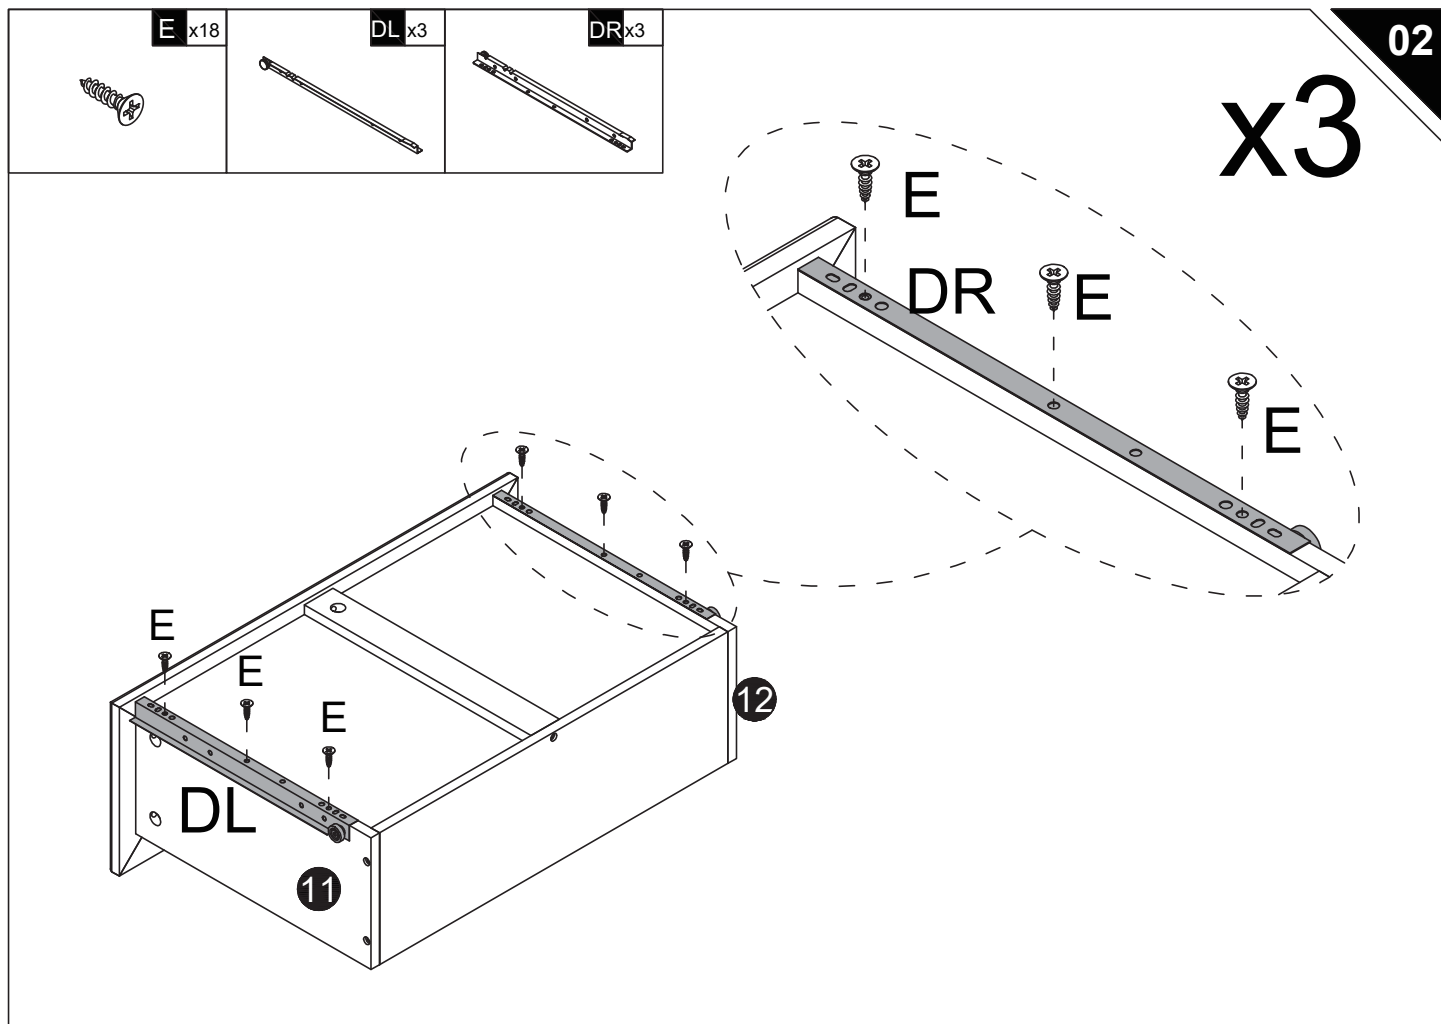



E x9

CL x3

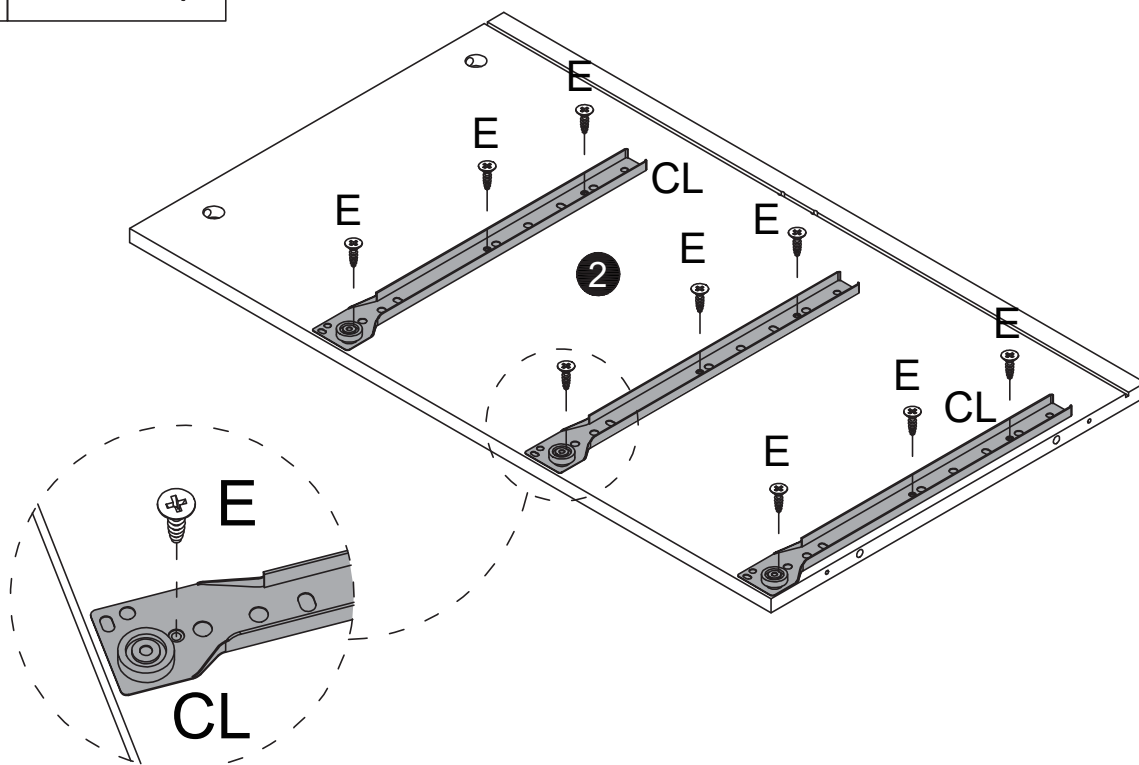


E x9

CR x3

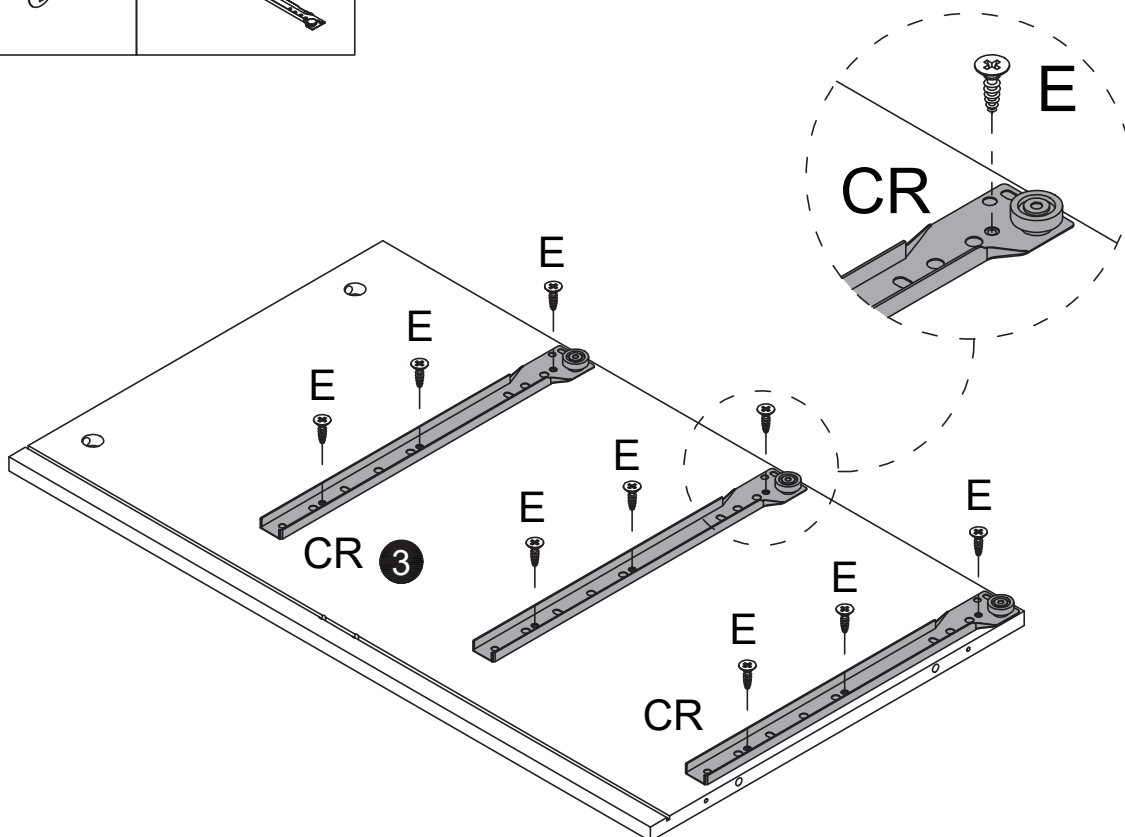

C x4





M x4

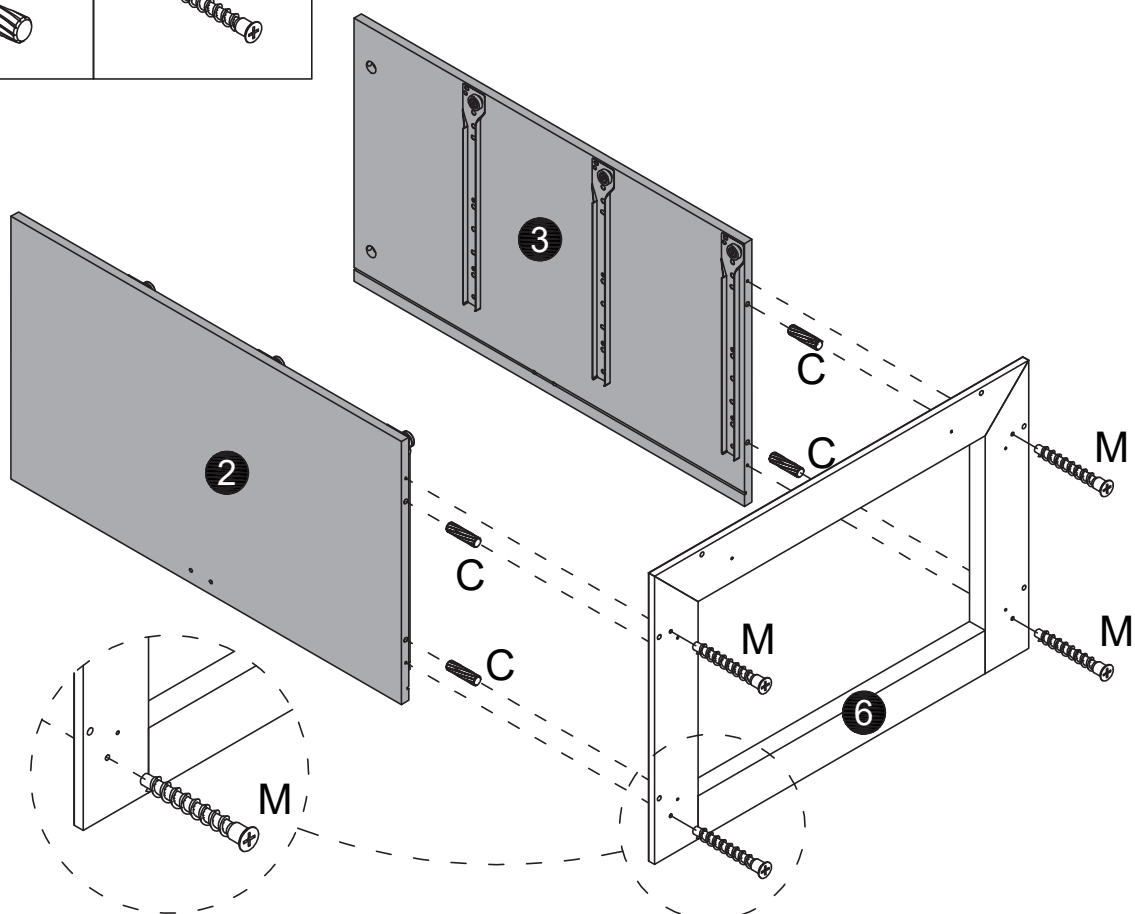

A x4


E x6

H x6

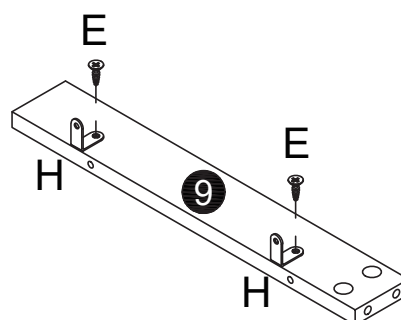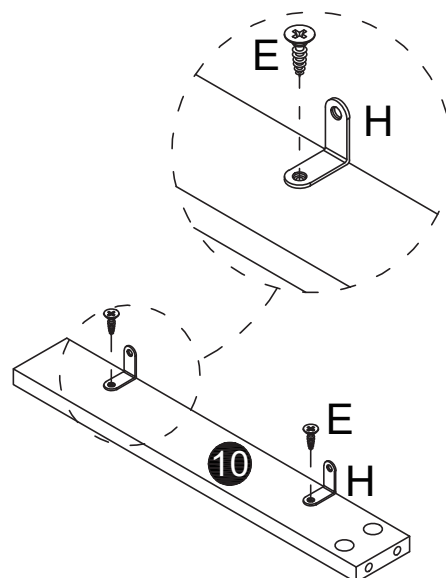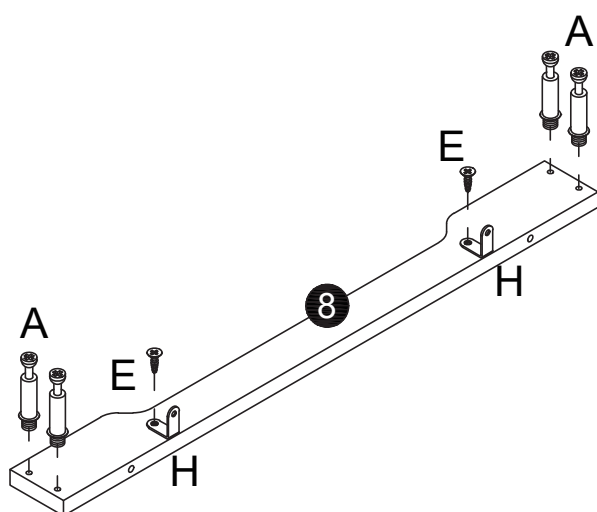

B x4


08

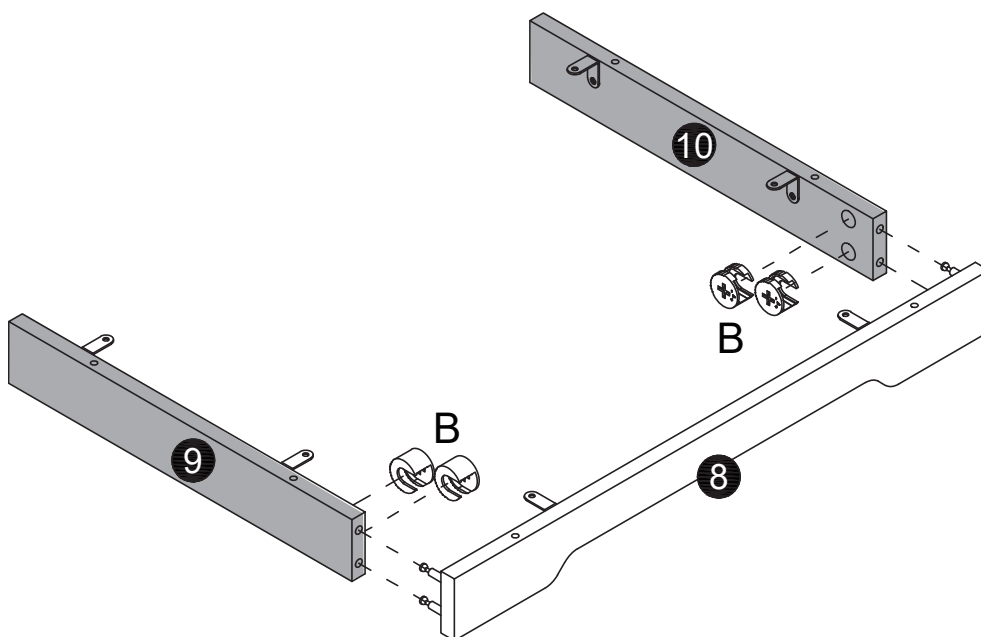


C x6




E x6

09

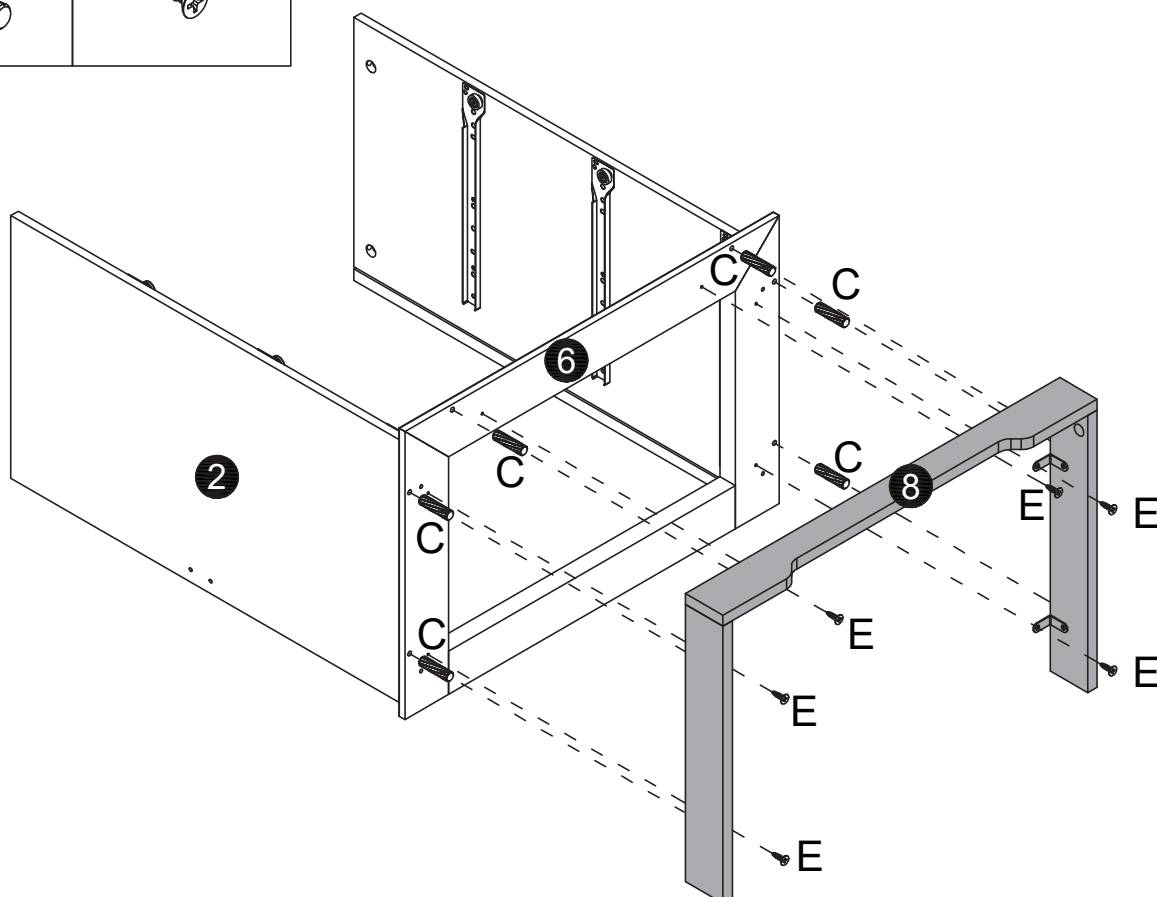

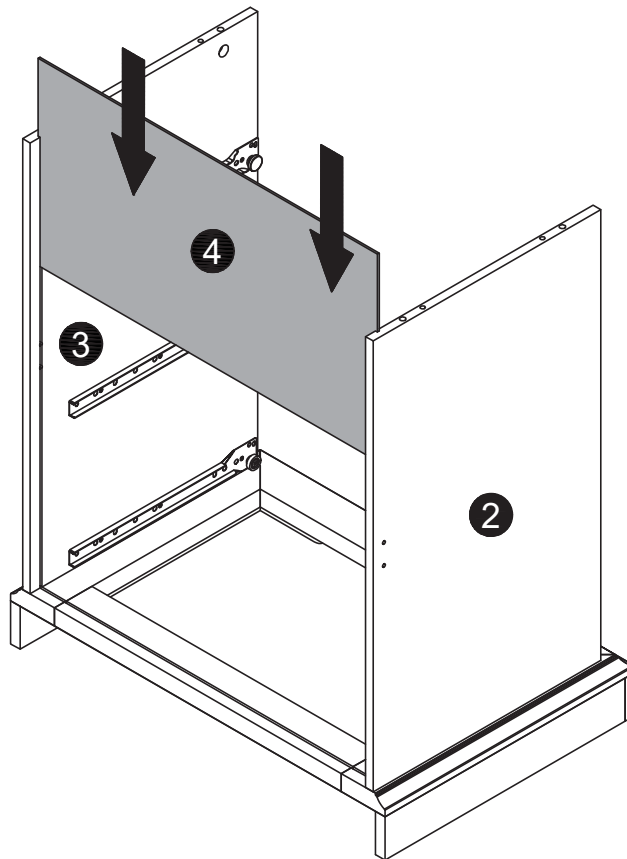


M x4

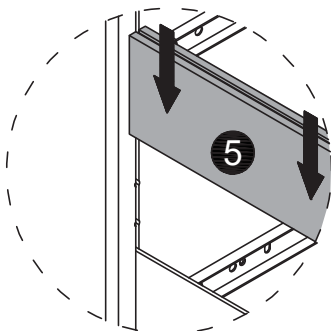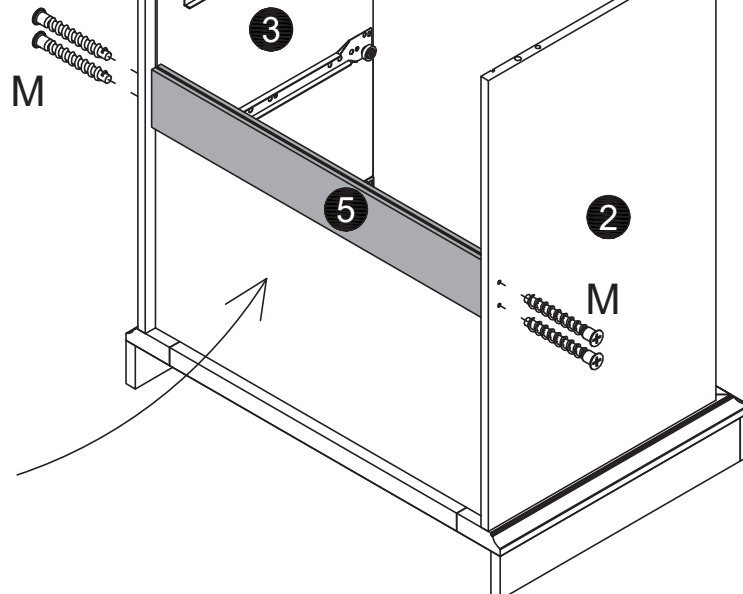


C x4




12

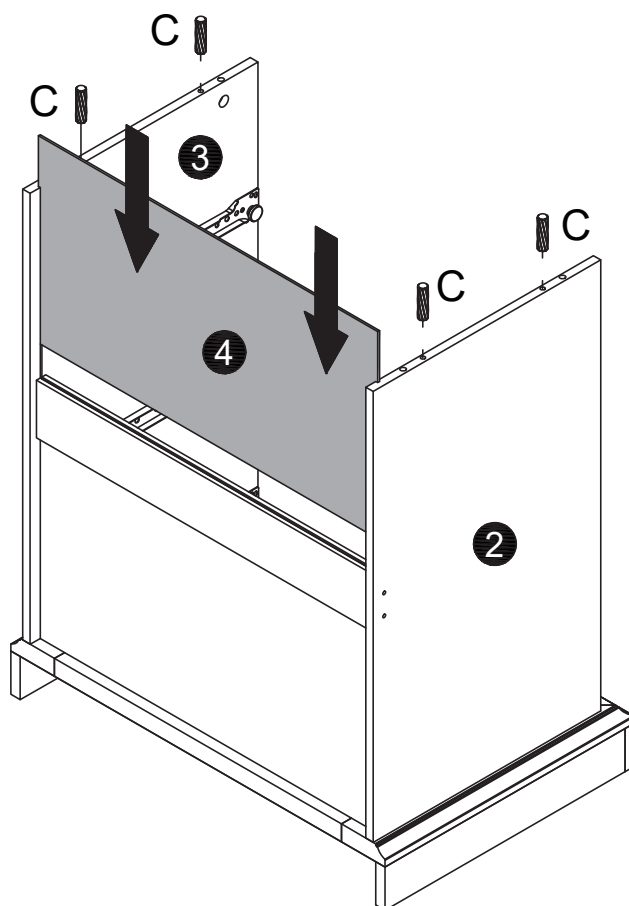


A x4



13

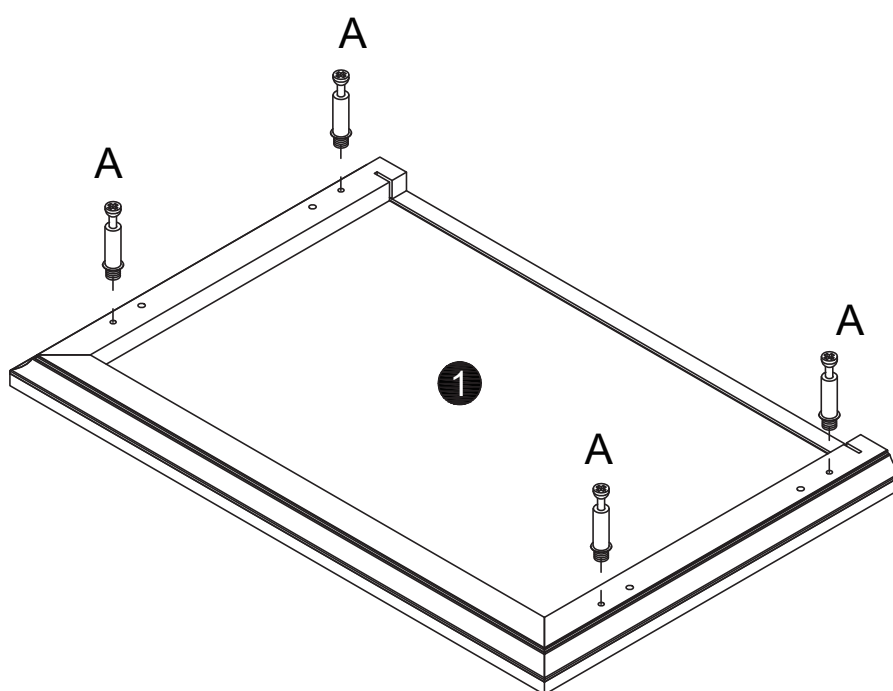

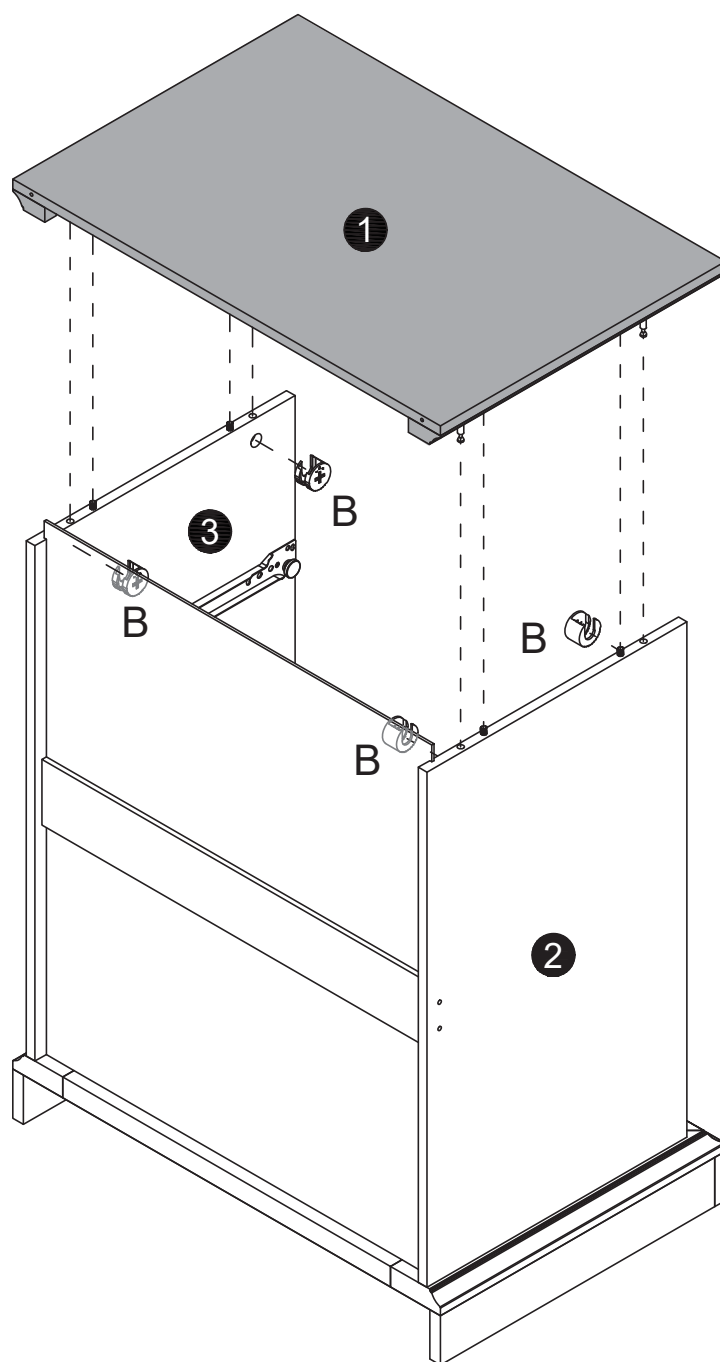





G-1




G-2

G x8

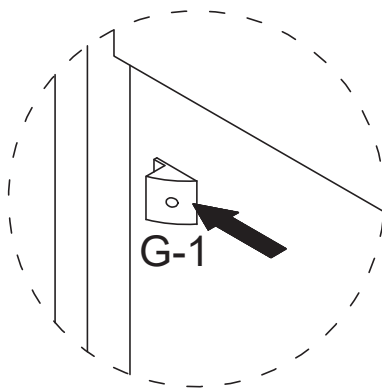
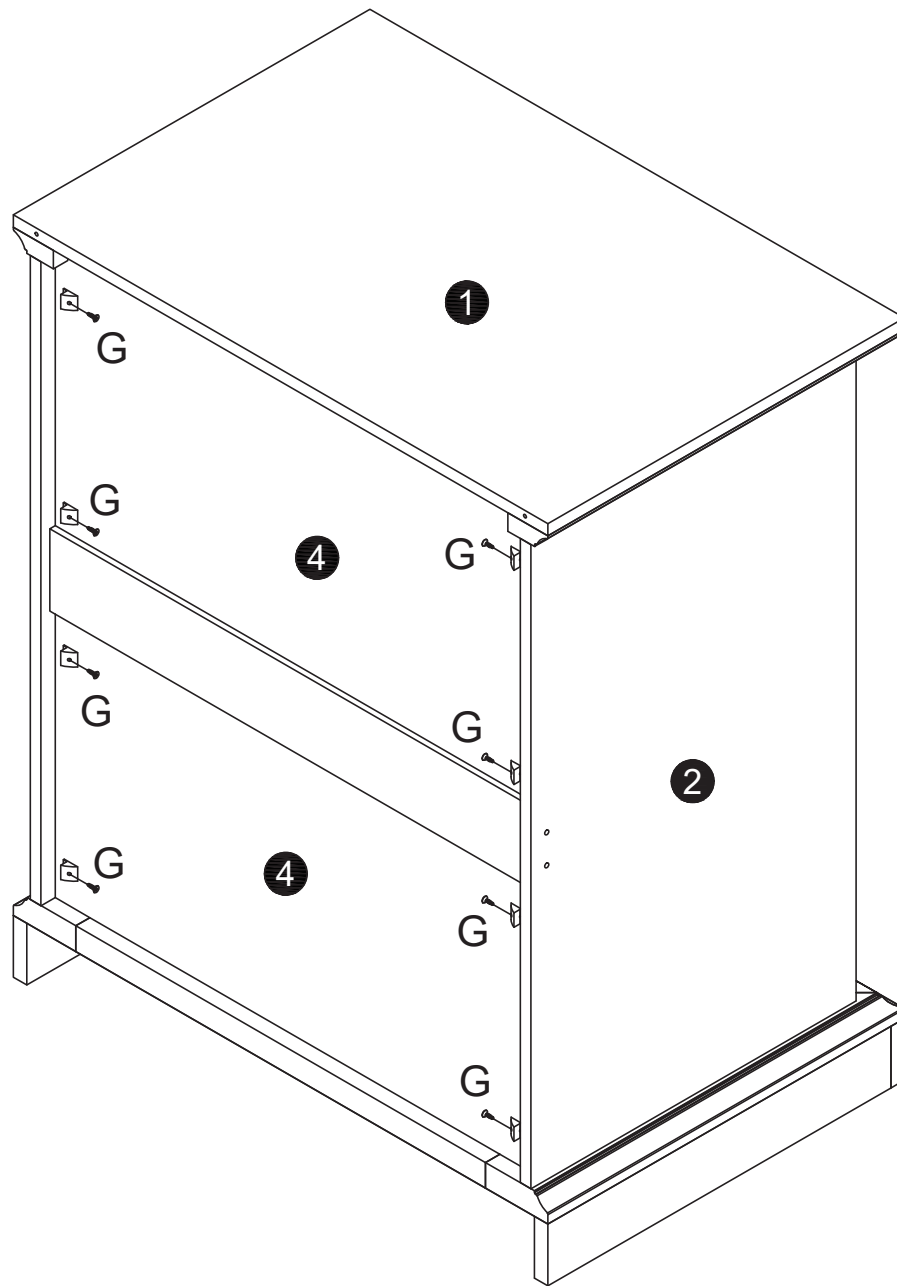


G-1

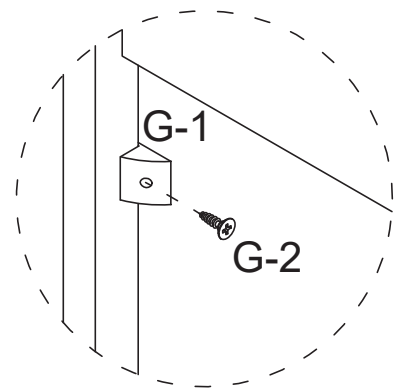


G-1

G-2

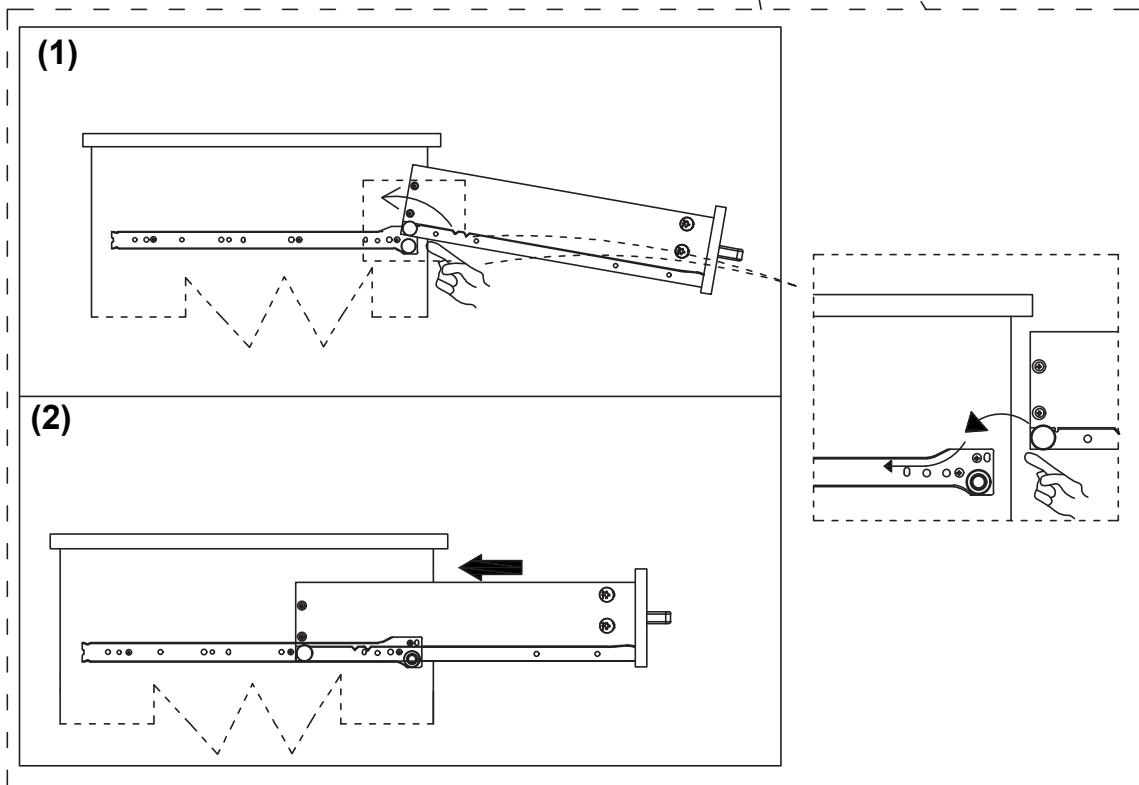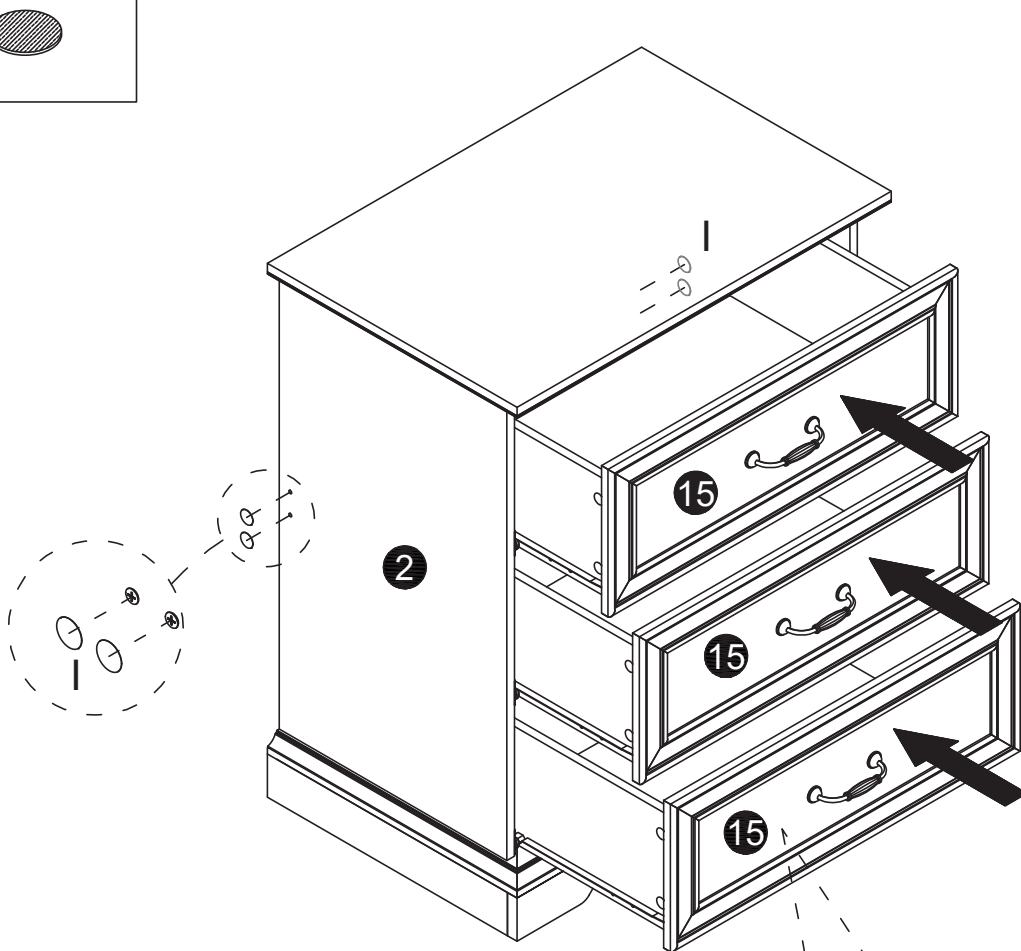

D x2





J x2




K x2




L x2

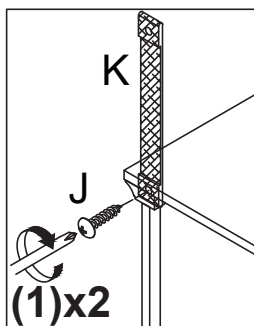


First fix the anti-rewind screw in the reserved hole of the product.

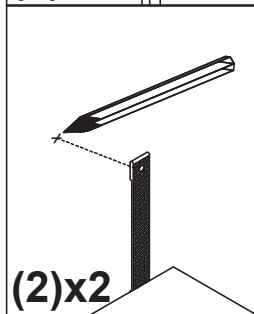


then, use a ruler to measure the approximate height of the product on the wall, and then mark it with a pen.

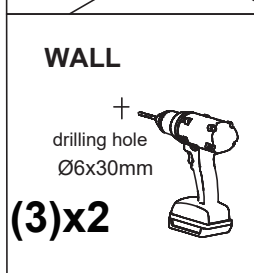

Then use a tape drill to make holes in the wall that are suitable for the product screws.

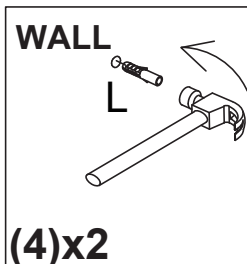

Then, put the expansion bolt into the hole

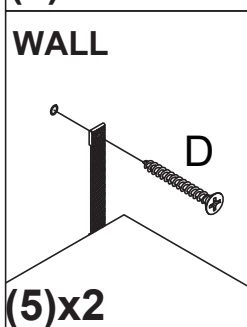

Finally, pass the matching screws through the "anti-rewind" and tighten them to fix them on the wall.

WALL

