











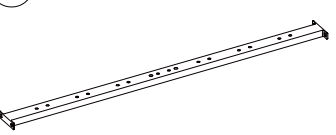
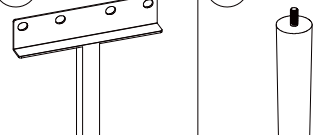
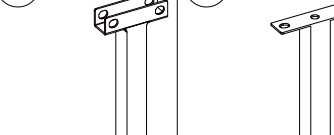
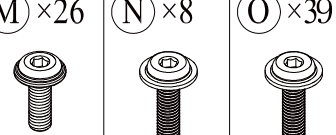
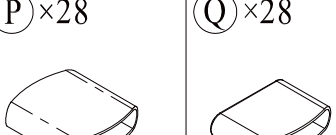
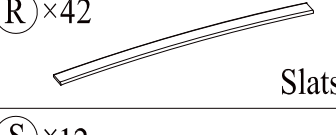
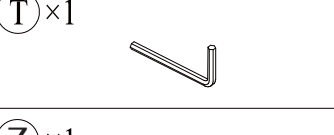
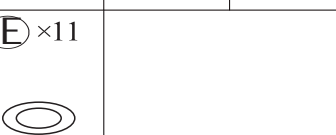
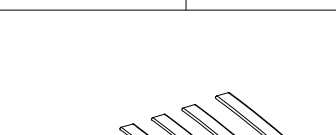

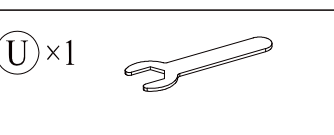
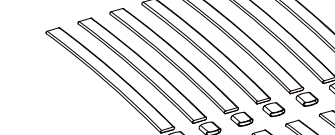
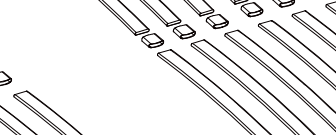
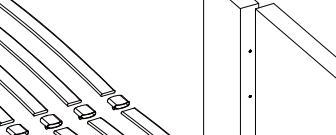










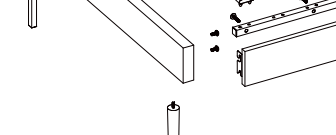
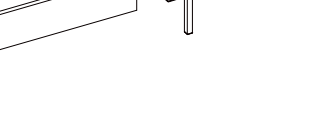


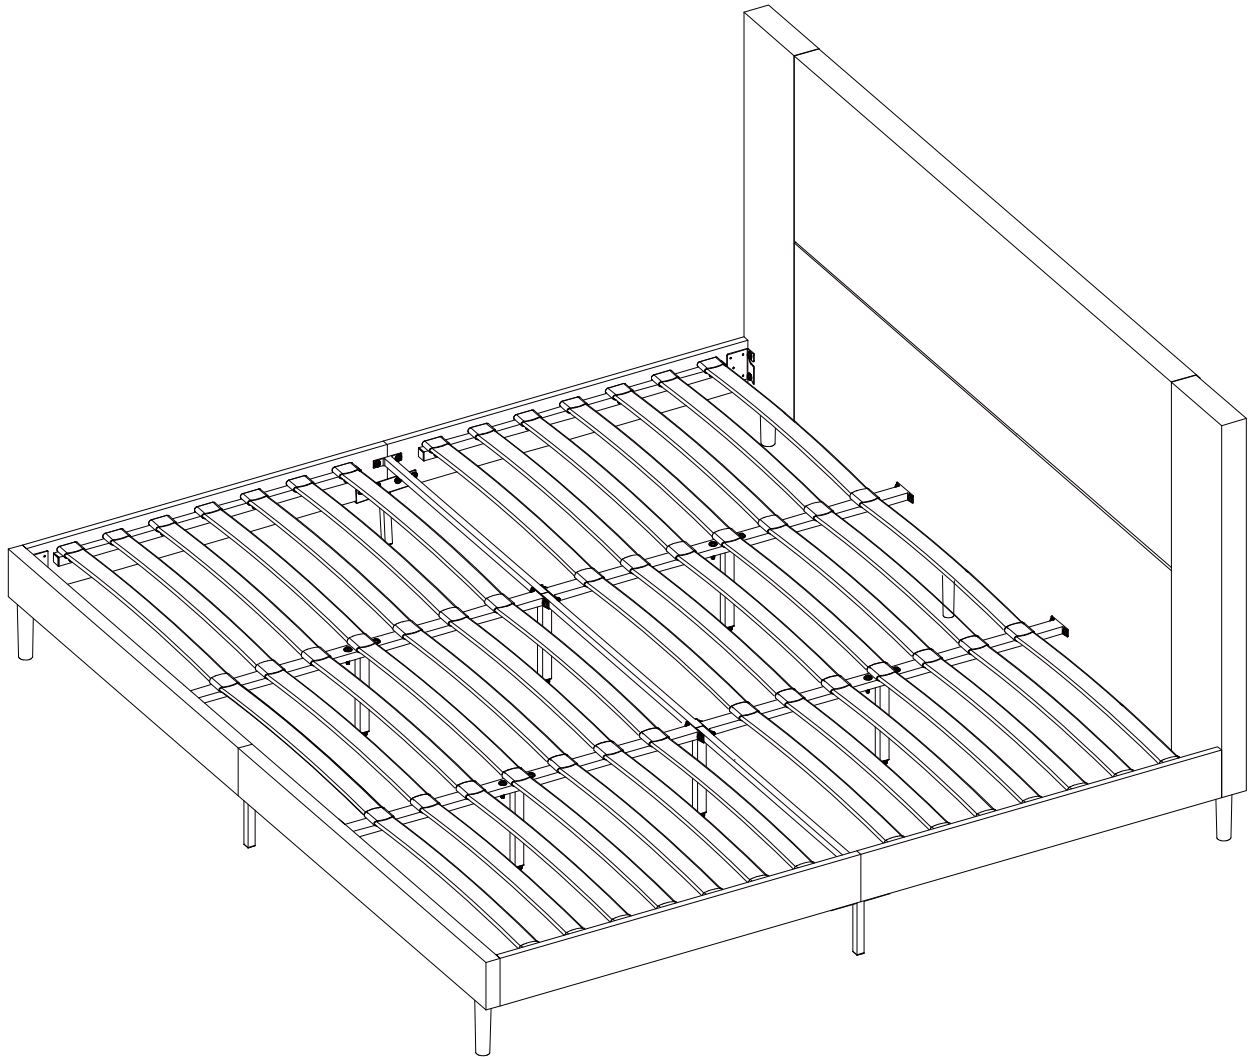


ASSEMBLY INSTRUCTION


81 Series Bed Frame

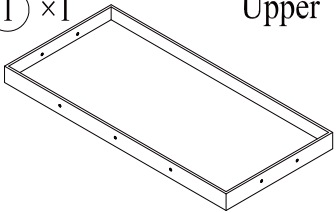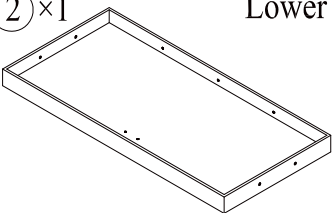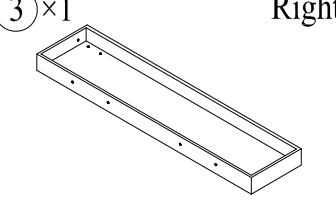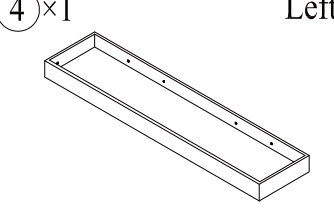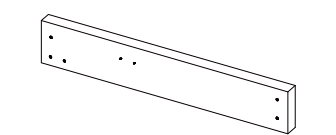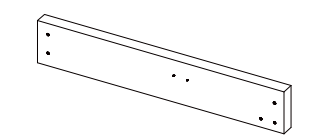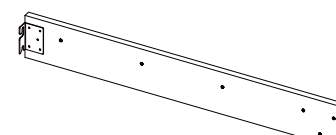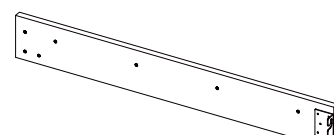King Size

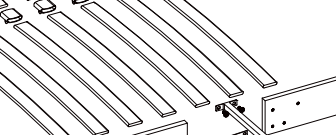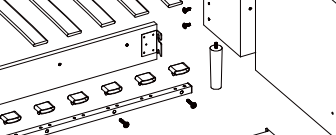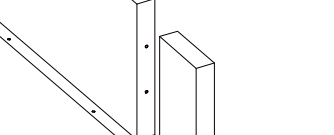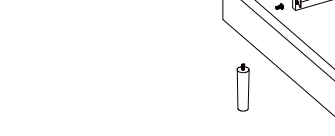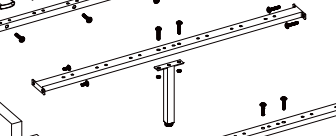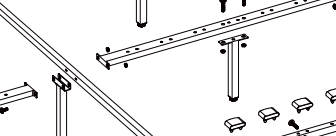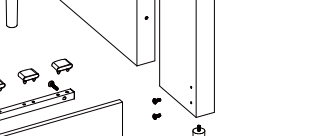


If any missing parts or defective parts, please contact us.

| | | | |
|--|---|--|---|
| <div>① ×1</div> <div>Upper</div>  | <div>② ×1</div> <div>Lower</div>  | <div>③ ×1</div> <div>Right</div>  | <div>④ ×1</div> <div>Left</div>  |
| <div>⑤ ×1</div> <div>Footboard</div>  | <div>⑥ ×1</div> <div>Footboard</div>  | <div>⑦ ×2</div> <div>Side board</div>  | <div>⑧ ×2</div> <div>Side board</div>  |
| <div>⑦ ×2</div> <div>Side board</div>  | <div>⑦ ×2</div> <div>Side board</div>  | <div>⑦ ×2</div> <div>Side board</div>  | <div>⑦ ×2</div> <div>Side board</div>  |
| <div>⑦ ×2</div> <div>Side board</div>  | <div>⑦ ×2</div> <div>Side board</div>  | <div>⑦ ×2</div> <div>Side board</div>  | <div>⑦ ×2</div> <div>Side board</div>  |
| <div>⑦ ×2</div> <div>Side board</div>  | <div>⑦ ×2</div> <div>Side board</div>  | <div>⑦ ×2</div> <div>Side board</div>  | <div>⑦ ×2</div> <div>Side board</div>  |
| <div>⑦ ×2</div> <div>Side board</div>  | <div>⑦ ×2</div> <div>Side board</div>  | <div>⑦ ×2</div> <div>Side board</div>  | <div>⑦ ×2</div> <div>Side board</div>  |
| <div>⑦ ×2</div> <div>Side board</div>  | <div>⑦ ×2</div> <div>Side board</div>  | <div>⑦ ×2</div> <div>Side board</div>  | <div>⑦ ×2</div> <div>Side board</div>  |
| <div>⑦ ×2</div> <div>Side board</div>  | <div>⑦ ×2</div> <div>Side board</div>  | <div>⑦ ×2</div> <div>Side board</div>  | <div>⑦ ×2</div> <div>Side board</div>  |
| <div>⑦ ×2</div> <div>Side board</div>  | <div>⑦ ×2</div> <div>Side board</div>  | <div>⑦ ×2</div> <div>Side board</div>  | <div>⑦ ×2</div> <div>Side board</div>  |
| <div>⑦ ×2</div> <div>Side board</div>  | <div>⑦ ×2</div> <div>Side board</div>  | <div>⑦ ×2</div> <div>Side board</div>  | <div>⑦ ×2</div> <div>Side board</div>  |

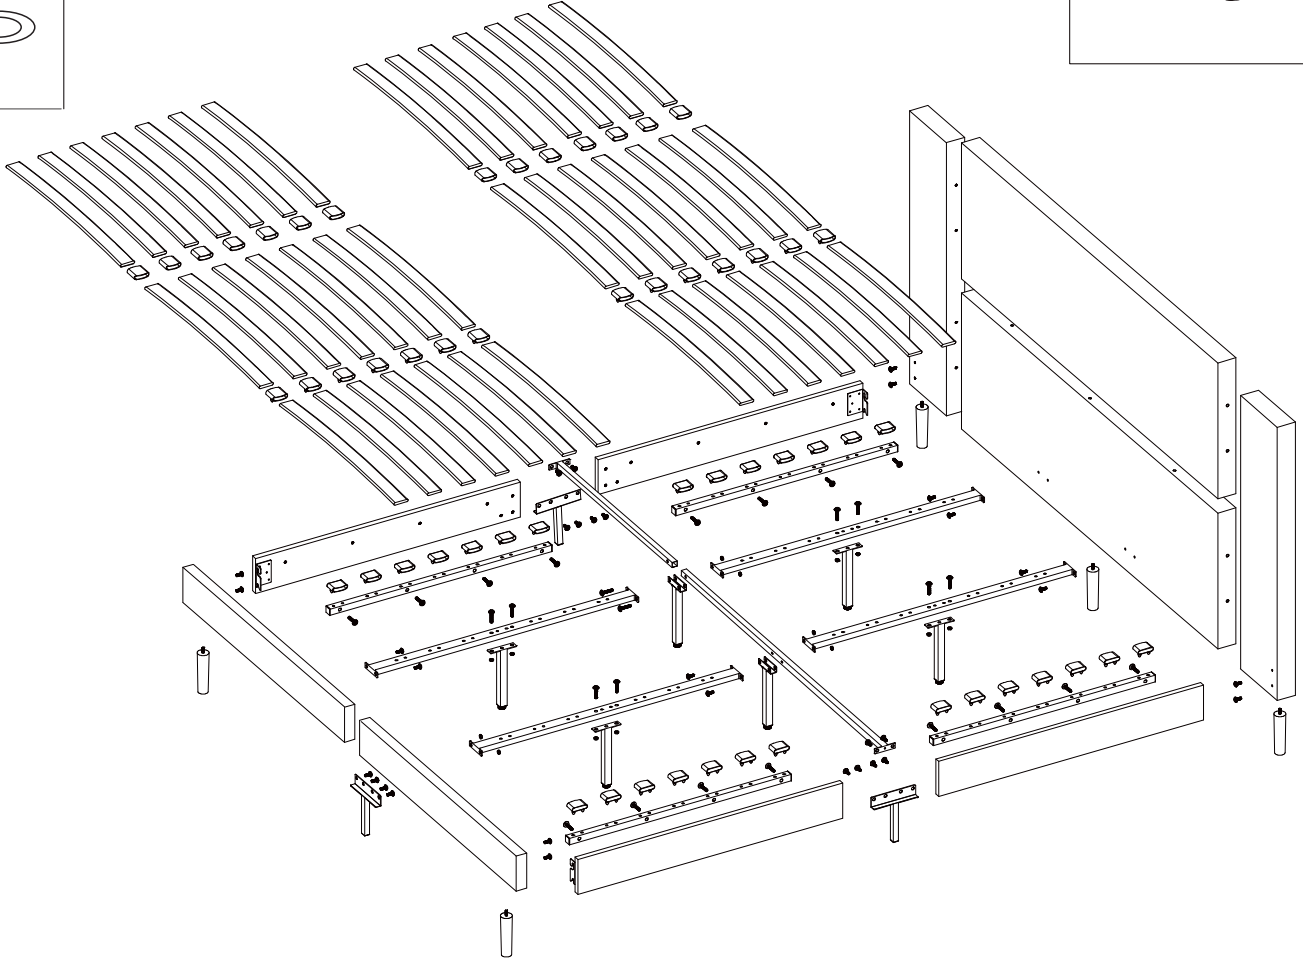



Clean the floor, next we need to install this bed frame on the floor.
Before you start, find a blanket and lay it flat on the floor.

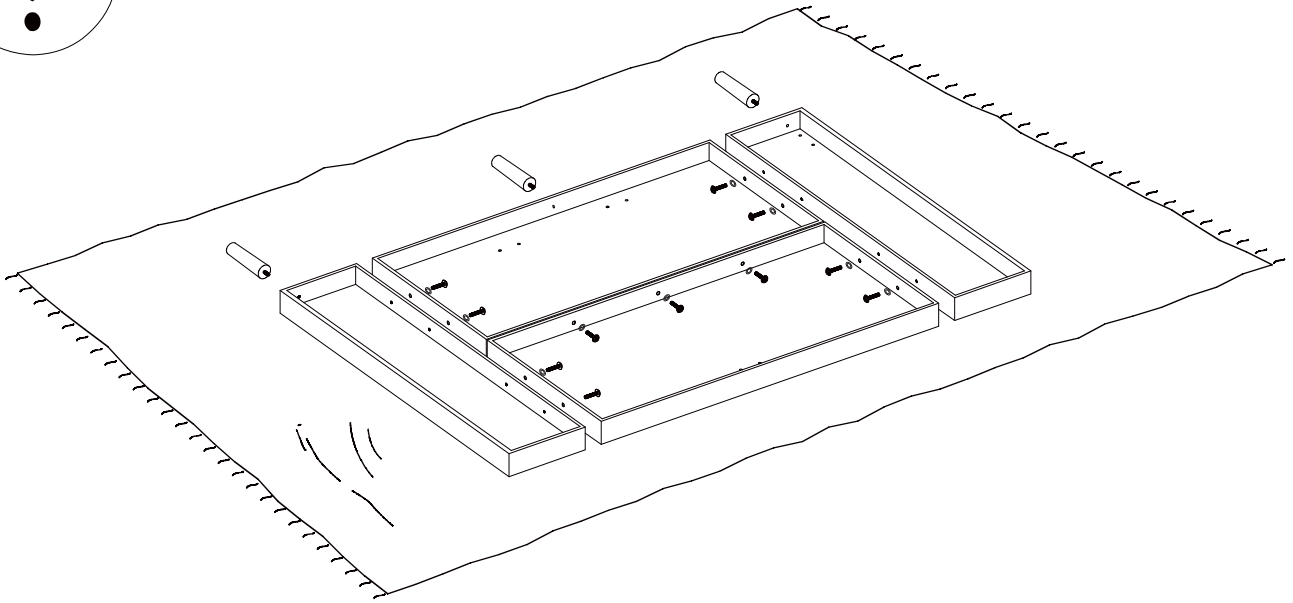


! Place the accessories to be installed in each step flat on the blanket, take inventory and clean anti-rust oil on tools before start assembling.
Complete one of the assemblies and lean against the wall to make room for the next step.

Step 1-1: Assemble Headboard

According to the following picture, check all accessories, preferably pre-positioned in position. Install all 11 screws, as well as the three bed feet.


! Be careful to use the correct screws. Attention the details of the "hand icon" instructions and do not place them incorrectly.

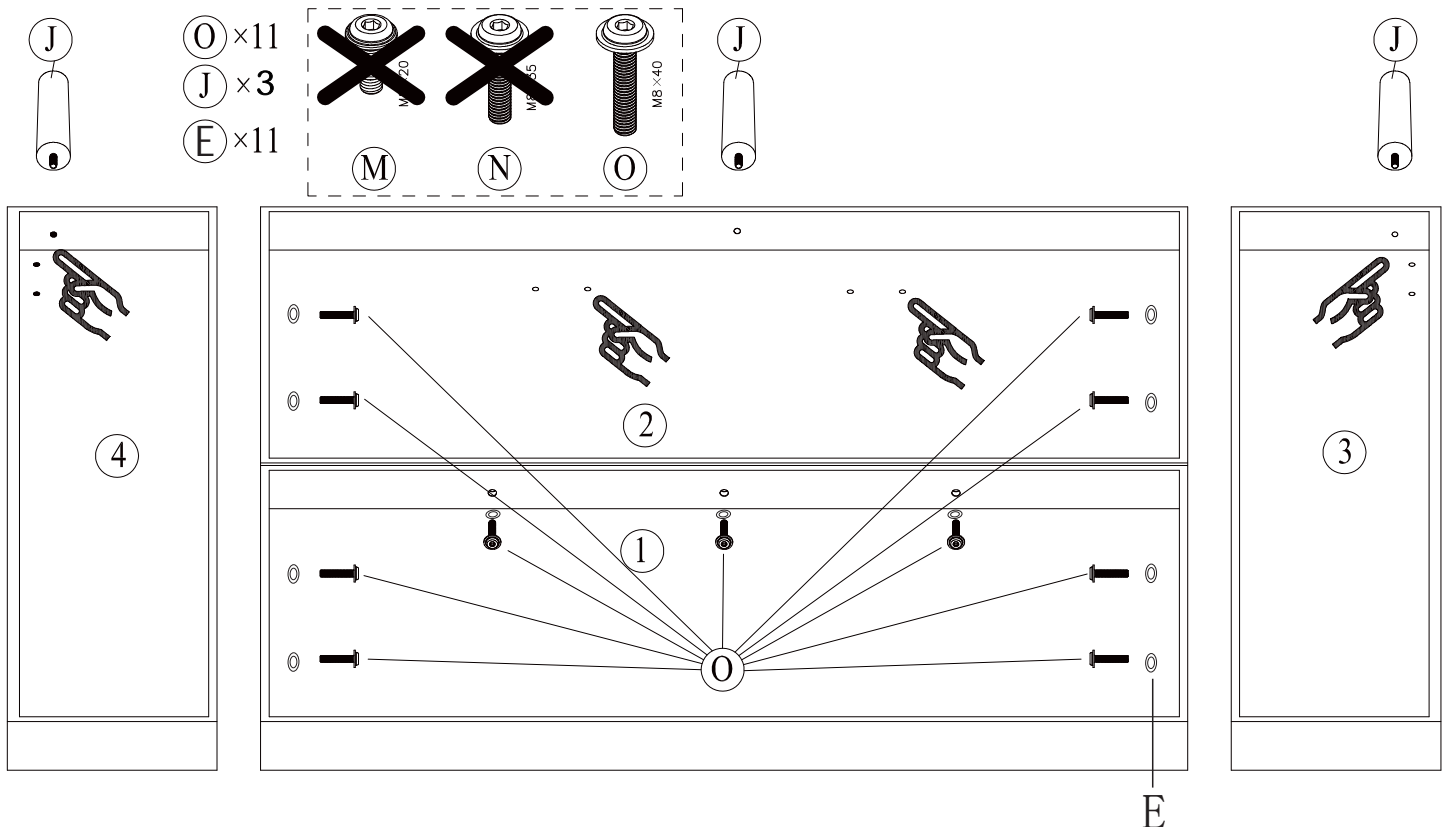

Step 1-2: Assemble Headboard
Stand the headboard up and install 4 screws of "N".




It does not need to be fully locked.

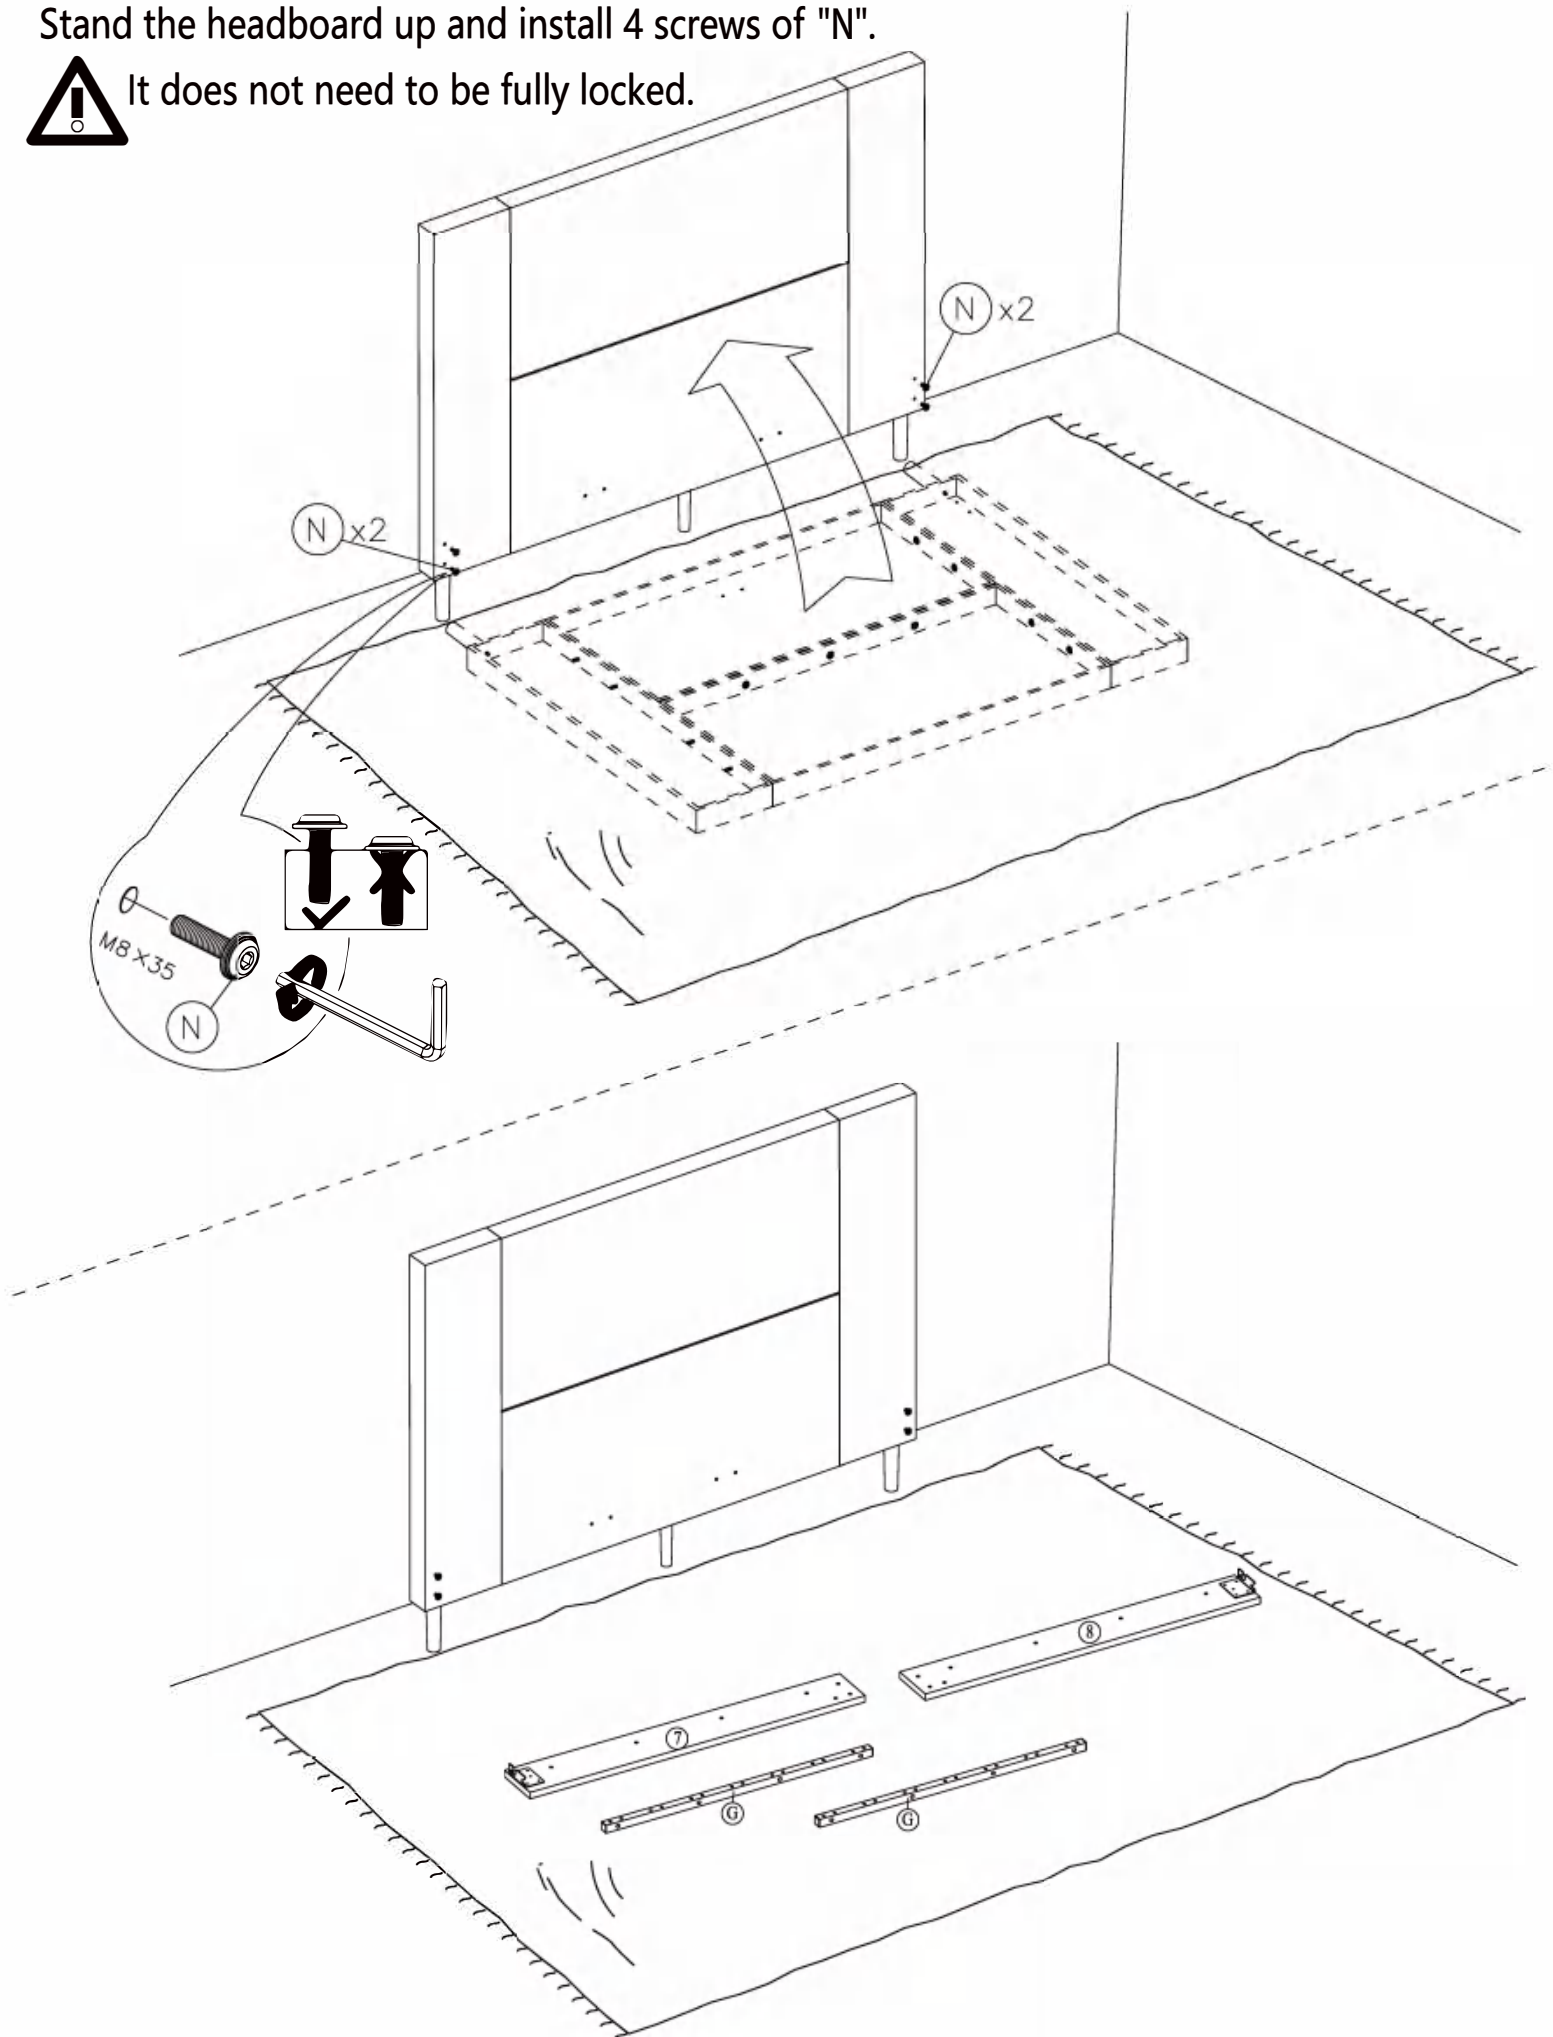


Step 2-1: Assembly of bed side rails

As shown in the figure below, bed side board "7" is installed with side rail "G", Complete two pieces. use 4 screws of "O" each side board.

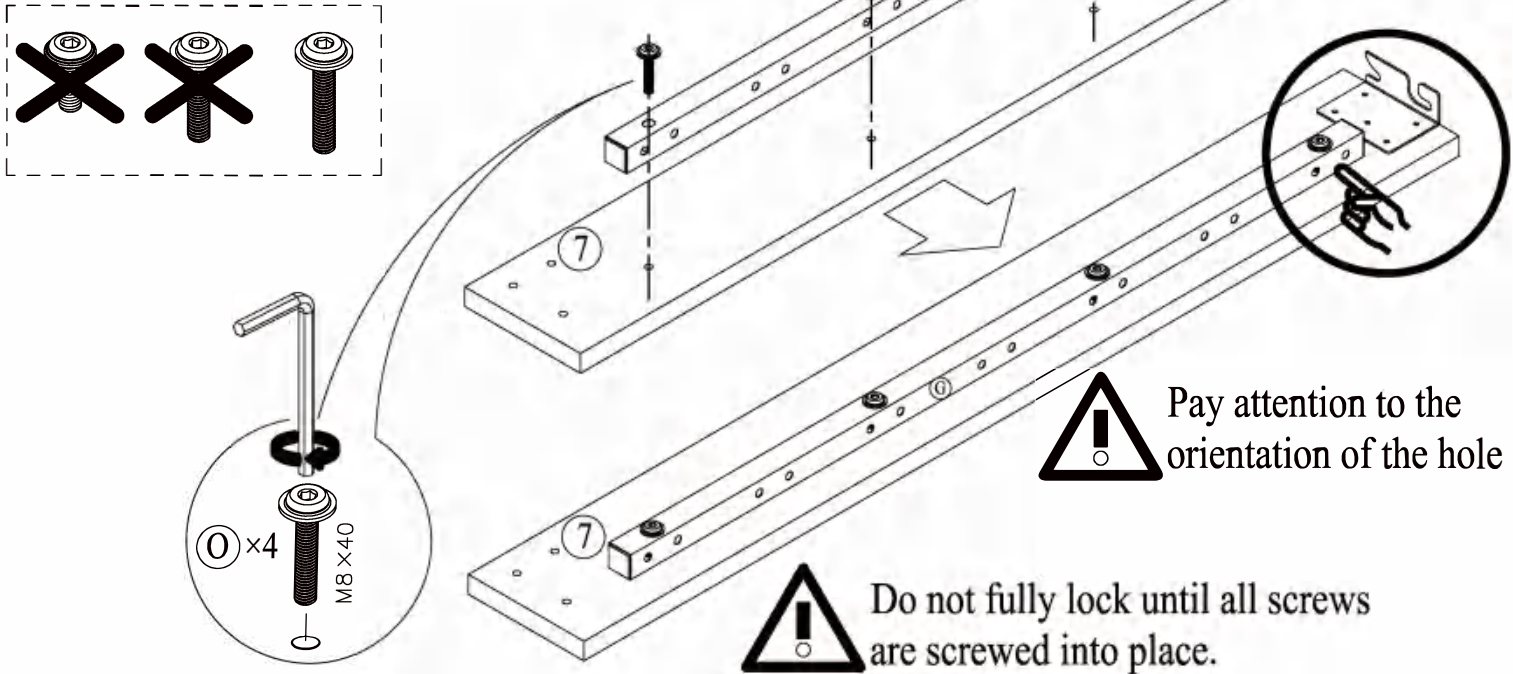


Step 2-2: Assembly of bed side rails

As shown in the figure below, bed side board "8" is installed with side rail "G", Complete two pieces. use 4 screws of "O" each side board.

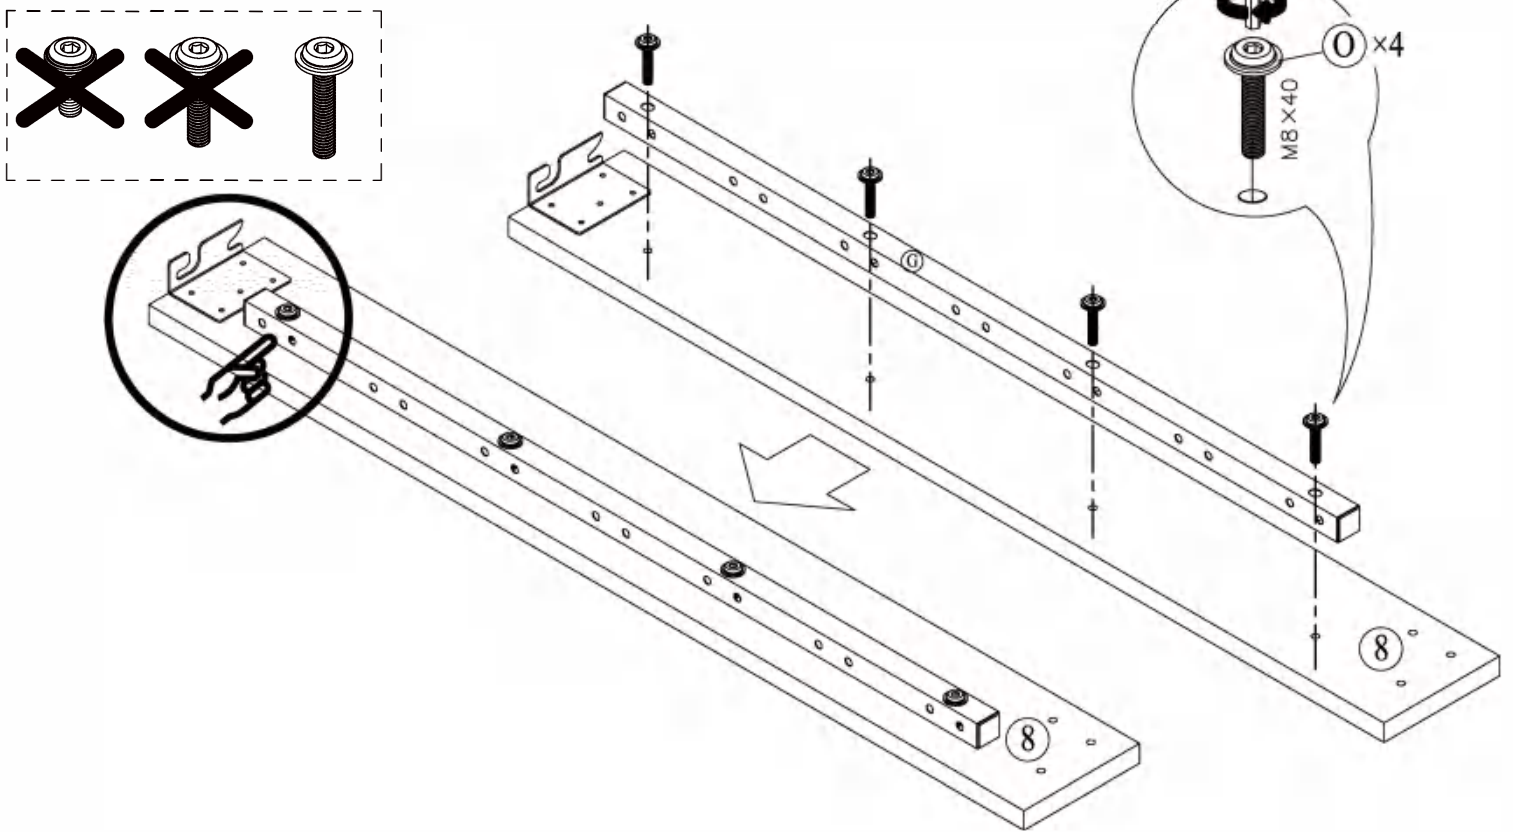


Step 2-3: Assembly of bed side rails

As shown in the figure below, a piece bed side board "7" and a piece bed side board "8" can be locked together. use 4 screws of "M" locked with "I".

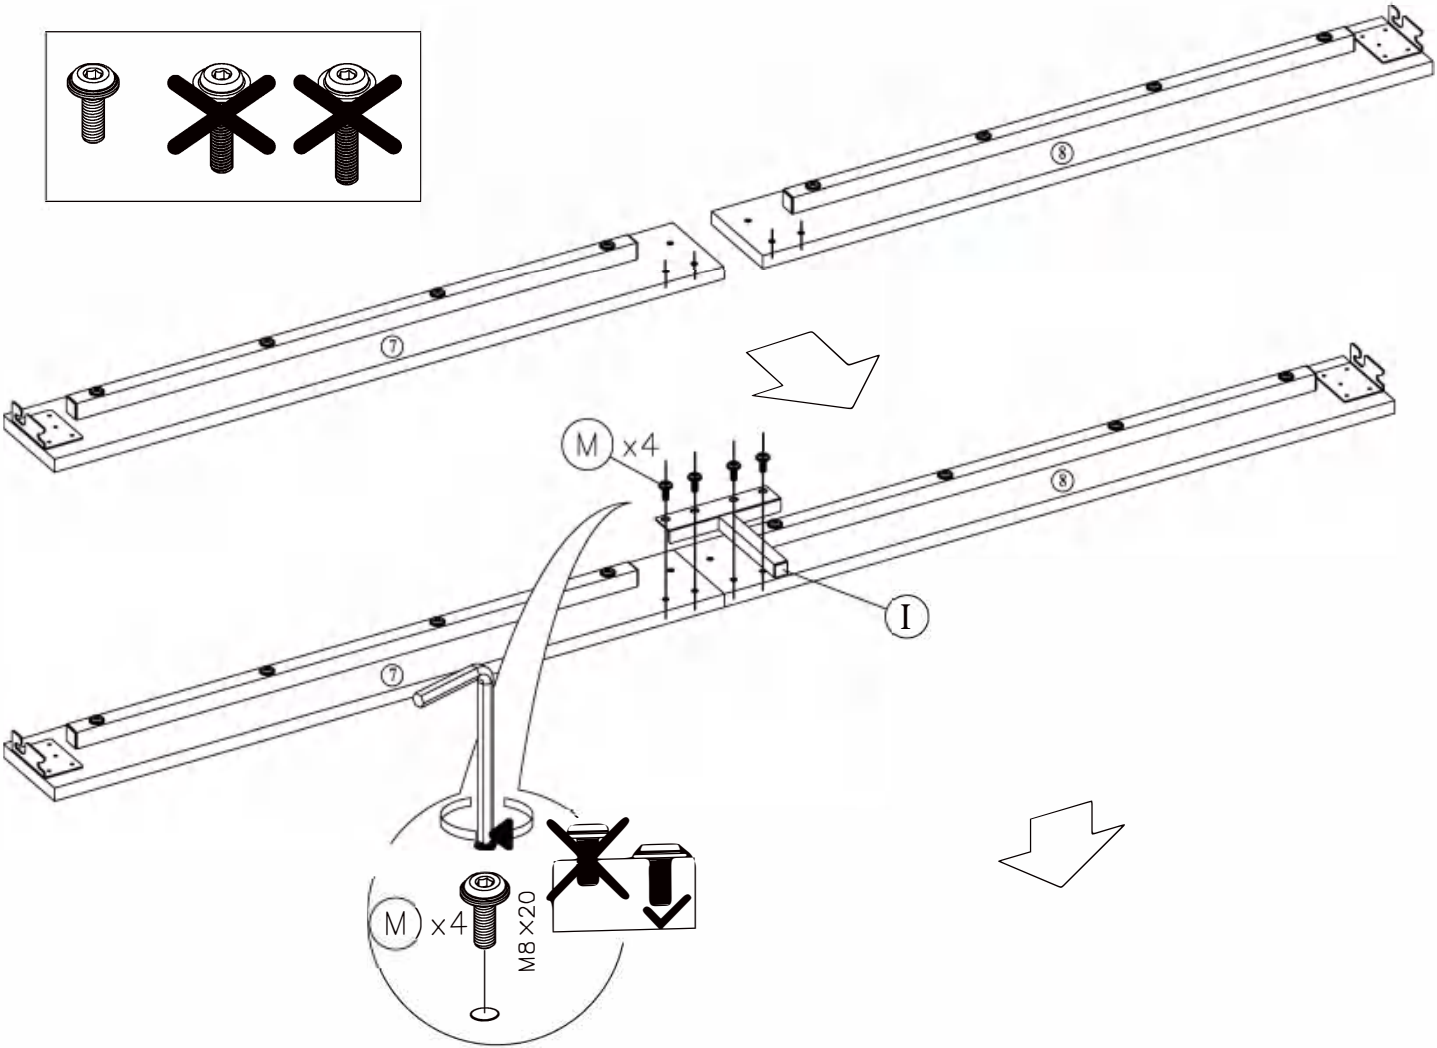

Repeat the above steps to complete the other one.

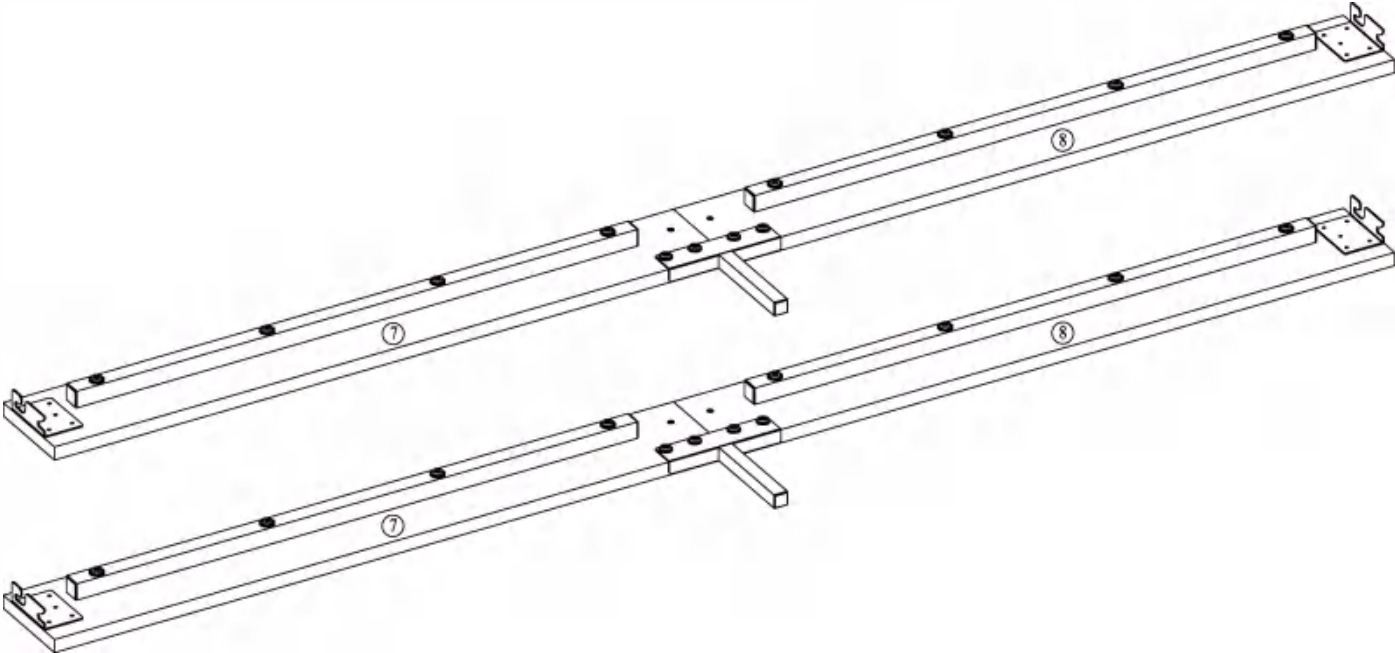


Step 3: Assembly of bed footboard

As shown in the figure below, a piece footboard "5" and a piece footboard "6" can be locked together. use 6 screws of "M" locked with "I". And install 4 screws of "N".


(M) × 6

(N) × 4


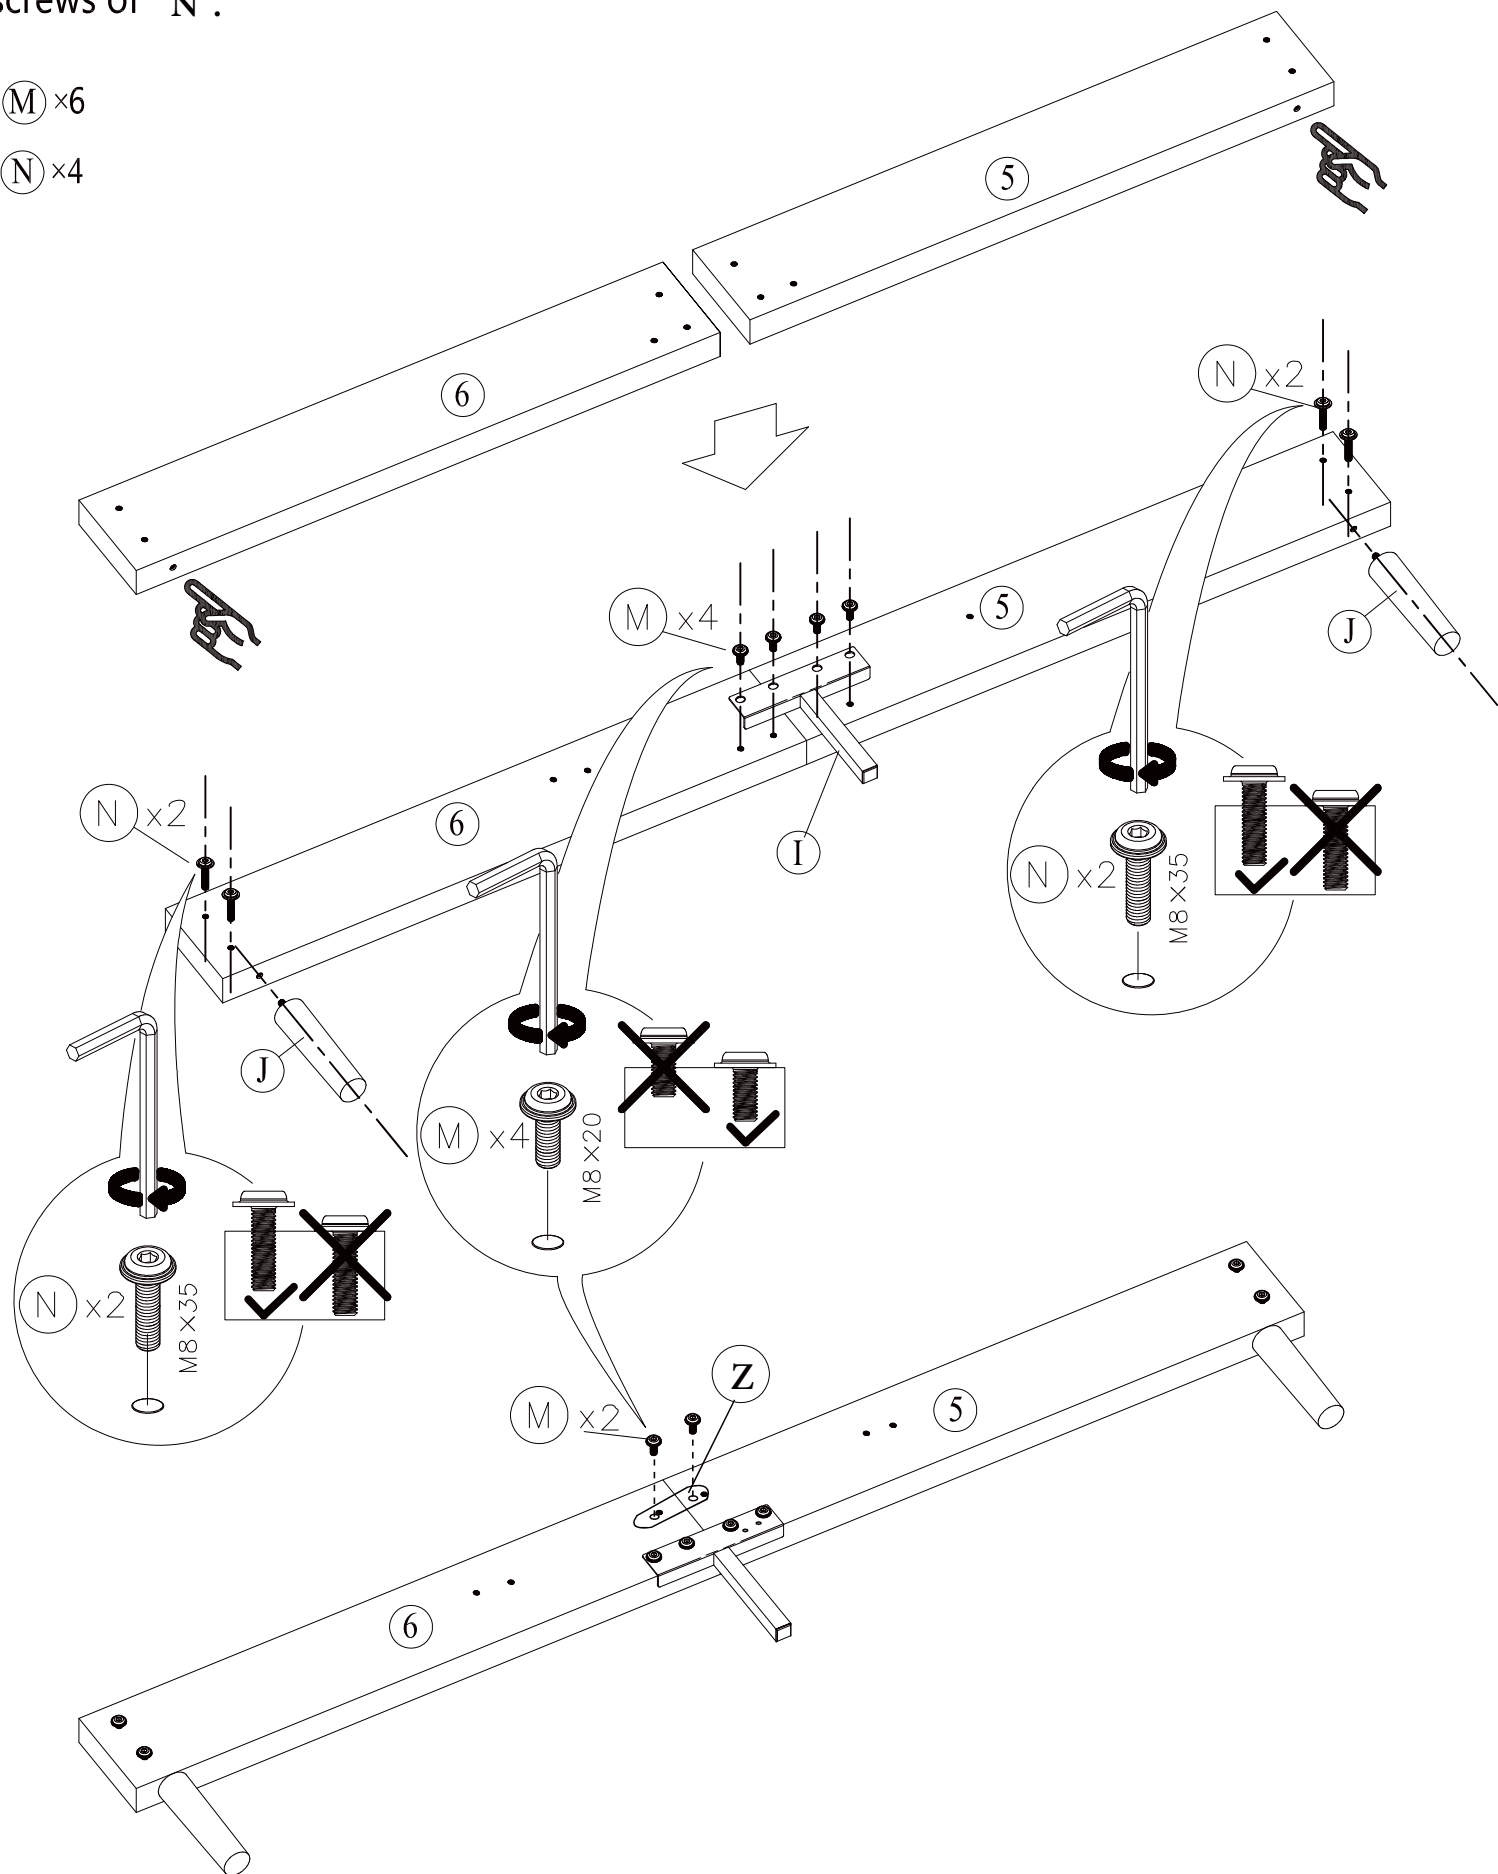


Step 4: Assembling bed side boards and footboard

As shown in the figure below, two pieces side boards and a piece footboard can be locked together. Simply align the snap position, snap in and lock in place with a wrench.


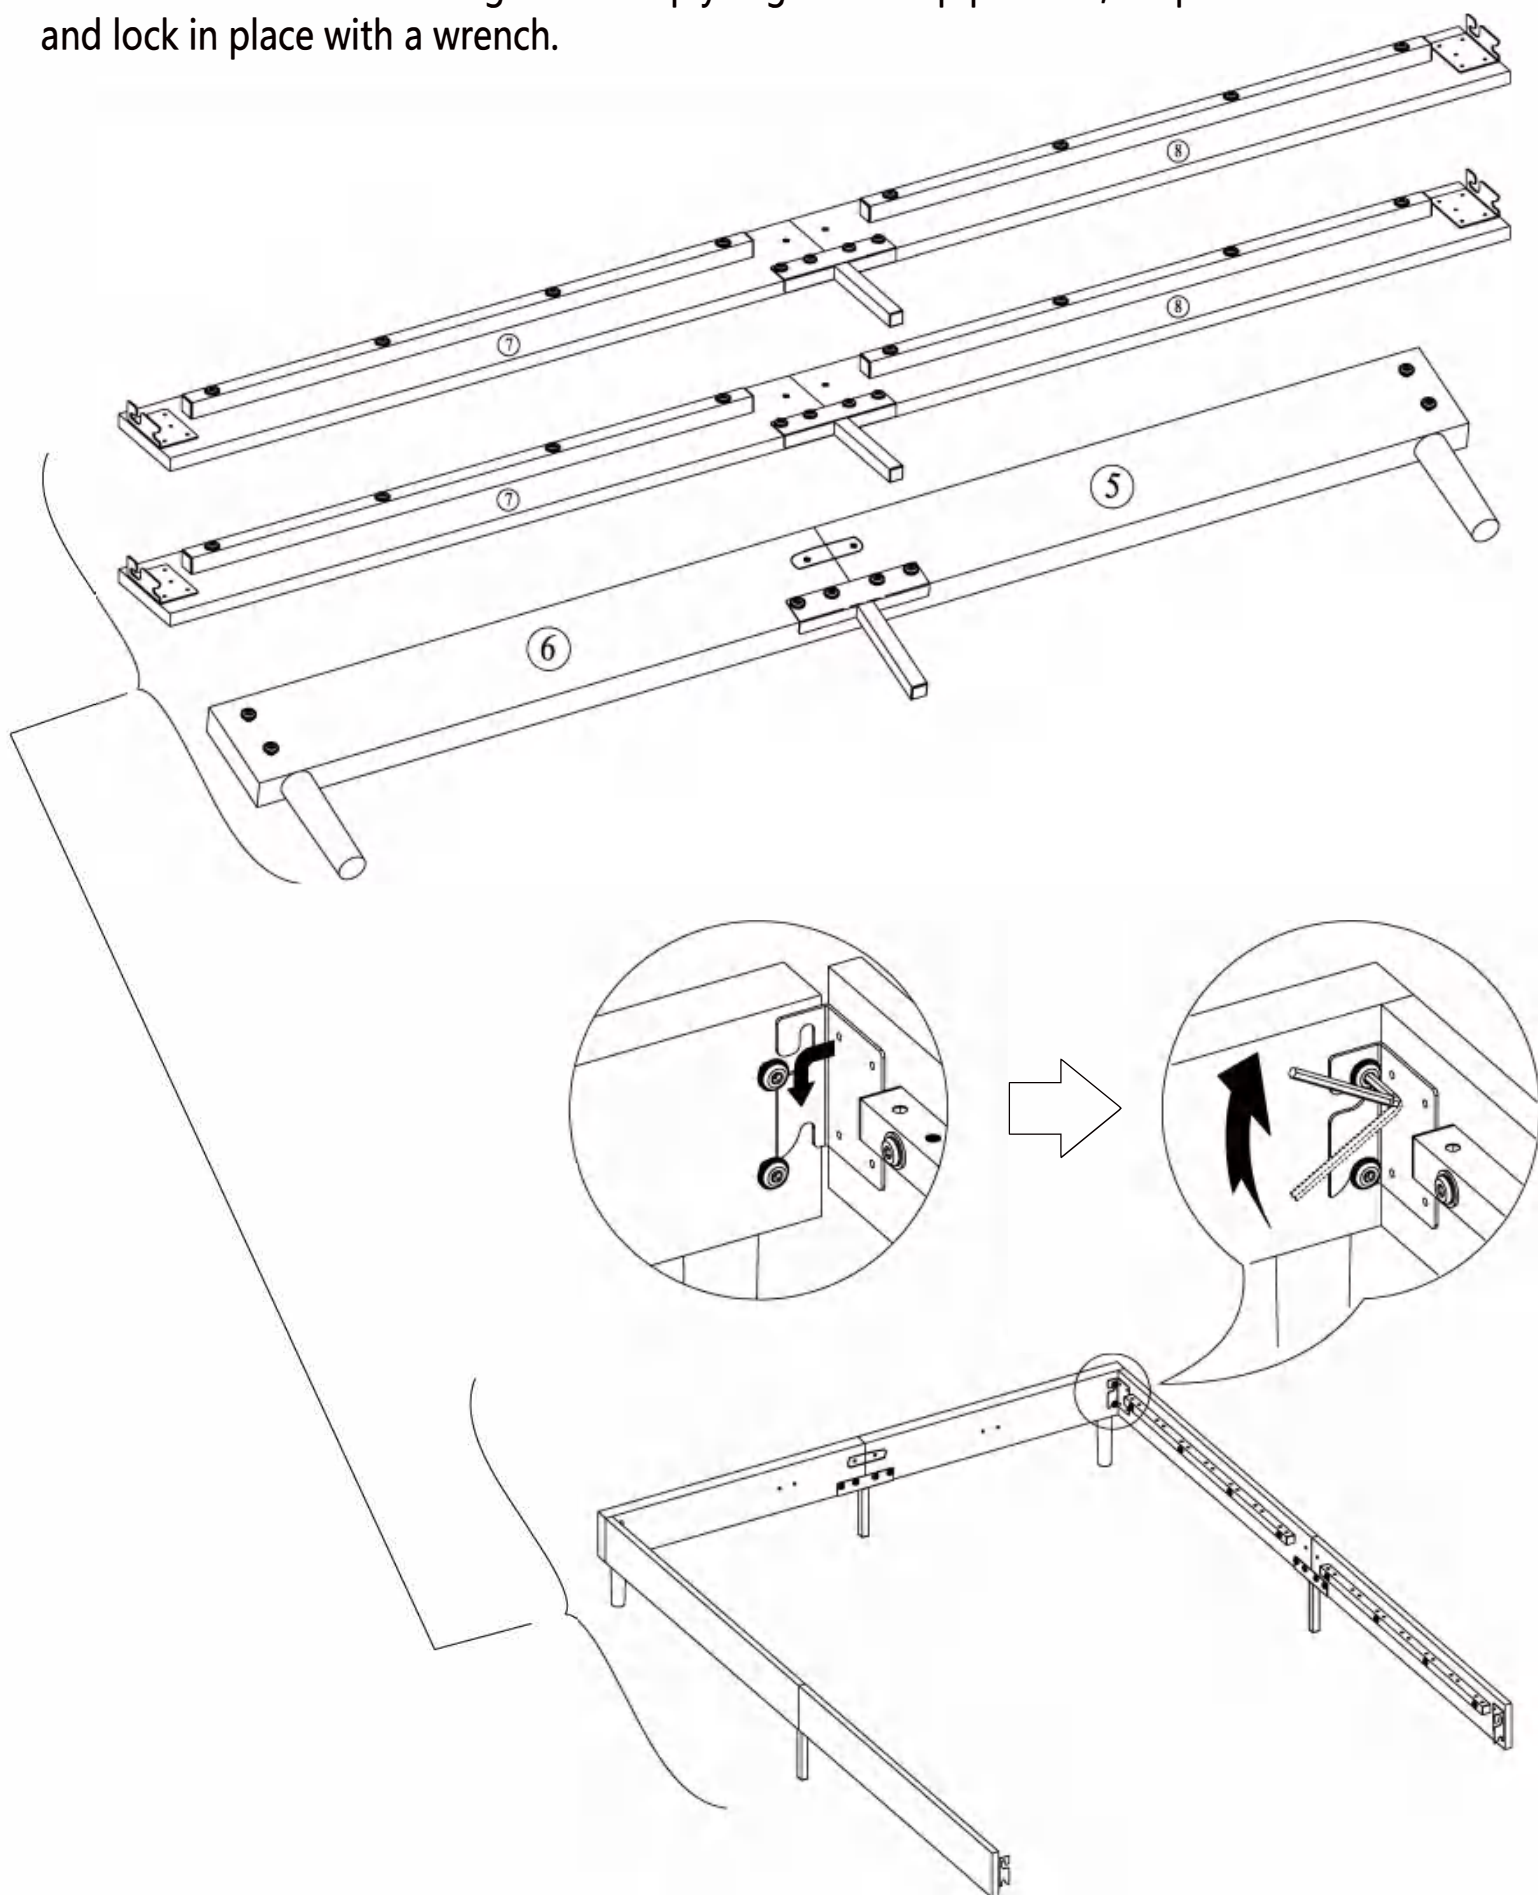


Step 5: Assembled bed frame

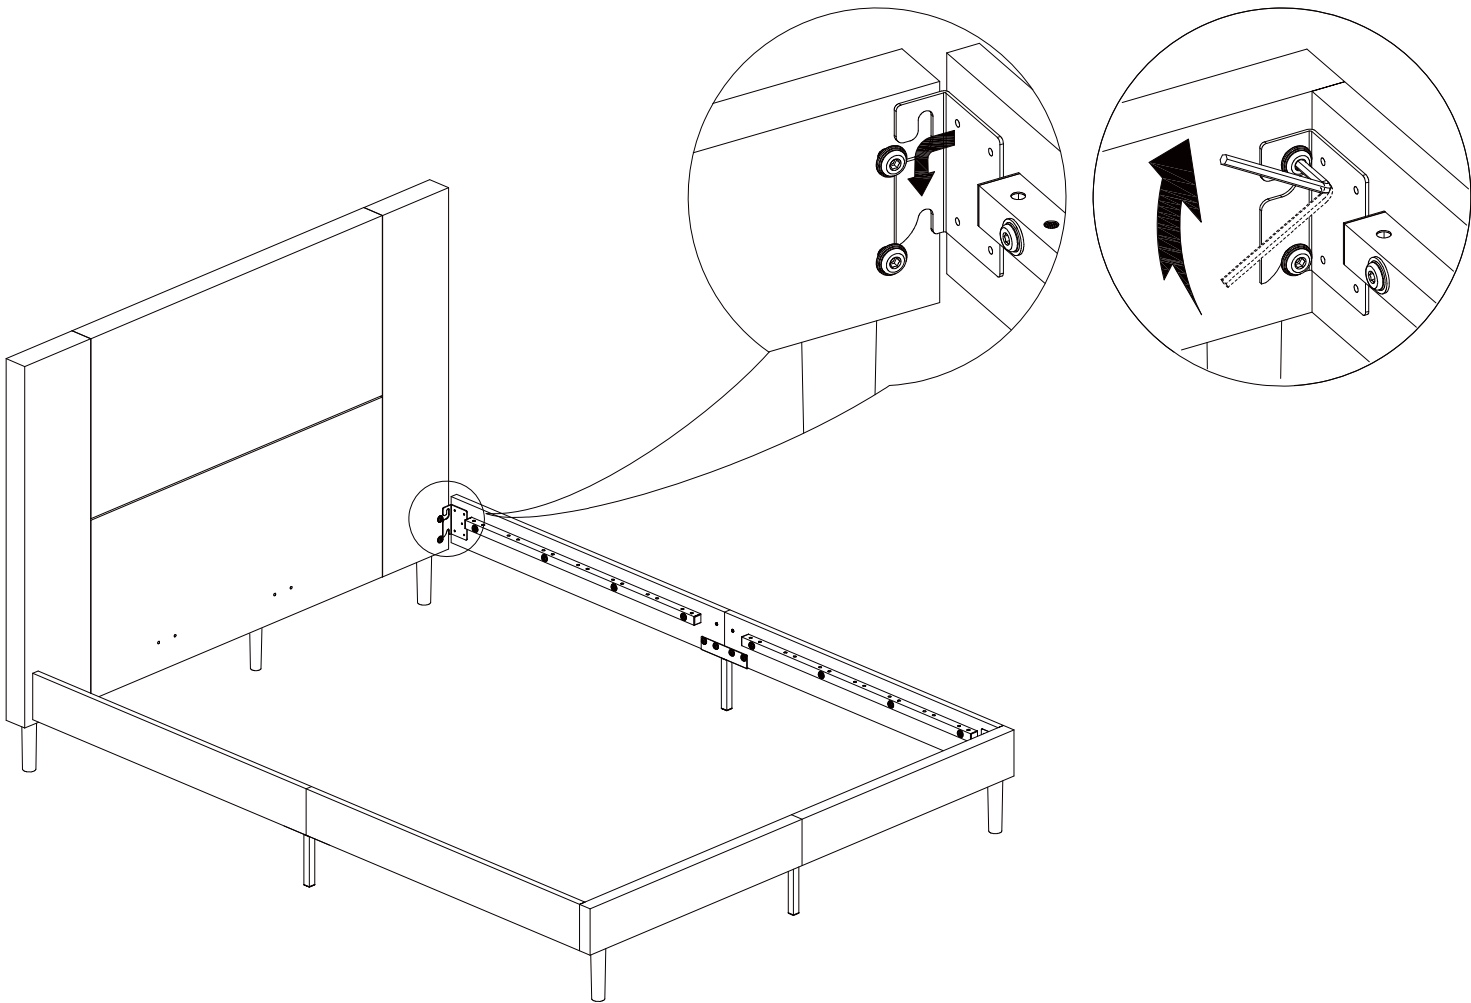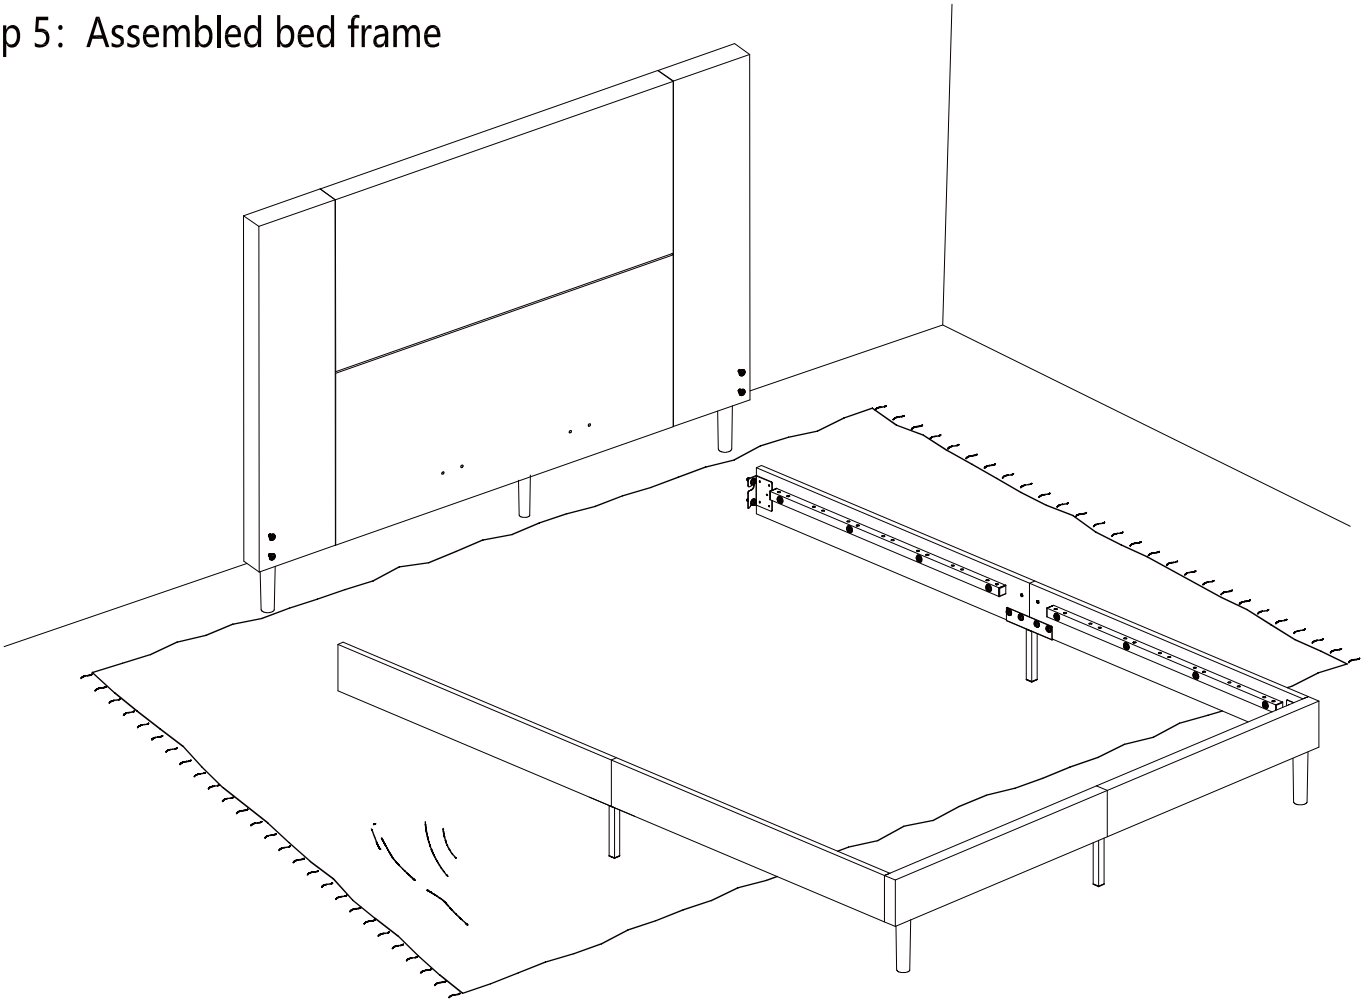

Step 6: Assembled iron frame

The center rail "H" , make the side with lots of holes facing up. If the floor is uneven, the bottom of "K" and "L" screw can be adjusted.

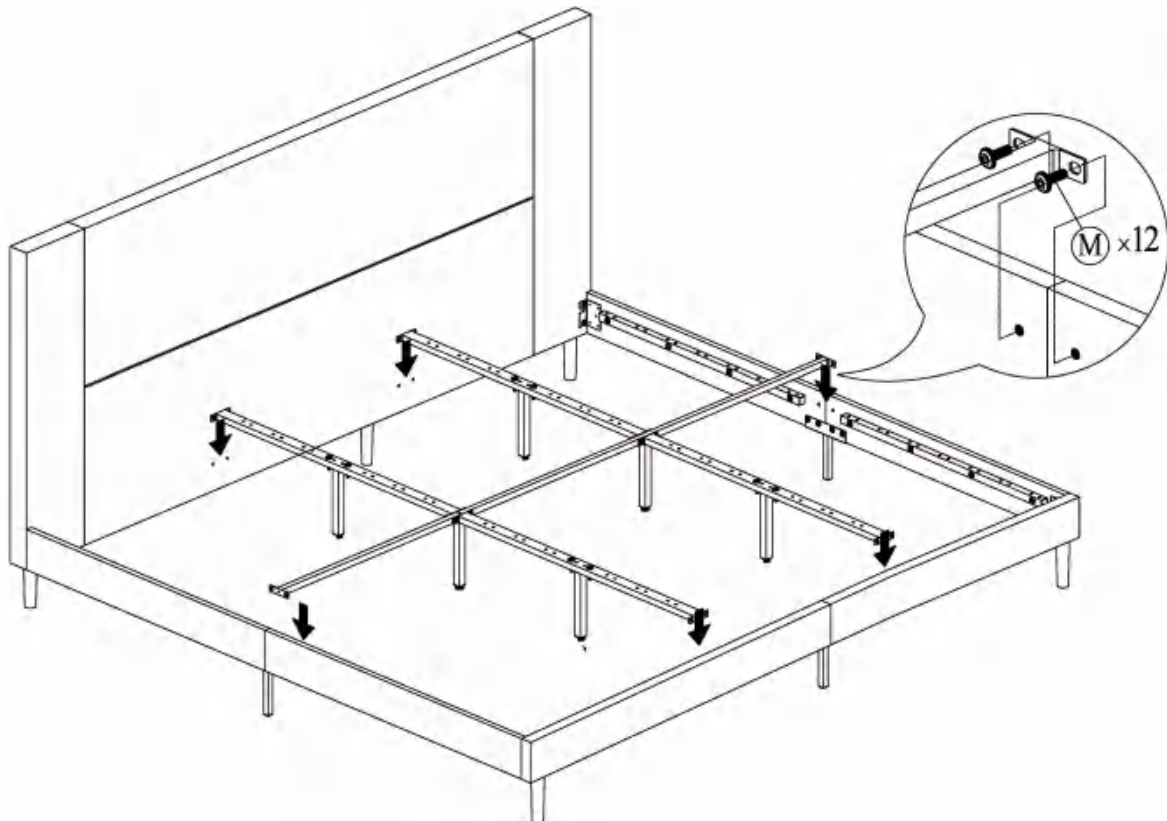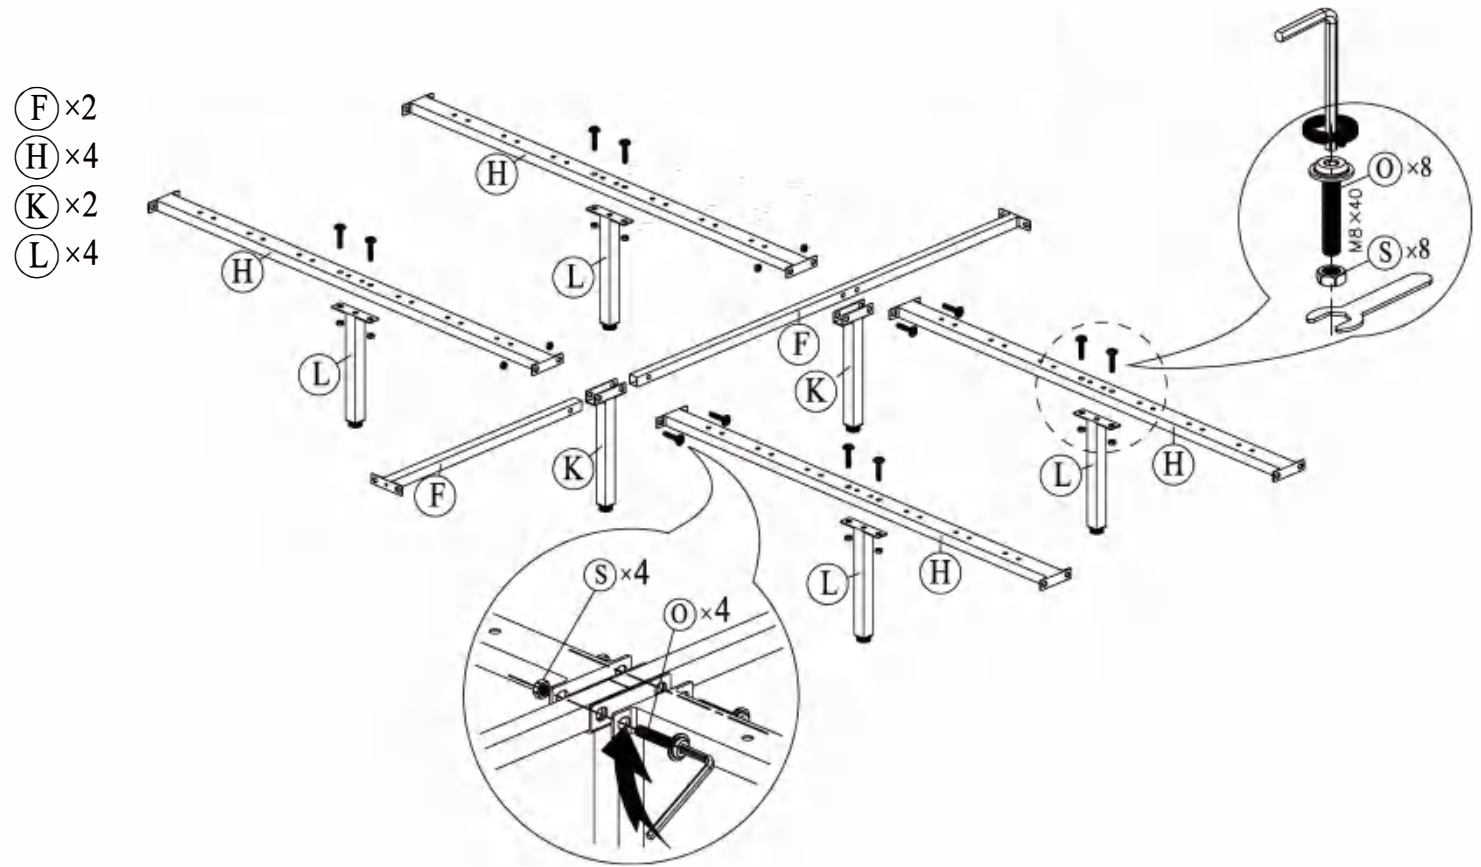


Step 7: Assembled Brackets and Slats

Connect a slat with a "P" and a "Q", tap the "Q" into the "side rail (G)", and tap the "P" into the "center rail (H)".


Q × 28

P × 28

R × 42

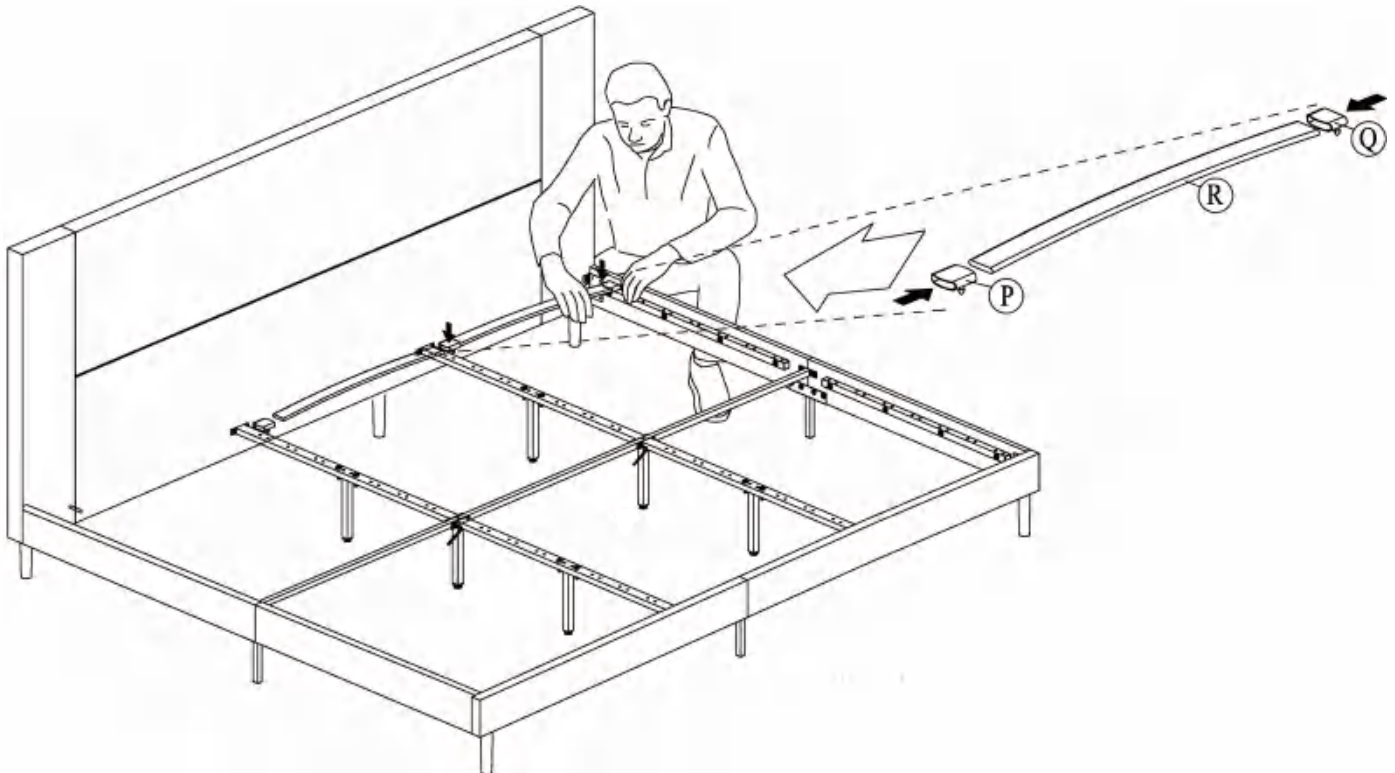

Insert a slat on the other side of the double bracket, the other end of the slat is fitted with a bracket, tap the bracket into the side rail.

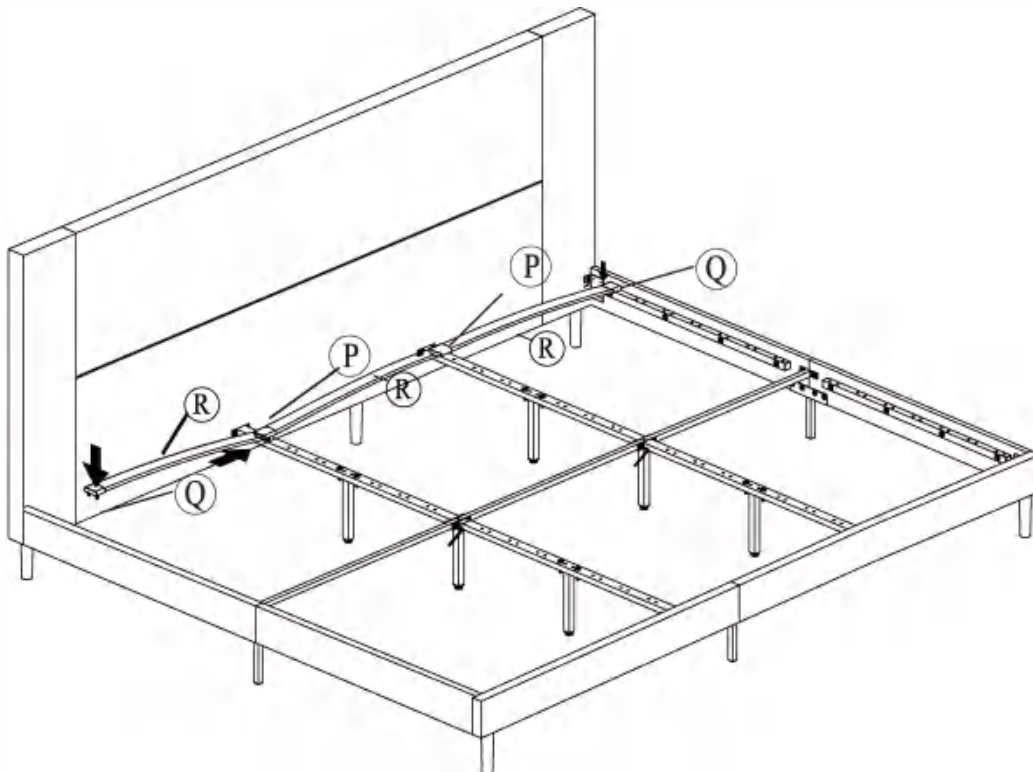

Repeat the above two slat installation steps to finish installing all the slats from headboard to footboard direction.

