

INSTRUCTION

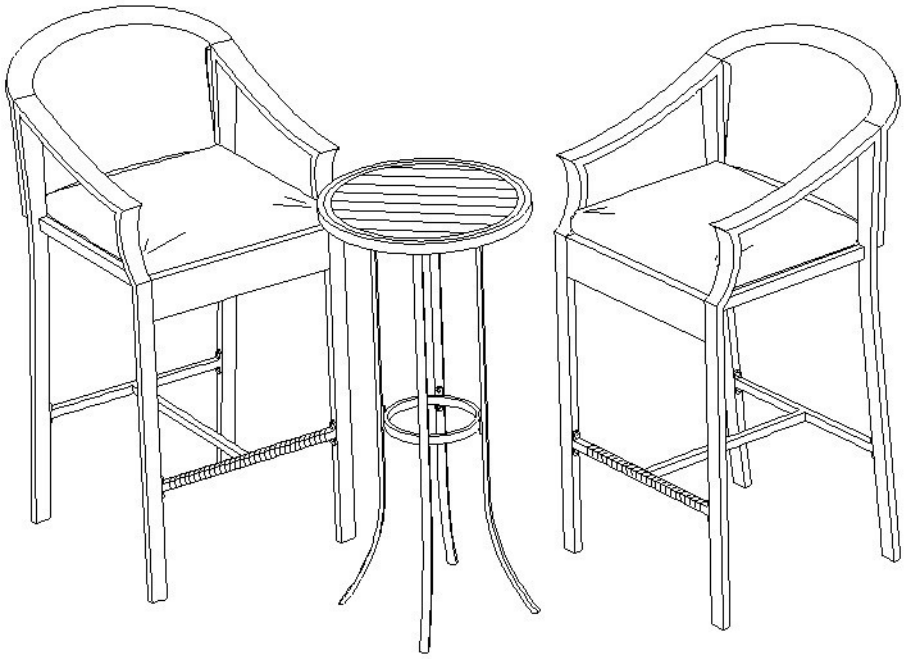


[Most important!]

- Don't tighten all the screws just yet. Start with just a little bit of each screw, and when all the screws are in, then tighten all the screws.
- See the video first! It will save you one hour.Because they need some room to adjust. Keep the product balanced and stable. If you tighten some of these screws first, the other screws may not have room to fit, and the product will not be installed successfully.


INSTRUCTION

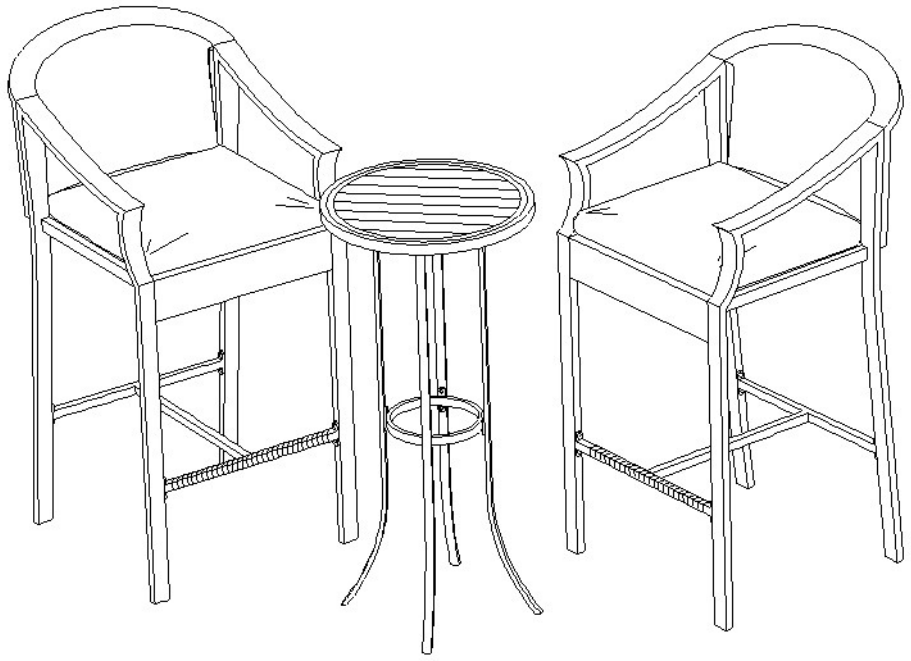

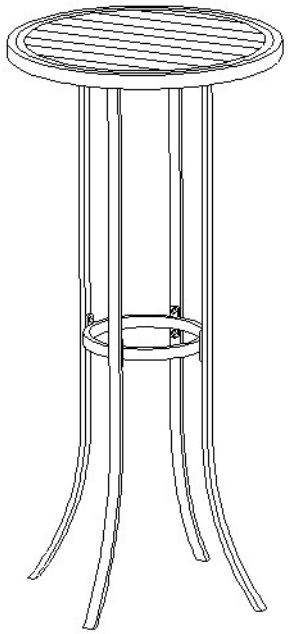




A	x1




B	x1

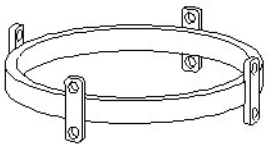

C	x1




D	x4




M6x15

E	x20



M6x20

N	x16




M6x35

O	x20




F	x48




G	x1


STEP1:

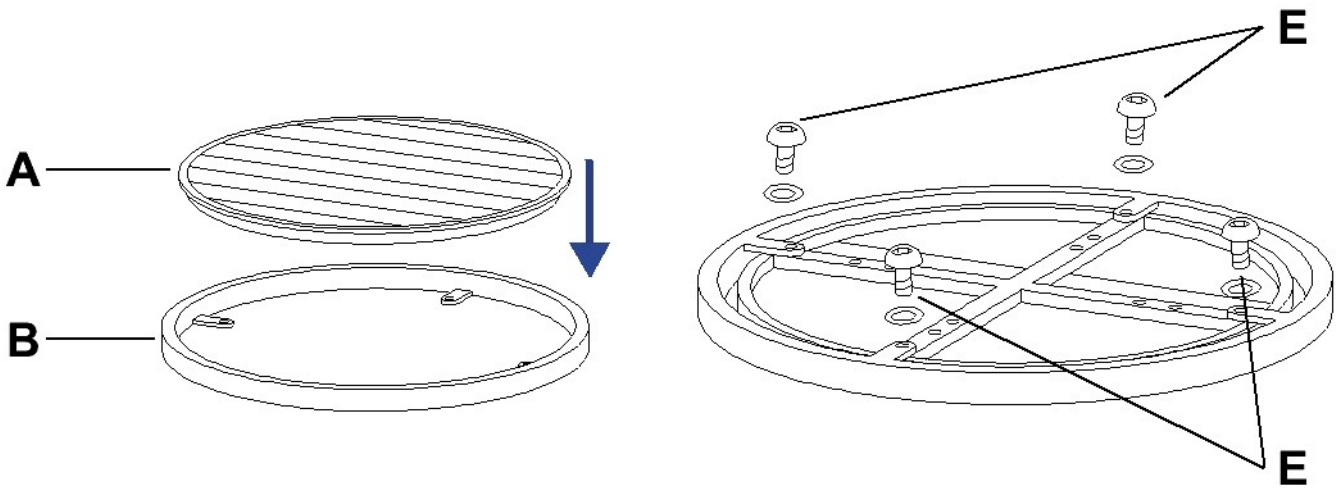



STEP2:

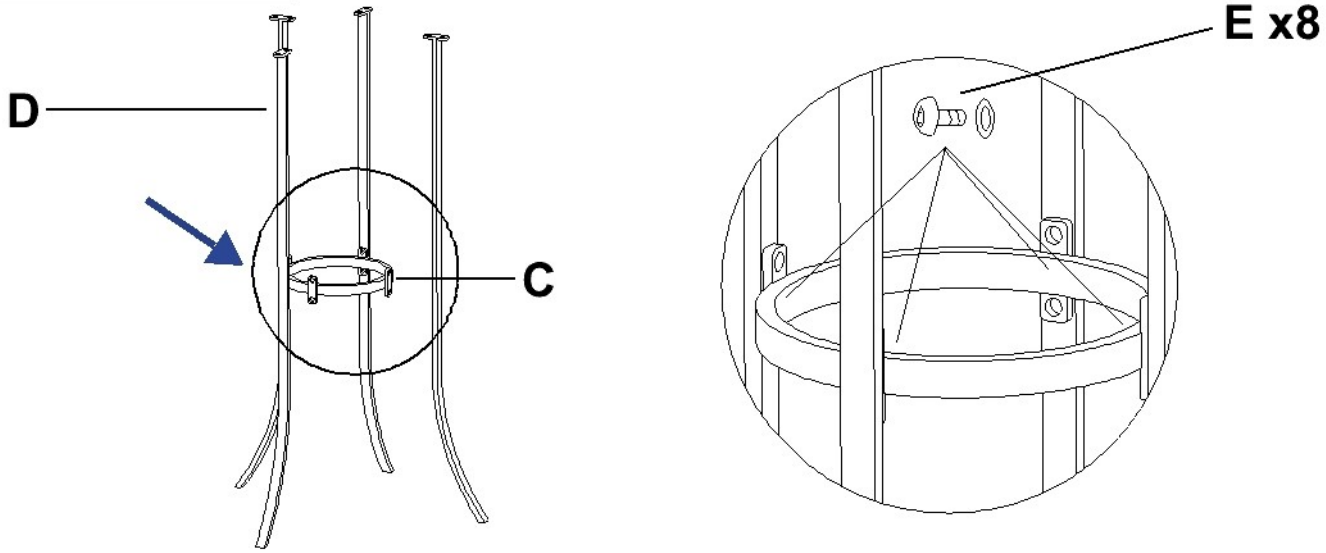

STEP3:

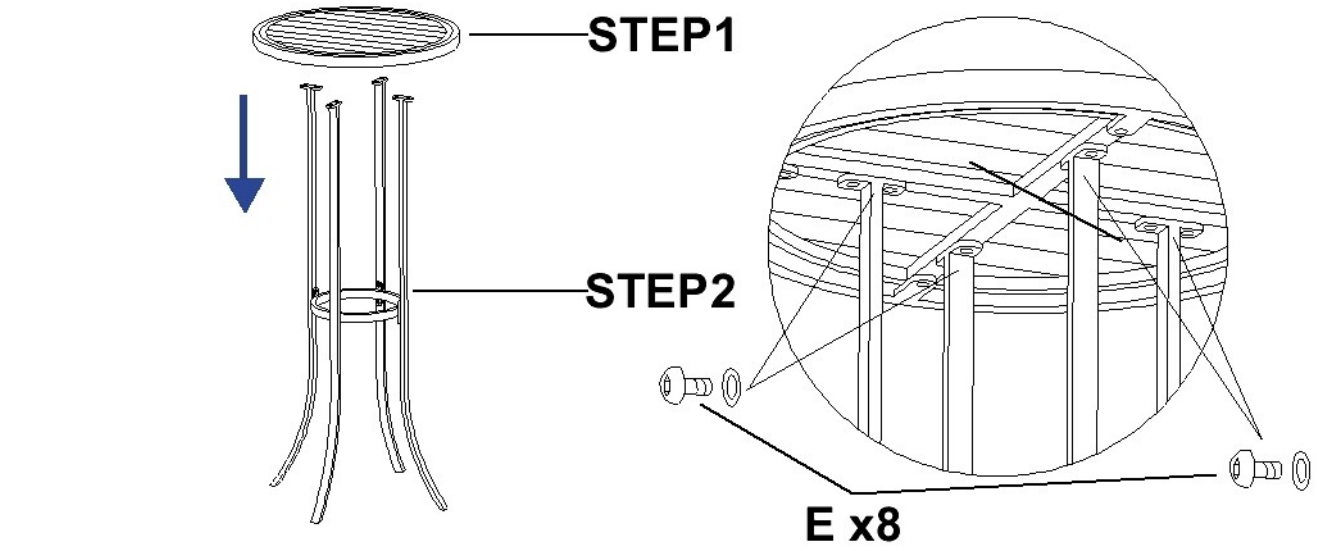

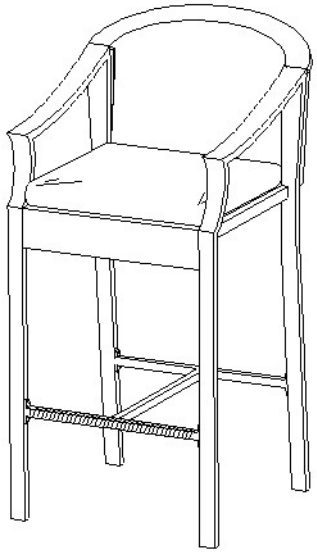


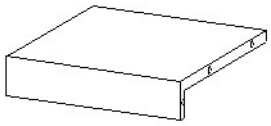


H	x2




I	x2

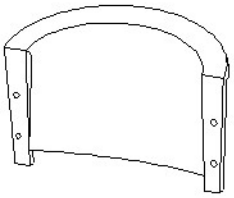


J	x2

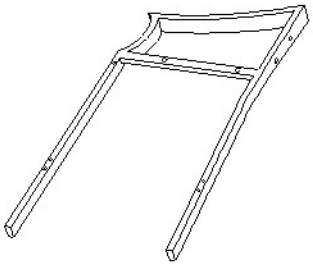

K	x2

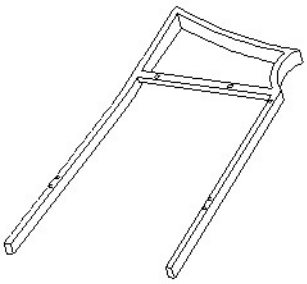



L	x2




M	x2

STEP3:

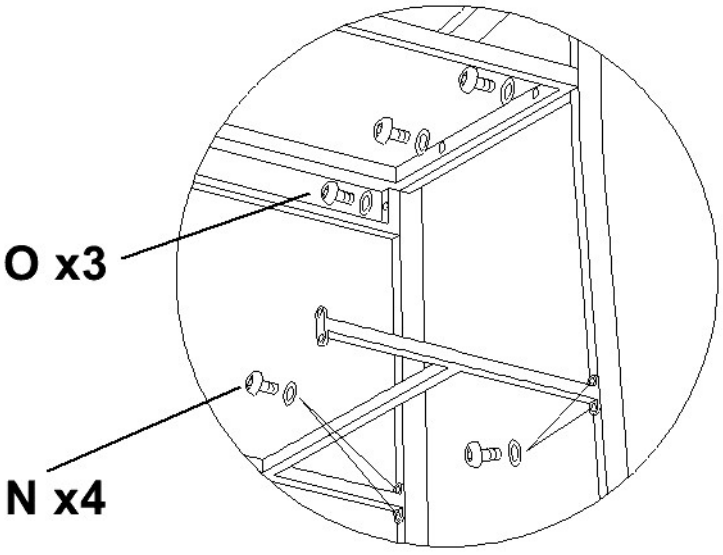


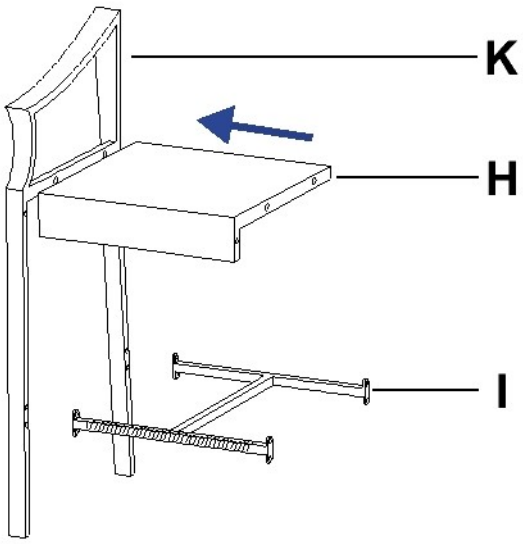

STEP4:

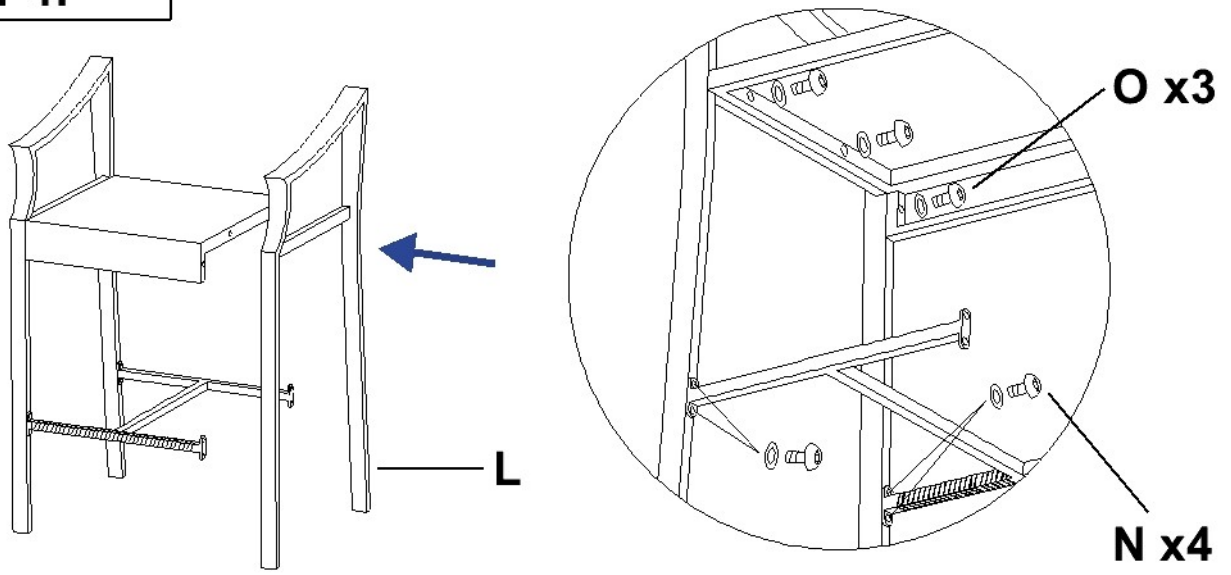

STEP5:

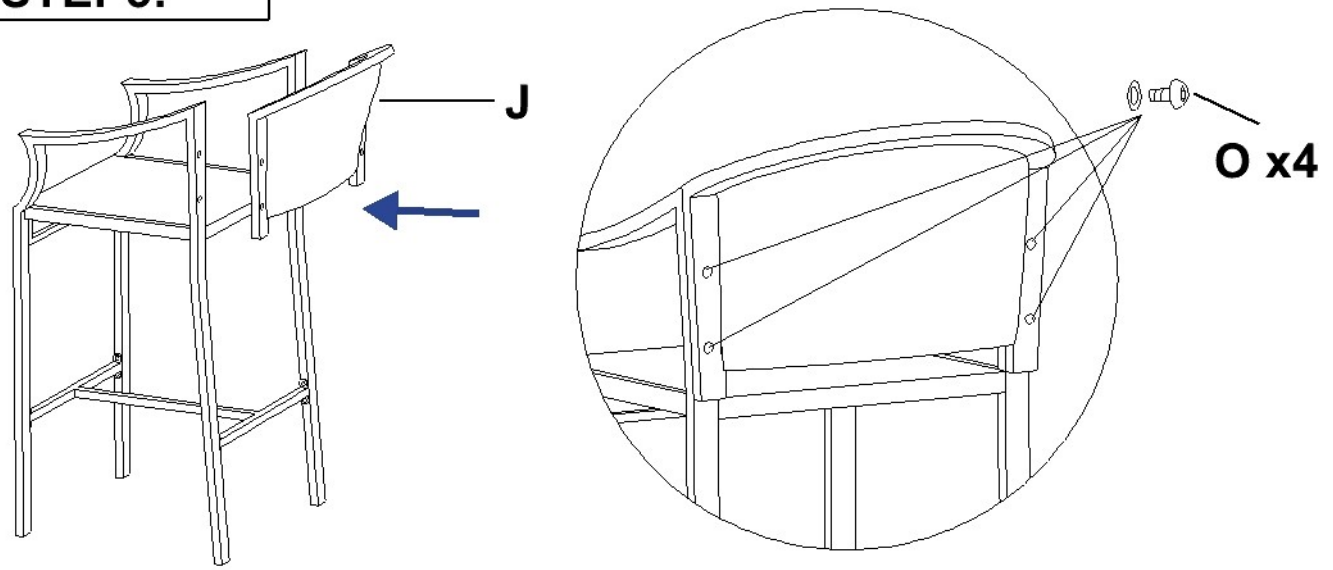

STEP5:

