


CHiC HOUSE

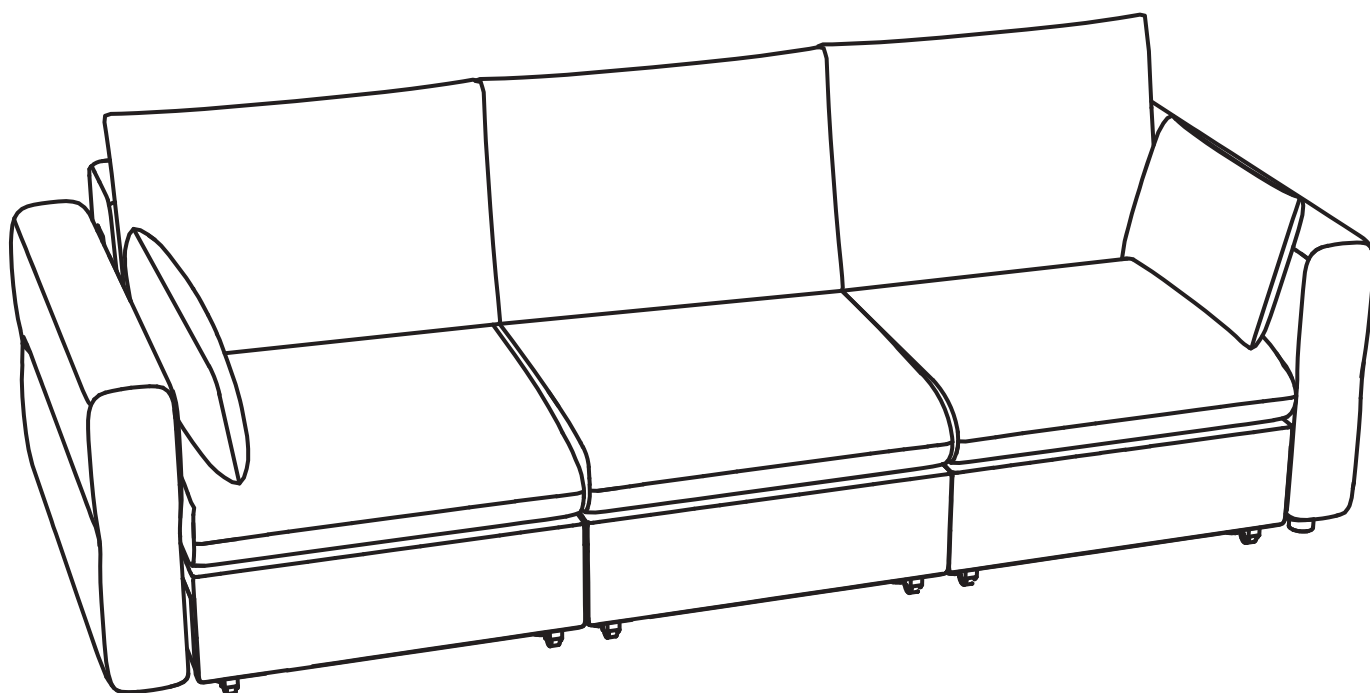


Dova

Power Sofa Bed

Assembly Instructions - Please keep for future reference
Important - Please read these instructions before assembly
Customer Support - support@chichouse.cn

Components

Please check if all the pieces listed below are received.


Package Accessories				
1  Crossbar x3	2  M7*2cm Crossbar Screw x12	3  Leg x16	4  Wheel x6	5  Double-headed Plug & Connector x6
6  Right Active Backrest Connector x3	7  Left Active Backrest Connector x3	8  Motor x3	9  1.3*3cm Motor Screw x12	10  Clamp Pin x3
11  Motor Pin x3	12  M6*1.5cm Column Head Screw x12	13  M6*3cm Column Head Screw x24	14  Spanner x1	15  Hex Wrench x1
16  Power Supply x1	17  Left Armrest Power Supply x1	18  M6*1.0cm Column Head Screw x12		

Delivery Reminder: Multi-Package Shipment


This product comes in 7 separate packages,
which may arrive at different times due to logistics.

If some parts haven't arrived yet, please be patient — they're still on the way.


Thank you for your understanding!

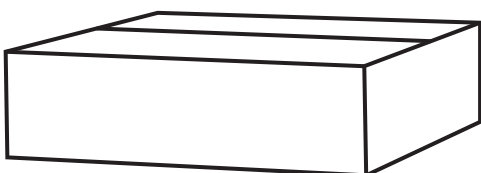

A Left Base Frame x1

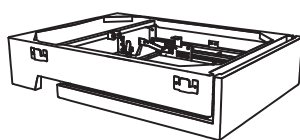


Left-side Perspective

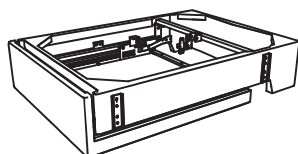


Right-side Perspective

B Middle Base Frame x1

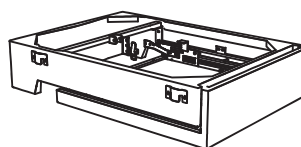


Left-side Perspective

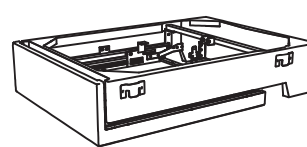


Right-side Perspective

C Right Base Frame x1

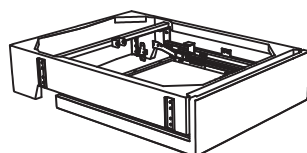


Left-side Perspective

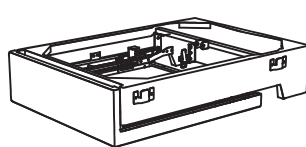


Right-side Perspective

D Left Backrest x1


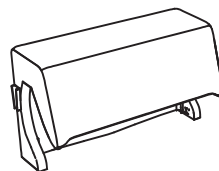


Left-side Perspective


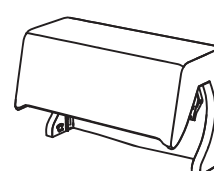


Right-side Perspective


E Middle Backrest x1

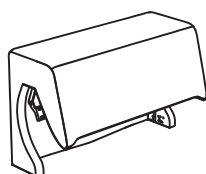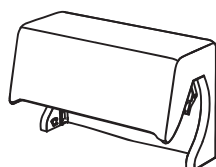


F Right Backrest x1

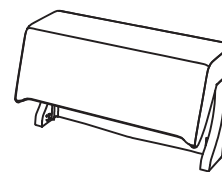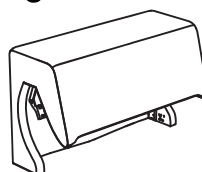


G Left Armrest x1

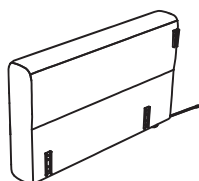



H Right Armrest x1

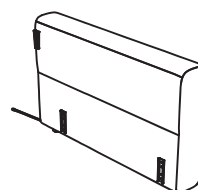

I Activity Cushion x3

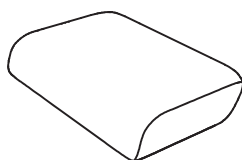


J Back Cushion x3
Back Cushion Cover x3

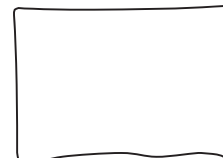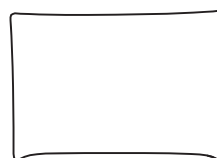

K Seat Cushion x3
Seat Cover x3




L Armrest Cushion x2
Armrest Cover x2



Special Attention:


All soft cushions require you to put on the fabric covers yourself.
Please make sure to align the arrows when covering the seat cushions.

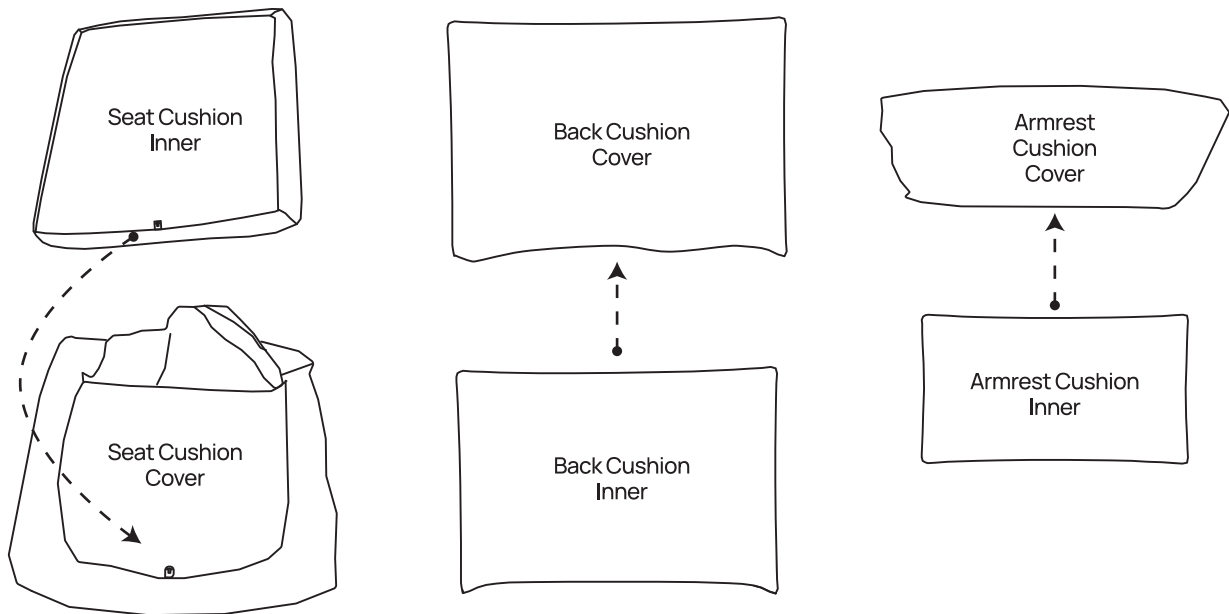

Assembly Instructions


CAUTION : Inappropriate installation of screws will cause damages to the product !

Step 1

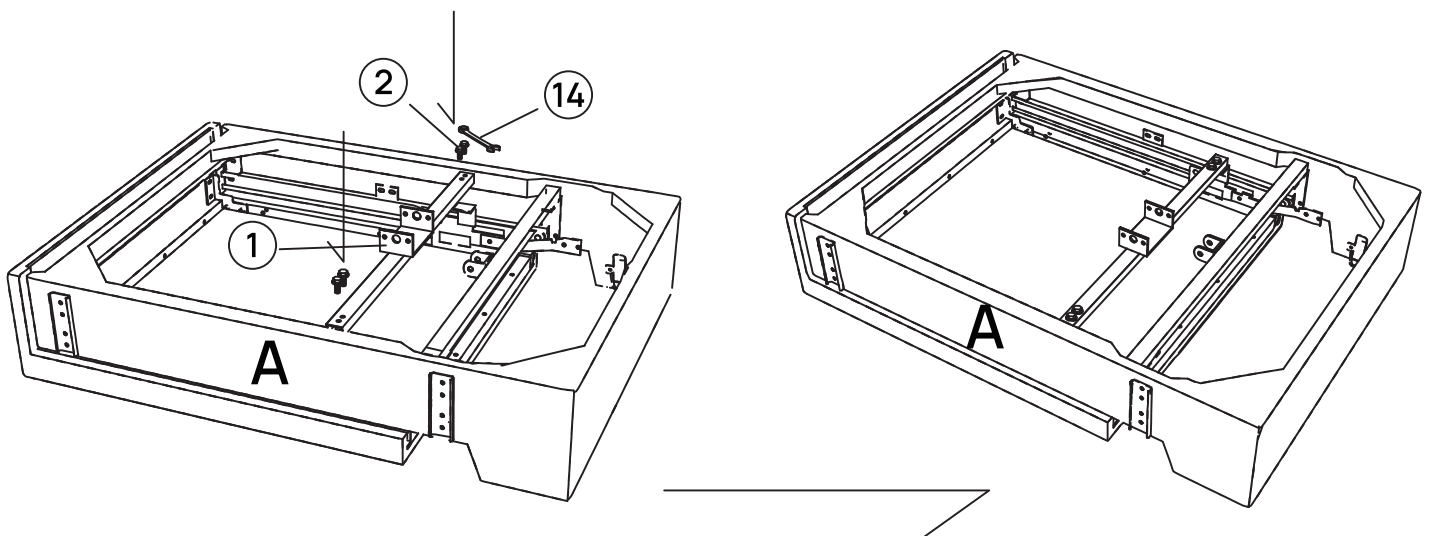


Take out the unit bottom frame,
use a spanner and crossbar screws to install the crossbar.

Step 2

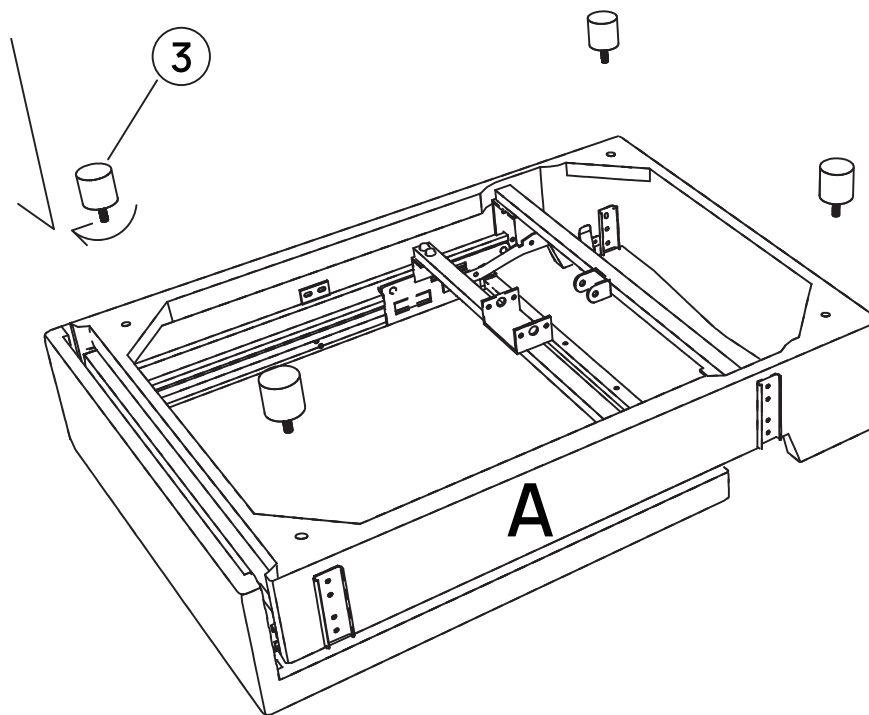


Install the feet using a hex wrench and M6*1.5cm pillar screws, and install the wheels.

Step 3

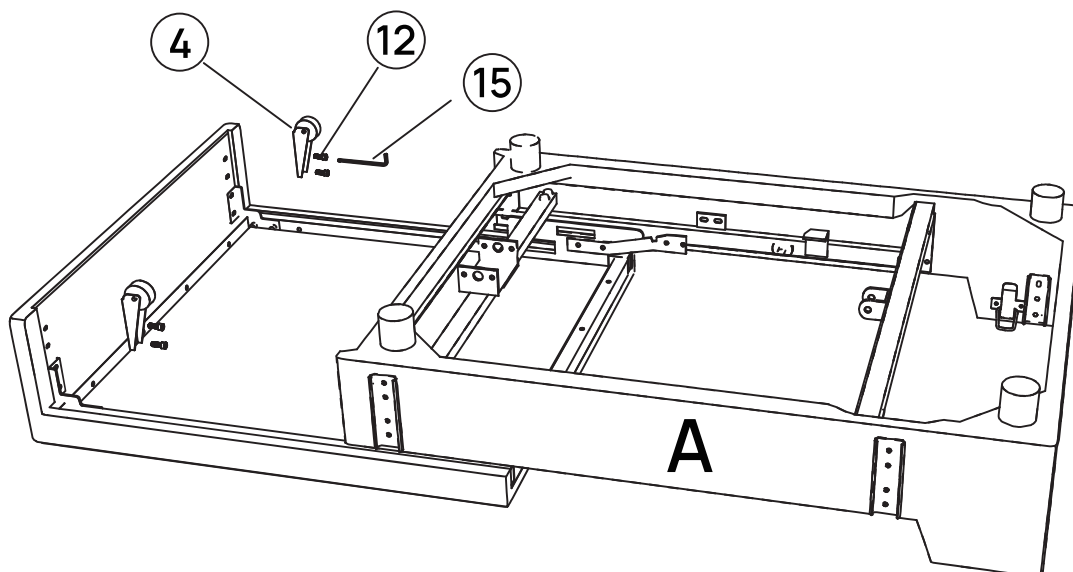


Pull out the seat frame, use a hex wrench and M6*1.5cm pillar screws to install the wheels.

Step 4

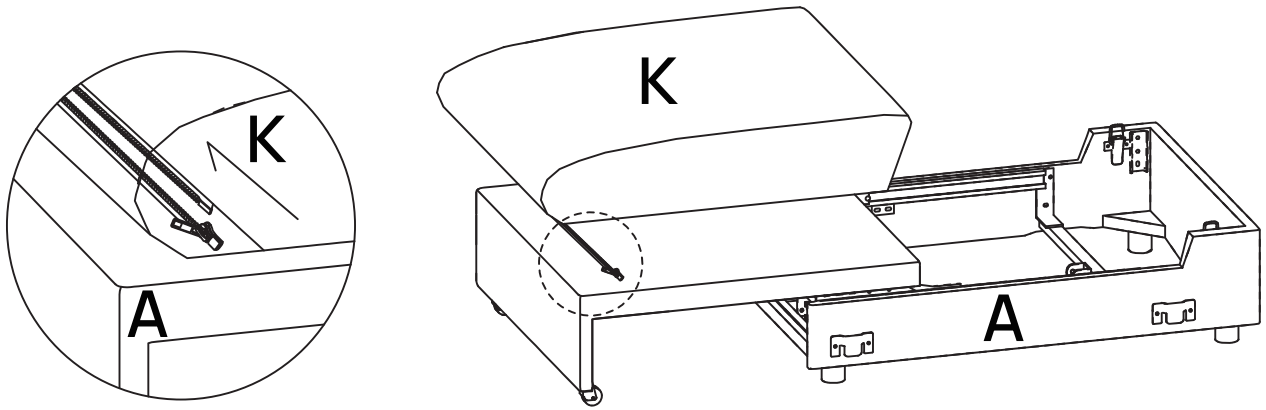


Pull the zipper of the seat cover at the front.

Step 5

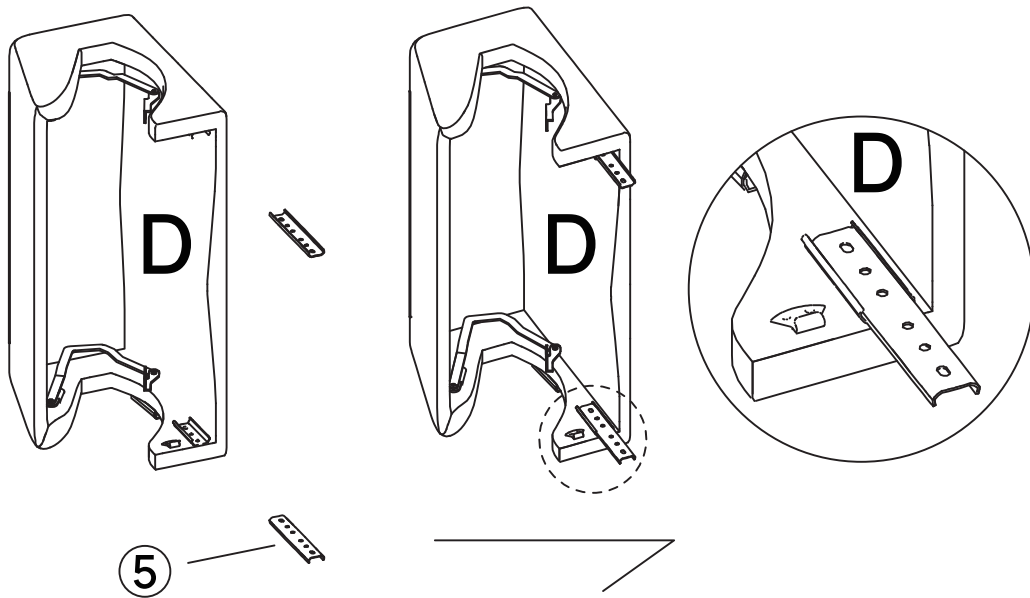


Place the backrest sideways,
and insert the double-head insert connector.

Step 6


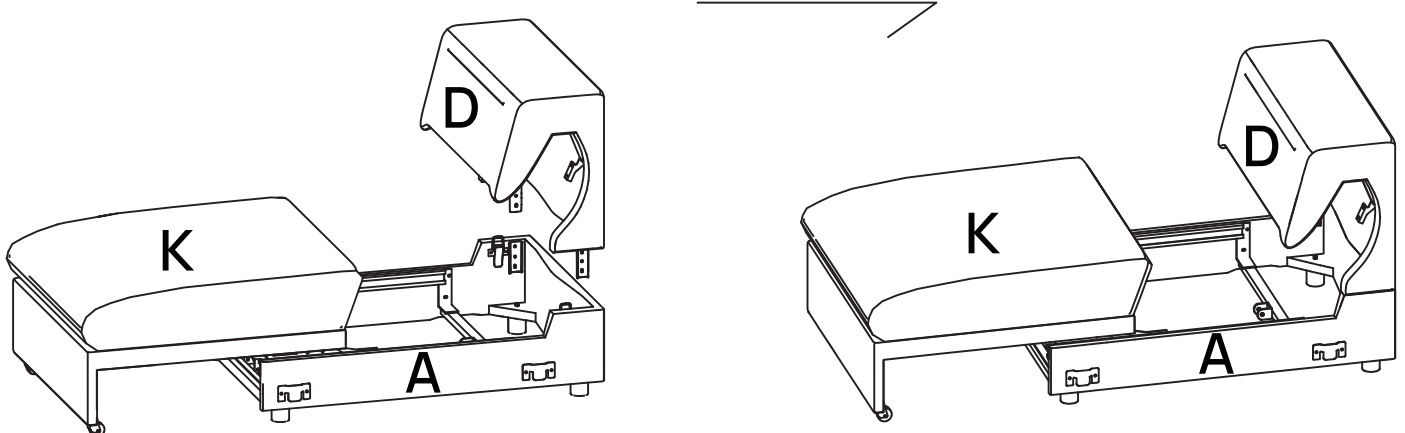


Insert the backrest.


Step 7

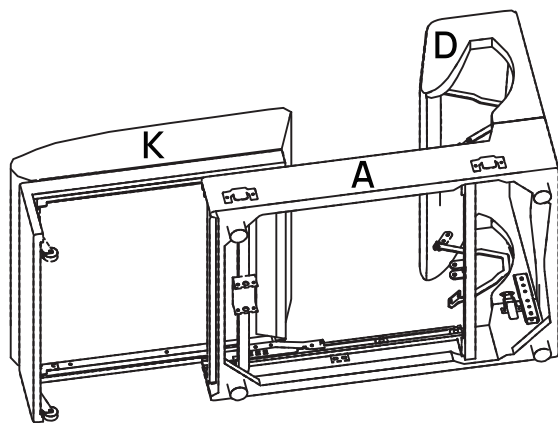

Tighten the spring snap.

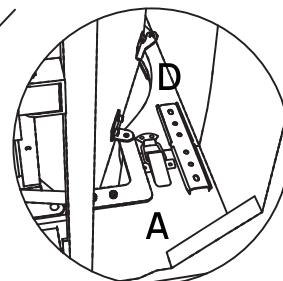
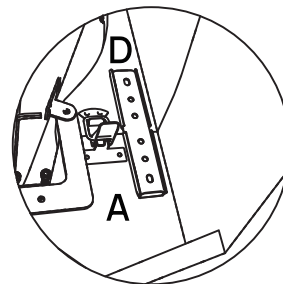


Stick the seat cover back Velcro, and pull it down tightly.

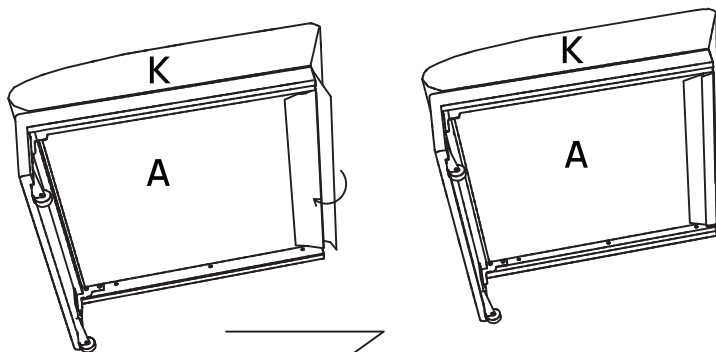


Place the unit sideways, tighten the spring snap, stick the seat cover back Velcro, and pull it down tightly.

Step 8

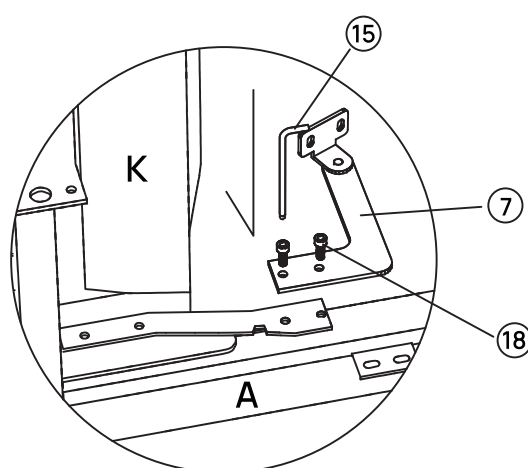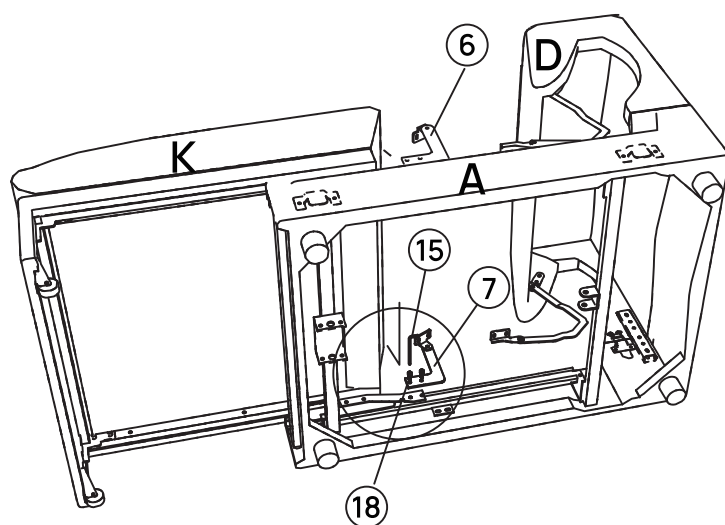


Use a hex wrench and M6*1.0cm to install the active headrest connector.

Step 9

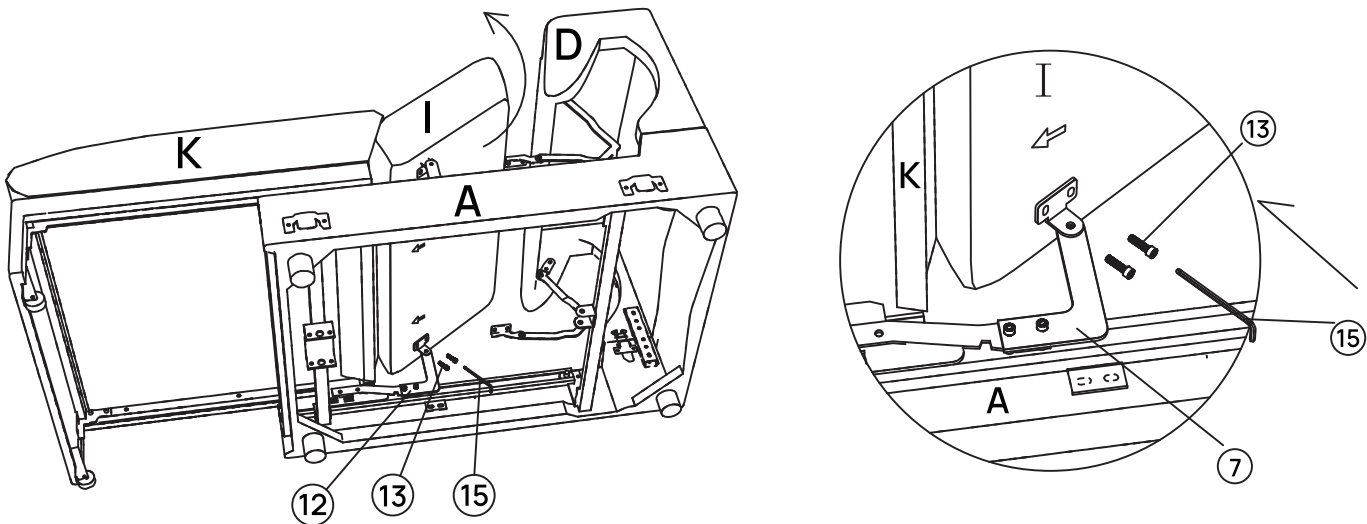


Use a hex wrench and M6*3.0cm,
tilt the active headrest and install the front part of the active headrest.

Step 10

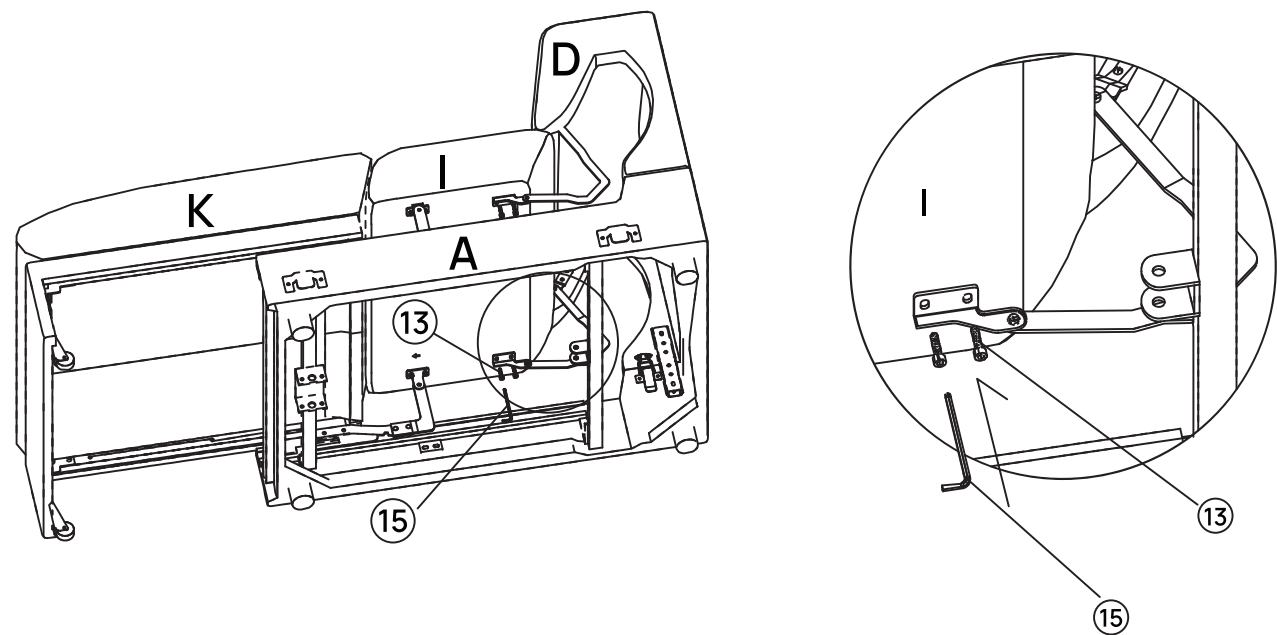

Use a hex wrench and M6*3.0cm,
tilt the active headrest and install the rear part of the active headrest.

Step 11

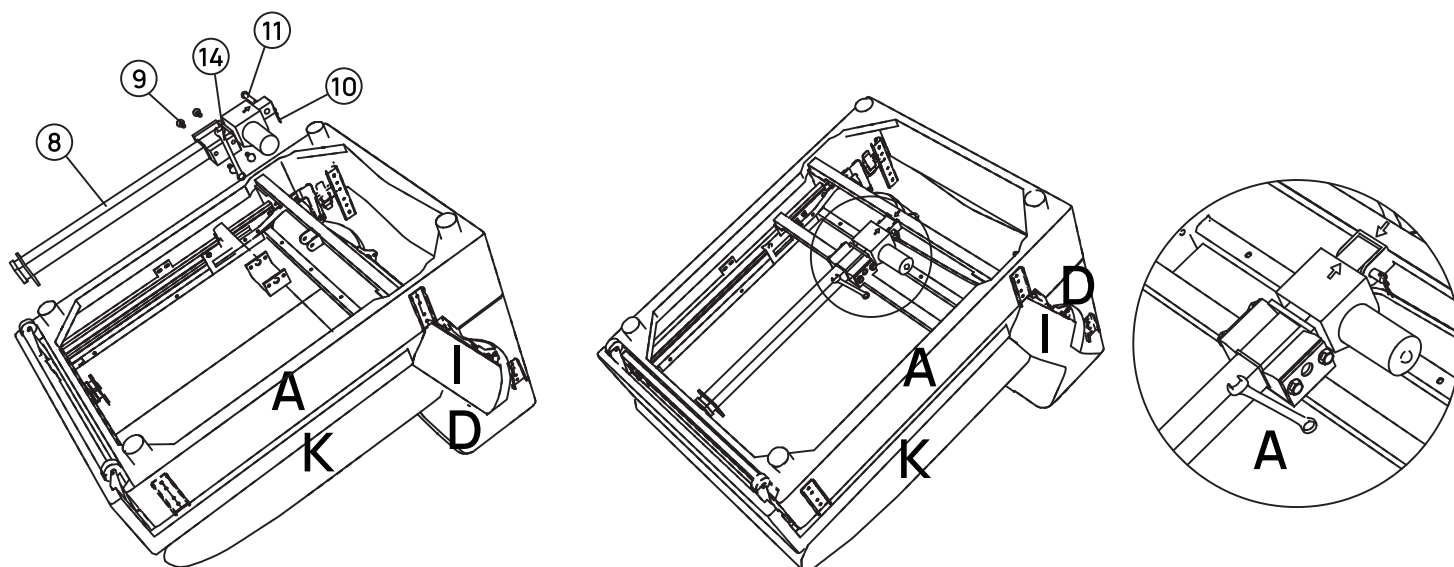

Push the seat into place, lay the unit flat,
use a cross wrench & motor screws & motor inserts & snap pins to install the motor.

Step 12


Special Attention:

When installing the motor , please use a manual screwdriver.
Do not use an electric screwdriver, as it may damage the product.


Route the middle motor cable
and insert it into the wire clip.

Route the left motor cable
and insert it into the wire clip.

Route the right motor cable
and insert it into the wire clip.

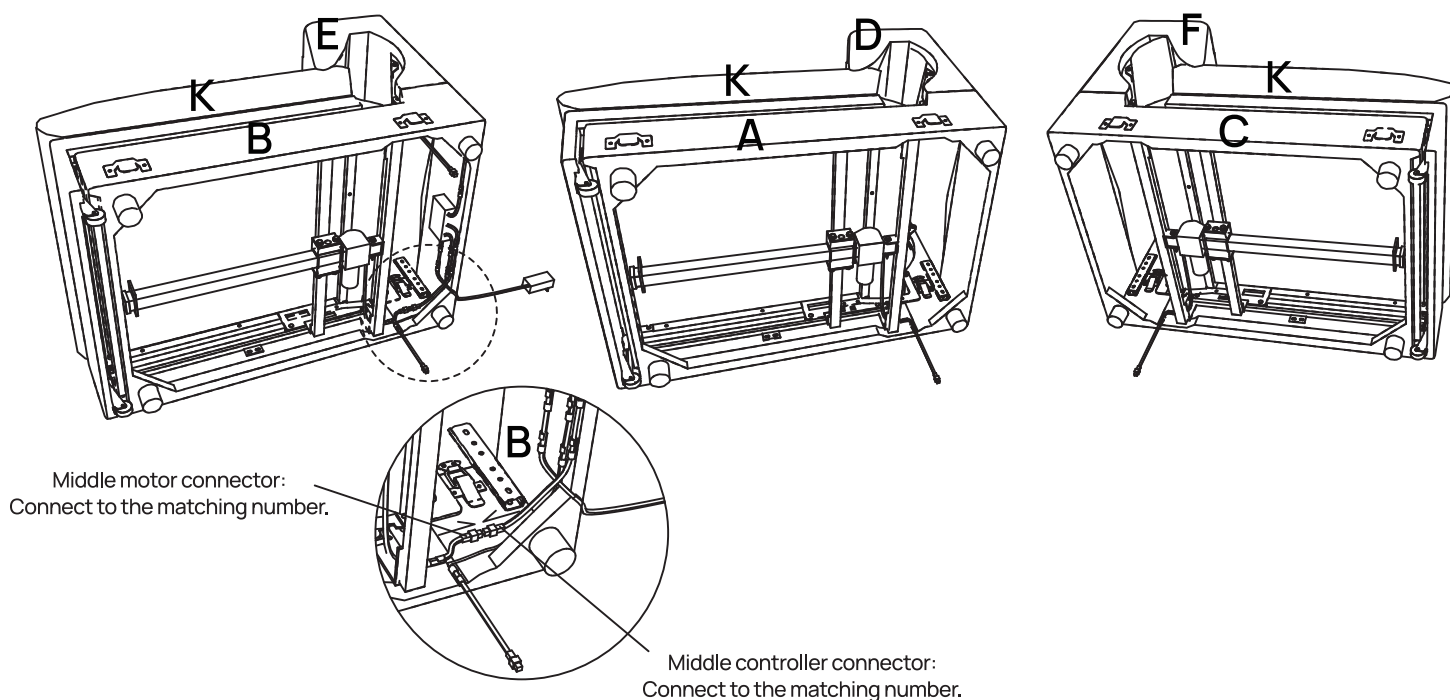


Step 13

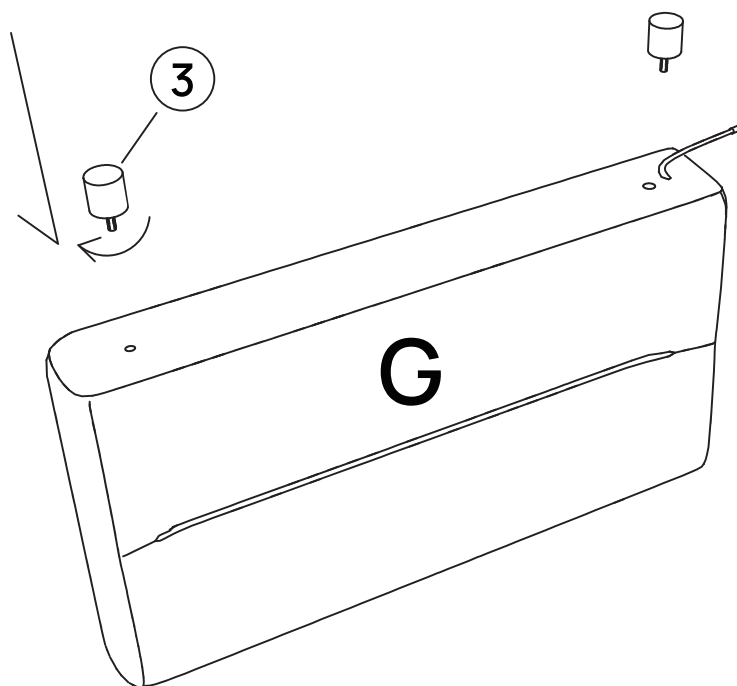


Install the armrest foot.

Step 14

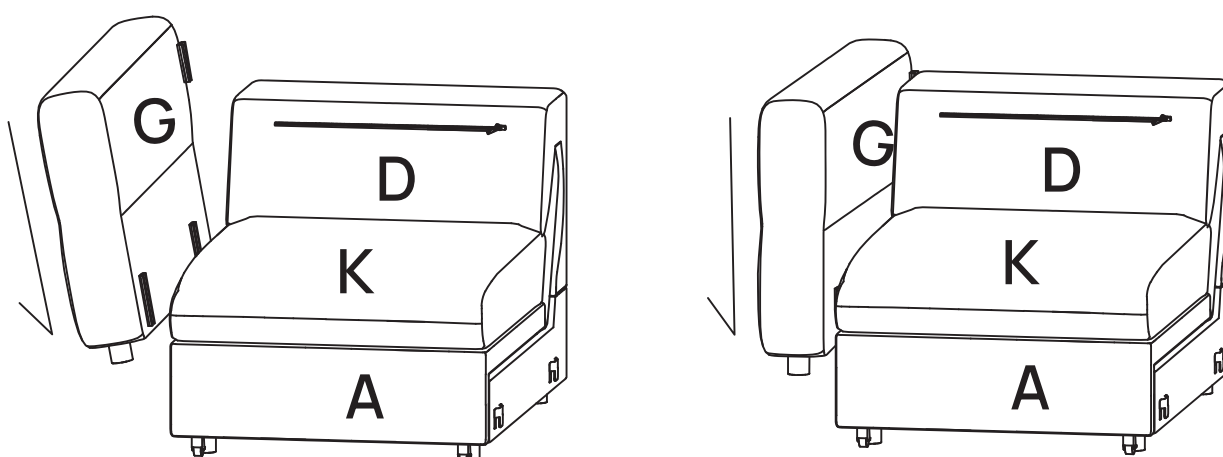


insert the lower pin at an angle about 1 cm first, then align vertically and insert the upper pin.

Step 15

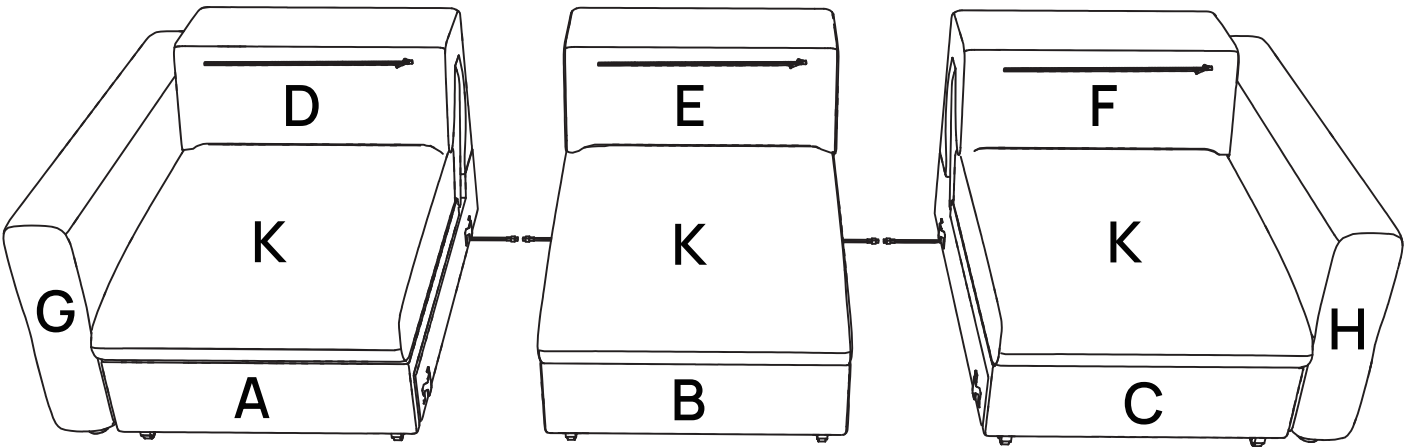


Insert the control wires according to the matching numbers.

Step 16

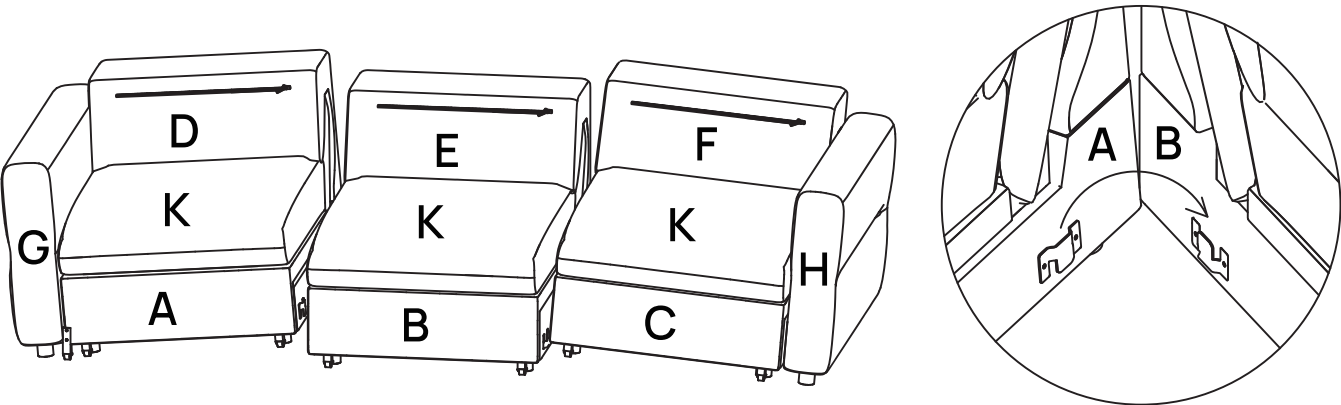


Assemble the sofa.

Step 17

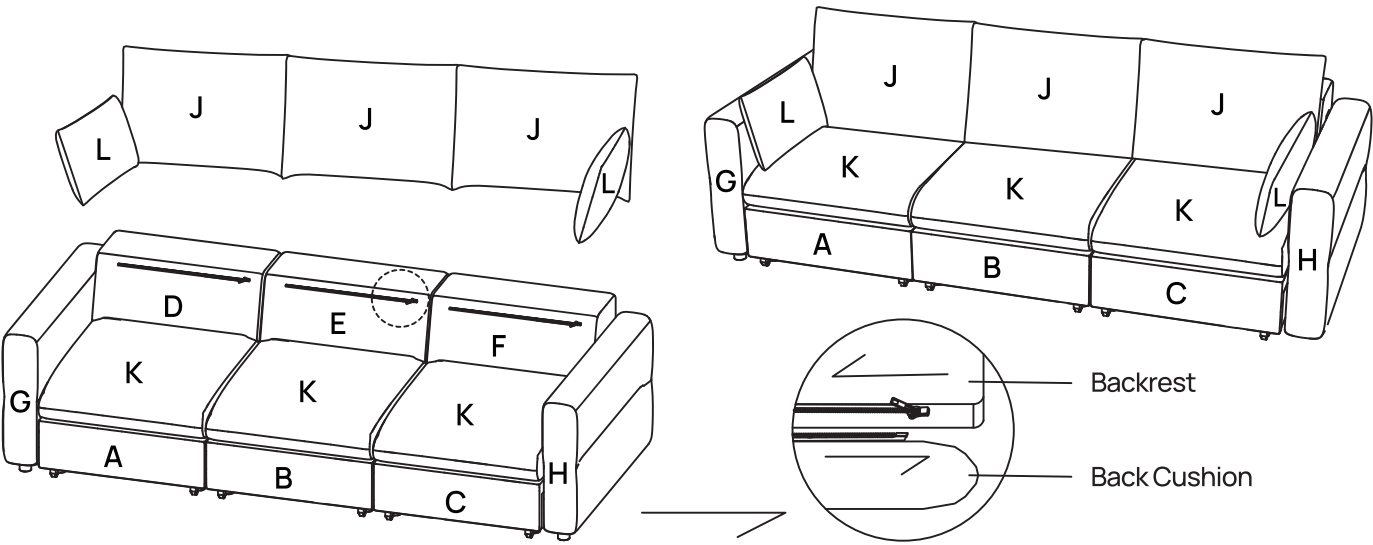

Zip up the backrest cover.

Step 18

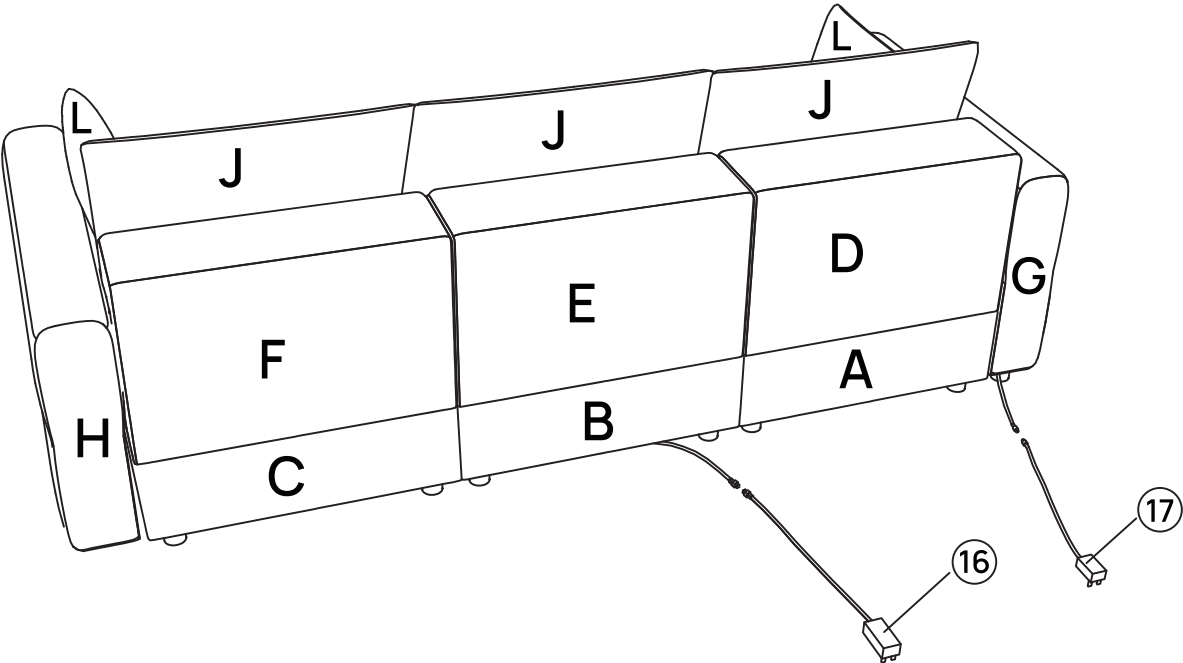

Insert the power cables according to the matching numbers.