
Installation Instruction



Assembling

What you need


- Use the packaging carton as a working surface to prevent product damage during assembly
- Phillips head screwdriver



Weight Limitation




100 lbs table top | 35 lbs per

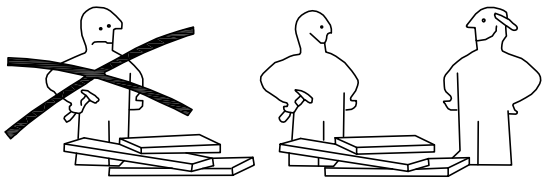

What' included

Code	Description	Qty
A	Cam Bolt M6X35MM	21
B	Cam Lock15X9MM	21
C	Wooden Dowel M8X30MM	16
D	Screw M4X40MM	21
E	Screw M3.5X14MM	2
F	Hole position sticker	21
G	Adjustable Foot	4
H	Screw M6X25MM	6
I	Cam Bolt M4X10MM	4
J	Anchor	2
K	Screw M3.5X14MM	12
L	Screw M6X12MM	16
M	Nylon Strap	2
N	Phillips screwdriver	1
O	Wrench M4X55MM	1
P	Two-way rail	4

The Hardwares

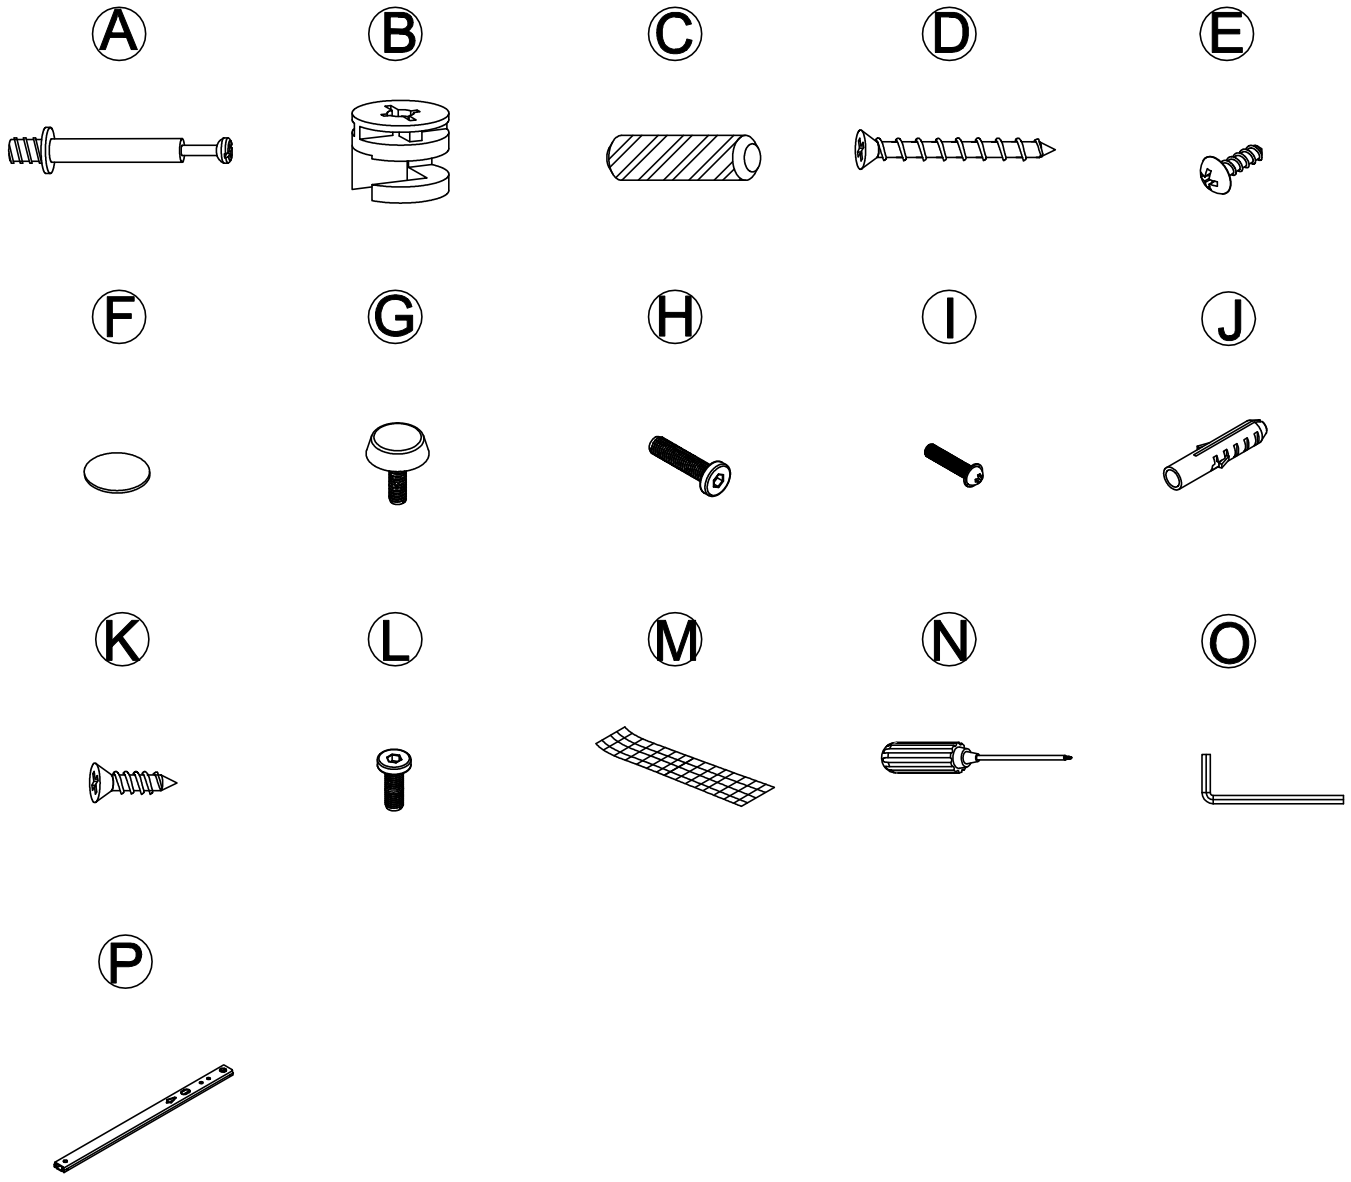


IMPORTANT:
1.Do not tighten bolts / screws completely until all bolts / screws are lined up and inserted into holes.
2.Do not over tighten screws and bolts to avoid stripping
3.Please use hand tools to assemble this product, you can also use power tools (please use power tools carefully)

Included Accessories


Code	Description	Qty
1	Cabinet Top	1
2	Bottom Panel	1
3	Left Side Panel	1
4	Right Side Panel	1
5	Vertical middle panel	1
6	Drawer side panel	2
7	Drawer side panel	2
8	Drawer bottom board	2
9	Drawer back board	2
10	Table legs	4
11	Left Drawer	1
12	Right Drawer	1
13	Curved plate	2
14	Coaming panel	2
15	Backboard	1

The Accessoriess

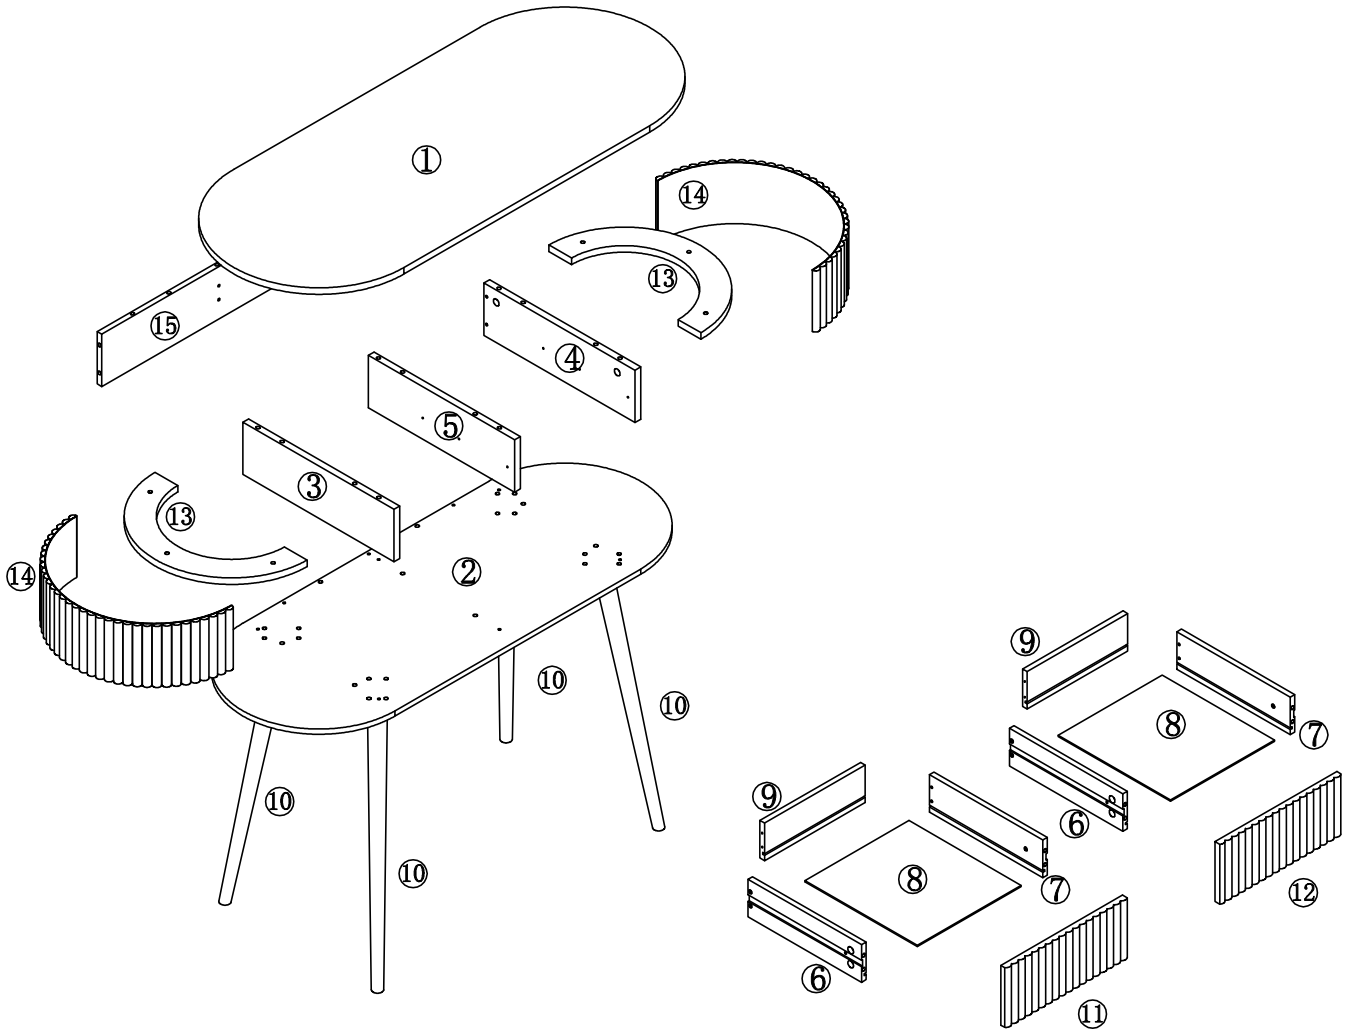


HARDWARE USAGE GUIDE

Hidden Cam Bolt/Cam Lock Usage Instructions

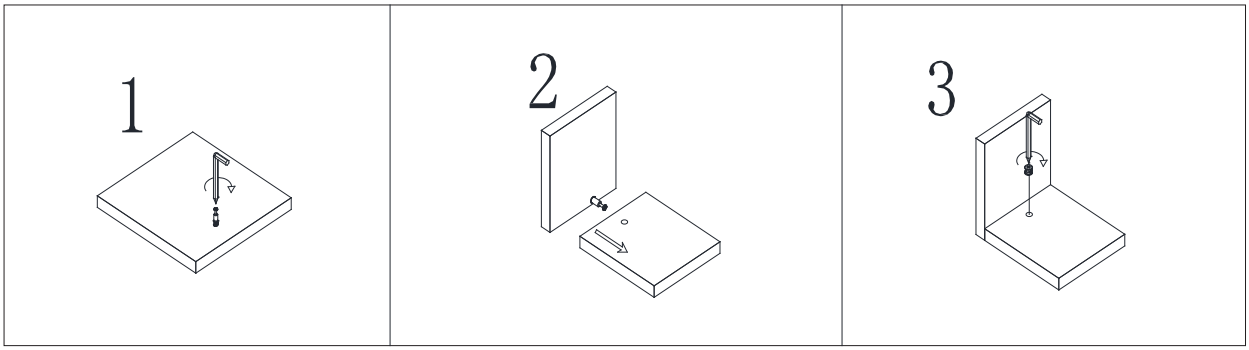


Step 1




Cam Bolt

Turn the Cam Bolt until the shoulder is firmly against the part.

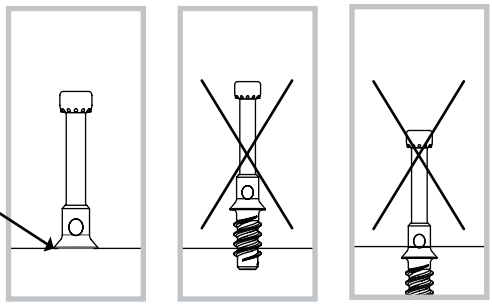


Step 2

Connect the two platesat 90 degrees.

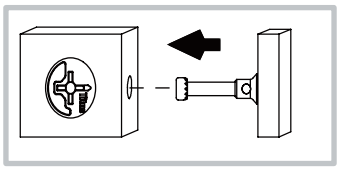


Step 3.1

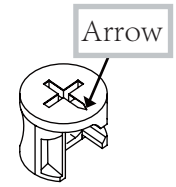


Cam Lock

Push the cam lock into the part. The arrow must point directly toward the hole on the board's edge (see diagram).

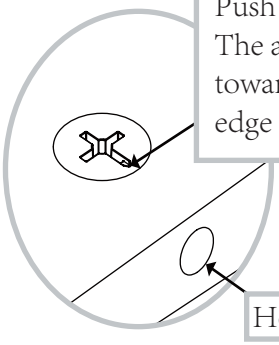



Step 3.2


Install the cam lock nut andfix it by rotation.

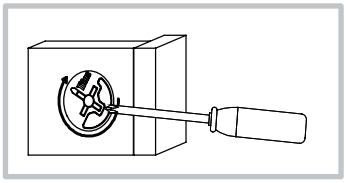


Step 1

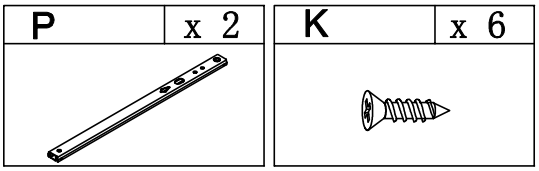

P
x 2
K
x 6

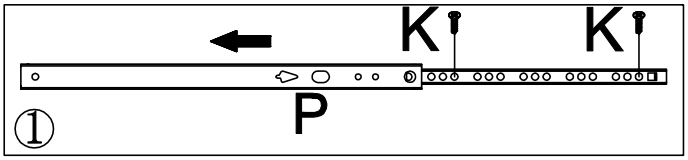

K
K
P
①

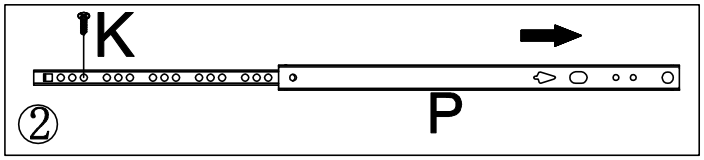

K
P
②

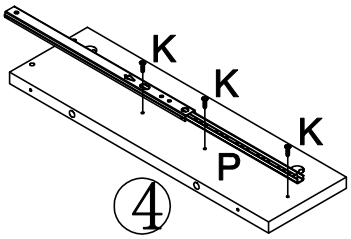



K
K
K
P
④

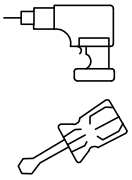


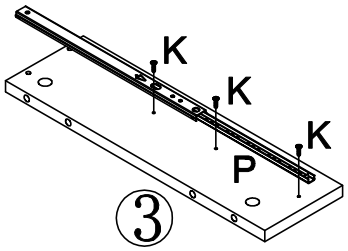

K
K
K
P
③

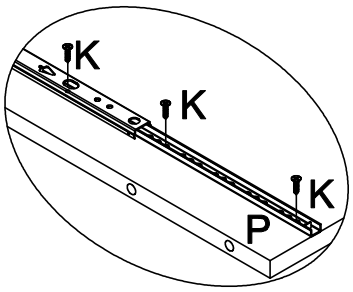

K
K
K
P

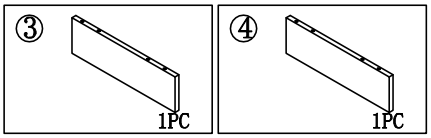
③
1PC
④
1PC


Step 2

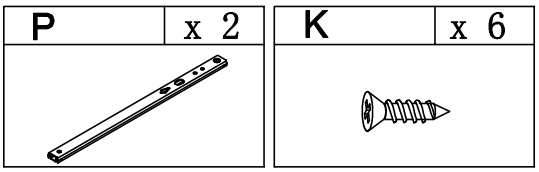

P
x 2
K
x 6

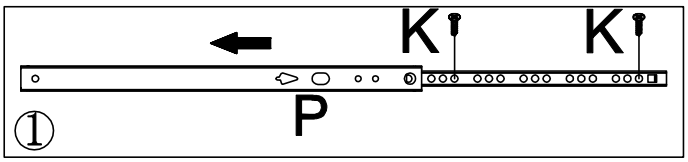

K
K
P
①

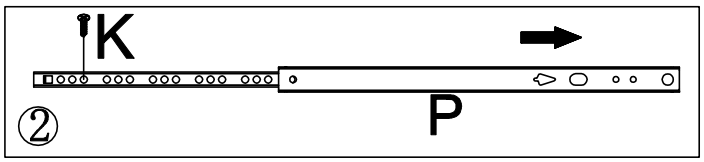

K
P
②

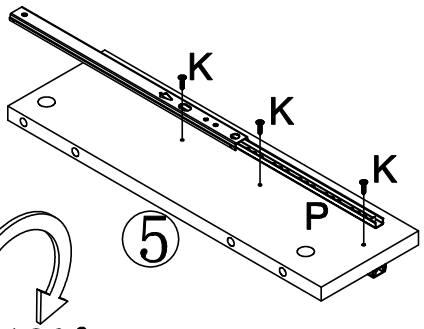




K
K
K
P
⑤

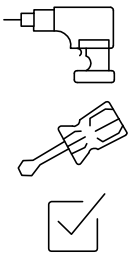

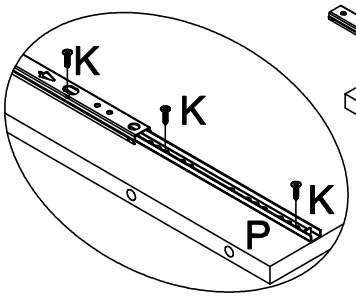

K
K
K
P

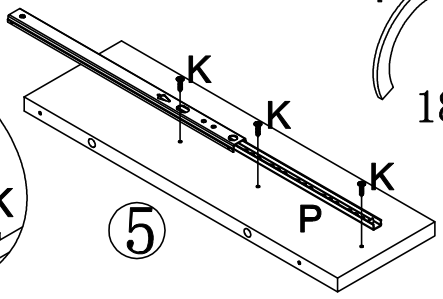
K
K
K
P
⑤

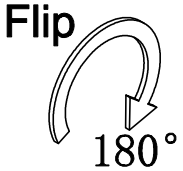

Flip
180°

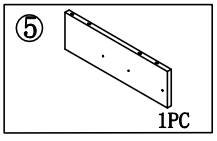

⑤
1PC


Step 3

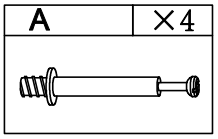




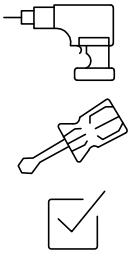


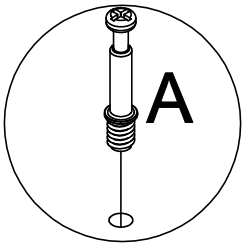

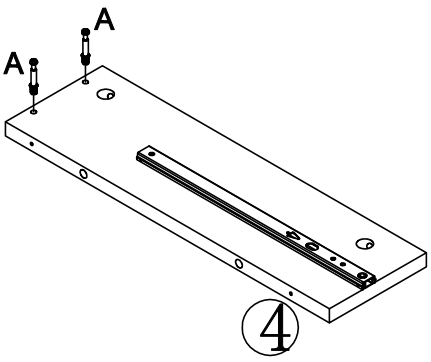


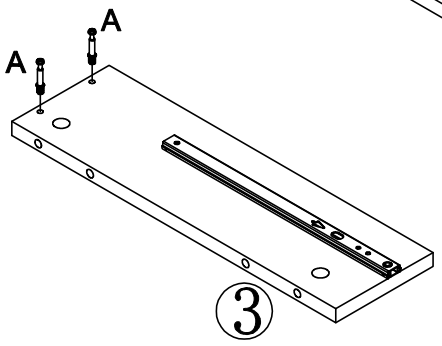

Step 4

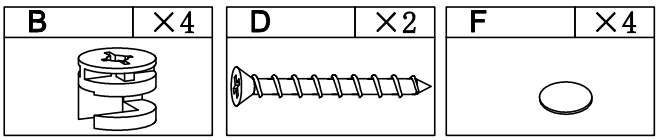














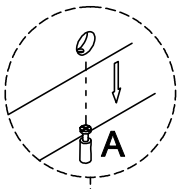


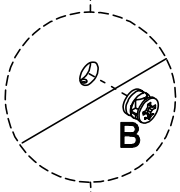

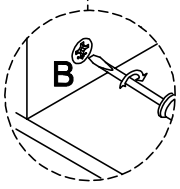


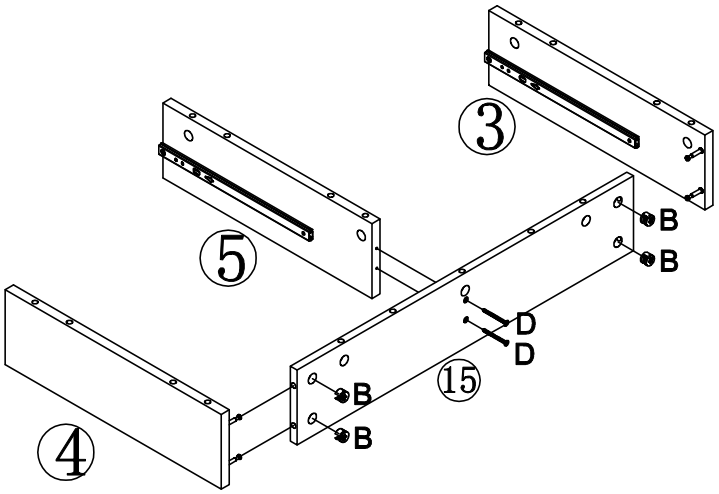

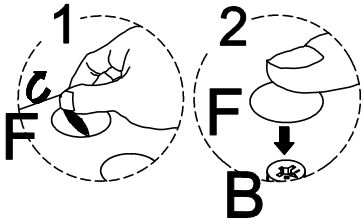


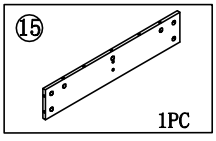

Step 5

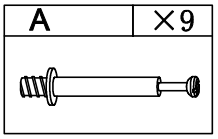

A
×9









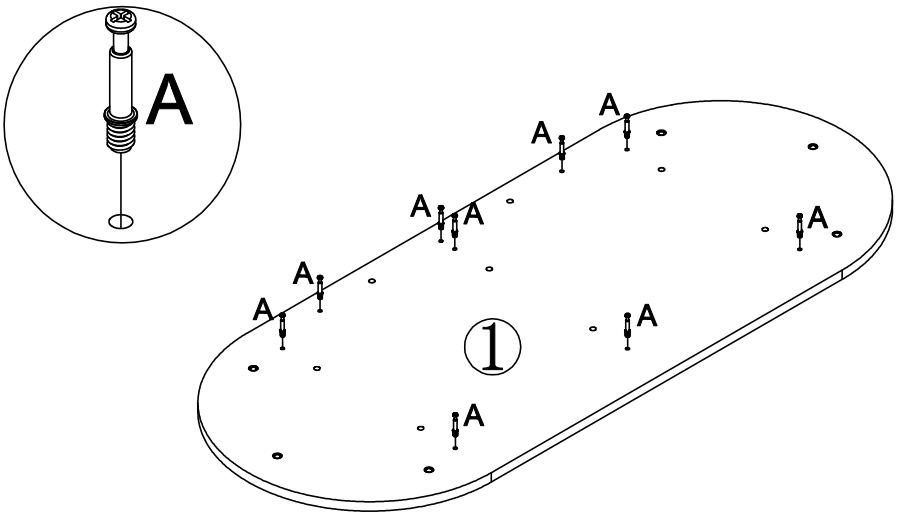




A
A
A
A
A
A
A
A
A
A
①

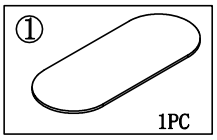

①
1PC

Step 6

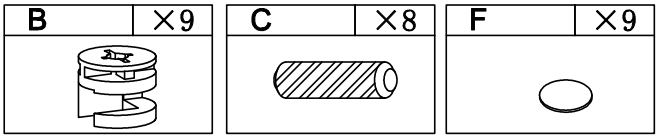

B
×9
C
×8
F
×9

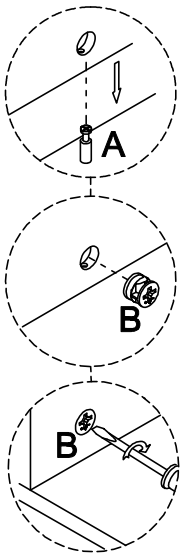

A
B
B

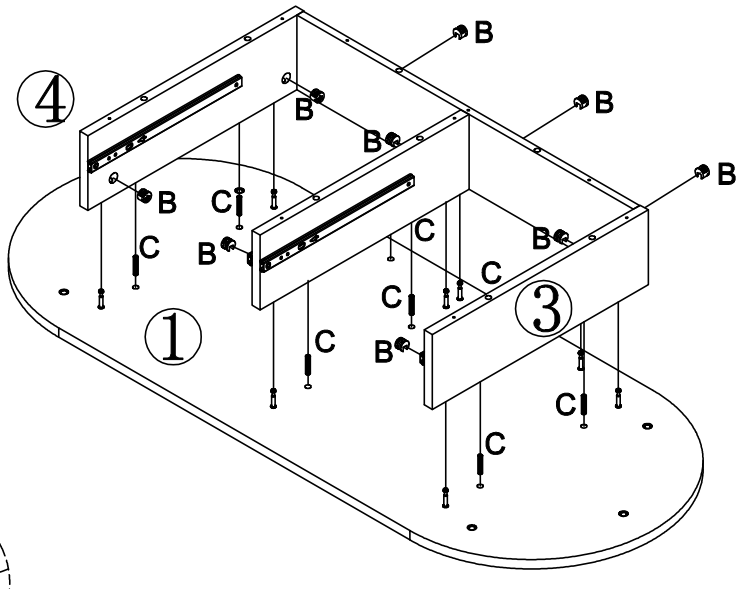
④
①
③
B
B
B
B
B
B
B
B
B
C
C
C
C
C
C
C
C

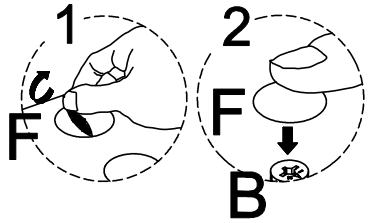
1
F
2
F
B


Step 7

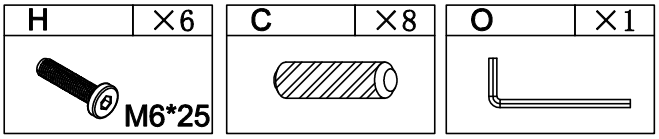

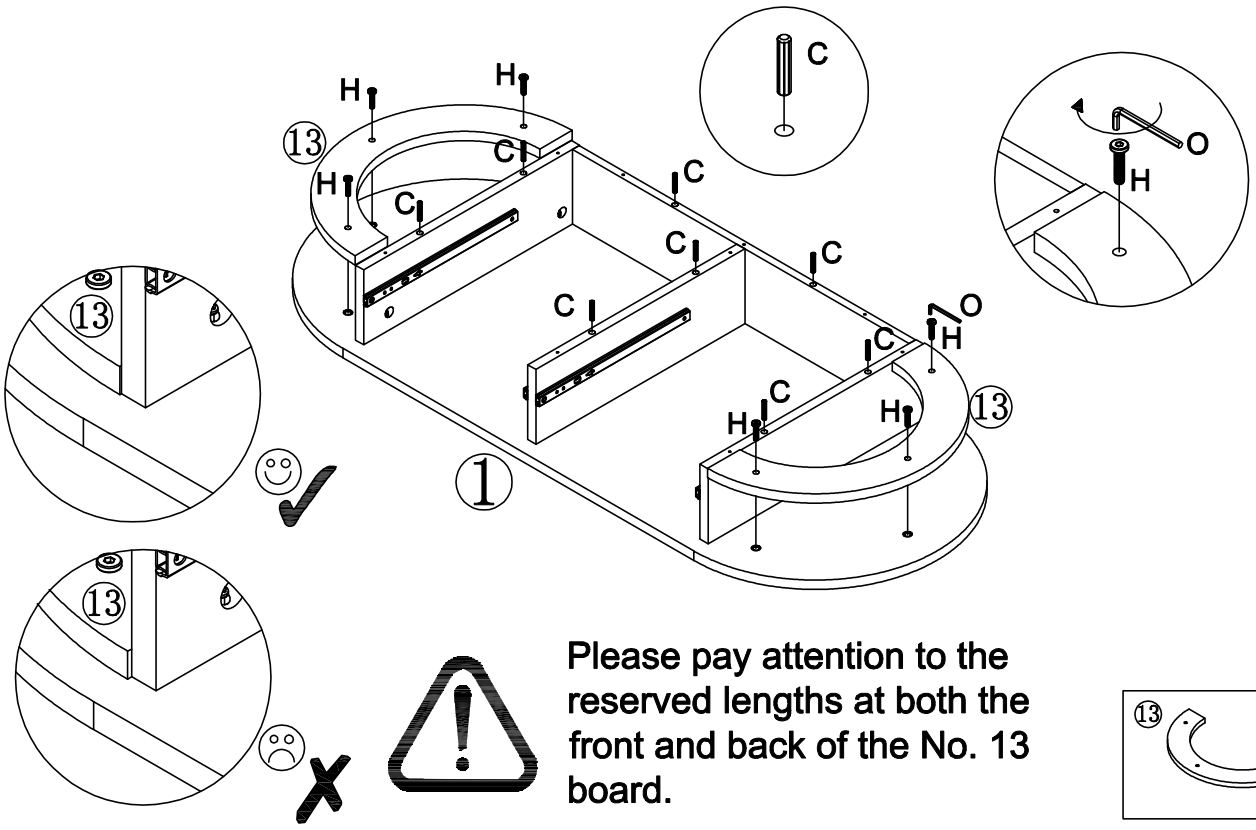



Please pay attention to the reserved lengths at both the front and back of the No. 13 board.

Step 8

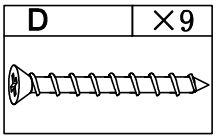













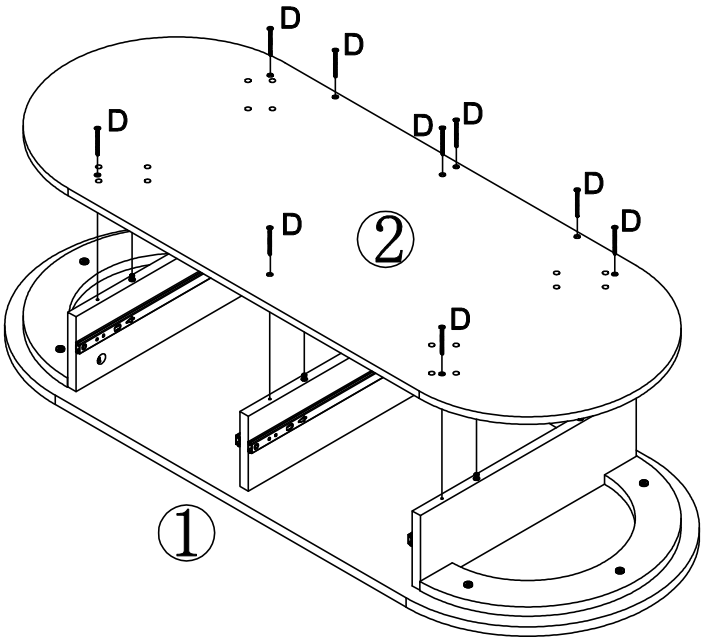

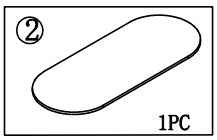


Step 9

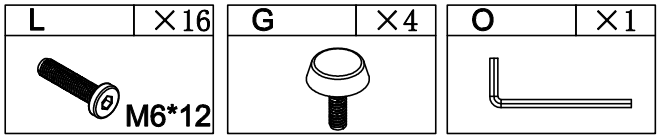


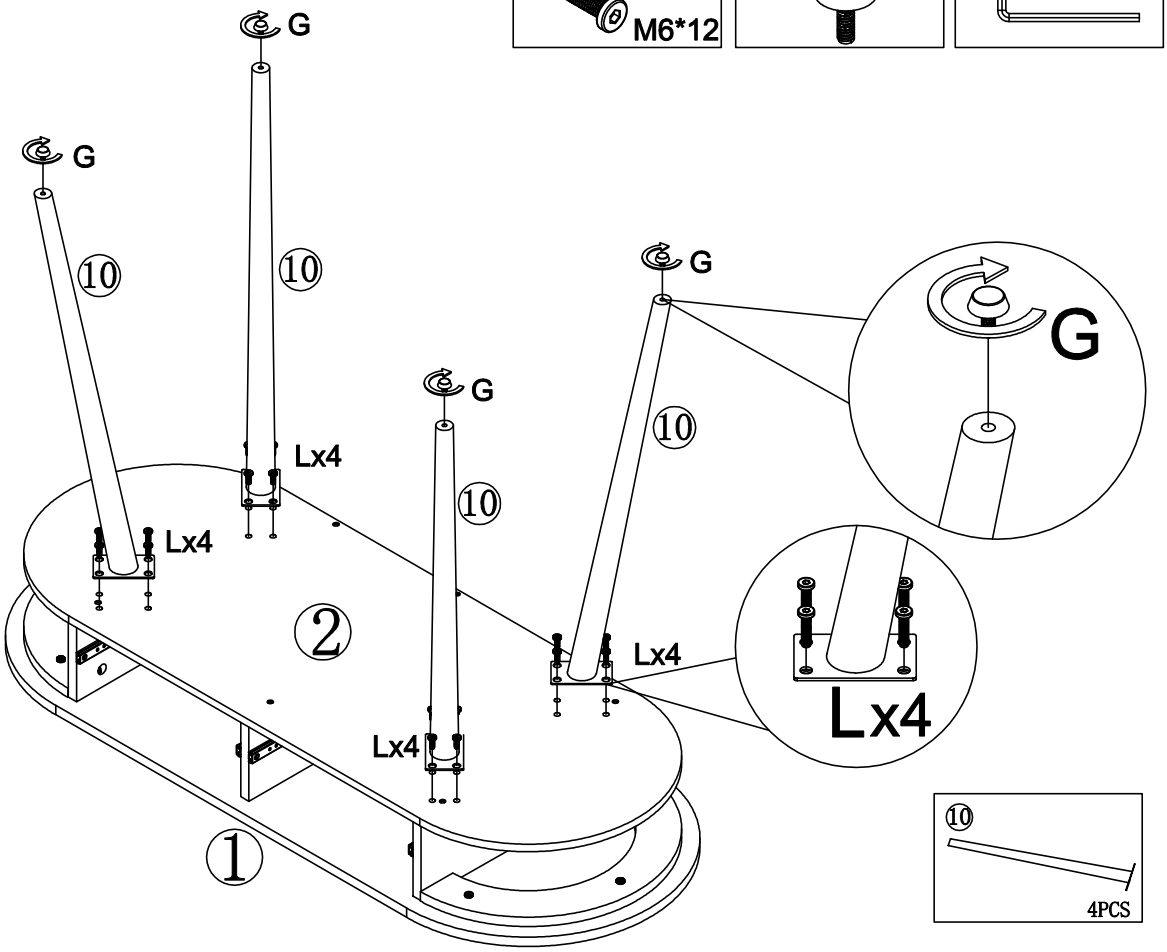


Step 10

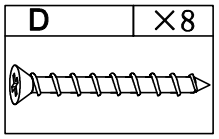




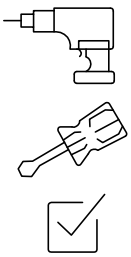


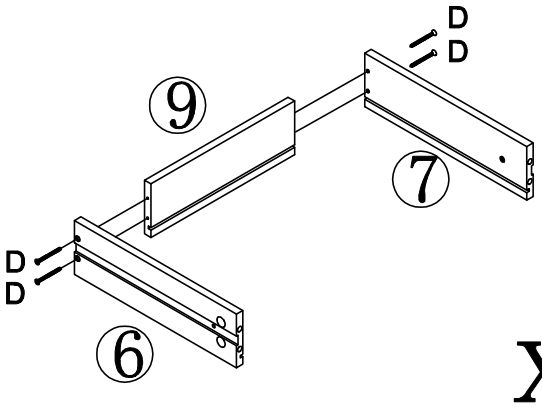


x2

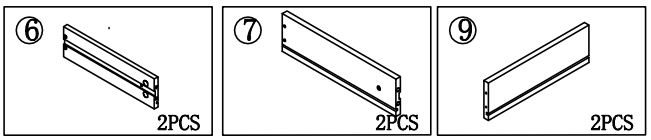


Step 11

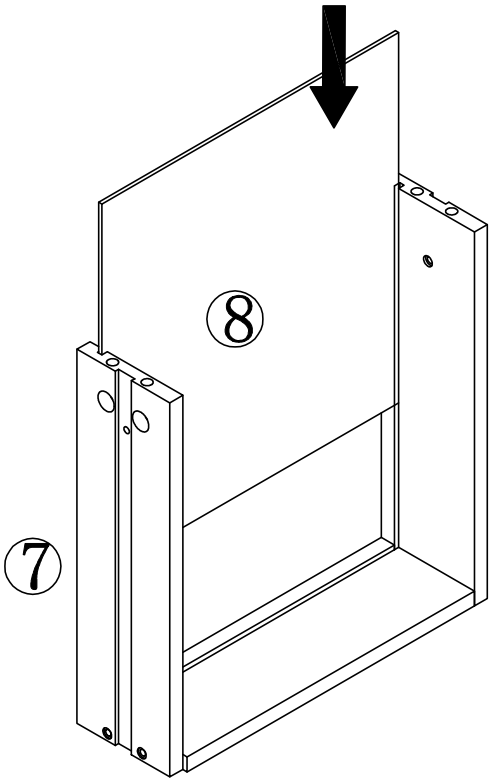



x2

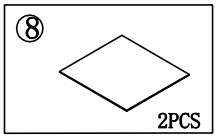



Step 12

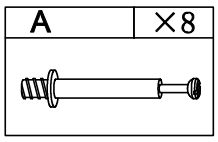


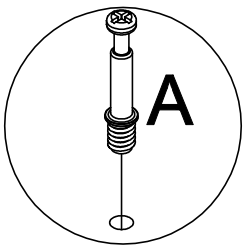

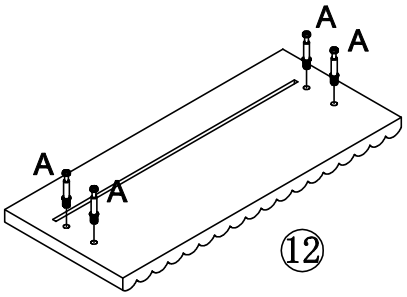


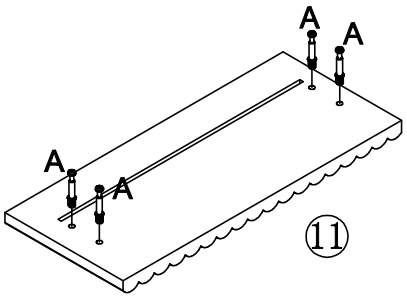


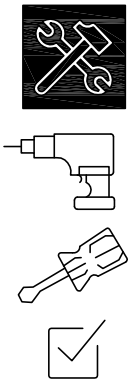


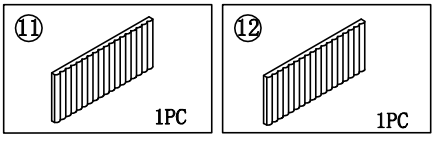

Step 13

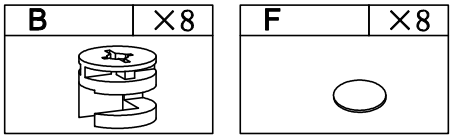


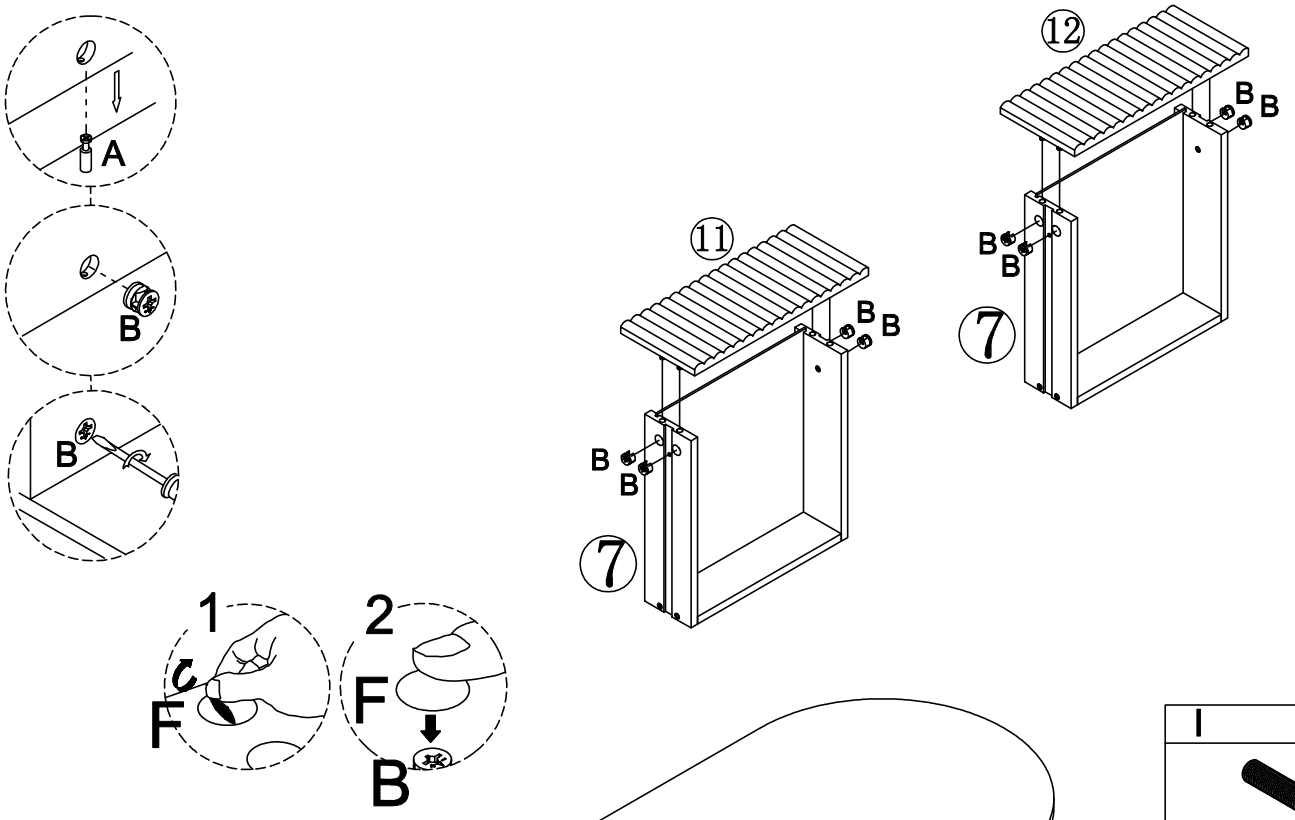

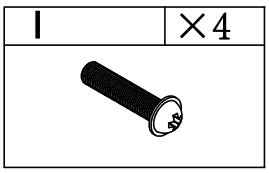


Step 14


Step 15

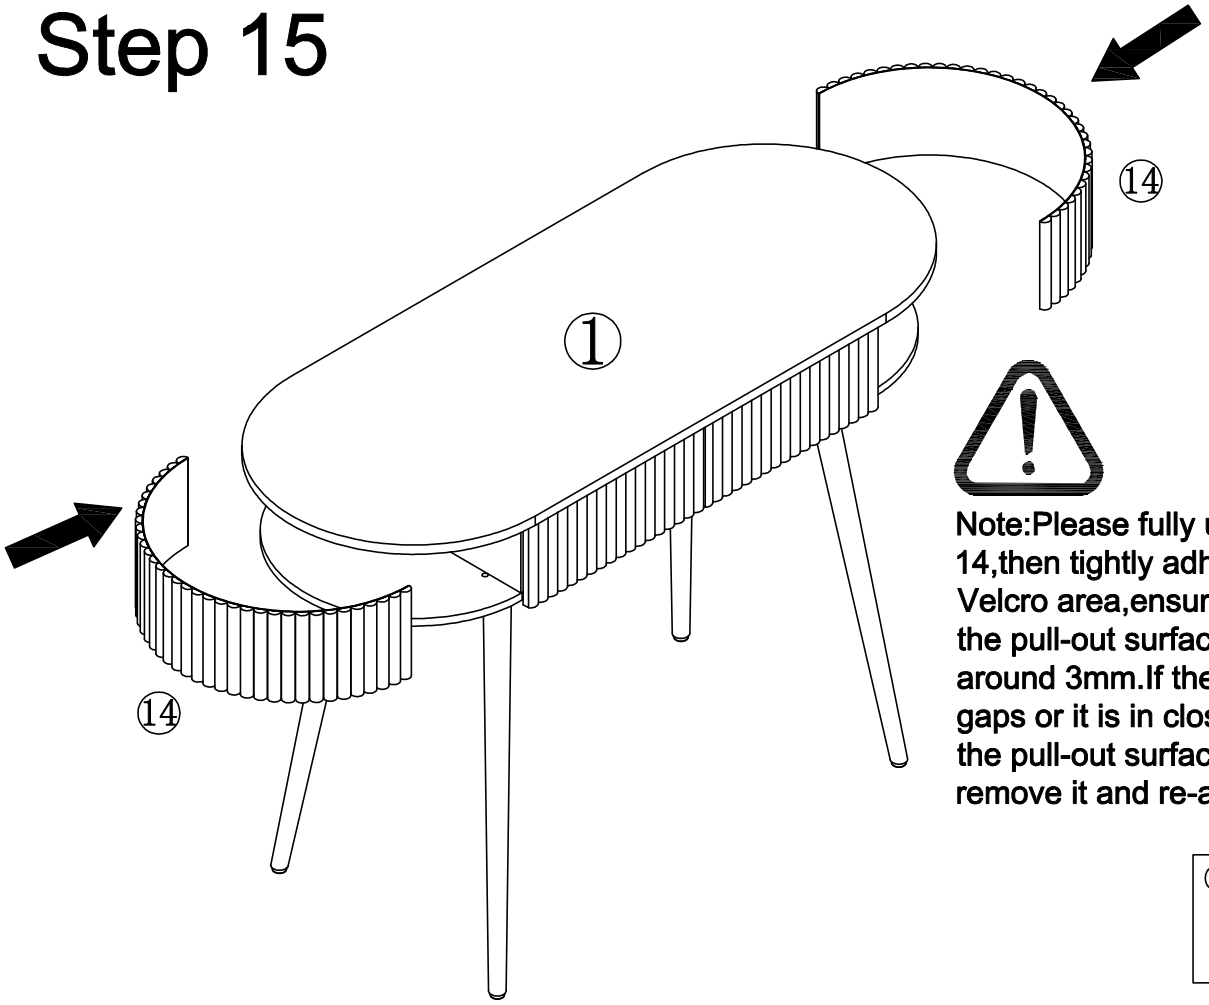



Note:Please fully unfold the board 14,then tightly adhere it along the Velcro area,ensuring the gap with the pull-out surface is controlled at around 3mm.If there are obvious gaps or it is in close contact with the pull-out surface,you need to remove it and re-adhere it.

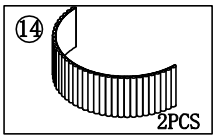


Step 16

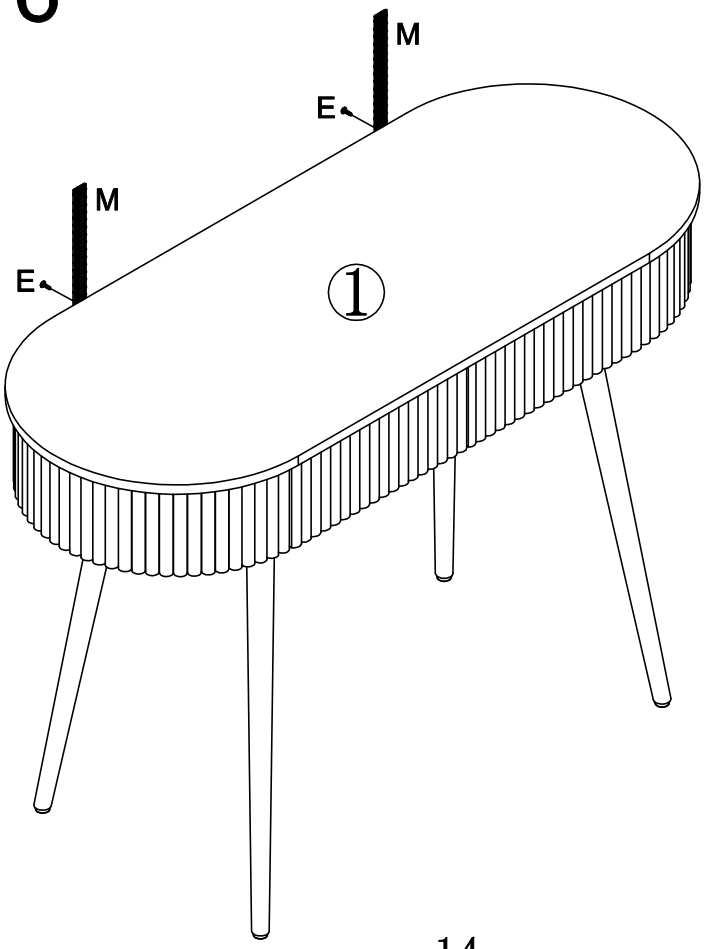


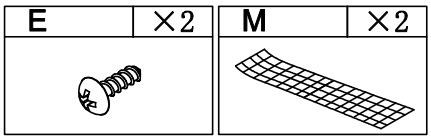


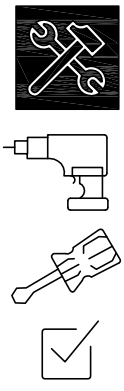


Step 17

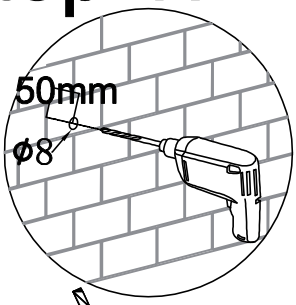

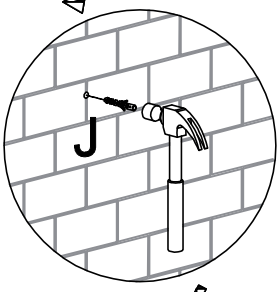

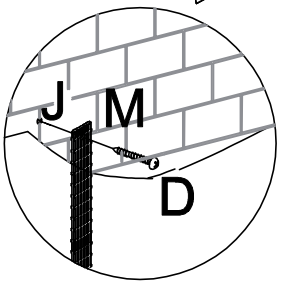

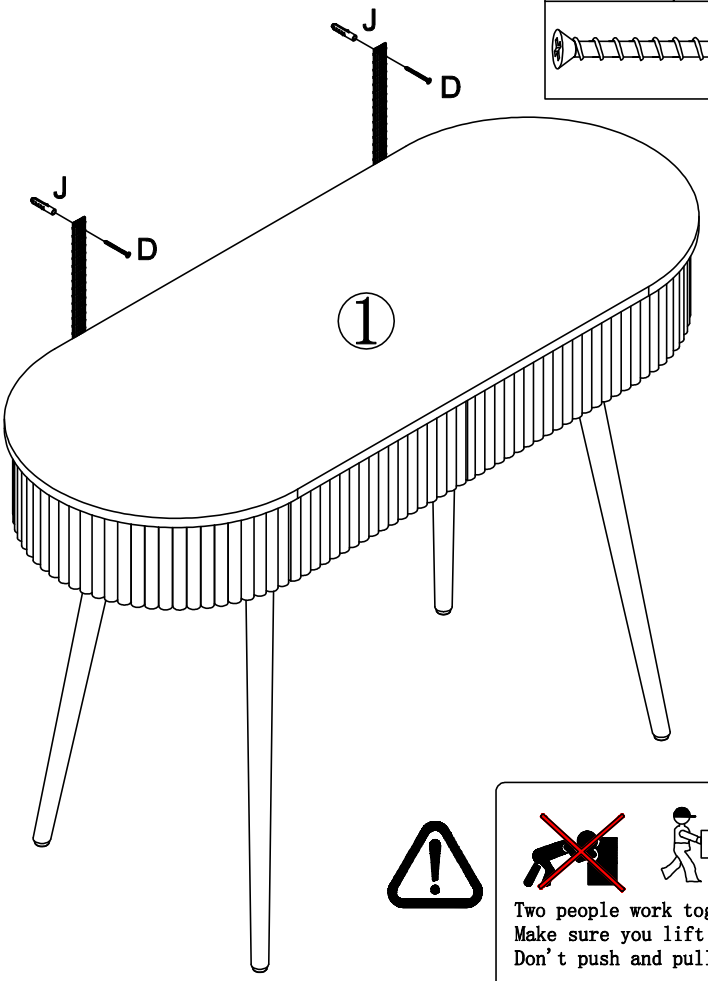

D	×2	J	×2

Two people work together to move the table.
Make sure you lift it off the ground.
Don't push and pull.

Step 18

