





1PCS




① mini screw

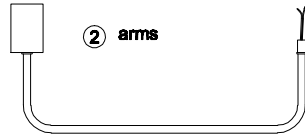

② arms



⑦ thread rod 1PCS

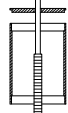

⑥ cover 1PCS



⑤ tube 1PCS



③ plate 1PCS

⑩ lock ring 1PCS


⑨ ring 1PCS

⑧ tube 4PCS


thread rod 3PCS




④ connector 2PCS




⑪ canopy 1PCS

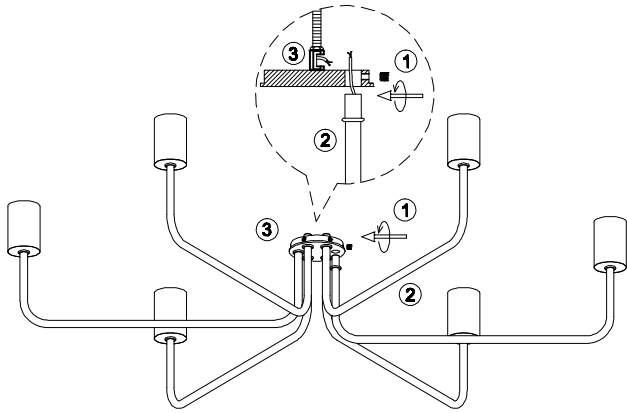


1. Install the arms 2 on the bottom plate 3 by grub screw 3, and adjust the arms to the right position.

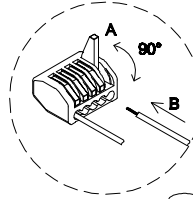


1. Pull the orange operating handle A to open the inlet hole, insert the wire B.
2. Press the operating handle A to finish wiring.
(Note: one inlet hole can put 2 or 3 wires inside)

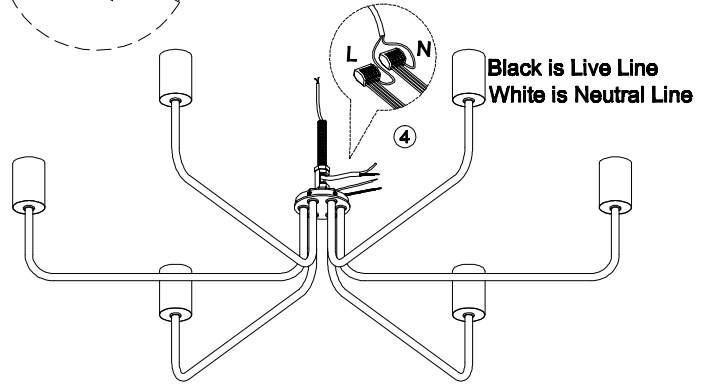

2. Connect all the wires by parallel with connectors 4 (all live line-L use one connector, and neutral Line-N use another connector).

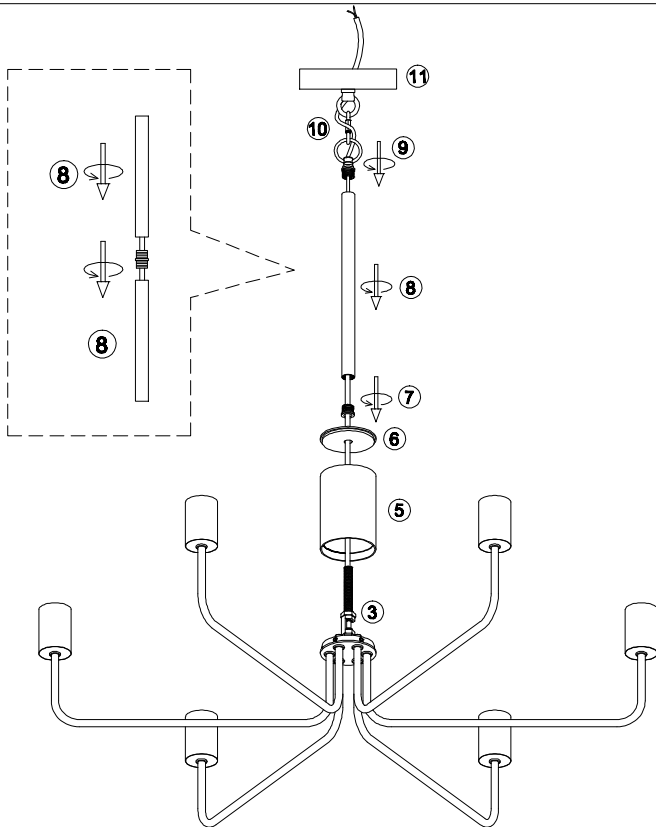

3. Install the cover 6 and the tube 5 on the bottom plate 3 with thread rod 7.
4. Let the wire go through the tube 8 and the hanging ring 9, turn the ring 9 to fix tube 8 and the fixture together, after that connect the ring 9 and canopy 11 by Carabiner hook screw connection 10.

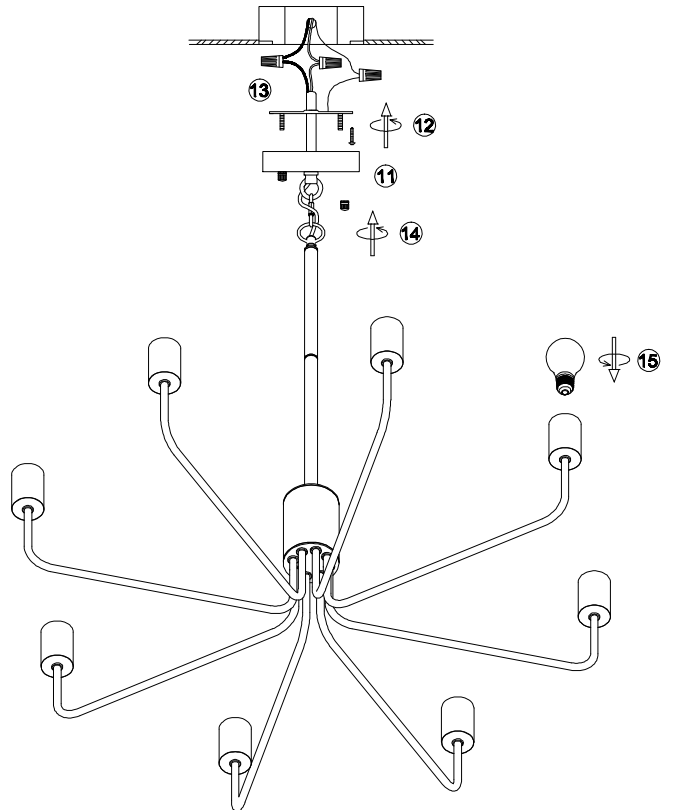

5. Install the bracket 12 on the junction box with expansion anchor PVC and screw.
6. Connect the wire 13 to your home line.
7. Install the fixture on the bracket with cap nuts 14.
8. Install the bulbs 15.

Please read carefully before installation!!!

Note : Please make sure that the electricity is powered off during installation !

Only a professional electrician should install this kind of product !