



Installation Collection

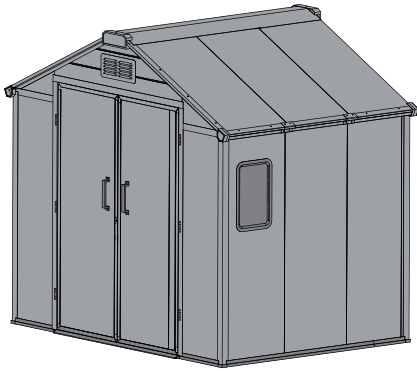


8X6 (1P - 44P)

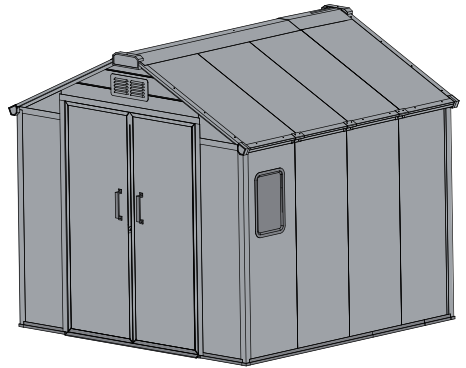

8X8 (45P - 98P)



8X10 (45P - 98P)

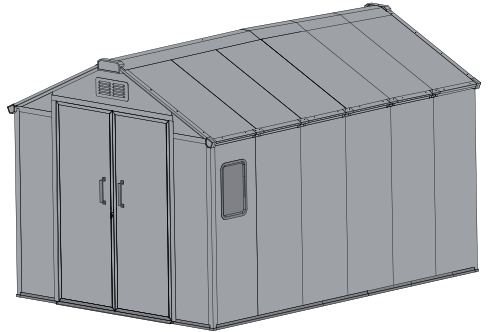

8X12 (45P - 98P)

List of Outer Box Accessories

Number: 325-A

NO.	Product Name:	PCS
B3	Floor I-beam (front)	1
B5	Floor threshold	1
B10	Left and right floor long buckle (front)	2
B12	Rear wall floor mid range	1
B13	Right door pillar	1
B14	Left door pillar	1
B15	Four corner pillar	4
A16	Front wall panel (left)	1
A17	Front wall panel (right)	1
B20	Door stall	1
A22	Left wall panel (front)	1
A23	Left middle rear/rear wall/right middle panel	7
A24	Front section of right wall panel	1
A25	Rear section of right wall panel	1
B28	Rear wall panel upper bracket (middle)	1
B29	Right front rainproof barrier strip	1
B30	Left front rainproof barrier strip	1
A43	Triangle board in the front wall	1
D55	Pillar	1
C56	Sunshine plate	1
A58	Door panel (left)	1
A59	Door panel (right)	1

Number: 325-B

NO.	Product Name:	PCS
A1	Floor (front left/front right)	2
A2	Floor (left center rear/right center rear)	4
B4	Floor I-beam (rear)	1
C6	Door pillar fixed foot (right)	1
C7	Door pillar fixed foot (left)	1
B8	Floor left and right partitions (front and rear walls)	4
C9	Four corner pillar foot	4
B11	Left and right floor short buckle (rear)	2
B18	Upper bracket of left front wall panel	1
B19	Upper right front wall panel	1
D21	Left and right corner codes on the door gear	2
B26	Rear wall panel upper bracket (right)	1
B27	Rear wall panel upper bracket (left)	1
B31	Right rear rainproof barrier strip	1
B32	Left rear rainproof barrier strip	1
D33	Upper four pillar corner code	4
D34	Herringbone fixed internal linking component	4
D35	Herringbone fixed external link	4
D36	Herringbone beam	4
D38	Renzi Liang Hengdan	2
D39	Top connecting component of herringbone beam	2
D40	Herringbone beam screw rod	2
A41	Front wall upper right triangular panel	1

List of Outer Box Accessories


Number: 325-B

NO.	Product Name:	PCS
A42	Front wall upper left triangular panel	1
A44	Left rear triangle	1
A45	Right rear triangle	1
A46	Rear wall triangular panel straight strip	1
A47	Left and right front cover plates on the roof	2
A48	Left, right, middle, and rear cover plates on the roof	4
B49	Roof panel long edge wrapping (front)	2
B50	Short edge wrapping of roof slab (rear)	2
B51	Front right rear left diagonal gear	2
B52	Front left rear right diagonal gear	2
C53	Front, right, rear, left decorative cover	2
C54	Front left rear right decorative cover	2
C57	Front and rear building covers	2
D60	Door handle/4 screws	2
D61	Outer door padlock seat	2
D62	Socket seat on the door sill	1
D63	Underdoor socket	1
D64	A-frame screws	25
D65	Cross shaped self powered screw	150
C66	Front triangular ventilation window	1+1
D67	Self-tapping screws	12
D68	Sharp tail self power	90
D69	T-shaped drill bit	1
D70	Bottom angle fixing piece	4
D90	Long ground nails	4
D91	Expansion screw	4
	Two pairs of gloves	

Number: 326

NO.	Product Name:	PCS
A71	Floor (left center rear/right center rear)	2
B72	Floor I-beam (medium)	1
B73	Left and right floor buckles (center)	2
A74	Left and right wall panels (center)	2
B75	Left and right rainproof barriers (center)	2
D76	Herringbone fixed internal linking component	2
D77	Herringbone fixed external link	2
D78	Herringbone beam	2
D80	Herringbone beam pole	1
D81	Top connecting component of herringbone beam	1
D82	Herringbone beam screw rod	1
A83	Left, right, middle, and rear cover plates on the roof	2
B84	Left and right center edge of roof panel	2
D85	Pillar Link Rod	1
C86	Short Sunshine Board (Rear)	1
D87	Hexagonal socket of herringbone screw	12
D88	Cross shaped automatic screw package	50
D89	Sharp tail self power	15

Tools needed for installation:



Cork Hammer x 1



Electric Drill x 1



Ladder x 1



Screw Driver x 1



Tape Measure x 1



Small wrench x 1



Allen key x 1



Note:

Due to the ductility of the resin, there are no pre-drilled holes on the panel, so please drill your own holes.



Due to the large size of the product and for Safety, we recommend 2-4 people to work together on the installation, which is expected to be completed in 2-4 hours.

TOOL ROOM












Outer box number

325-A (X1)










325-B (X1)


8X6

FLOOR PARTS

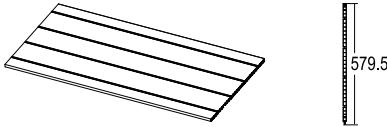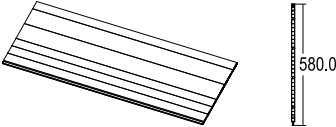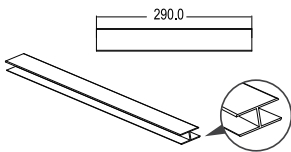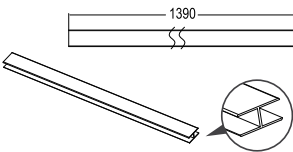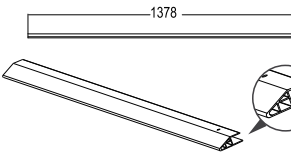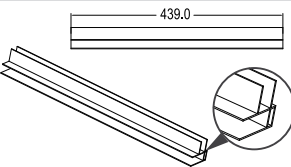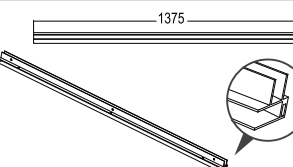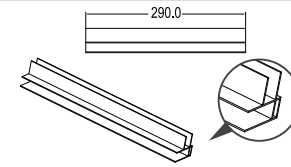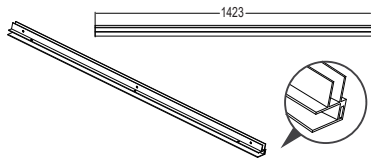
 A1 (X2)	 A2 (X4)	
 B3 (X1)	 B4 (X1)	 B5 (X1)
 B8 (X4)	 B10 (X2)	 B11 (X2)
 B12 (X1)		









WALL PARTS

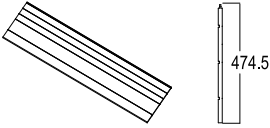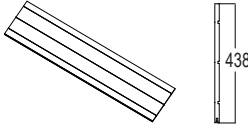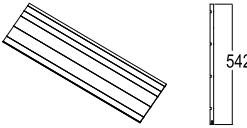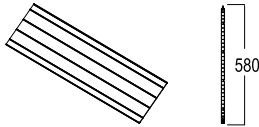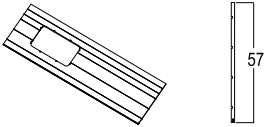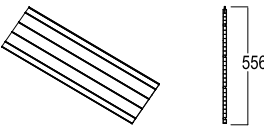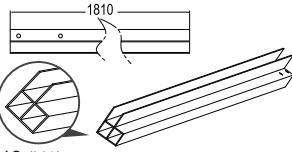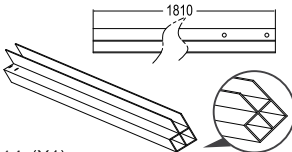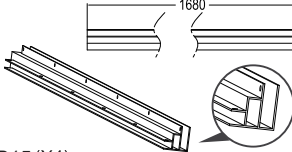 A16 (X1)	 A17 (X1)	 A22 (X1)
 A23 (X7)	 A24 (X1)	 A25 (X1)
 B13 (X1)	 B14 (X1)	 B15 (X4)




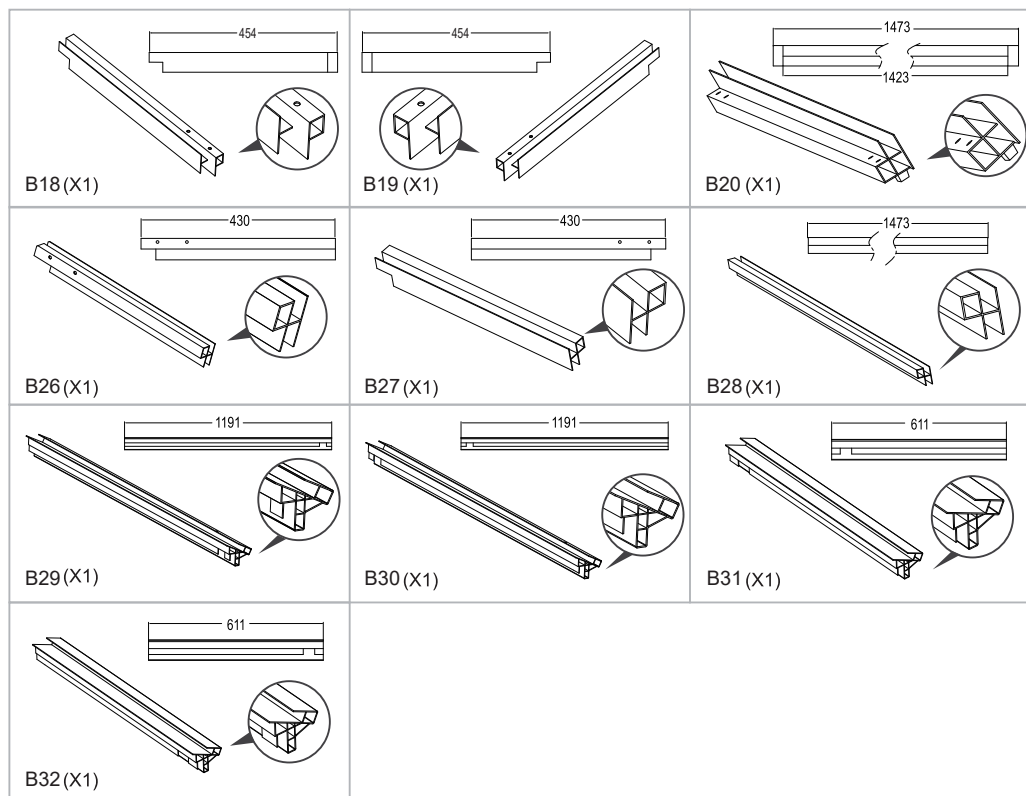


ROOF PARTS







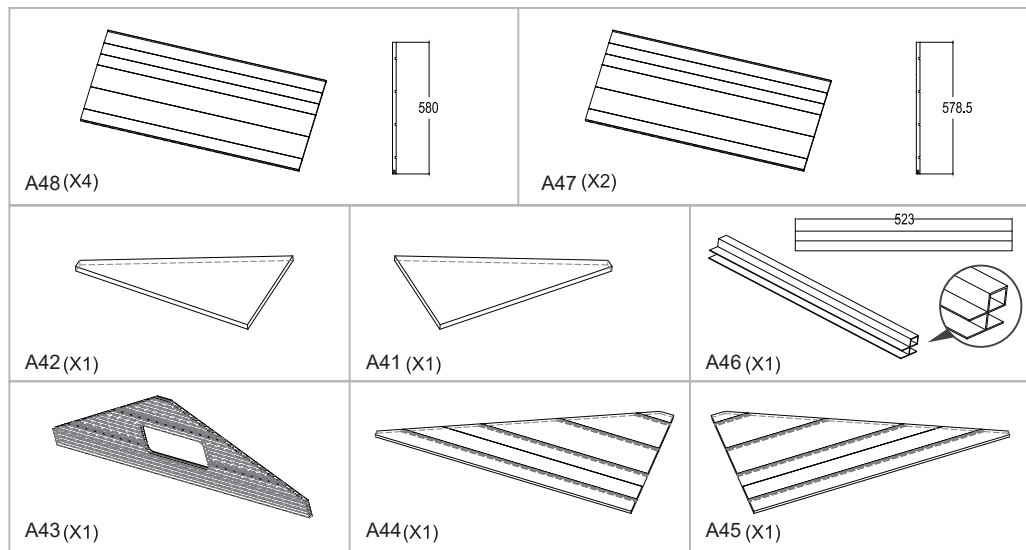


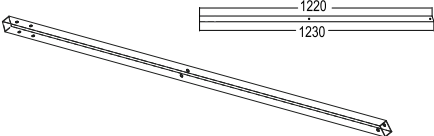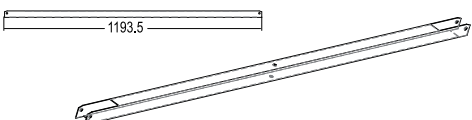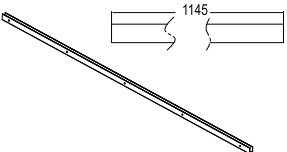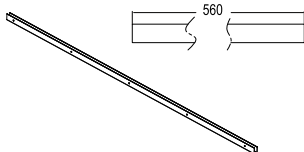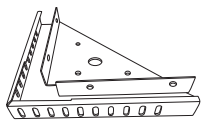 D36 (X4)		 D38 (X2)	
 B51 (X2)	 B52 (X2)	 D55 (X1)	
 B49 (X2)	 B50 (X2)	 D70 (X4)	

ROOF PARTS

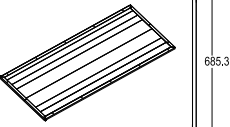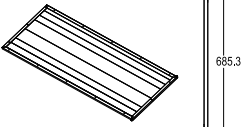 A59 (X1)	 A58 (X1)	 D61 (X2)	 D62 (X1)
--	---	---	---

SMALL PARTS

 C6 (X1)	 C7 (X1)	 C9 (X4)	 D21 (X2)	 D33 (X4)	 D34 (X4)	 D35 (X4)	 D39 (X2)
 D40 (X2)	 C53 (X2)	 C54 (X2)	 C56 (X1)	 C57 (X2)		 D60	
 C66 (X1)	 D63 (X1)	 D64 (X25)	 D65 (X150)	 D67 (X12)	 D68 (X90)	 D69 (X1)	
 20CM D90 (X4)		 Φ10X100 D91 (X4)					



1



A1 (x1) A2 (x2)



Cork
Hammer

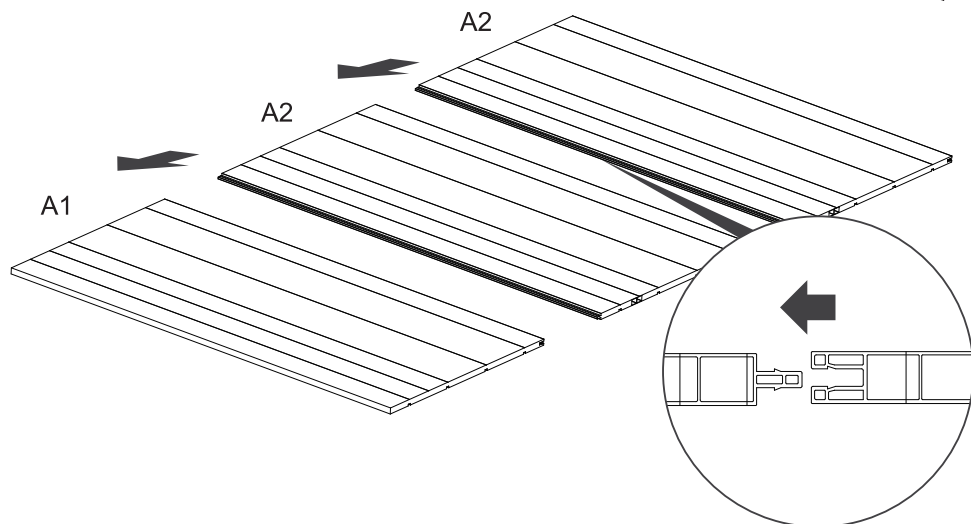



2



B3 (X1) B4 (X1)



Cork
Hammer

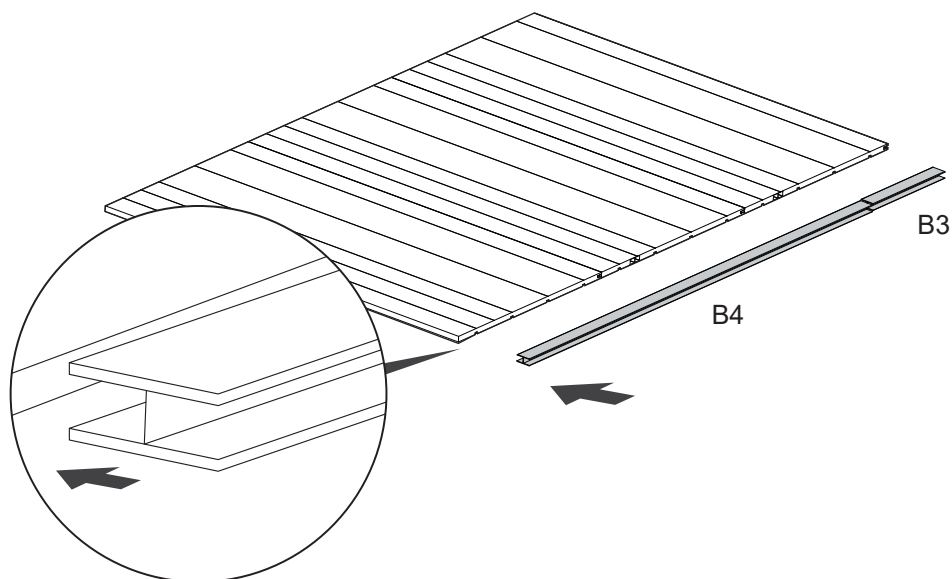



3



A1 (x1) A2 (x2)



Cork
Hammer

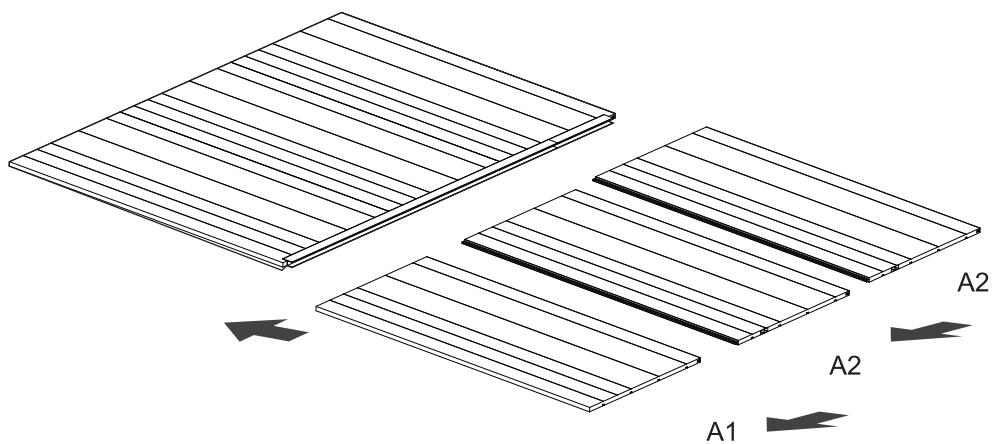



4



Φ5X16
D65 (x12)



Electric
Drill

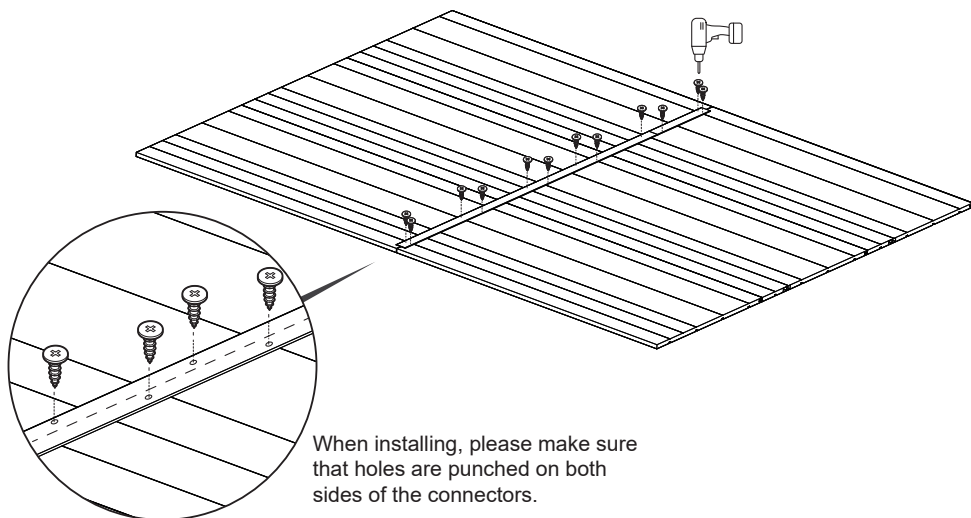



5



C9 (x1)



Cork
Hammer

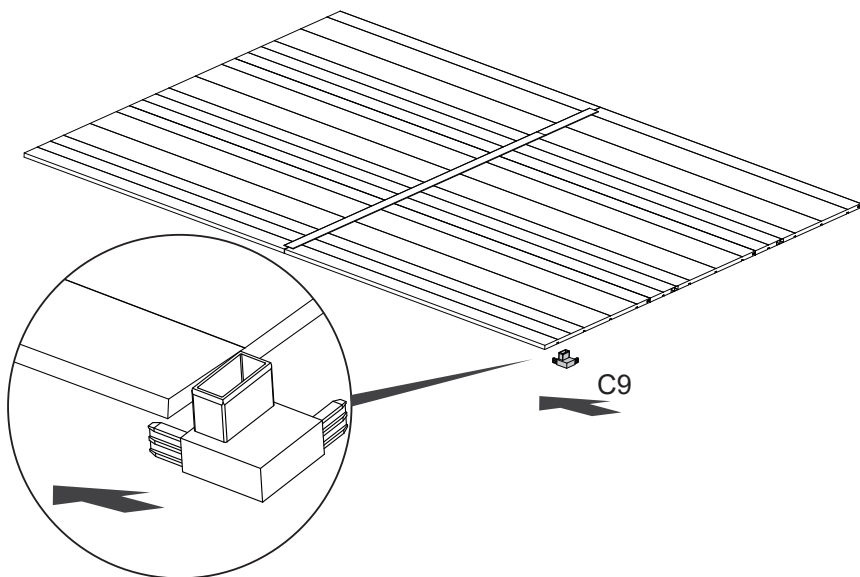



6



B8 (x1)



Cork
Hammer

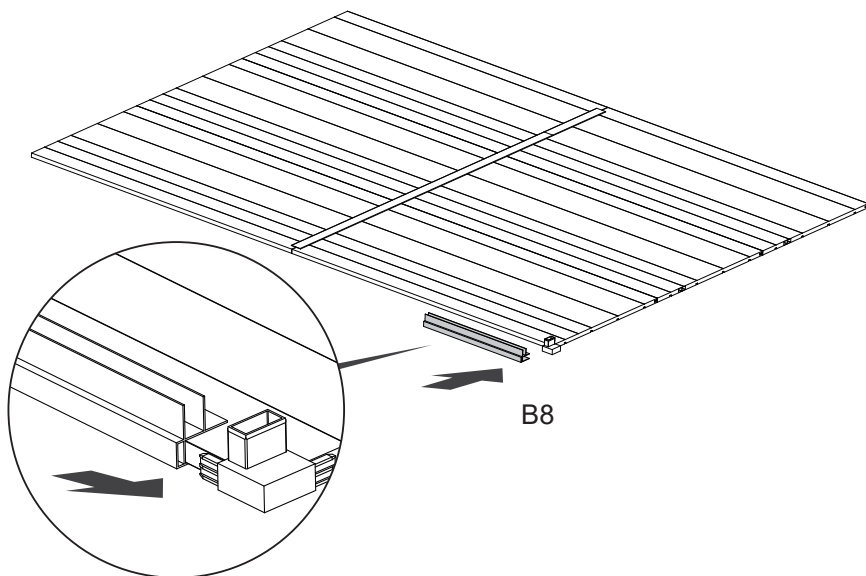



7



C6 (x1)



Cork
Hammer

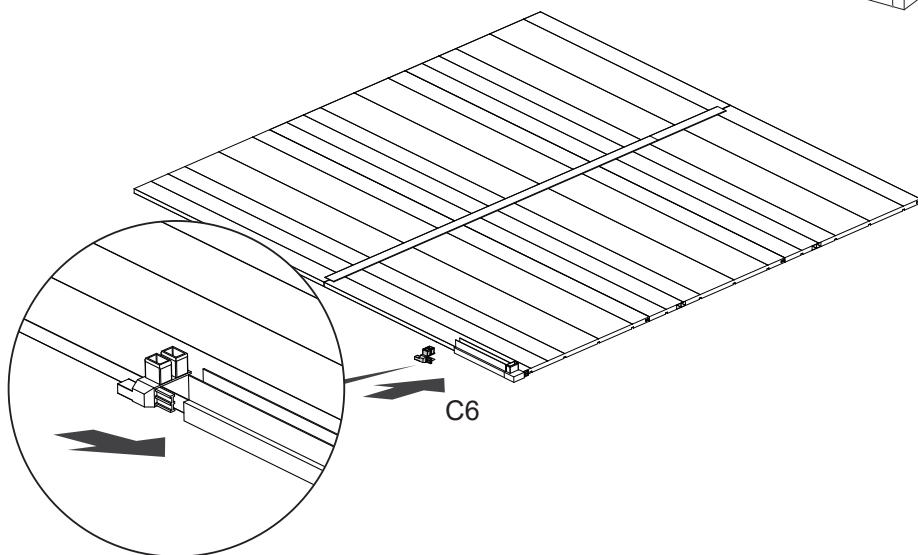



8



B5 (x1)



Cork
Hammer

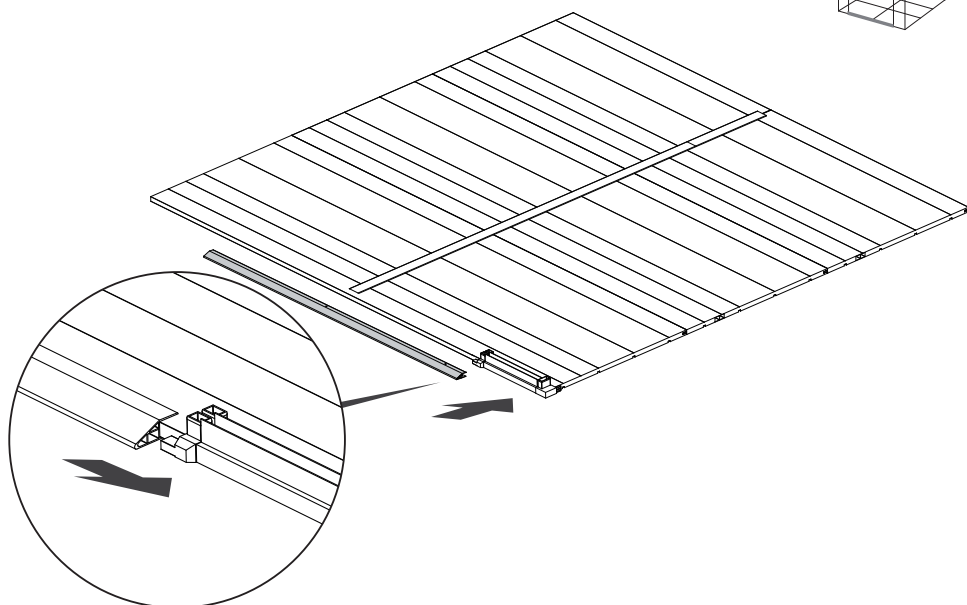


9




C7 (x1)



Cork
Hammer



C7

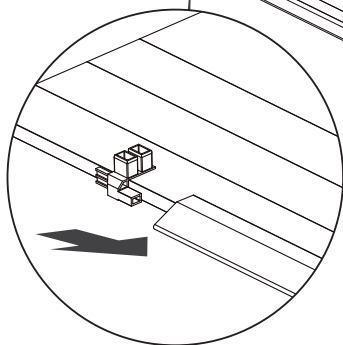



10



B8 (x1)



Cork
Hammer

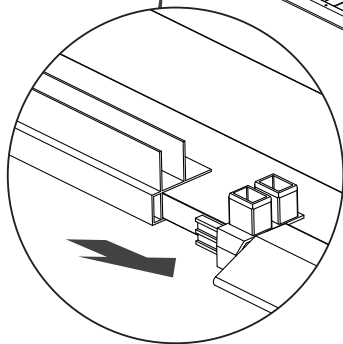



11



C9 (x1)



Cork Hammer

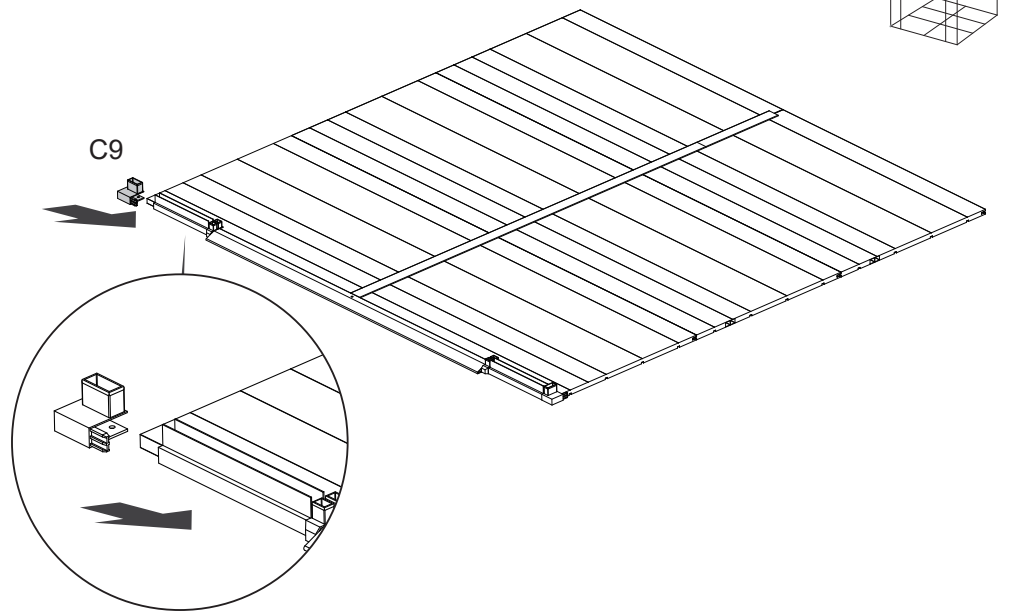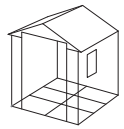



12



$\Phi 5 \times 16$
D65 (x12)



Electric Drill

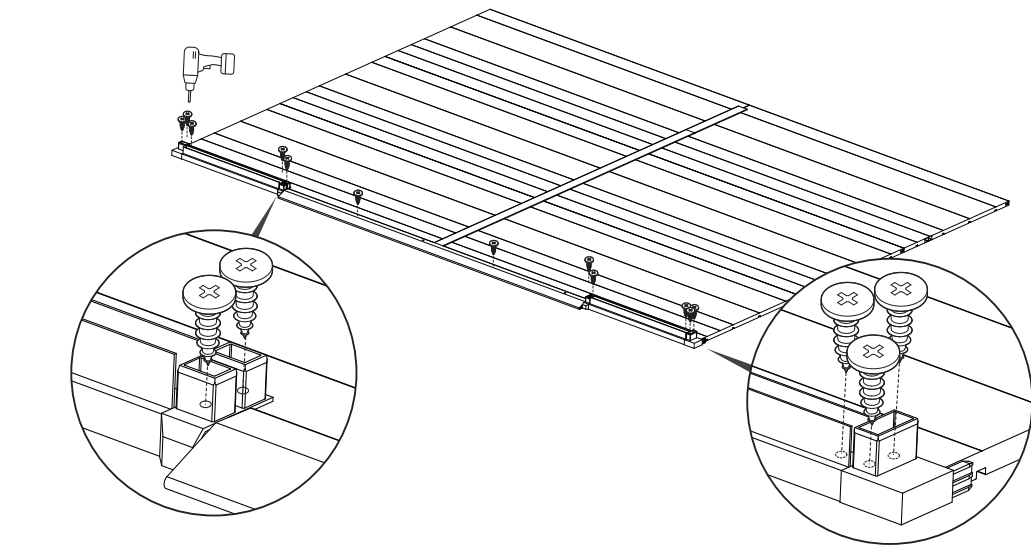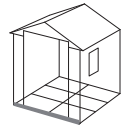



13



B10 (x2)



Cork
Hammer

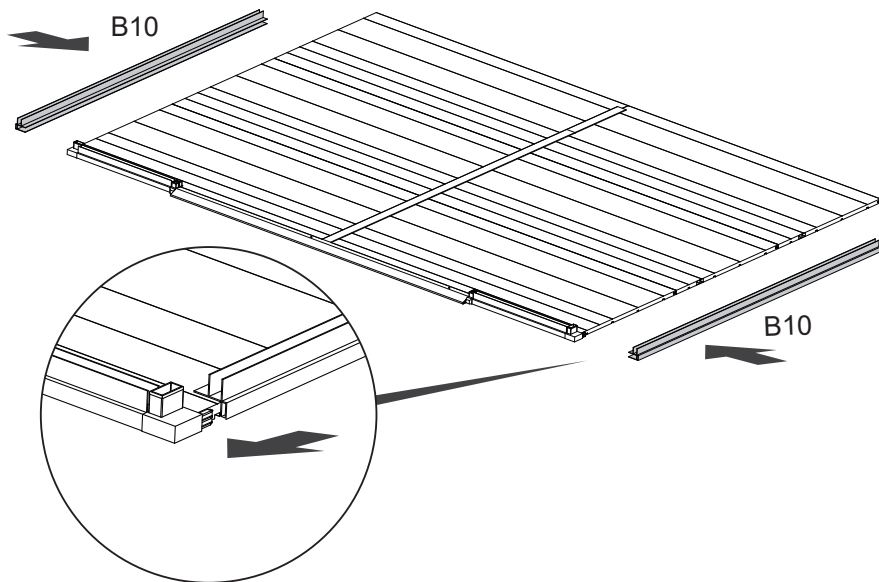



14



B11 (x2)



Cork
Hammer

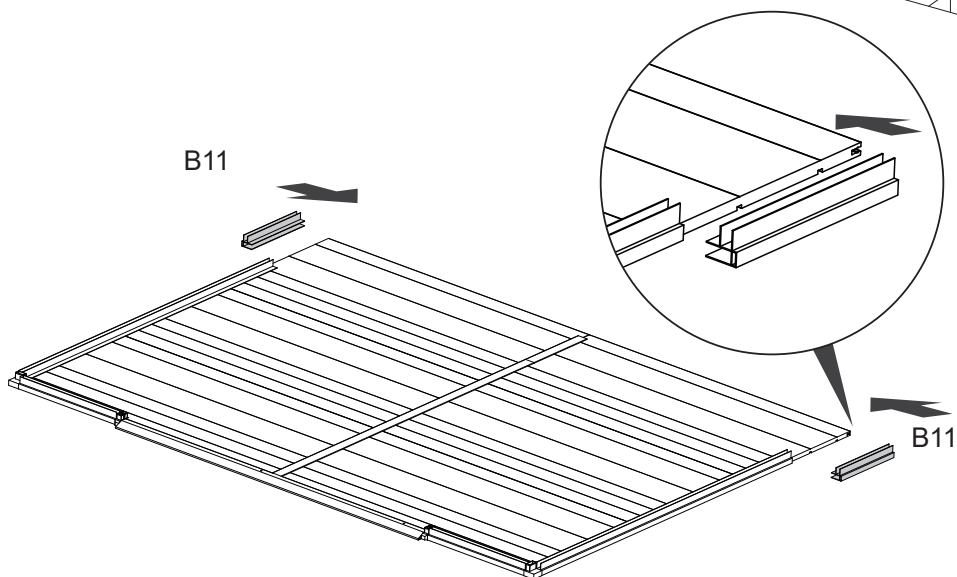



15



C9 (x2)



Cork Hammer

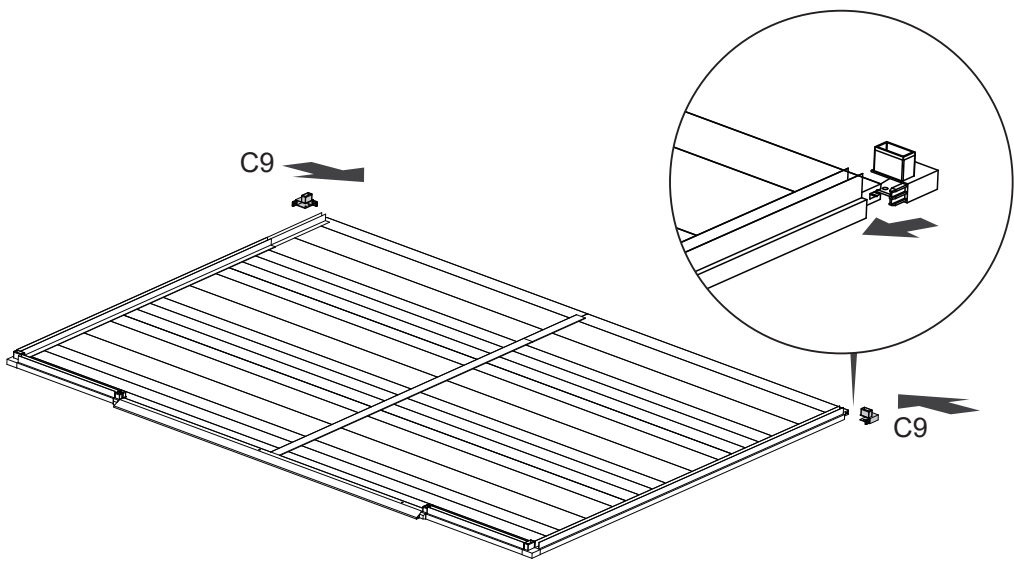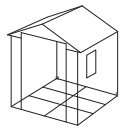



16



$\Phi 5 \times 16$
D65 (x20)



Electric Drill

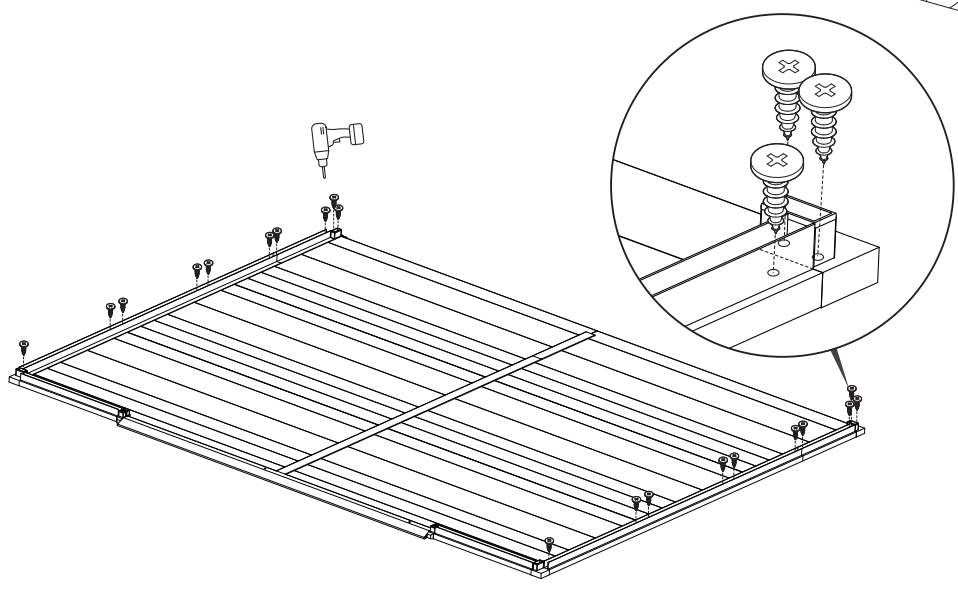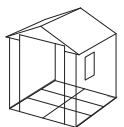



17



B8 (x2)



Cork
Hammer

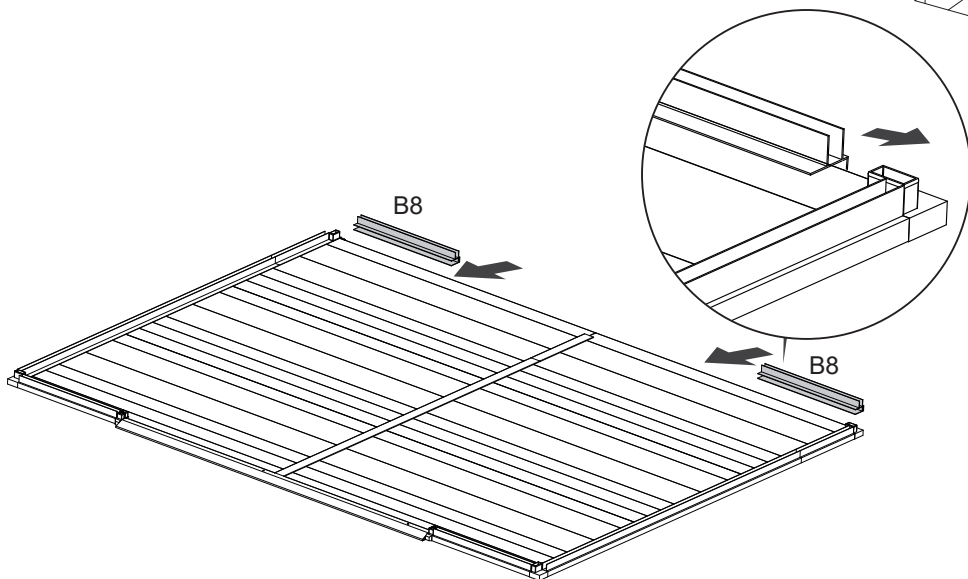



18



B12 (x1)





Cork
Hammer

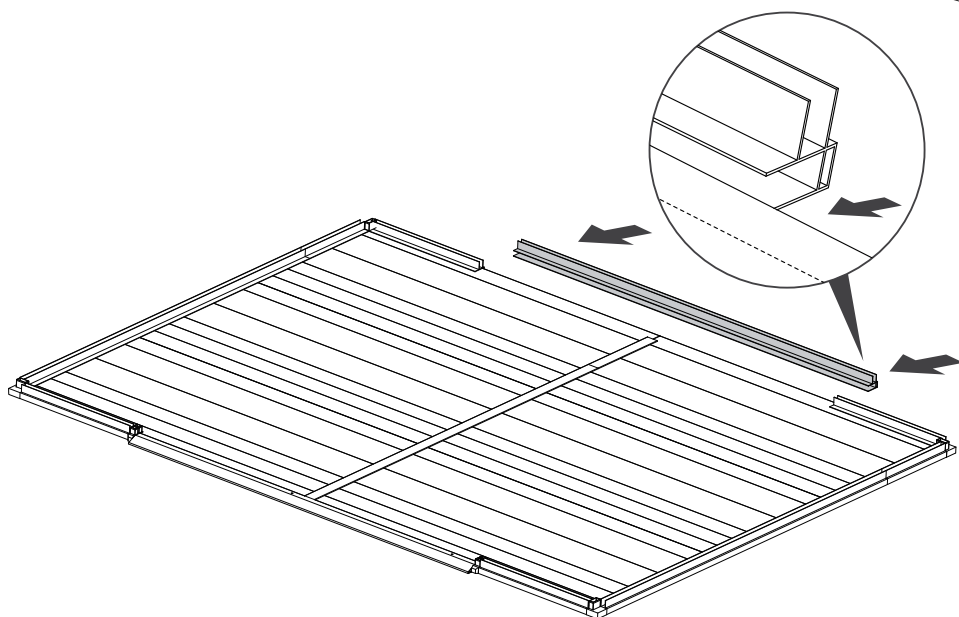

19

Φ5X16
D65 (x9)

Electric
Drill

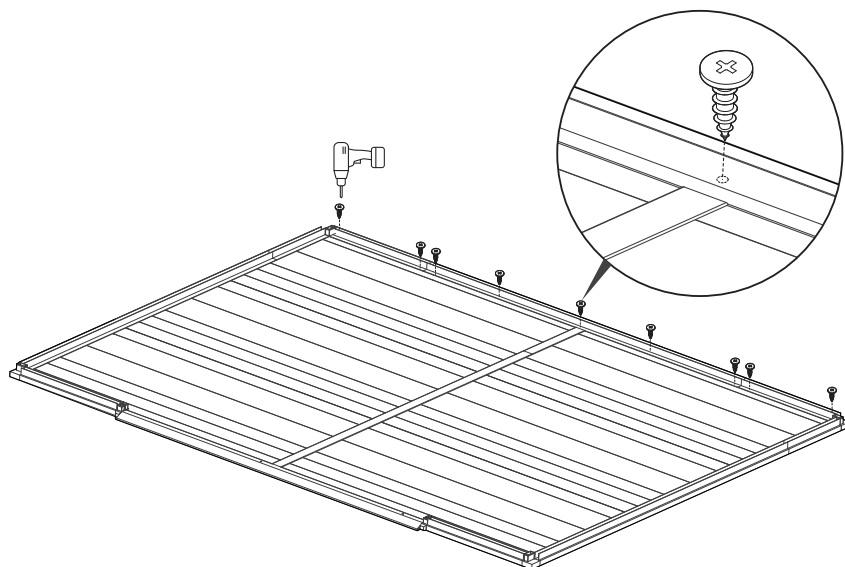

20





B13 (x1)



B14(x1)

Cork
Hammer

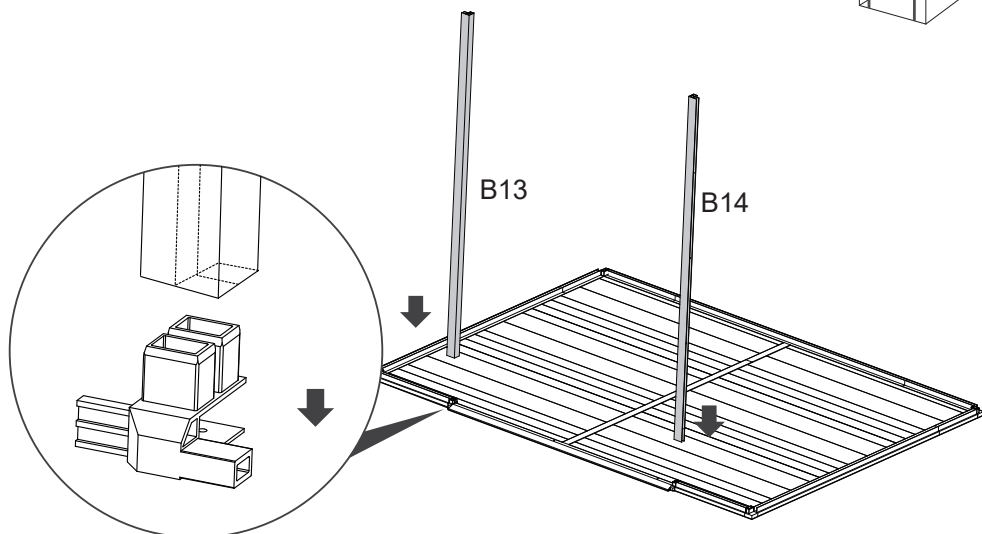

21



B20 (x1)





Cork
Hammer



Tape
Measure




Ladder

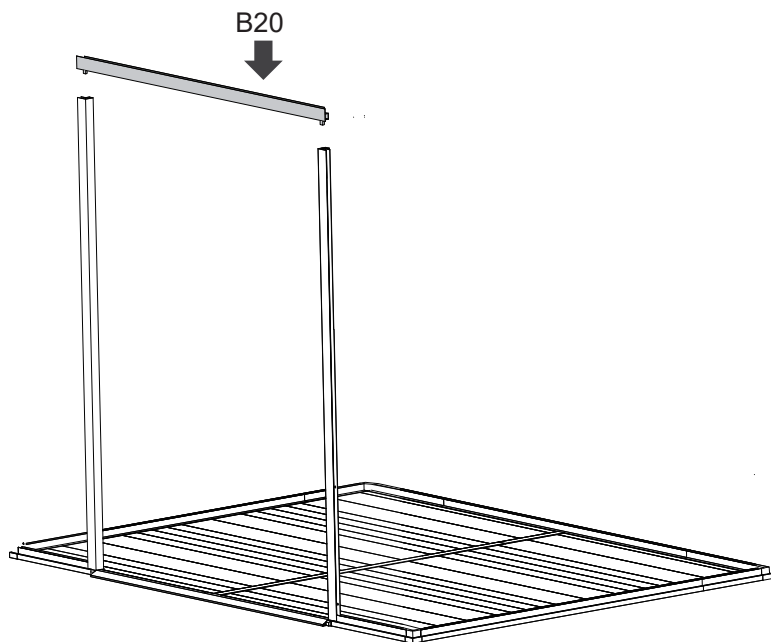

BE CAREFUL

The spacing between the bottom and top should be kept the same, with a spacing of 1378mm

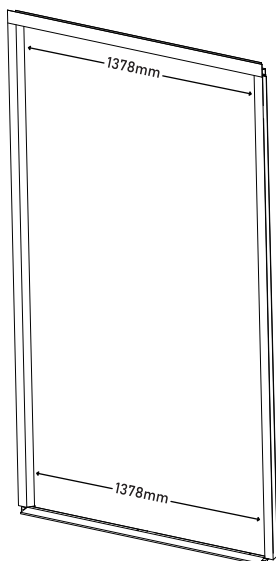



22



B15 (x2)



Cork
Hammer

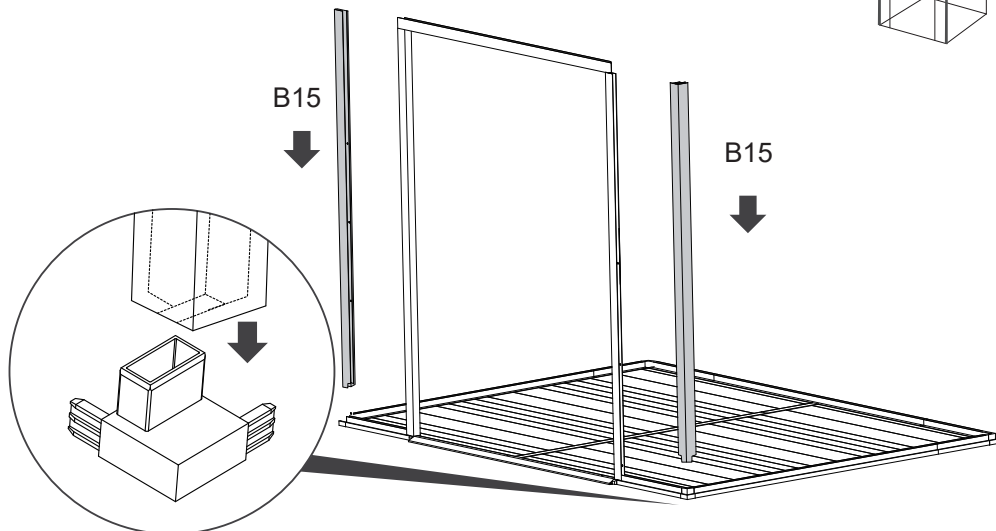

We recommend snap in
the slot on the outside.

23



A16(x1)





A17(x1)




Cork
Hammer



Tape
measure

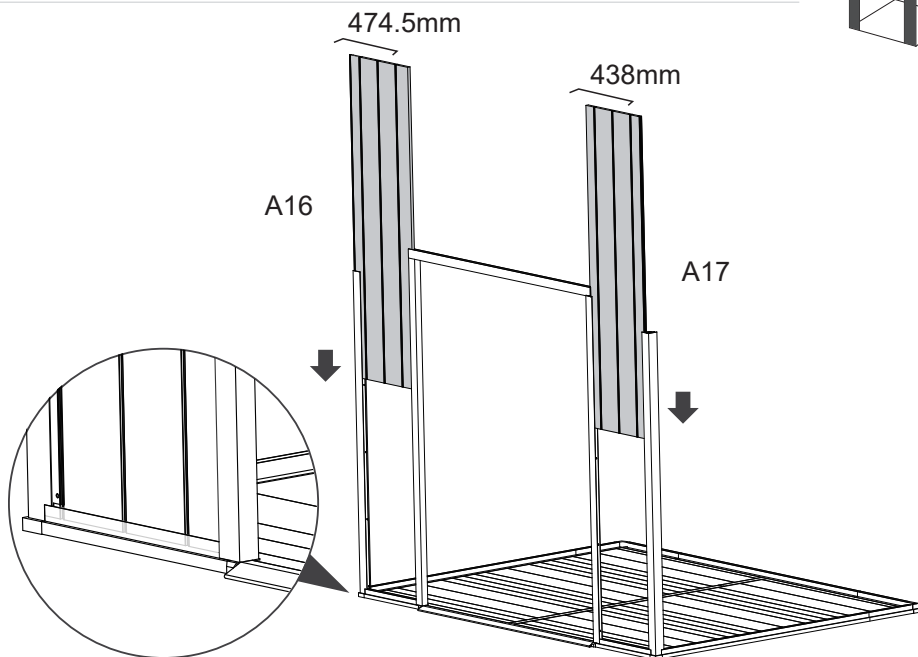

24





B18 (x1)



B19 (x1)



Cork
Hammer

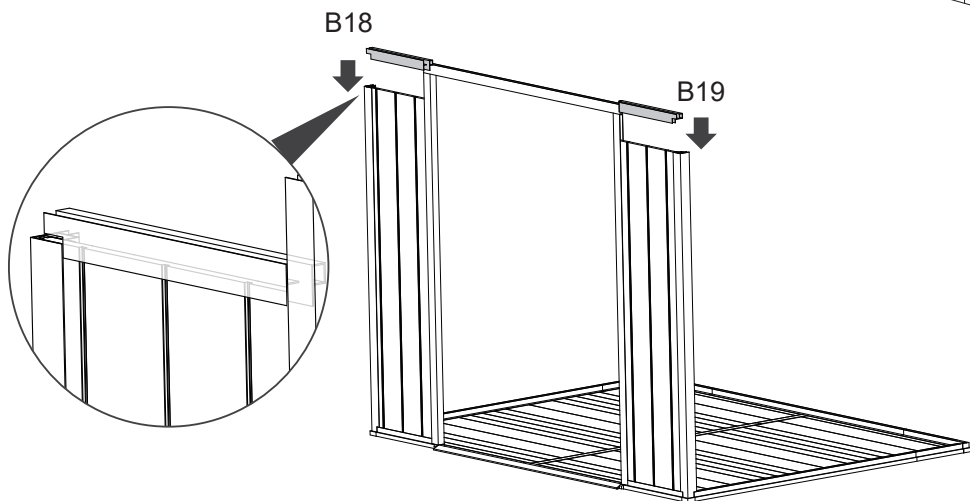

25





D21 (x2)



$\Phi 4 \times 16$
D68(x12)



Electric
Drill

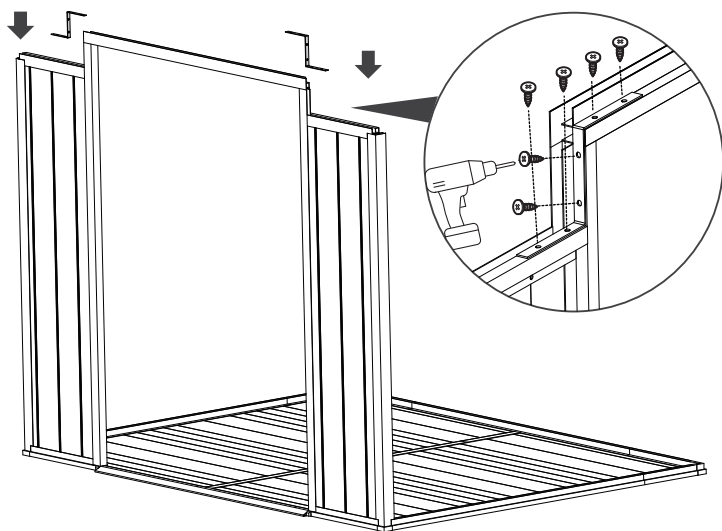

26



A22 (x1)





A23 (x2)



B15 (x1)



Cork Hammer

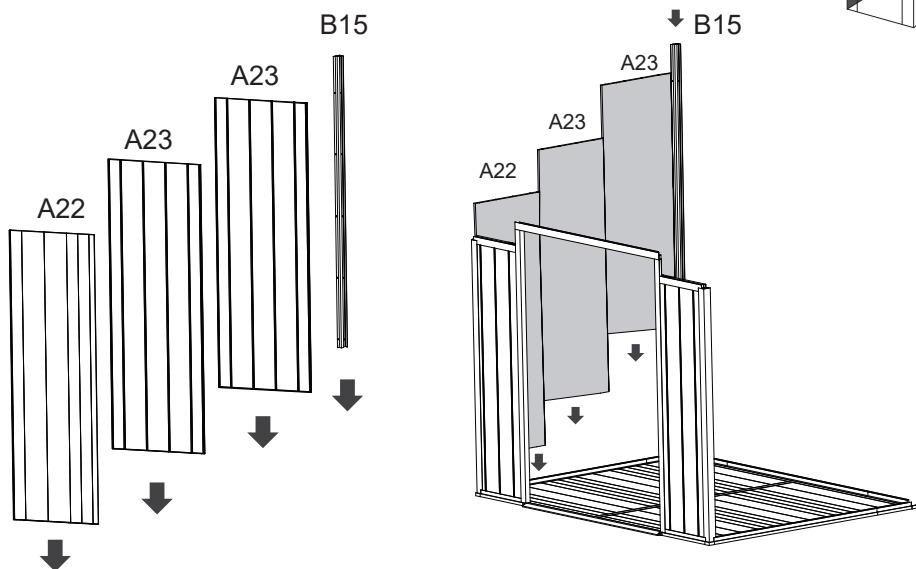



27



Φ5X16
D65 (x12)



Electric Drill

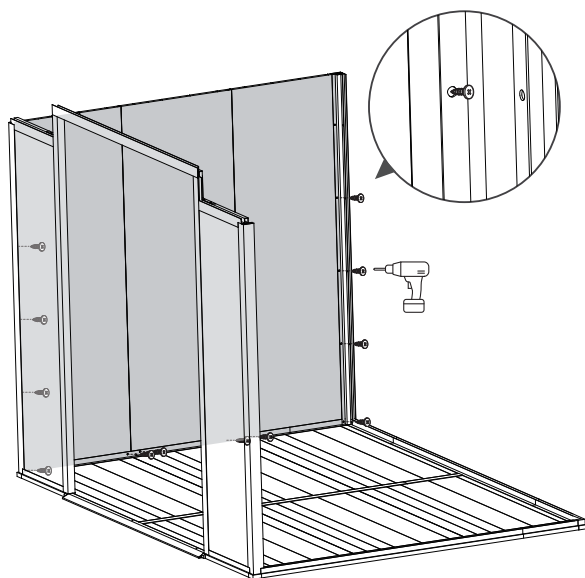



28

A23(x4)

B15 (x1)

Cork Hammer


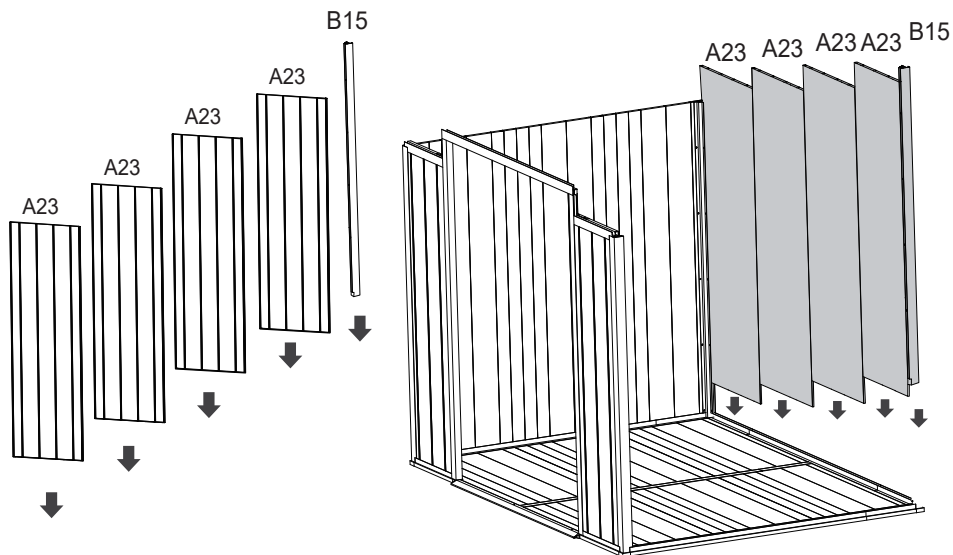



29



Φ5X16
D65 (x14)

Electric Drill

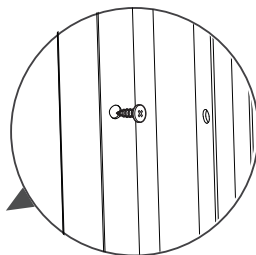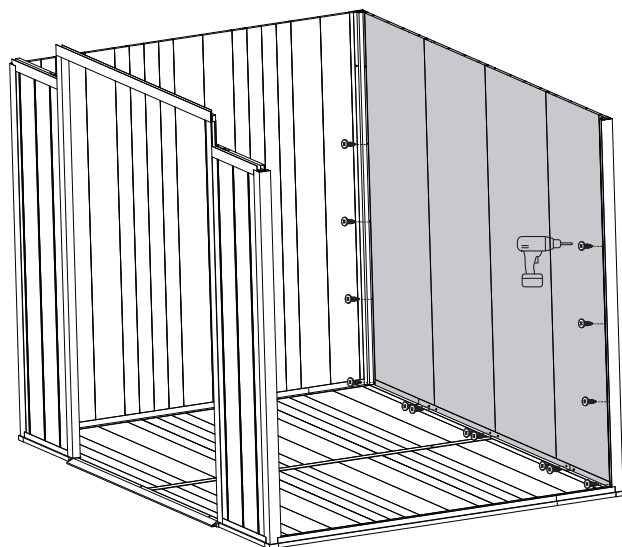

30



A24(x1)




A23(x1)




A25(x1)




Cork Hammer





A24

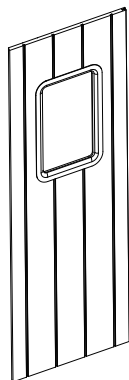

A23

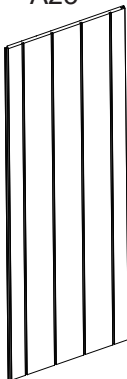

A25

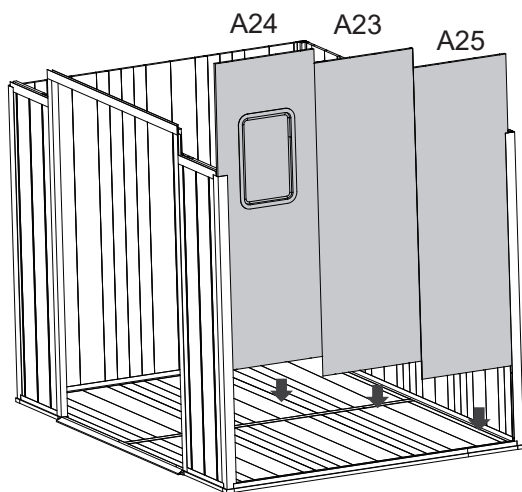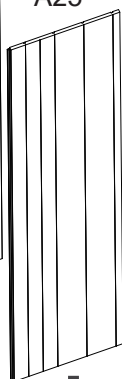




31



$\Phi 5 \times 16$
D65 (x12)



Electric Drill

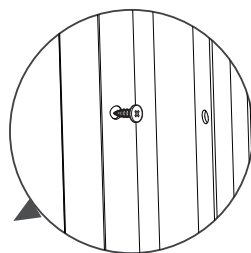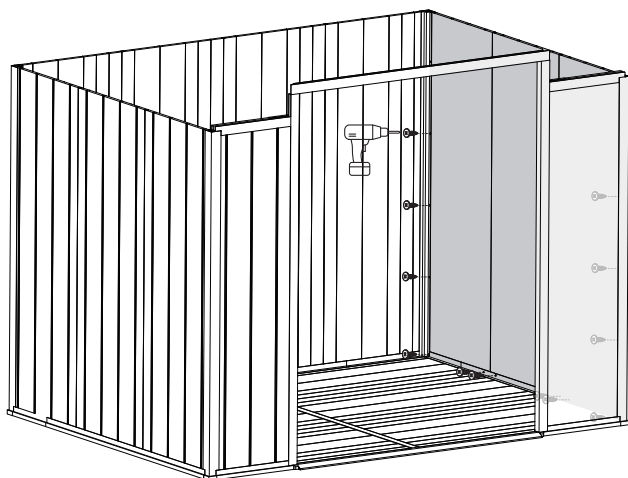

32



B26 (x1)






B27 (x1)



B28 (x1)



Ladder

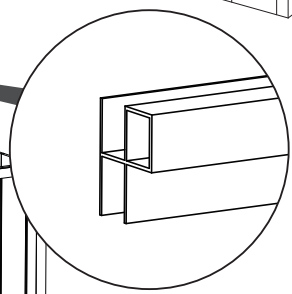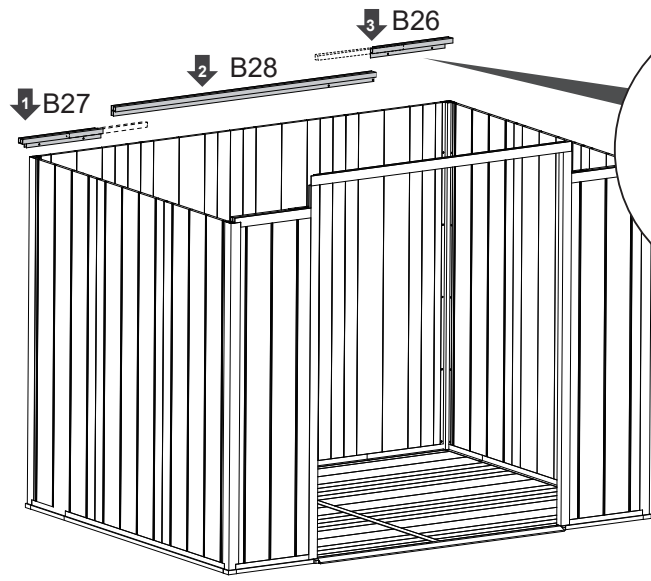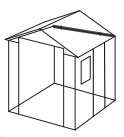

Installation in order from left to right.

33






Φ4X16
D68(x6)



Electric
Drill



Ladder

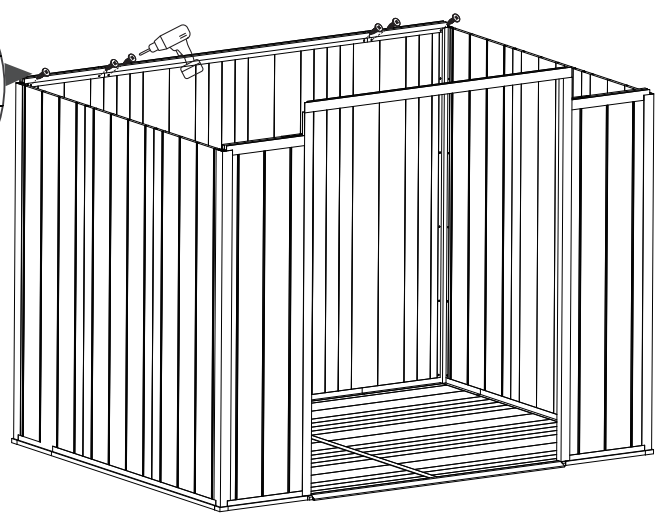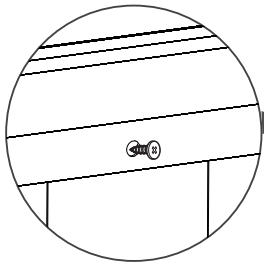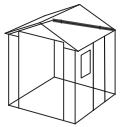

34



B29(x1)






B31(x1)



Cork Hammer



Ladder

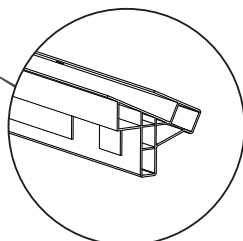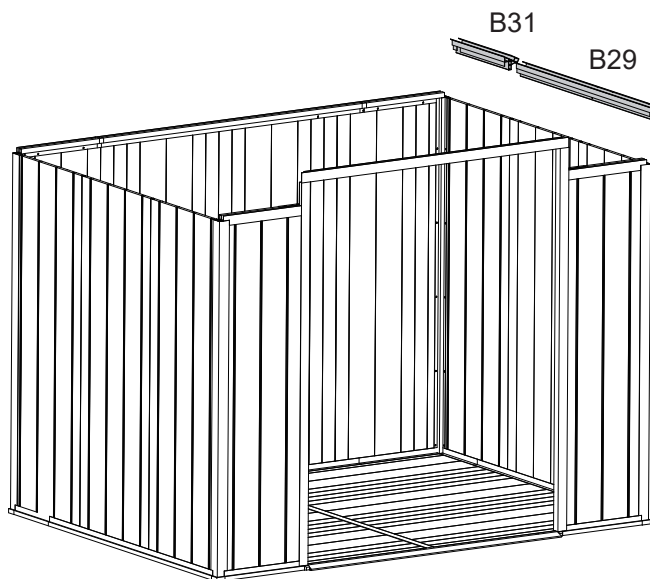

Right

35



B30 (x1)





B32(x1)




Cork Hammer



Ladder

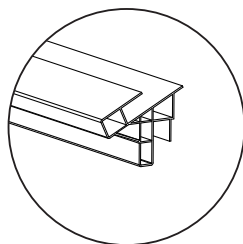



Left

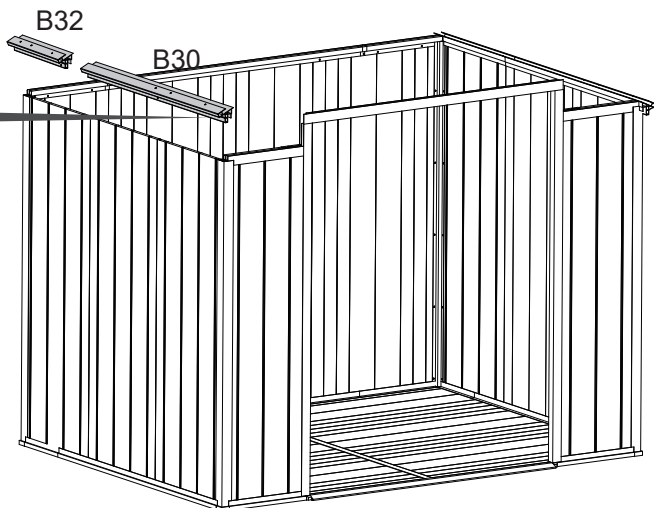

36



D33 (x4)

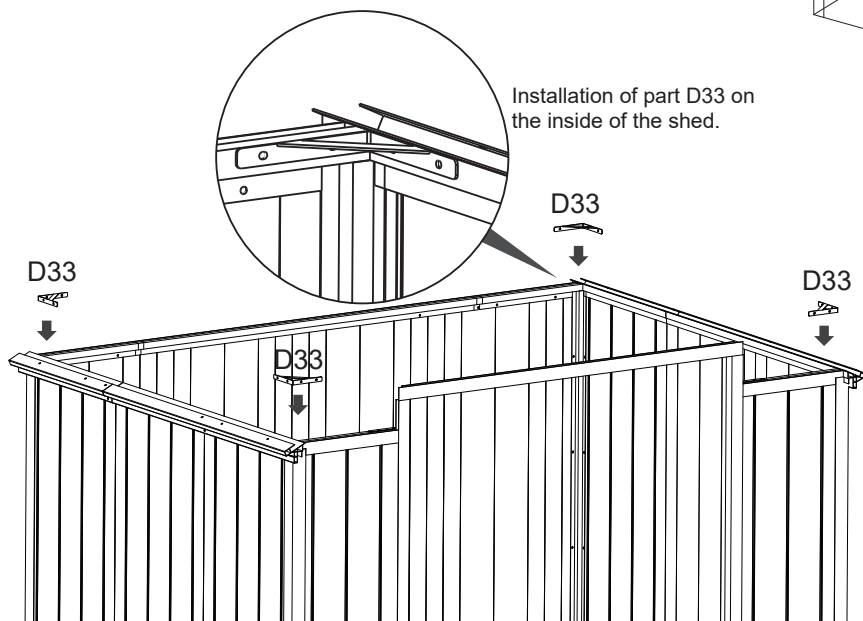

37





Φ4X16
D68(x12)



Electric
Drill



Ladder

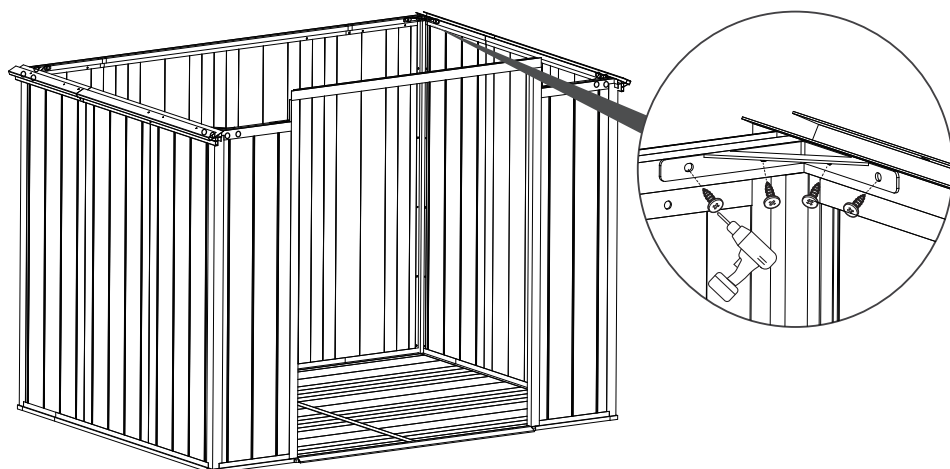

38



D34 (x4)





D35(x4)



D69(X1)



Ladder

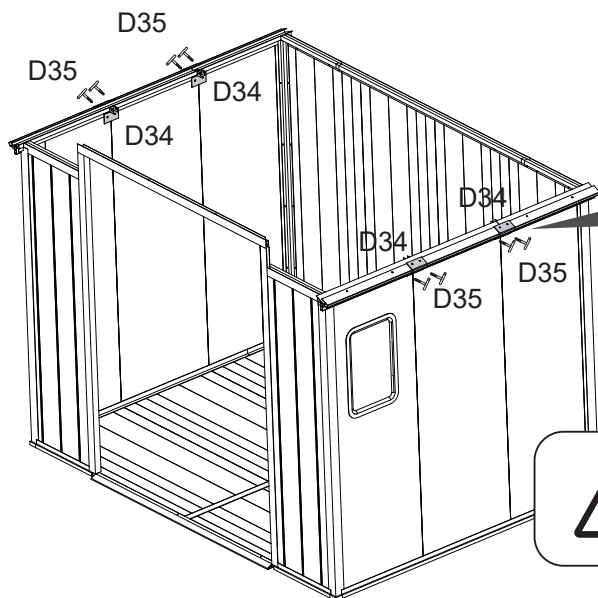

Manually drill screw holes



BE CAREFUL

The hole should be drilled between two plates

39



D64 (x8)





Ladder



Small Wrench



Allen key

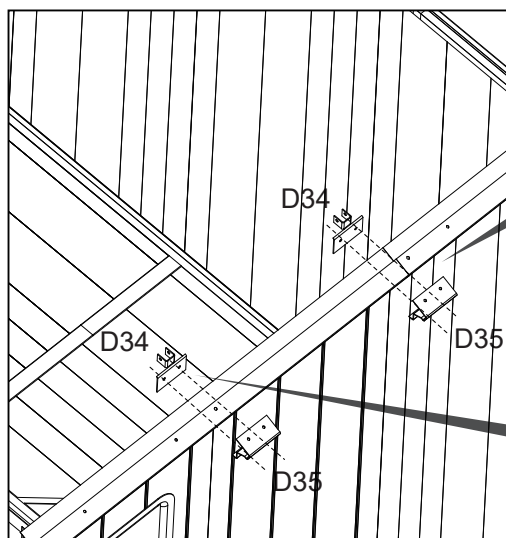

Parts D34 and D35 need to be aligned, they use the same screw.

40





D36 (x2)



D39 (x2)



D64 (x8)

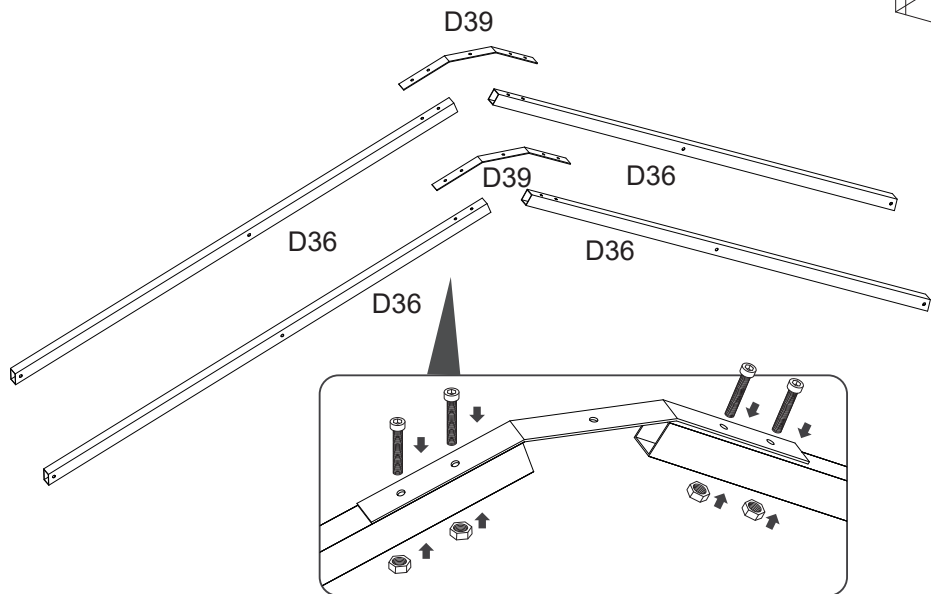



41



D38 (x2)



D64 (x4)

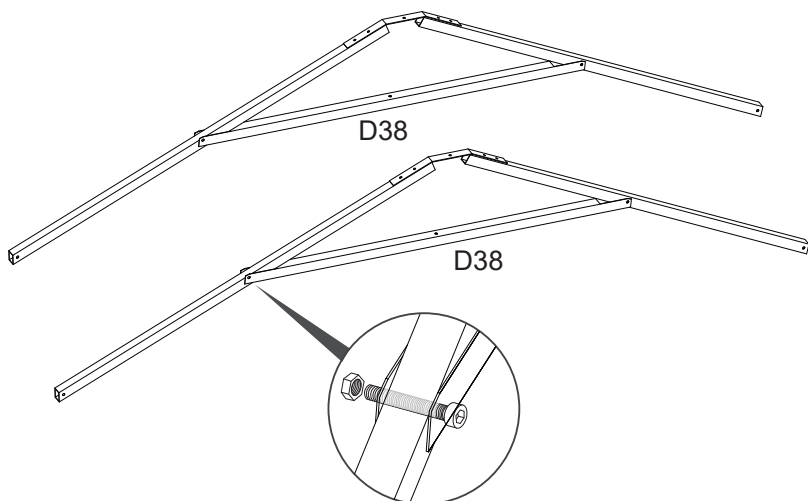

42



D64(x4)






Small
Wrench




Allen
key




Ladder

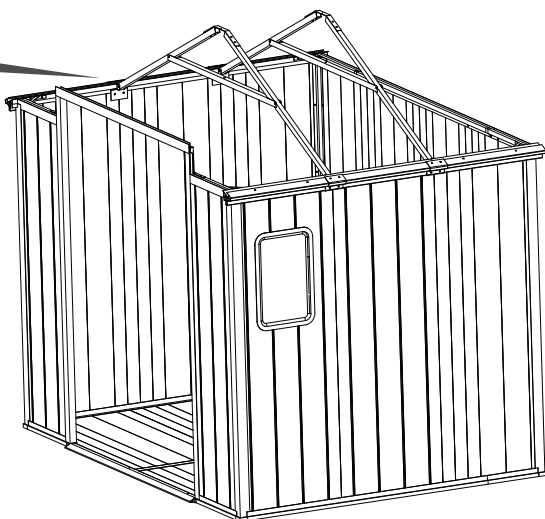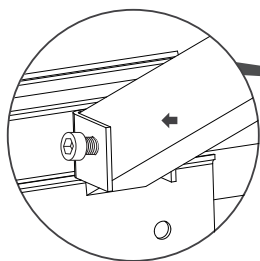

43





A44 (x1)



A45 (x1)



Ladder

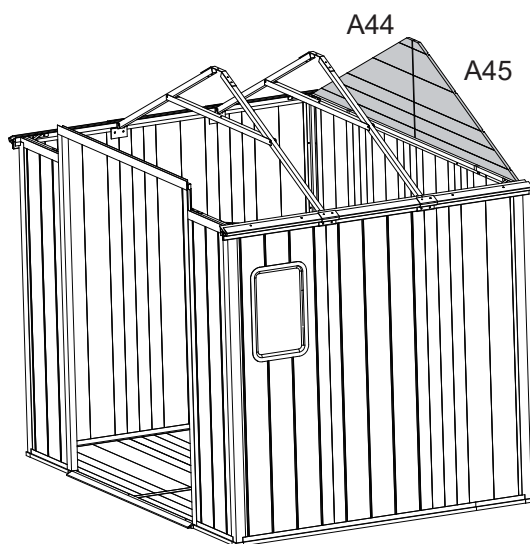

44





A46 (x1)



Cork
Hammer



Ladder

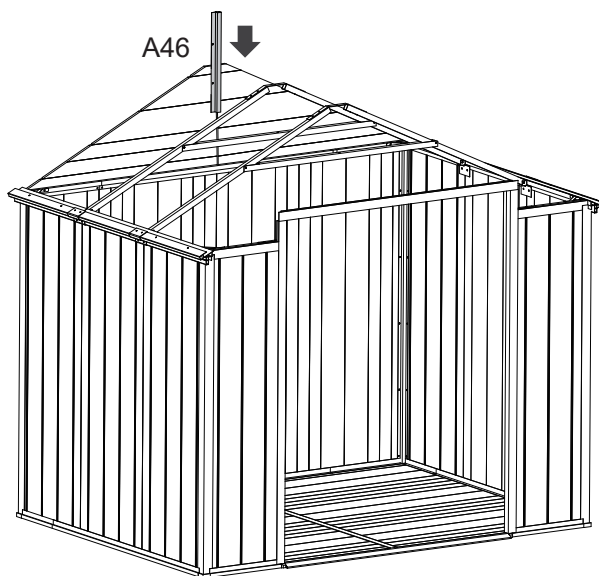

45






Φ5X16
D65 (x2)



Electric
Drill



Ladder

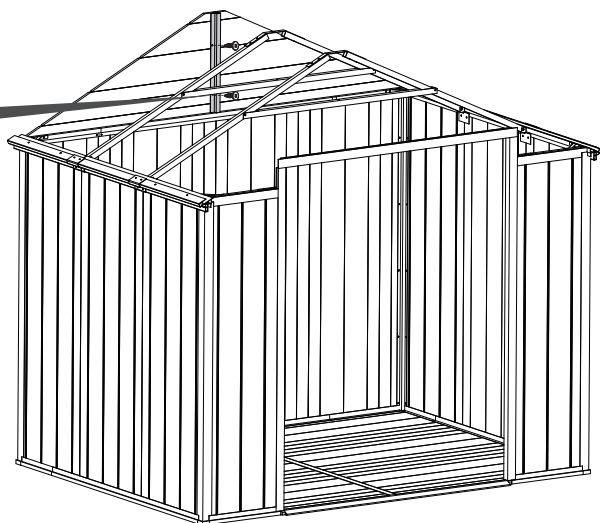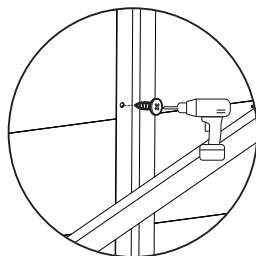

46



A43(x1)





C66(x1)




Φ5X16
D65 (x6)




Electric
Drill

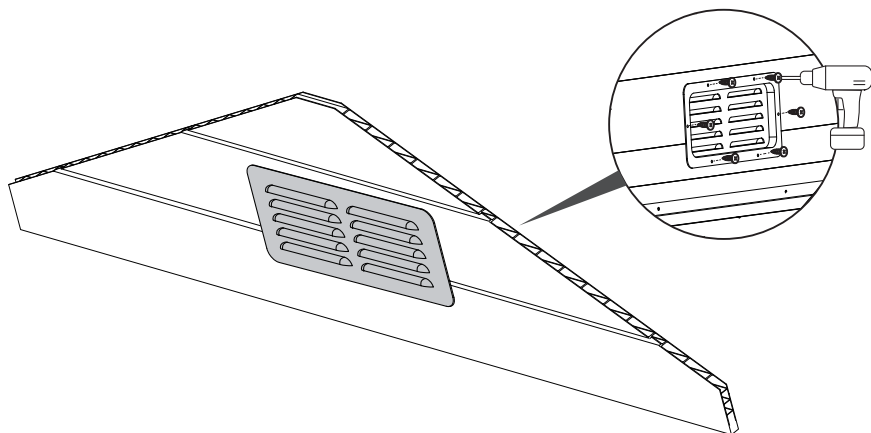

47



A41(x1)





A42(x1)



A43(x1)



Ladder

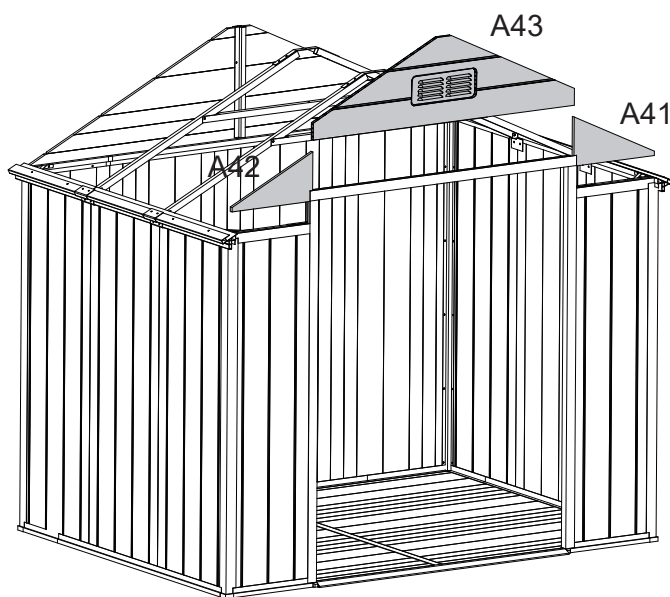

48



A47(x1)



A48(x2)




Cork Hammer





Ladder





Double





A47

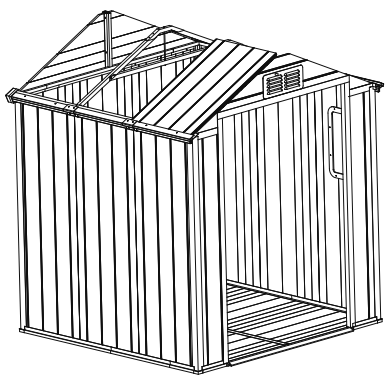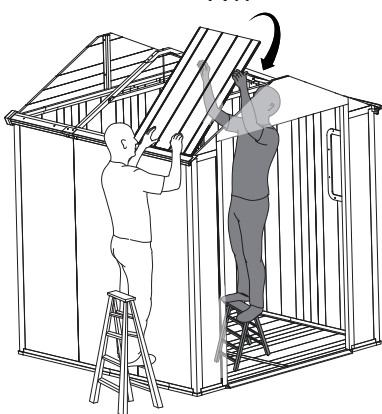

A48

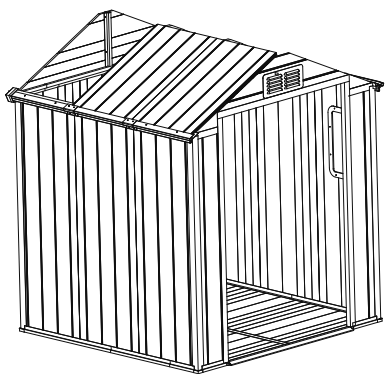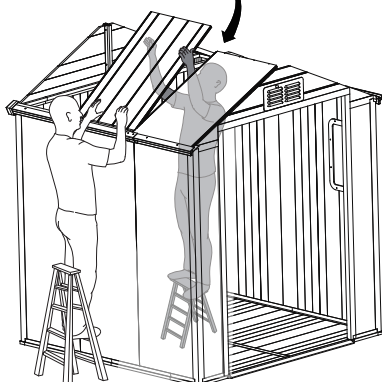

A48

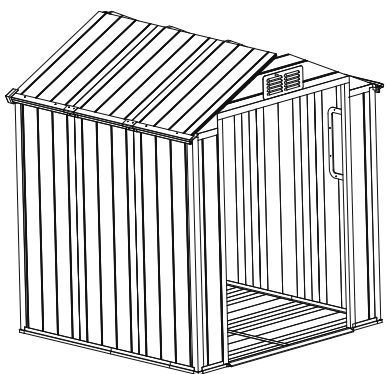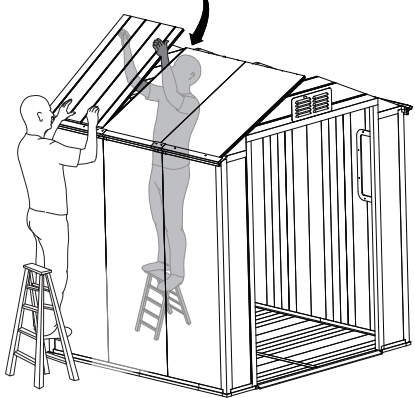

49



A47(x1)



A48(x2)




Cork
Hammer




Ladder





Double





A47

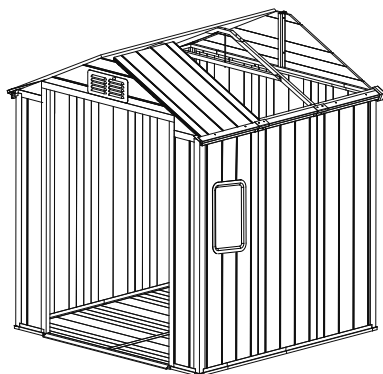

A48

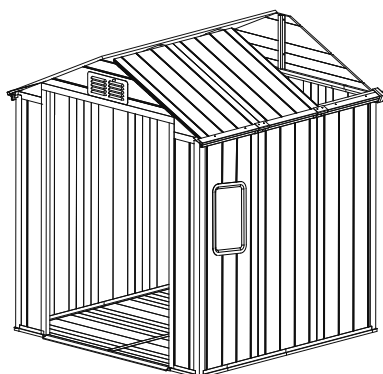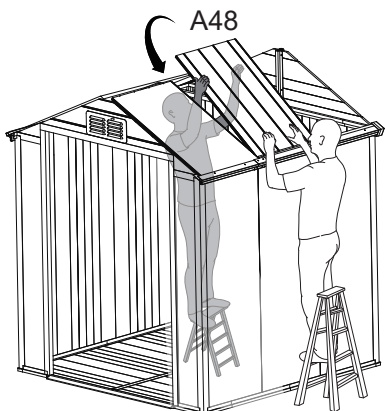

A48

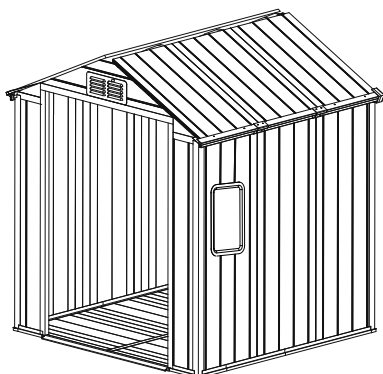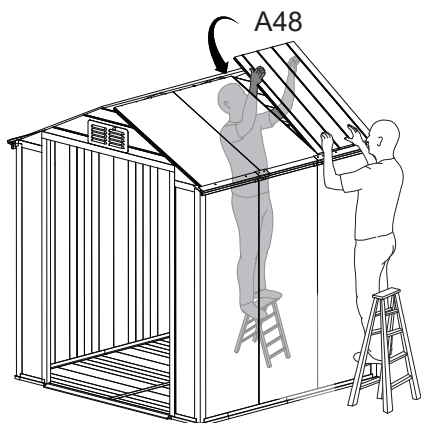

50





Φ5X16
D65(x8)



Electric
Drill



Ladder

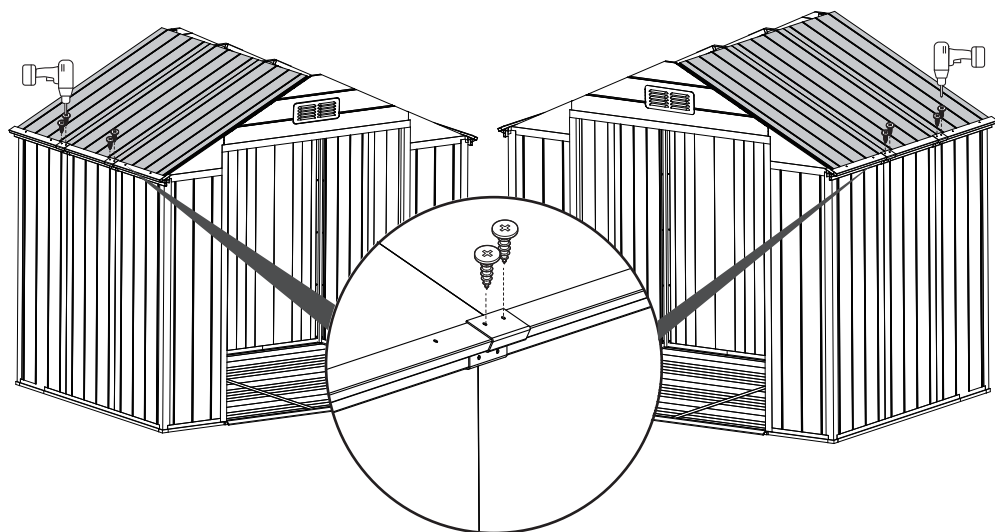

51

B49(x2)



B50 (x2)



Cork
Hammer



Ladder

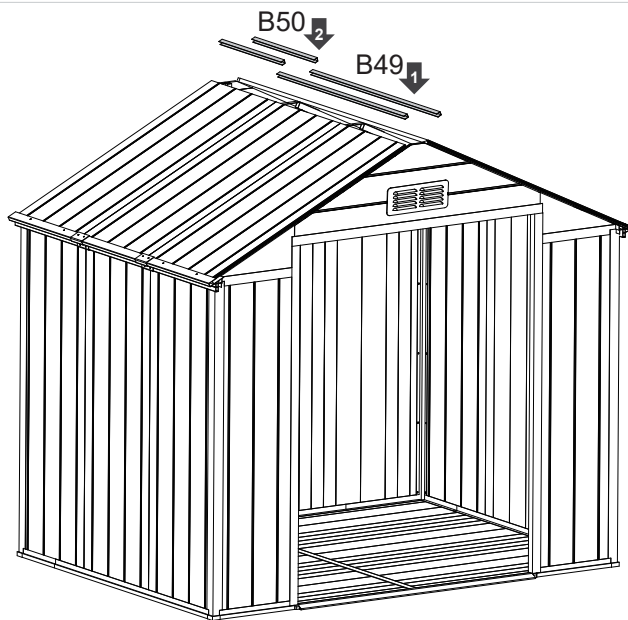

52







Φ5X16
D65(x10)



Electric
Drill



Ladder

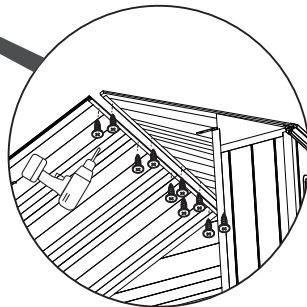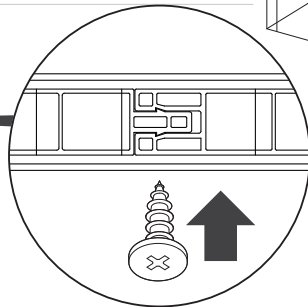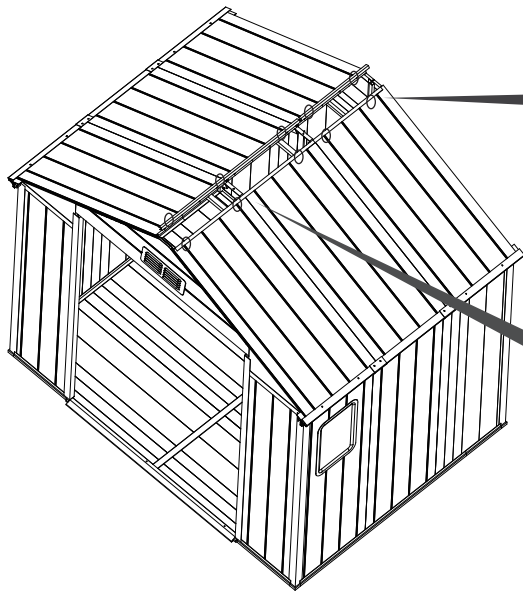

53



B51(x2)





B52(x2)



Cork
Hammer



Ladder

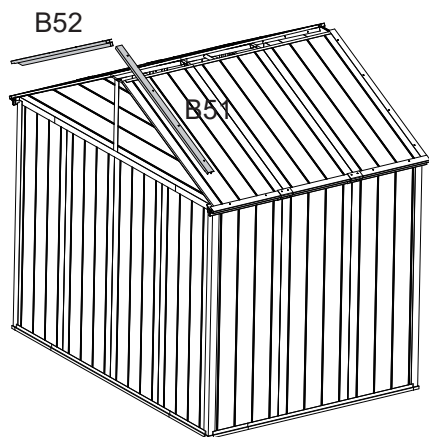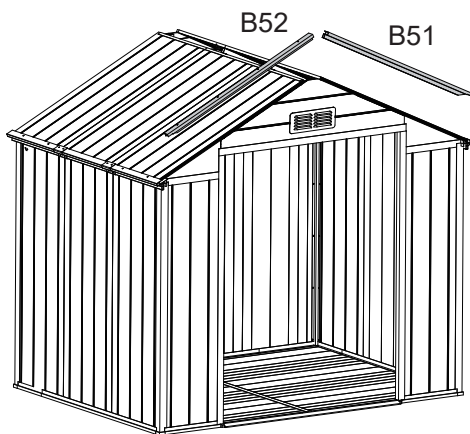

54





Φ5X16
D65 (x16)



Electric
Drill



Ladder

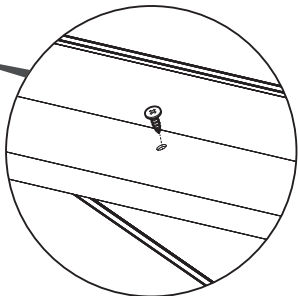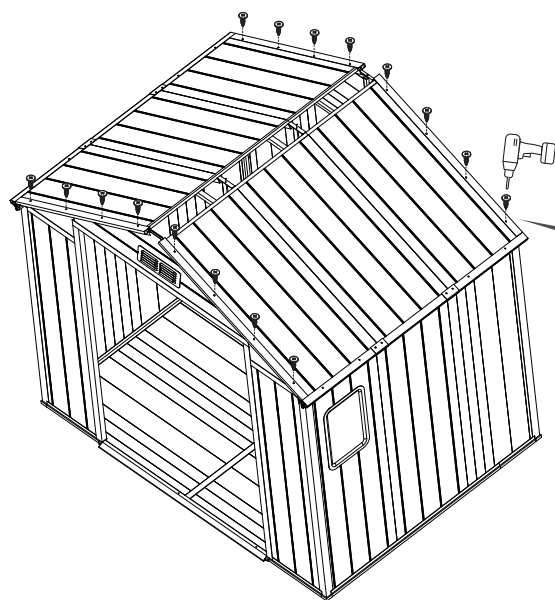

55



C53 (x2)






C54 (x2)



Cork
Hammer



Ladder

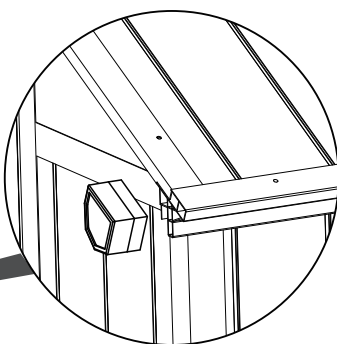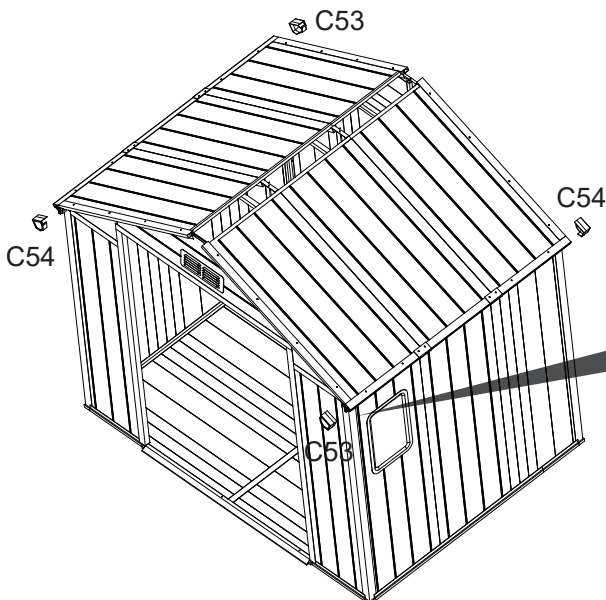

56





Φ5X16
D65 (x8)



Electric
Drill



Ladder

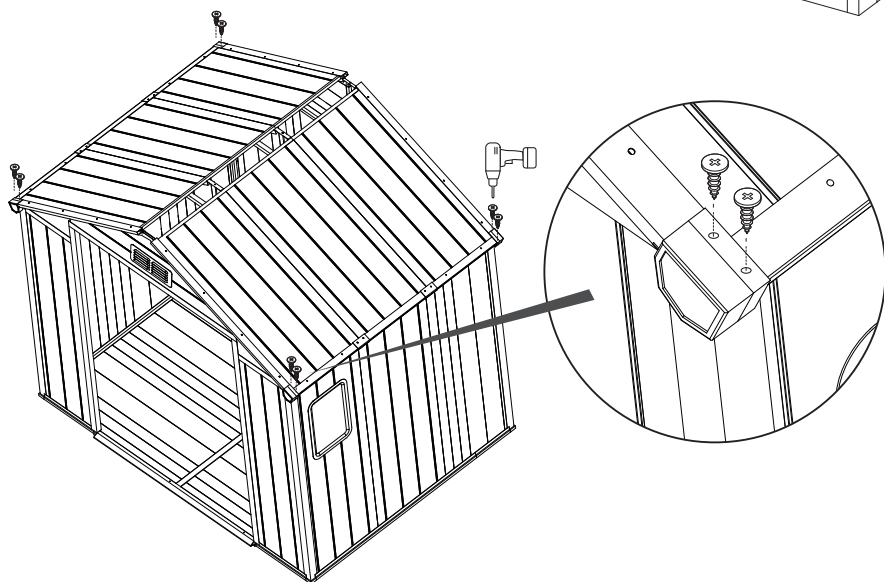

57





D55 (x1)



D40 (x2)



Ladder

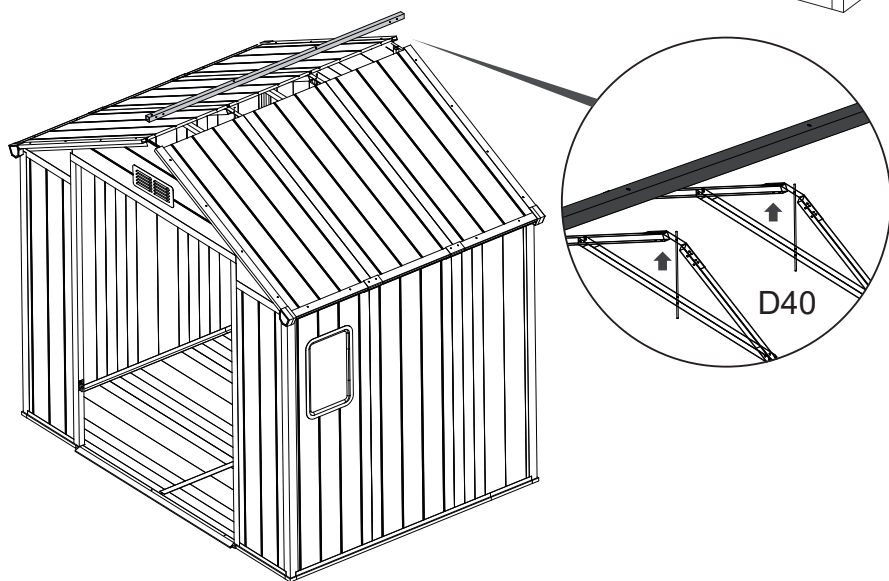



58



C56 (x1)



Ladder

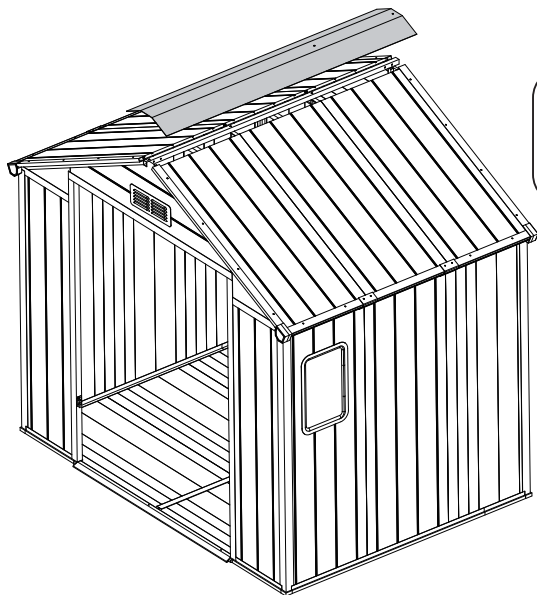

BE CAREFUL

The film needs to be torn off before installation



59



C57(x2)



Ladder

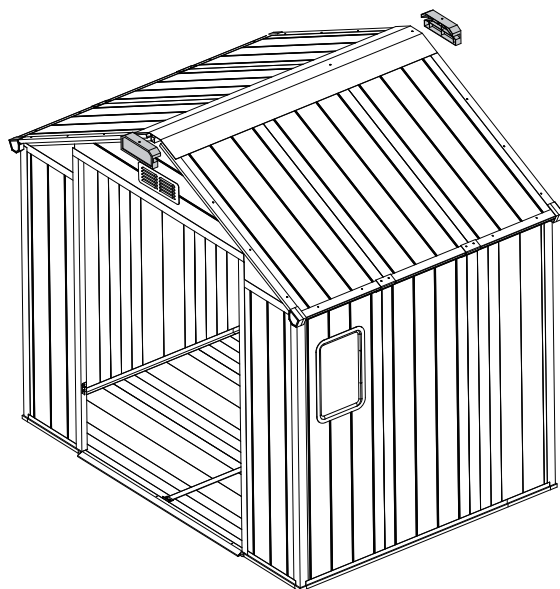

60



Φ4X16
D68(x2)



Electric
Drill



Ladder

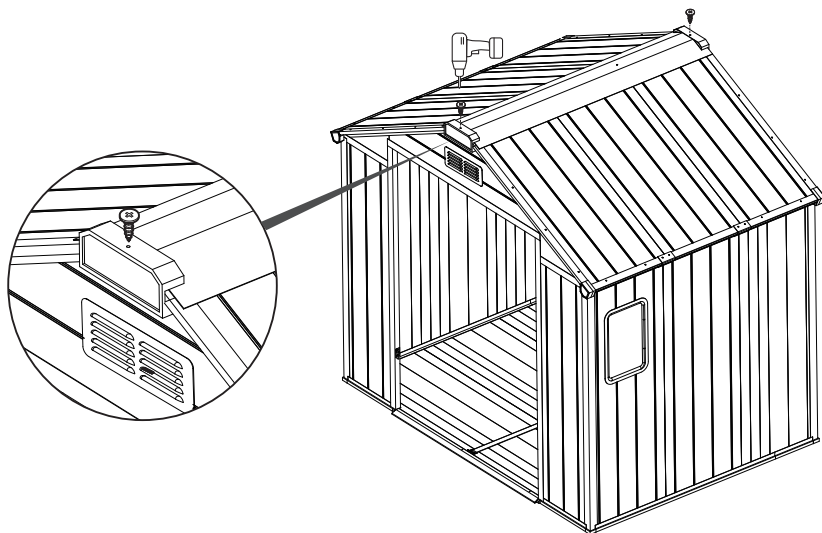

61



Φ4X16
D68(x33)



Electric
Drill



Ladder

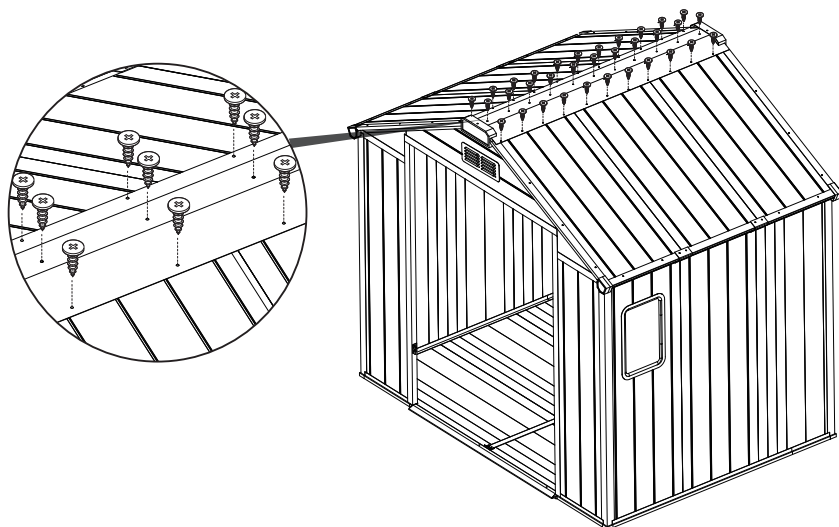

62






D63(x1)



Φ5X16
D65 (x2)



Electric
Drill

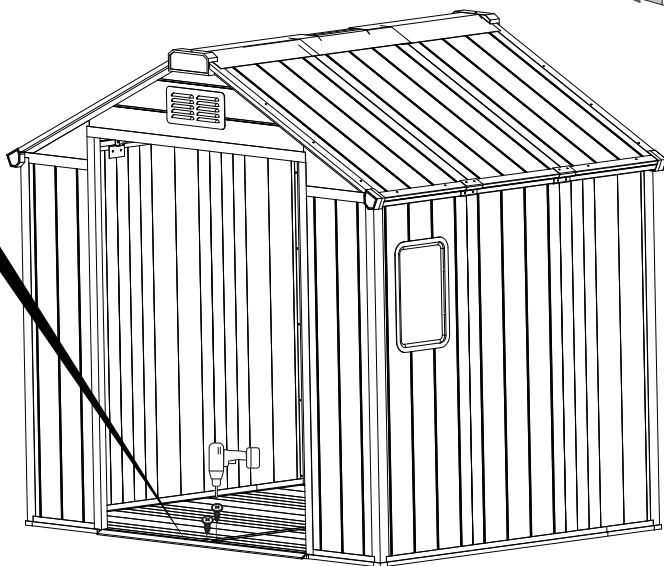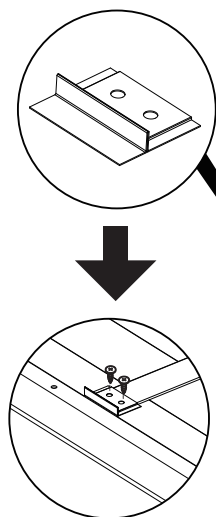

63



D62(x1)






Φ5X16
D65 (x2)



Electric
Drill



Ladder

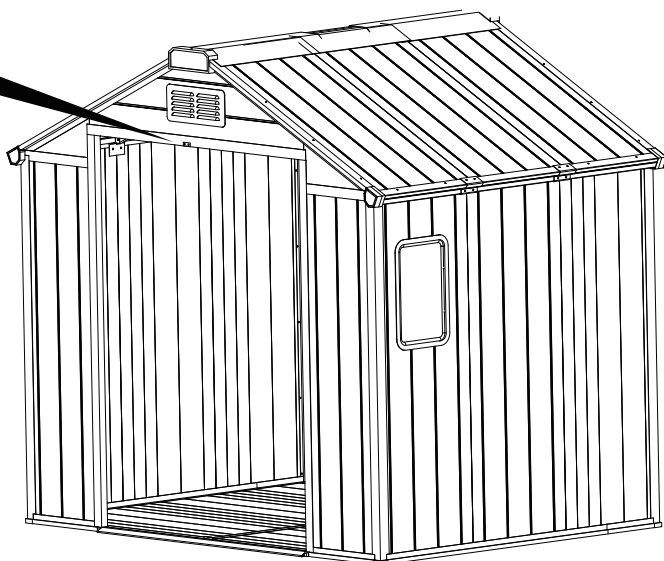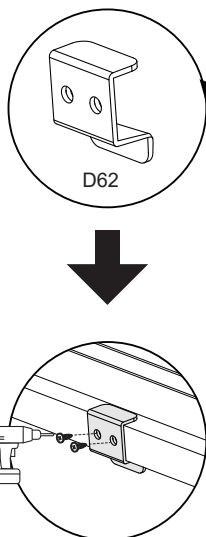



64

A58(x1)

A59(x1)

Φ4X16
D68(x18)

Electric
Drill

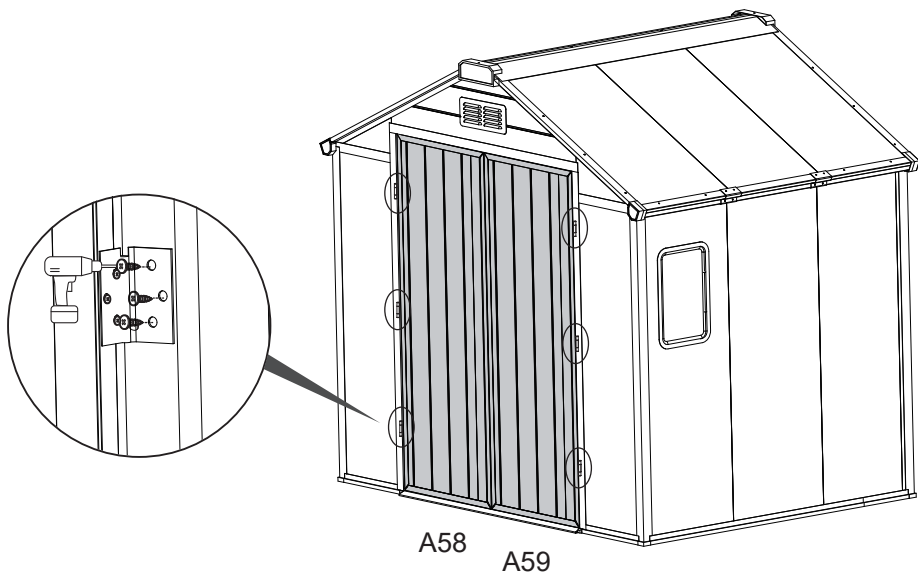

65

X2



X4

D60

D69(X1)

Small
Wrench

Allen
key

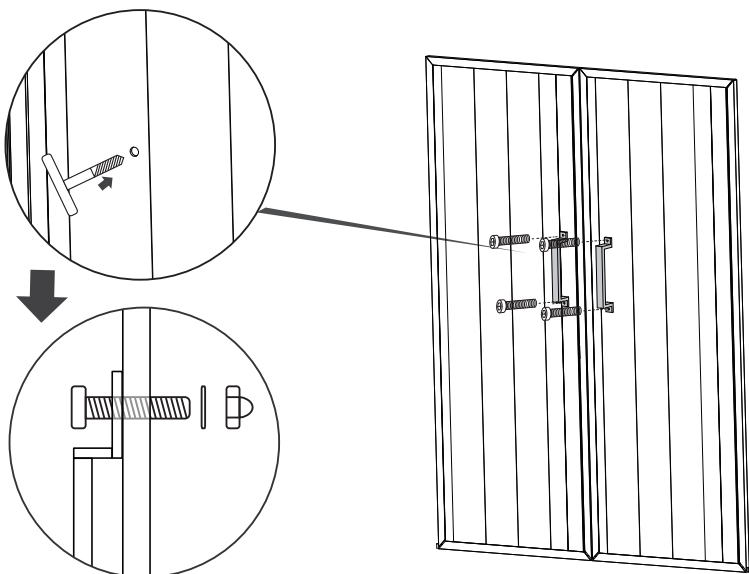

66



D61(x2)





Φ5X16

D65(x4)



Electric
Drill

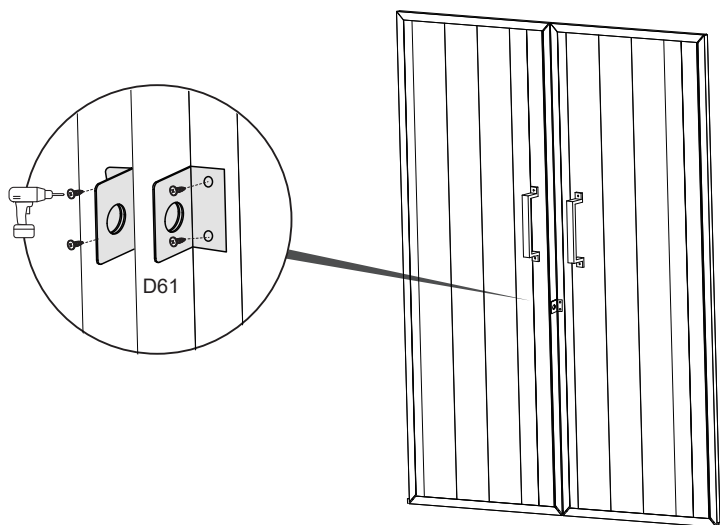


67



D70(x4)




$\Phi 4 \times 30$
D67(x12)




D90(x4)




$\Phi 10 \times 100$
D91(x4)

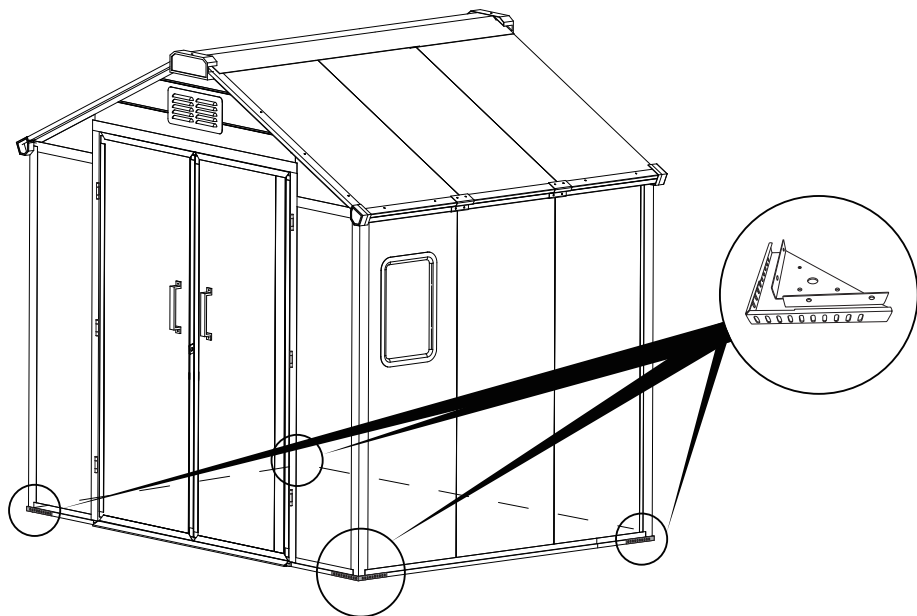


External Perspective


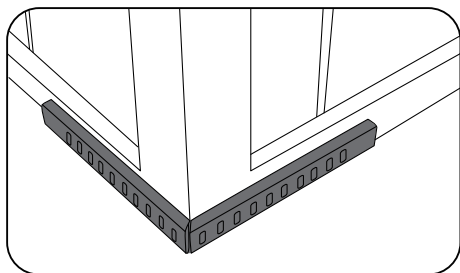


Internal Perspective

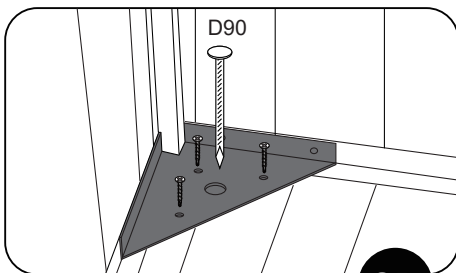


OR

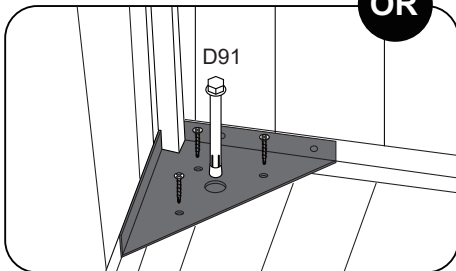

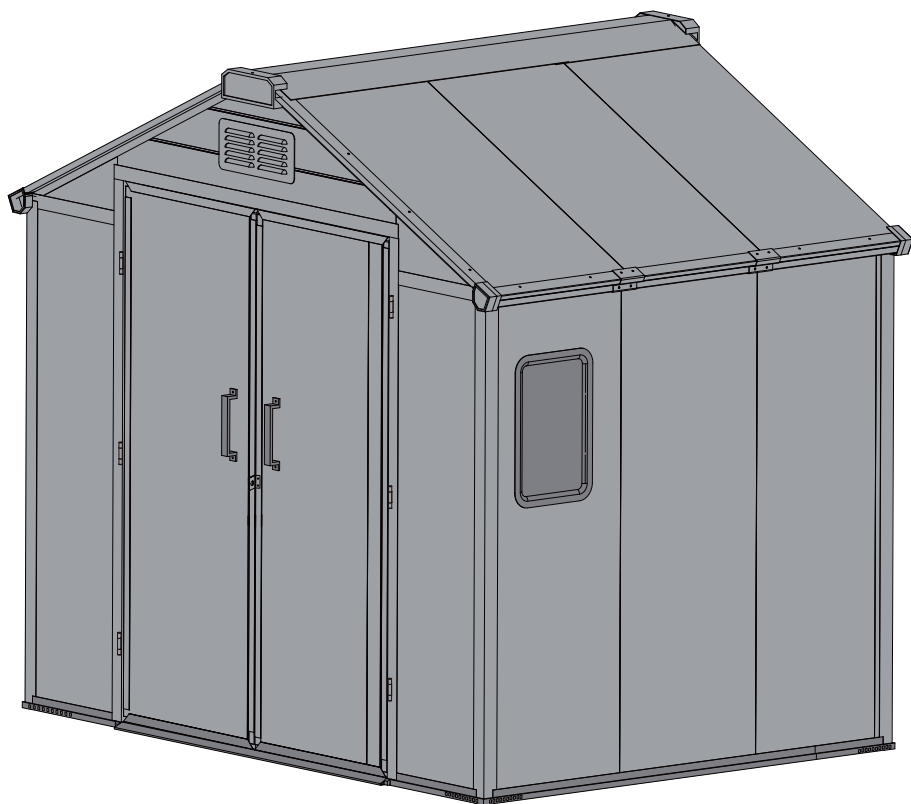

TOOL ROOM

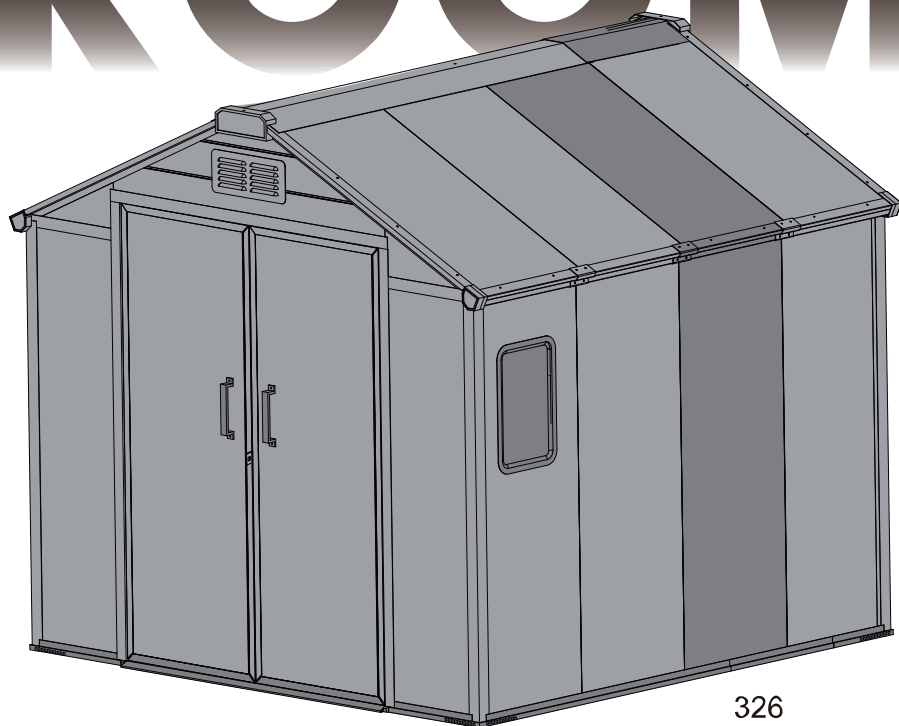

Outer box number










325-A (X1)

325-B (X1)










326 (X1)


8X8

FLOOR PARTS

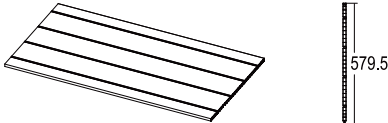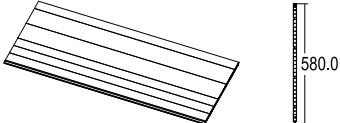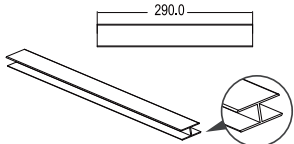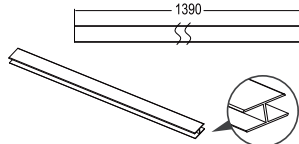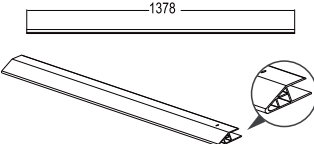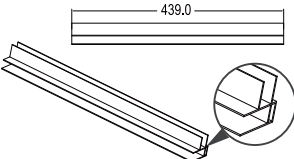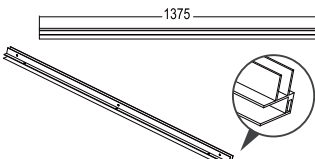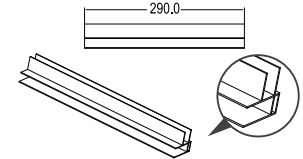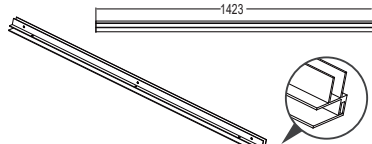
 A1 (X2)		 A2 (X4)	
 B3 (X1)	 B4 (X1)	 B5 (X1)	
 B8 (X4)	 B10 (X2)	 B11 (X2)	
 B12 (X1)			







WALL PARTS

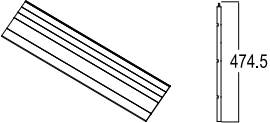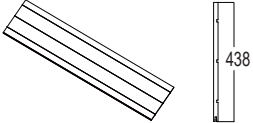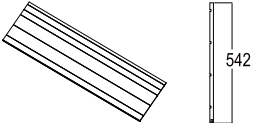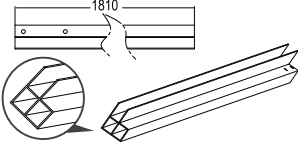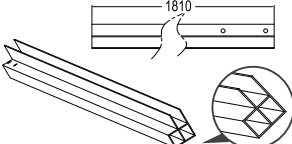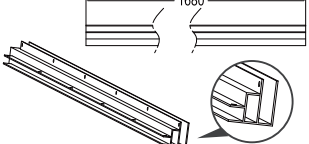 A16 (X1)	 A17 (X1)	 A22 (X1)
 A23 (X7)	 A24 (X1)	 A25 (X1)
 B13 (X1)	 B14 (X1)	 B15 (X4)


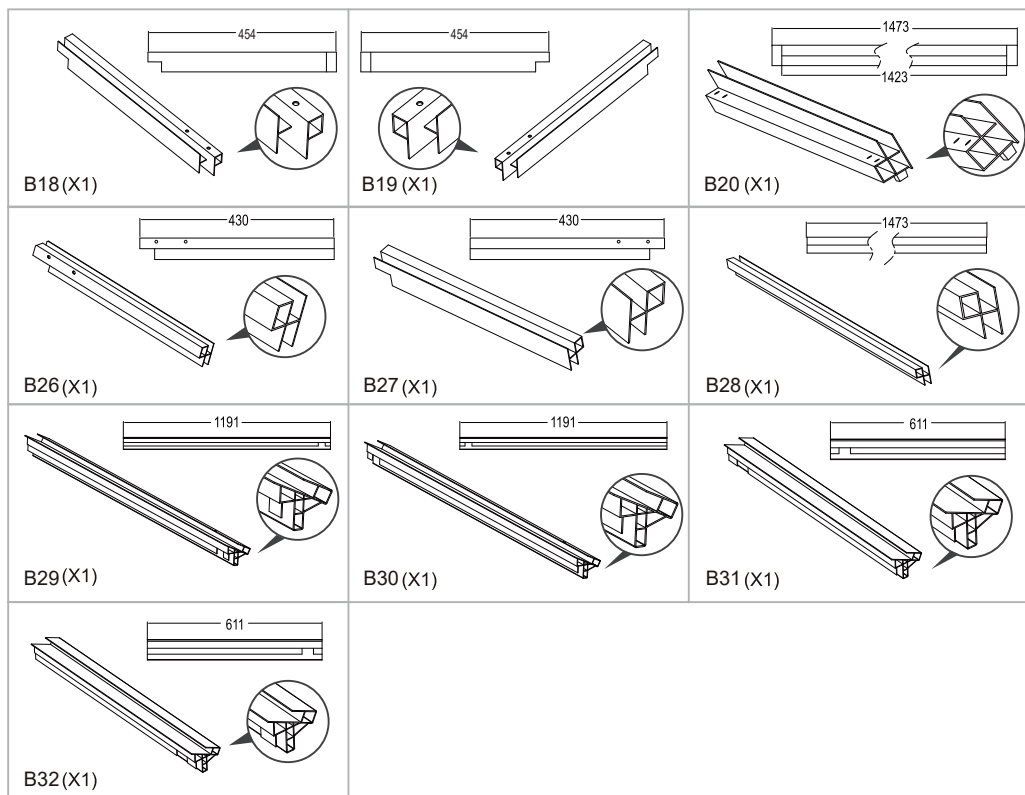


ROOF PARTS





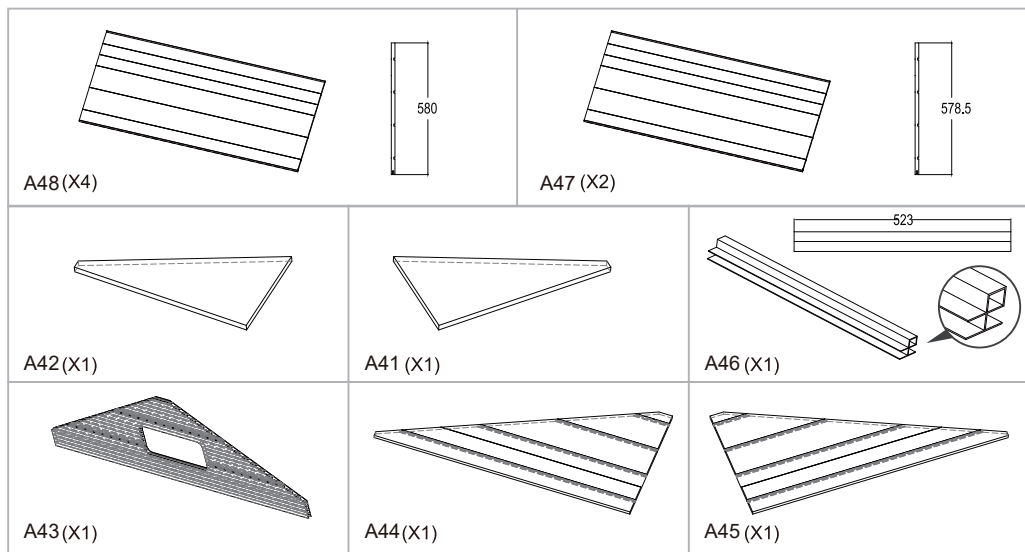


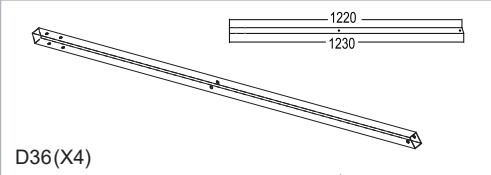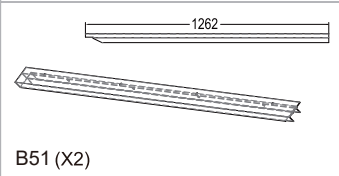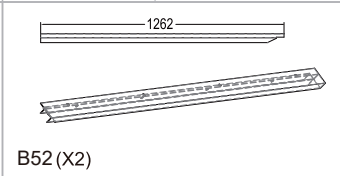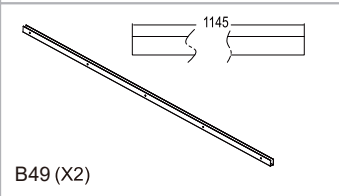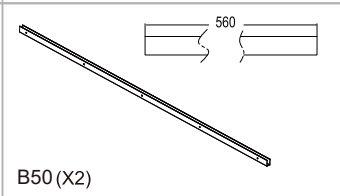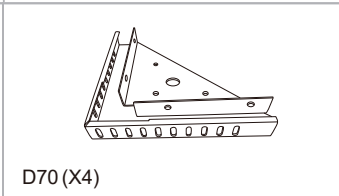 D36 (X4) D38 (X2)		 B51 (X2) B52 (X2)		 D55 (X1)
 B49 (X2)		 B50 (X2)		 D70 (X4)

ROOF PARTS

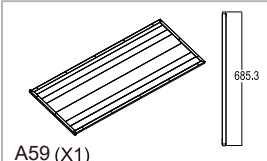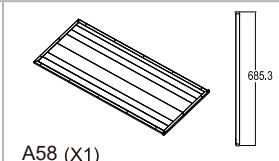
 A59 (X1) A58 (X1)		 D61 (X2) D62 (X1)	
--	--	---	--

SMALL PARTS


							
C6 (X1)	C7 (X1)	C9 (X4)	D21 (X2)	D33 (X4)	D34 (X4)	D35 (X4)	D39 (X2)
							
D40 (X2)	C53 (X2)	C54 (X2)	C56 (X1)		C57 (X2)	D60	
							
C66 (X1)	D63 (X1)	D64 (X25)	D65 (X150)	D67 (X12)	D68 (X90)	D69 (X1)	
							
D90 (X4)			D91 (X4)				

FLOOR PARTS


326

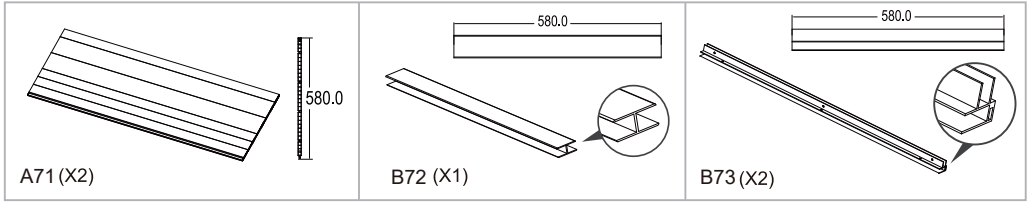


WALL PARTS

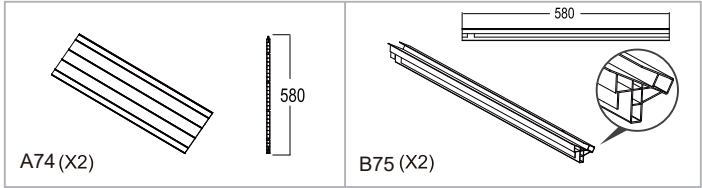


ROOF PARTS

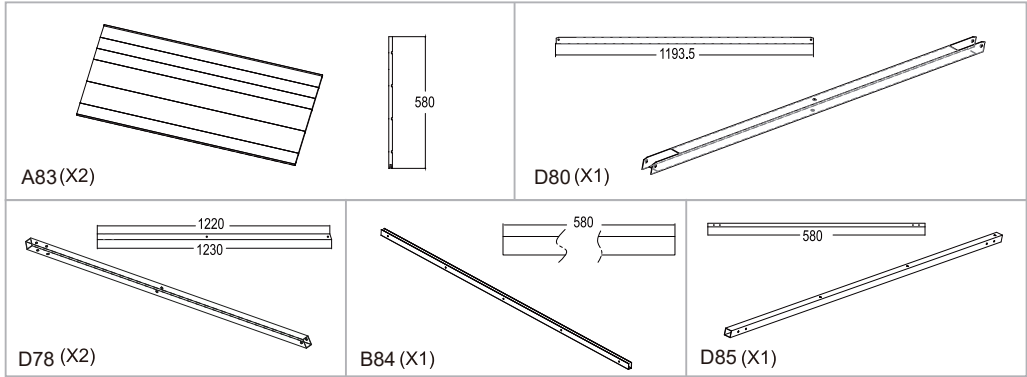

SMALL PARTS

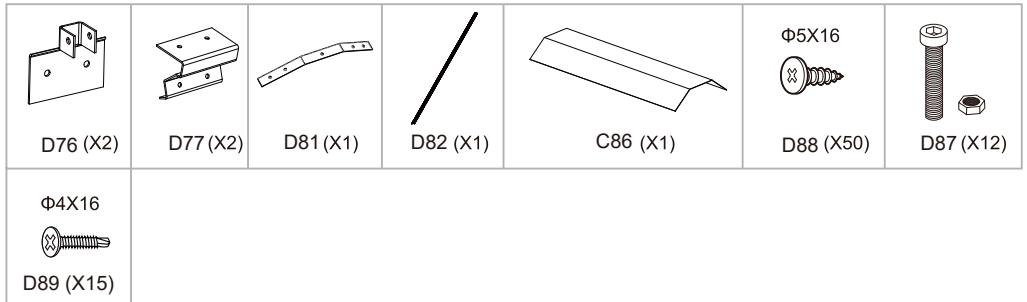

TOOL ROOM

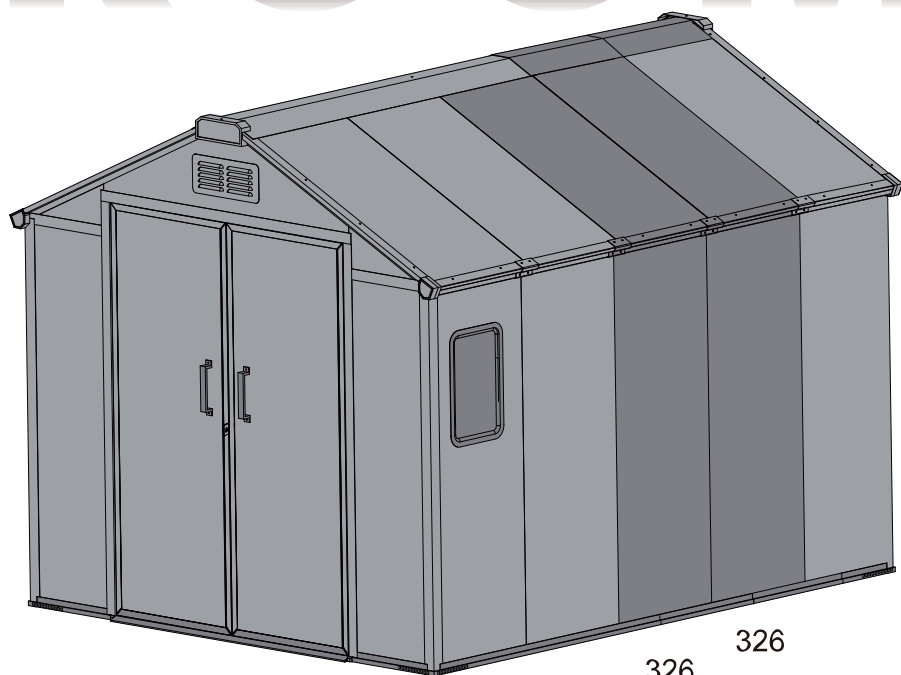


Outer box number

325-A (X1)










325-B (X1)

326 (X2)









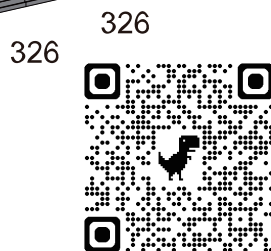












8X10

FLOOR PARTS

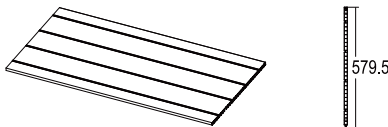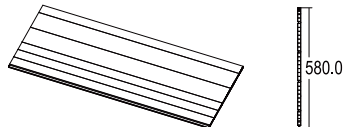
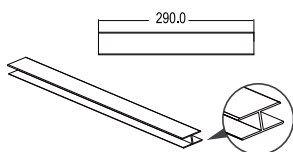
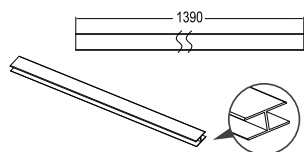
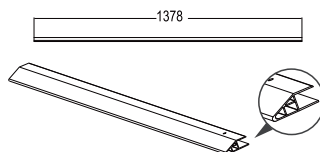
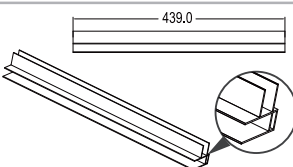
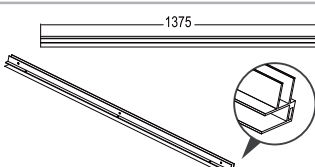
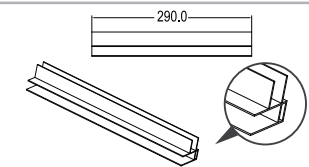
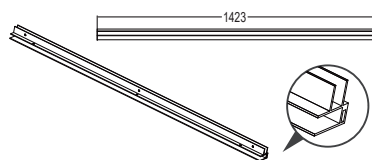
 A1 (X2)		 A2 (X4)	
 B3 (X1)	 B4 (X1)	 B5 (X1)	
 B8 (X4)	 B10 (X2)	 B11 (X2)	
 B12 (X1)			









WALL PARTS

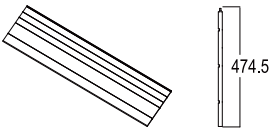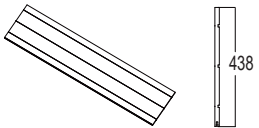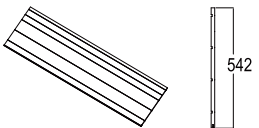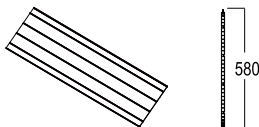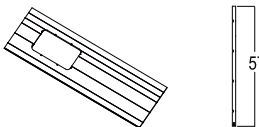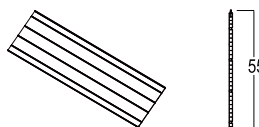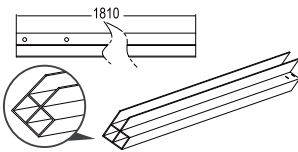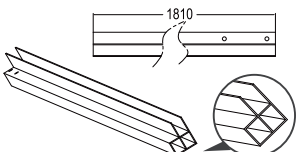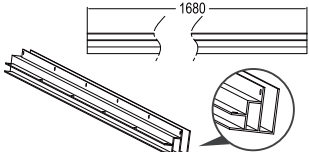 A16 (X1)	 A17 (X1)	 A22 (X1)	
 A23 (X7)	 A24 (X1)	 A25 (X1)	
 B13 (X1)	 B14 (X1)	 B15 (X4)	

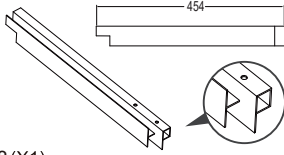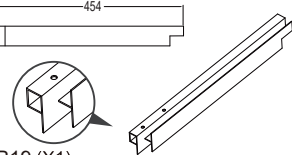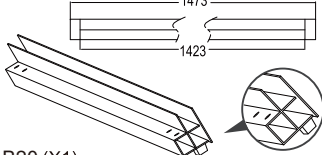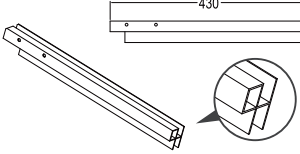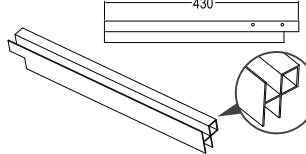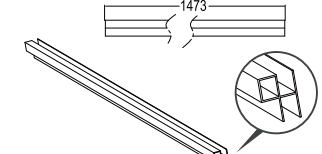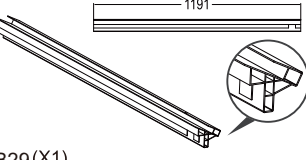
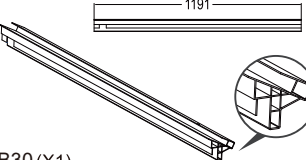
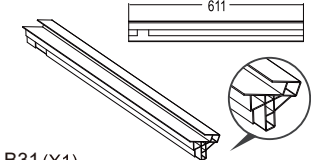
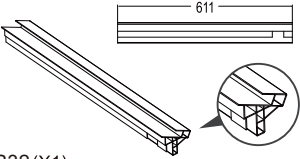
 B18 (X1)	 B19 (X1)	 B20 (X1)
 B26 (X1)	 B27 (X1)	 B28 (X1)
 B29 (X1)	 B30 (X1)	 B31 (X1)
 B32 (X1)		

ROOF PARTS

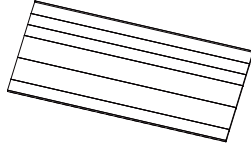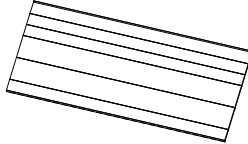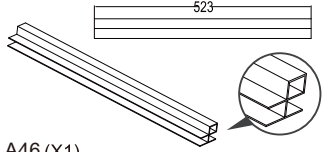
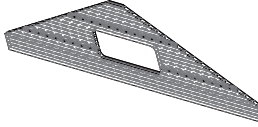


 A48 (X4)	 A47 (X2)	
 A42 (X1)	 A41 (X1)	 A46 (X1)
 A43 (X1)	 A44 (X1)	 A45 (X1)

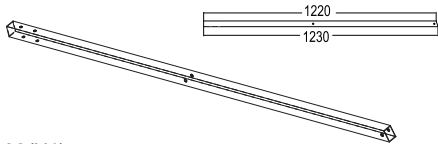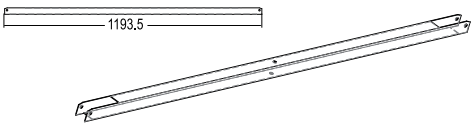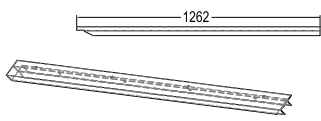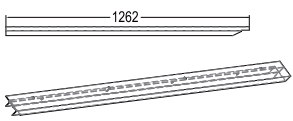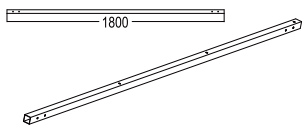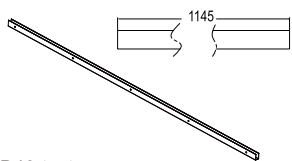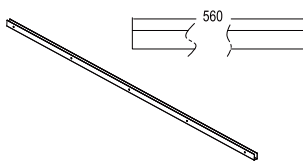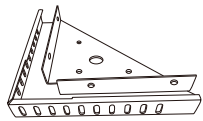 D36 (X4)		 D38 (X2)	
 B51 (X2)	 B52 (X2)	 D55 (X1)	
 B49 (X2)	 B50 (X2)	 D70 (X4)	

ROOF PARTS

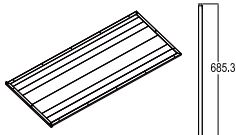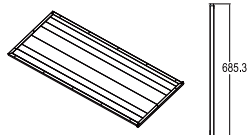
 A59 (X1)	 A58 (X1)	 D61 (X2)	 D62 (X1)
--	---	---	---

SMALL PARTS


 C6 (X1)	 C7 (X1)	 C9 (X4)	 D21 (X2)	 D33 (X4)	 D34 (X4)	 D35 (X4)	 D39 (X2)
 D40 (X2)	 C53 (X2)	 C54 (X2)	 C56 (X1)		 C57 (X2)	 X2  X4 D60	
 C66 (X1)	 D63 (X1)	 D64 (X25)	 Φ5X16 D65 (X150)	 Φ4X30 D67 (X12)	 Φ4X16 D68 (X90)	 D69 (X1)	
 20CM D90 (X4)		 Φ10X100 D91 (X4)					

FLOOR PARTS


326

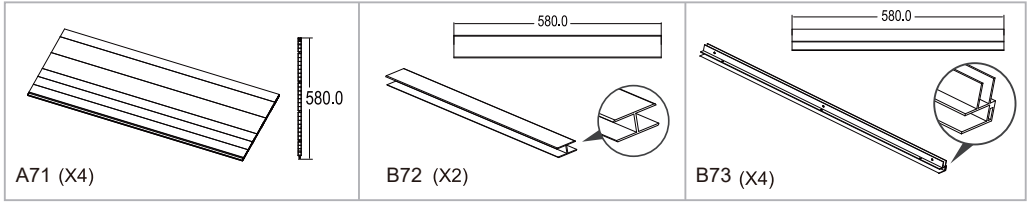


WALL PARTS

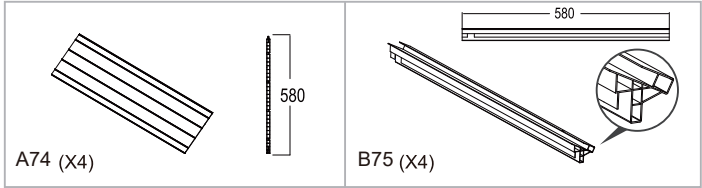


ROOF PARTS

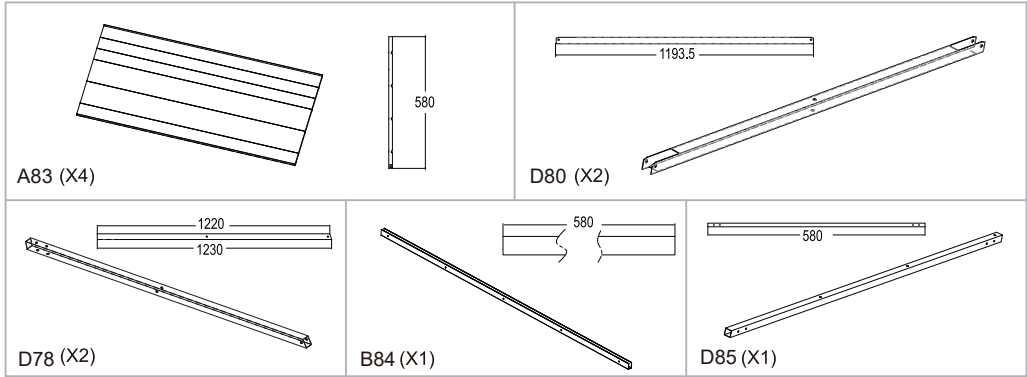

SMALL PARTS

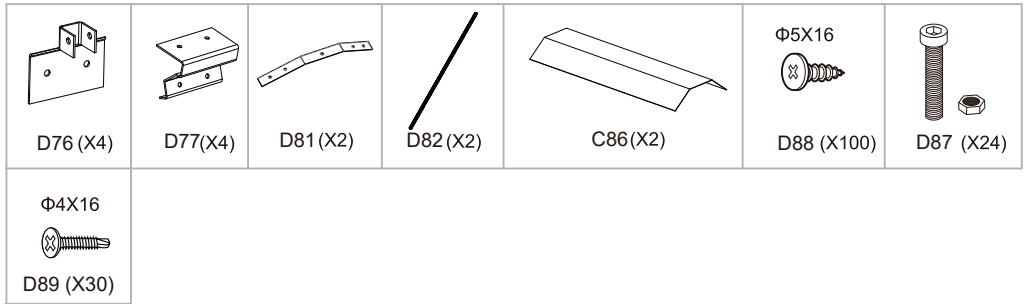

TOOL ROOM

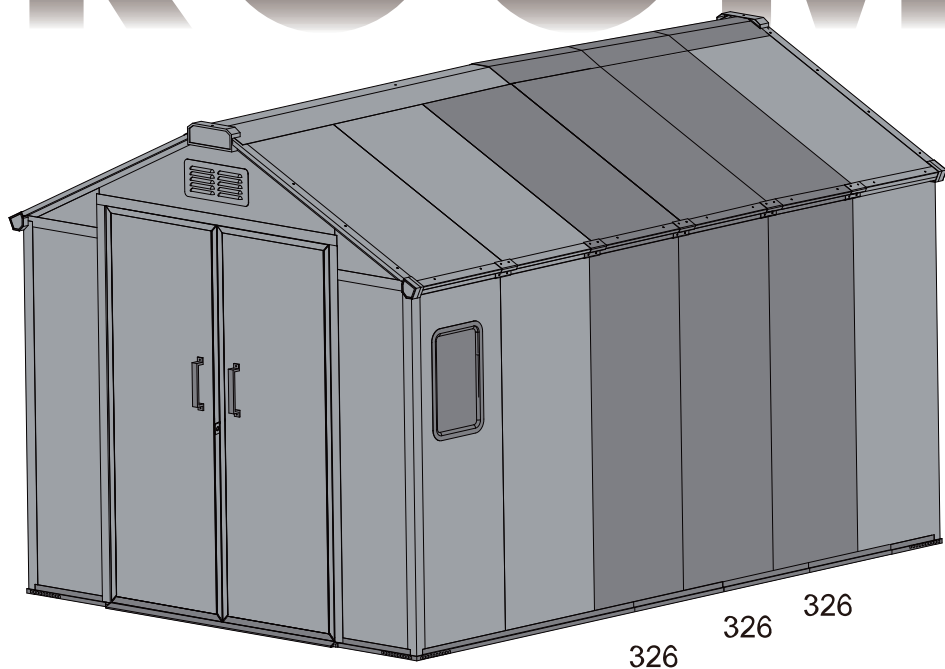

Outer box number










325-A (X1)

325-B (X1)










326 (X3)











8X12

FLOOR PARTS

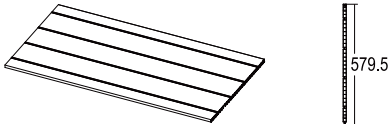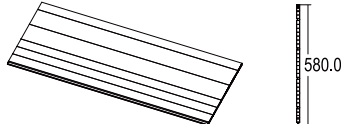
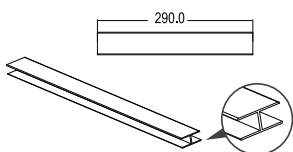
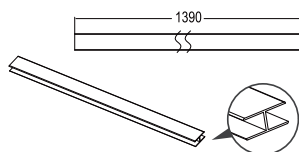
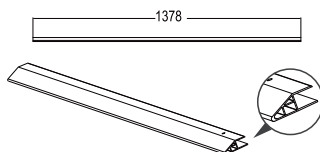
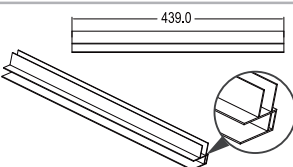
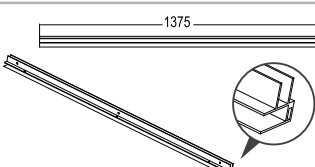
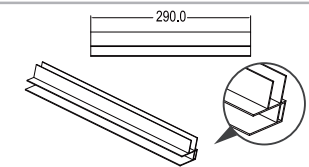
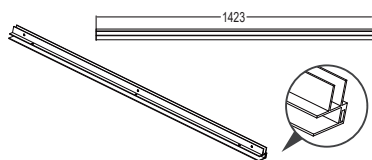
 A1 (X2)	 A2 (X4)	
 B3 (X1)	 B4 (X1)	 B5 (X1)
 B8 (X4)	 B10 (X2)	 B11 (X2)
 B12 (X1)		







WALL PARTS

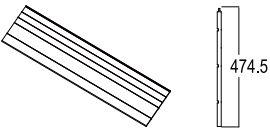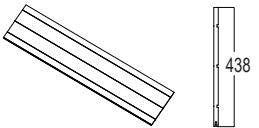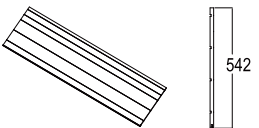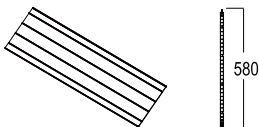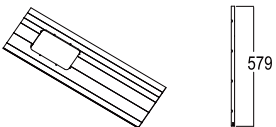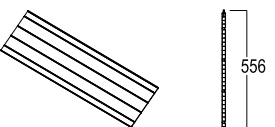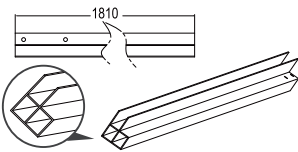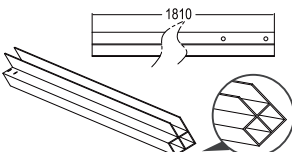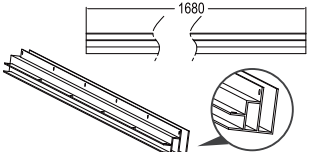 A16 (X1)	 A17 (X1)	 A22 (X1)
 A23 (X7)	 A24 (X1)	 A25 (X1)
 B13 (X1)	 B14 (X1)	 B15 (X4)

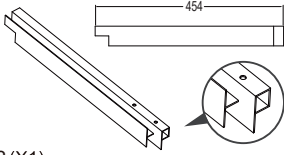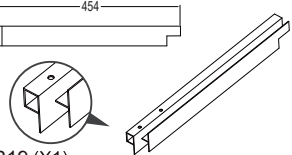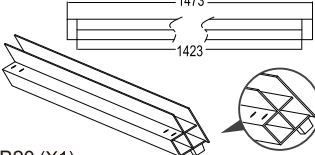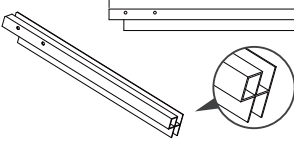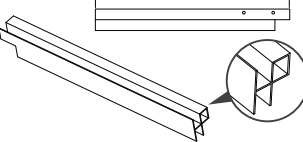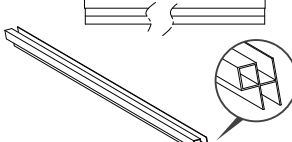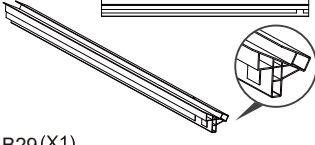
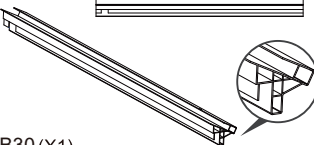
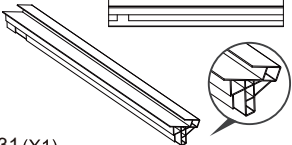
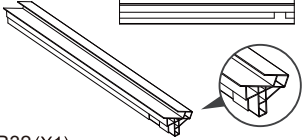
 B18 (X1)	 B19 (X1)	 B20 (X1)
 B26 (X1)	 B27 (X1)	 B28 (X1)
 B29 (X1)	 B30 (X1)	 B31 (X1)
 B32 (X1)		

ROOF PARTS






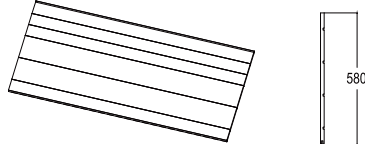
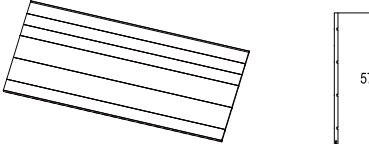


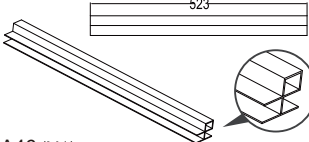
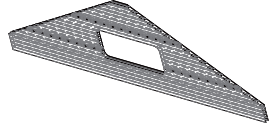


 A48 (X4)	 A47 (X2)	
 A42 (X1)	 A41 (X1)	 A46 (X1)
 A43 (X1)	 A44 (X1)	 A45 (X1)

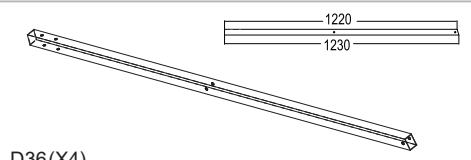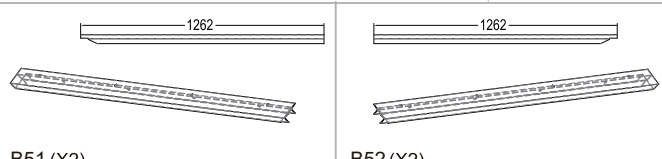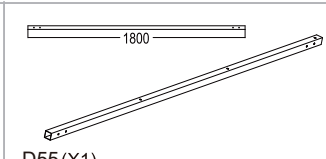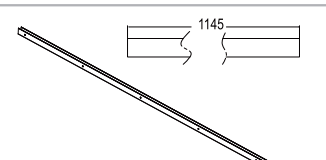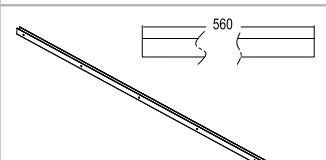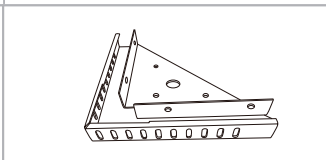 D36 (X4) D38 (X2)		 B51 (X2) B52 (X2)		 D55 (X1)
 B49 (X2)	 B50 (X2)	 D70 (X4)		

ROOF PARTS

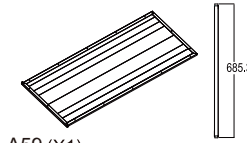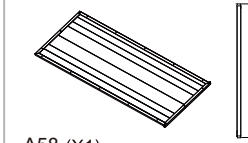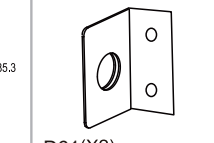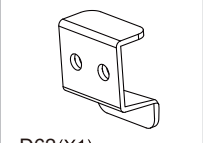
 A59 (X1)	 A58 (X1)	 D61 (X2)	 D62 (X1)
--	---	---	--

SMALL PARTS

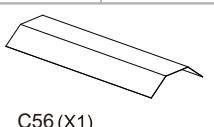
 C6 (X1)	 C7 (X1)	 C9 (X4)	 D21 (X2)	 D33 (X4)	 D34 (X4)	 D35 (X4)	 D39 (X2)
 D40 (X2)	 C53 (X2)	 C54 (X2)	 C56 (X1)	 C57 (X2)	 D60		
 C66 (X1)	 D63 (X1)	 D64 (X25)	 D65 (X150)	 D67 (X12)	 D68 (X90)	 D69 (X1)	 D90 (X4)
 D90 (X4)	 D91 (X4)						

FLOOR PARTS


326

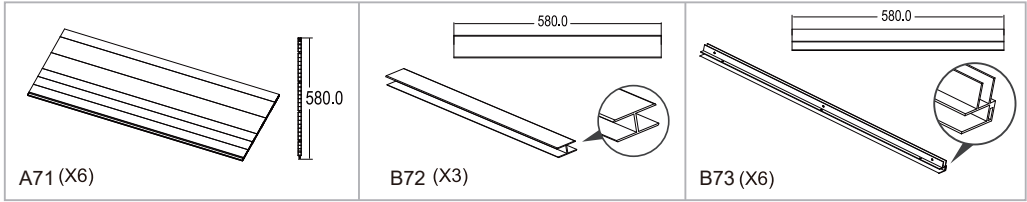


WALL PARTS

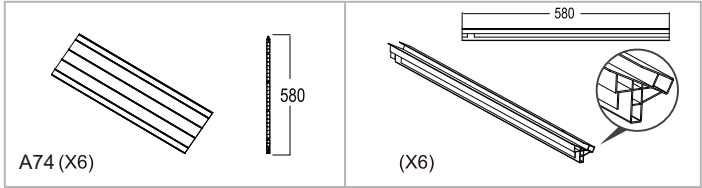

ROOF PARTS

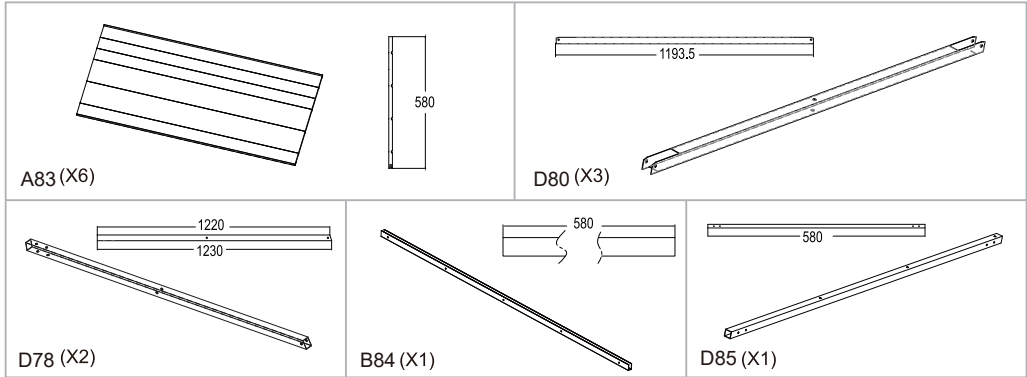

SMALL PARTS

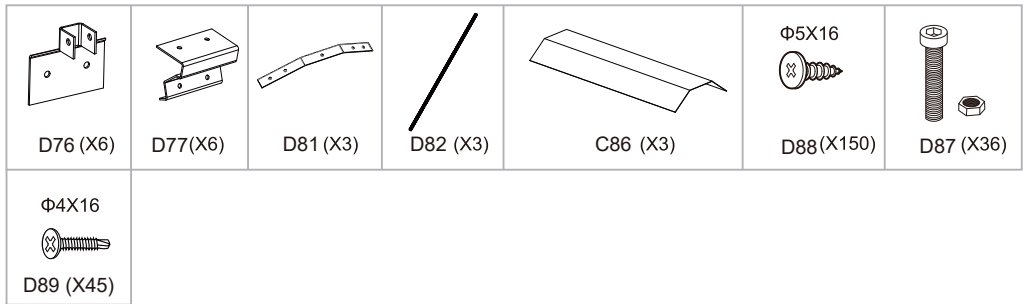


1



A1(x1) A2(x2) A71(x1)




Cork Hammer

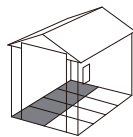

8x8 Usage A71(X1)

8x10 Usage A71(X2)

8x12 Usage A71(X3)

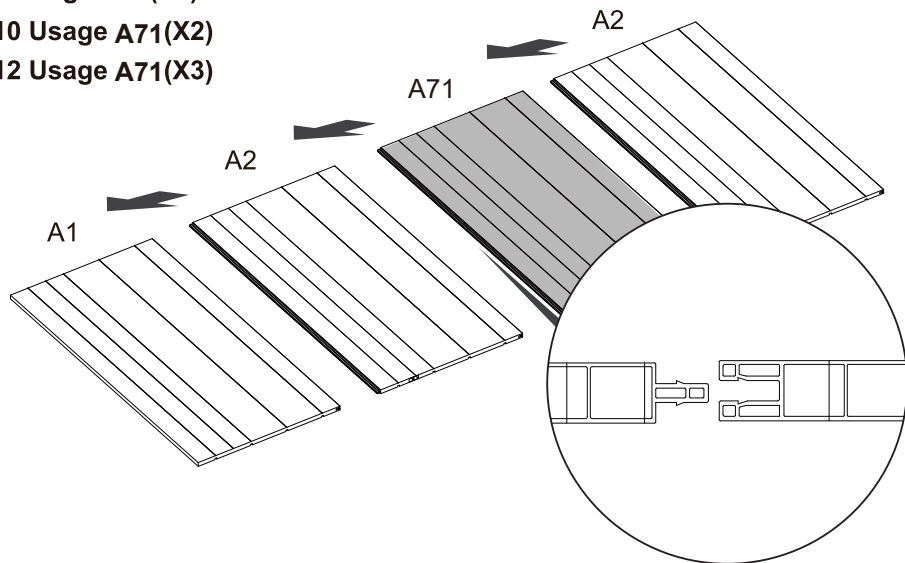


2



B3 (X1) B4 (X1) B72 (X1)




Cork Hammer

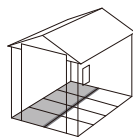

8x8 Usage B72(X1)

8x10 Usage B72(X2)


8x12 Usage B72(X3)

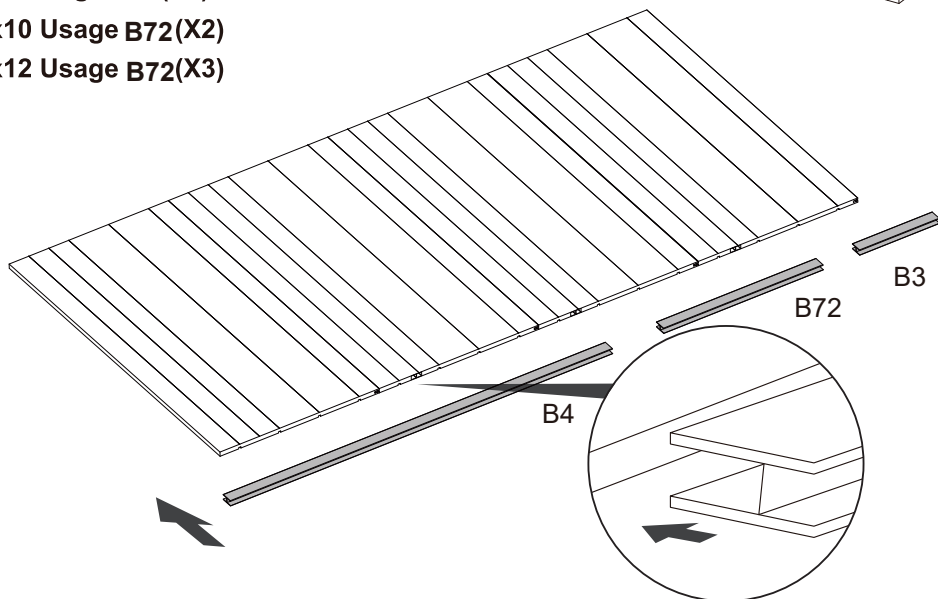

3




A1(x1) A2(x2) A71(x1)

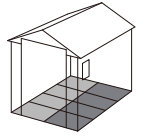

8x8 Usage A71(X1)

8x10 Usage A71(X2)

8x12 Usage A71(X3)

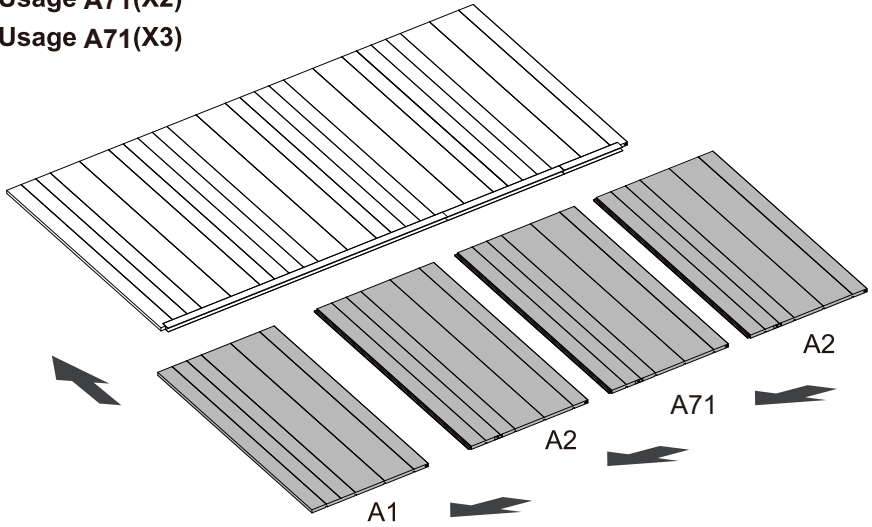



4



Φ5X16
D65/D88 (x14)



Electric Drill

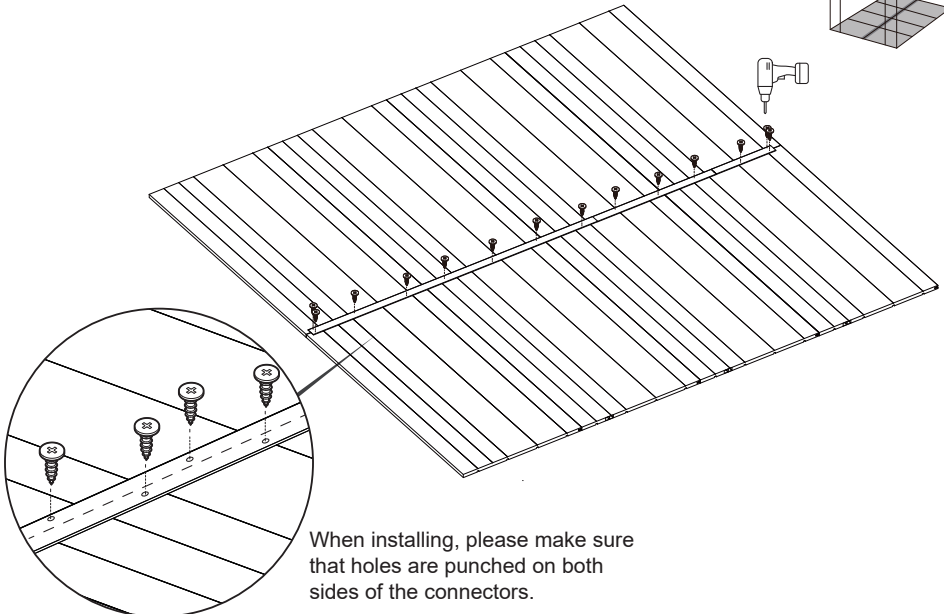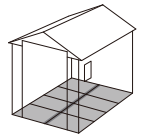

When installing, please make sure that holes are punched on both sides of the connectors.




5



C9 (x1)



Cork
Hammer

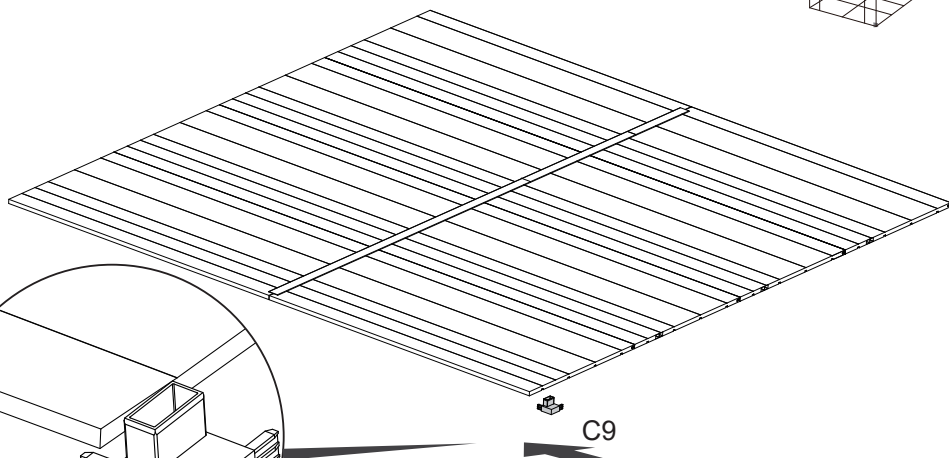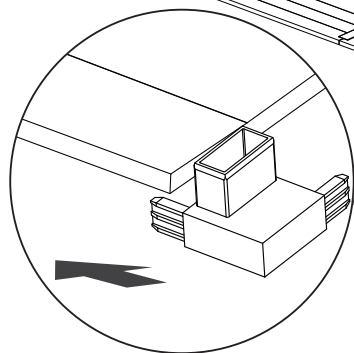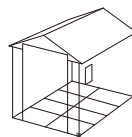




6



B8 (x1)



Cork
Hammer

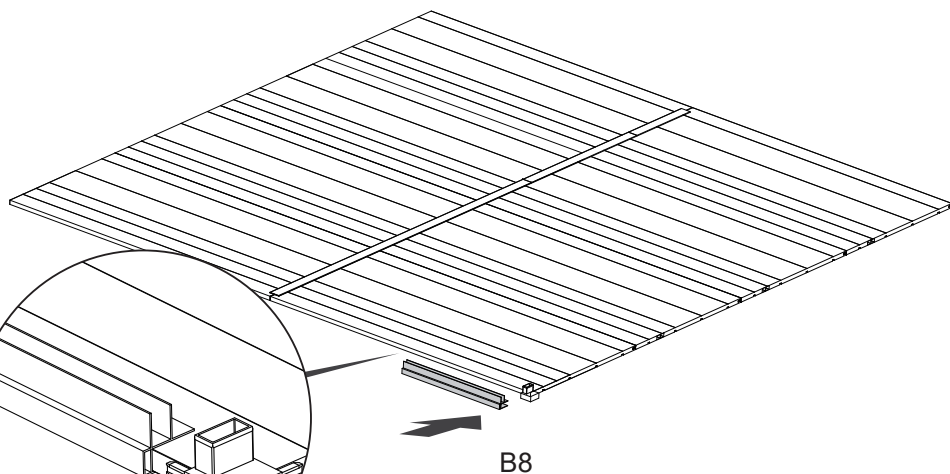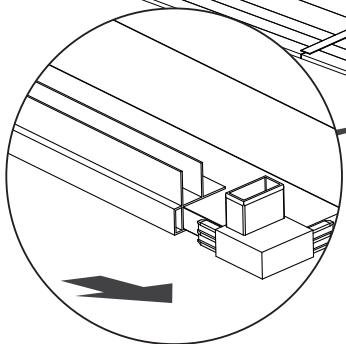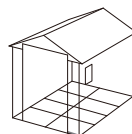



7



C6 (x1)



Cork
Hammer

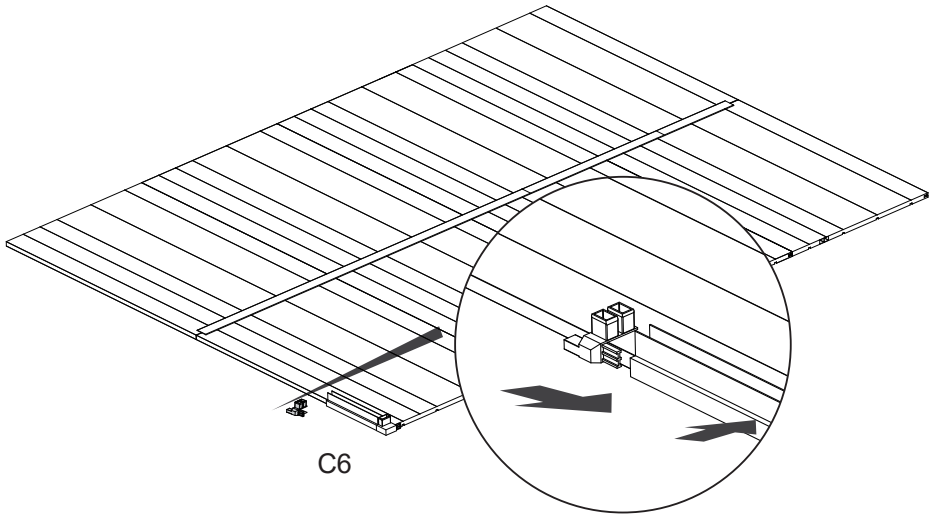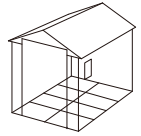

C6



8



B5 (x1)



Cork
Hammer

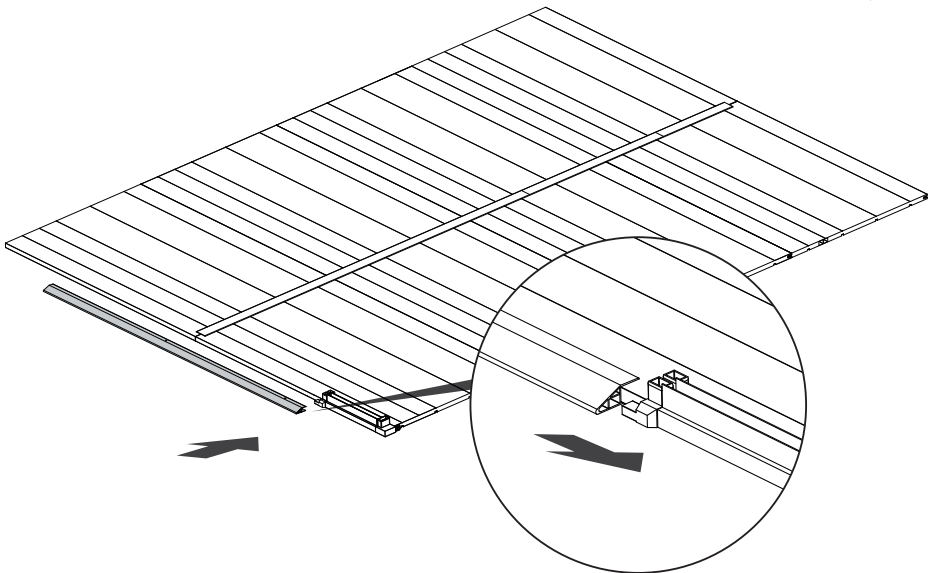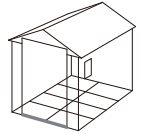



9



C7 (x1)



Cork
Hammer

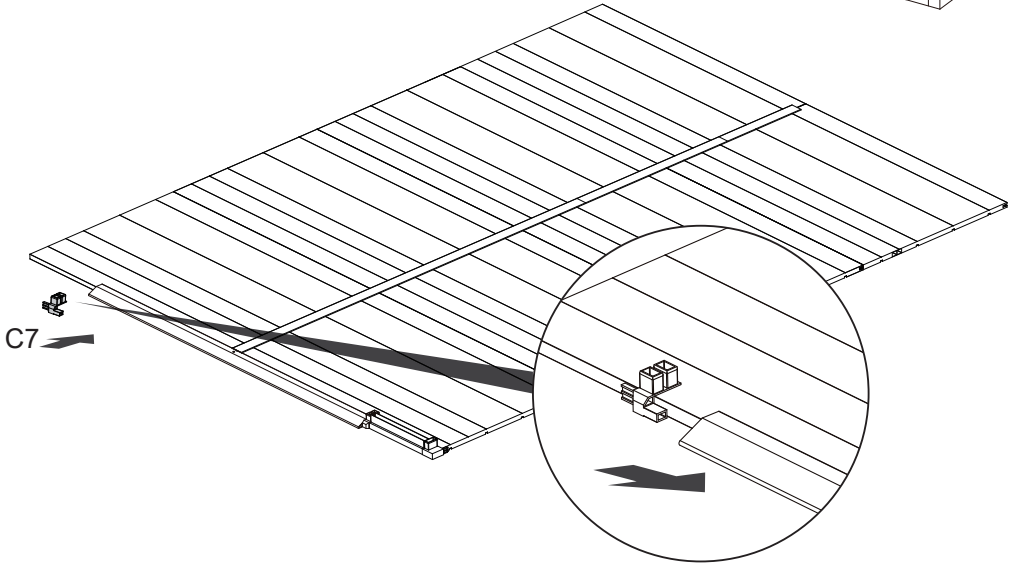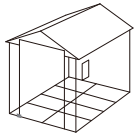



10



B8 (x1)



Cork
Hammer

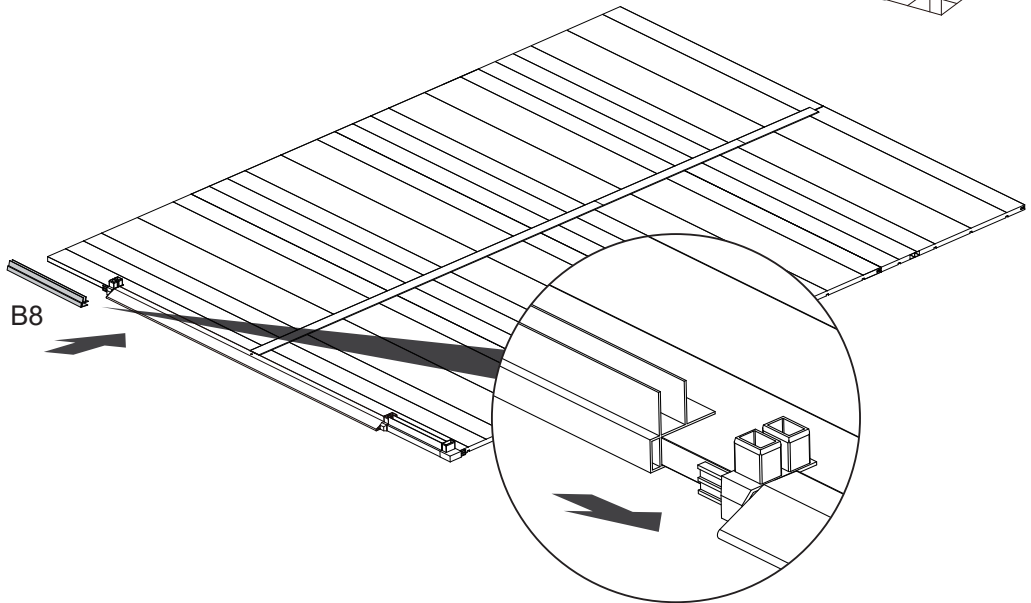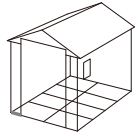



11



C9 (x1)



Cork
Hammer

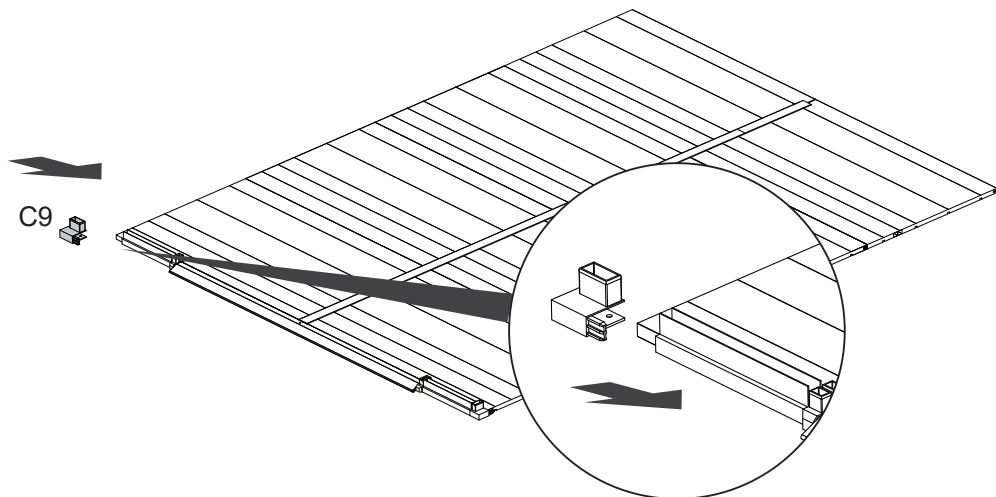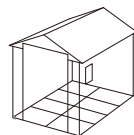



12



Φ5X16
D65/D88 (x12)



Electric
Drill

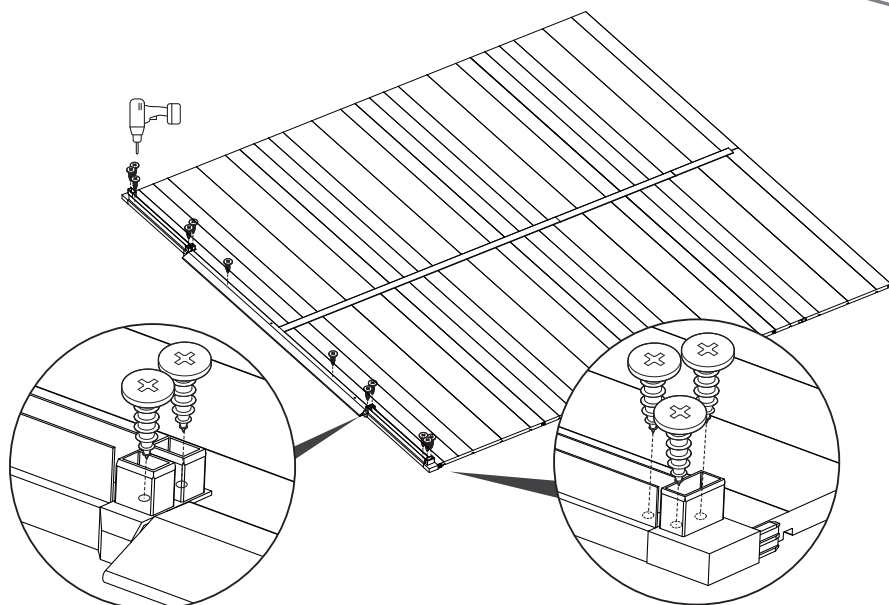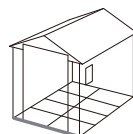



13



B10(x2)



Cork
Hammer

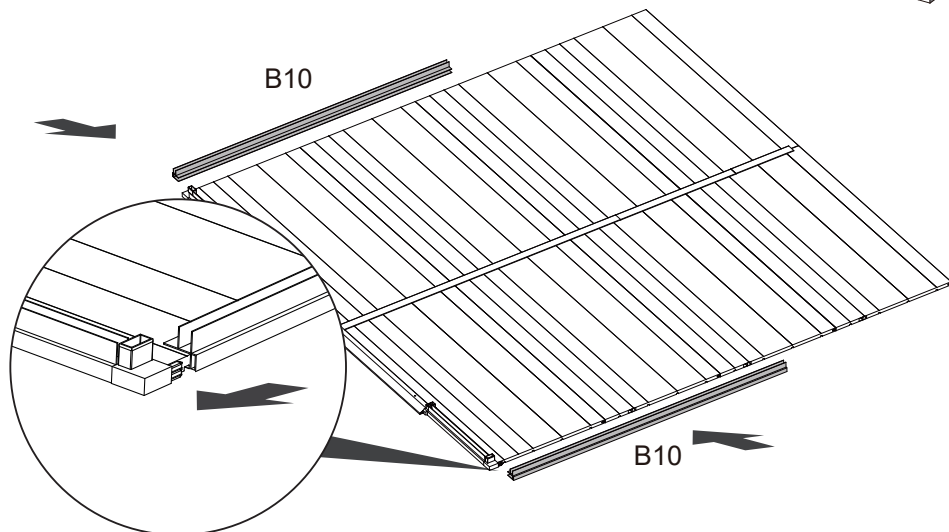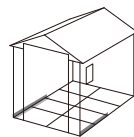


14



B73(x2)




Cork
Hammer

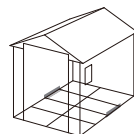

8x8 Usage B73(X2)

8x10 Usage B73(X4)

8x12 Usage B73(X6)

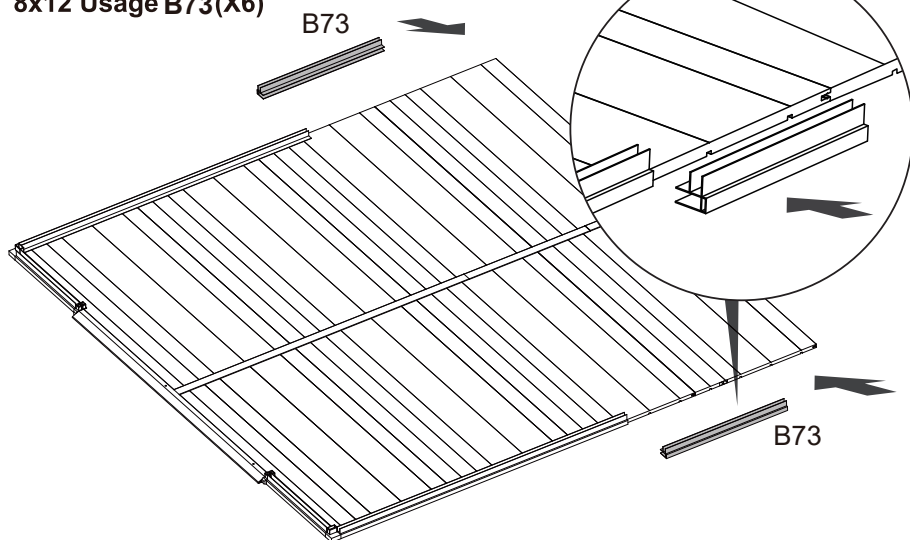



15



B11 (x2)



Cork
Hammer

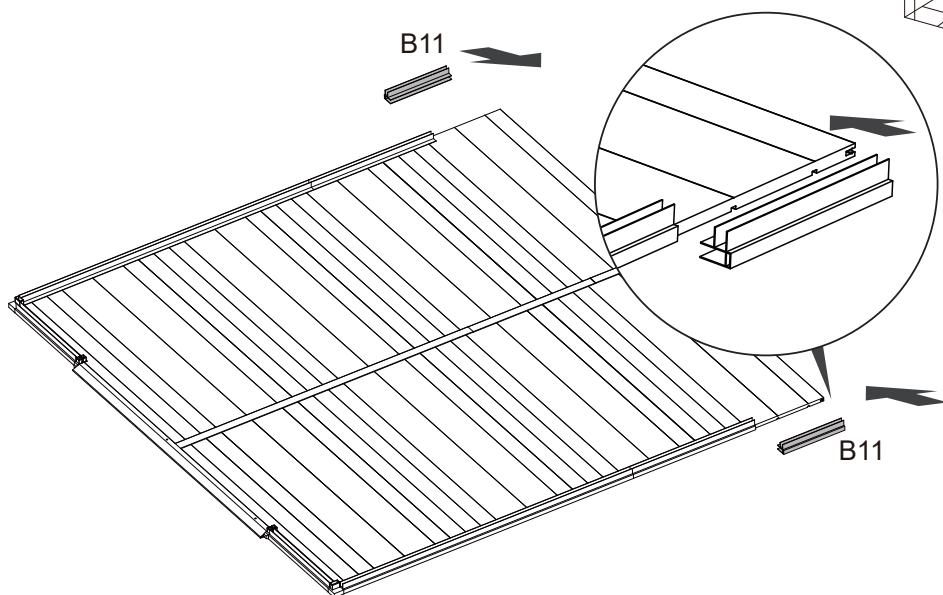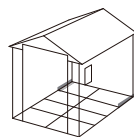



16



C9 (x2)




Cork
Hammer

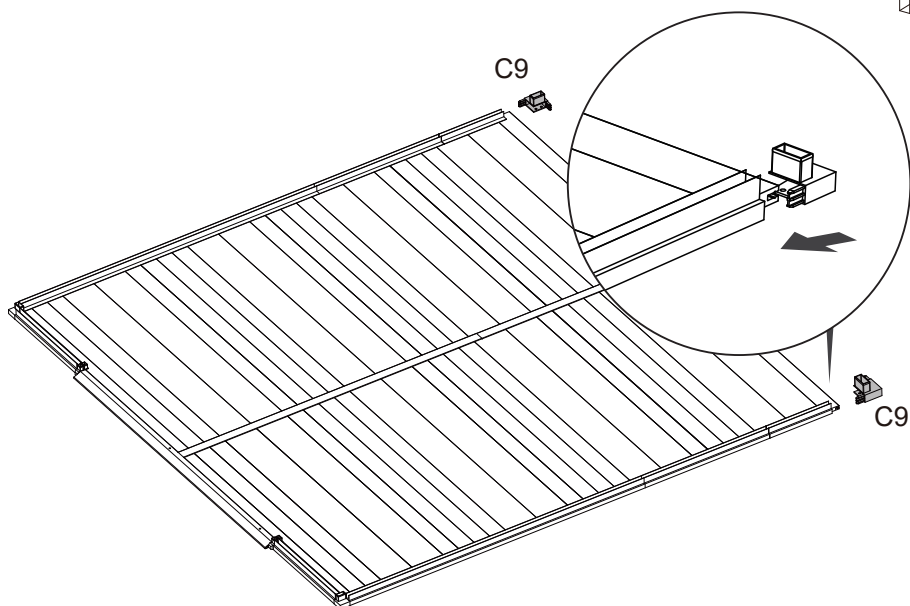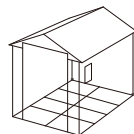


17

Φ5X16
D65/D88 (x24)

Electric
Drill

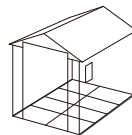

8x8 Usage D65/D88(X24)
8x10 Usage D65/D88(X28)
8x12 Usage D65/D88(X32)


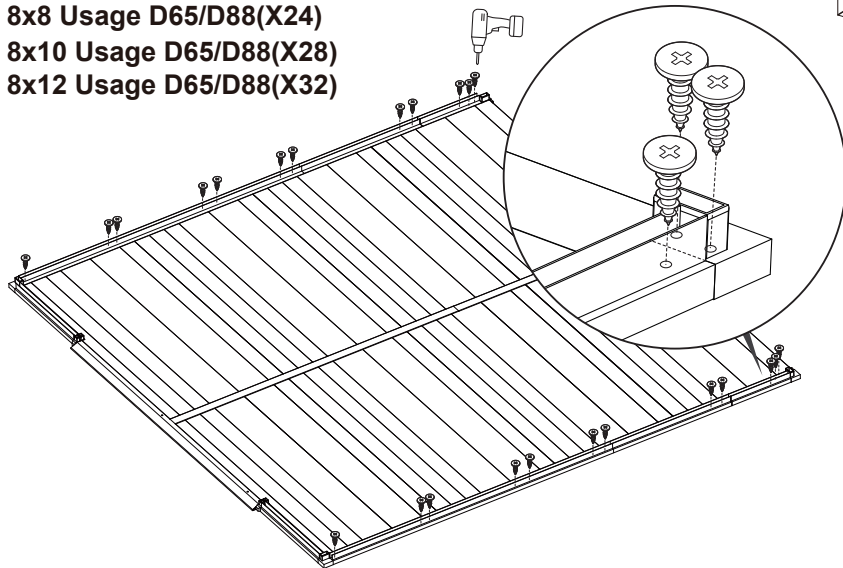


18



B8(x2)

Cork
Hammer

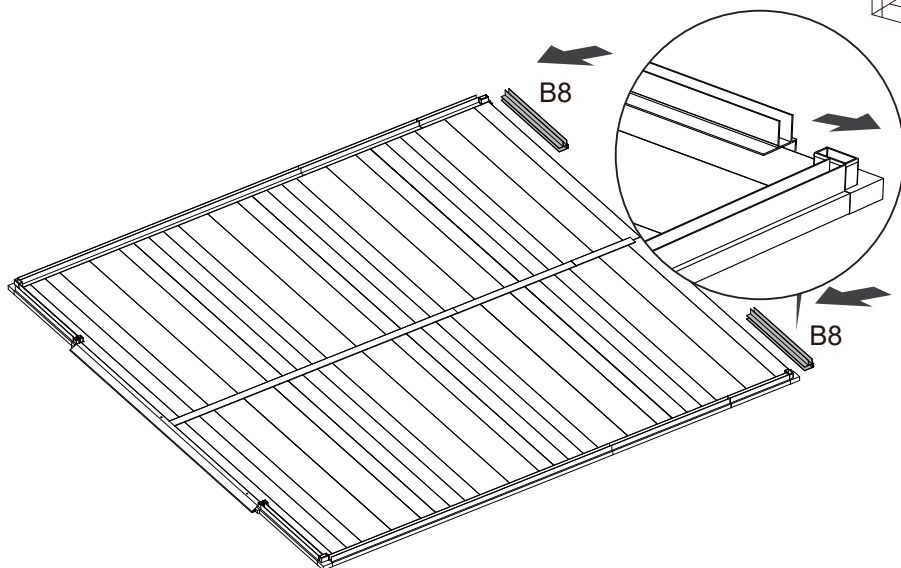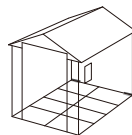



19



B12(x1)



Cork
Hammer

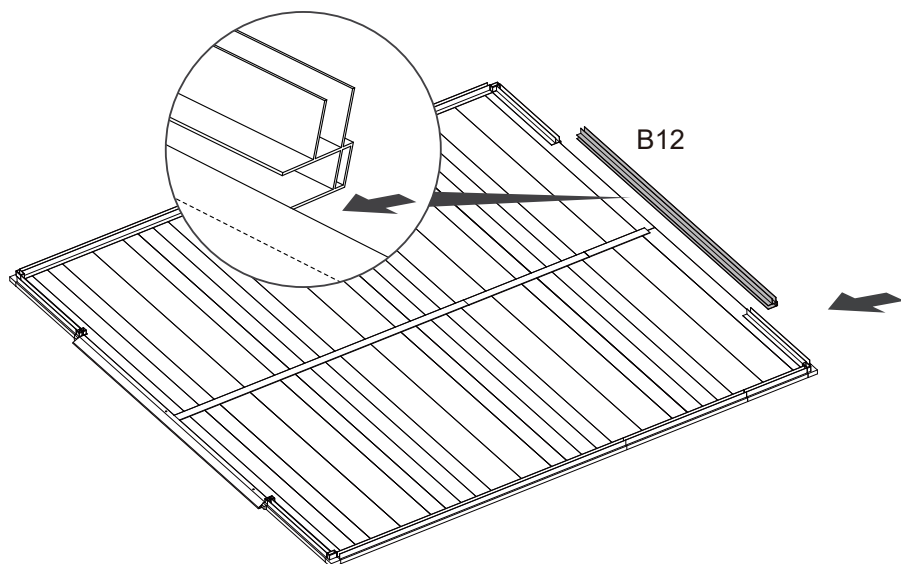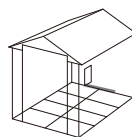



20



Φ5X16
D65/D88 (x9)



Electric
Drill

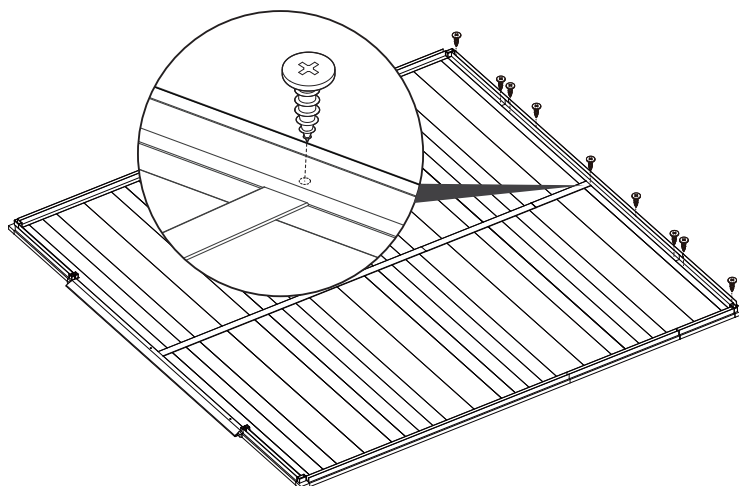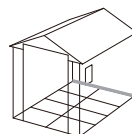

21






B13(x1)



B14(x1)





Cork
Hammer

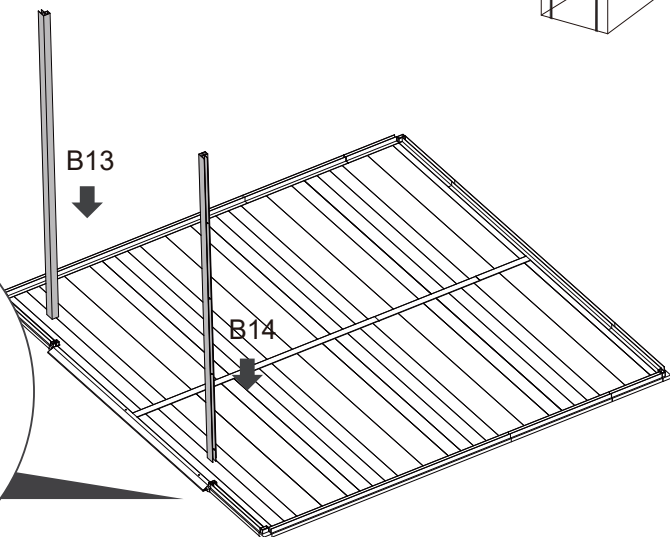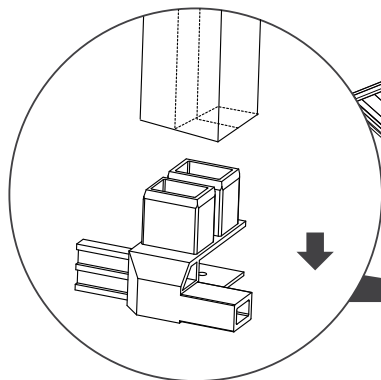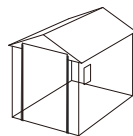

22




B20 (x1)

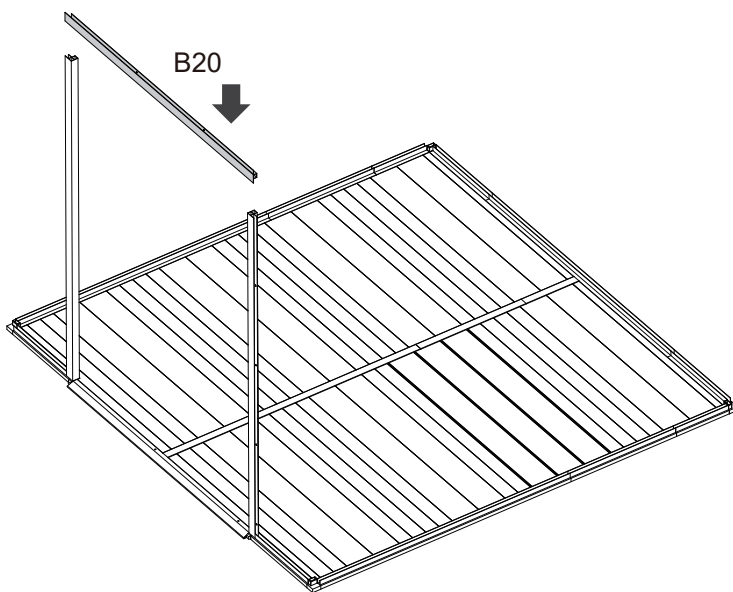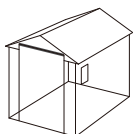



BE CAREFUL

The spacing between the bottom and top should be kept the same, with a spacing of 1378mm

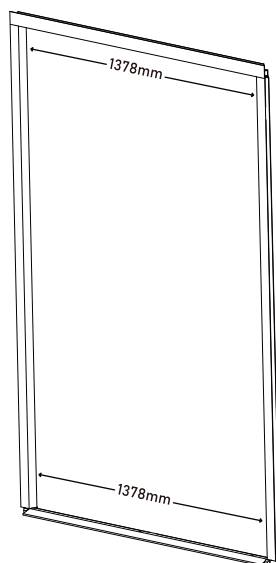



23



B15 (x2)



Cork
Hammer

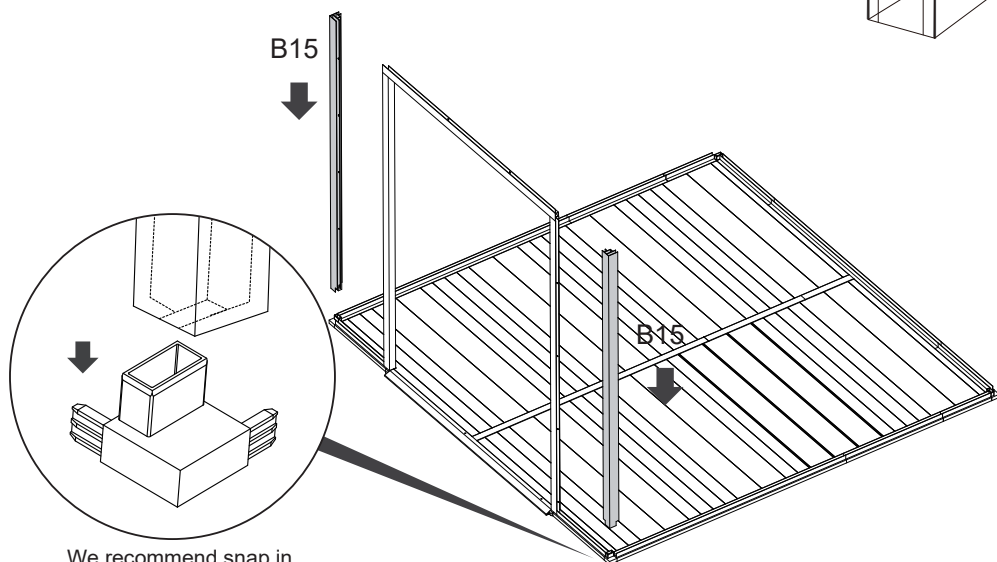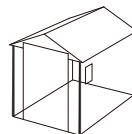

We recommend snap in
the slot on the outside.

24

A16(x1)



A17(x1)



Cork
Hammer





Tape
measure

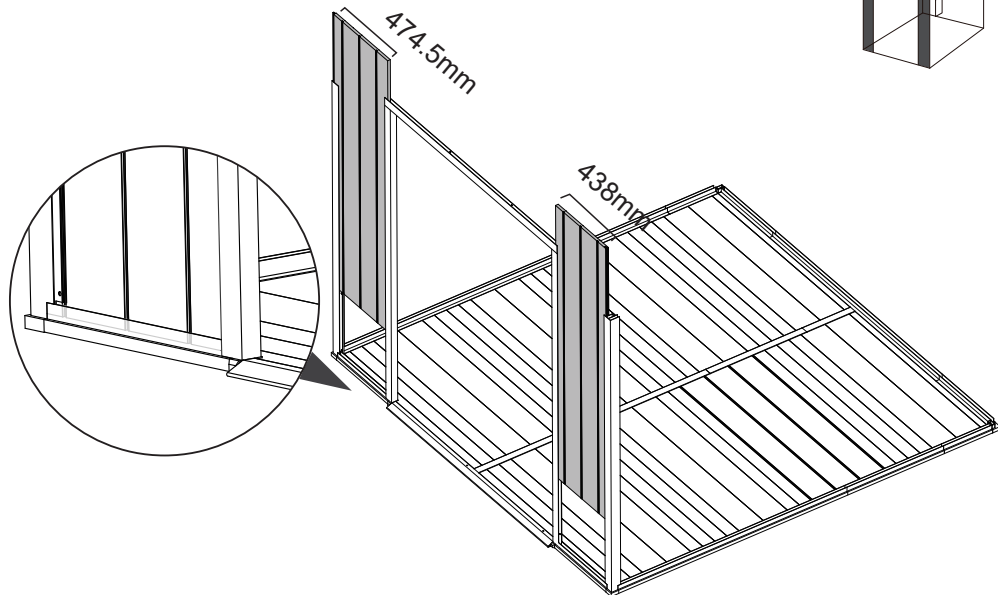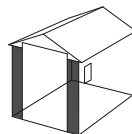

25

B18(x1)

B19 (x1)

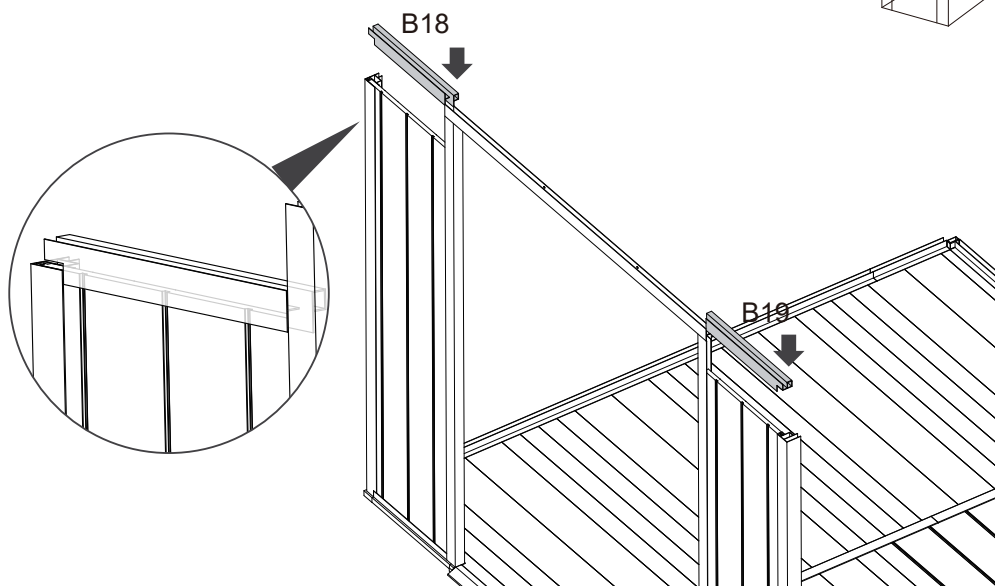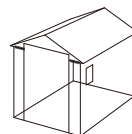

26






D21(x2)



Φ4X16
D68 (x12)



Electric
Drill

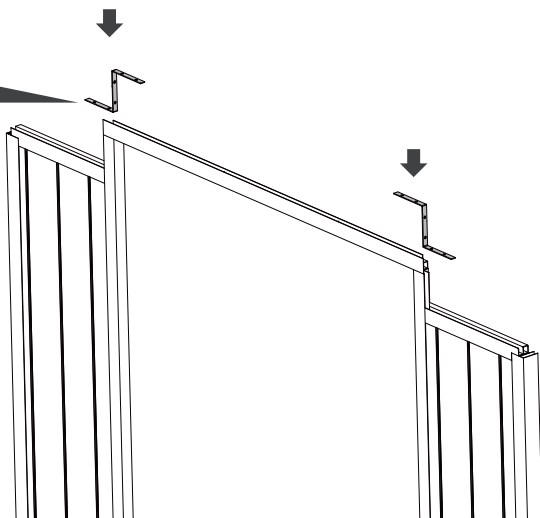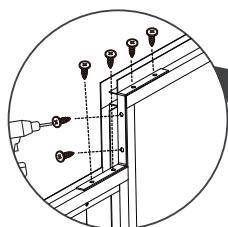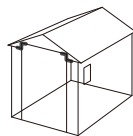

27




A22(x1) A23(x2) A74 (x1)



B15 (x1)




Cork
Hammer

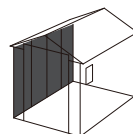

8x8 Usage A74(X1)


8x10 Usage A74(X2)

8x12 Usage A74(X3)

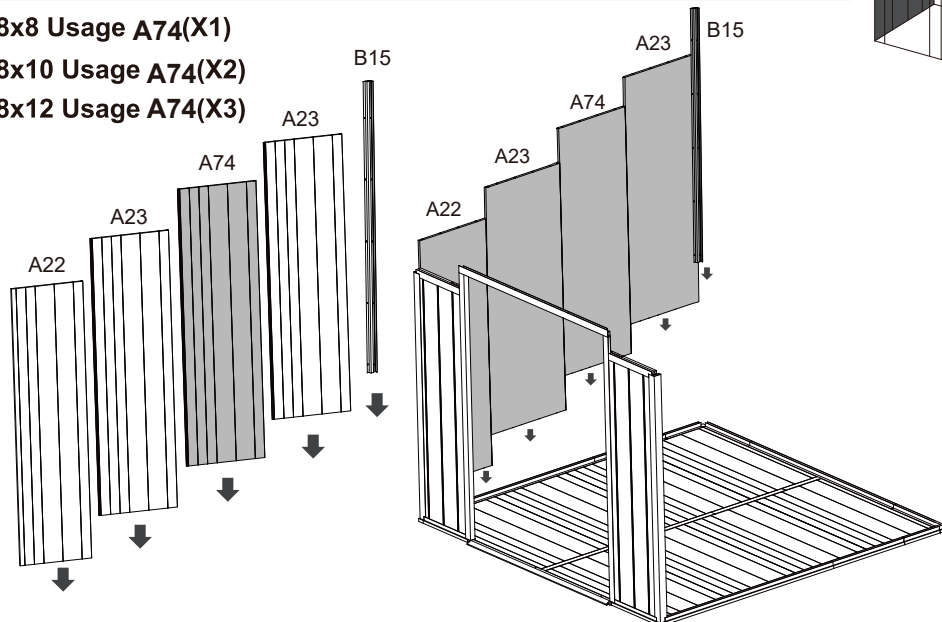

28


Φ5X16
D65/D88(X14)

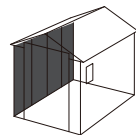

8x8 Usage D65/D88(X14)

8x10 Usage D65/D88(X16)



8x12 Usage D65/D88(X18)

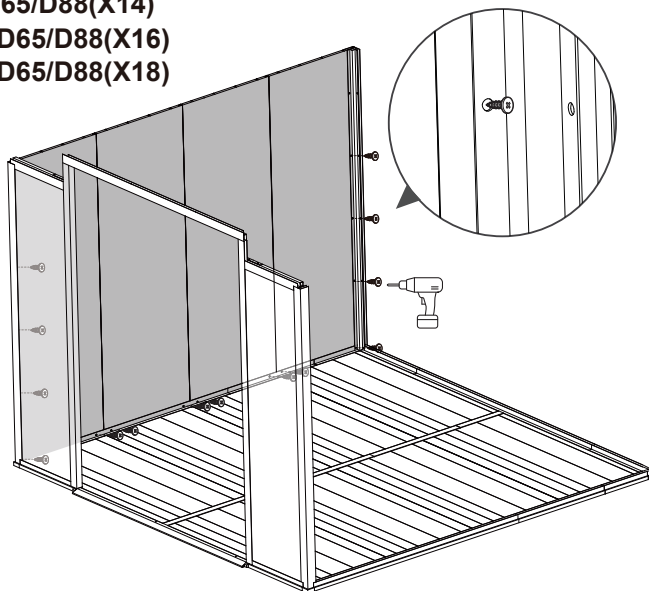

29

A23(x4)

B15 (x1)

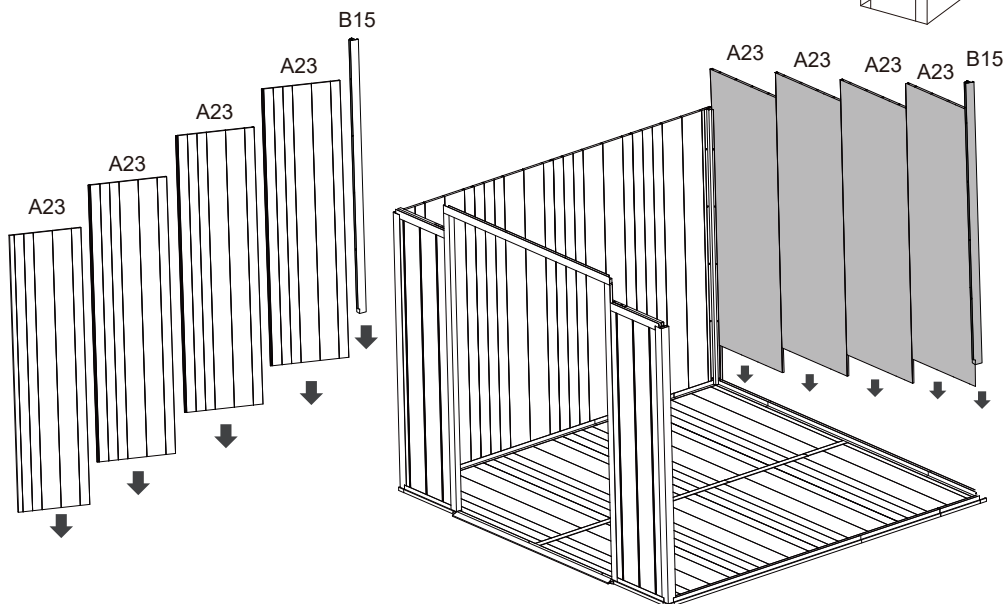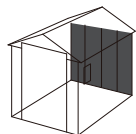




30



Φ5X16
D65/D88(x14)



Electric
Drill

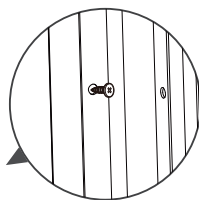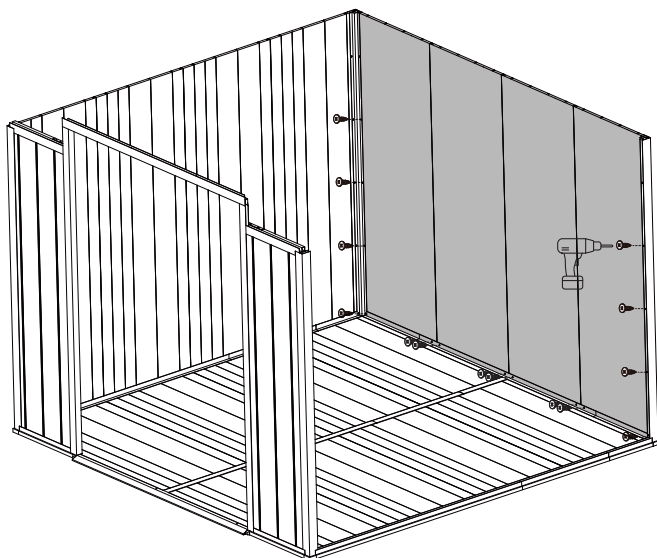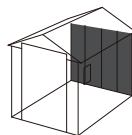

31




A24(x1)



A23(x1) A25(x1) A74(x1)





Cork
Hammer



8x8 Usage A74(X1)

8x10 Usage A74(X2)

8x12 Usage A74(X3)

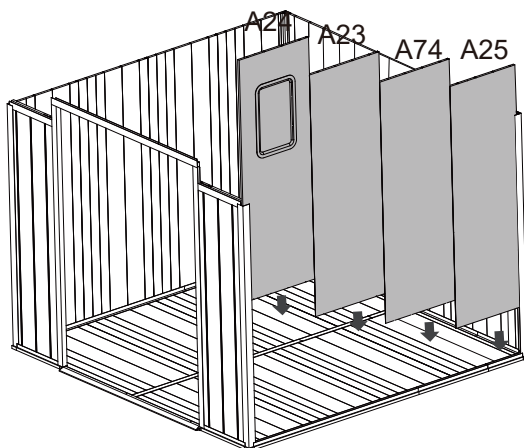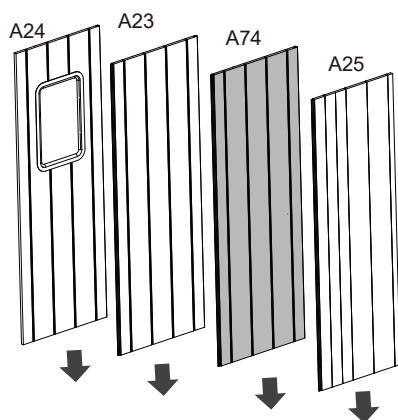


32



Φ5X16
D65/D88 (x14)





Electric
Drill



8x8 Usage D65(X14)

8x10 Usage D65(X16)

8x12 Usage D65(X18)

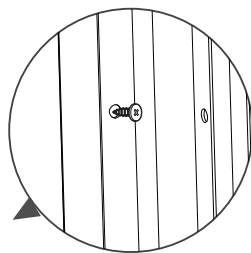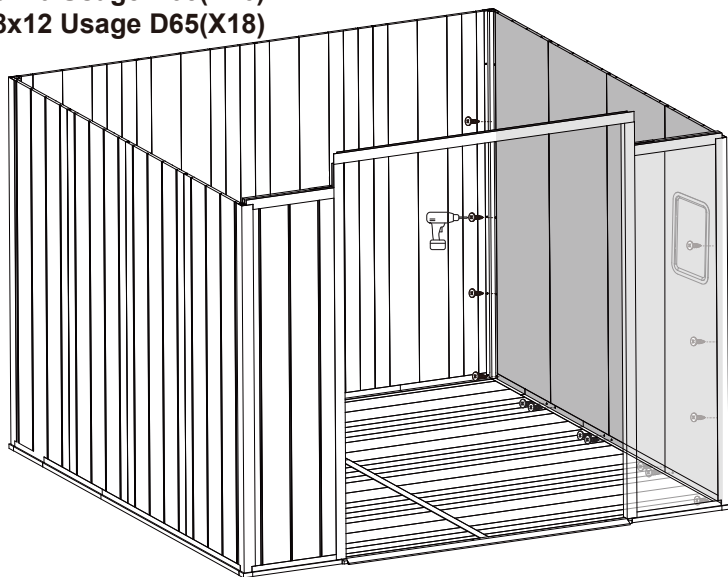

33



B26(x1)






B27 (x1)



B28(x1)



Ladder

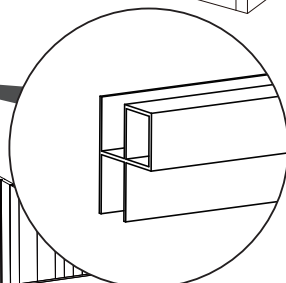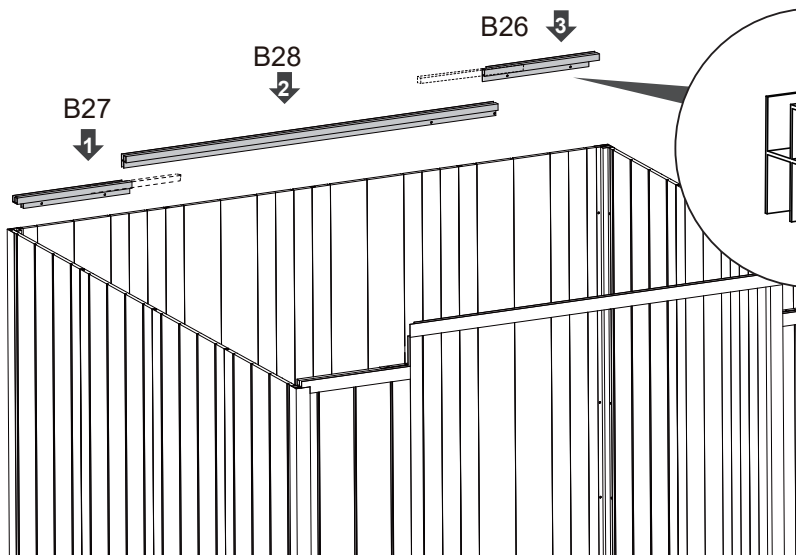

Installation in
order from
left to right.

34






Φ4X16
D68(x12)



Electric
Drill



Ladder

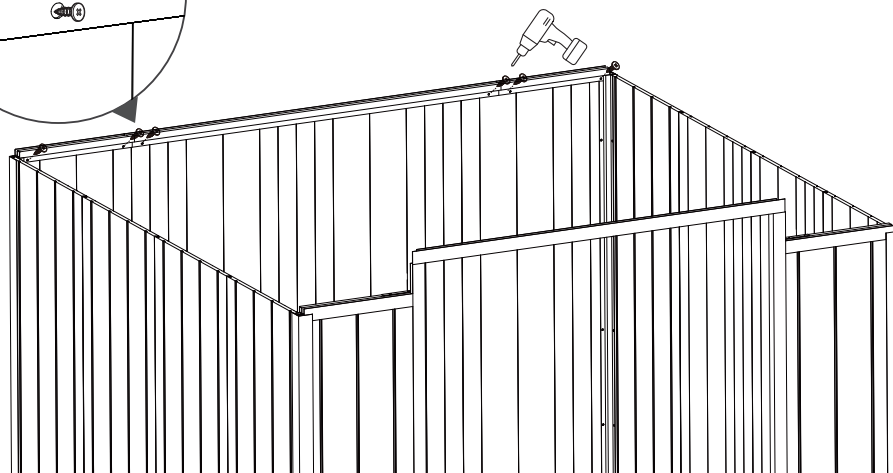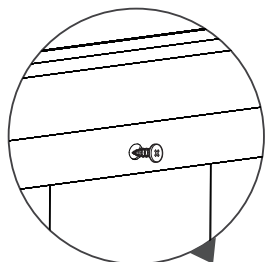

35



B29(x1)



B31(x1)



B75(x1)



Cork
Hammer





Ladder





8x8 Usage B75(X1)

8x10 Usage B75(X2)

8x12 Usage B75(X3)

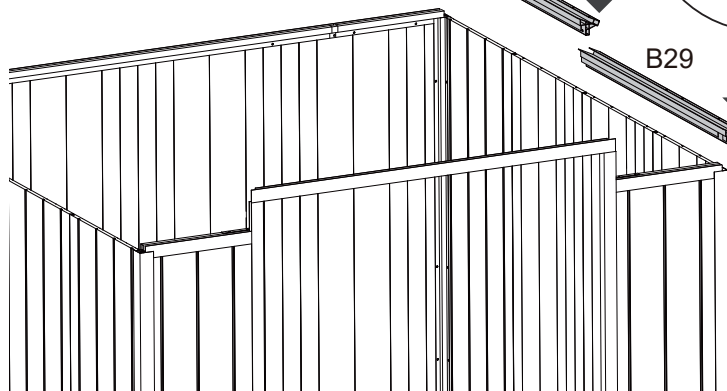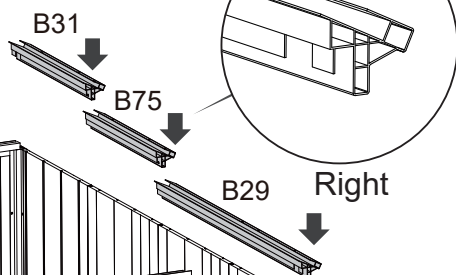


36






8x8 Usage B75(X1)

8x10 Usage B75(X2)

8x12 Usage B75(X3)

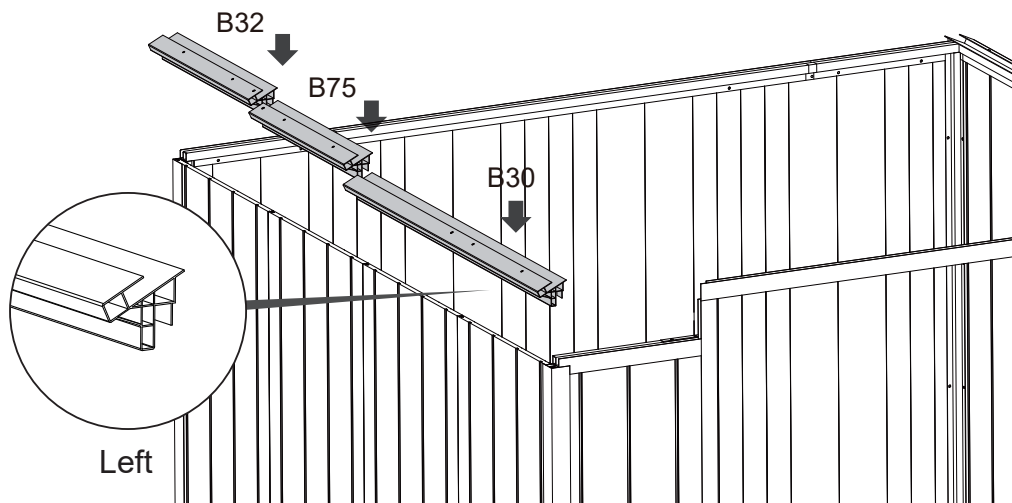

37

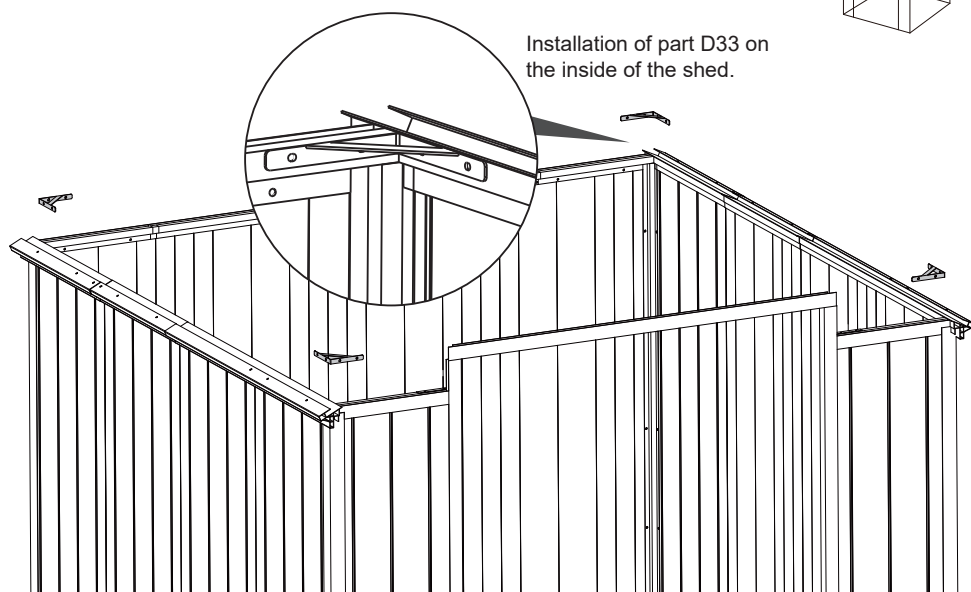

38





Φ4X16
D68(x16)



Electric
Drill



Ladder

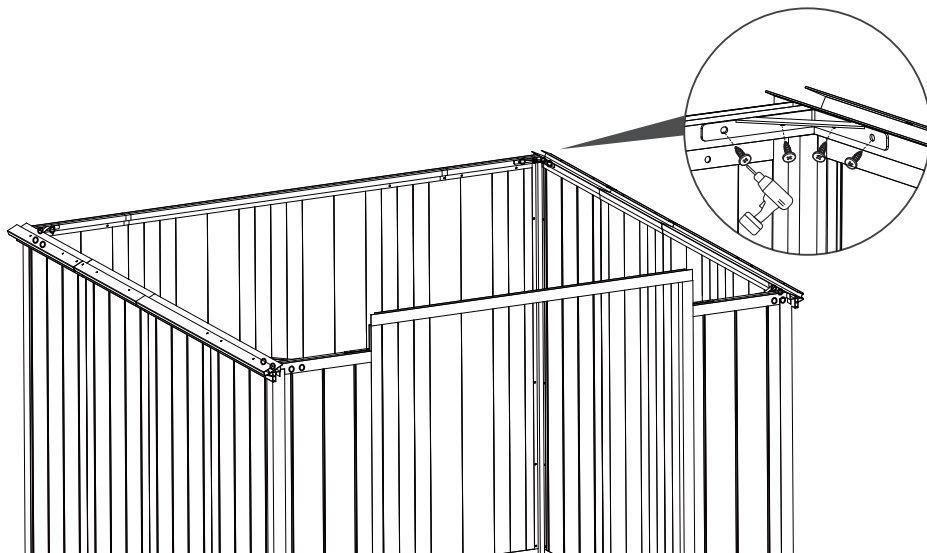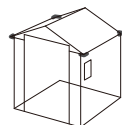

39



D34/D76(x6)




D35/D77(x6)



D69 (X1)





Ladder



8x8 Usage D34/D76 (X6) D35/D77 (X6)

8x10 Usage D34/D76 (X8) D35/D77 (X8)

8x12 Usage D34/D76 (X10) D35/D77 (X10)

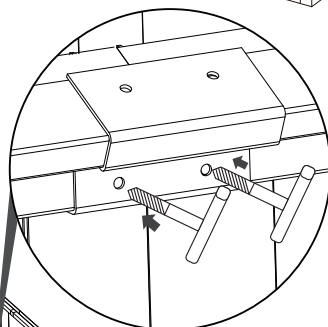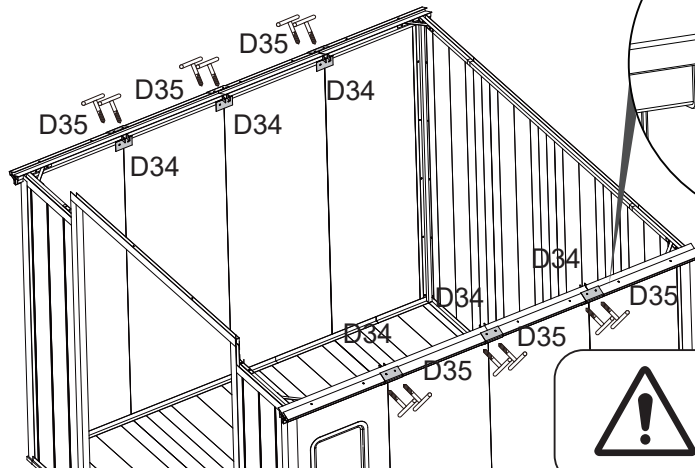

Manually drill screw holes



BE CAREFUL

The hole should be drilled
between two plates

40



D64/D87(x12)




Ladder



Small Wrench




Allen key





8x8 Usage D64/D87(X12)

8x10 Usage D64/D87(X16)

8x12 Usage D64/D87 (X20)

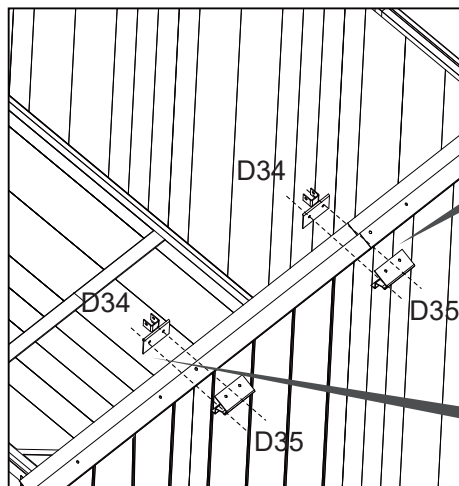

Parts D34 and D35 need to be aligned, they use the same screw.

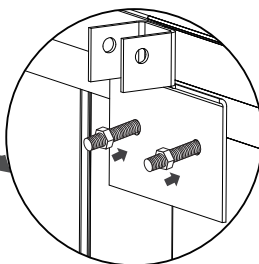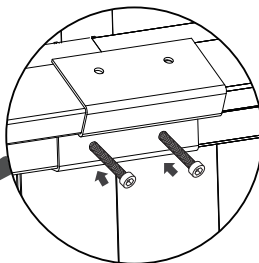

41



D36/D78 (x6)



D39/D81(X3)




D64/D87(x12)



Small Wrench




Allen key



8x8 Usage D36/D78 (X6) D39/D81(X3) D64/D87(X12)

8x10 Usage D36/D78 (X8) D39/D81(X4) D64/D87(X16)

8x12 Usage D36/D78 (X10) D39/D81 (X5) D64/D87 (X20)

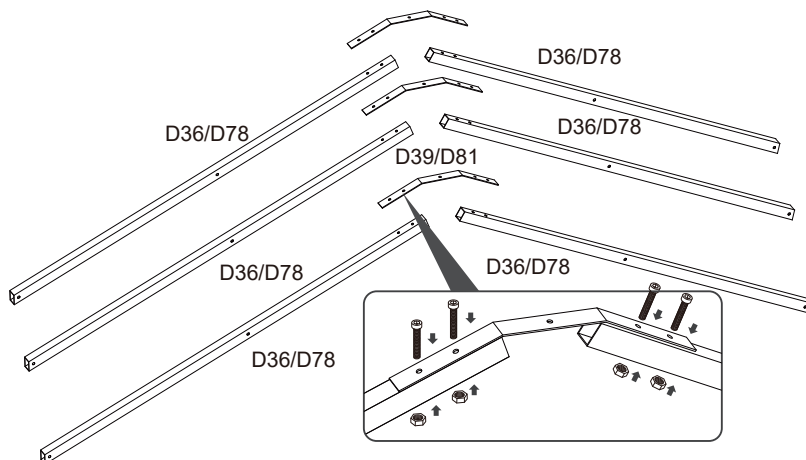

42



D38/D80 (x3)



D64/D87 (x6)



Small
Wrench




Allen
key



8x8 Usage D38/D80 (X3) D64/D87 (X6)

8x10 Usage D38/D80 (X4) D64/D87 (X8)

8x12 Usage D38/D80 (X5) D64/D87 (X10)

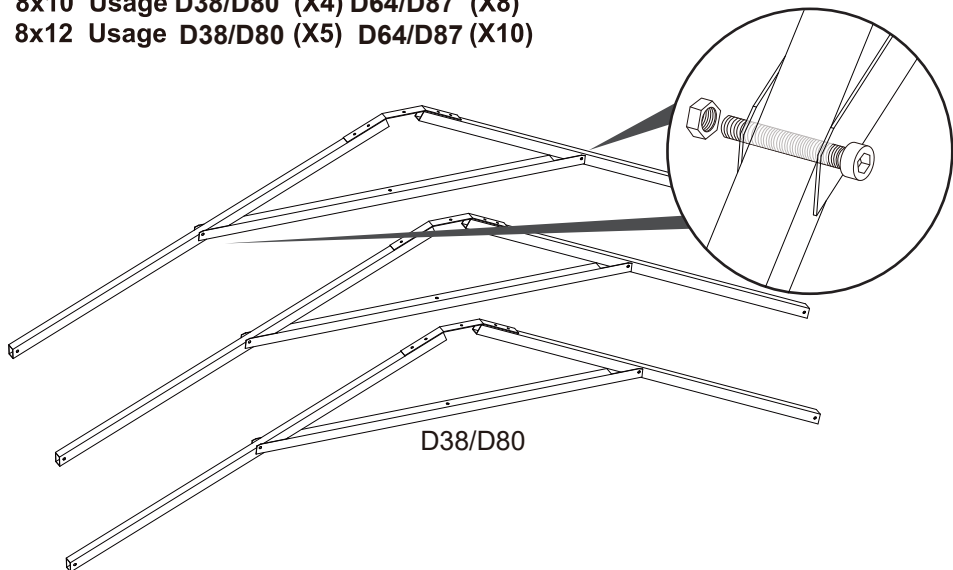

D38/D80

43



D64/D87 (x6)




Small
Wrench



Allen
key




Ladder





8x8 Usage D64/D87 (X6)

8x10 Usage D64/D87 (X8)



8x12 Usage D64/D87 (X10)

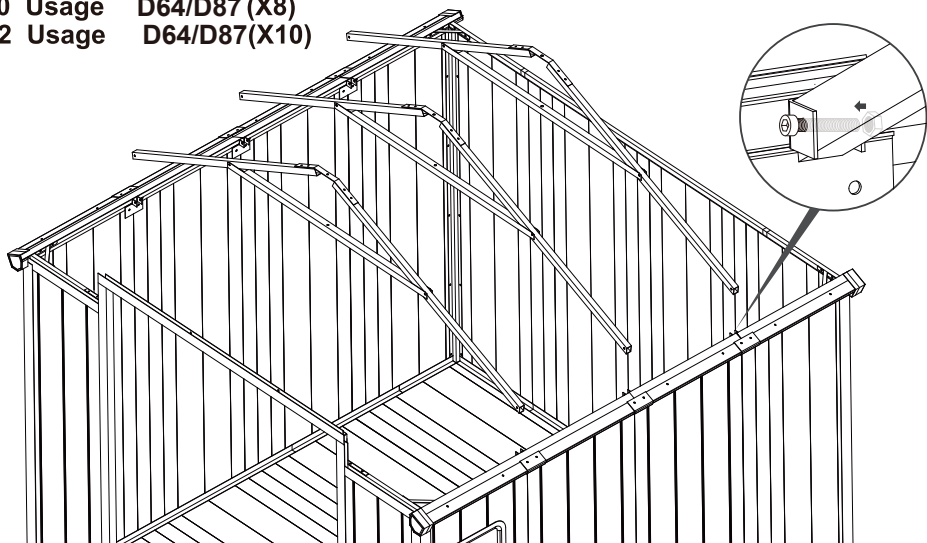

44

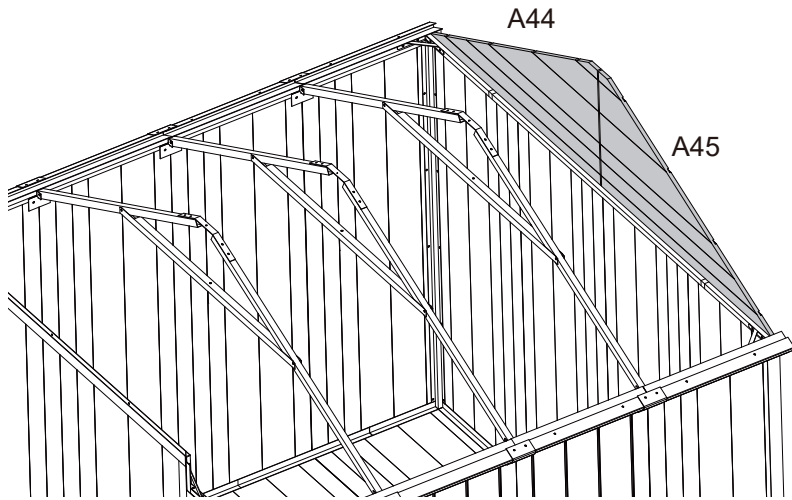

45

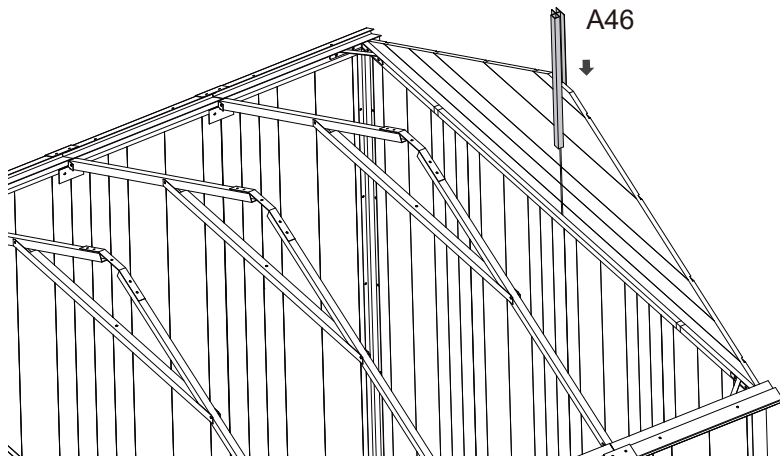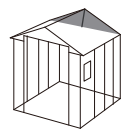

46





D65/D88(x2)



Electric Drill



Ladder

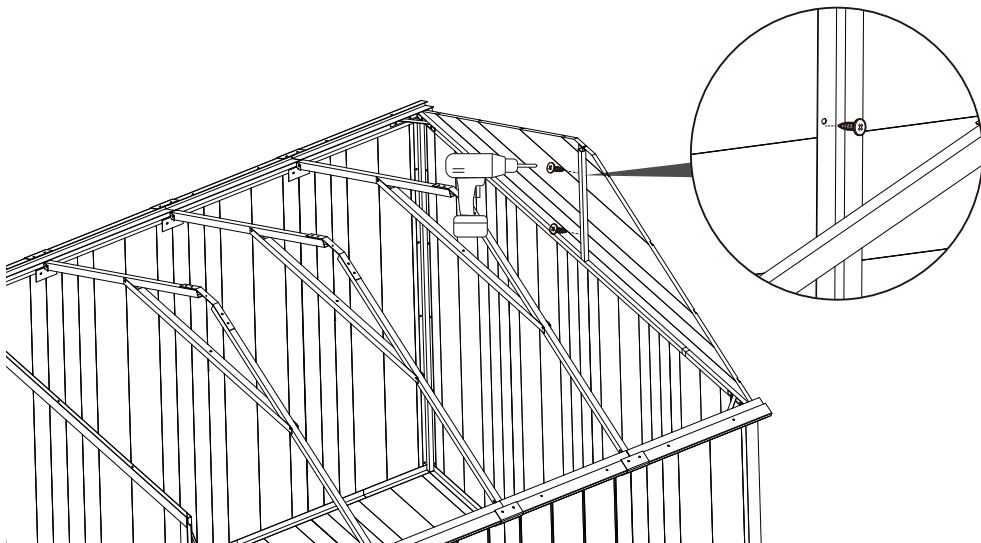

47



A43(x1)



C66(x1)





Φ5X16

D65 (x6)




Electric Drill

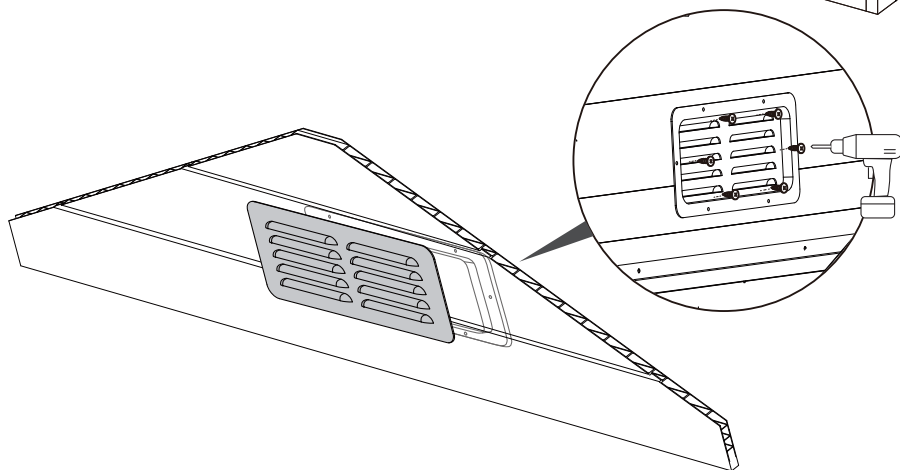

48



A41(x1)





A42(x1)



A43(x1)



Ladder

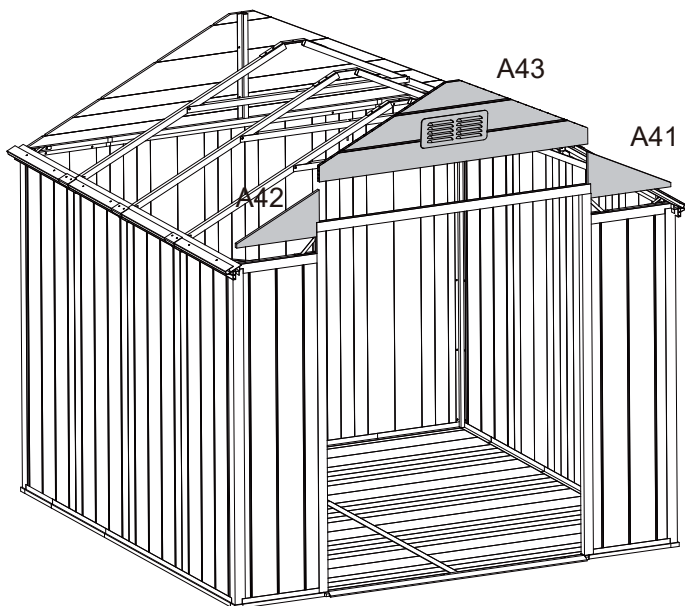

49



A47(x1)






Cork Hammer



Ladder



Double

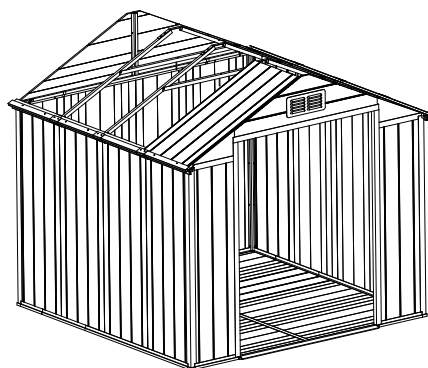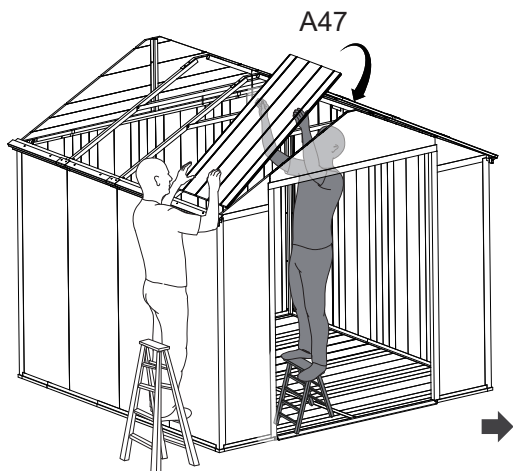

50



A48(x1)






Cork Hammer



Ladder



Double

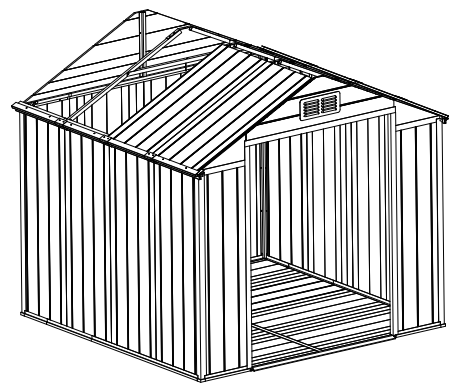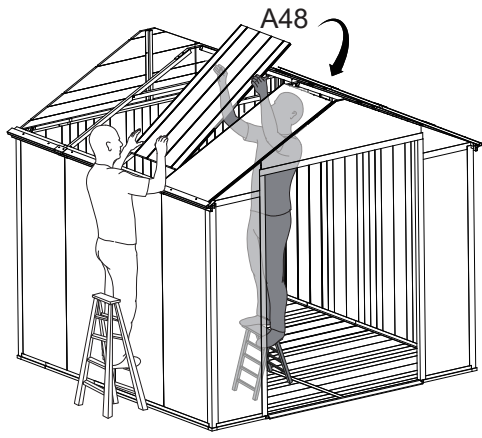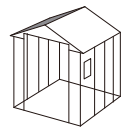

51



A83(x1)





Cork Hammer




Ladder



Double

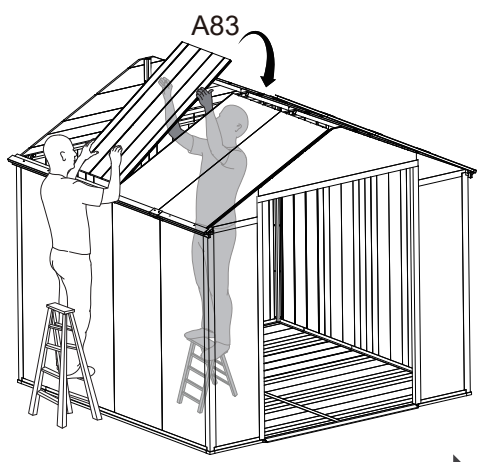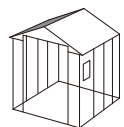

8x8 Usage A83(X1)
8x10 Usage A83(X2)
8x12 Usage A83(X3)

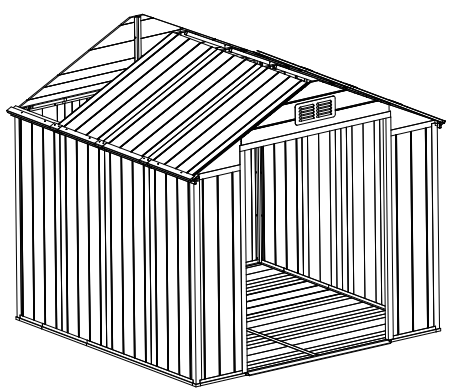

52



A48(x1)






Cork
Hammer



Ladder



Double

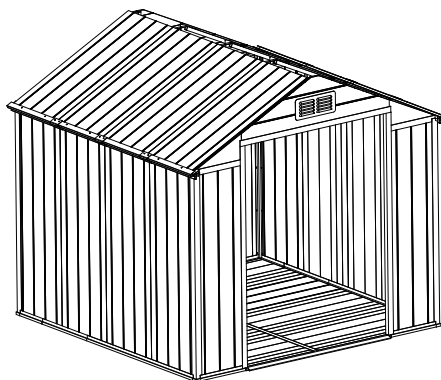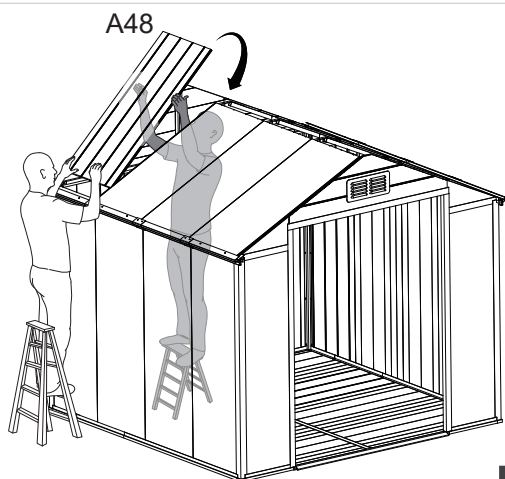

53



A47(x1)






Cork
Hammer



Ladder



Double

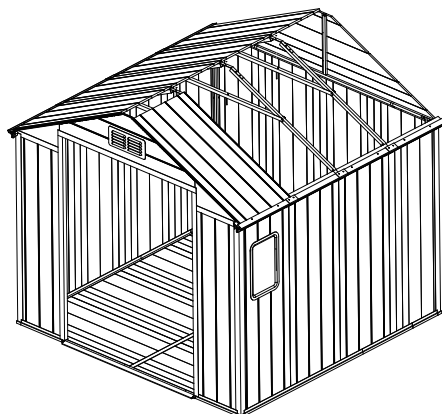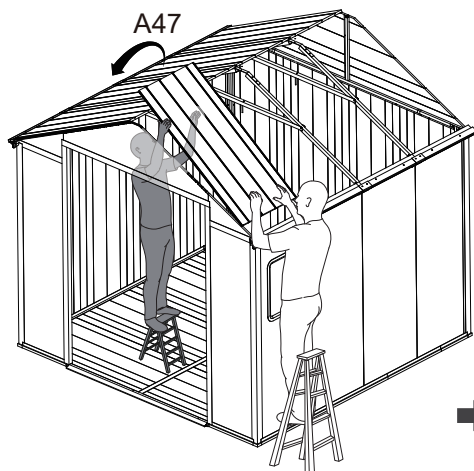

54



A48(x1)






Cork Hammer



Ladder



Double

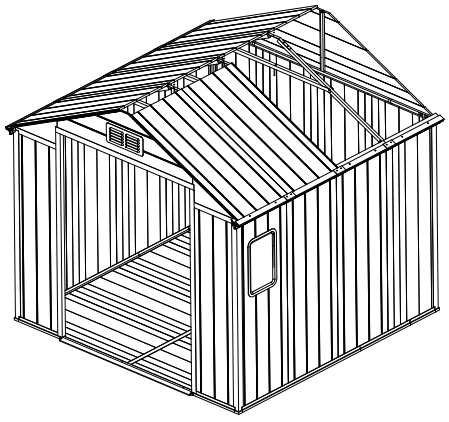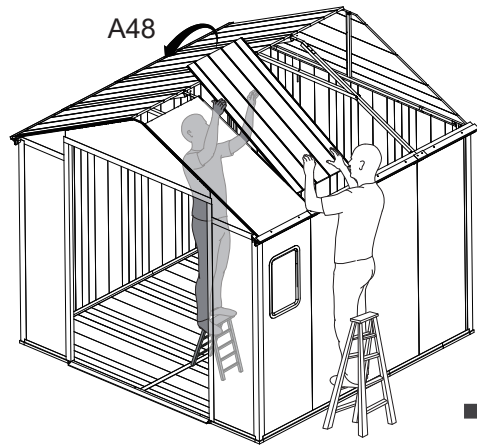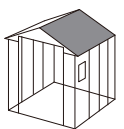

55



A83(x1)




Cork Hammer




Ladder




Double

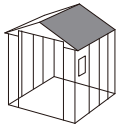

A83

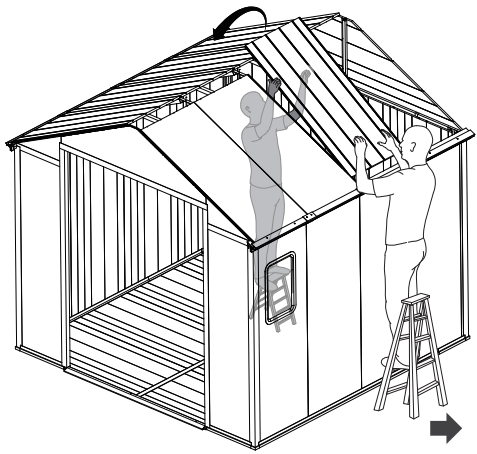

8x8 Usage A83(X1)
8x10 Usage A83(X2)
8x12 Usage A83(X3)

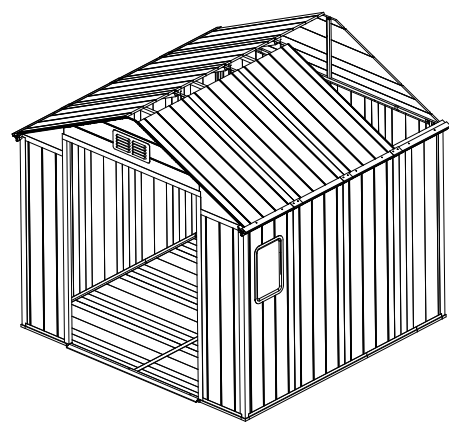

56



A48(x1)





Cork
Hammer



Ladder



Double

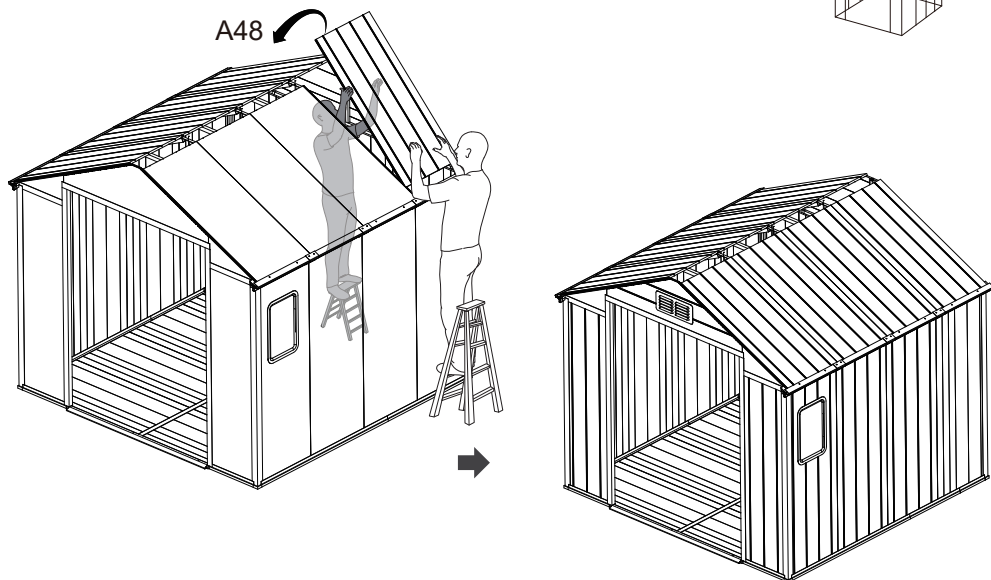

57



Φ5X16


D65/D88 (x12)



Electric
Drill




Ladder



8x8 Usage D65/D88 (X12)

8x10 Usage D65/D88 (X16)

8x12 Usage D65/D88 (X20)

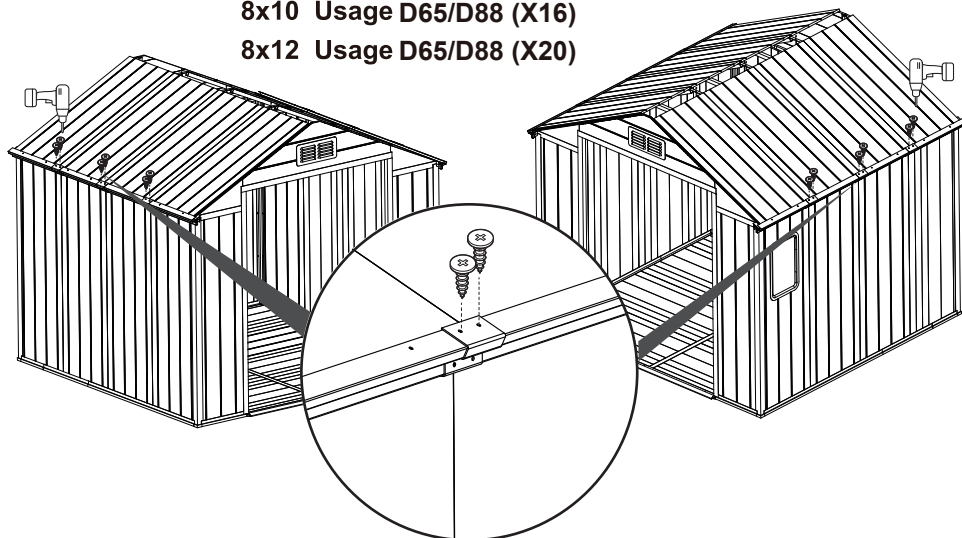

58

B49(x2)

B50 (x2)


B84 (x2)



Cork
Hammer




Ladder



8x8 Usage B84(X2)

8x10 Usage B84(X4)

8x12 Usage B84(X6)

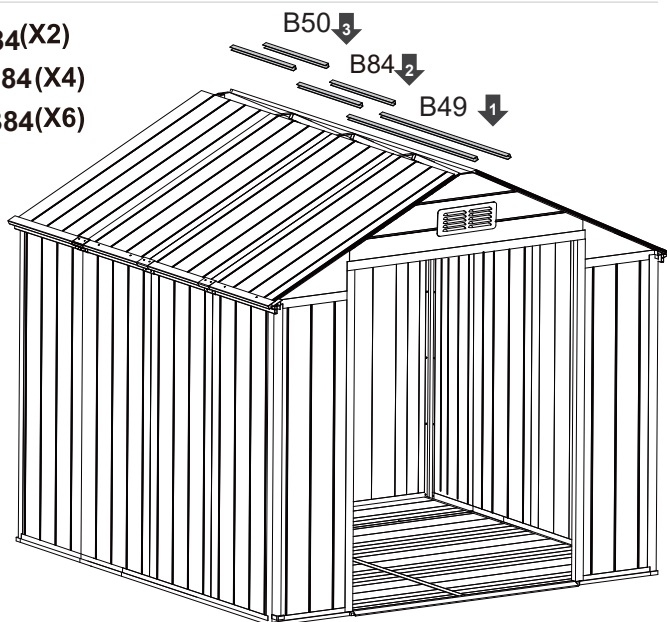

59



Φ5X16


D65/D88 (x14)



Electric
Drill




Ladder



8x8 Usage D65/D88 (X14)

8x10 Usage D65/D88 (X18)

8x12 Usage D65/D88 (X22)

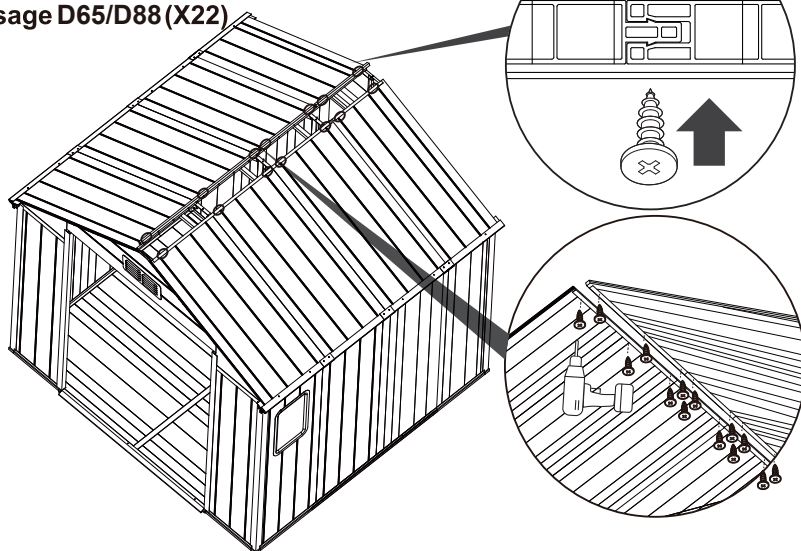

60



B51(x2)





B52(x2)



Cork
Hammer



Ladder

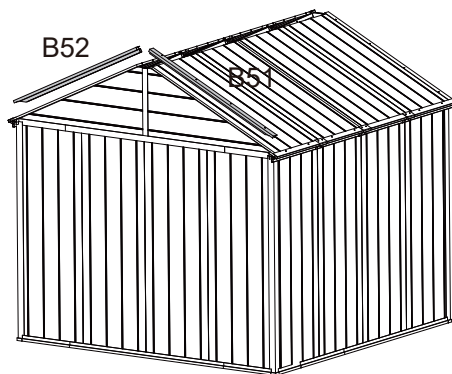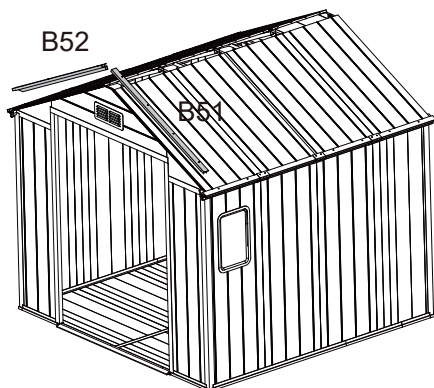

61





Φ5X16
D65/D88(x16)



Electric
Drill



Ladder

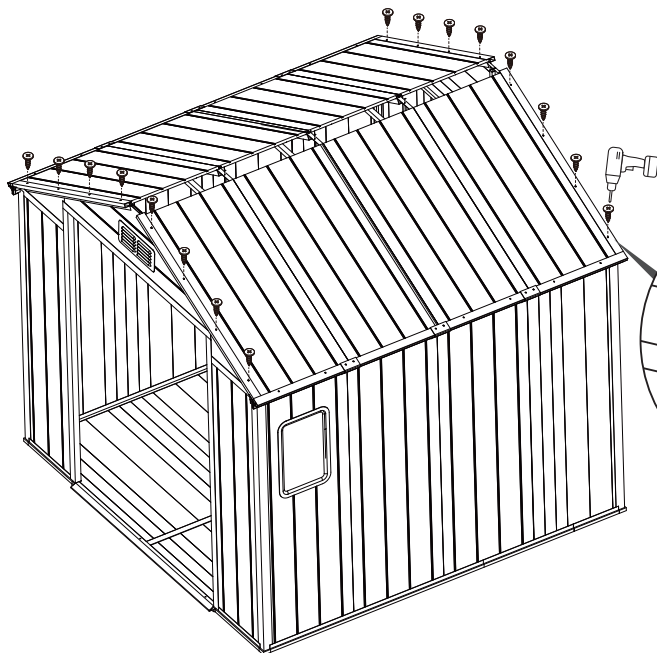

62



C53 (x2)




C54 (x2)



Cork
Hammer



Ladder




C53

C54

C54

C53

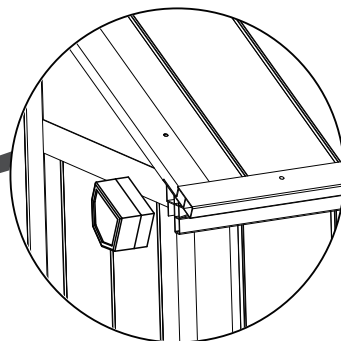

63






Φ5X16
D65/D88 (x4)



Electric
Drill



Ladder

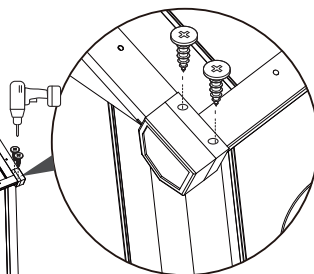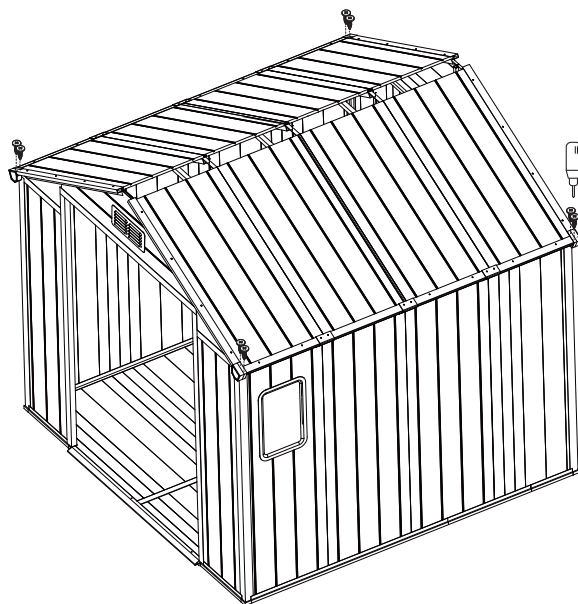

64



D55(x1)




D85 (x1)



D40/D82 (x3)





D64/D87 (x2)



8x8 Usage D85(X1)

8x10 Usage D85(X2)


8x12 Usage D85(X3)

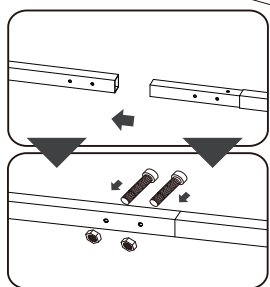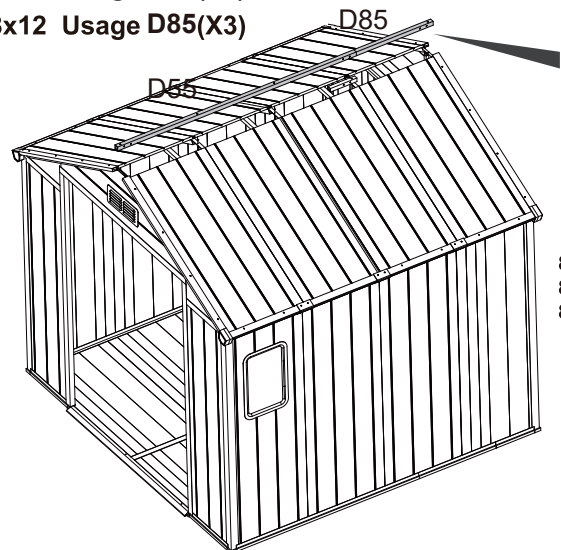

8x8 Usage D40/D82(X3) D64/D87(X2)

8x10 Usage D40/D82 (X4) D64/D87(X4)

8x12 Usage D40/D82 (X5) D64/D87(X6)

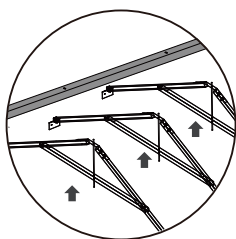

65




C56(x1)



C86 (x1)




Ladder



8x8 Usage C86(X1)

8x10 Usage C86(X2)

8x12 Usage C86(X3)

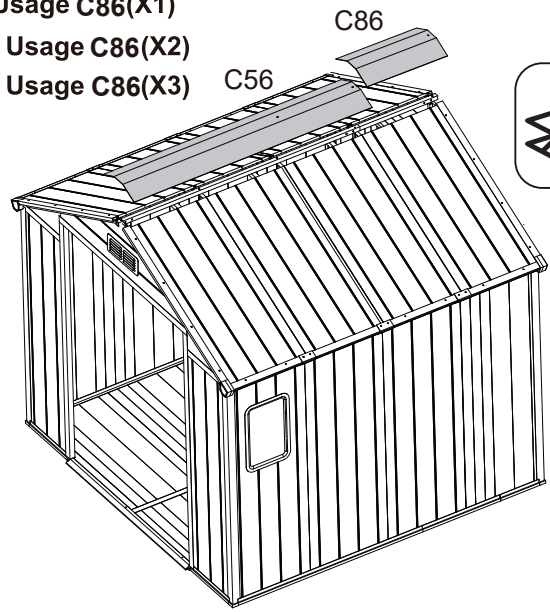

BE CAREFUL

The film needs to be torn off before installation



66



C57(x2)



Ladder

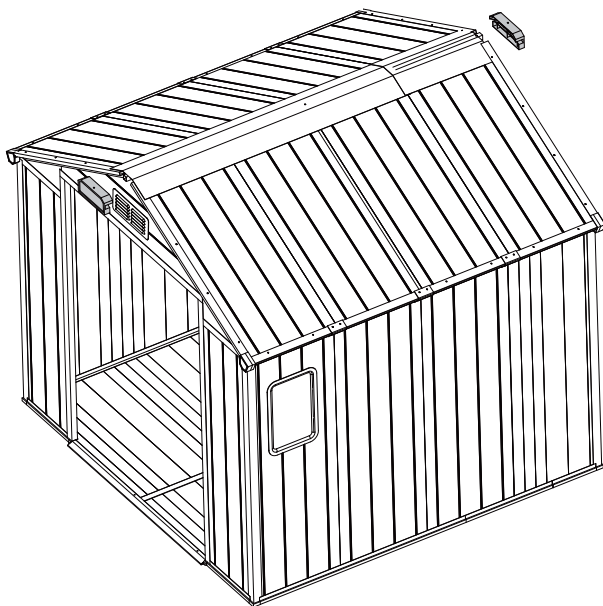

67





$\Phi 4 \times 16$
D68(x2)



Electric
Drill



Ladder

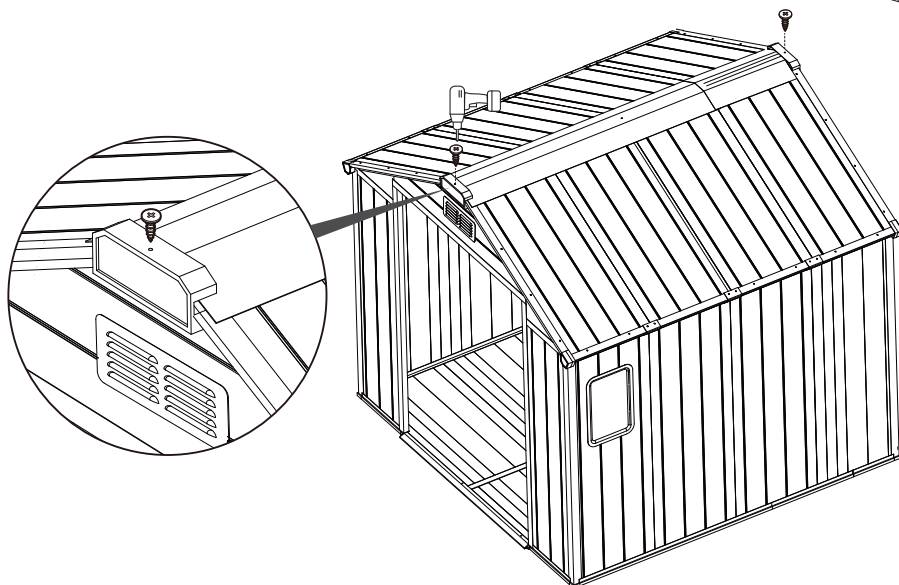

68




Φ4X16
D68/D89 (x45)



Electric
Drill




Ladder



8x8 Usage D68/D89 (X45)

8x10 Usage D68/D89 (X57)

8x12 Usage D68/D89 (X69)

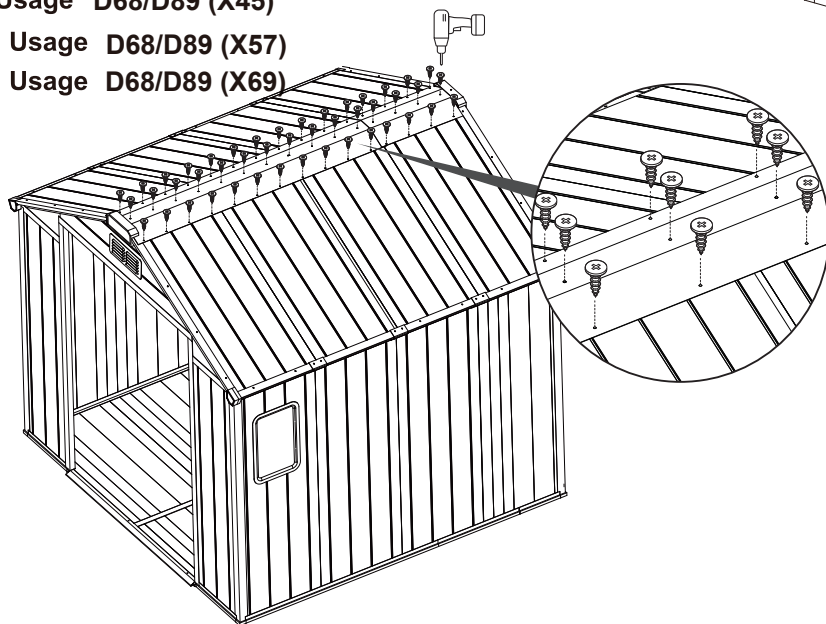

69





D63(x1)



Φ5X16
D65/D88 (x2)



Electric
Drill

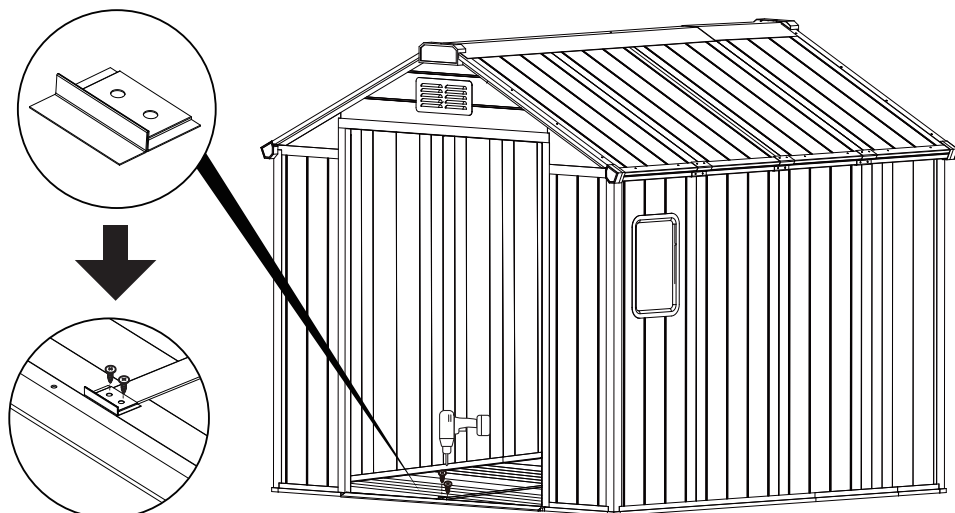

70



D62(x1)







D65/D88(x2)



Electric Drill



Ladder

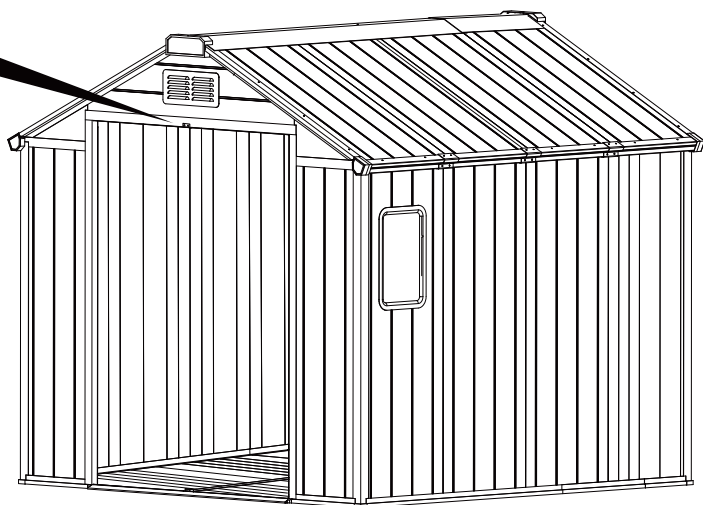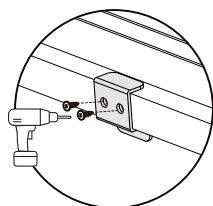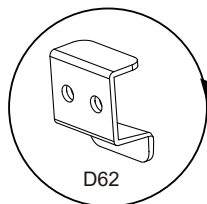

71



A58(x1)



A59 (x1)






Φ4X16

D68(x12)



Electric Drill

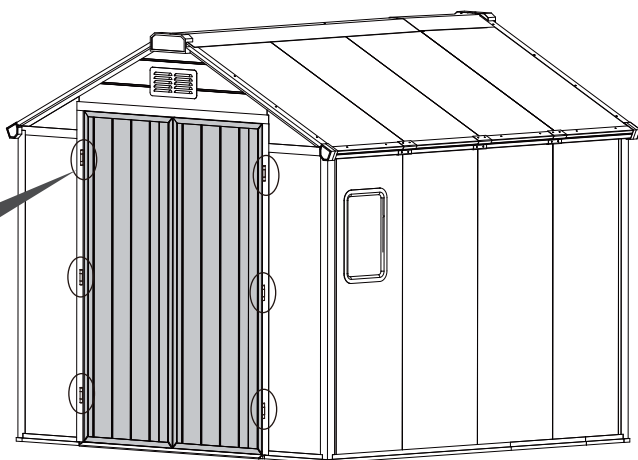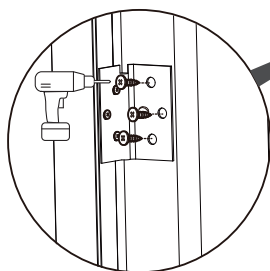

72



D60







D69(X1)



Small
Wrench



Allen
key

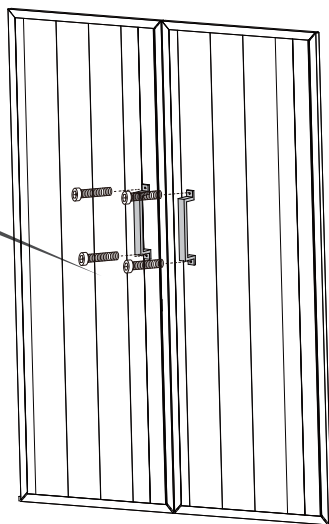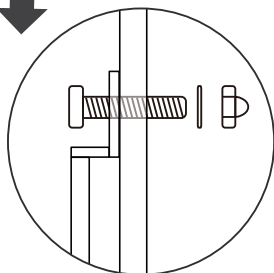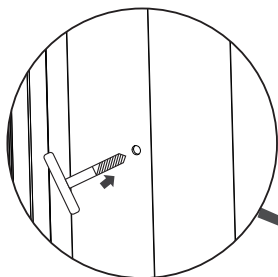

73



D61(x2)





Φ5X16


D65/D88(x4)



Electric
Drill

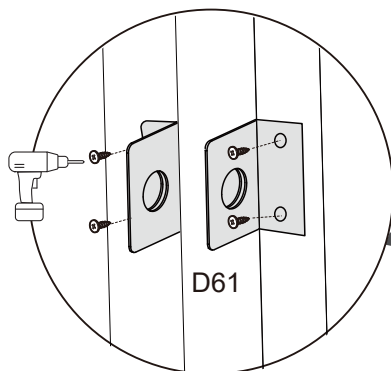

D61

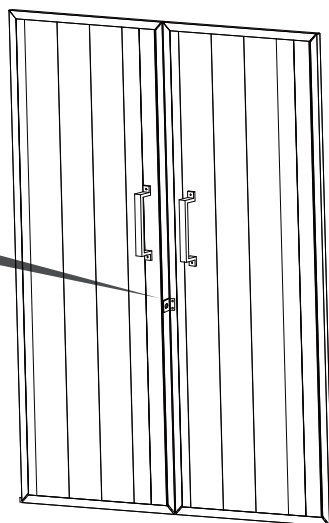

74



D70(x4)






Φ 4X30
D67(x12)


D90(x4)





Φ 10X100
D91(x4)

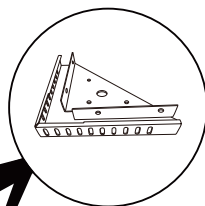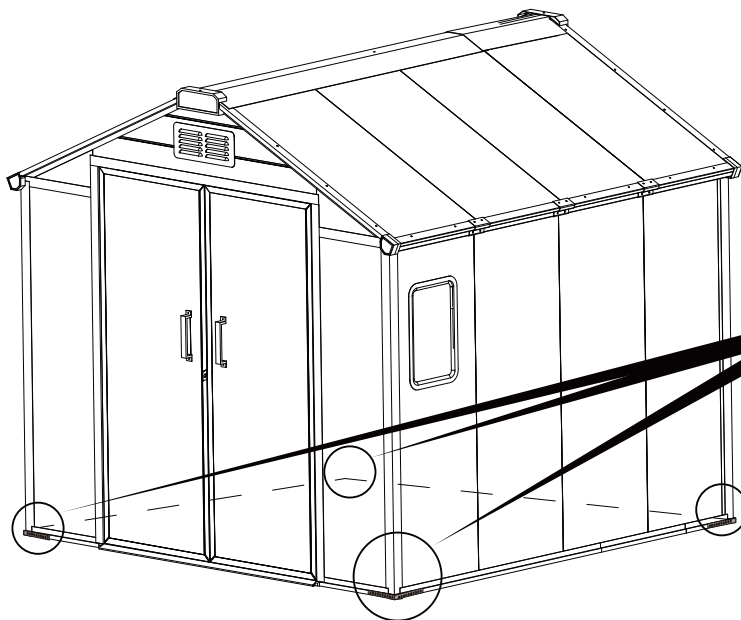



External Perspective

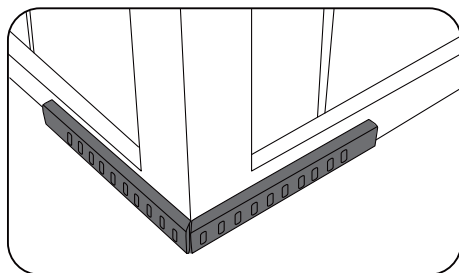

Internal Perspective

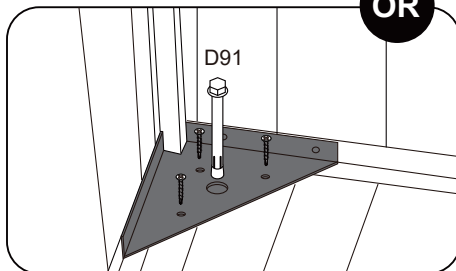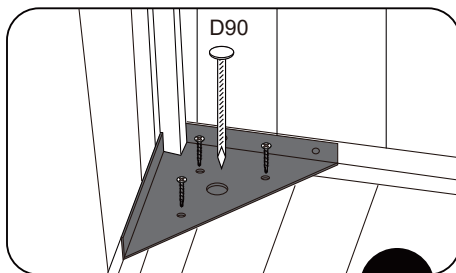

OR

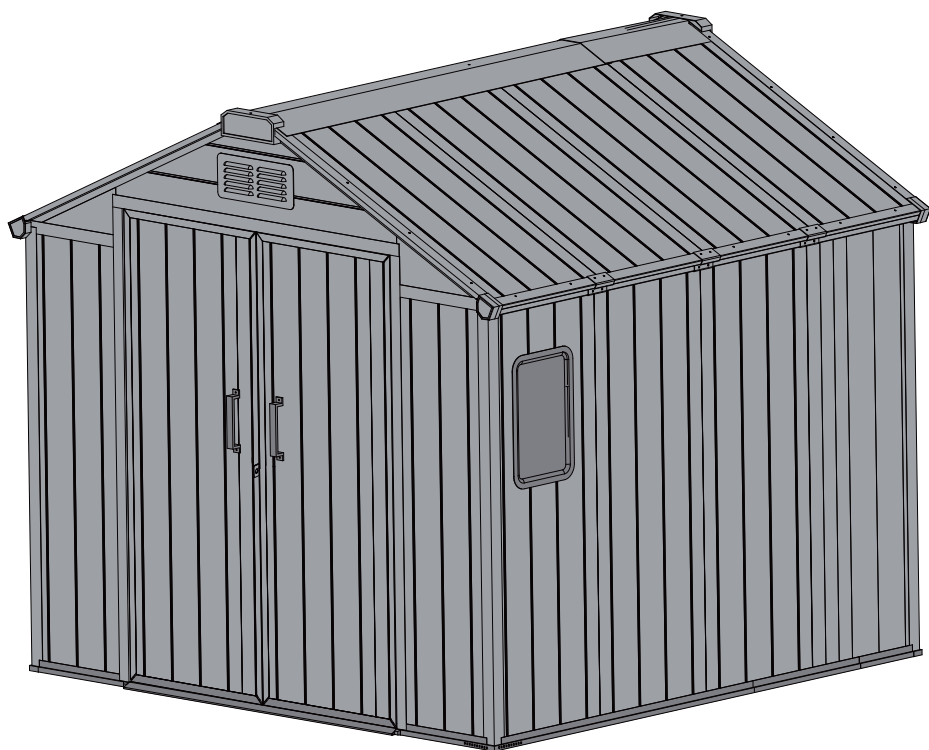

ARE AND SAFETY GUIDELINES

- The shed is intended for storage purposes only. It is not designed for habitation.
- It is strongly recommended to secure the shed to an immovable object or anchor to the ground by drilling holes in the shed floor (at the pre-marked locations) and inserting proper screws into the ground (screws are not included).
- Do not attempt assembly on windy or cold days.
- Periodically check the shed to ensure that it is stable and that the site is level.
- Be careful when handling parts with steel edges.
- When assembling or handling the shed, use only those tools listed in the user manual.
- Avoid using a lawnmower or mechanical scythe near the shed.
- Wear safety goggles and always follow the manufacturer's instructions when using power tools.
- Wash the shed with a garden hose or a mild detergent solution. Do not use a stiff brush or abrasive cleaners, including degreasers and oil- or acetone-based cleaning materials, as these may stain or damage the shed.
- Do not store hot items, such as recently used grills and blowtorches, and volatile chemicals in the shed.
- Avoid placing heavy items against the walls, as this may cause distortion.
- Keep the roof clear of accumulated snow and leaves. Large amounts of snow on the roof can damage the shed, making it unsafe to enter.
- Wind direction is an important factor to consider when determining the location of the shed. Reduce exposure to the wind, in general, and of the door side in particular. Keep doors closed and locked when the shed is not in use to prevent wind damage.
- Do not stand on the roof.
- Consult your local authorities to check if permits are required to erect the shed.



WARNING

DO NOT COVER