


Version:1.0

DJ503983 DJ504333

DJ503984 DJ504334

DJ503985 DJ504335

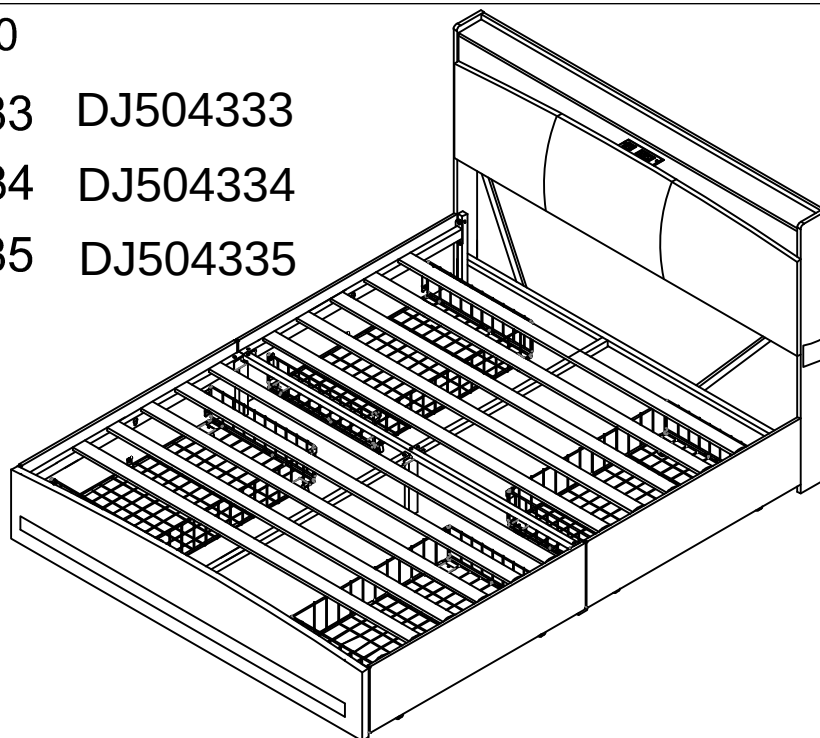


Note:























Should be assembled on flat ground to keep balance.



It needs at least two people to install.

Before starting the assembly, you must read the whole manual and follow the instructions.


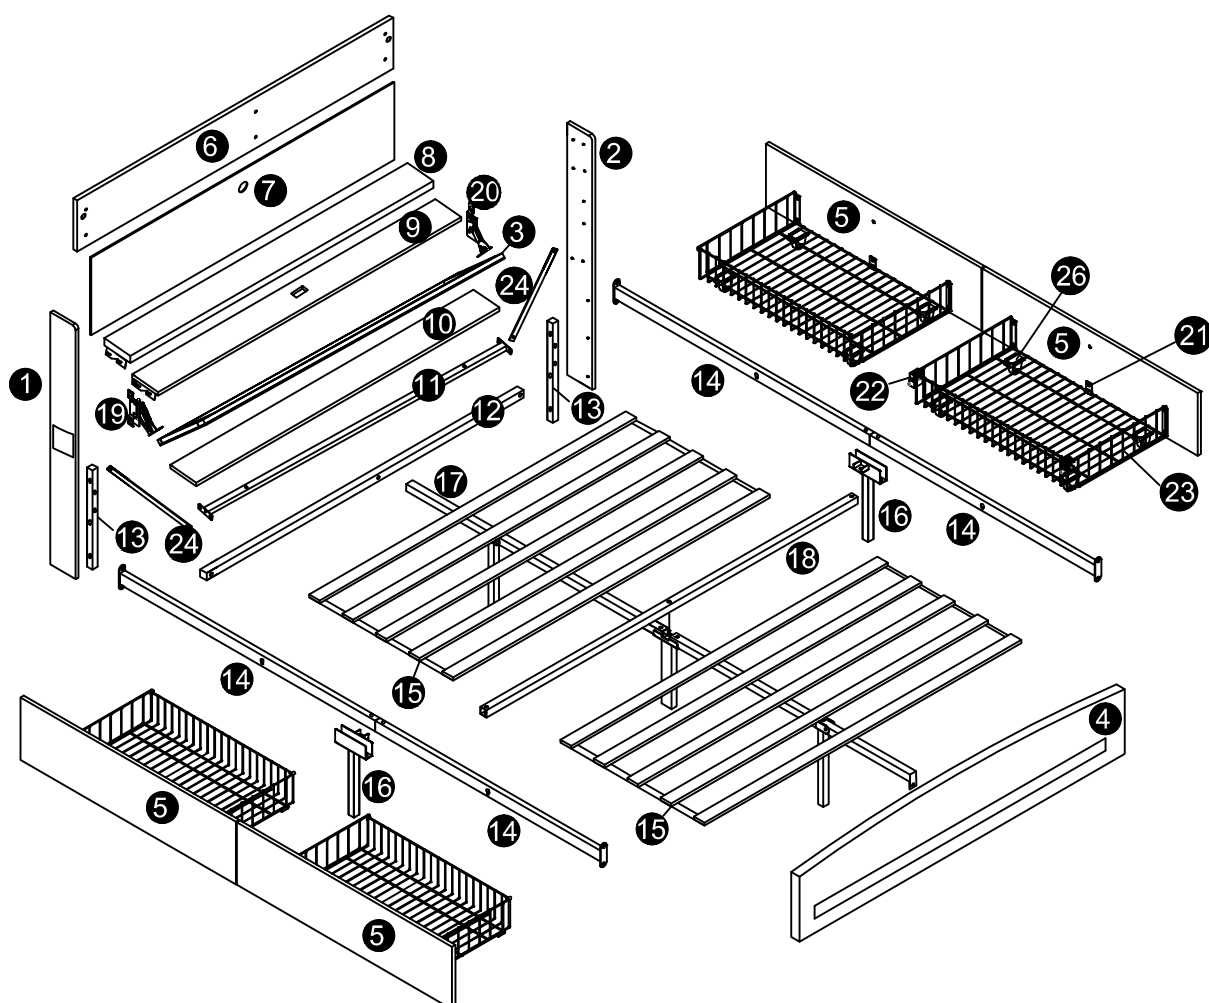


Part list

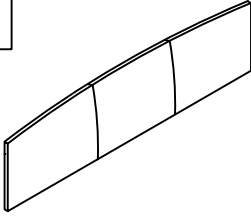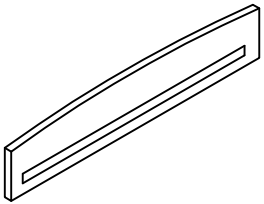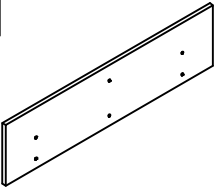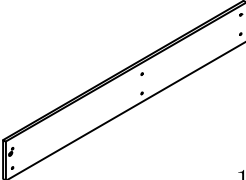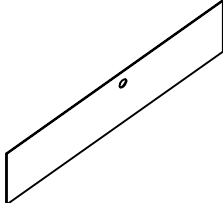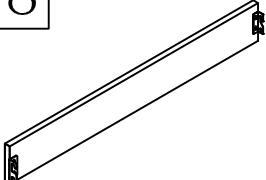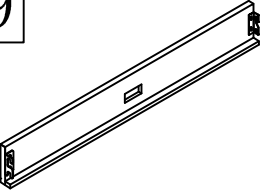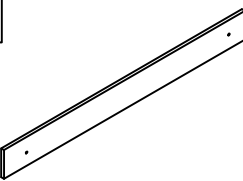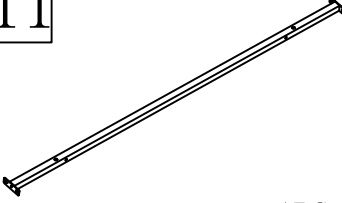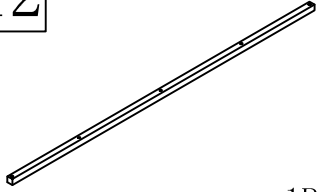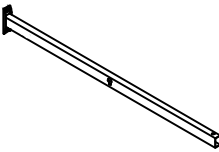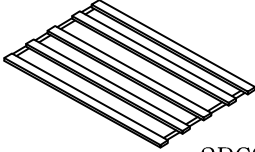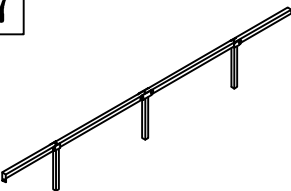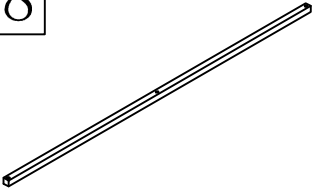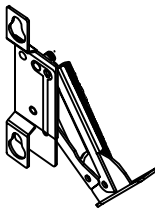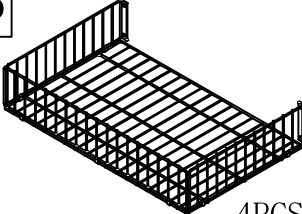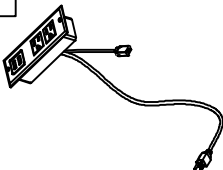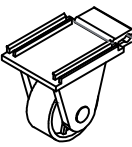1  1PC	2  1PC	3  1PC	4  1PC
5  4PCS	6  1PC	7  1PC	8  1PC
9  1PC	10  1PC	11  1PC	12  1PC
13  2PCS	14  4PCS	15  2PCS	16  2PCS
17  1PC	18  1PC	19  1PC	20  1PC
21  4PCS	22  8PCS	23  4PCS	24  2PCS
25  1PC	26  16PCS	27  Long 1PC	28  Short 1PC

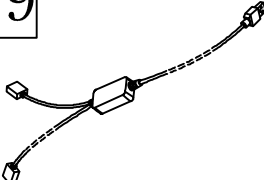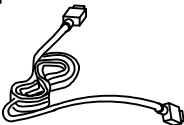
29		1PC
30		1PC
31		1PC
32		5PCS

Hardware list

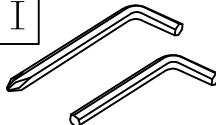A	 M8*50mm 6PCS	B	 M8*35mm 16PCS	C	 M8*15mm 18PCS	D	 M8*25mm 11PCS	E	 M6*12mm 22PCS
F	 M6*20mm 4PCS	G	 M4*12mm 3PCS	H	 M4*65MM 1PC	I	 M5*65MM 1PCS		


Step1

G		M4x12mm	2pcs
I		M5*65	1pc

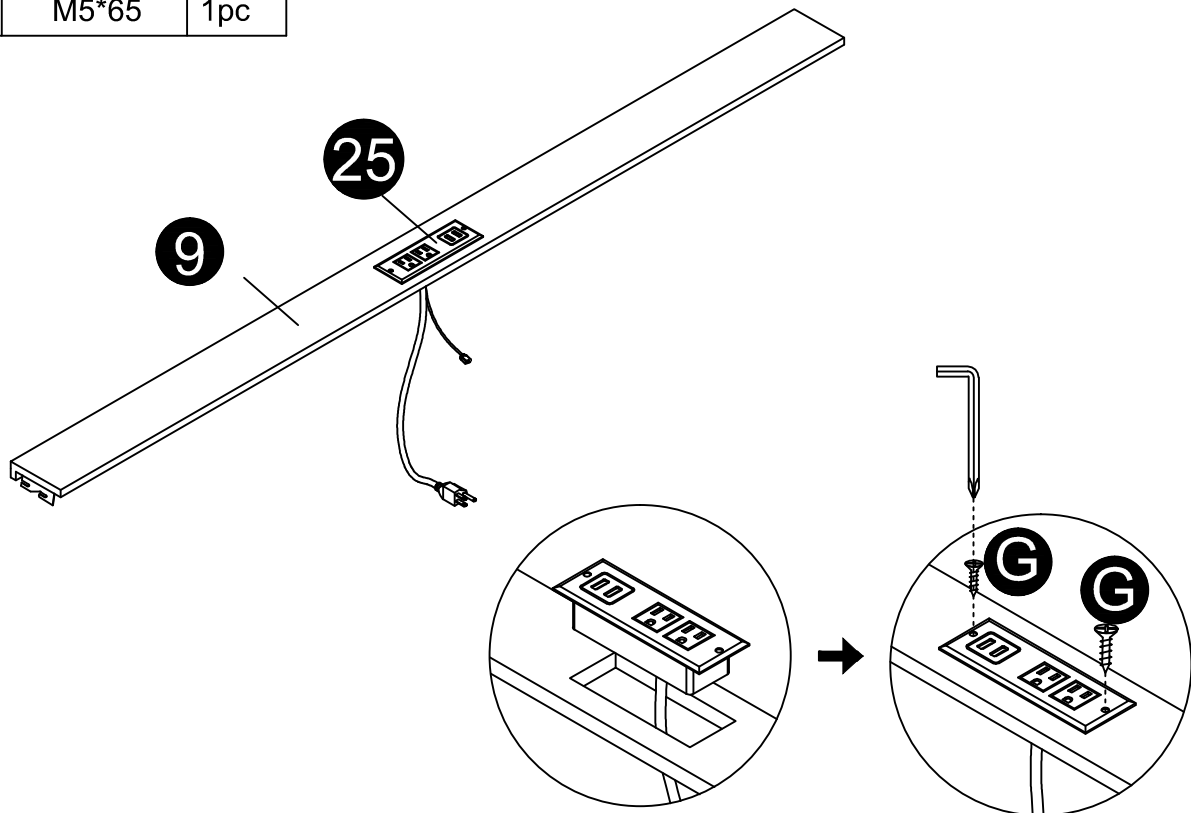

Step2

I		M5*65	1pc
---	---	-------	-----

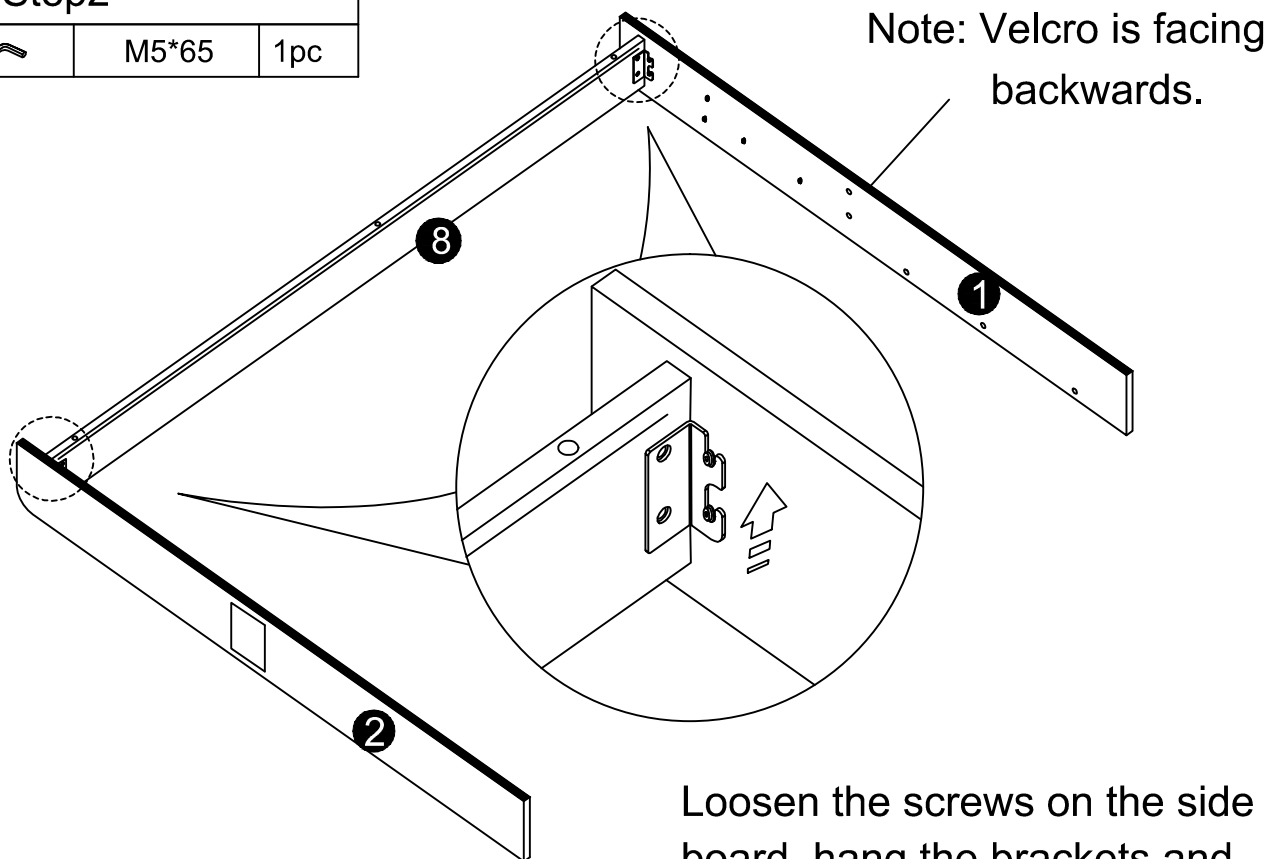

Loosen the screws on the side board, hang the brackets and tighten the screws.


Step3

I



M5*65MM

1pc

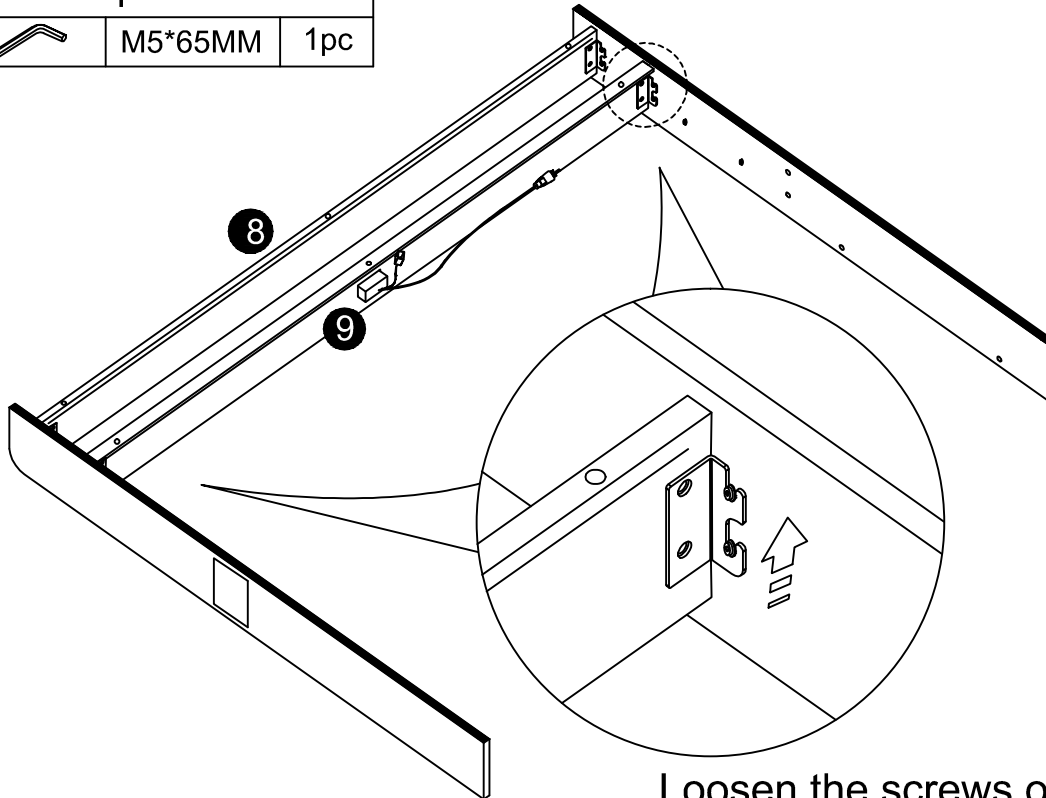

Loosen the screws on the side board, hang the brackets and tighten the screws.

Step4

C



M8*15mm

4pcs

B



M8*35mm


2pcs

I



M5*65MM

1pc

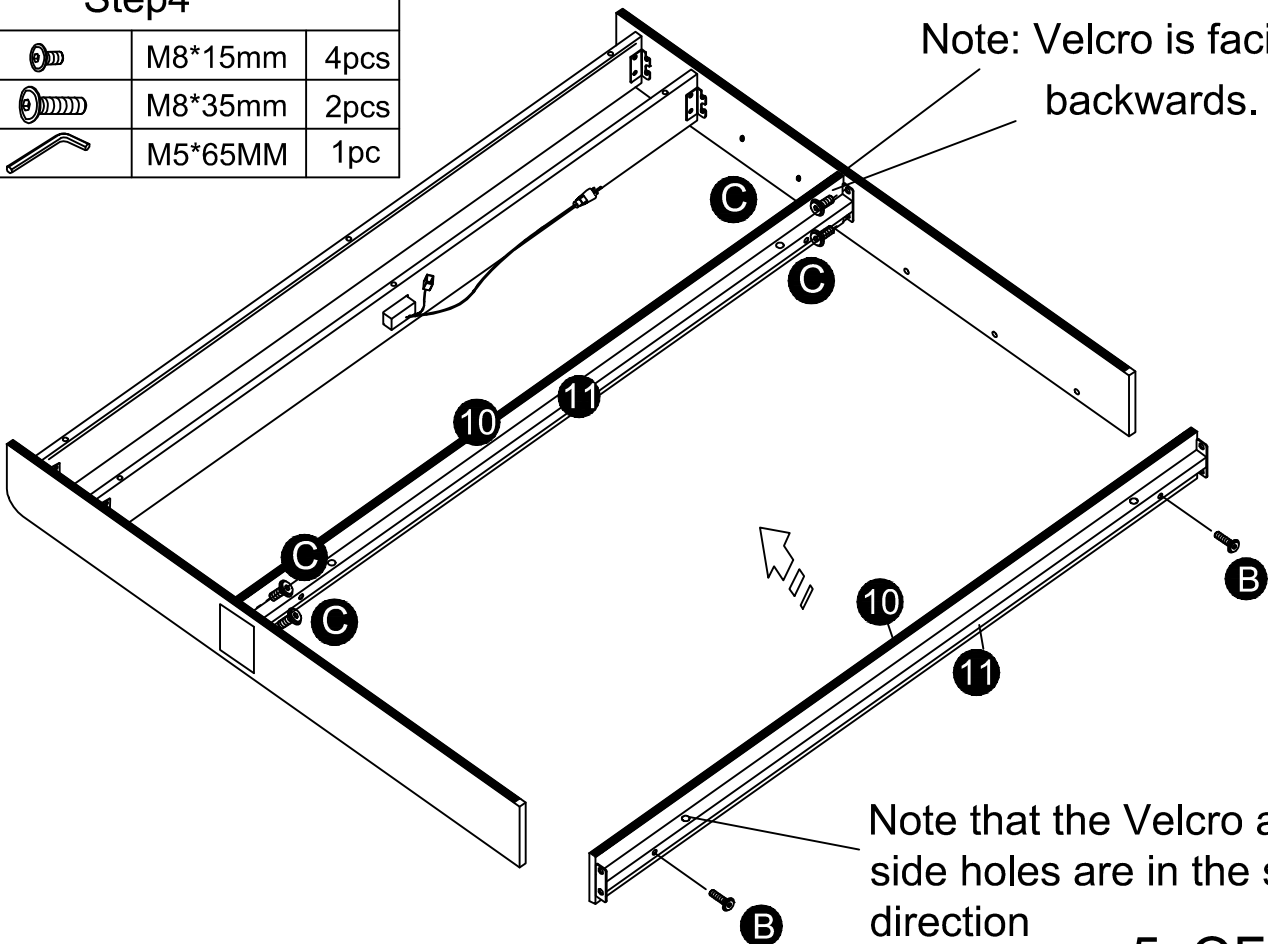


Note: Velcro is facing backwards.

Note that the Velcro and side holes are in the same direction

Step5


D		M8*25mm	6pcs
I		M5*65MM	1pc

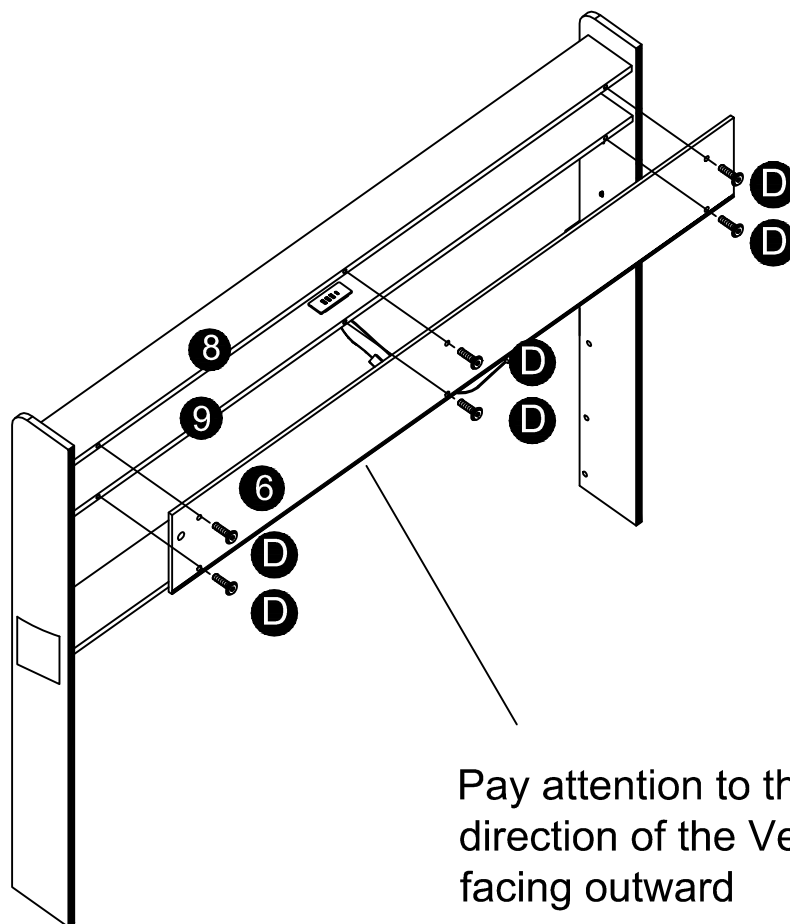


Pay attention to the direction of the Velcro facing outward

Step6

B		M8*35mm	6pcs
I		M5*65MM	1pc


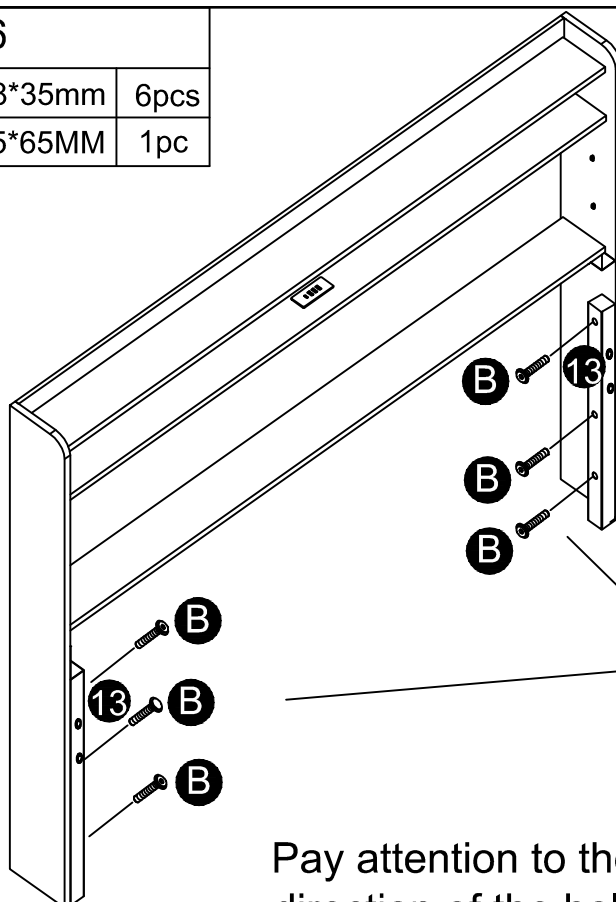


Pay attention to the direction of the hole. High below

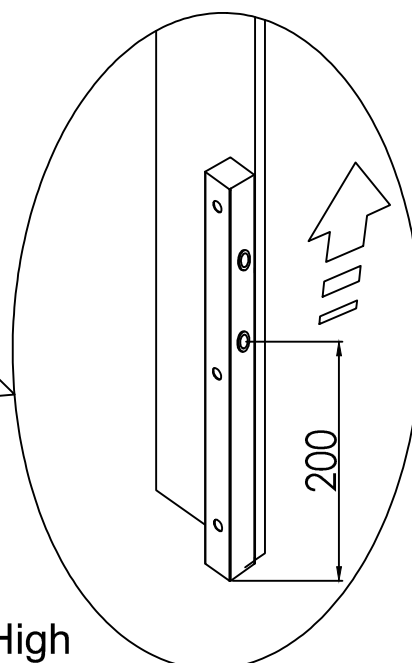

Step7



B		M8x35mm	2pcs
I		M5x65mm	1pc

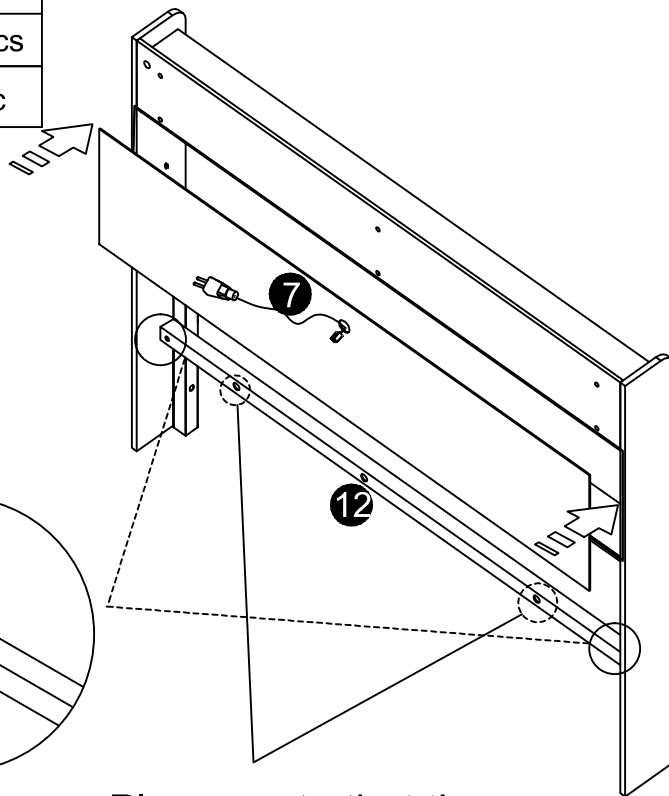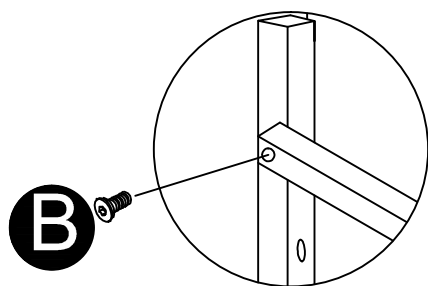

Please note that these two holes should be facing outward


Step8

D		M8x25mm	4pcs
I		M5x65mm	1pc

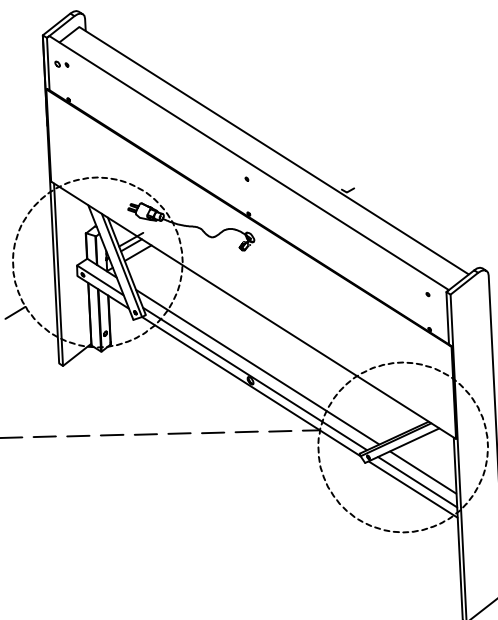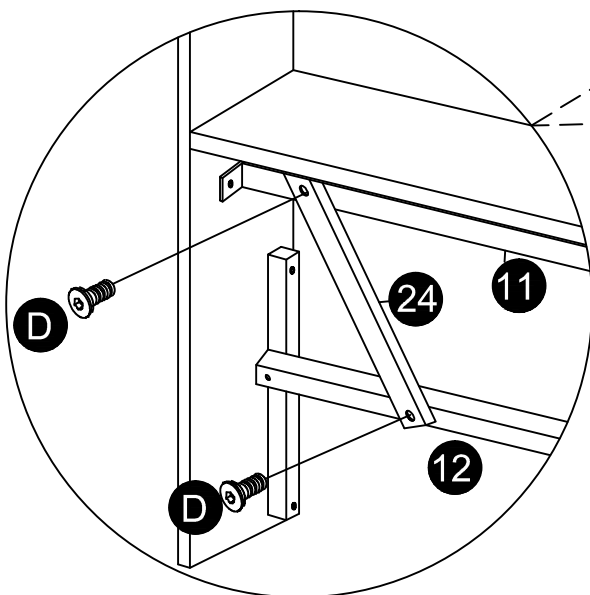

Step9

C		M8*15mm	4pcs
I		M5*65MM	1pc

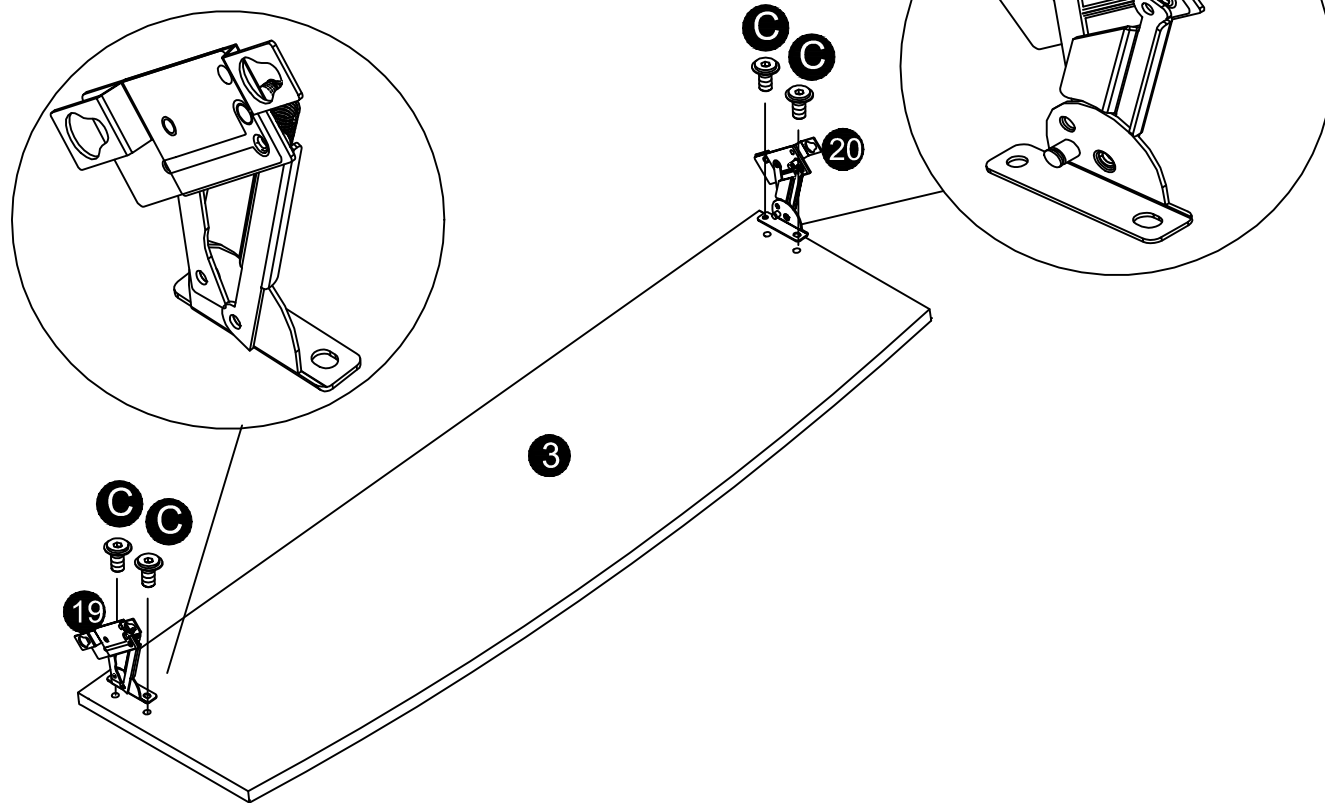


Step10


(F)		M5*65MM	1pc
-----	---	---------	-----



RECOMMEND 2 OR MORE ADULTS
FOR QUICKER ASSEMBLY

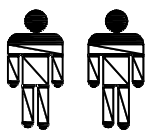




2PERS

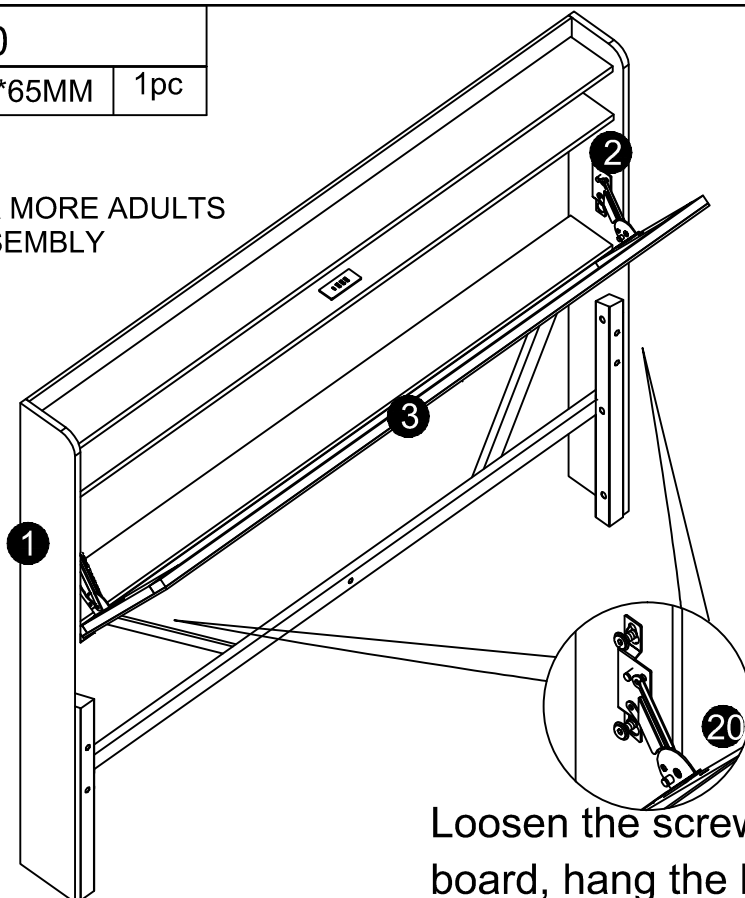

Loosen the screws on the side
board, hang the brackets and
tighten the screws.




Step11

A		M8x50mm	4pcs
I		M5x65mm	1pc

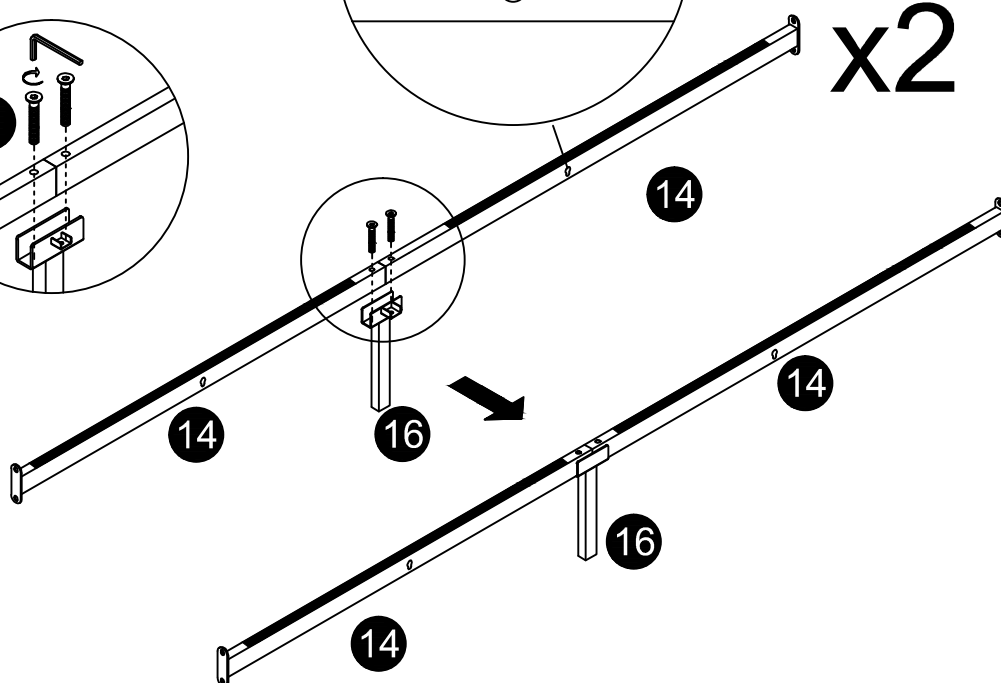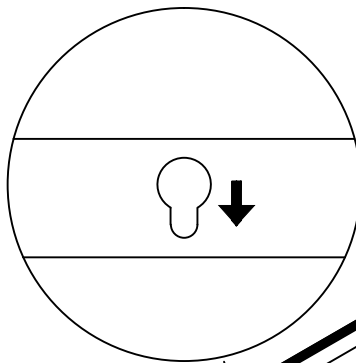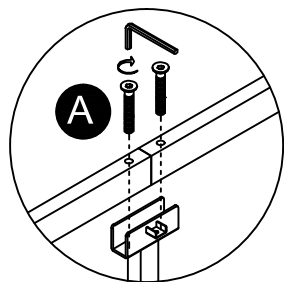


Step12

B		M8x35mm	2pcs
I		M5x65mm	1pc

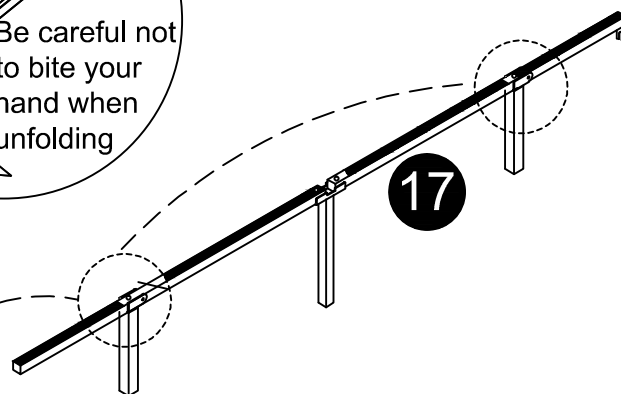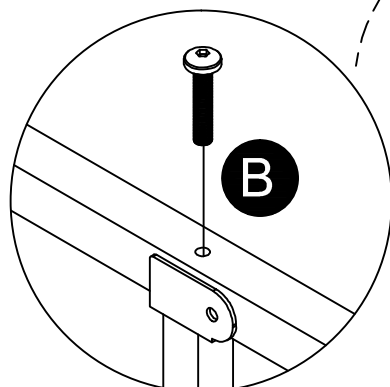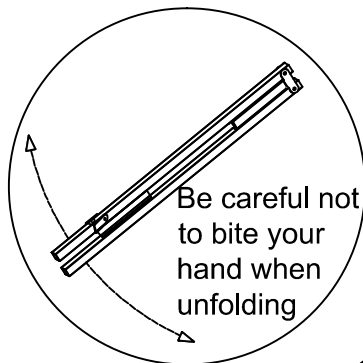


Step13

C		M8x15mm	5pcs
I		M6x65mm	1pc

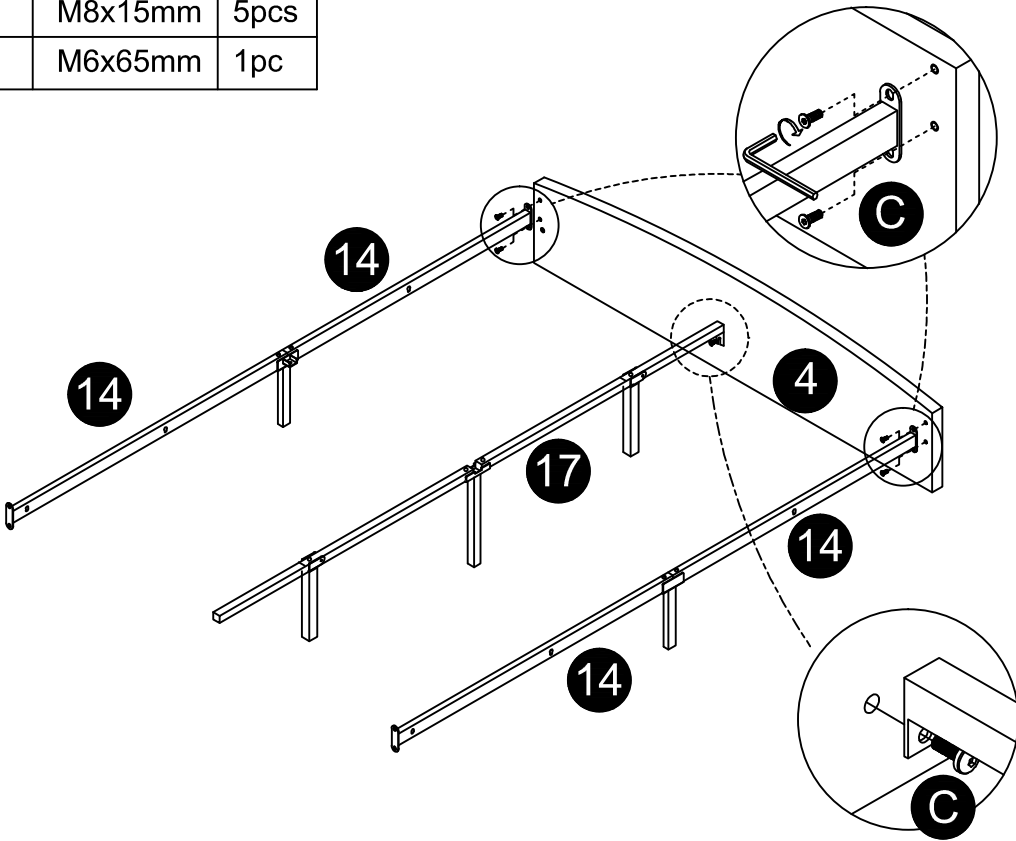


Step14

C		M8x15mm	4pcs
B		M8x35mm	1pc
I		M5x65mm	1pc


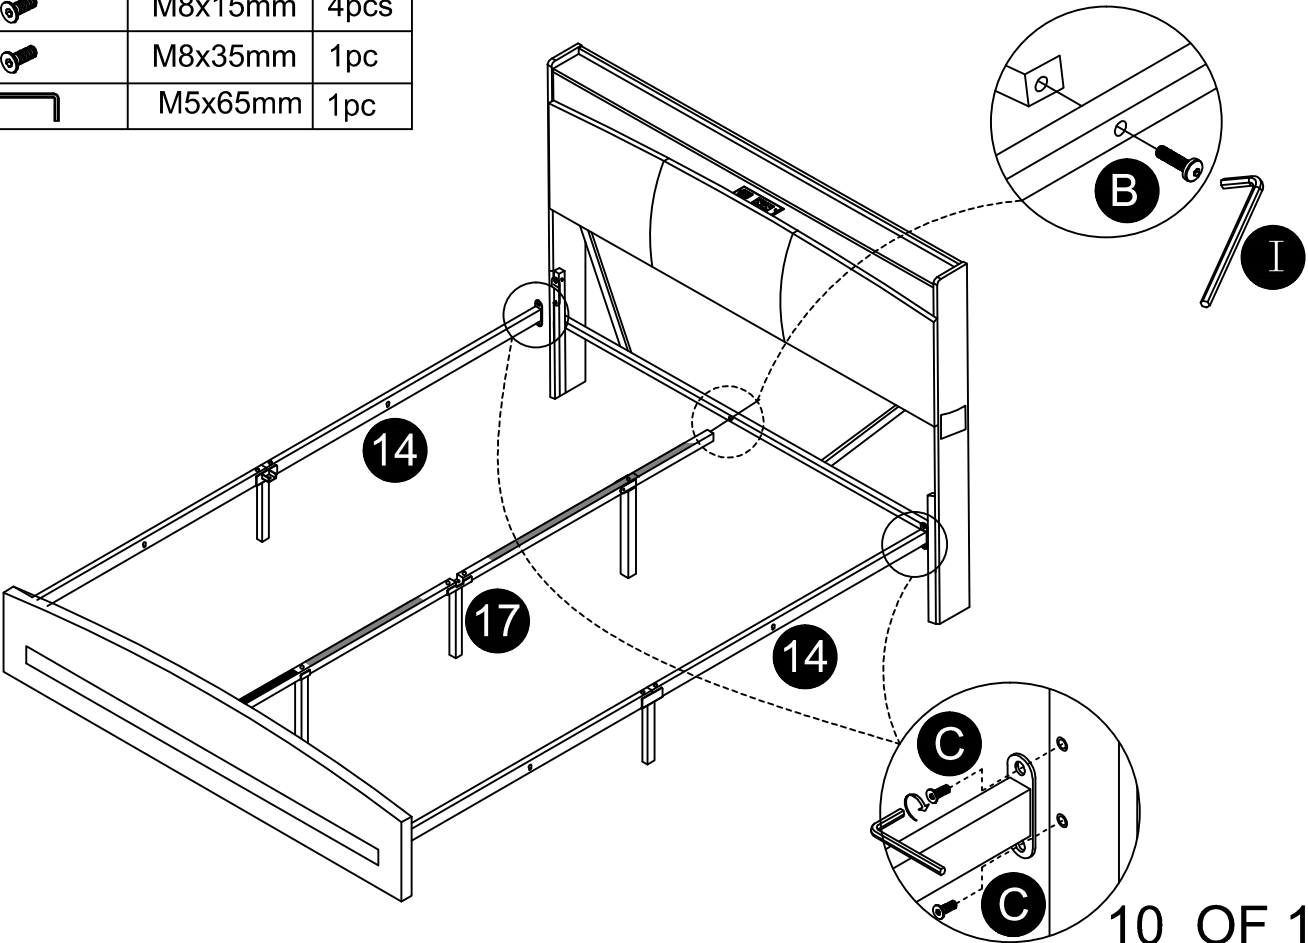


Step15

A		M8x50mm	1pc
B		M8x35mm	2pcs
I		M5x65mm	1pc

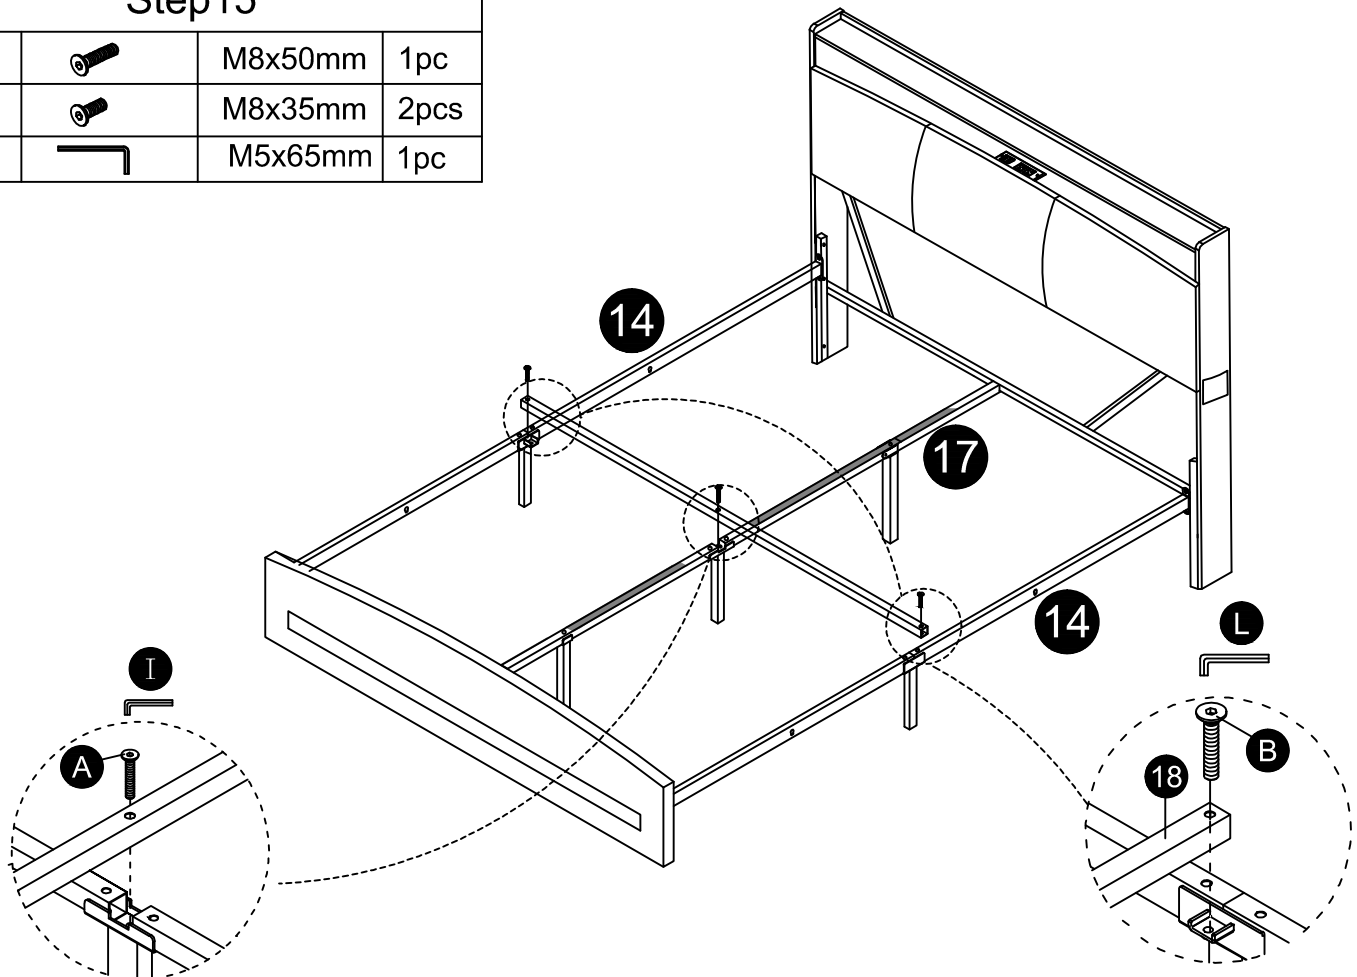


Step16

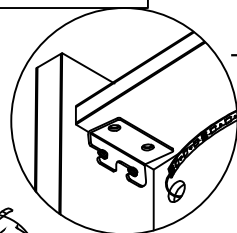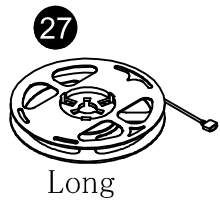


The light strip is fixed on the headboard


The 27th light strip is inserted from behind the 6th board

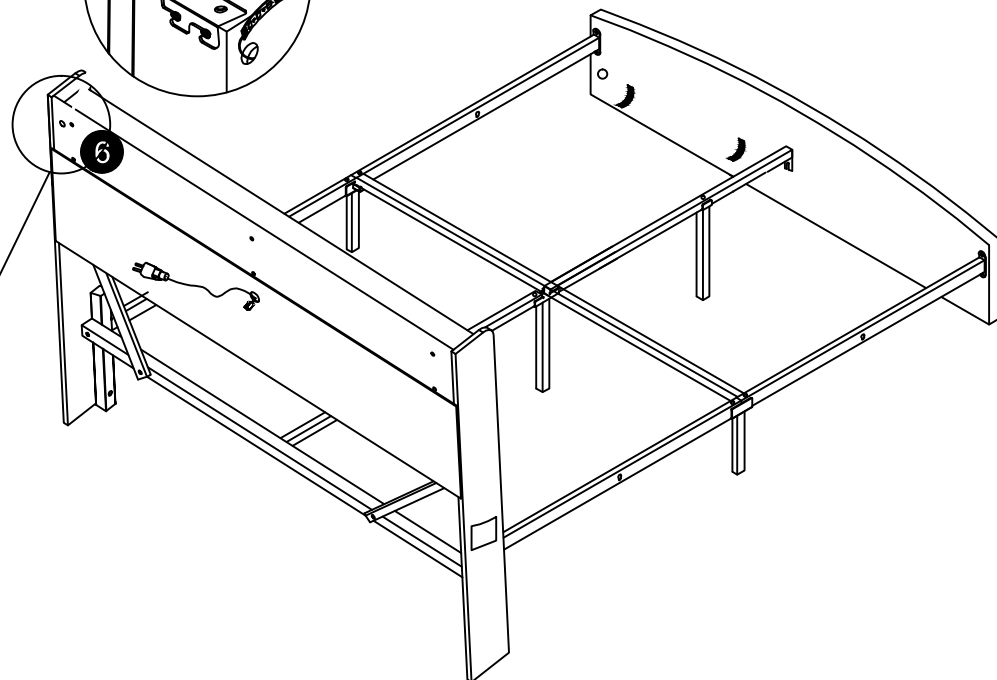


Step17

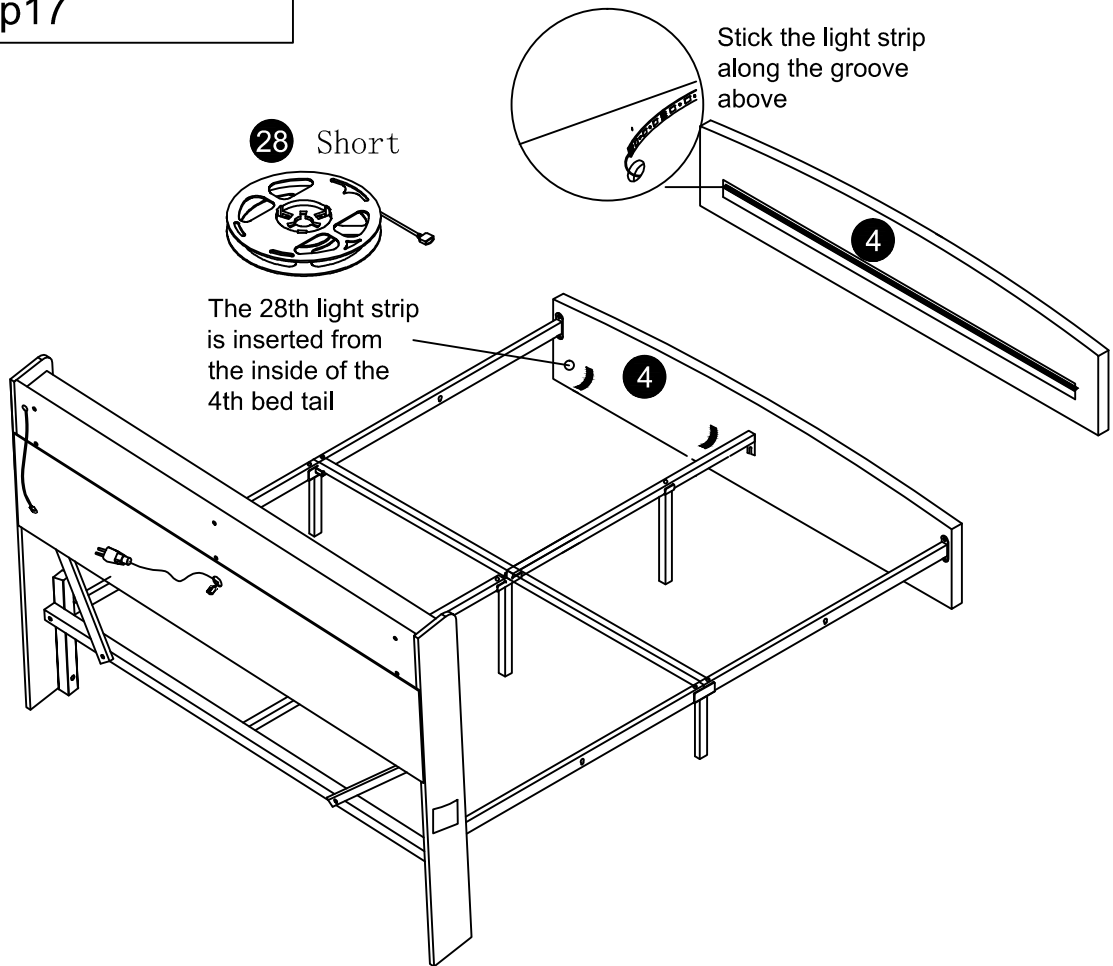


Step18

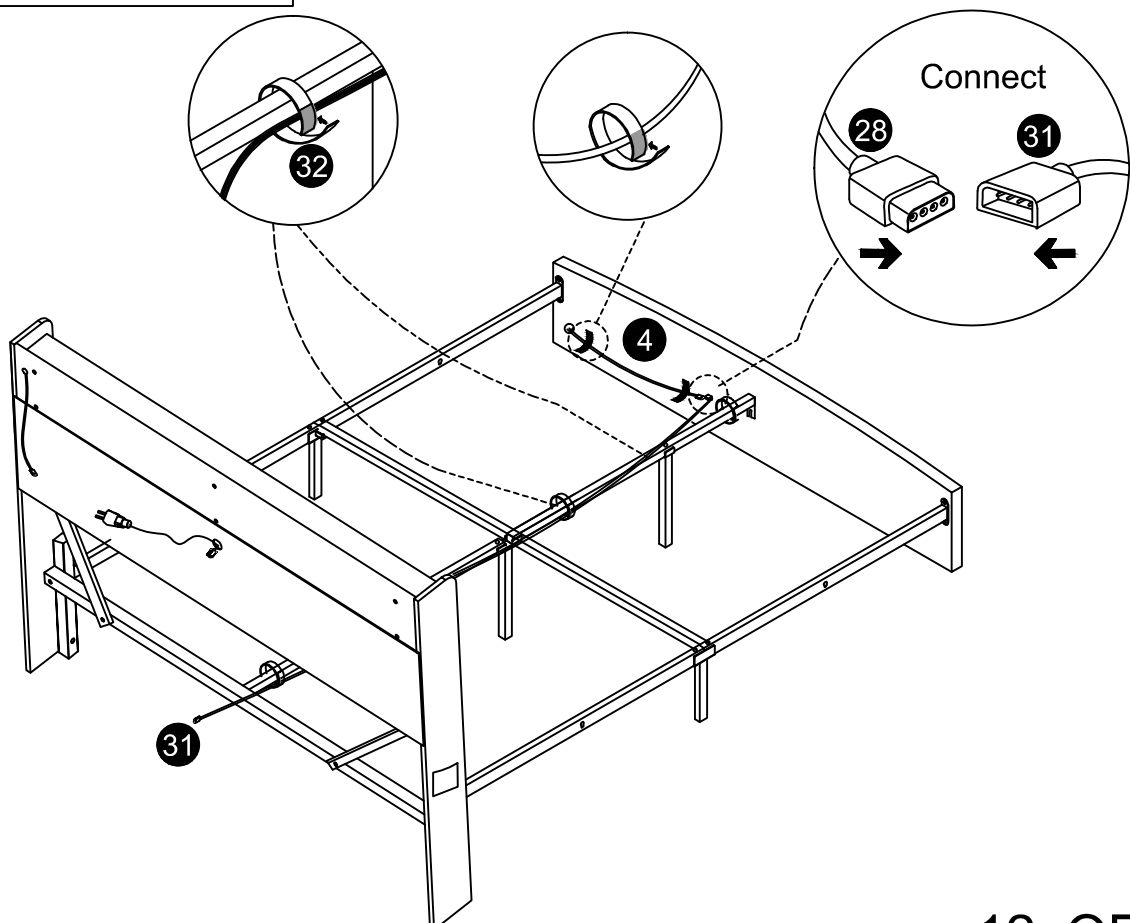


Step19

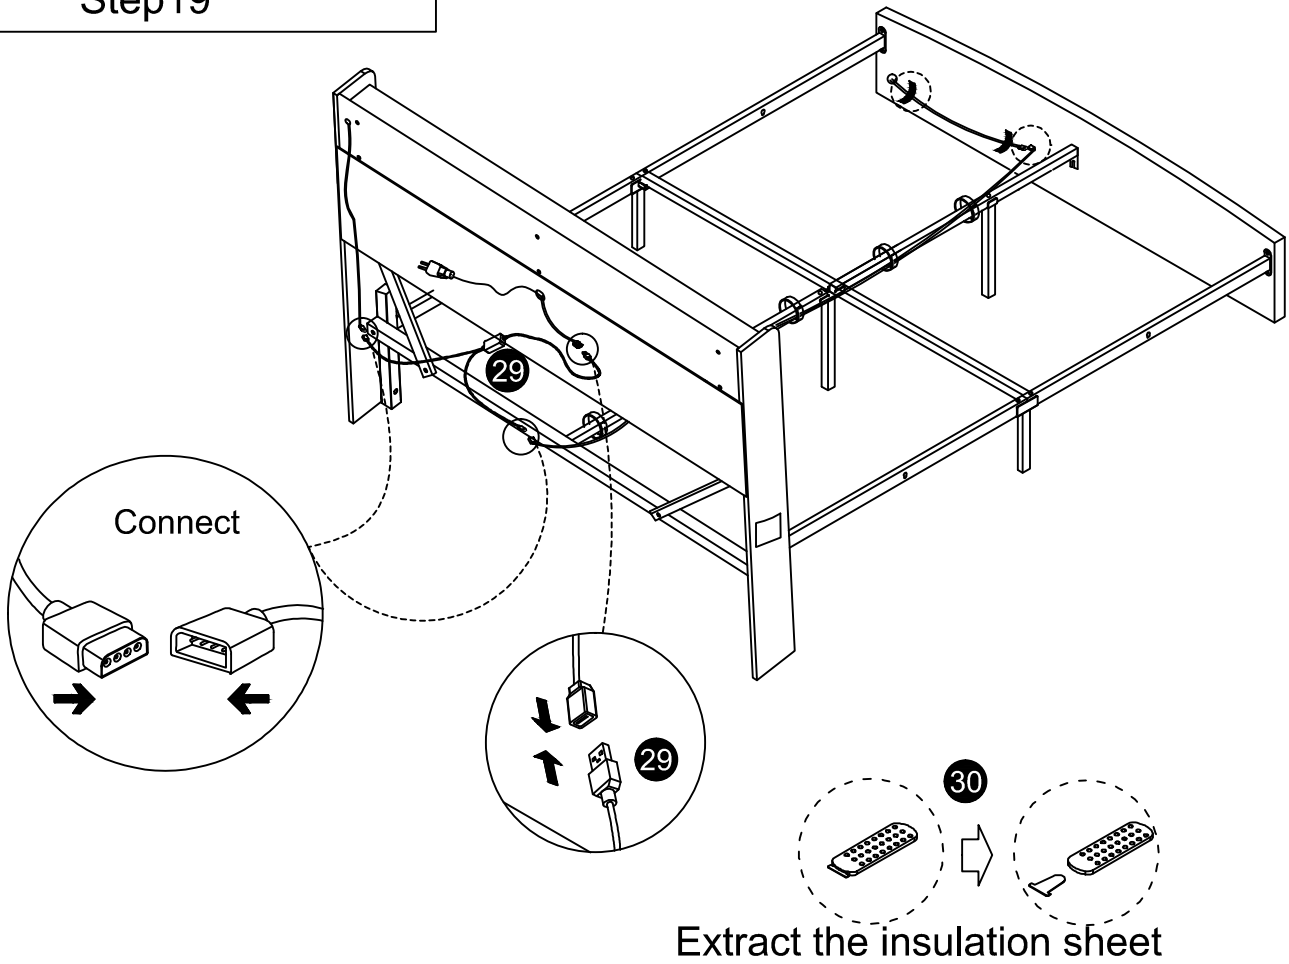


Step20

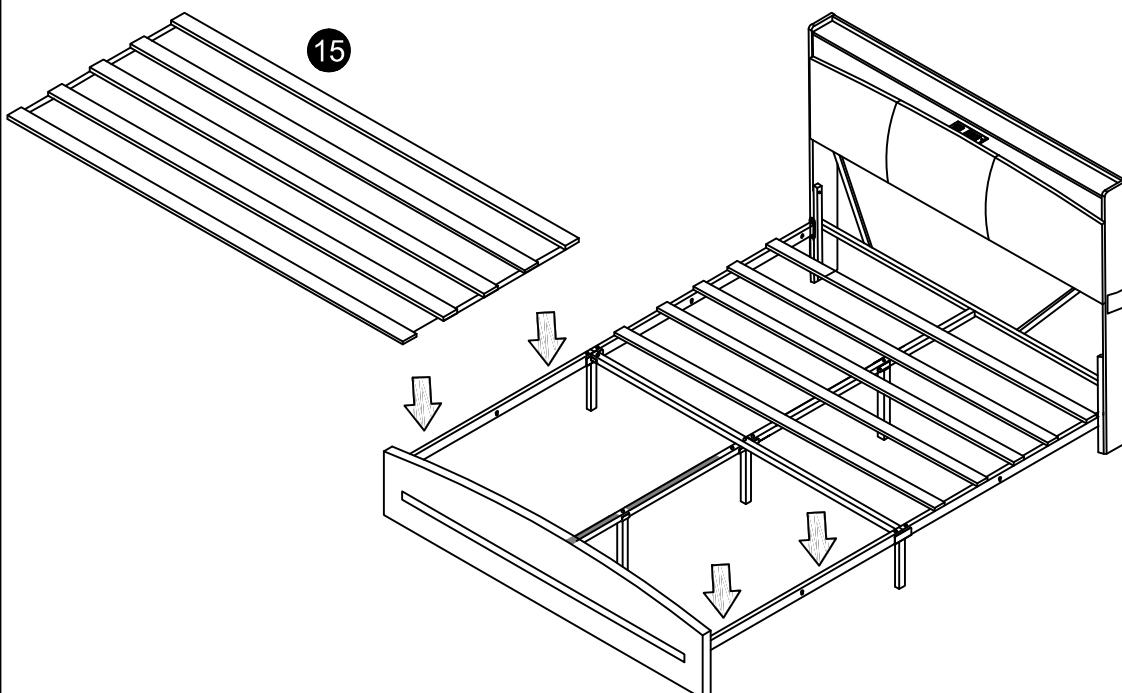

Step21

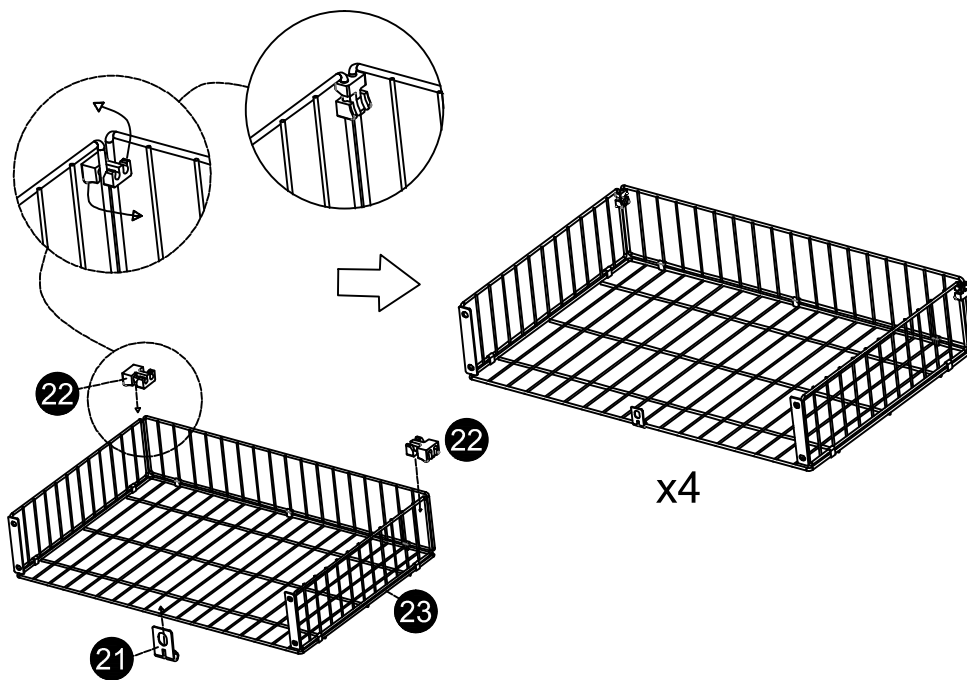


Step1 22

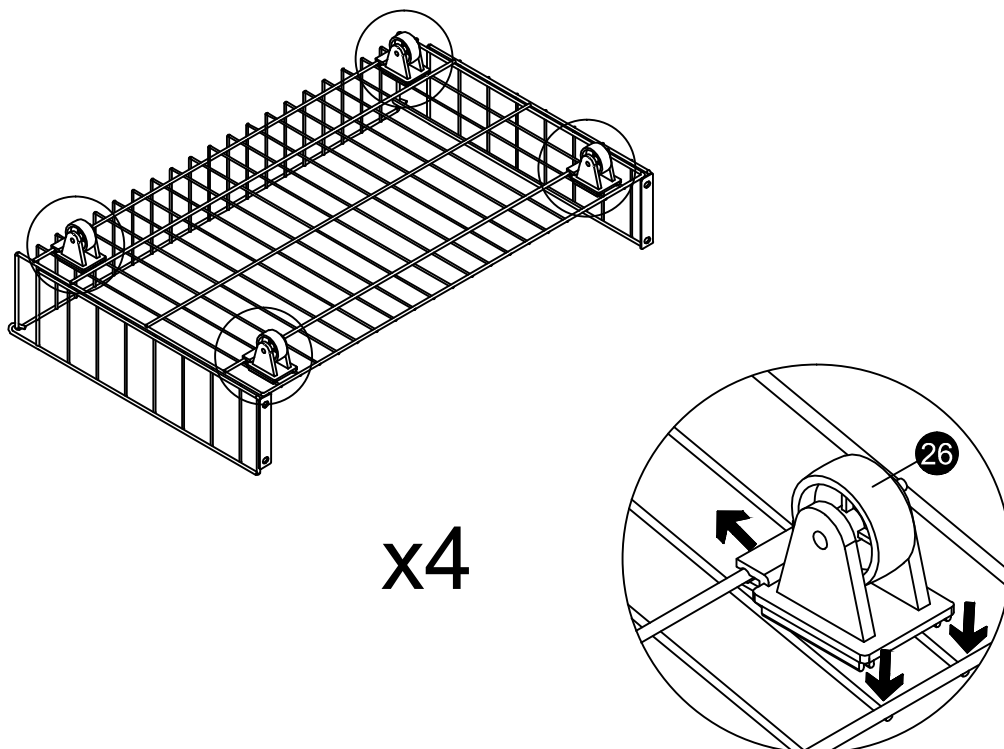


Step 23

E		M6x12mm	20pcs
H		M4x65mm	1pc

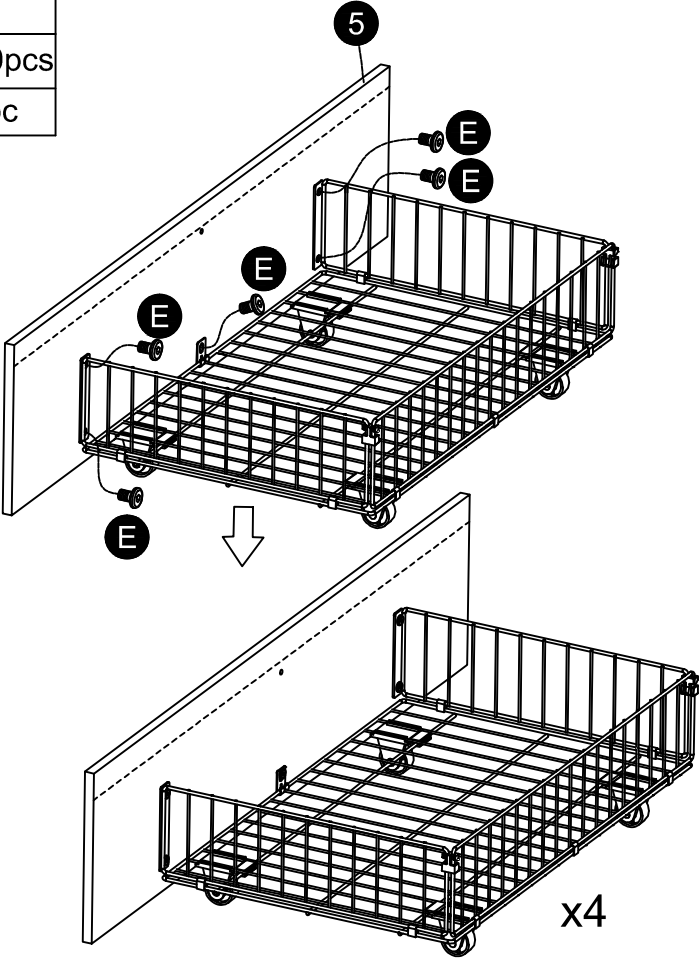


Step 24

F		M6x20mm	4pcs
H		M4x65mm	1pc

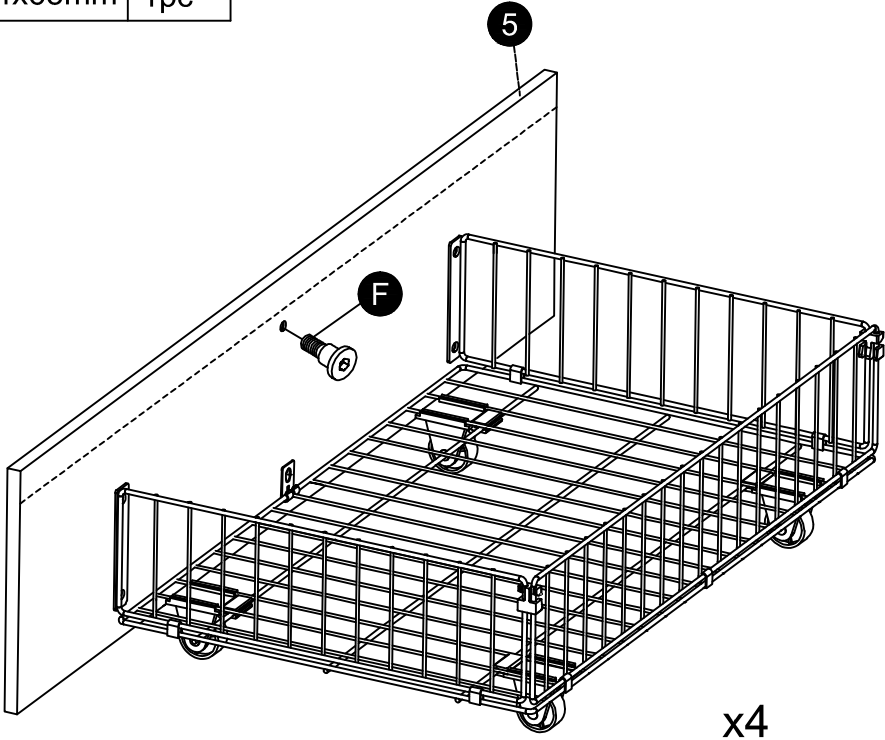

Step 25

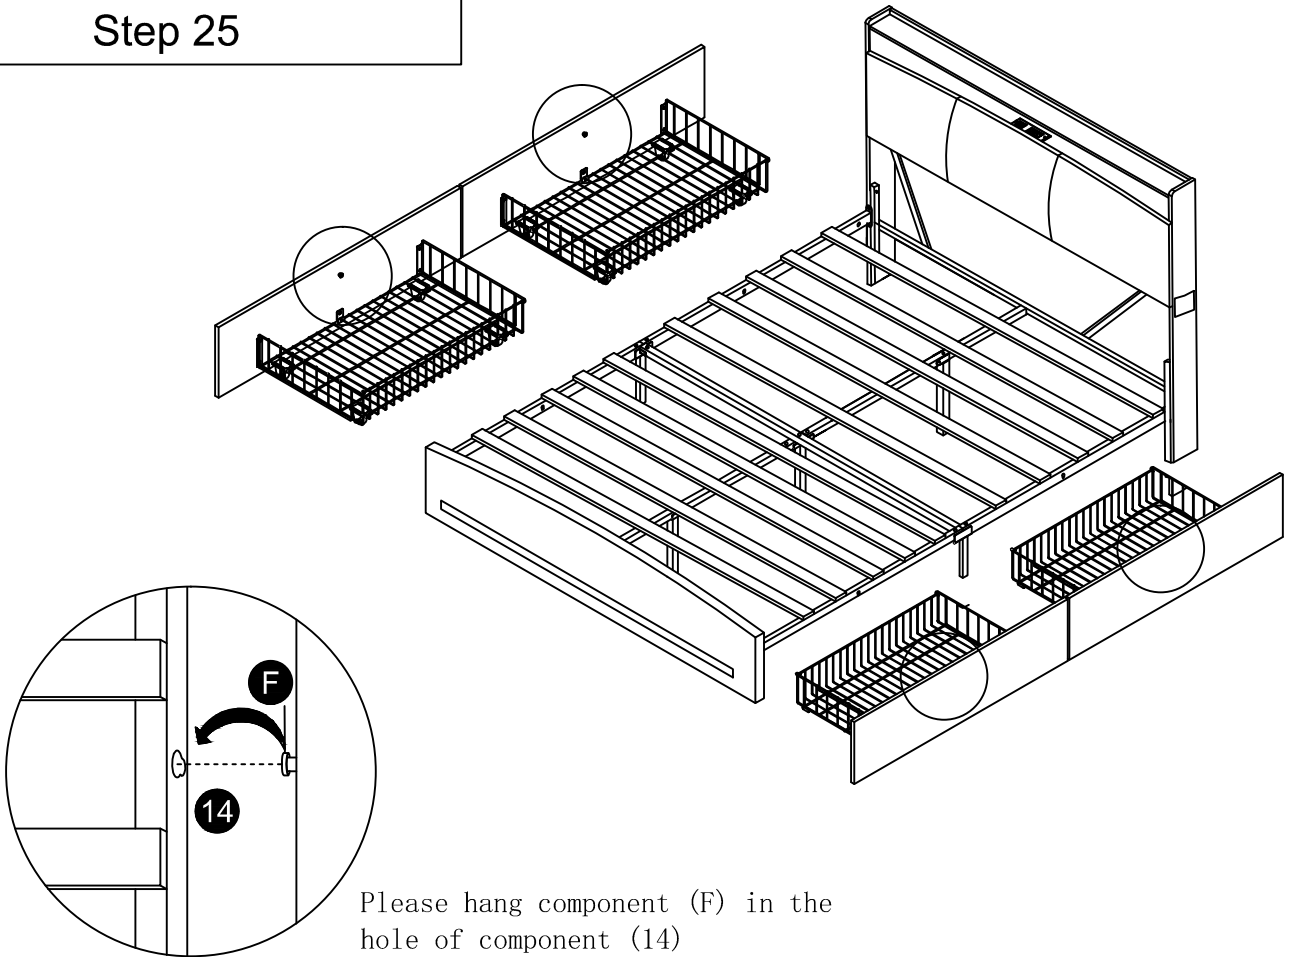

Step 26

