



B*8

put B on board 67

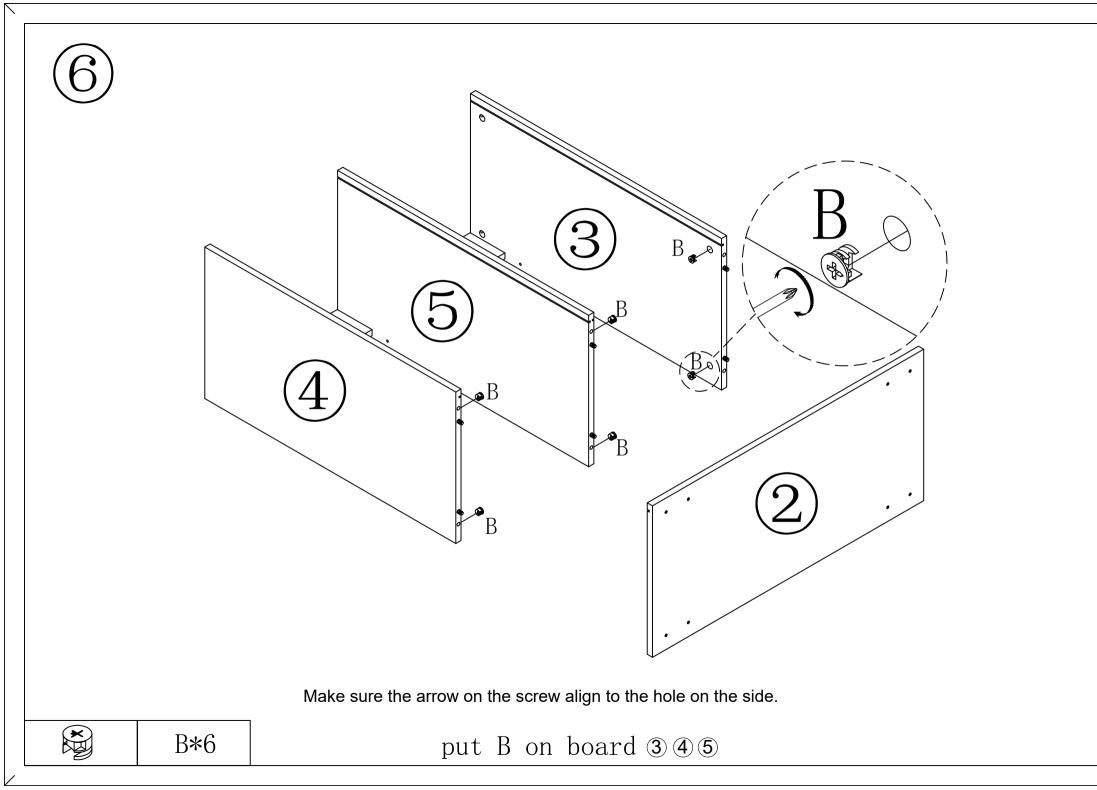




 $\overline{\ }$

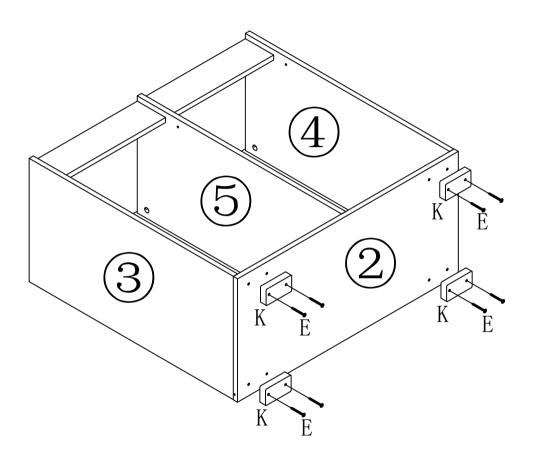


E*8
K*4




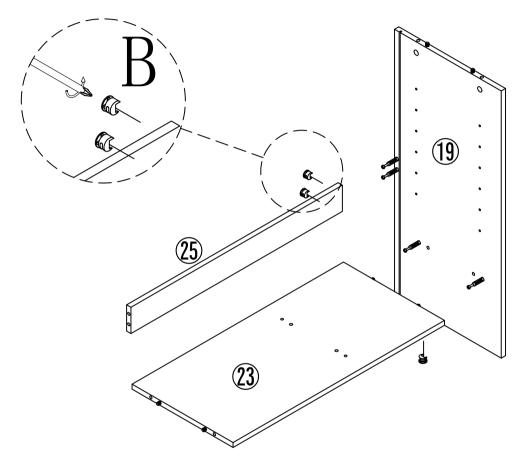

Make sure the arrow on the screw align to the hole on the side.


B*****4

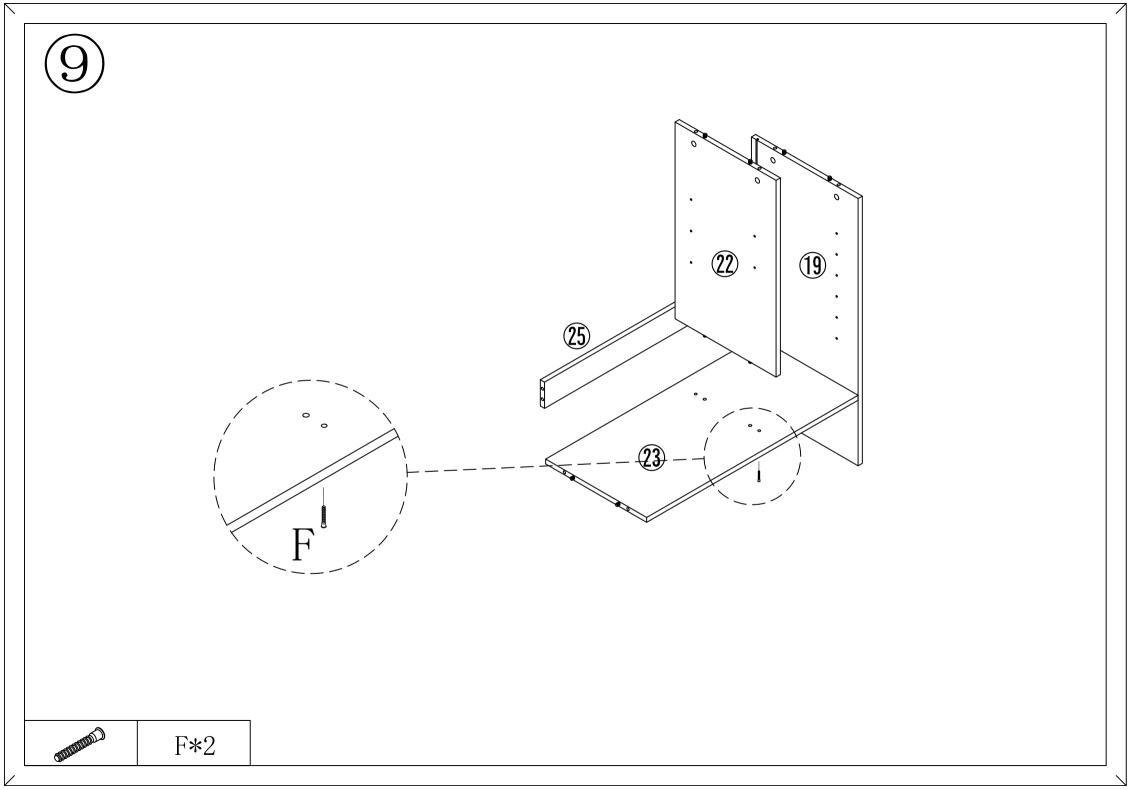

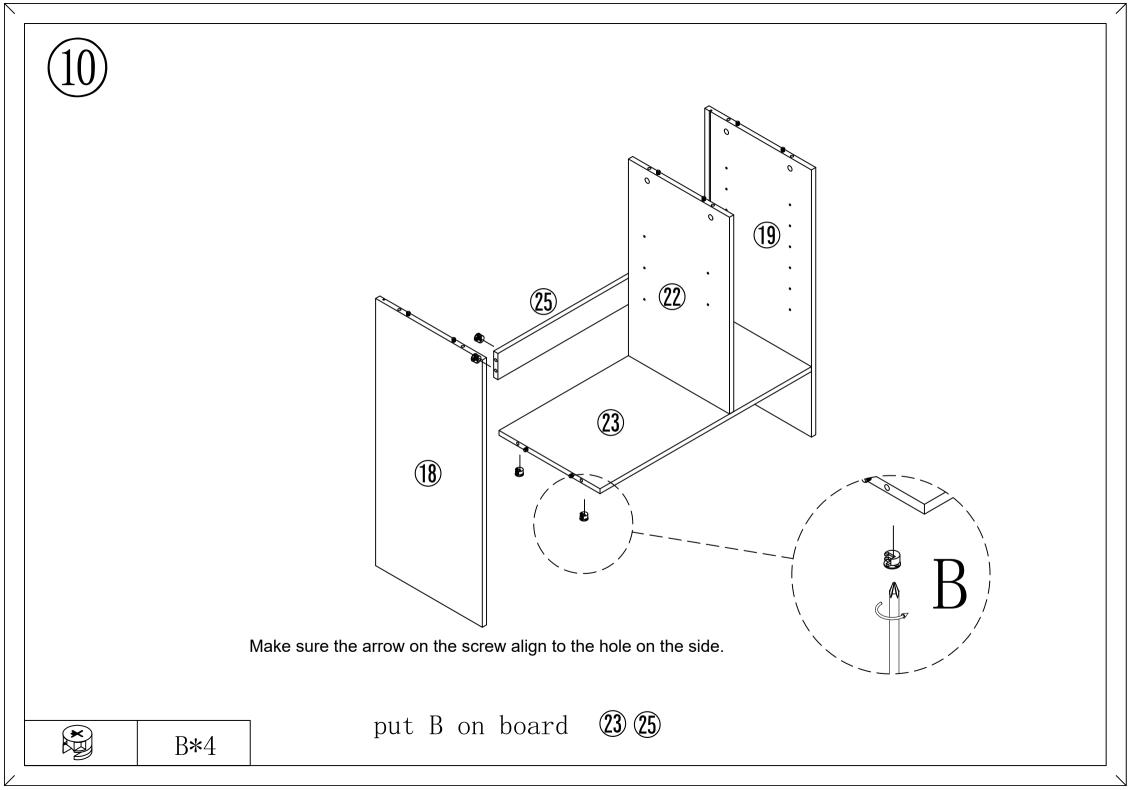

18) **23**) F*4

24) 24) <u>19</u>: 18 S*1

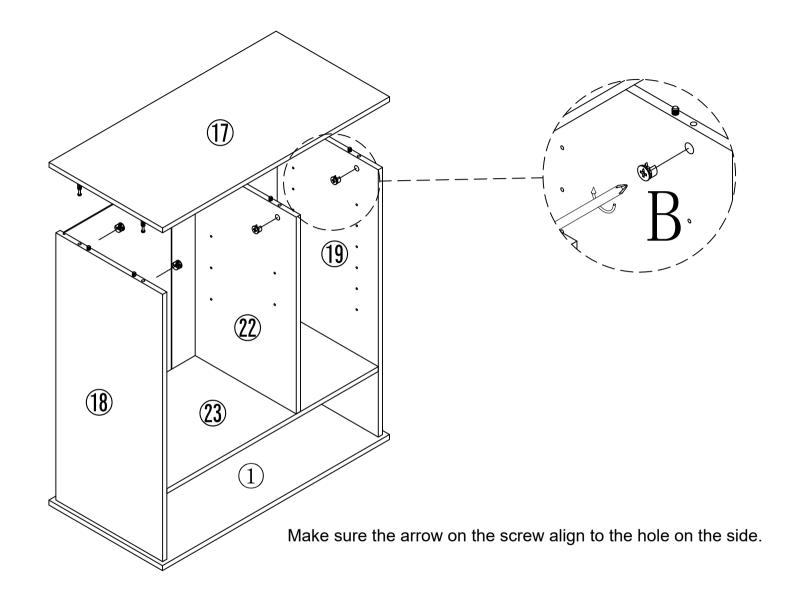

put B on board **18 19 22**









