


# ASSEMBLY INSTRUCTIONS


---

## STOOL

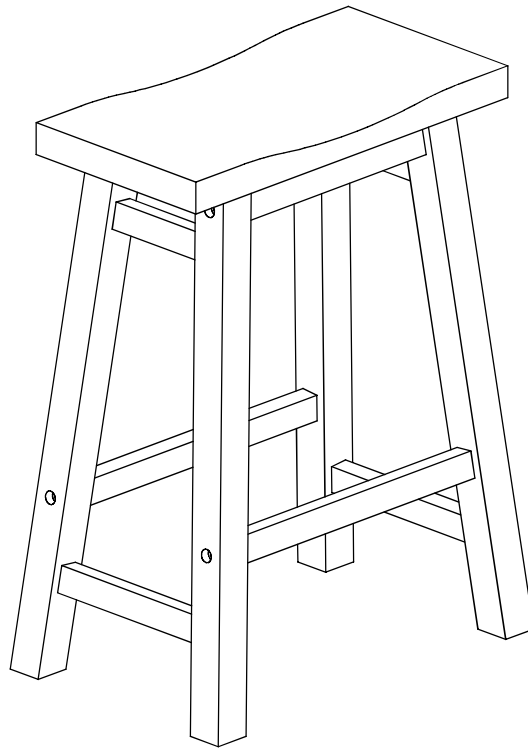





Wood Nut  
8 PCS




Wood Dowel  
2 PCS




M4\*40  
8 PCS

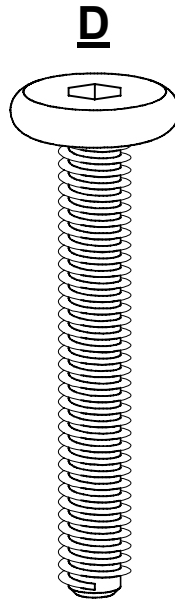

M6\*40  
4 PCS

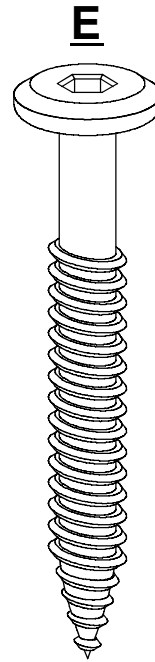


M6\*50  
8 PCS

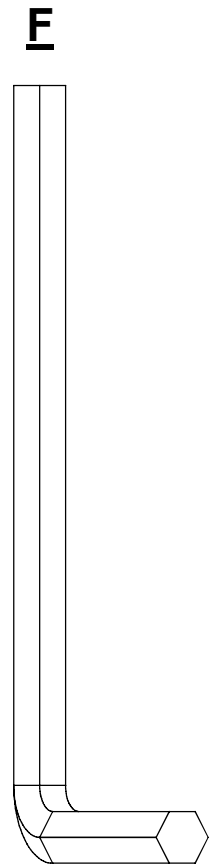


1 PC


1

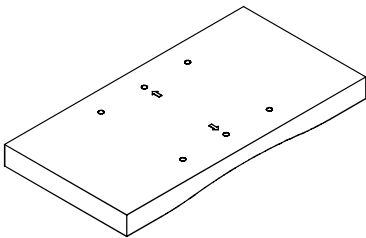


2

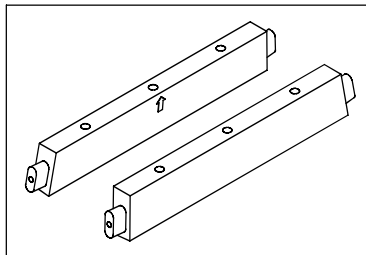


3

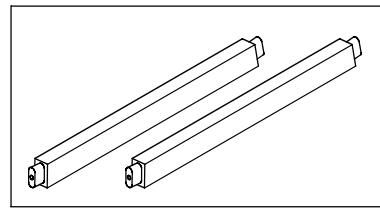


4

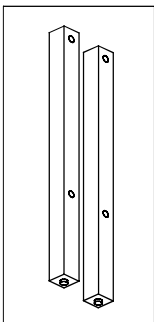


5

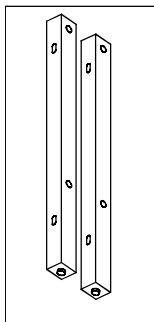



6

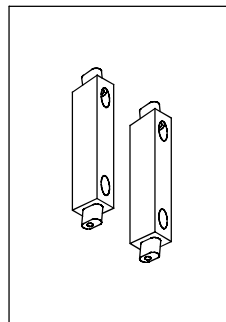

7


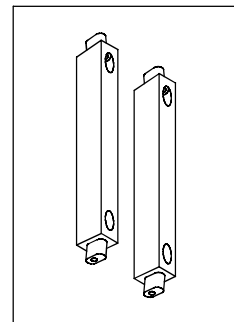


# 01

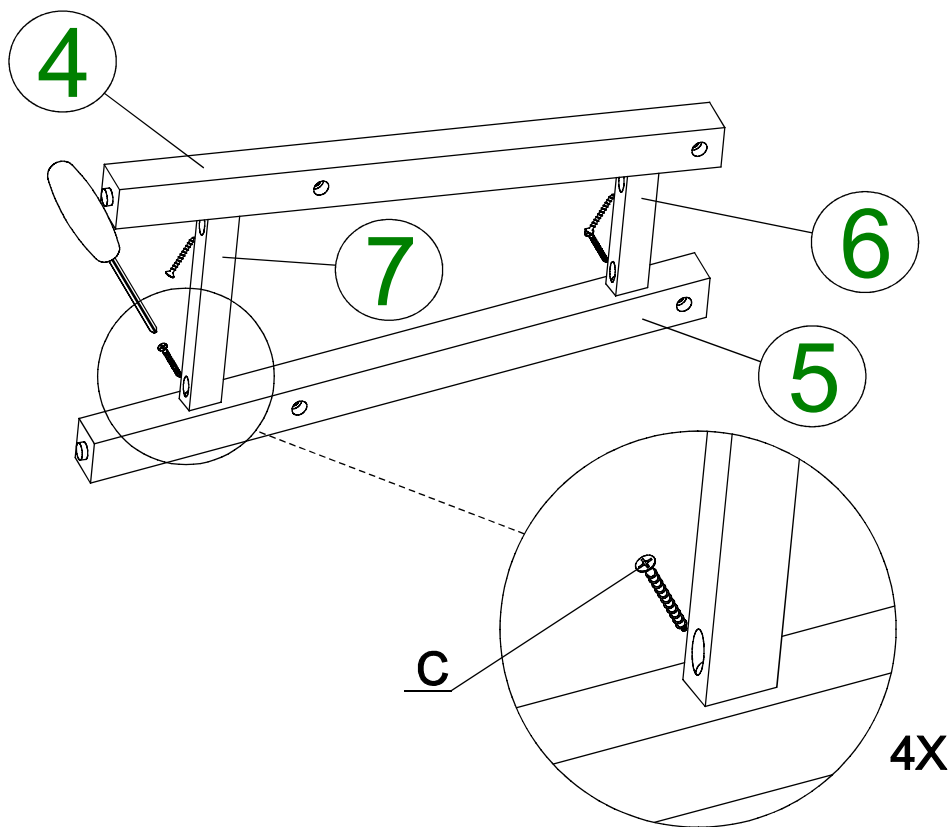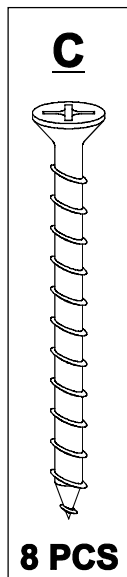




TIGHTEN BOLT COMPLETELY.

# 02

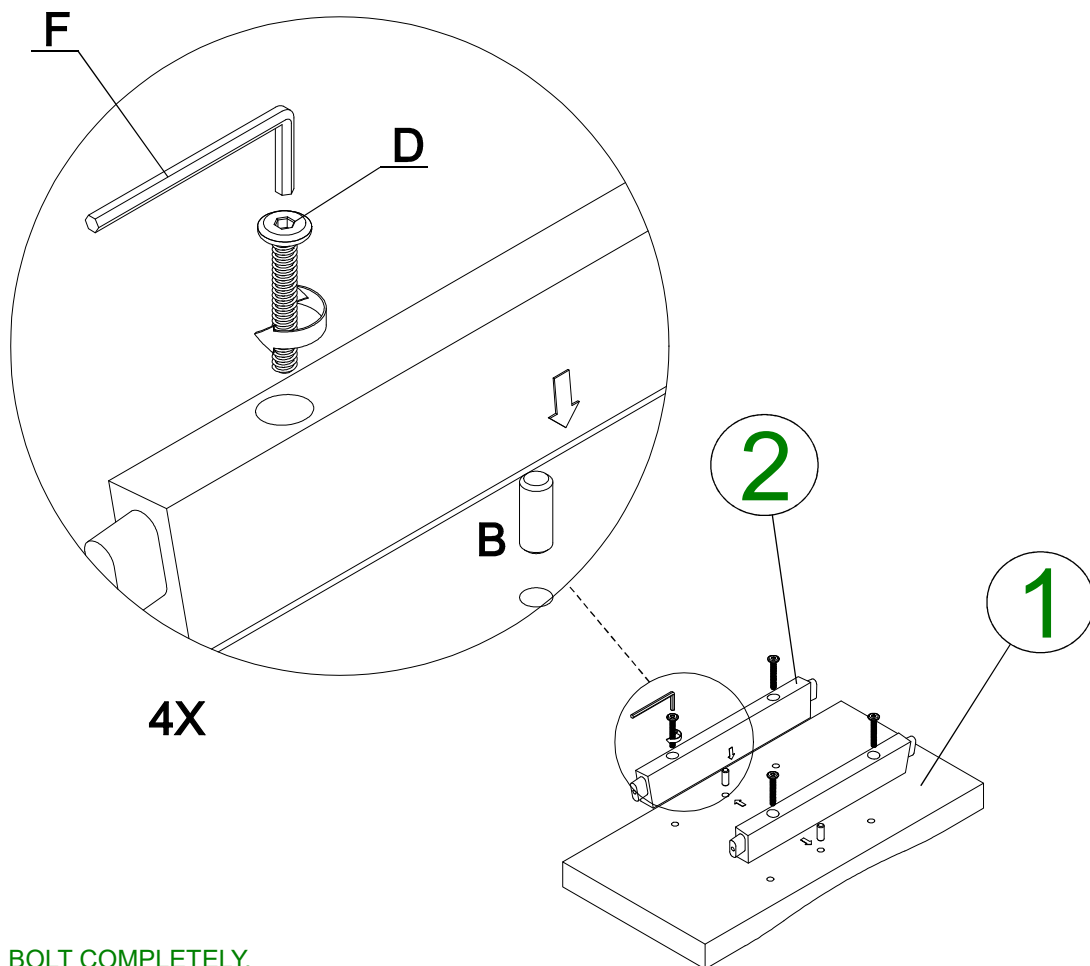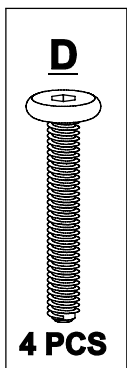




DO NOT TIGHTEN BOLT COMPLETELY.

# 03

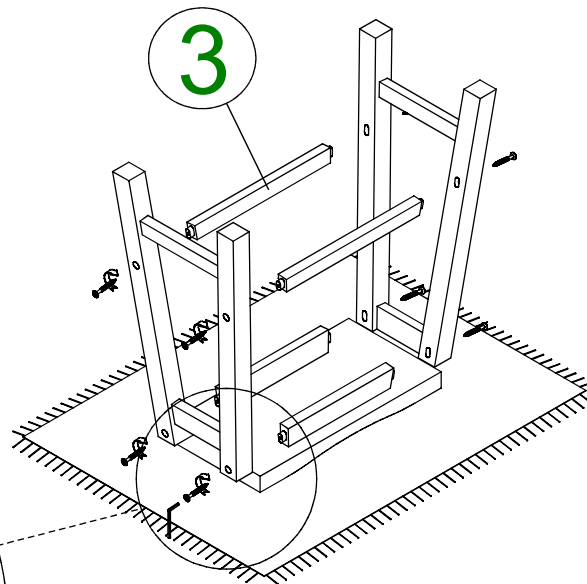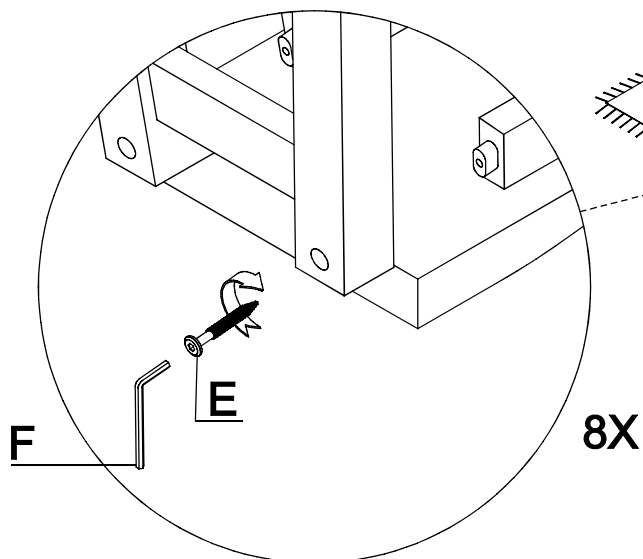


TIGHTEN BOLT COMPLETELY.

# 04

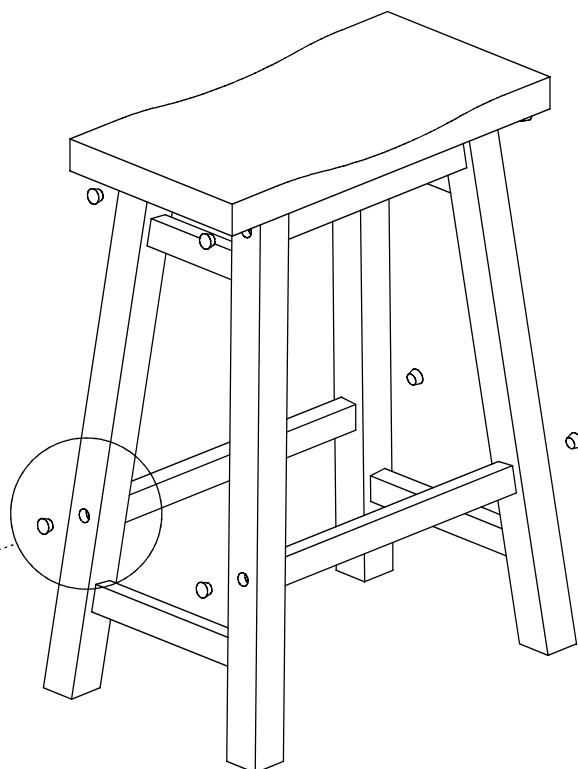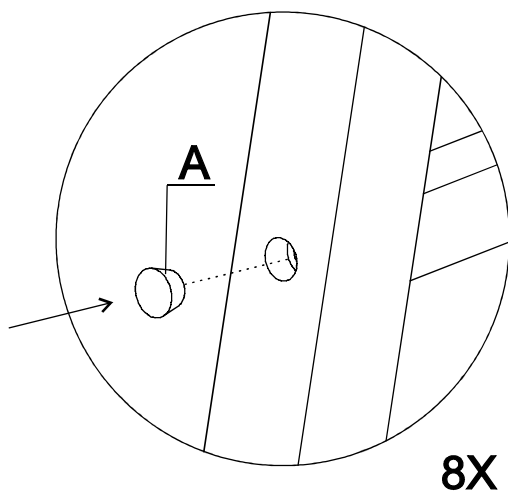

TIGHTEN BOLT COMPLETELY.

**05**

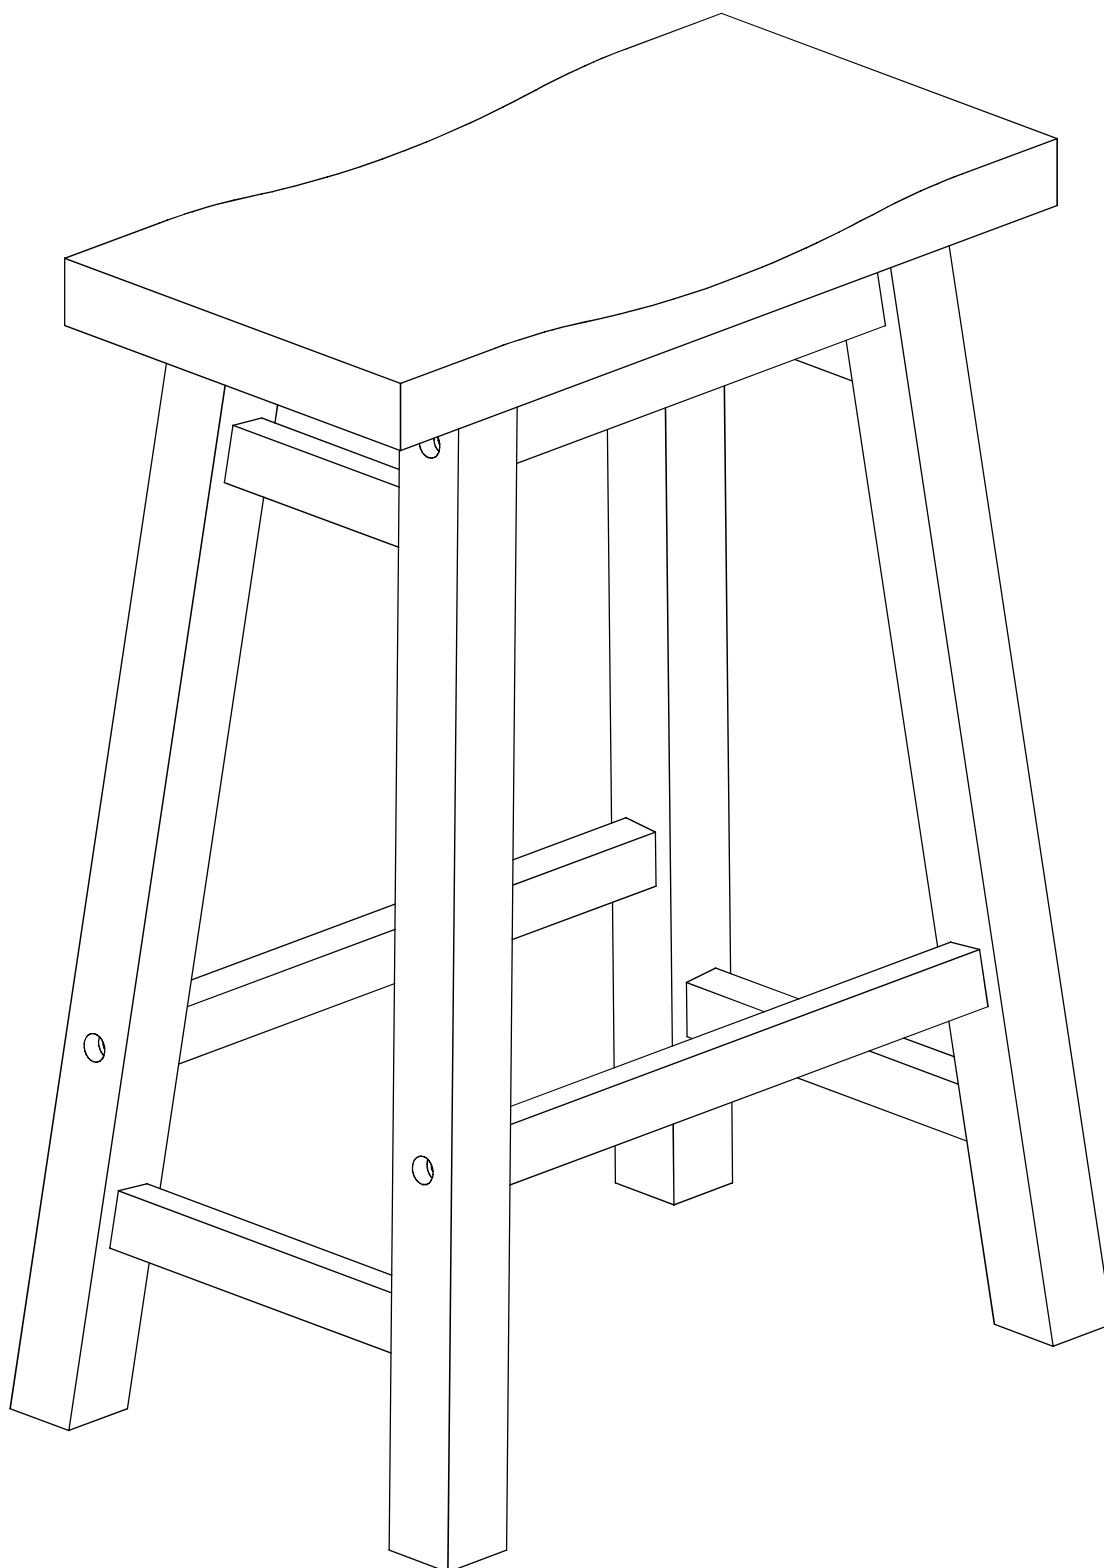

BE SURE TO CHECK ALL BOLTS ARE SECURELY  
TIGHTENED PRIOR USING THIS STOOL.