




INSTRUCTION

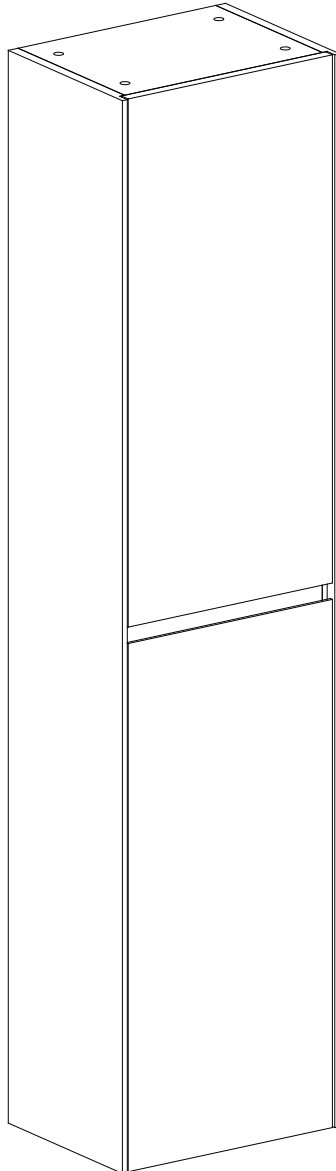


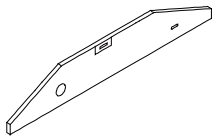


Spirit level





Tape measure
(3m~5m)

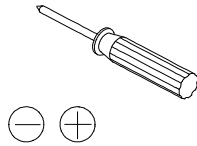

Screwdriver

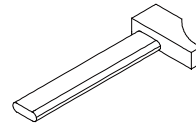

Hammer

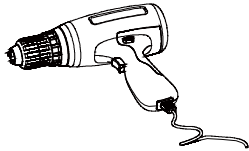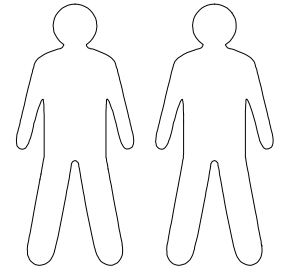


Electric drill




Drill bit
(Ø8)



Pencil

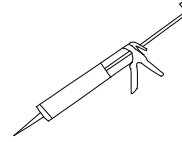


Silicone

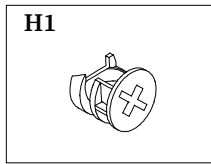


H1

16*

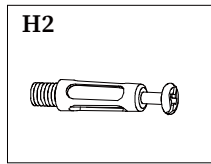


H2

16*

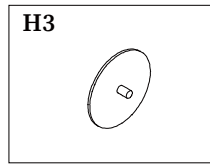


H3

16*

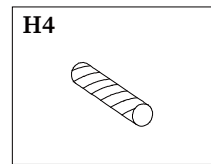


H4

36*φ8*30

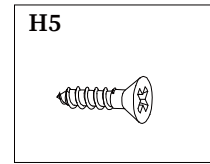


H5

24*φ4*16

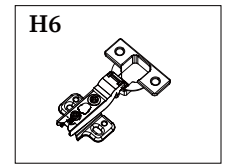


H6

4*

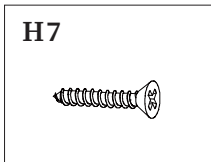


H7

8*Ø4x28

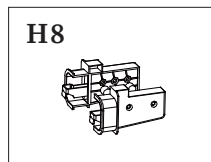


H8

2*

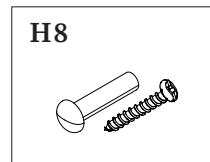


H8

2*

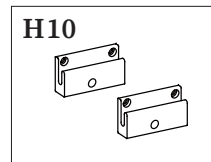


H10

1*

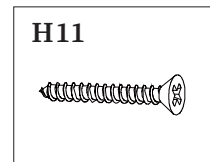



H11



6*Ø4x50

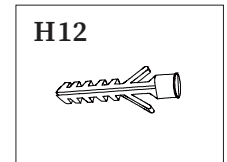



H12

6*Ø8x40

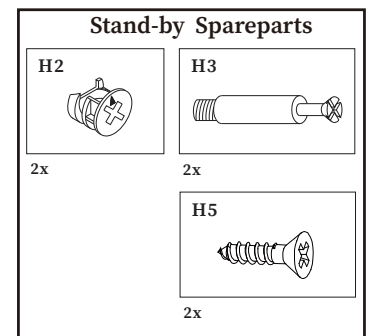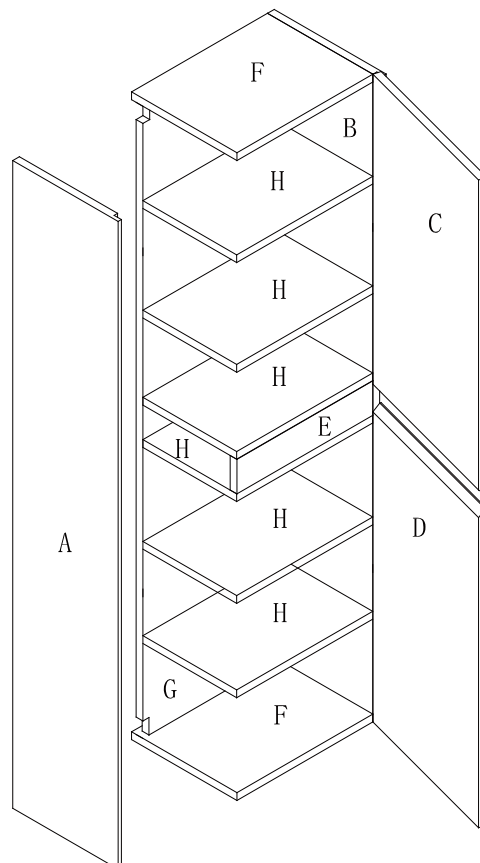

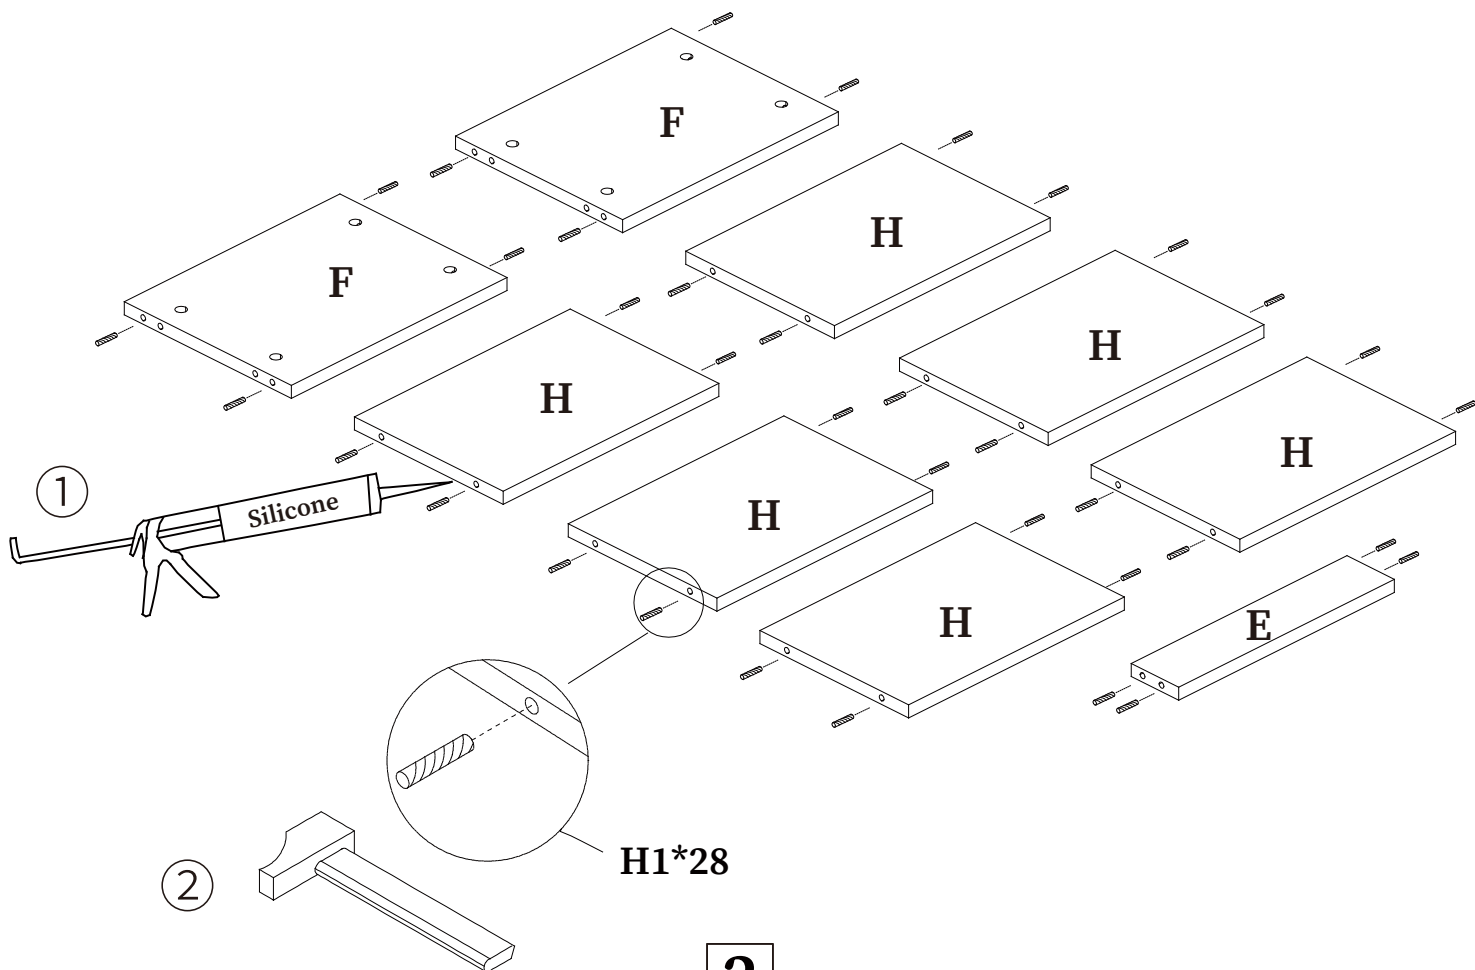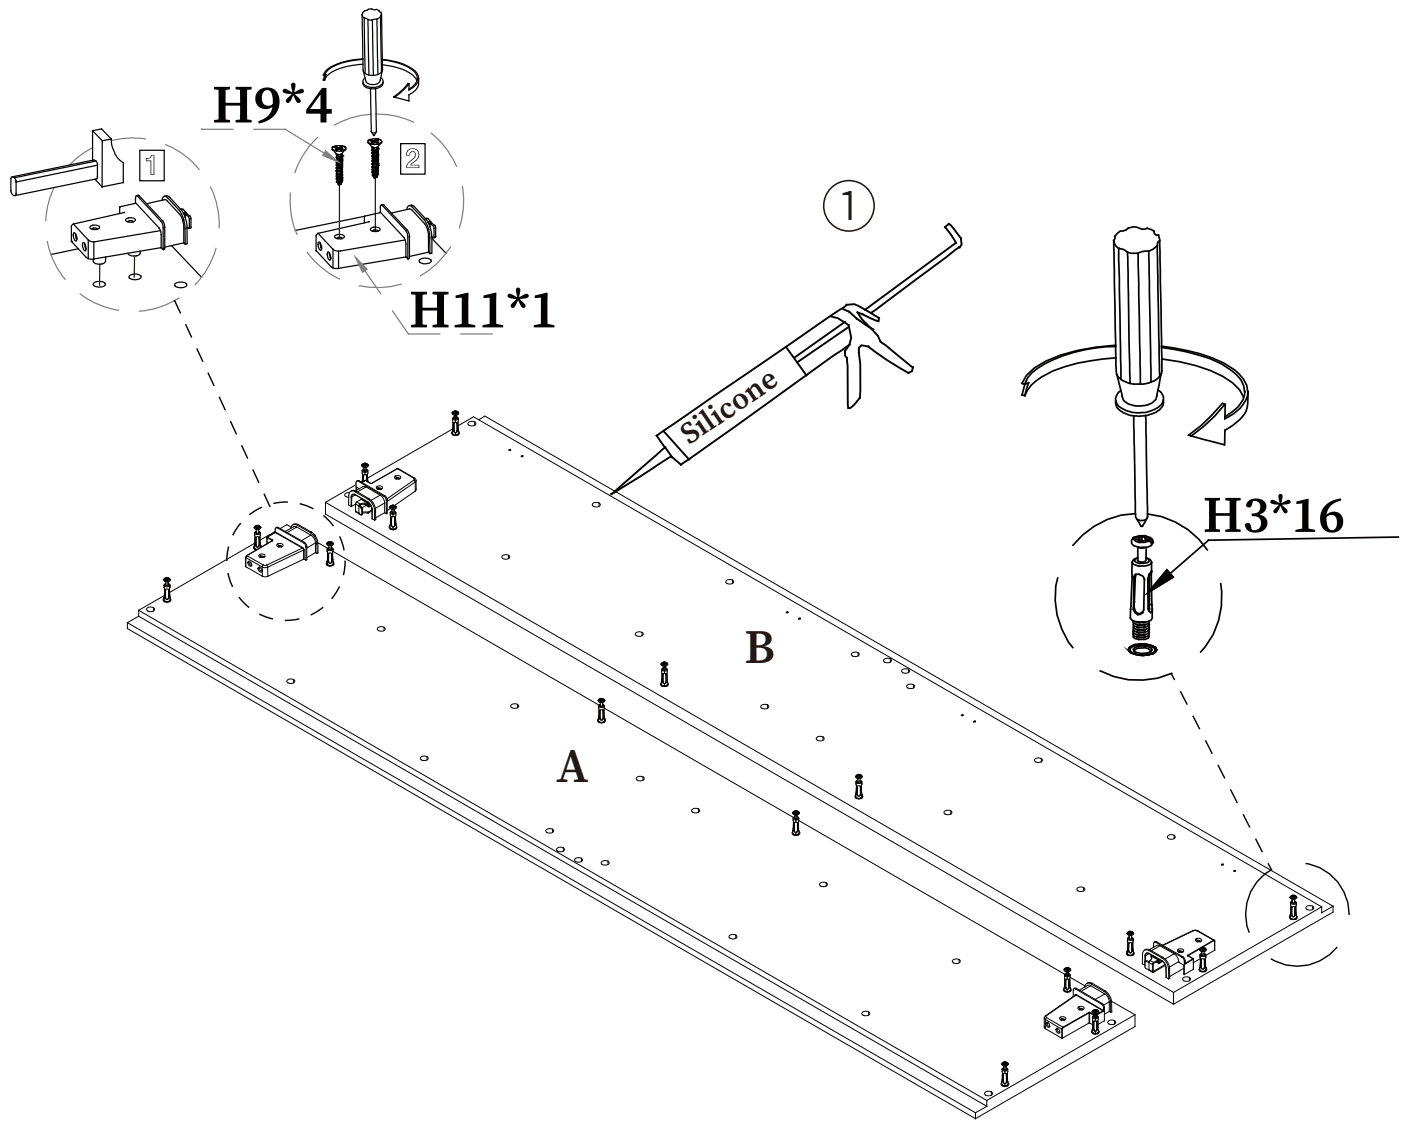

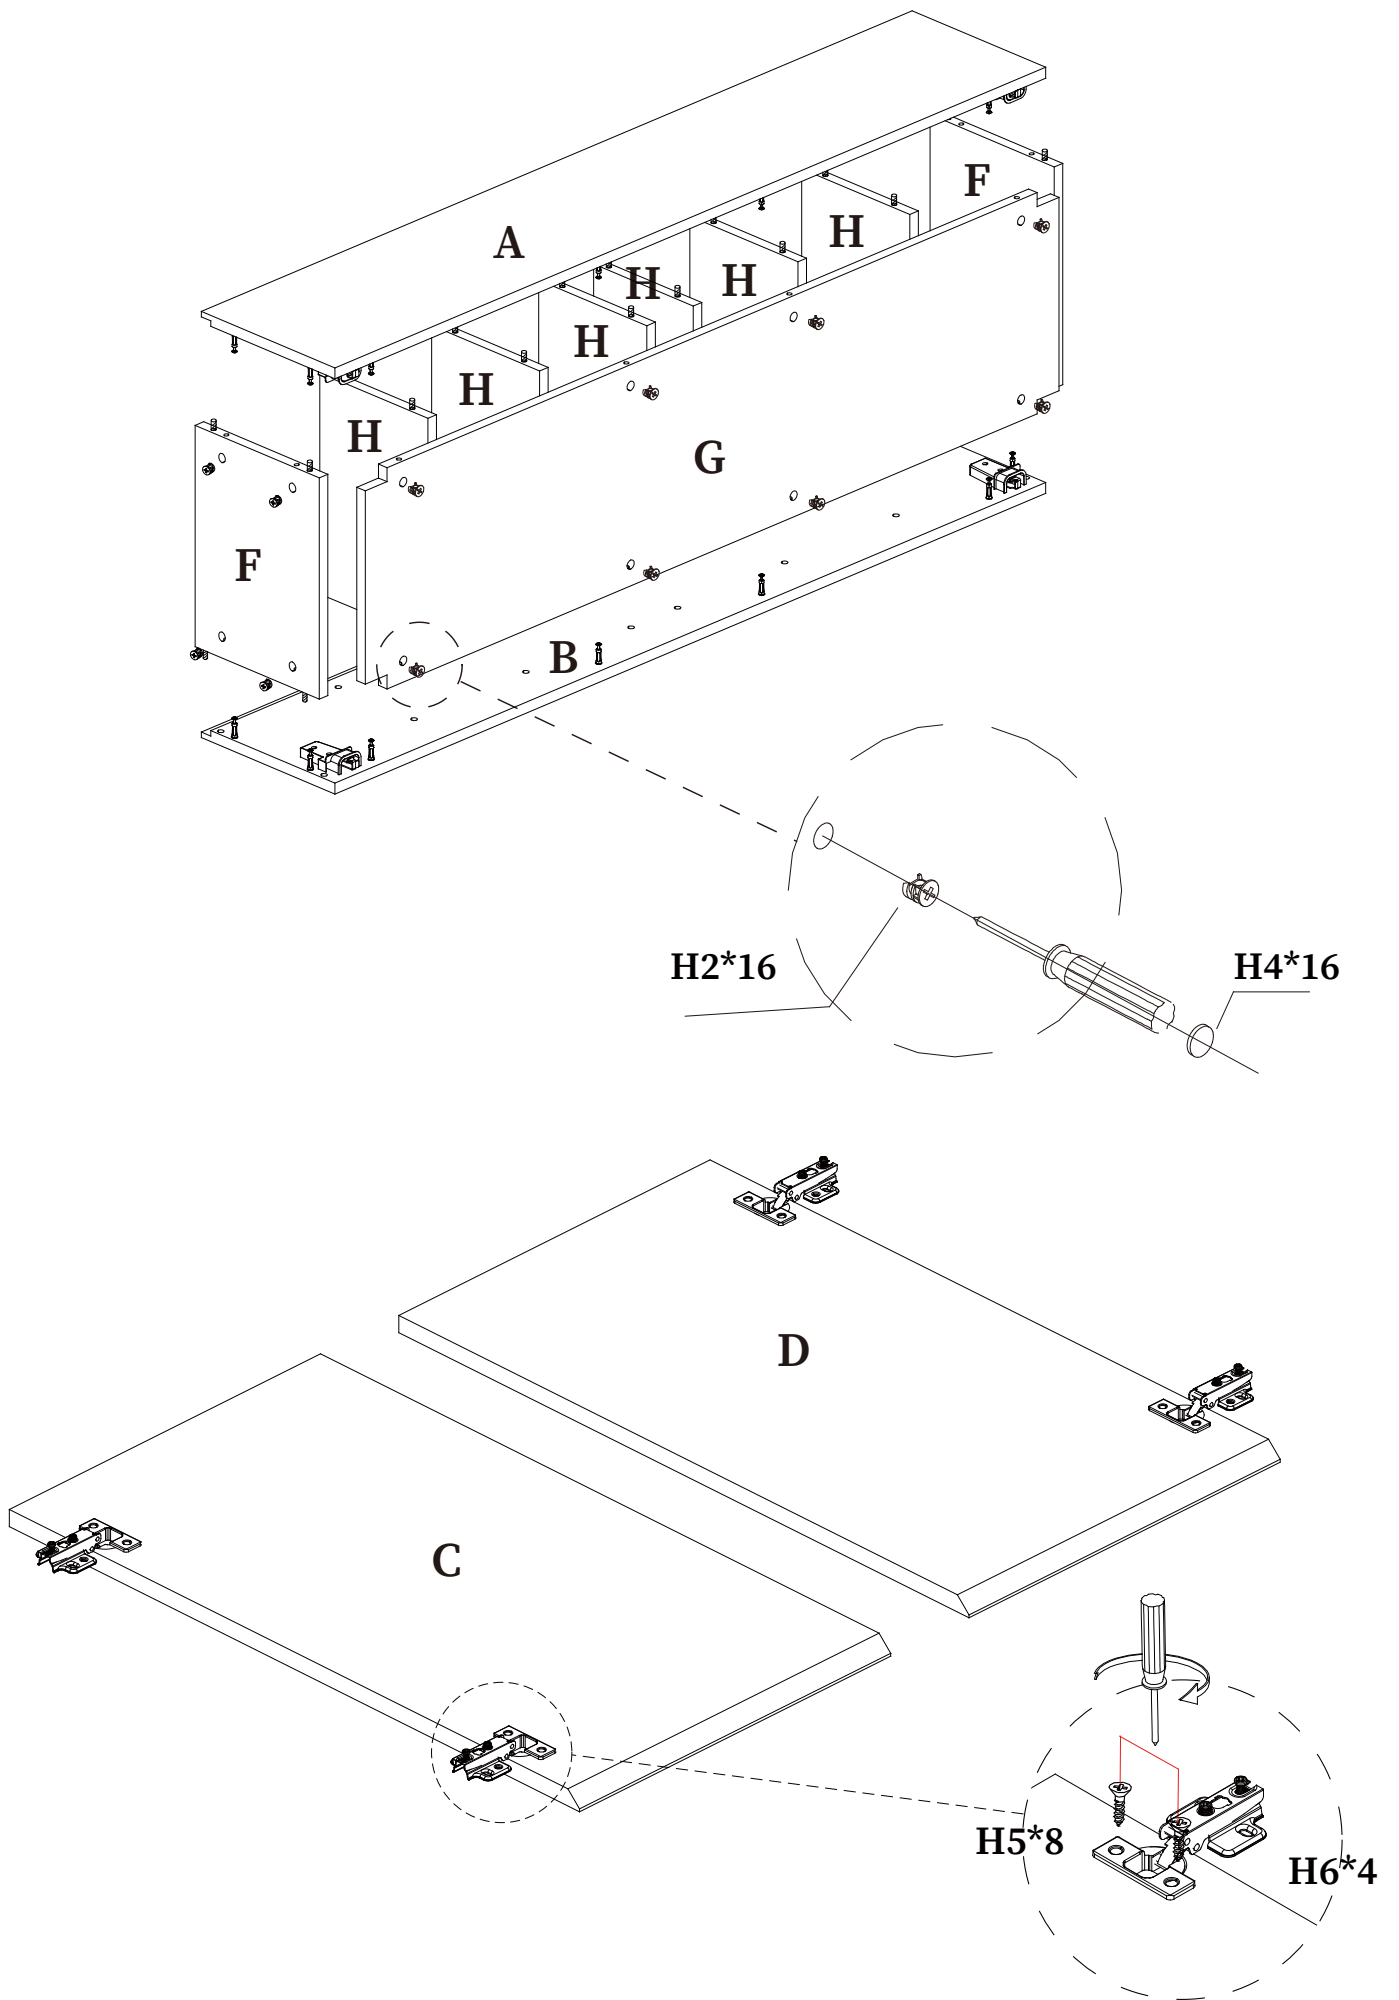

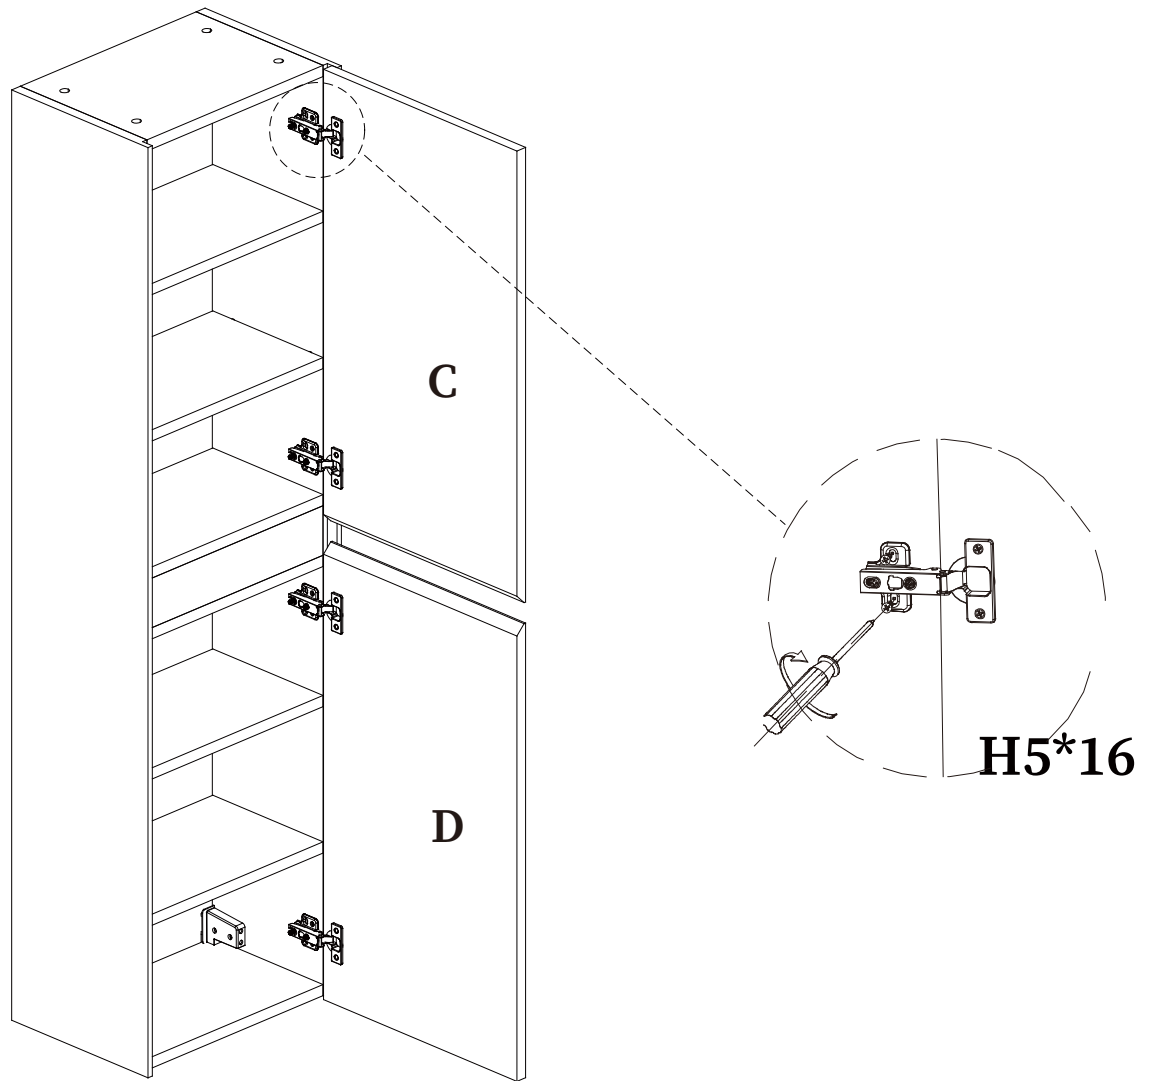

REGLAGES DES PORTES

