

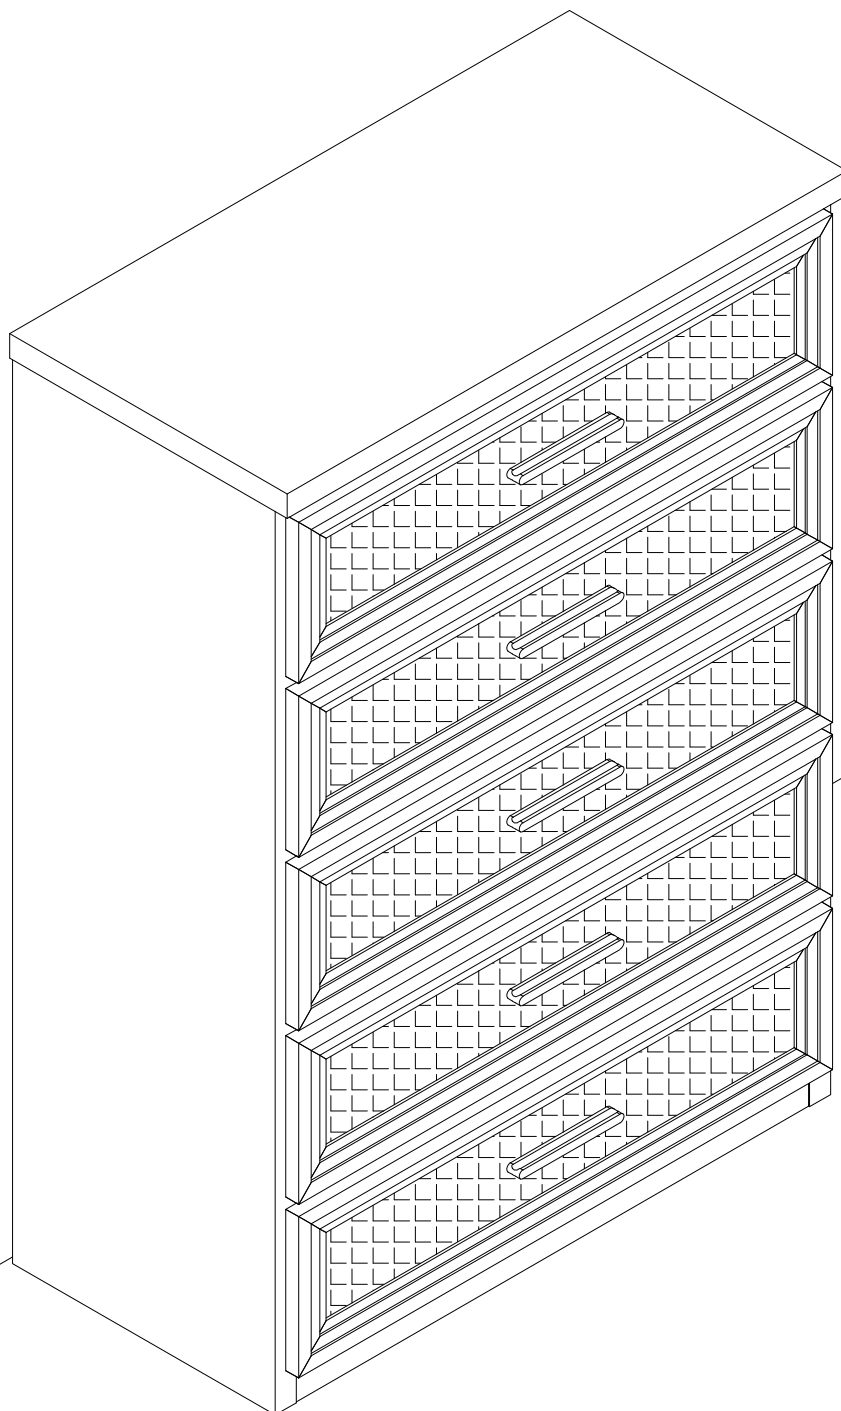









Assembly Instructions

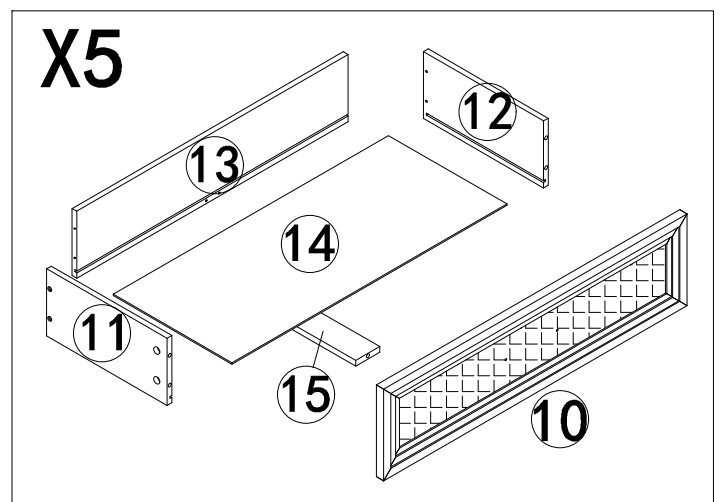




PART LIST

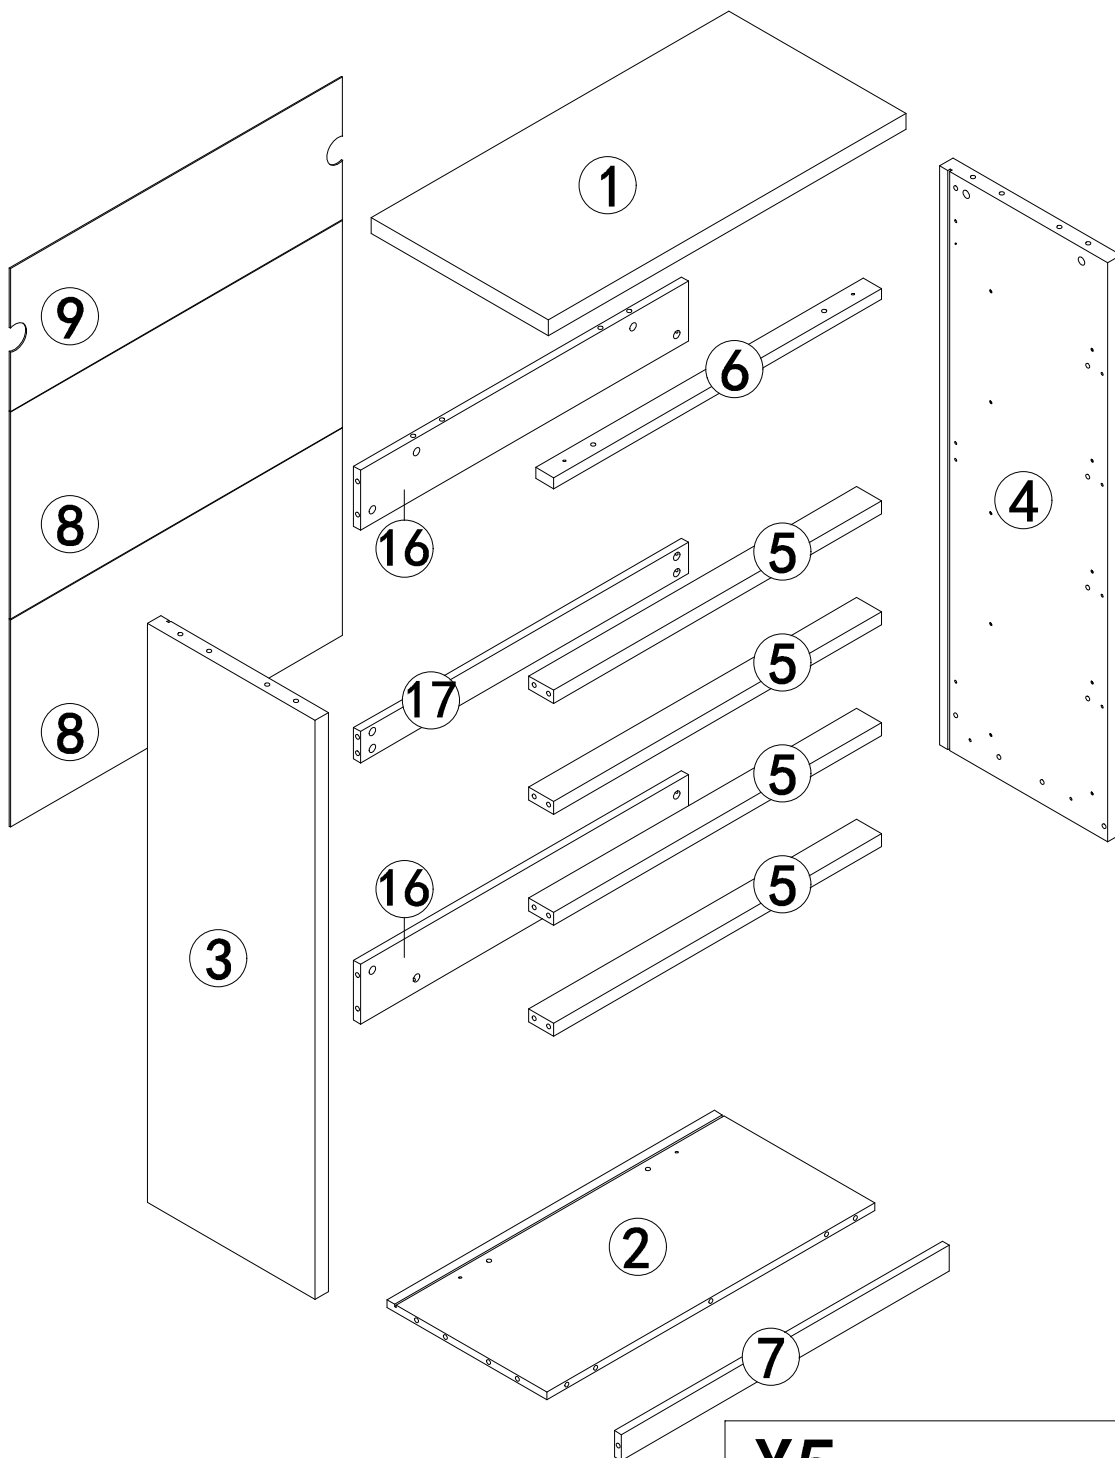


HARDWARE LIST

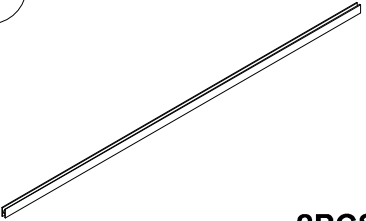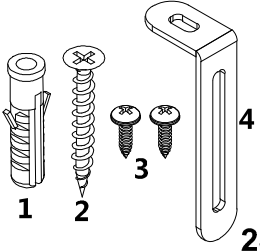A  Ø6x35mm (56+3)PCS	B  Ø15x9.5mm (56+3)PCS	C  Ø8x30mm (30+2)PCS
D  2PCS	E  Ø4x30mm (33+2)PCS	F  (10+1)PCS
G  Ø3x15mm (10+1)PCS	H  5PCS	I  Ø4x10mm (10+1)PCS
J  5SET	K  Ø3x12mm (30+2)PCS	L  Ø4x12mm (20+2)PCS
M  1 2 3 4 2SET	 1PC	


! J X 5SET

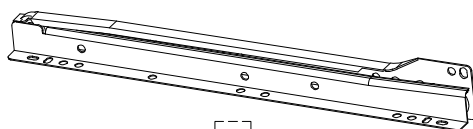


CL



CR




DL



DR




K



3mm


L




4mm




M =




1



2





3



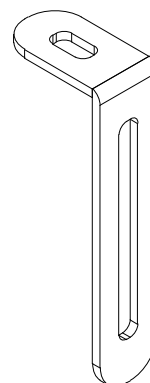


4



STEP 1

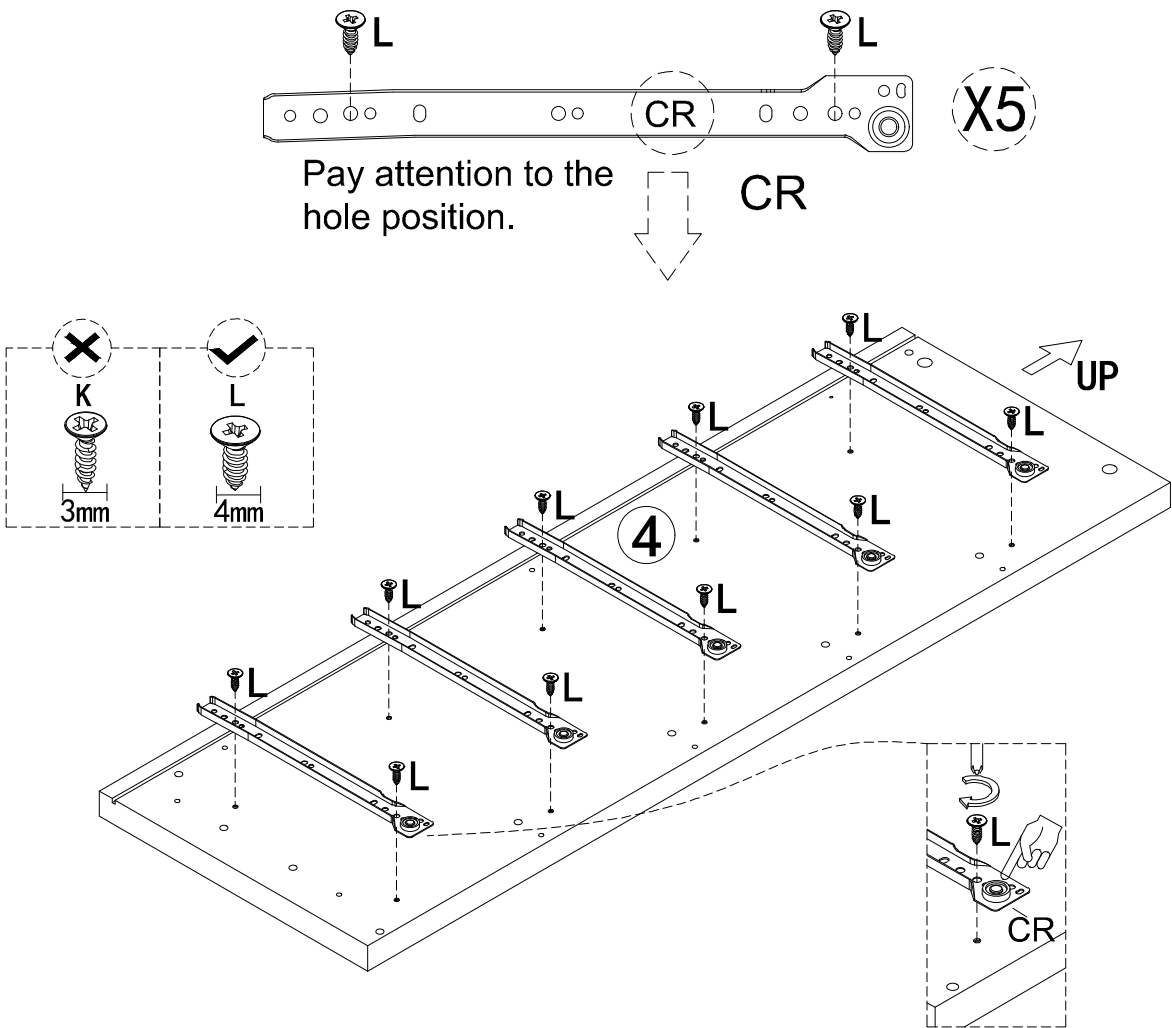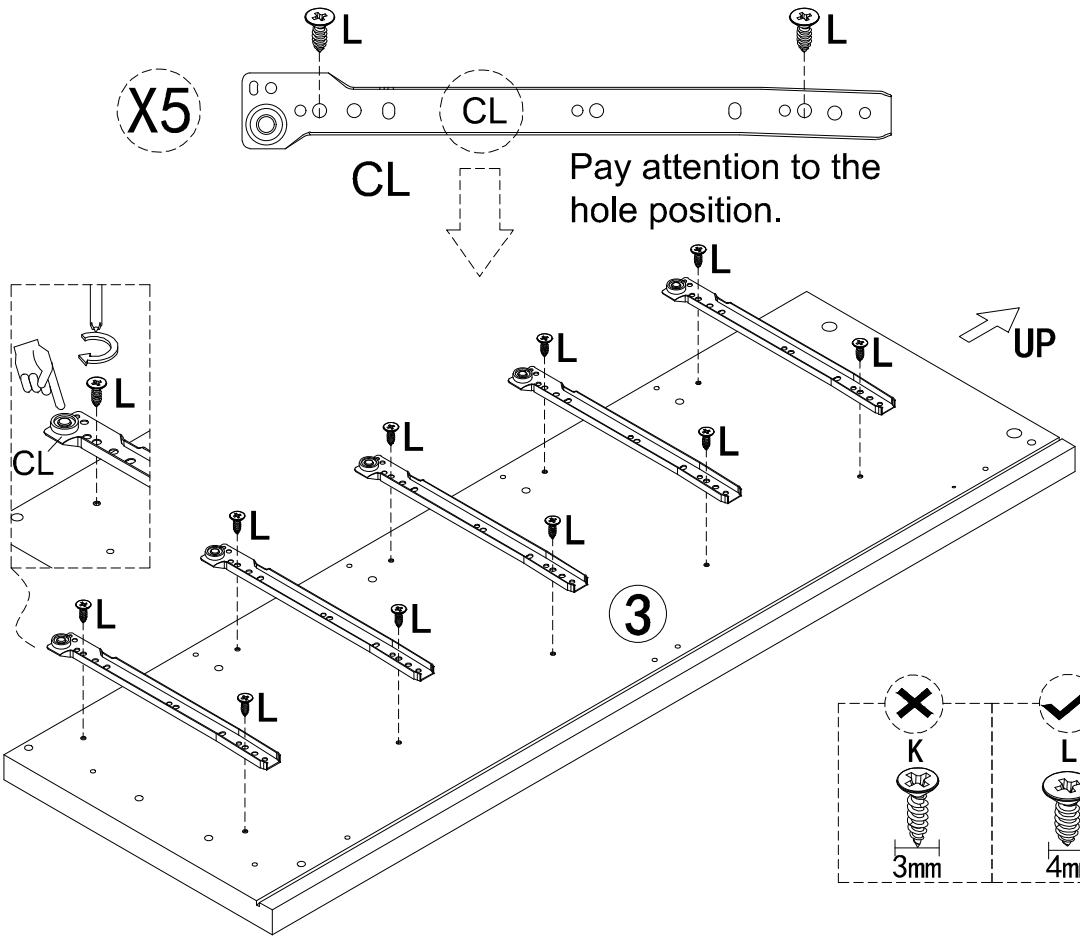




STEP 2

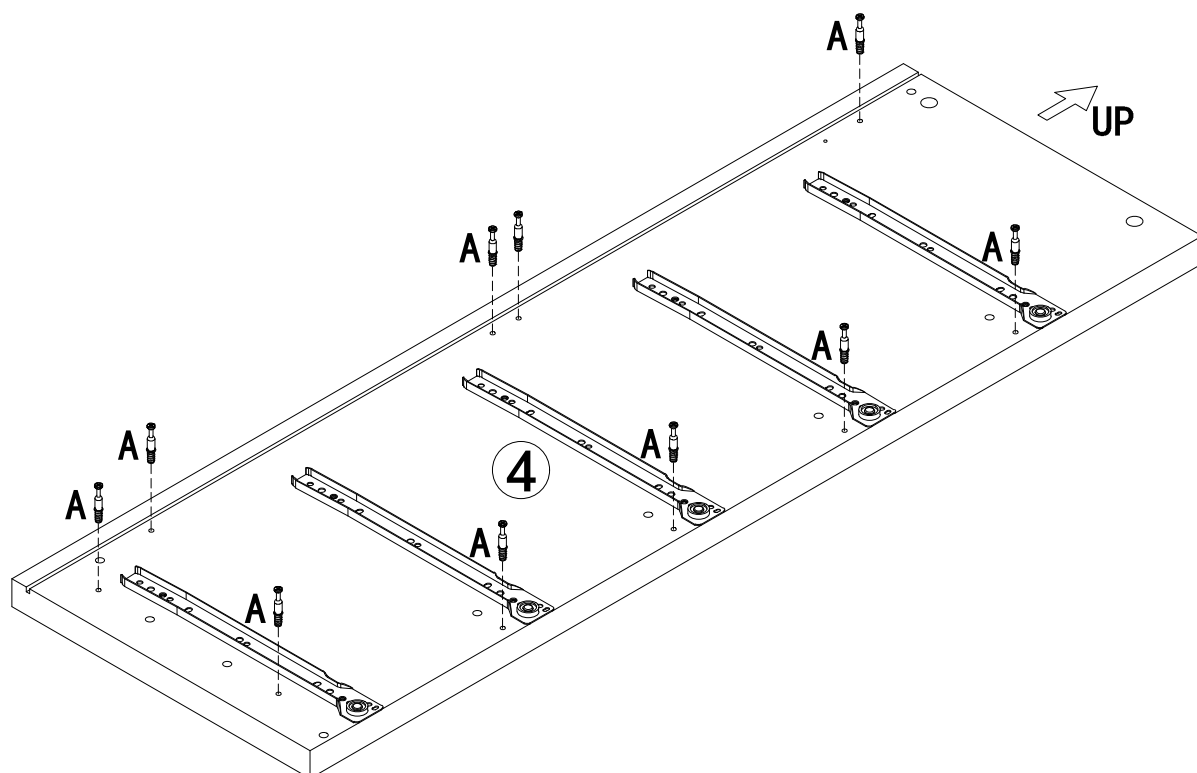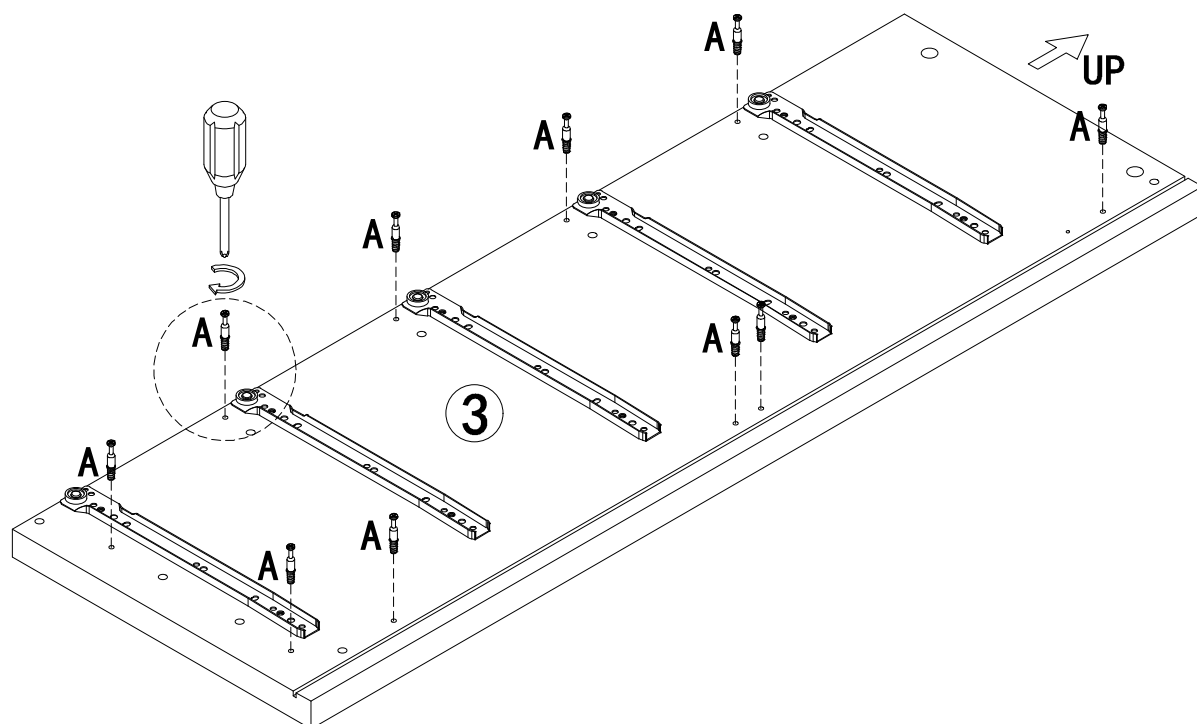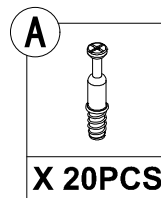



STEP 3

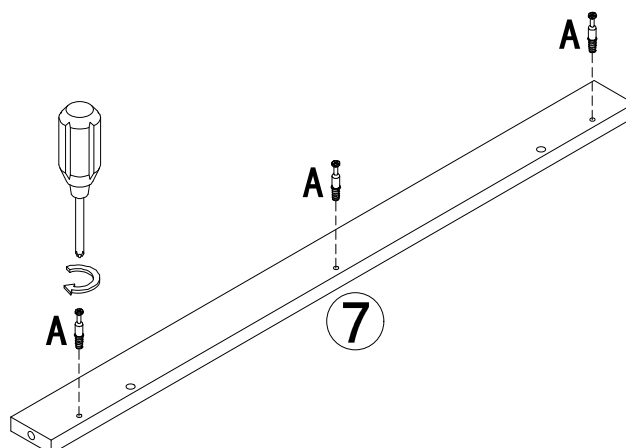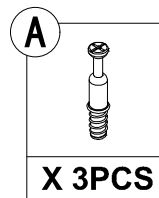




STEP 4

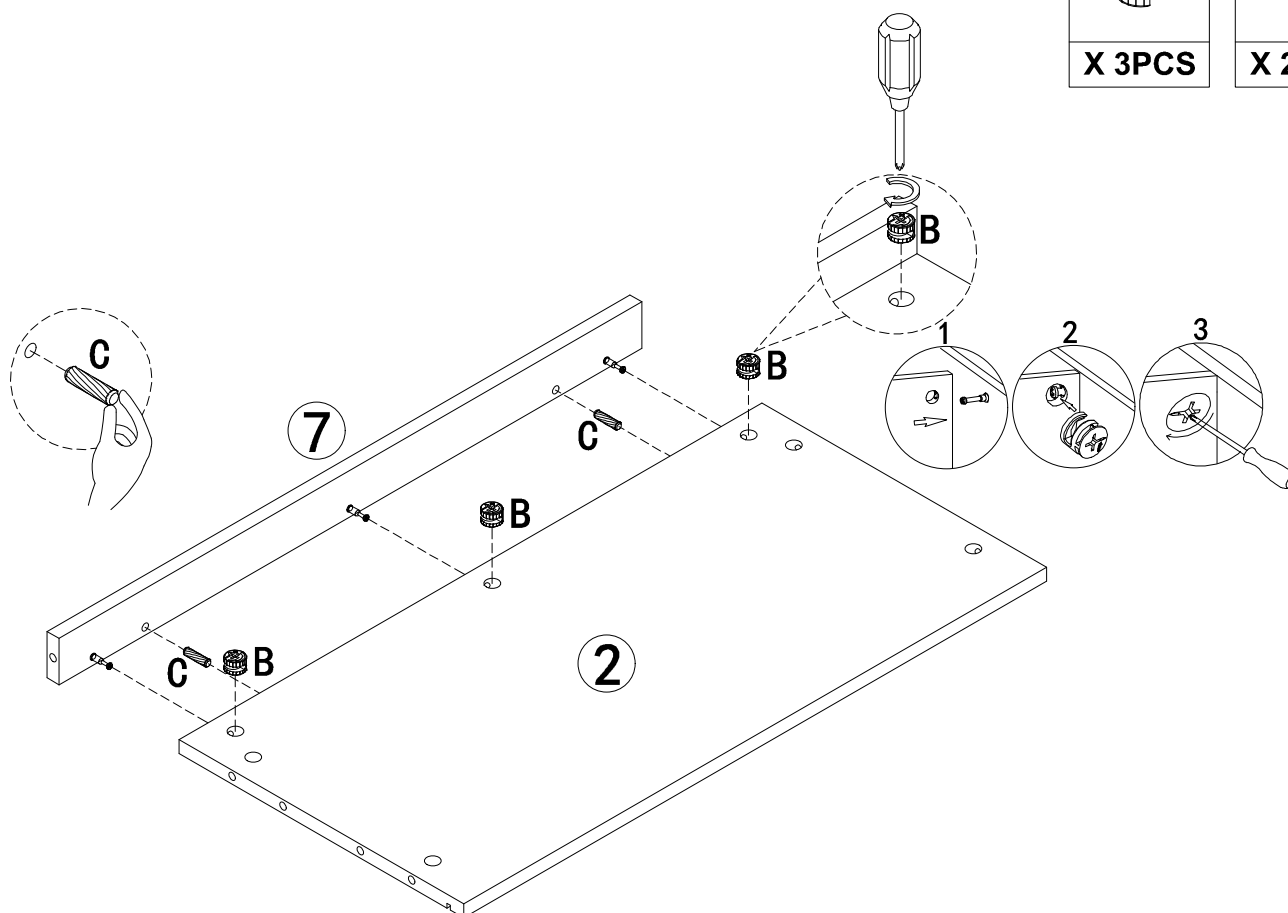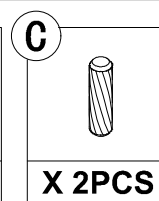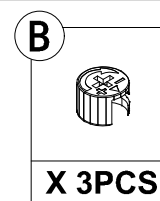




STEP 5

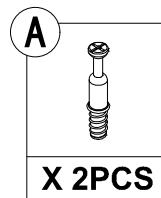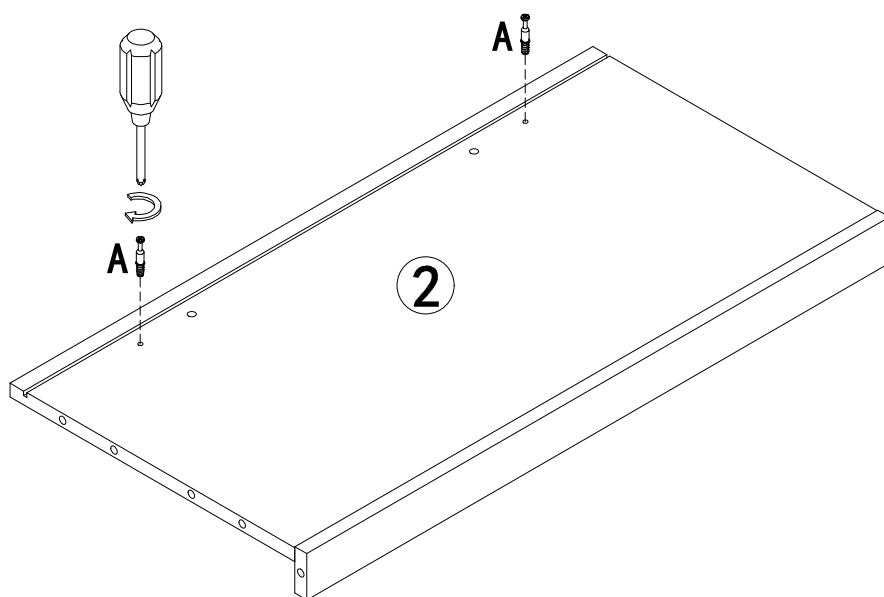




STEP 6

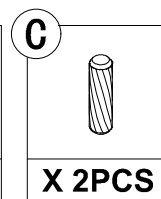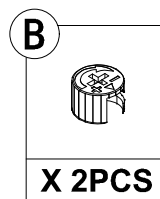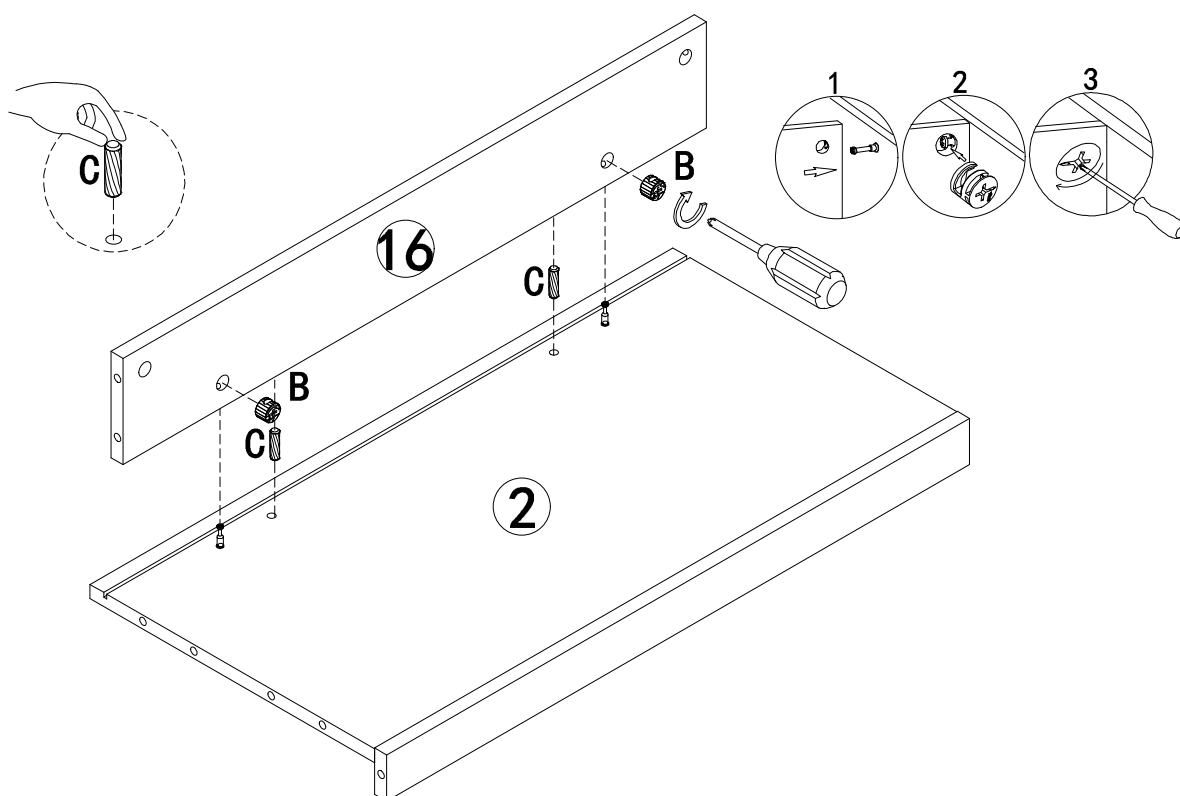

STEP 7

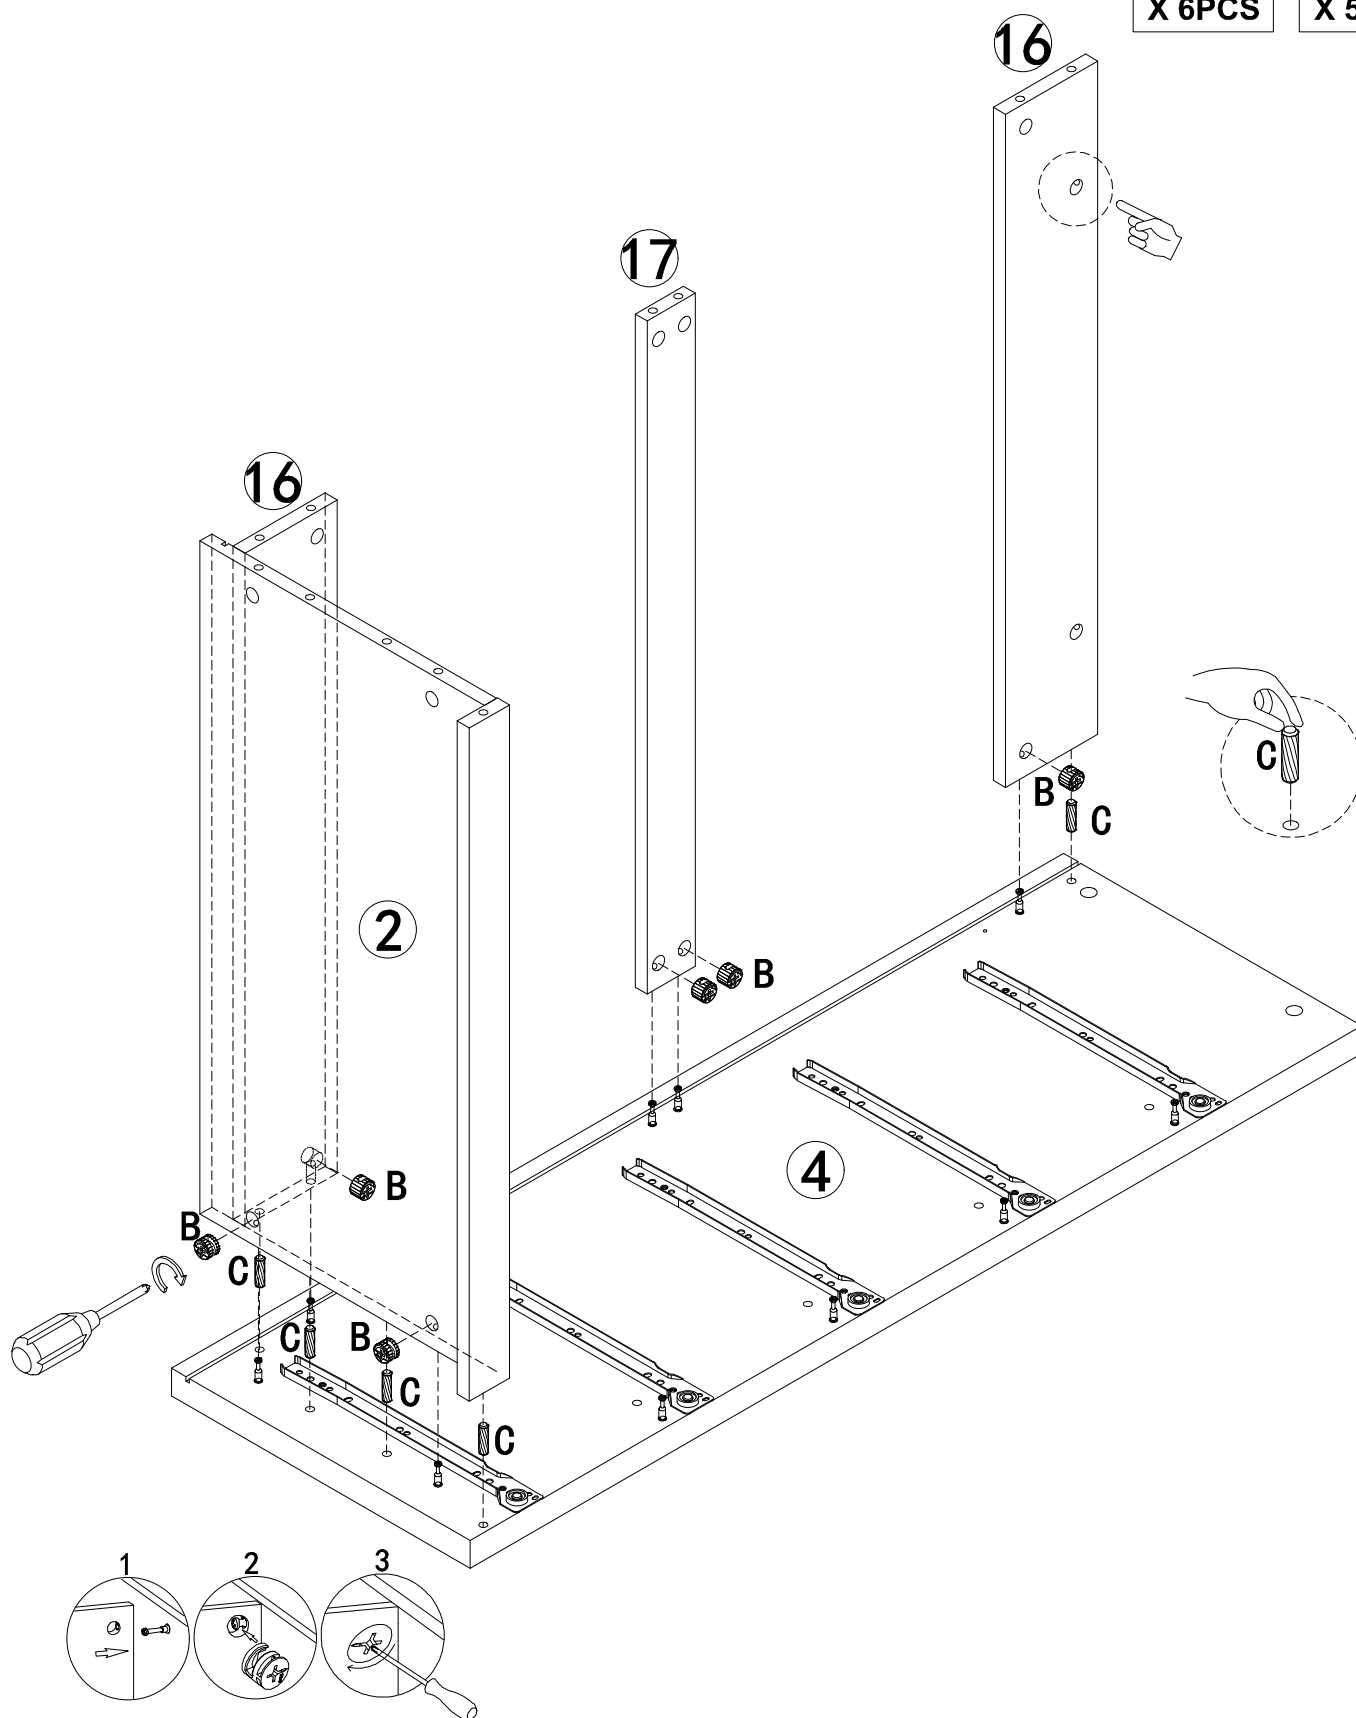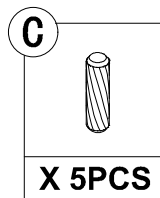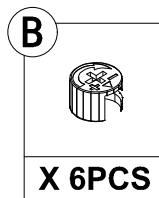

STEP 8

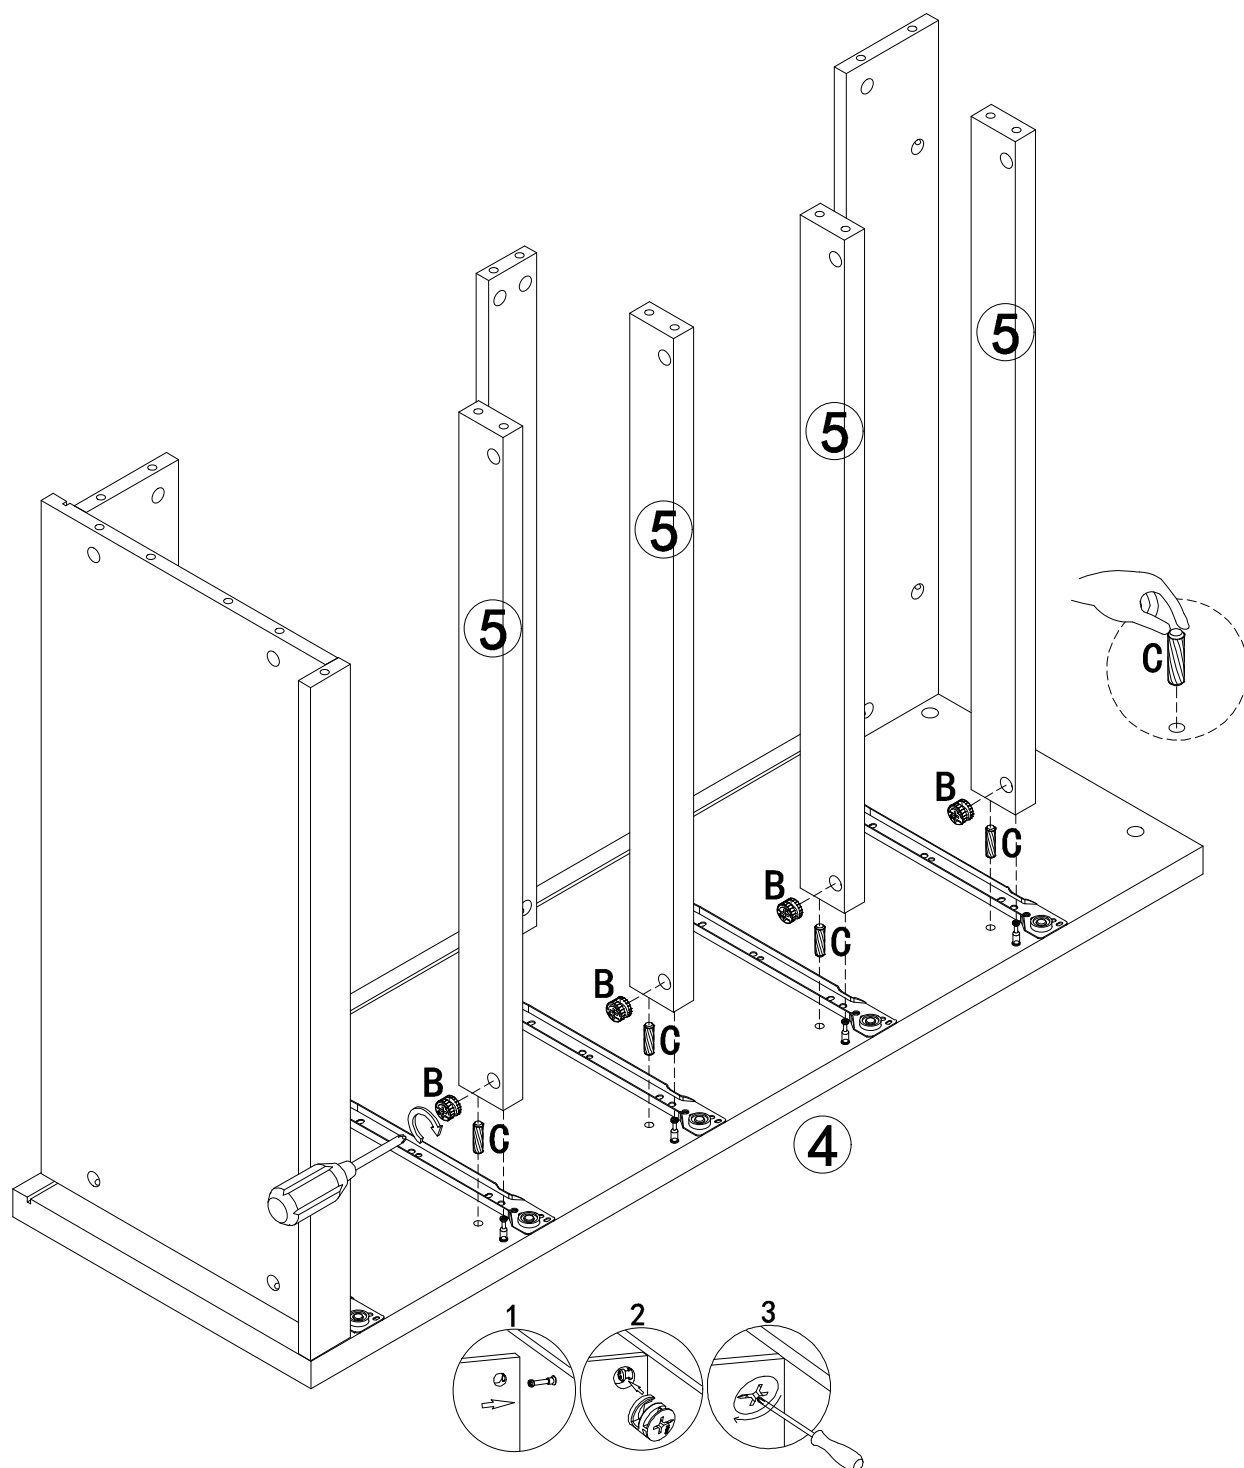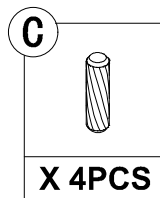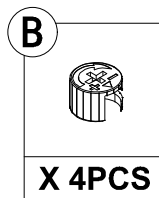





STEP 9

B



X 10PCS

C






X 9PCS

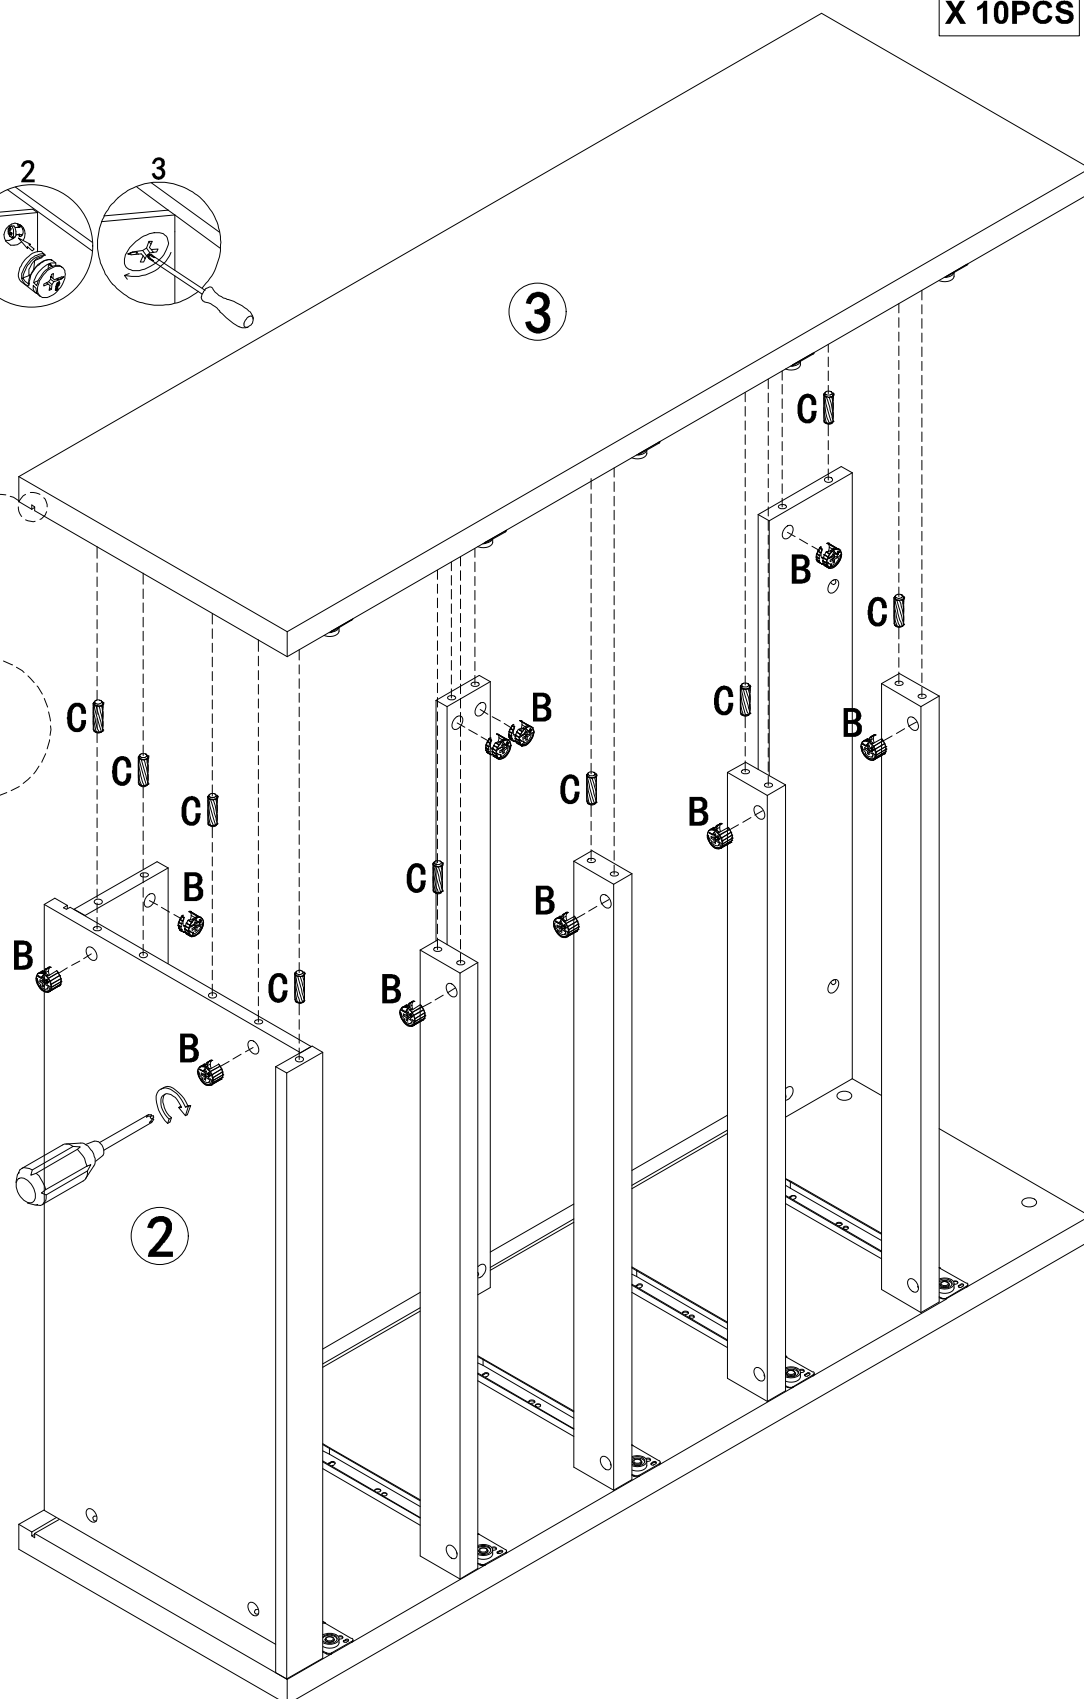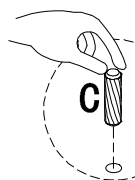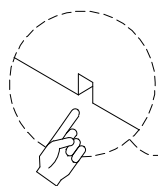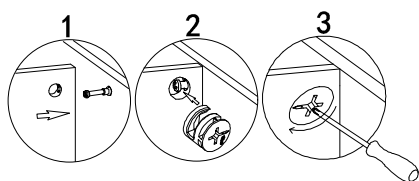





STEP 10

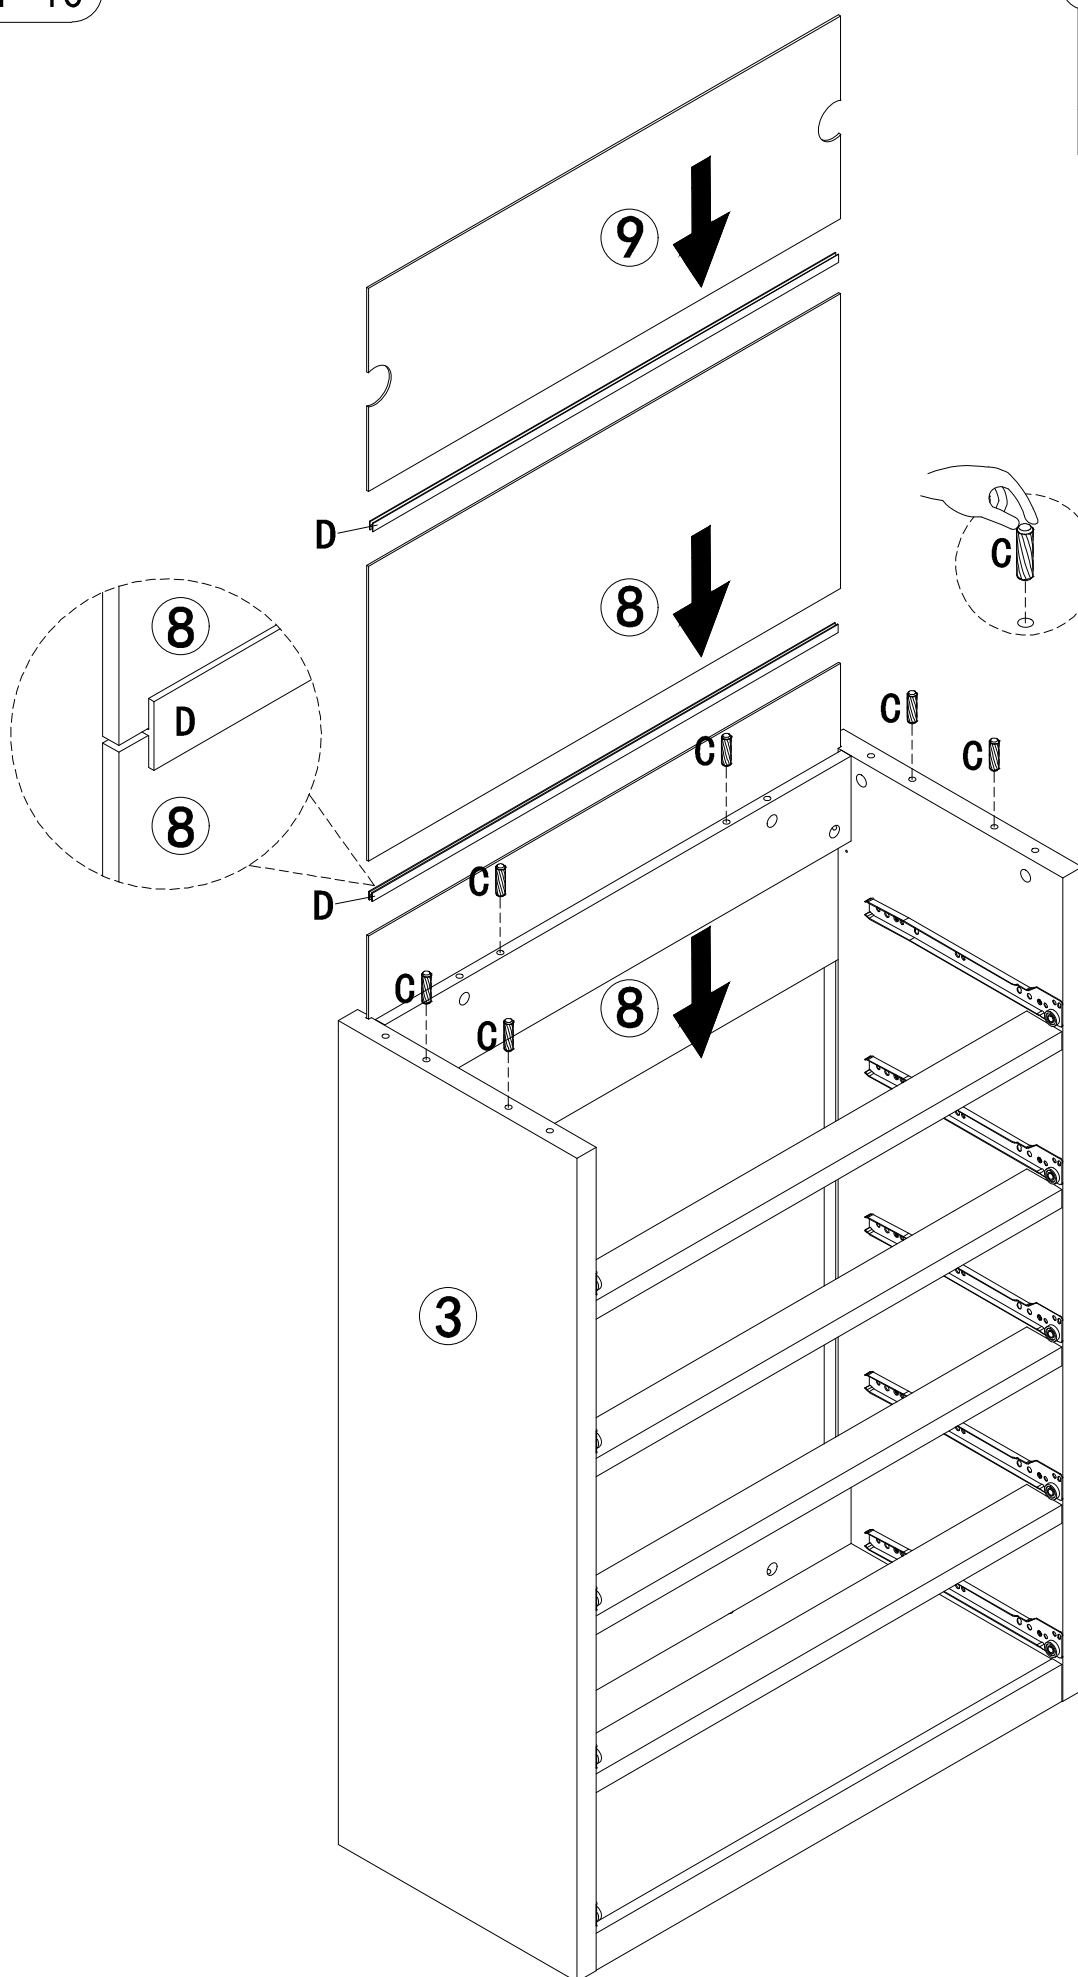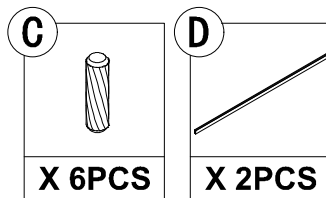




STEP 11

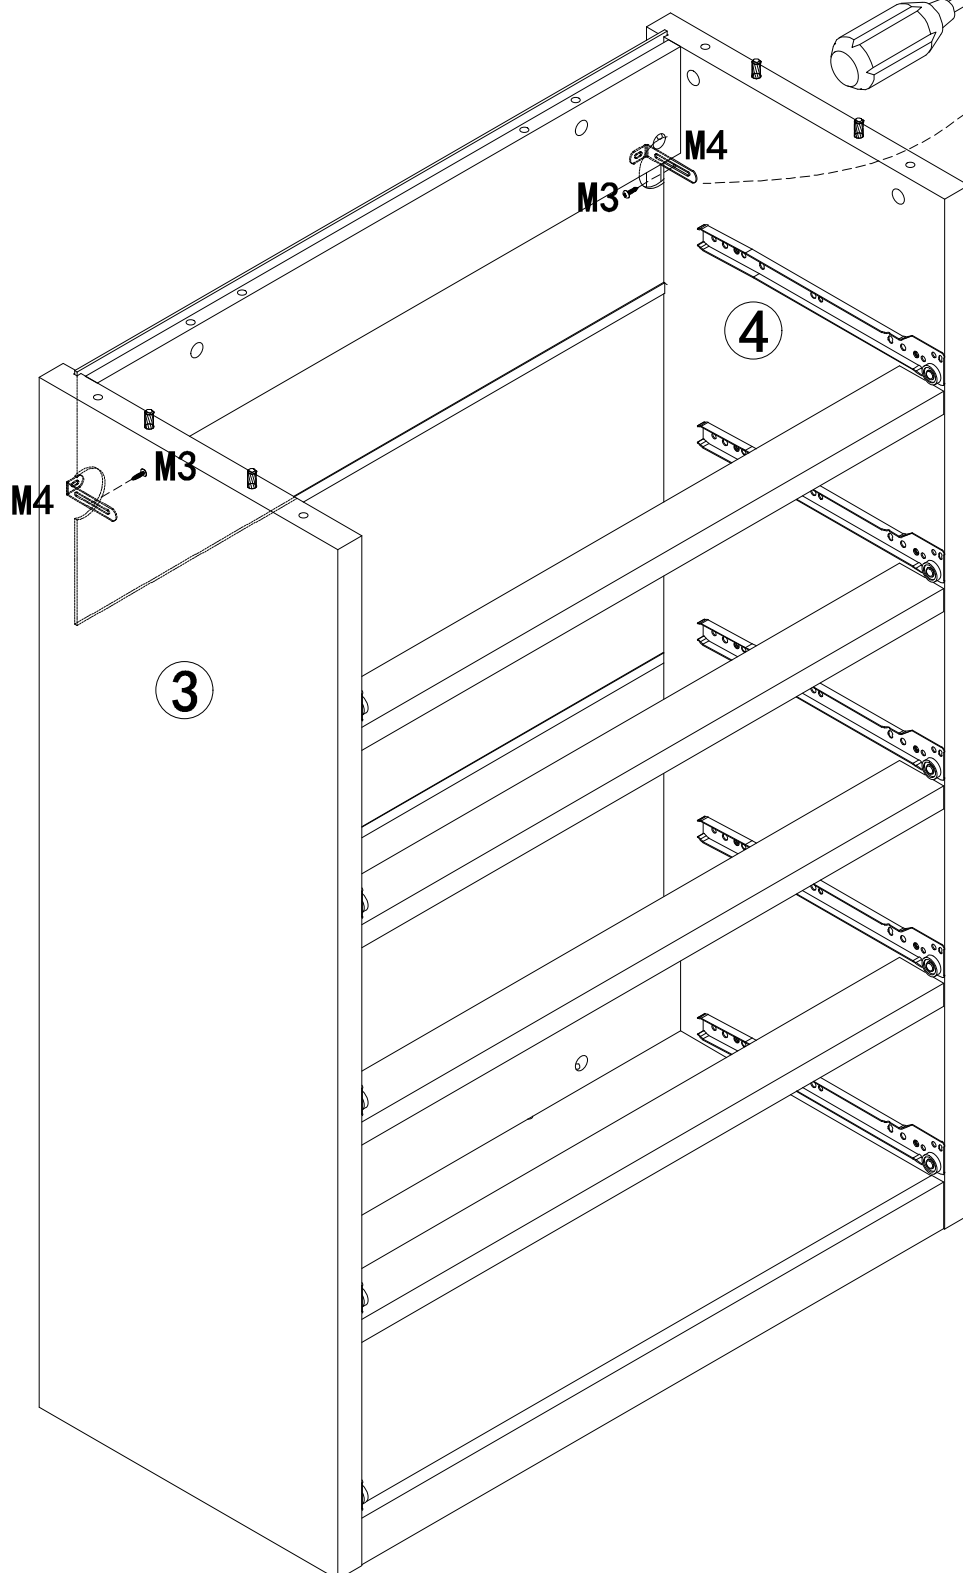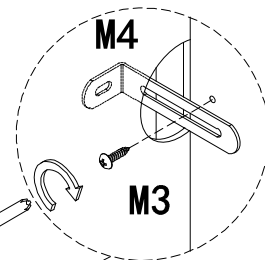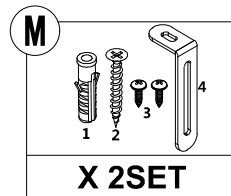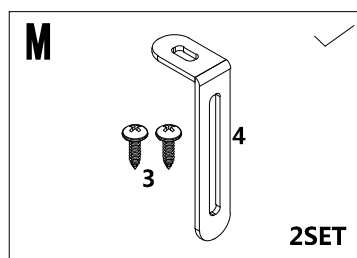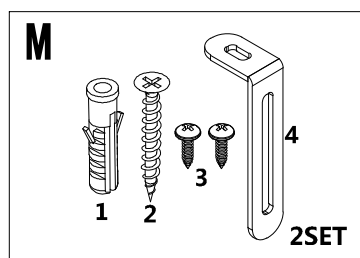

STEP 12

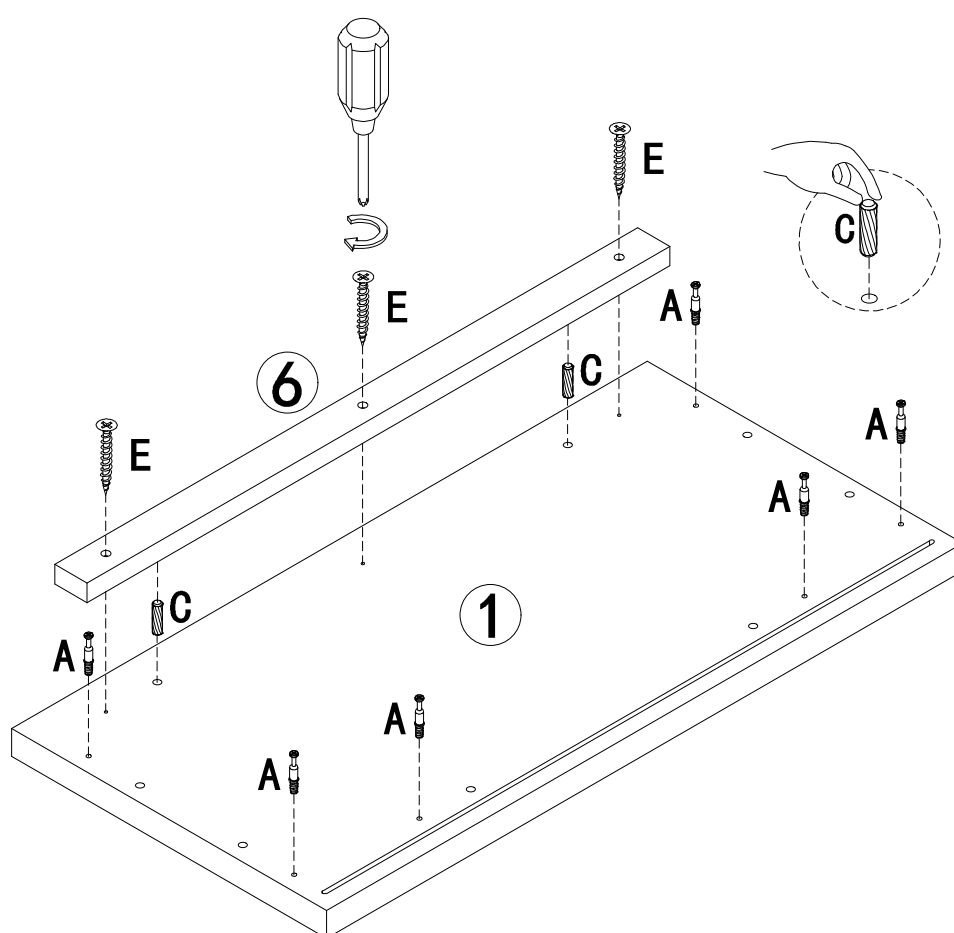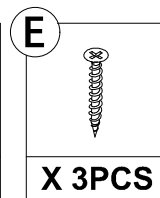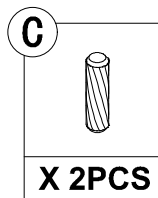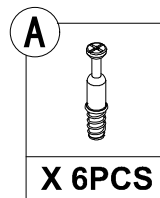


STEP 13


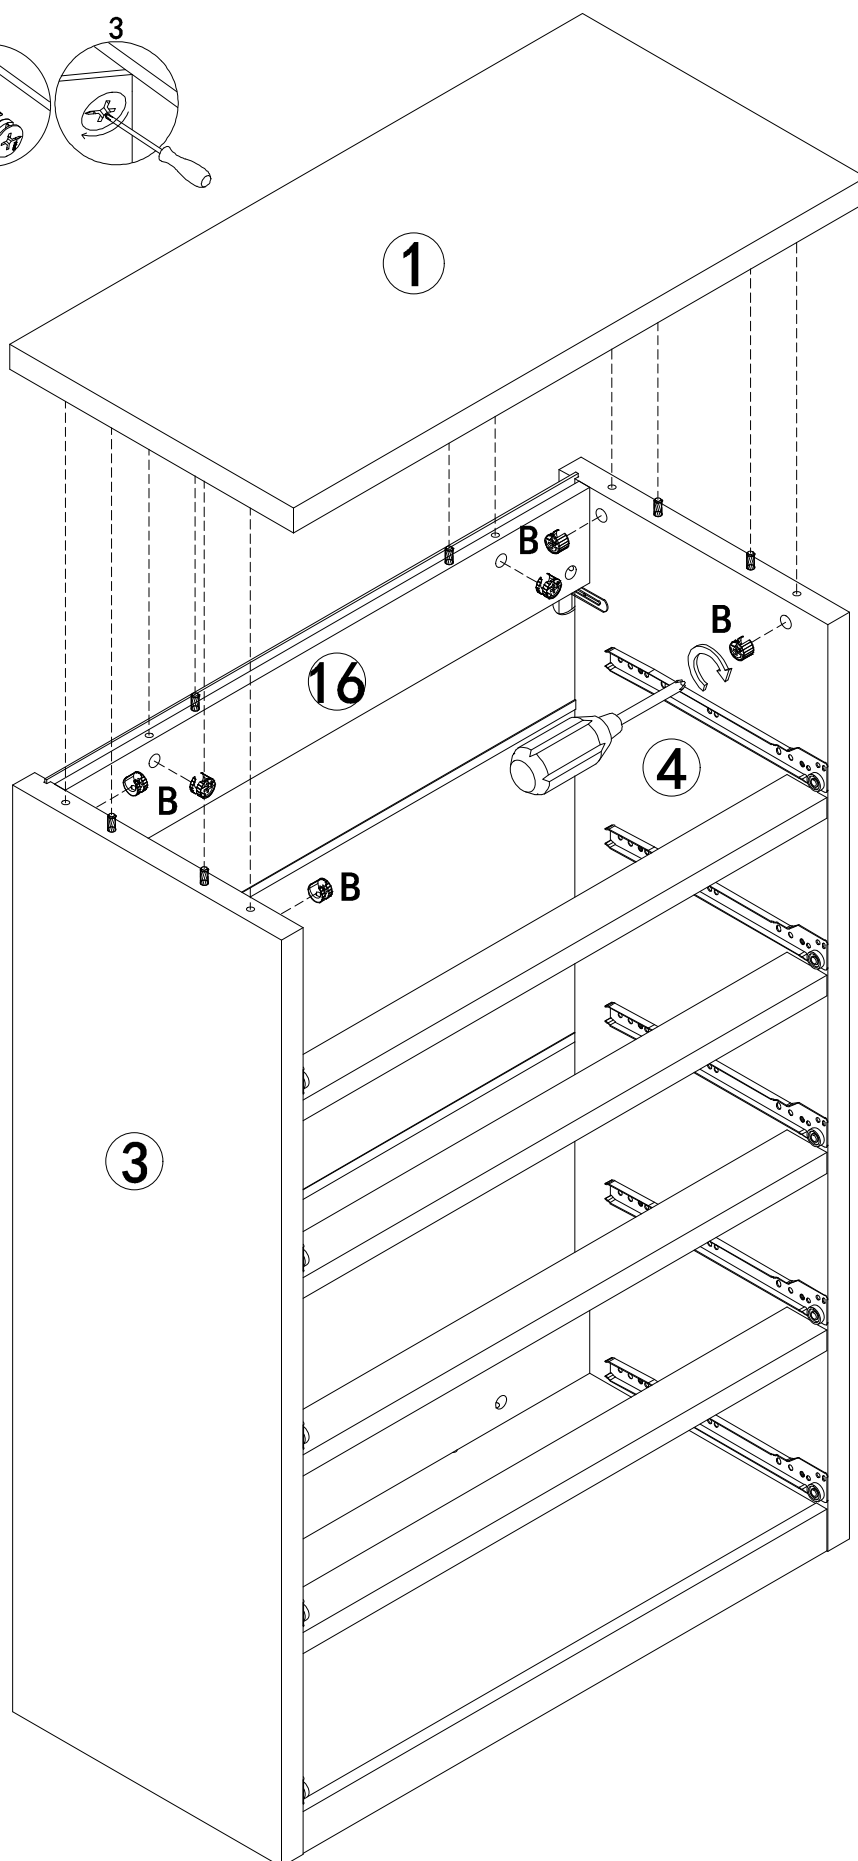
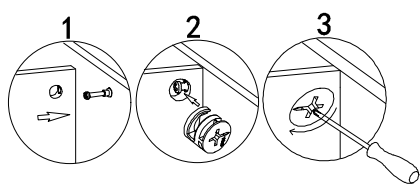
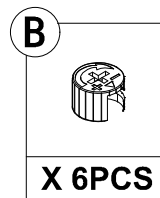


STEP 14



NOTE: To prevent the cabinet from wobbling please be sure to install the back panel fasteners.

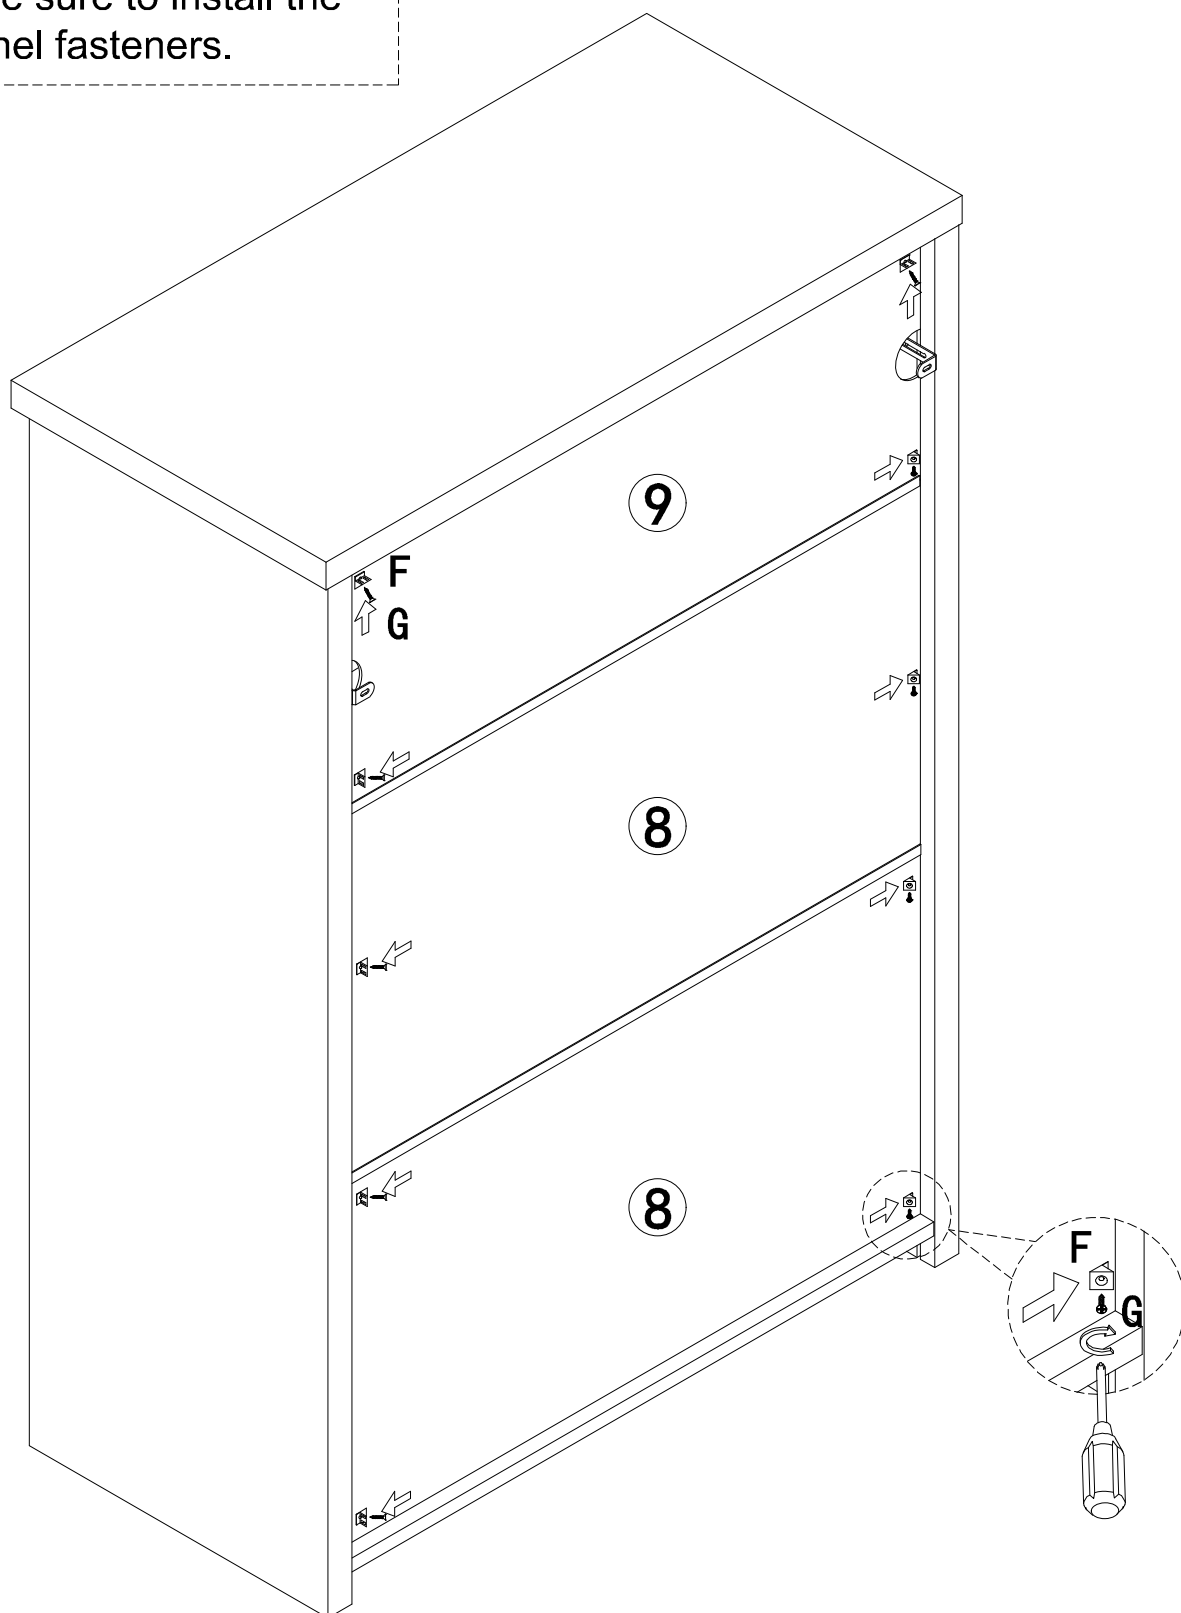F**X 10PCS****G****X 10PCS**



STEP 15

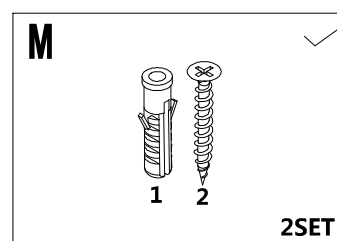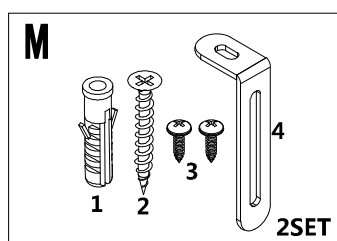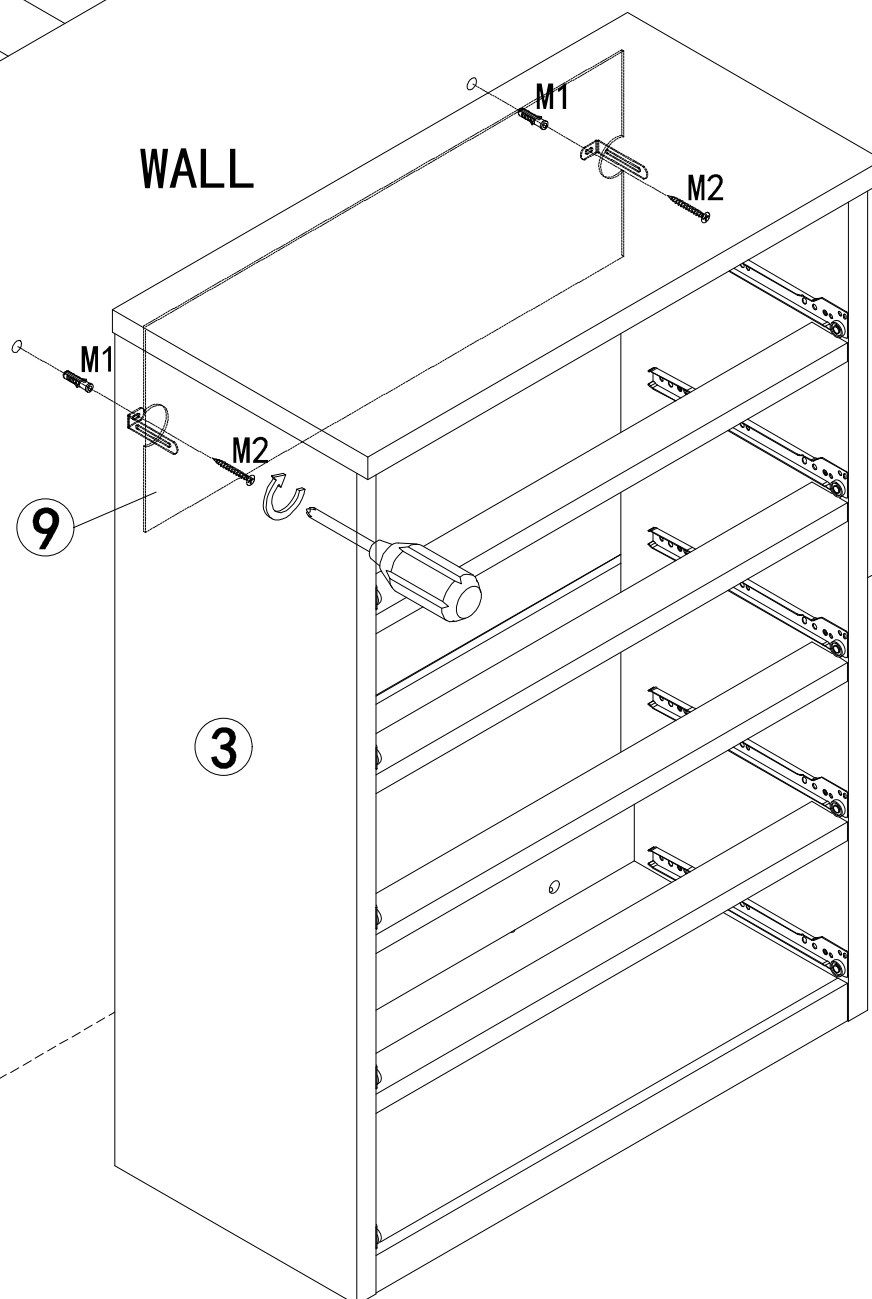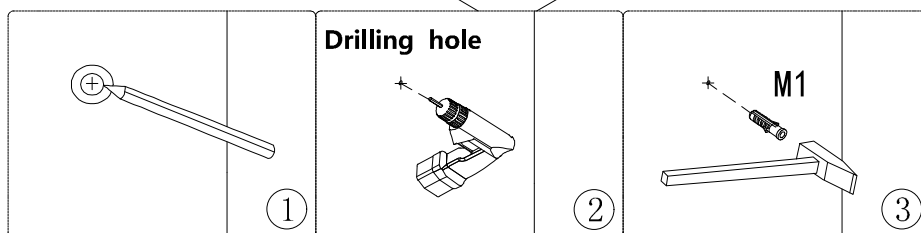




STEP 16

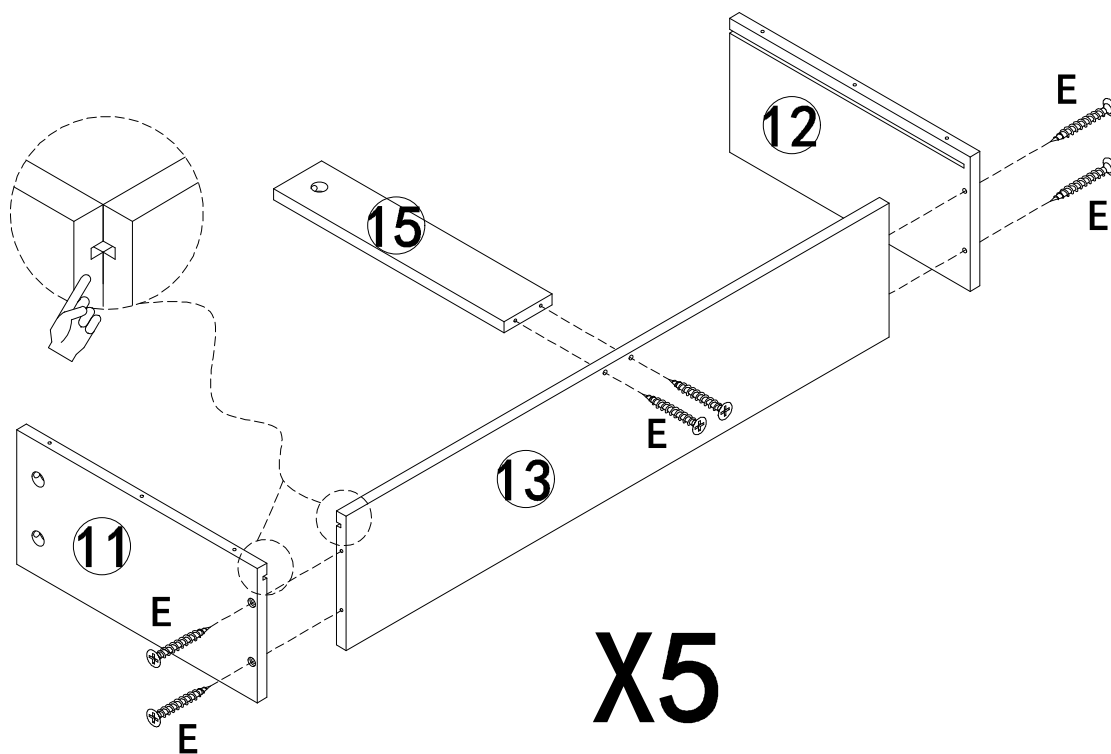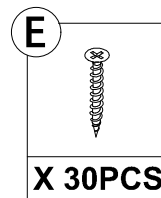

STEP 17


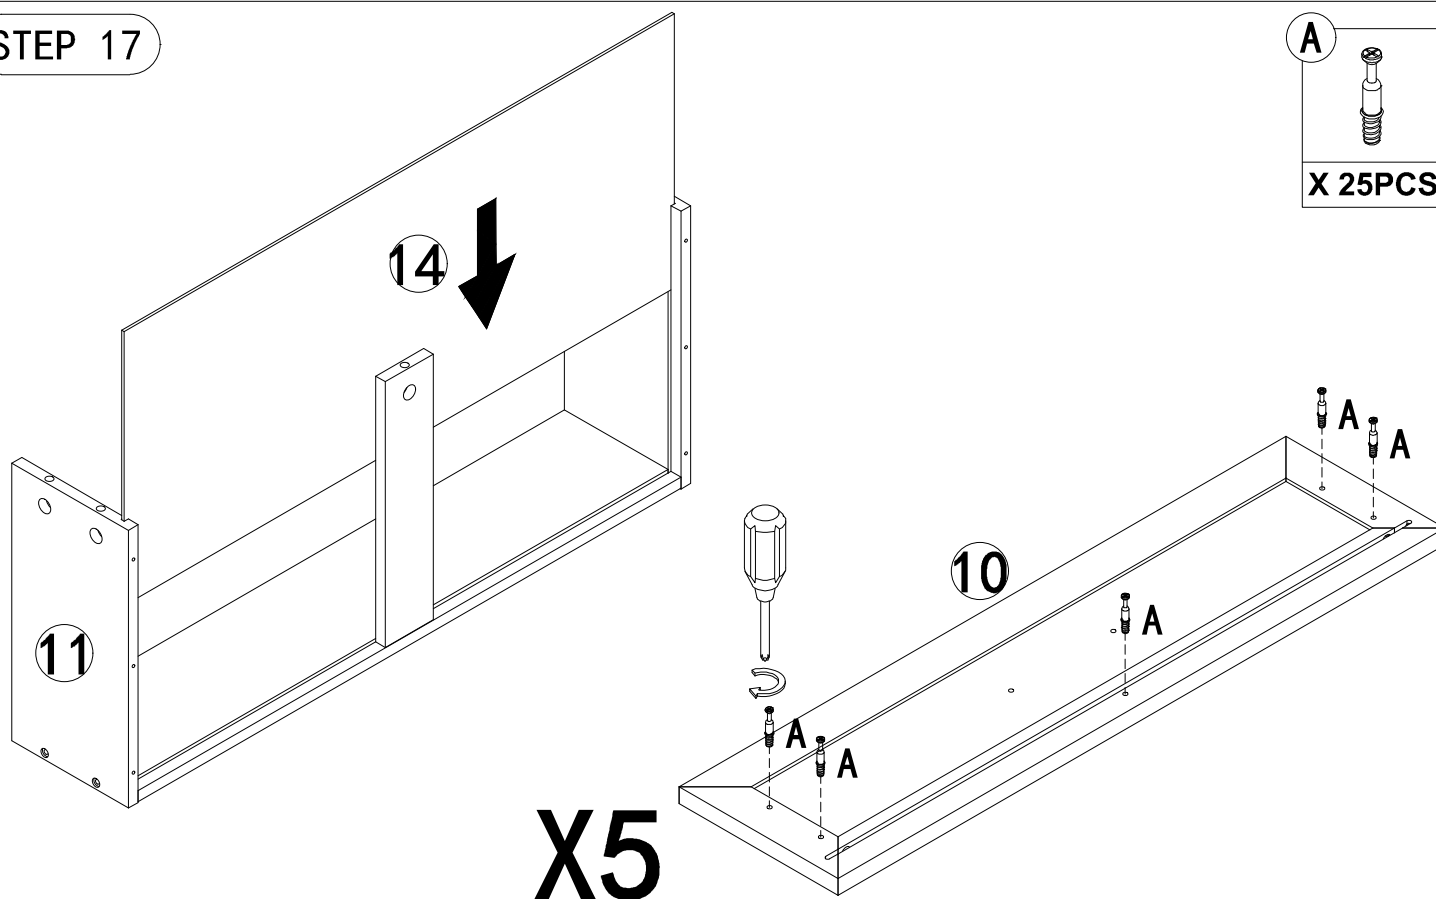
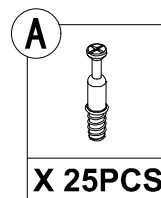


STEP 18

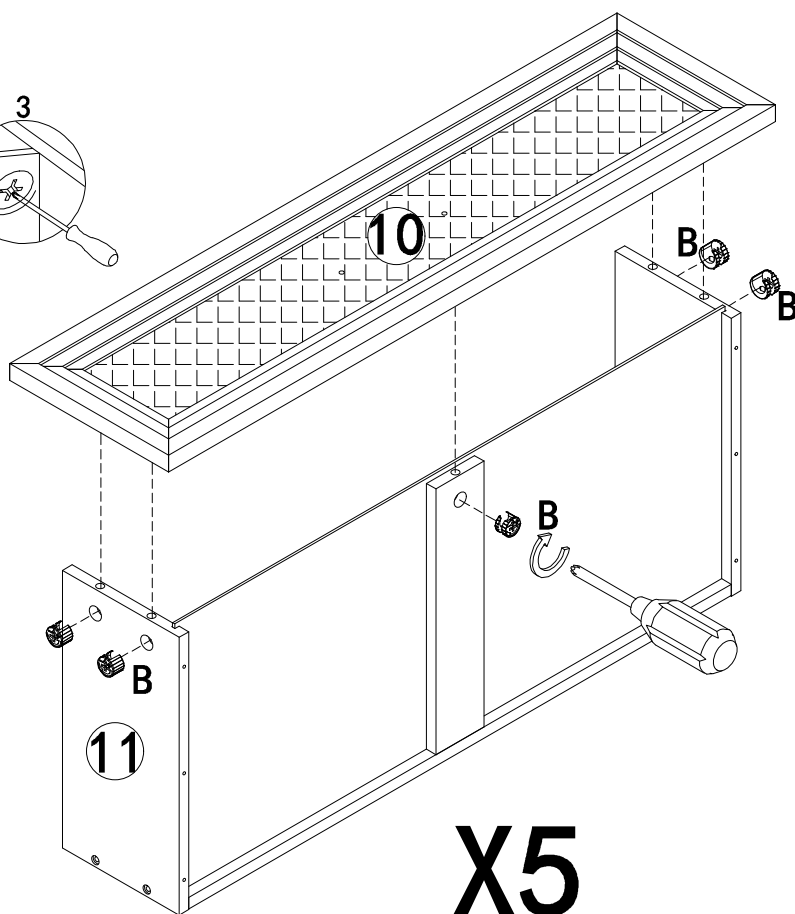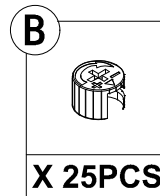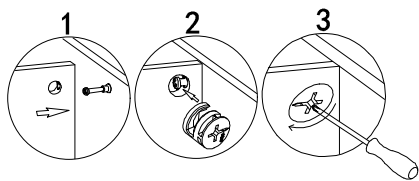



X5

STEP 19

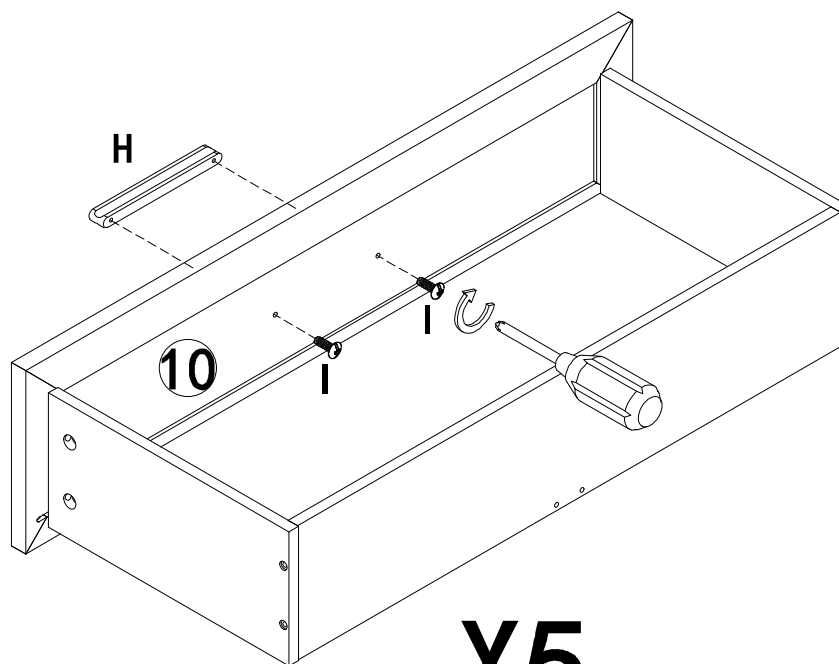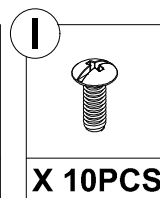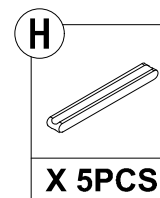


X5

STEP 20

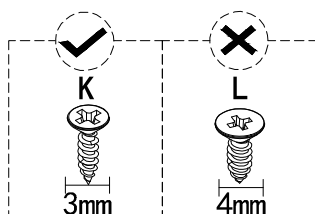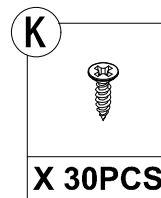

Pay attention to the hole position.

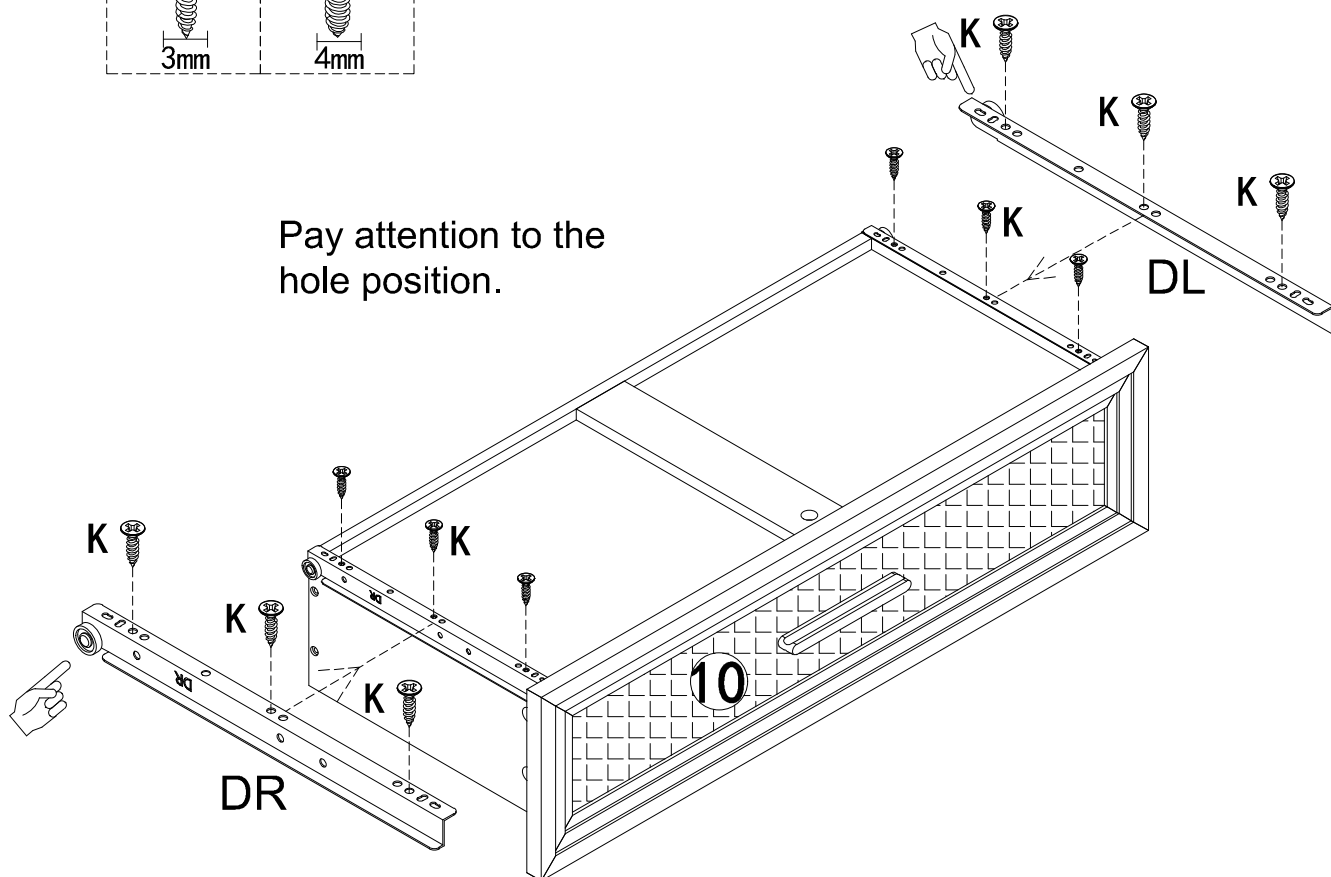

X5

STEP 21

