


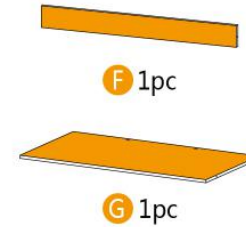
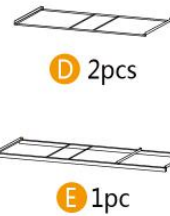




WF199621



Product Assembly Accessories:

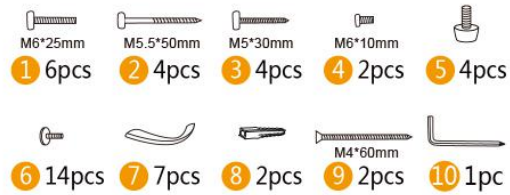

Product Assembly Steps:



step1:

- ① Secure the frame **E** between the frame **A** and **B** with ① screw
- ② Install ⑤ adjustment foot on the frame **A** and **B** respectively

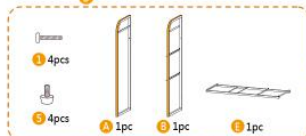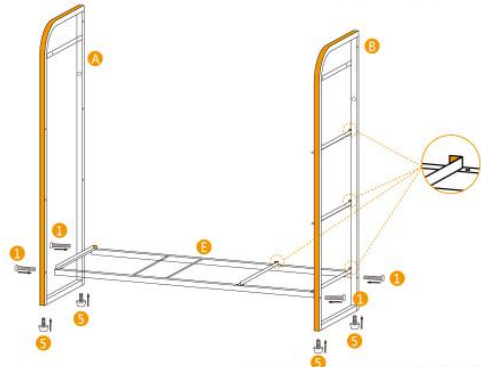


step2:

- ① Fix the frame **C** to the bottom frame **E** with ① screw
(Do not tighten the screws during installation)

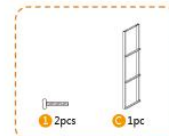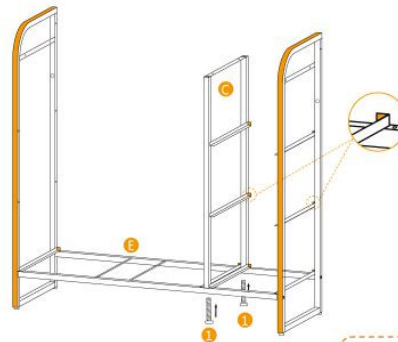

step3:

- ① Insert two frames **D** into the frame **A** and **C** in sequence

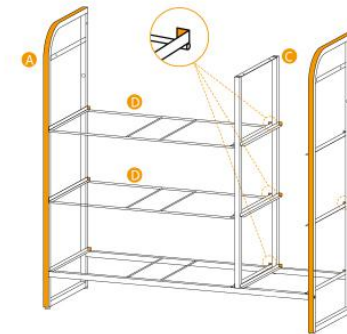


step4:

①Secure the wood top **6** to the entire frame with screws **3** and **4**





step5:

①Secure the backboard **5** with **2** screw

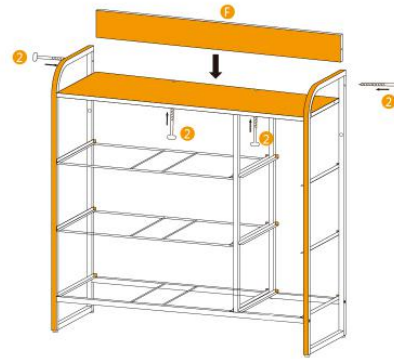

step6:

①Install the handle **7** on the drawer with **6** screw

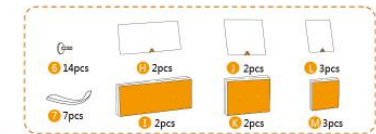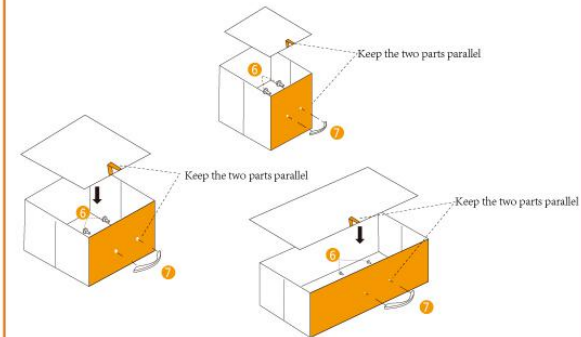


step6:

①Put the drawer in the dressers



step6:

①If you need to fix the dresser drawer, use a power drill to make holes in the wall, insert **8** screw, and fix the dresser with **9** screw.

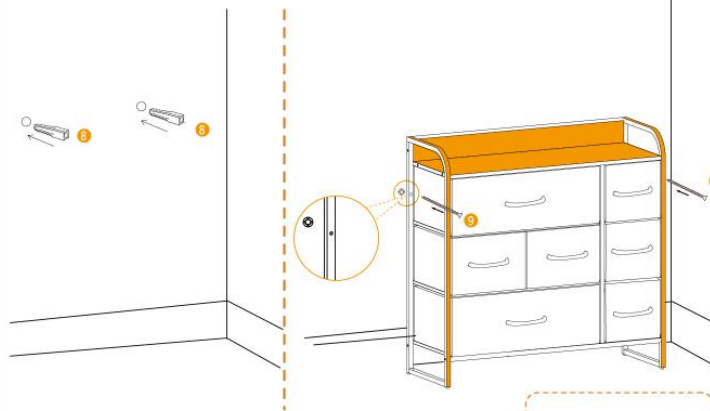

NOTE:

♥ It is recommended that you categorize the accessories before installation to quickly find the required accessories during installation.

♥ When assembling the drawer, make drawer bottom handle and the drawer wooden handle remain parallel.

♥ The end of the frame with a right angle is placed behind the dresser drawer to prevent the drawer from slipping.