


ASSEMBLY INSTRUCTIONS


PFK-70BKS-23PC-RBR

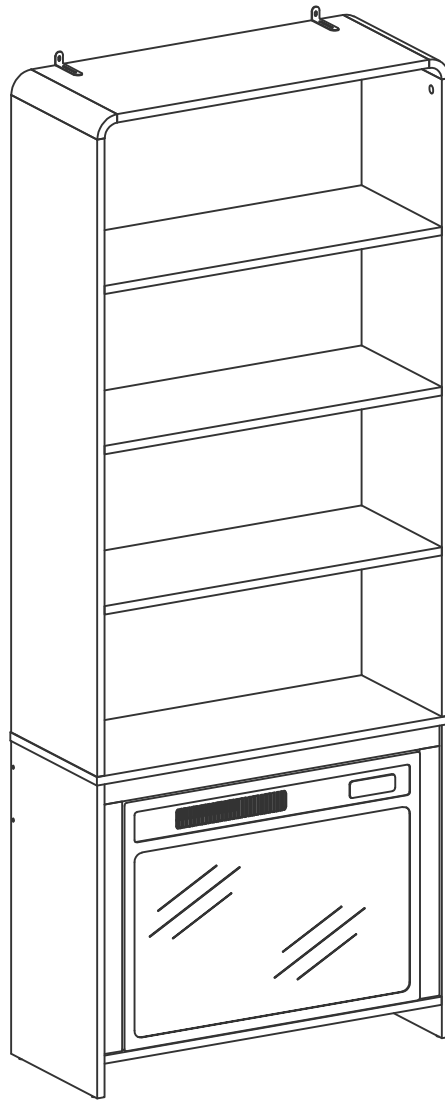





















Attention: The Cabinet and Fireplace come in **TWO PACKAGES**
Please don't be confused if only one package was received.





 hellovitesse@gmail.com

 +1(503) 928-7812

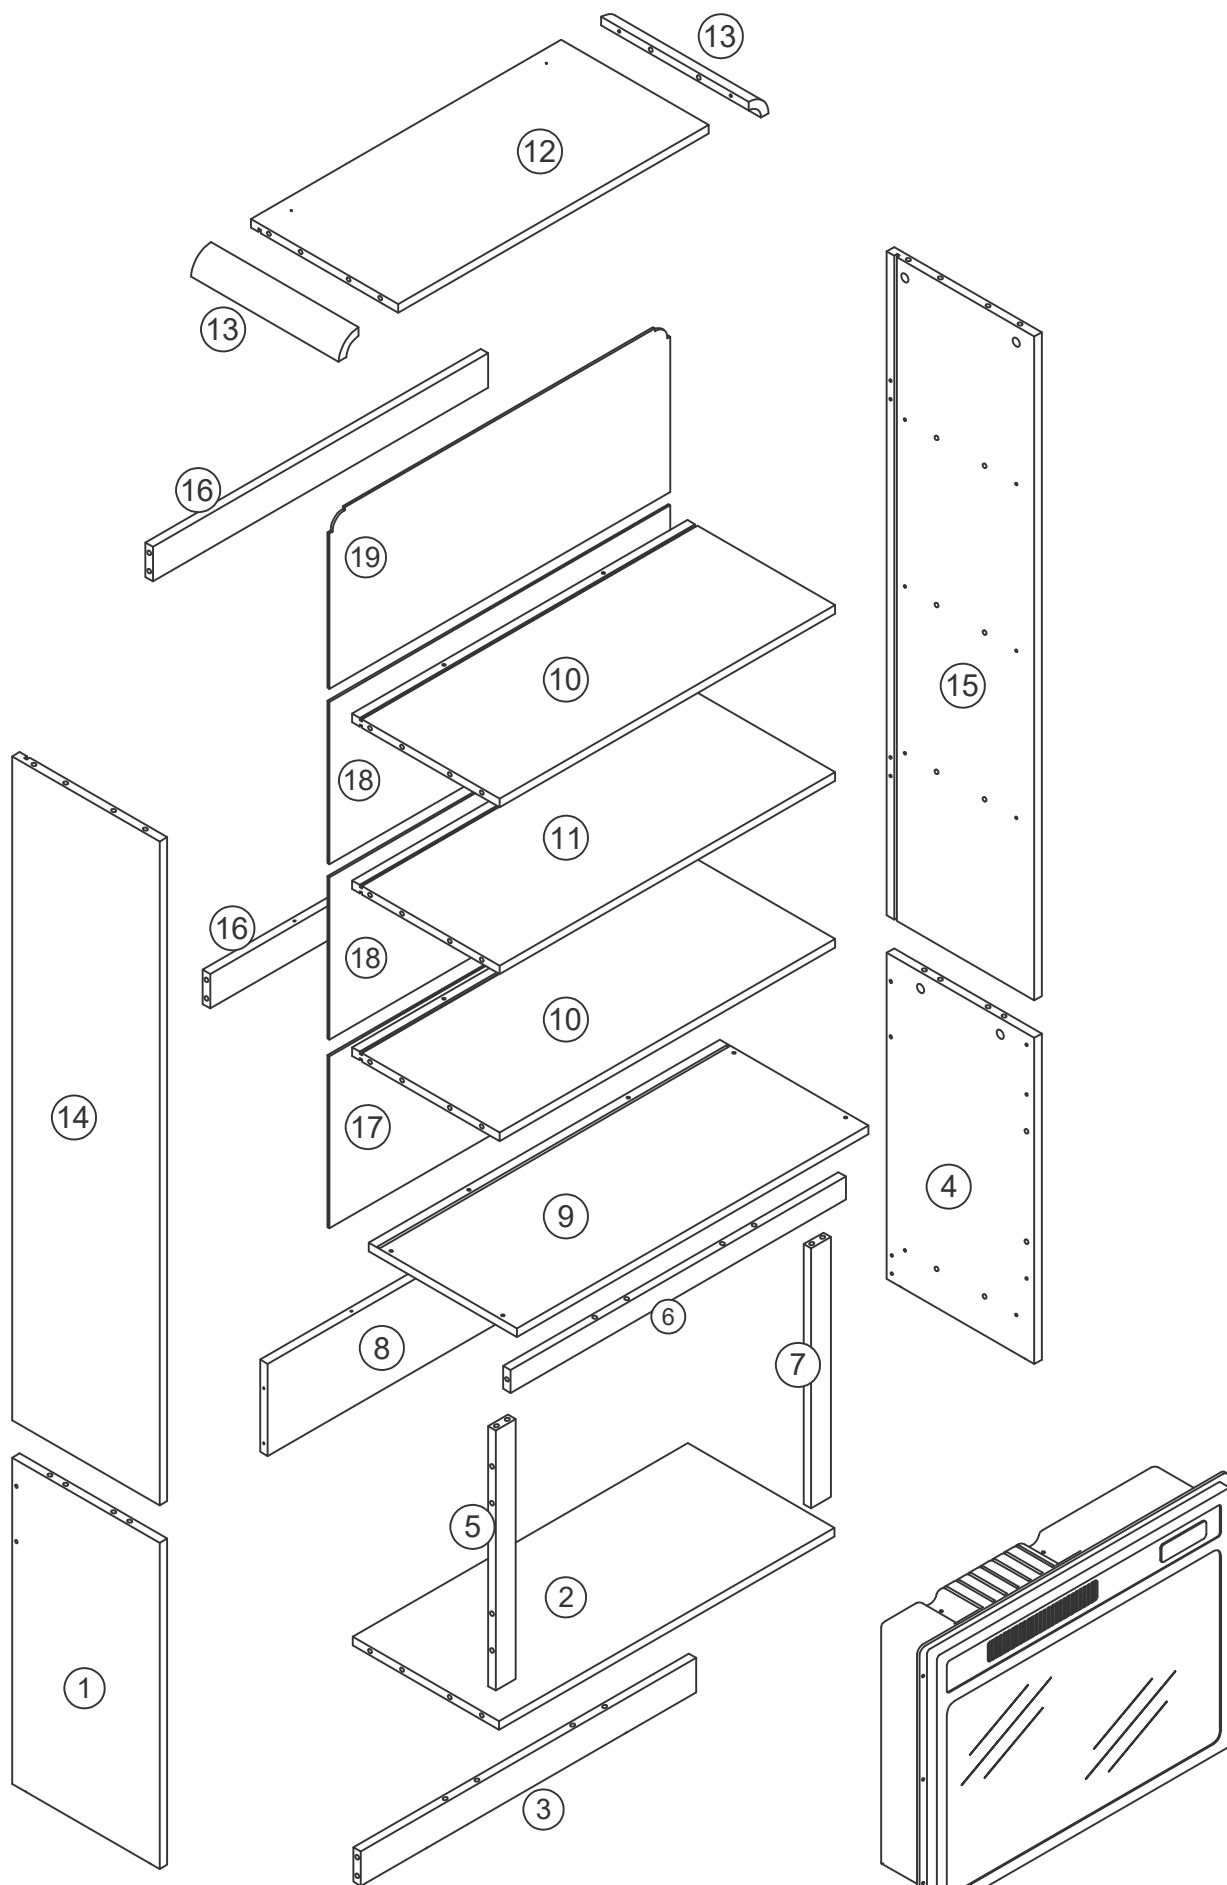


Delivered in another parcel

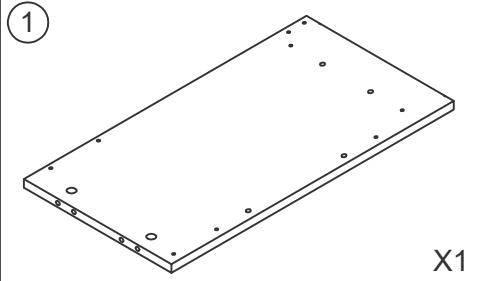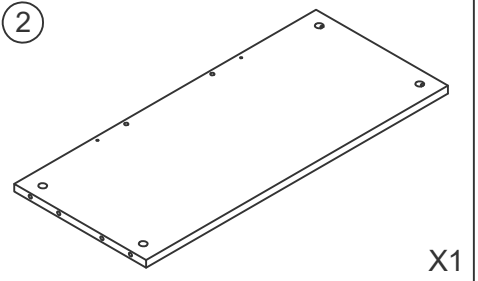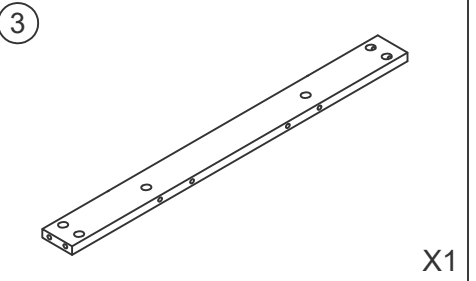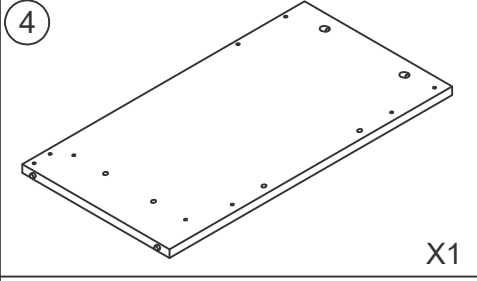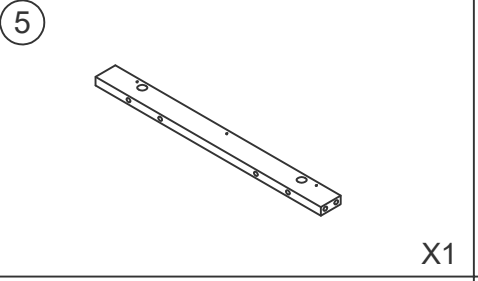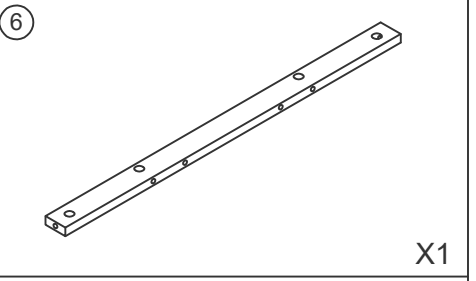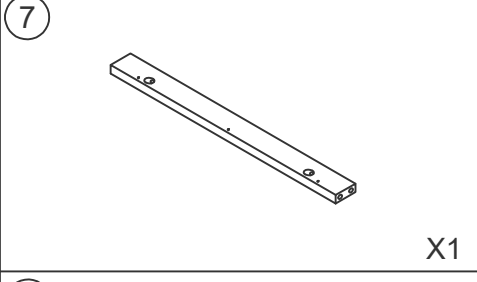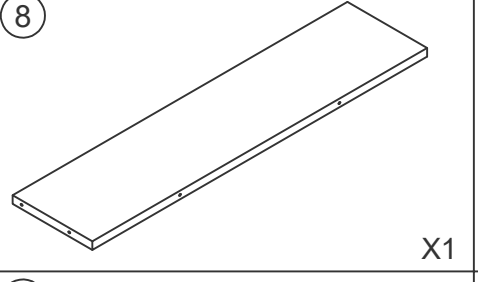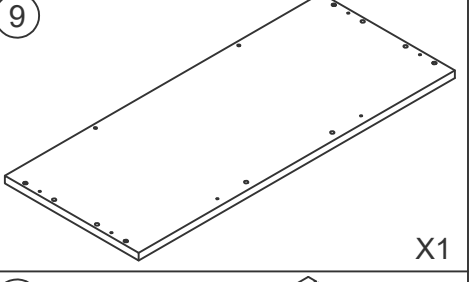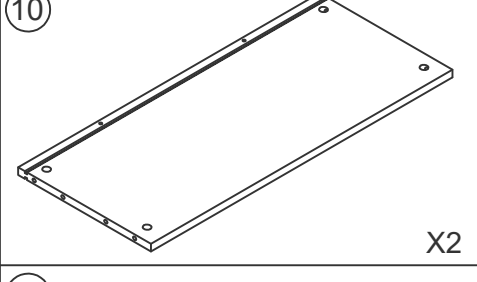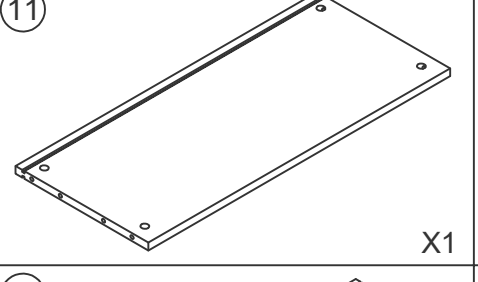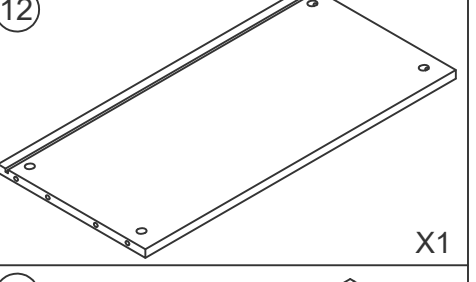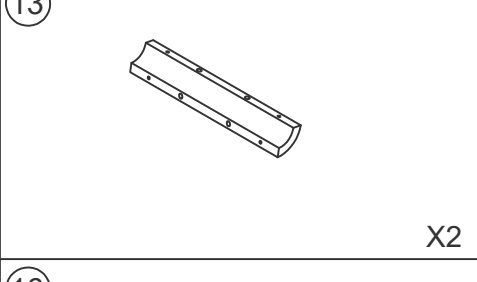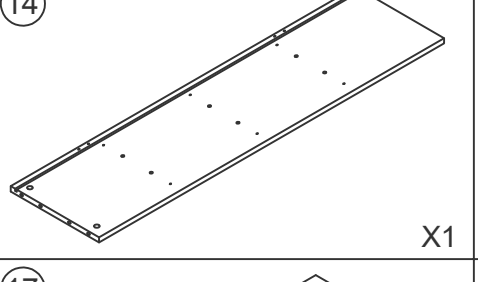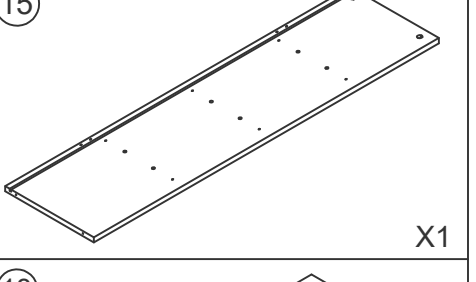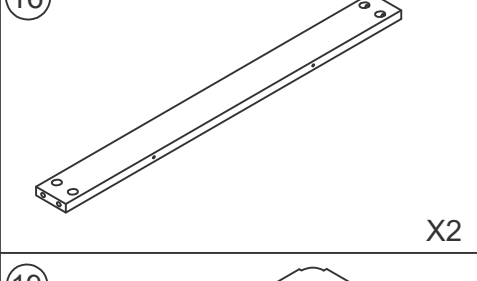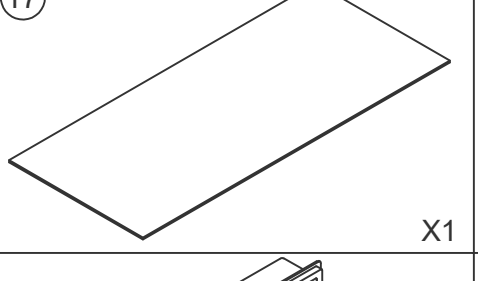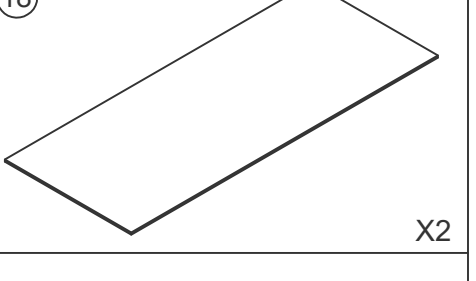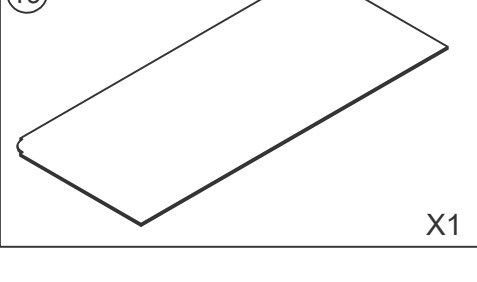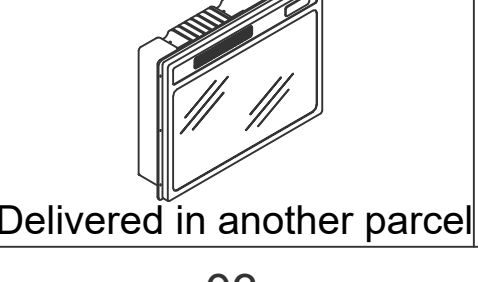 X1	 X1	 X1
 X1	 X1	 X1
 X1	 X1	 X1
 X2	 X1	 X1
 X2	 X1	 X1
 X2	 X1	 X2
 X1	 Delivered in another parcel	


(A) M5X35	(B) 15X12	(C) 8X40	(D) M5X40	(E) M3.5X14	(F)
					
50 PCS	50 PCS	40 PCS	14 PCS	18 PCS	16 PCS
(G) M5X14	(H) 21X1	(J)	(K) M5X55 8X60		3#
					
6 PCS	20 PCS	2 PCS	2 PCS	1 PCS	1 PCS

Cam Lock Fastening System


This Cam Lock Fastening System will be used throughout the assembly process

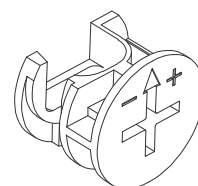


1

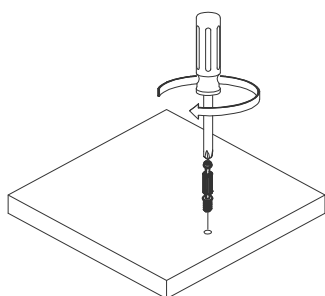


2

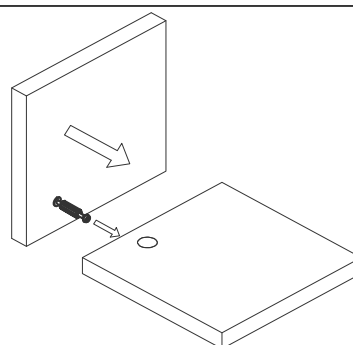

3

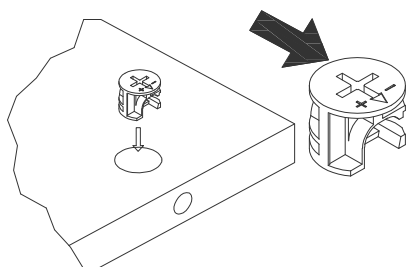

4

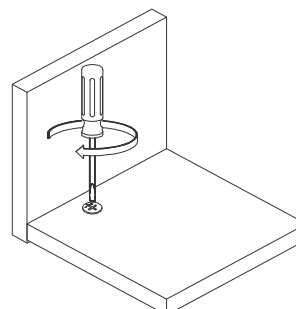


1

Ⓐ M5X35



7 PCS

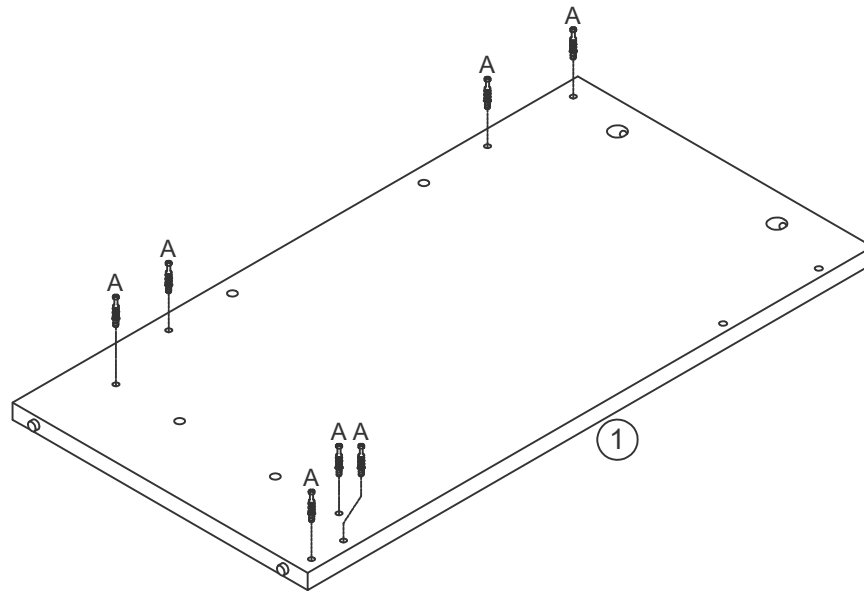


2

Ⓒ 8X40




2 PCS

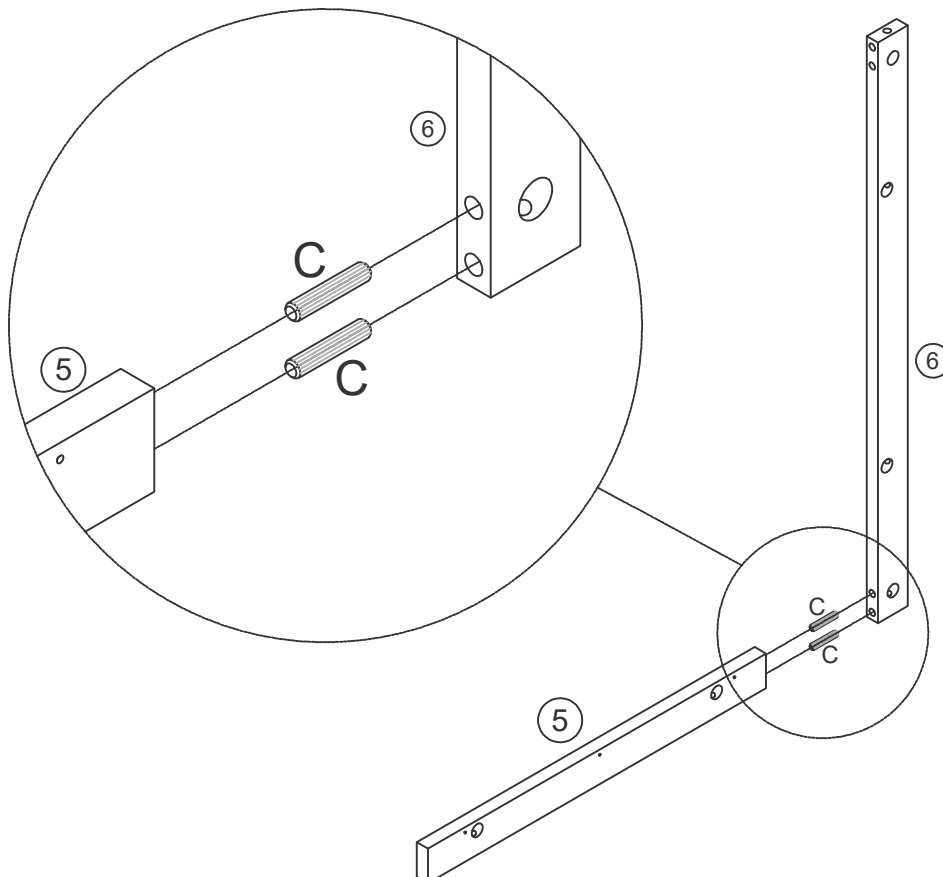

3

(B) 15X12	(C) 8X40
	
3 PCS	2 PCS


Insert the dowel first, then
install the panel.

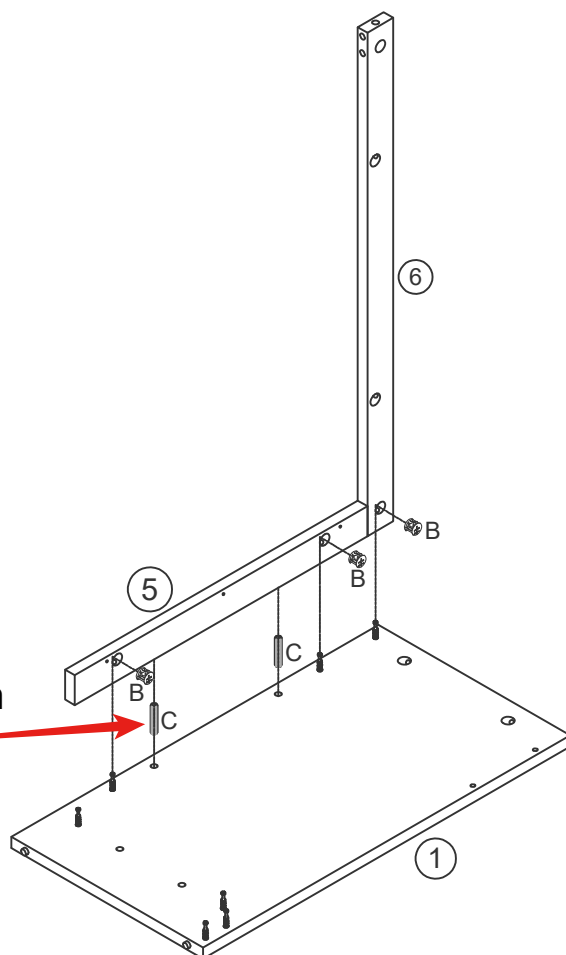

4

(C) 8X40

2 PCS

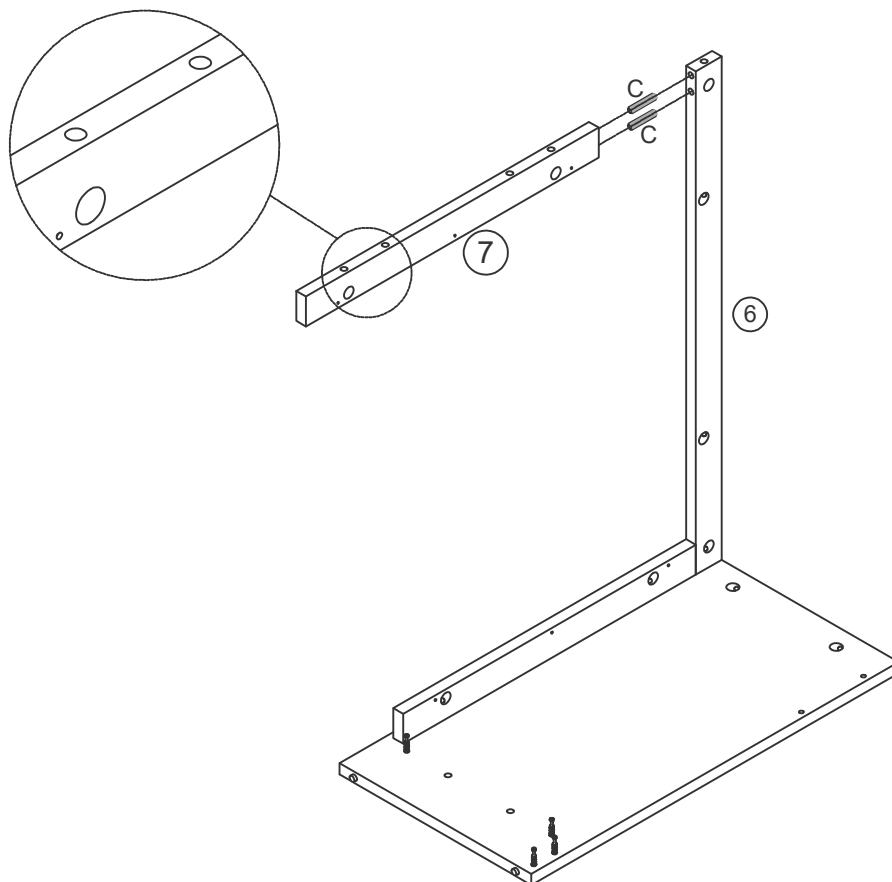


5

(A) M5X35



2 PCS

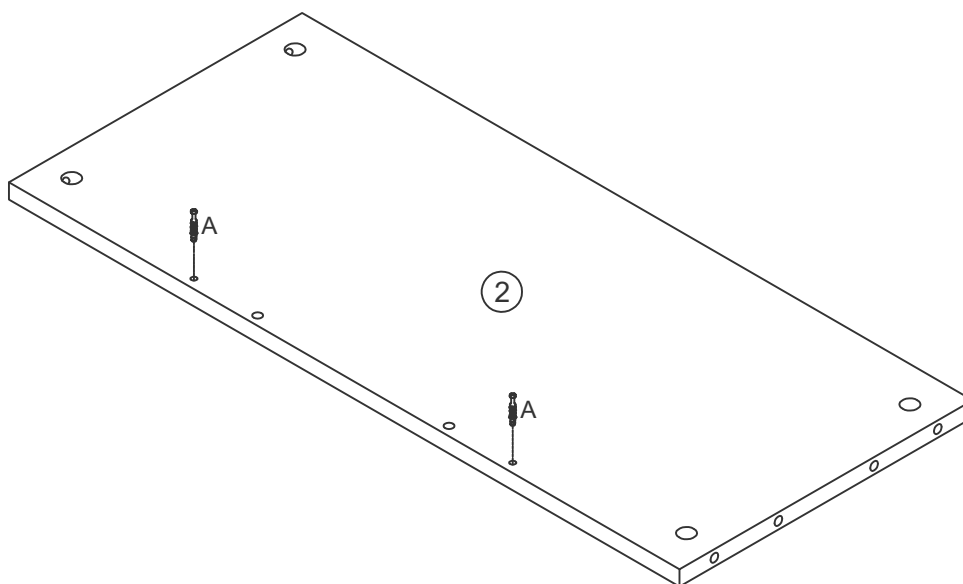

6

(B) 15X12


(C) 8X40



2 PCS



2 PCS

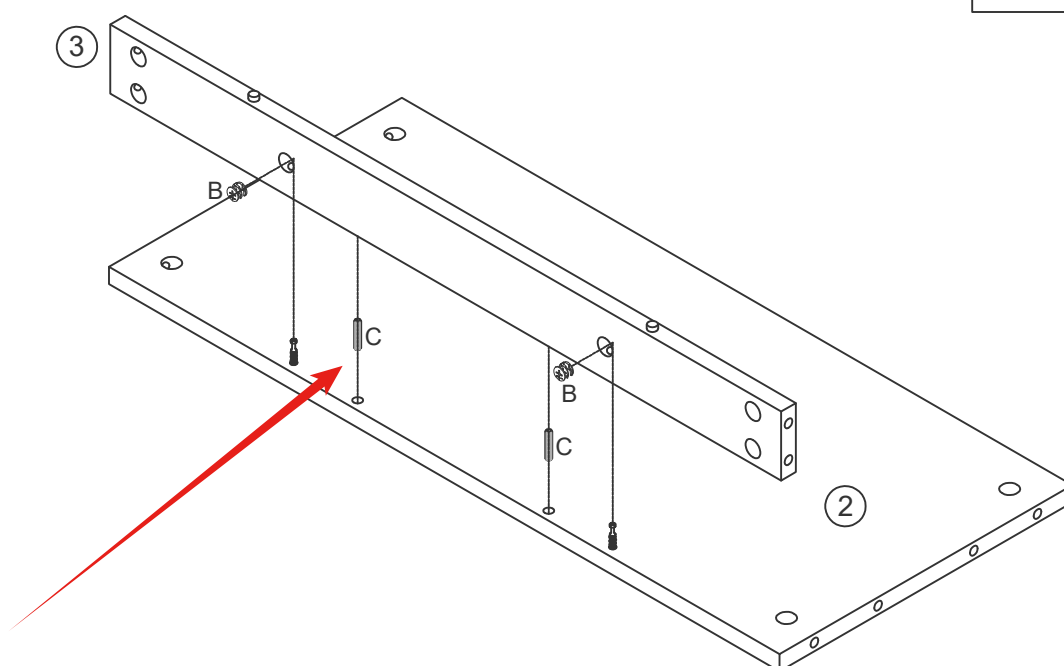


Insert the dowel first, then install the panel.

7

Ⓑ 15X12	Ⓒ 8X40
	
4 PCS	2 PCS


Insert the dowel first,
then install the panel.

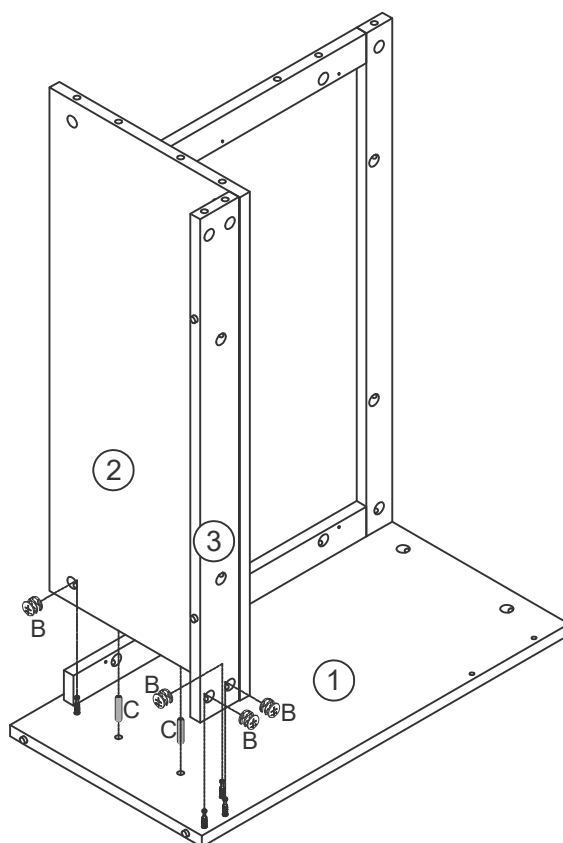


8

Ⓐ M5X35

7 PCS

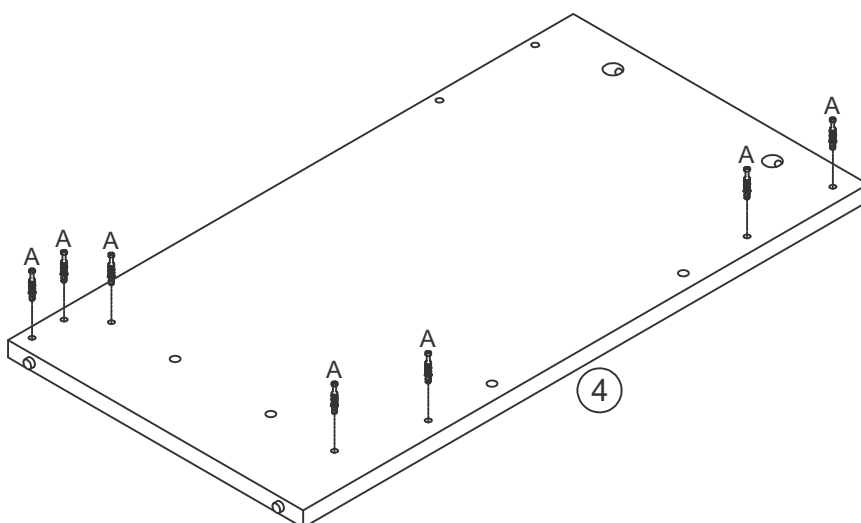


9

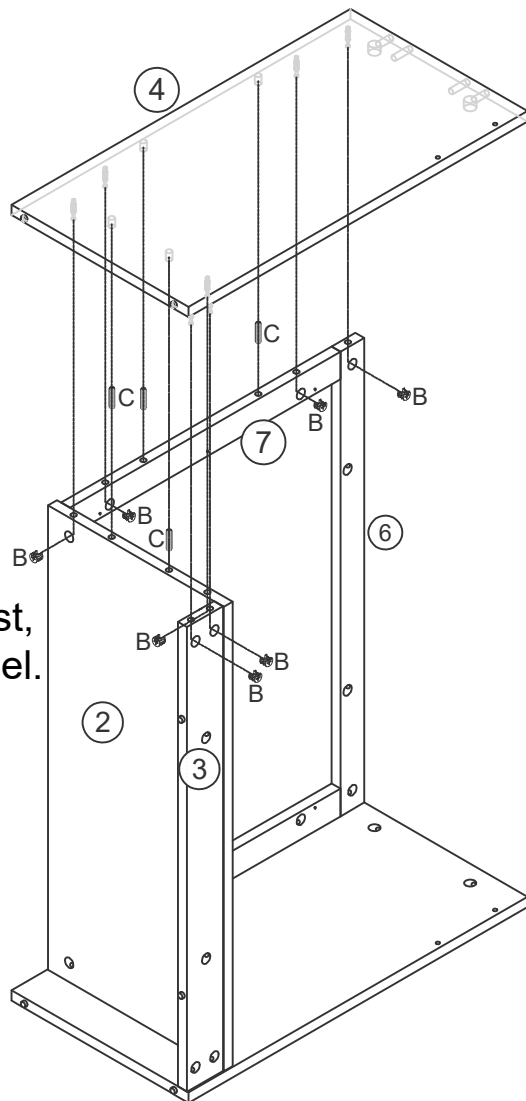

Insert the dowel first,
then install the panel.

(B) 15X12	(C) 8X40
	
7 PCS	4 PCS

10

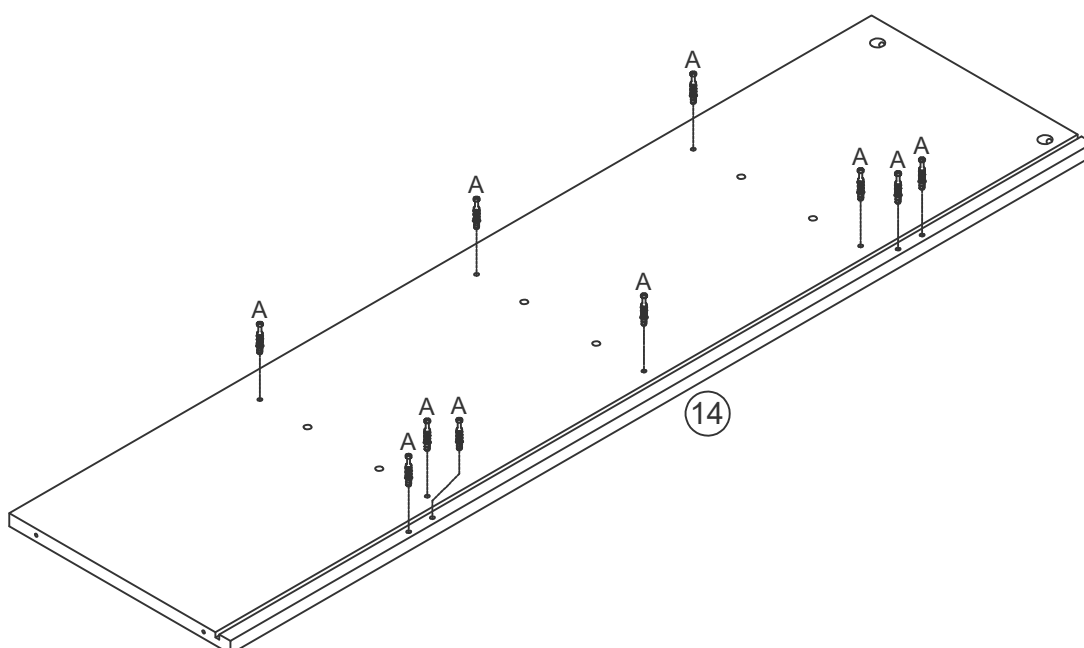

(A) M5X35


10 PCS

11

Ⓓ M5X40



2 PCS

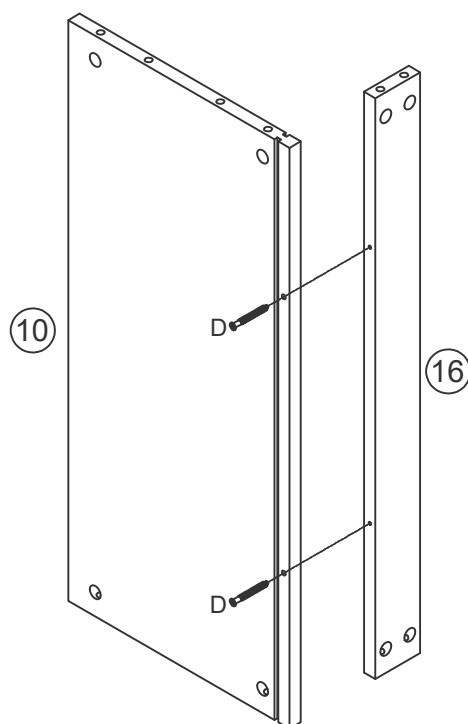

12

Ⓑ 15X12


Ⓒ 8X40



4 PCS



2 PCS

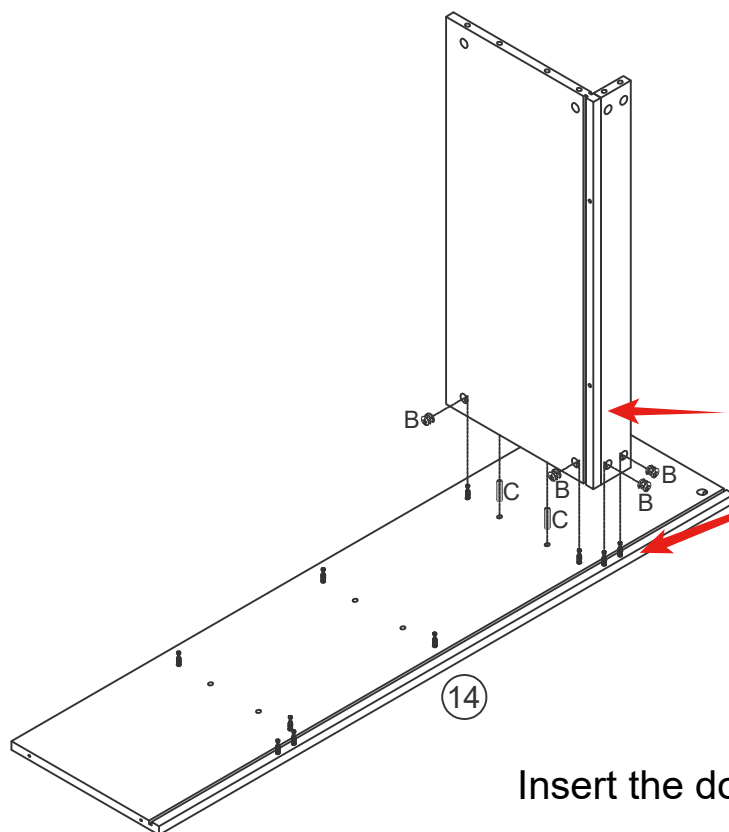


Make sure the grooves on the panels are all on the same side.

Insert the dowel first, then install the panel.

13


The hole here should be oriented as shown in the picture.

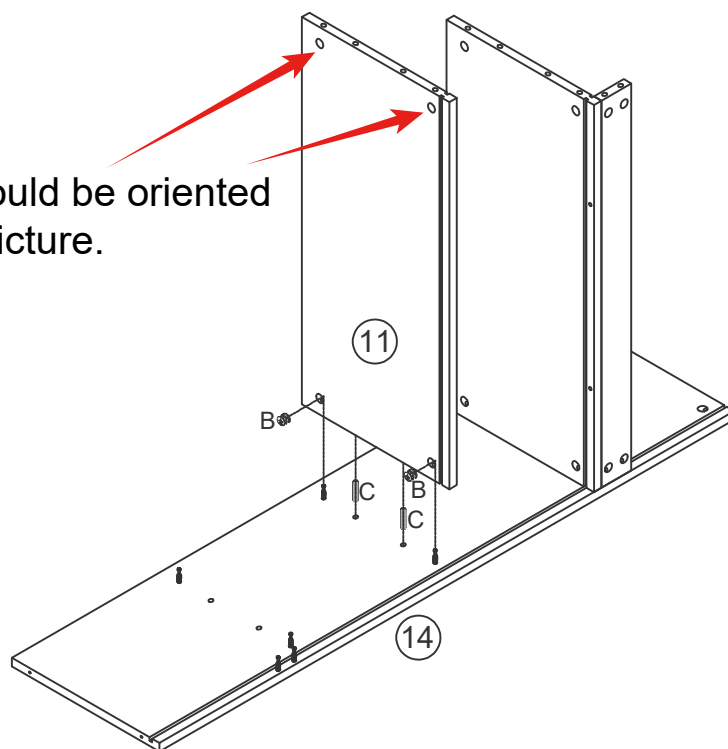

Ⓑ 15X12	Ⓒ 8X40
	
2 PCS	2 PCS

Insert the dowel first, then install the panel.

14

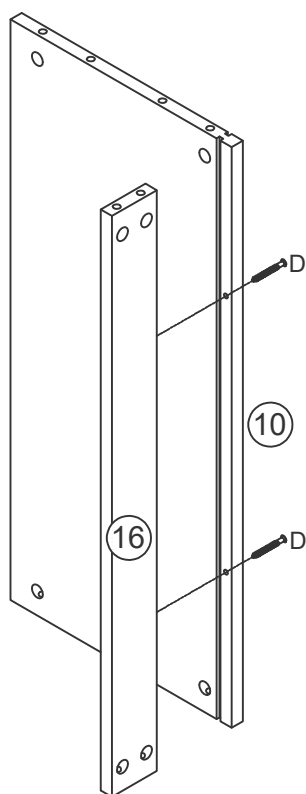


Ⓓ M5X40

2 PCS


15

Ⓑ 15X12	Ⓒ 8X40
 4 PCS	 2 PCS

Insert the dowel first, then install the panel.

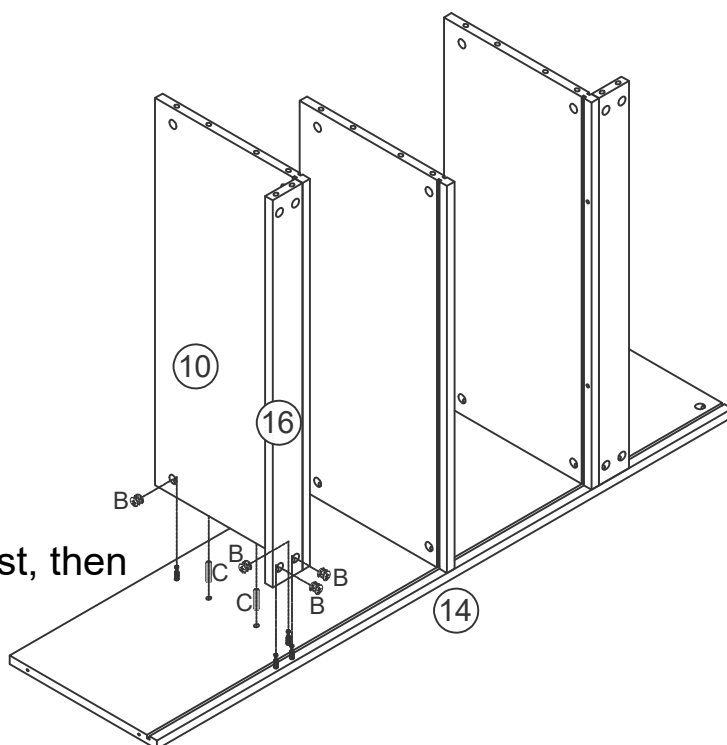

16

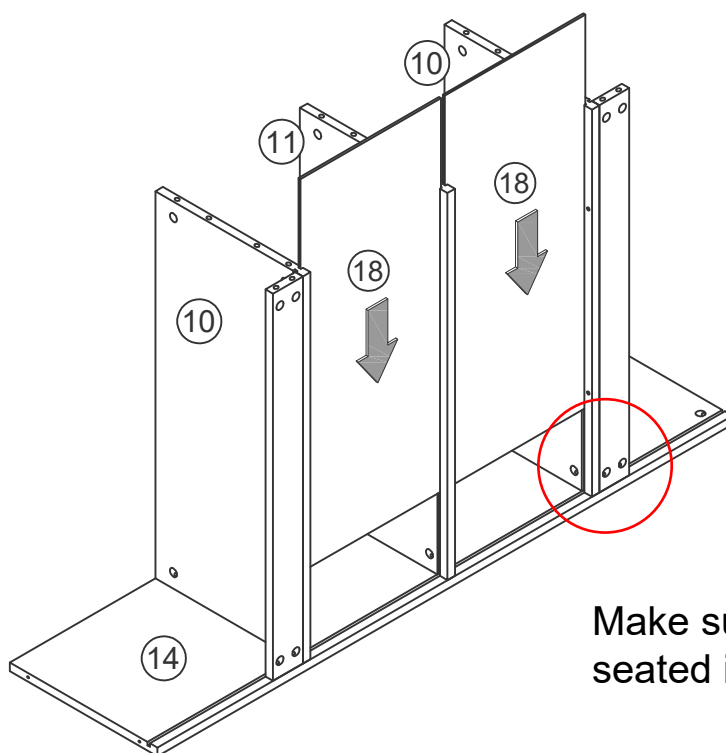


Make sure the panel is fully seated in the groove.

17

(A) M5X35



10 PCS

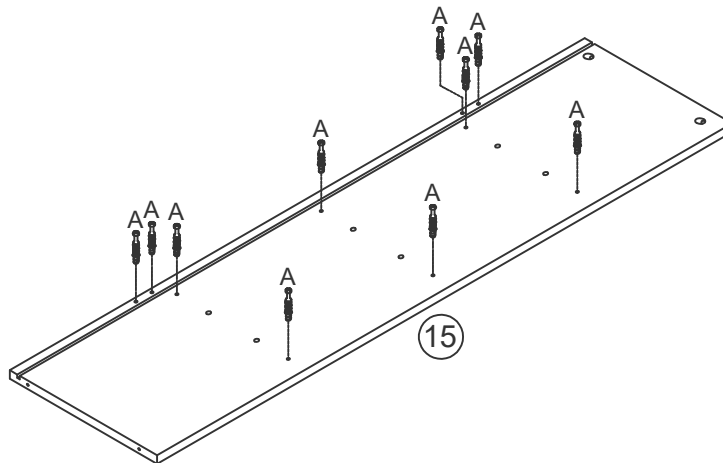

18

(B) 15X12


(C) 8X40



10 PCS




6 PCS

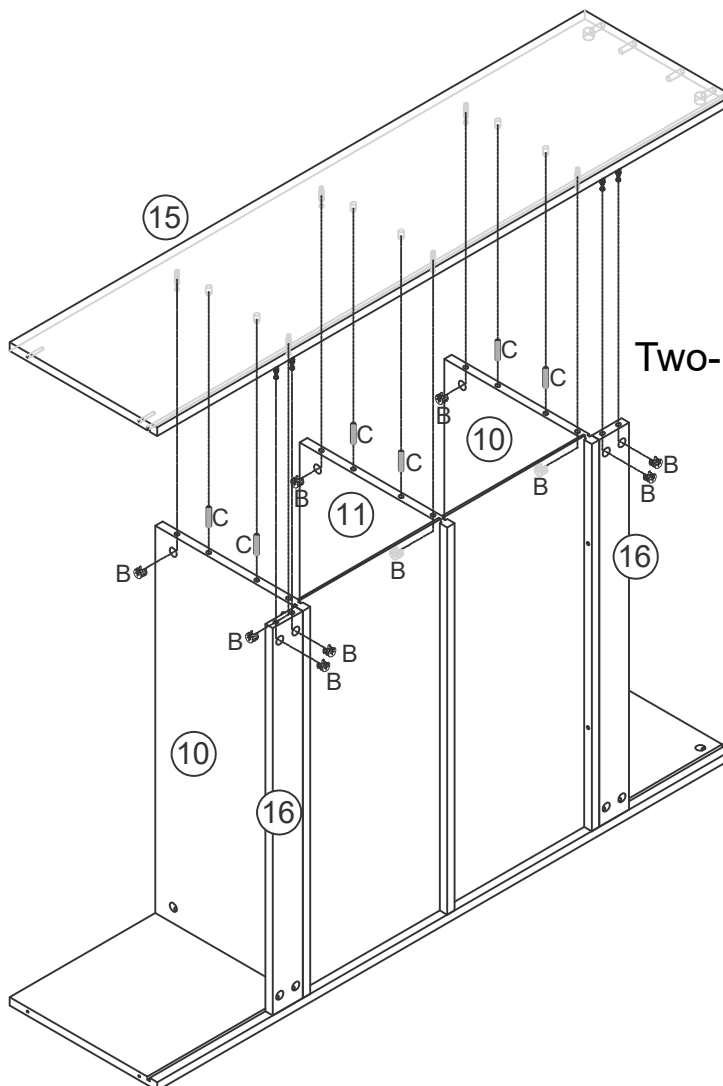


Two-person assembly required.

19

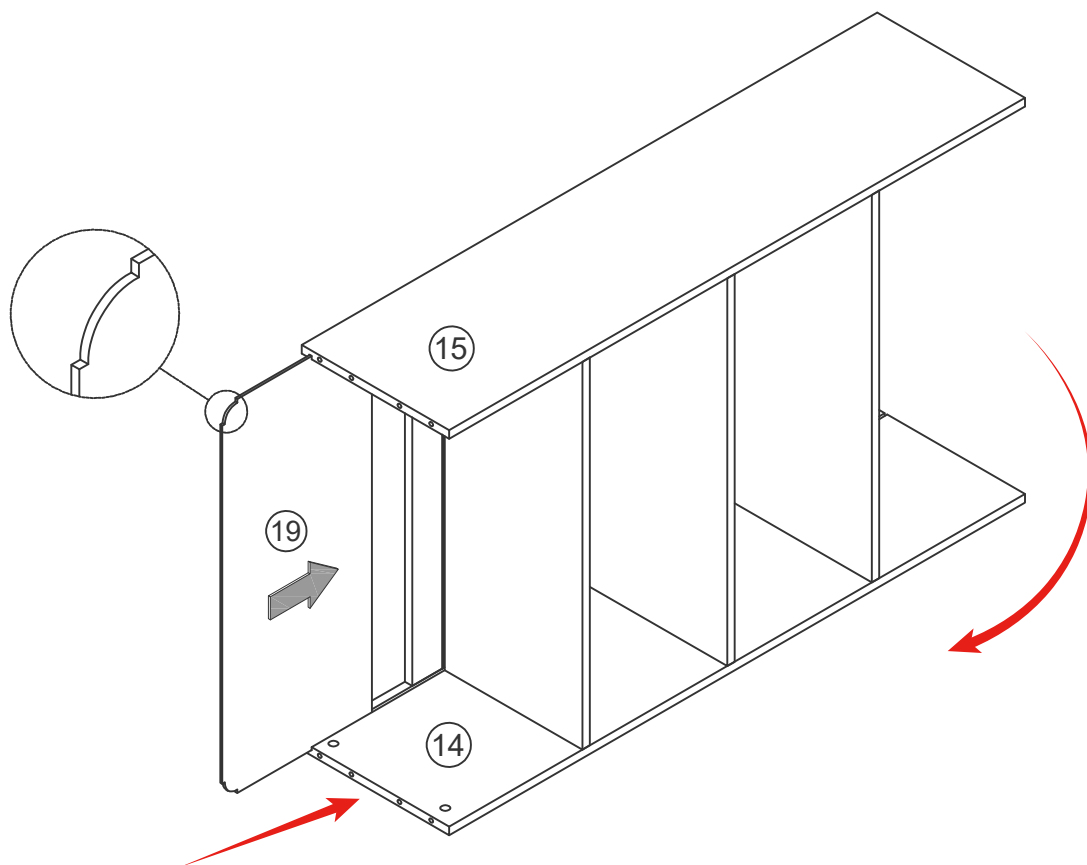

When installing accessory 19, note that plate 19 needs to be installed from the side of the base plate that has more holes.

20

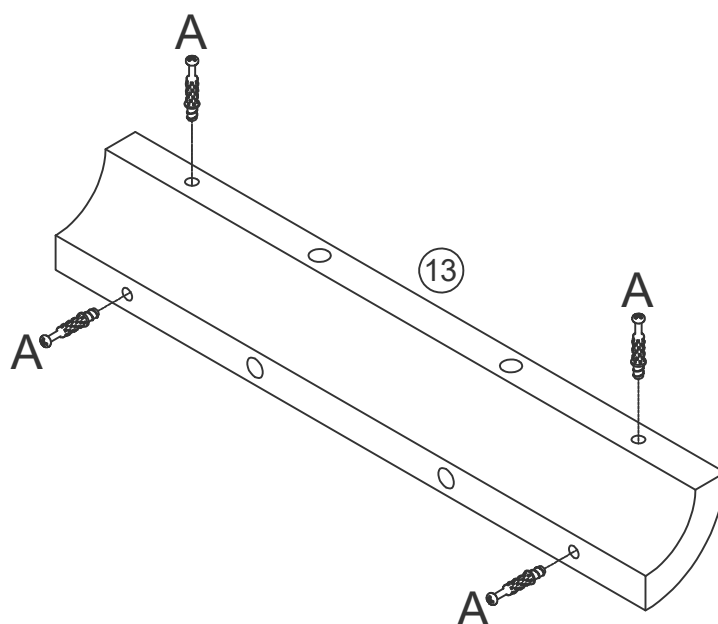


A M5X35



8 PCS


X 2

21

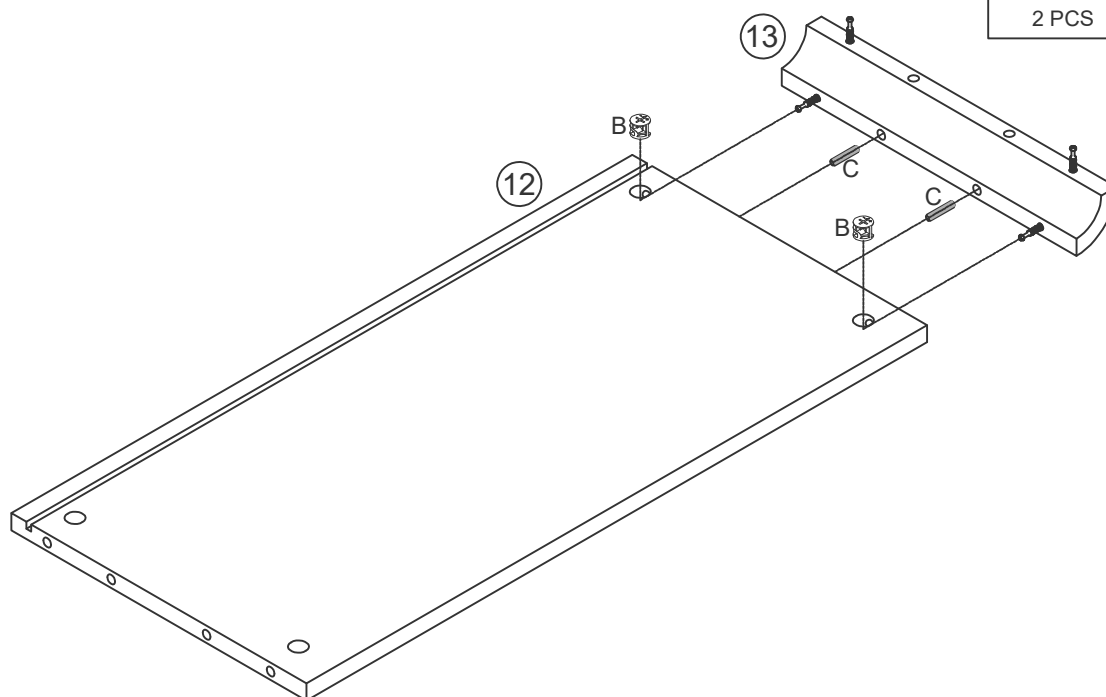

(B) 15X12	(C) 8X40
	
2 PCS	2 PCS


22

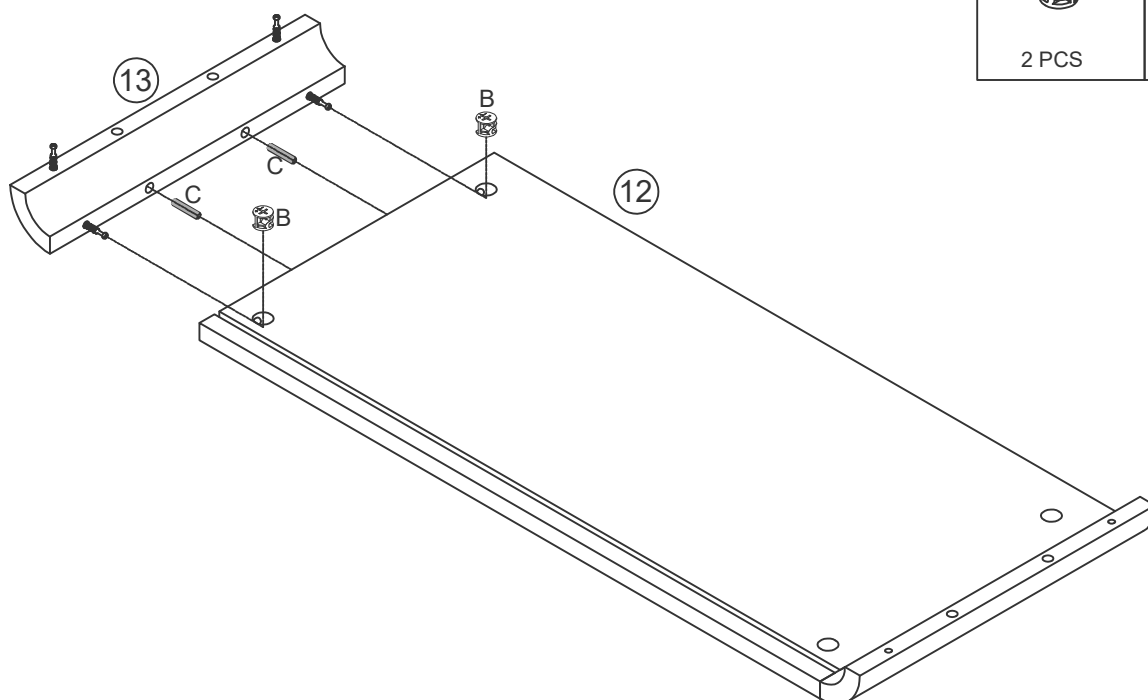

(B) 15X12	(C) 8X40
	
2 PCS	2 PCS


23

Ⓑ 15X12	Ⓒ 8X40
	
4 PCS	4 PCS

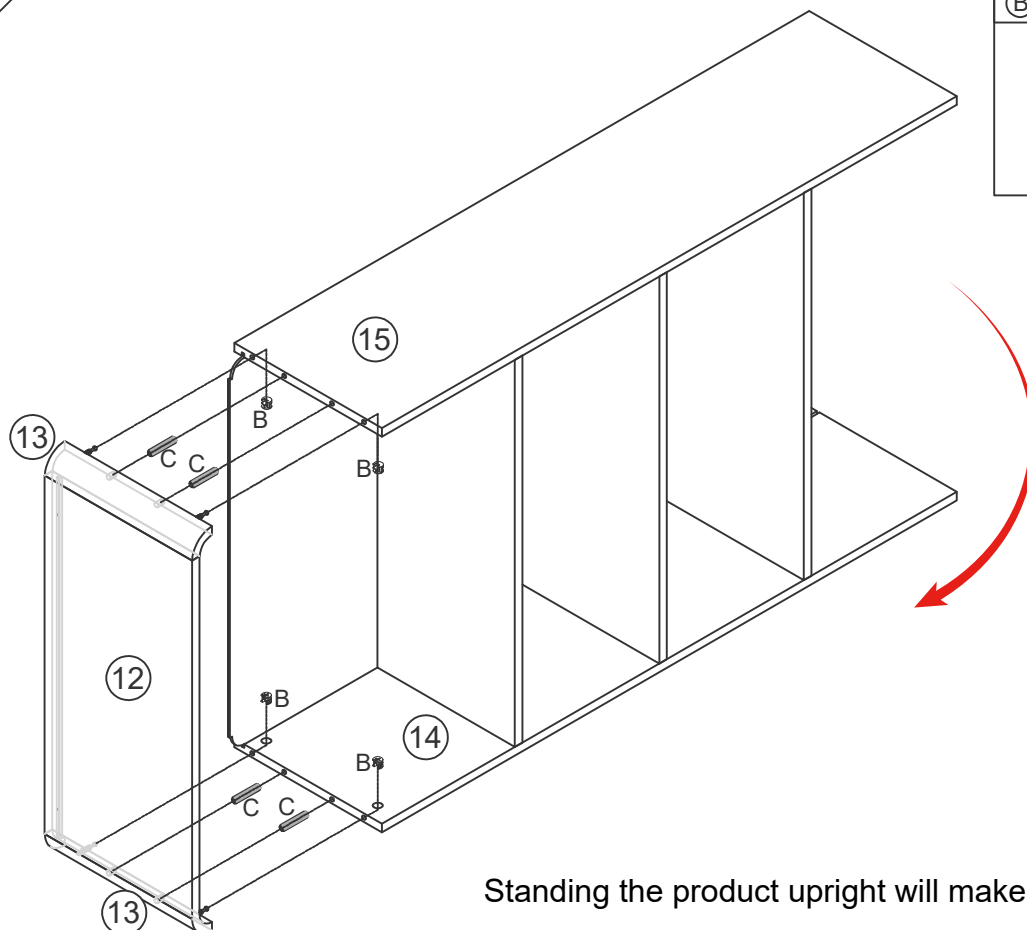

Standing the product upright will make it easier to install.

24

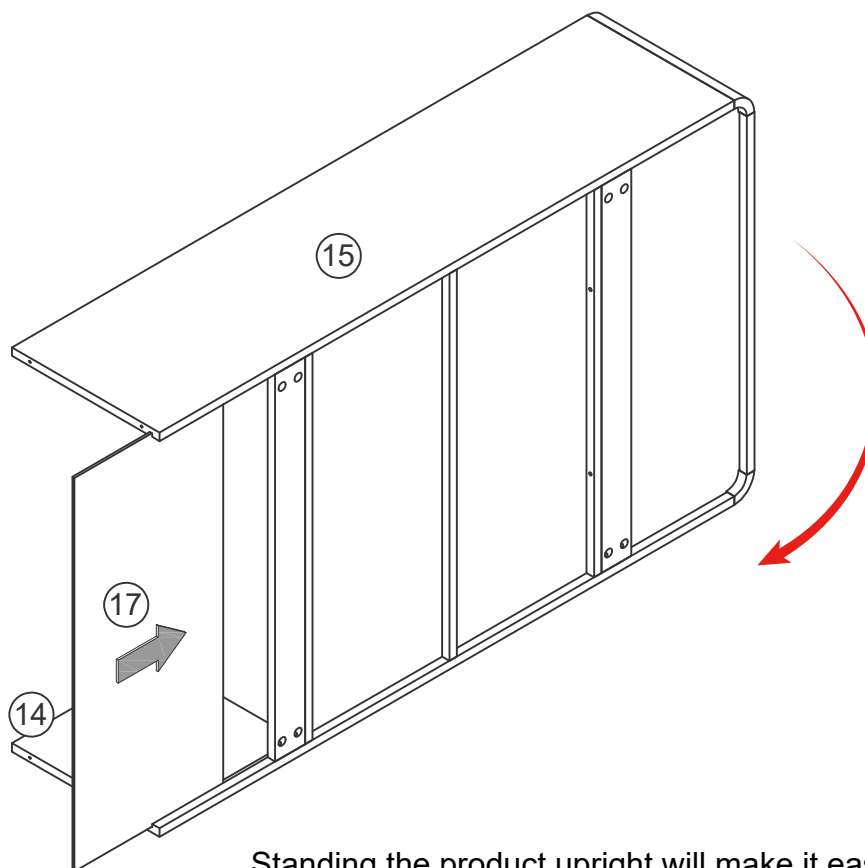


Standing the product upright will make it easier to install.

25

Ⓐ M5X35



6 PCS

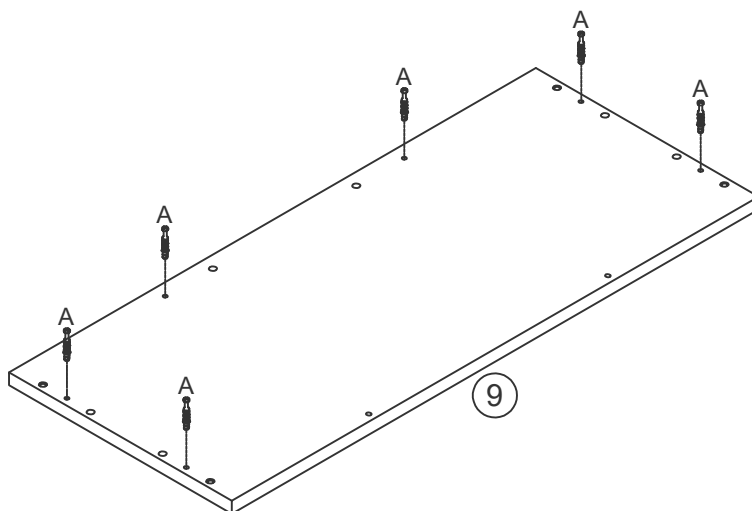


26

Ⓓ M5X40



4 PCS

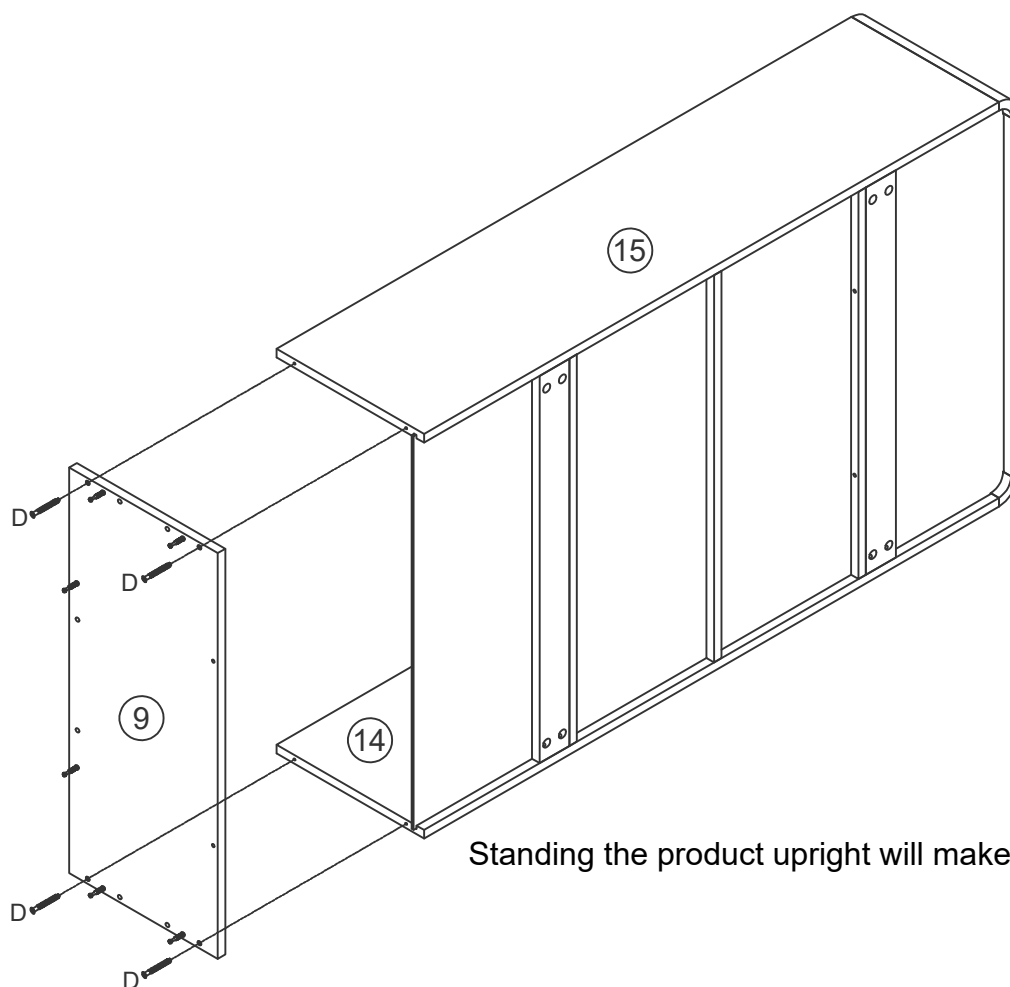


Standing the product upright will make it easier to install.

When installing part D, make sure to align the holes correctly. Insert all four screws partially into their respective holes first, then tighten them fully.




Ⓑ	15X12	Ⓒ	8X40
			
6 PCS		6 PCS	

Two-person assembly required.

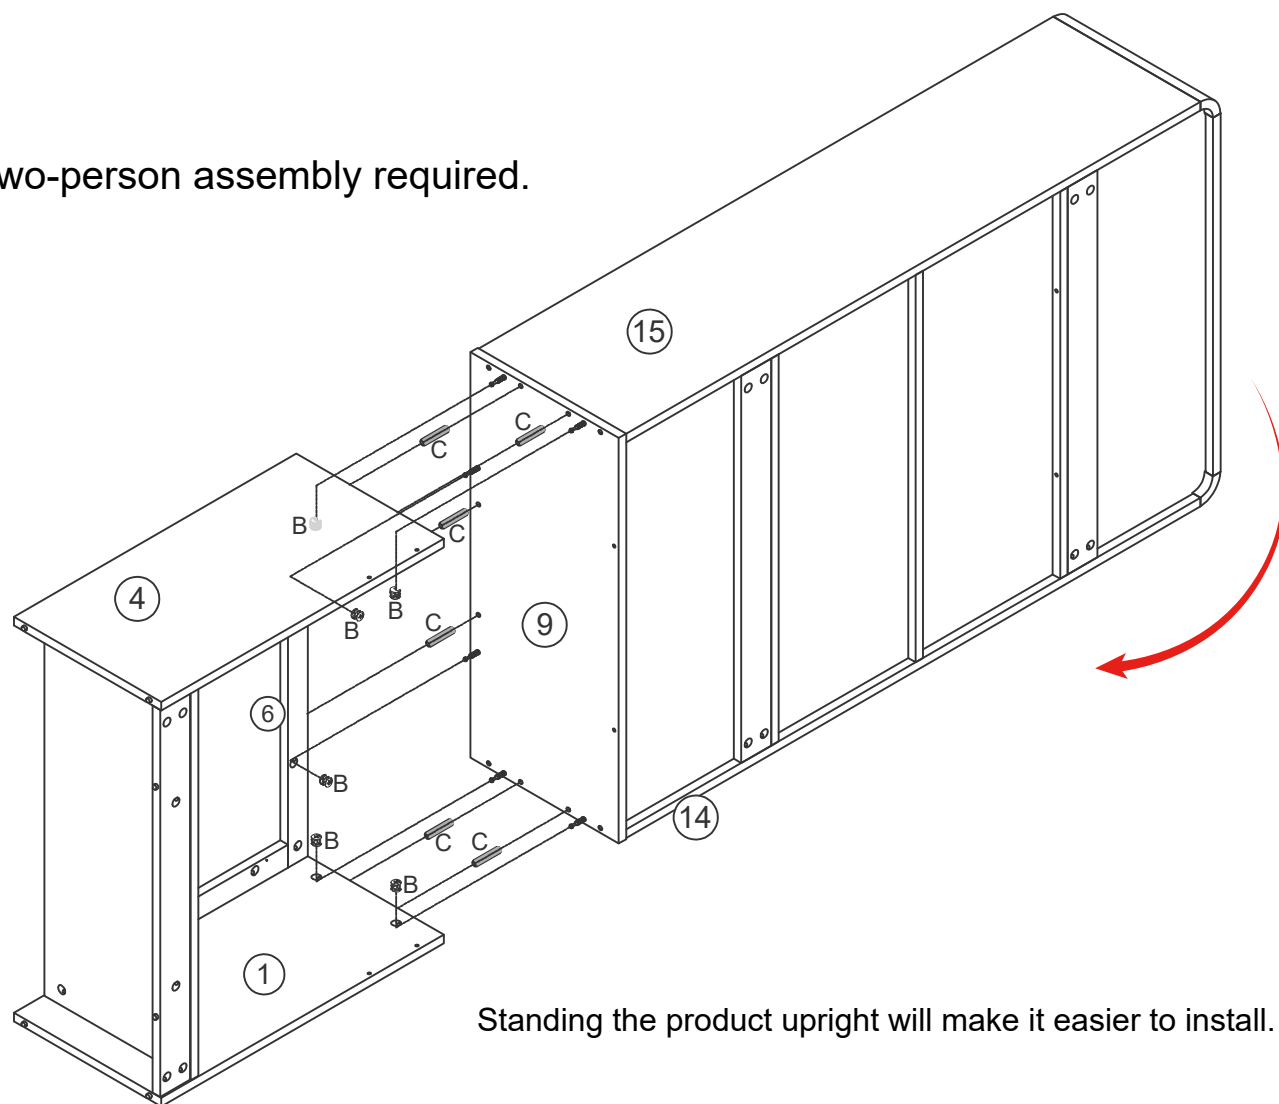



Standing the product upright will make it easier to install.


E M3.5X14	F
 16 PCS	 16 PCS

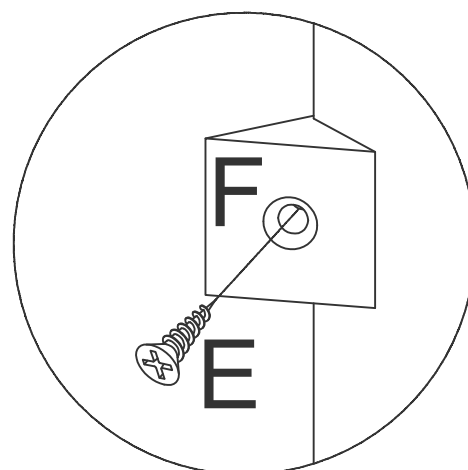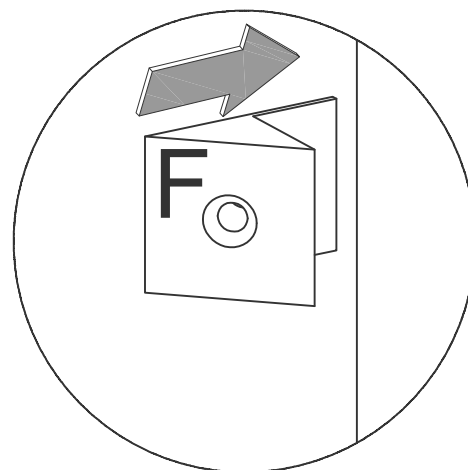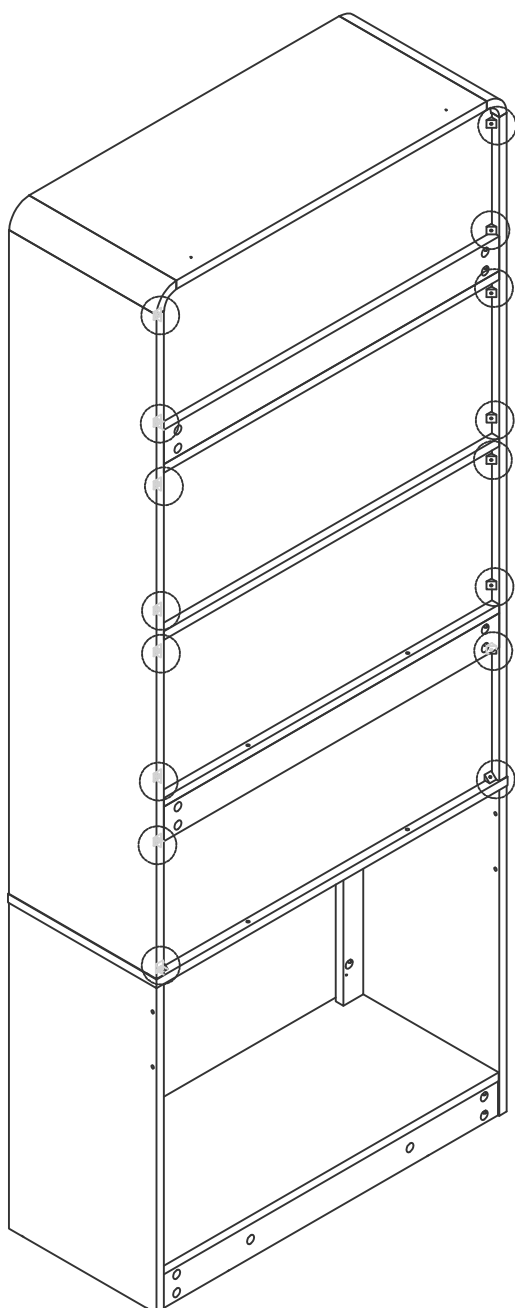



6 PCS

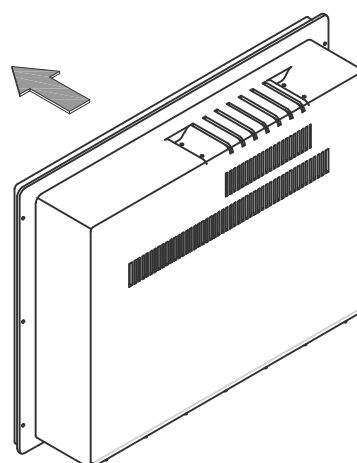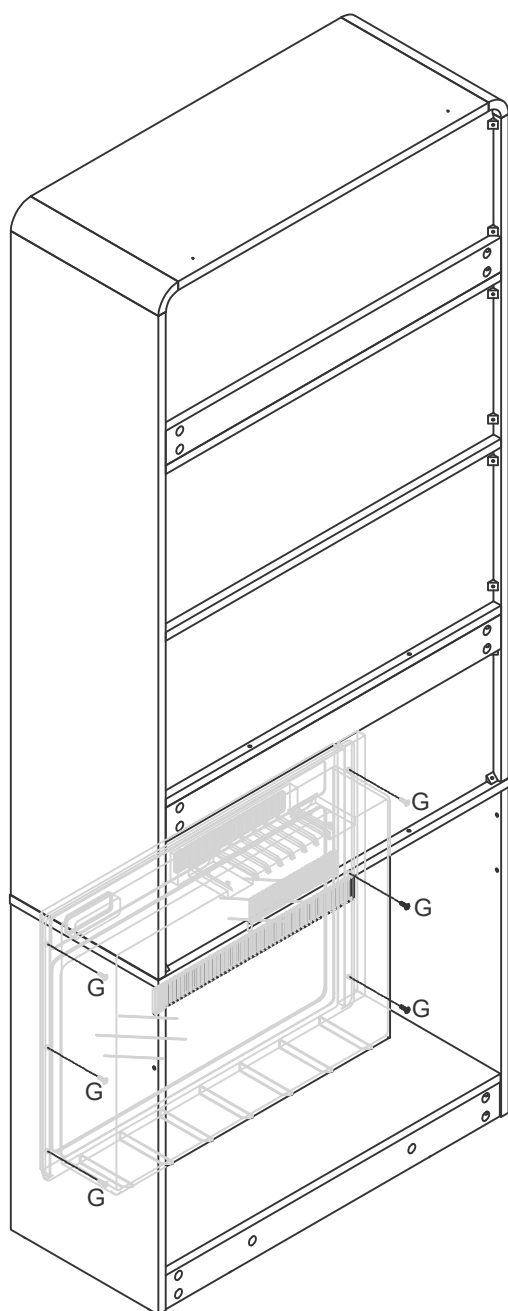


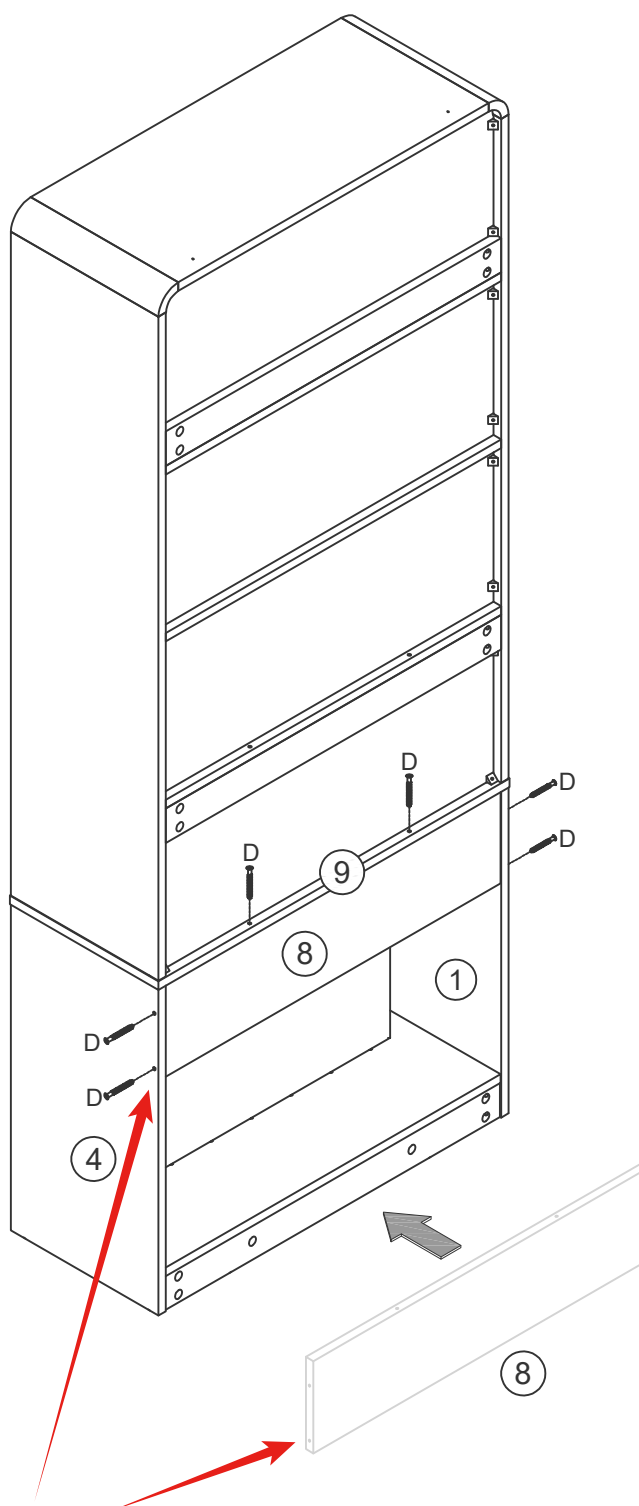

First, check whether the side holes on panel No. 8 align with the side holes on the main cabinet body.

(E) M3.5X14	(H) 21X1	(J)
		
2 PCS	20 PCS	2 PCS

Part J is the anti-tip device. Adjust the installation position as needed.
Part H is the decorative cover for the screw holes.

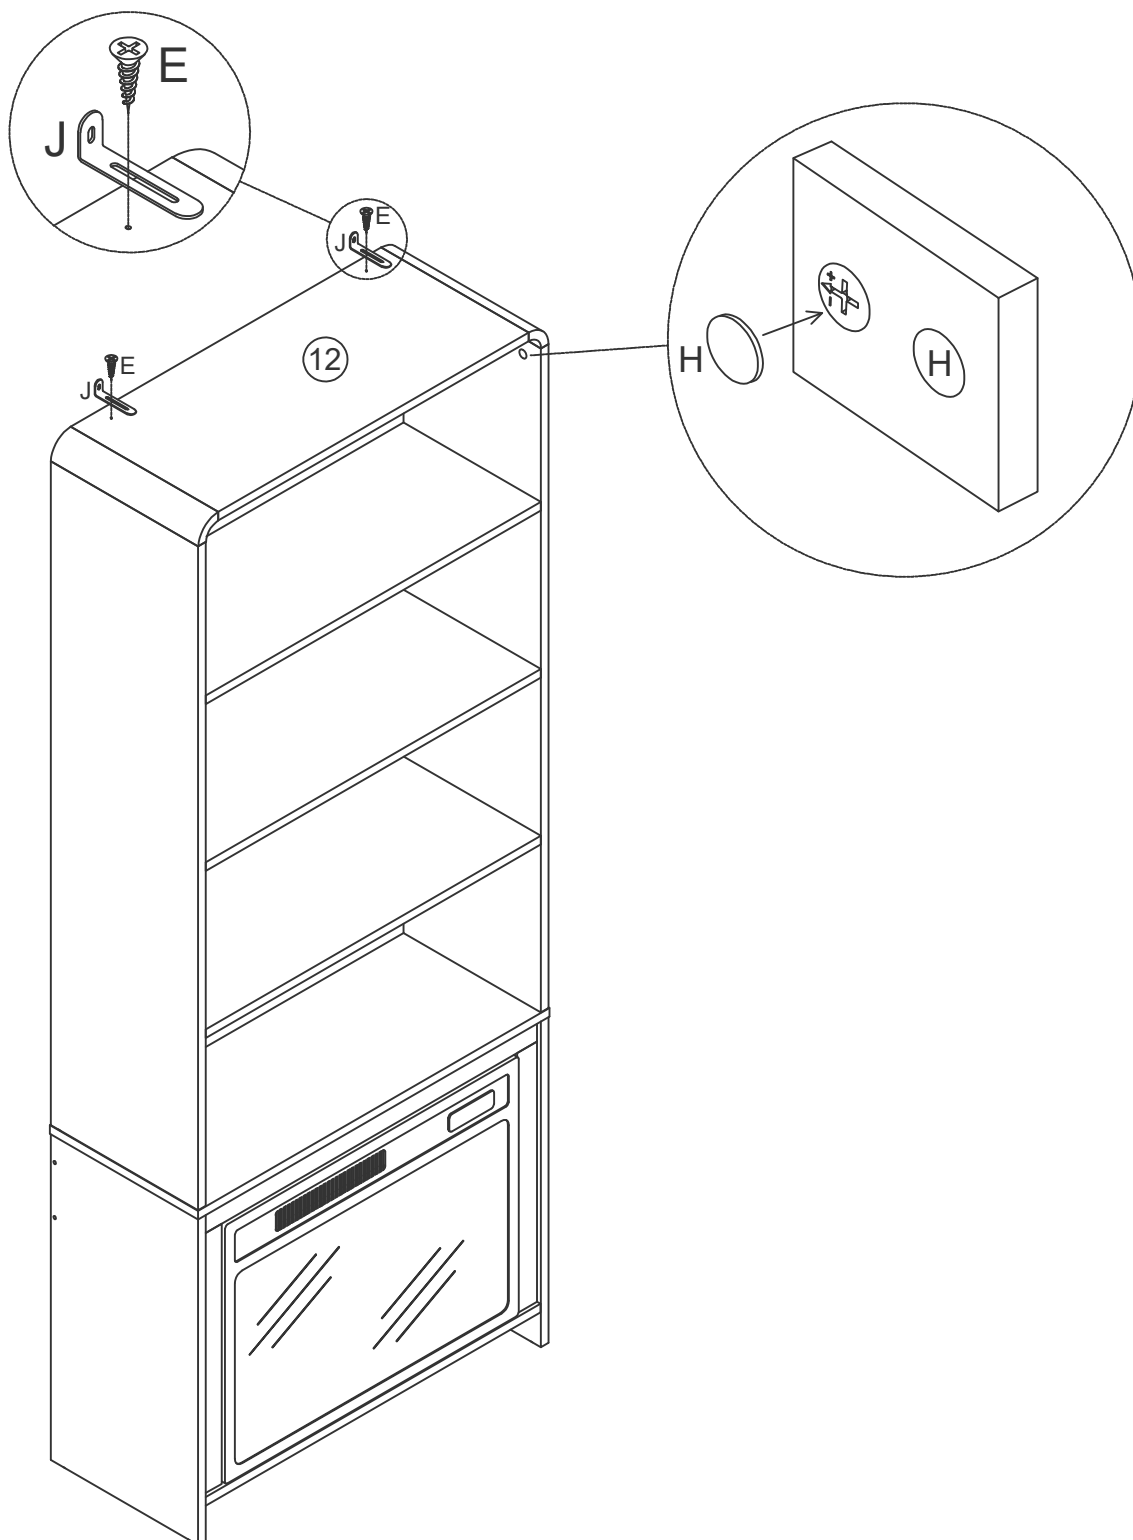




Attention: For safety and stability, we suggest you have to secure the anti-tip accessories to the wall to prevent tipping, injury, and property damage.


(K) M5X55
8X60



2 PCS

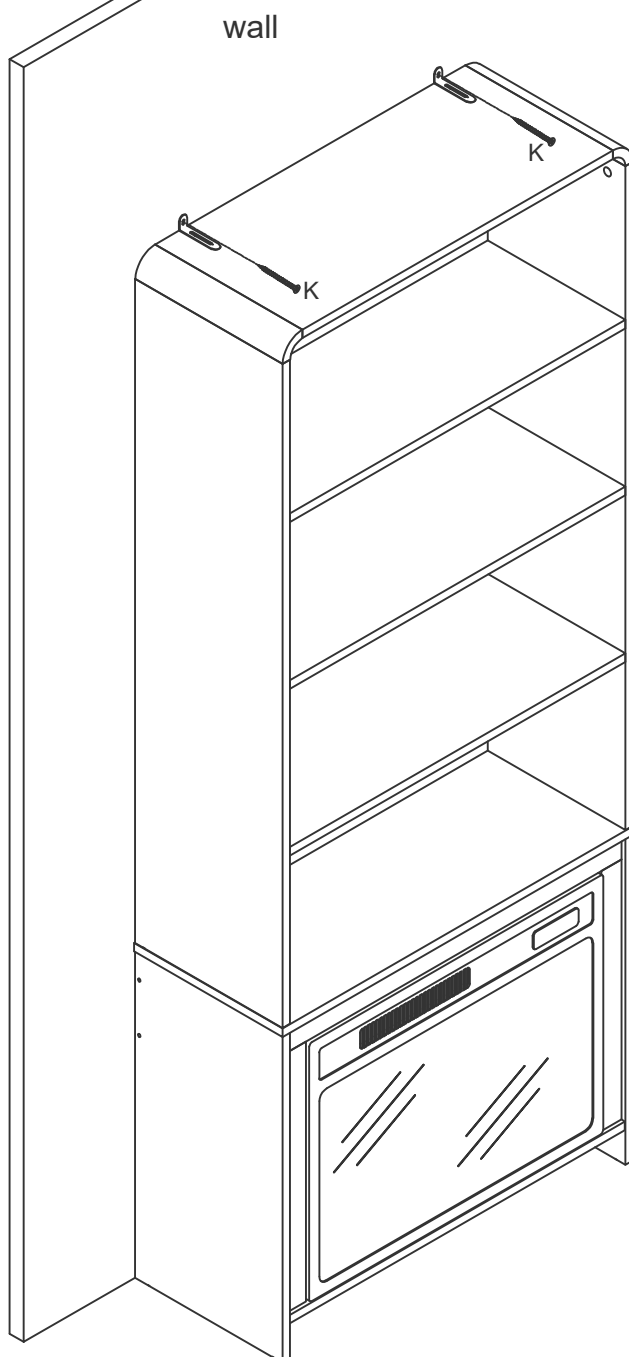


wall

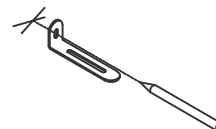

Step 1


wall

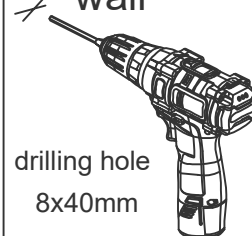

drilling hole
8x40mm

Step 2

wall

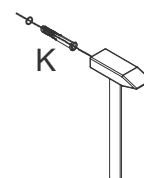

Step 3

wall



Step 4