



Installation Instruction

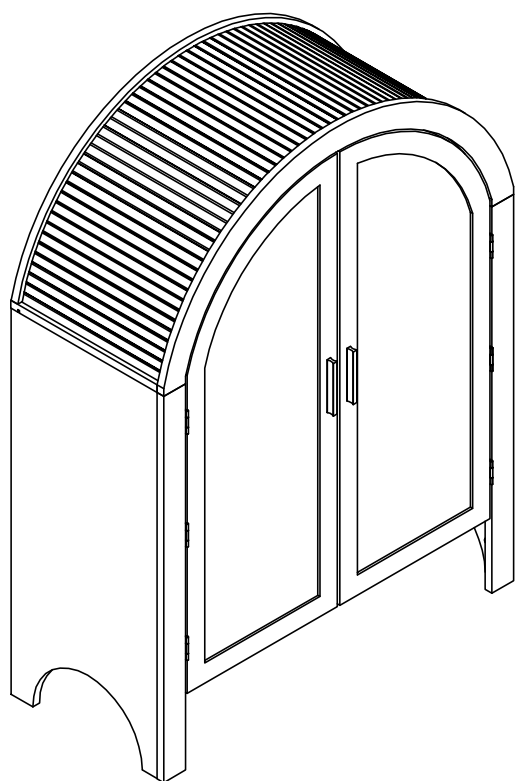

OR

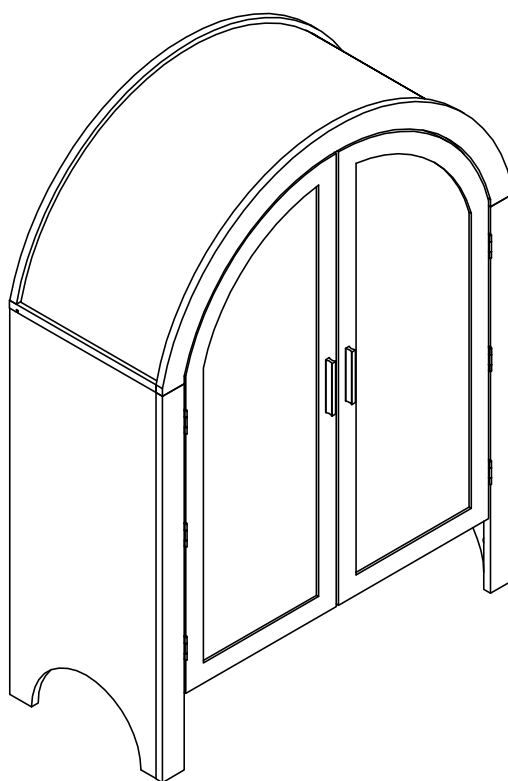

Assembling


Estimated time for assembly



45 : 00

What you need


- Use the packaging carton as a working surface to prevent product damage during assembly
- Phillips head screwdriver



Weight Limitation



100 | **35**
lbs table top lbs per

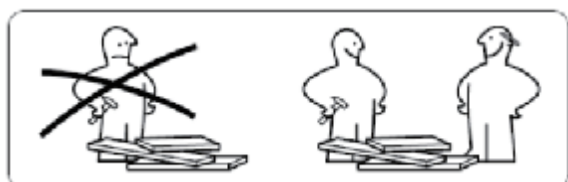


What' included

Code Description	Qty
A Cam Bolt M6X35MM	26
B Cam Lock 15X12MM	26
C Wooden Dowel M8X30MM	12
D Screw M4X40MM	5
E Screw M3.5X14MM	2
F Anchor	2
G L-shaped metal sheet	2
H Screw M3.0X14MM	44
I The back button	12
J Foot nail	4
K Circular hole Decals	26
L Shelf Holder	8
M Ron absorption	2
N Sheet iron	4
O Metal handle	2
P Cam Bolt M4X18MM	4
Q Hinge	6

The Hardware


(A)




(B)



(C)



(D)




(E)



(F)




(G)



(H)




(I)



(J)




(K)



(L)




(M)

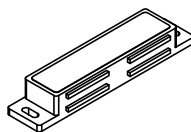

(N)




(O)



(P)



(Q)




IMPORTANT:

1. Do not tighten bolts / screws completely until all bolts / screws are lined up and inserted into holes.
2. Do not over tighten screws and bolts to avoid stripping
3. Please use hand tools to assemble this product. Do not use power tools.


Included Accessories


Code	Description	Qty
1	Top back panel	1
2	Top plate	1
3	Curved strip	1
4	Reinforcing strip	3
5	Cabinet top	1
6	Movable laminated plate	2
7	Backboard	2
8	Back tie	1
9	Bottom panel	1
10	Left decorative strip	1
11	Right decorative strip	1
12	Left side panel	1
13	Right side panel	1
14	Left door	1
15	Right door	1

The Accessoriess

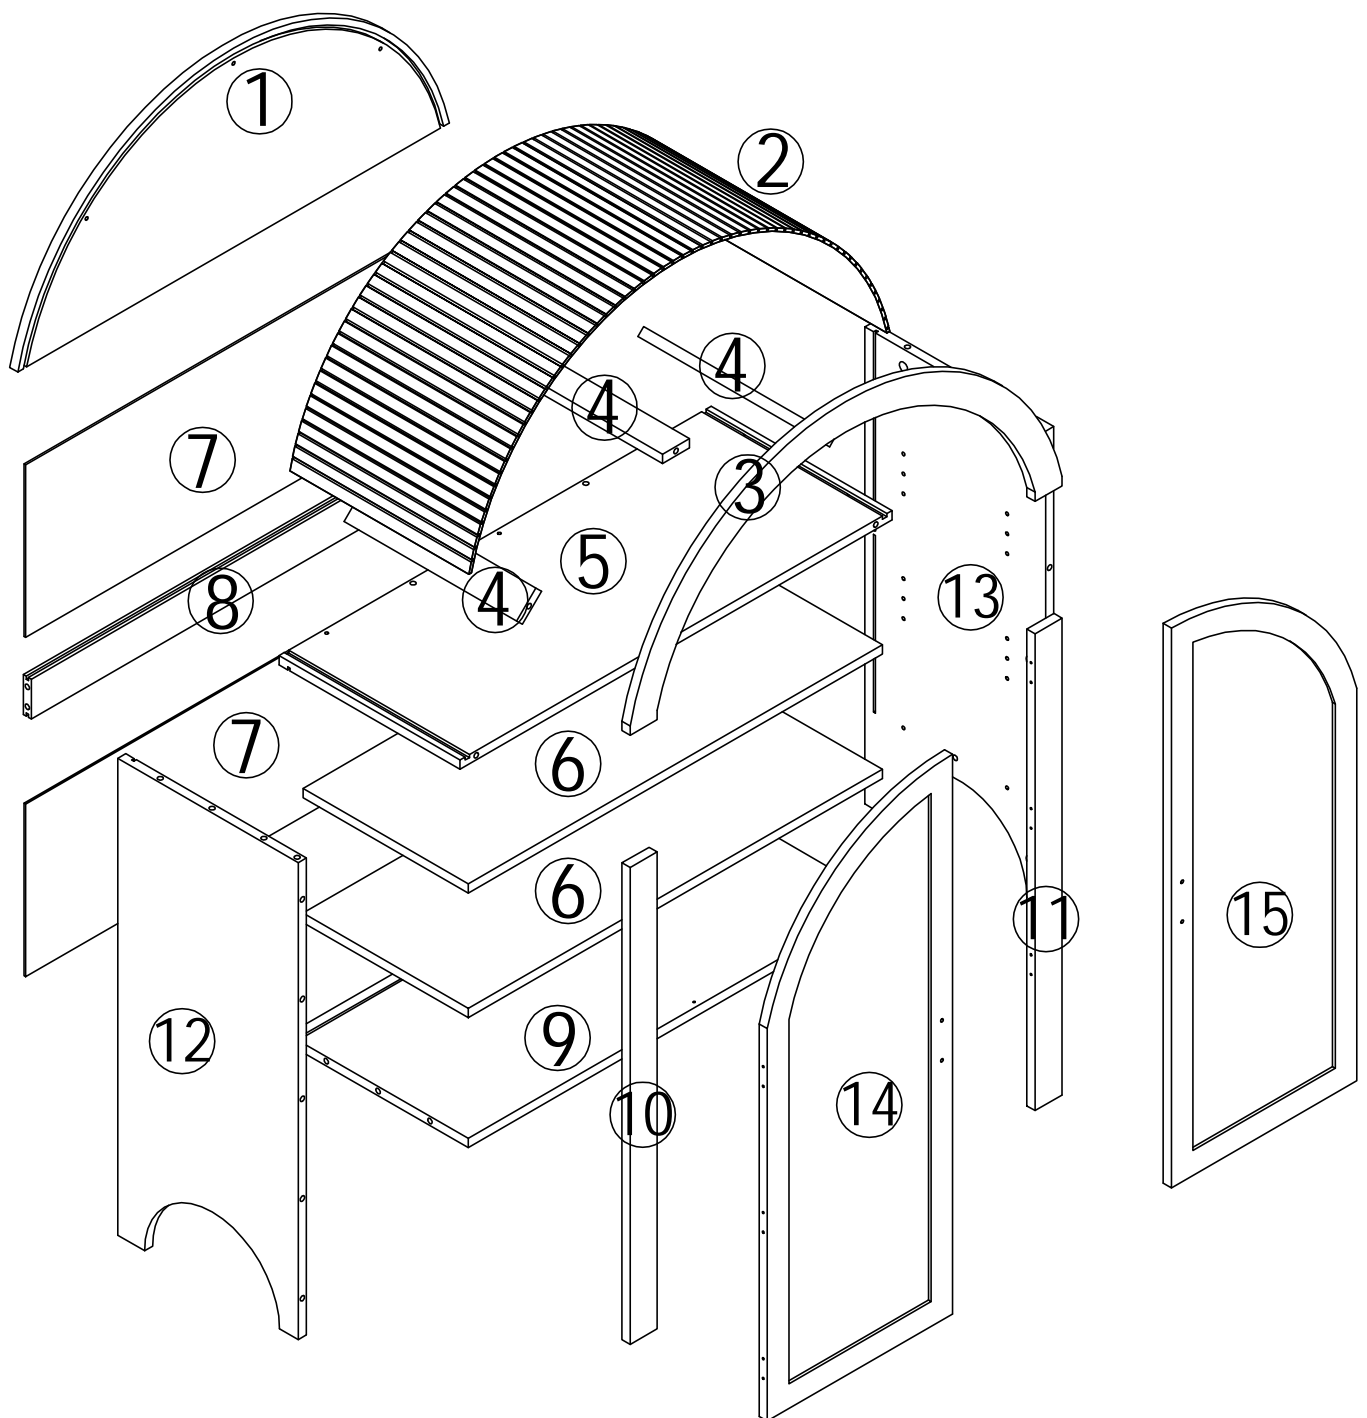



Step 1


A	X 8
	






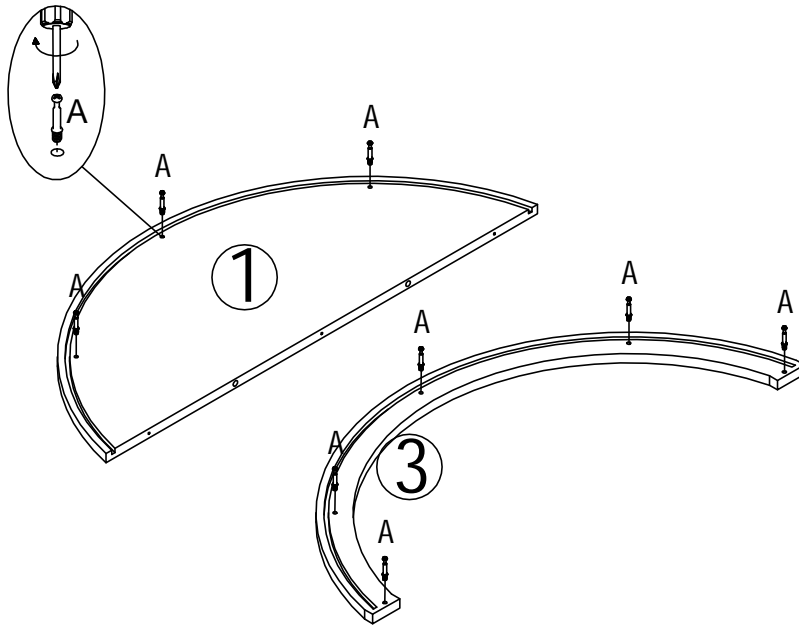


Step 2

C	X 2
	


K	X 3
	

B	X 3
	

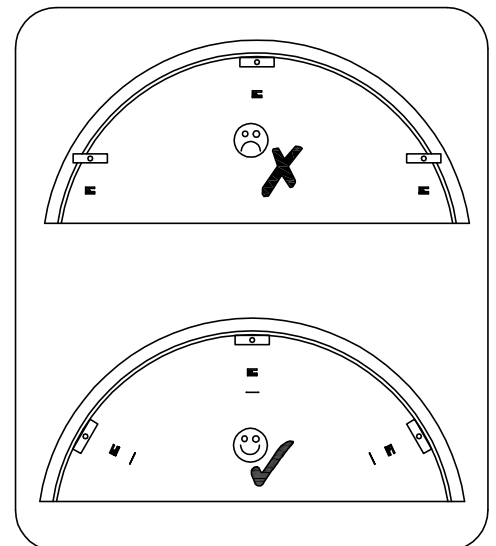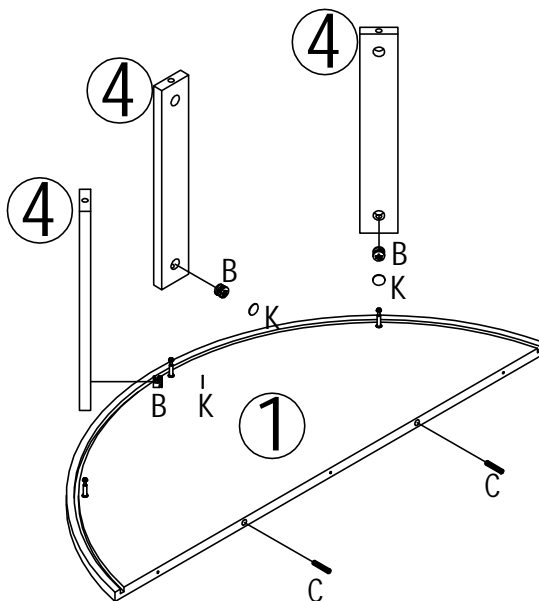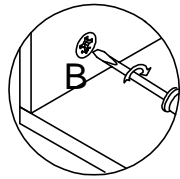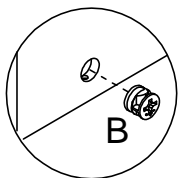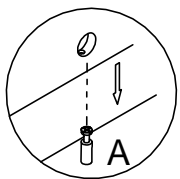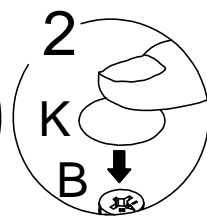


Please refer to the figure to install board 4

Step 3

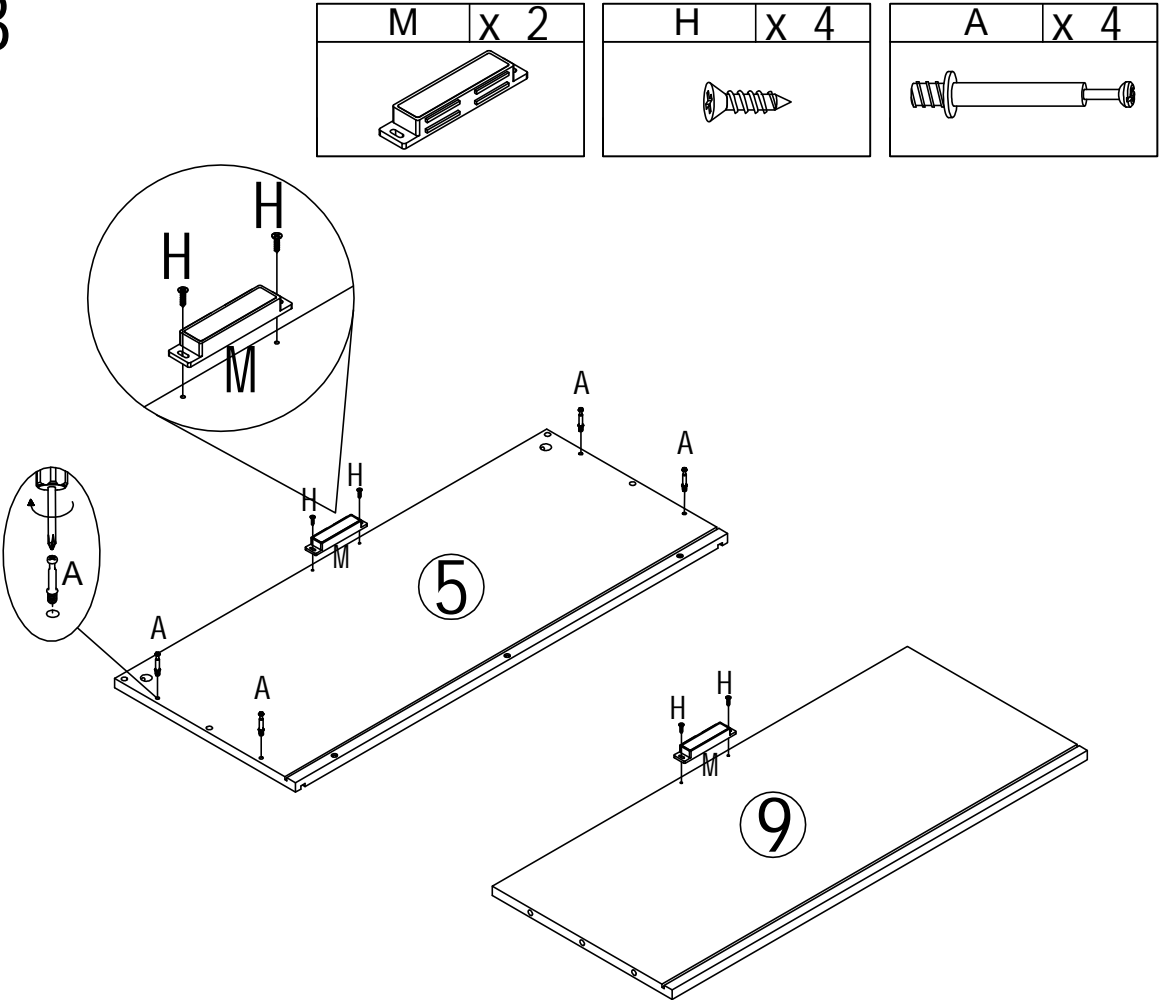

Step 4

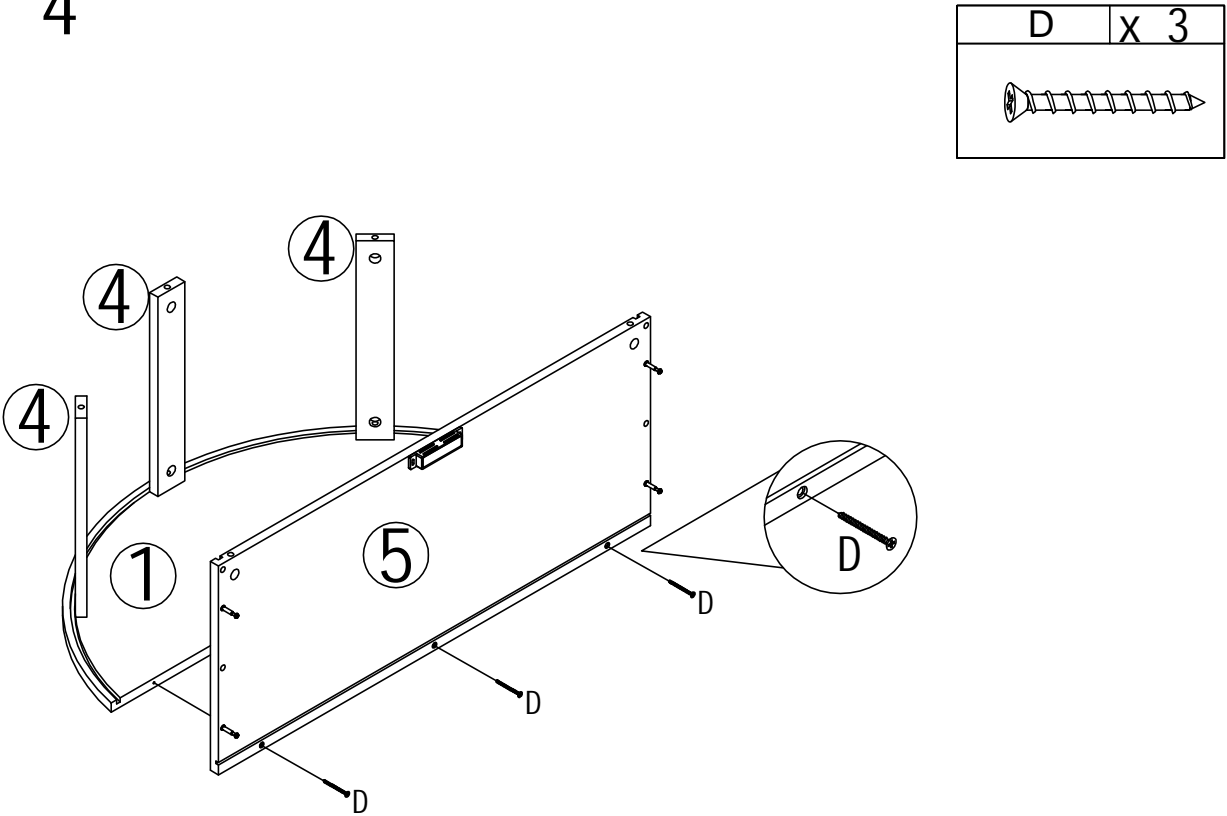


Step 5


Step 5 You can select 1 or 2 installation modes

1.The linen faces in, the groove faces out

2.The linen faces out, the groove faces in







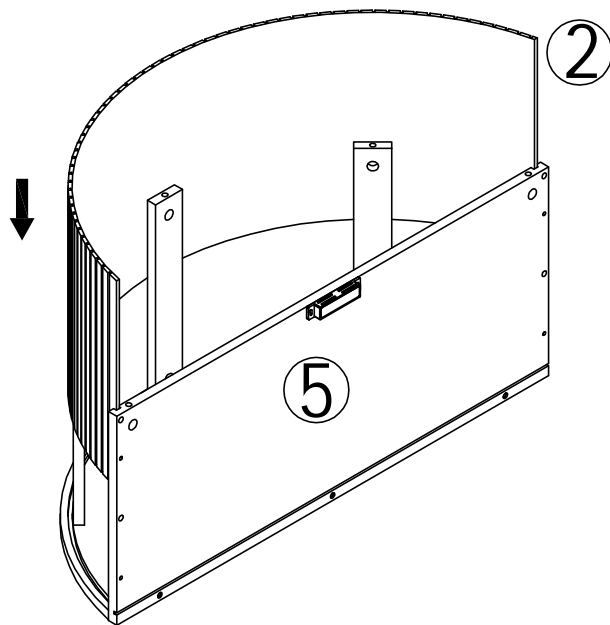


OR

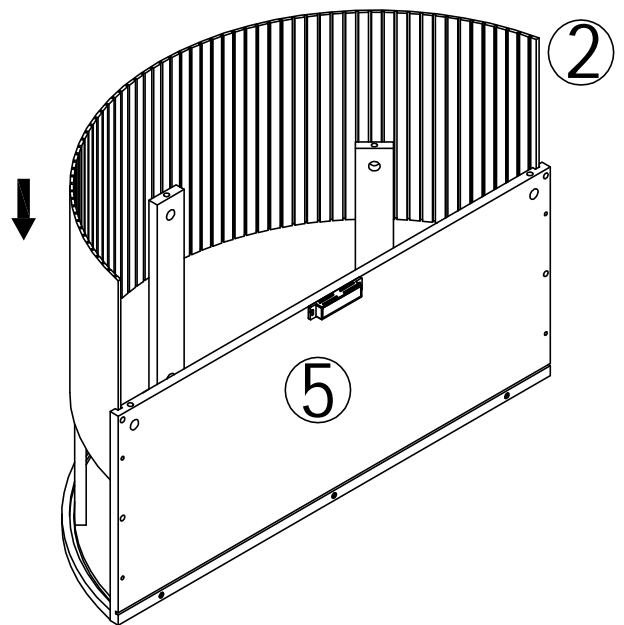



The subsequent installation method is the same. The figure shows only the way the linen faces in and the groove faces out


Step 6

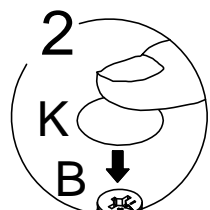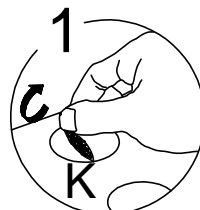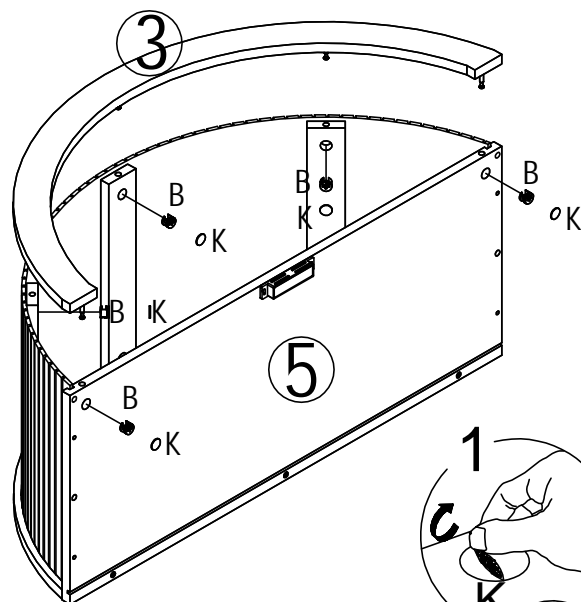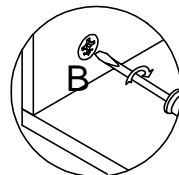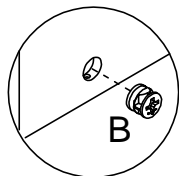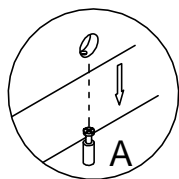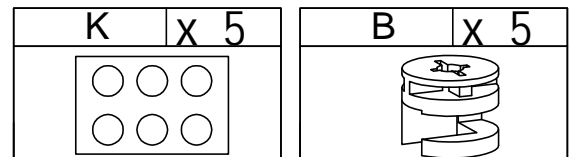


Step 7


J	x 4
	


A	x 8
	



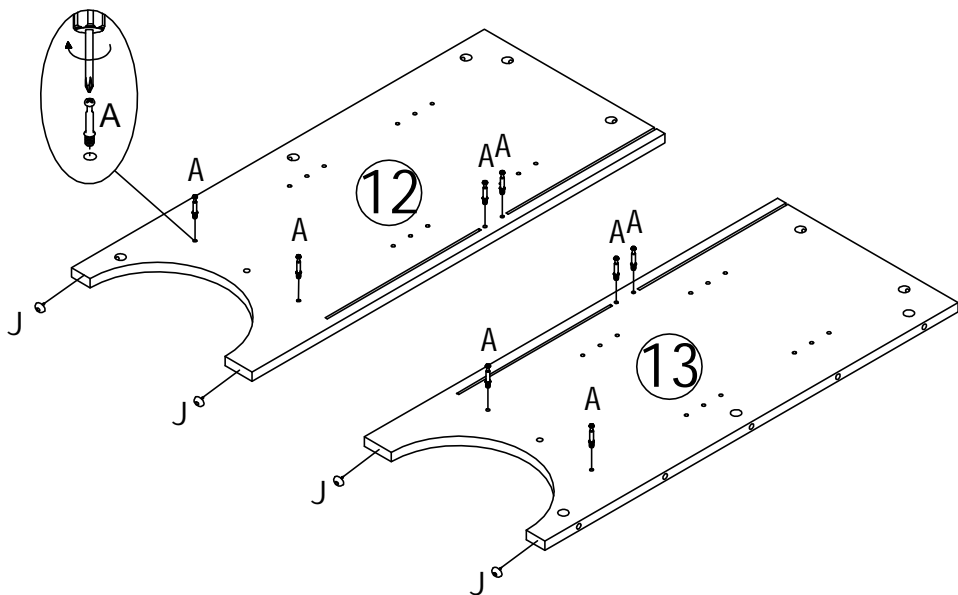


Step 8


C	x 1
	

K	x 4
	

B	x 4
	

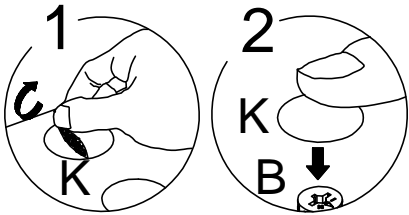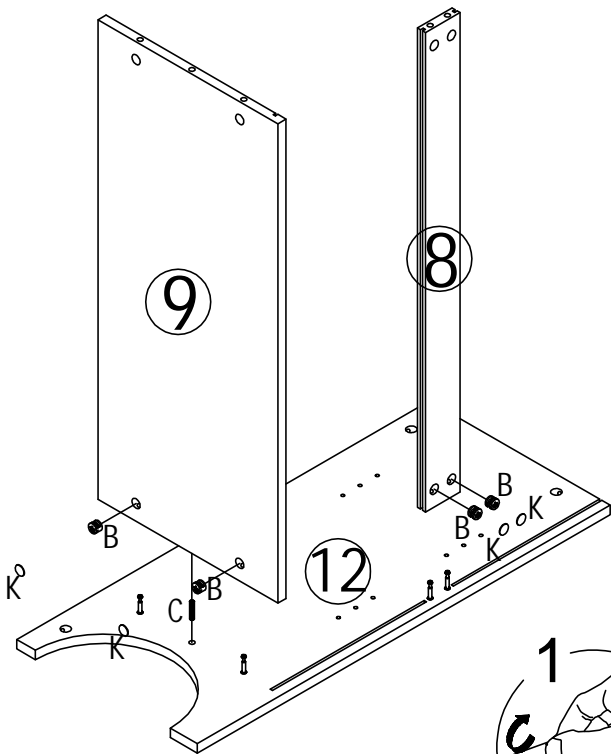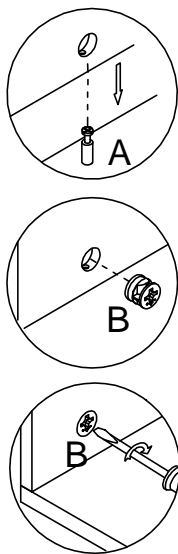

Step 9




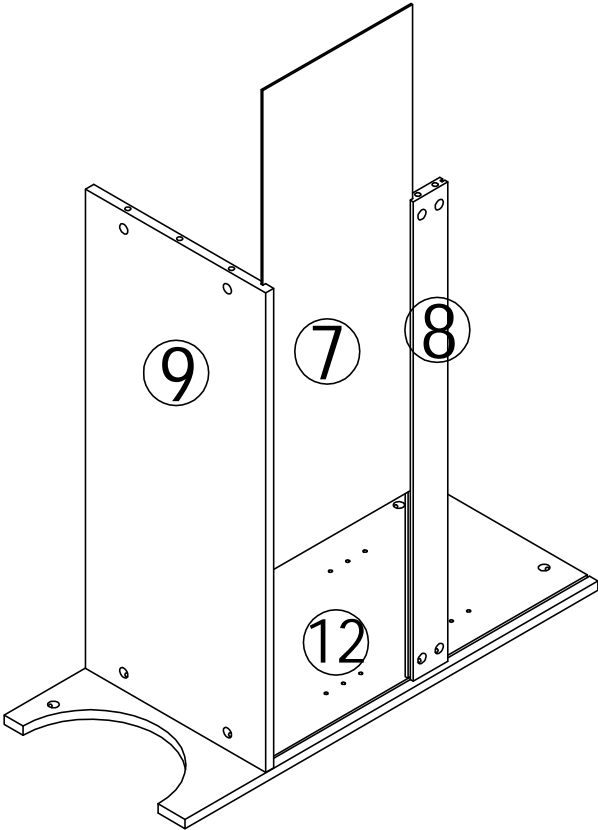


Step 10



C	x 1

K	x 4








B	x 4

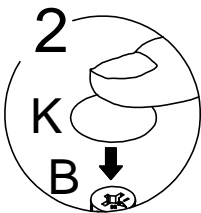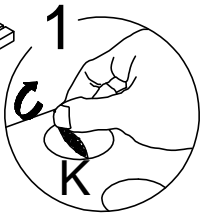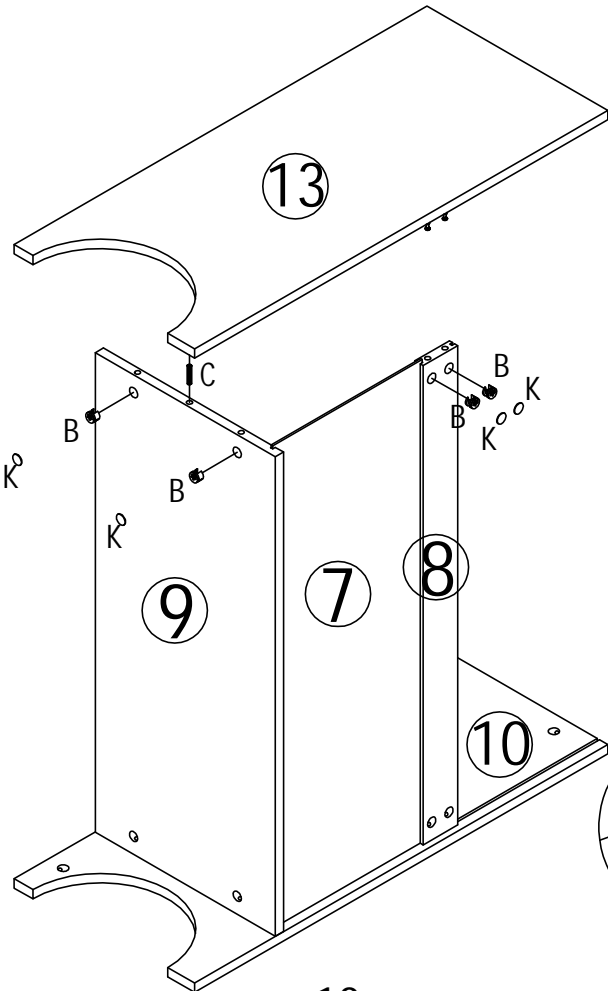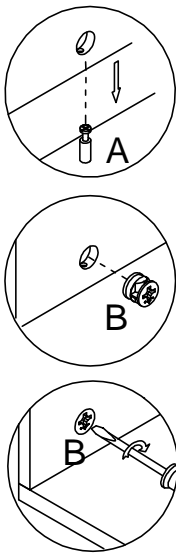


Step 11

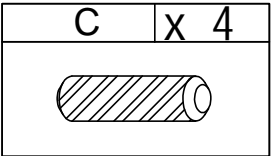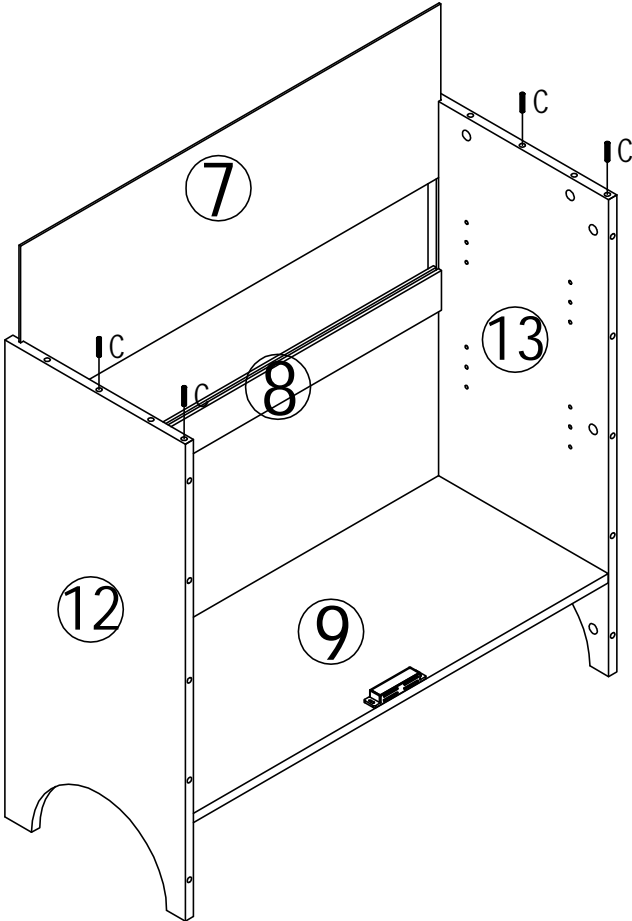


Step 12

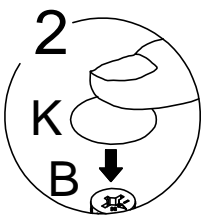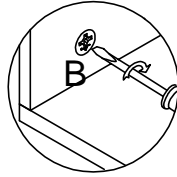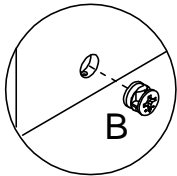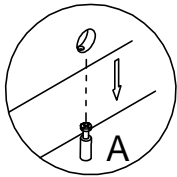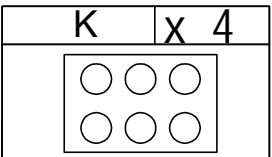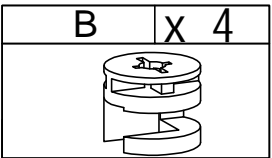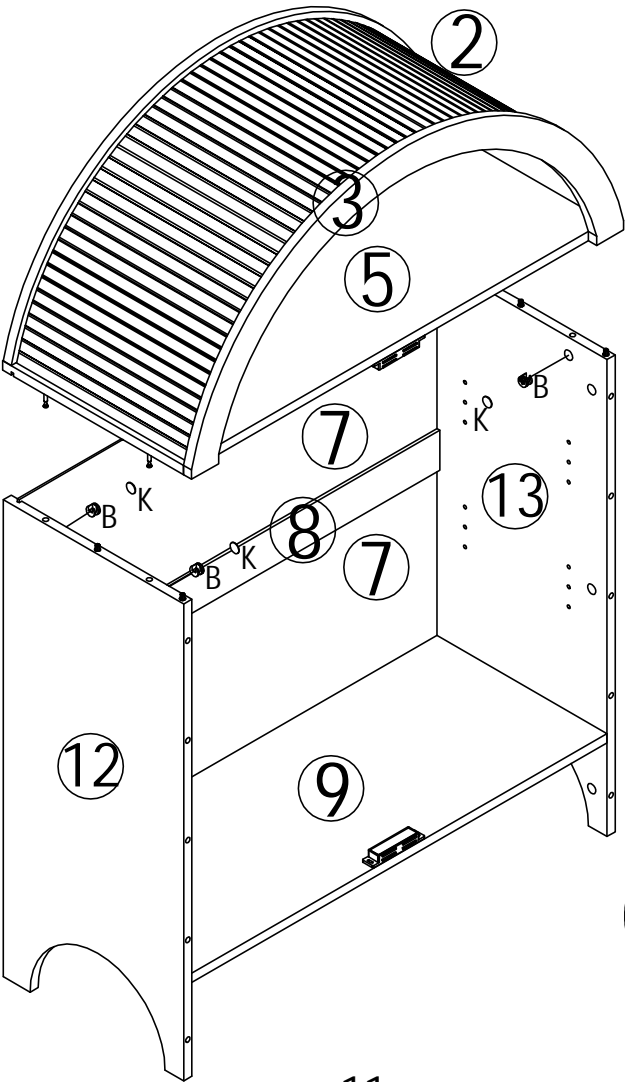



Step 13

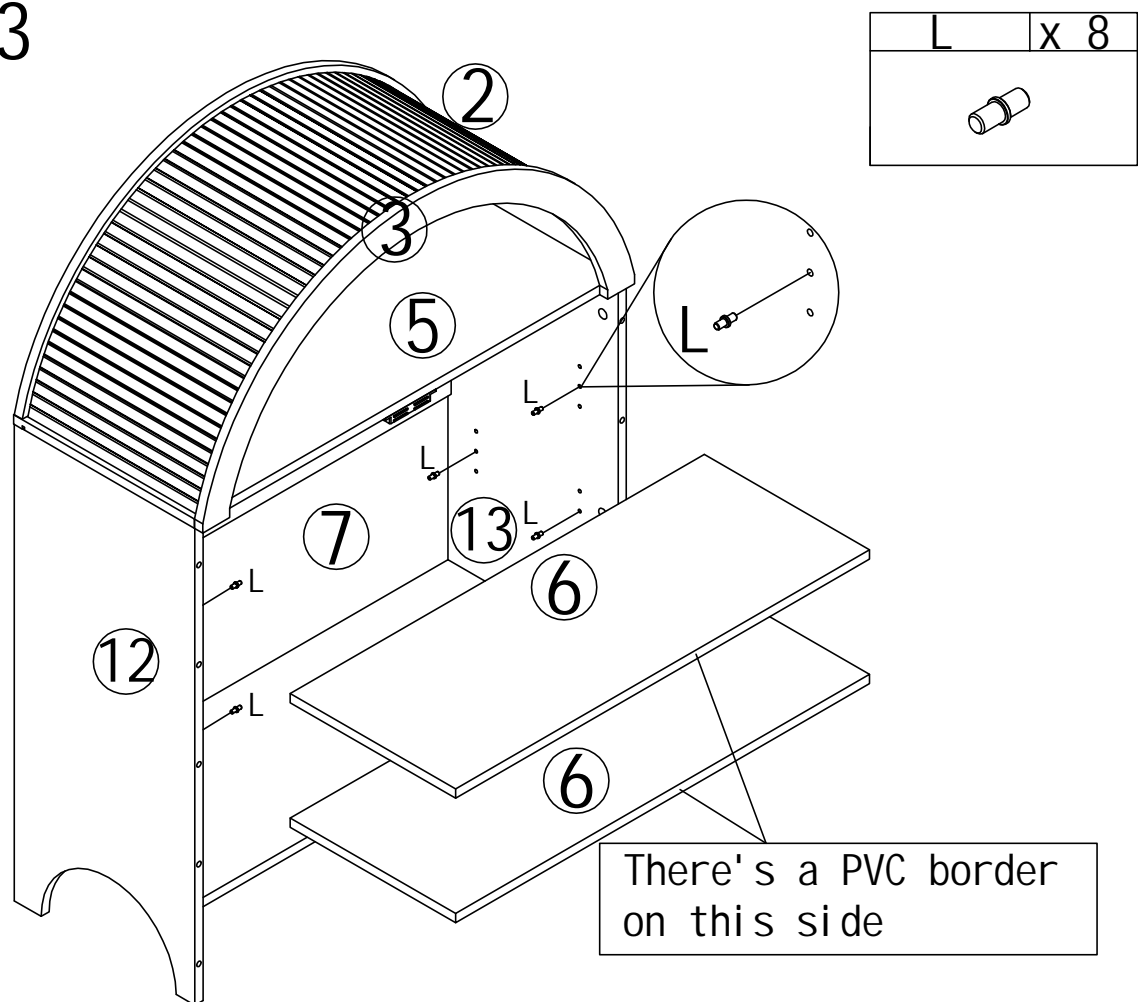


Step 14

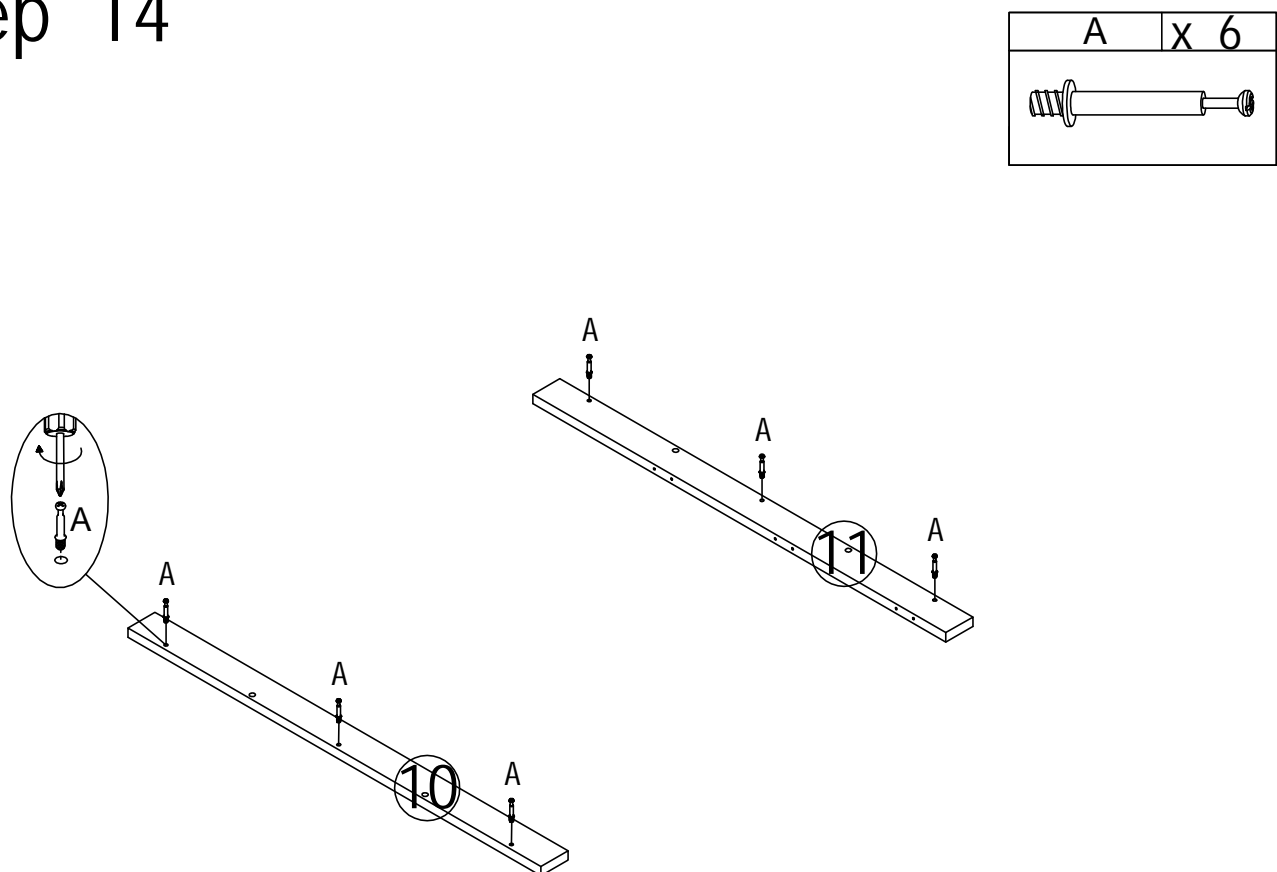


Step 15

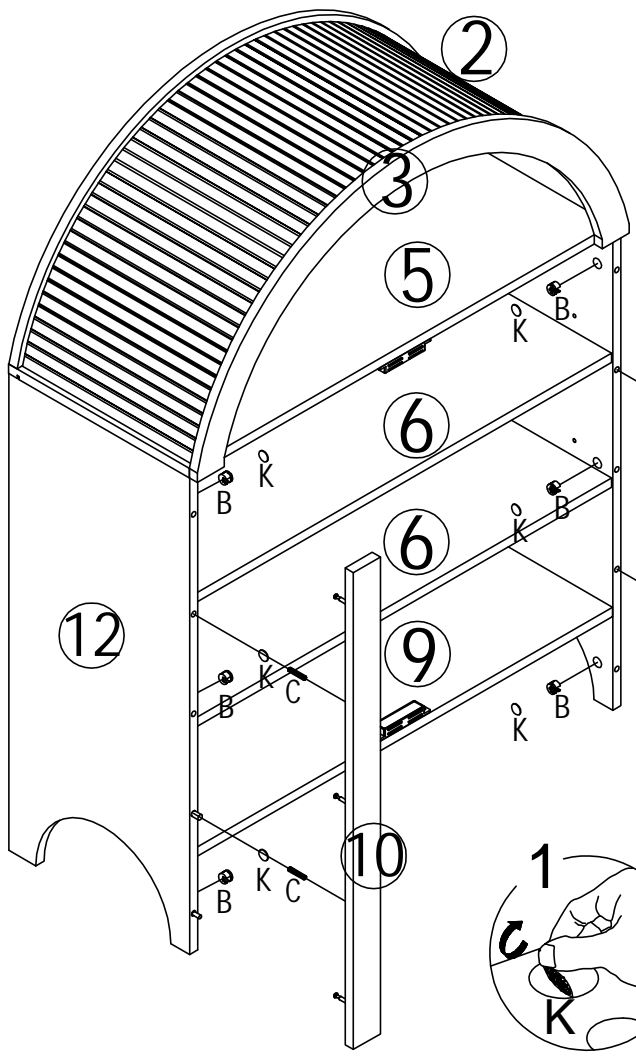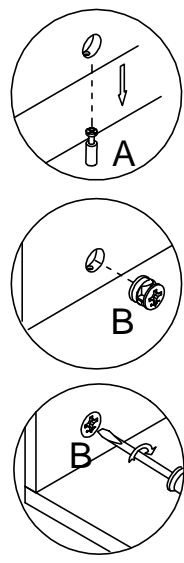

B	X 6
K	X 6
C	X 4

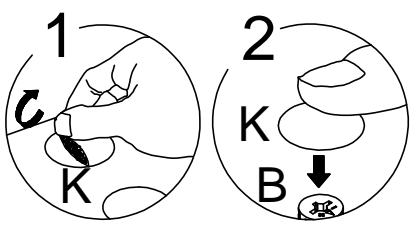


Step 16

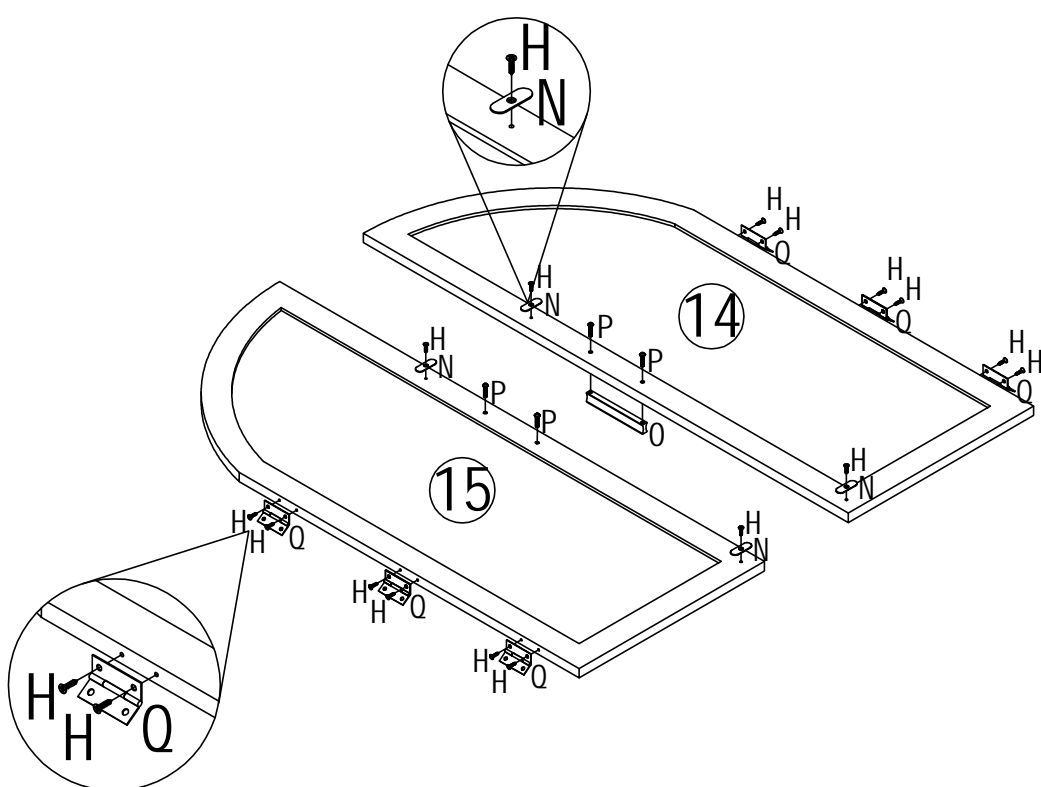


H	X 16
N	X 4
Q	X 6
P	X 4
O	X 2

Step 17

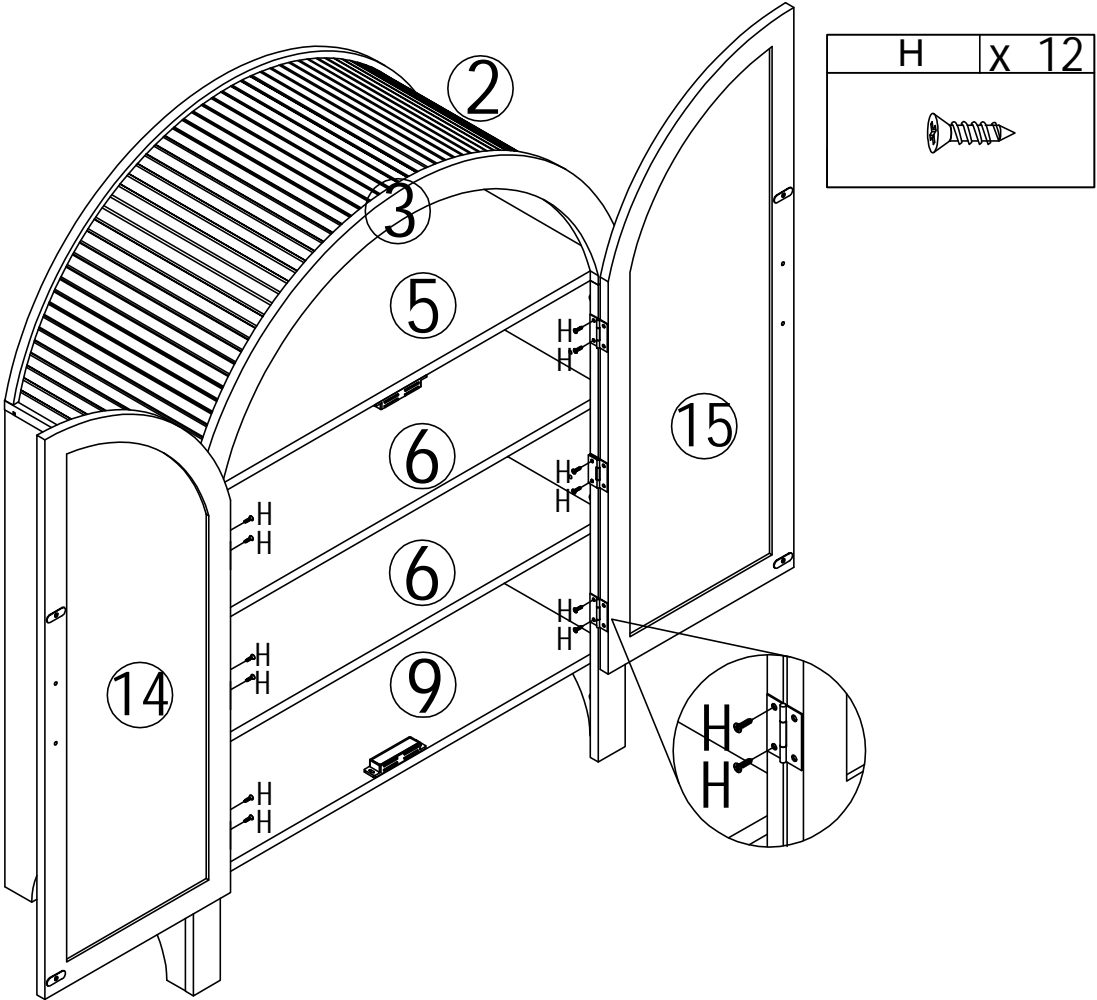



Step 18



drill hole in wall

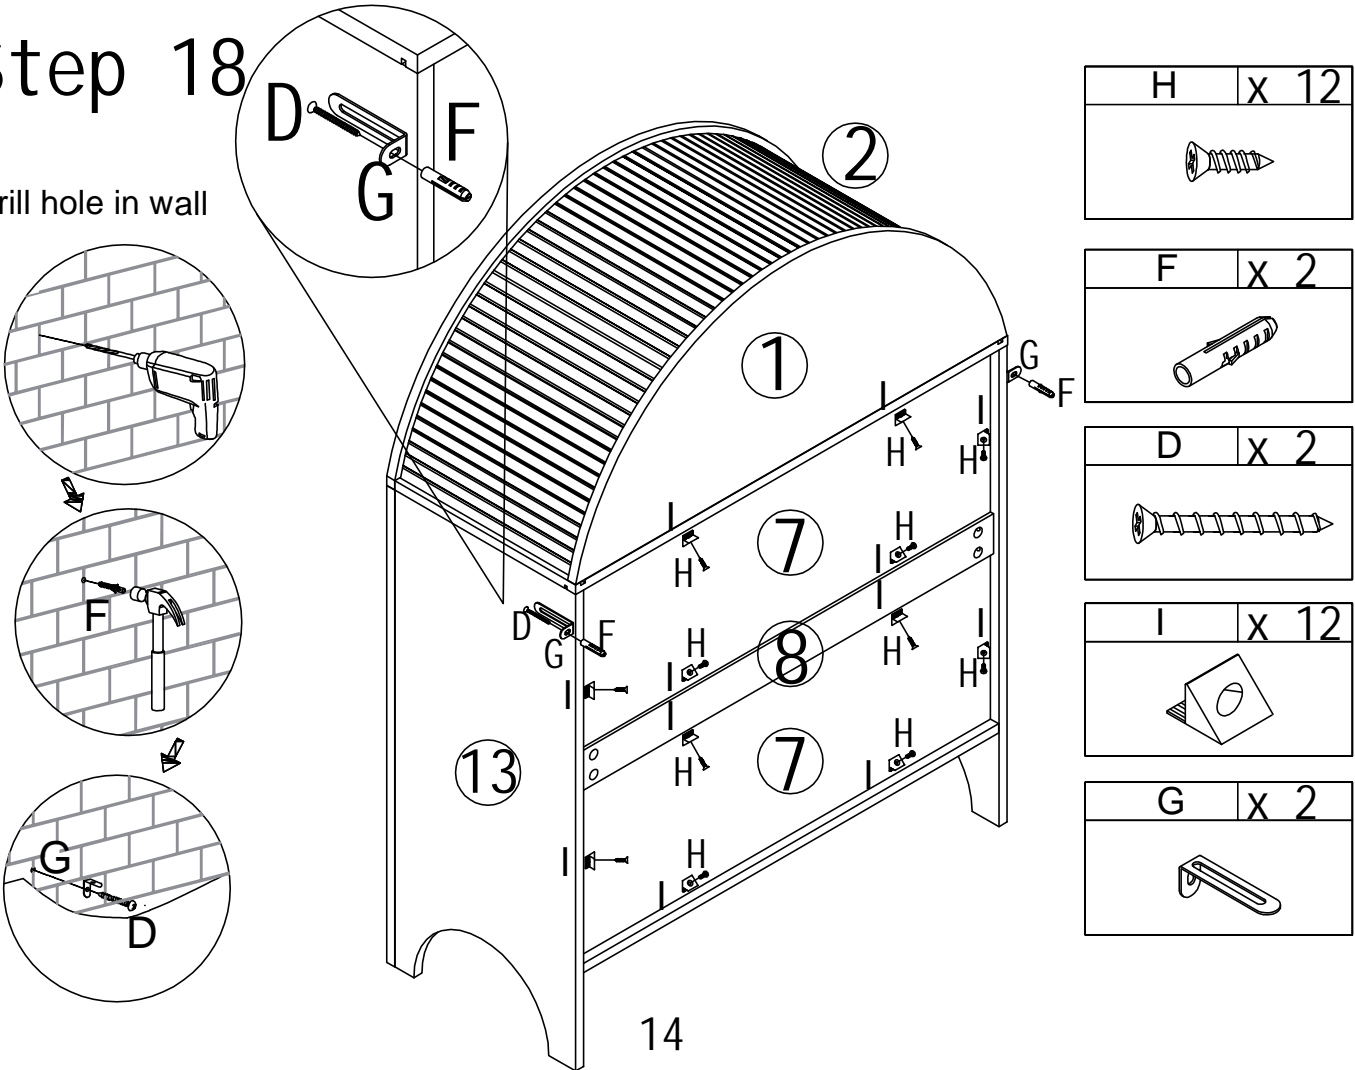

Step 19

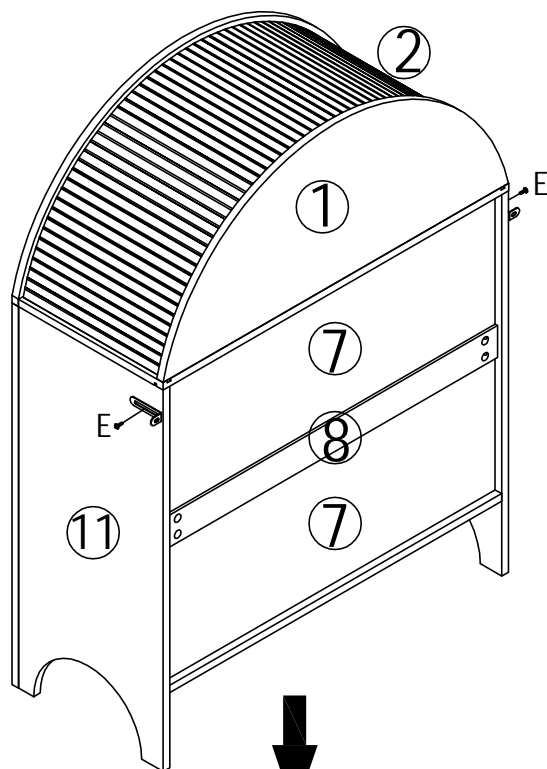

E	x 2
	

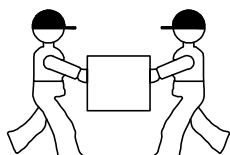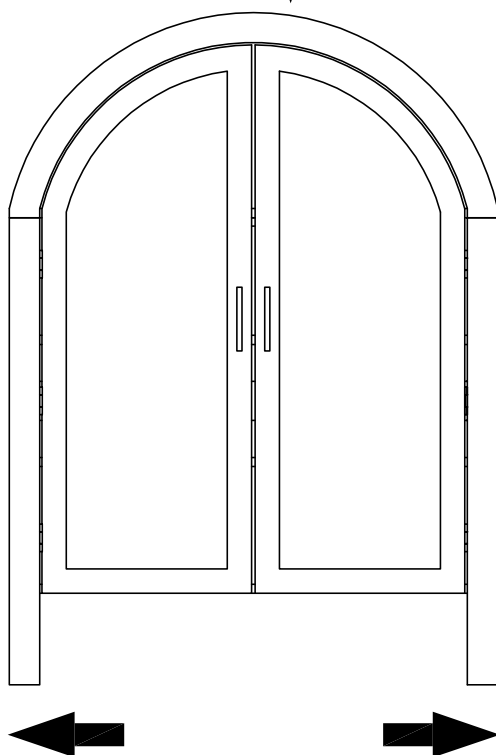

Two people work together to move the cabinet.
Make sure you lift it off the ground.
Don't push and pull.