


Bathroom storage cabinet

Assembly Instructions - Please keep for future reference

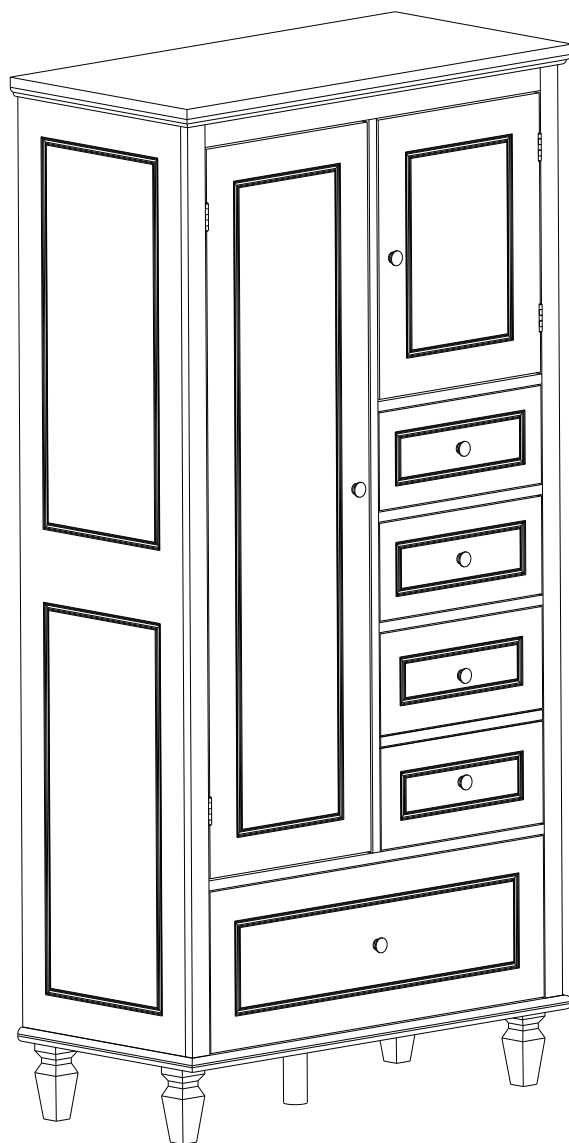

Important - Please read these instructions fully before starting assembly

Issue 1 - 14/09/24



Safety and Care Advice

Important – Please read these instructions fully before starting assembly

- Check you have all the components and tools listed on the following pages.
- Remove all fittings from the plastic bags and separate them into their groups.
- Keep children and animals away from the work area, small parts could choke if swallowed.
- Make sure you have enough space to layout the parts before starting.

- During assembly do not stand or put weight on the product, this could cause damage.
- Assemble the item as close to its final position (in the same room) as possible.
- Assemble on a soft level surface to avoid damaging the unit or your floor.
- Parts of the assembly will be easier with 2 people.



- To reduce the likelihood of damaging your product please ensure that your power drill is set on a low torque setting.

Care and maintenance

- Only clean using a damp cloth and mild detergent, do not use bleach or abrasive cleaners.
- From time to time check that there are no loose screws on this unit.
- This product should not be discarded with household waste. Take to your local authority waste disposal centre.

Handy Hints

- Assemble all parts and bolts loosely during assembly, only once the product is complete should you fully tighten the bolts
- Regularly check and ensure that all bolts and fittings are tightened properly.

WARNING

In order to help prevent overturning – please follow these instructions

To help prevent product toppling over please follow the below steps:-

Use the anti tip strap or wall fixing method provided (if applicable)
Do not allow children to climb or hang on the furniture
Do not open more than one drawer at a time
Do not place heavy items in the top drawers
Do not place heavy items on top of the furniture, unless the furniture has been designed for this purpose












Please note that only the anti tip strap is provided.

You will need to provide wall plugs and screws applicable for your wall type


Components - Fittings

Please check you have all the panels listed below

Note: The quantities below are the correct amount to complete the assembly. In some cases more fittings may be supplied than are required.

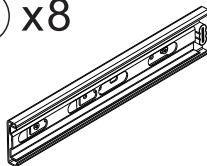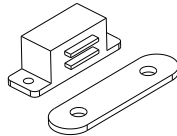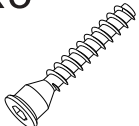A x56 	B x56 	C x8 	D x4 
E x2 	F x5 	G x7 	H x1 
I x7  M4x16	J x5  M7x50	K x8  M6x30	L x8  M6x40
M x27  M4x30	N x56  M3x12	O x1 	P x1  M4
Q x1  M4x45	R x8 	S x6 	

Ruler - Use this ruler to help correctly identify the screws

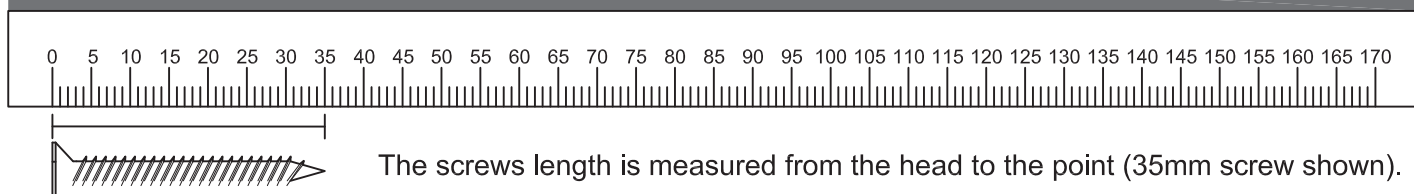


Using Camlocks

Step 1

Connect the male camlock as directed in the assembly instructions using a screwdriver.

1


DO NOT OVER TIGHTEN.
NE PAS SERRER EXCESSIVEMENT.

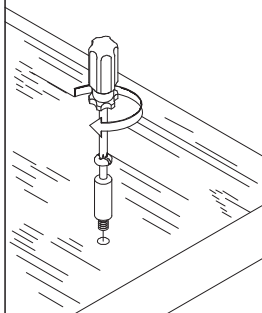

Step 2

Push the male camlock into the entry hole.

2

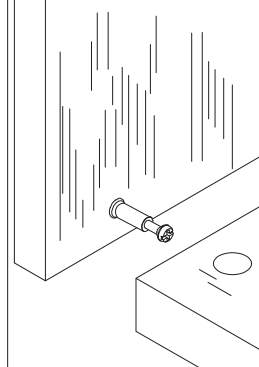


Step 3

Insert the female camlock as shown in the instruction.

Note: ensure that the arrow on the top of the camlock points towards the entry hole for the male camlock.

3

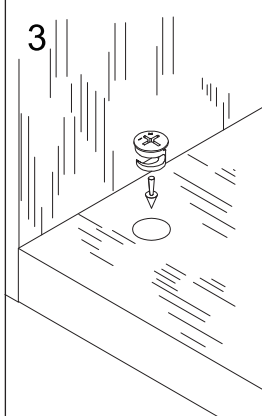


Step 4

Turn the female camlock clockwise with a screwdriver.




You should feel a click when the camlock is locked in place.

The joint is now secure.

4

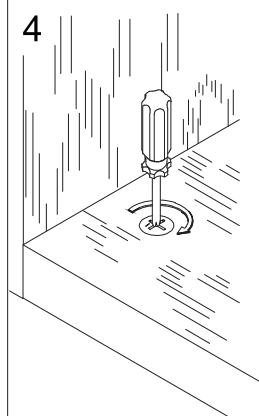


Tools required
















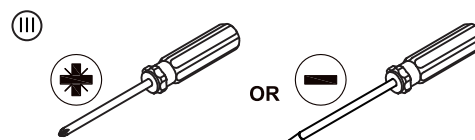
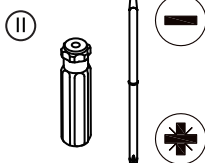
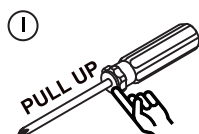


Screwdrivers can be converted to Phillips and Slotted.


















Assembly Instructions

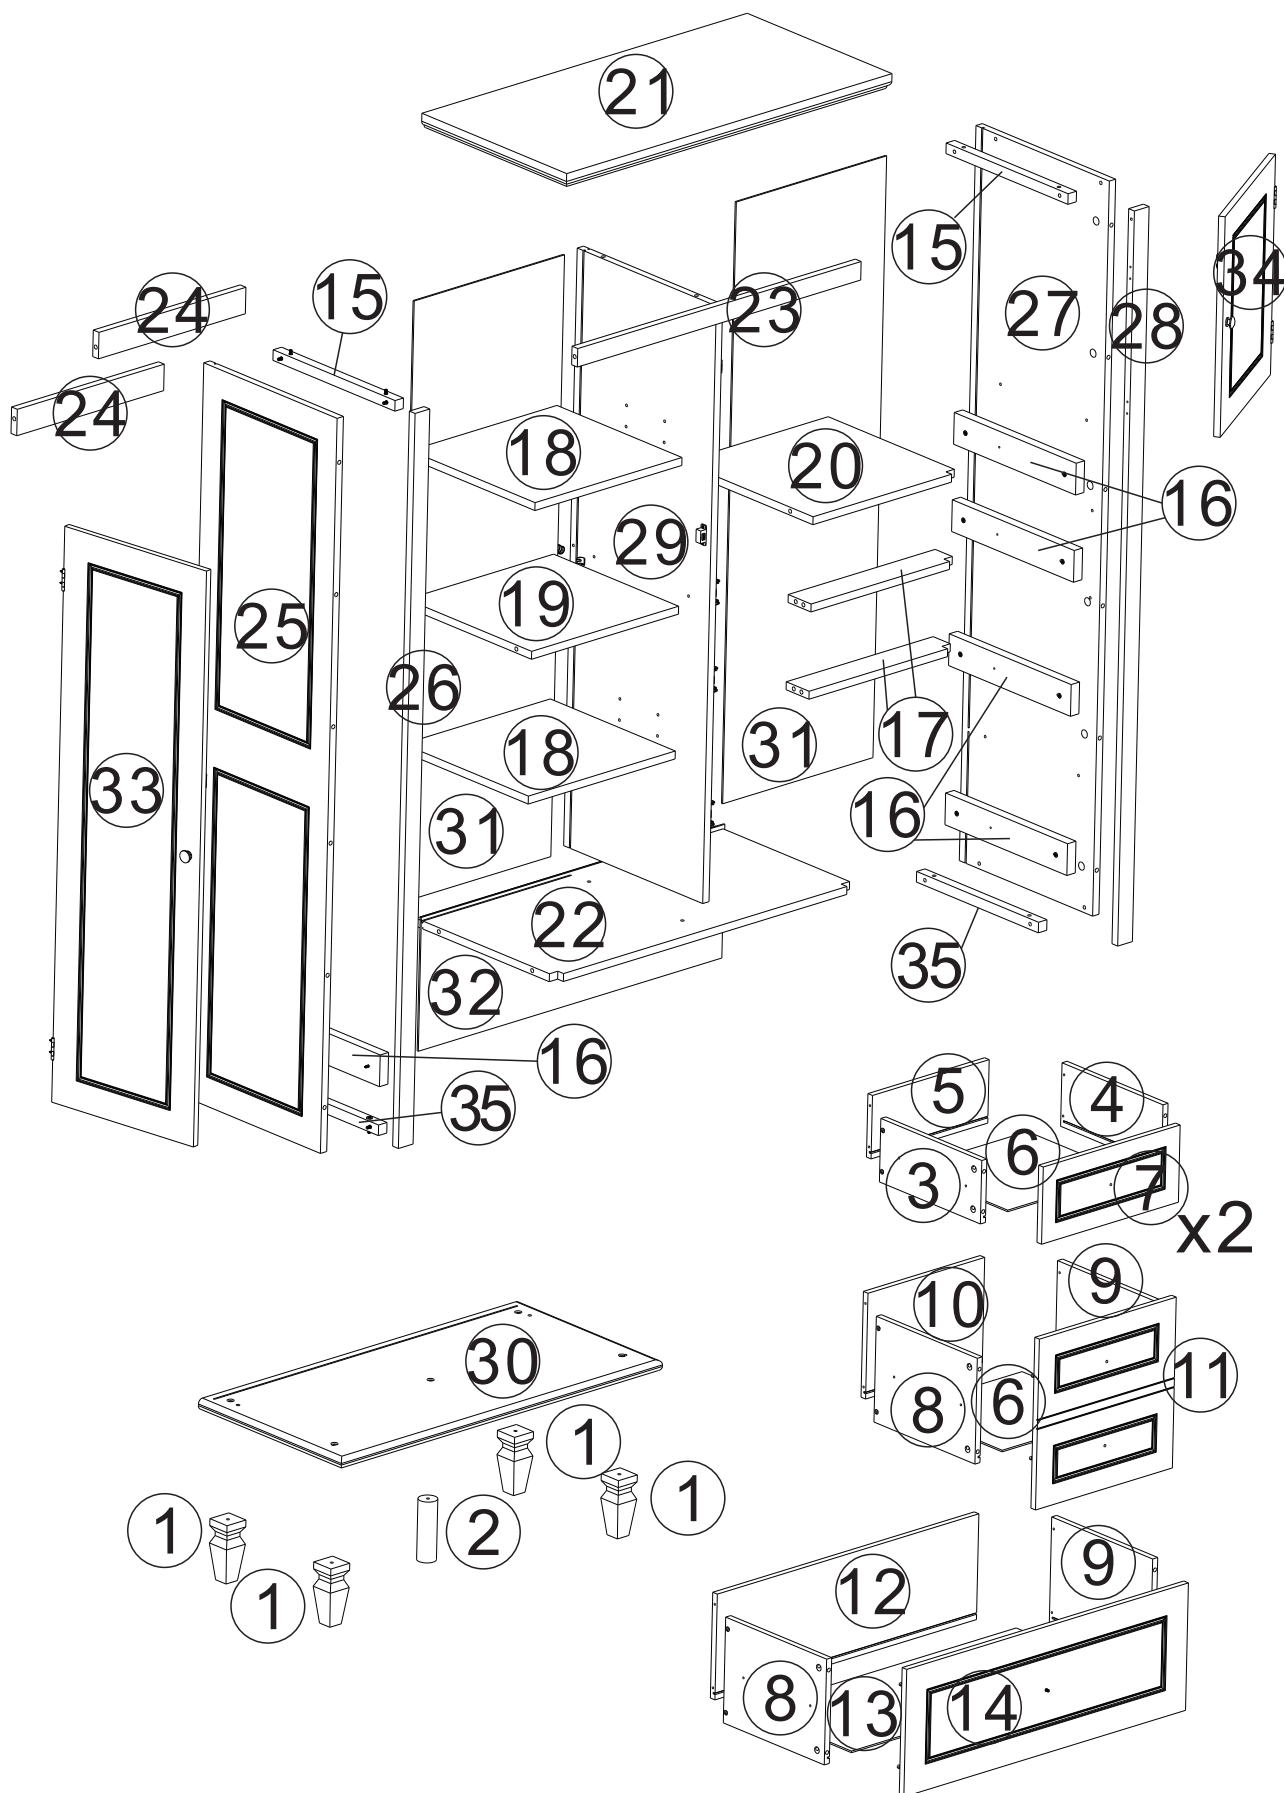

Assembly Instructions

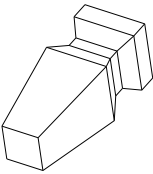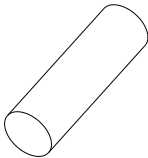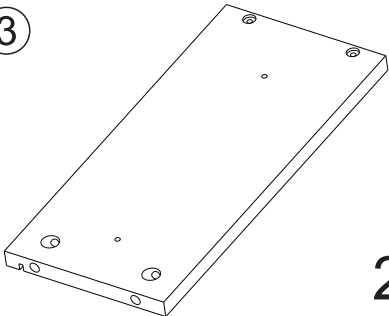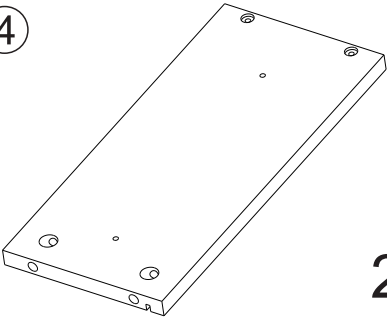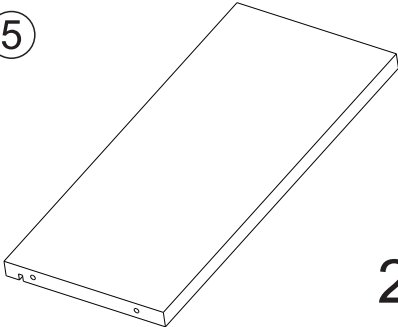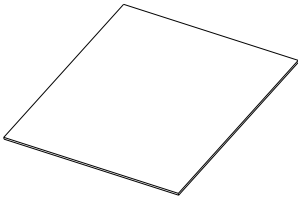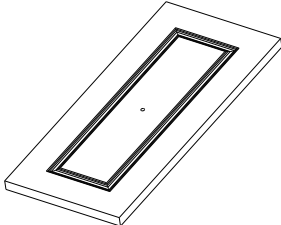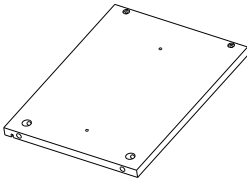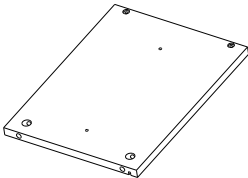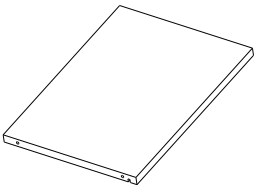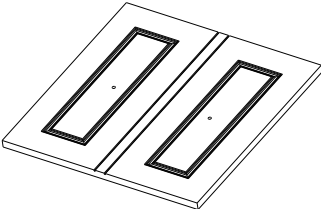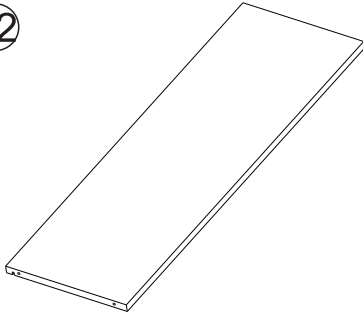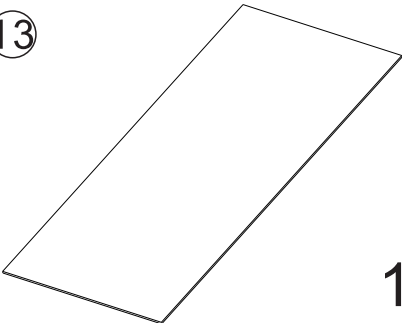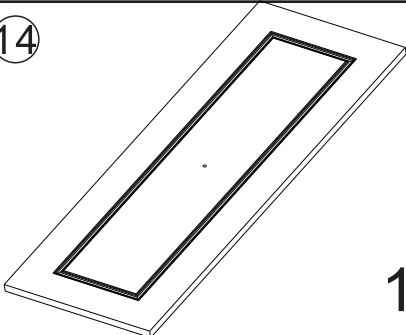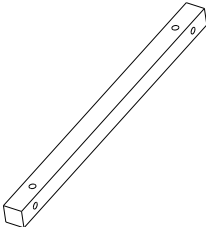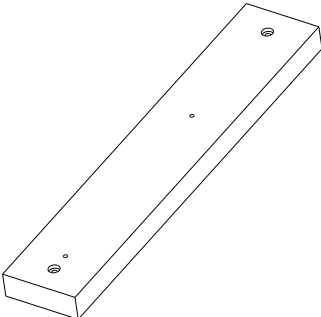
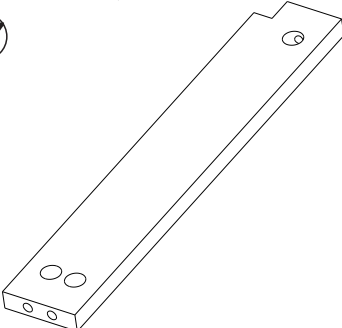
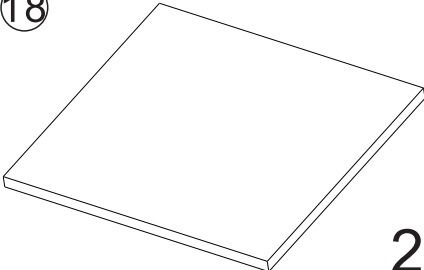
 4	 1	 2
 2	 2	 3
 1	 2	 2
 1	 1	 1
 1	 1	 2
 5	 2	 2

Assembly Instructions

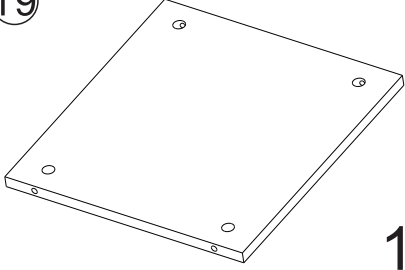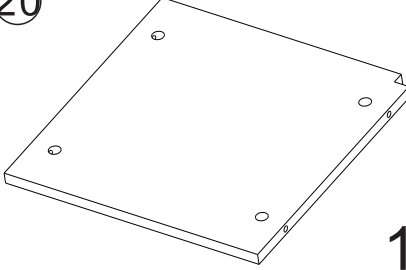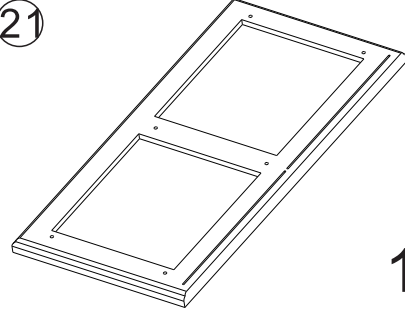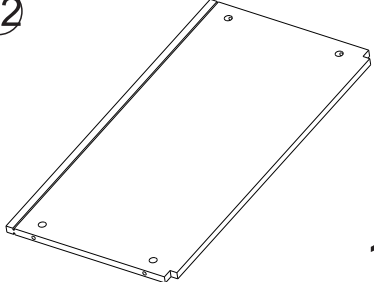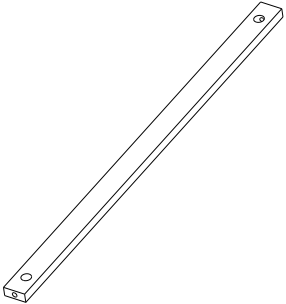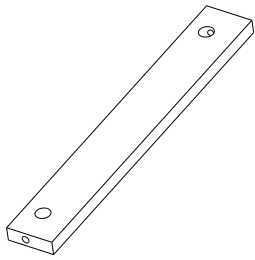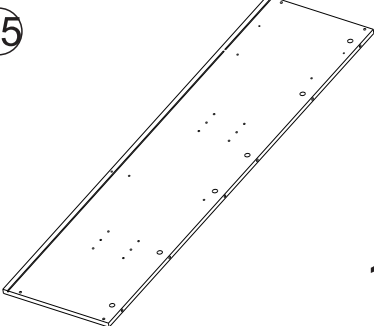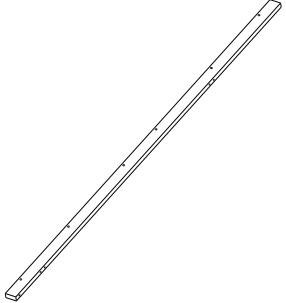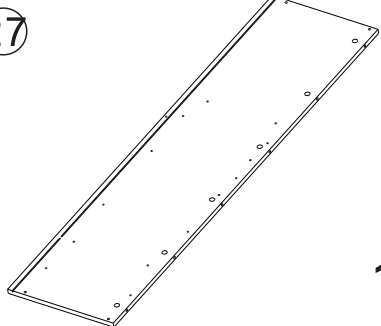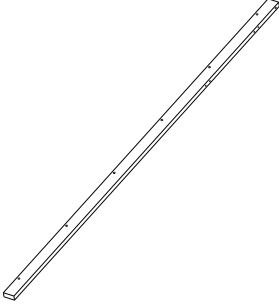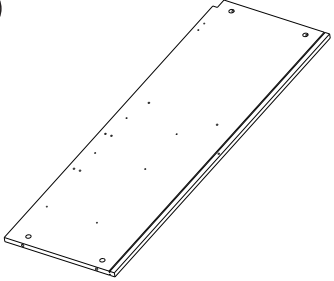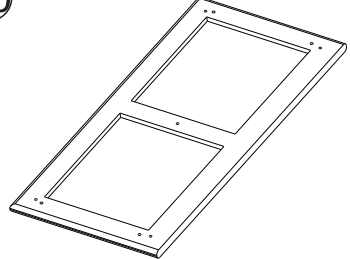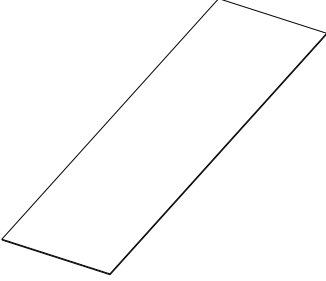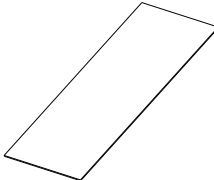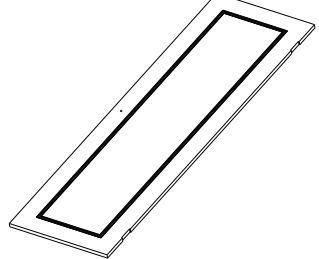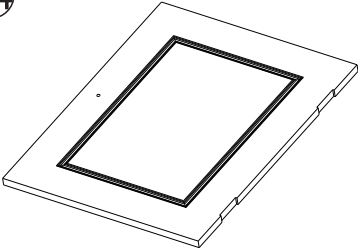
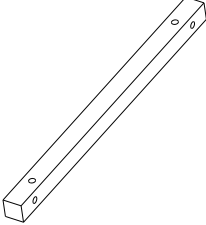
 19 1	 20 1	 21 1
 22 1	 23 1	 24 2
 25 1	 26 1	 27 1
 28 1	 29 1	 30 1
 31 2	 32 1	 33 1
 34 1	 35 2	

Assembly Instructions

Step 1

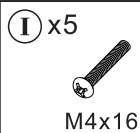
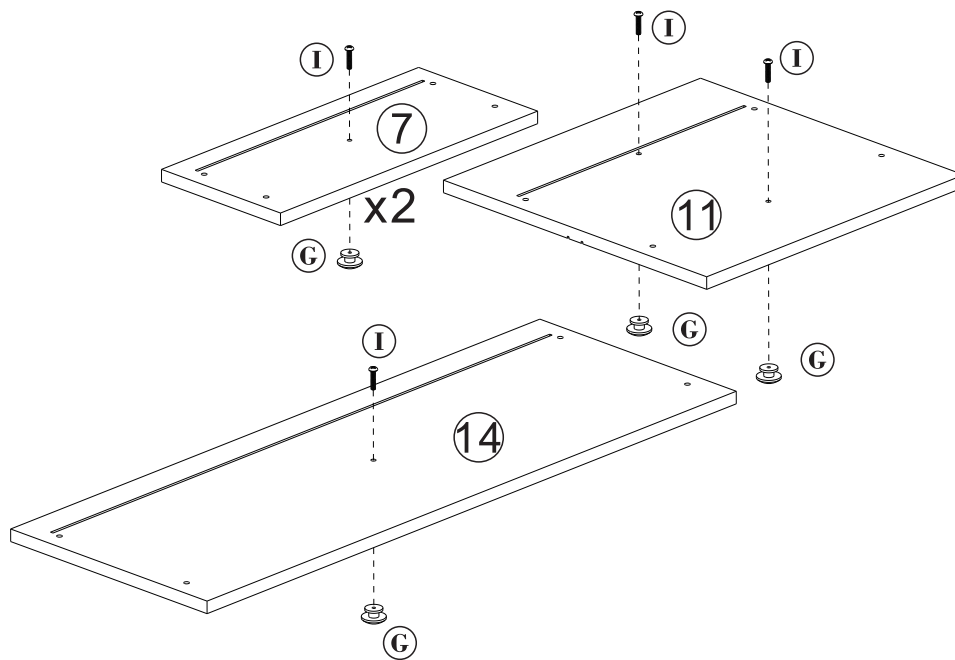


Step 2

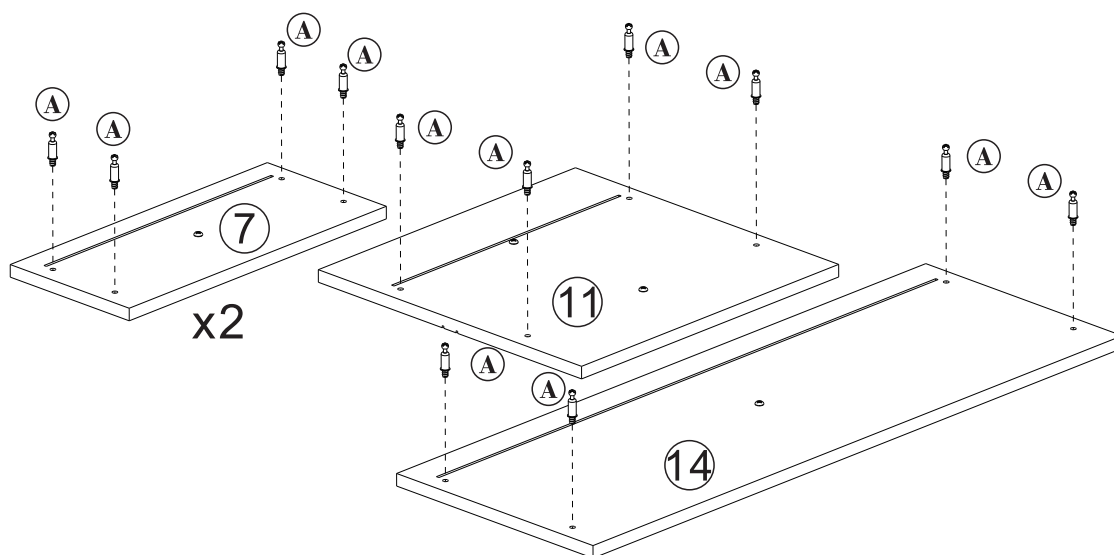

Assembly Instructions


Step 3

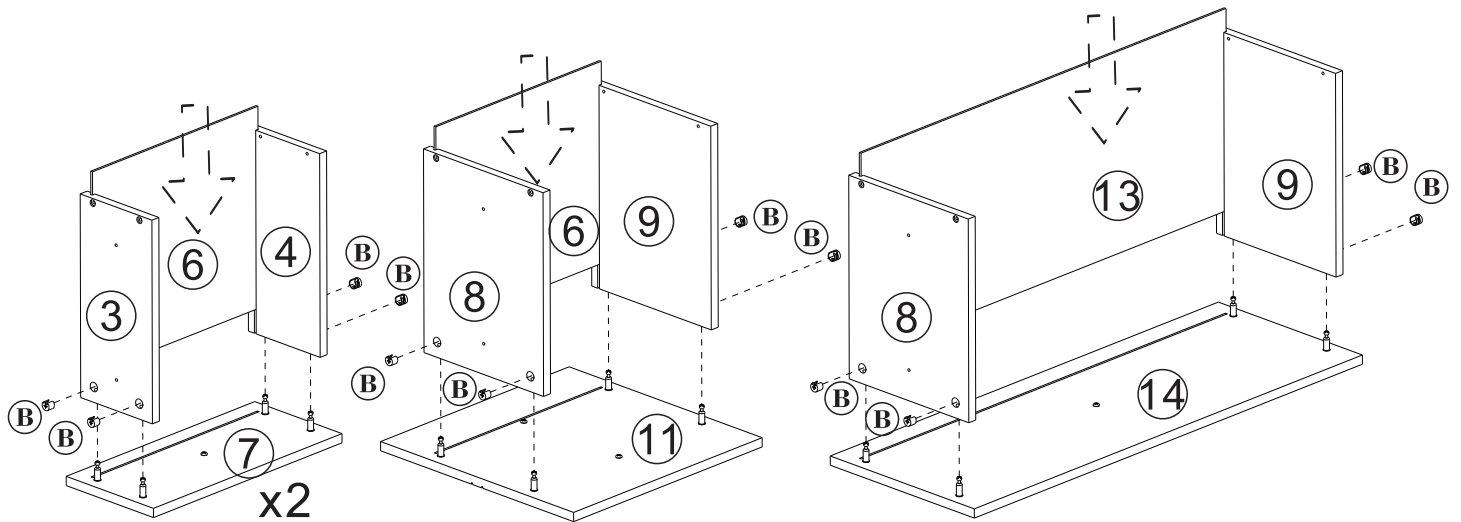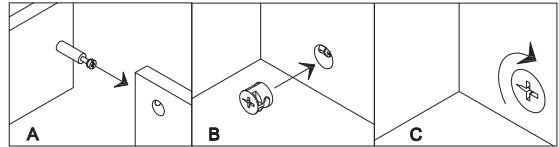

(B) x16



Step 4

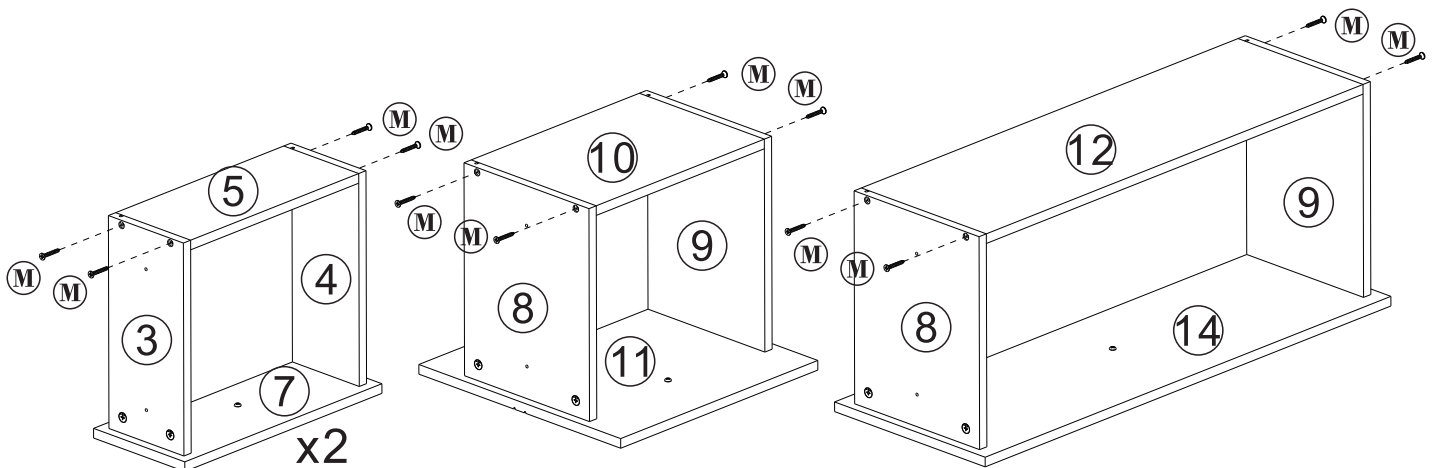


(M) x16



M4x30

Assembly Instructions

Step 5

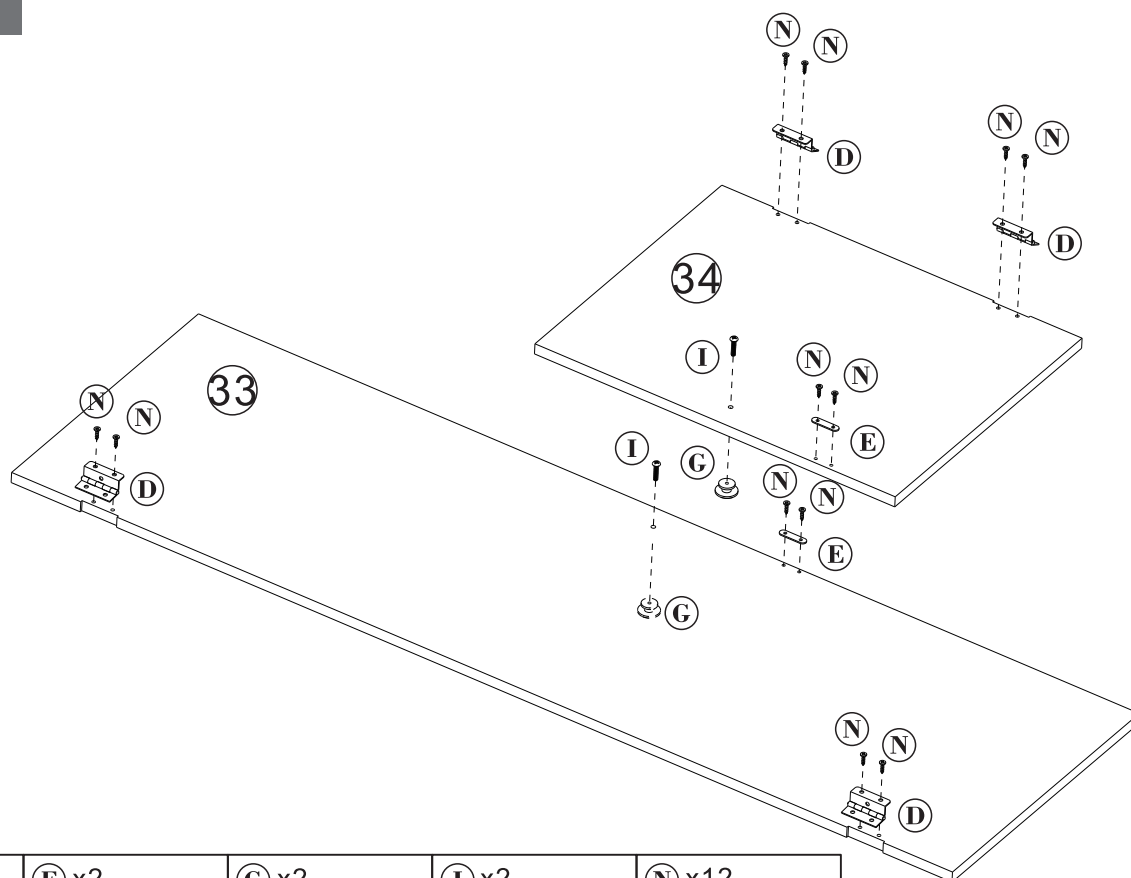

(D) x4



(E) x2



(G) x2



(I) x2




M4x16

(N) x12



M3x12

Step 6


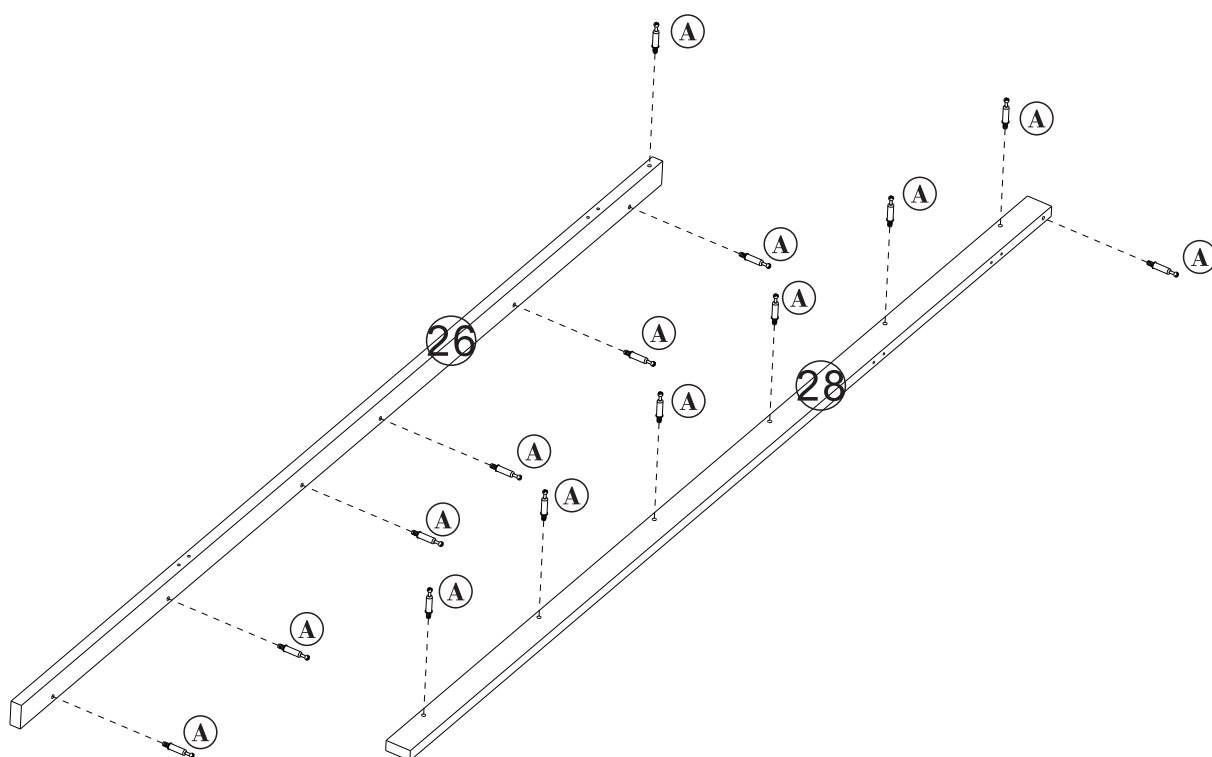


(A) x14



Assembly Instructions


Step 7

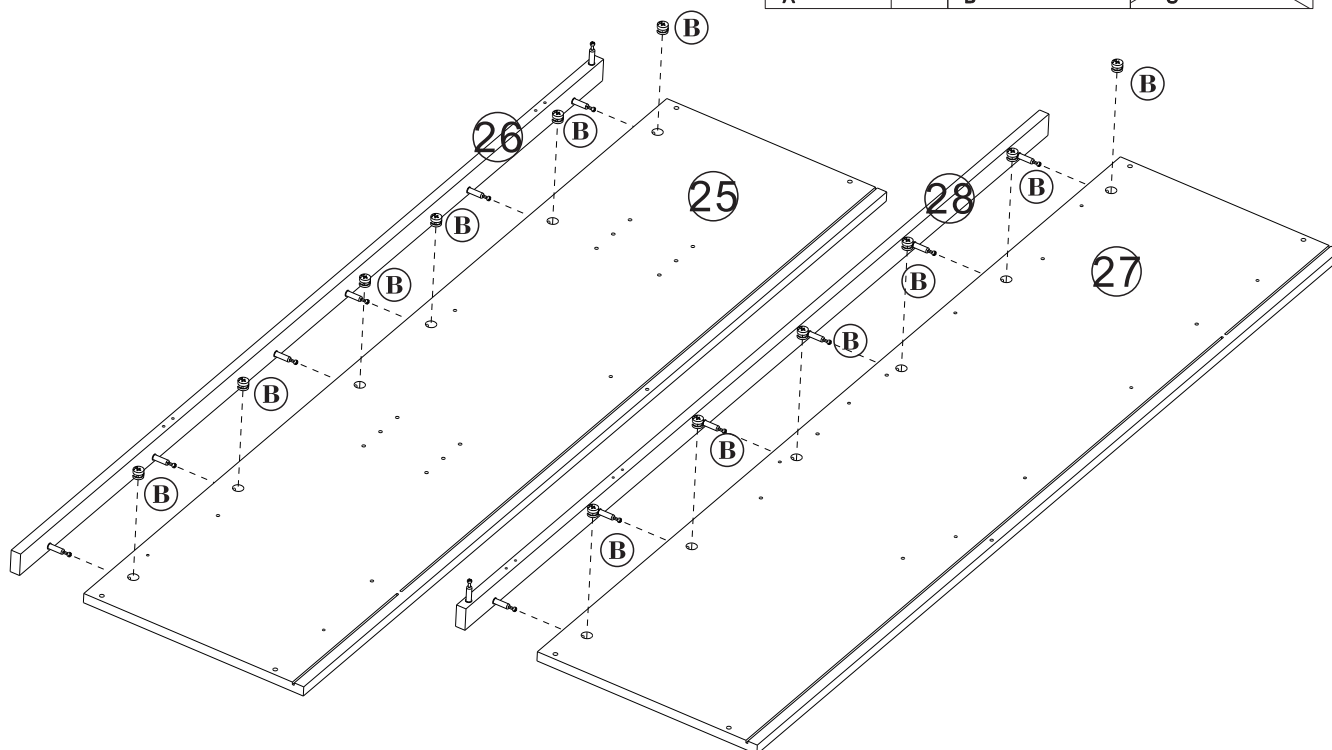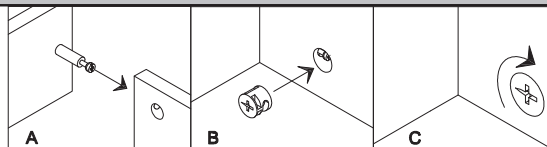

(B) x12



Step 8

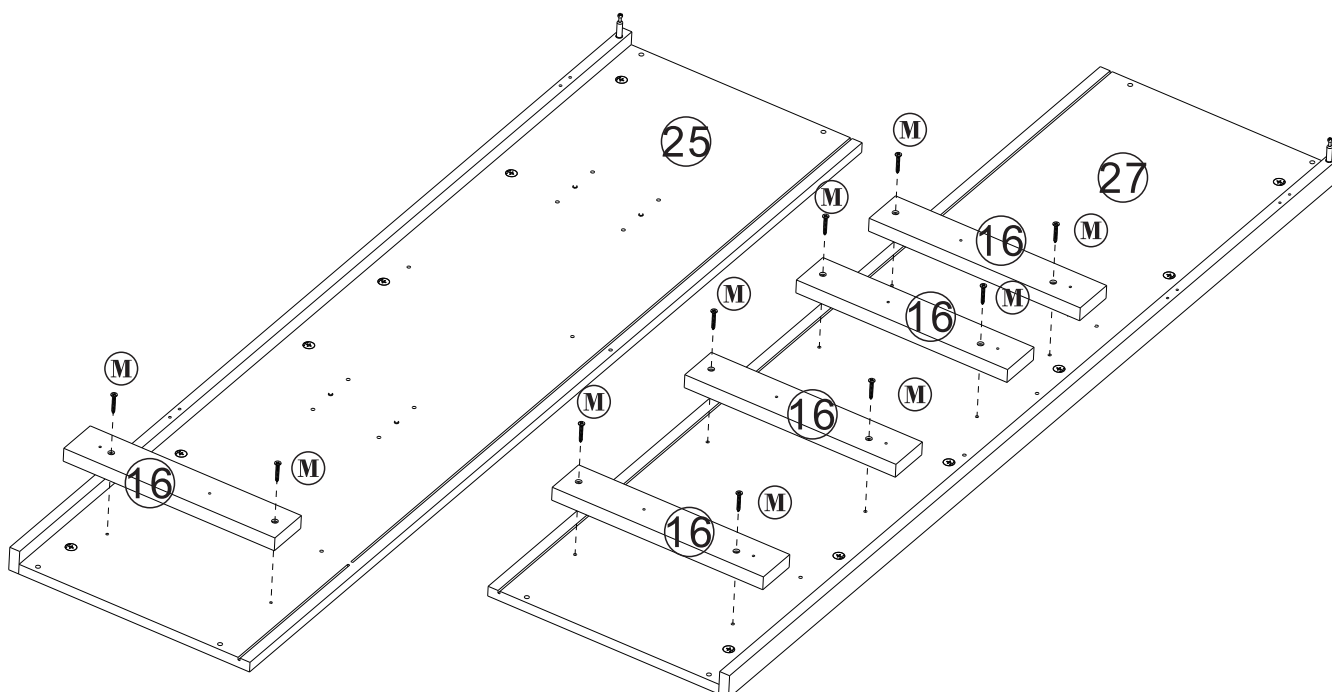


(M) x10




M4x30

Assembly Instructions

Step 9

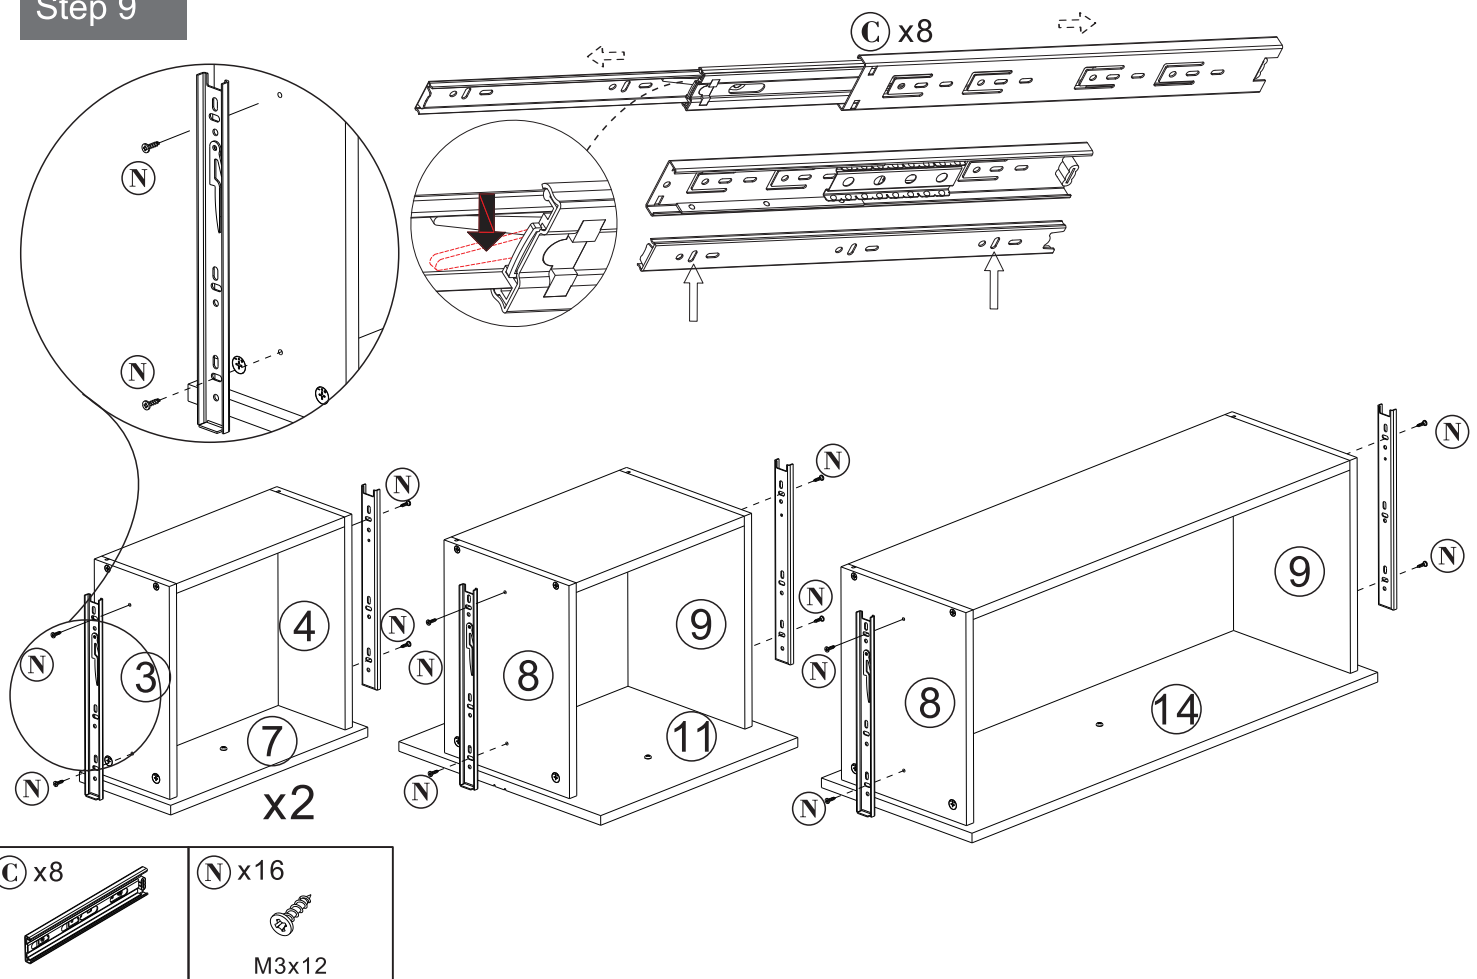


Step 10

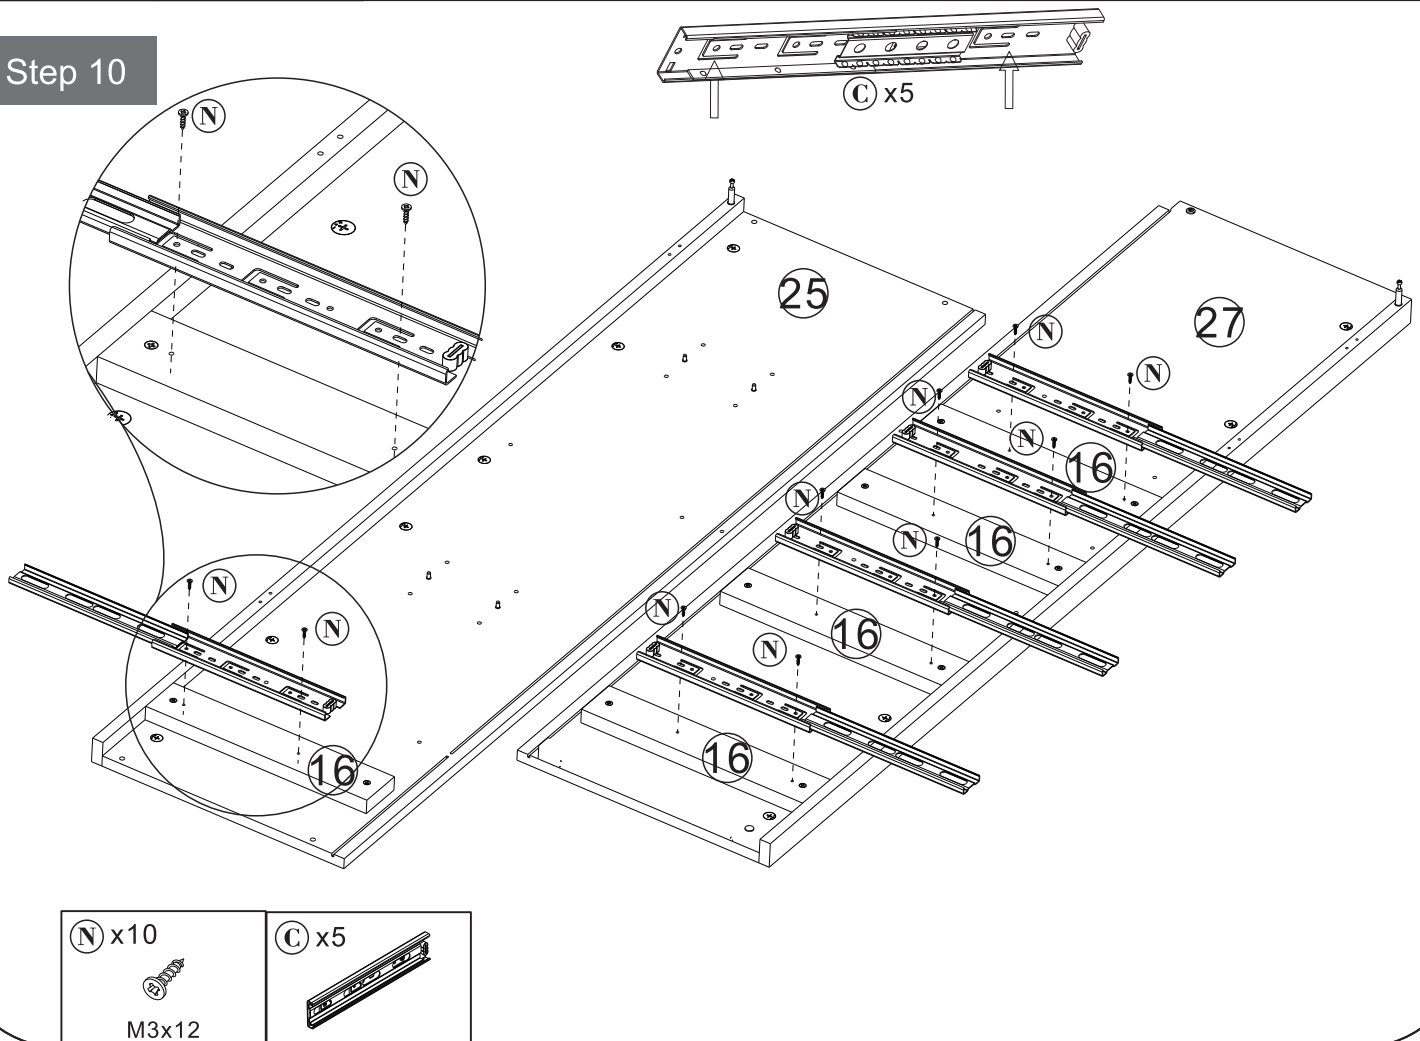

Assembly Instructions

Step 11

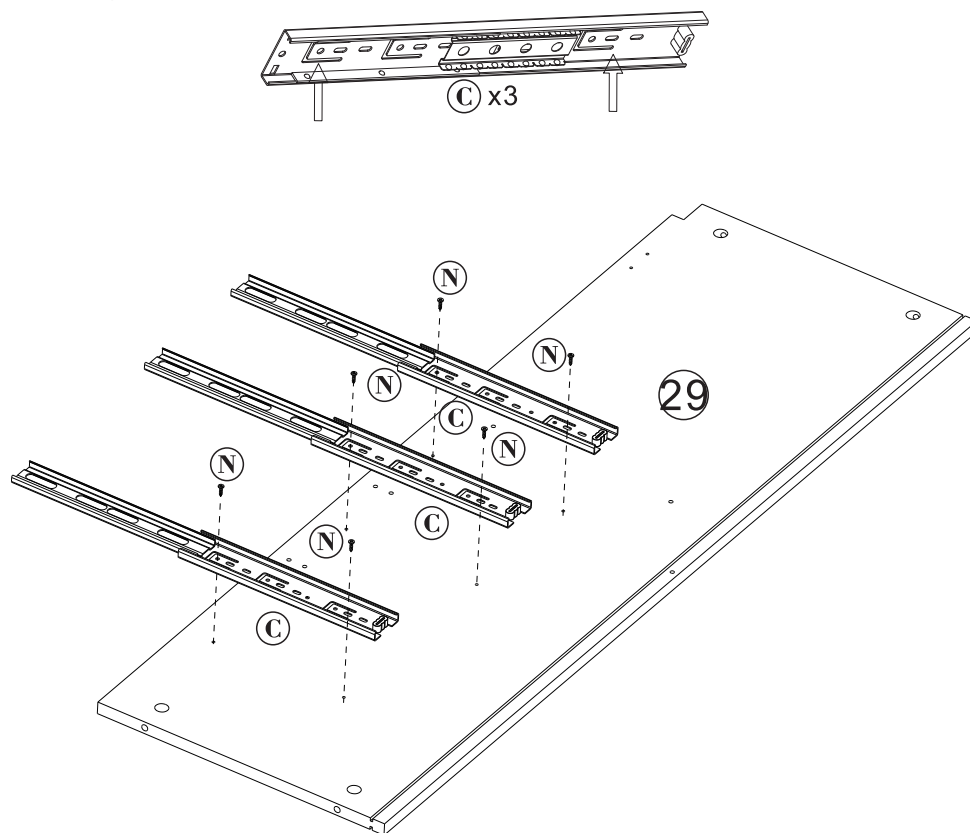


(N) x6




M3x12

(C) x3



Step 12

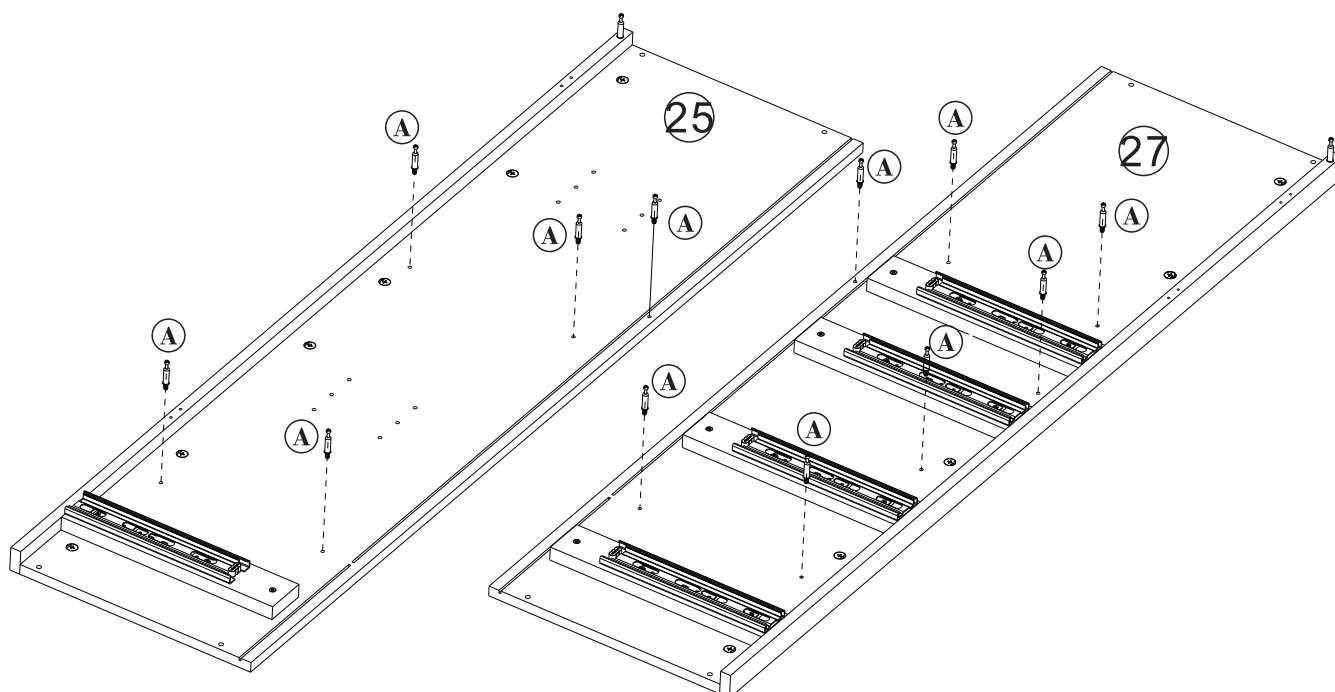


(A) x12



Assembly Instructions


Step 13

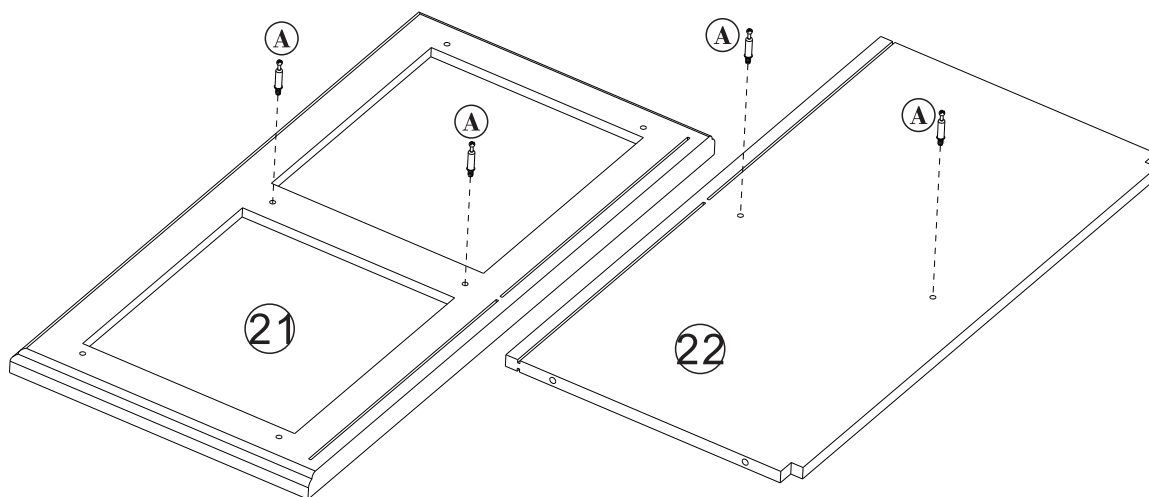

A x4



Step 14

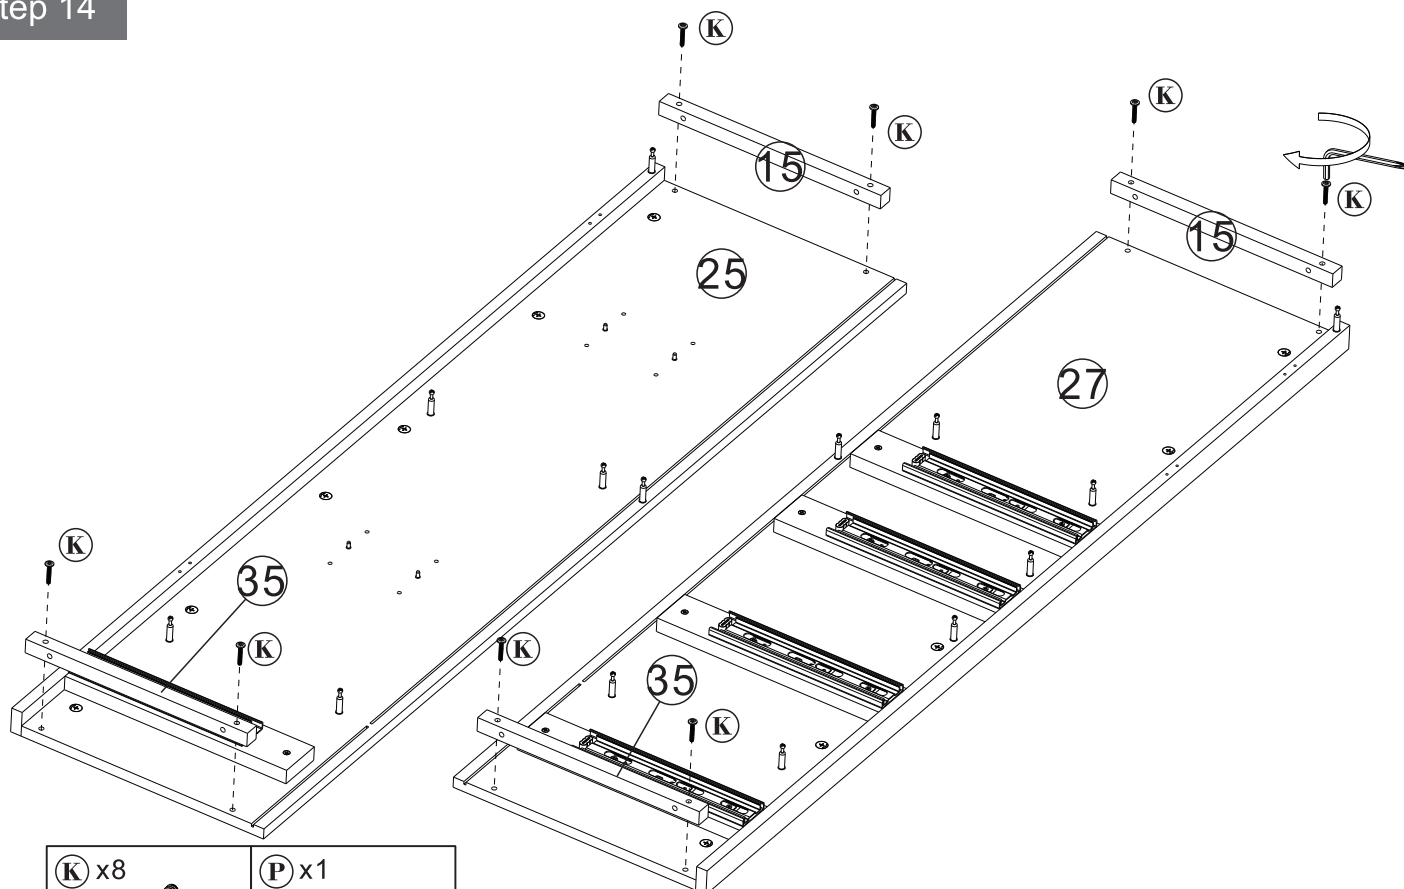


K x8



M6x30


P x1



M4

Assembly Instructions


Step 15

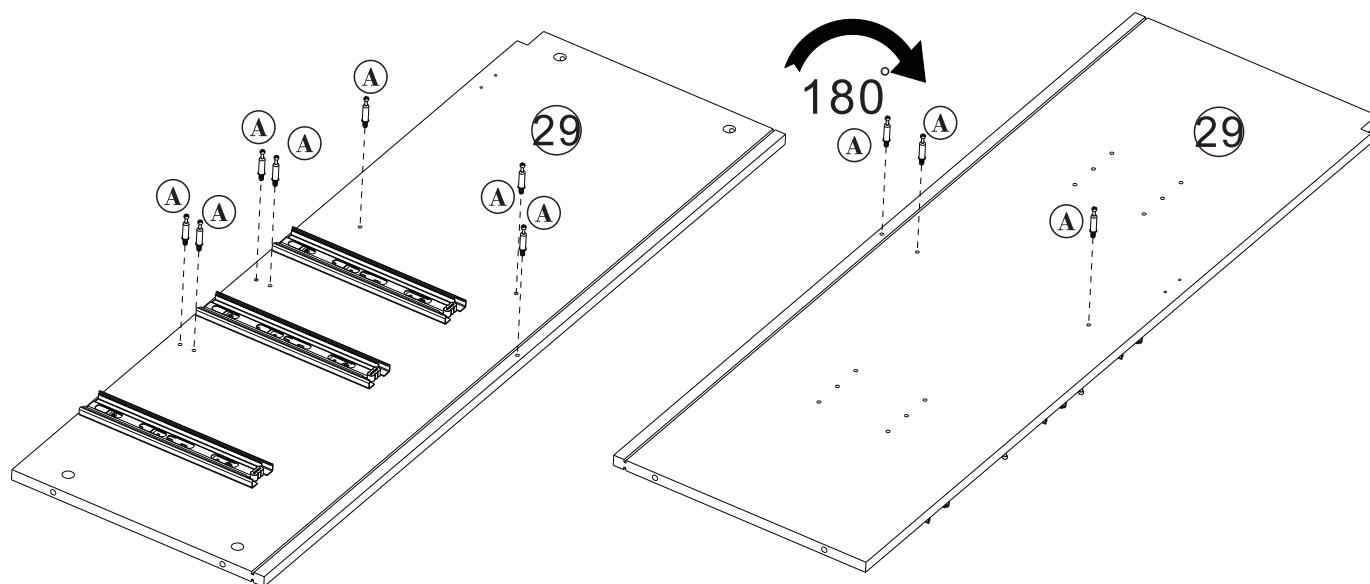

A x10



Step 16

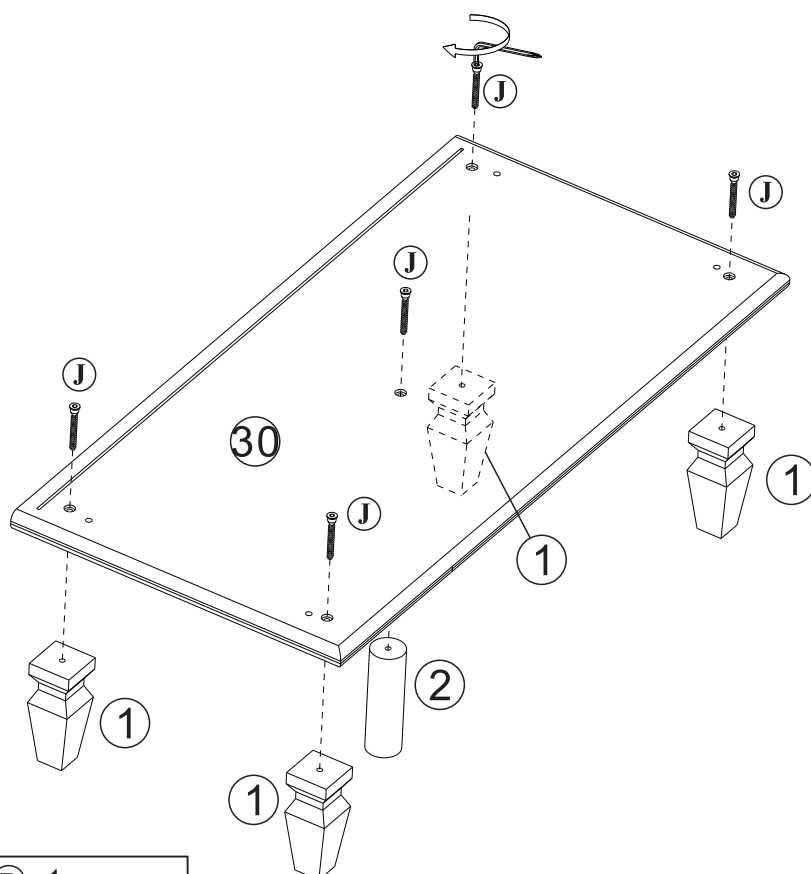


J x5



M7x50


P x1



M4

Assembly Instructions


Step 17

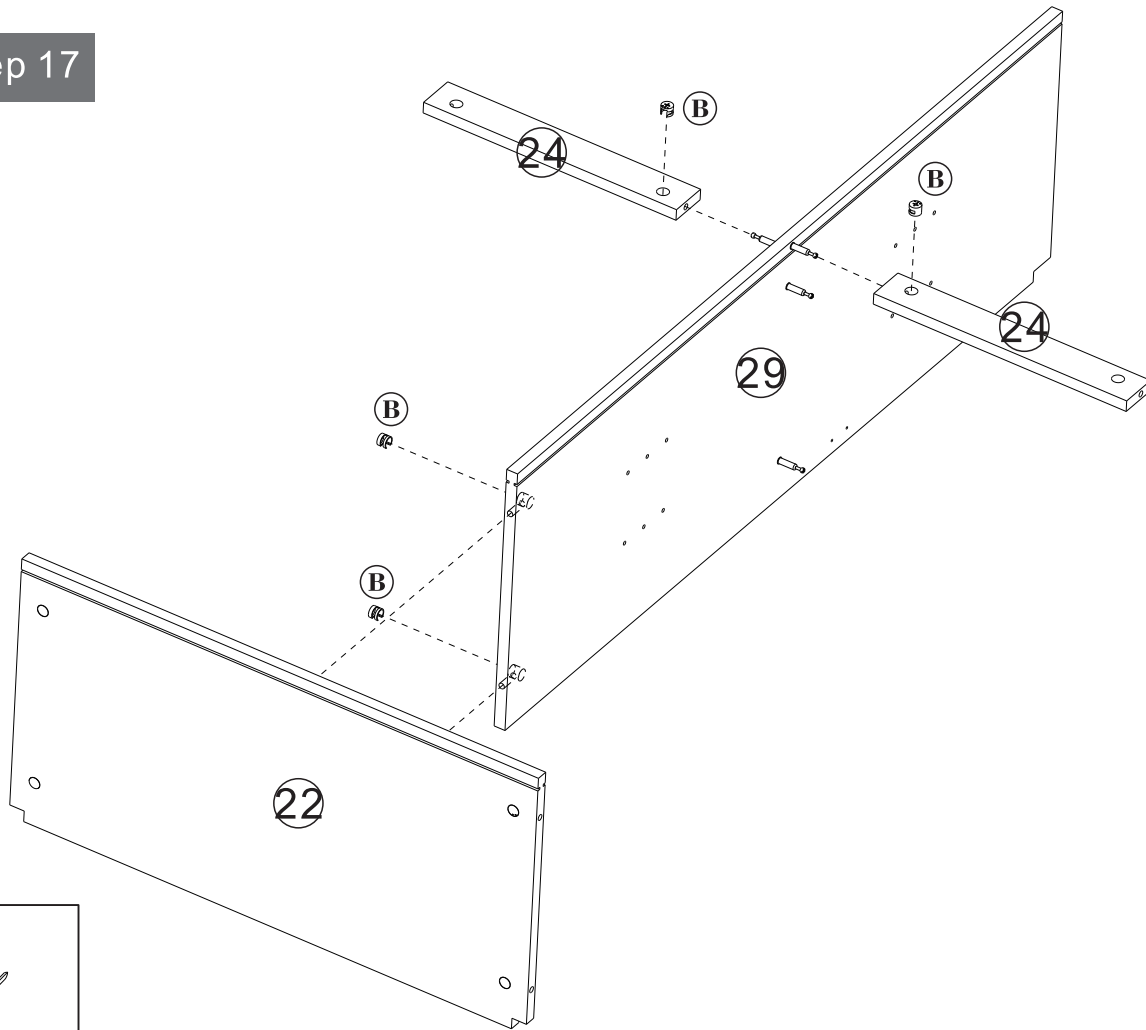

(B) x4



Step 18


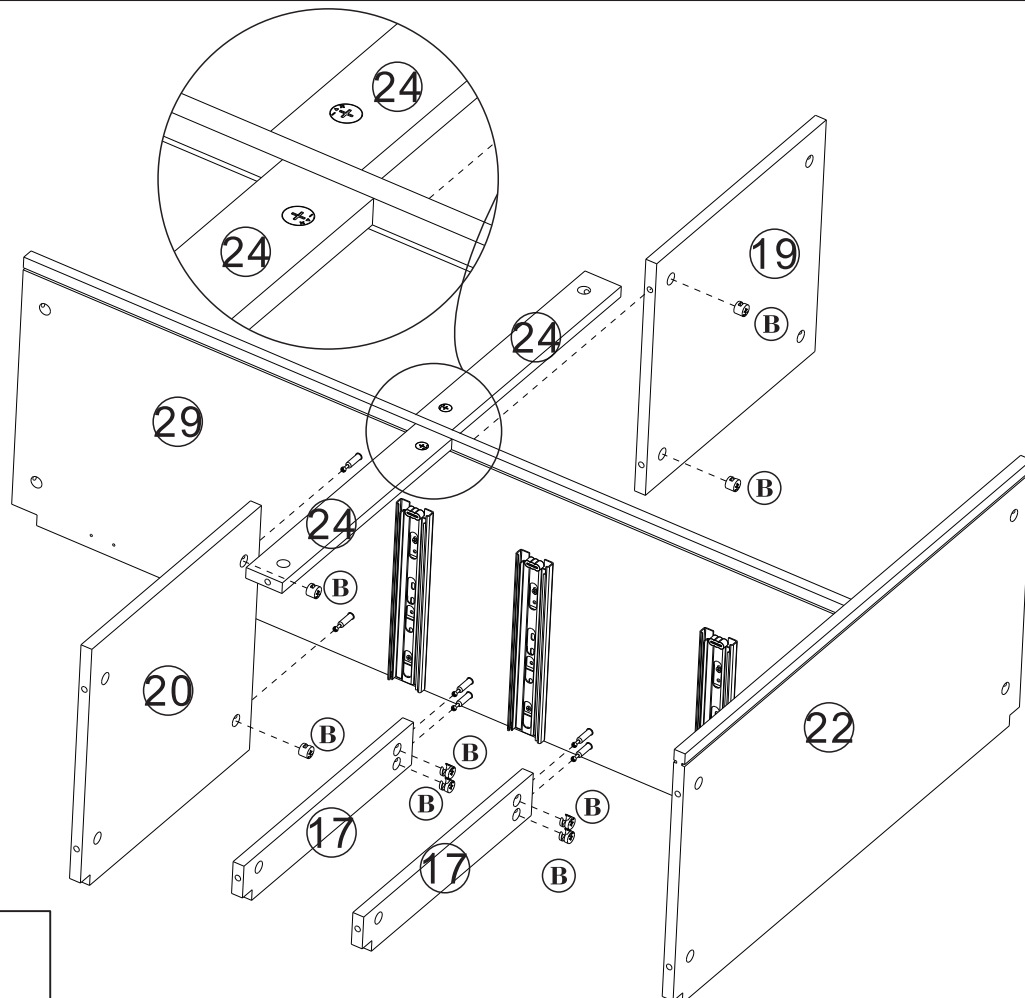


(B) x8



Assembly Instructions

Step 19

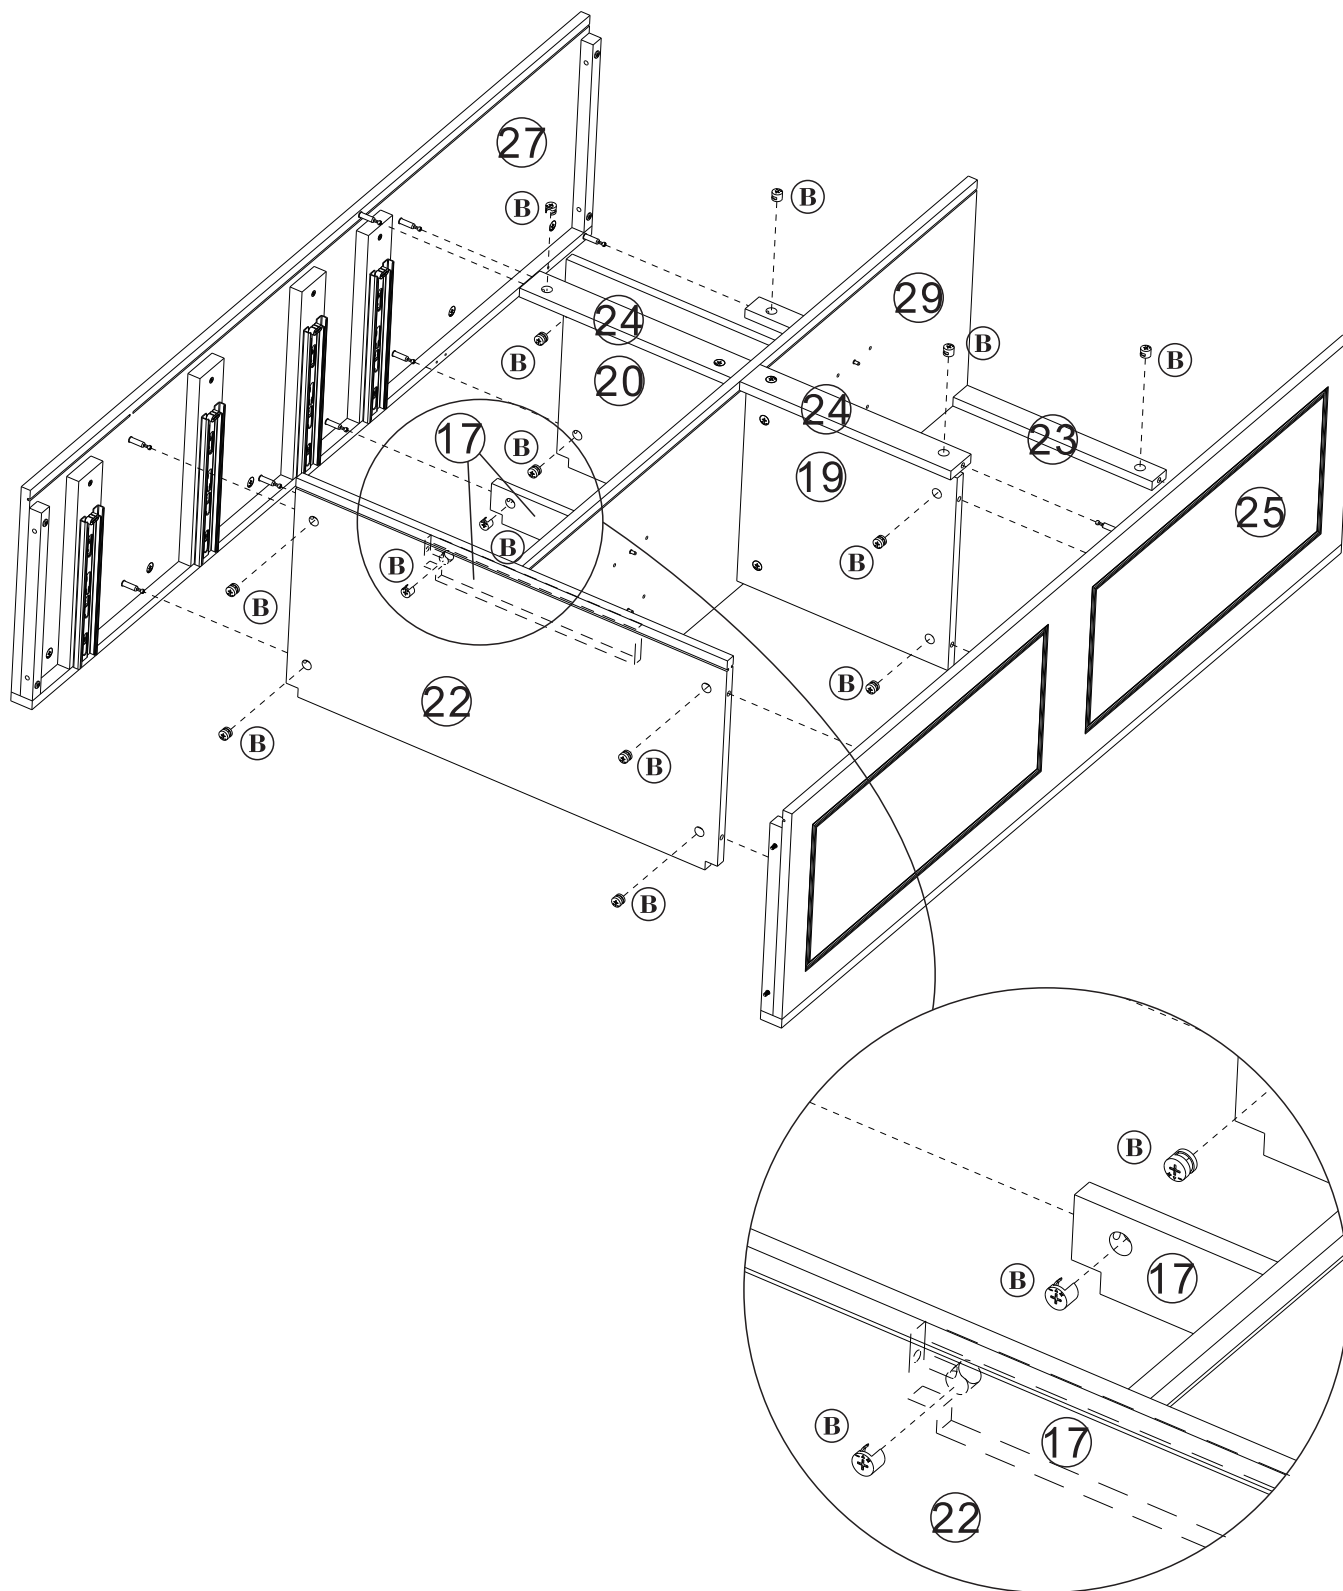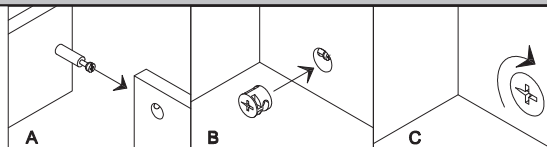


(B) x14



Assembly Instructions

Step 20

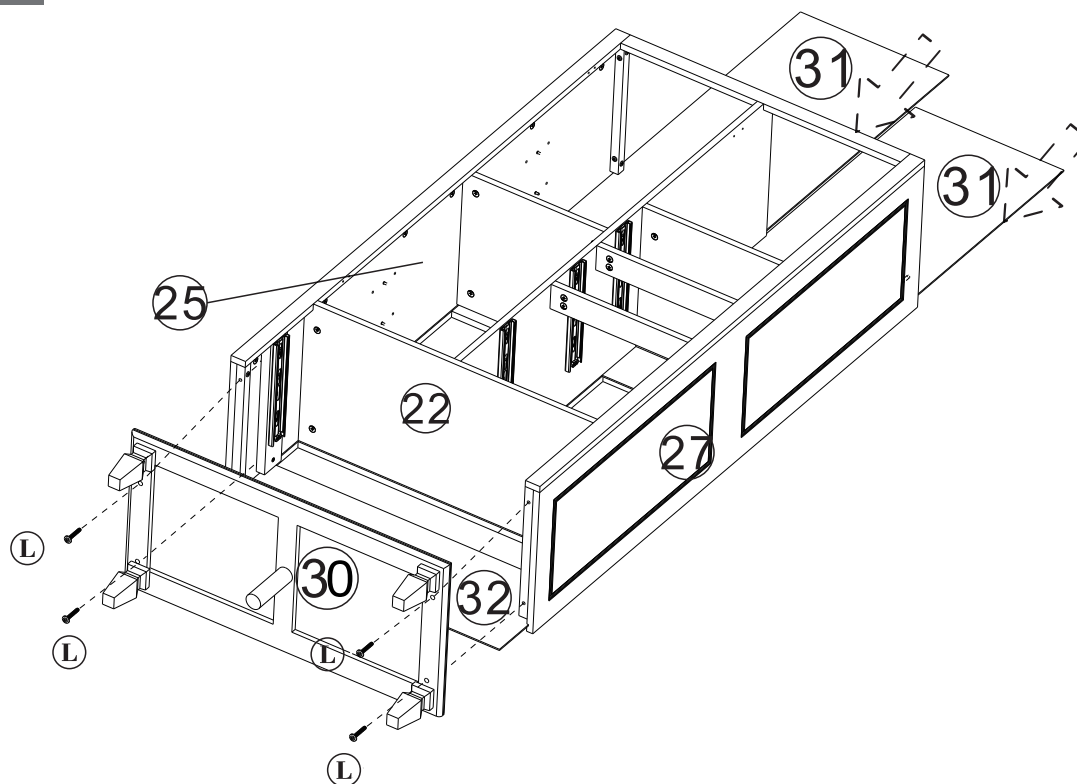


L x4




M6x40

P x1



M4

Step 21

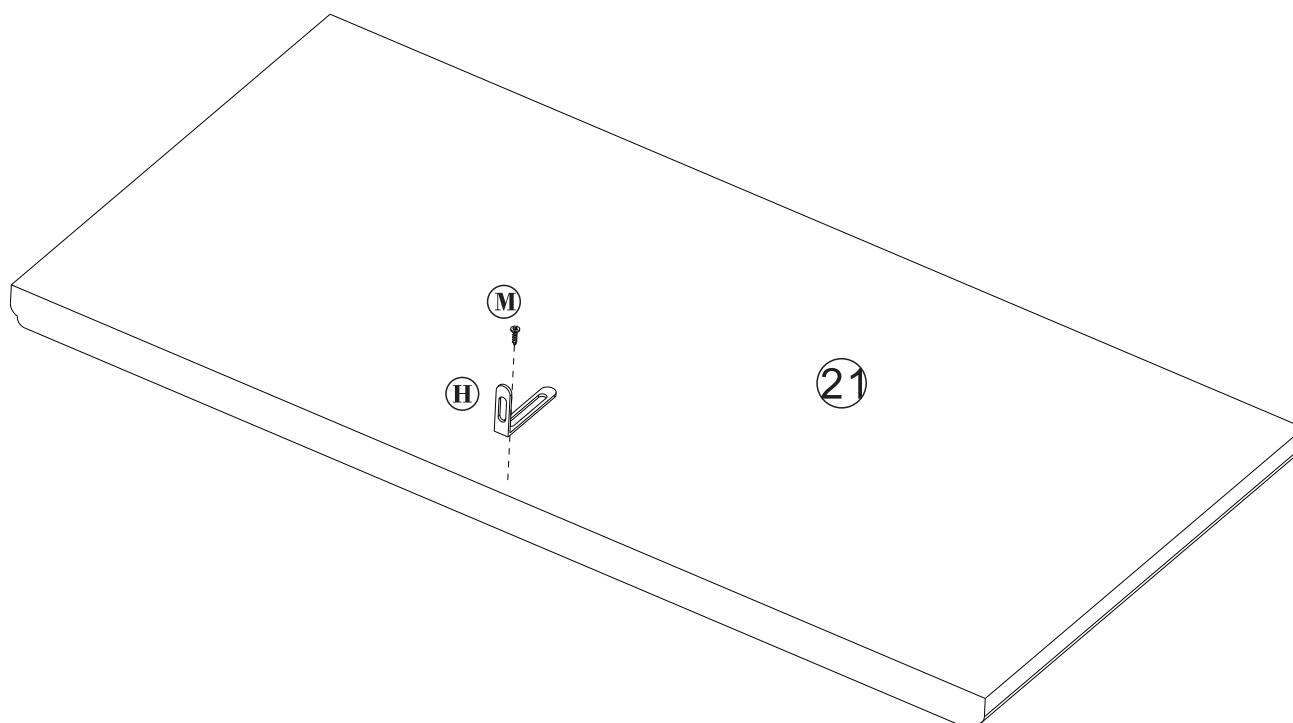

H x1




M x1




M4x30

Assembly Instructions

Step 22


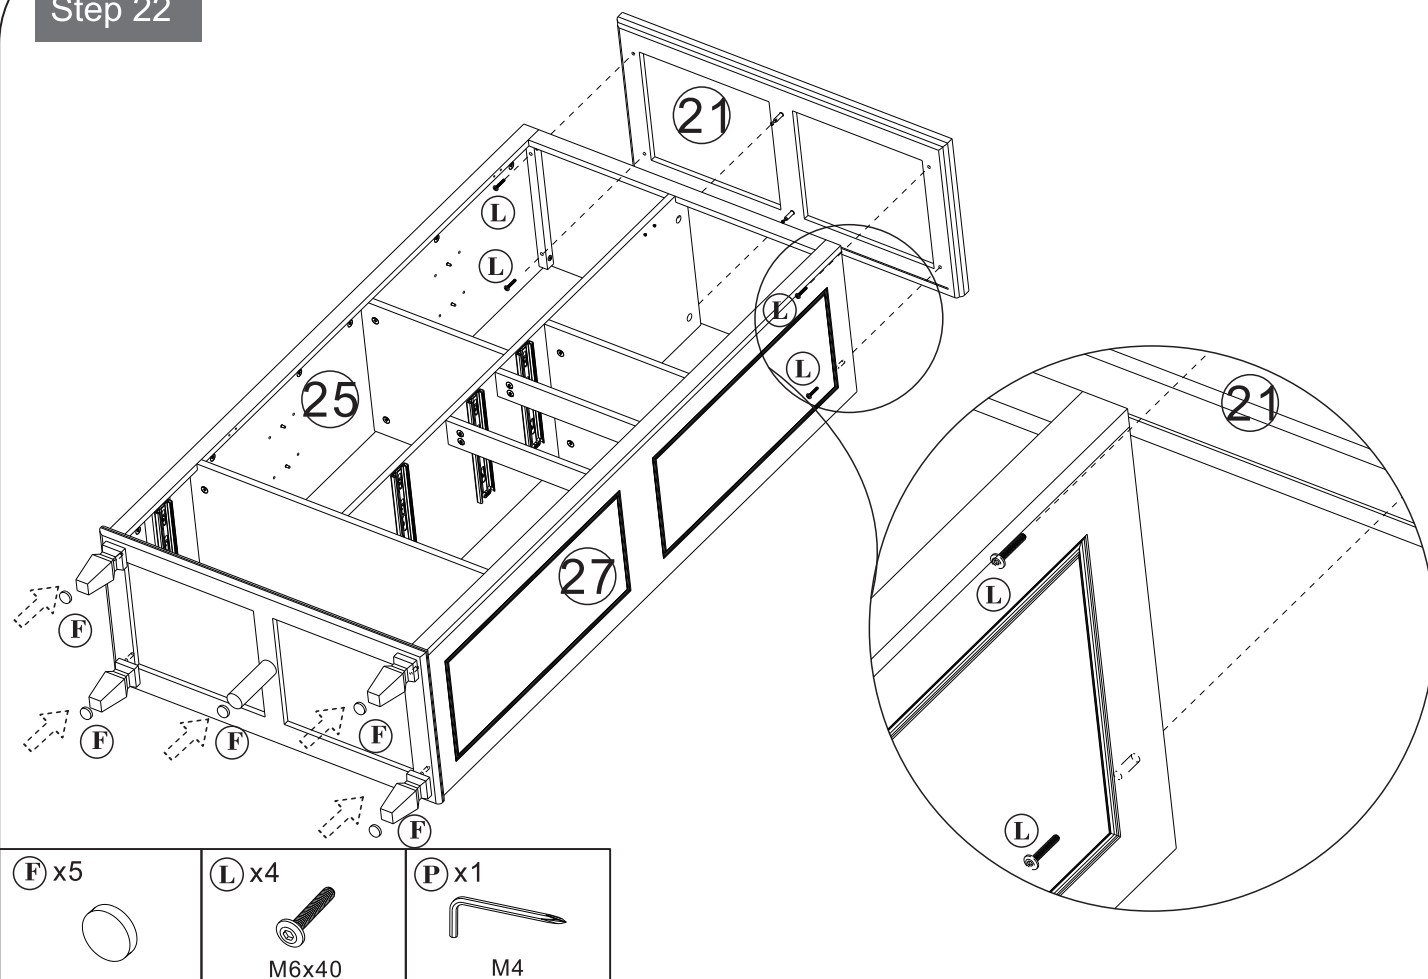


Step 23

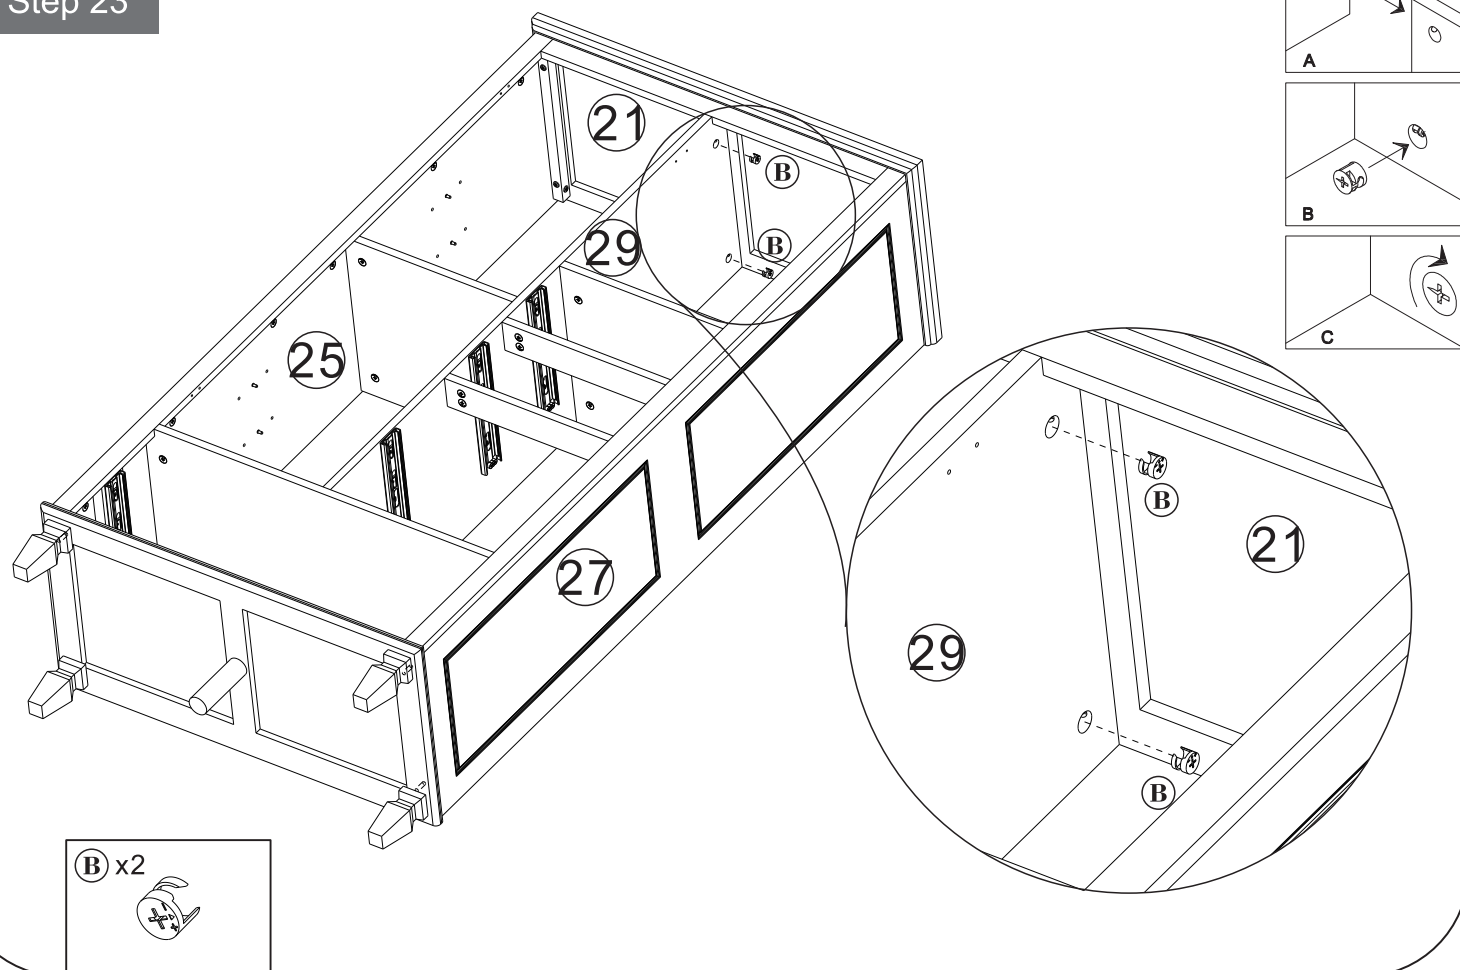


Assembly Instructions

Step 24


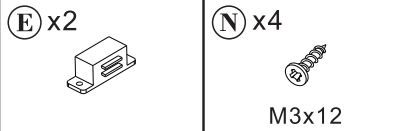
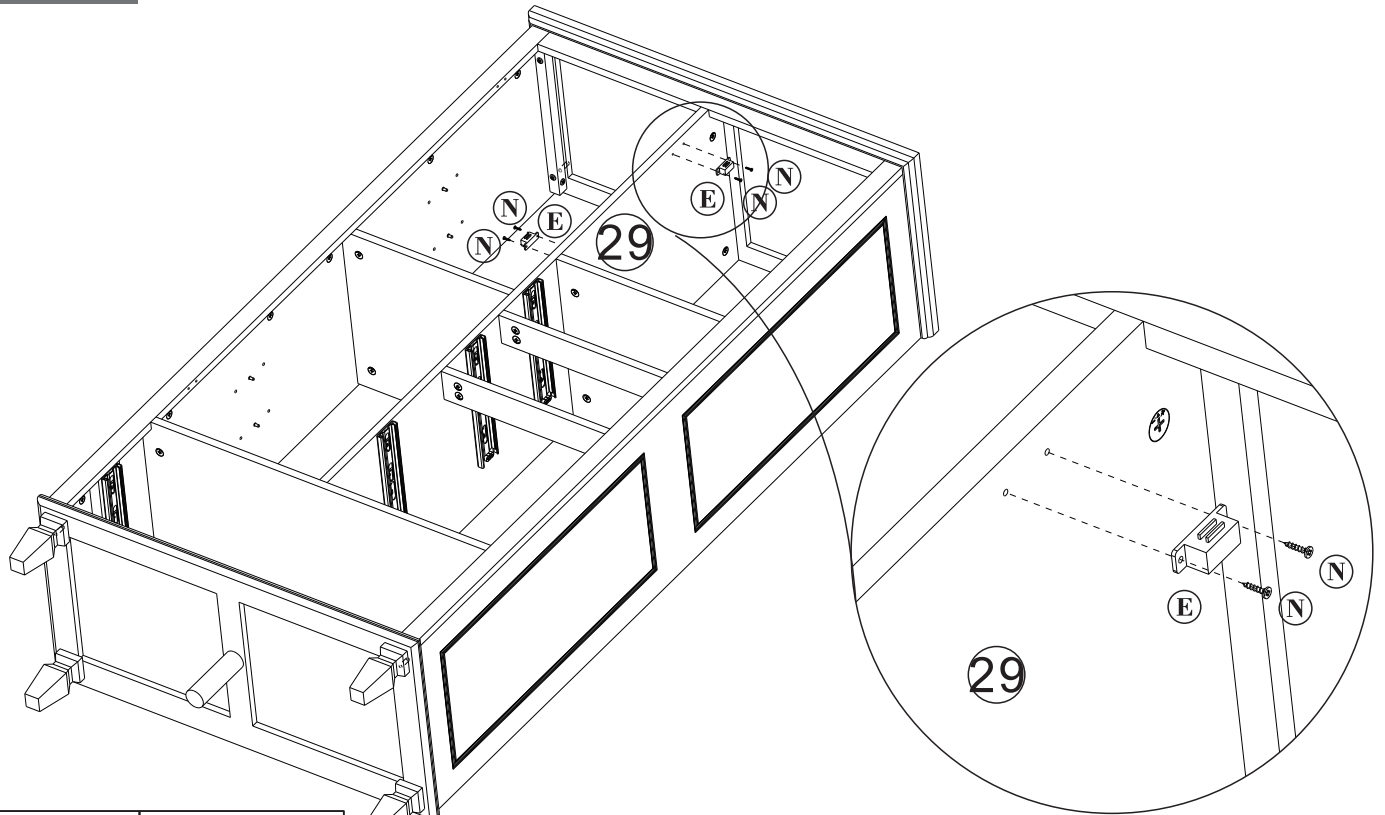


Step 25

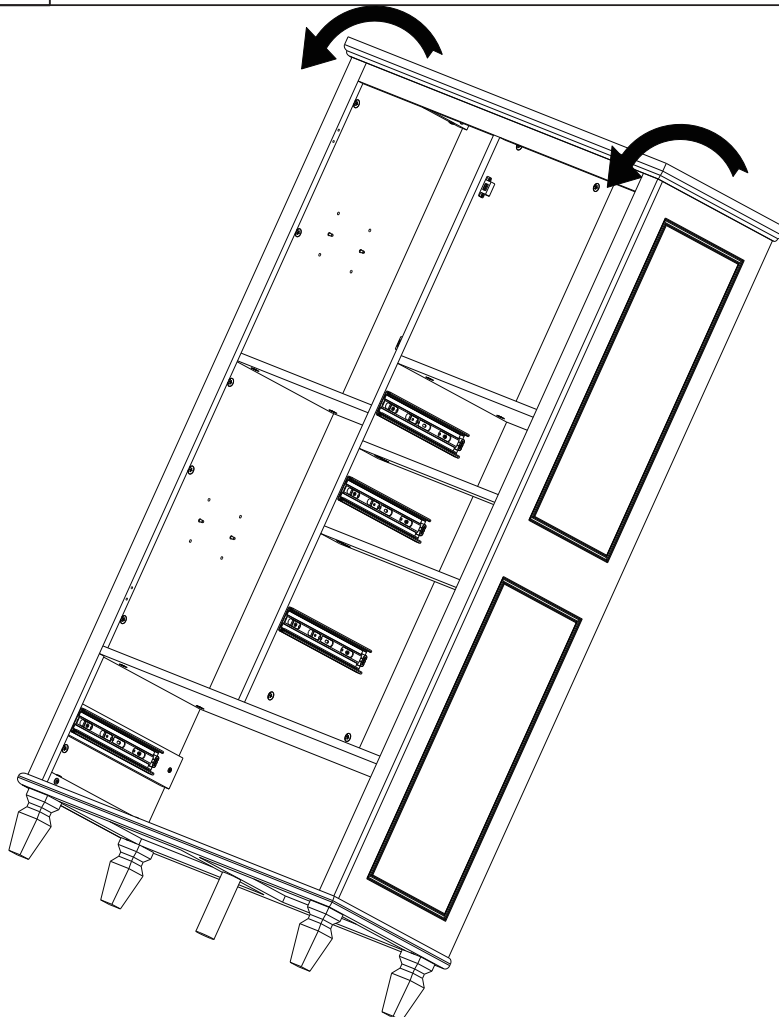


Assembly Instructions


Step 26

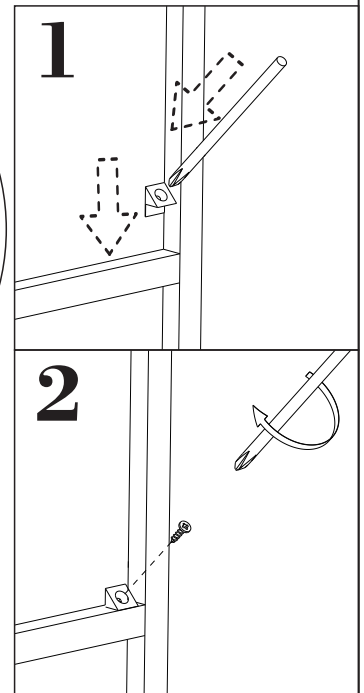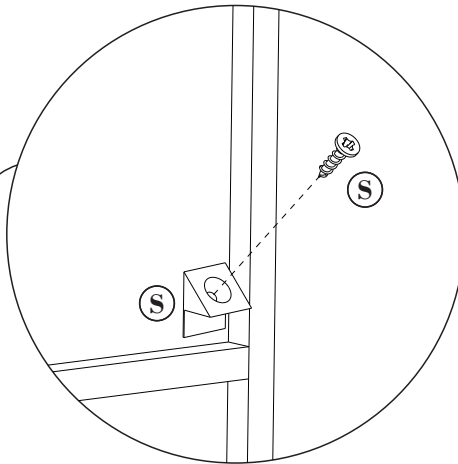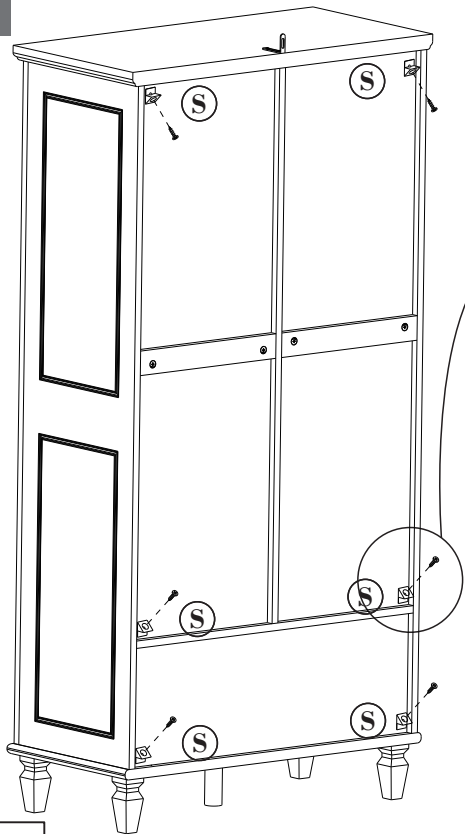

(S) x6



Step 27

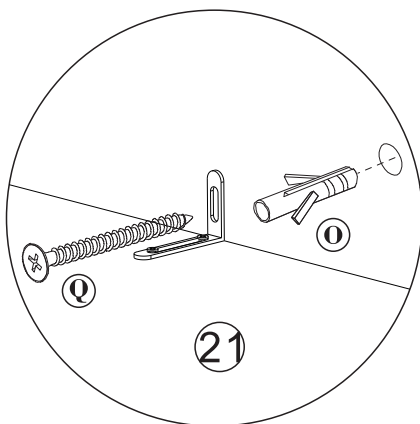

(O) x1




(Q) x1




M4x45

Assembly Instructions

Step 28

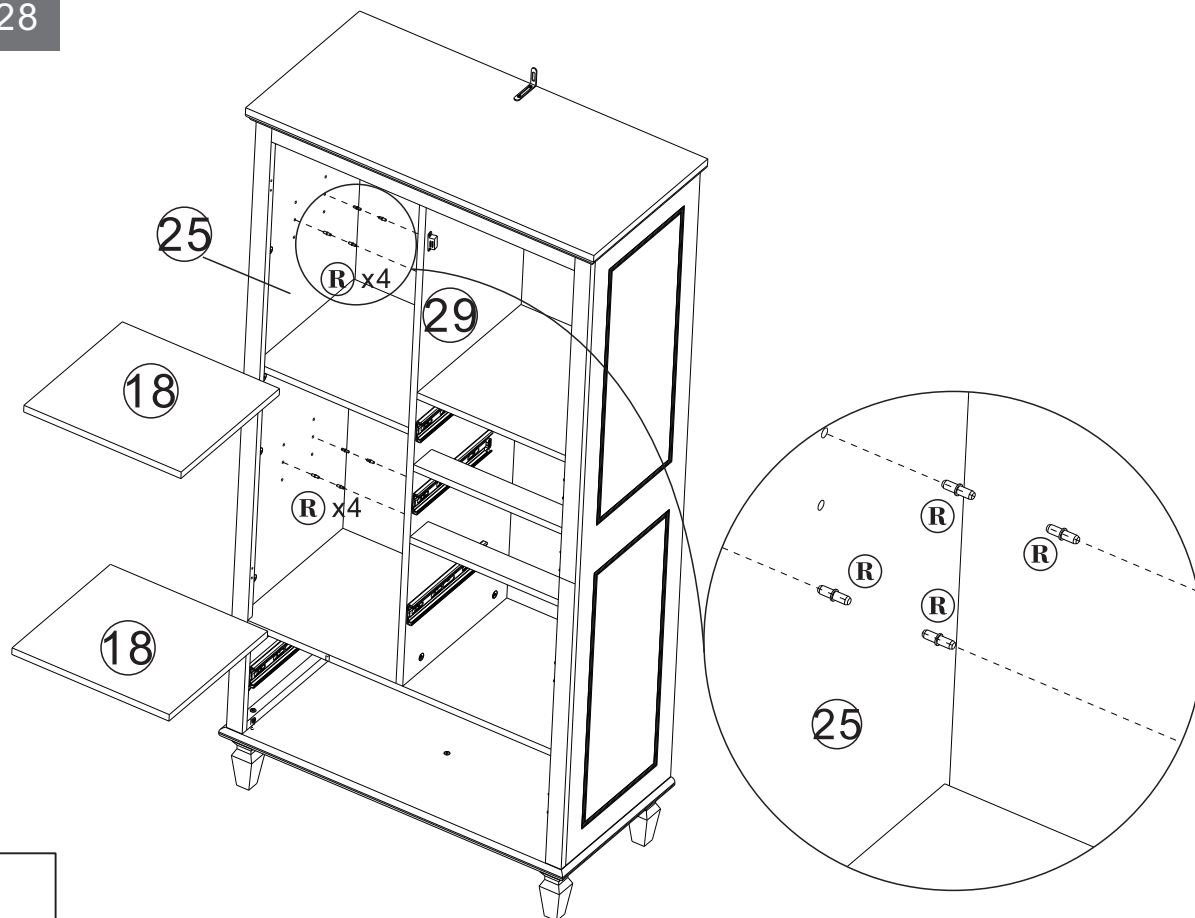


Step 29

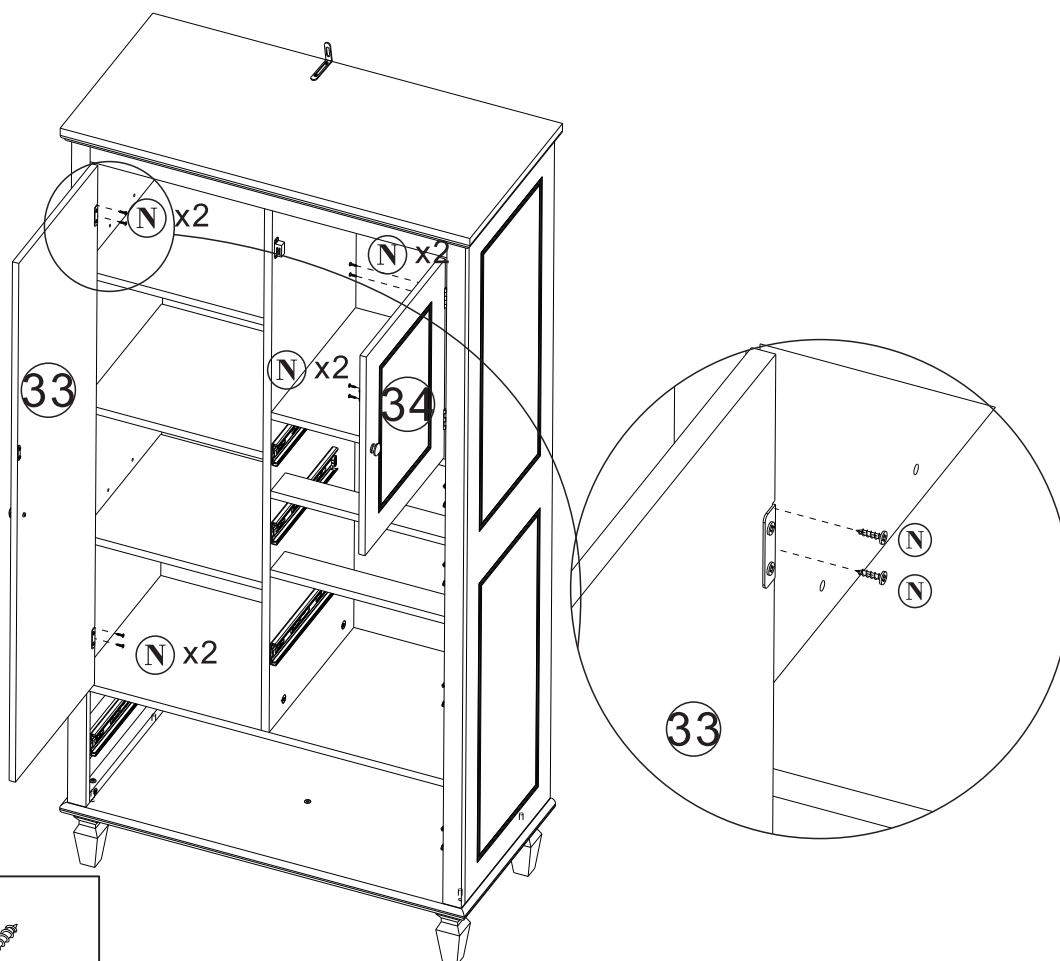

Assembly Instructions

Step 30

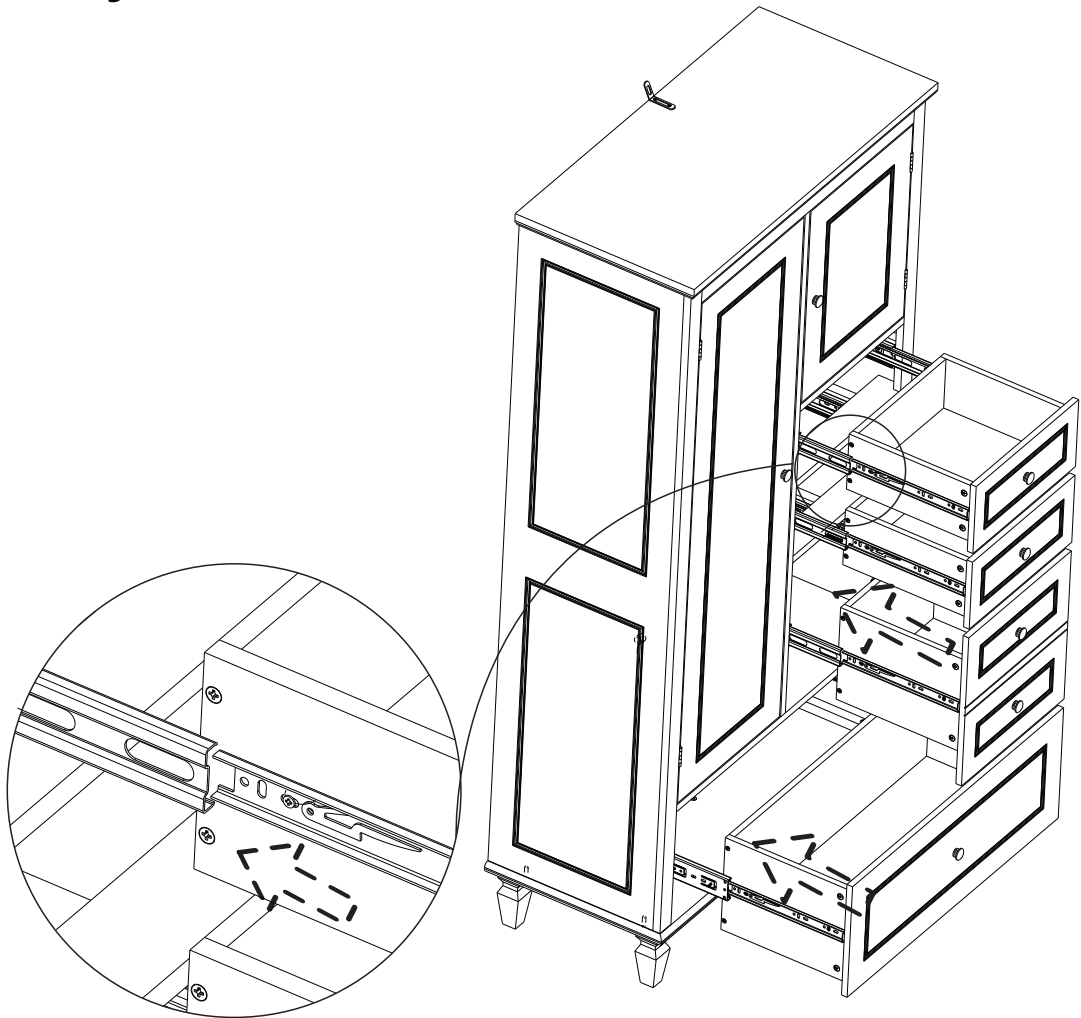

Step 31

