
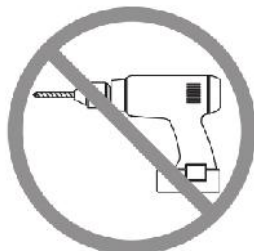


ASSEMBLY INSTRUCTIONS

HOPPER STUDIO


PRODUCT NAME : Sophia 2 Door Cabinet
DIMENSIONS : 34"L x 15"W x 34"H
ITEM NO. : 7185AB581BCV63
 7185AW581BCV63
 7185GY581BCV63
 7185LB581BCV63
 7185MC581BCV63
 7185TT581AUV63

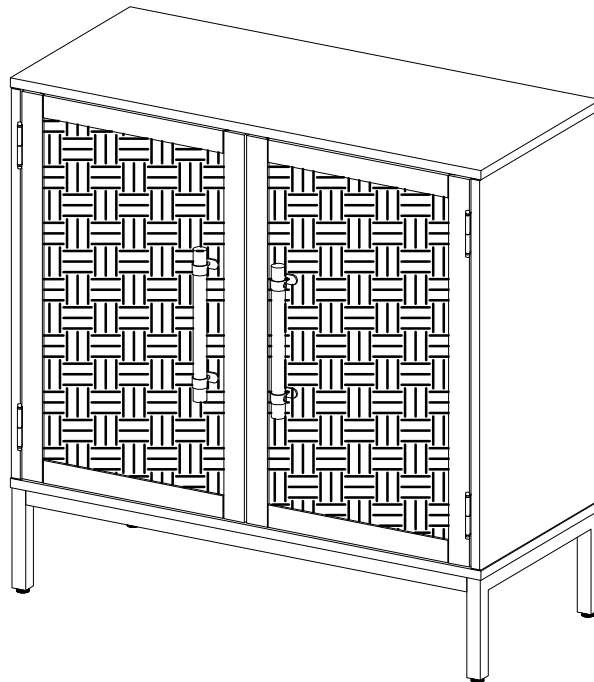


1. Check for damaged or missing parts . Call 1-800-696-8446 to order missing supplies.
2. Use a soft surface or the carton as a working surface to prevent damage during assembly.
3. It is recommended to have 2 adults on hand for assembly.
4. Gather all tools prior to assembly.
5. **WARNING!** When included, anti-tipping hardware **MUST** be installed for your safety.

how to use cam lock system


1.

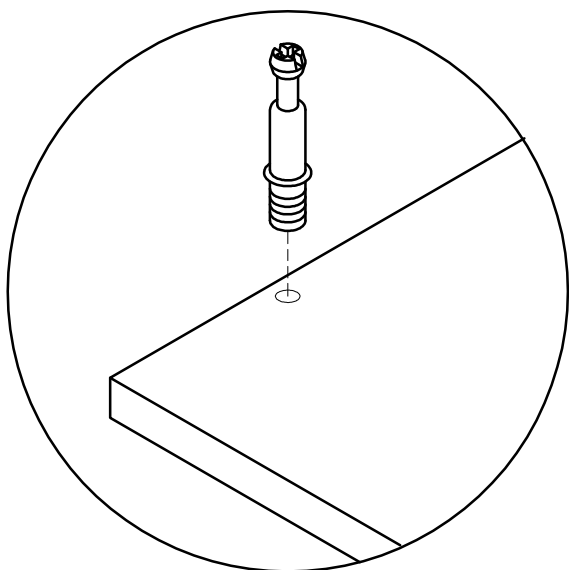


2.

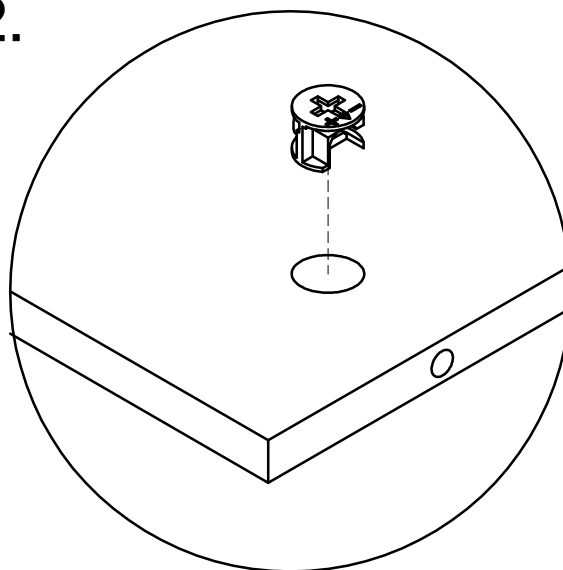


3.

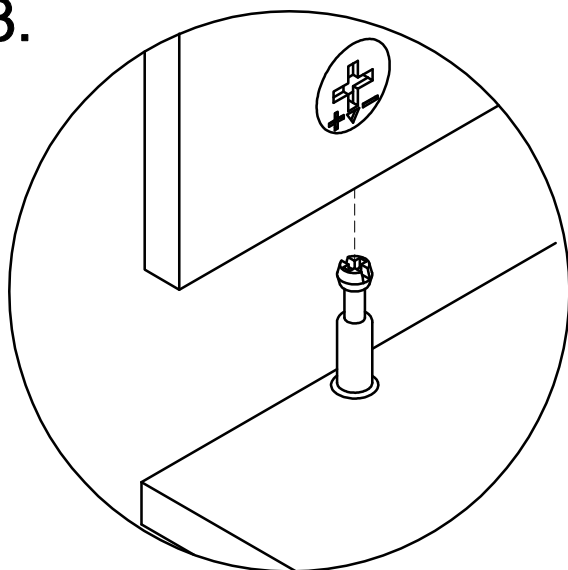












4.

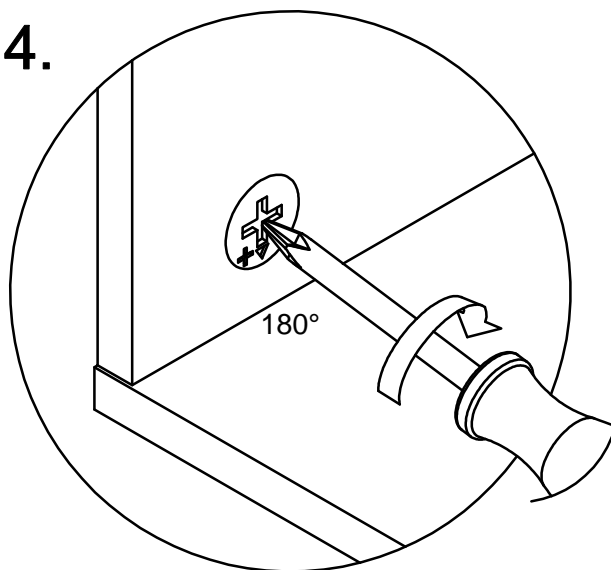


5.

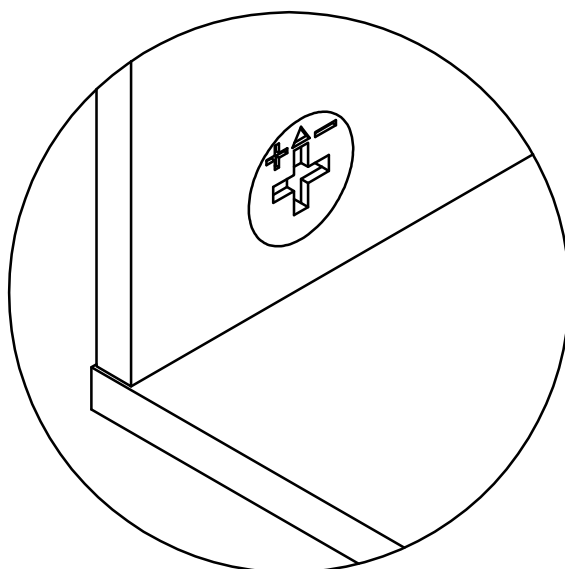


PARTS LIST:			QTY
A	Top Panel		1pc
B	Left Side Panel		1pc
C	Right Side Panel		1pc
D	Back Rail		2pcs
E	Bottom Panel		1pc
F	Side Leg		2pcs
G	Back Panel		1pc
H	Shelf Panel		1pc
I	Left Door		1pc
J	Right Door		1pc
K	Handle		2pcs

HARDWARE :			QTY
L	Wooden Dowel Ø8x40mm		16pcs
M	Cam Lock Bolt		16pcs
N	Cam Lock		16pcs
O	Flat Washer Ø5/16"		8pcs
P	Lock Washer Ø5/16"		8pcs
Q	Hexagonal Nut Ø5/16"		8pcs
R	Wrench for Nut		1pc
S	Door Catcher		4set
T	Umbrella Screw Ø5/32" x 5/8"		16pcs
U	Screw with Washer Ø5/32" x 5/8"		18pcs
V	Umbrella Machine Screw Ø5/32" x 5/8"		4pcs
W	Shelf Pin		4pcs
X	Tipping Restraint		1set


STEP 1

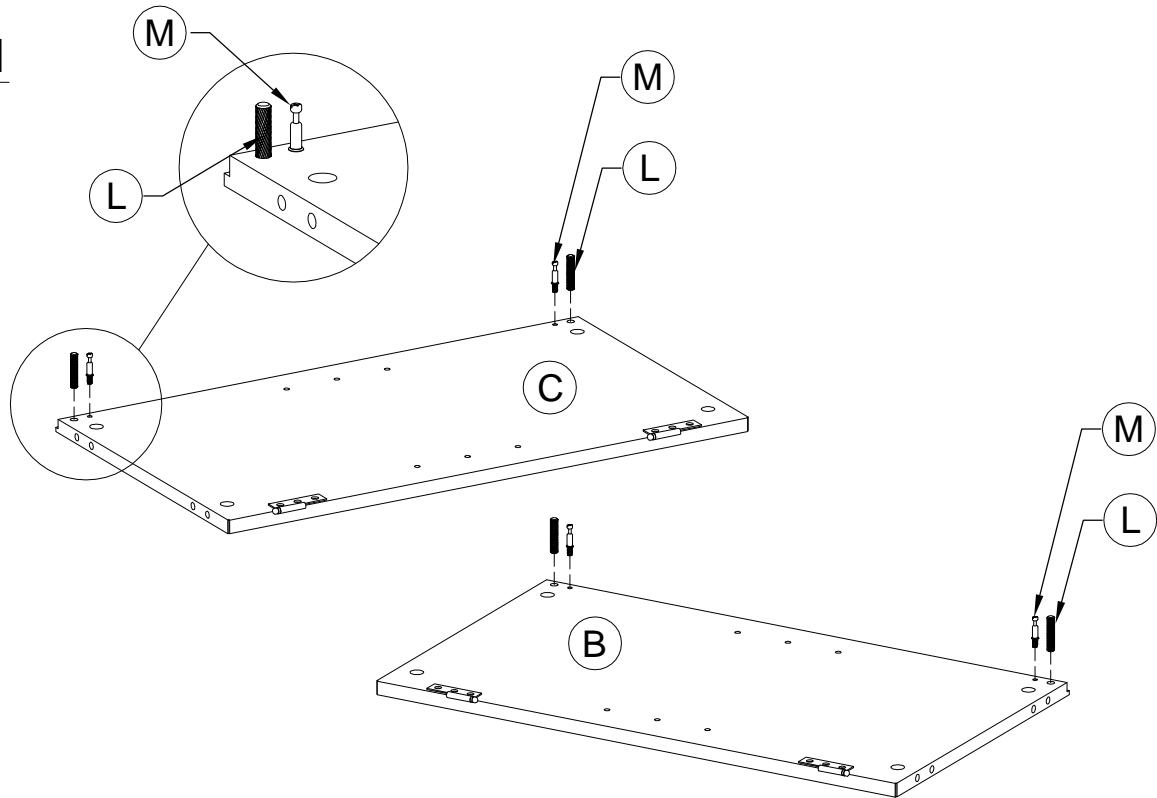


STEP 2

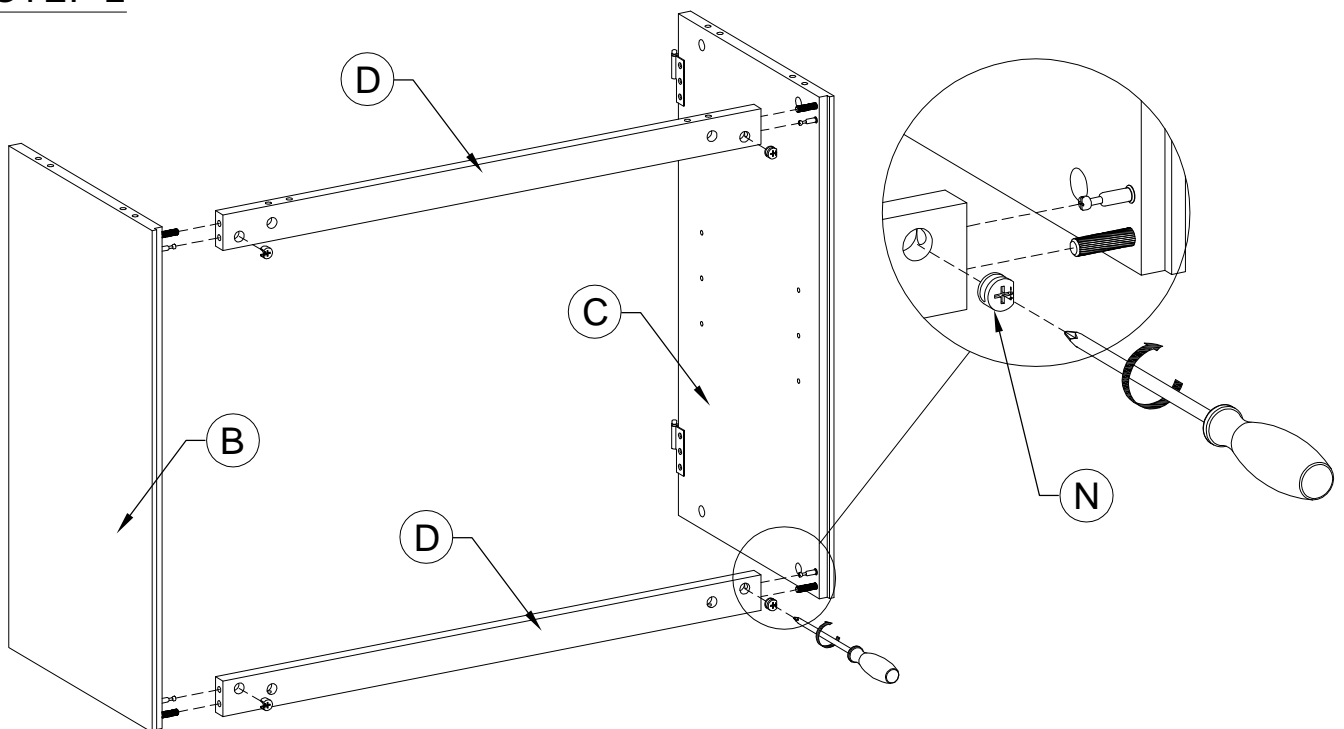



STEP 3

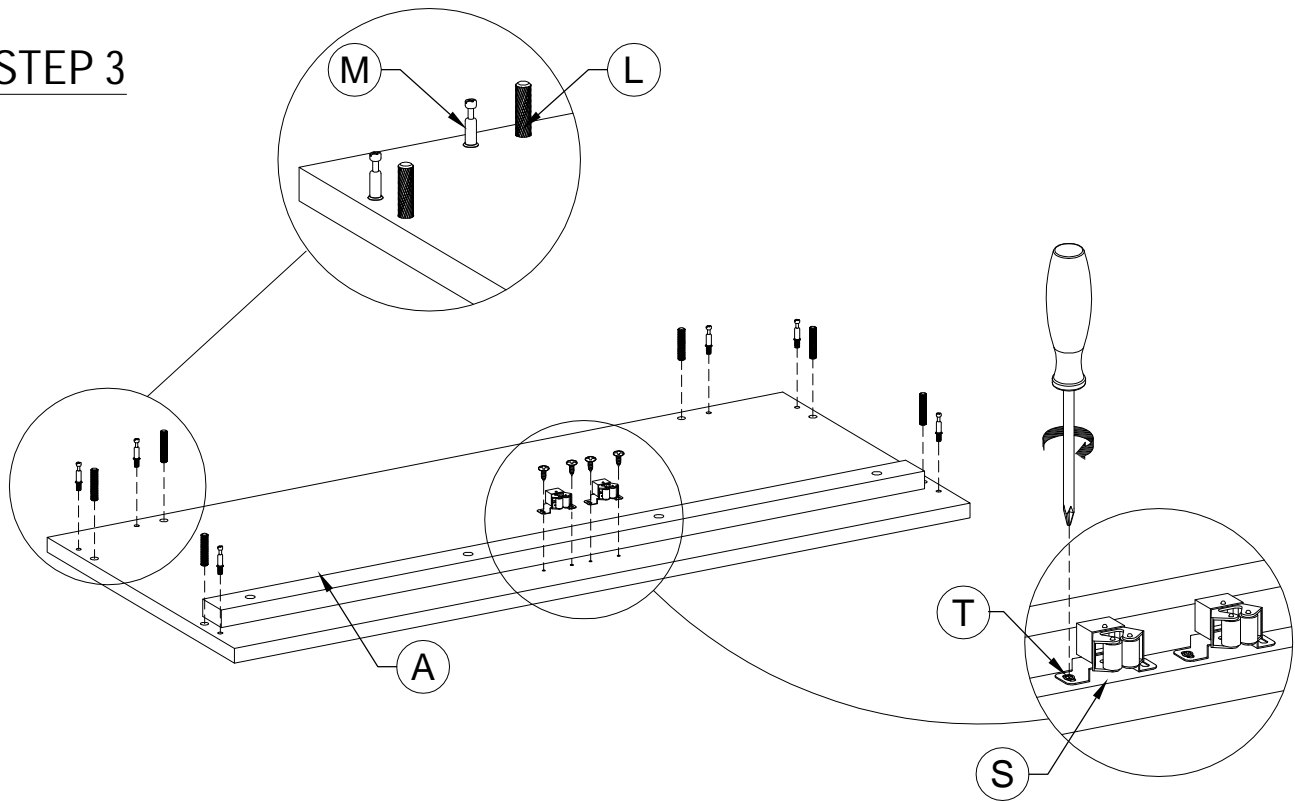


STEP 4

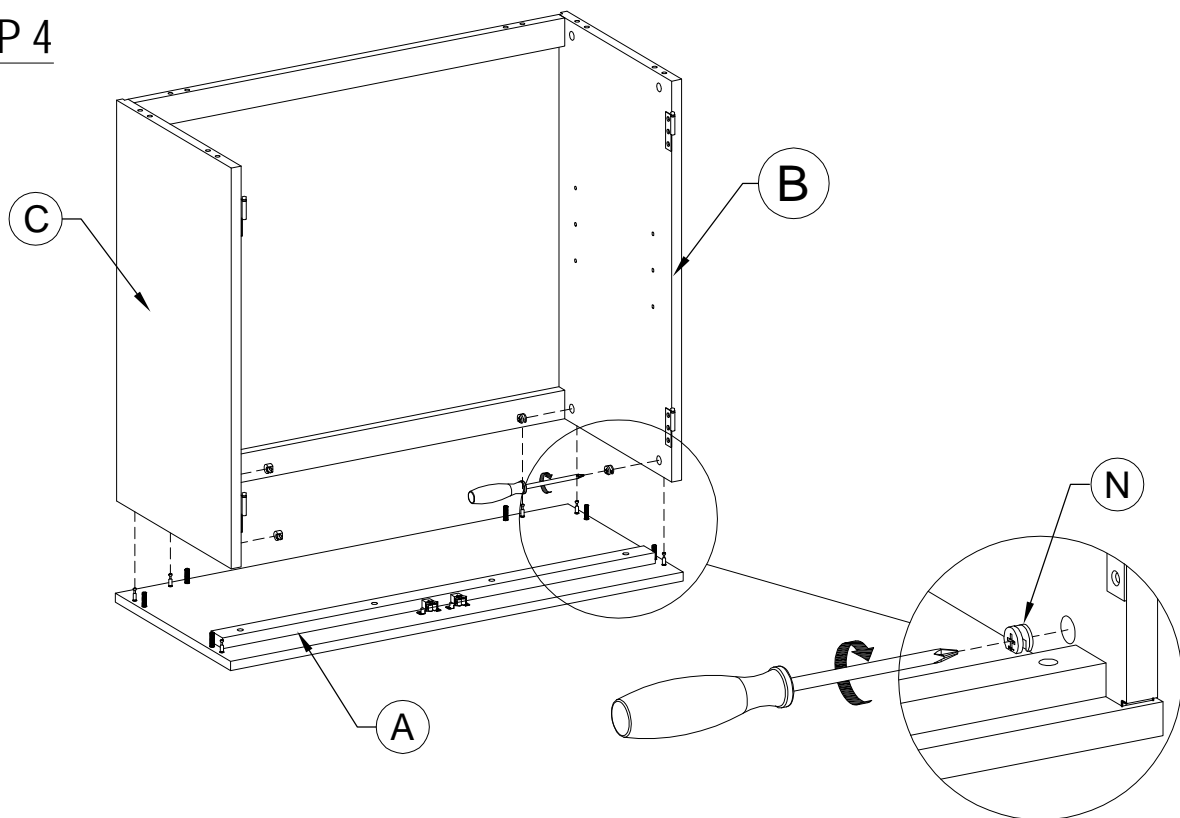


STEP 5

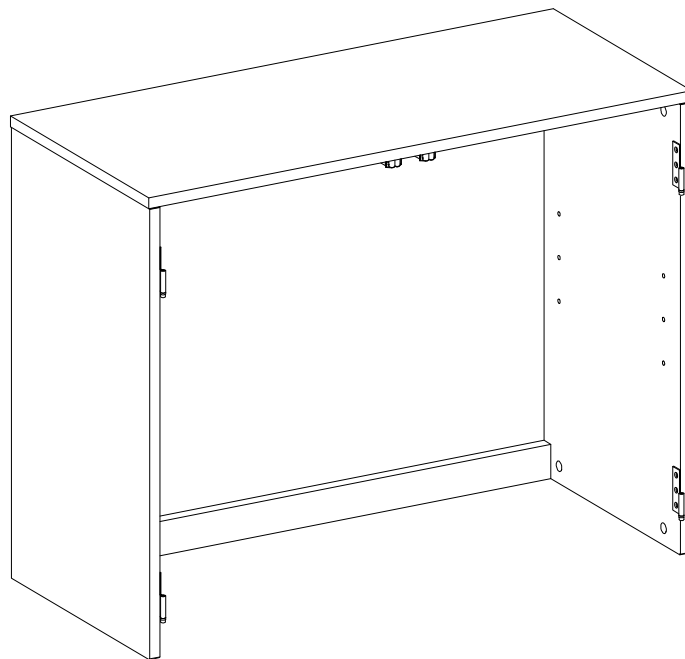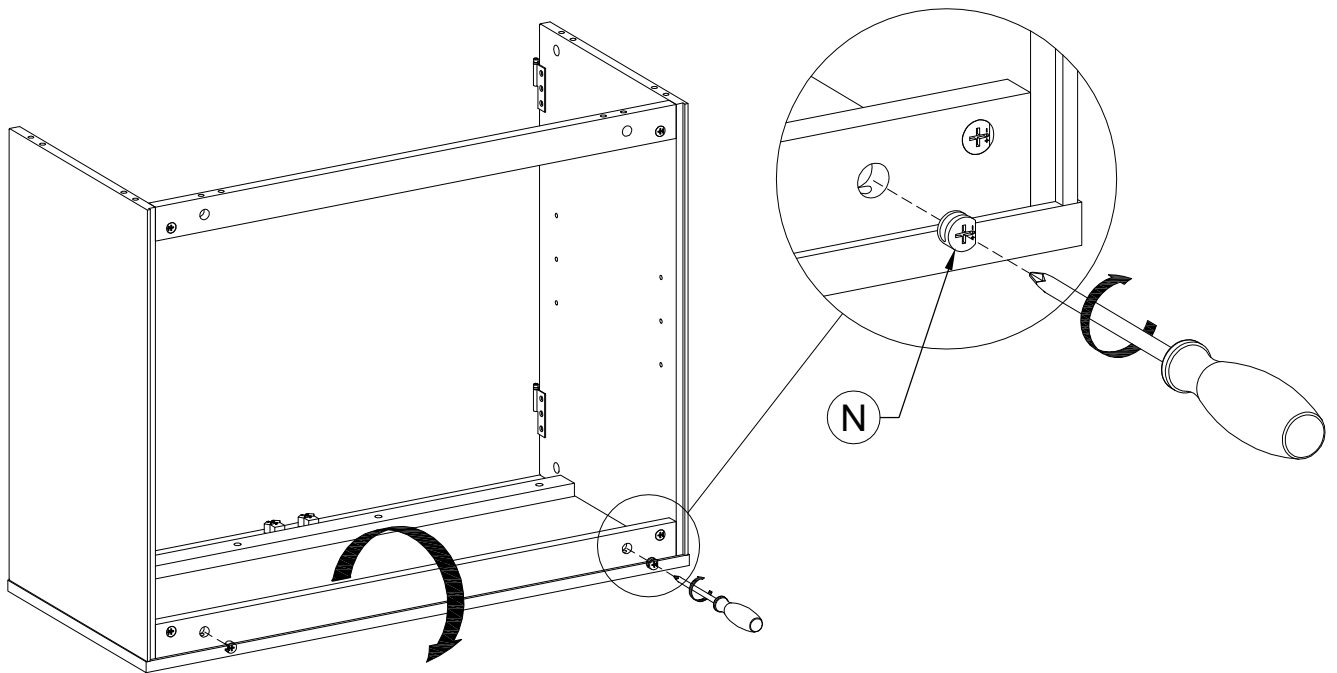


STEP 6

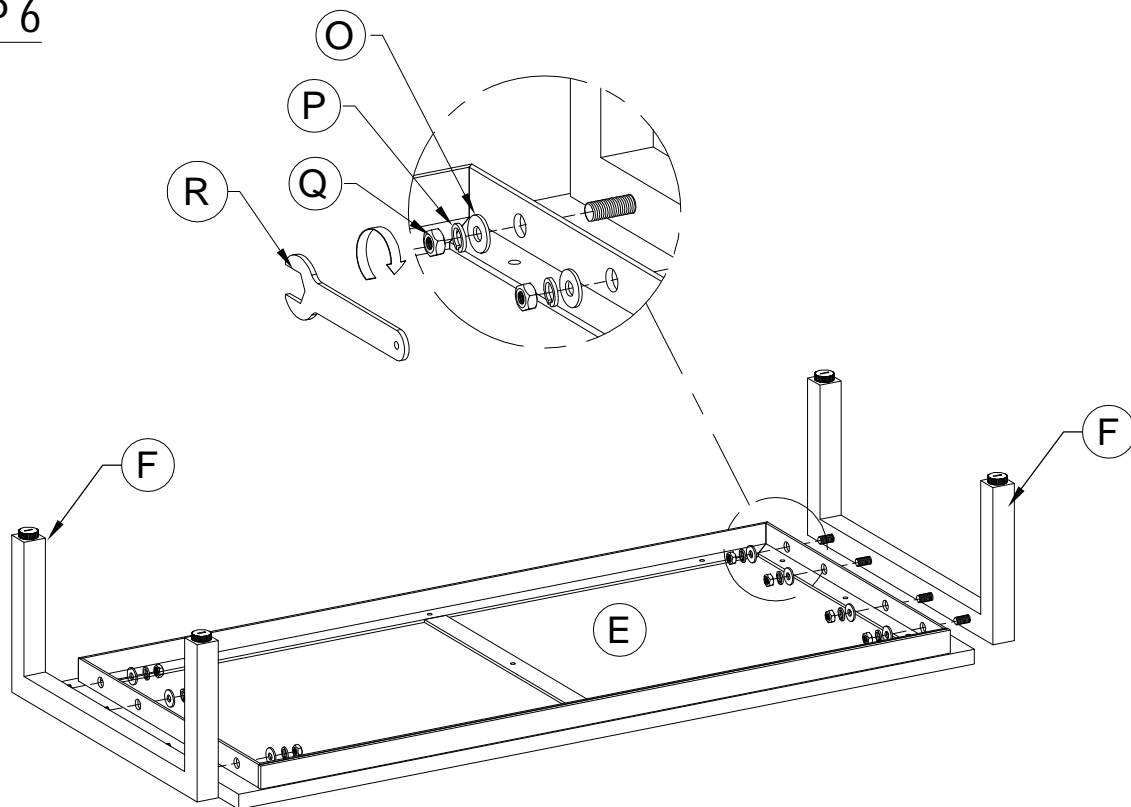


STEP 7

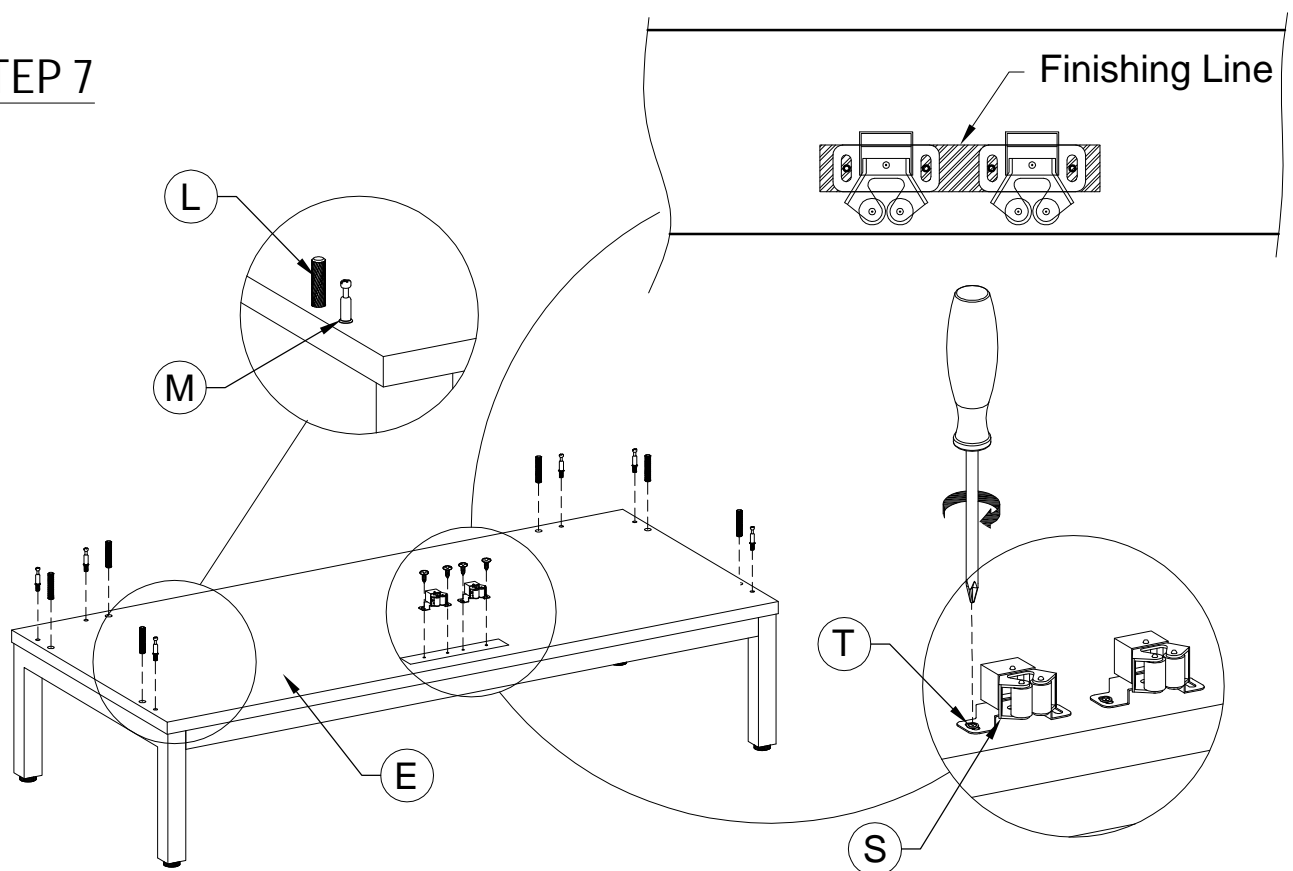


STEP 8

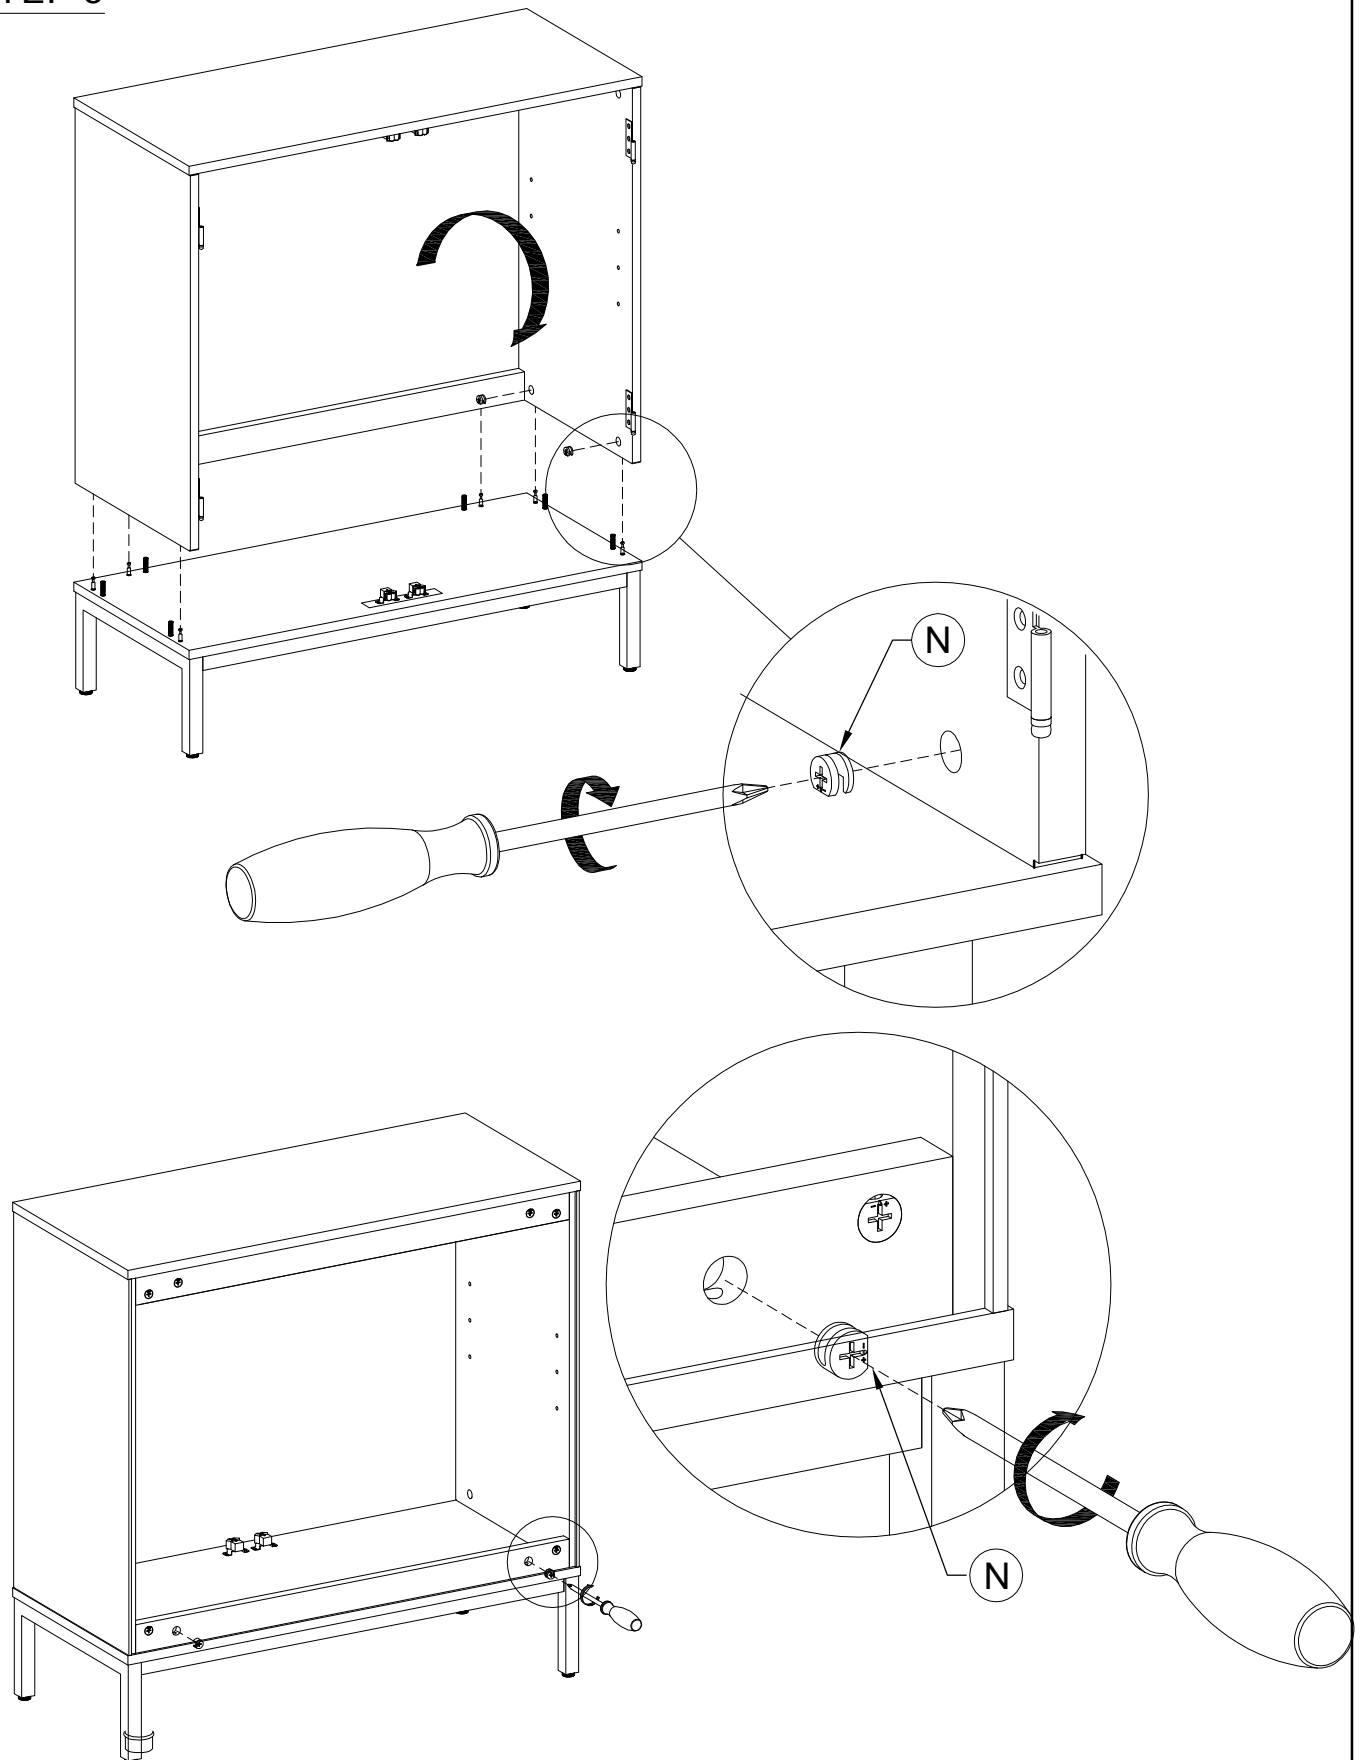


STEP 9

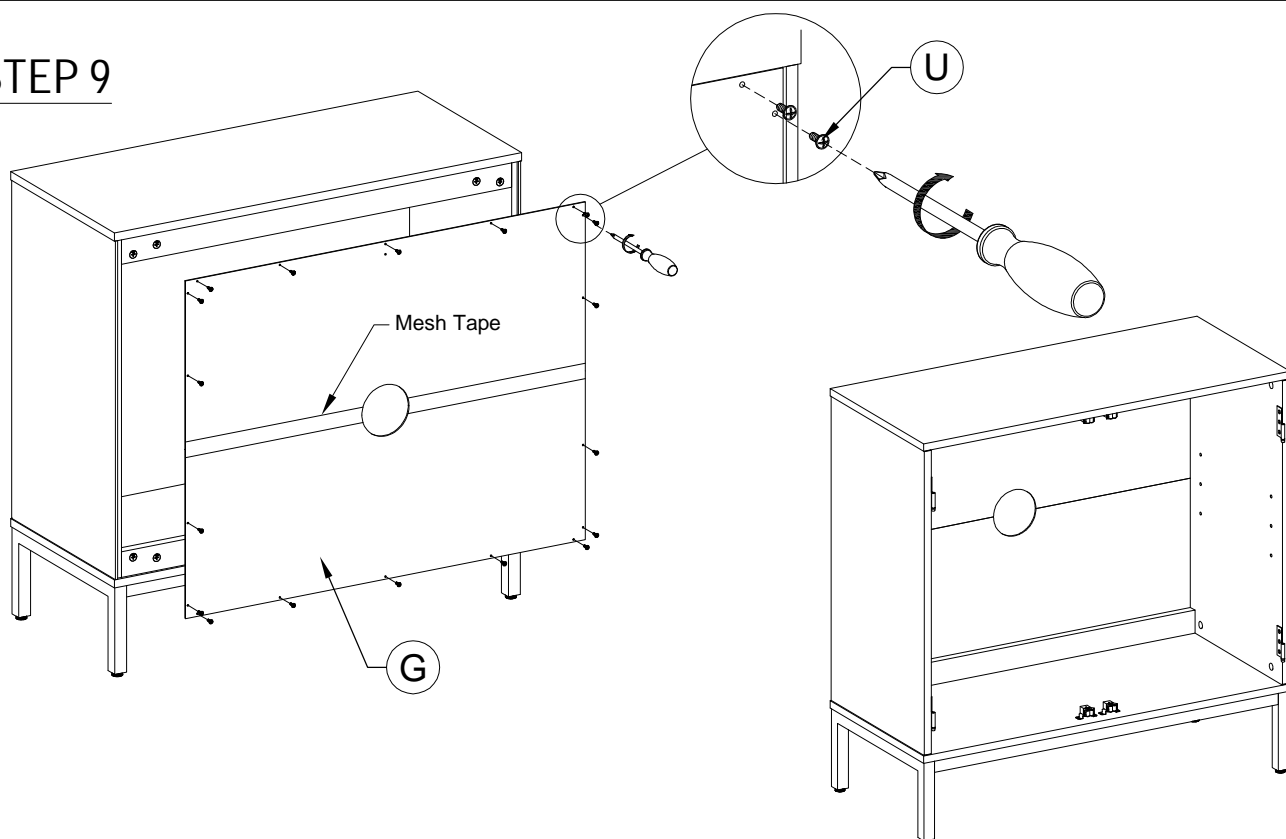


STEP 10

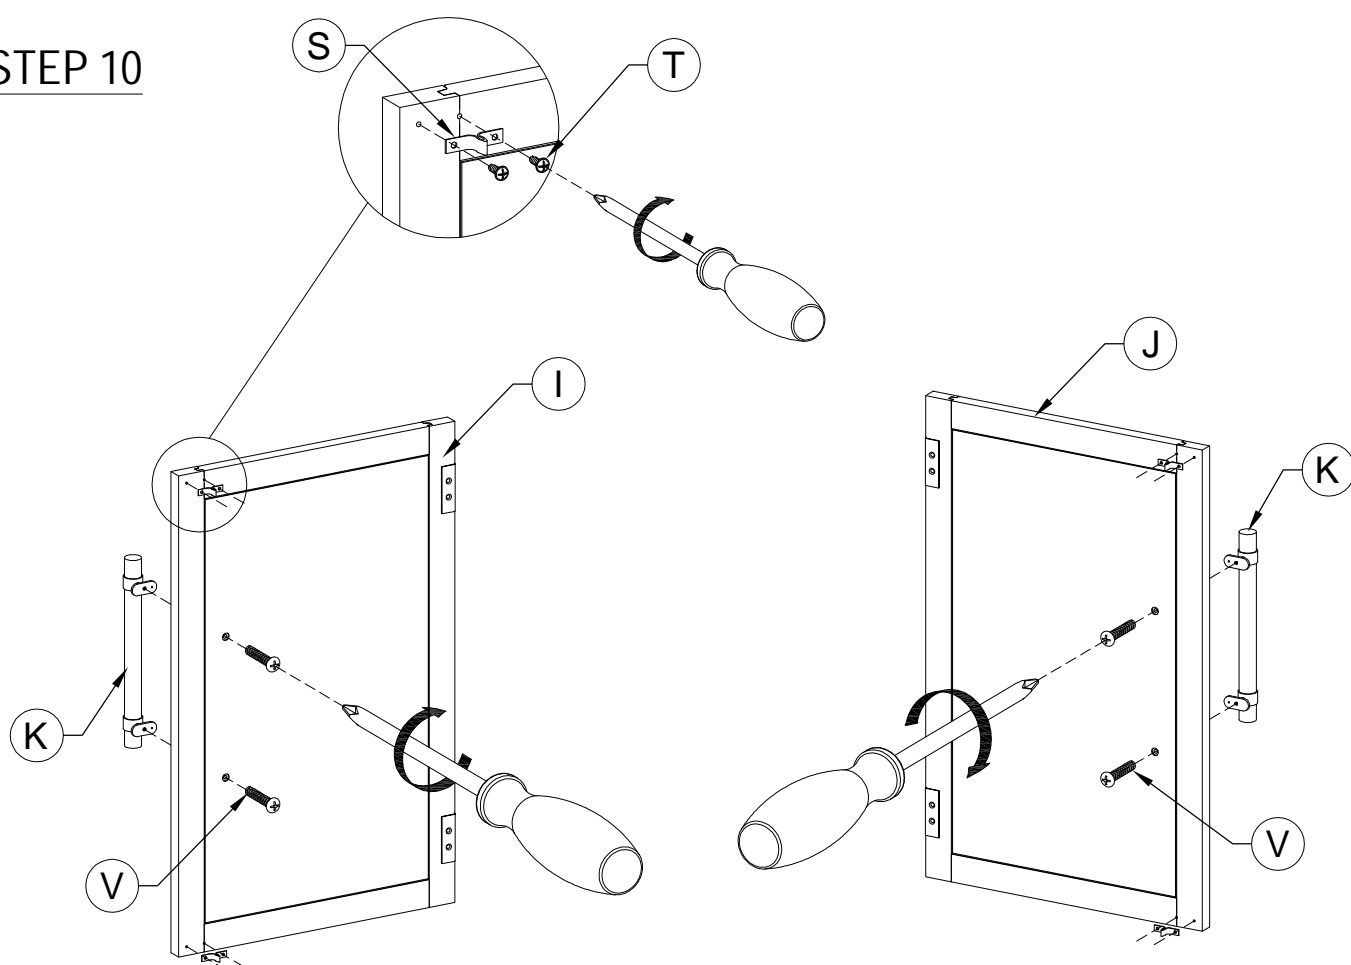


STEP 11

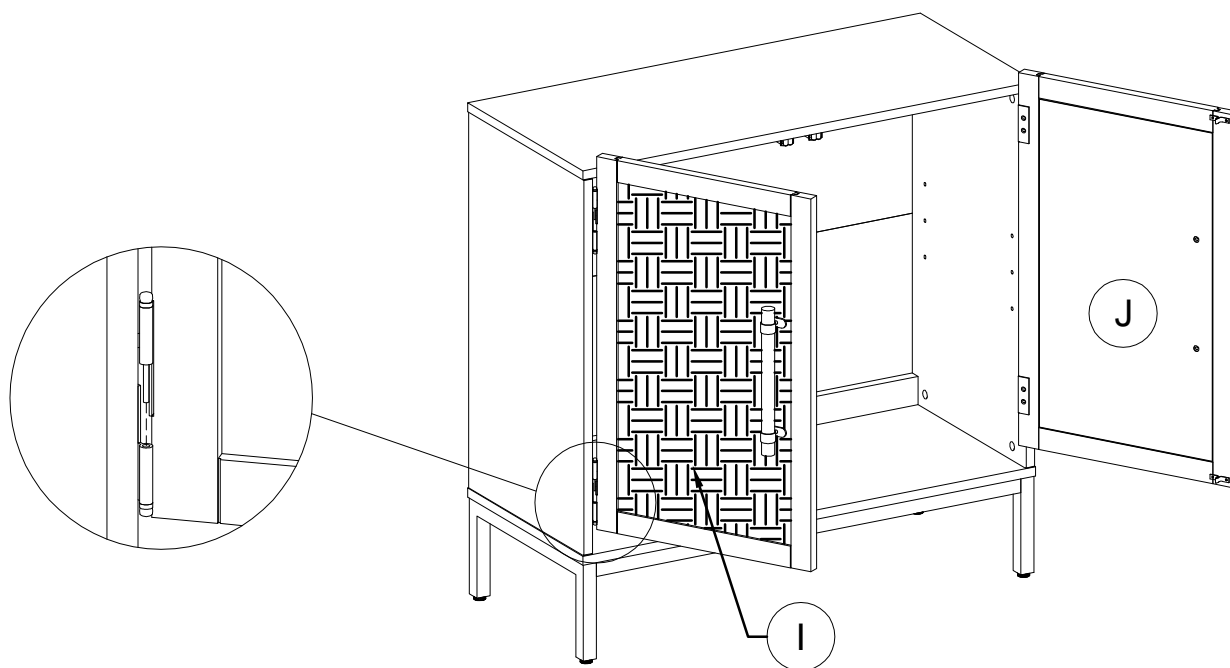

STEP 12

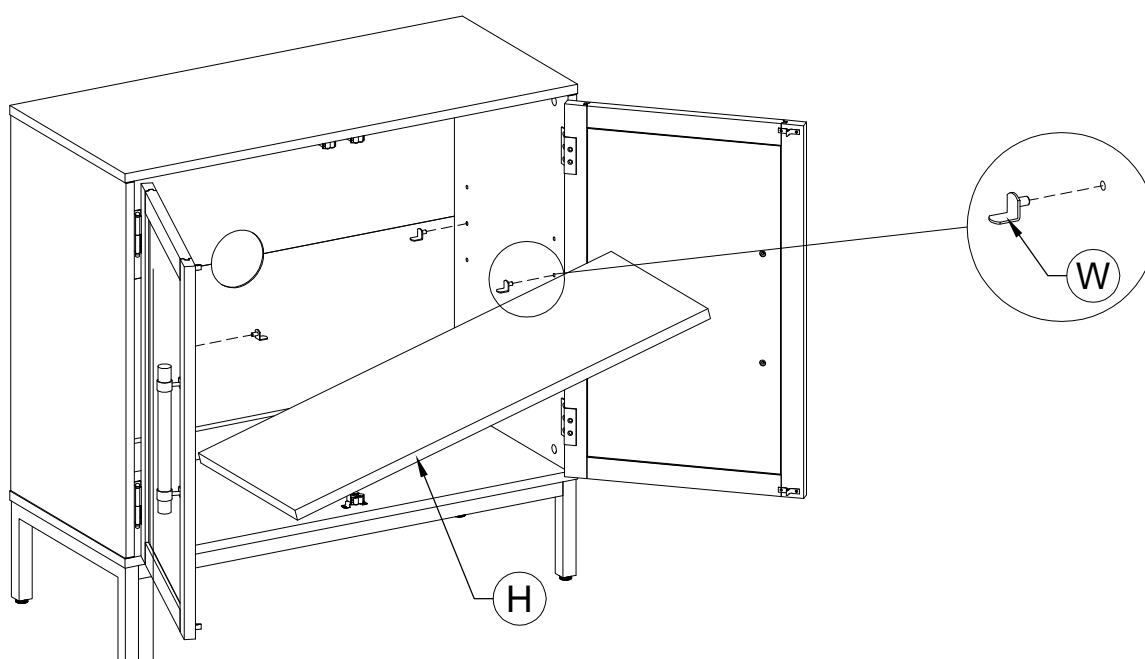

STEP 13

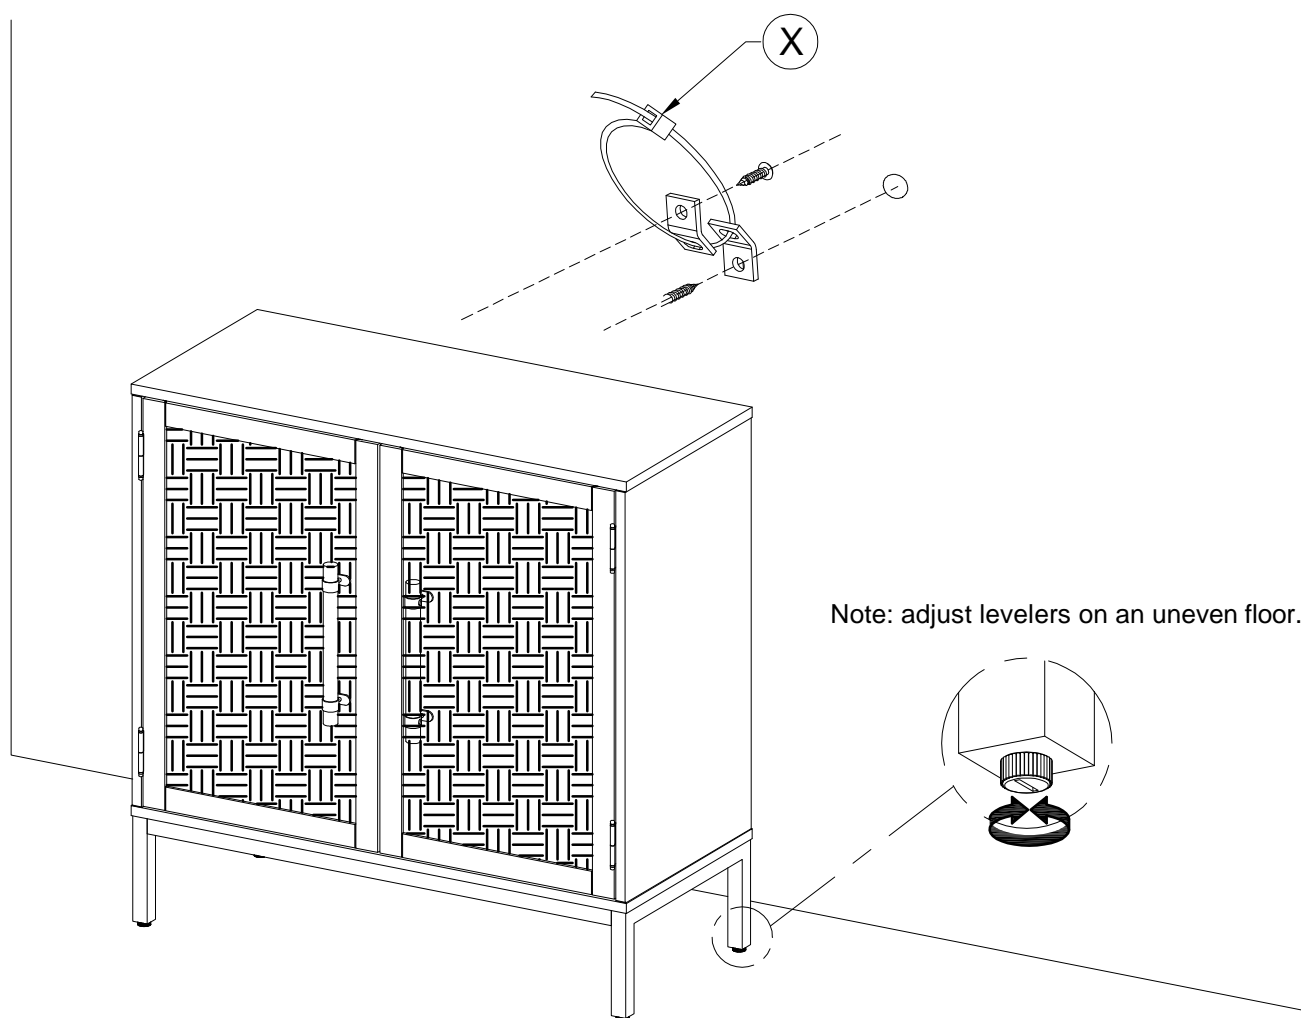

Note: The long screw included is suitable for most wall situations.
Use appropriate screw for your application. Do not overtighten the cable.
WARNING! Anti-tipping hardware MUST be installed for your safety.