



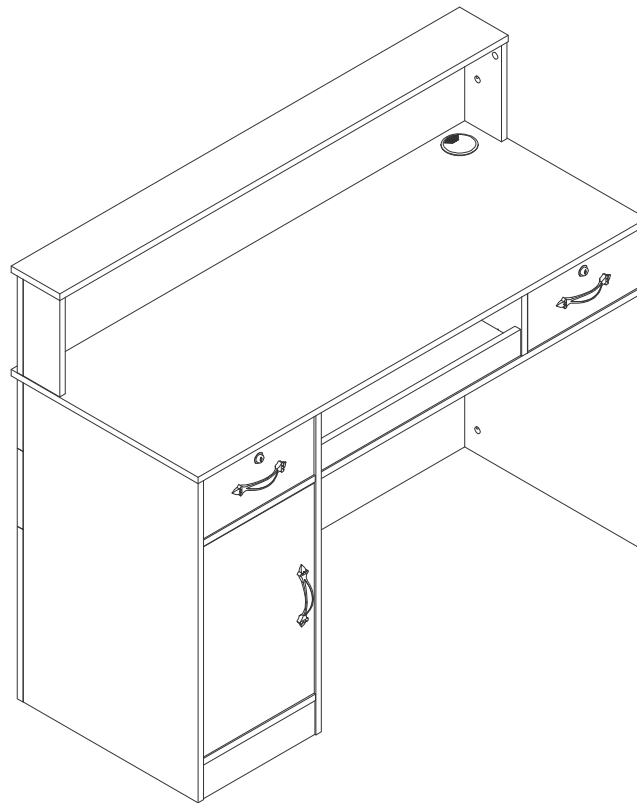


THIS INSTRUCTION BOOKLET CONTAINS IMPORTANT SAFETY INFORMATION. PLEASE READ AND KEEP FOR FUTURE REFERENCE.

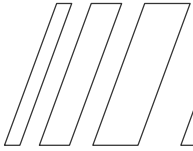


WARNING

- Unit can tip over causing severe injury or death.
- Anchor unit to stud in wall (if instructed to).
- Do Not allow children to climb on unit.
- Put heavy items on lower shelves or drawers.

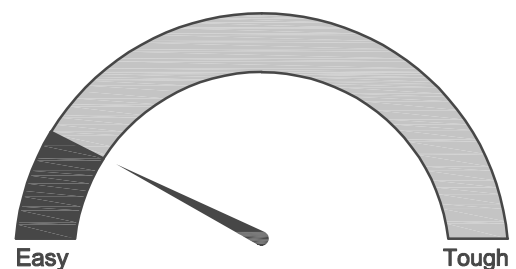

Assembly Difficulty Meter

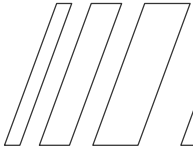

Helpful Hints



PEOPLE NEEDED FOR ASSEMBLY: 1 - 2
ESTIMATED ASSEMBLY TIME: 1 HOUR


- Open your item in the area you plan to keep it to avoid excessive heavy lifting.
- Identify, sort and count the parts before attempting assembly.
- Compression dowels are lightly tapped in with a hammer.
- Slides are labeled with a R (right) and L (left) for proper placement.
- Make sure to always face the point on the top of the Cam Lock towards the outer edge.
- Use all the nails provided for the back panel and spread them out equally.
- Back panel must be used to make sure your unit is sturdy.
- Do NOT use harsh chemicals or abrasive cleaners on this item.
- Never push, pull, or drag your furniture.



















Before You Start








- Read through each step carefully and follow the proper order
- Separate and count all your parts and hardware
- Give yourself enough room for the assembly process
- Have the following tools: Hammer
- Caution: If using a power drill or power screwdriver for screwing, please be aware to slow down and stop when screw is tight. Failure to do so may result in stripping the screw.

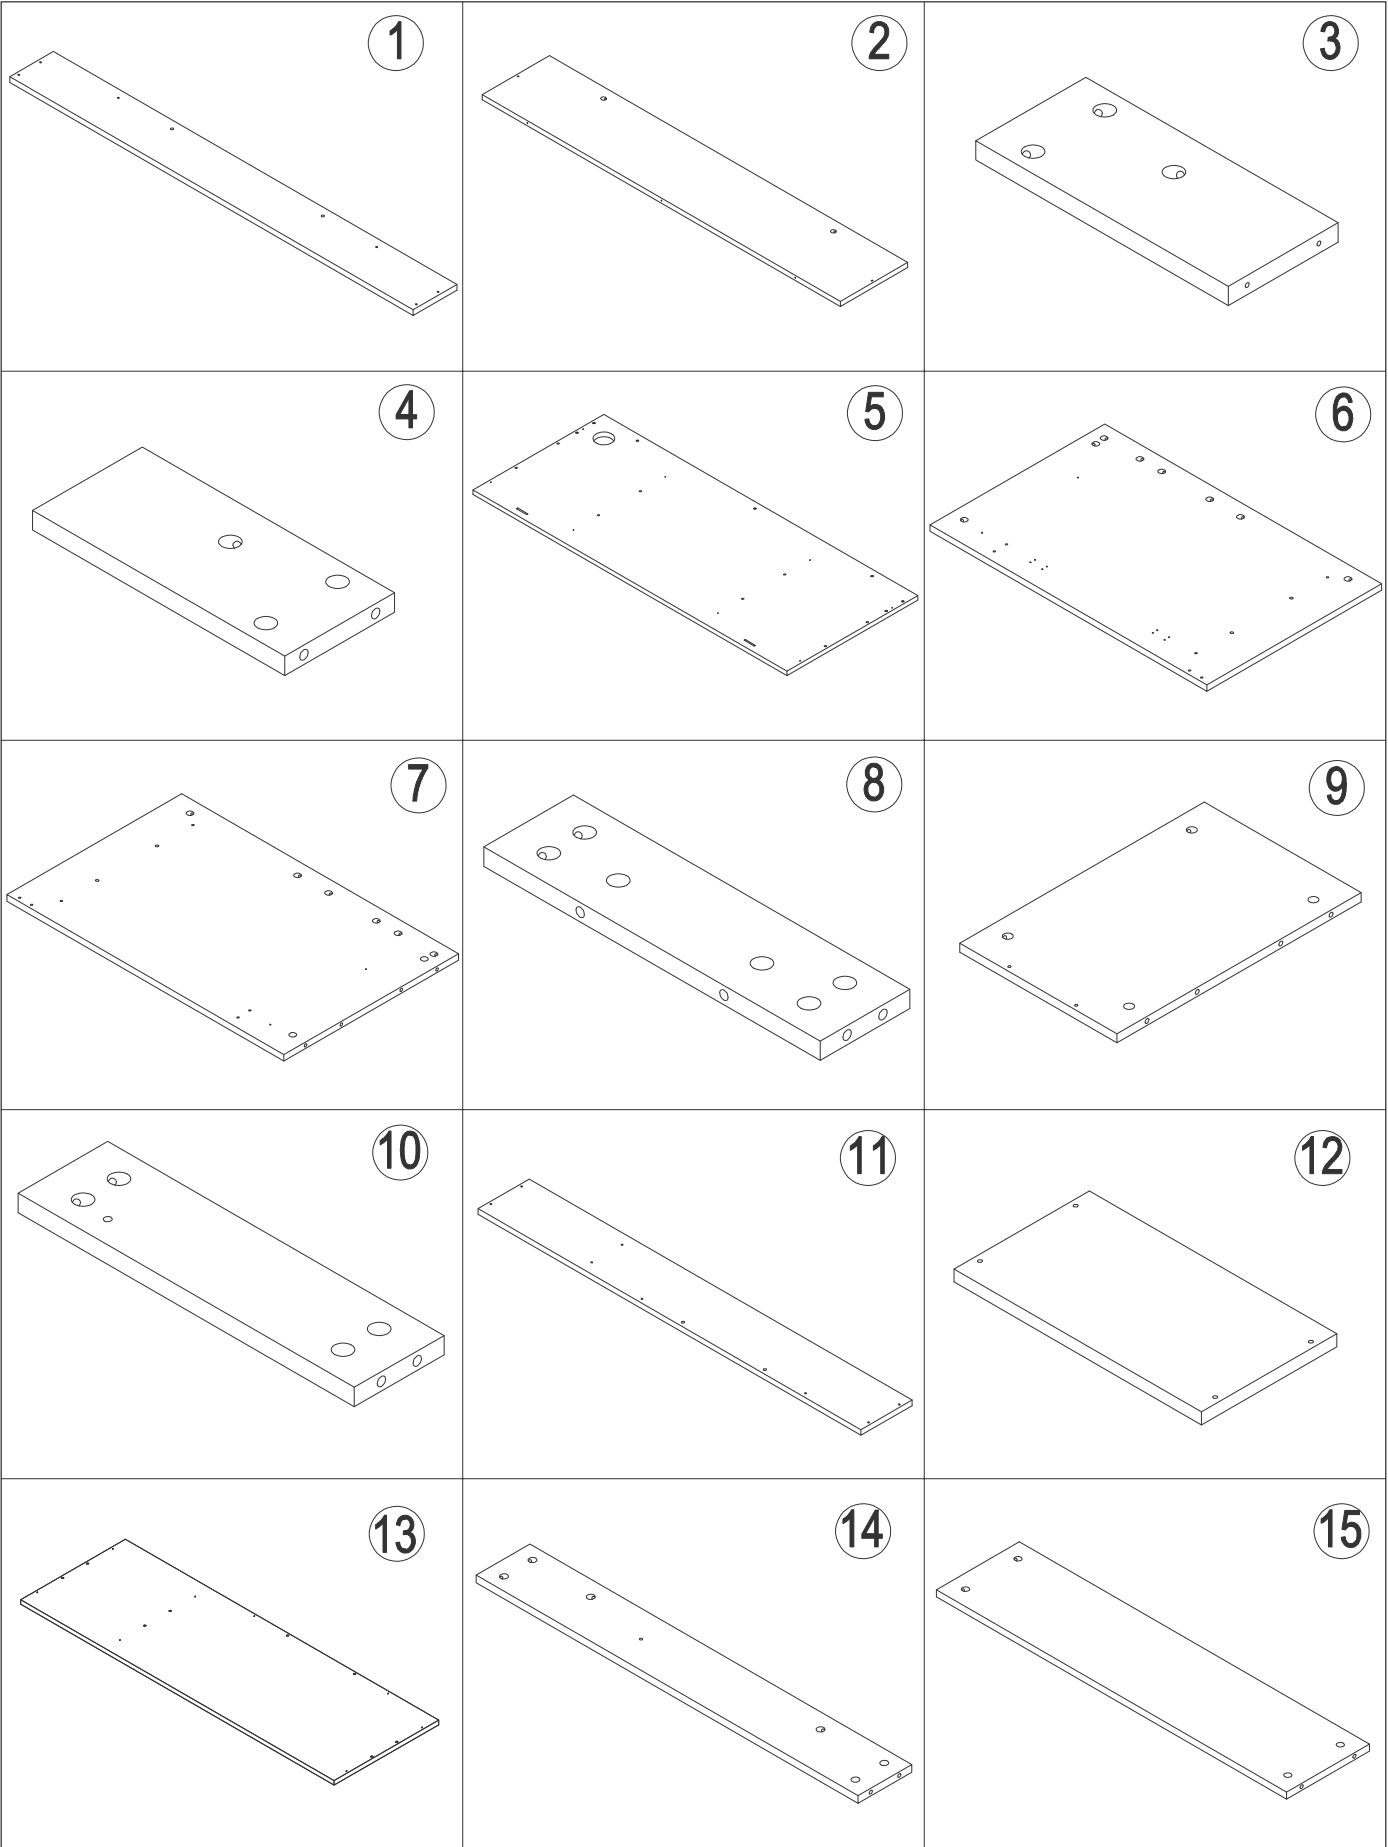
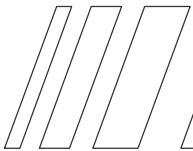


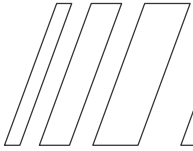

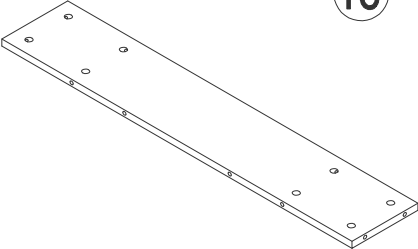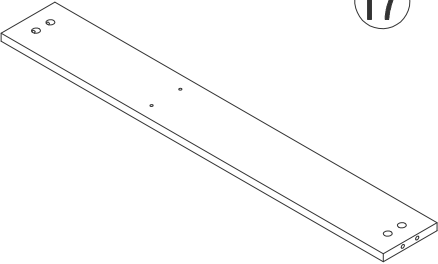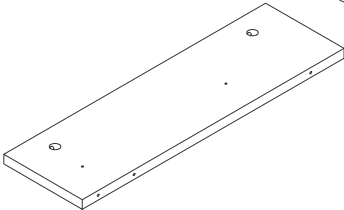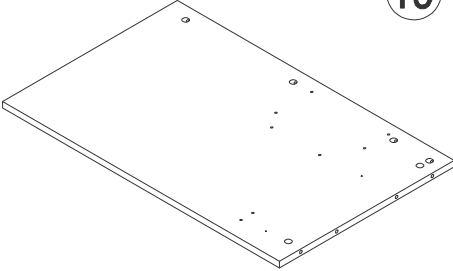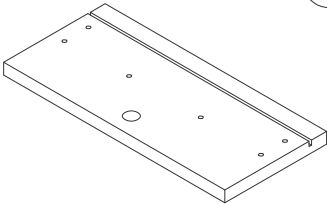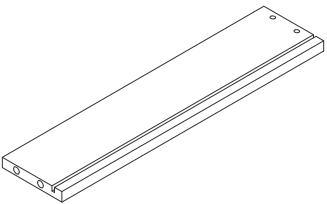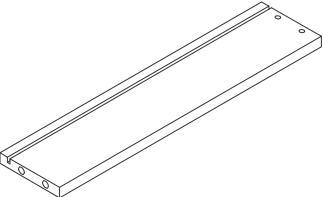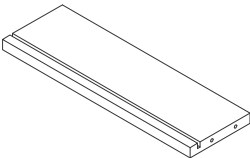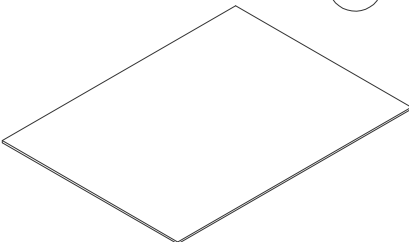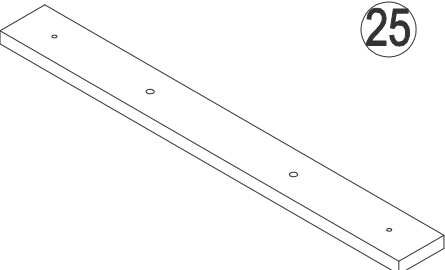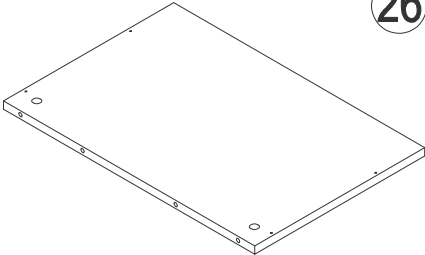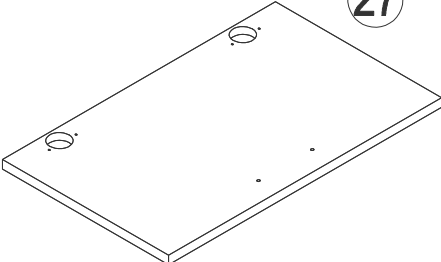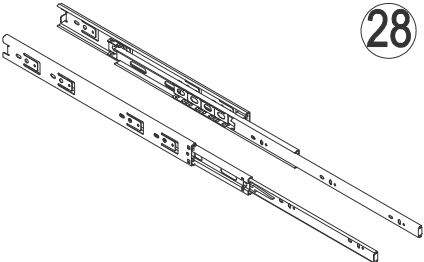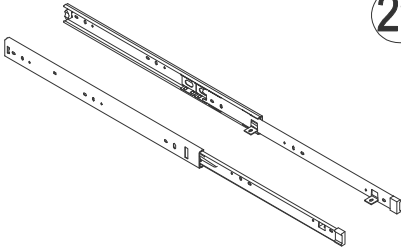
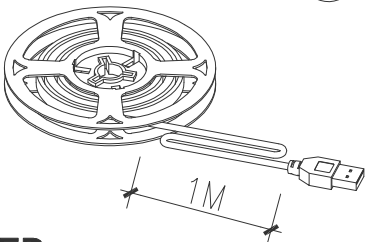
 16	 17	 18
 19	 20	 21
	2 PCS	2 PCS
 22	 23	 24
2 PCS	2 PCS	2 PCS
 25	 26	 27
 28	 29	 30
14" 3508W 2 SET	14" 1 SET	LED

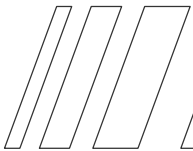







A M5x42  X 76+1	B Ø15x10  X 76+1	C M3.5x12  X 36+2
D M5x40  X 18+1	E M3x18  X 8	F  X 2
G  X 1 SET	H Ø8x40  X 28+1	I Ø60  X 1
J M4x18  X 6	K  X 3	L M5XØ6  X 1
M  X 8+1	 X 1	

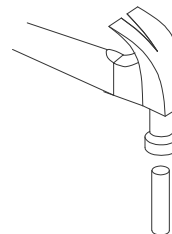
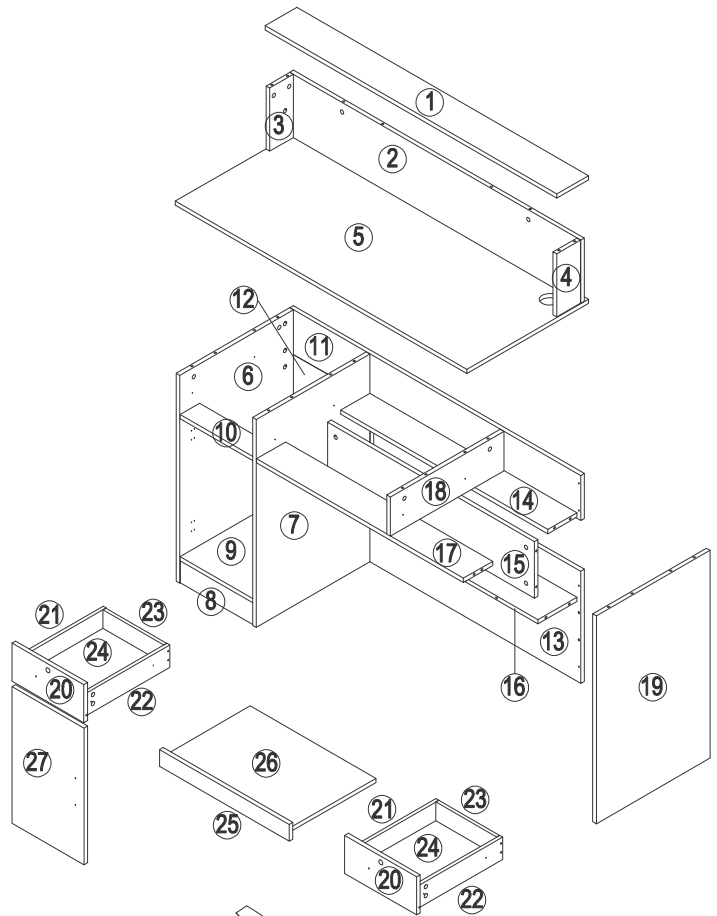


***Hammer isn't inside
Accessory Pack.**

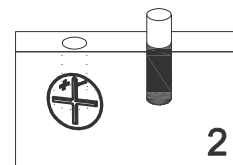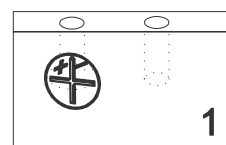

M5X42mm

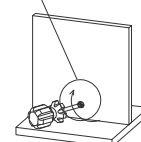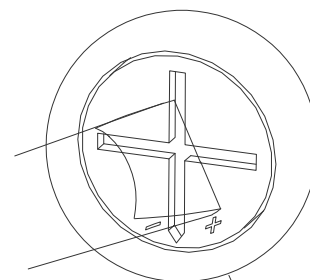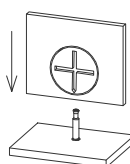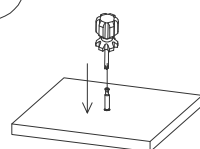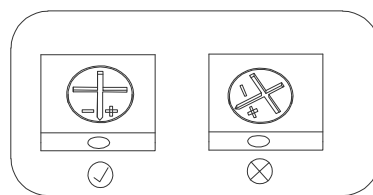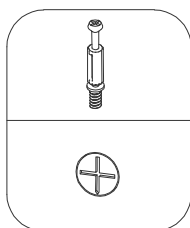

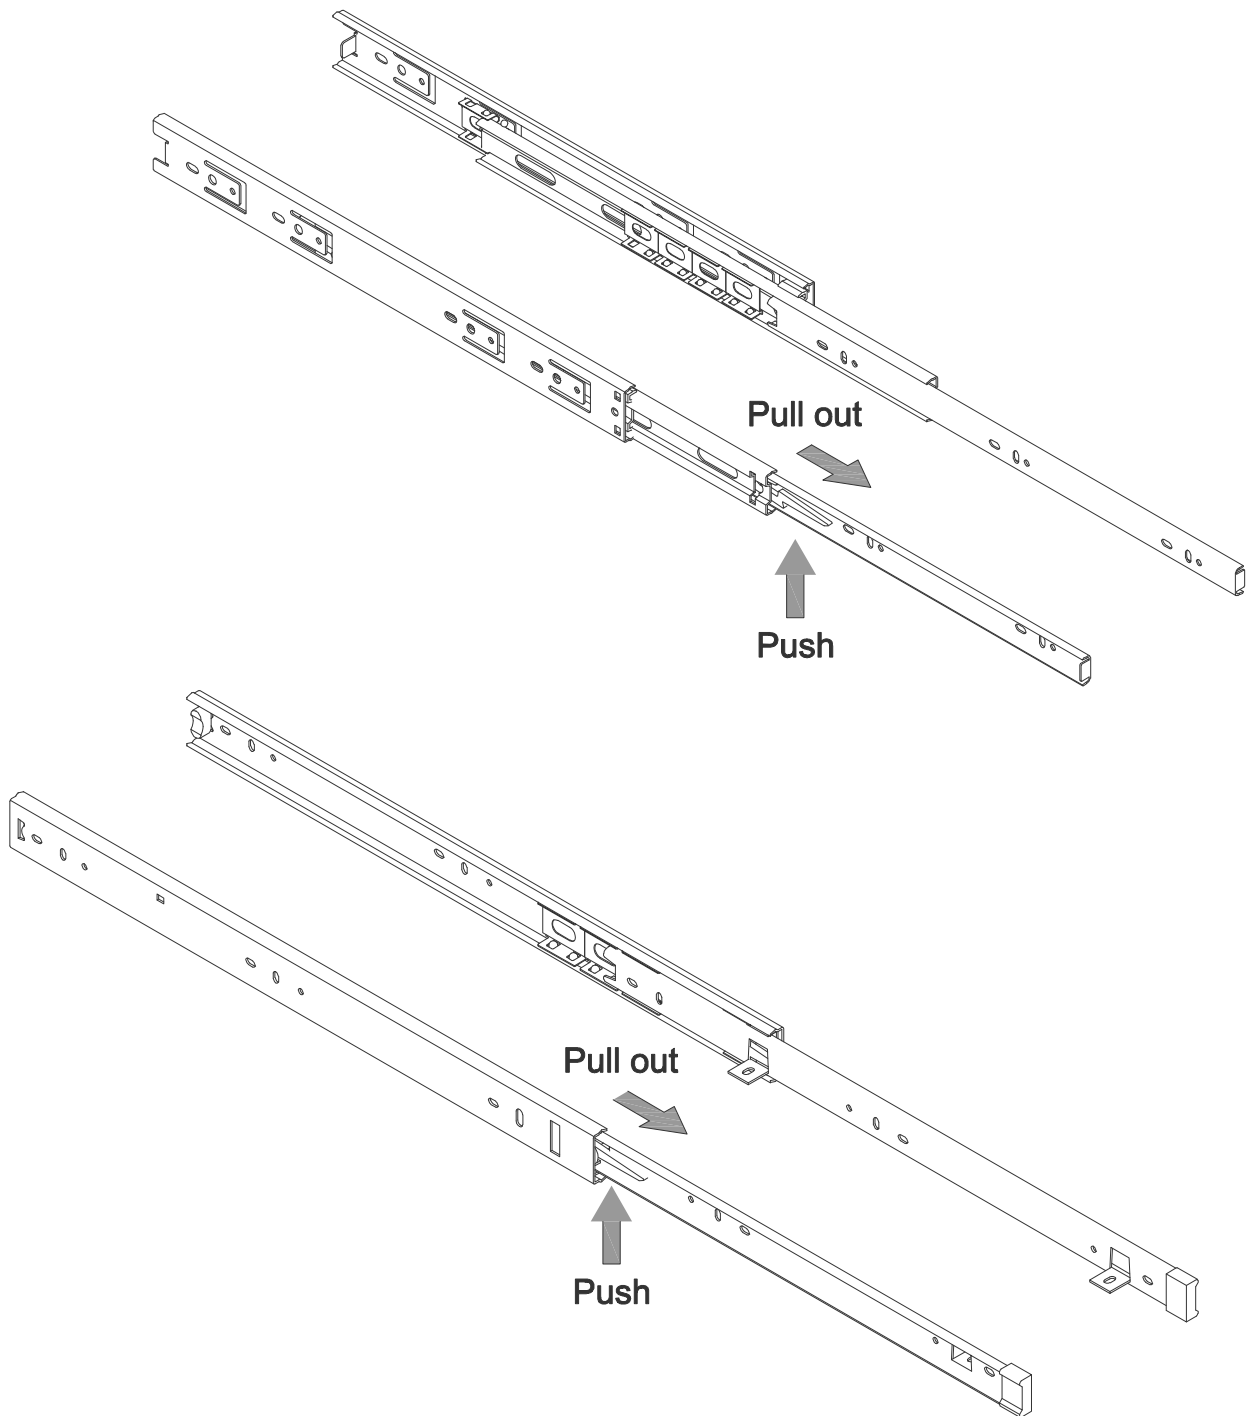
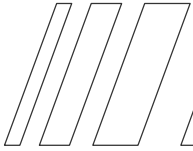


Disconnect the keyboard rail with the BLACK PLASTIC PART.
It needs to be pulled down to disconnect the runners.




P.7


1

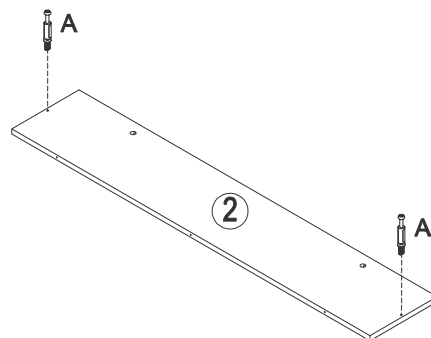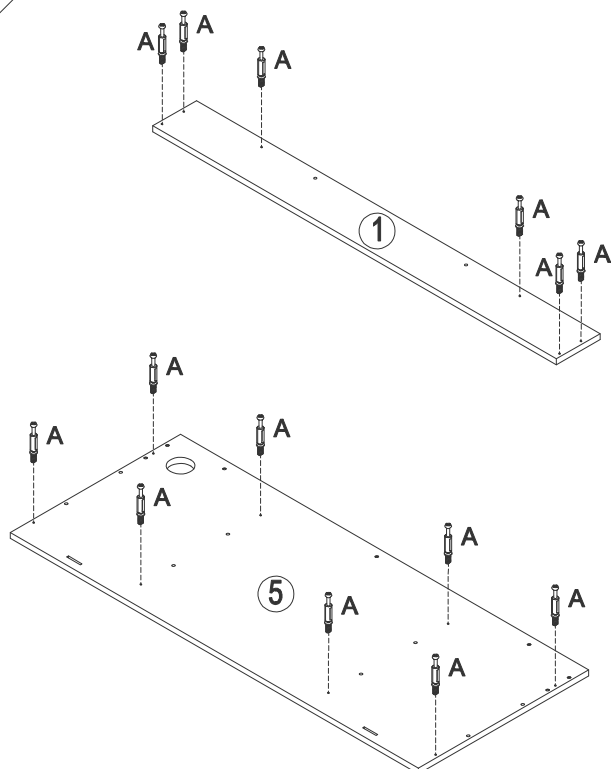



A M5x42



X 18

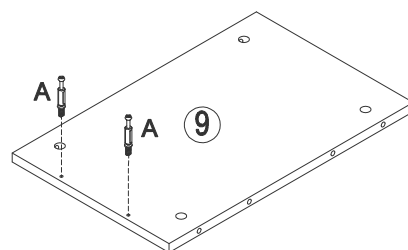


2

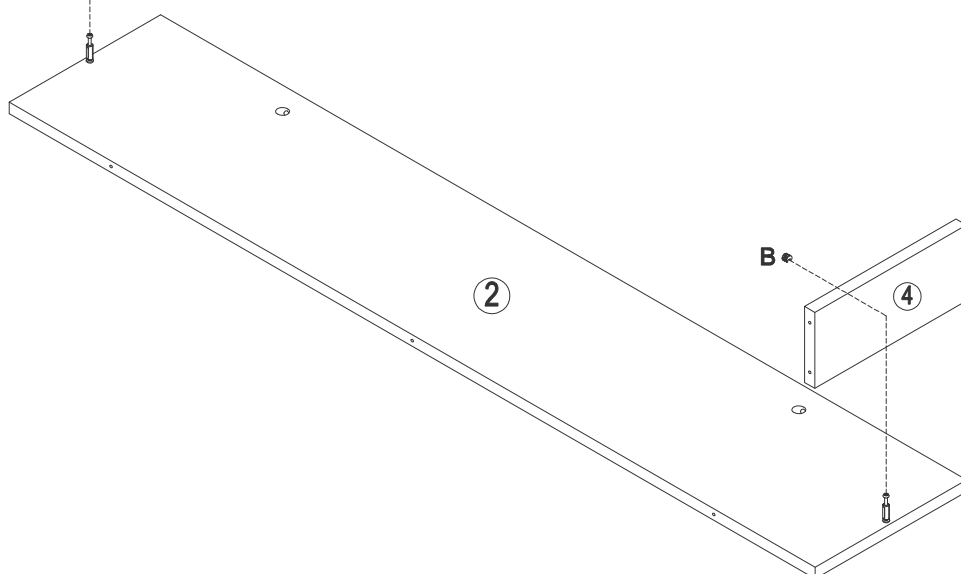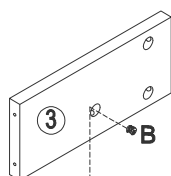

B Ø15x10




X 2

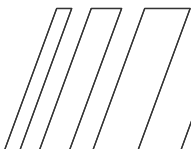

P.8

3

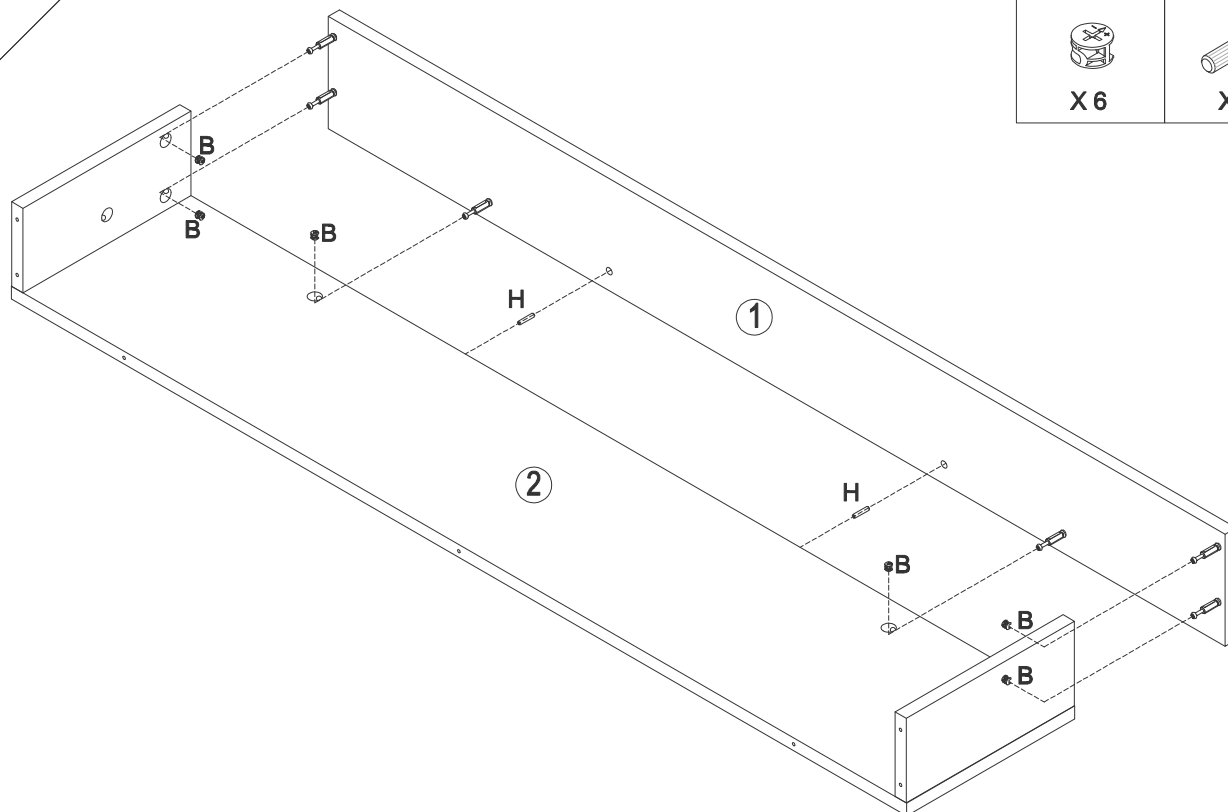

B Ø15x10




X 6

H Ø8x40



X 2

4

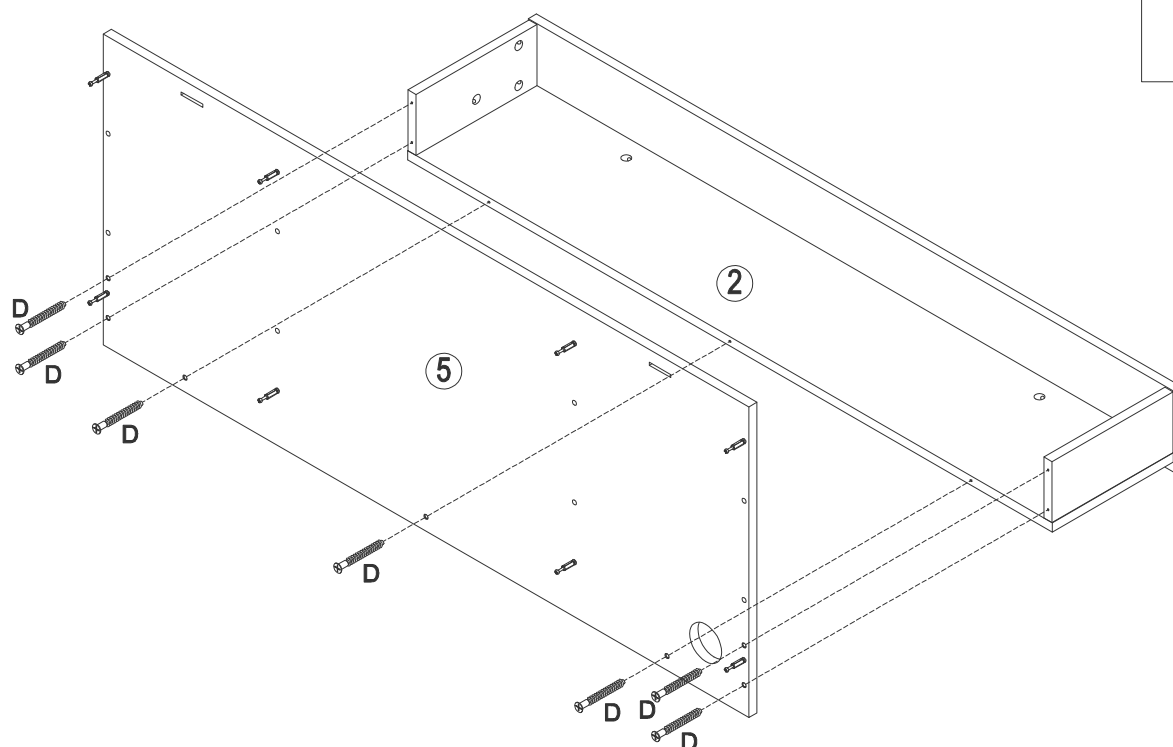


D M5x40



X 7



5

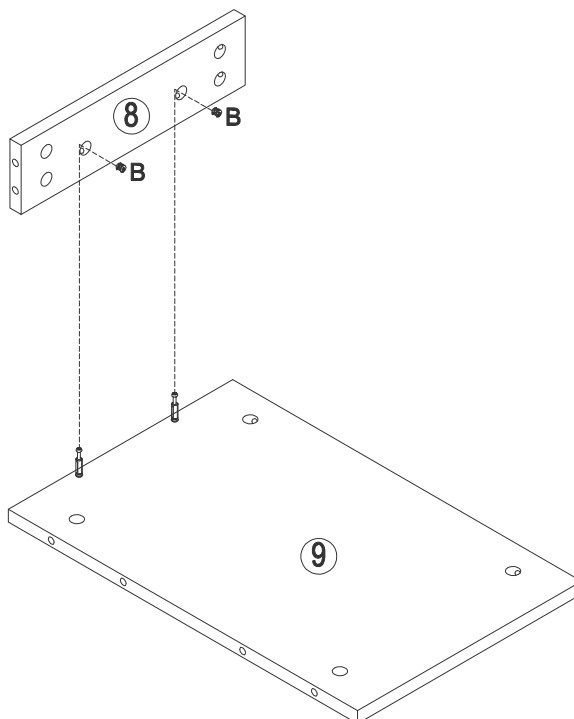


B Ø15x10



X 2

6

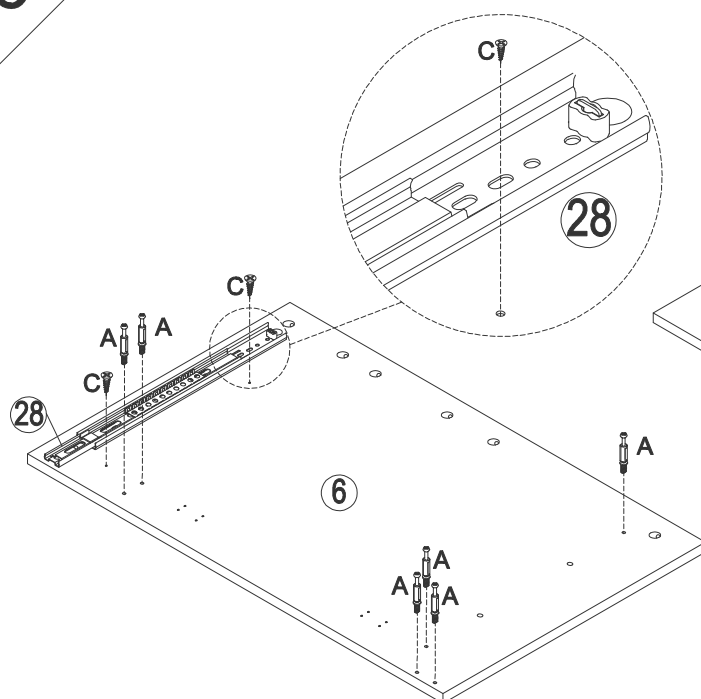

A M5x42




X 14

C M3.5x12




X 4

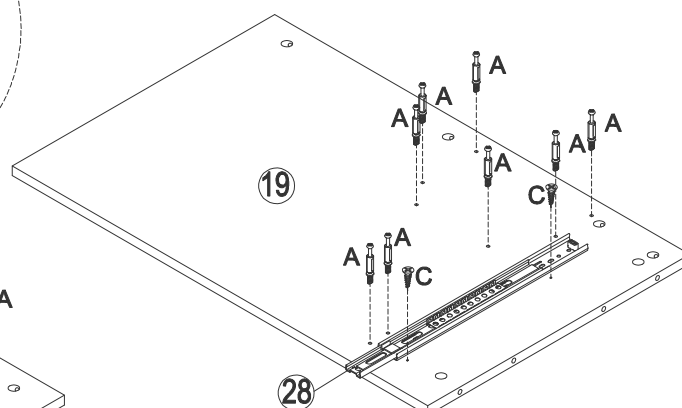





7

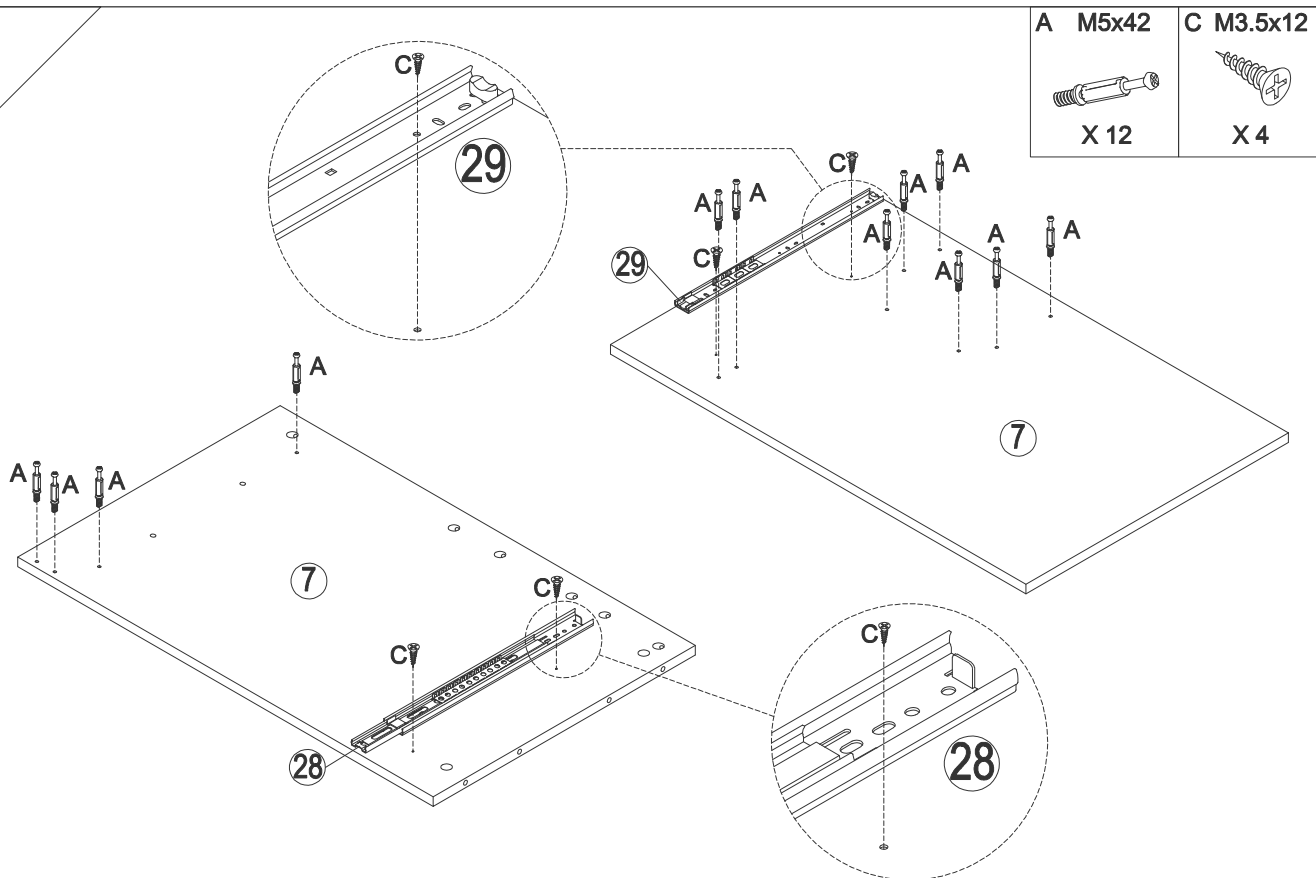


8

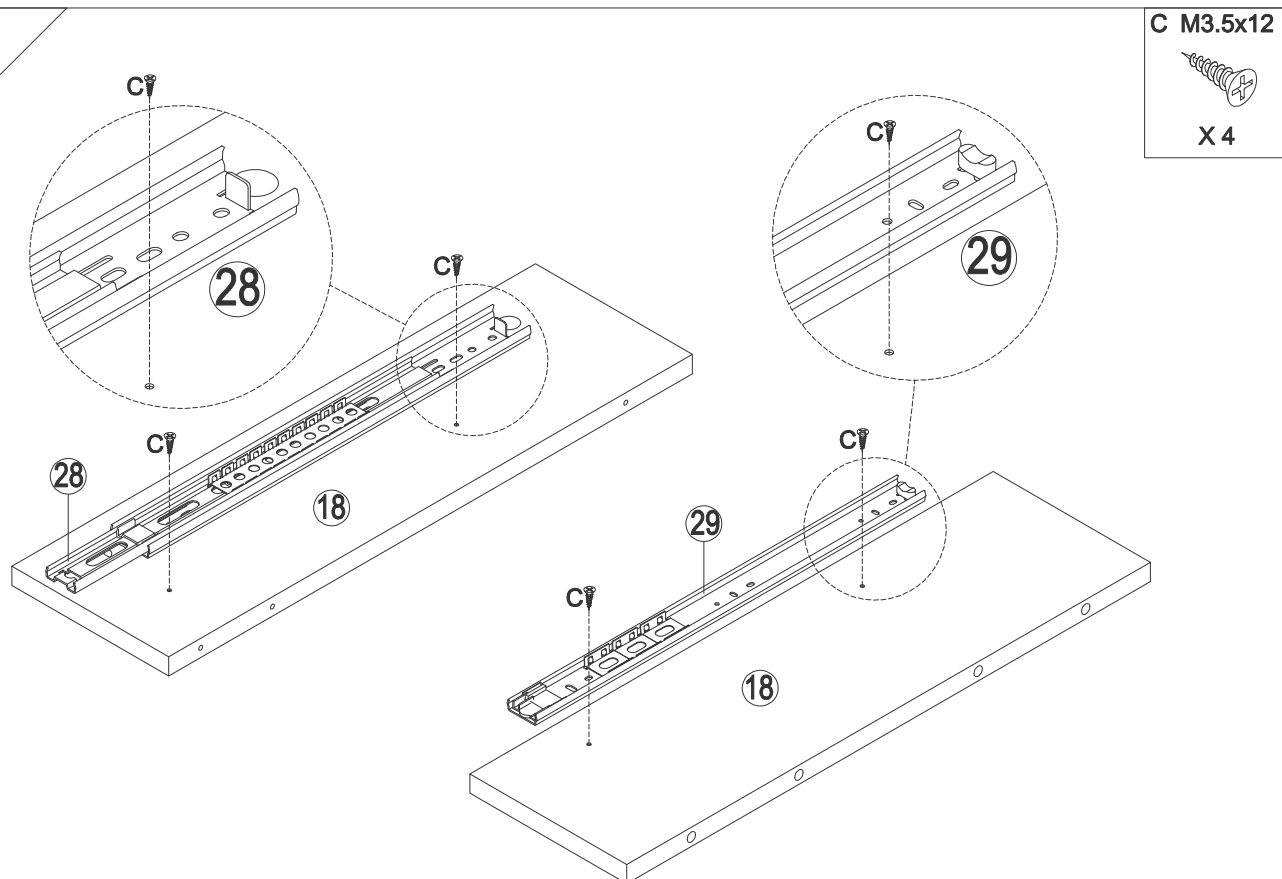

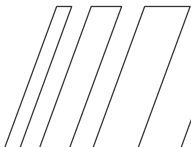


P.11

9

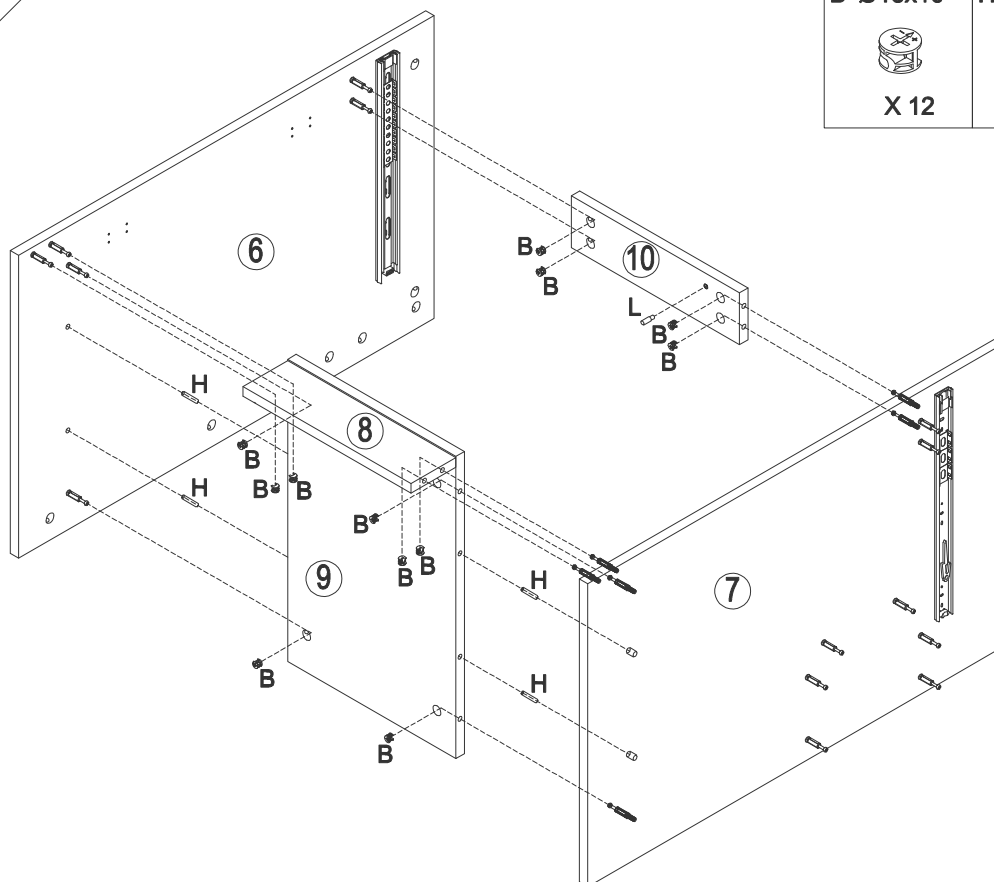


B Ø15x10	H Ø8x40	L M5xØ6
X 12	X 4	X 1

10

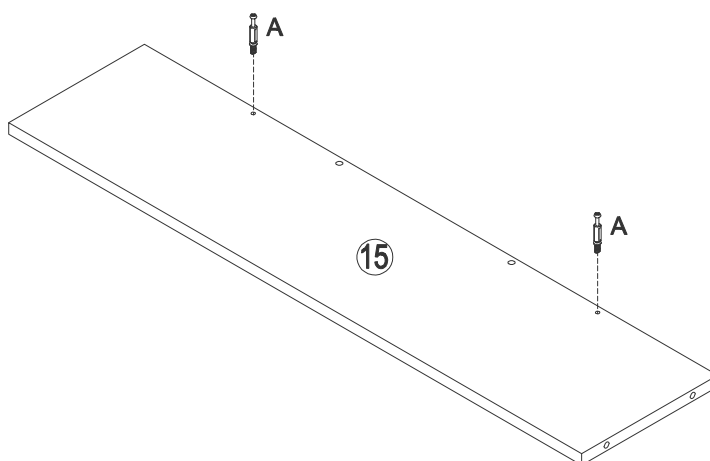

A M5x42



X 2



11

B Ø15x10




X 2

H Ø8x40



X 2

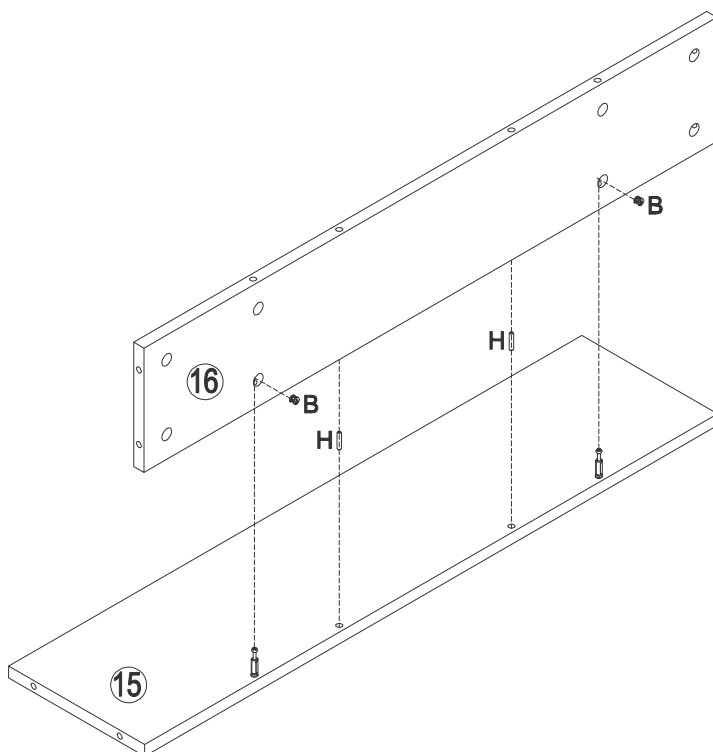



12

B Ø15x10



X 16

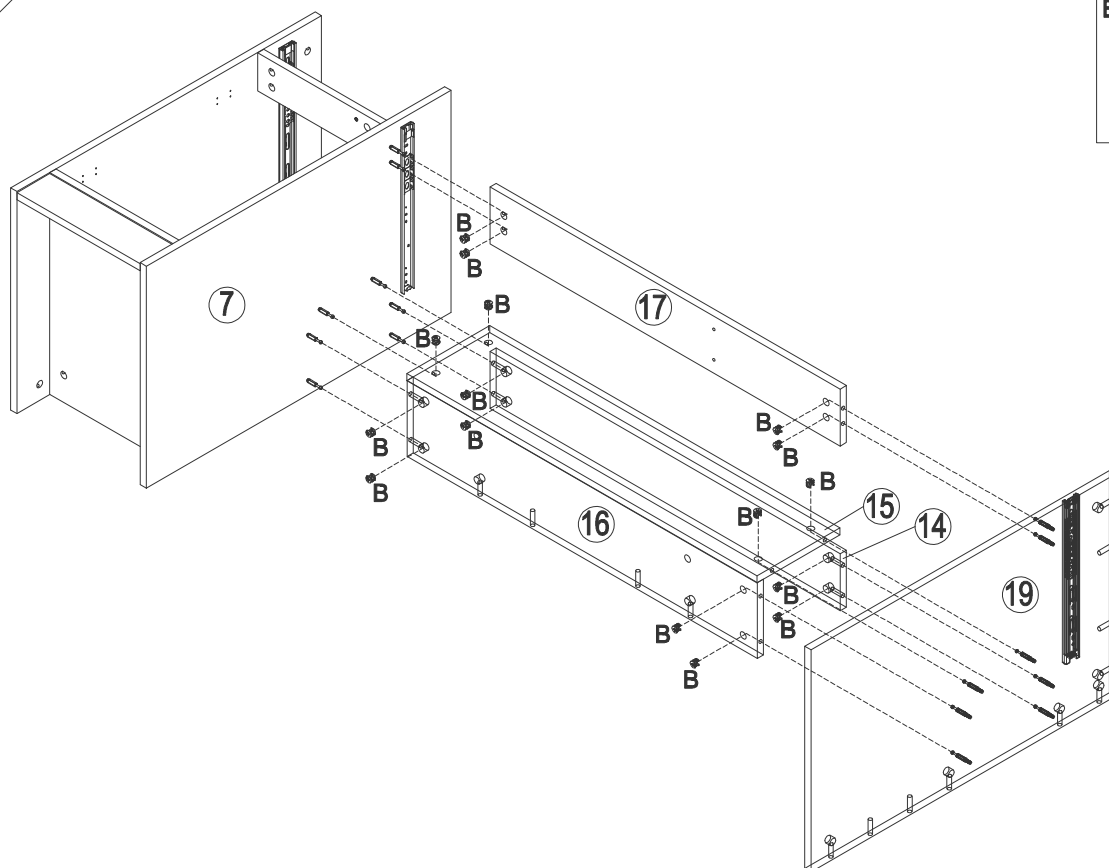


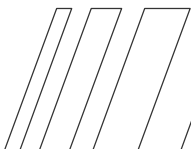


P.13

13

A M5x42



X 20

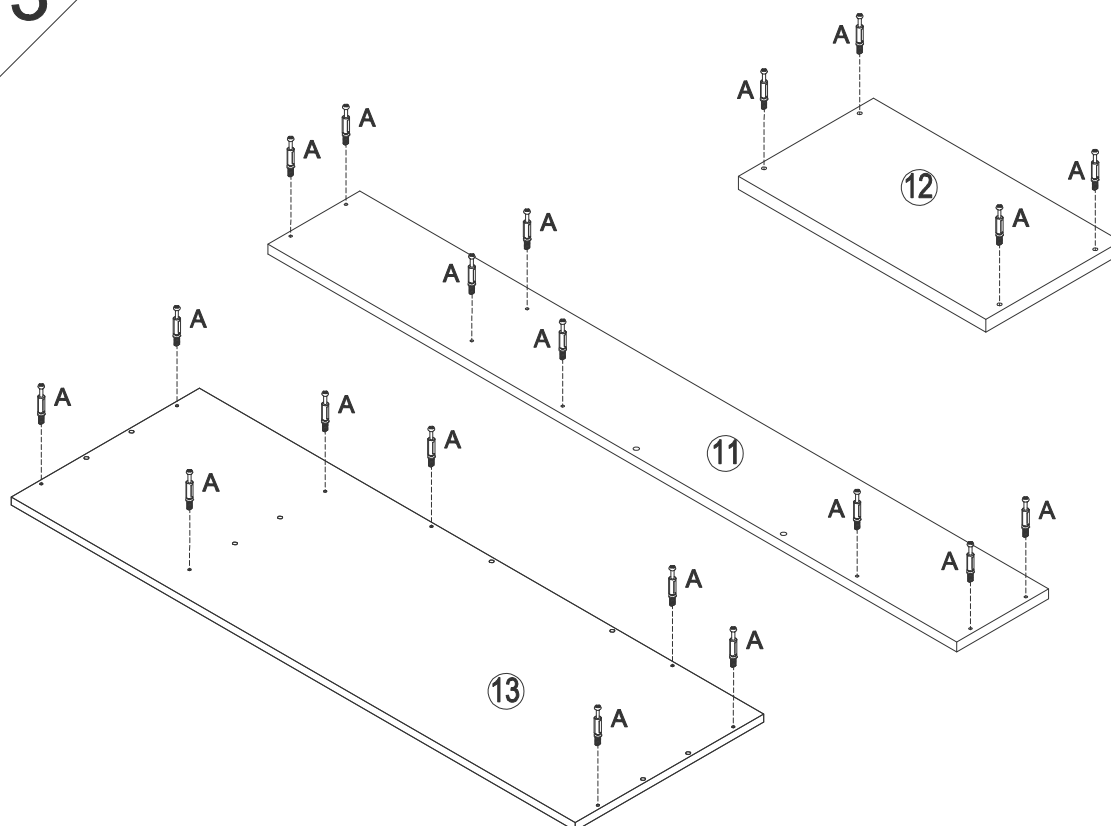

14

B Ø15x10




X 8

H Ø8x40



X 2

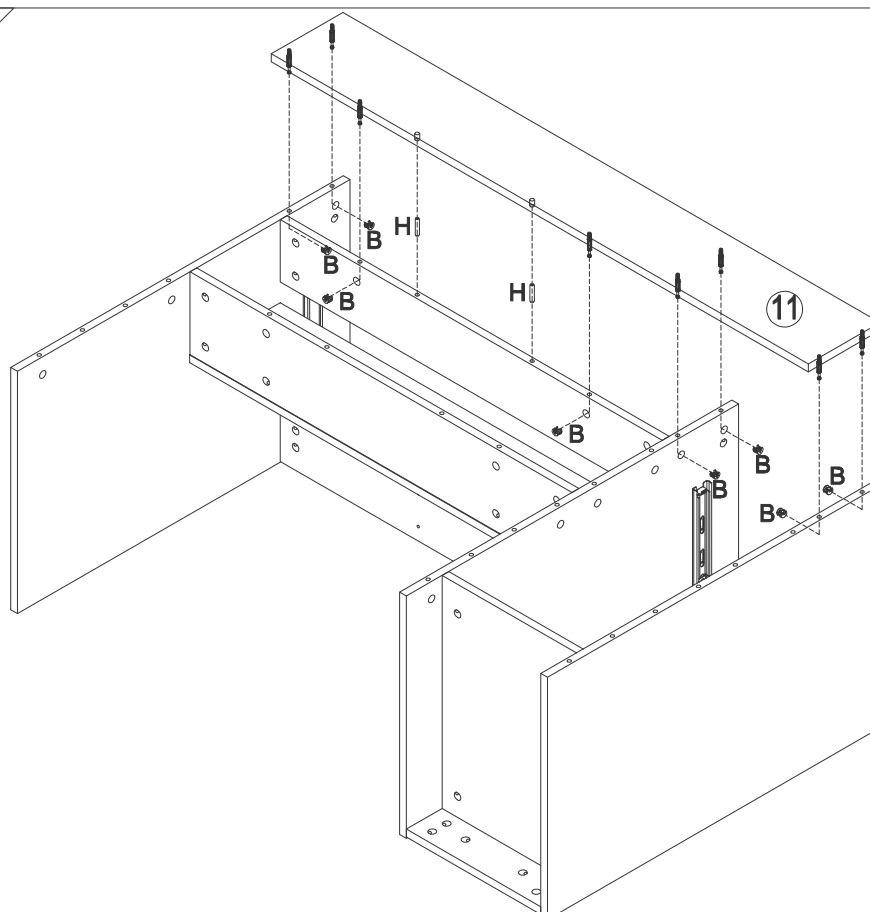




15

B Ø15x10





X 4

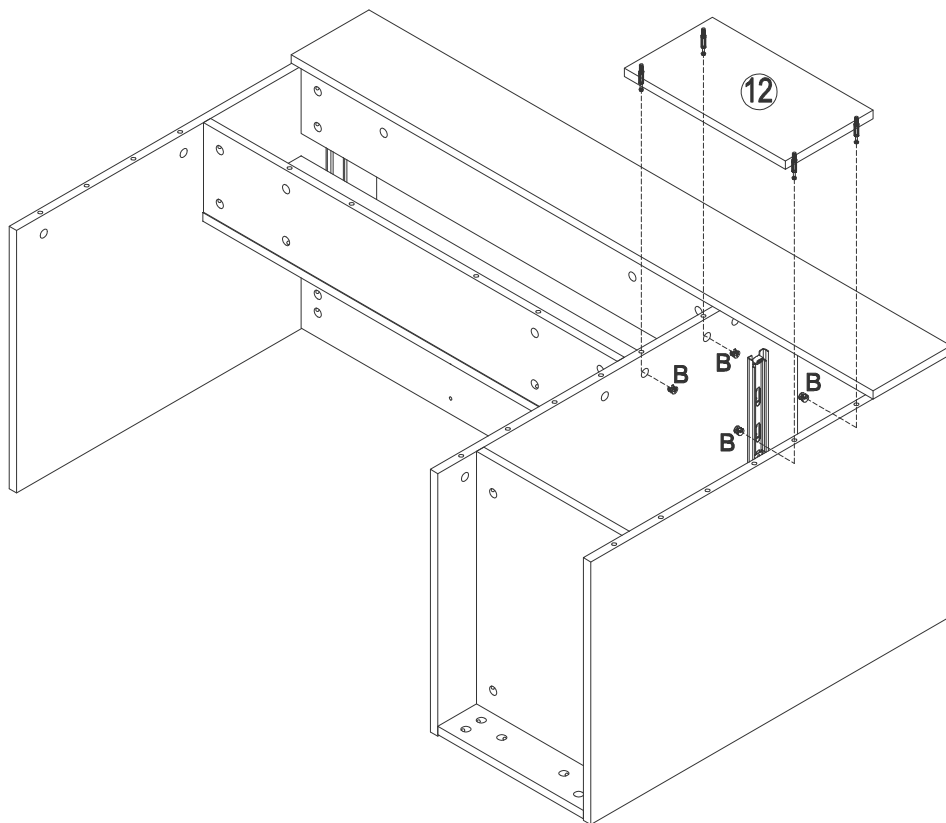


16

The Light Strip can not cover the hole

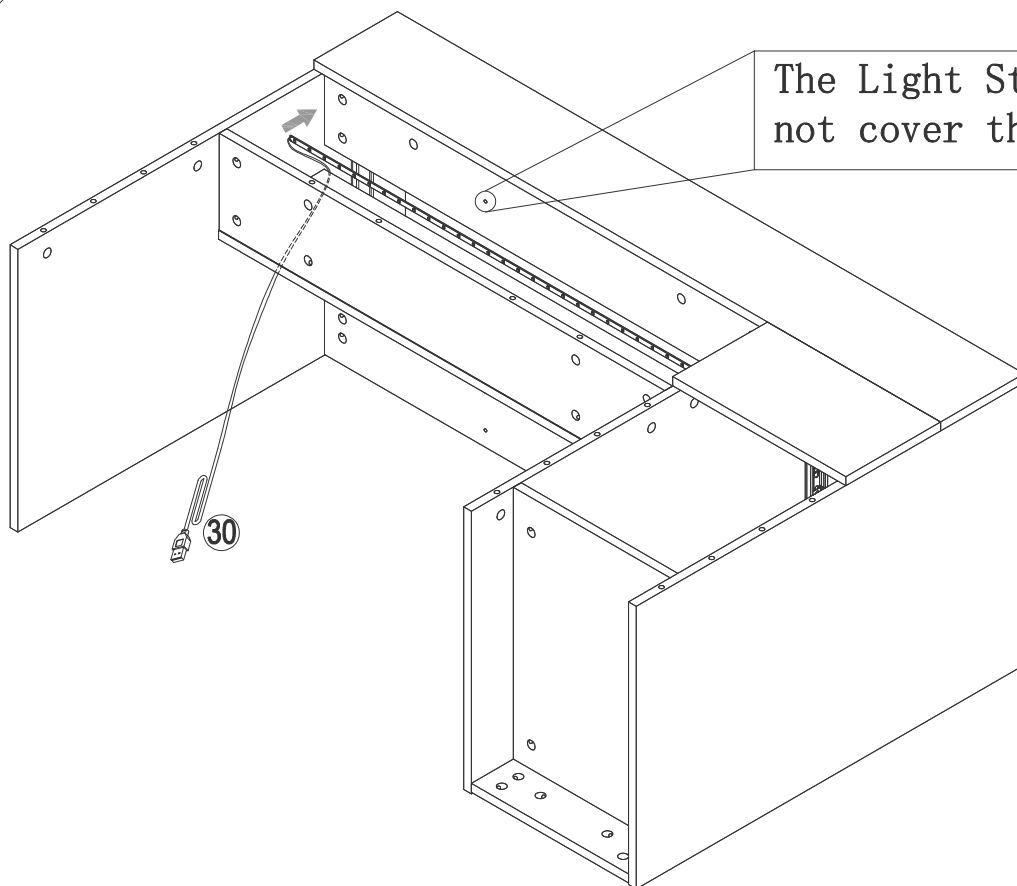

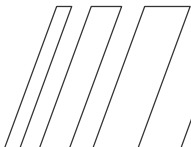

17

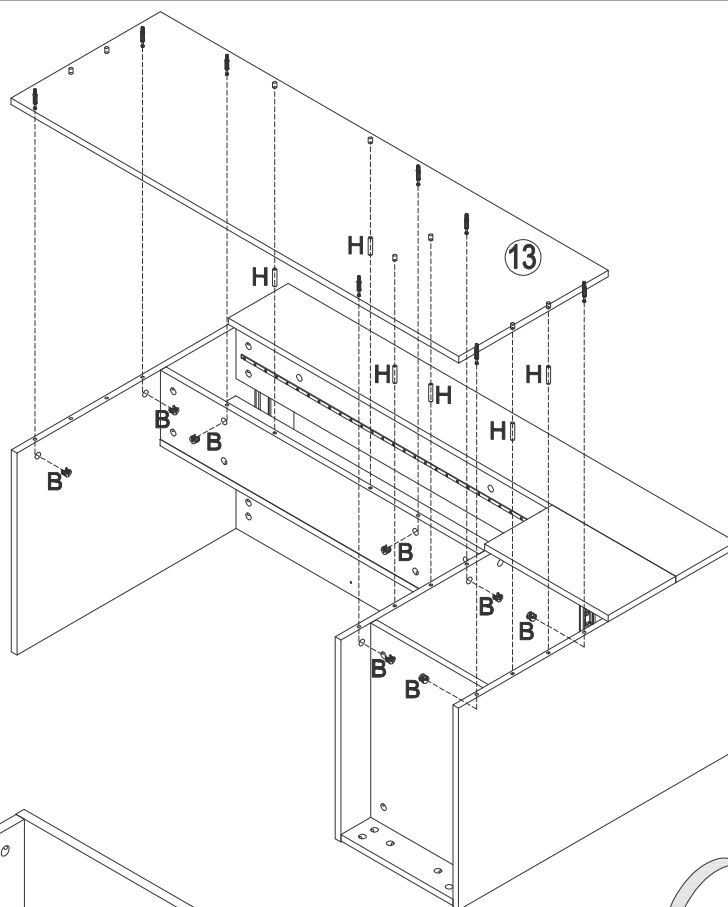


B Ø15x10

H Ø8x40




X 8

X 8

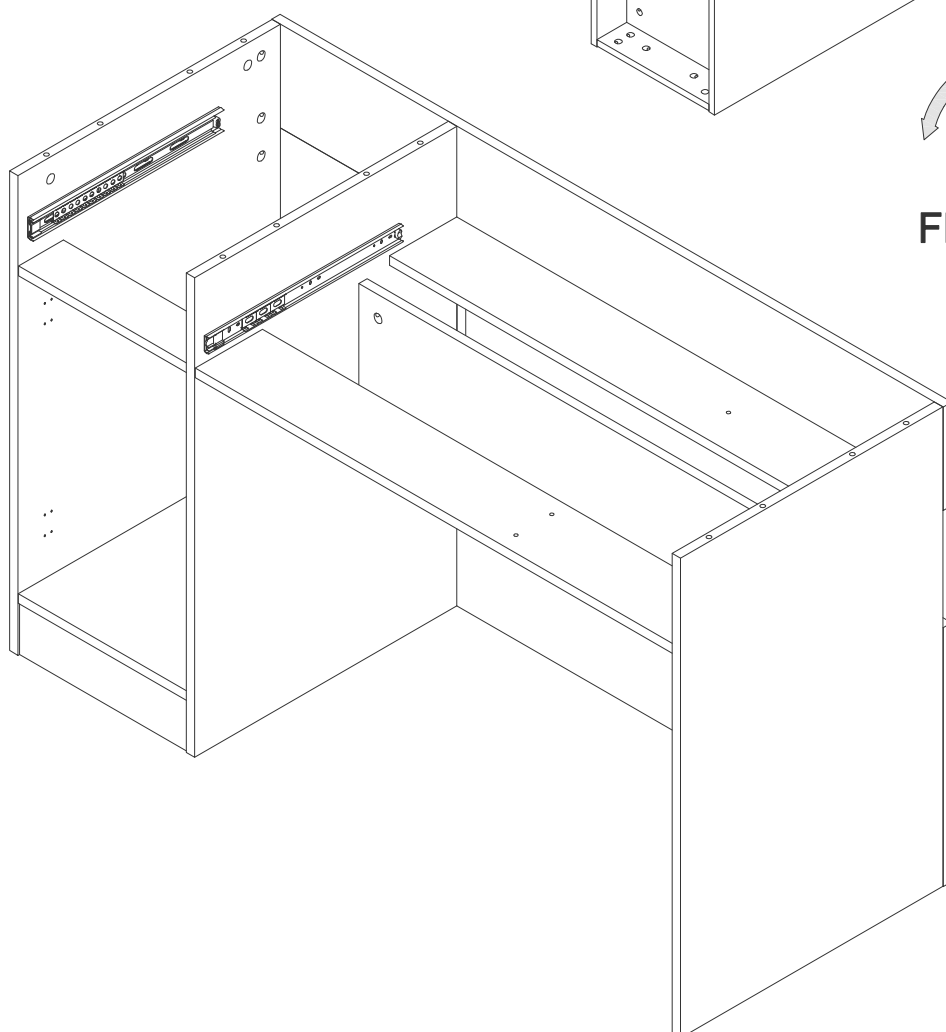


FLIP

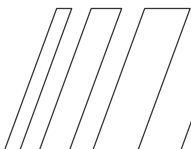

P.16

18

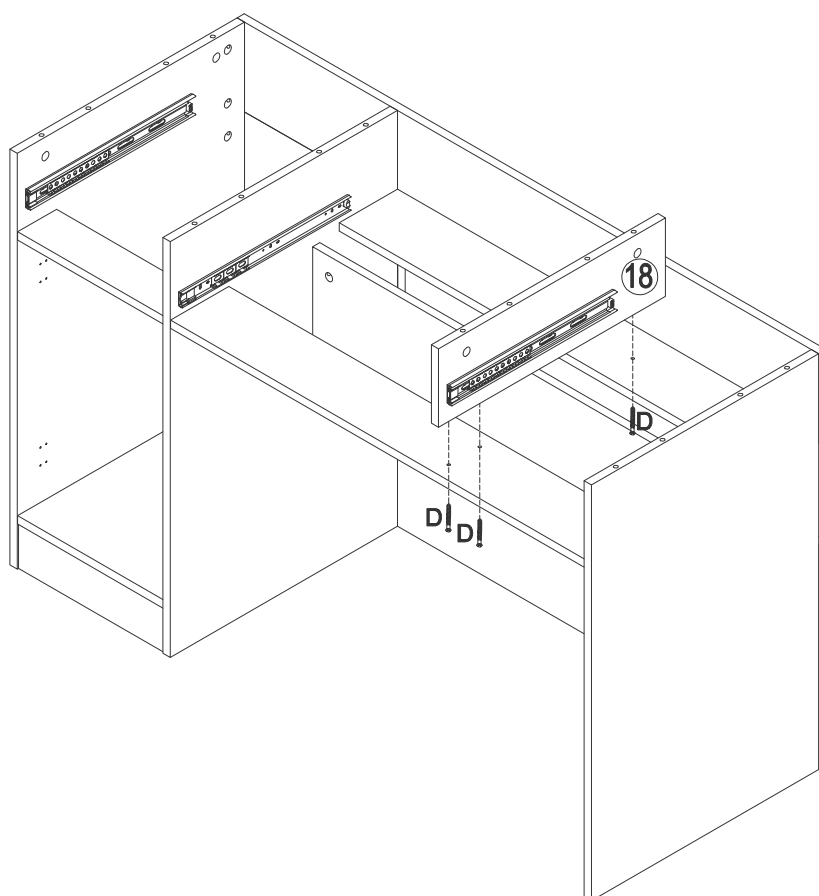


D M5x40



X 3

19

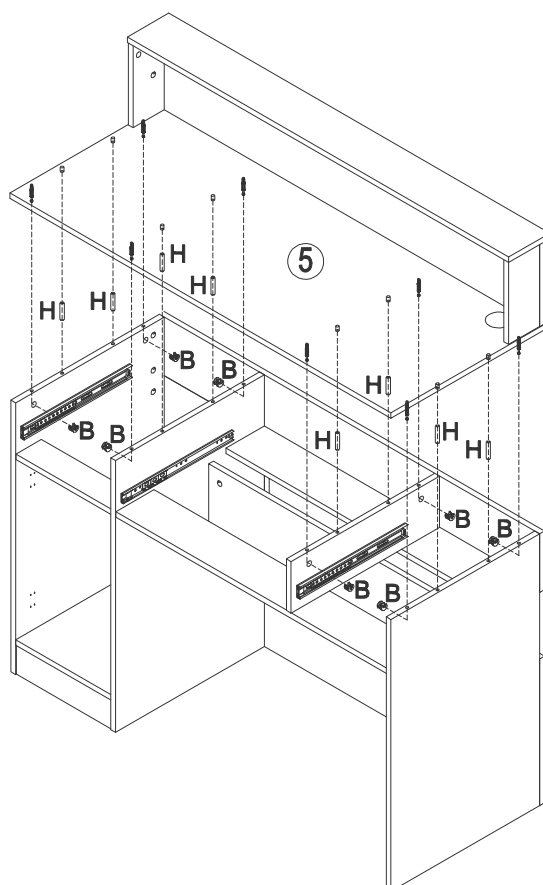

B Ø15x10




X 8

H Ø8x40




X 8

20

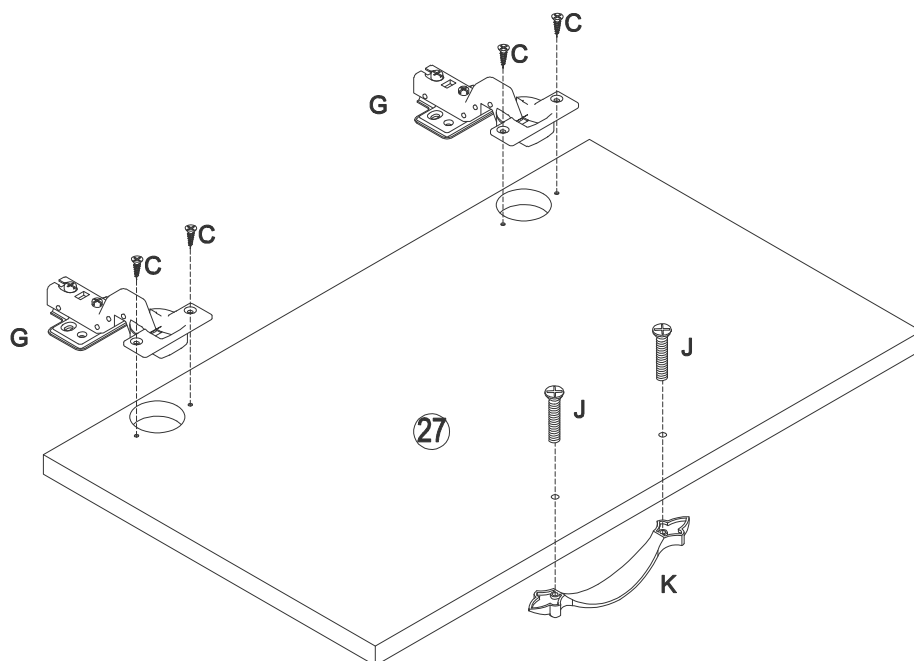



C M3.5x12  X 4	G  X 1 SET
J M4x18  X 2	K  X 1

21

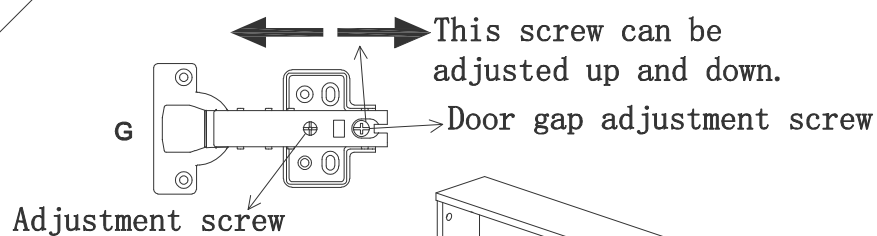

C M3.5x12  X 8	I Ø60  X 1
---	---

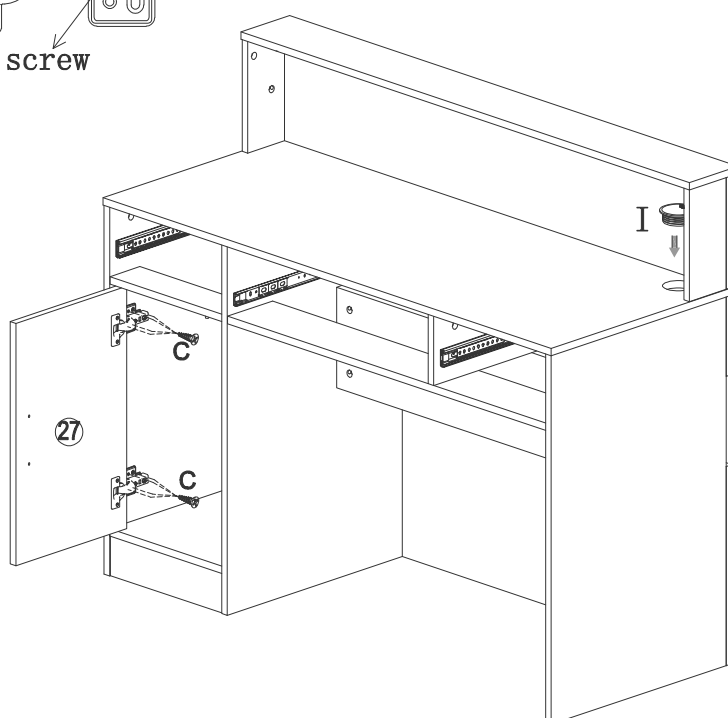

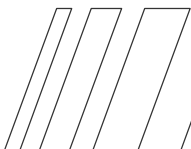

22

E M3x18




X 8

F




X 2

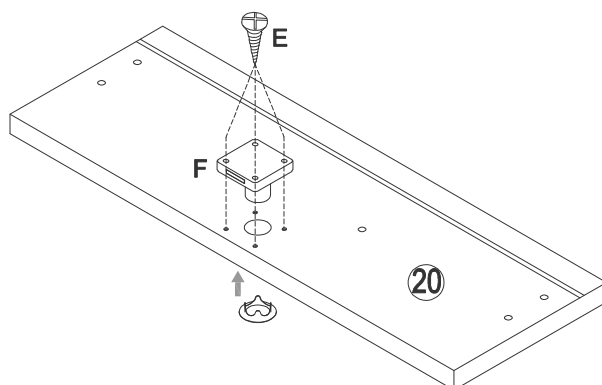

X 2

23

A M5x42



X 8

J M4x18




X 4


K



X 2

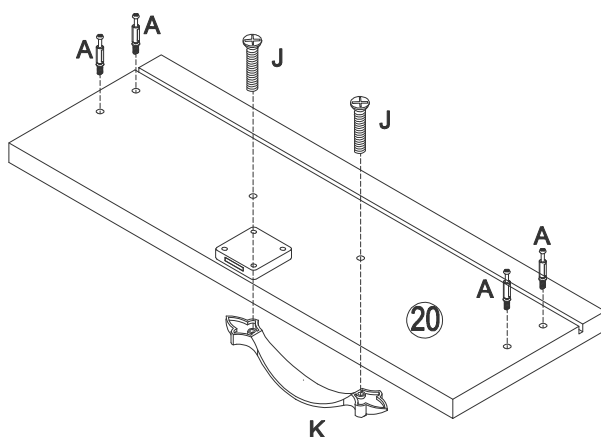

X 2

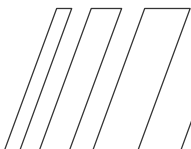


24

B Ø15x10




X 8

X 2

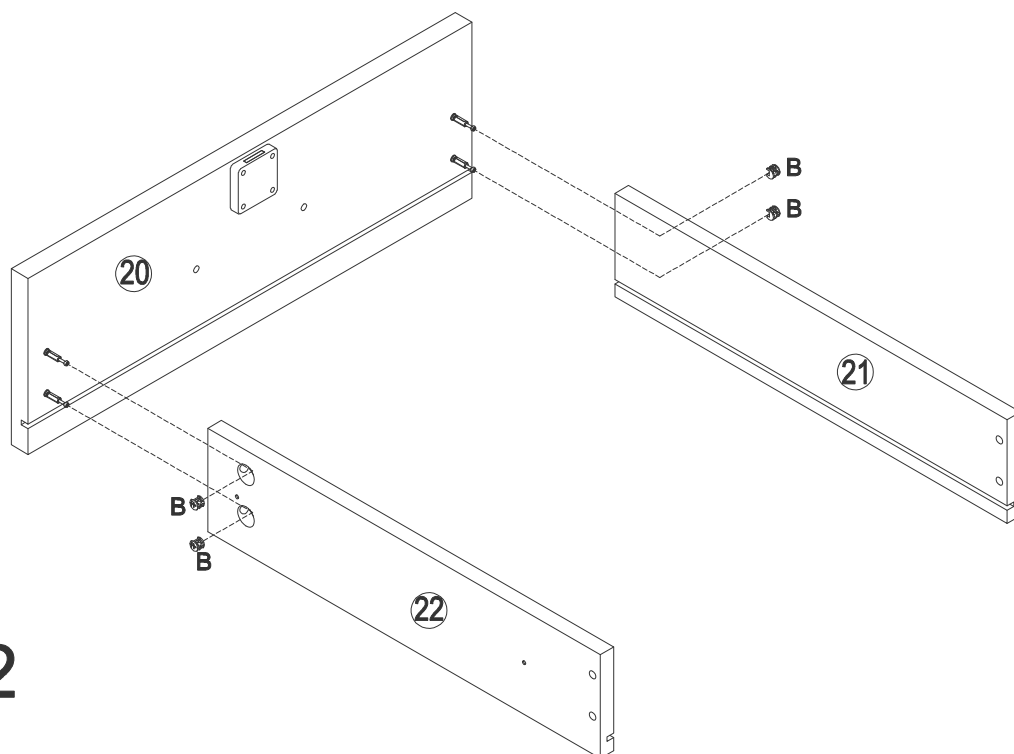

25

X 2

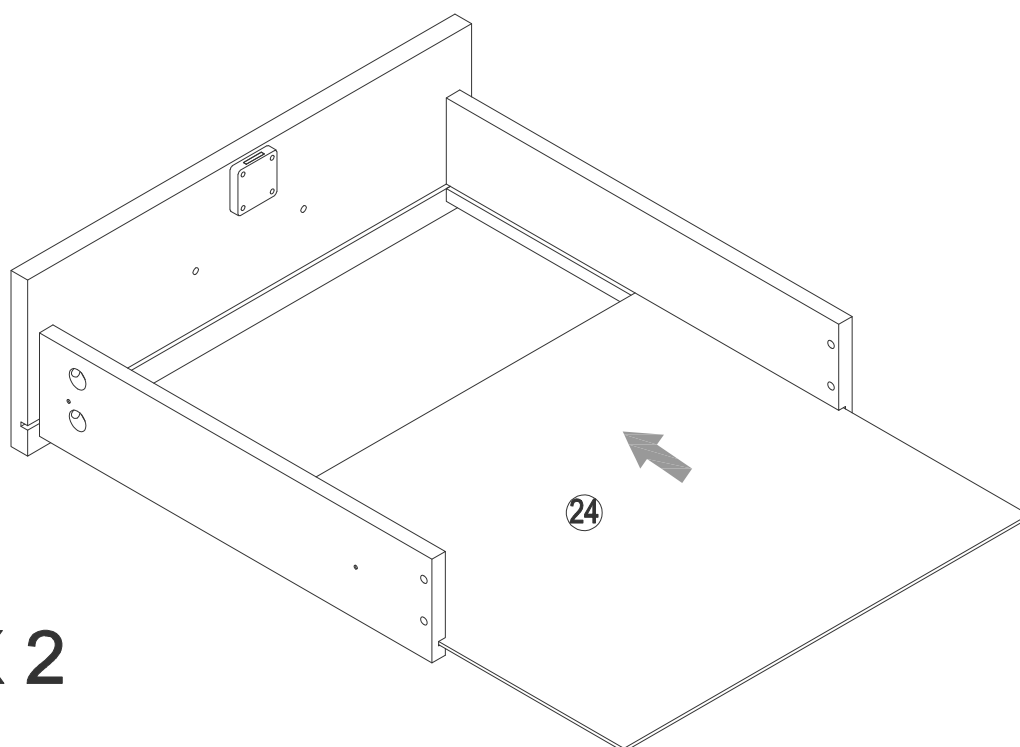




26

D M5x40



X 8

X 2

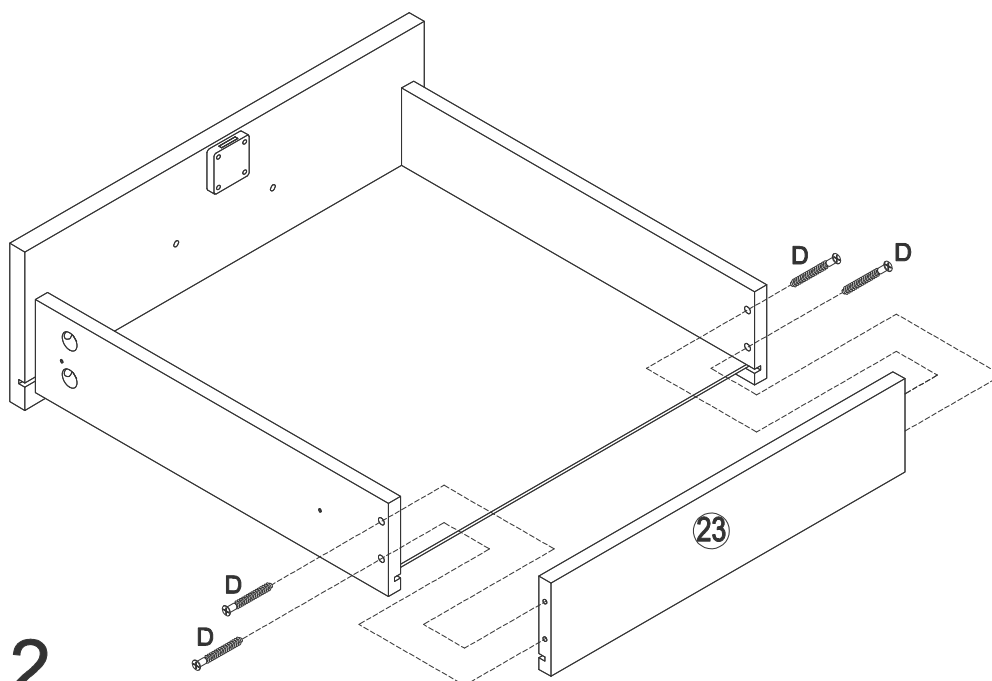


27


C M3.5x12



X 8

X 2

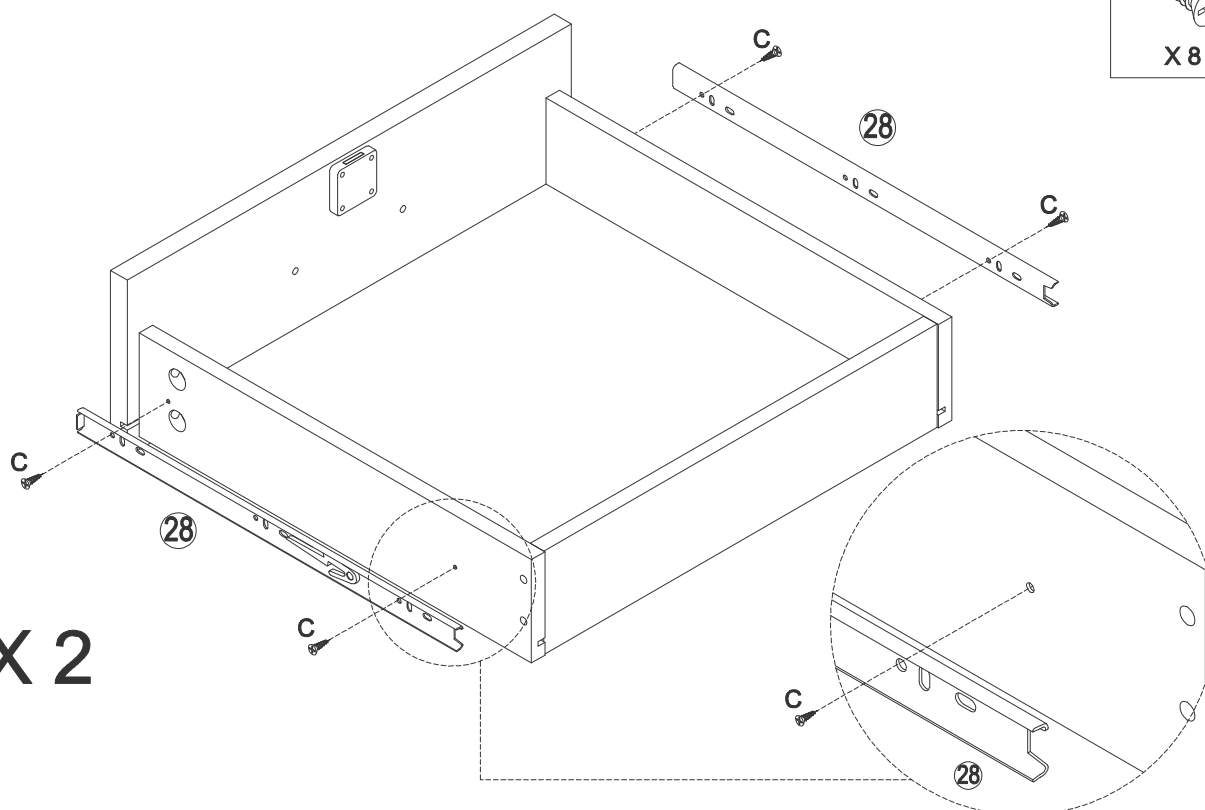


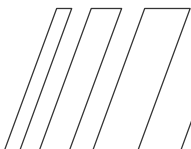


P.21

28

A M5x42



X 2

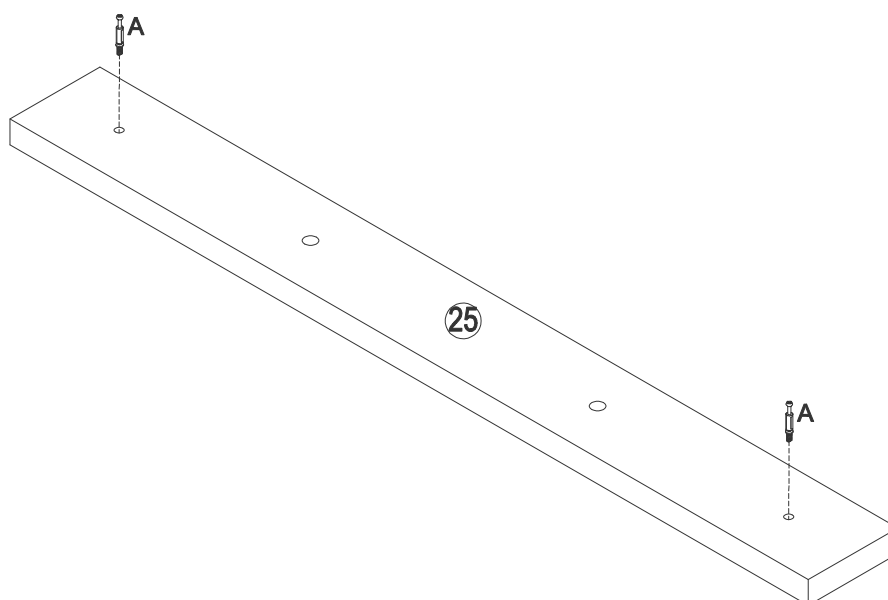

29

B Ø15x10





X 2

H Ø8x40



X 2

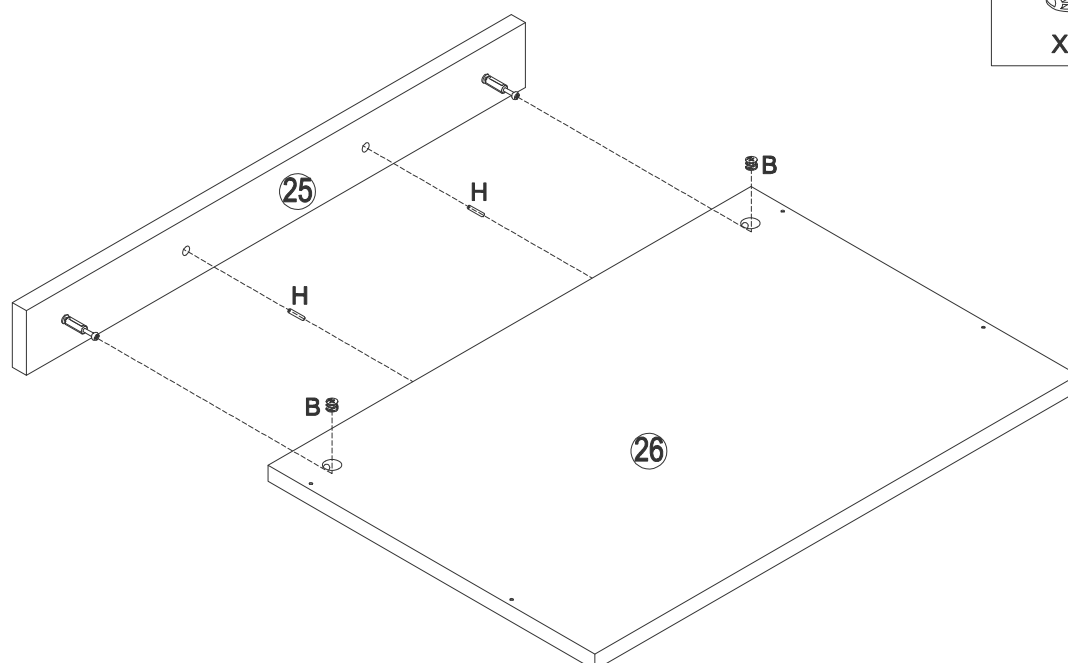

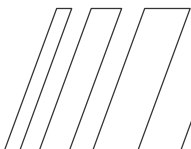


P.22

30



C M3.5x12




X 4


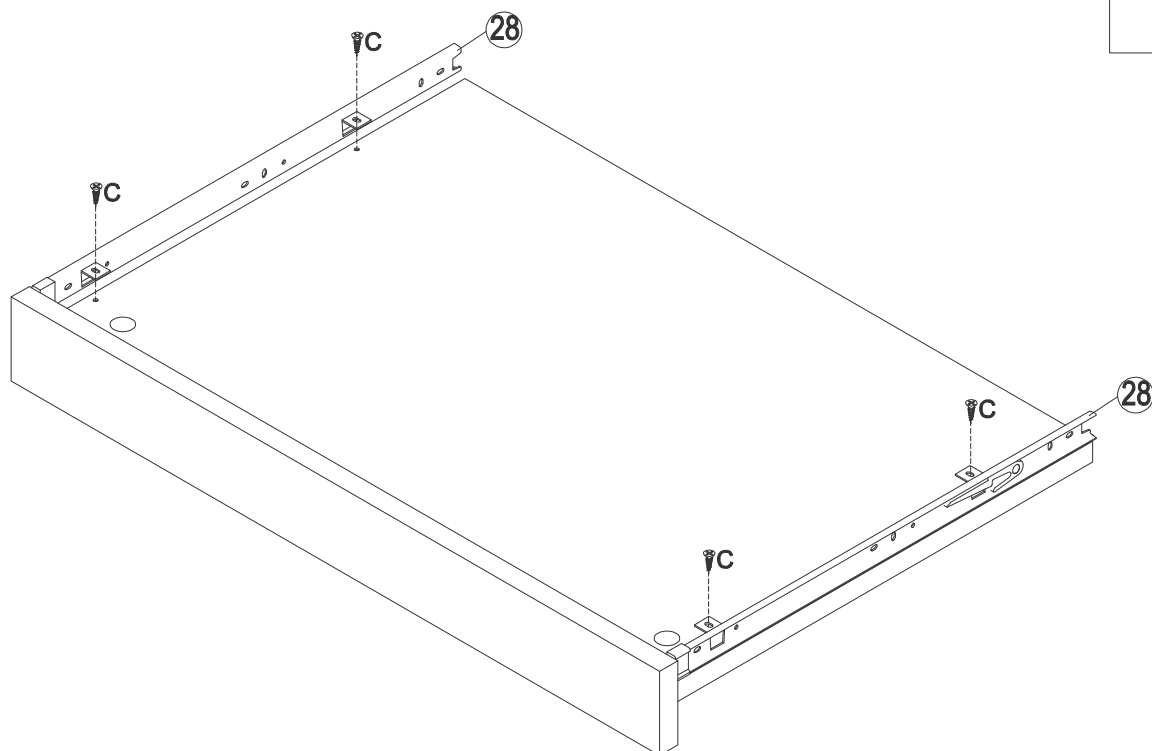



31

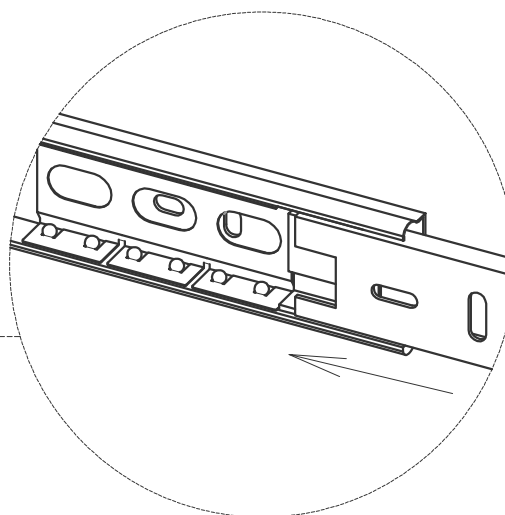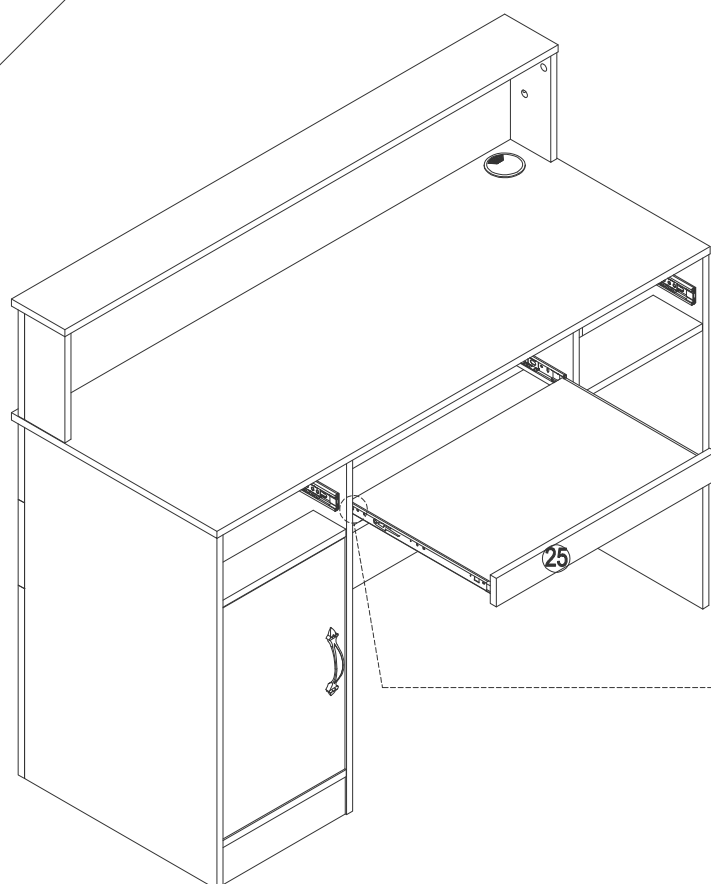

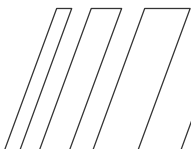

32

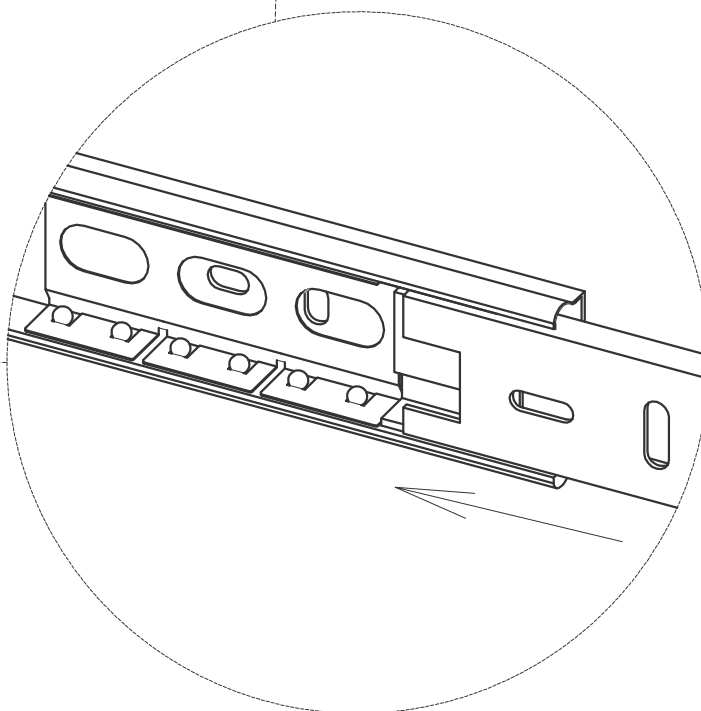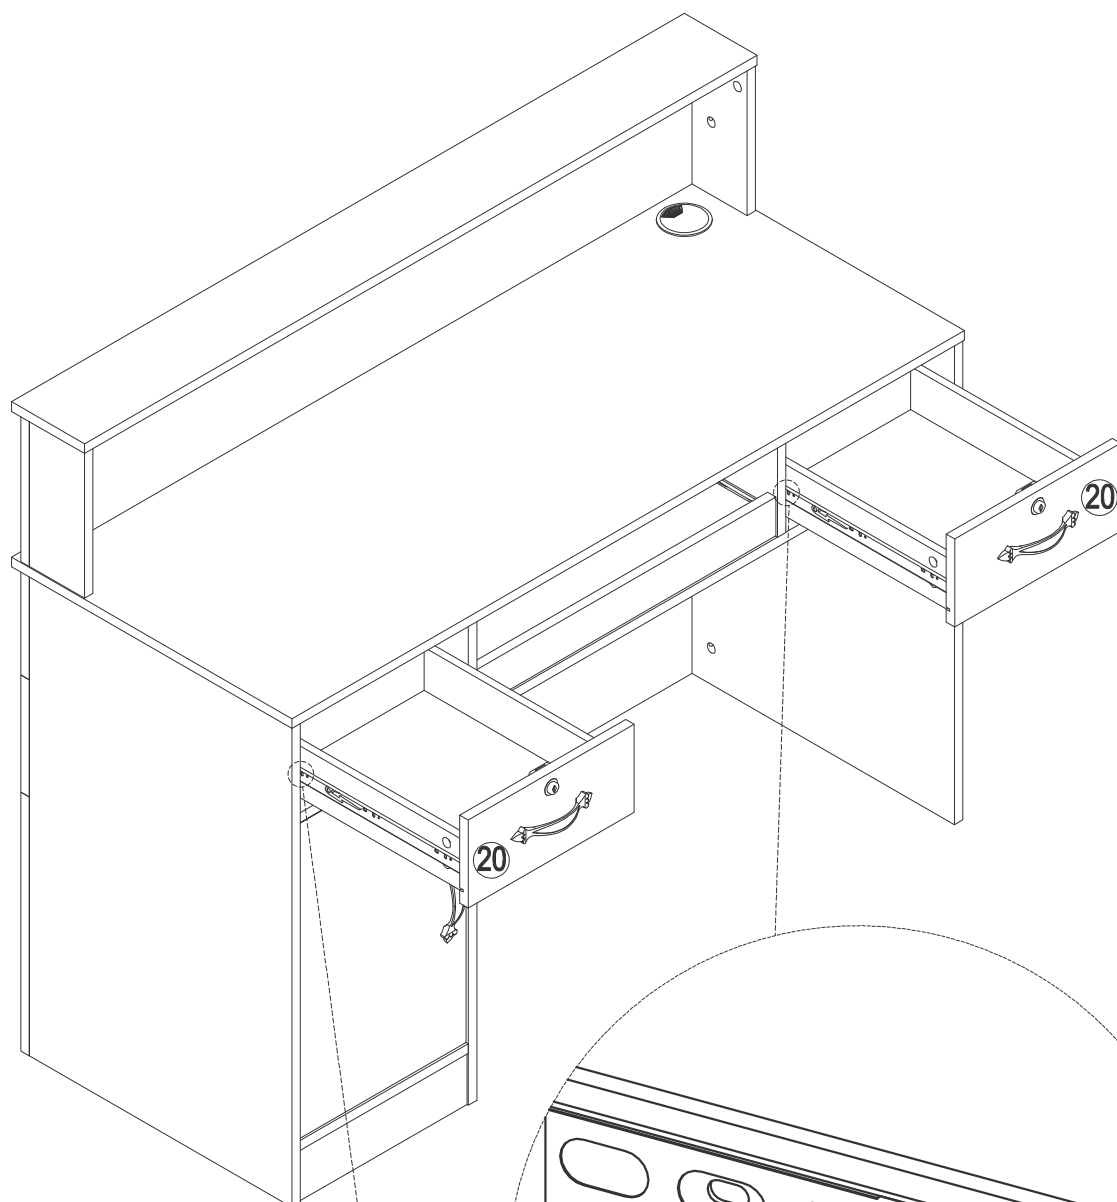

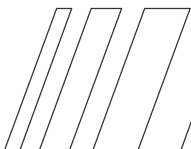

33

0



X 8

