




В		Right Armrest (with Leg)	1
С		Left Armrest (with Leg)	1
D		Foot Rest	1
E		Seat Panel	1
<u>Hardware</u>			
Label	Picture	Description	QTY
1		Bolt (M6*15mm)	9
2		Bolt (M6*35mm)	9
3		Bolt (M6*60mm)	3
4		Washer	19
5		Сар	19
6		Allen Key	1

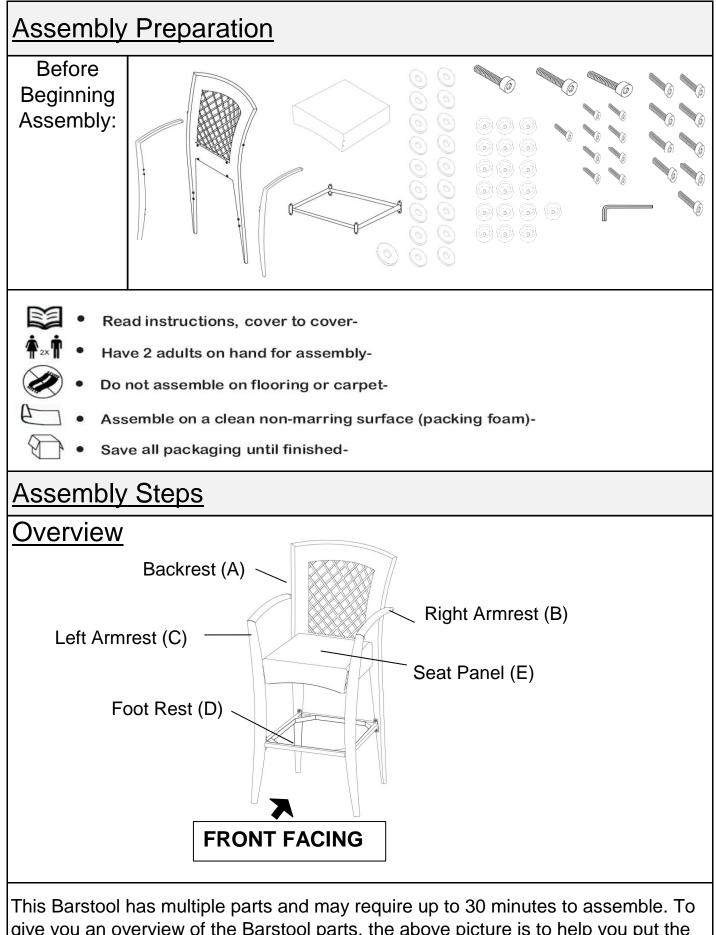


give you an overview of the Barstool parts, the above picture is to help you put the various parts into perspective. Please read through the instructions below to familiarise yourself with the parts and steps before assembly.

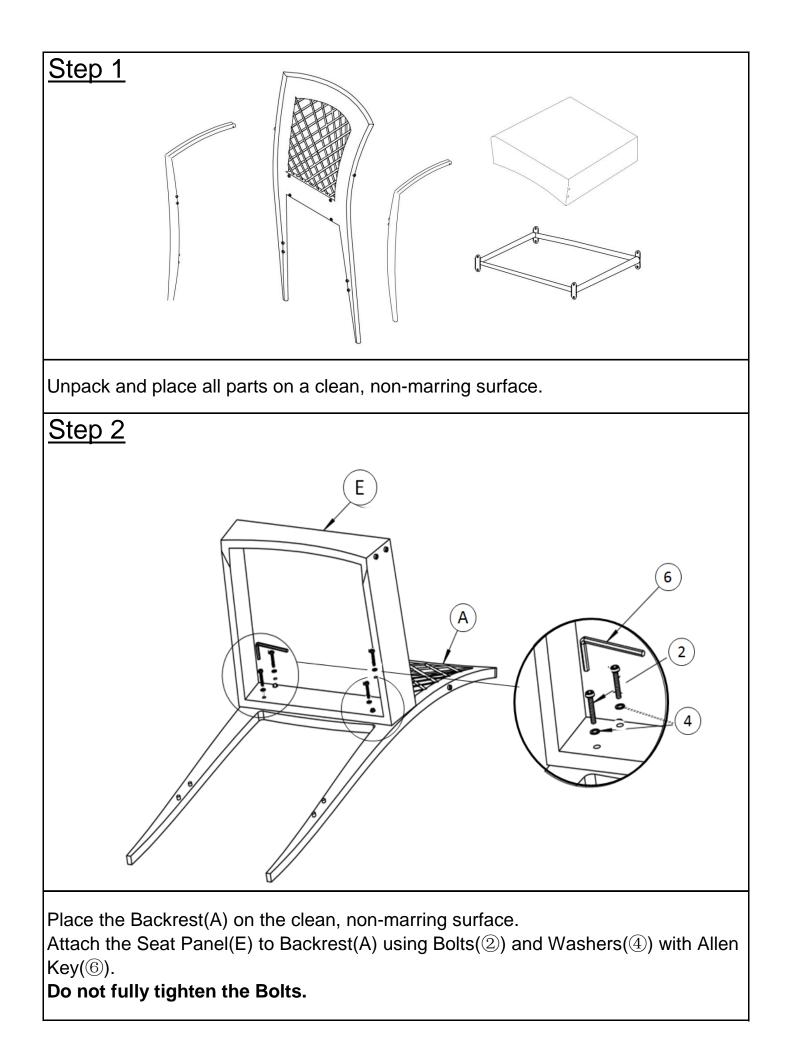

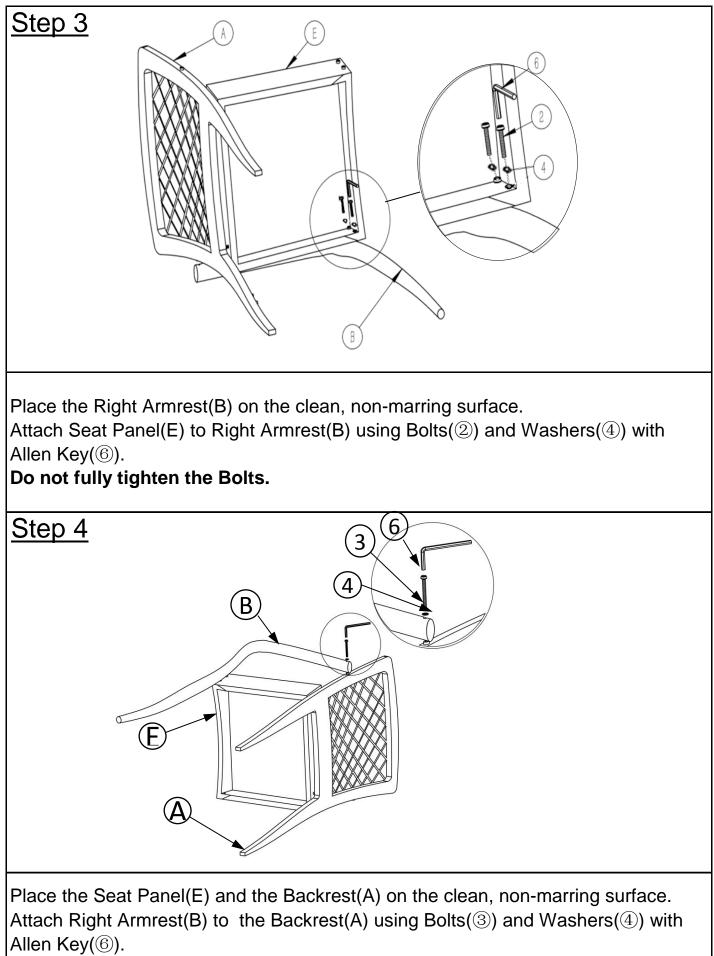

Do not fully tighten the Bolts.


<u>Step 5</u>

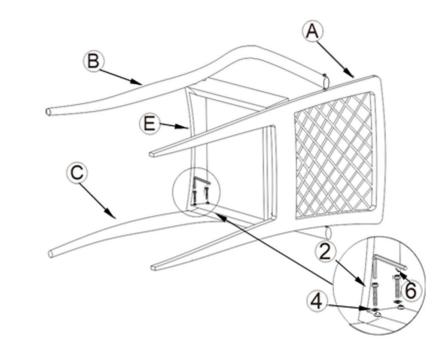

Place the Left Armrest(C) on the clean, non-marring surface.


Attach Left Armrest(C) to the Seat Panel(E) using Bolts(2) and Washers(4) with Allen Key(6).


Do not fully tighten the Bolts.

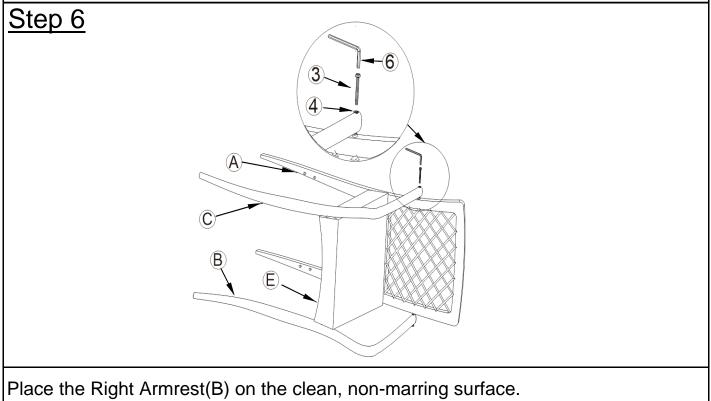

Attach Left Armrest(C) to the Backrest(A) using Bolts(③) and Washers(④) with Allen Key(⑥).

Do not fully tighten the Bolts.

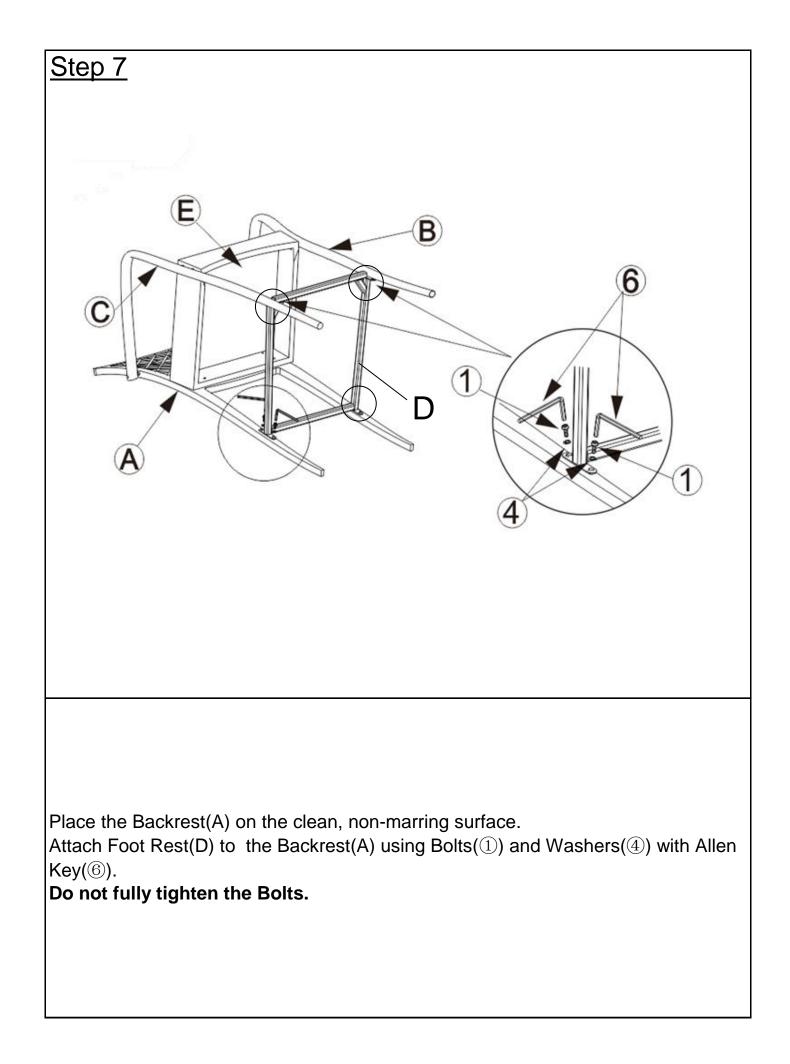

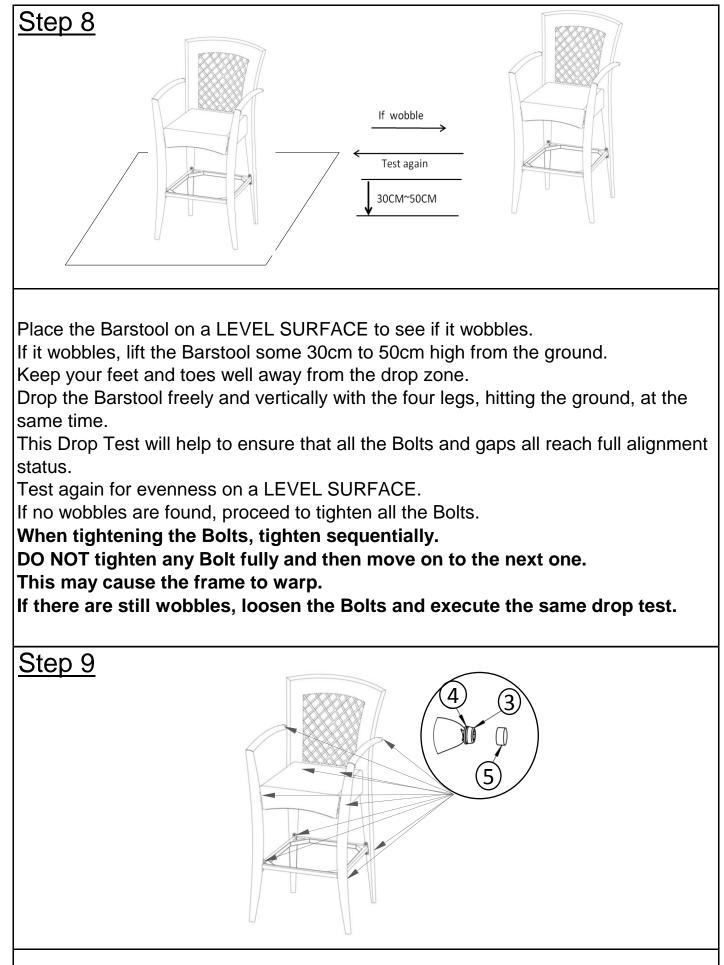

Cover the Bolts with Caps(5) by hand.

<u>Step 10</u>

Your Barstool is ready for use.

This Barstool can only be used on a flat, level surface.

Care & Maintenance

