



Ideas To Make Life Easy.™

NOTE - check for any damage that may have occurred during shipping or handling. Report any damage immediately. Return the liner to the bath after inspection.

1. Framing Pocket Construction

See Figure 2 Pocket Dimensions

CAUTION:

It is possible for squeaking to develop if this base is installed over a sub floor other than plywood. In order to prevent this squeaking, a pad such as roofing felt should be placed between the base and sub-floor.

2. Plumbing Installation

The supply line to the tub spout and valves should be located before the unit is installed. Locate the drain line and trap using dimensions shown in Figure 2.

Install waste and overflow fittings in openings provided in the bath in accordance with fitting manufacturer's instructions. Determine the drain and overflow required by using the dimensions shown.

3. Bath Installation

- Cut ledger strips and install as shown.
- Move bath into the framing pocket. Make sure the bath is level and the ledger strips on all three sides are in contact with the unit. Cut out the protector from the carton and place it into the bath.
- Optional Apron Installation: While holding the apron from the bottom, slide it up into position. Push the apron back to contact the floor blocks (see figure 2). With large head roofing nails, nail end flanges to studs.
- Attach the tie down clips to the framing studs. Attach the clips with large head roofing nails driven into the studs. Refer to Figure 2.
- Silicone sealant may be used to finish the joint between the unit and the drywall. Apply sealant after wall finish has been applied.

Model V-OV-6042-HG

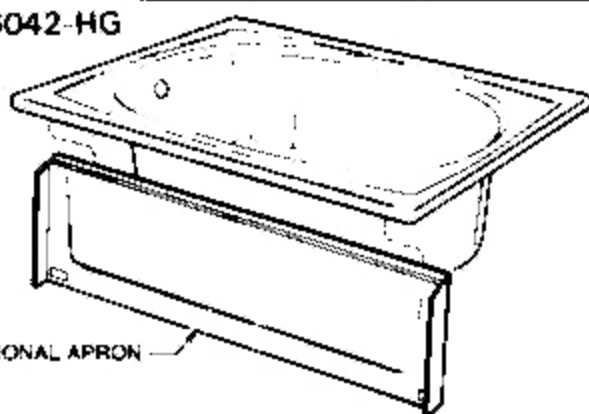


Figure 1

4. Island Installation

- Prepare framing structure using dimensions as shown in Figure 3.
- Lower bath into framed structure—make sure the feet are firmly on the floor and the bath's rim is in contact with the structure completely.
- Attach the bath to the structure by using the tie down clips. Screws are not provided. Refer to figure 2 for clip position.

5. INITIAL CLEANING

Remove loose dirt and debris from unit. Soak base/tub in warm, soapy water to loosen soil.

Drain unit, wash off any remaining dirt or stains with NON ABRASIVE multipurpose cleaner.

Remove asphalt tar, oil, base paint, ceramic adhesives and vinyl adhesive with Acetone, MEK (methyl ethyl Key tone), turpentine, xylene or toluene (available at hardware stores).

- These solvents should be applied as follows:

- Saturate a clean cotton cloth with the solvent, rub the soiled area lightly until clean.

- These solvents are highly flammable and should be used sparingly. Work in a well ventilated area, DO NOT SMOKE while using these solvents nor work near an open flame.

60" Oval Bath

High gloss surface
Model V-OV-6042-HG

Installation Instructions

- Solvents should not come in contact with plastic drains, faucet handles, nor be allowed to go down plastic drains, grates or fittings.

- Exercise extreme caution and keep out of reach of children.

6. REGULAR CLEANING


Sterling recommends the use of the following products for regular (weekly) cleaning of your image: Mikell feature Mr. Clean all purpose cleaner.

Top Job	Glass Plus
Fantastic	Spic N Span
Powder	

Warning: The use of abrasive cleaning agents can result in surface dullness or discoloration of the High Gloss Finish. Do not use cleaning agents which have an acid base.

All information in these instructions is based on latest product information available at time of publication. Sterling reserves the right to make changes at any time without notice.

STANDARD INSTALLATION

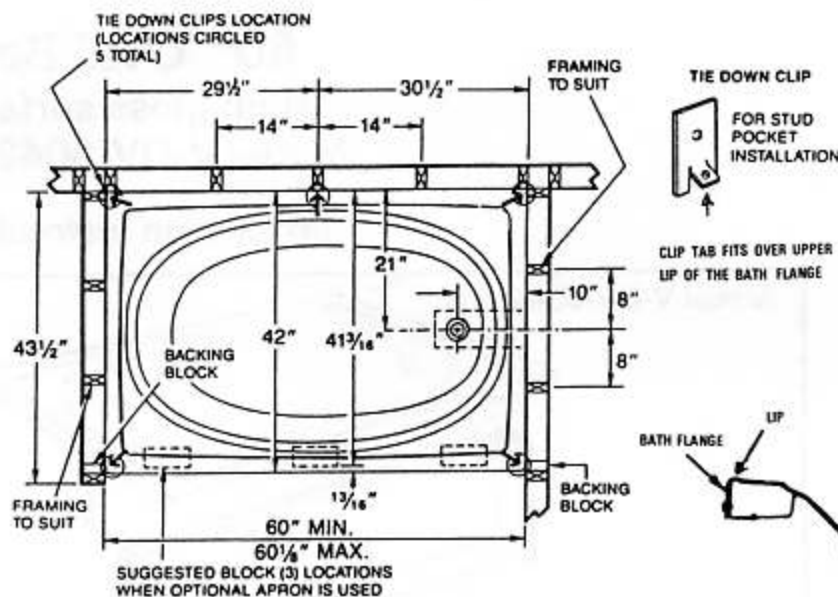

—NOTE—
TO AVOID LOSS OF WARRANTY, THE V—OV—6042-HG MUST BE INSTALLED ON A LEDGER STRIP INSTALL TO HIGHEST POINT ON SUBFLOOR TWO NAILS AT EACH STUD ARE REQUIRED. LEDGERS MUST BE USED ON ALL THREE SIDES OF THE BATH, NOT JUST THE BACK. THE BATH'S FEET MUST FIRMLY TOUCH FLOOR. SHIMS SHOULD BE USED. DO NOT INSTALL THE BATH OVER OPEN FLOOR JOISTS.

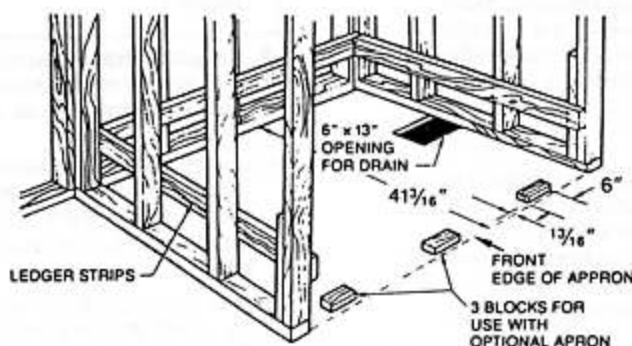
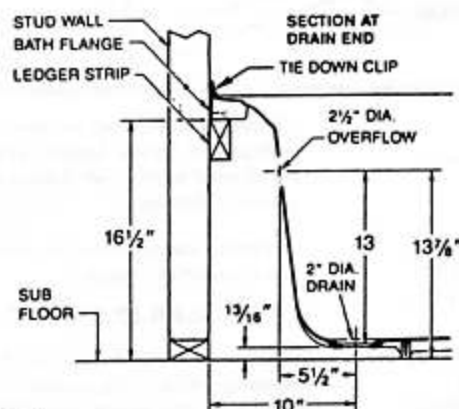
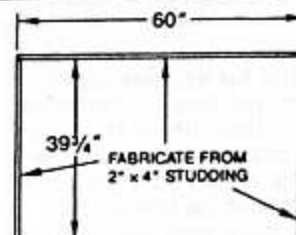


Figure 2


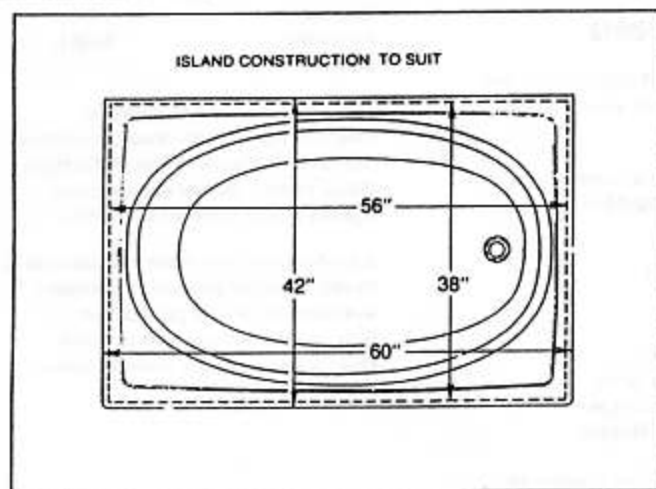


Figure 3

ISLAND OPENING SUPPORT DIMENSIONS

ISLAND INSTALLATION

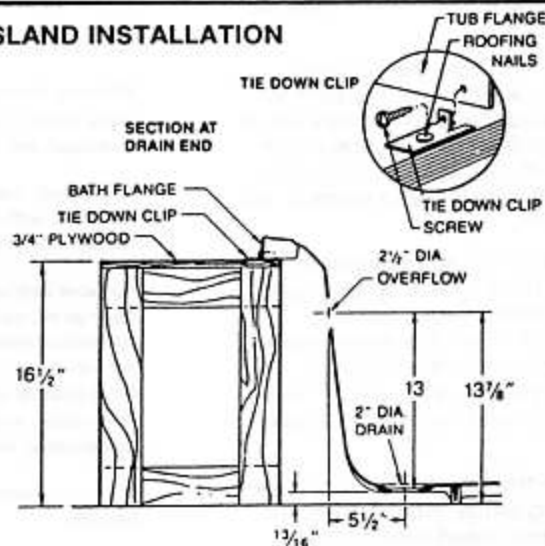

—NOTE—
This unit has been designed for right or left hand use. A front apron is also available as a separate item.

STERLING
A KOHLER COMPANY

Ideas To Make Life Easy.™

Pub. No. 9181

MADE WITH
SOLID VIKRELL
MATERIAL
SOLID IS BETTER™

Printed in U.S.A.

Kohler Company
444 Highland Drive
Kohler, Wisconsin 53044
1-888-STERLING
1-888-783-7546

78B5732

9/91 5/m