



Room to grow.



Assembly Videos

Contact Us



+1 (866) 597-1888



vegogarden.com



Vego Garden Academy



vego_garden



hello@vegogarden.com




Houston, TX



Manual for Modular Compost Bin








30"L x 30"W x 32"H

Copyright © 2024 Vego

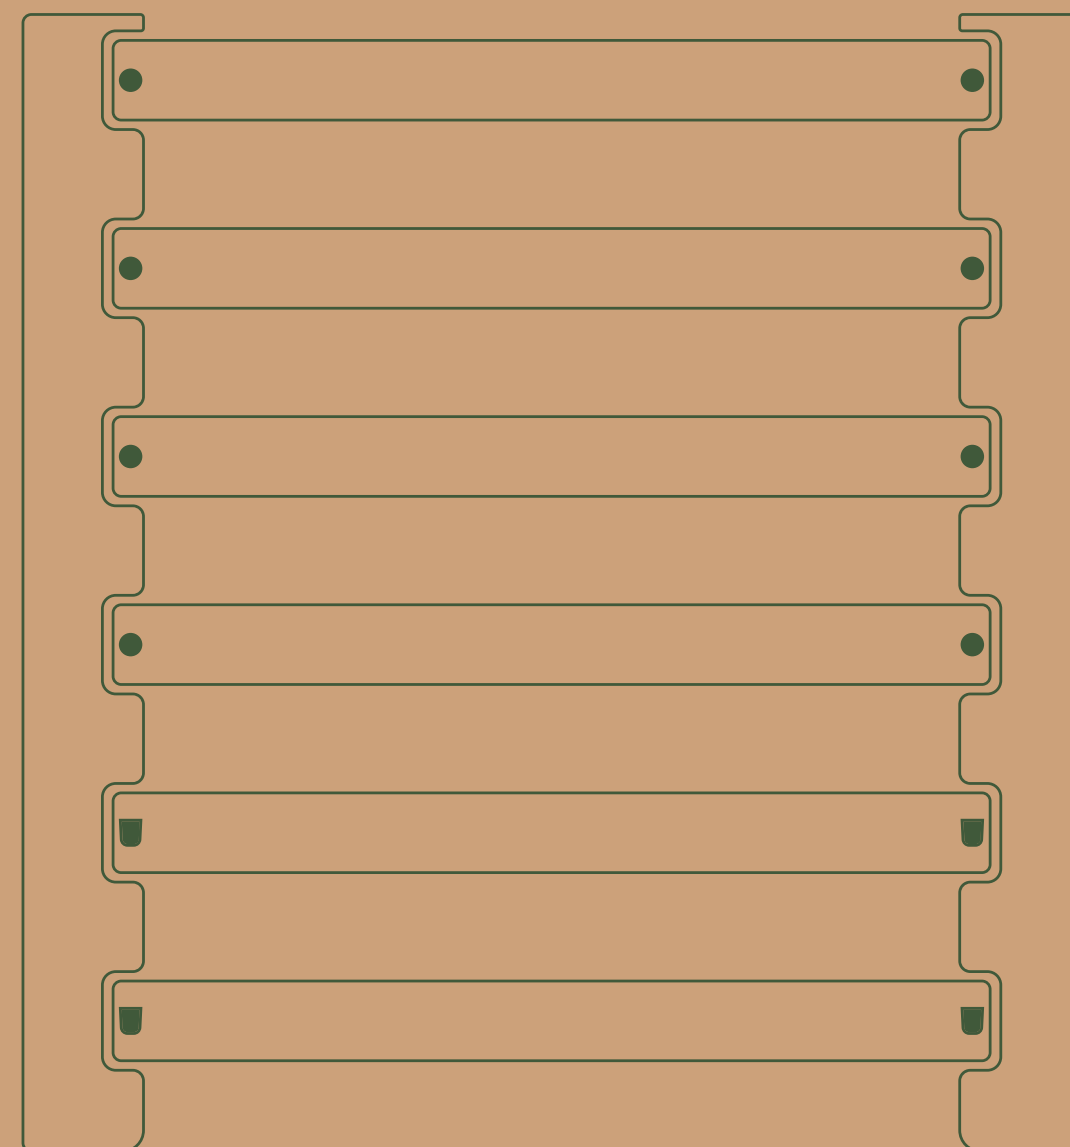


V 1.0 08-19-2024

Parts List

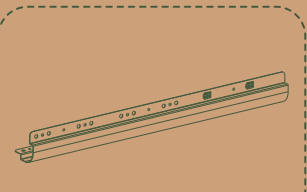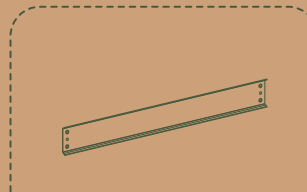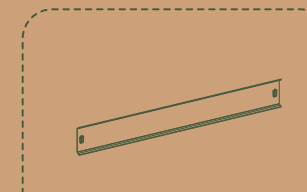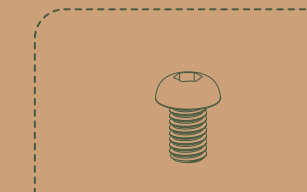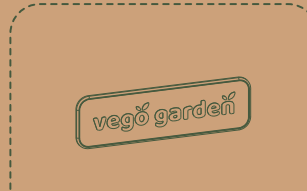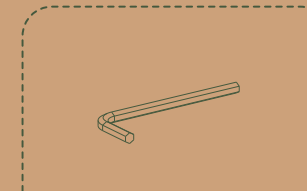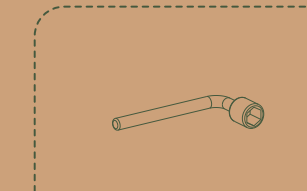 A1 Qty: 4	 B1 Qty: 16	 C1 Qty: 8	 F1A Qty: 32
 F1B Qty: 32	 Aluminum Logo Qty: 1	 LWA Qty: 1	 LWB Qty: 1

Assembly Guide


1 Connect A1 with four B1 pieces , and secure them in place with F1A and F1B.

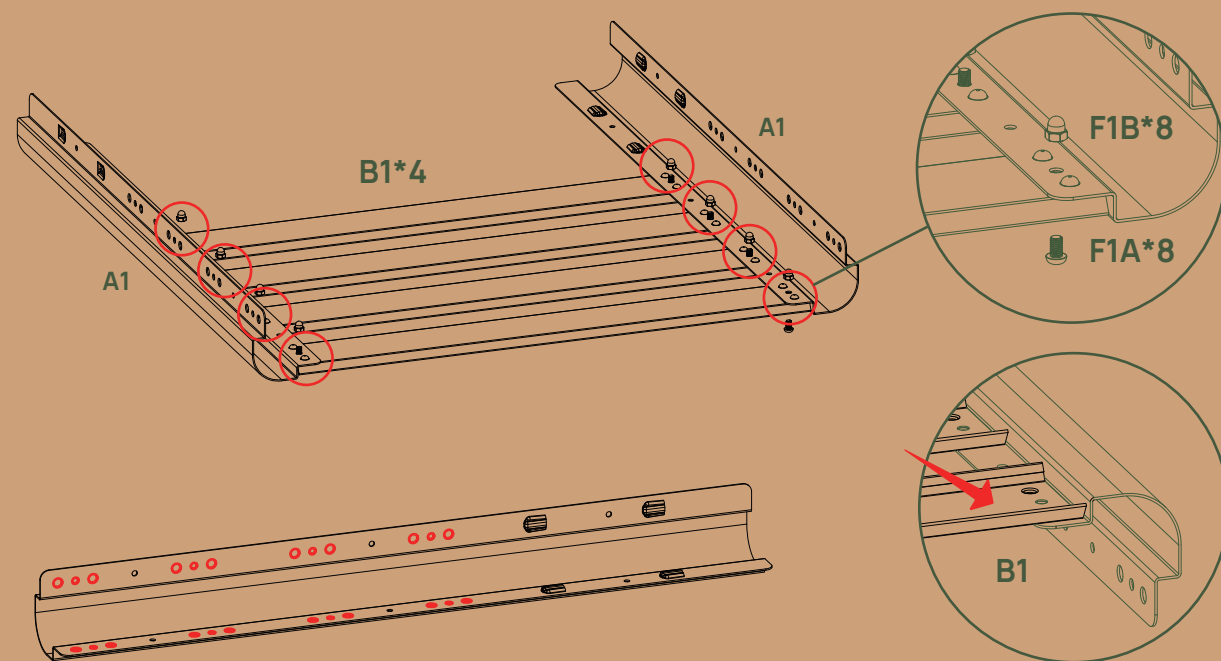


Install the slats in the areas marked in red.

Note: This side of the B1 should be facing outwards.


2 Connect the section completed in Step 1 with four B1 pieces on each side. Secure in place with F1A and F1B.

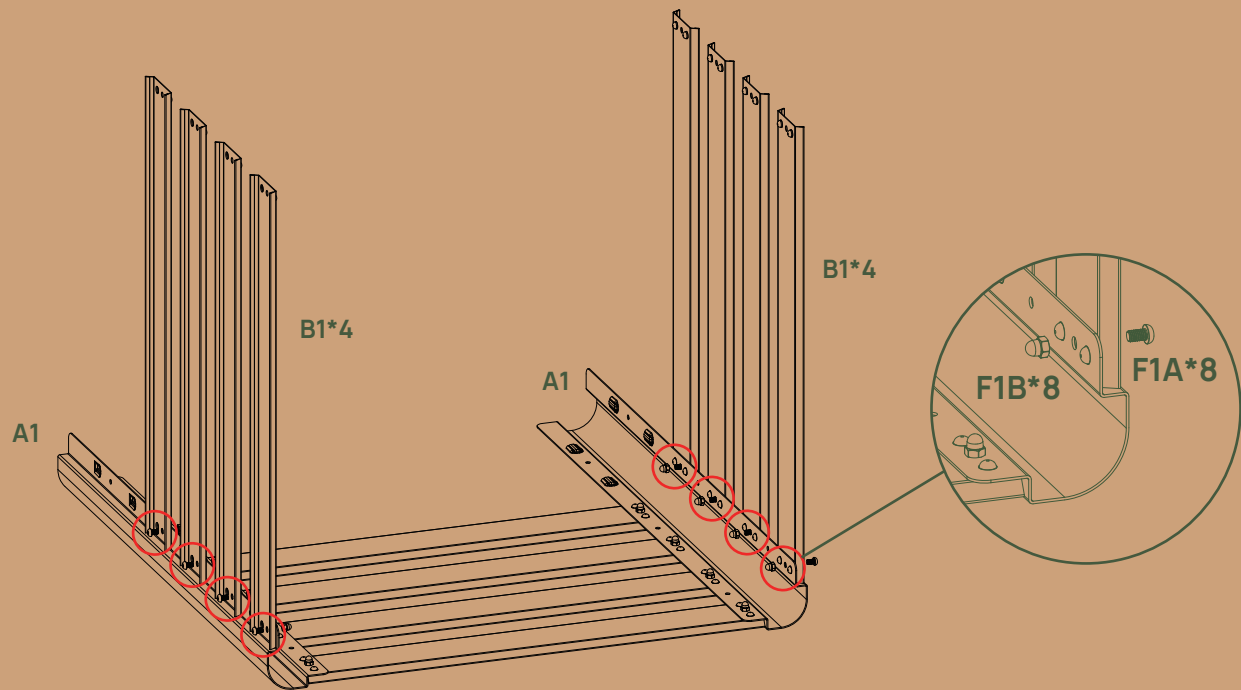


3 Connect A1 with the section completed in Step 2, and secure in place with F1A and F1B.

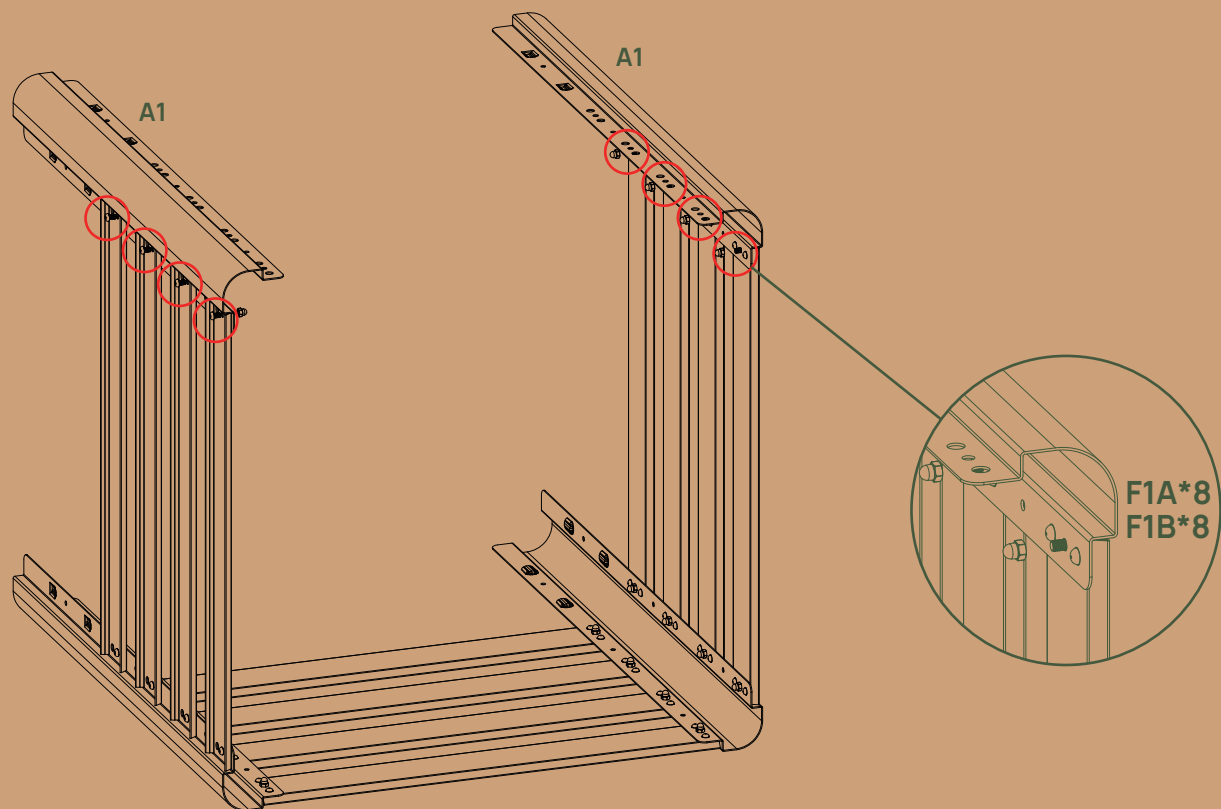


- 4** Connect the section completed in Step 3 with four B1 pieces. Secure in place with F1A and F1B.

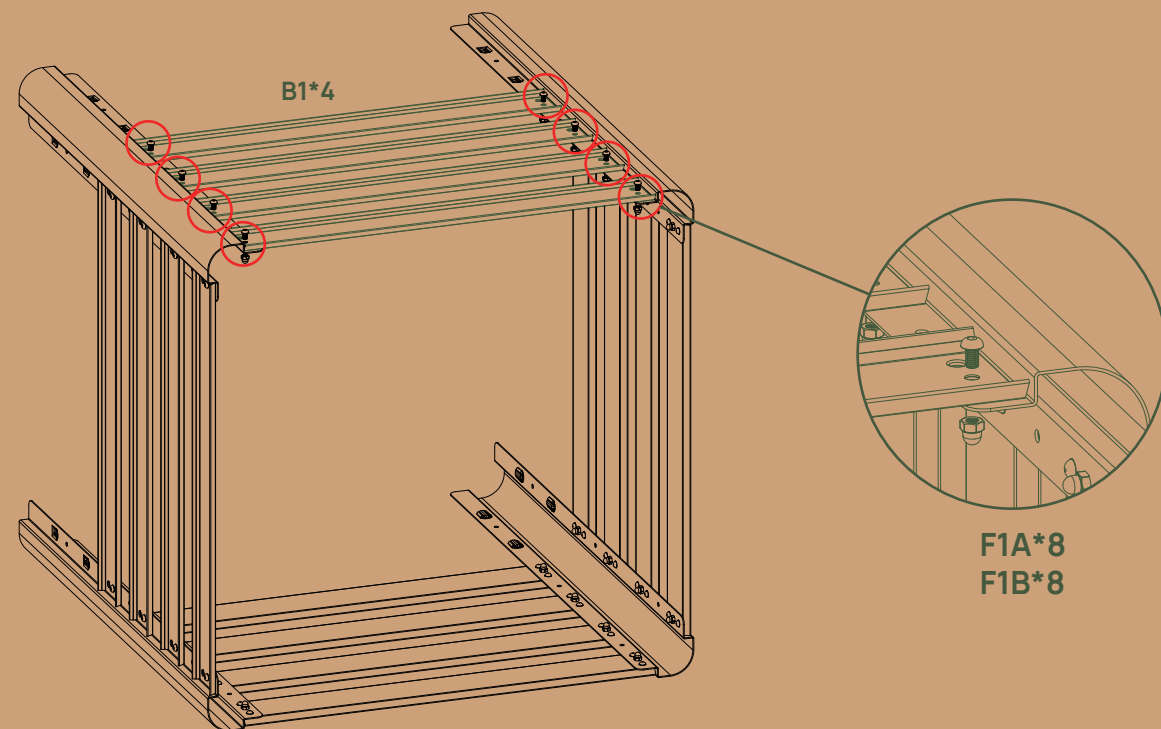


- 5** Insert C1 into the section completed in Step 4.

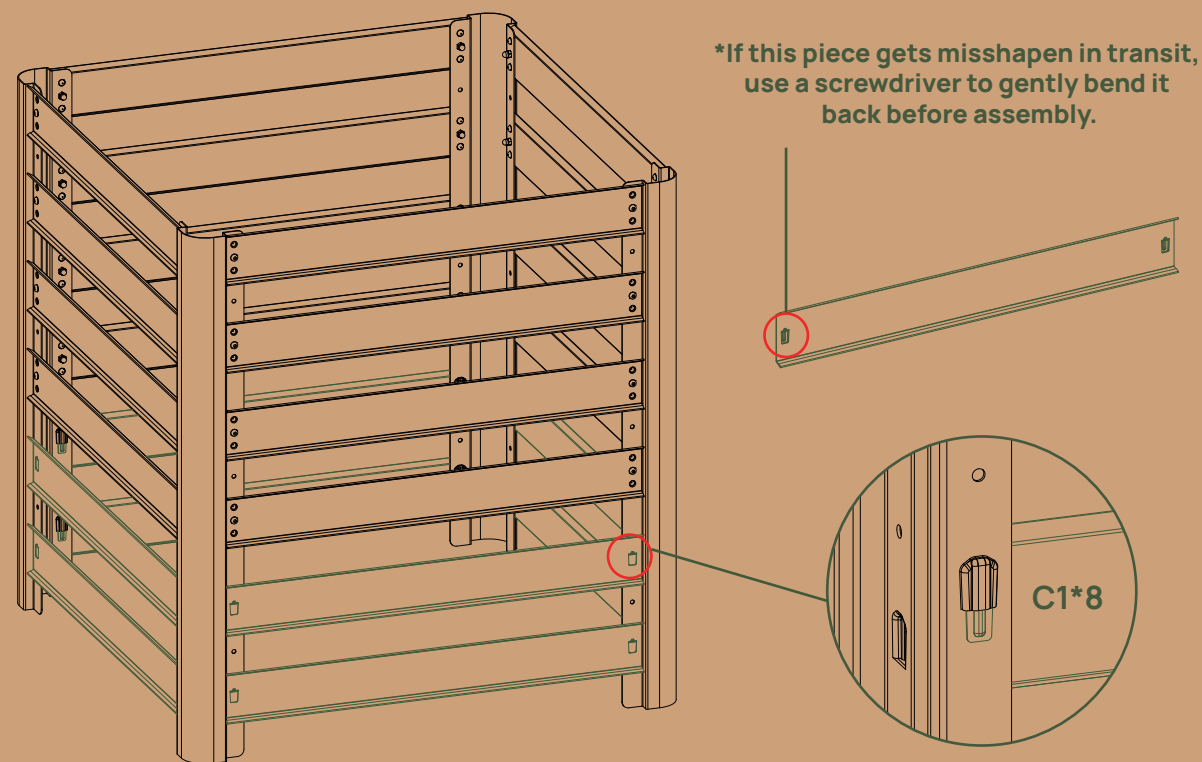

- 6** Tighten all the screws using LWA and LWB.

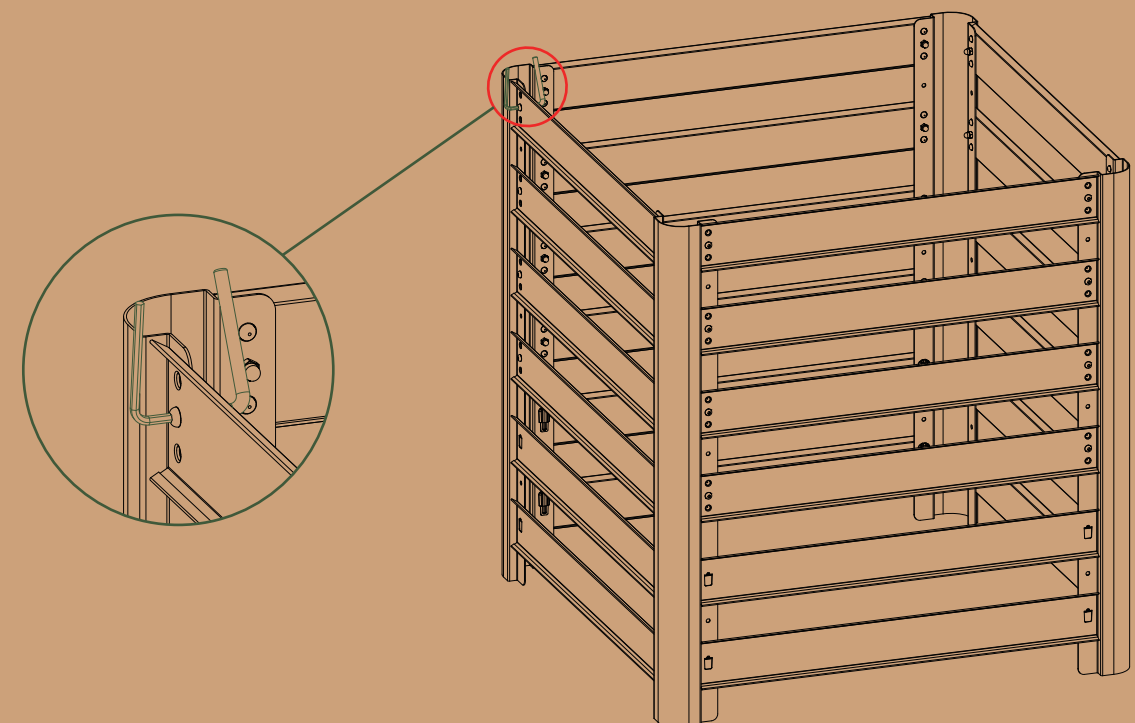

- 7** Remove the film from the back of the logo and affix it to your new Modular Compost Bin!

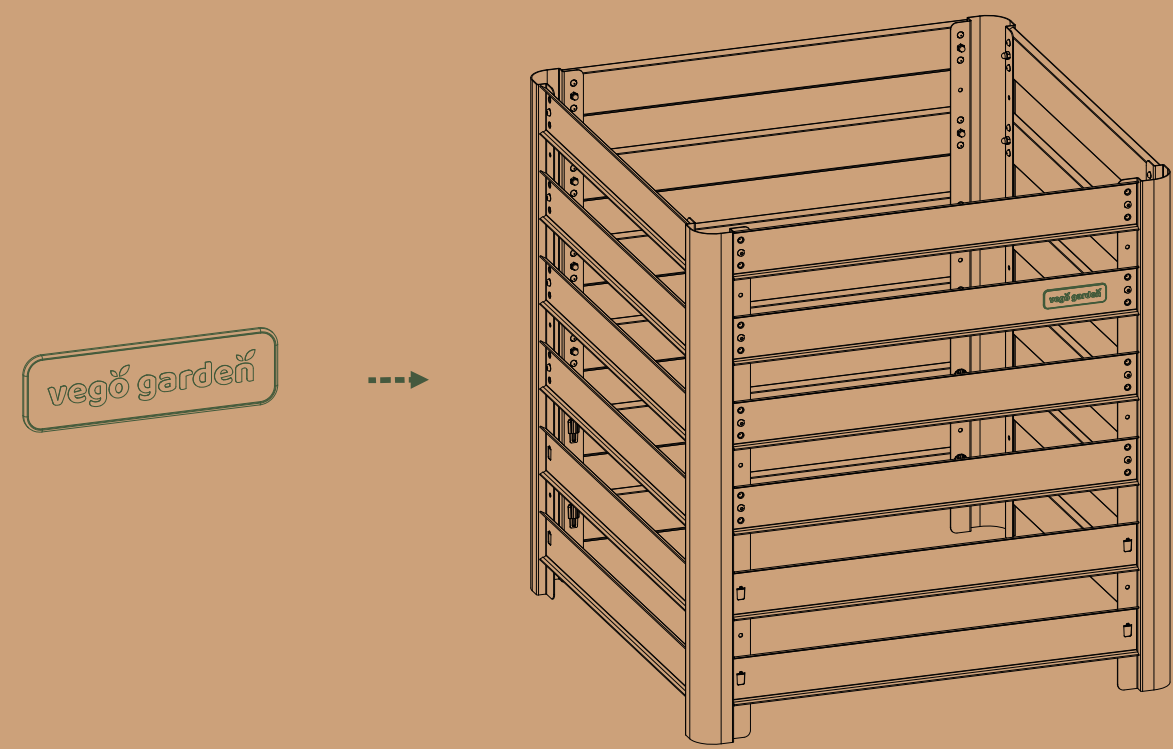



Extracting the Finished Compost

Pull upwards to remove two slats, and remove the compost with a shovel.
Then, secure the slats back into place.

