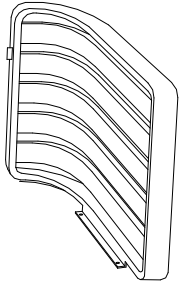
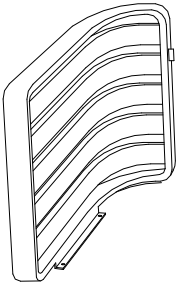
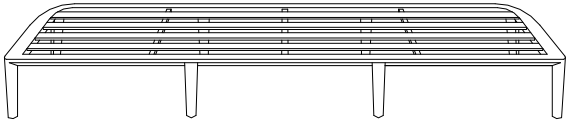
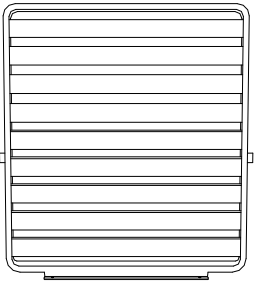
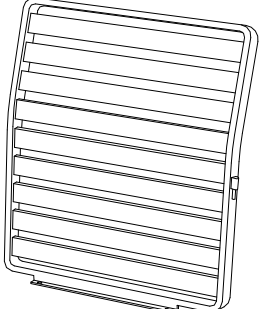


INSTRUCTION MANUAL








Hello! Please read these important attentions...

Please put a thick carpet on the ground to protect the furniture finish and corners. During the installation process, **DON' T** fasten screws tight 100% at a time.



Assembly Instructions

| No. | COMPONENT | DESCRIPTION | QTY |
|-----|---|---------------|-----|
| A |  | LEFT ARMREST | 1 |
| B |  | RIGHT ARMREST | 1 |
| C |  | SEAT FRAME | 1 |
| D |  | BACK FRAME 1 | 1 |
| E |  | BACK FRAME 2 | 2 |

Assembly Instructions

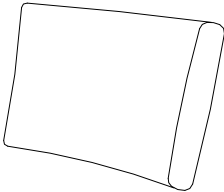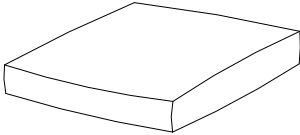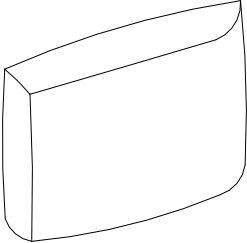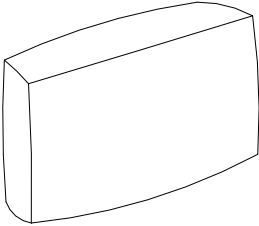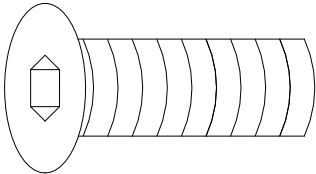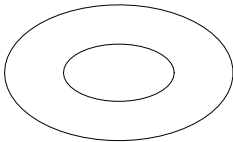
| No. | COMPONENT | DESCRIPTION | QTY |
|-----|---|--------------------------|-----|
| F |  | BACK CUSHION | 3 |
| G |  | SEAT CUSHION | 3 |
| H |  | LEFT ARMREST CUSHION | 1 |
| I |  | RIGHT ARMREST CUSHION | 1 |
| J |  | 1/4" x 18 mm BOLT | 10 |
| K |  | Ø6.5 x 1.0 mm WASHER | 10 |
| L |  | HEX BOLT DRIVER | 1 |

Assembly Instructions

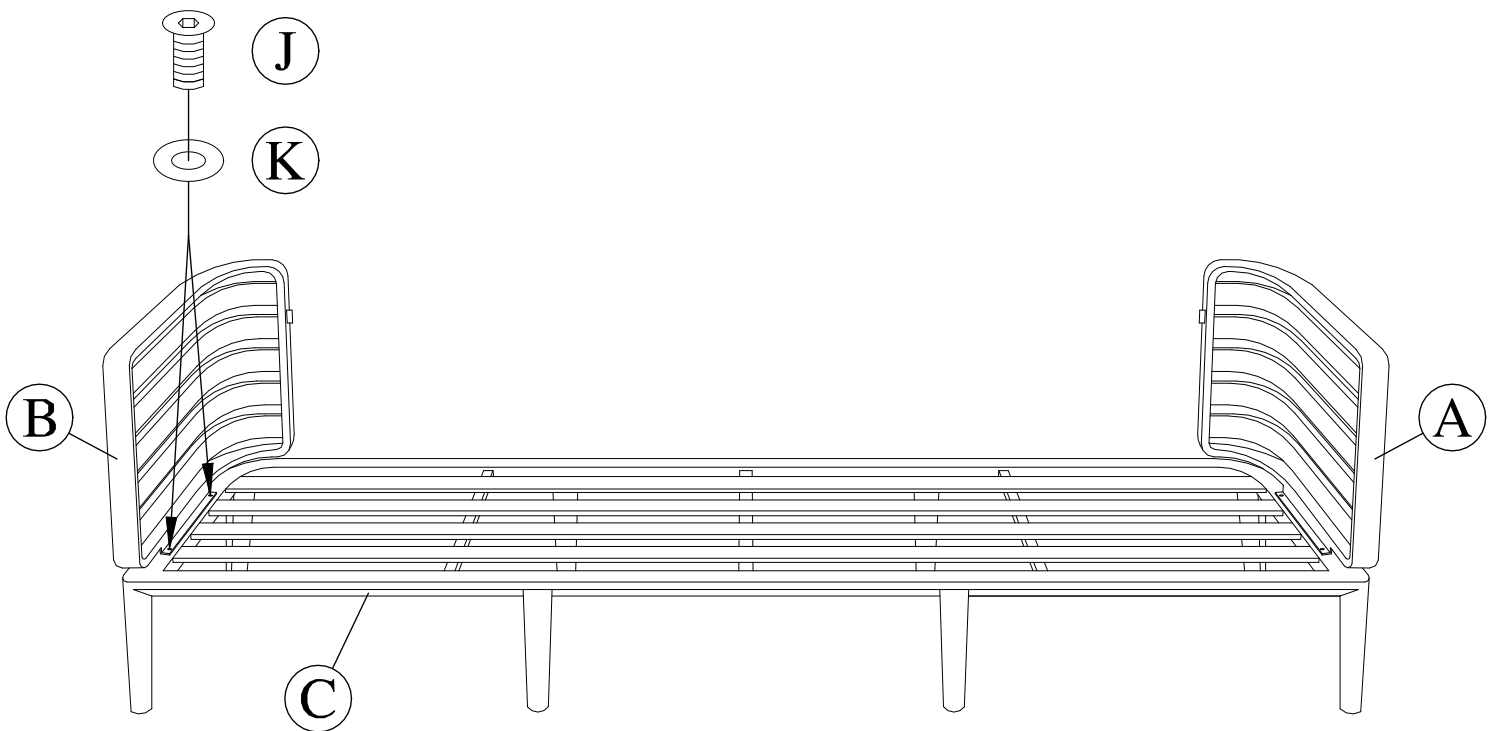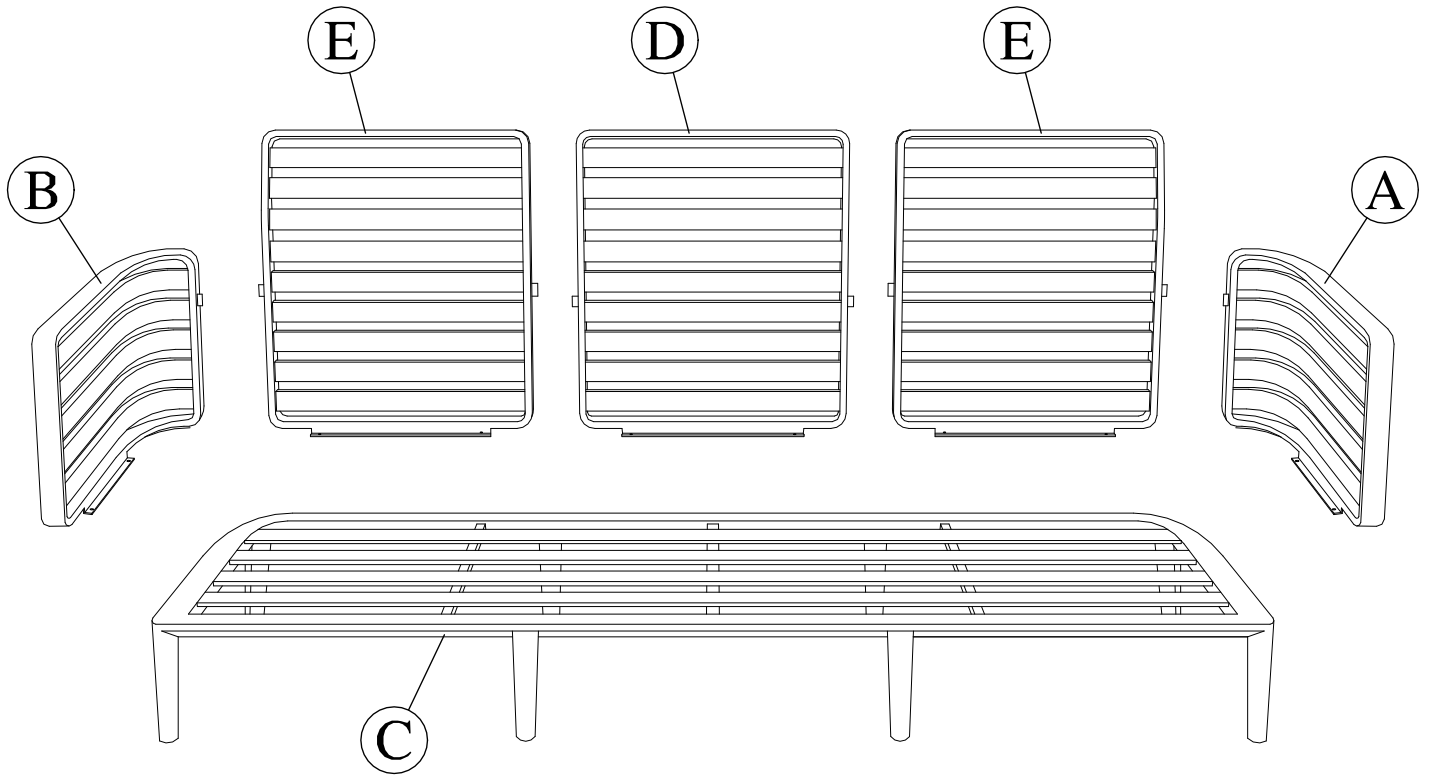


Step 1: Insert 1/4"x18mm bolt(J) and washer(K) through the holes in the left & right armrest(A&B) and the seat frame(C). Repeat for the rest holes in the frame.

Assembly Instructions

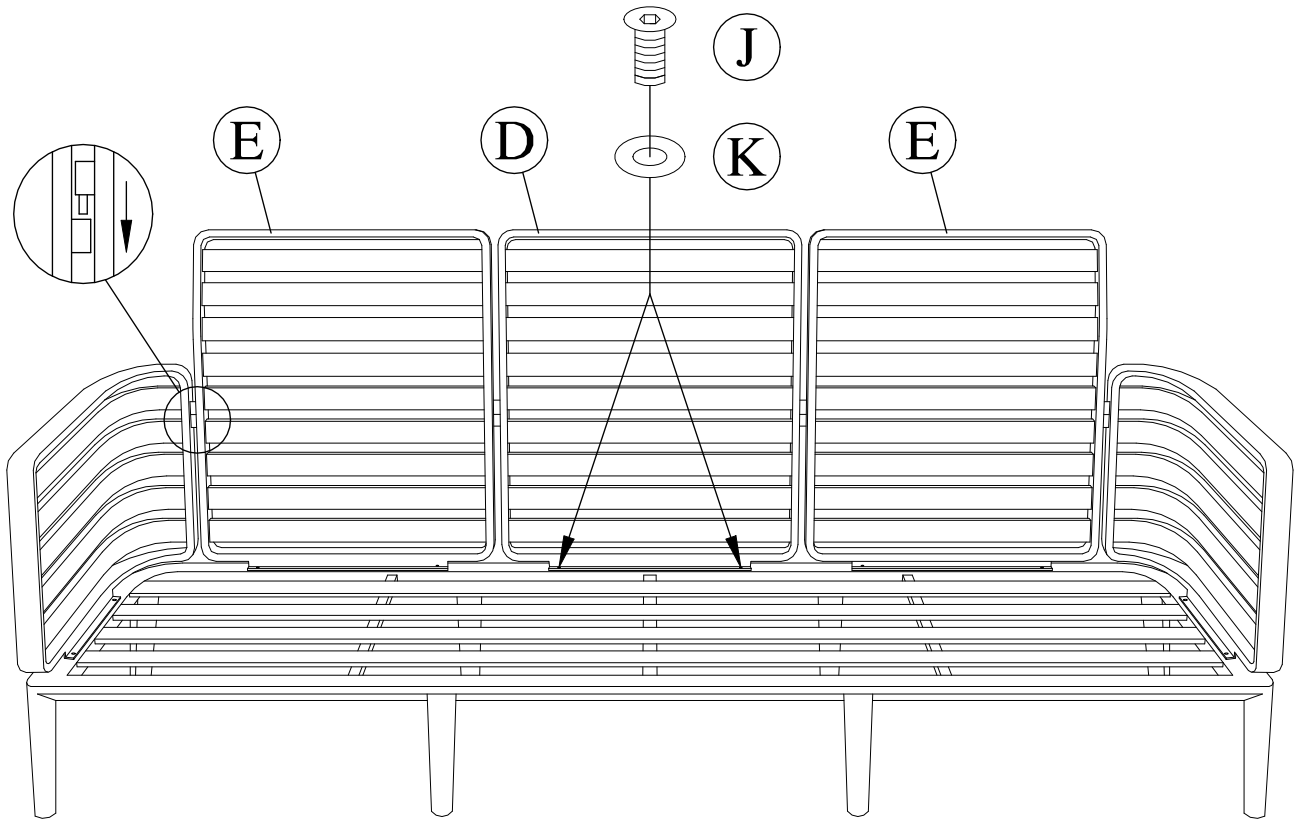

Step 2: Insert 1/4"x18mm bolt(J) and washer(K) through the holes in the back frame(D&E) and the seat frame(C). Repeat for the rest holes in the frame.

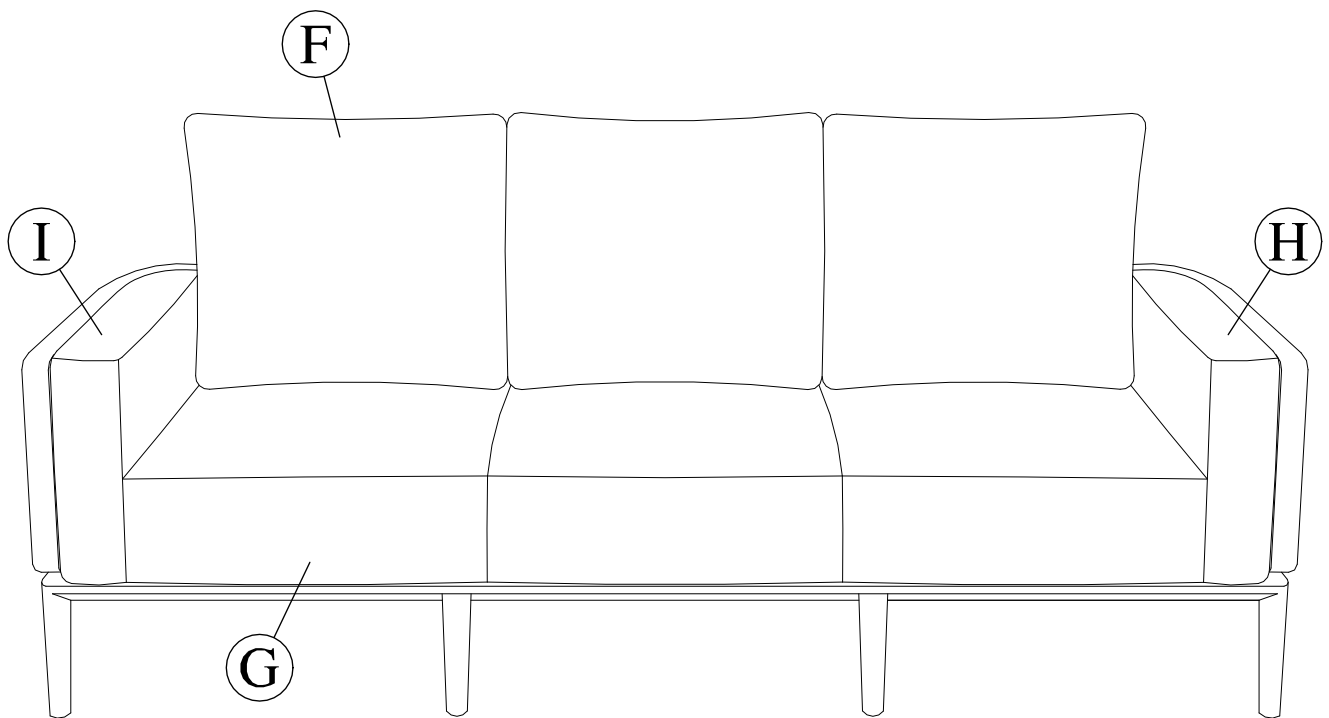

Step 3: Tighten all the bolts completely. Your chair should be ready for use.

