


ASSEMBLY INSTRUCTIONS

40" DOUBLE DROP LEAF TABLE


- * PLACE ALL WOODEN PARTS ON A CLEAN AND SMOOTH SURFACE SUCH AS A RUG OR CARPET TO AVOID THE PARTS FROM BEING SCRATCHED.
- * BEFORE YOU BEGIN, KINDLY FOLLOW THE ASSEMBLY INSTRUCTIONS STEP BY STEP.
- * DO NOT TIGHTEN ALL SCREWS UNTIL THE PRODUCT IS FULLY SET-UP.

PARTS LIST			HARDWARE LIST		
NO	DESCRIPTION	QTY	NO	DESCRIPTION	QTY
1	TABLE TOP 26" X 40"	1PC	A	JCBC BOLT M6 X 60MM	8PCS
2	LEAF TOP	2PCS	B	FLAT WASHER	8PCS
3	TABLE LEG	4PCS	C	SPRING WASHER	8PCS
			D	M4 ALLEN KEY	1PC
4	RUNNER RAIL	4PCS	E	M3.5 X 16mm CHIPBOARD SCREW	12PCS

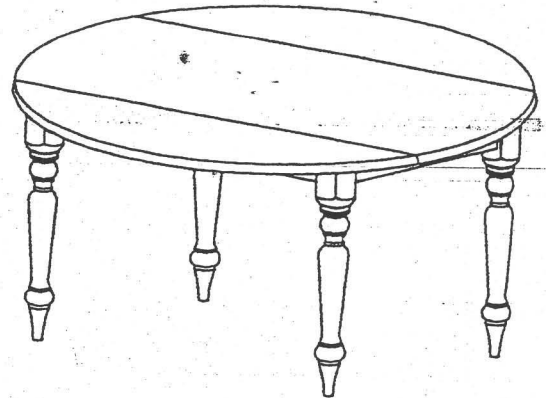


Fully Set-Up


STEP 1

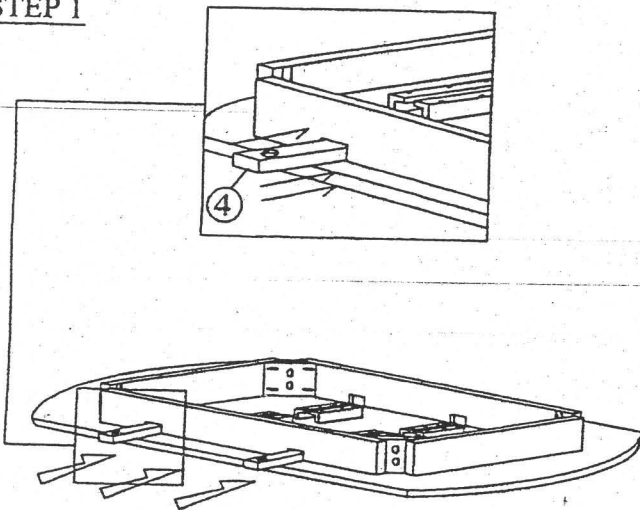


STEP 2

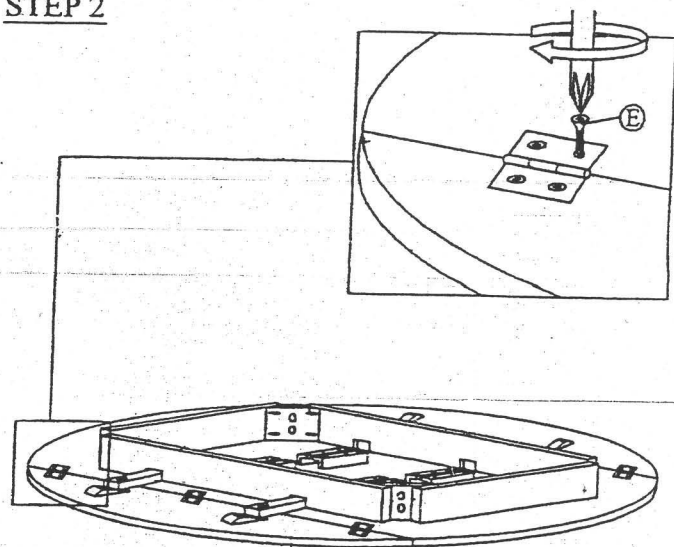


STEP 3

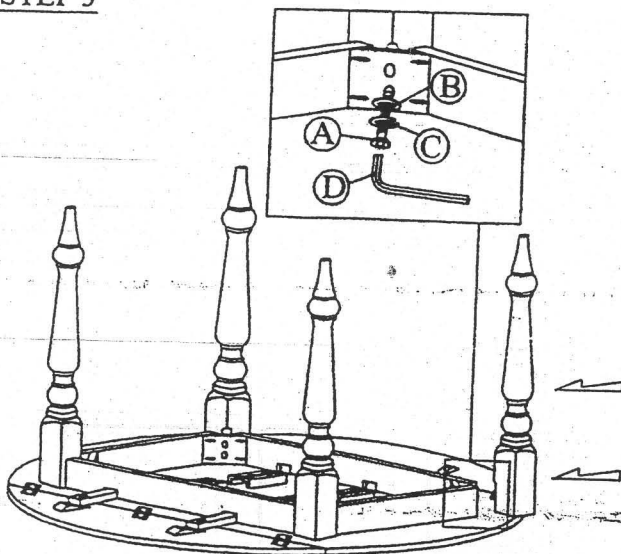



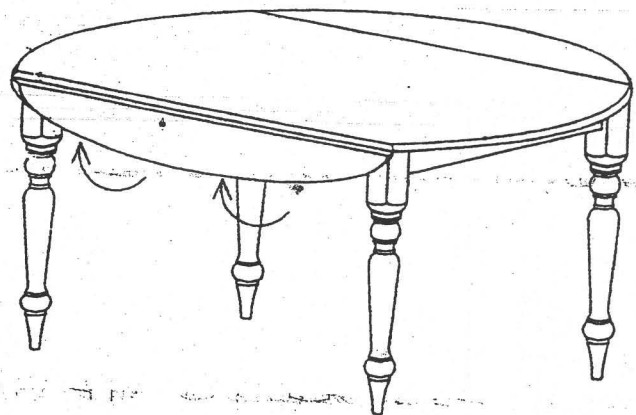






STEP 4

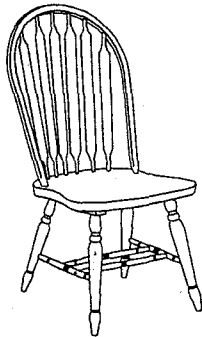

Model : Arrowback Windsor Chair




No.	Parts List (1 Chair)	Qty.
P1.	 Seat	1 pc.
P2.	 Leg Frame	2 pcs.
P3.	 Front Stretcher	1 pc.
P4.	 Back Stretcher	1 pc.

No.	Hardware List (1 Chair)	Qty.
H1.	 M4 Allen Key	1 pc.
H2.	 M7 x 40 JCBC-W Screw	6 pcs.
H3.	 M6 x 50 JCBC Screw	2 pcs.
H4.	 Barrel Nut	2 pcs.
H5.	 Wood Button	2 pcs.


STEP 1

Assemble Front Stretcher (P3) & Back Stretcher (P4) to the Leg Frame (P2). Fix it by using Barrel Nut (H4) and JCBC Screw (H3) as shown. Then tighten it up with Allen Key (H1).
*Do not fully tighten the screw until final step.

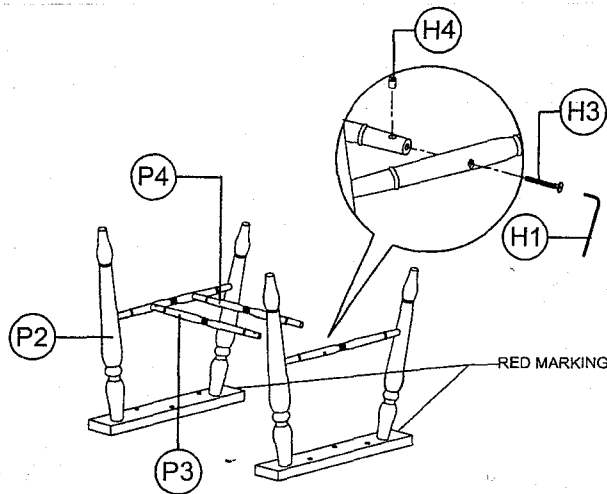


STEP 2

Assemble the Leg Frame to the Chair Seat (P1) with JCBC-W (H2). Then tighten it up with Allen Key (H1). **RED MARKING** on the Leg Frame should facing **BACK**

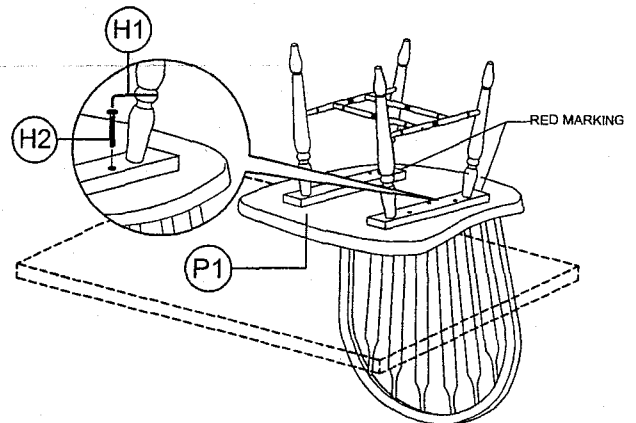


STEP 3

Pull the back legs inwards to ensure full connection between Leg Frame (P2) and Front Stretcher (P3).

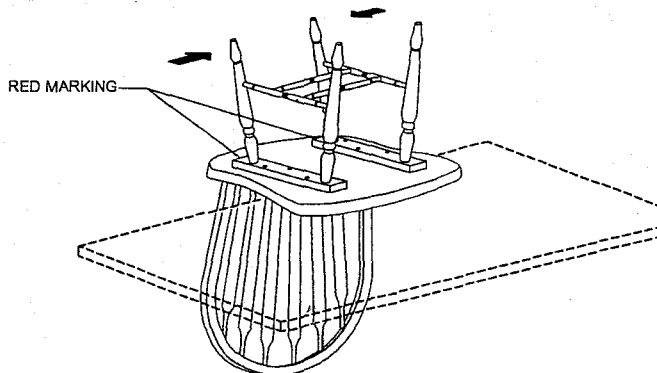






STEP 4






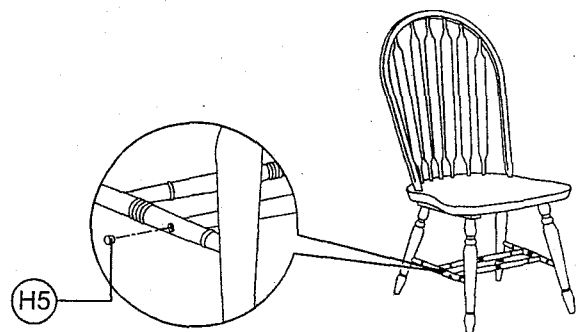Make sure all legs are level. Once level, tighten up all the screws. Cover the screw holes with Wood Button (H5).

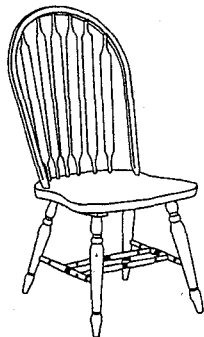

Model : Arrowback Windsor Chair




No.	Parts List (1 Chair)	Qty.
P1.	 Seat	1 pc.
P2.	 Leg Frame	2 pcs.
P3.	 Front Stretcher	1 pc.
P4.	 Back Stretcher	1 pc.

No.	Hardware List (1 Chair)	Qty.
H1.	 M4 Allen Key	1 pc.
H2.	 M7 x 40 JCBC-W Screw	6 pcs.
H3.	 M6 x 50 JCBC Screw	2 pcs.
H4.	 Barrel Nut	2 pcs.
H5.	 Wood Button	2 pcs.


STEP 1

Assemble Front Stretcher (P3) & Back Stretcher (P4) to the Leg Frame (P2). Fix it by using Barrel Nut (H4) and JCBC Screw (H3) as shown. Then tighten it up with Allen Key (H1).
*Do not fully tighten the screw until final step.

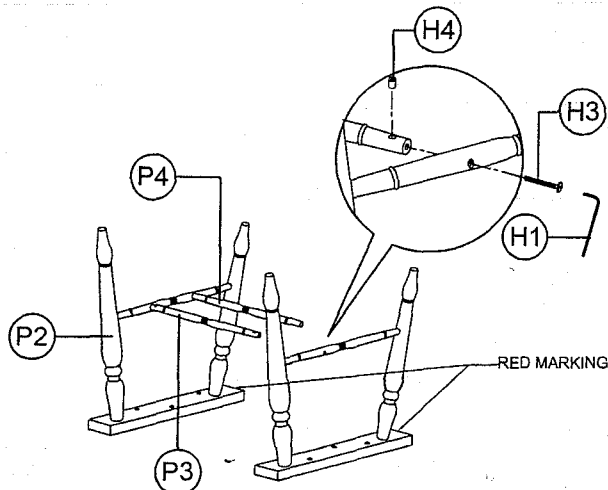


STEP 2

Assemble the Leg Frame to the Chair Seat (P1) with JCBC-W (H2). Then tighten it up with Allen Key (H1). **RED MARKING** on the Leg Frame should facing **BACK**

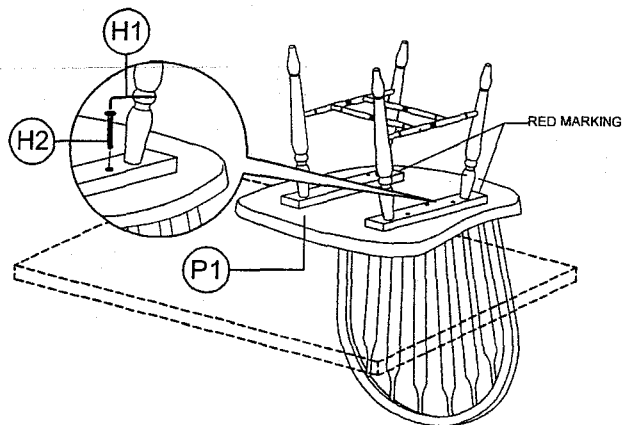


STEP 3

Pull the back legs inwards to ensure full connection between Leg Frame (P2) and Front Stretcher (P3).

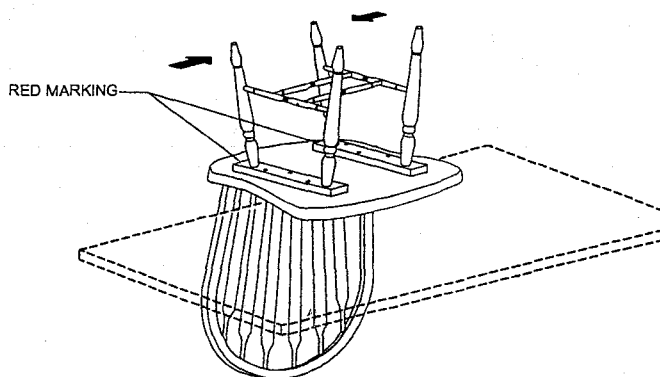




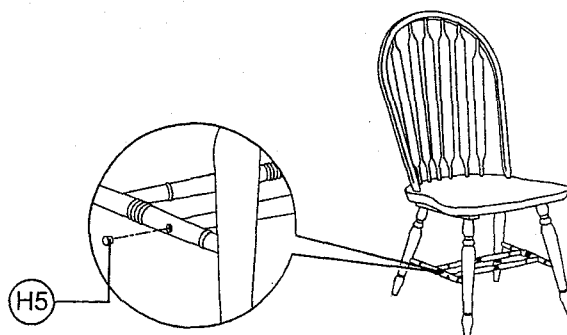

STEP 4






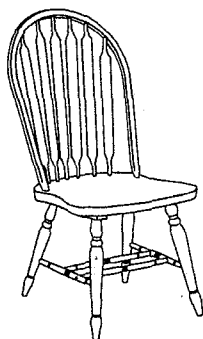Make sure all legs are level. Once level, tighten up all the screws. Cover the screw holes with Wood Button (H5).



Model : Arrowback Windsor Chair




No.	Parts List (1 Chair)	Qty.
P1.	 Seat	1 pc.
P2.	 Leg Frame	2 pcs.
P3.	 Front Stretcher	1 pc.
P4.	 Back Stretcher	1 pc.

No.	Hardware List (1 Chair)	Qty.
H1.	 M4 Allen Key	1 pc.
H2.	 M7 x 40 JCBC-W Screw	6 pcs.
H3.	 M6 x 50 JCBC Screw	2 pcs.
H4.	 Barrel Nut	2 pcs.
H5.	 Wood Button	2 pcs.


STEP 1

Assemble Front Stretcher (P3) & Back Stretcher (P4) to the Leg Frame (P2). Fix it by using Barrel Nut (H4) and JCBC Screw (H3) as shown. Then tighten it up with Allen Key (H1).
*Do not fully tighten the screw until final step.

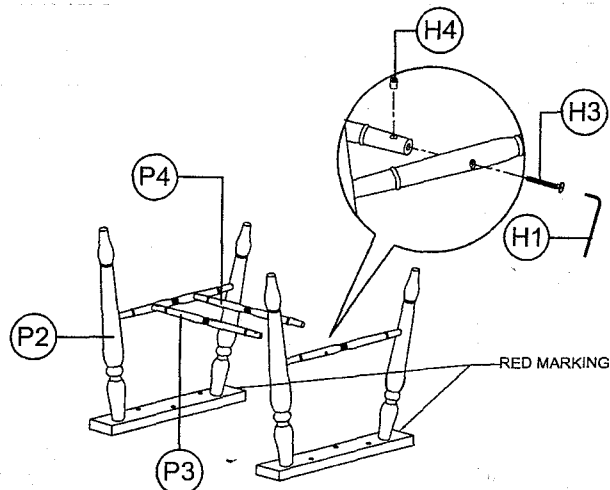


STEP 2

Assemble the Leg Frame to the Chair Seat (P1) with JCBC-W (H2). Then tighten it up with Allen Key (H1). **RED MARKING** on the Leg Frame should facing **BACK**

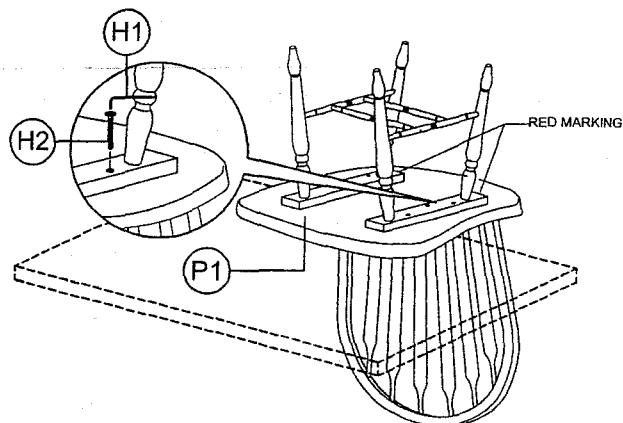

STEP 3

Pull the back legs inwards to ensure full connection between Leg Frame (P2) and Front Stretcher (P3).

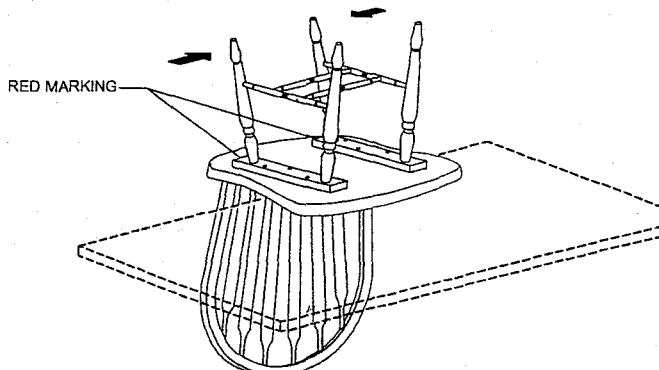

STEP 4

Make sure all legs are level. Once level, tighten up all the screws. Cover the screw holes with Wood Button (H5).

