


# Storage shed

Product ID. QVG CX

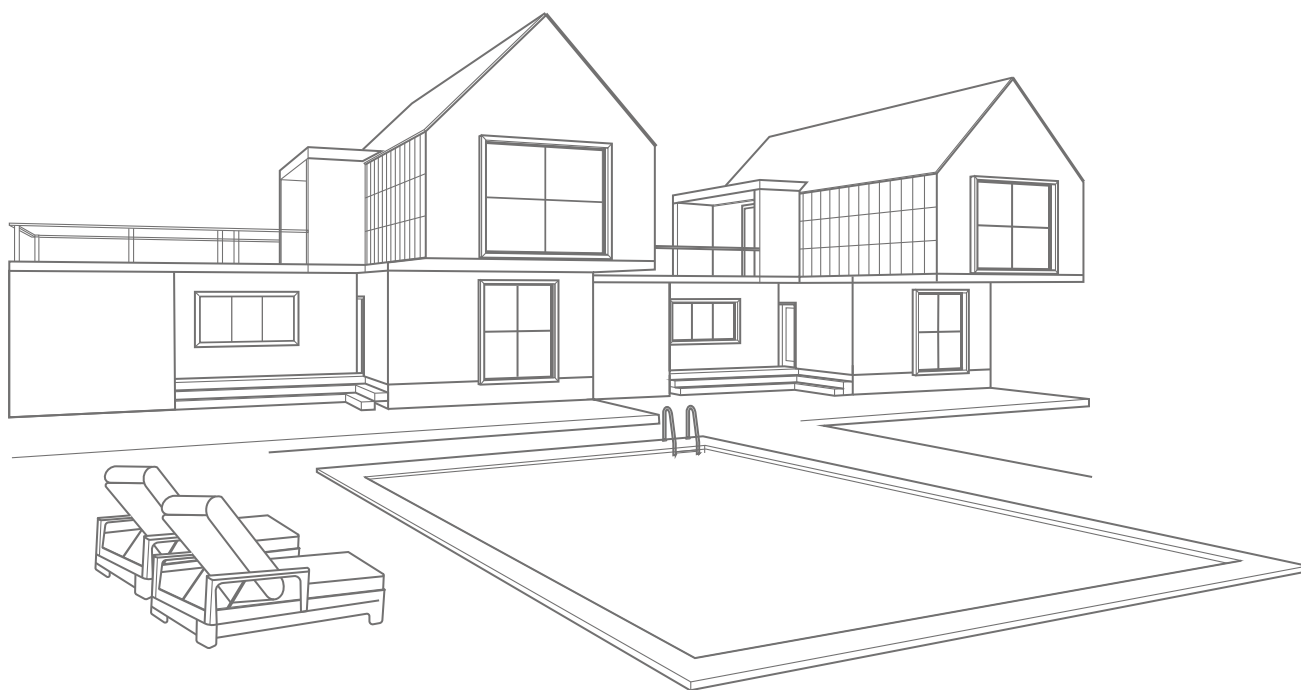

Scan for Support  
[support@garvee.com](mailto:support@garvee.com)



Distributed by  
**GARVEE**.com

V2603044LH9

# Assembly Preparation

## Owner's Manual :

Please check local building codes regarding footings, location and other requirements before beginning construction.

## Assembly instructions:

Reviewing all instructions and the appropriate information before you begin, make sure following the step sequence carefully for successful results.

## Flooring base:

A good location for the storage building is a square and level area with good drainage. The base is not included in the kit which may need

purchase separately or may construct a foundation and anchoring system of your own.

A strong plastic sheet (thickness: at least 150µm) should be placed under the foundation to assist in reducing rising dampness from the soil, thus

reducing condensation build up in the shed. Your storage building must be anchored to prevent wind damage. Once secured, it is highly

recommended applying silicone along the inside of the base rail to minimize condensation.

## Parts and Parts List:

Before you start, separate and identify all the parts and hardware to be sure that you have all the necessary parts for your building (refer to the

Parts List Page). If you find that a part is missing, please notify the seller within one week after receiving the product. Do not attempt to assemble

the building if parts are missing because any building left partially assembled may be seriously damaged by light winds.

## Tools you need:

( Please tear off the safety protection layer before the assembly, keep the part number label if needed)



## Safety must be put in the No. 1 position:

1. Select a dry and calm day for your assembly. Team works (Two or more people) are required during the assembly. It is also recommended to finish the assembly in a day to avoid damage to the product or missing of some small parts.

2. Wearing safety gloves, eye protection and long sleeves during the assembly to prevent injury. Pay attention to the sharp edge of some parts.

3. Children and pets are not allowed entering into the construction site.

4. Never concentrate your total weight on the roof of the building.

When using a step ladder make sure that it is safe.

## Care & Maintenance:

1. Keep the shed clean with soft cloth, use water if necessary.


2. Keep the door tracks clear of dirt and other stuff that prevent them from sliding easily.

3. Clean the snow with necessary tools to make sure it is safe to enter into.

4. The shed is not made for living but storing stuff.

5. Please add some oil on the top and bottom door sliding channel to make door slides smoothly.

Size:

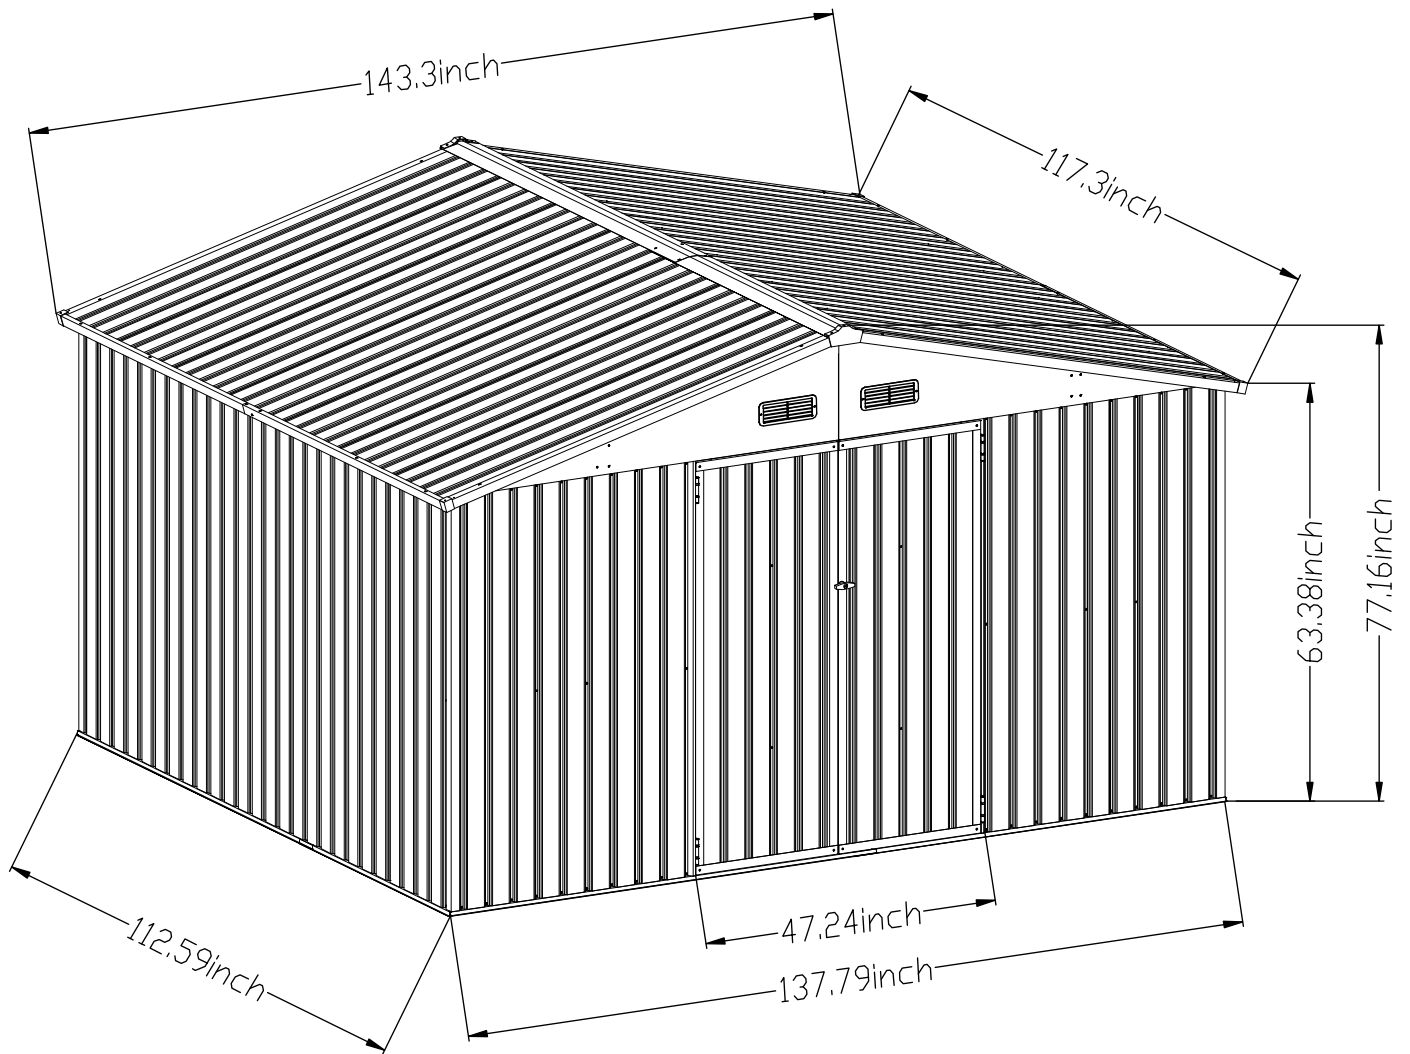







## Hardware List (Parts A)




| IMAGE                                                                             | NO.  | QTY |
|-----------------------------------------------------------------------------------|------|-----|
|  | W5-K | 2   |
|  | W5   | 22  |



## Hardware List (Parts B)

| IMAGE                                                                               | NO.      | QTY |
|-------------------------------------------------------------------------------------|----------|-----|
|    | K1012-7L | 2   |
|    | K1012-7M | 10  |
|   | K1012-7R | 2   |
|  | W5-C     | 4   |
|  | W3       | 2   |
|  | W2-HL    | 1   |
|  | W2-HR    | 1   |

# Hardware List (Parts C)

| IMAGE                                                                               | NO.       | QTY |
|-------------------------------------------------------------------------------------|-----------|-----|
|    | K1012-1L  | 2   |
|    | K1012-1M  | 2   |
|    | K1012-1R  | 2   |
|    | K810-2    | 2   |
|    | K1012-2R  | 2   |
|    | K1012-3L  | 2   |
|    | K1012-3M  | 2   |
|    | K1012-3R  | 2   |
|  | K810-4    | 2   |
|  | K1012-4R  | 2   |
|  | K1012-5L  | 2   |
|  | K1012-5R  | 2   |
|  | K1010-6L  | 6   |
|  | K1010-6R  | 6   |
|  | K1012-8   | 8   |
|  | K1012-9L  | 2   |
|  | K1012-9R  | 2   |
|  | K810-10   | 1   |
|  | K1012-10R | 1   |
|  | UA        | 2   |
|  | C3        | 4   |
|  | K1012-11  | 8   |

| IMAGE                                                                                | NO. | QTY |
|--------------------------------------------------------------------------------------|-----|-----|
|    | DA  | 2   |
|    | DLA | 1   |
|    | DRA | 1   |
|     | DDA | 4   |
|    | DBA | 4   |
|     | GC  | 4   |
|     | GE  | 2   |
|     | GF  | 4   |
|   | T-F | 4   |
|   | DC  | 2   |
|   | C2  | 4   |
|   | DH  | 4   |
|   | F1  | 510 |
|   | F2  | 91  |
|   | F3  | 32  |
|   | V2  | 172 |
|   | F4  | 4   |
|   | GL  | 1   |
|   | SL  | 66  |
|  | M20 | 1   |
|   | ST  | 2   |
|                                                                                      |     |     |

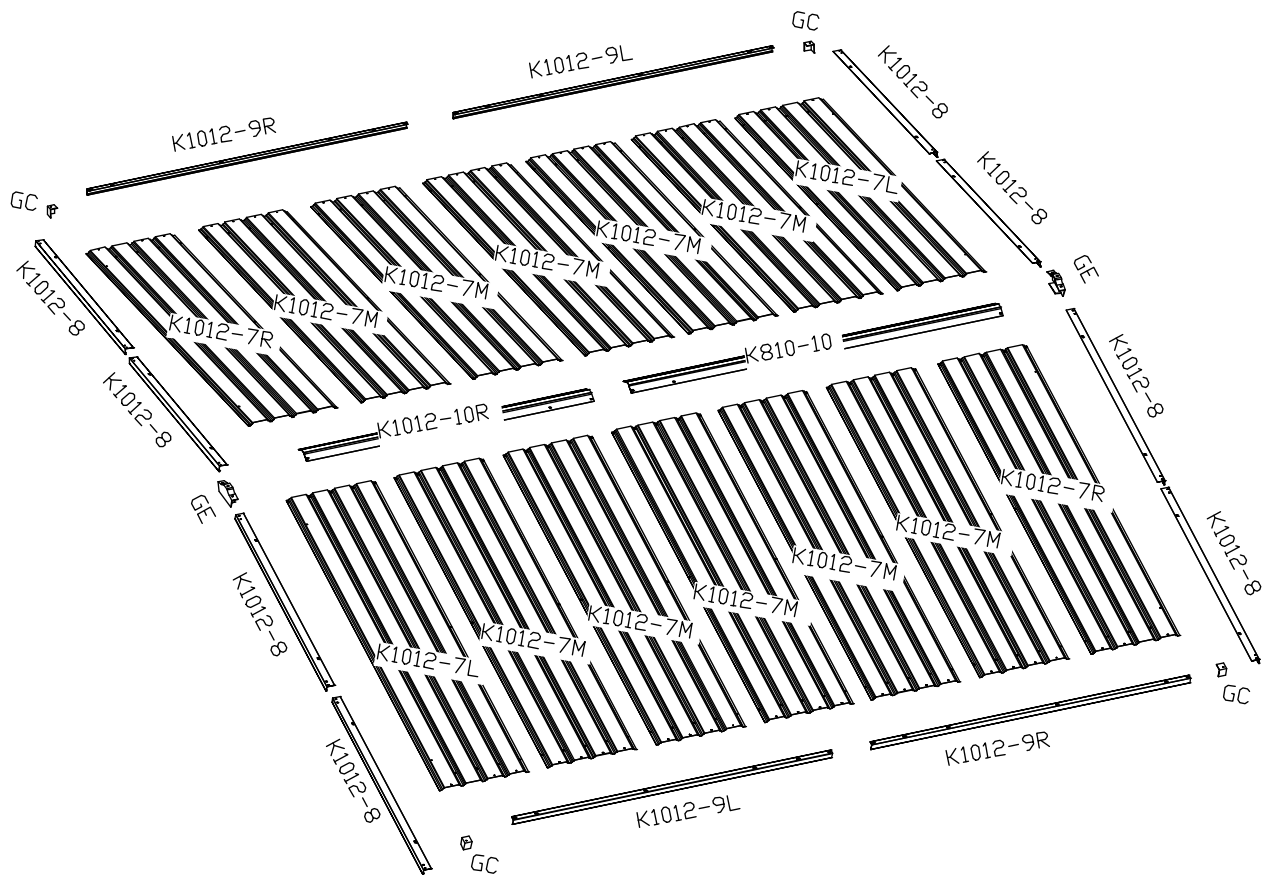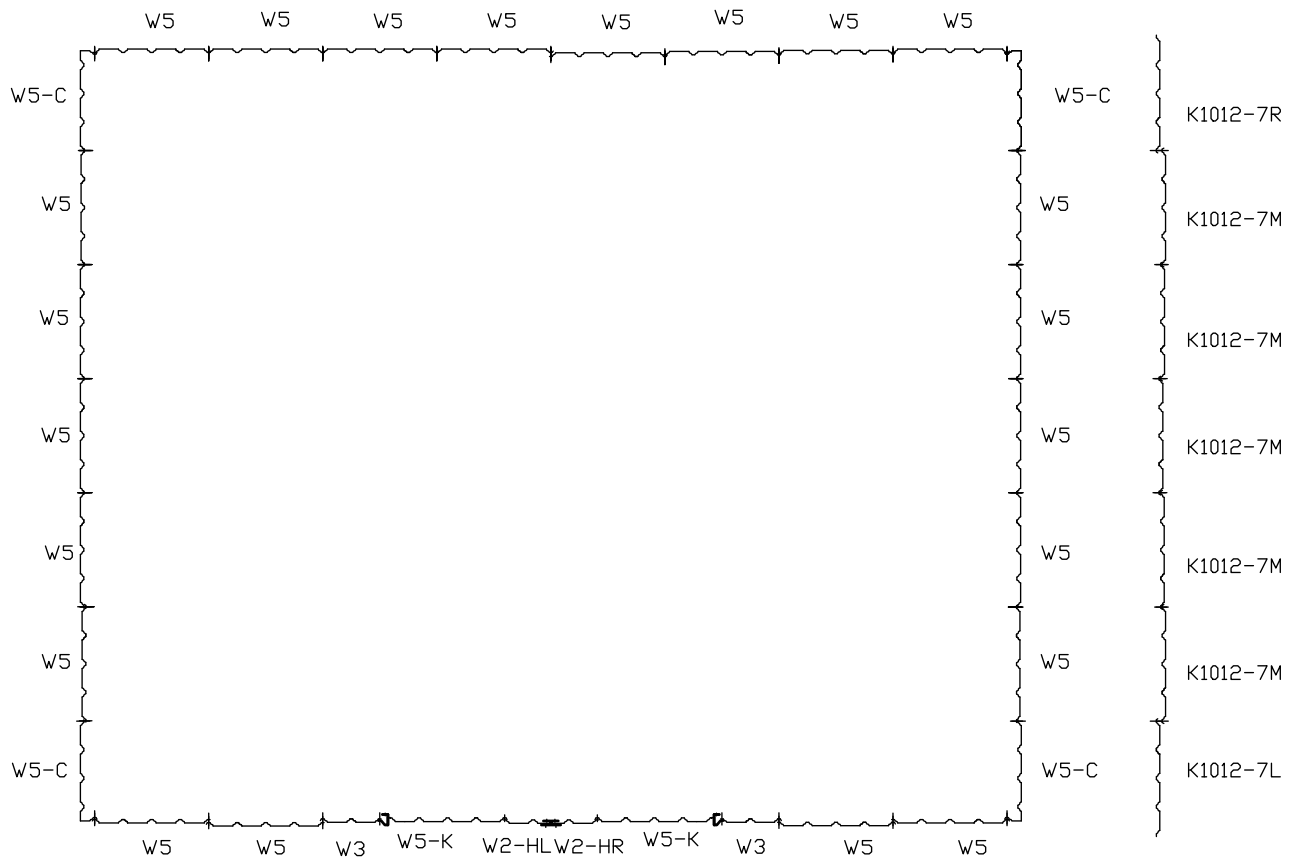








STEP 1

| PART                                                                                | NO.      | QTY. |
|-------------------------------------------------------------------------------------|----------|------|
|  | K1012-1L | 2    |
|  | K1012-1M | 2    |
|  | K1012-1R | 2    |
|  | K810-2   | 2    |
|  | K1012-2R | 2    |
|  | T-F      | 4    |
|  | F1       | 42   |
| F1:ST4.2*10                                                                         |          |      |

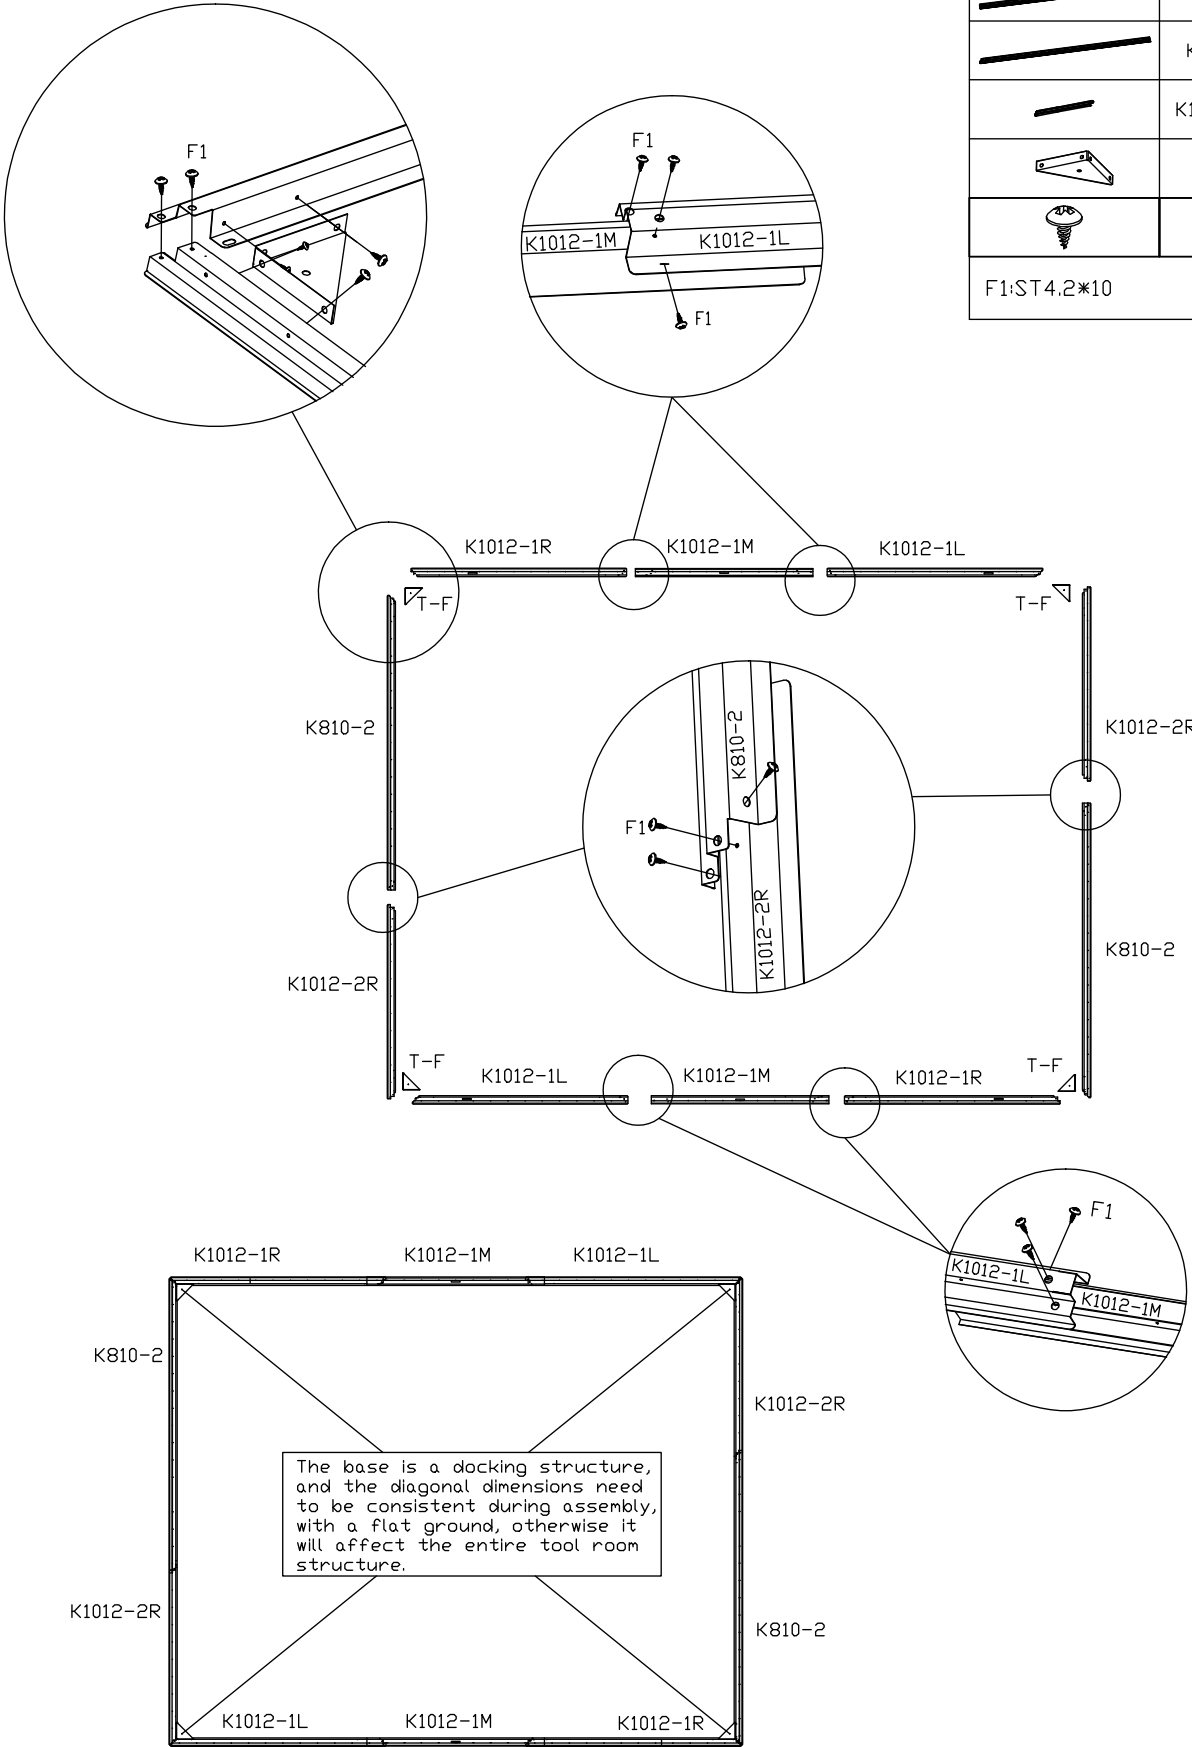


STEP 2


| PART                                                                                | NO.  | QTY |
|-------------------------------------------------------------------------------------|------|-----|
|  | W5-C | 1   |
|  | W5   | 1   |
|  | F1   | 7   |
| F1:ST4.2*10                                                                         |      |     |

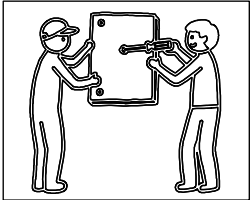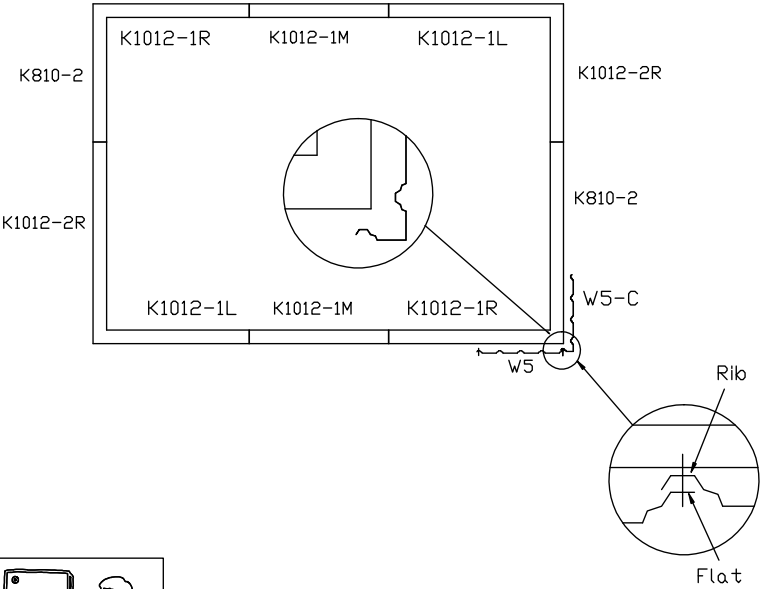


 This step requires two people to complete the installation together.

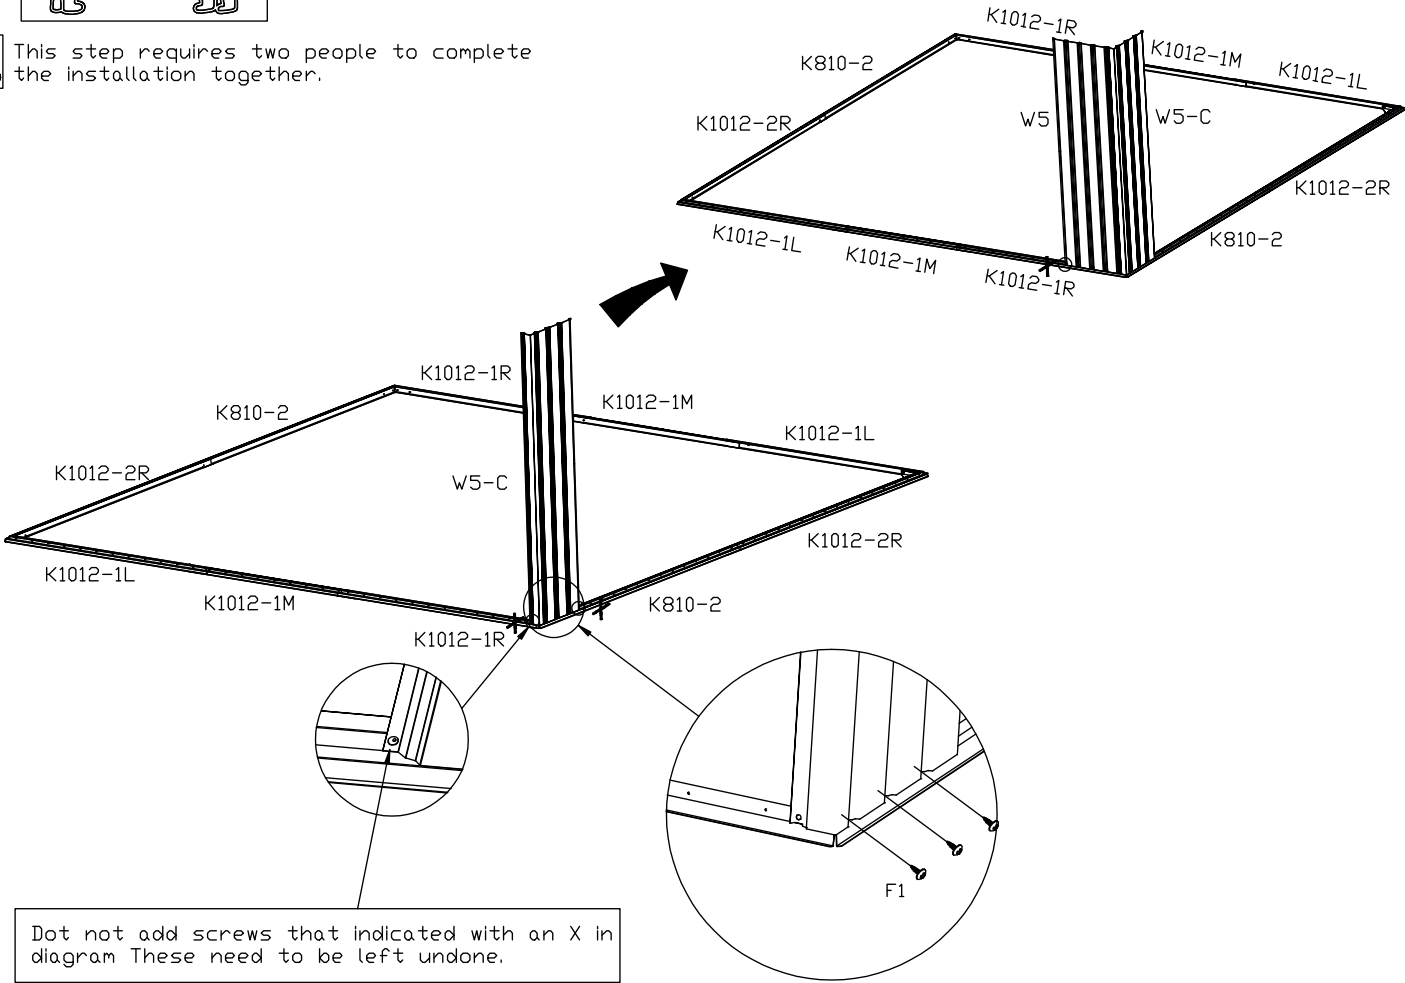


STEP 3

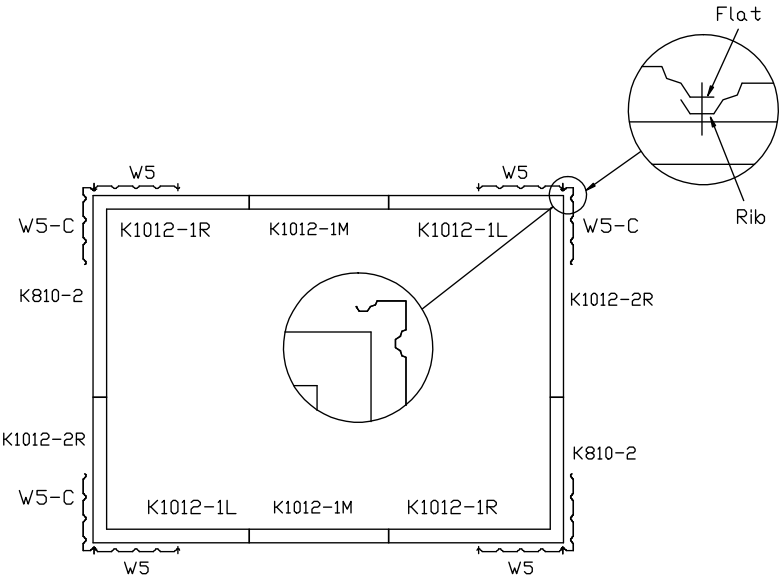

| PART                                                                                | NO.  | QTY |
|-------------------------------------------------------------------------------------|------|-----|
|  | W5-C | 3   |
|  | W5   | 3   |
|  | F1   | 21  |
| F1:ST4.2*10                                                                         |      |     |

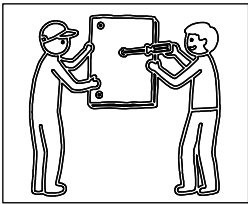


This step requires two people to complete the installation together.

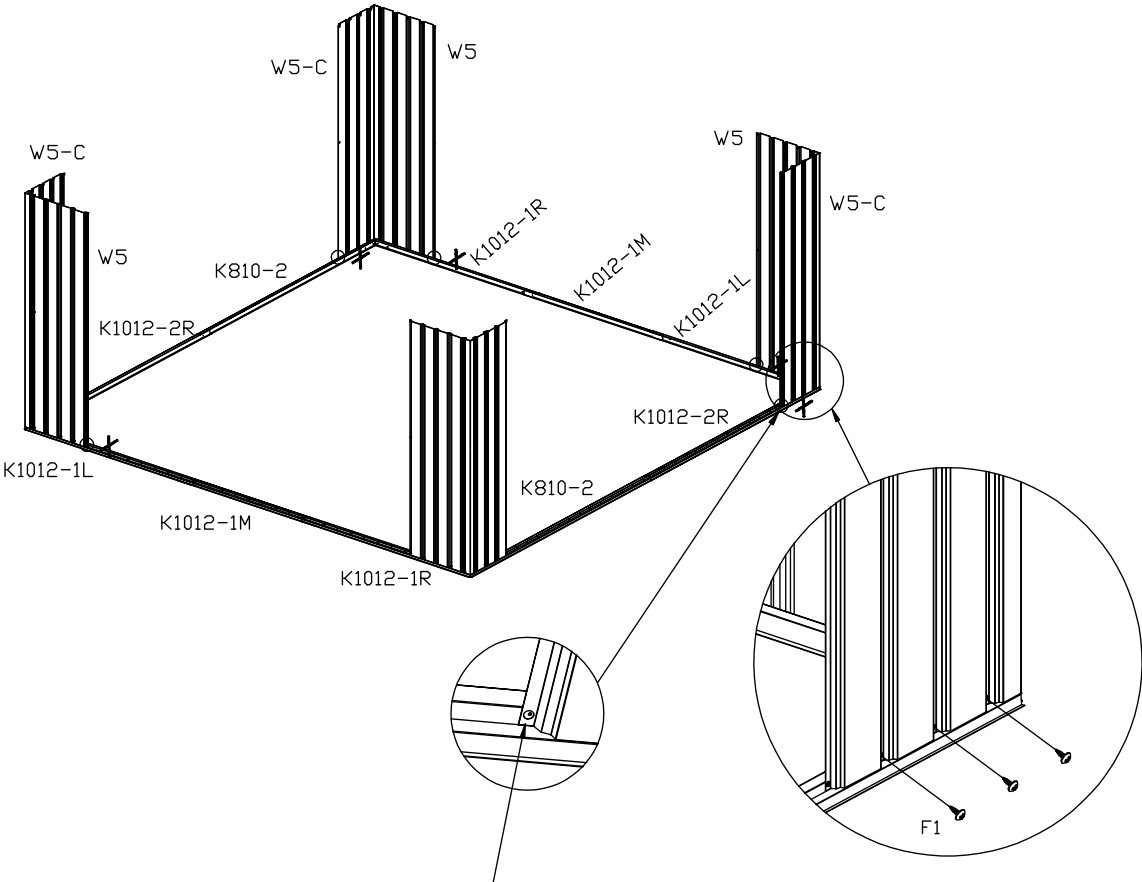

Do not add screws that indicated with an X in diagram These need to be left undone.


STEP 4

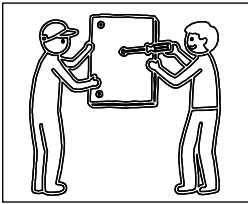


This step requires two people to complete the installation together.

| PART                                                                                | NO.      | QTY |
|-------------------------------------------------------------------------------------|----------|-----|
|  | K1012-3L | 2   |
|  | K1012-3M | 2   |
|  | K1012-3R | 2   |
|  | C2       | 4   |
|  | F1       | 20  |
| F1:ST4.2*10                                                                         |          |     |

2 groups

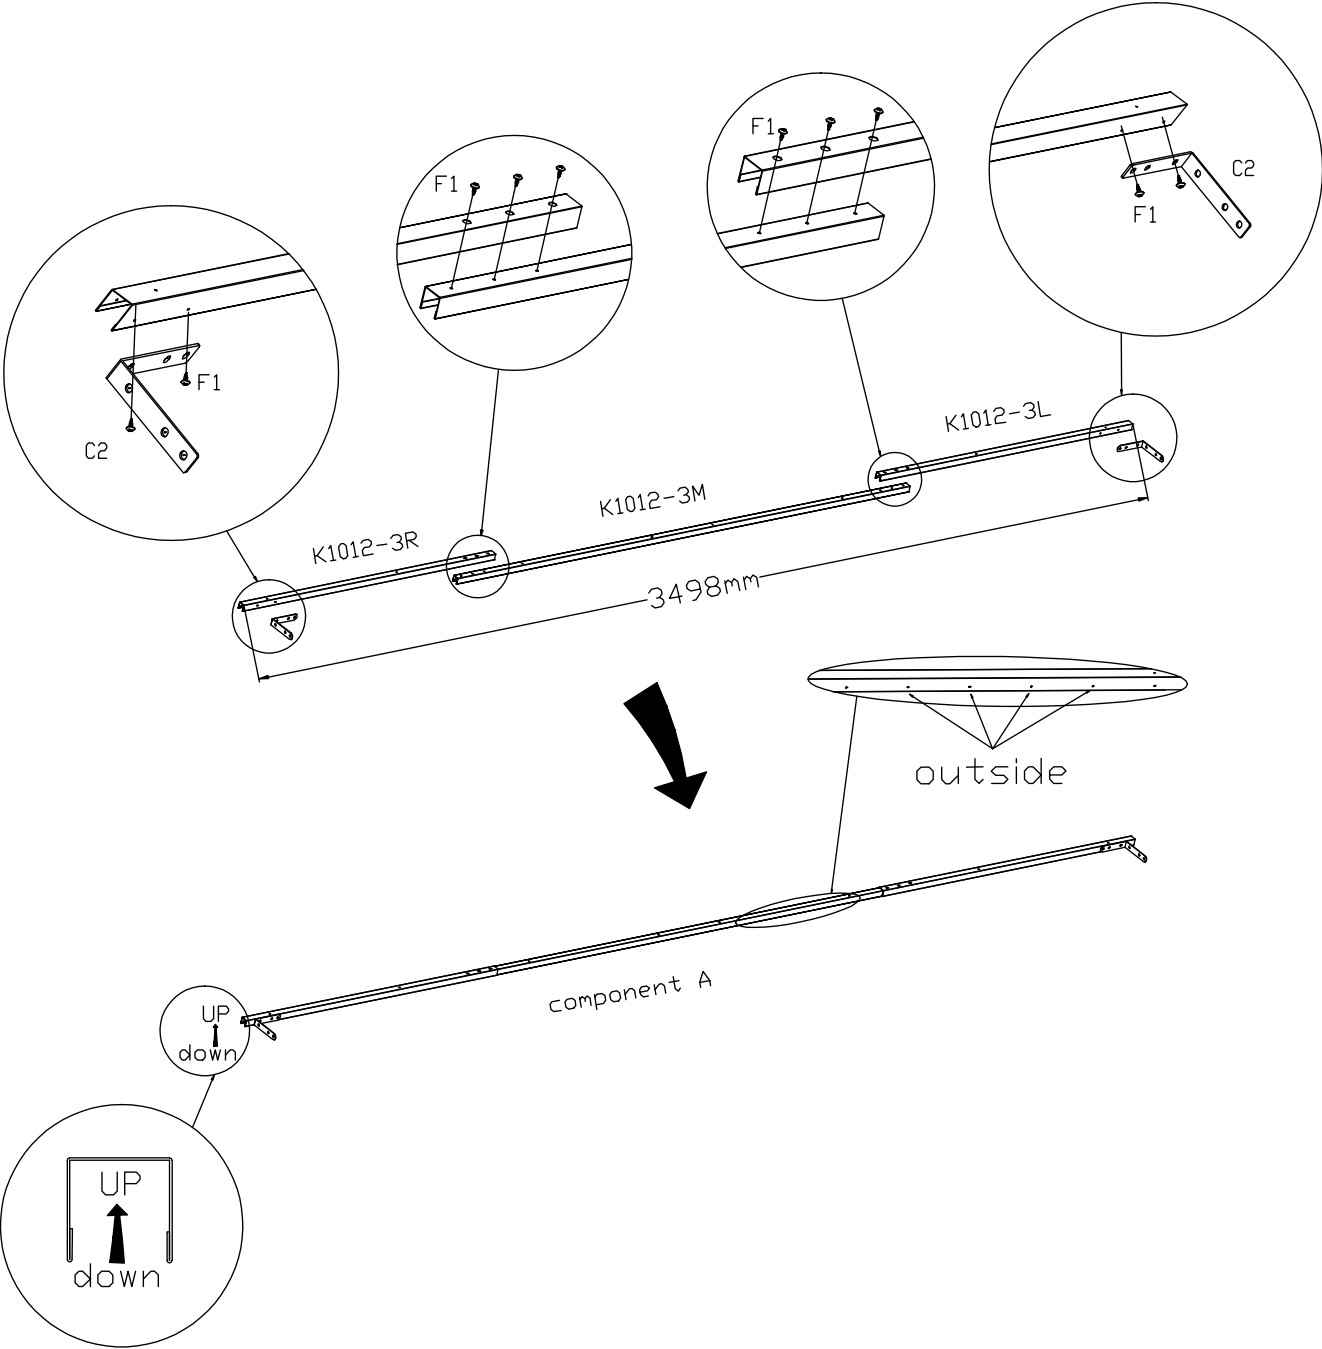


STEP 5

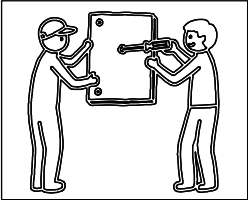


This step requires two people to complete the installation together.

| PART                                                                                | NO.         | QTY |
|-------------------------------------------------------------------------------------|-------------|-----|
|  | component A | 2   |
|  | F1          | 16  |
| F1:ST4.2*10                                                                         |             |     |

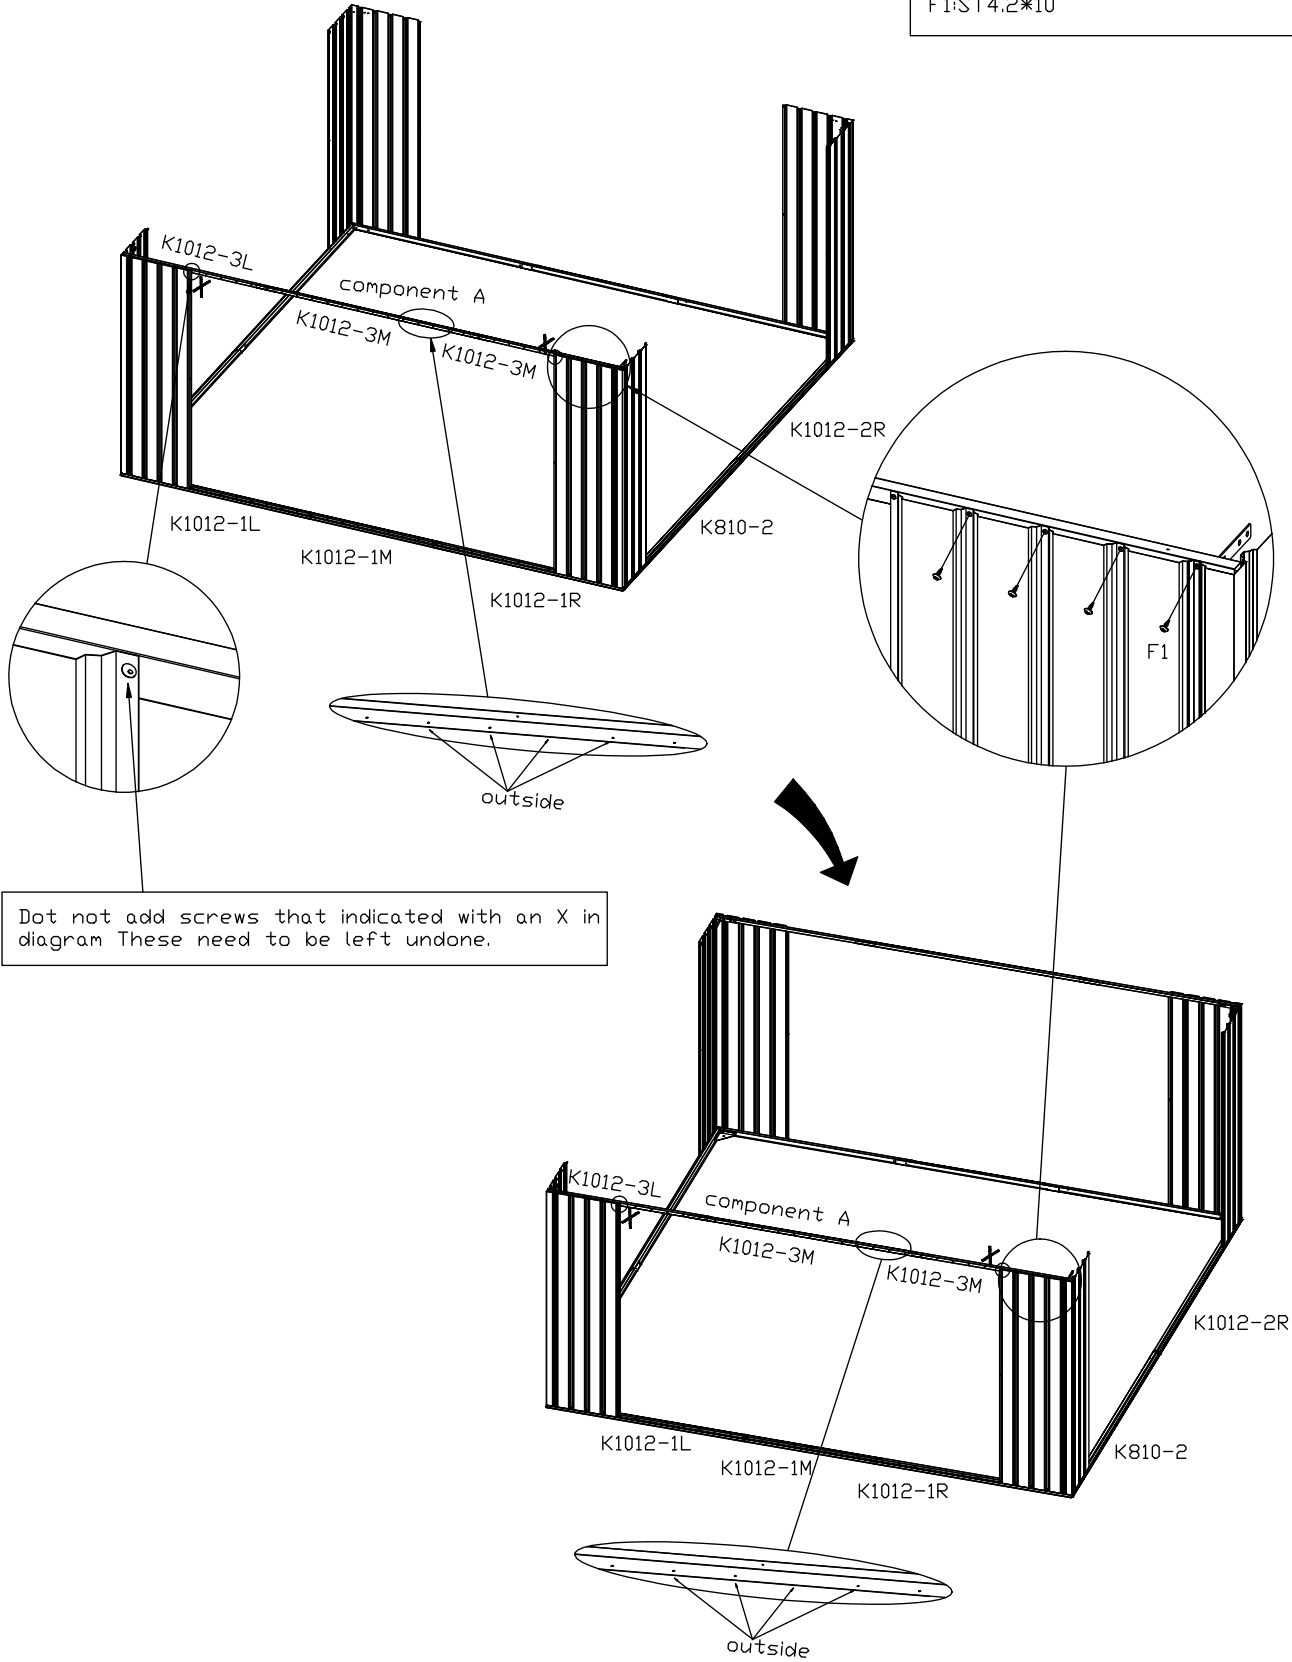

Do not add screws that indicated with an X in diagram. These need to be left undone.


STEP 6

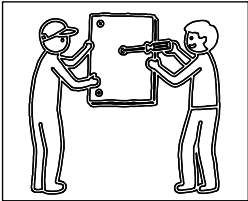


This step requires two people to complete the installation together.

| PART                                                                                | NO.      | QTY |
|-------------------------------------------------------------------------------------|----------|-----|
|  | K810-4   | 2   |
|  | K1012-4R | 2   |
|  | F1       | 8   |
| F1:ST4,2*10                                                                         |          |     |

2 groups

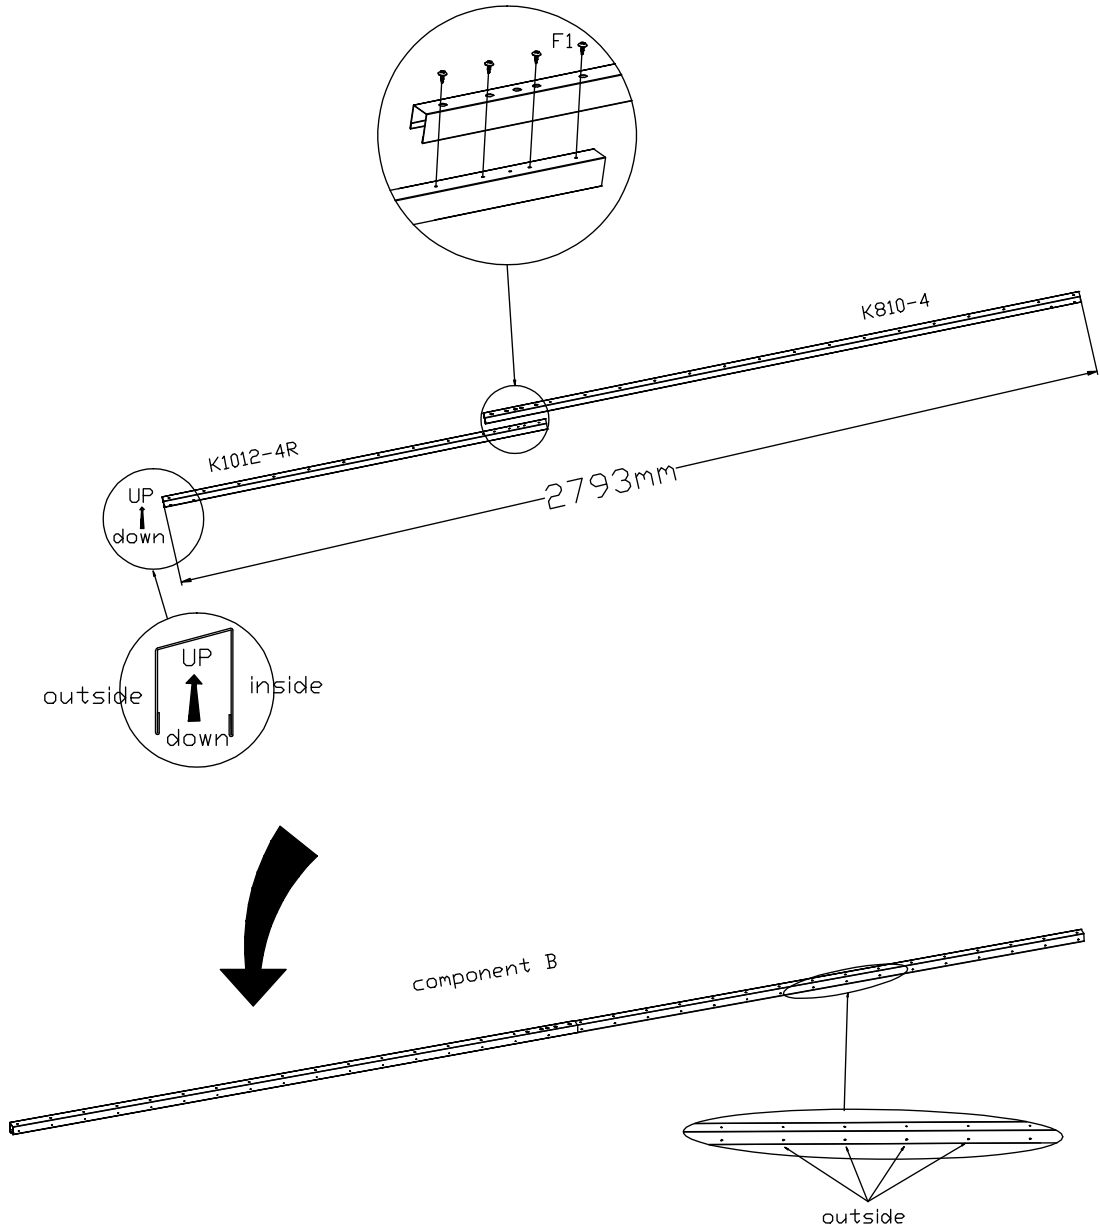


STEP 7

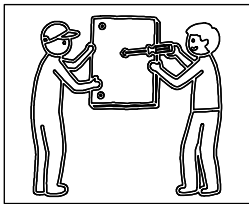


This step requires two people to complete the installation together.


| PART                                                                                | NO.         | QTY |
|-------------------------------------------------------------------------------------|-------------|-----|
|  | component B | 2   |
|  | F1          | 20  |
| F1:ST4.2*10                                                                         |             |     |

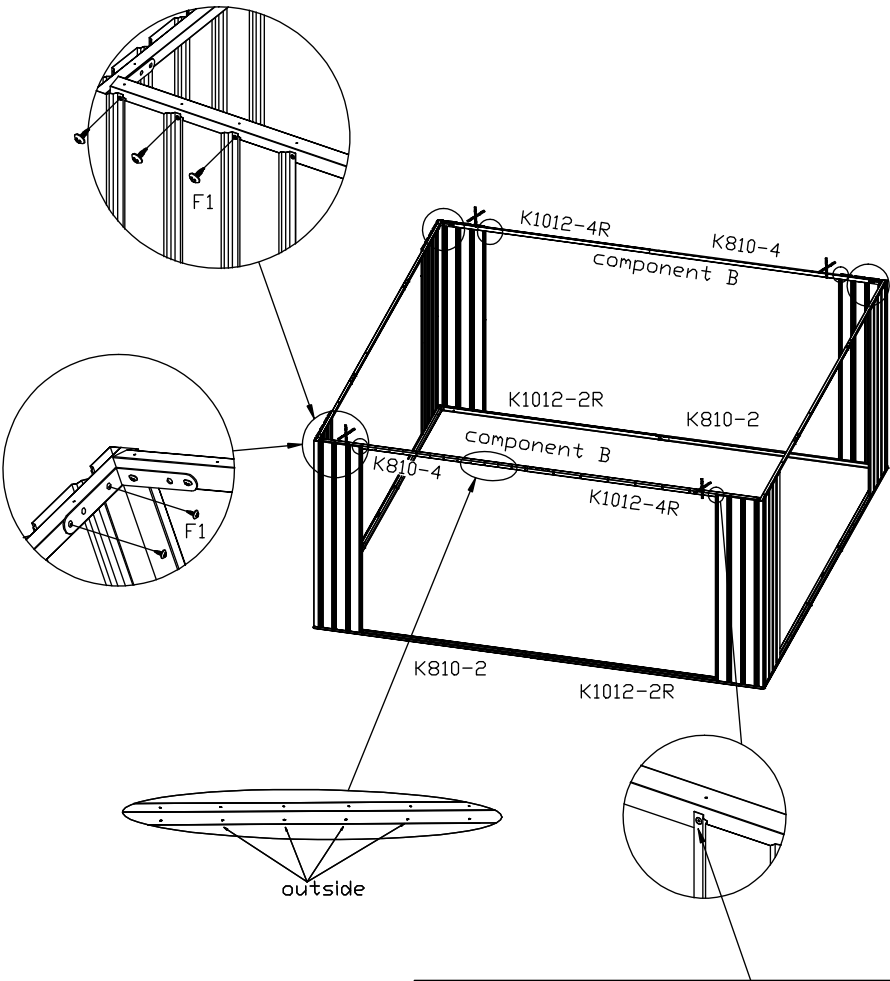



Do not add screws that indicated with an X in diagram  
These need to be left undone.

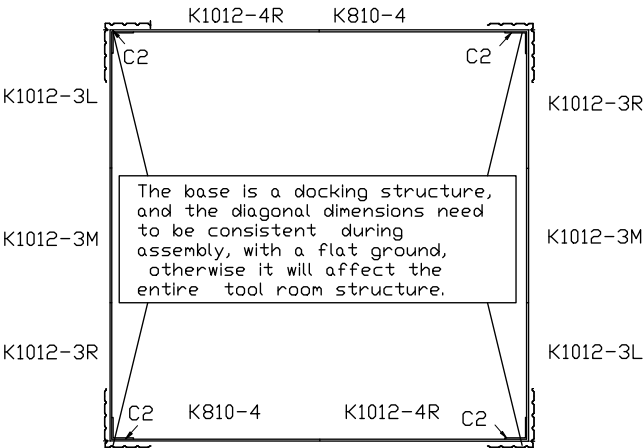

STEP 8

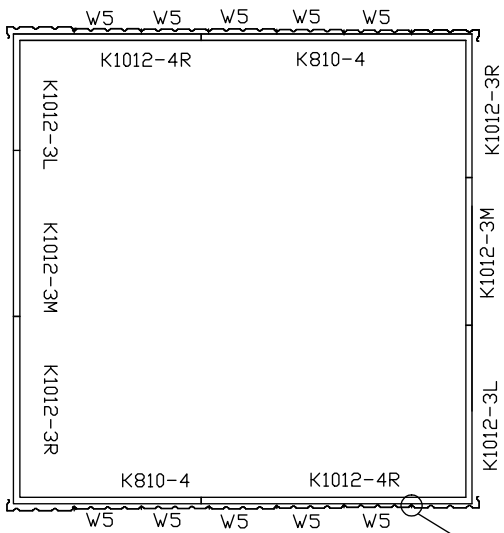


| PART                                                                                | Nº. | QTY |
|-------------------------------------------------------------------------------------|-----|-----|
|  | W5  | 10  |
|  | F1  | 84  |
|  | F2  | 12  |
| F1:ST4.2*10 F2:M4*10                                                                |     |     |

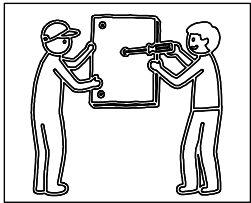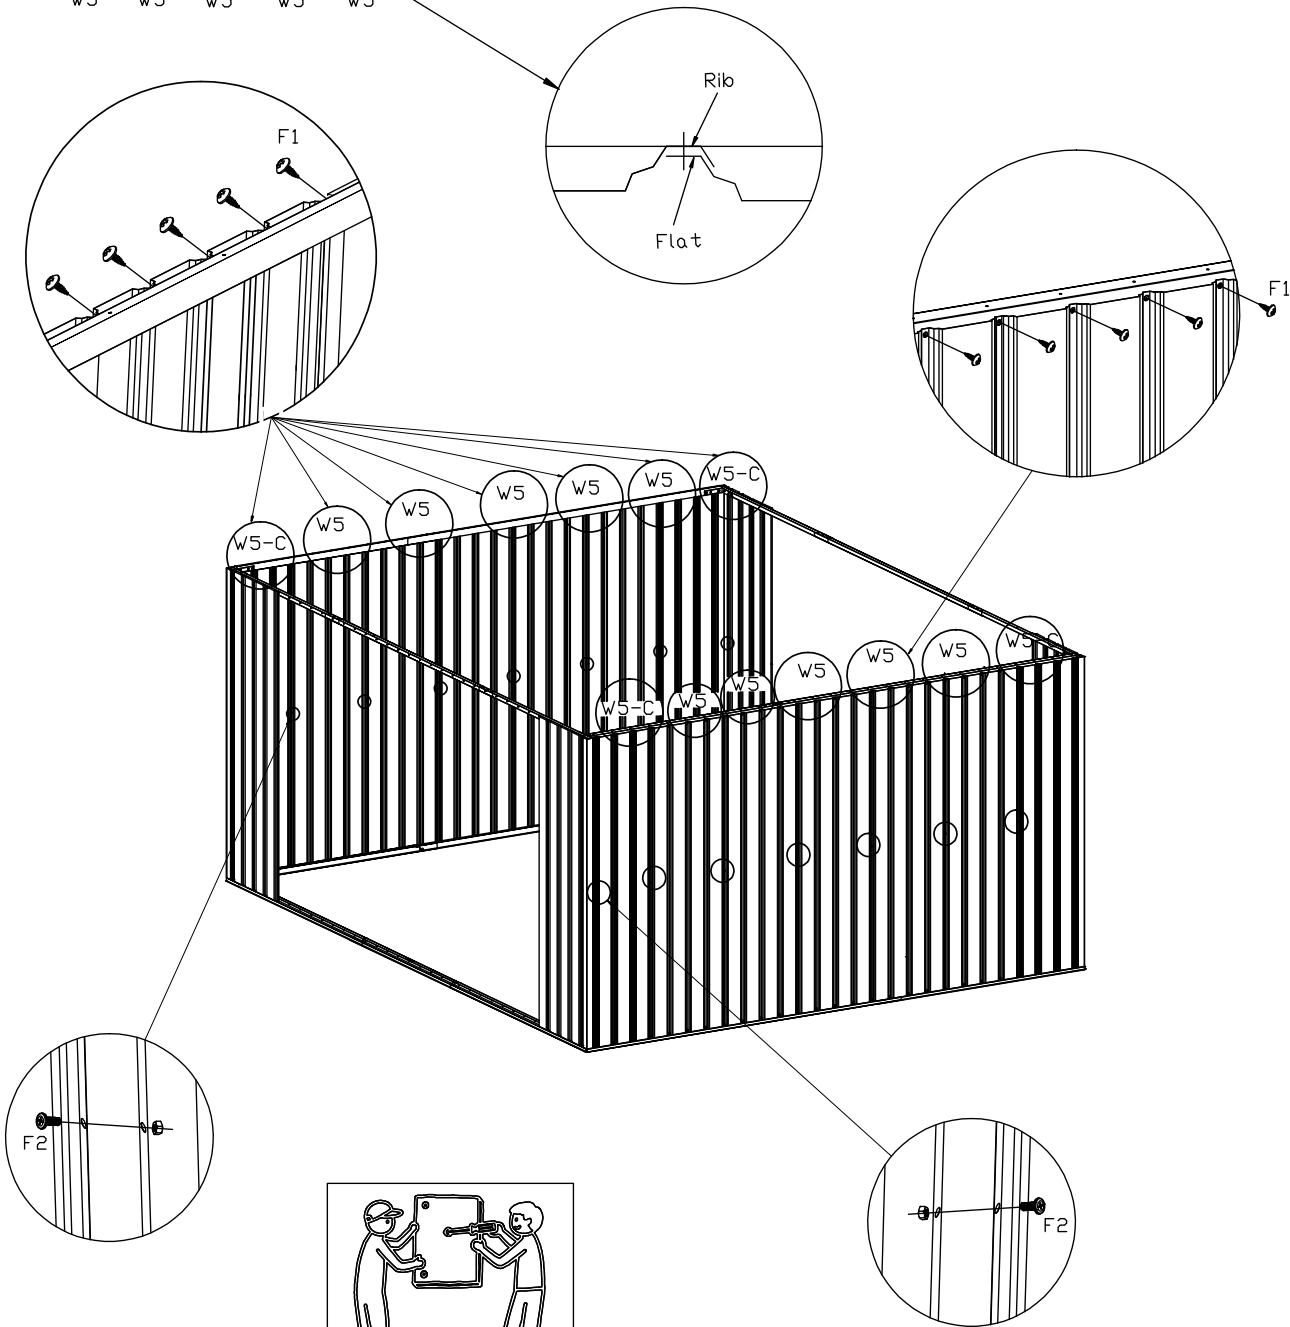



This step requires two people to complete the installation together.



STEP 9

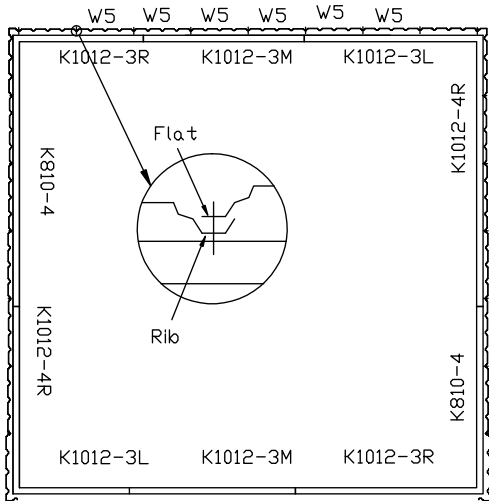


| PART                                                                                | NO. | QTY |
|-------------------------------------------------------------------------------------|-----|-----|
|  | W5  | 6   |
|  | F1  | 50  |
|  | F2  | 9   |
| F1:ST4.2*10 F2:M4*10                                                                |     |     |

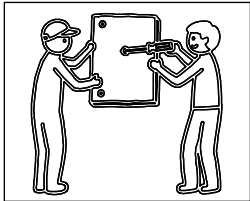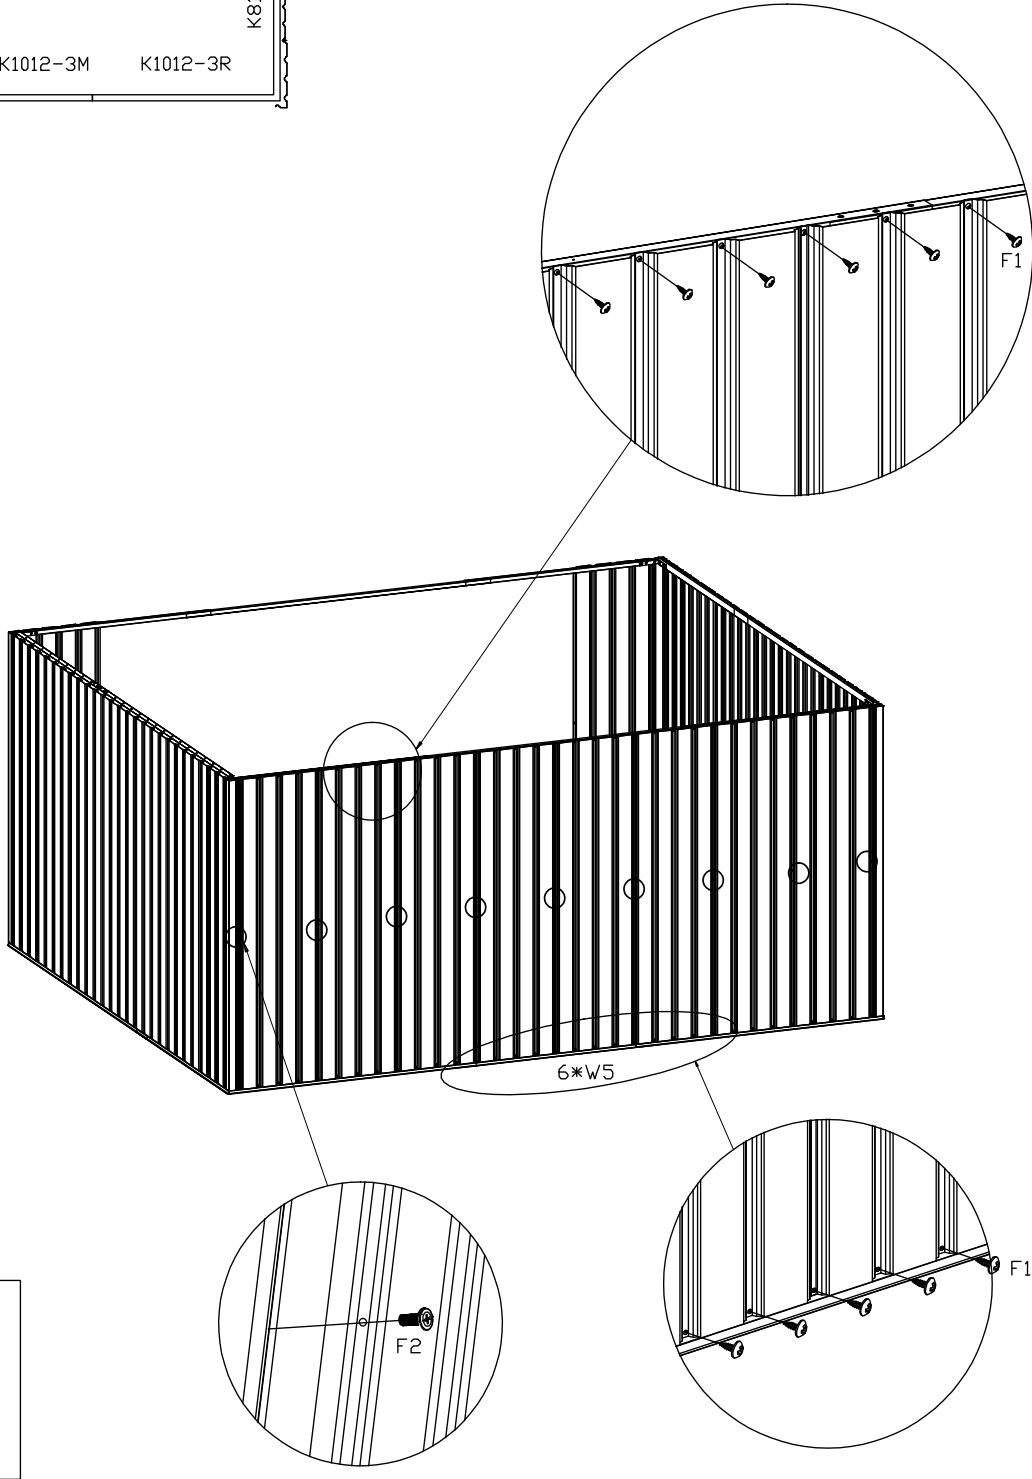



 This step requires two people to complete the installation together.

STEP 10

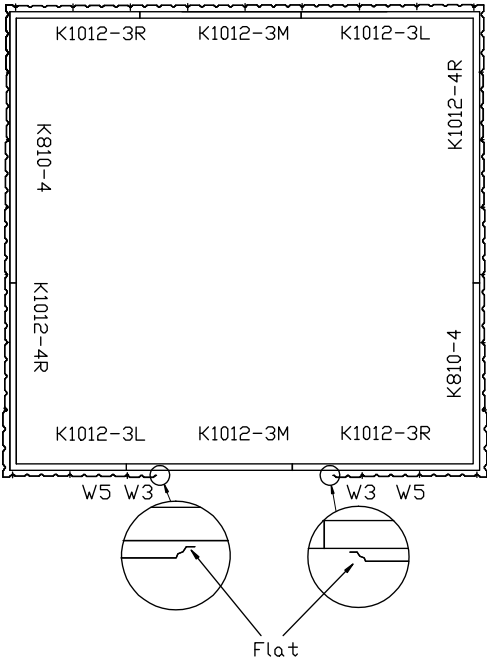


This edge must be flat, otherwise it will affect the subsequent installation of UA.


| PART                                                                                | NO. | QTY. |
|-------------------------------------------------------------------------------------|-----|------|
|  | W5  | 2    |
|  | W3  | 2    |
|  | F1  | 24   |
|  | F2  | 6    |
| F1:ST4.2*10 F2:M4*10                                                                |     |      |

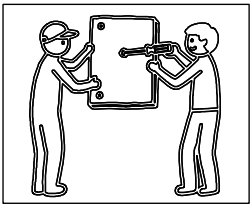

This step requires two people to complete the installation together.




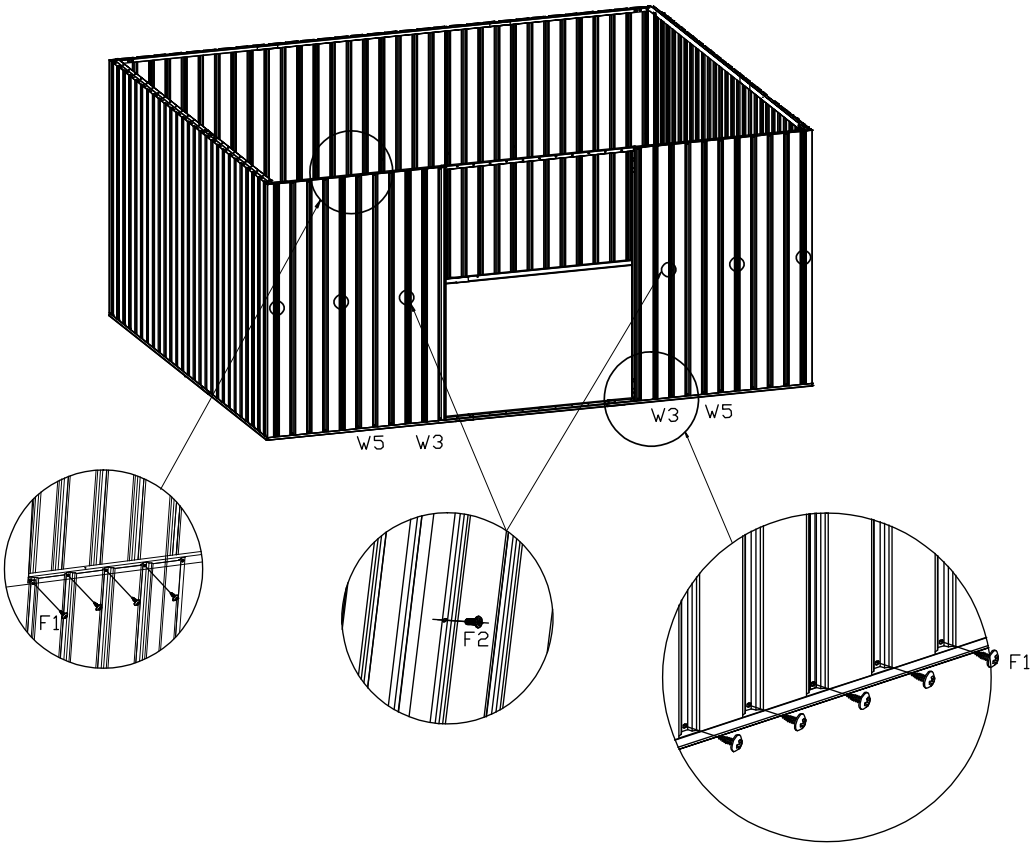


## STEP 1 1

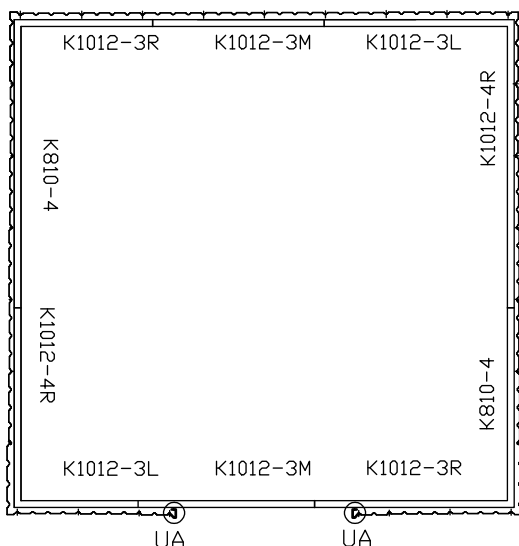


| PART                 | NO. | QTY. |
|----------------------|-----|------|
|                      | UA  | 2    |
|                      | F1  | 8    |
|                      | F2  | 2    |
| F1:ST4.2*10 F2:M4*10 |     |      |


- ① UA notch is inserted into K1012-3M.

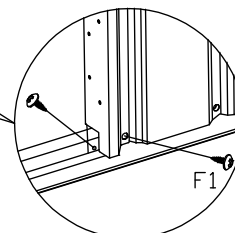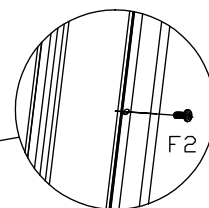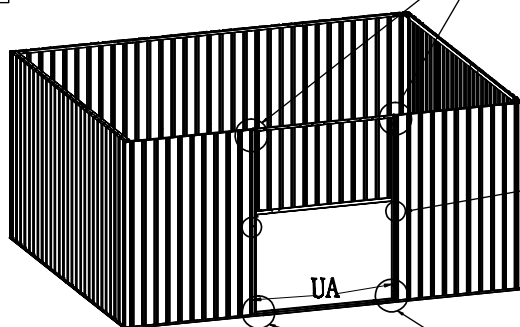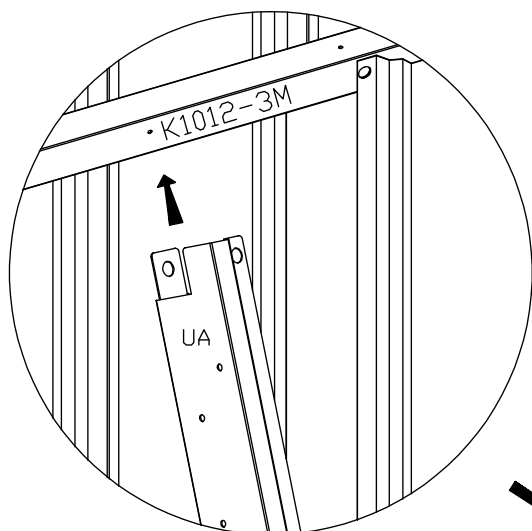

- ④ F1 screw fixation

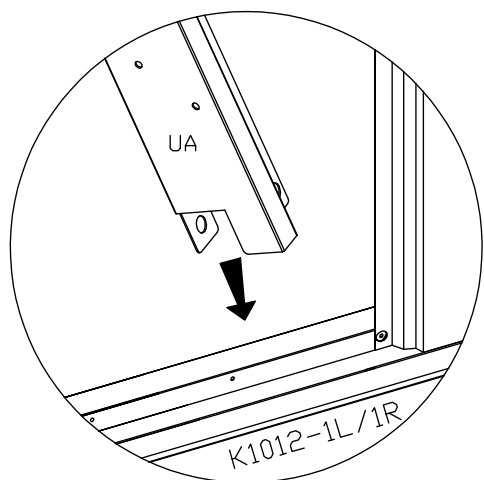



- ② UA notch is inserted into K1012-1L/K1012-1R.

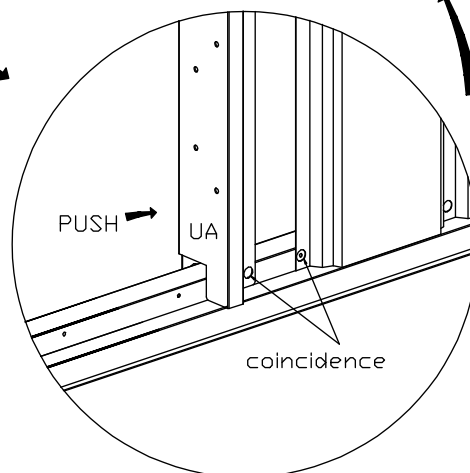


- ③ Push UA to coincide with the screw holes on the board.


STEP 1 2


Note the installation direction of GF,  
The slats should slope downward.

| PART                                                                               | NO.      | QTY. |
|------------------------------------------------------------------------------------|----------|------|
|  | K1012-5L | 2    |
|  | K1012-5R | 2    |
|   | GF       | 4    |
|   | F2       | 8    |
| F2:M4*10                                                                           |          |      |

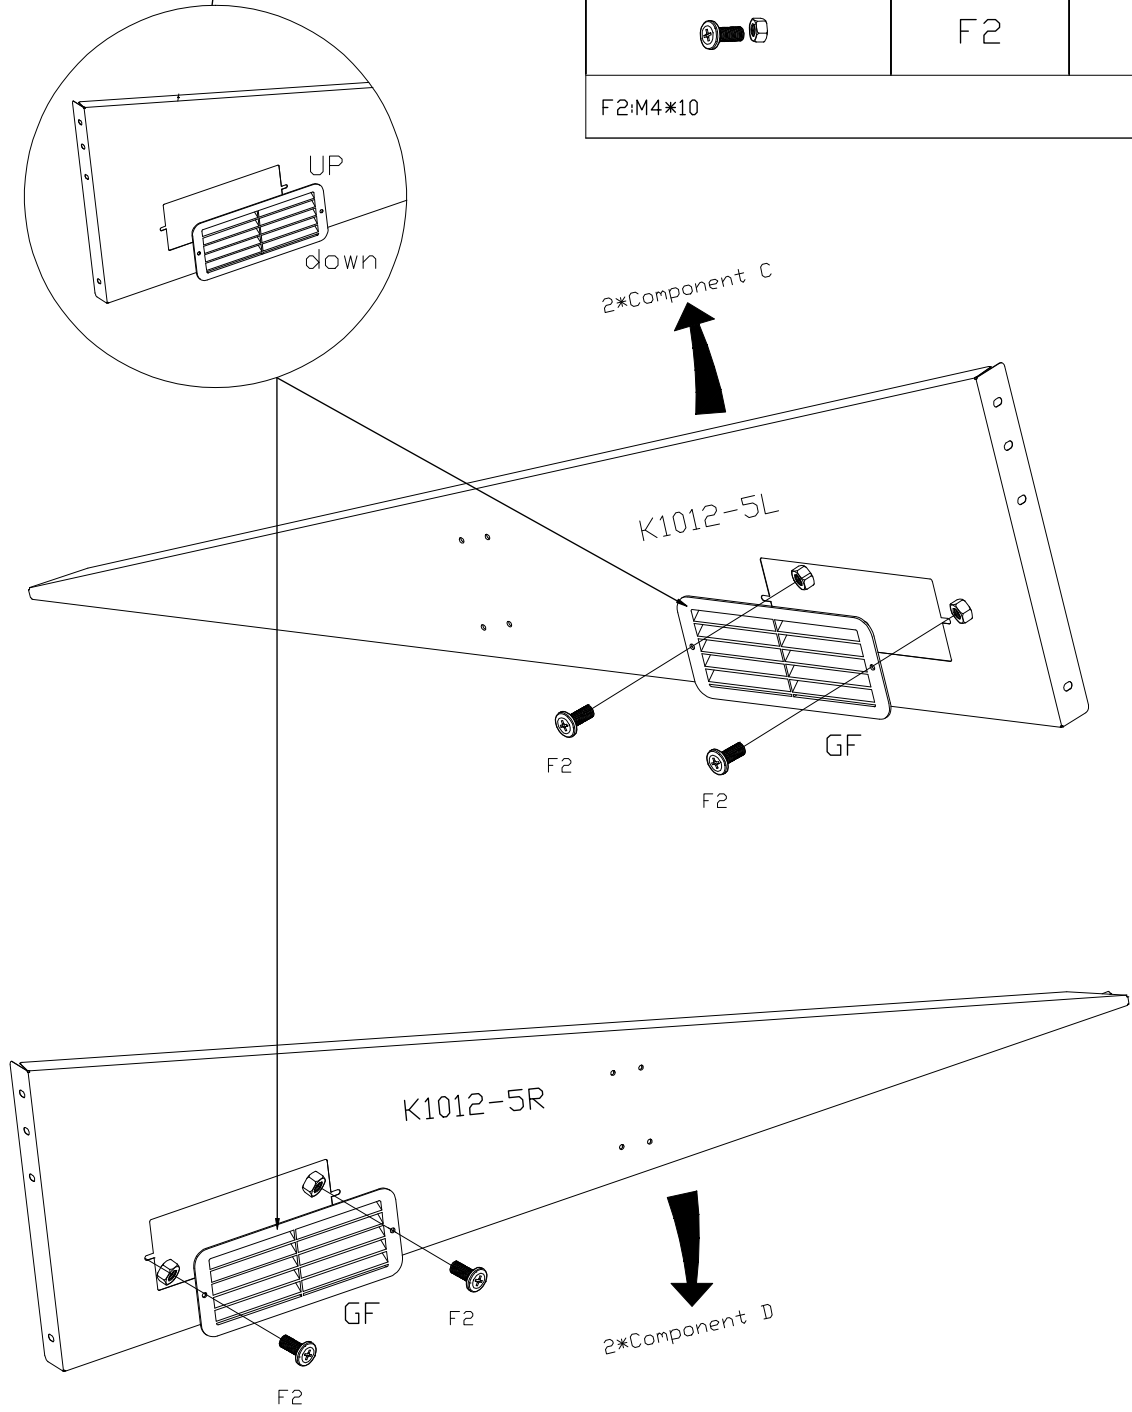


STEP 13

| PART                                                                              | NO.         | QTY |
|-----------------------------------------------------------------------------------|-------------|-----|
|  | Component C | 2   |
|  | Component D | 2   |
|  | F1          | 16  |
| F1:ST4.2*10                                                                       |             |     |


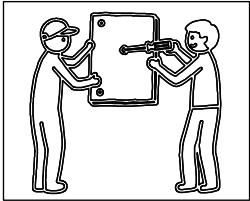


This step requires two people to complete the installation together.

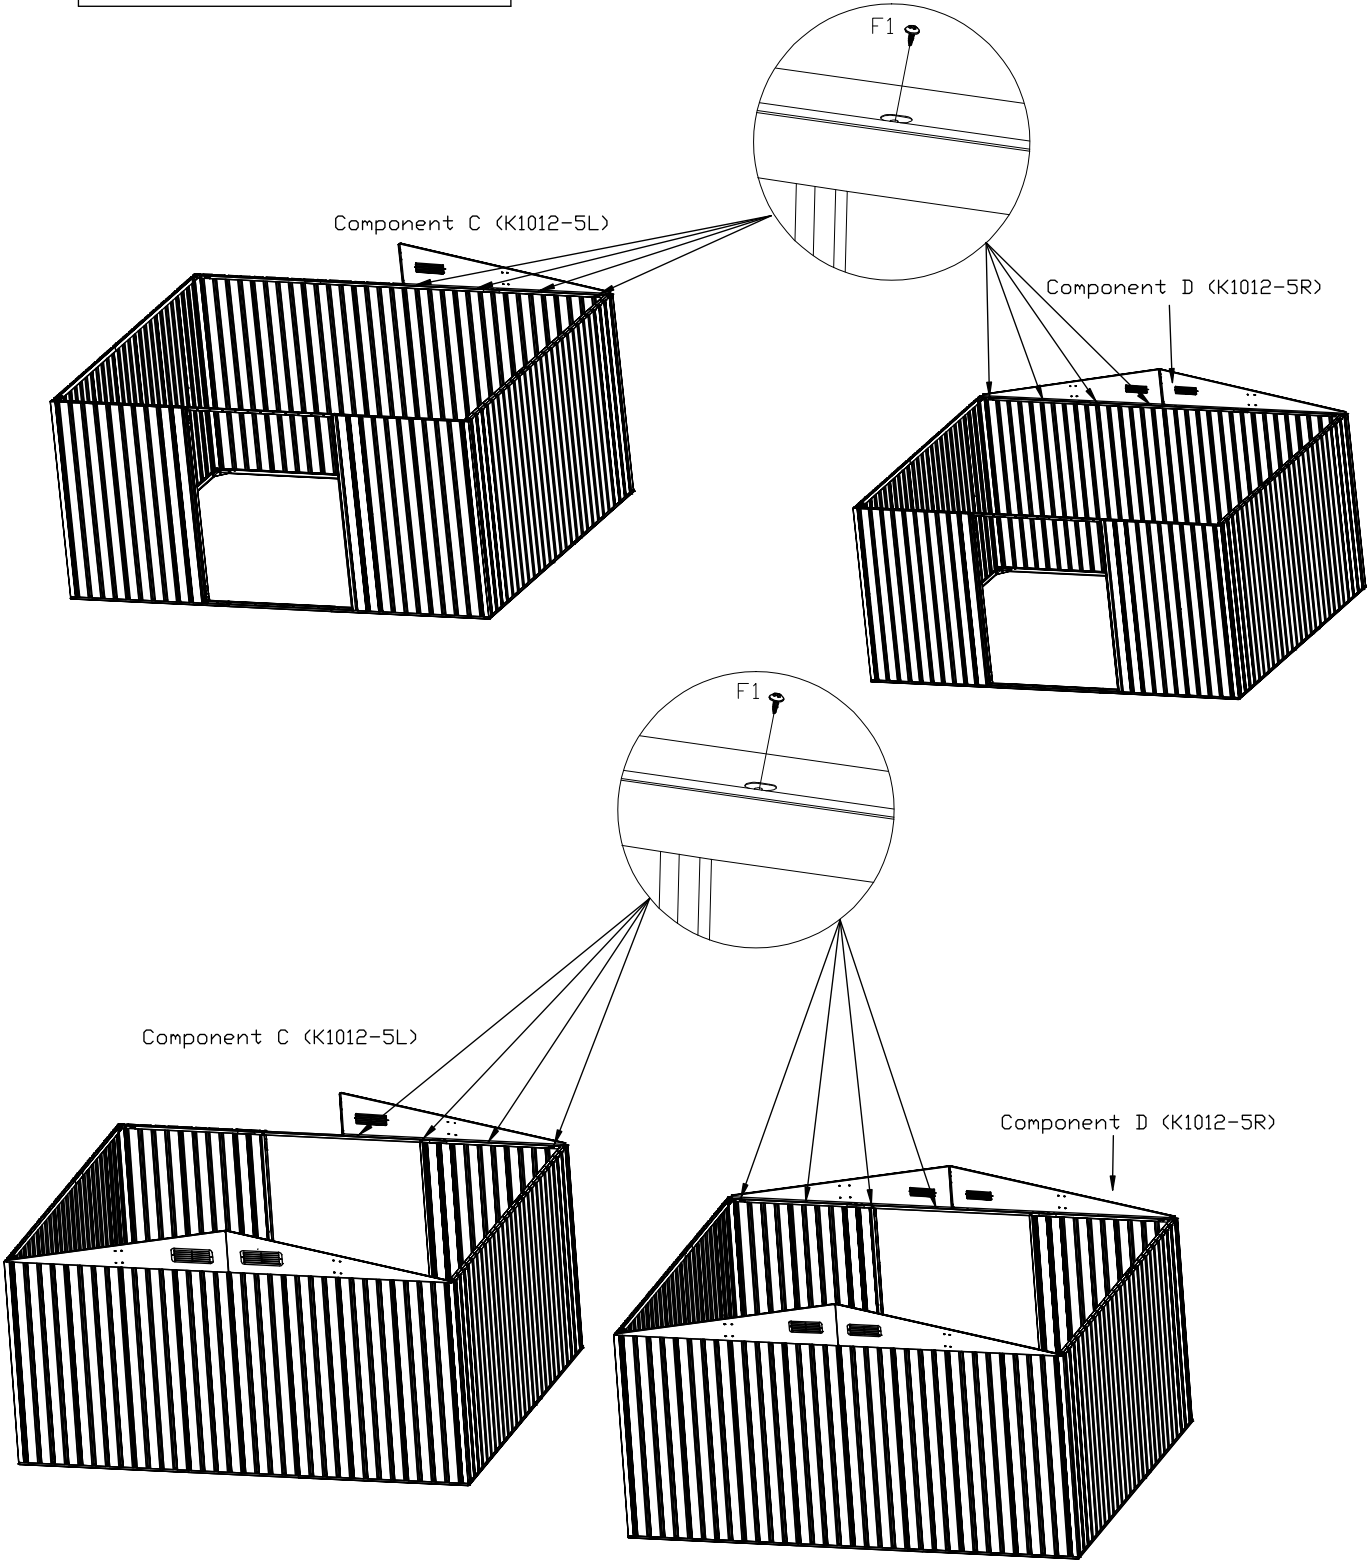

STEP 14

| PART                                                                              | NO.      | QTY |
|-----------------------------------------------------------------------------------|----------|-----|
|  | C3       | 4   |
|  | K1012-11 | 8   |
|  | F1       | 16  |
|  | F2       | 4   |
| F1:ST4.2*10 F2:M4*10                                                              |          |     |

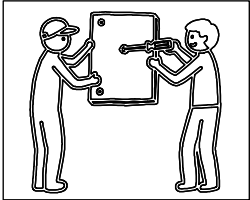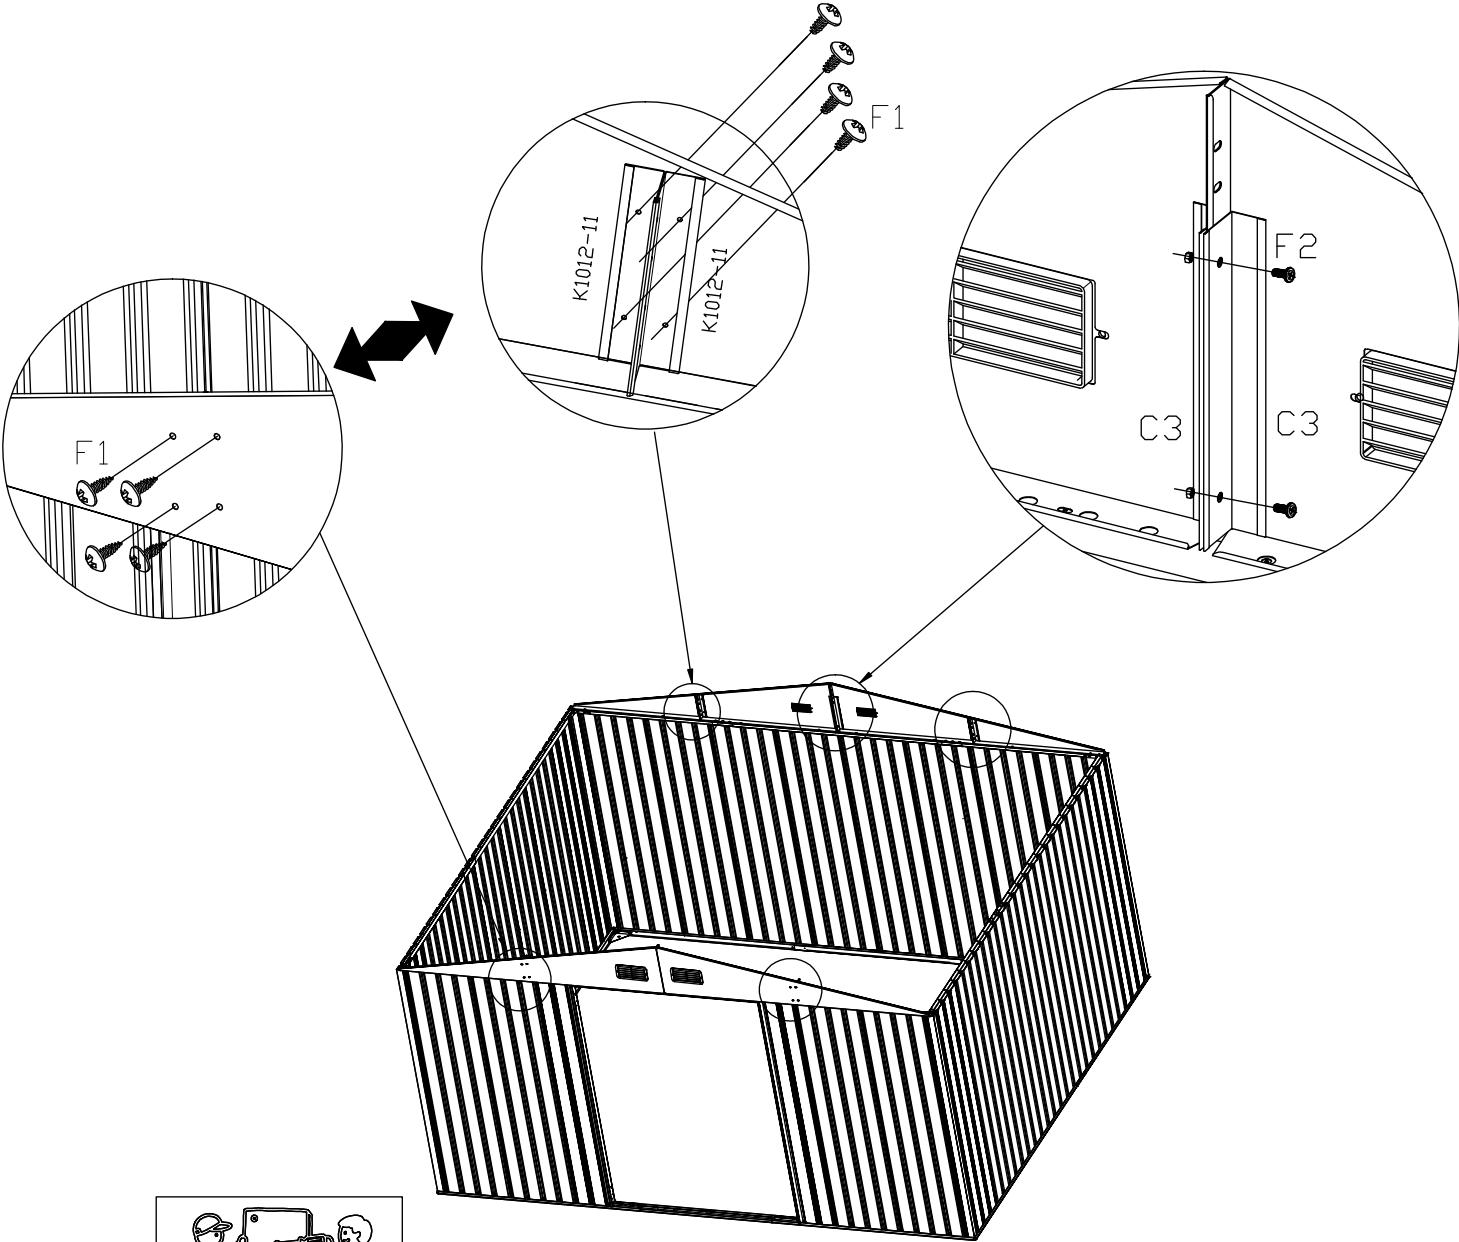


This step requires two people to complete the installation together.


STEP 15

K1010-6L has a smaller width and can be fitted into K1010-6R Align the holes.


| PART                                                                                | NO.      | QTY |
|-------------------------------------------------------------------------------------|----------|-----|
|  | K1010-6L | 6   |
|  | K1010-6R | 6   |
|  | F2       | 30  |
| F2:M4*10                                                                            |          |     |

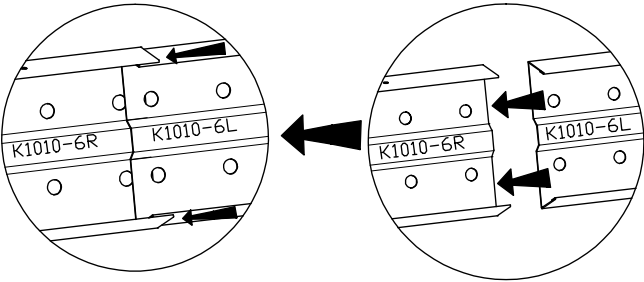

3 groups

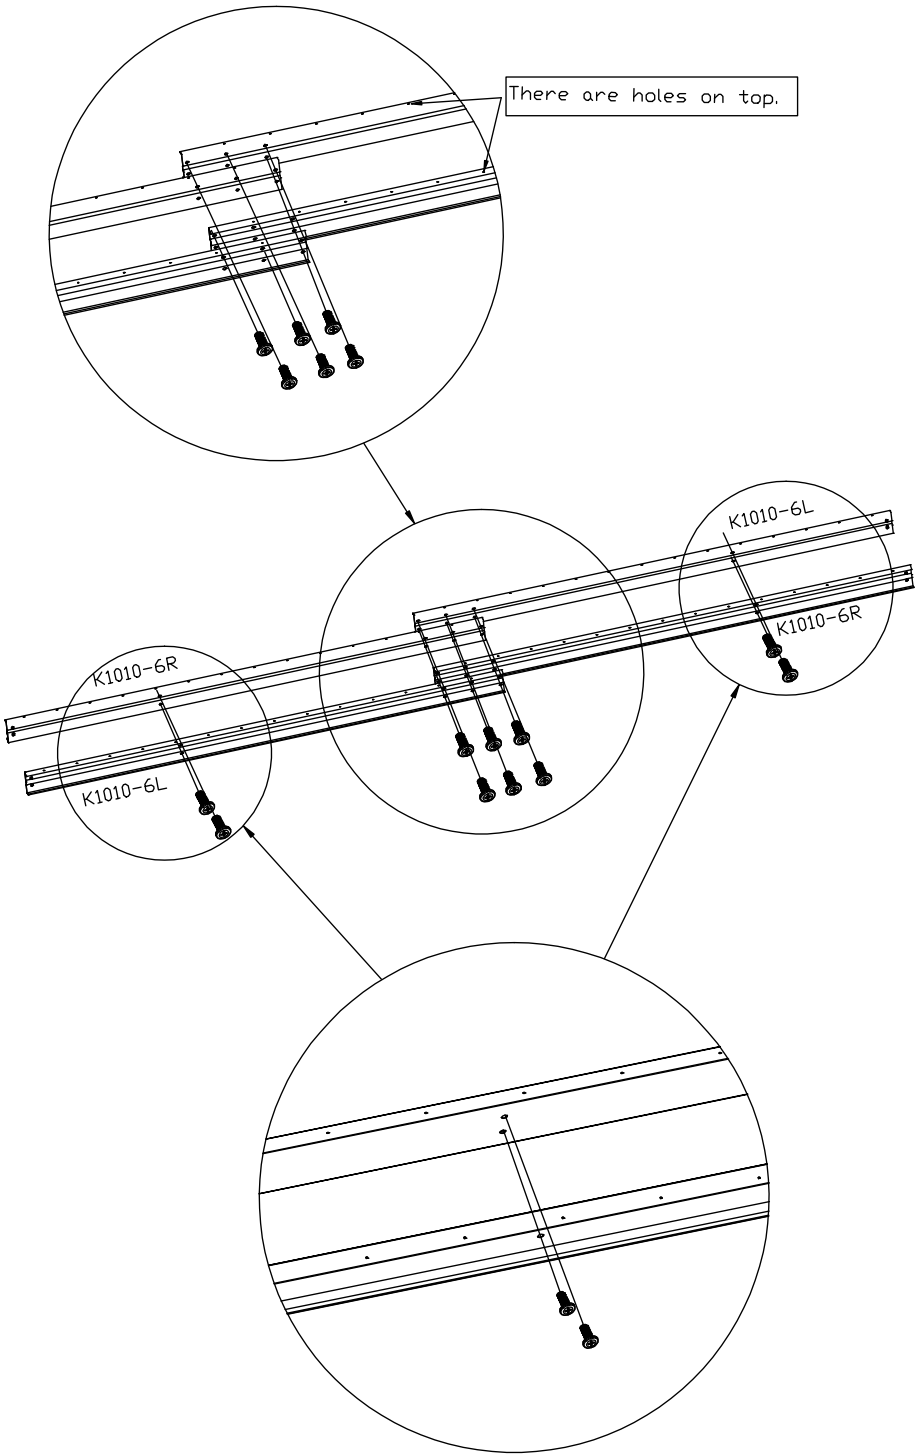


STEP 16

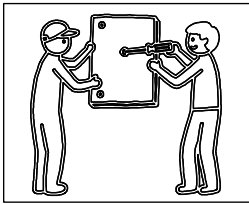

This step requires two people to complete the installation together.


| PART                                                                                | NO. | QTY |
|-------------------------------------------------------------------------------------|-----|-----|
|  | F2  | 12  |
| F2:M4*10                                                                            |     |     |

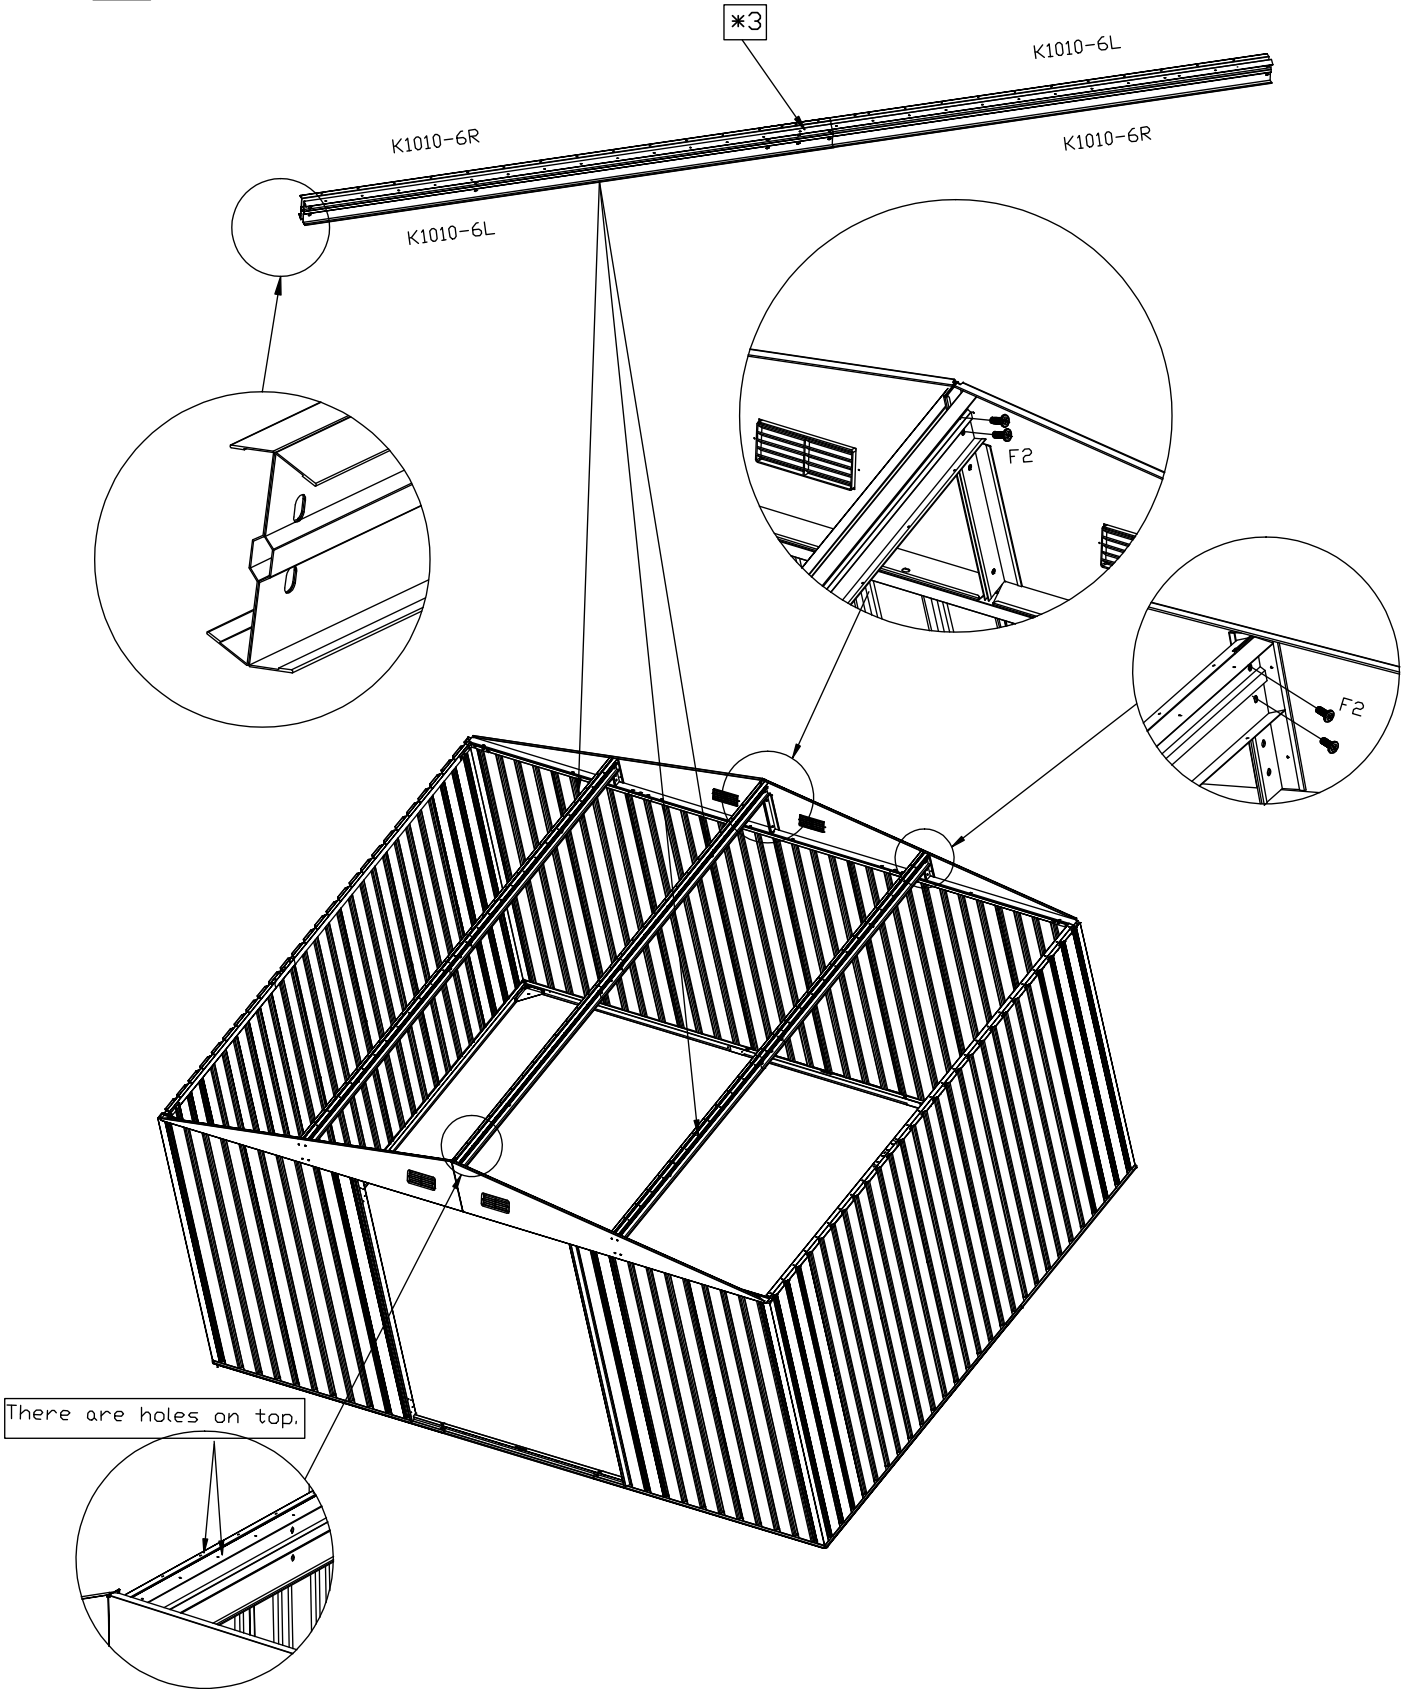



STEP 17

| PART                                                                                | NO.      | QTY |
|-------------------------------------------------------------------------------------|----------|-----|
|  | K1012-7L | 1   |
|  | F1       | 6   |
|  | V2       | 6   |
| F1:ST4.2*10 V2:Ø10*Ø4*1                                                             |          |     |







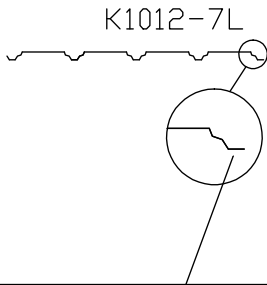


This is the installation of flat edges and K1012-8, otherwise, there will be interference phenomena.

Install according to the diagram:  
The edge extends outward by about 50mm.

Pay attention to the installation dimensions of the top cover plate.

Attention: There are small holes on the outside for assembly with K1012-8.

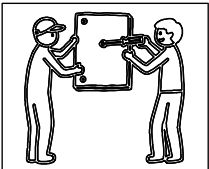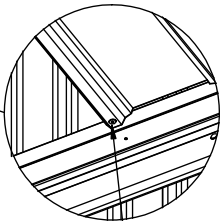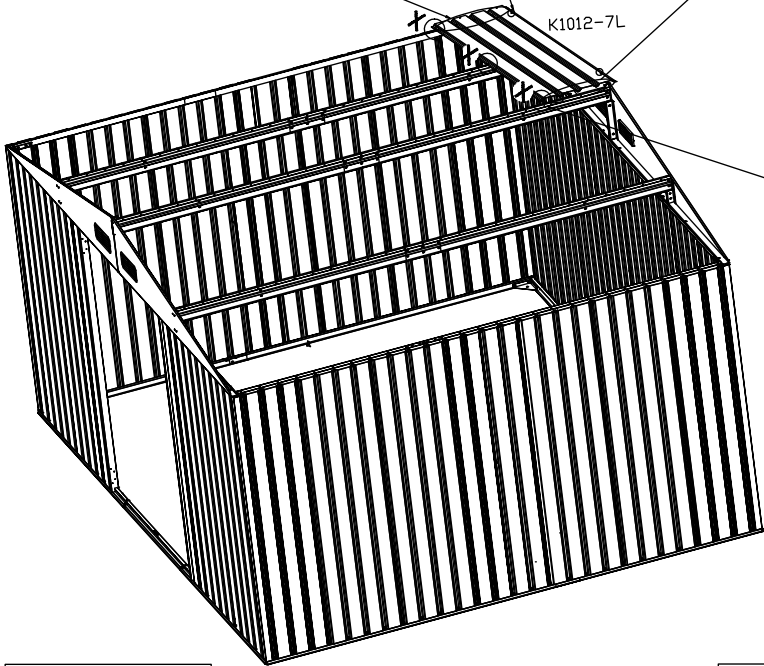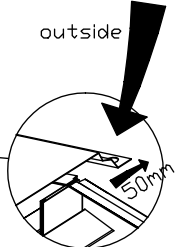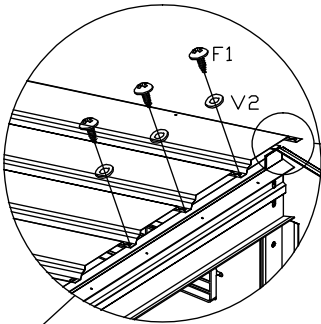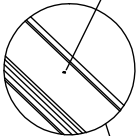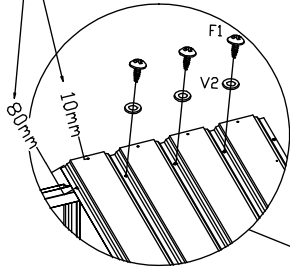


Do not add screws that indicated with an X in diagram These need to be left undone.



This step requires two people to complete the installation together.




STEP 18

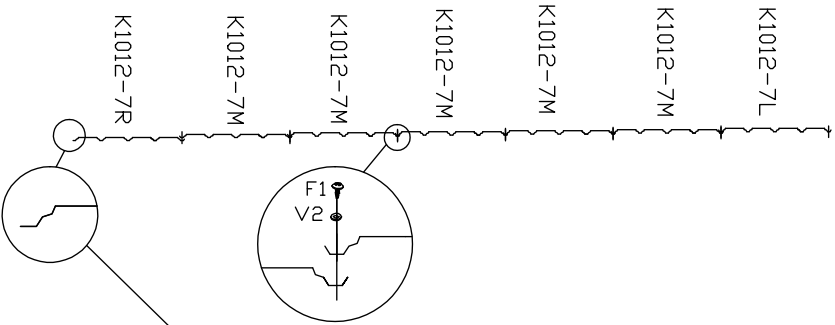


This is the installation of flat edges and K1012-8, otherwise, there will be interference phenomena.

| PART                                                                                | NO.      | QTY |
|-------------------------------------------------------------------------------------|----------|-----|
|  | K1012-7M | 5   |
|  | K1012-7R | 1   |
|  | F1       | 54  |
|  | V2       | 54  |
| F1:ST4.2*10 V2:Ø10*Ø4*1                                                             |          |     |

Pay attention to the installation dimensions of the top cover plate.

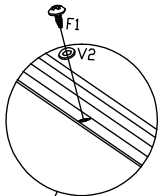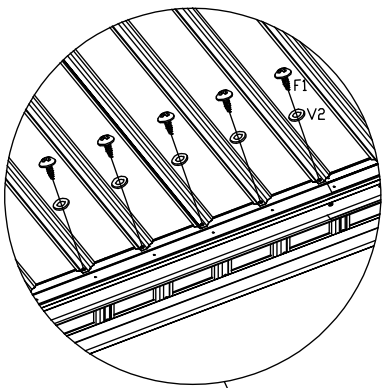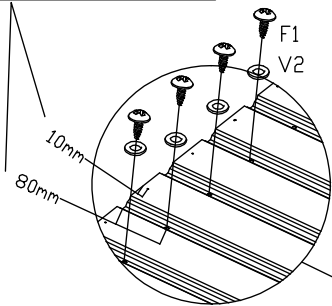


Attention: There are small holes on the outside for assembly with K1012-8.

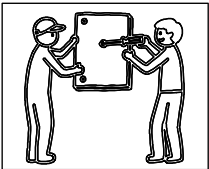


This step requires two people to complete the installation together.

## STEP 1 9

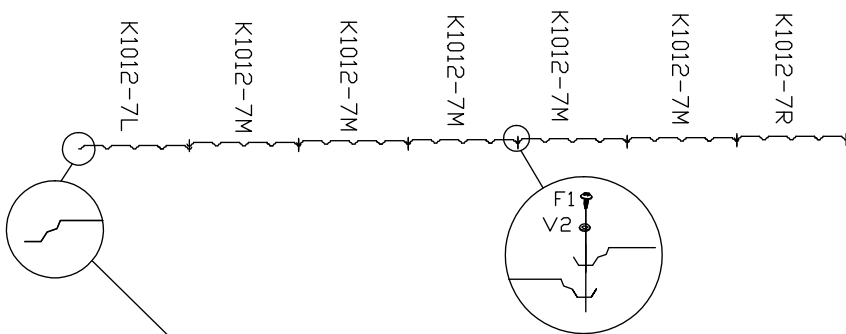

This is the installation of flat edges and K1012-8, otherwise, there will be interference phenomena.


| PART                    | NO.      | QTY |
|-------------------------|----------|-----|
|                         | K1012-7L | 1   |
|                         | K1012-7M | 5   |
|                         | K1012-7R | 1   |
|                         | F1       | 60  |
|                         | V2       | 60  |
| F1:ST4.2*10 V2:Ø10*Ø4*1 |          |     |

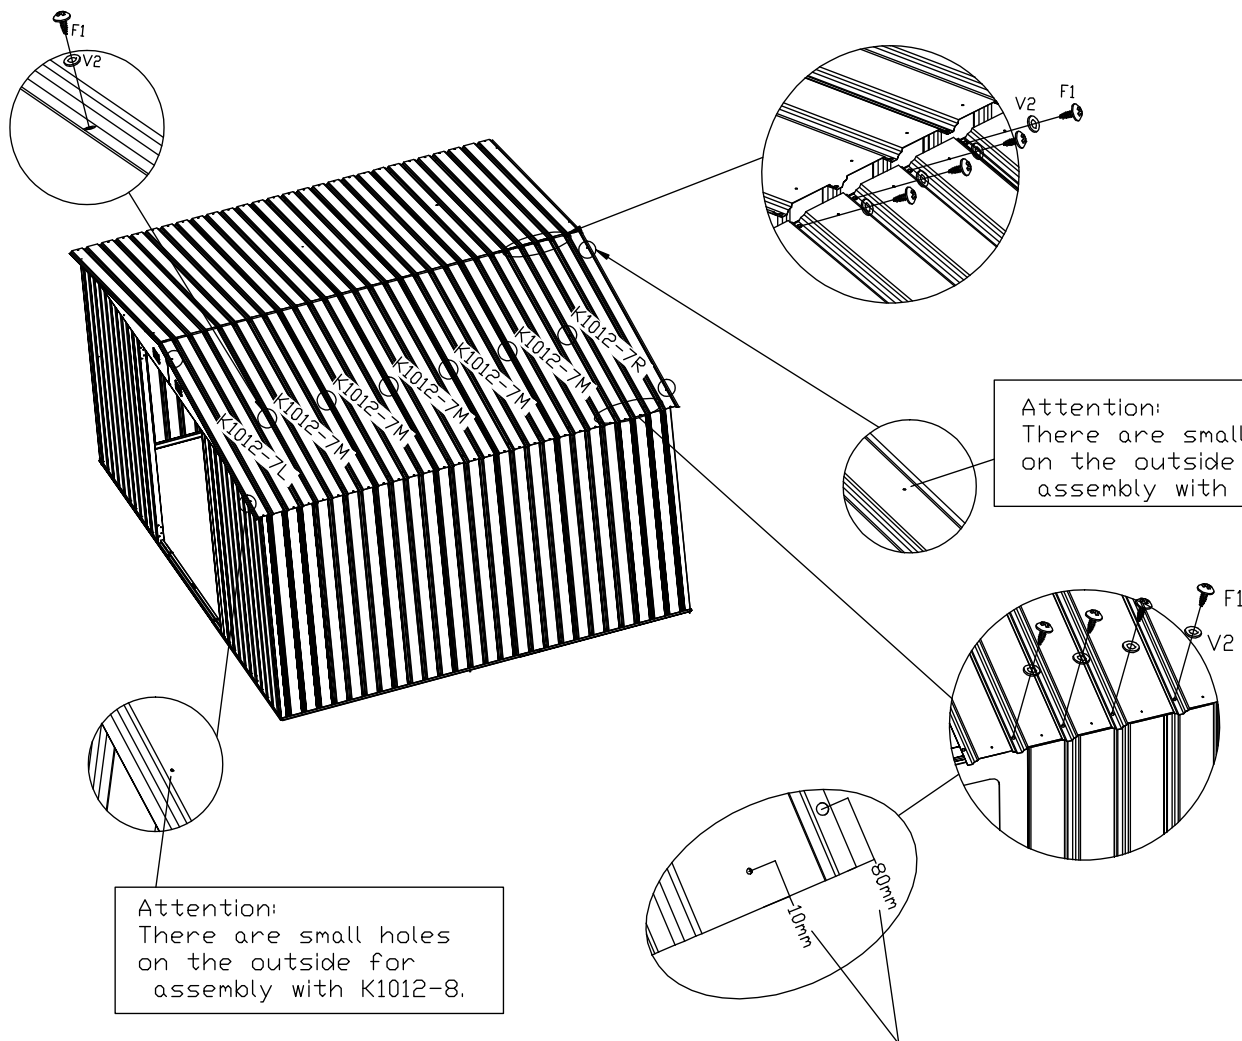

Attention:  
There are small holes  
on the outside for  
assembly with K1012-8.

Attention:  
There are small holes  
on the outside for  
assembly with K1012-8.



Pay attention to the  
installation dimensions of the  
top cover plate.

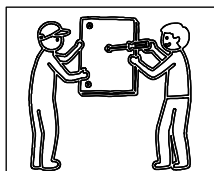

This step requires two people to complete the installation together.

STEP 2 0

| PART                                                                                | NO.      | QTY |
|-------------------------------------------------------------------------------------|----------|-----|
|   | K1012-9L | 2   |
|   | K1012-9R | 2   |
|   | K1012-8  | 8   |
|  | F1       | 28  |
|  | V2       | 28  |
| F1:ST4.2*10 V2:Ø10*Ø4*1                                                             |          |     |

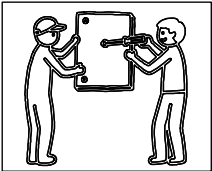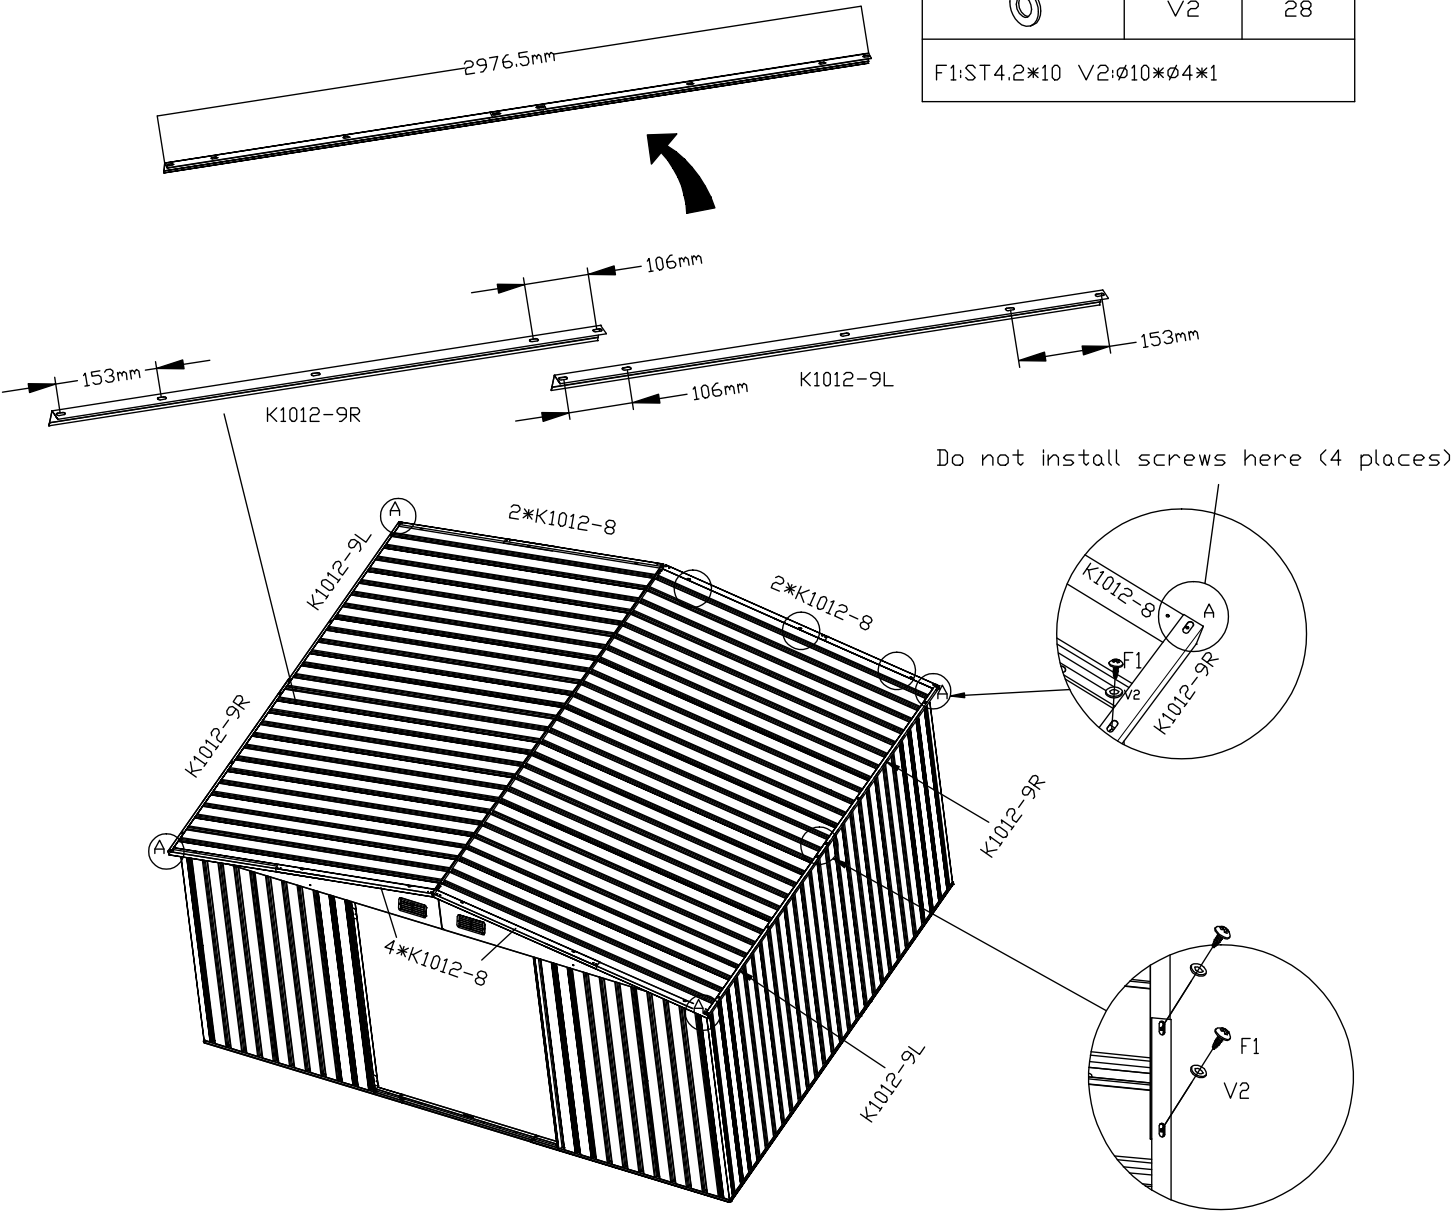


This step requires two people to complete the installation together.


STEP 2 1

| PART                                                                                | NO.       | QTY |
|-------------------------------------------------------------------------------------|-----------|-----|
|  | K1012-10R | 1   |
|  | K810-10   | 1   |
|  | F1        | 4   |
|  | V2        | 4   |
| F1:ST4.2*10 V2:Ø10*Ø4*1                                                             |           |     |



According to the diagram, the two components of the roof rain shield should be connected with F1 self tapping screws before proceeding with subsequent installation.

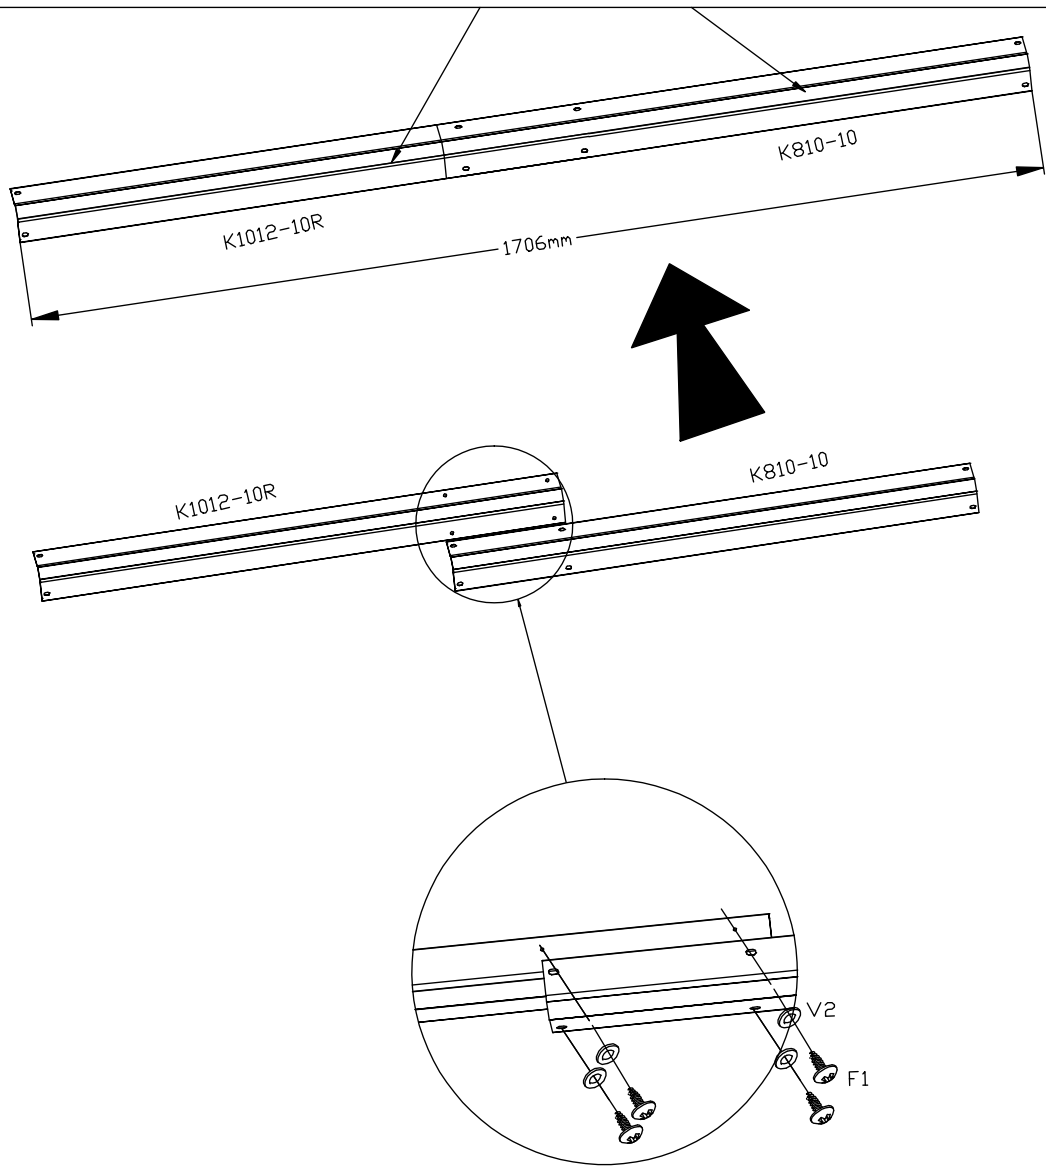

STEP 2 2

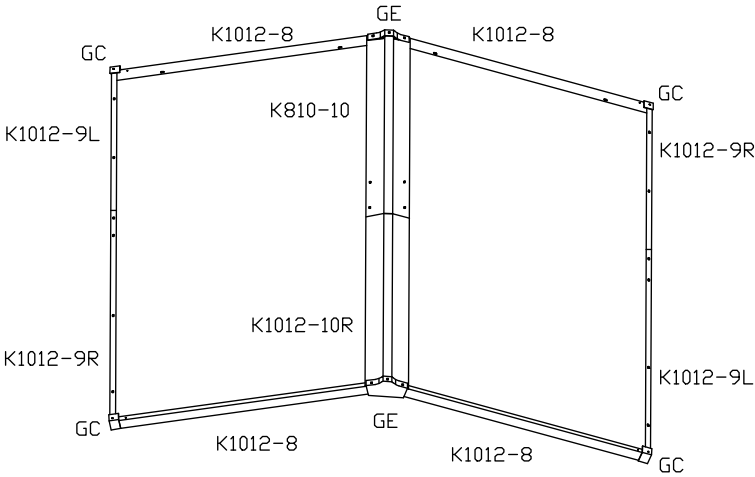


| PART                                                                                | NO. | QTY |
|-------------------------------------------------------------------------------------|-----|-----|
|  | GC  | 4   |
|  | GE  | 2   |
|  | F1  | 4   |
|  | F4  | 4   |
|  | V2  | 8   |
| F1:ST4.2*10 V2:Ø10*Ø4*1 F4:ST4*16                                                   |     |     |

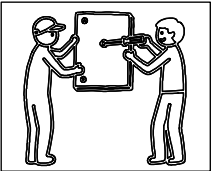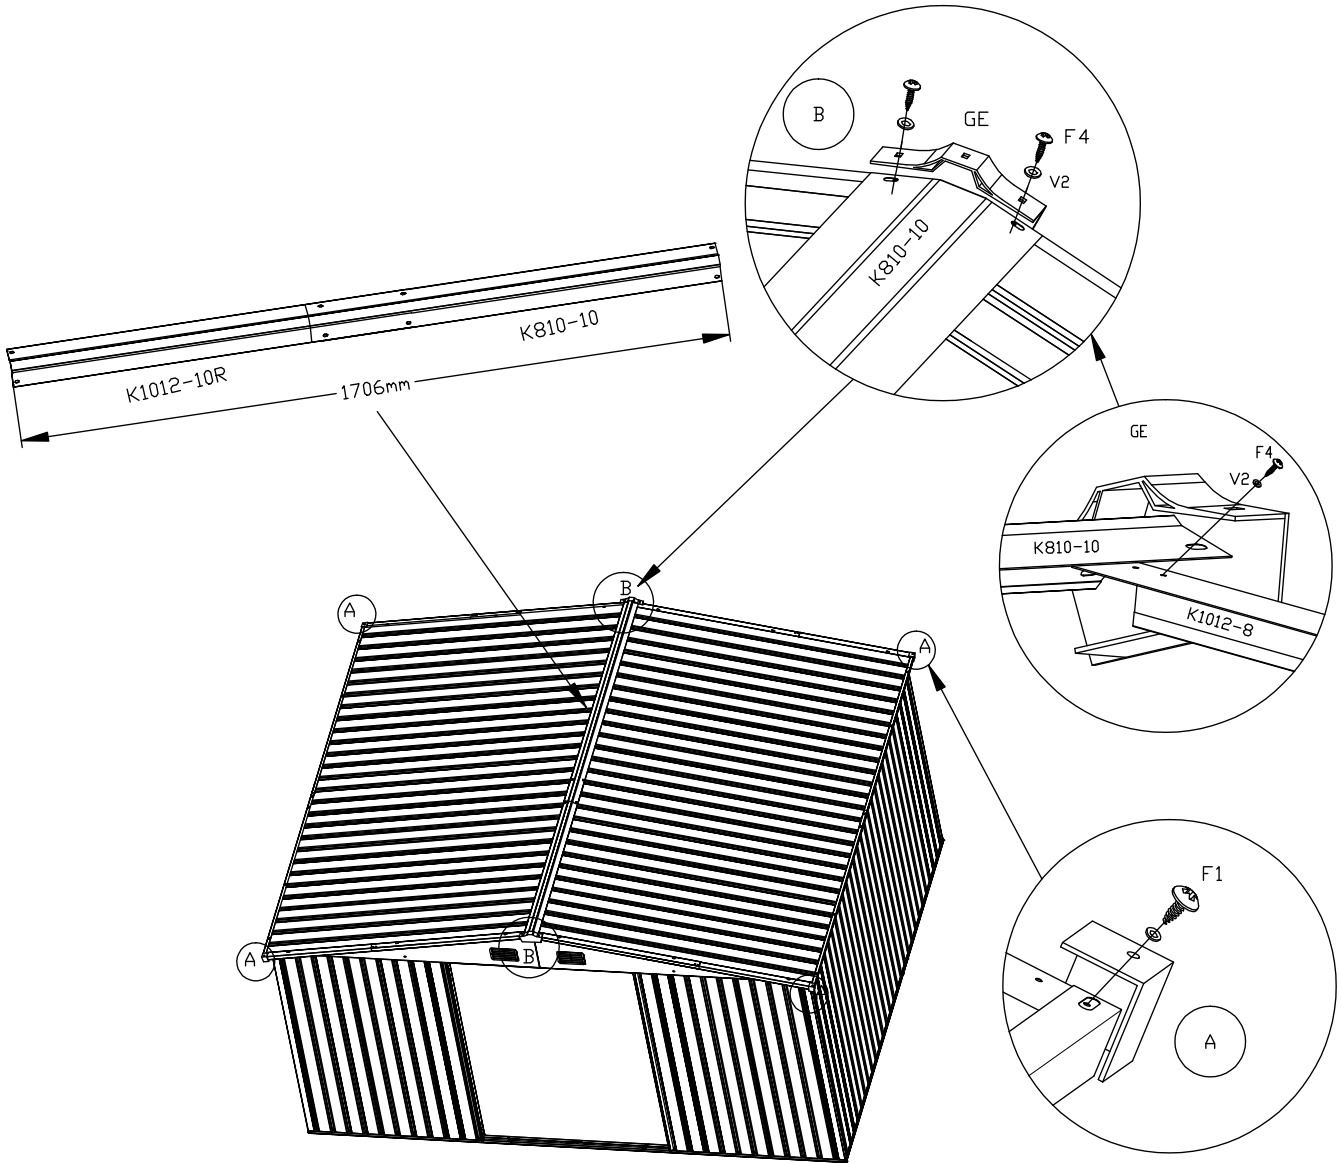

This step requires two people to complete the installation together.



STEP 2 3

Left door panel splicing

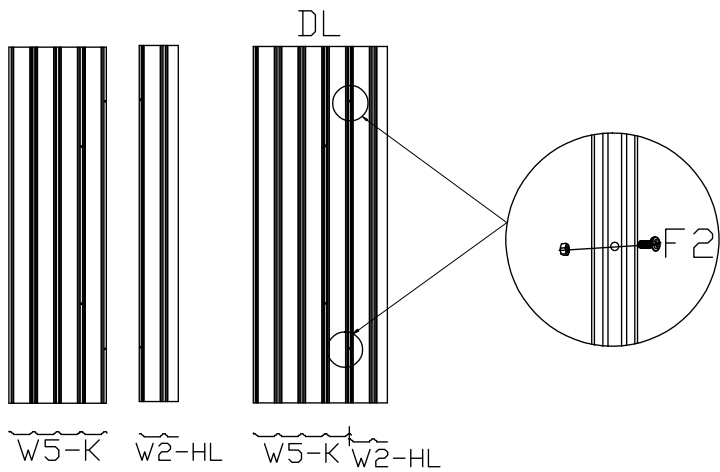

| PART     | NO.   | QTY. |
|----------|-------|------|
|          | W5-K  | 1    |
|          | W2-HL | 1    |
|          | DDA   | 2    |
|          | F2    | 2    |
| F2:M4*10 |       |      |

positive

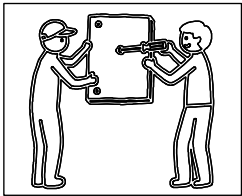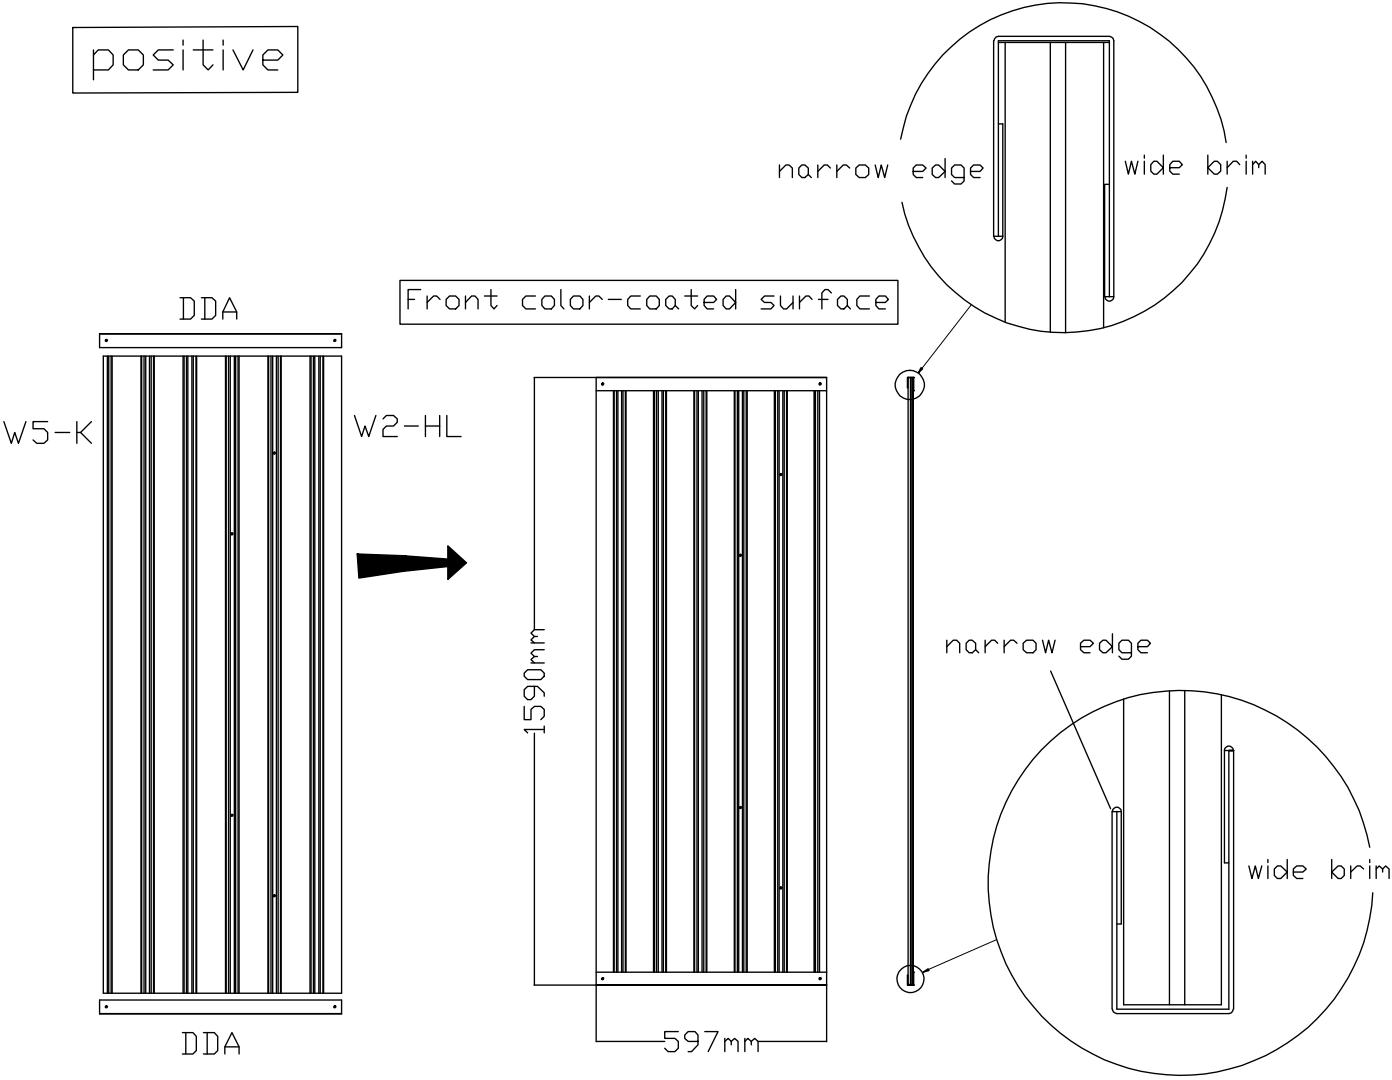

The door panel W2-HL and W5-K snap into the DDA slot.



This step requires two people to complete the installation together.



STEP 2 4

Left door panel splicing

positive

| PART                                                                                | NO. | QTY. |
|-------------------------------------------------------------------------------------|-----|------|
|  | DA  | 1    |
|  | DLA | 1    |
|  | F1  | 4    |
| F1:ST4.2*10                                                                         |     |      |

Front color-coated surface

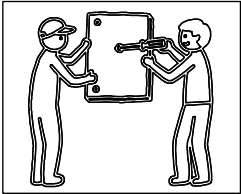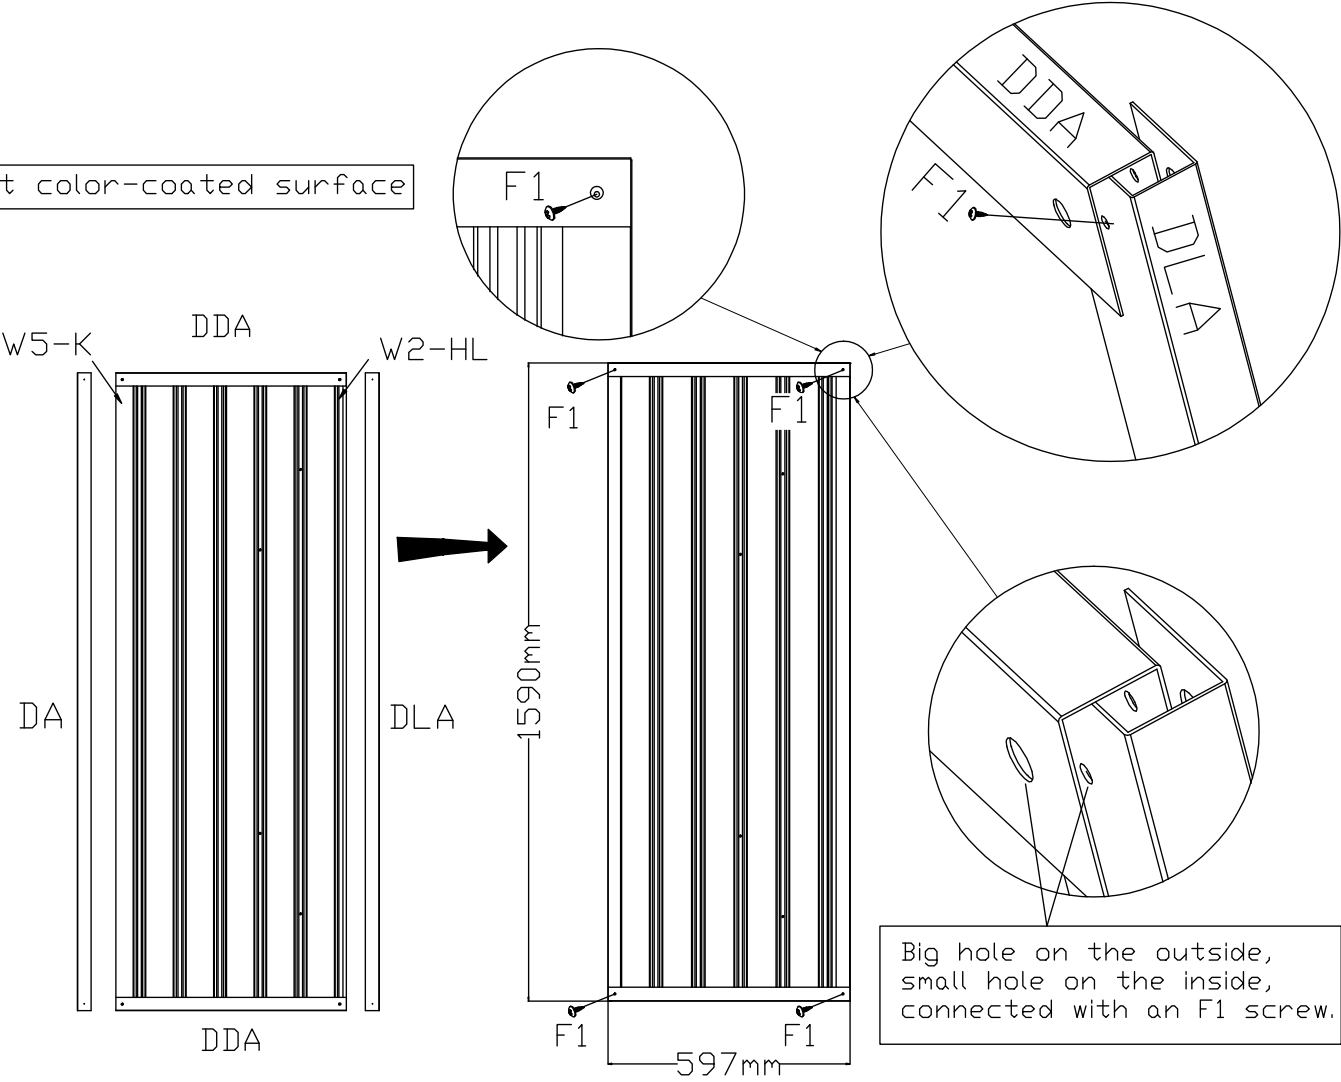


This step requires two people to complete the installation together.




## STEP 2 5

### Left door panel splicing

F1: ① ② ③ ④ ⑤

| PART                                                                                | NO. | QTY. |
|-------------------------------------------------------------------------------------|-----|------|
|  | DBA | 2    |
|  | F1  | 5    |
|  | F2  | 2    |
| F1:ST4.2*10 F2:M4*10                                                                |     |      |

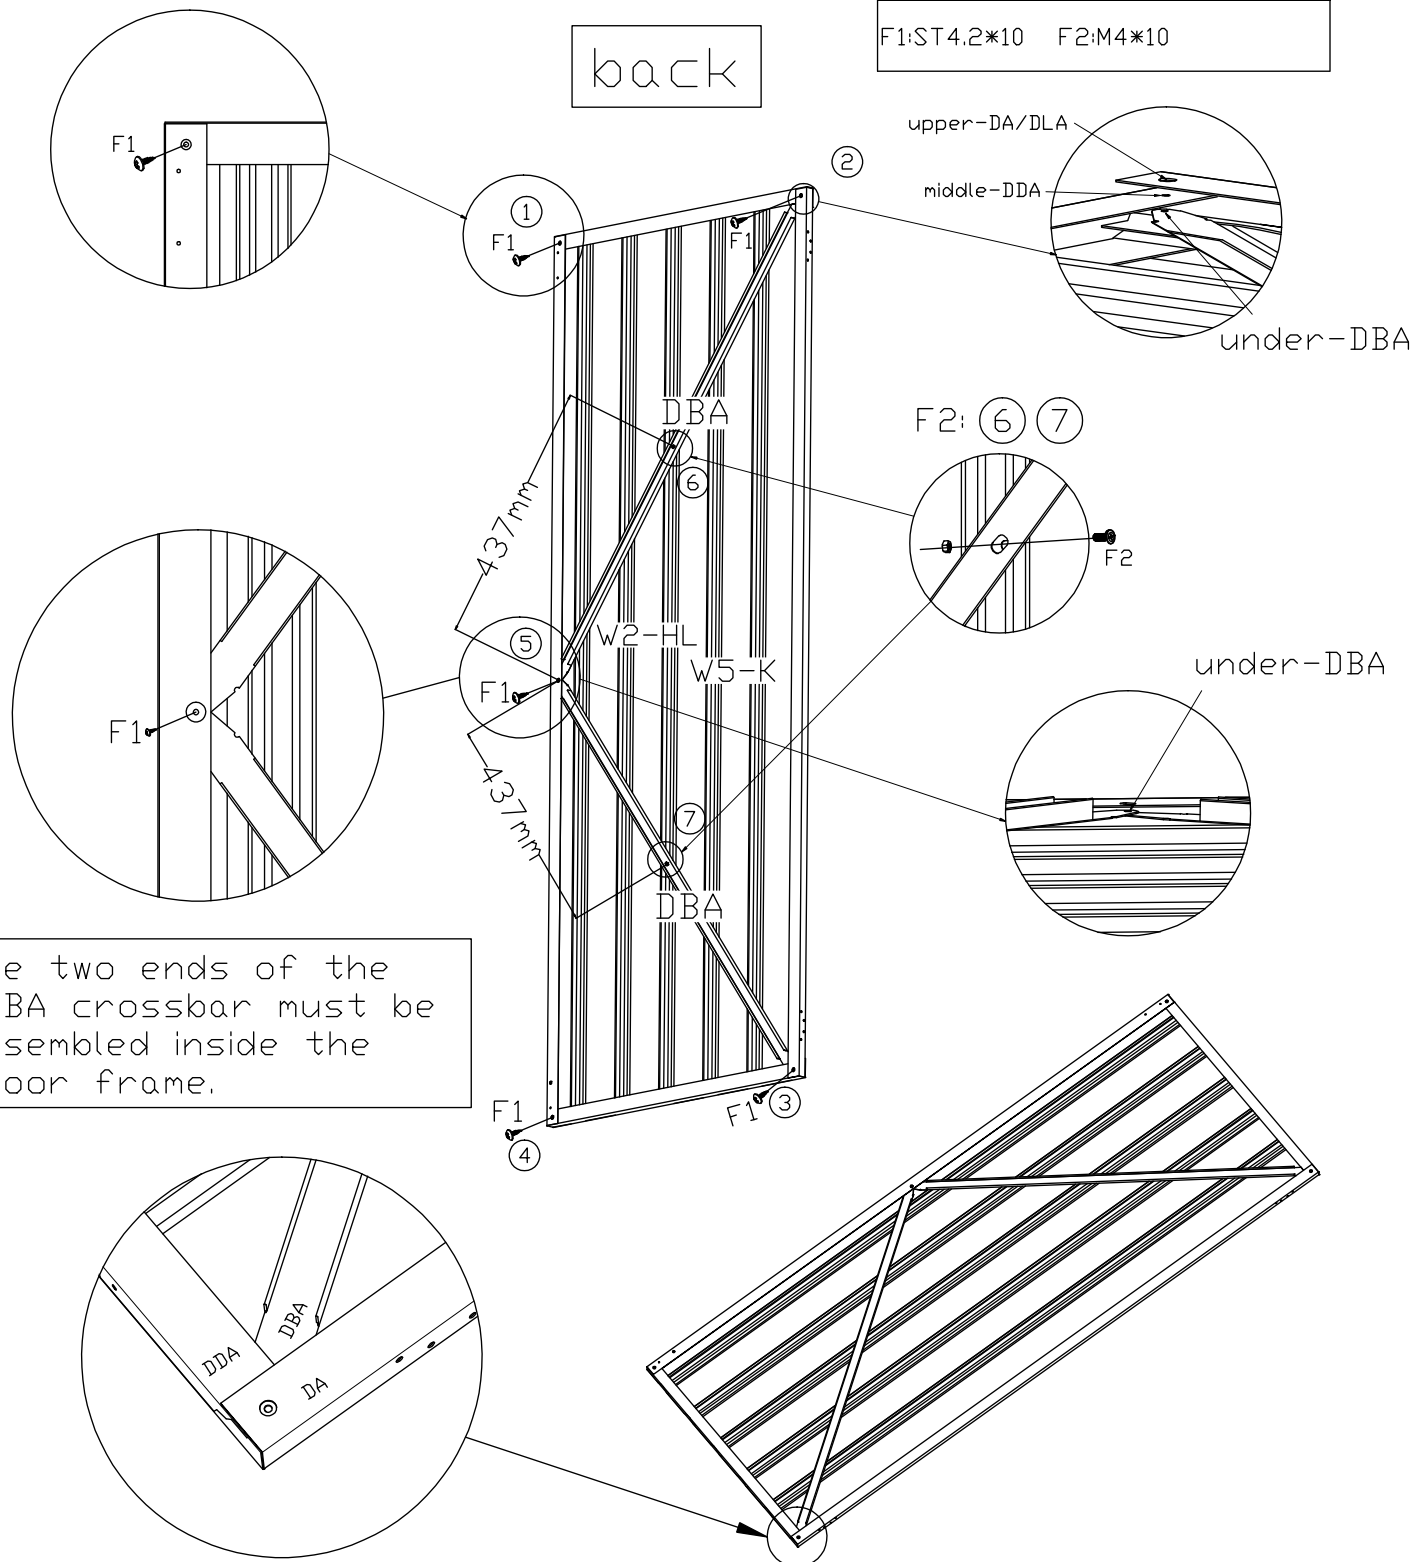



The cross pole DBA must be installed underneath DDA and DA.

Attention: Installation sequence of screws ① → ② → ③ → ④ → ⑤ → ⑥ → ⑦



STEP 2 6

Right door panel splicing

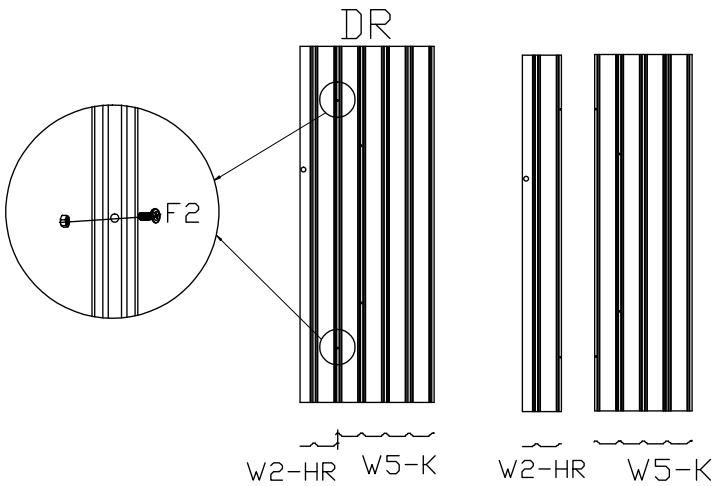

| PART                                                                                | NO.   | QTY. |
|-------------------------------------------------------------------------------------|-------|------|
|  | W5-K  | 1    |
|  | W2-HR | 1    |
|  | DDA   | 2    |
|  | F2    | 2    |
| F2:M4*10                                                                            |       |      |

positive

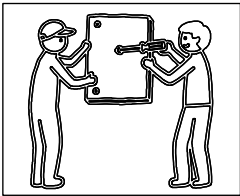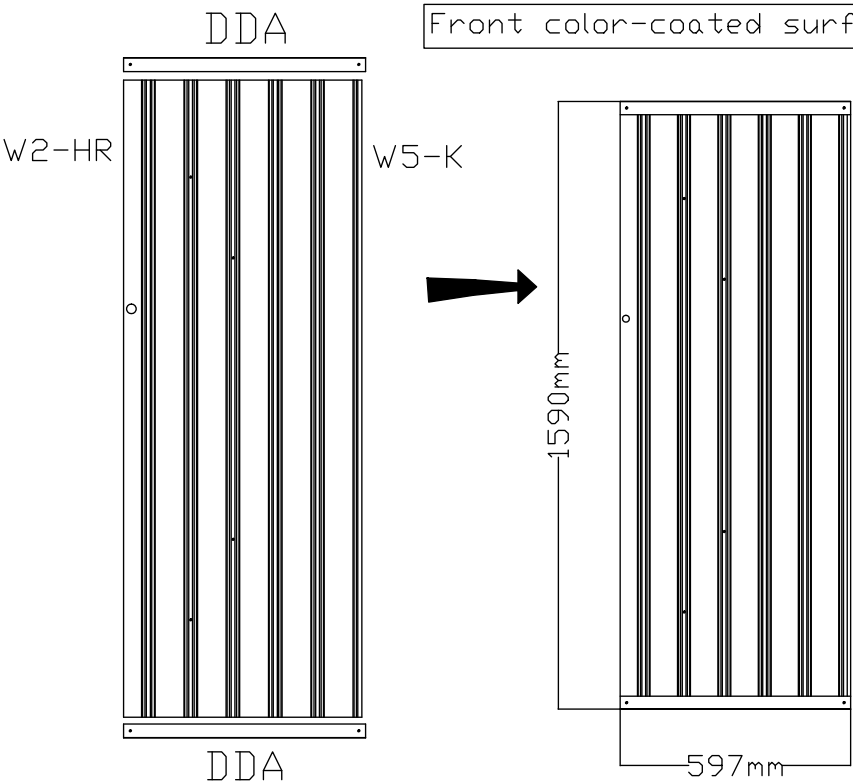

The door panel W2-HR and W5-K snap into the DDA slot.




This step requires two people to complete the installation together.





STEP 2 7

Right door panel splicing



positive

| PART                                                                                | NO. | QTY. |
|-------------------------------------------------------------------------------------|-----|------|
|  | DA  | 1    |
|  | DRA | 1    |
|  | F1  | 4    |
| F1:ST4.2*10                                                                         |     |      |

Front color-coated surface

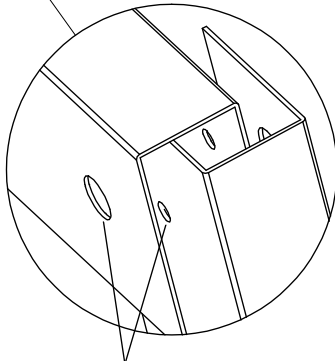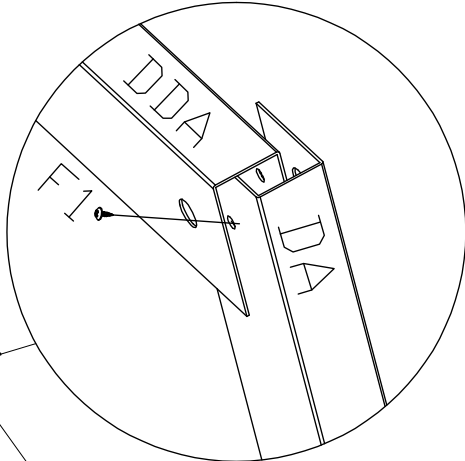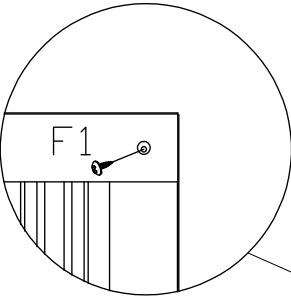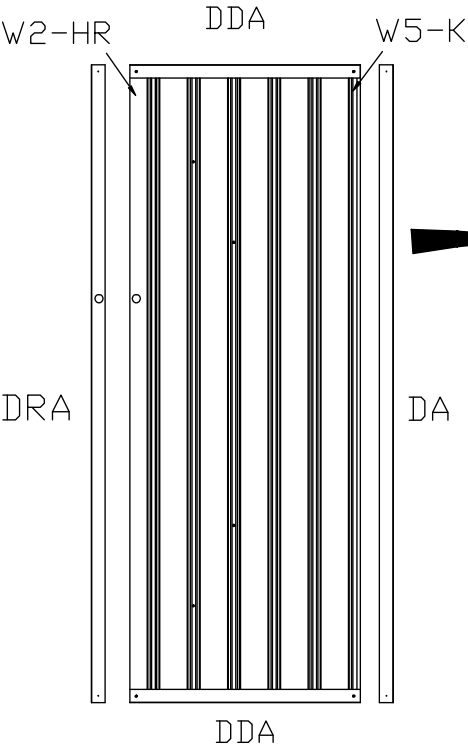

Big hole on the outside,  
small hole on the inside,  
connected with an F1 screw.

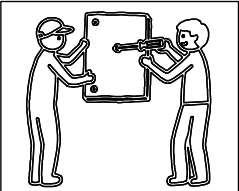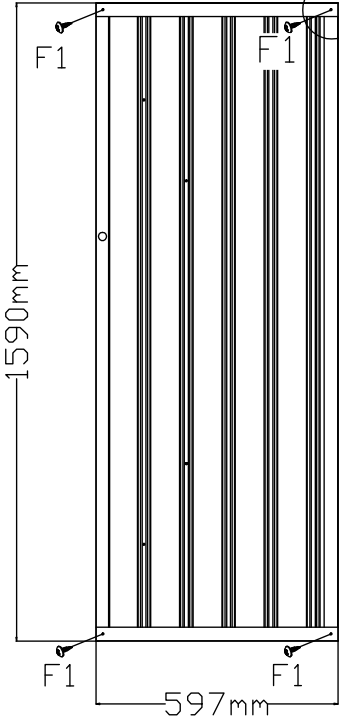


This step requires two people to complete the installation together.

## STEP 2 8

### Right door panel splicing






Attention: Installation sequence of screws ①→②→③→④→⑤→⑥→⑦

| PART                                                                                | NO. | QTY. |
|-------------------------------------------------------------------------------------|-----|------|
|  | DBA | 2    |
|  | F1  | 5    |
|  | F2  | 2    |
| F1:ST4.2*10 F2:M4*10                                                                |     |      |



F1: ① ② ③ ④ ⑤

back

upper-DA/DRA  
middle-DDA  
under-DBA

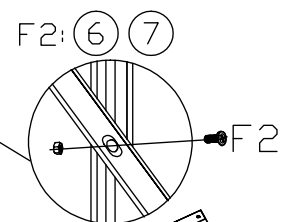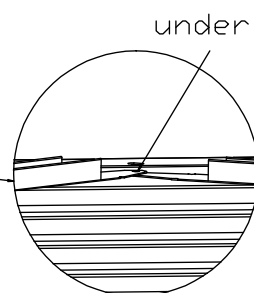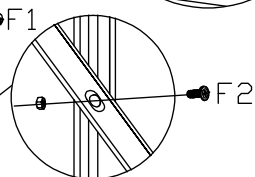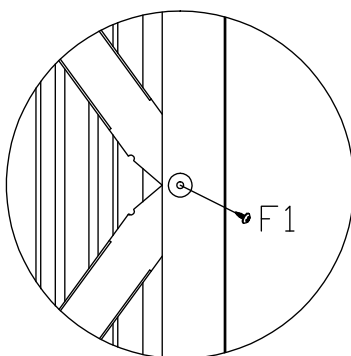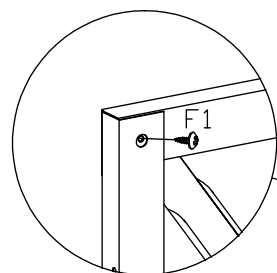


The two ends of the DBA crossbar must be assembled inside the door frame.

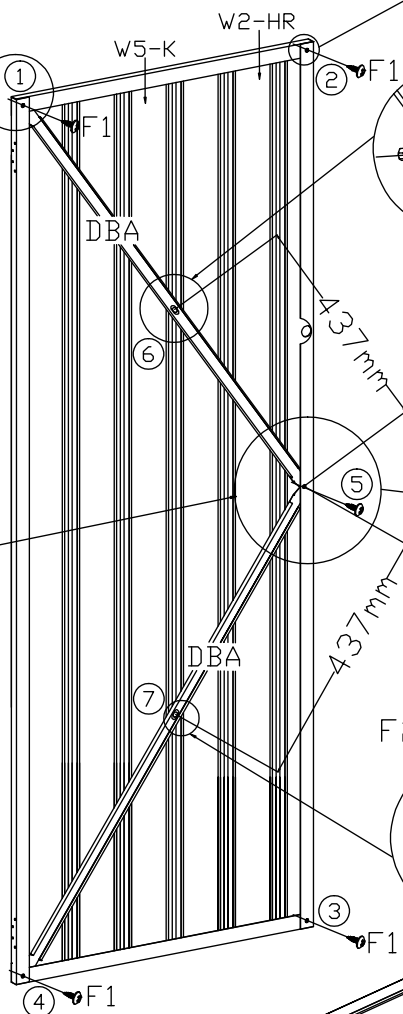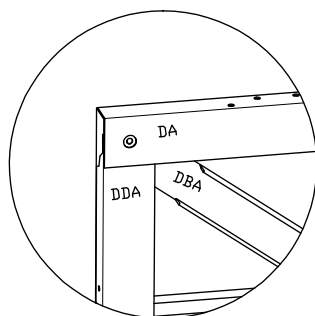


The cross pole DBA must be installed underneath DDA and DA.



STEP 2 9

| PART                                                                                | NO. | QTY. |
|-------------------------------------------------------------------------------------|-----|------|
|  | DH  | 4    |
|  | DC  | 2    |
|  | F3  | 16   |
|  | GL  | 1    |
|  | F1  | 4    |
| F1:ST4.2*10 F3:ST4*10                                                               |     |      |

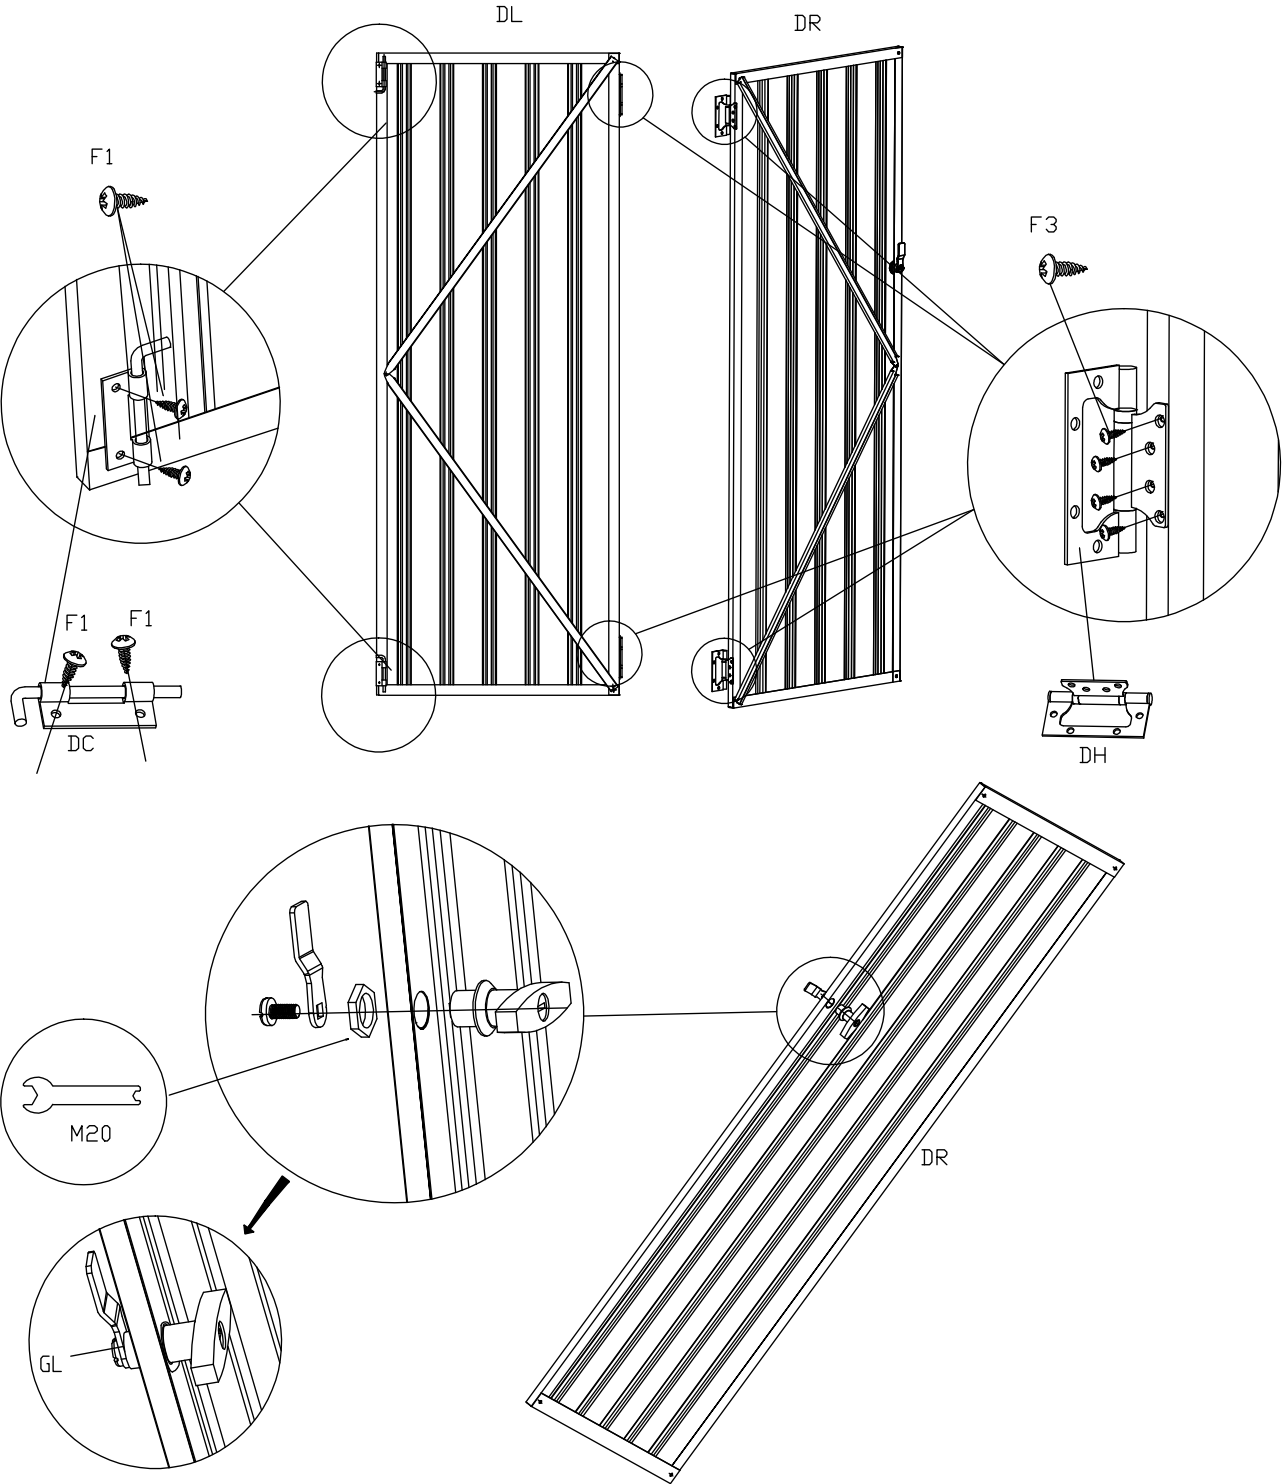

STEP 30

| PART                                                                                | NO. | QTY. |
|-------------------------------------------------------------------------------------|-----|------|
|  | DL  | 1    |
|  | DR  | 1    |
|  | F3  | 16   |
| F3:ST4*10                                                                           |     |      |

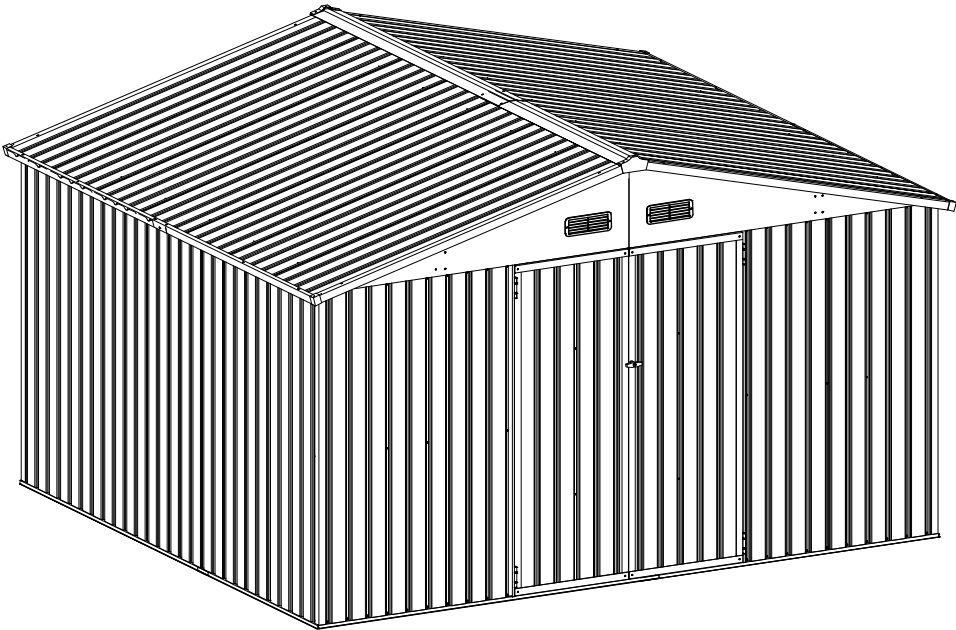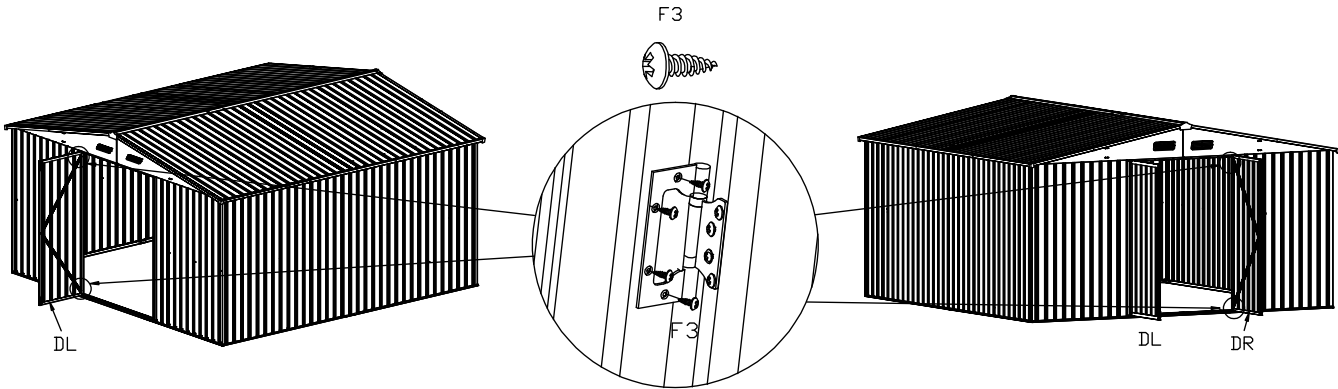


STEP 31

| PART                                                                                | NO. | QTY. |
|-------------------------------------------------------------------------------------|-----|------|
|  | SL  | 66   |



The exposed part of the C4 assembly screw on the upper crossbeam support rod needs to be covered with a plastic protective cap.

Upper beam K1010-6L and K1010-6R and the exposed part of the top cover assembly screws need to be covered with plastic protective caps.

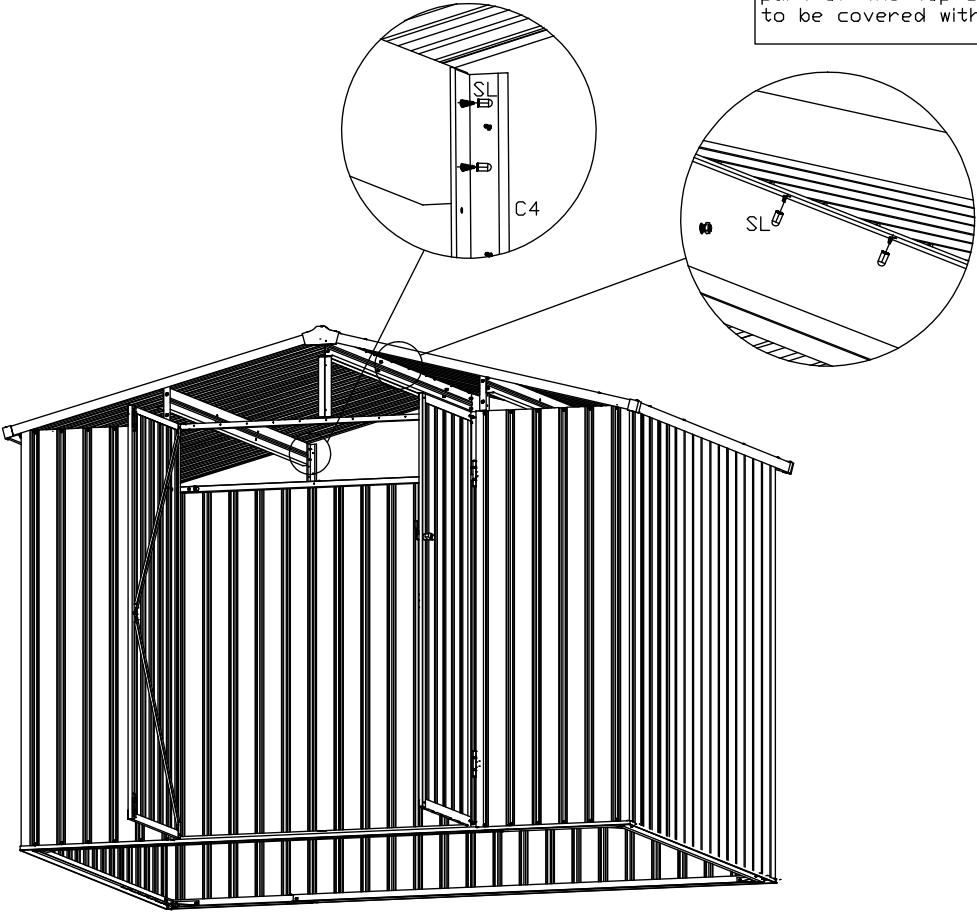

# HELP CENTER

Question about your product? We're here to help. Visit us at:

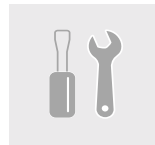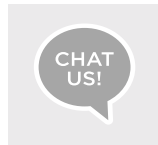

[Chat Support](#)

[Product Inquiry](#)

[Orders FAQ](#)

[Product Assembly](#)

[Returns & Refunds](#)

## We Stand Behind the Quality of Their Furniture

If you have any issues with your item please let us know! We will always do our best to come up with a solution that you will be happy with. Please get in touch with our customer service team before returning the product. And pls do not throw the original box(es) if you have not finished assembling or confirmed no quality issues.

Length of return period:

Items can be returned within 30 days of purchase.

In the meanwhile, everything you purchased from us comes with a one-year warranty.

Who is responsible for the return shipping fee:

We will cover the return shipping fees if:

1. Your item has a manufacturing defect in its materials or workmanship. For example, torn wicker or misaligned screw holes. We will send you a prepaid shipping label after photos are sent.
2. Your item has been damaged in transit. For example, glass is broken or wicker is damaged. We will send you a prepaid shipping label after photos are sent.
3. You receive the wrong box(es) due to a warehouse error. We will send you a prepaid shipping label after photos are sent of the wrong SKU numbers on the outer box(es).
4. One or more boxes are lost in transit. We will send you a prepaid shipping label if you no longer want the item.

\*However, we still hope to work with you for a better solution instead of a return. Please don't hesitate to contact our customer service team.

Customer will cover the return shipping fees if:

1. You don't like the product(s) after receiving the box(es).
2. You no longer need the product(s) but you have received the box(es).
3. You buy the product(s) by mistake but you have received the box(es).
4. Order/Shipment cancellation failed and you have received the box(es).

---

## Return Request

In order to get a full refund as described in this return policy, all items must be: (1) In a brand new/unused condition, please provide photos before and after packaging. (2) When returning, all accessories and parts are firmly packed in all original packaging.

If your return does not meet the requirements, you may not get a full refund.

When will I be refunded?

The refund is released once the goods have been returned to our warehouse.

What if the product is damaged/defective outside of the valid return period?

We want you to be a happy customer. Please reach out to us by email and we will come up with a solution to make sure you are satisfied.

## Reach us at



[support@garvee.com](mailto:support@garvee.com)