





Assembly Instructions

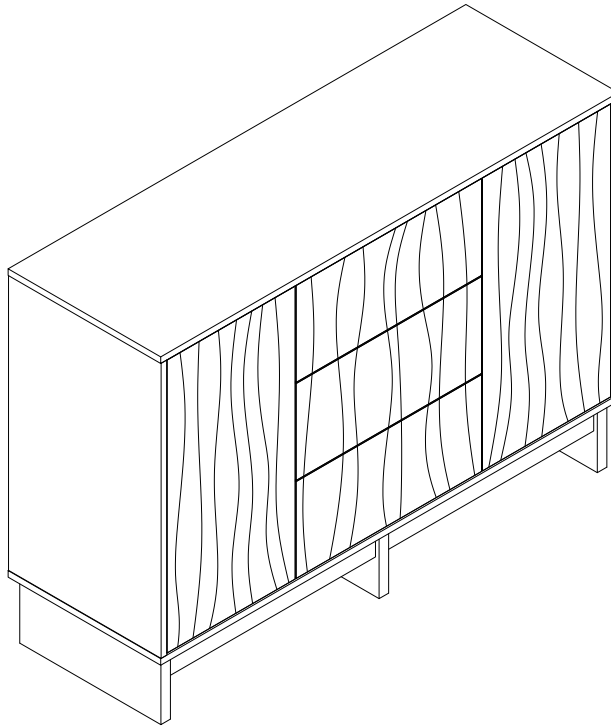

Sideboard


Model No.
SQ-CBG-7002-1.5

The beginning of installation may feel confusing and painful, but it will get better.

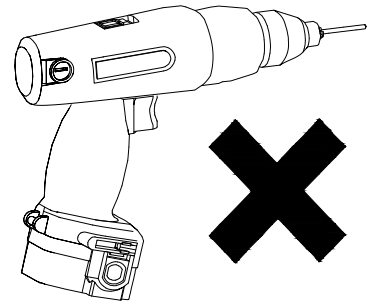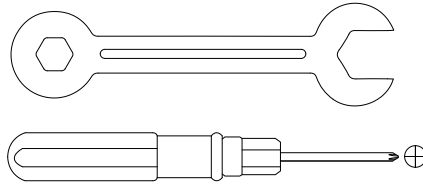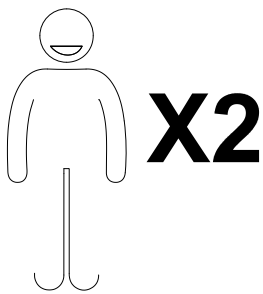



We recommend using hand tools for assembly.


If an electric screwdriver is used, reduce power and torque to avoid damage to the product.

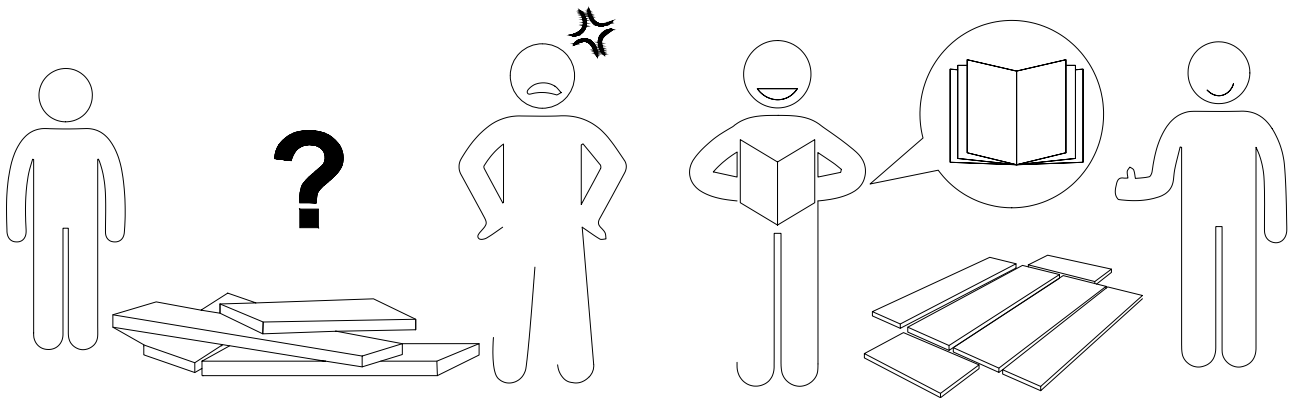

AVOID SCRATCHES

In order to avoid scratching this furniture should be assembled on a soft layer—could be a rug.






















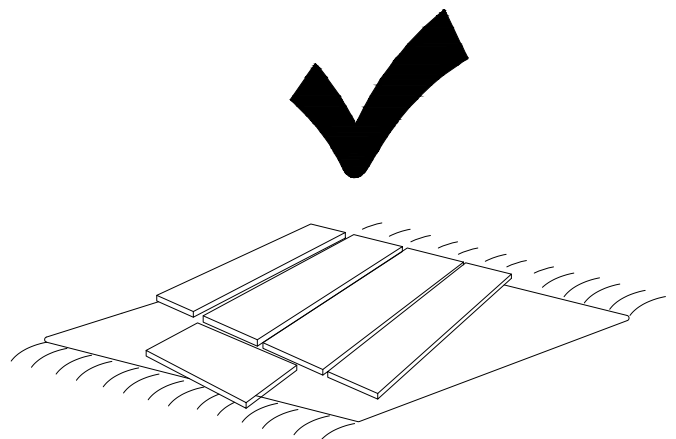
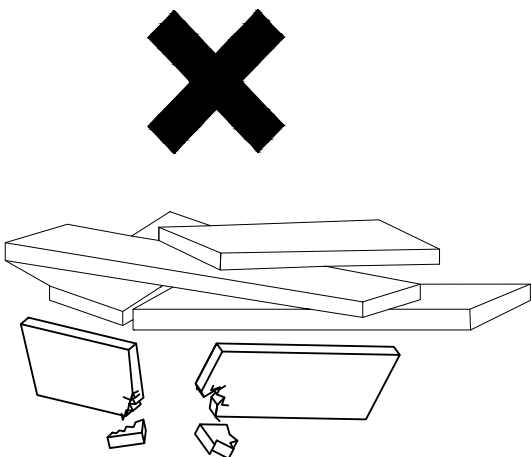


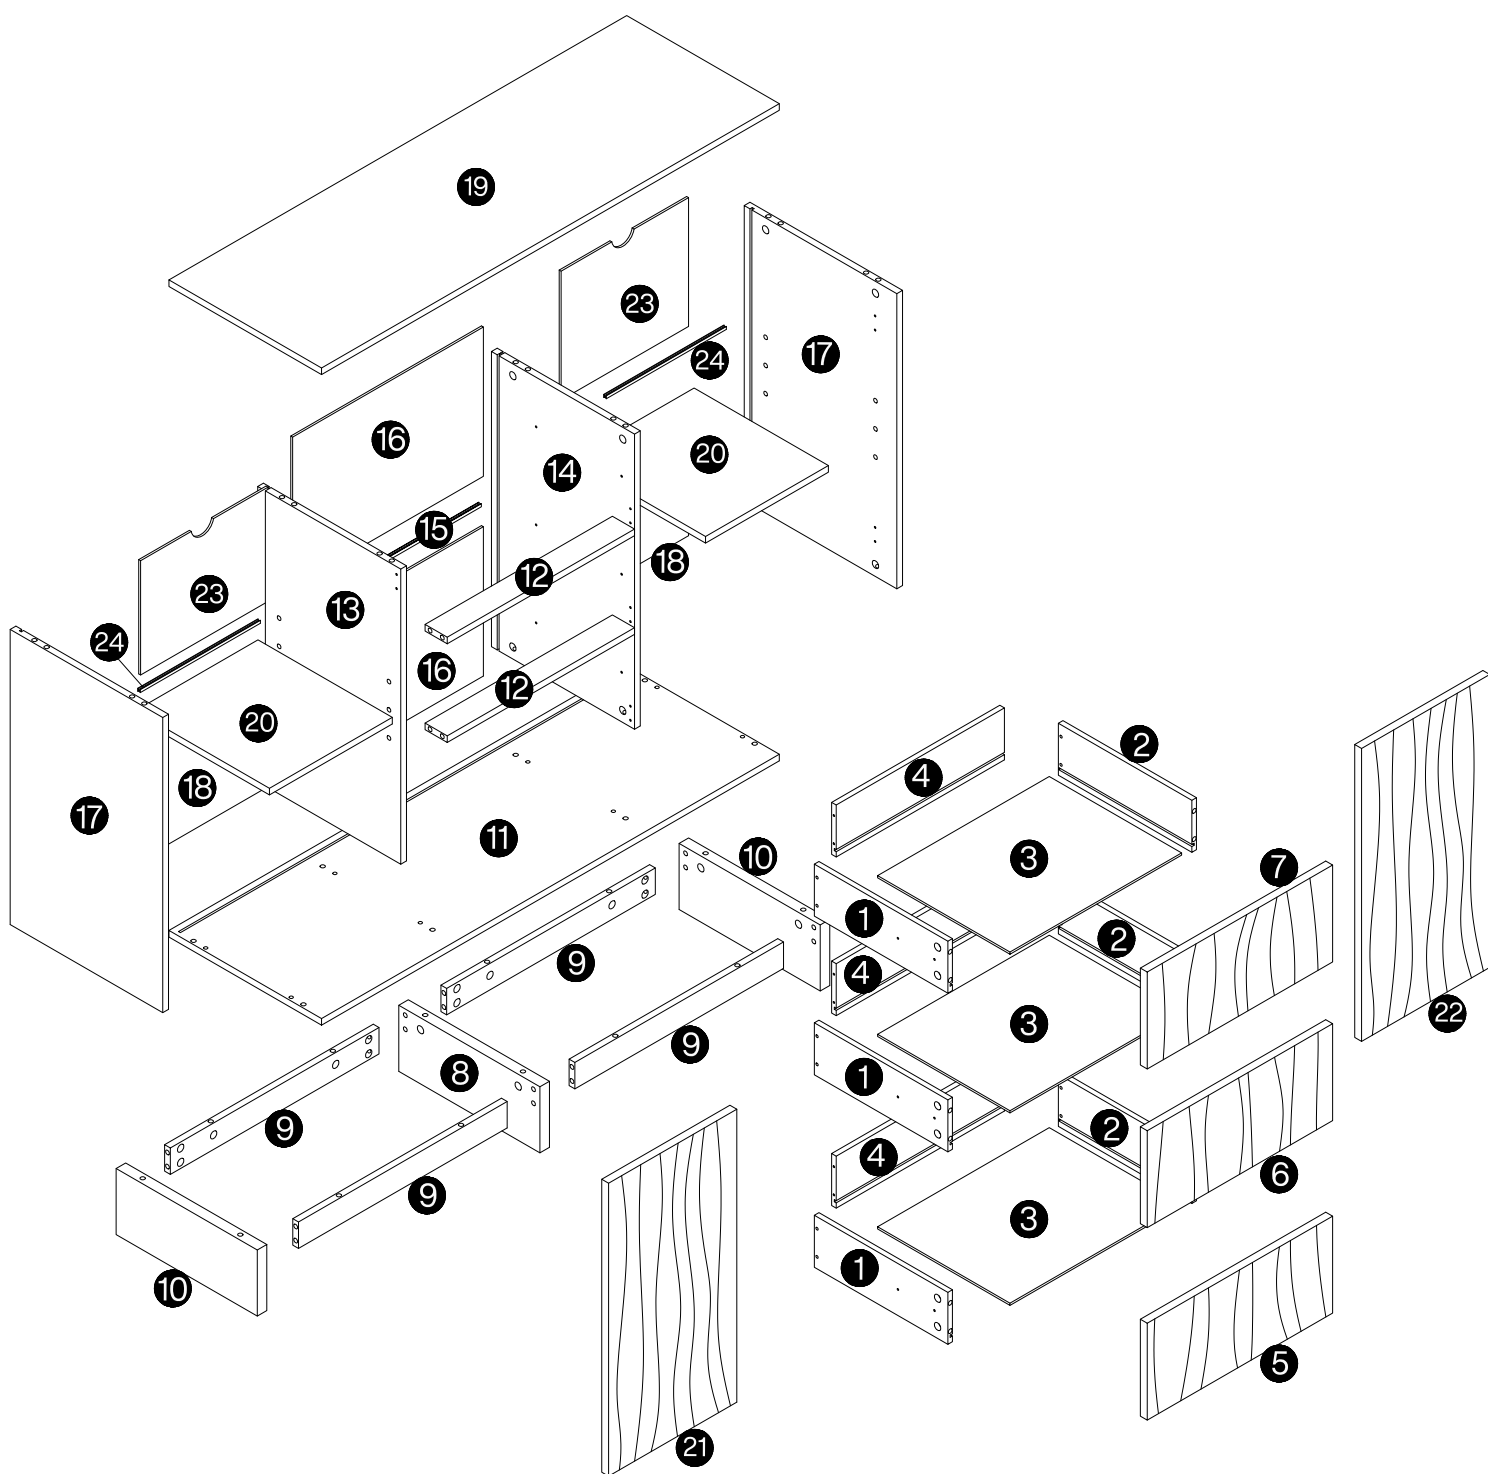





⚠ Caution





Make sure all parts are included. Most board parts are labeled or stamped on the raw edge. Contact us for a free replacement if you encounter any damaged or missing parts.

Parts List

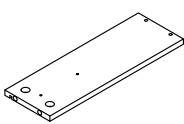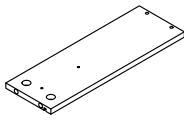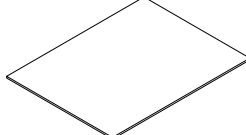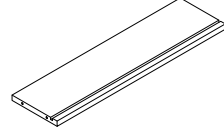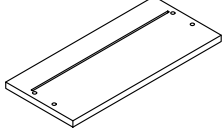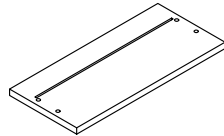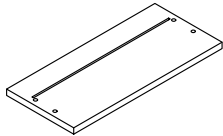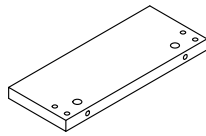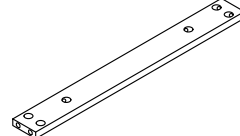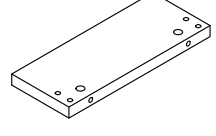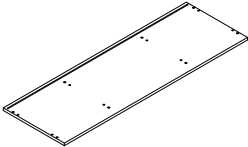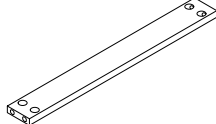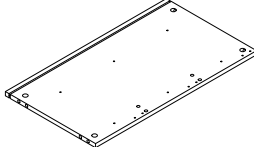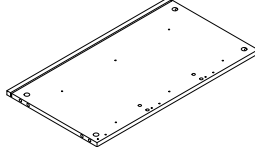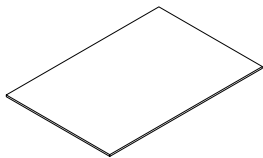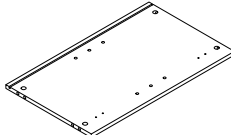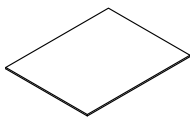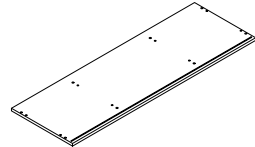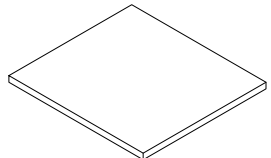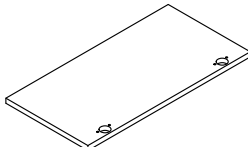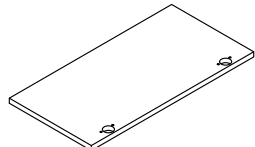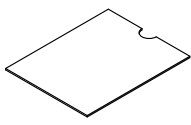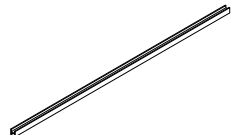1  3pcs	2  3pcs	3  3pcs	4  3pcs	5  1 pc
6  1 pc	7  1 pc	8  1 pc	9  4pcs	10  2pcs
11  1pc	12  2pcs	13  1 pc	14  1 pc	15  1 pc
16  2pcs	17  2pcs	18  2pcs	19  1 pc	20  2 pcs
21  1 pc	22  1 pc	23  2pcs	24  2pcs	

Hardware List

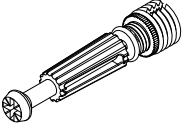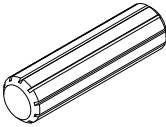
A	B	C	D	E	F
					
M6x40mm	Ø15x10mm	Ø8x30mm	300 mm	Ø3.5x12mm	Ø3.5X35 mm
66+2 pcs	66+2 pcs	16+2 pcs	3 sets	76+4 pcs	12+2 pcs

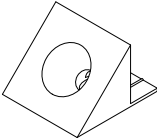G	H	I	J	K	L
					
M5		Dawan Hinge	M6X14 mm		
8+2 pcs	24+2 pcs	4 pcs	6pcs	2pcs	2pcs


M					
					
1pc					

Installation of Cams and Pins

Step 1-2: Align the plastic part with the mounting hole and press it in. If you can't press it in, loosen the screw counter clockwise or completely remove the screw from the plastic part and try again.
Step 3-4: After pressing the plastic part into place, use a screwdriver to tighten the screw clockwise.

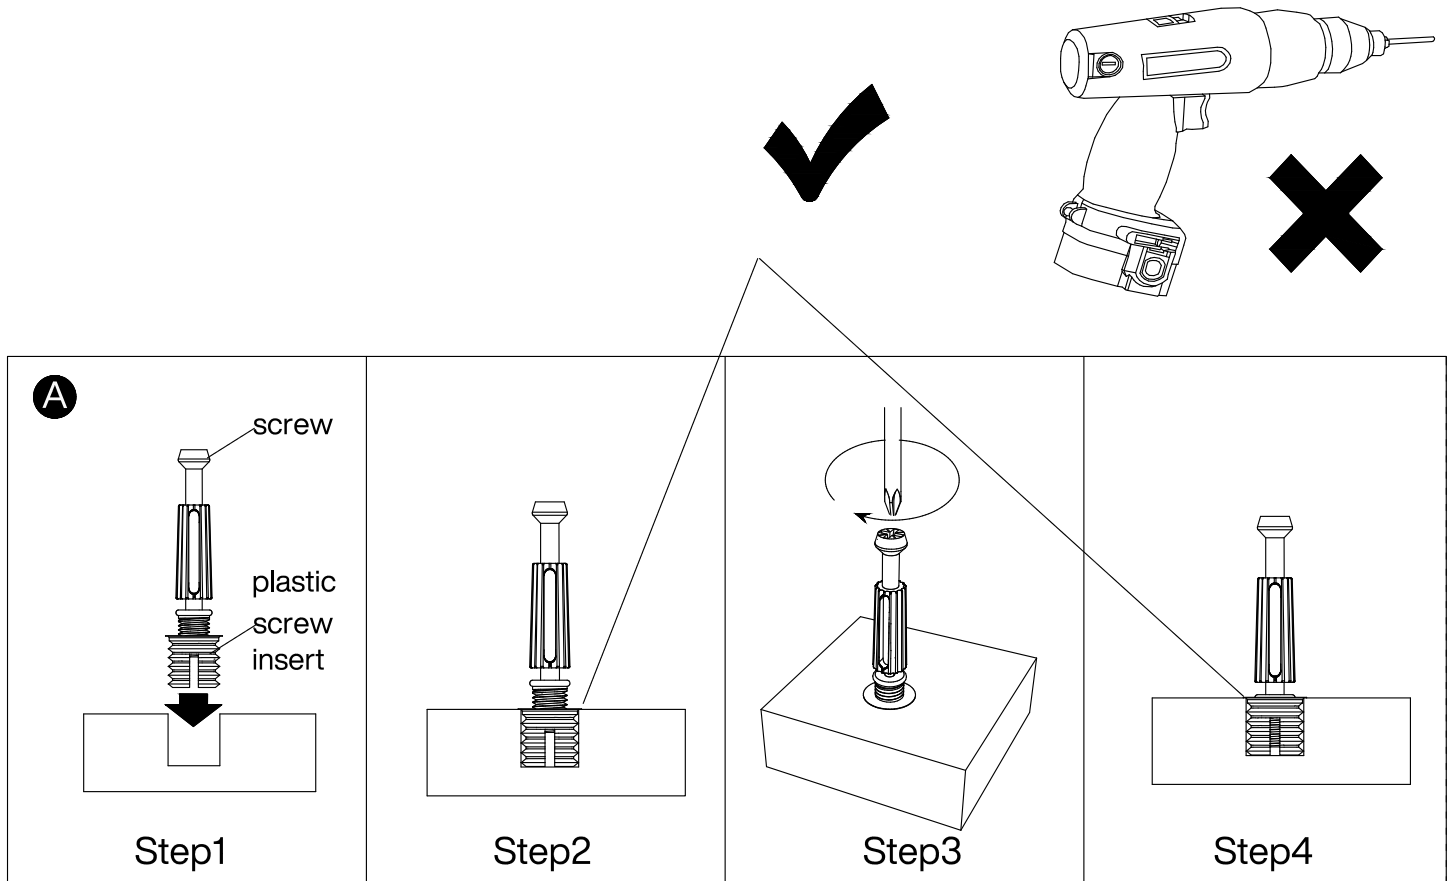


Screw the pin into the hole. Set the cams correctly by aligning the head of the cams with the lock pins. Lock the cam by turning the cam head with a screwdriver until it is tightened. Please do not use an electric screwdriver to assemble the unit.

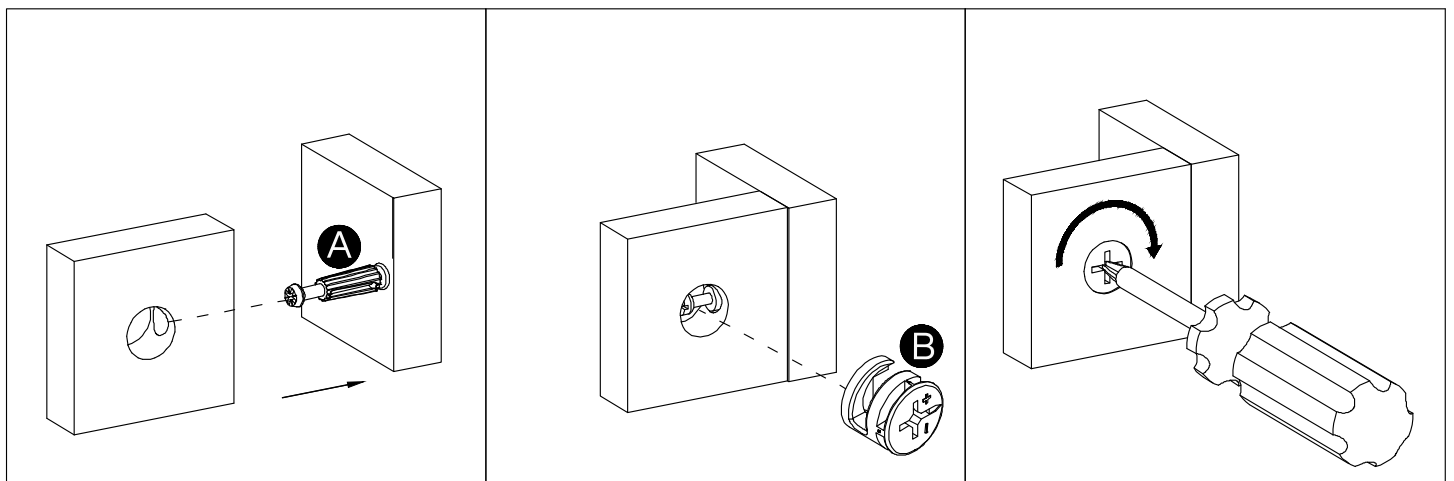

Please split component "D" into "D-1" and "D-2" before assembling the slide rail component, and then proceed to the next step of assembly


Step 1

Pull apart component "D" to each side, and then gently push up the lever of component "D-2"

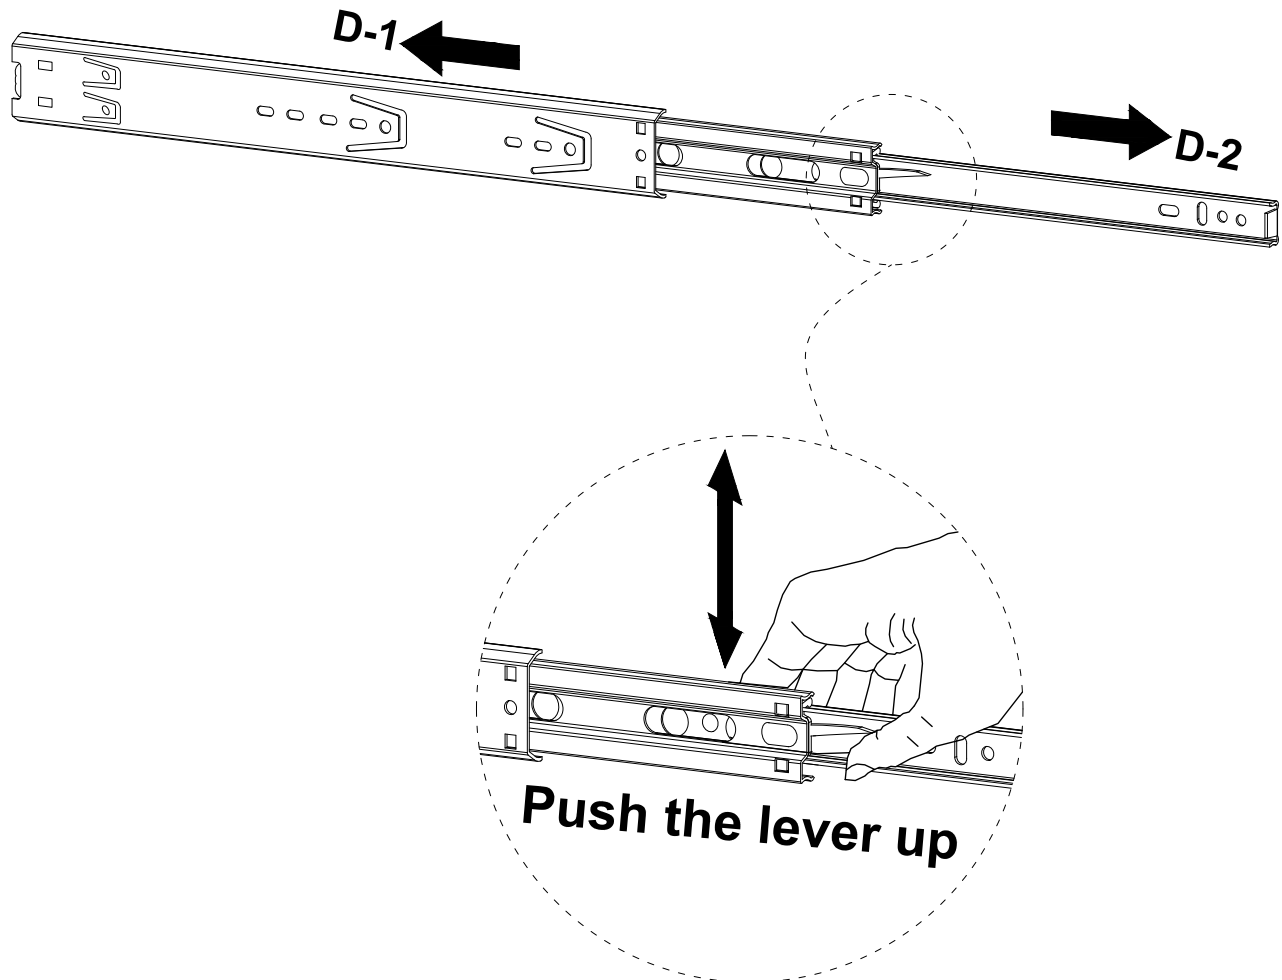


Step 2


Split component "D-1" and "D-2"

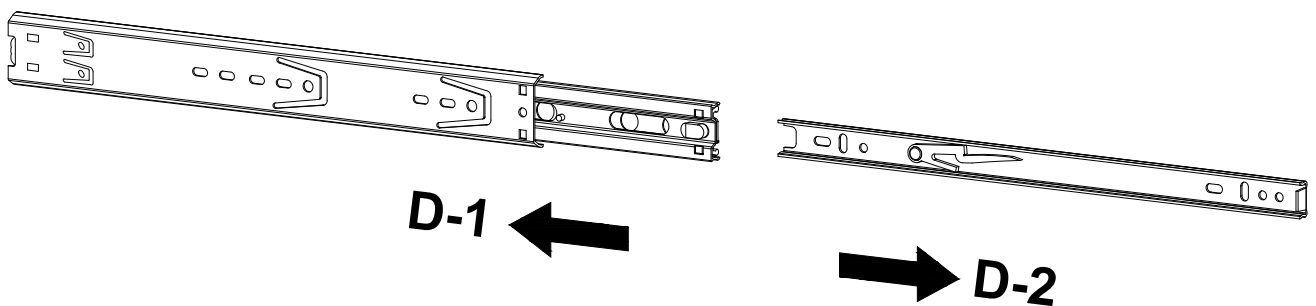



1

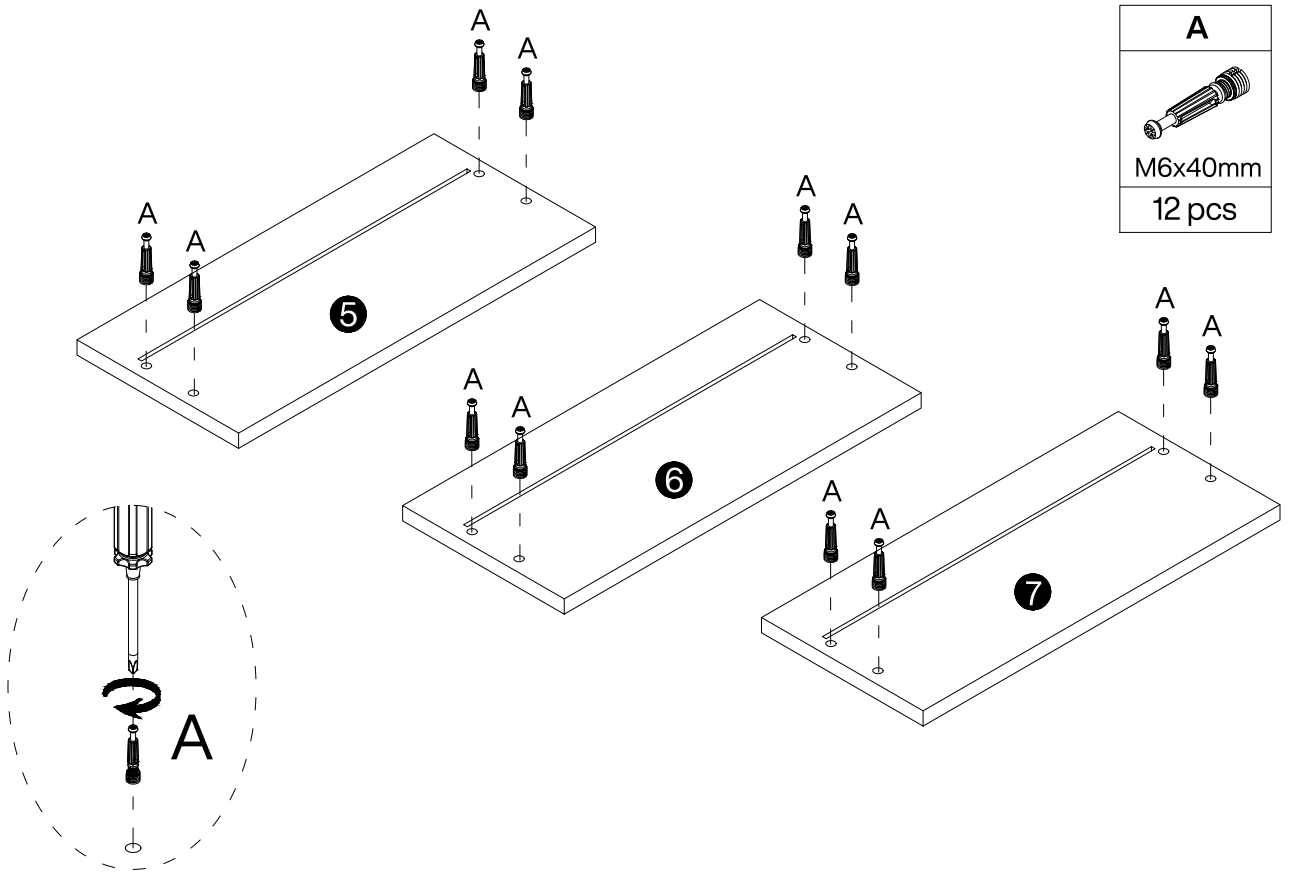

2

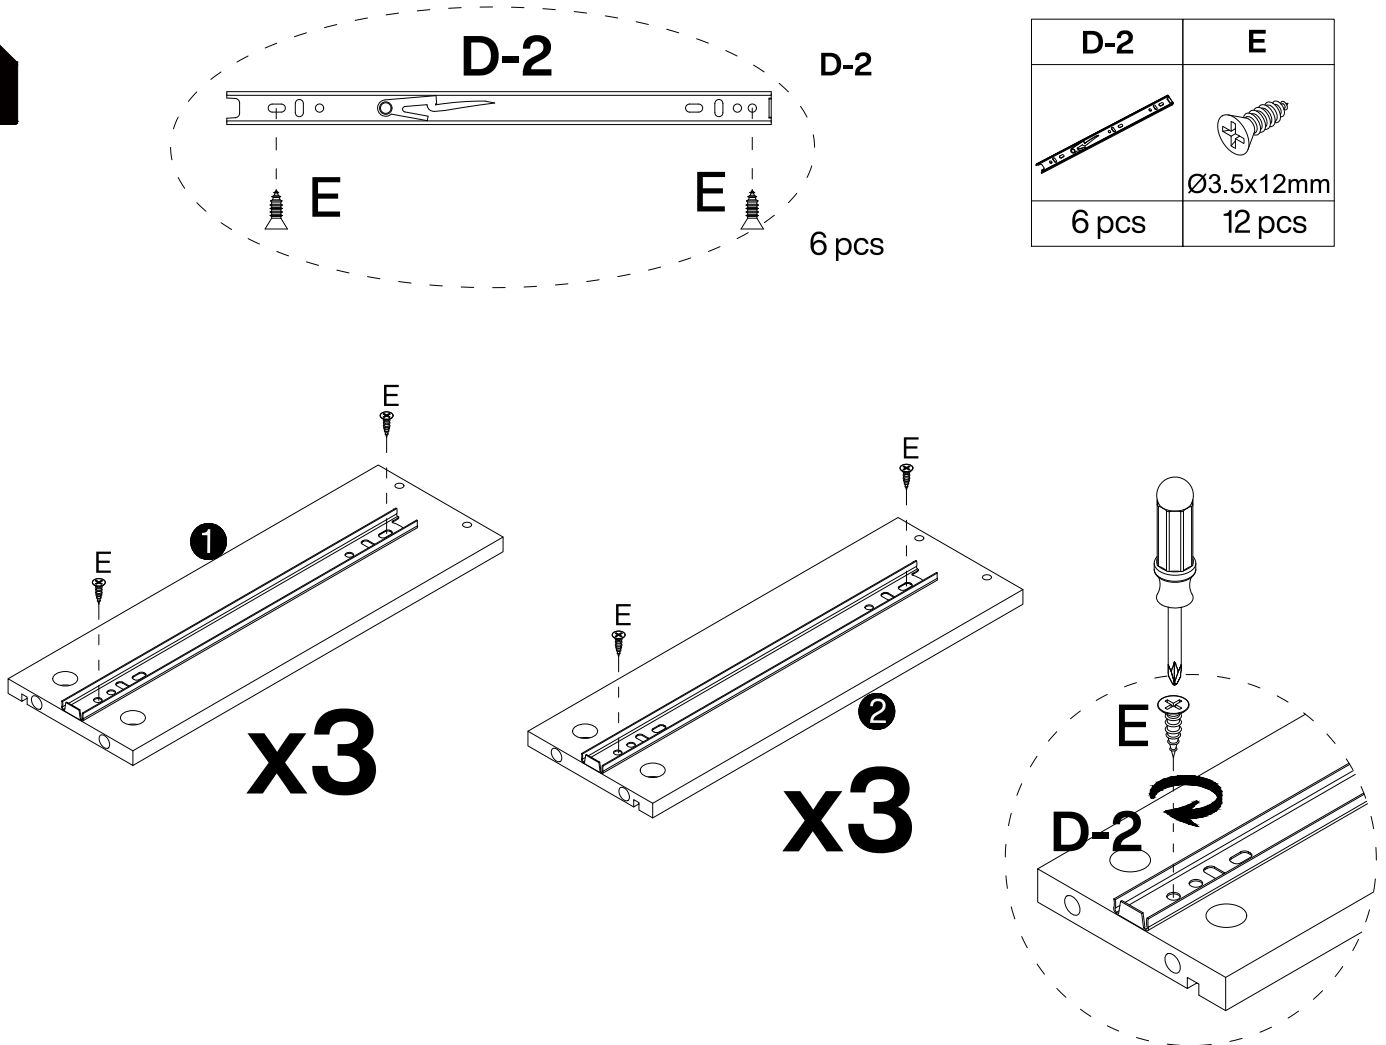

3

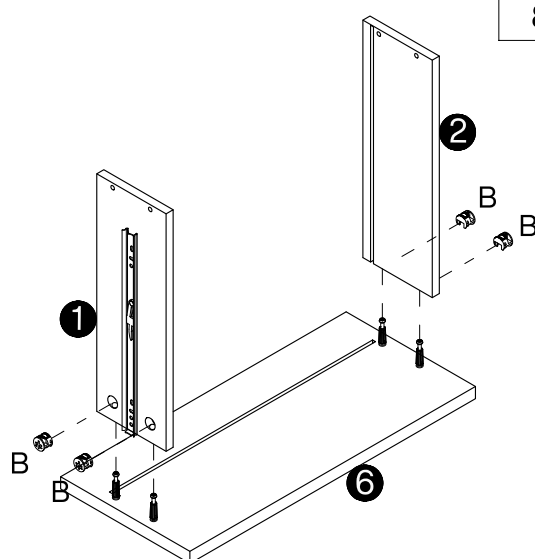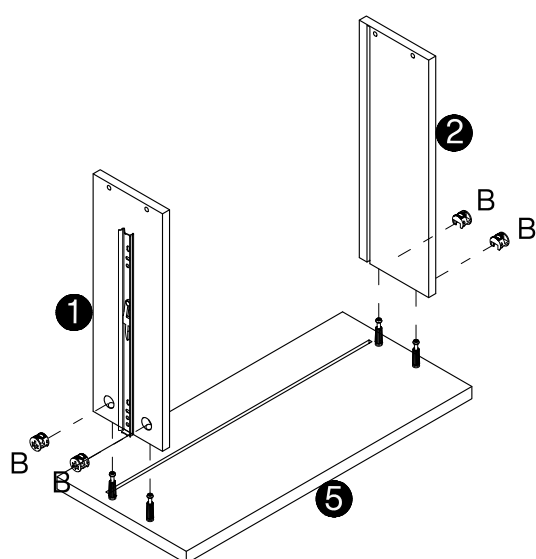


B






Ø15X10 mm

8 pcs

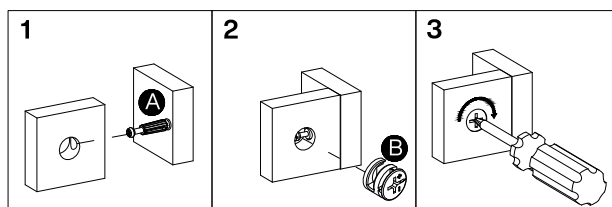

4

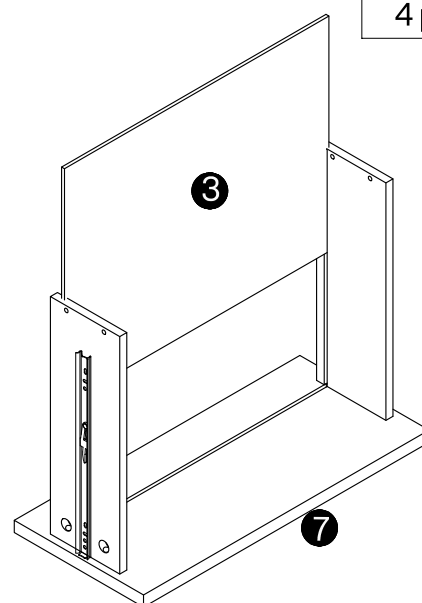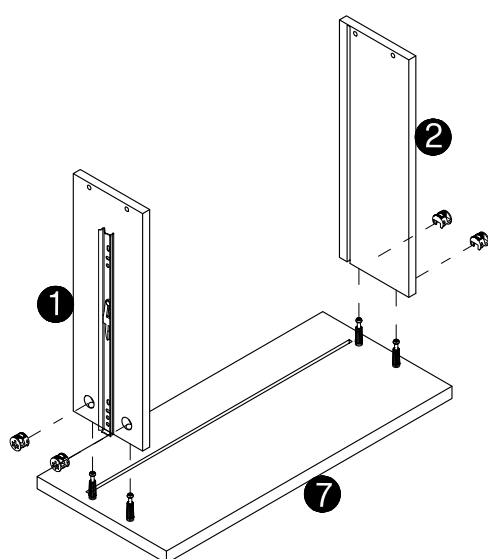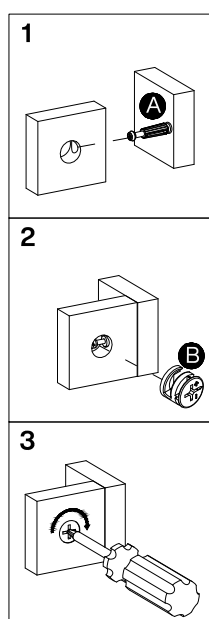



B





Ø15X10 mm

4 pcs

5

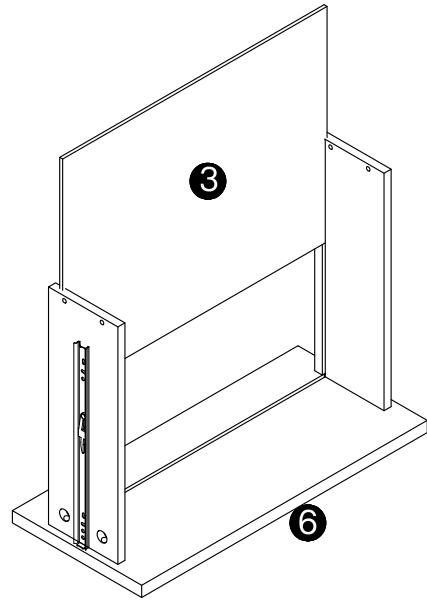
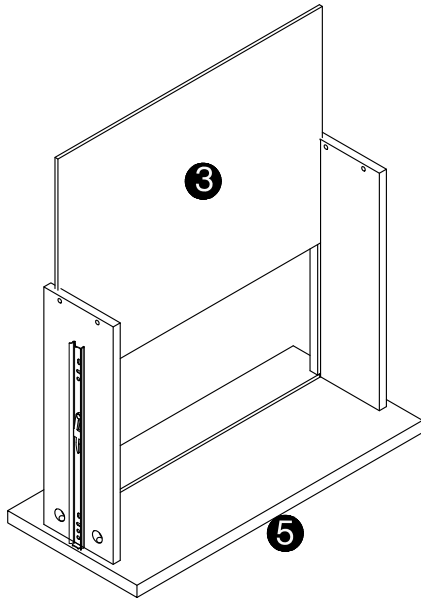


6

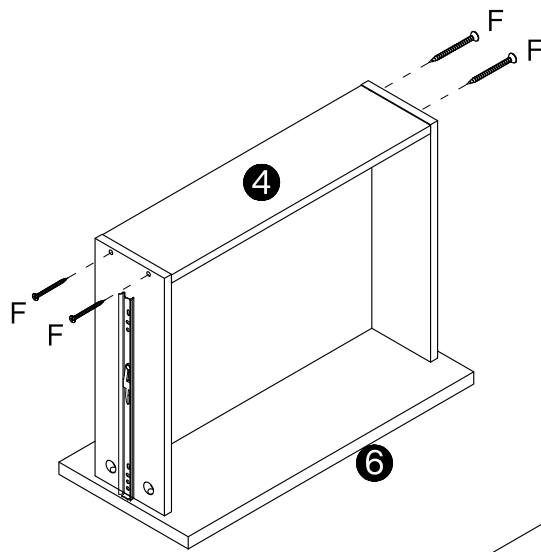
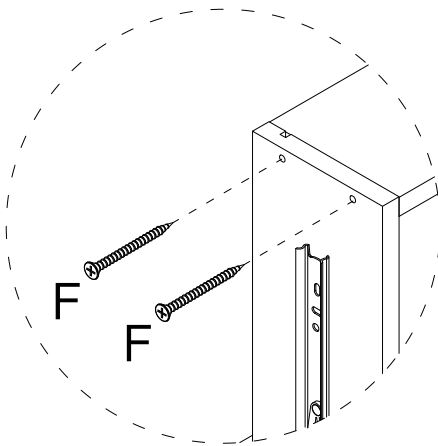


F

Ø3.5x35mm
12 pcs

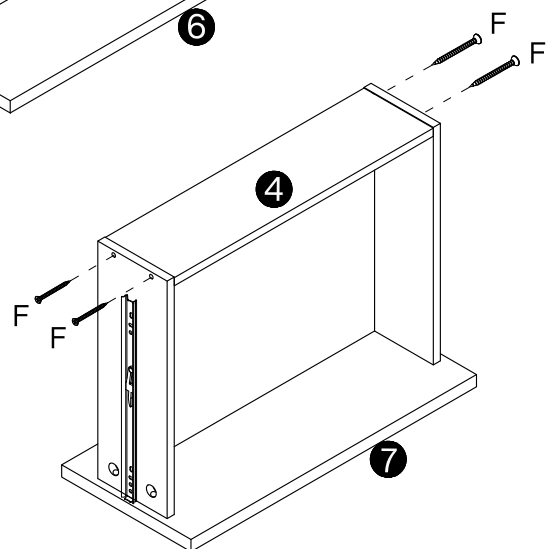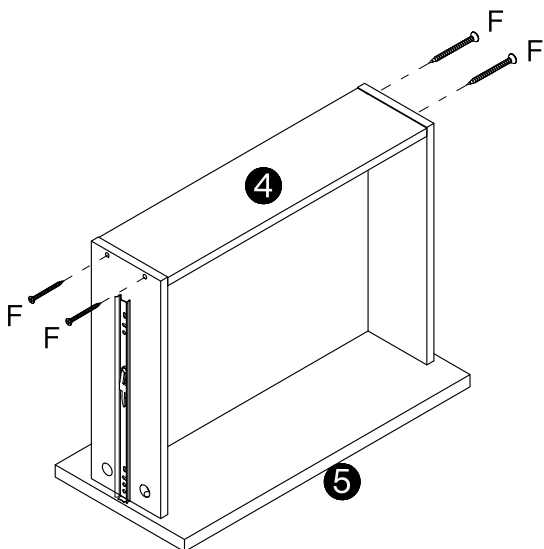


7

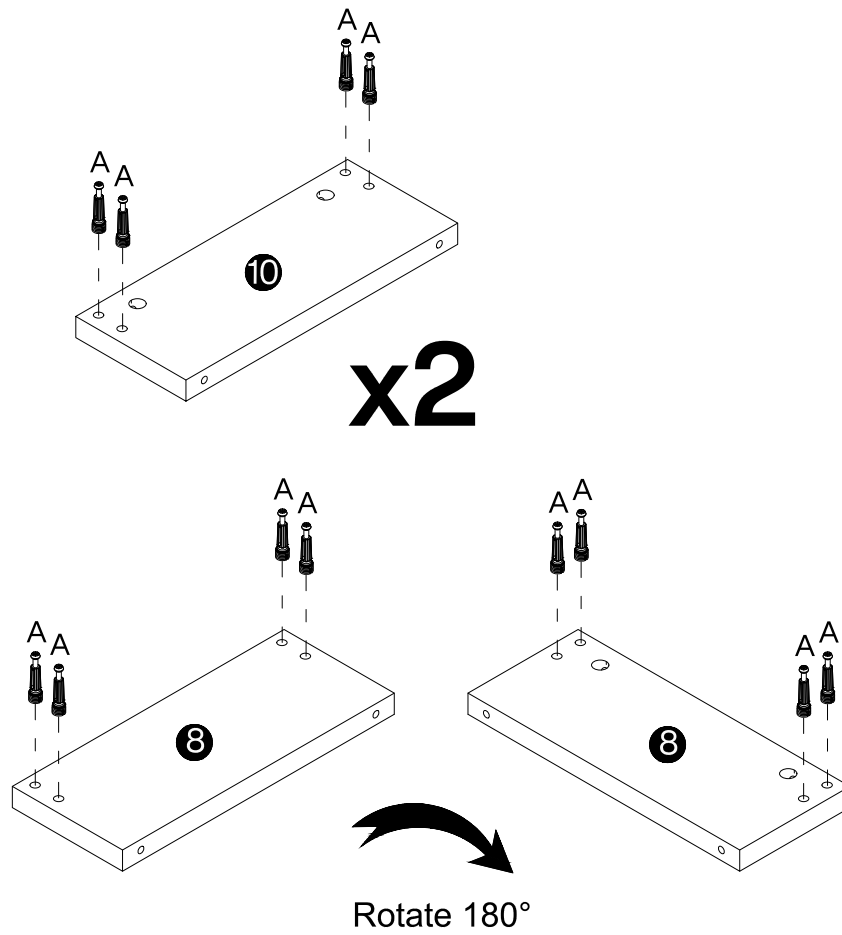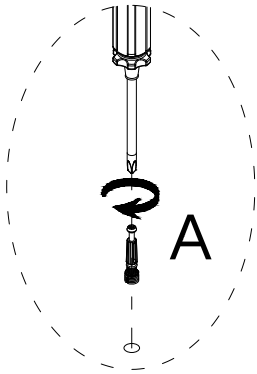

A


M6x40mm
16 pcs

8

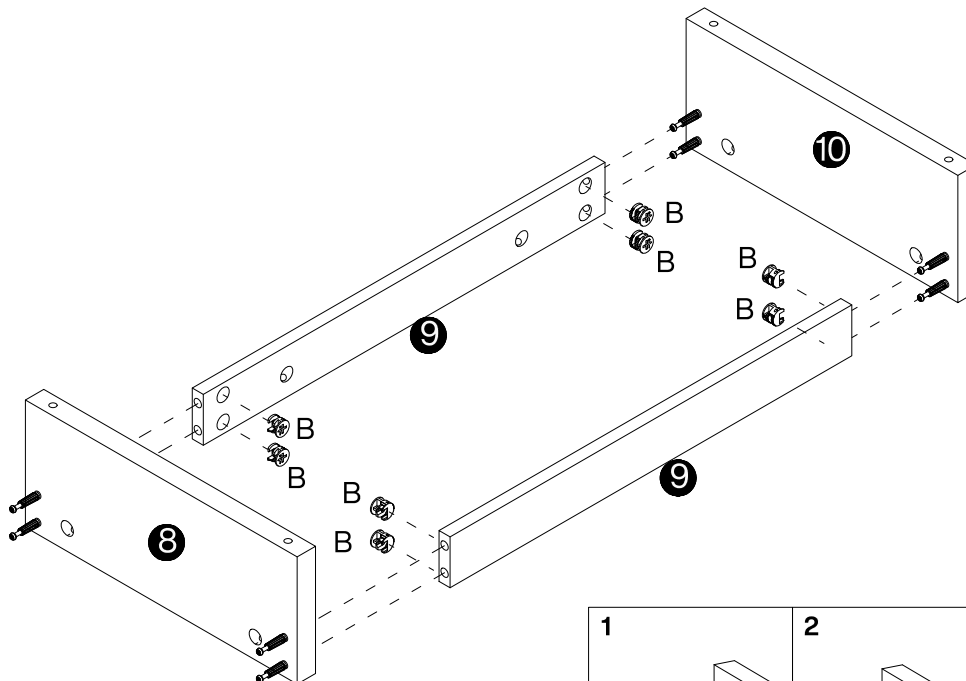


B

Ø15X12 mm
8 pcs

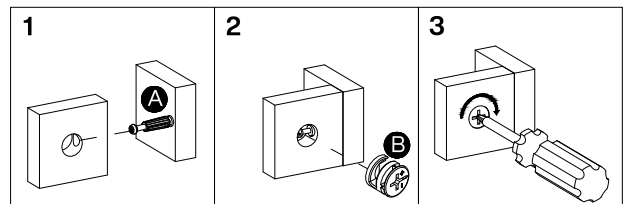


9

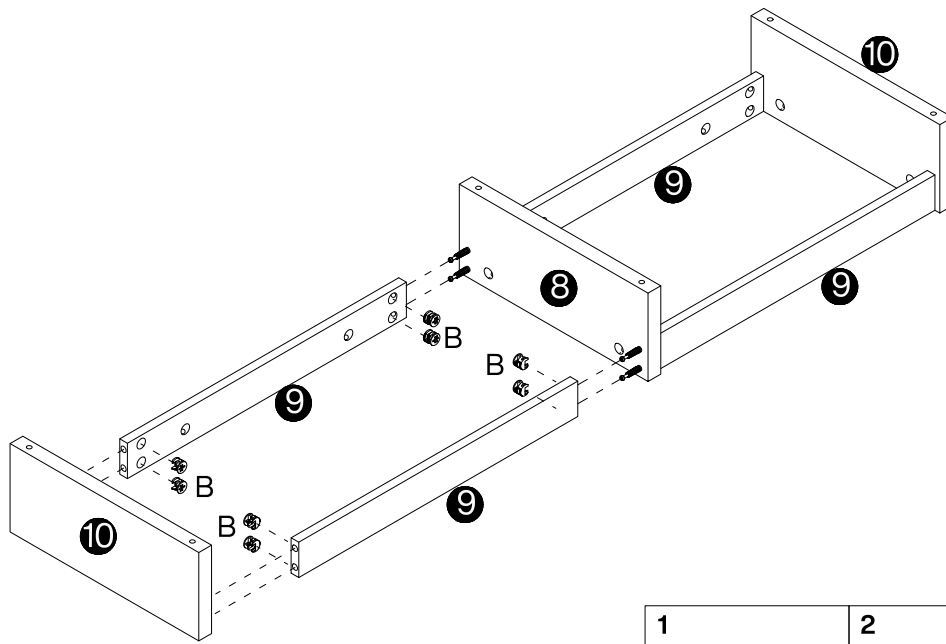


B

Ø15X10 mm
8 pcs

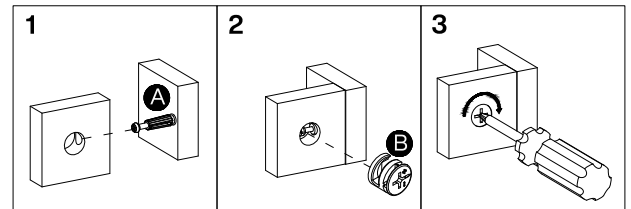


10

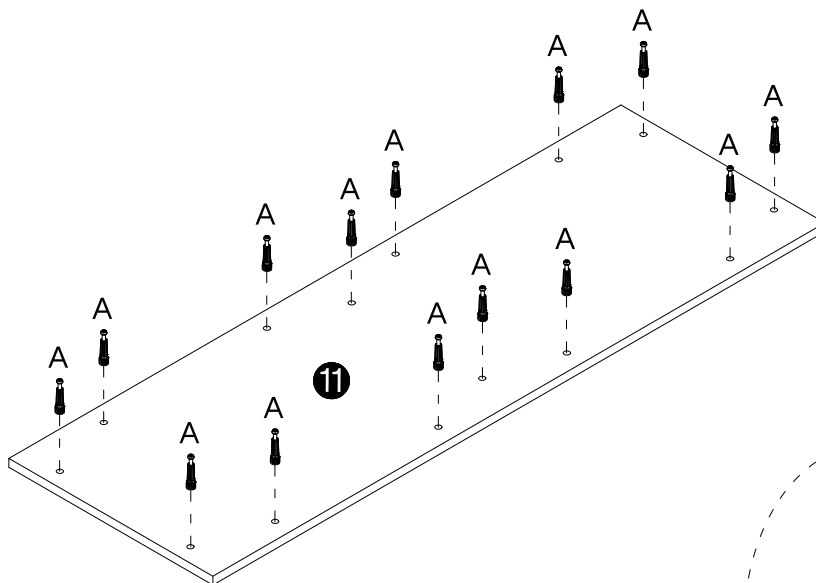

A



M6x40mm
14 pcs

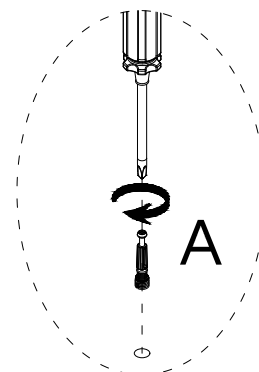

11

B


Ø15X10 mm
14 pcs

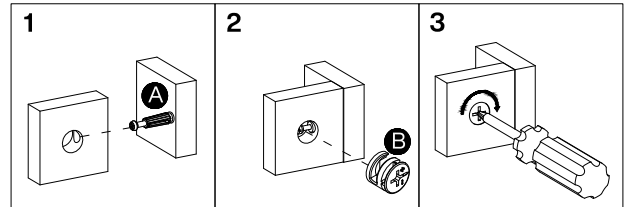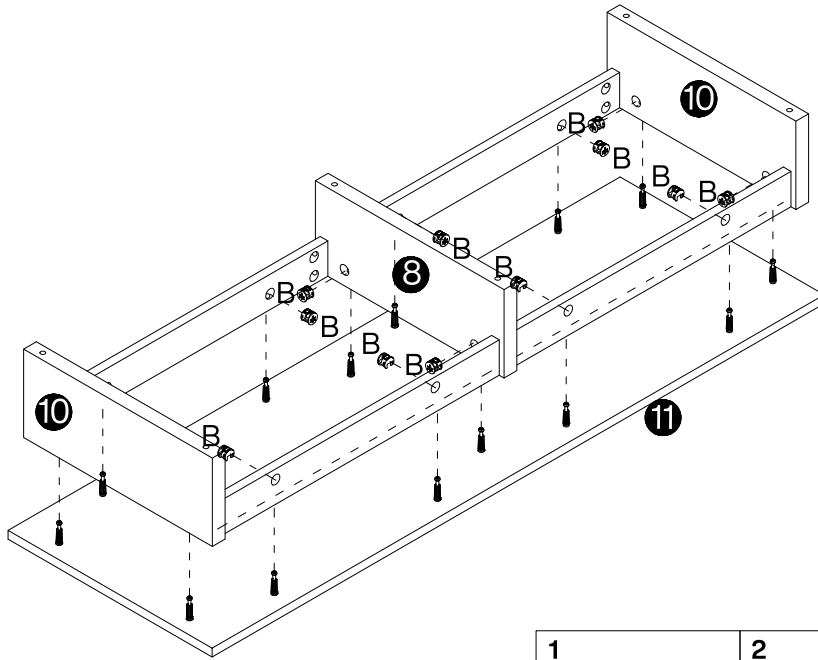

12



J

M6X14 mm
6 pcs

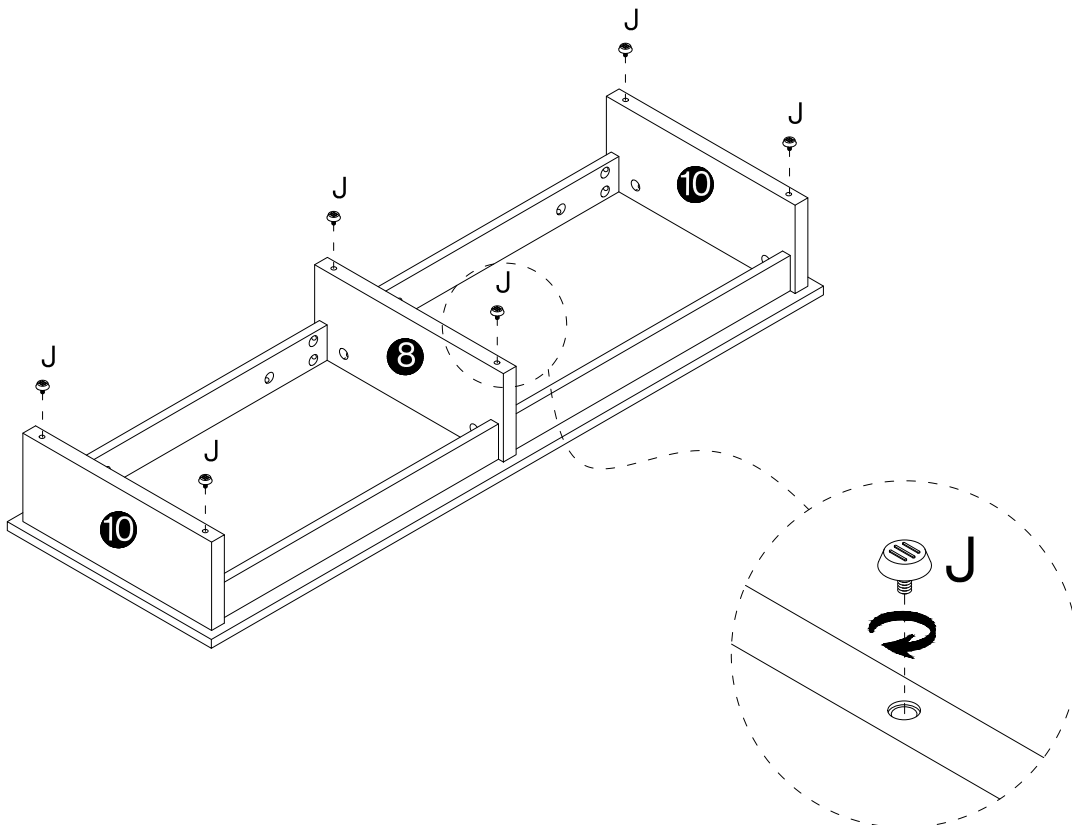



13

D-1	E
	 Ø3.5x12mm
3 pcs	6 pcs

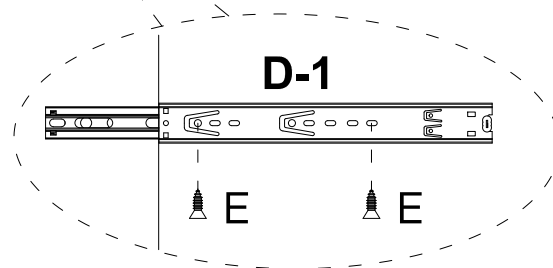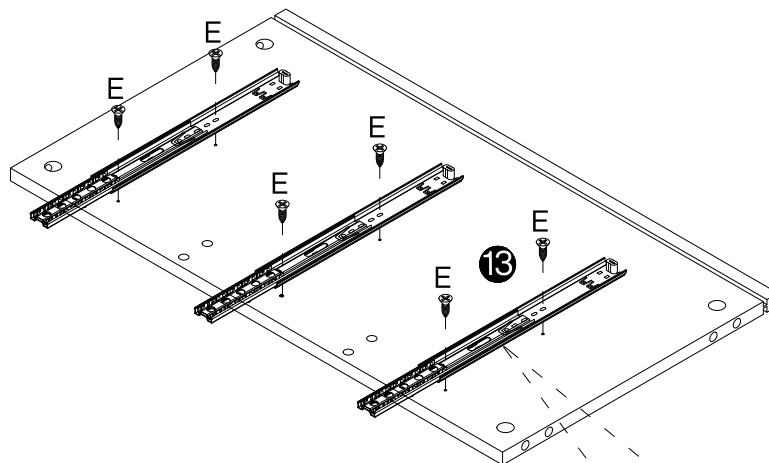


14

C	A
 Ø8x30mm	 M6x40mm
4 pcs	4 pcs

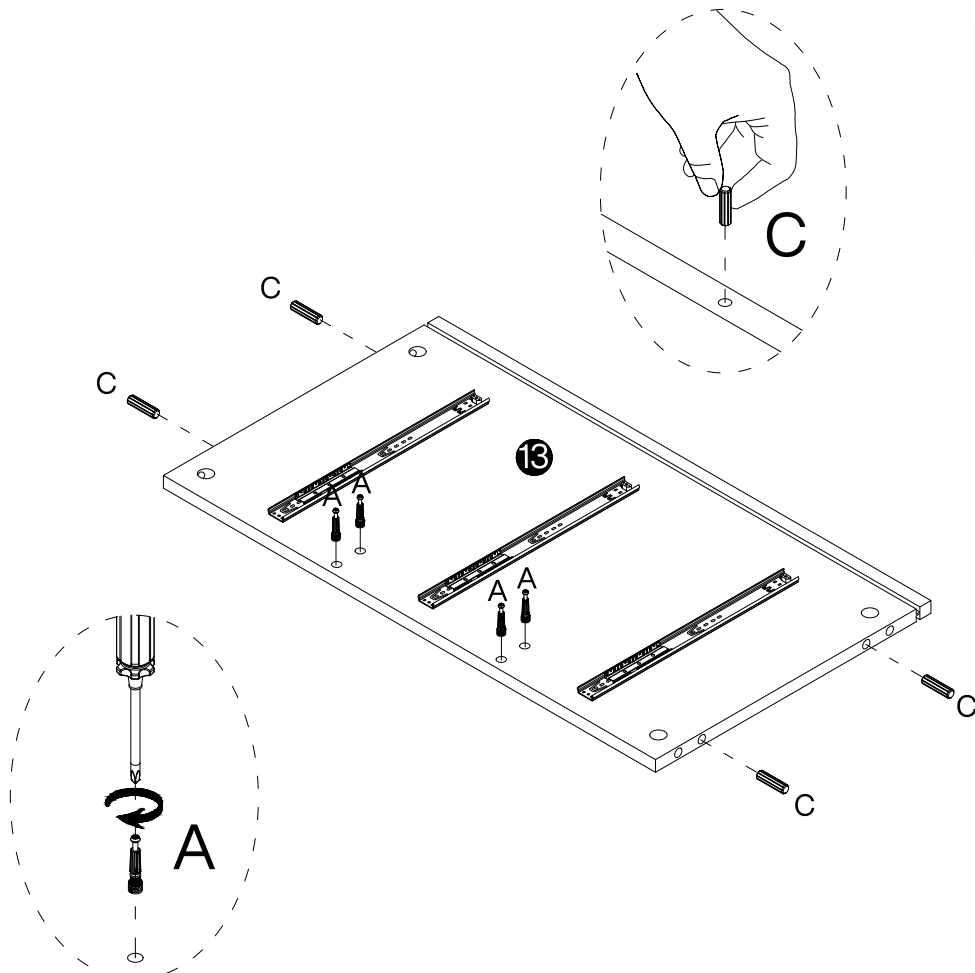


15

D-1	E
	 Ø3.5x12mm
3 pcs	6 pcs



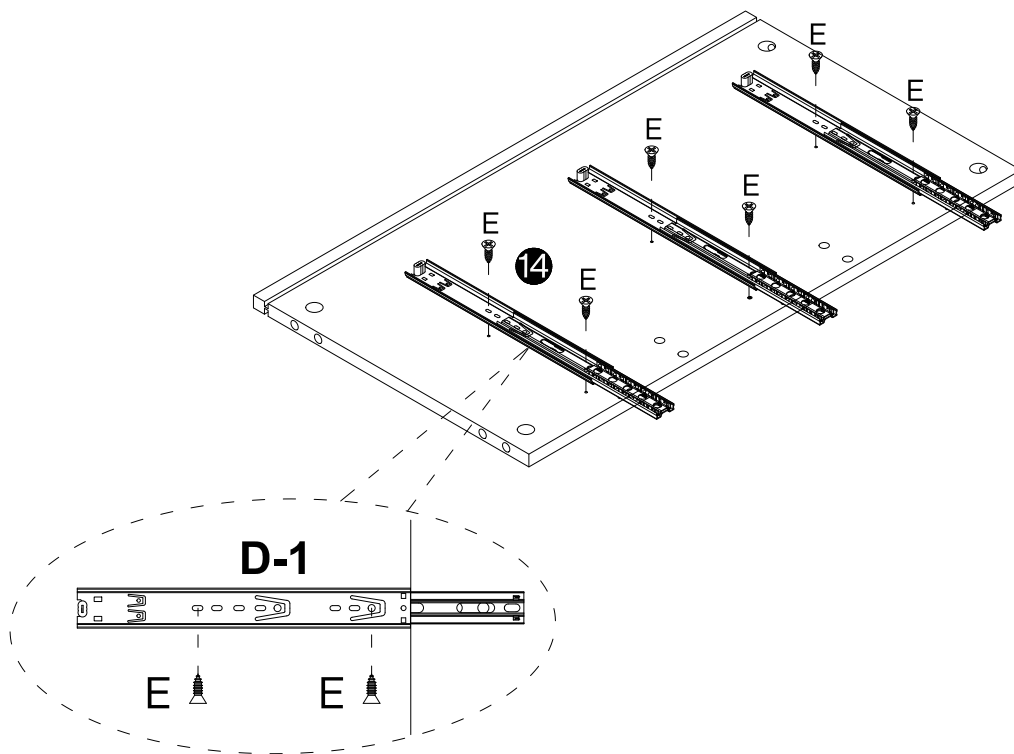


16



C	A
 Ø8x30mm	 M6x40mm
4 pcs	4 pcs

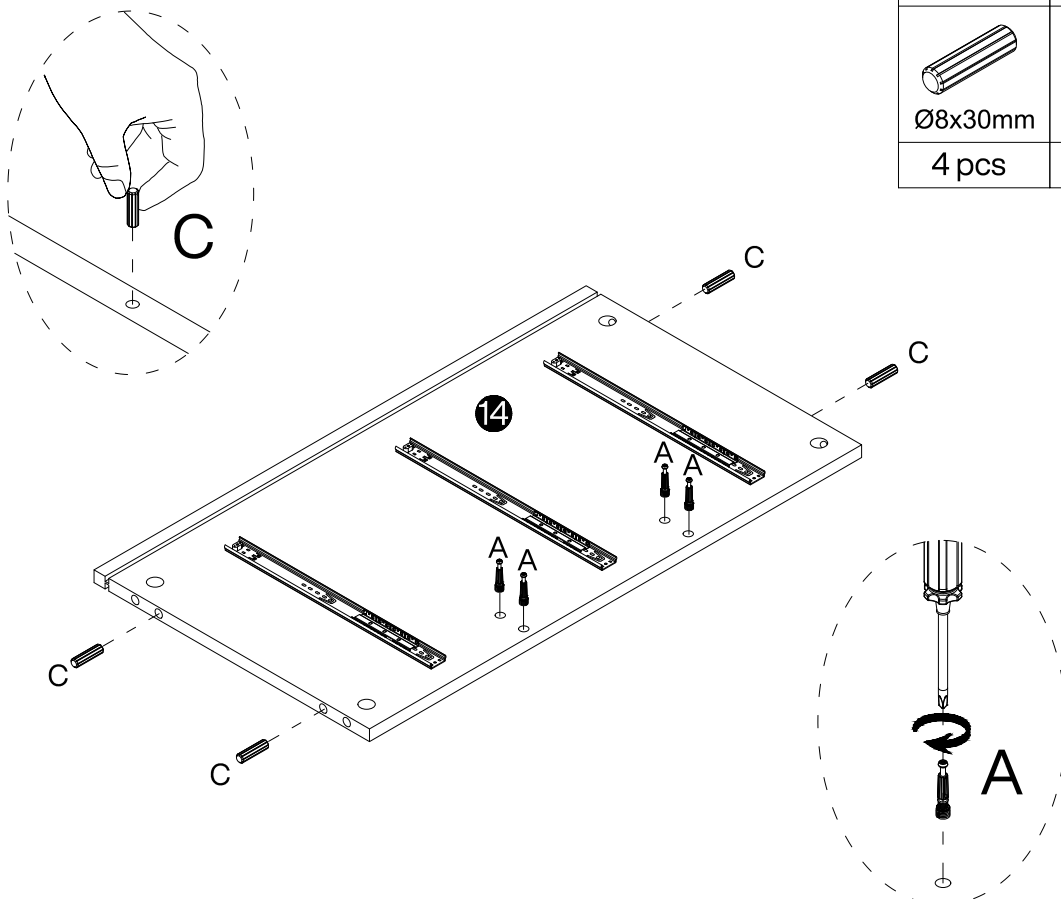



17

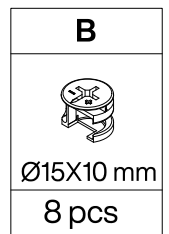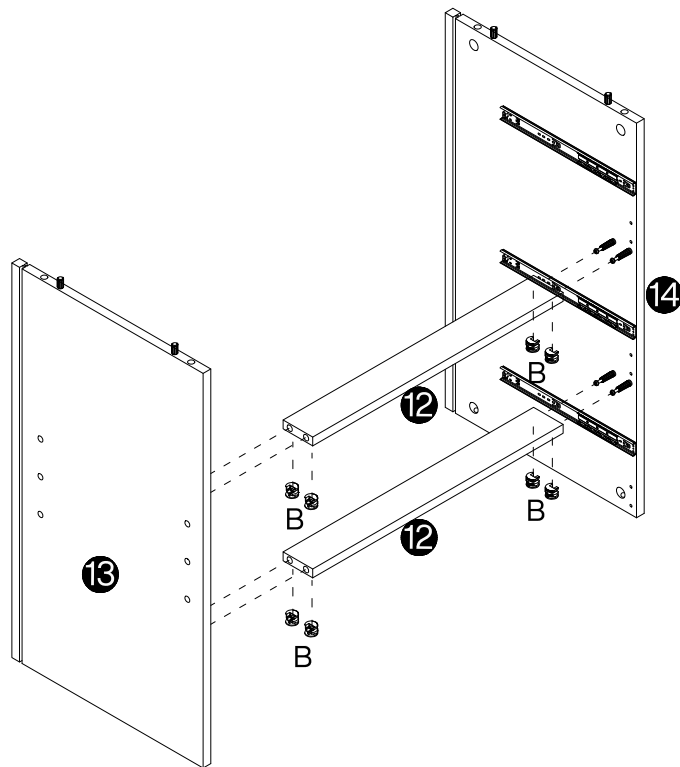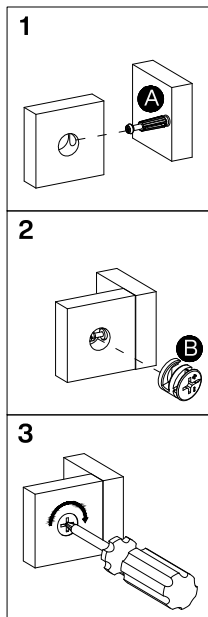

18

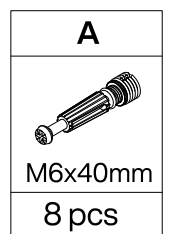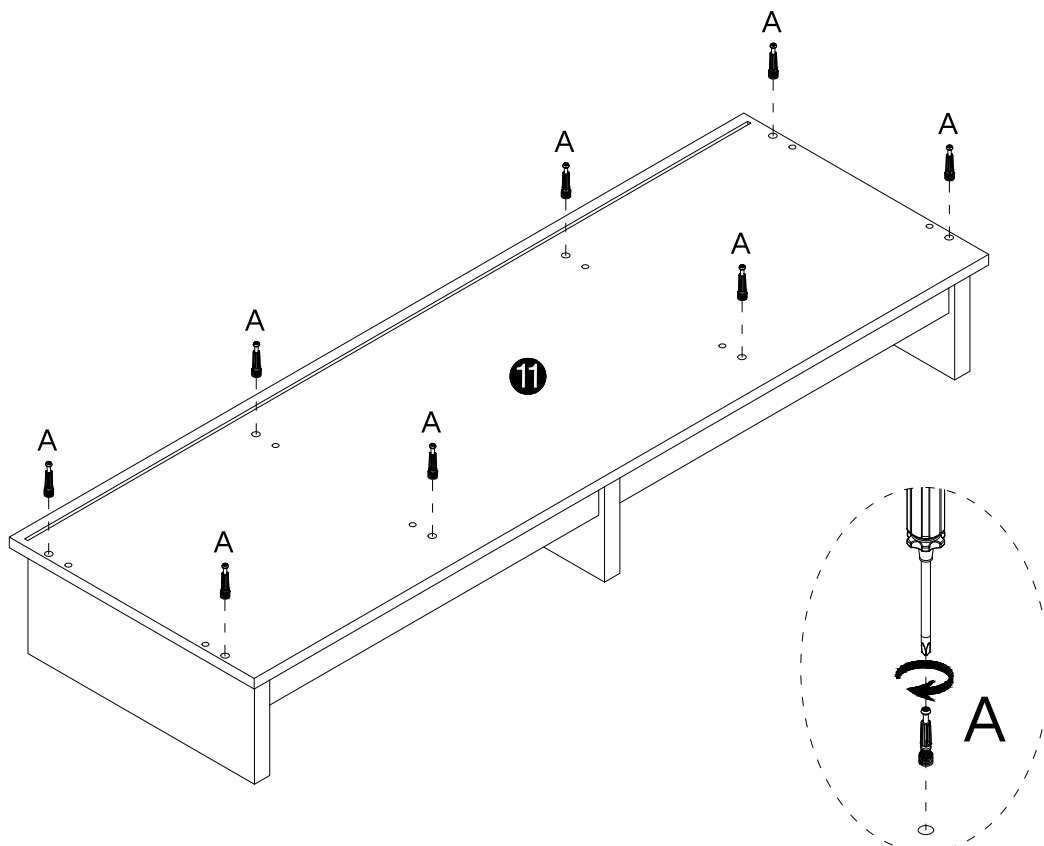


19

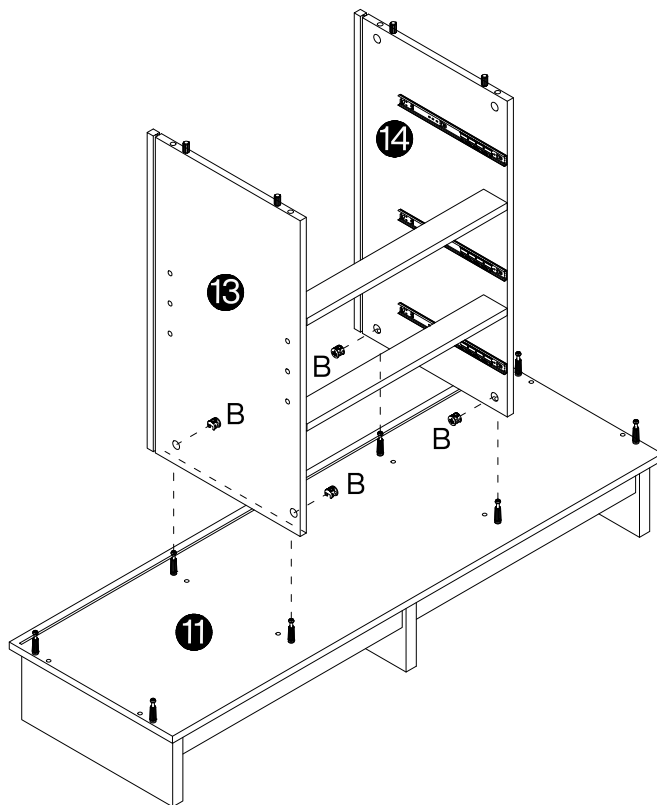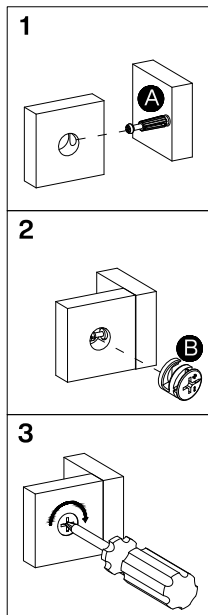


B
Ø15X10 mm
4 pcs


20

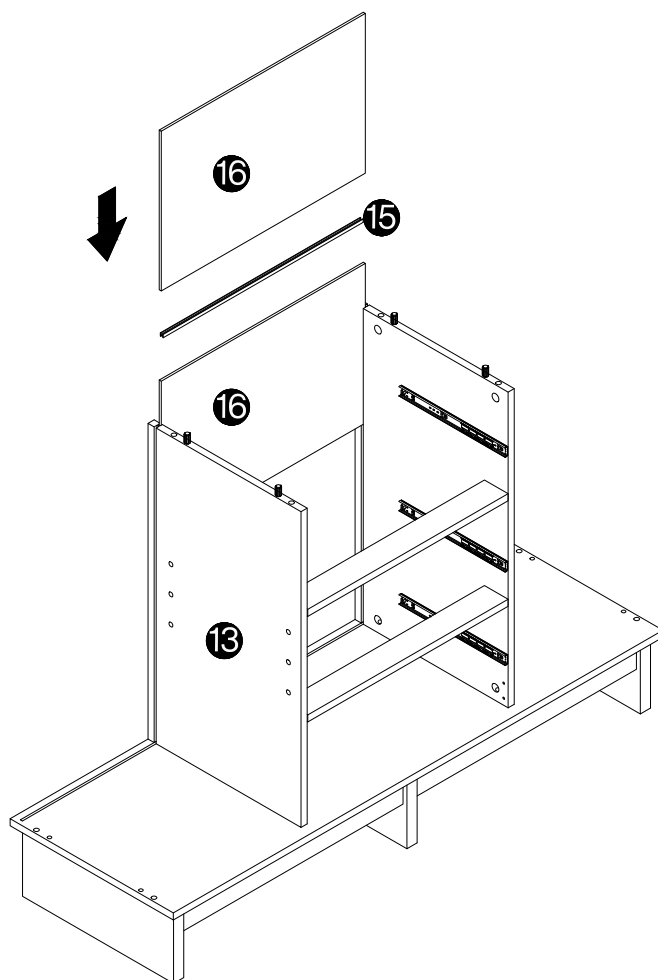


21

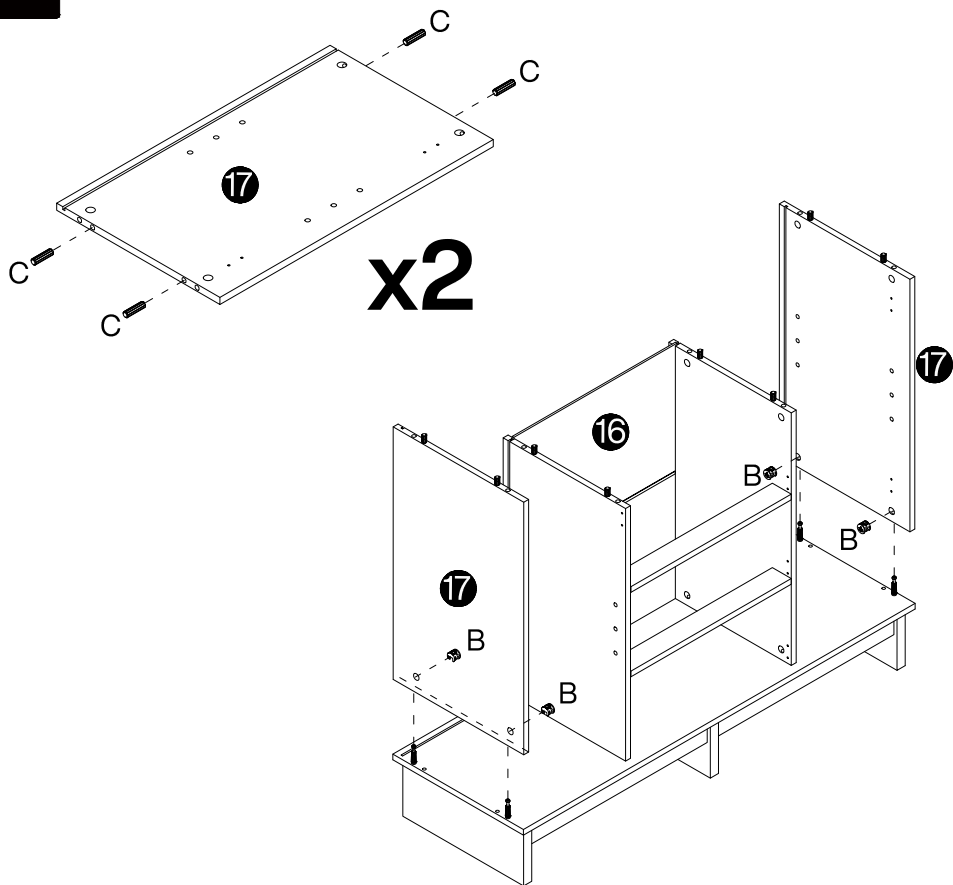



C	B
	
Ø8x30mm	Ø15X10 mm
8 pcs	4 pcs

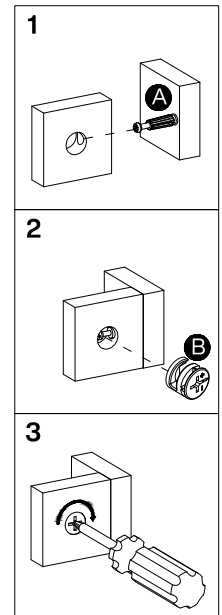



22

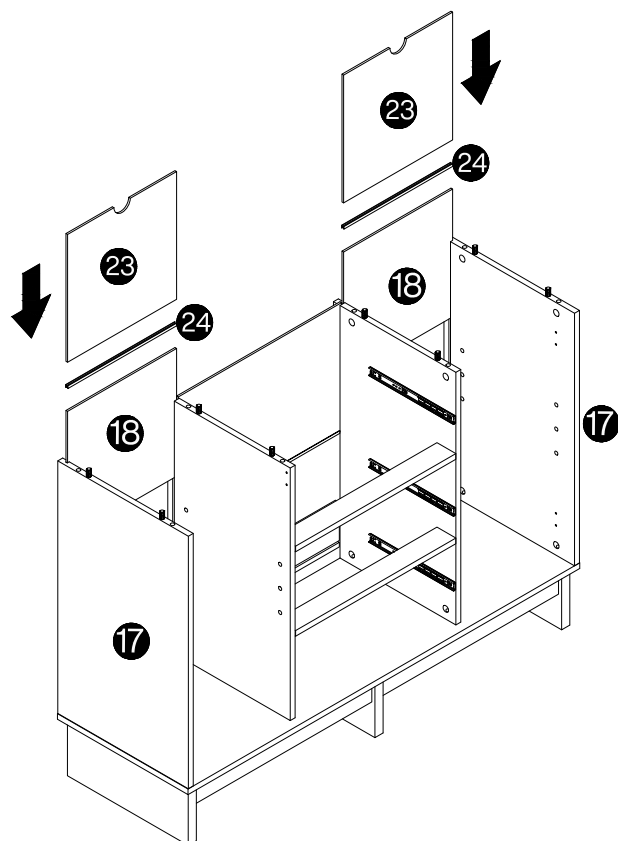



23

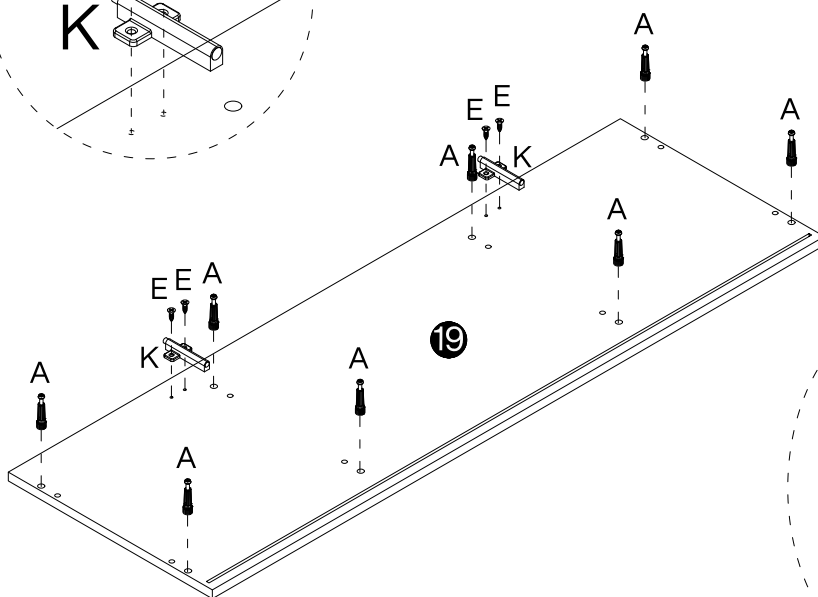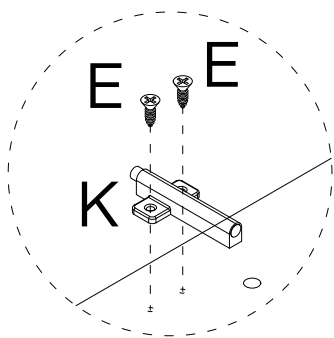

K	A
	 M6x40mm
2 pcs	8 pcs
	E
	 Ø3.5x12mm
	4 pcs

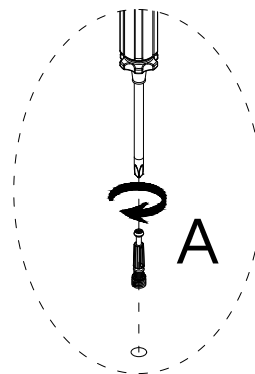



24

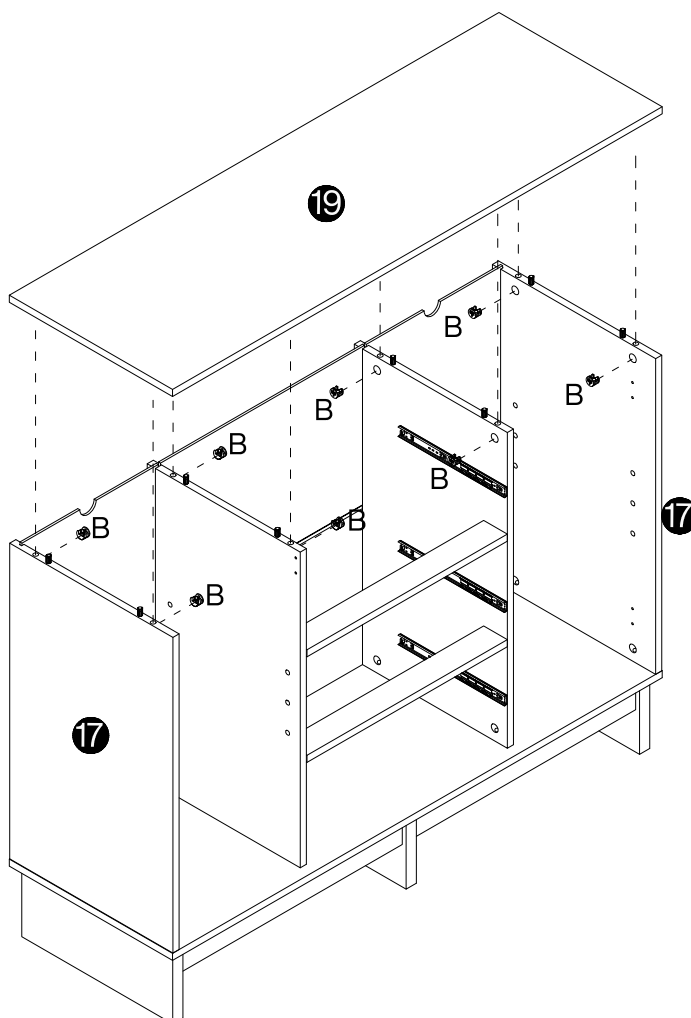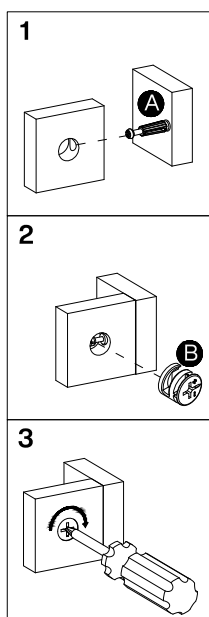


B
 Ø15X10 mm
8 pcs


25

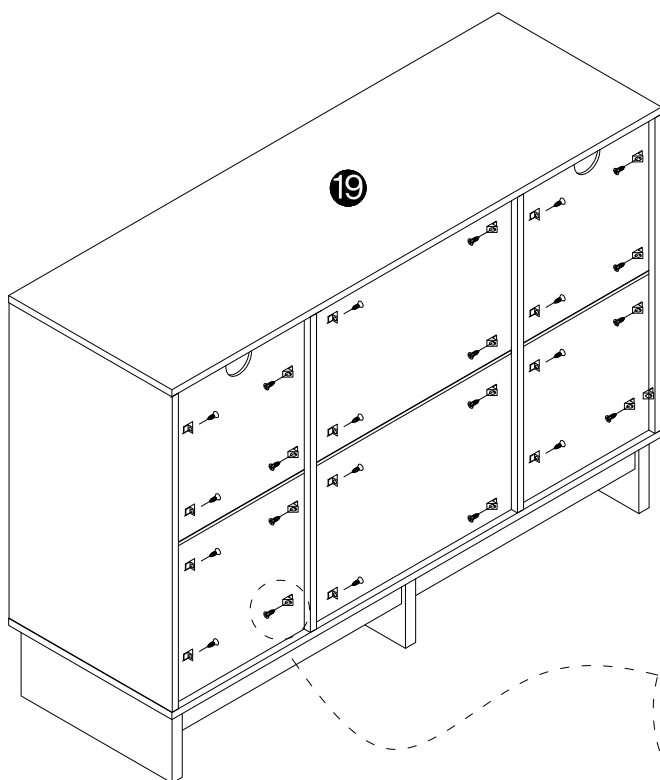

E	H
	
Ø3.5x12mm 24 pcs	24 pcs

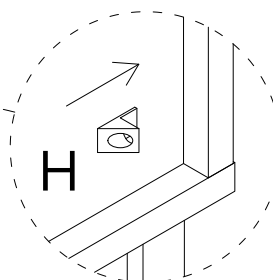



Step 1


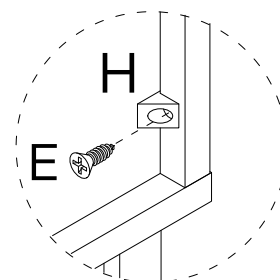


Step 2

26

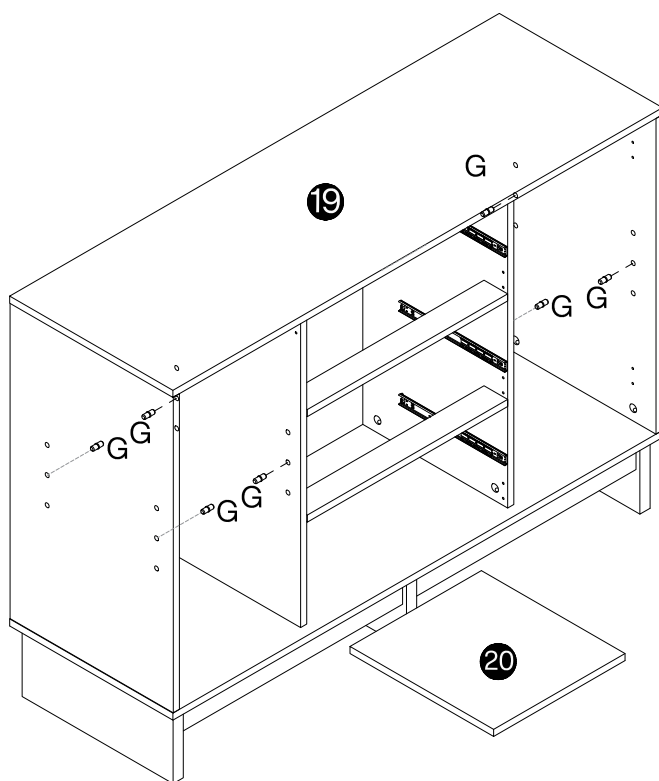


G

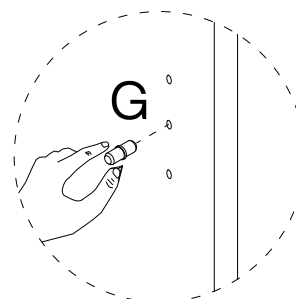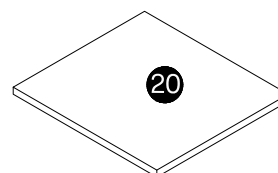M5 8 pcs




27


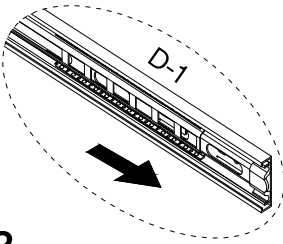
1



2



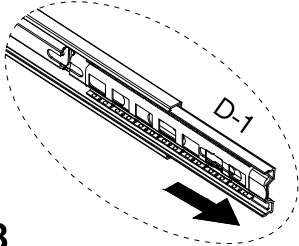



3

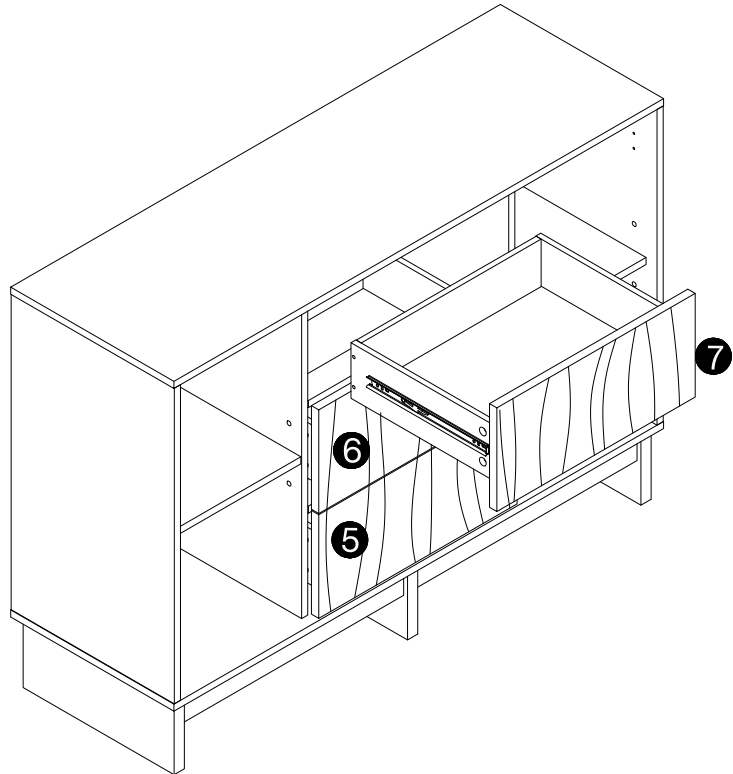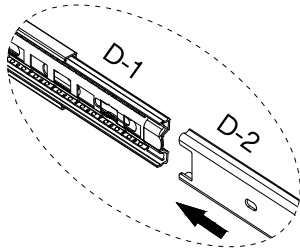


Align the "D-2" with the "D-1" guideway and gently push it in to complete the assembly

28

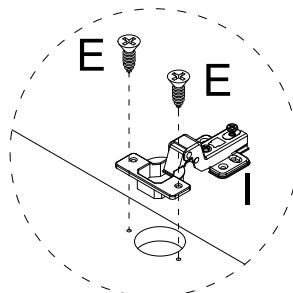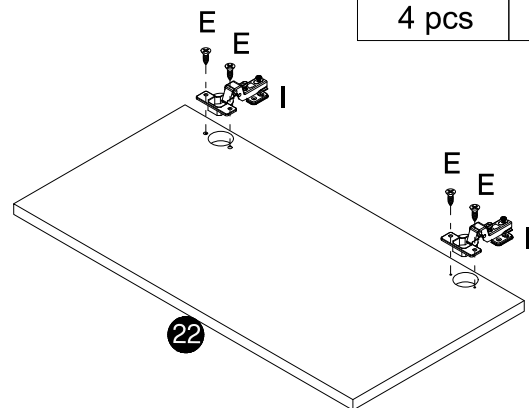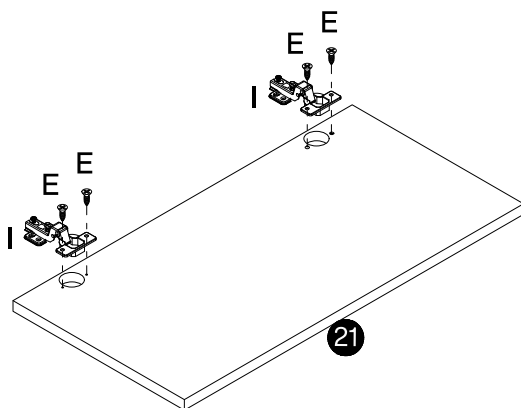




I	E
	
Dawan Hinge	Ø3.5x12mm
4 pcs	8 pcs

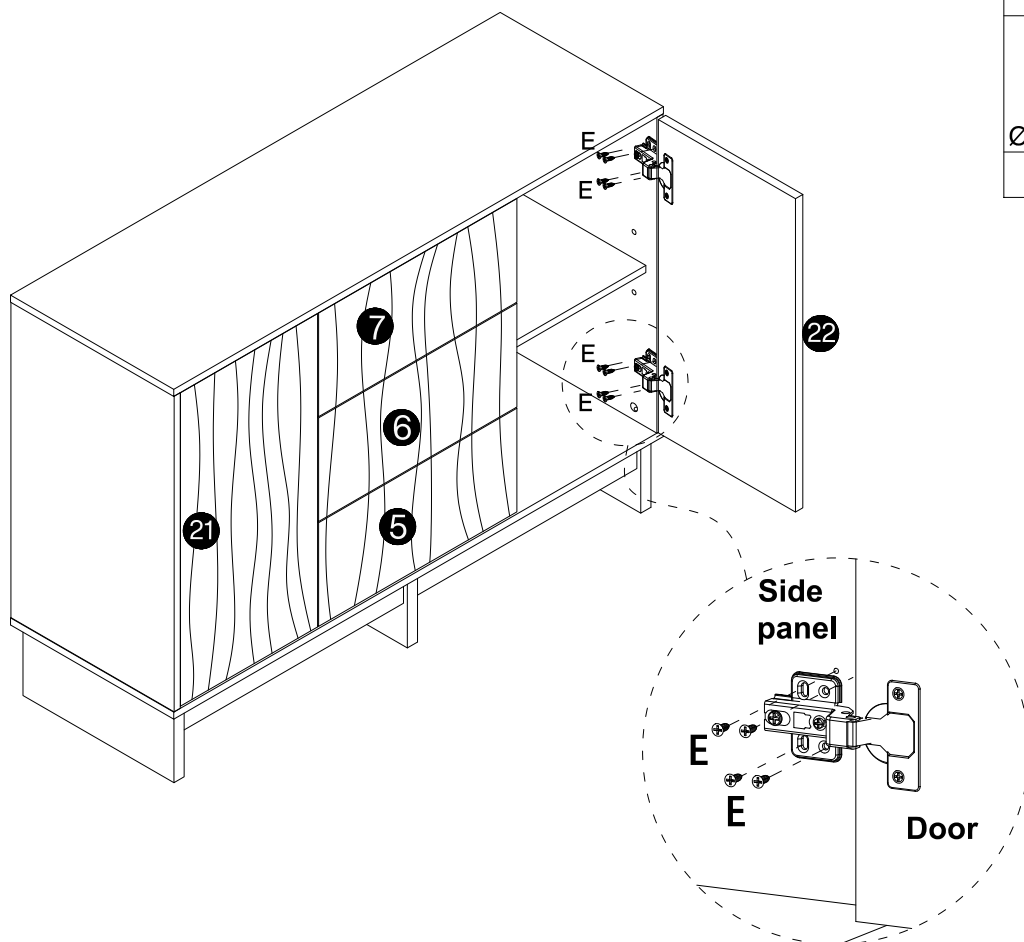


E

Ø3.5x12mm
16 pcs




To prevent the door hinge from falling off, please install 4 screws

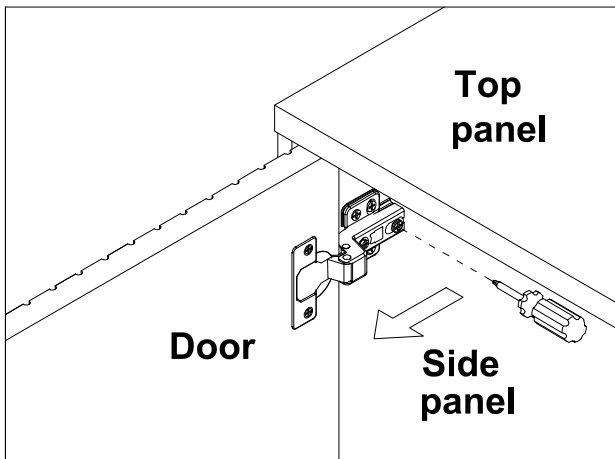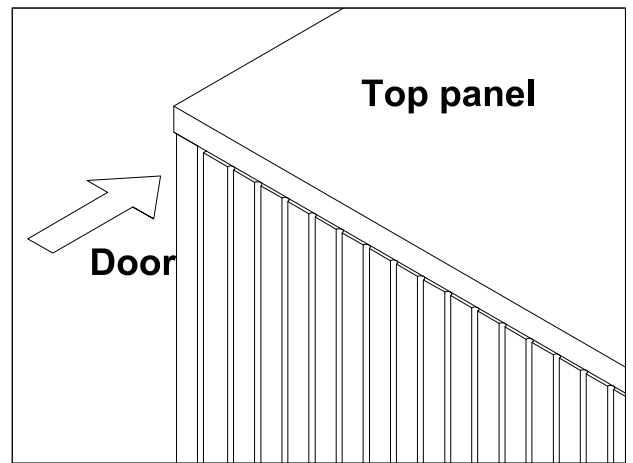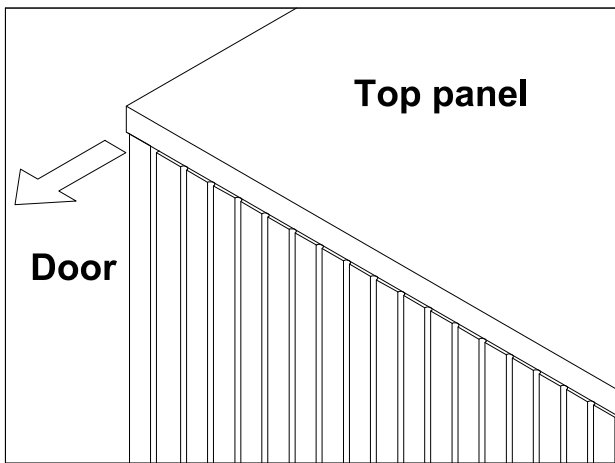


Pull the hinge forward a little.

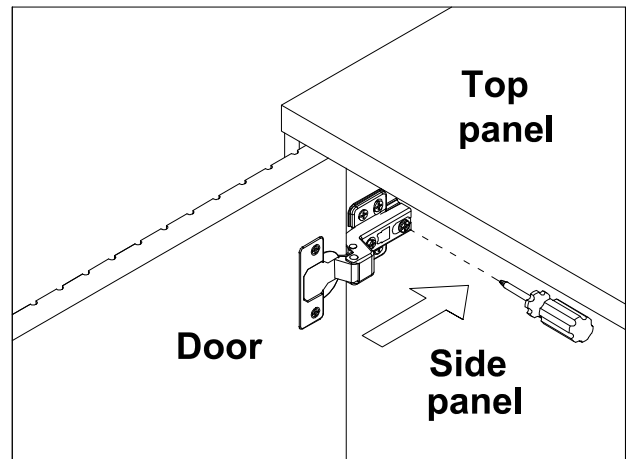


Push the hinge back a little.

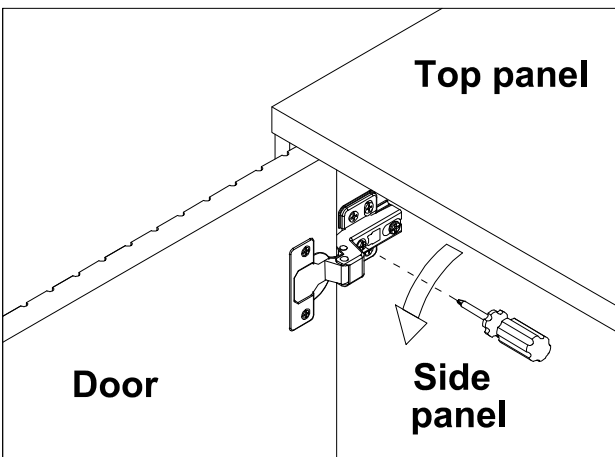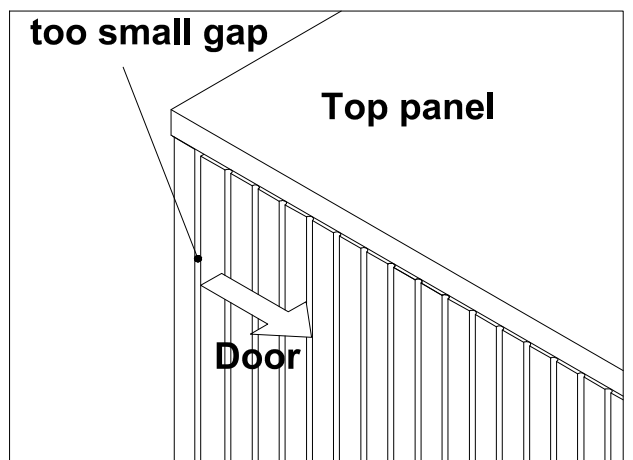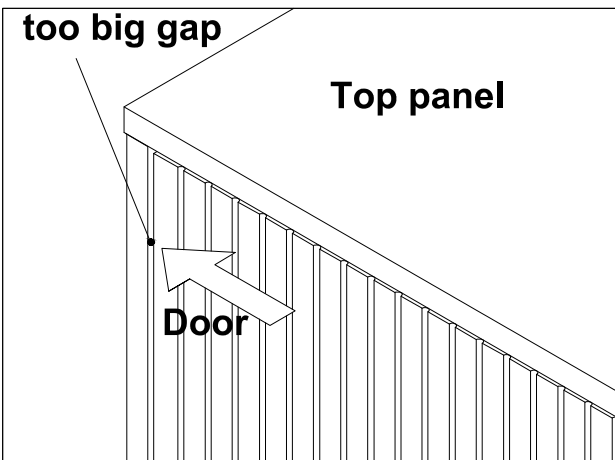

Turn the screw clockwise a little as shown to make the gap smaller

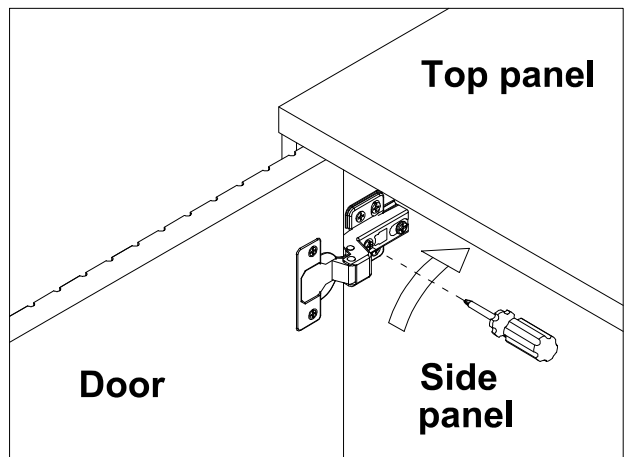


Turn the screw counterclockwise a little as shown to make the gap bigger

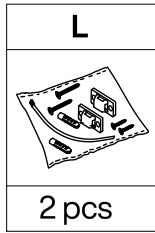


Wall

Step1



Step2

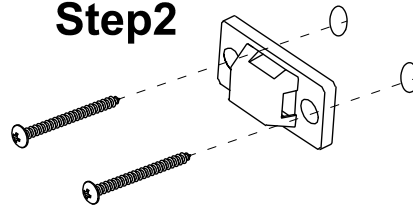

Step3

