


① -A x1 ① -B x1	② x6	③ x6	④ x1	⑤ -A x2 ⑤ -B x2	⑥ x12	⑦ Wrench X2	⑧ handle X1
1 STEP 1: Connect the tubes and tubes one to one into 6 long pieces. x6				2 STEP 2: Connect the two sides of the board with four long tubes and tighten the screws by turning clockwise with a wrench. The screw goes in through the big hole, and out through the small hole to connect the handle.			
3 STEP 3: Install oxford cloth bottom and sides , the oxford cloth on both sides needs to go through the bottom of the tubes on both sides.				4 STEP 4: Place both sides of the oxford fabric upwards.			


5

STEP 5: Turn over under bed storage container, insert long tubes on both sides of the oxford cloth.

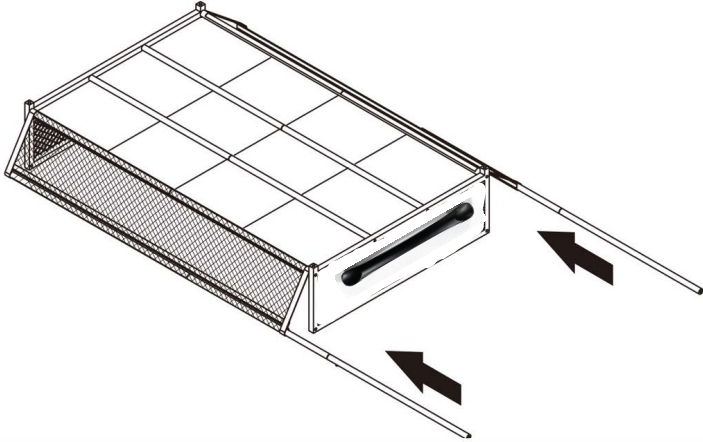


6

STEP 6: Move tubes to the holes at the top of the board and finally secure them with screws.

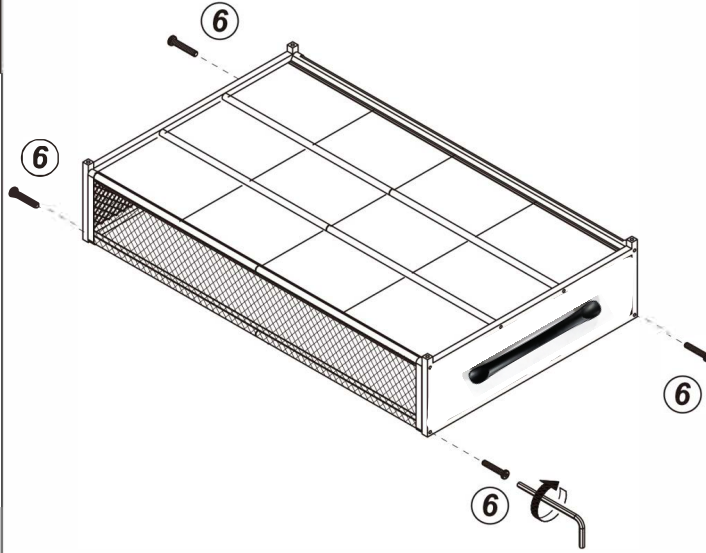

7

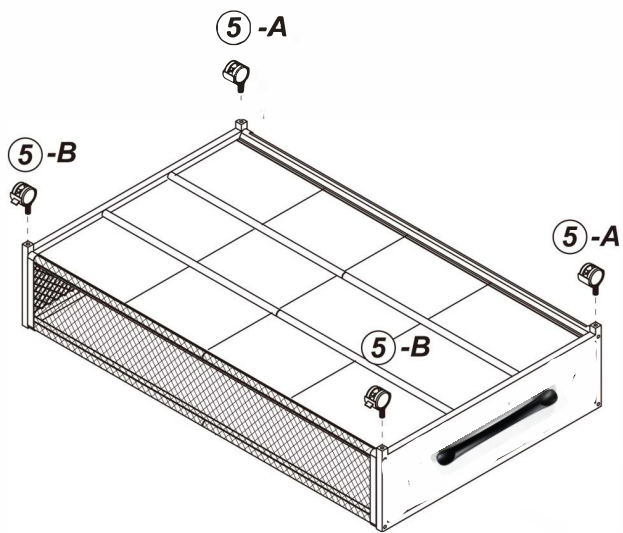

STEP 7:

Install the wheels, insert the wheels into the holes on the bottom of the board to complete the installation.

8



STEP 8: Install the transparent PE dust cover.