















**USER'S MANUAL**

---


















**Console Table**

# PRODUCT ASSEMBLY


## Hardware List

A	 6*35mm	48 pcs	F	 4*30mm	8 pcs	K	 	4 pcs
B	 15*10mm	48 pcs	G	 4*35mm	4 pcs	L	 4*16mm	4 pcs
C	 8*30mm	40 pcs	H	 	2 pcs	M	 	4 pcs
D	 3*12mm	34 pcs	I	 	2 pcs	N	 300mm	2 sets
E	 3*14mm	4 pcs	J	 2.5*12mm	16 pcs			

## Parts List

1	Top Panel		1 pc	10	Connect Bar		3 pcs
2	Left Panel		1 pc	11	Middle Back Connect Bar		1 pc
3	Right Panel		1 pc	12	Drawer Front Panel		2 pcs
4	Left Divide Panel		1 pc	13	Drawer Left Panel		2 pcs
5	Right Divide Panel		1 pc	14	Drawer Right Panel		2 pcs
6	Left Door		1 pc	15	Drawr Back Panel		2 pcs
7	Right Door		1 pc	16	Drawer Bottom Panel		2 pcs
8	Middle Shelf		1 pc	17	Back Panel		1 pc
9	Bottom Shelf						

Part List Assembly Overview

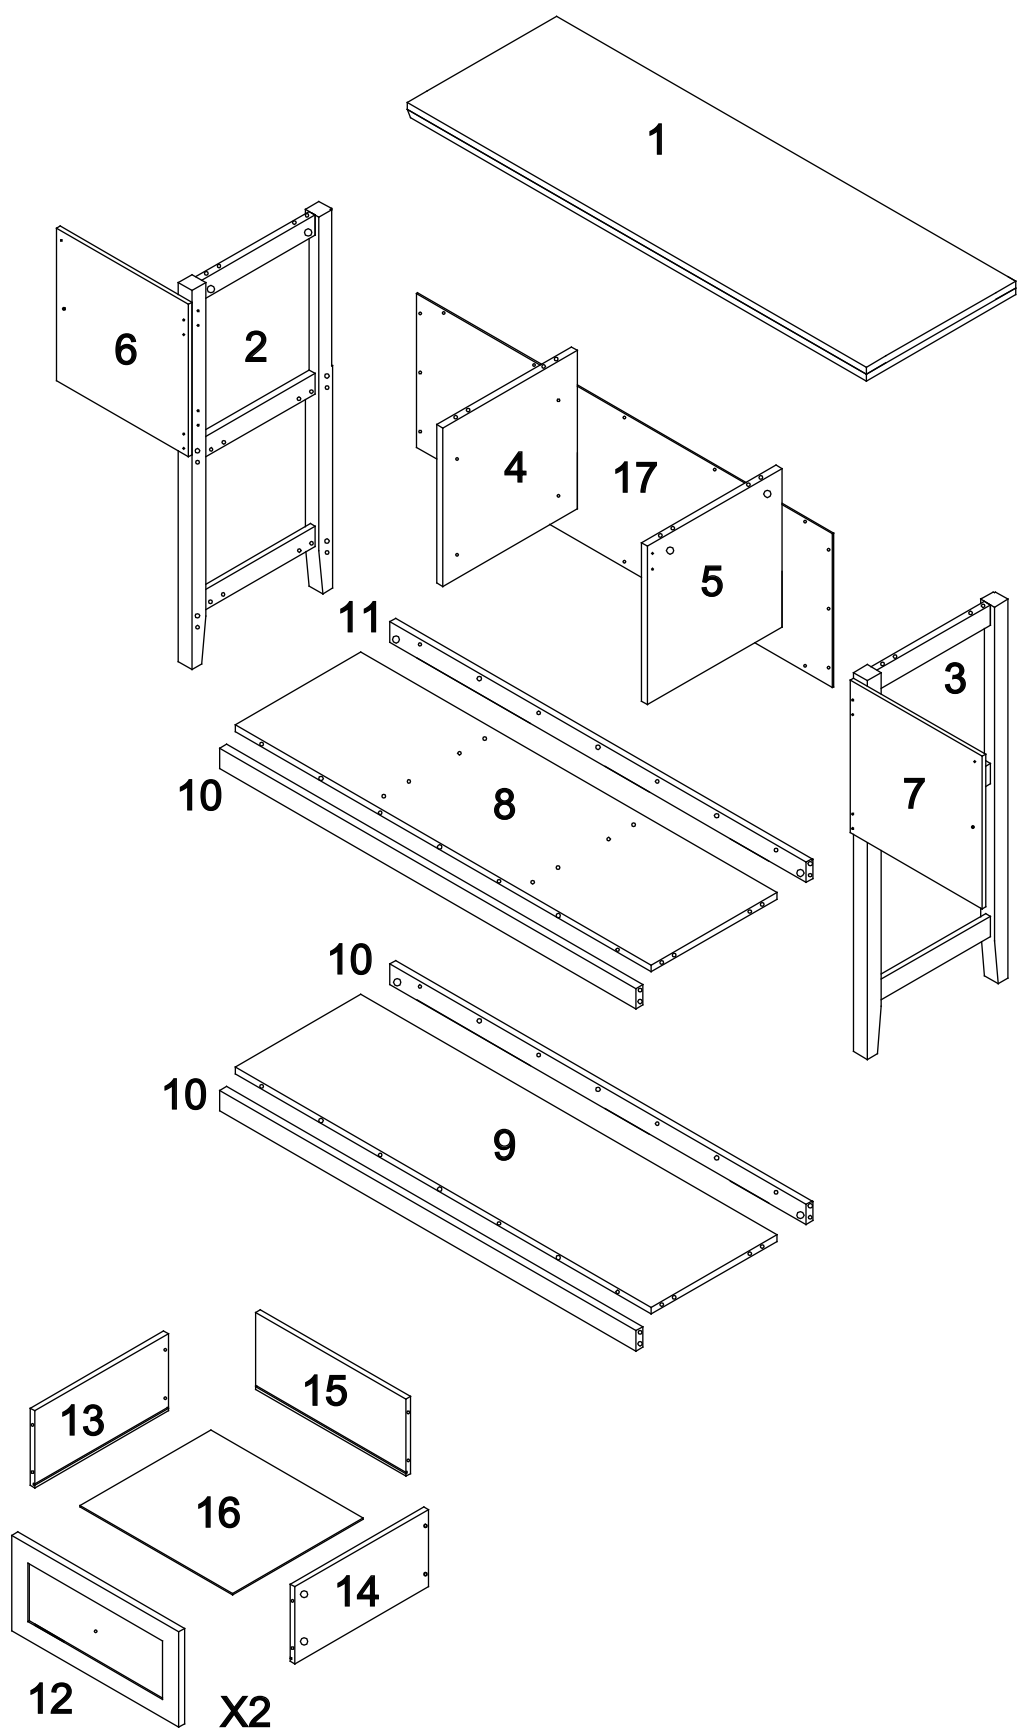


# PRODUCT ASSEMBLY

## Step 1

A




48 pcs

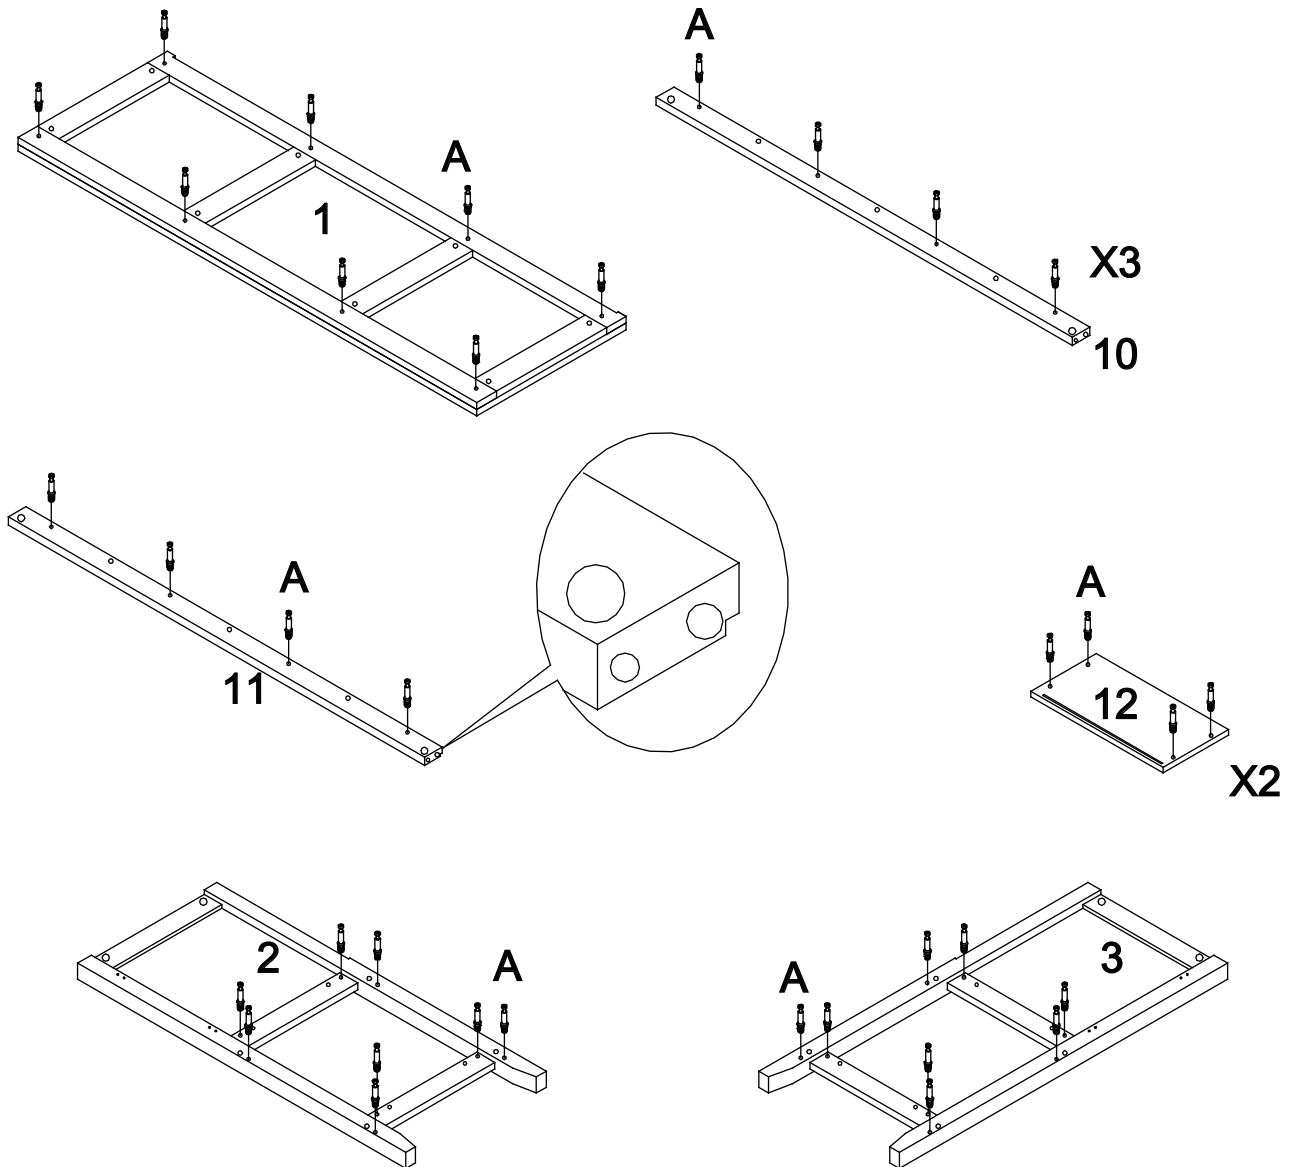


- 1) Lay Top Panel (1), Connect Bar (10), Middle Back Connect Bar (11), Drawer Front Panel (12), Left panel (2) and Right Panel (3) as shown on a flat and soft surface that does not scratch the parts.
- 2) Screw Cam-bolt (A) into the designated holes on each .

# PRODUCT ASSEMBLY

## Step 2

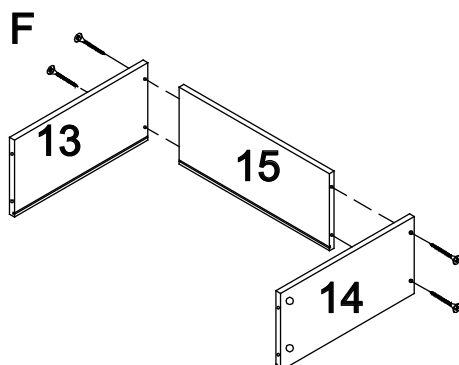


F		8 pcs
---	---	-------




X2

Attach Drawer Side Panel (13 & 14) to Drawer Back Panel (15) by using Screw (F).



## Step 3

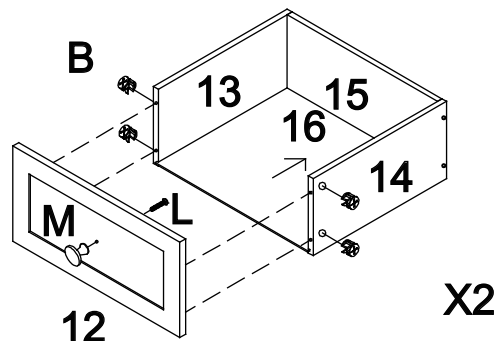
B		8 pcs
L		2 pcs
M		2 pcs



- 1) Insert Drawer Back Panel (16) as per the groove on (13, 14 & 15).
- 2) Attach Drawer Front Panel (12) to (13 & 14) via Cam-bolt on (12).
- 3) Insert Cam-lock (B) to the designated holes on (13 & 14) then turn clock-wise to lock onto Cam-bolt.

## Step 4

N2		2 sets
D		8 pcs

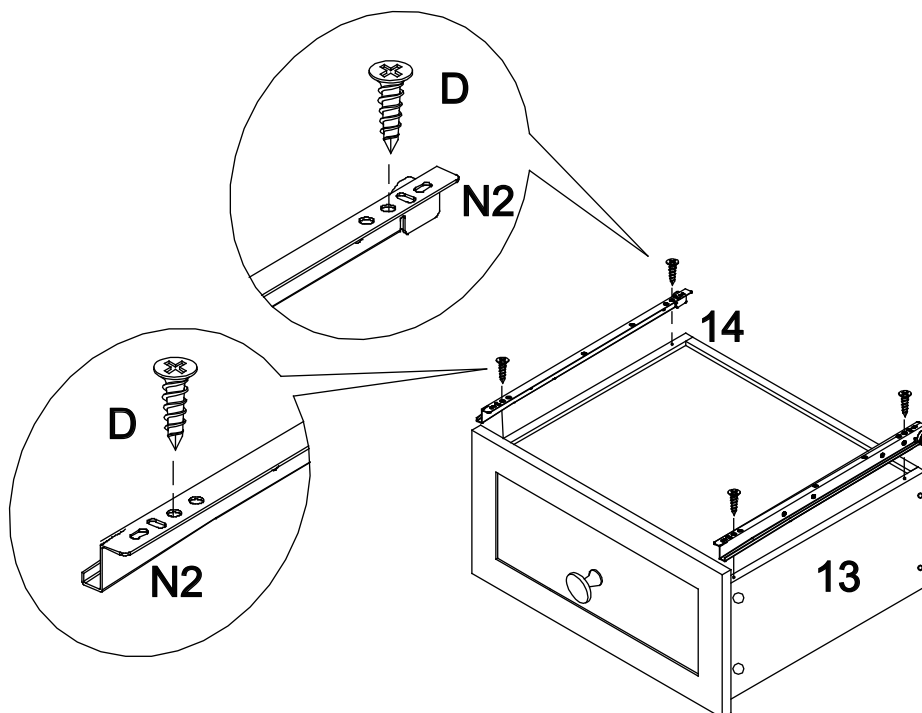




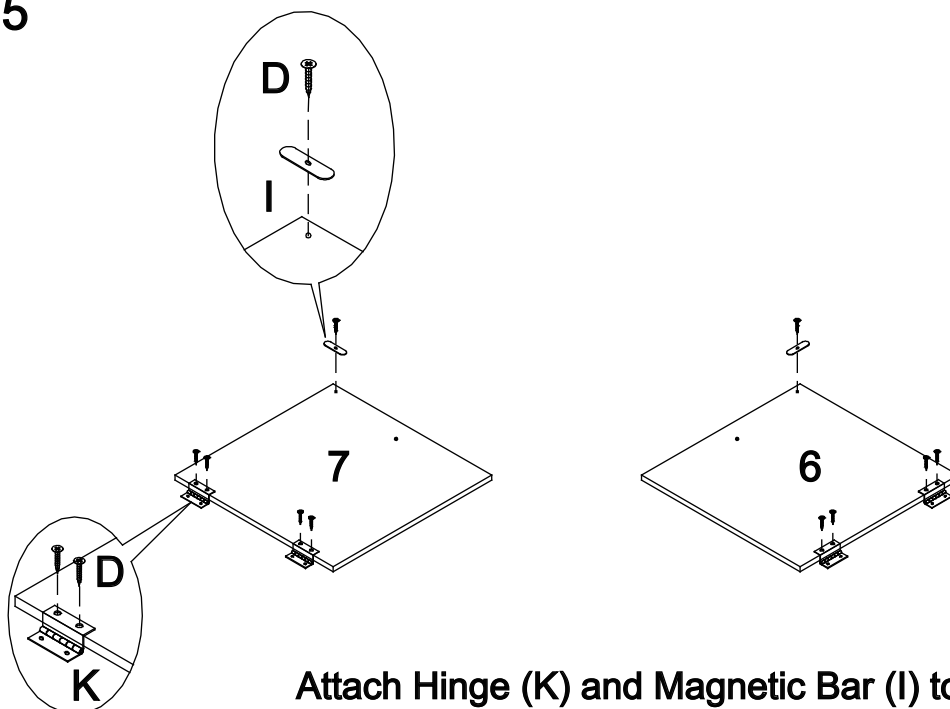
X2

Attach Drawer Glide (N2) to Drawer Side Panel (13 & 14) by using Screw (D).

# PRODUCT ASSEMBLY



## Step 5


D		10 pcs
I		2 pcs
K		4 pcs



Attach Hinge (K) and Magnetic Bar (I) to Door (6 & 7) by using Screw (D) as shown.

## Step 6

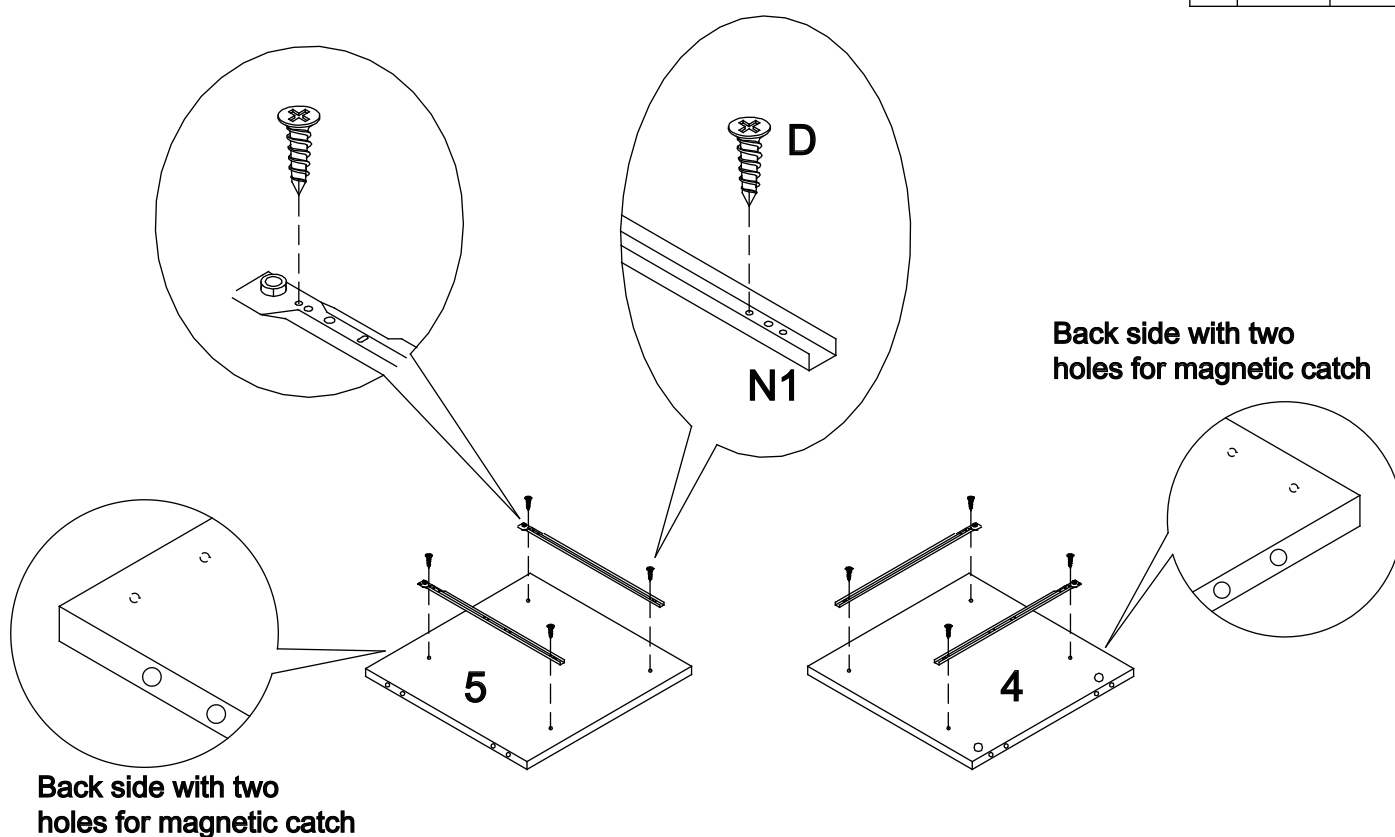

D		8 pcs
N1		2 sets




Attach Drawer Glide (N1) to Left and Right Divide Panel (4 & 5) by using Screw (D).

## PRODUCT ASSEMBLY



### Step 7

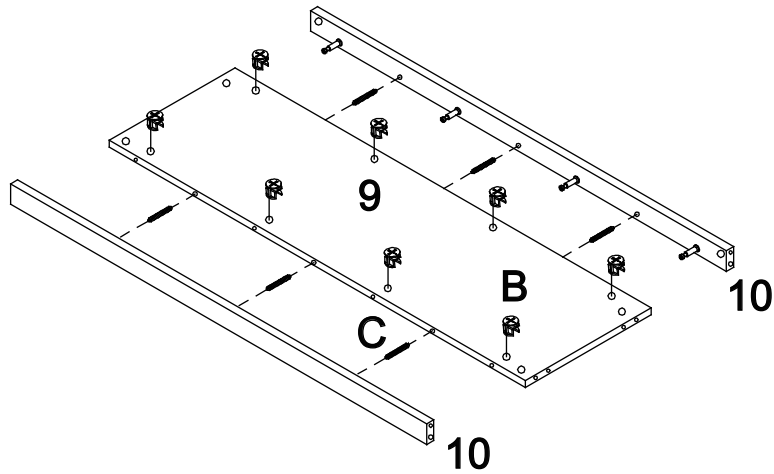
B		8 pcs
C		6 pcs



- 1) Attach Connect Bar (10) to Bottom Shelf (9) via Wood Dowel (C) and Cam-bolt on (10).
- 2) Insert Cam-lock (B) to the designated holes on (9) then turn clock-wise to lock onto Cam-bolt.

### Step 8

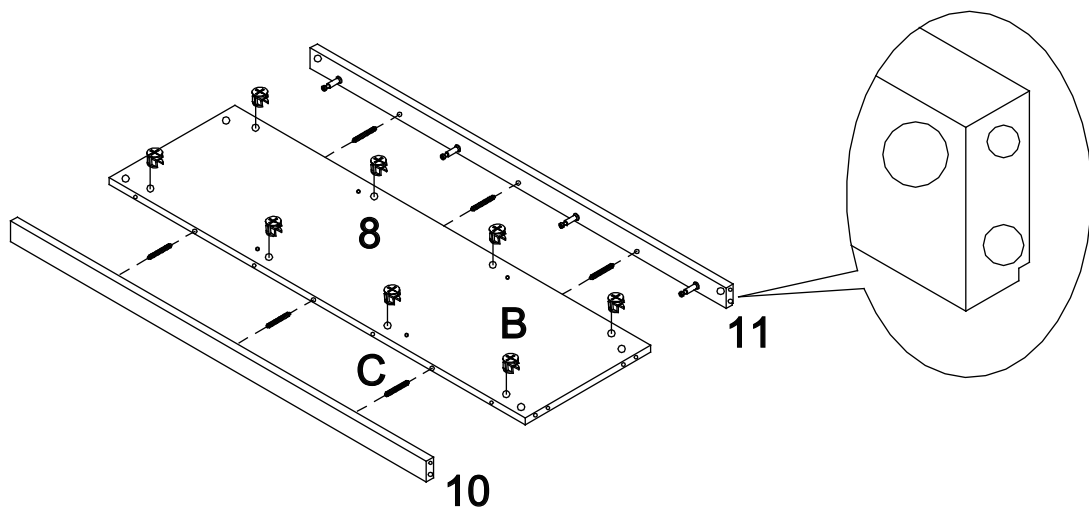

B		8 pcs
C		6 pcs




- 1) Attach Connect Bar (10 & 11) to Middle Shelf (8) via Wood Dowel (C) and Cam-bolt on (10 & 11).
- 2) Insert Cam-lock (B) to the designated holes on (8) then turn clock-wise to lock onto Cam-bolt.

# PRODUCT ASSEMBLY



## Step 9

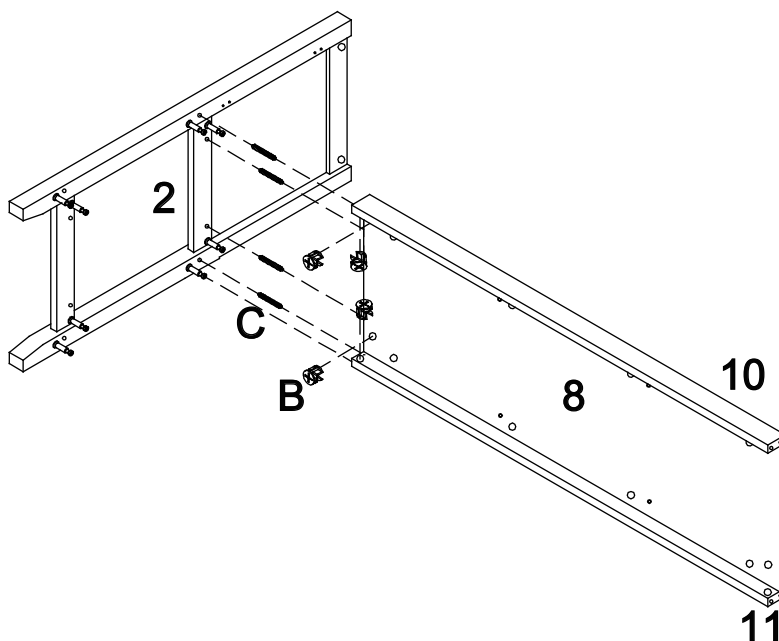
B		4 pcs
C		4 pcs



- 1) Attach (8, 10 & 11) to Left Panel (2) via Wood Dowel (C) and Cam-bolt on (2).
- 2) Insert Cam-lock (B) to the designated holes on (8, 10 & 11) then turn clock-wise to lock onto Cam-bolt.

## Step 10

B		4 pcs
C		4 pcs

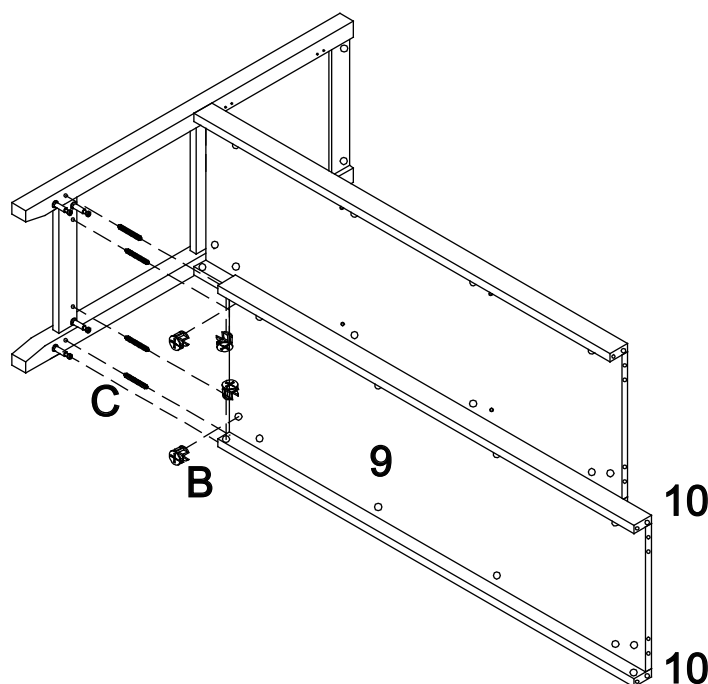




- 1) Attach (9 & 10 ) to Left Panel (2) via Wood Dowel (C) and Cam-bolt on (2).
- 2) Insert Cam-lock (B) to the designated holes on (9 & 10) then turn clock-wise to lock onto Cam-bolt.



# PRODUCT ASSEMBLY

## Step 11


B		8 pcs
C		8 pcs

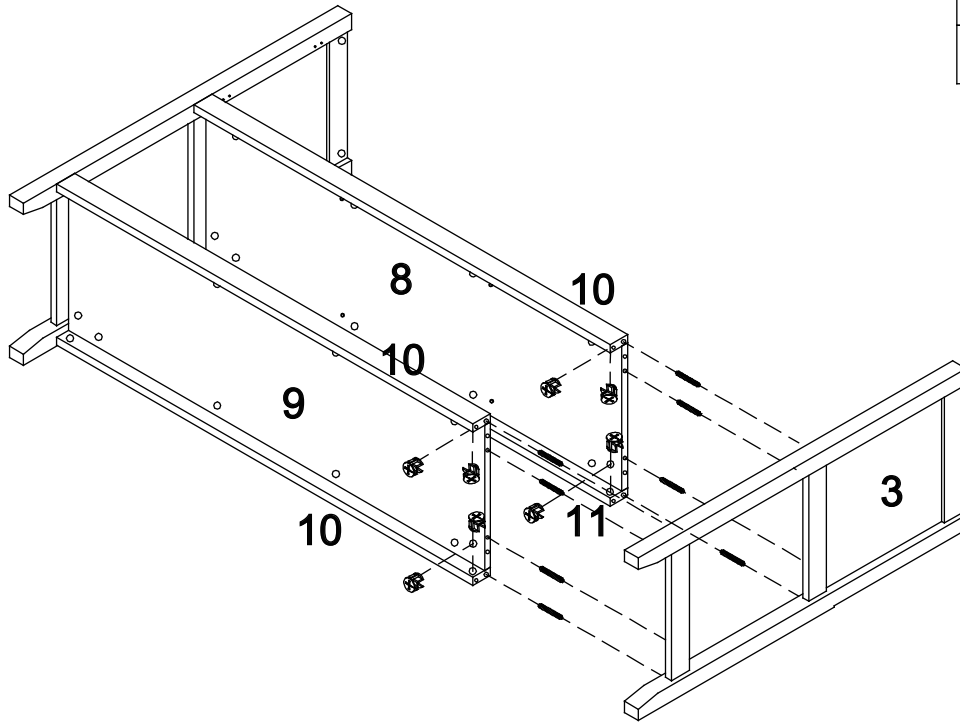

- 1) Attach Right Panel (3) to (8, 9, 10 & 11) via Wood Dowel (C) and Cam-bolt on (2).
- 2) Insert Cam-lock (B) to the designated holes on (8, 9 10 & 11) then turn clock-wise to lock onto Cam-bolt.

## Step 12

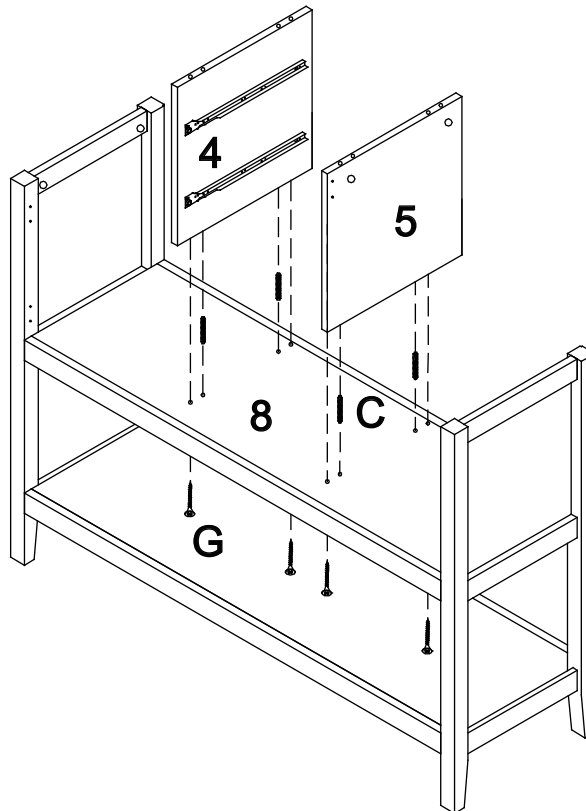

C		4 pcs
G		4 pcs




Attach Left and Right Divide Panel (4 & 5) to Middle Shelf (8) by using Wood Dowel (C) and Screw (G).

## PRODUCT ASSEMBLY

### Step 13


B		8 pcs
C		8 pcs

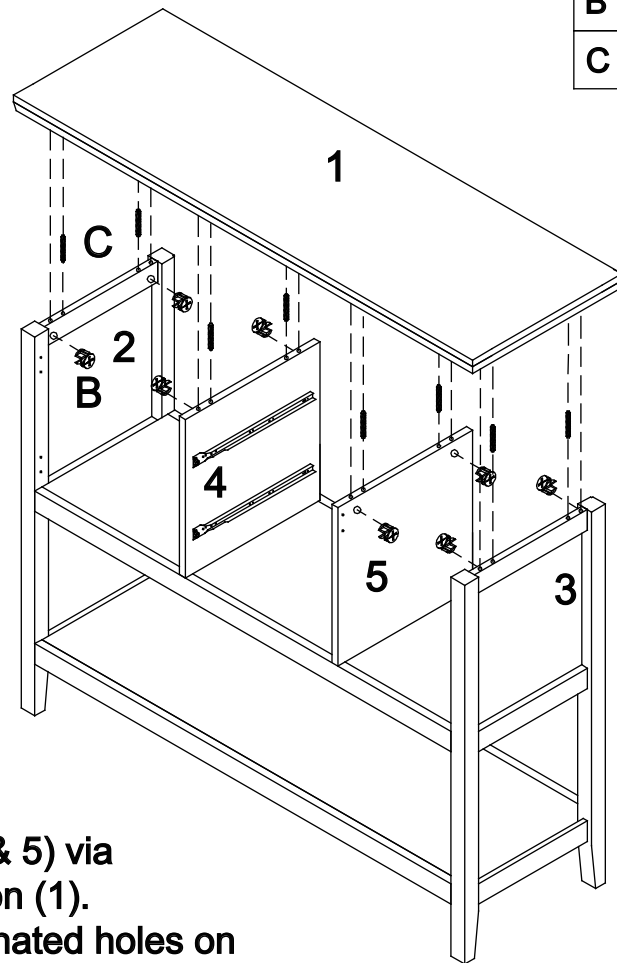

- 1) Attach Top Panel (1) to (2, 3, 4 & 5) via Wood Dowel (C) and Cam-bolt on (1).
- 2) Insert Cam-lock (B) to the designated holes on (2, 3, 4 & 5) then turn clock-wise to lock onto Cam-bolt.

### Step 14


J		16 pcs
---	---	--------

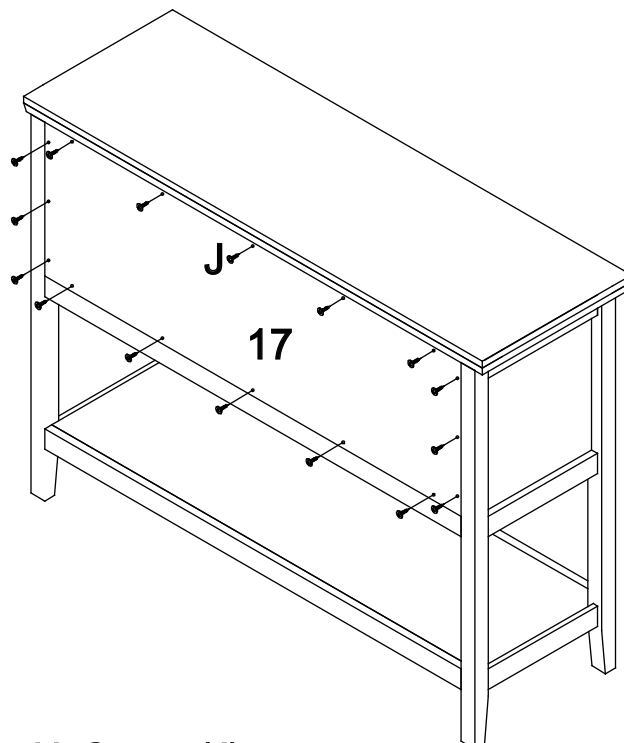

Attach Back Panel (17) with Screw (J).

# PRODUCT ASSEMBLY


## Step 15

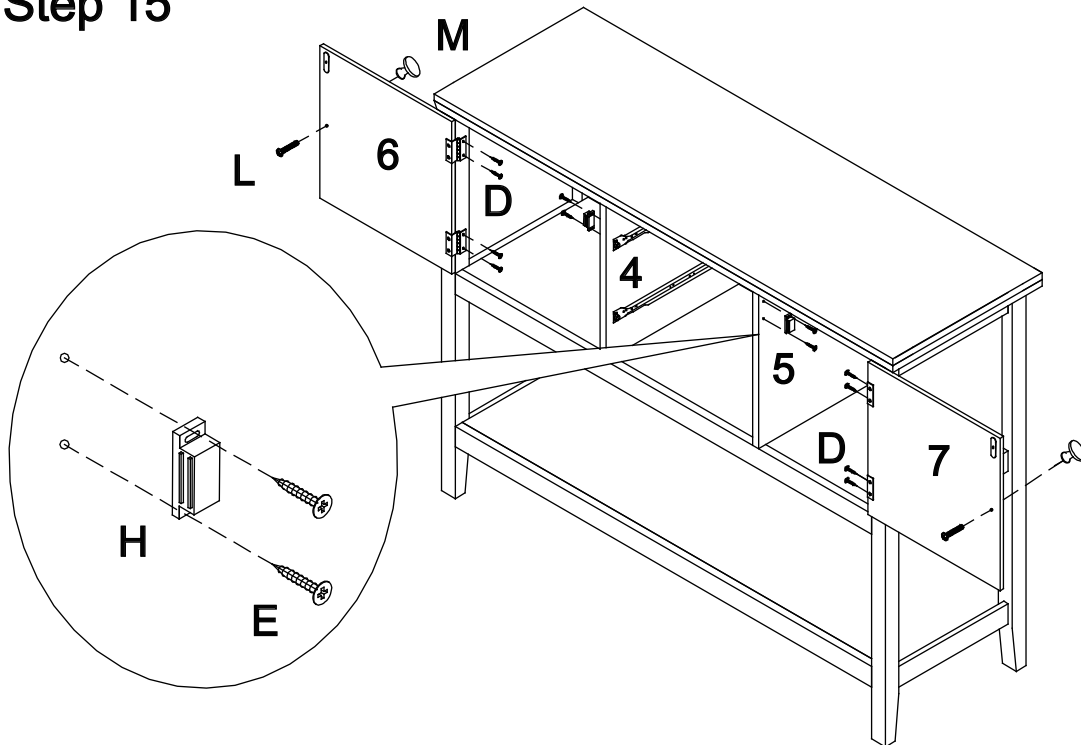

D		8 pcs
E		4 pcs
H		2 pcs
L		2 pcs
M		2 pcs

- 1) Attach Magnetic Catch (H) to Divide Panel (4 & 5) with Screw (E).
- 2) Attach Door (6 & 7) to Side Panel with Screw (D).
- 3) Attach Knob (M) to Door (6 & 7) with Knob Bolt (L).

## Step 16

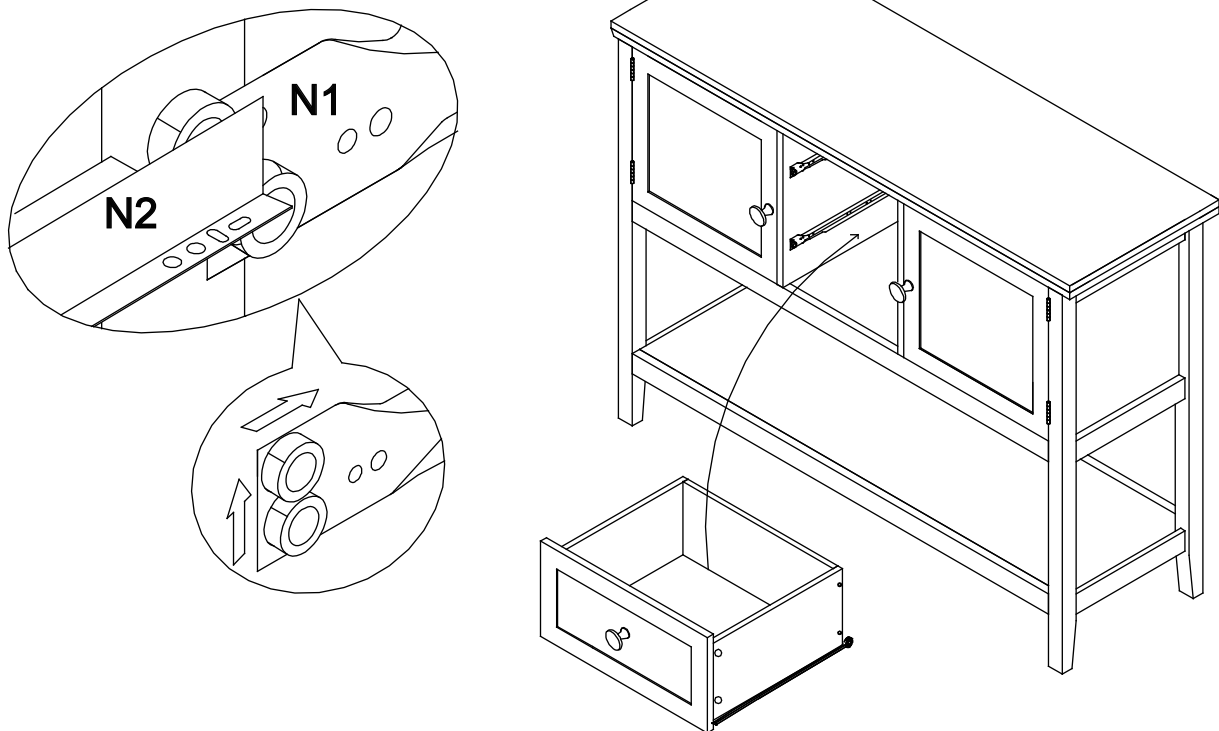

Insert Drawers.