

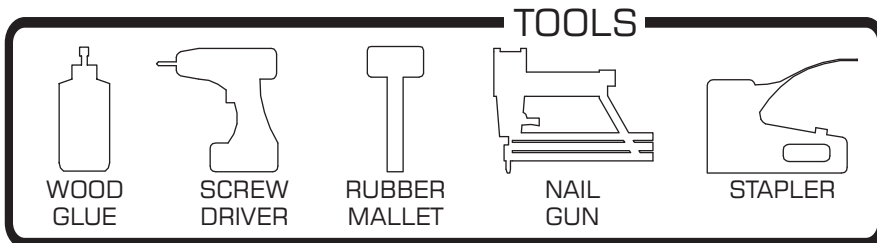


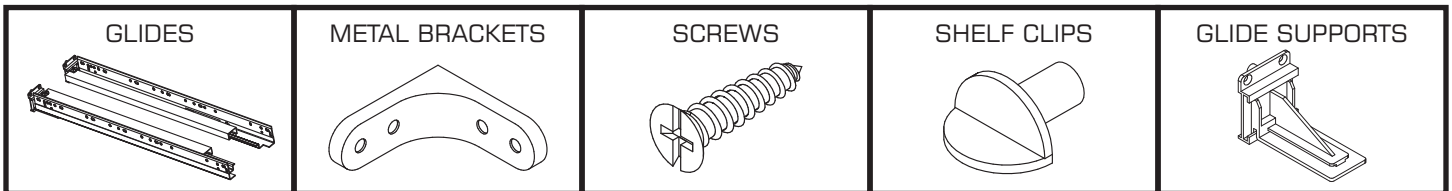


CABINET ASSEMBLY INSTRUCTIONS

ASSEMBLING INSTRUCTIONS - BASE CABINET


BASE CABINET

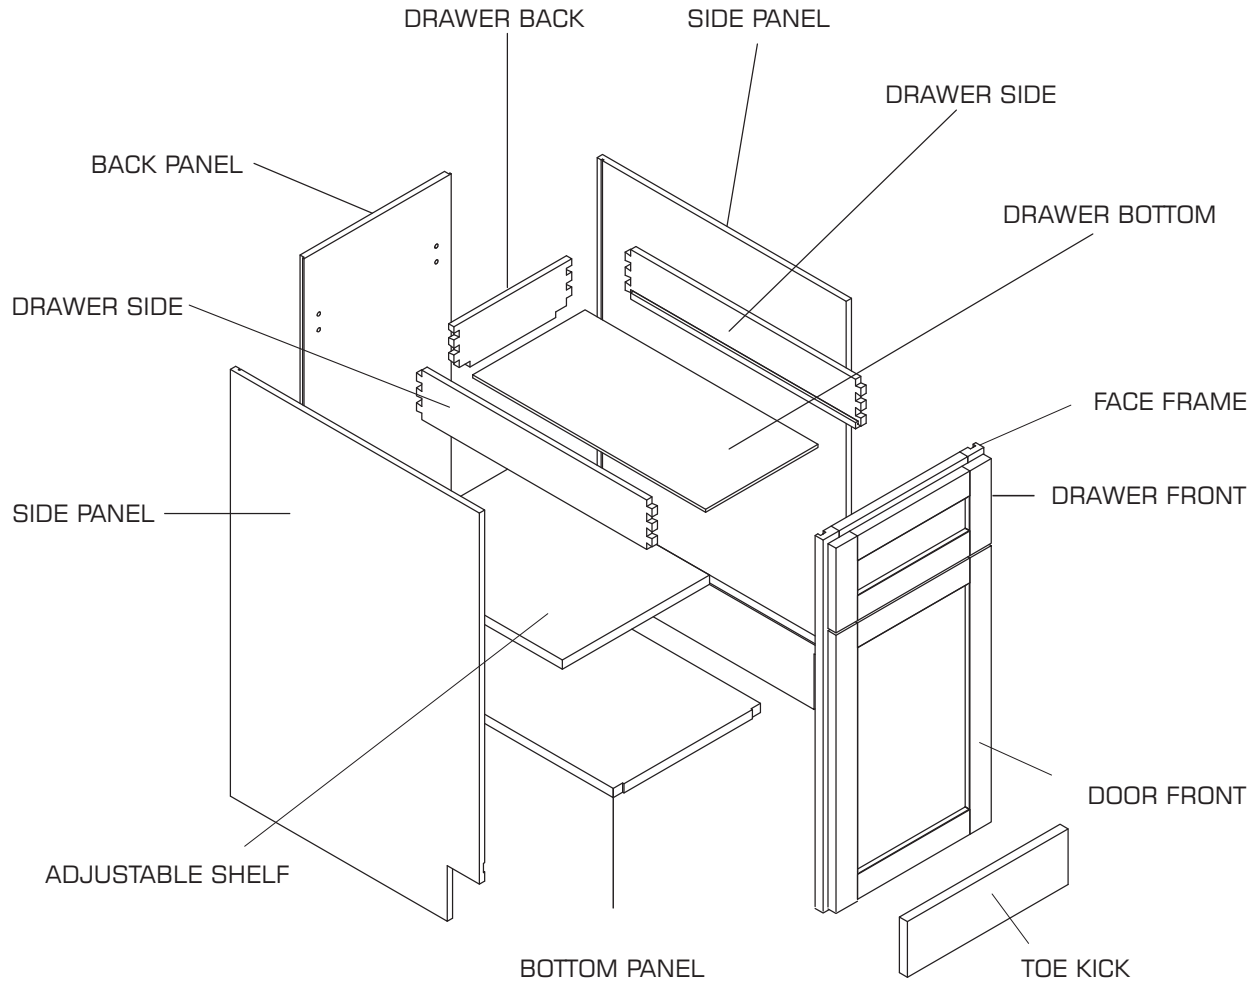


STEP 1

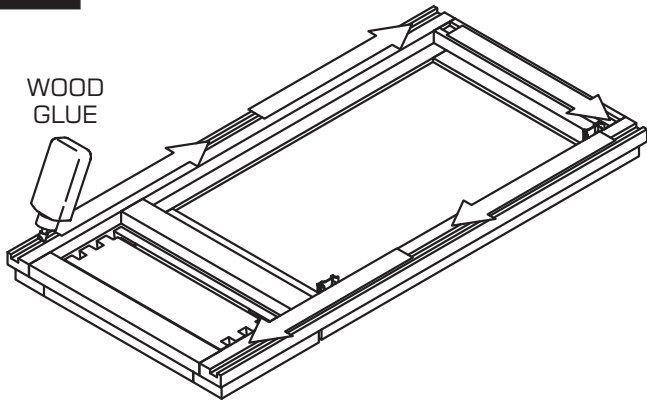


2

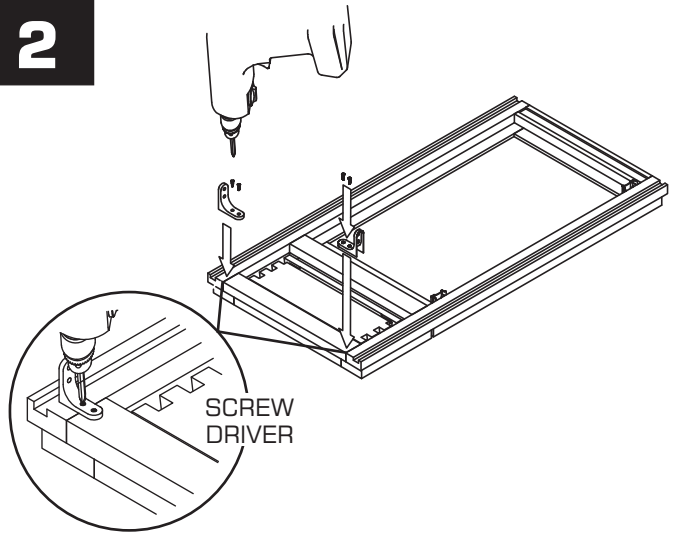


STEP 3

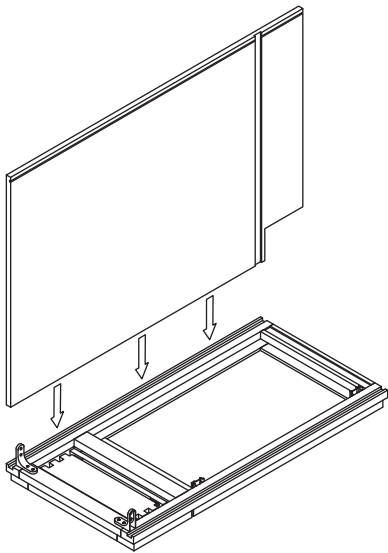


STEP 4

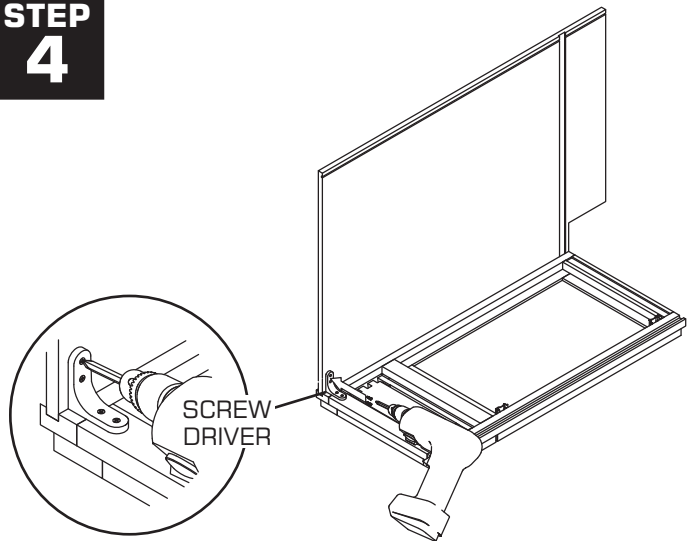


STEP 5

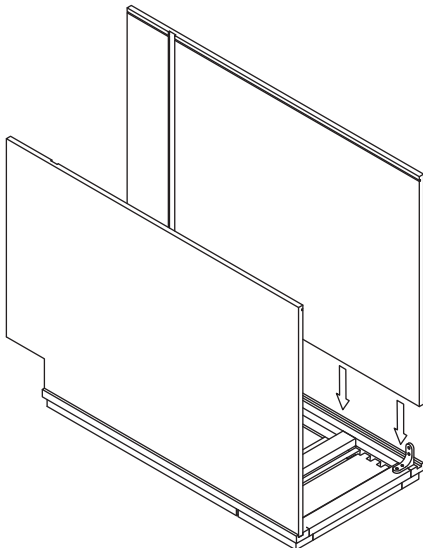


STEP 6

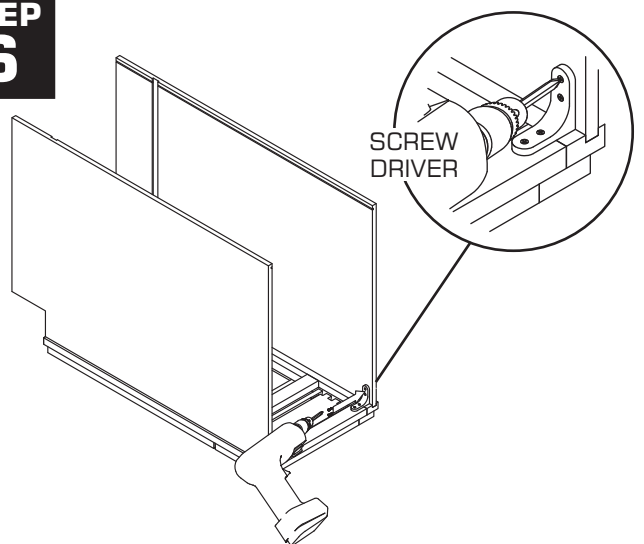


STEP 7

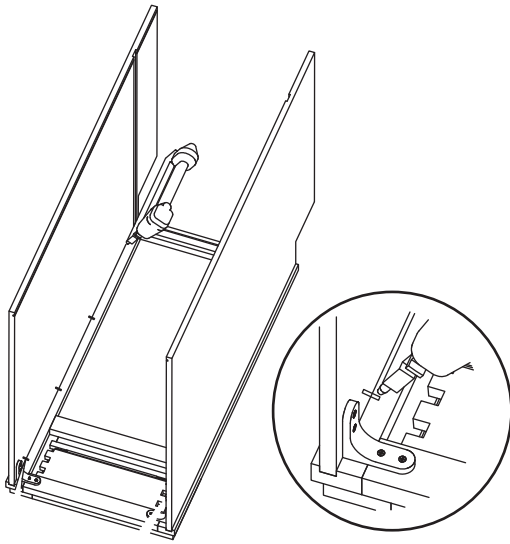


STEP 8

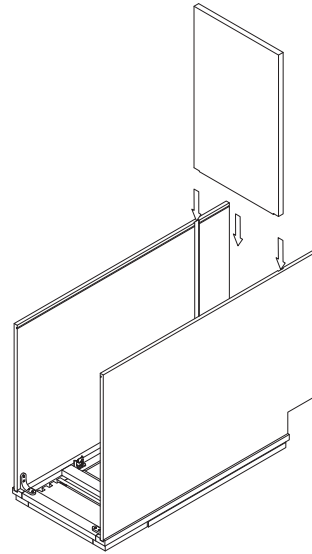


STEP 9

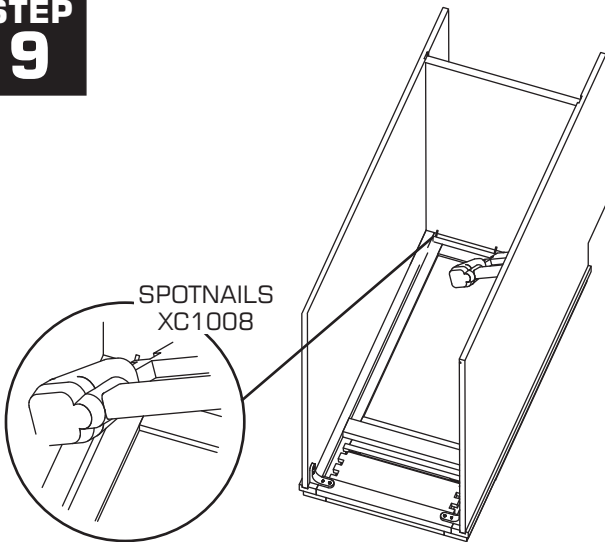


STEP 10

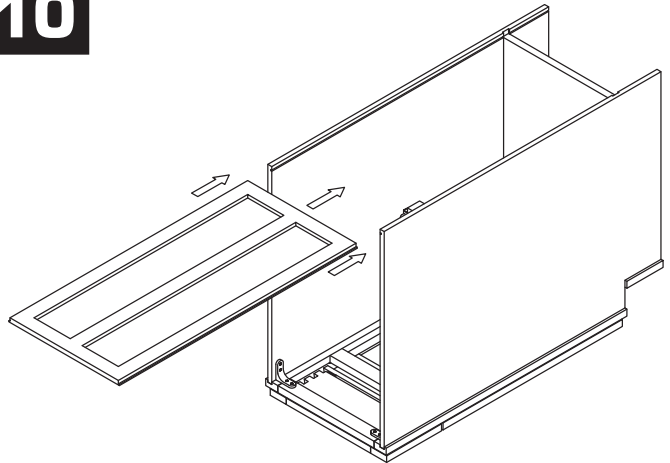


STEP 11

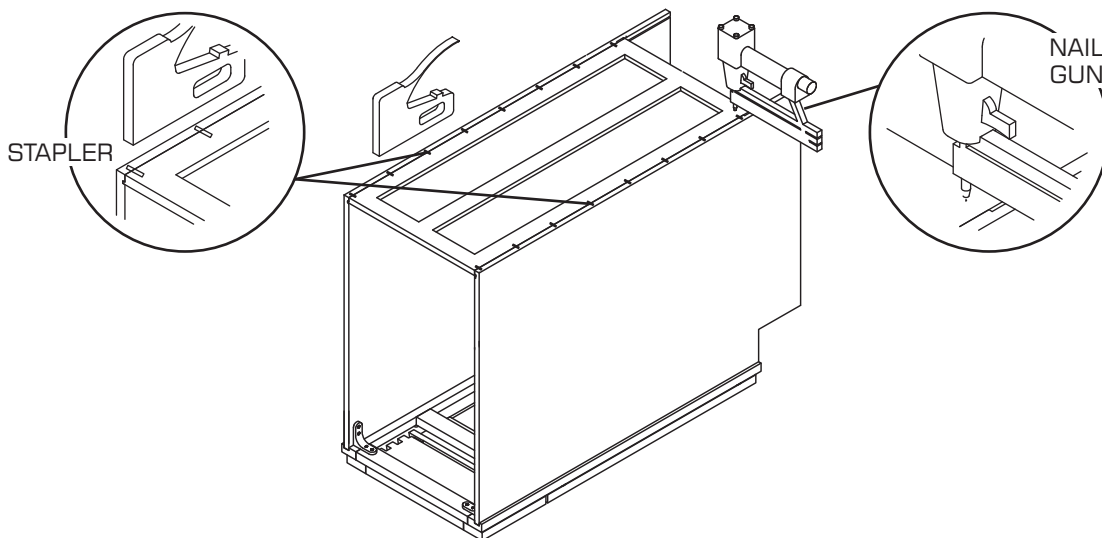


STEP 12

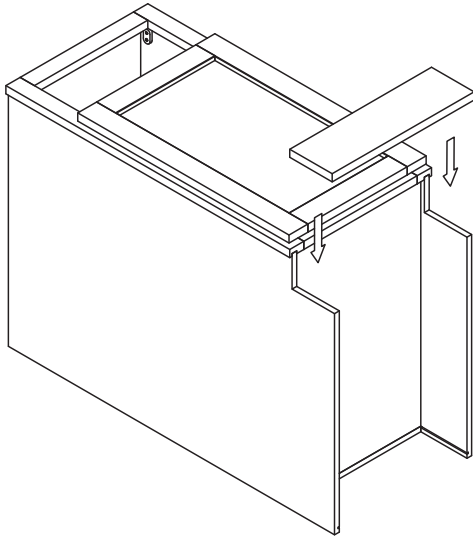


STEP 13

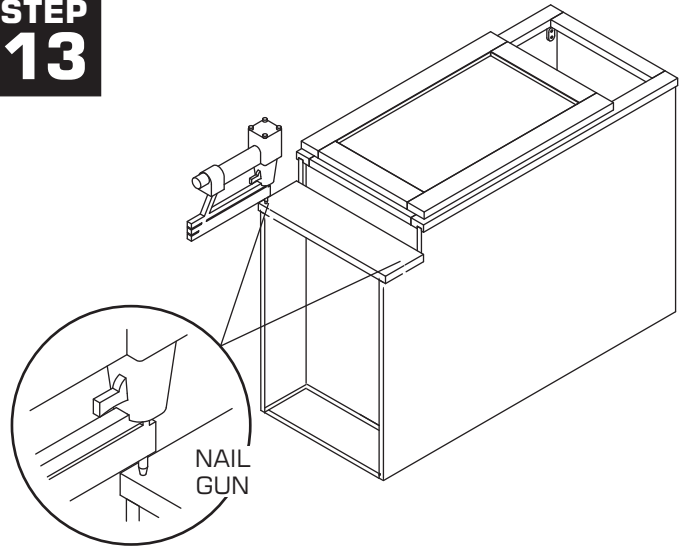


STEP 14

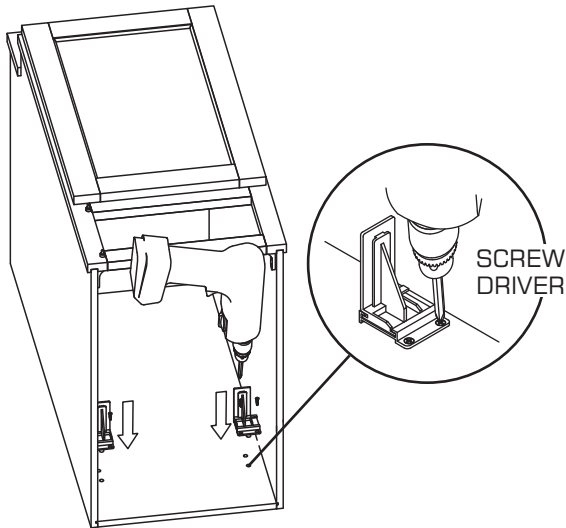


STEP 15

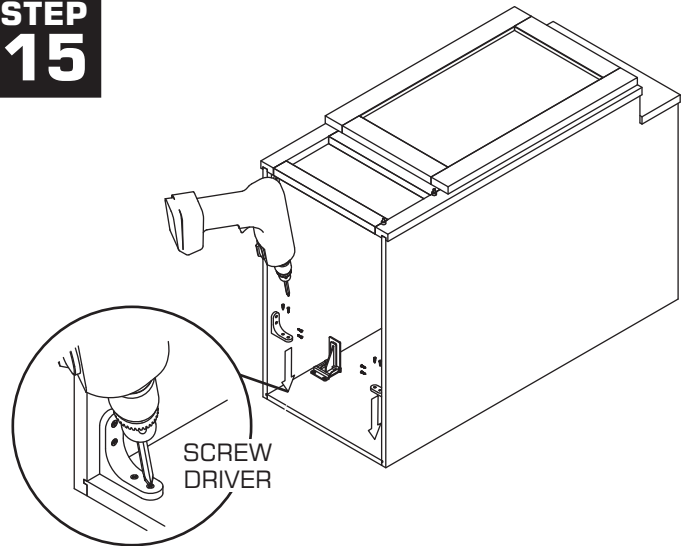


STEP 16

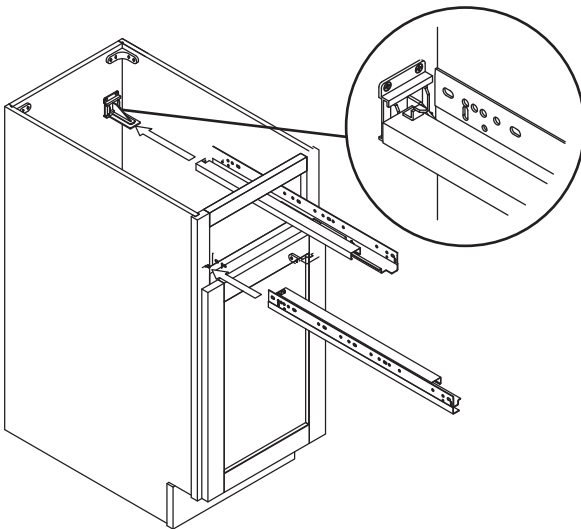


STEP 17

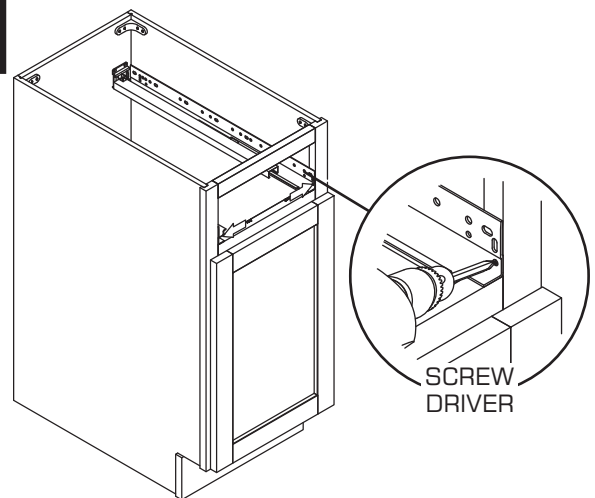


STEP 18

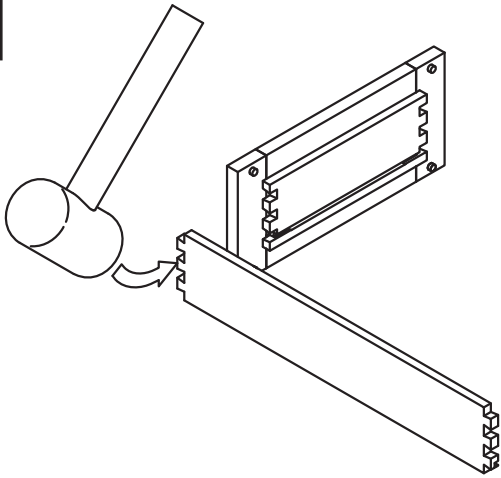


STEP 19

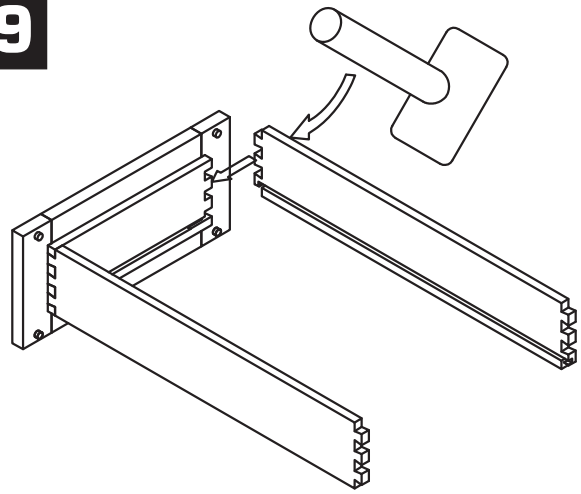


STEP 20

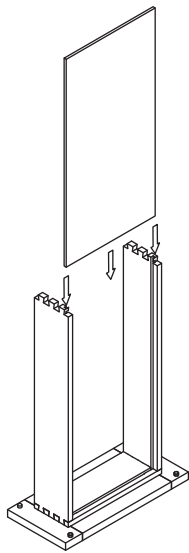


STEP 21

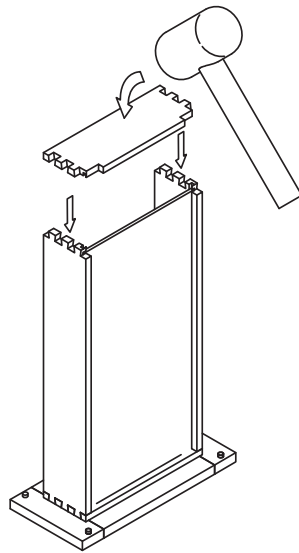


STEP 22

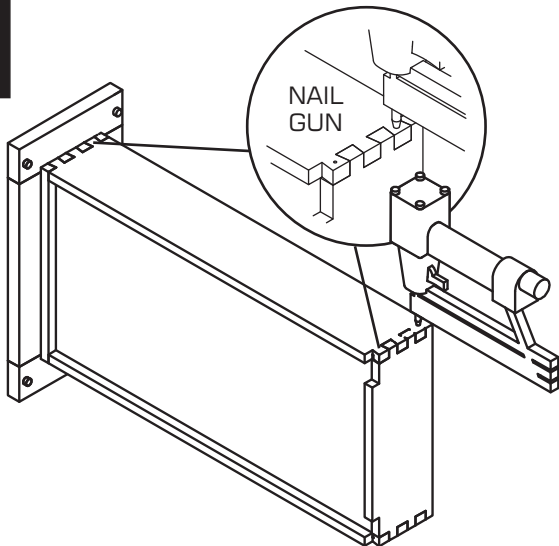


STEP 23

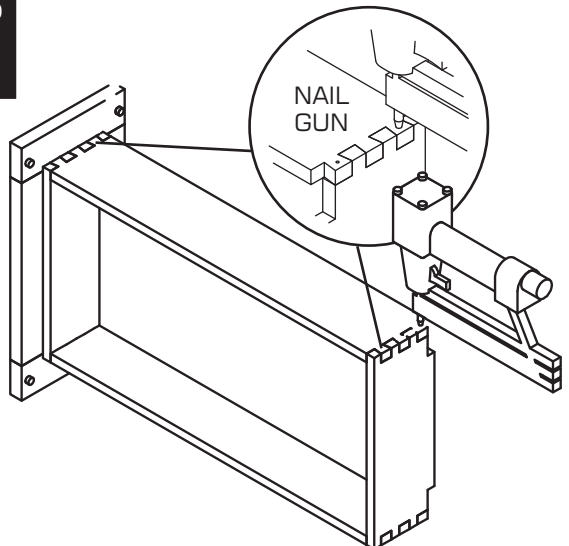


**STEP
24**

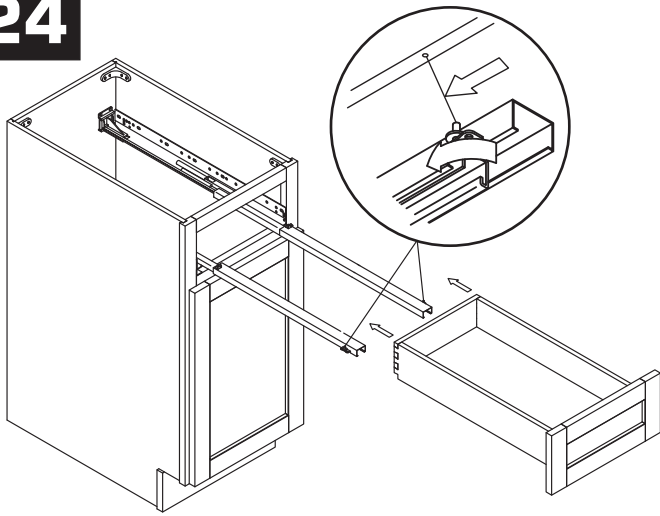


**STEP
25**

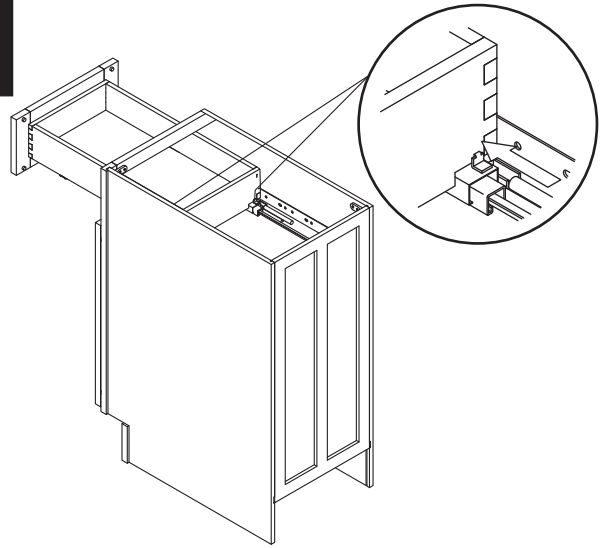

**STEP
26**

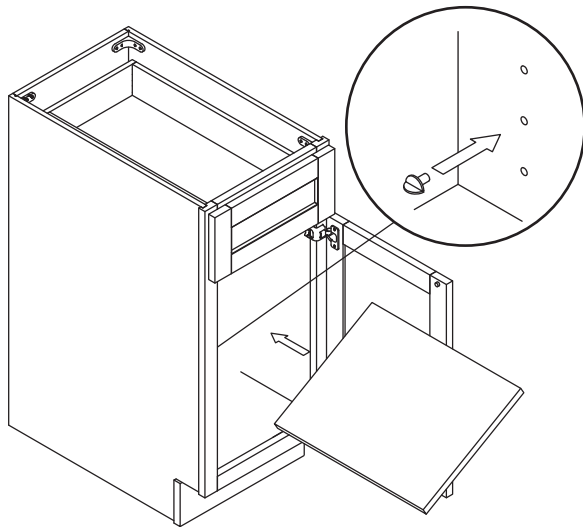

**STEP
27**

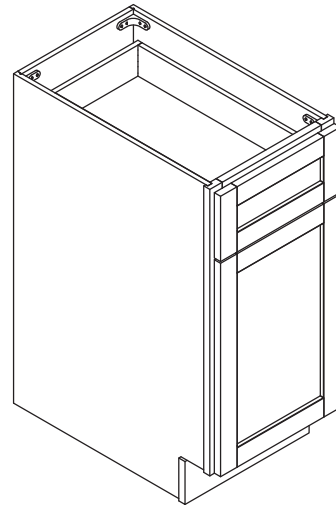

BASE CABINET