

## MEASURING GUIDE

Measure key parameters to ensure the size fits properly.

21"-39" wide




Up to 40" deep



The armrest width is 10" max



There is enough room for the cardboards

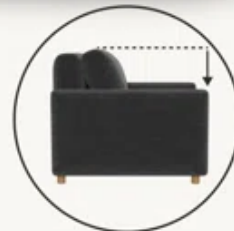

Armrests are lower than the back