


Assembly Instruction

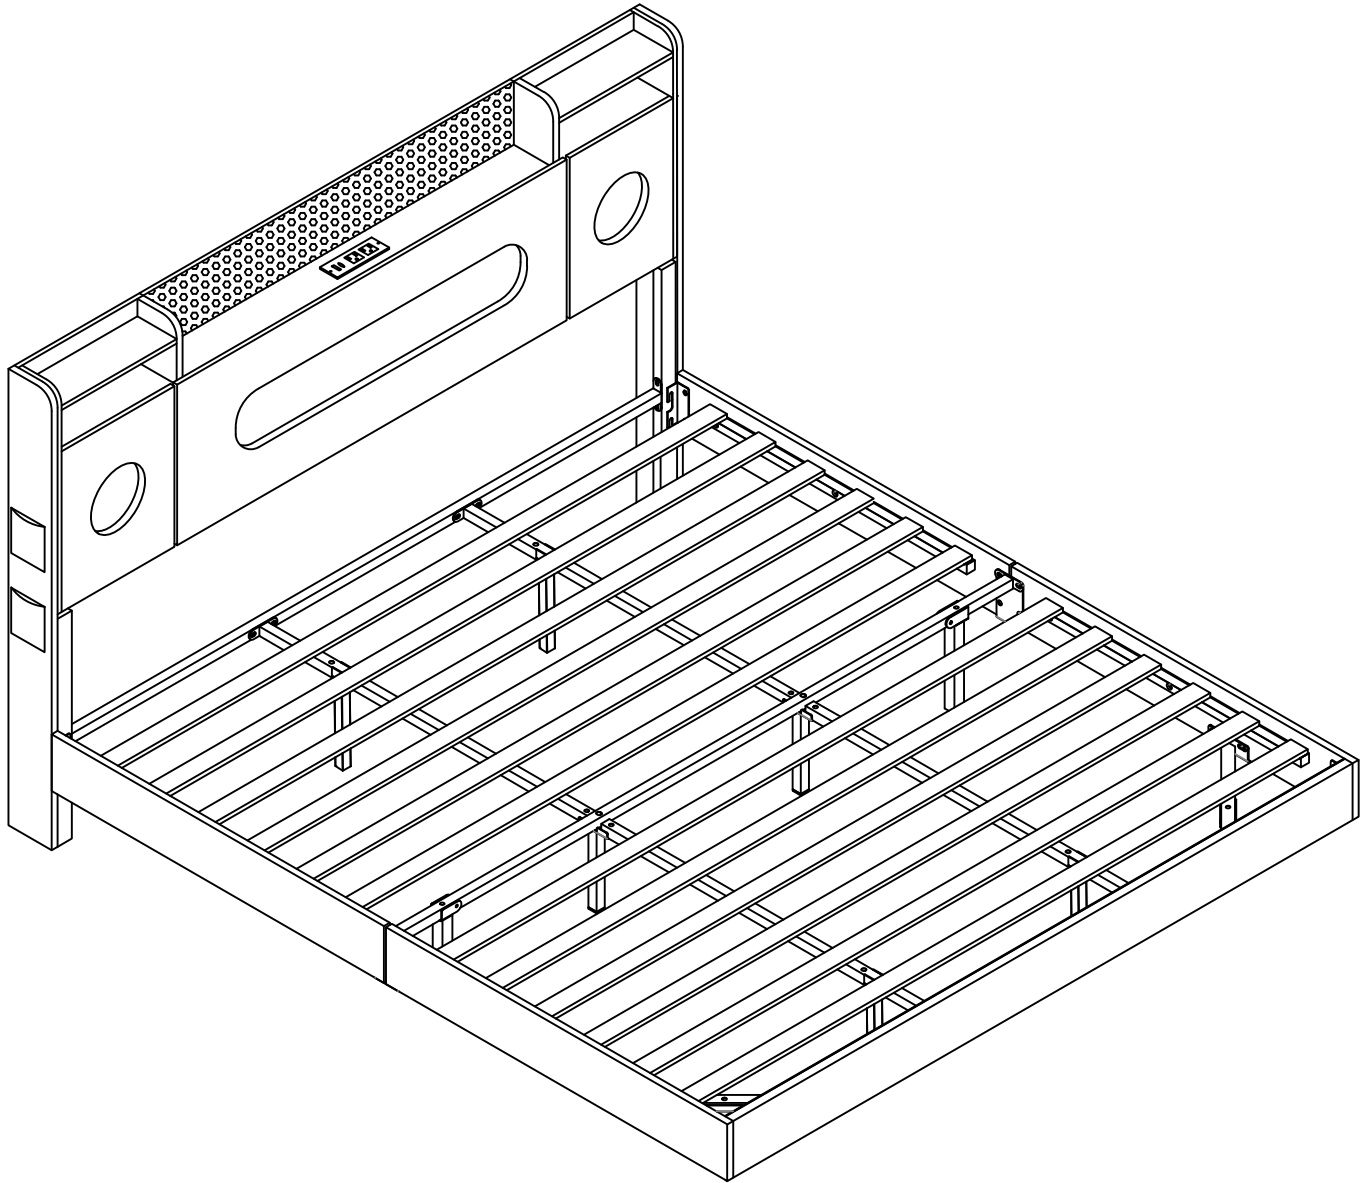

Note:


1. Should be assembled on flat ground to keep balance.
2. Before completing the installation, do not tighten the screws.
3. This product should be assembled by at least 2 people.

BDC-2414K/CK
FG0C012-DA1
FG0C012-CK1




Version:1.3

Assembly Instruction

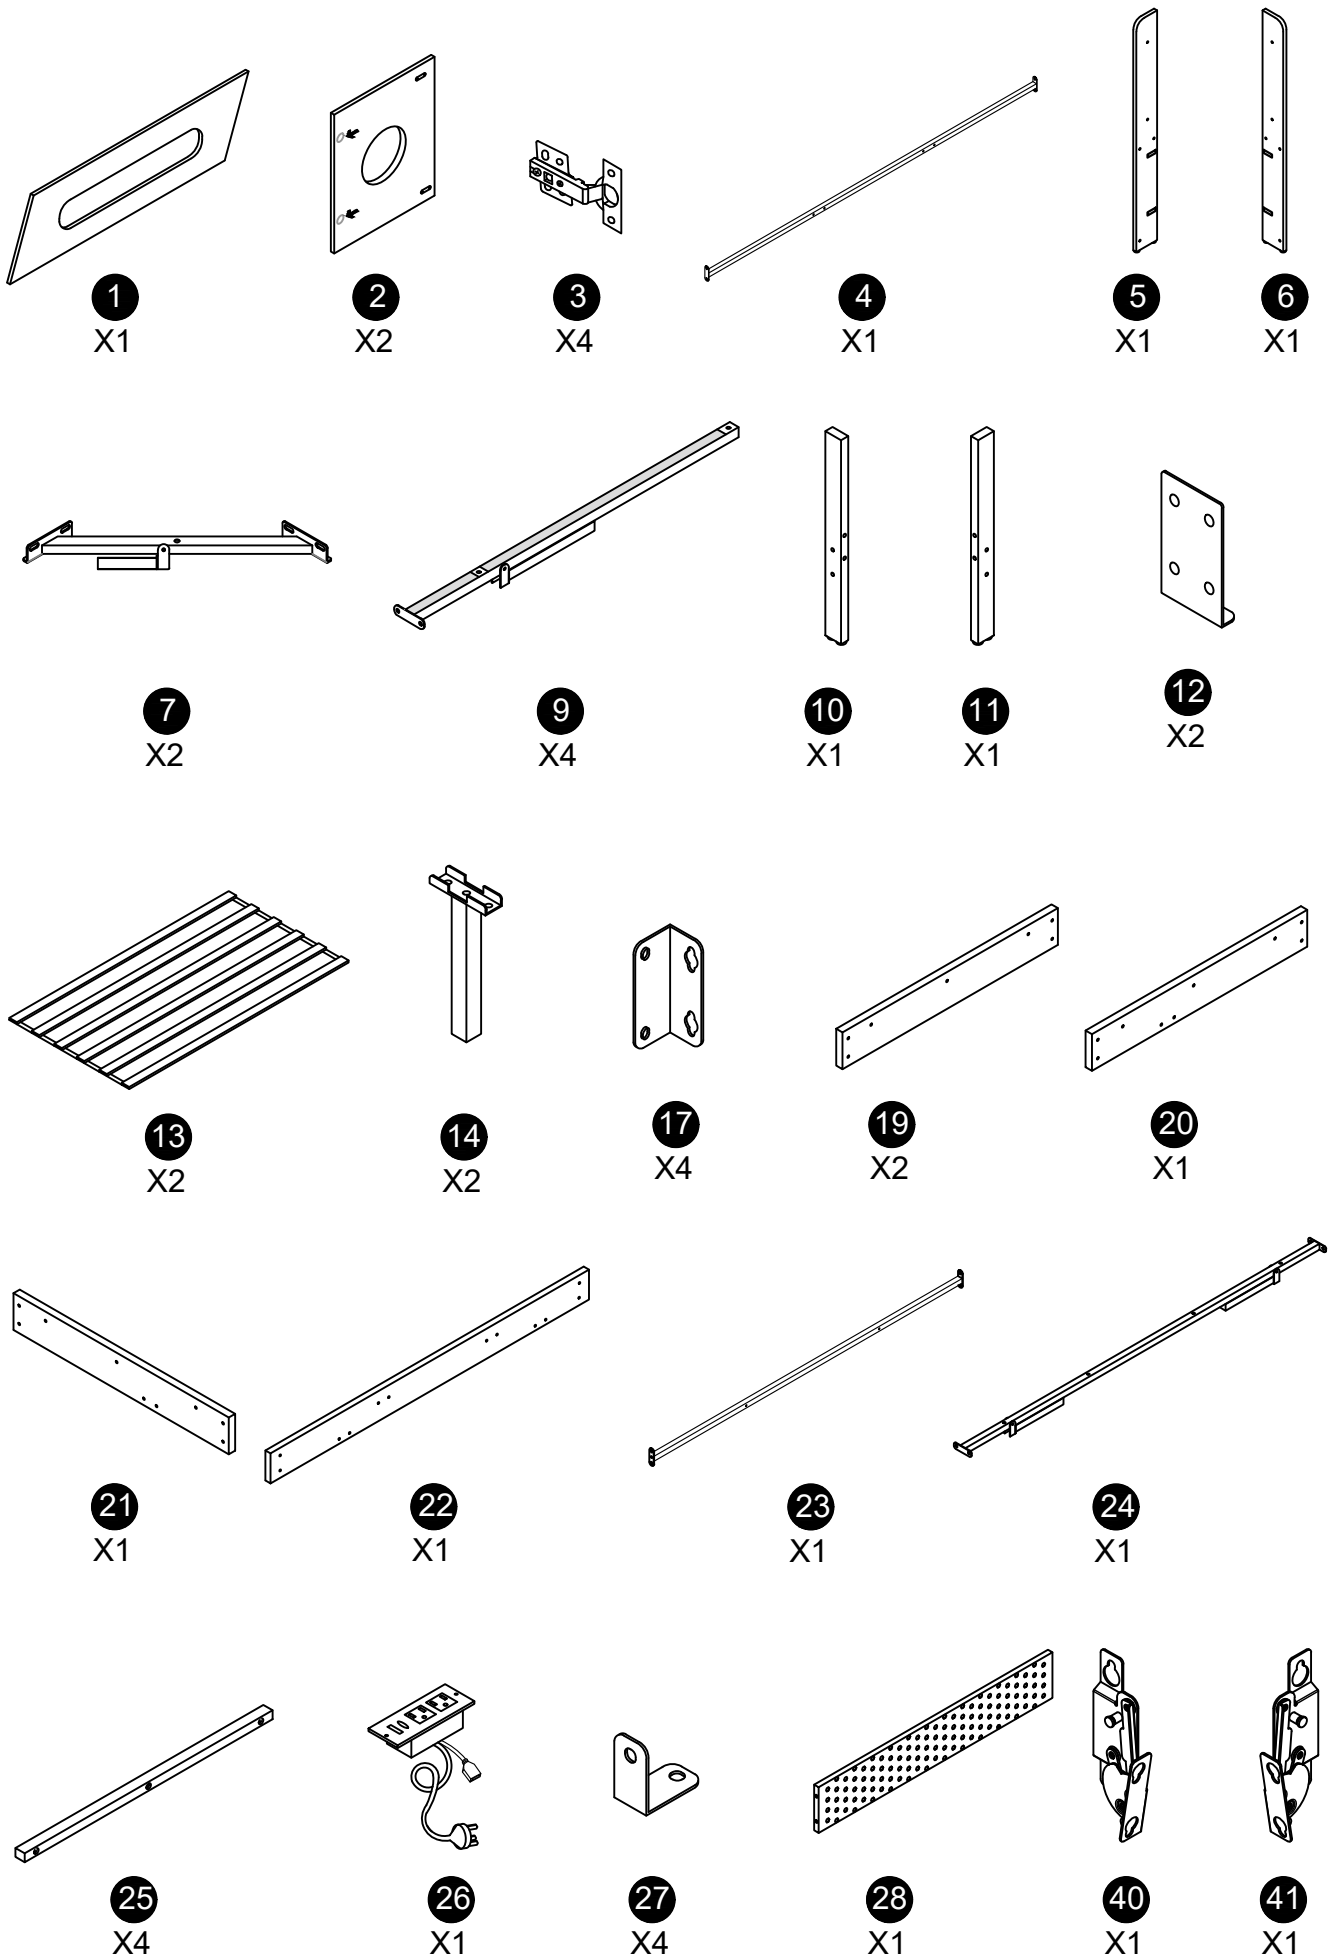


Assembly Instruction

Hardware parts 1




A

M6*10
X16+2




B

M8*20
X56+4




C

M8*30
X4+2




D

M8*35
X26+8




E

M8*Ø22
X4+2



F

M6*33
X2+1




G

M4*12
X18+6




H

M5
X1

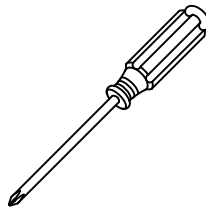

I

X1




M


M3*12
X8+4

Assembly Instruction


Sheet accessories



29
X1




30
X1




31
X1




32
X1

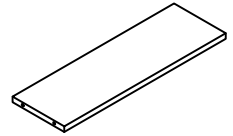


33
X2

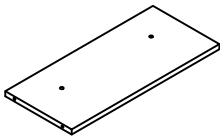


34
X2

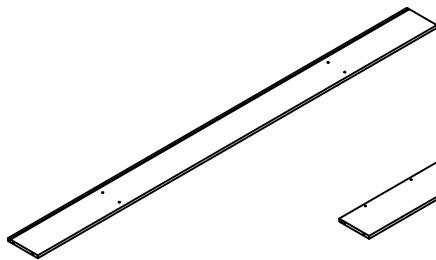


35
X1

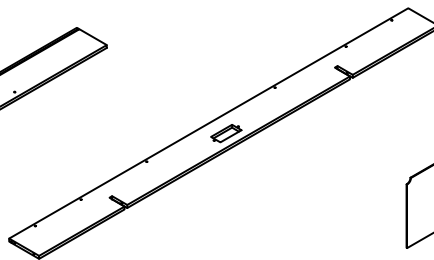

36
X1

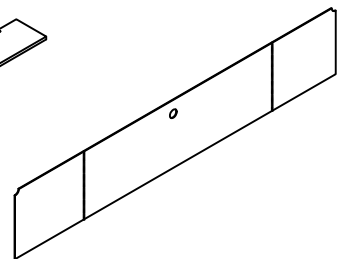


37
X1




38
X2

Hardware parts 2



J
M5*35
X32+2




K
M3*16
X4+2




L
M3
X1

Assembly Instruction


LED light strip electronic accessories list

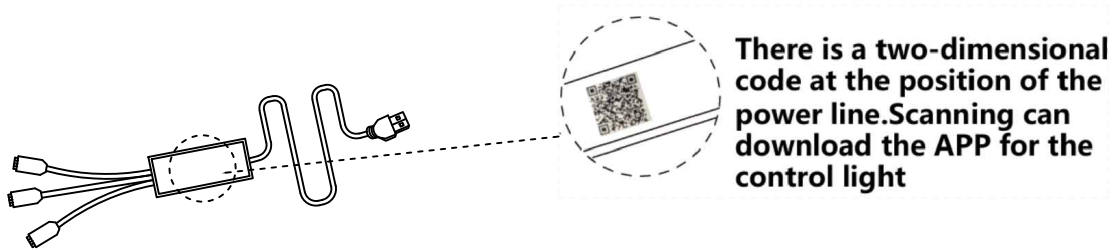


Power cord X1

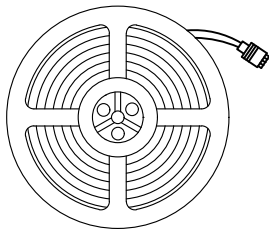


Long light bar X2

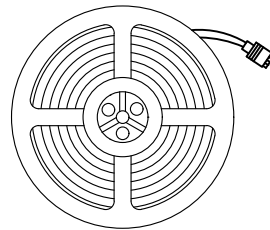

Short light bar X1

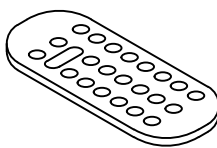


Remote control X1

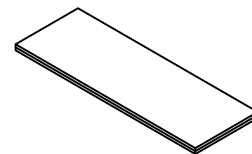


Strap magic tape X4

Assembly Instruction

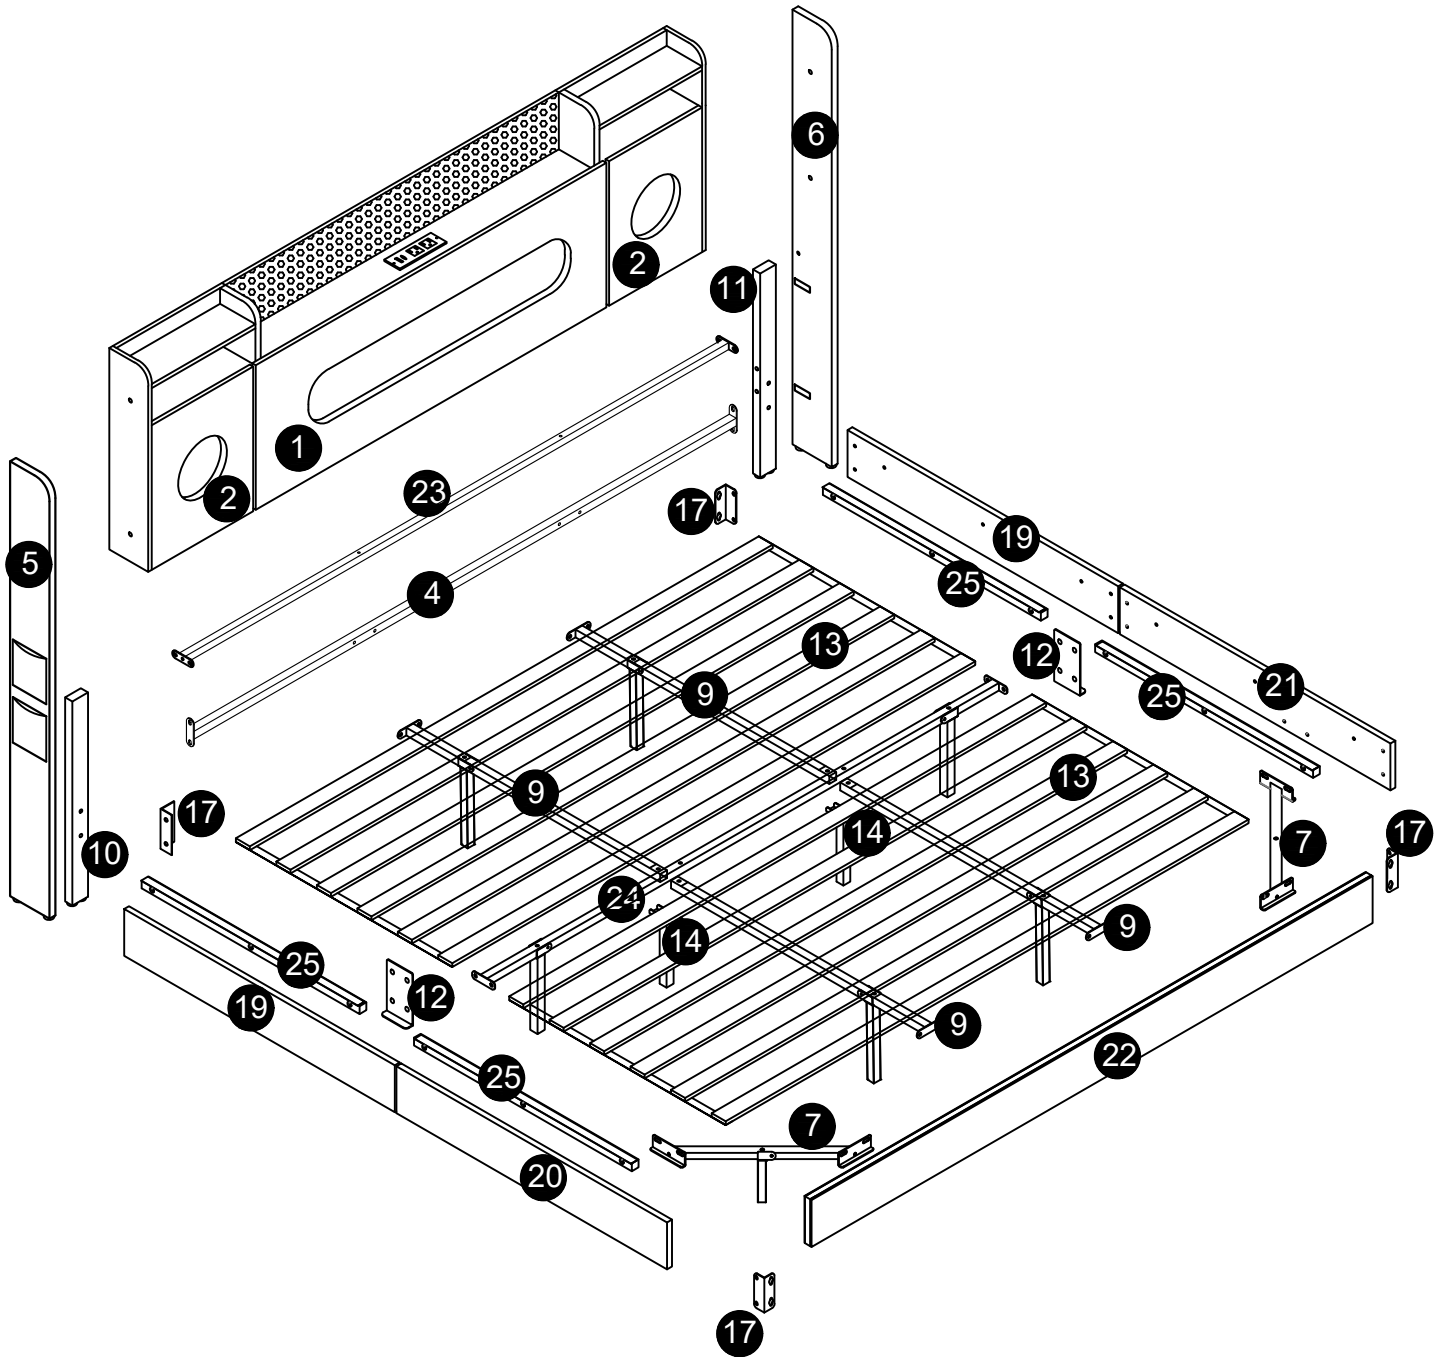

Assembly Instruction

Assembly instruction of Bedside cabinet Exploded general view

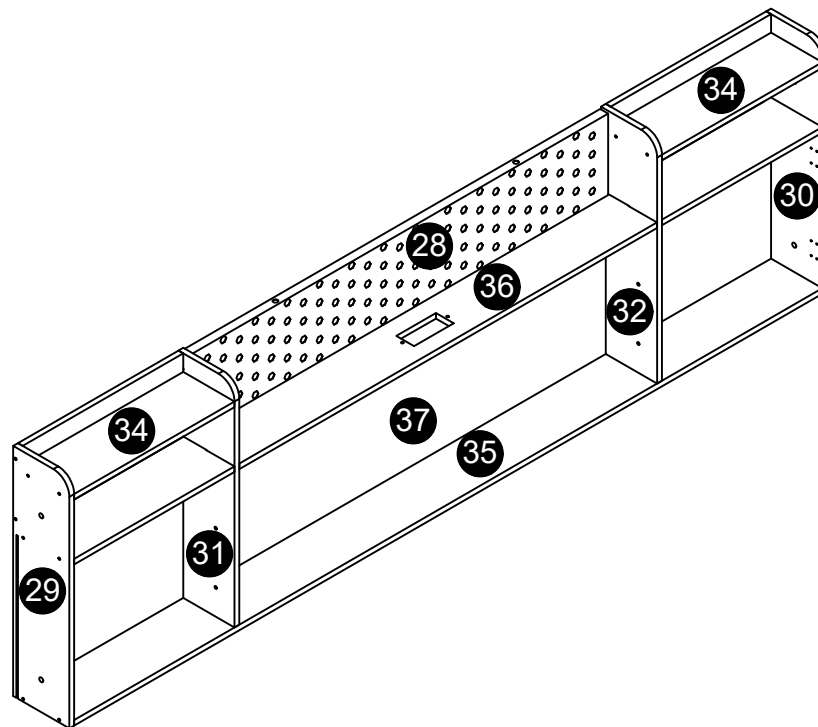


1

K M3*16




X4

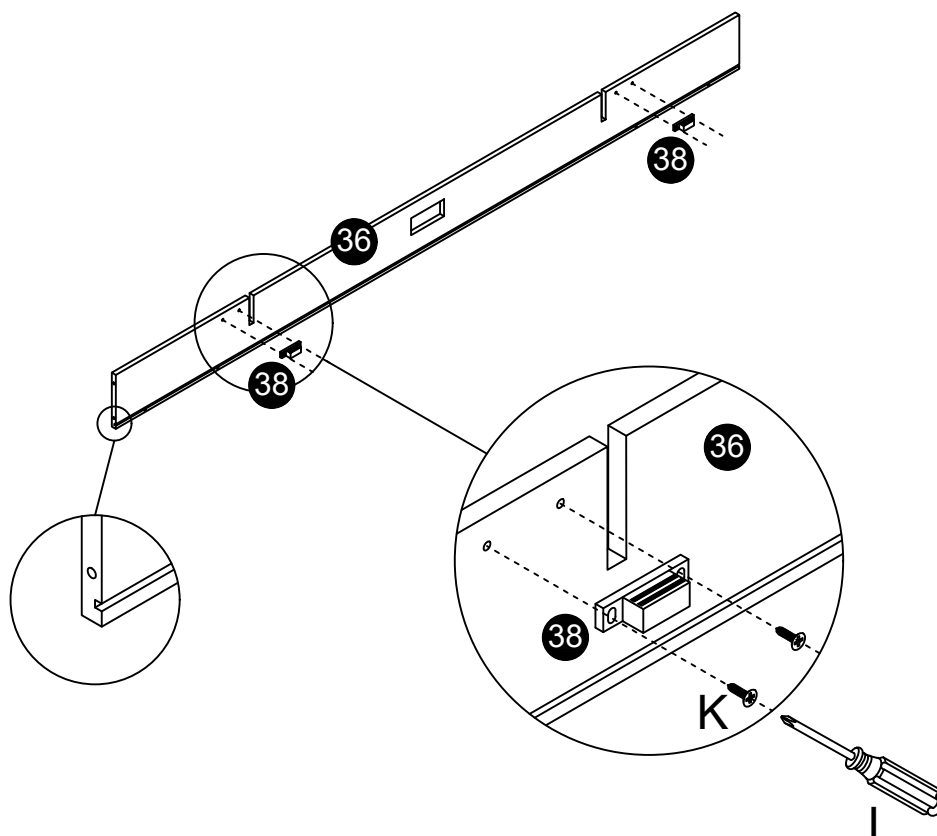


Assembly Instruction

2

J M5*35




X4

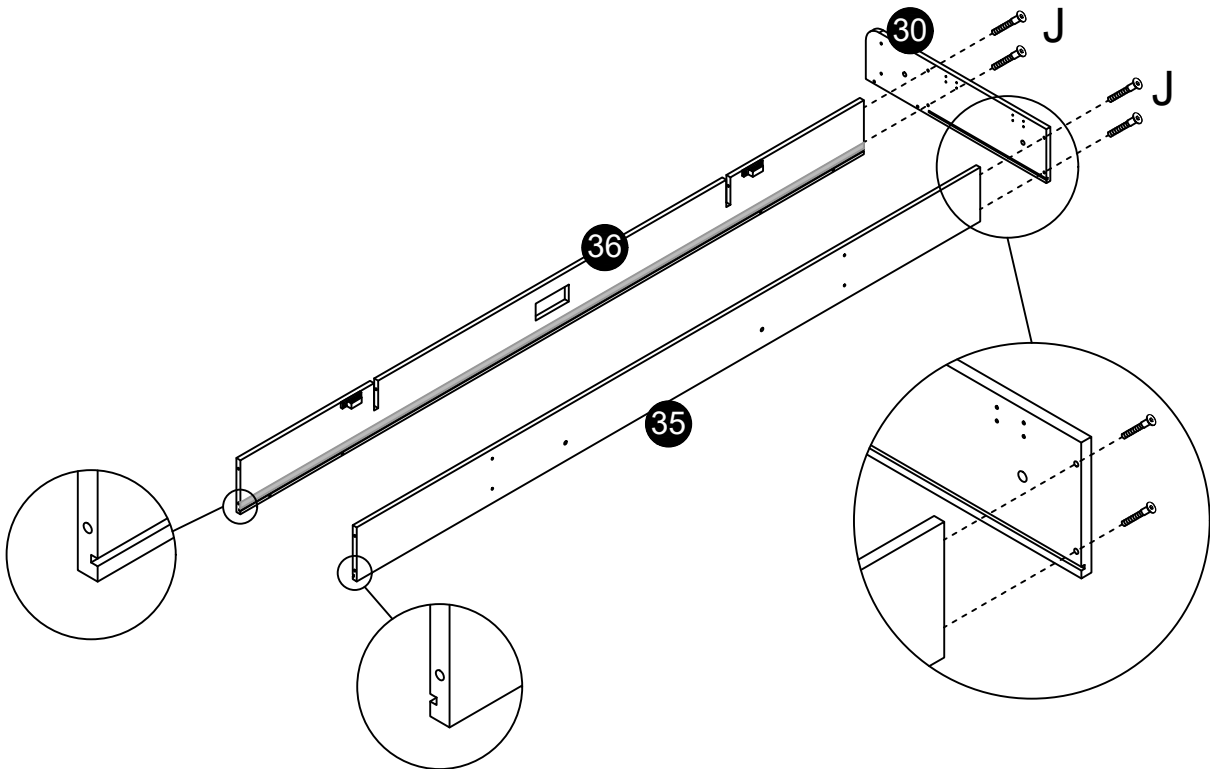

3


The tape is behind 37

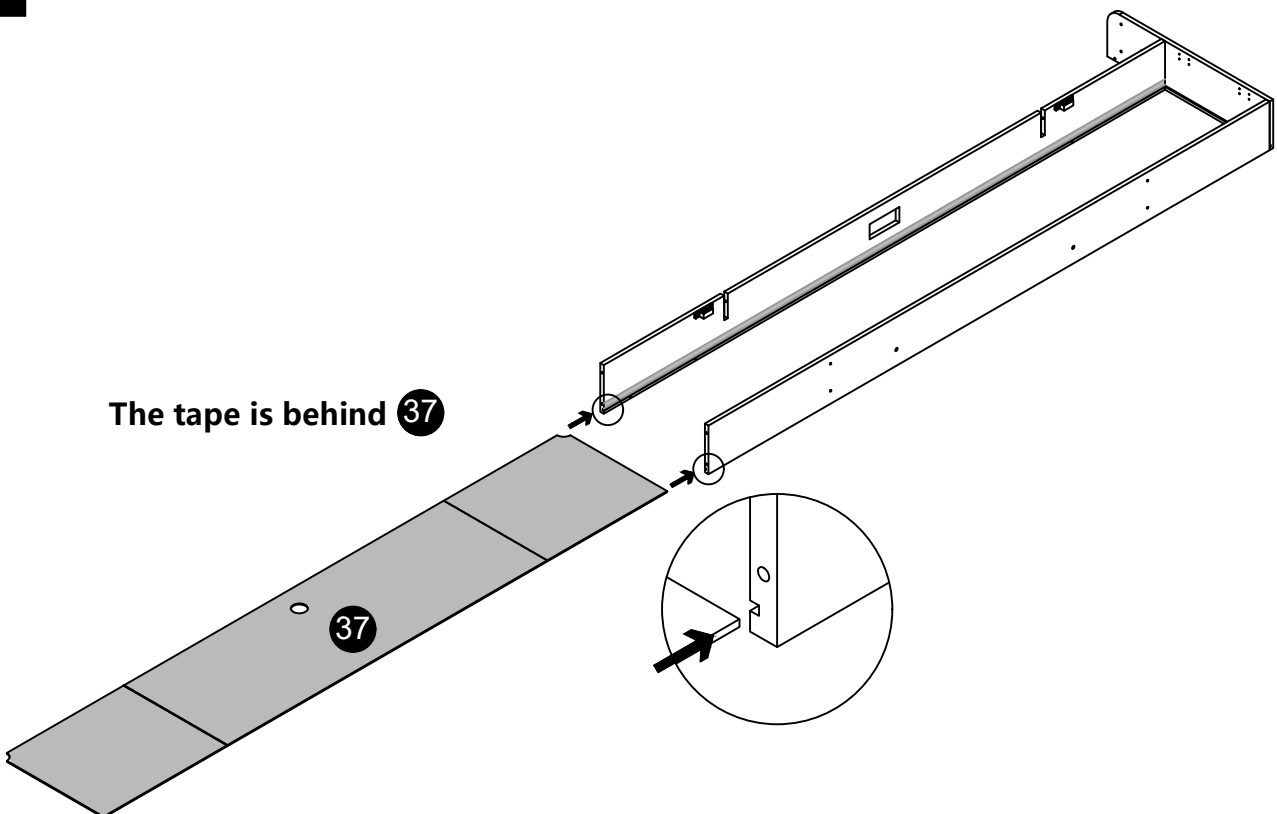


Assembly Instruction

4


J M5*35



X4

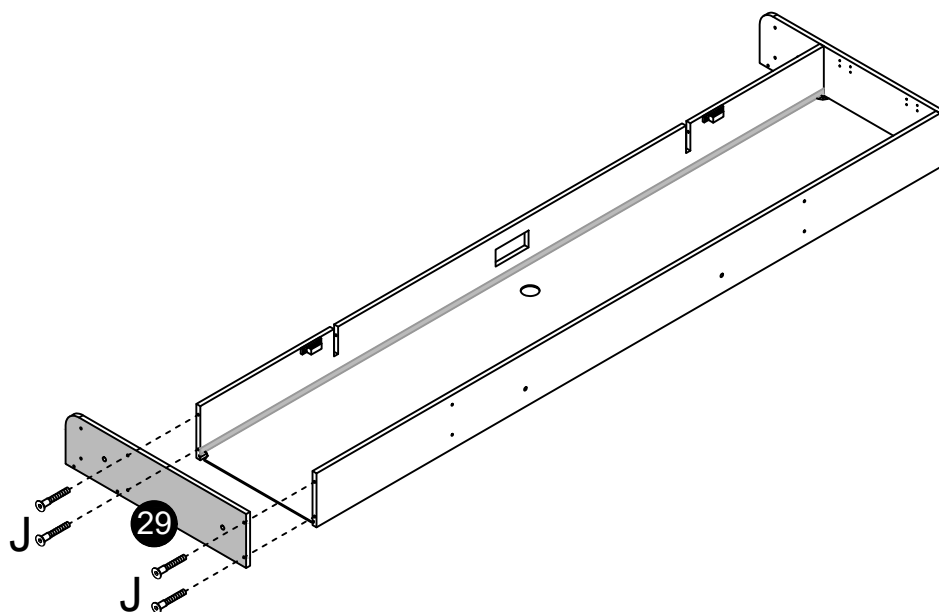


5

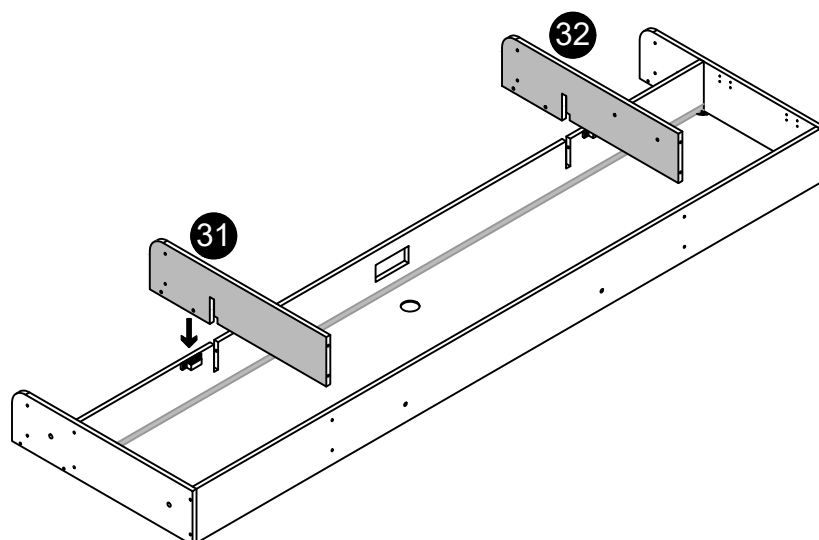



Assembly Instruction

6

J M5*35




X4

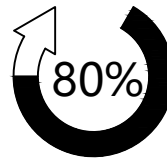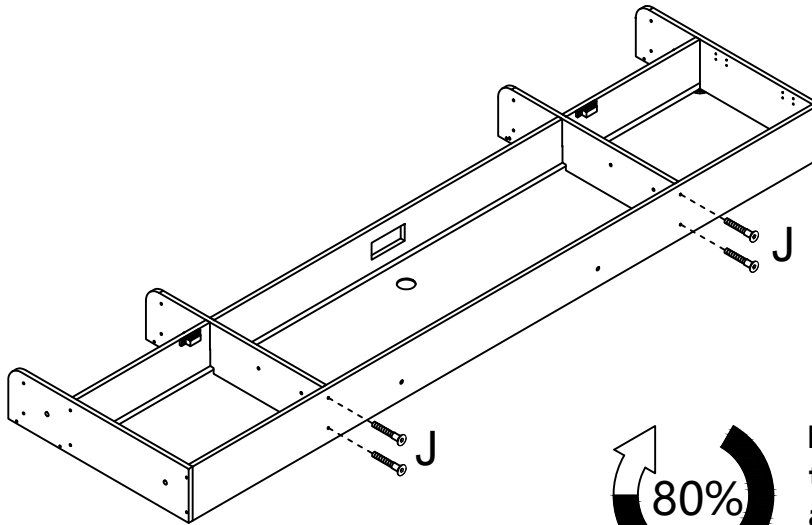



Don't screw it tightly, it will affect the subsequent assembly

7

J M5*35




X8

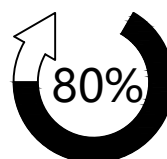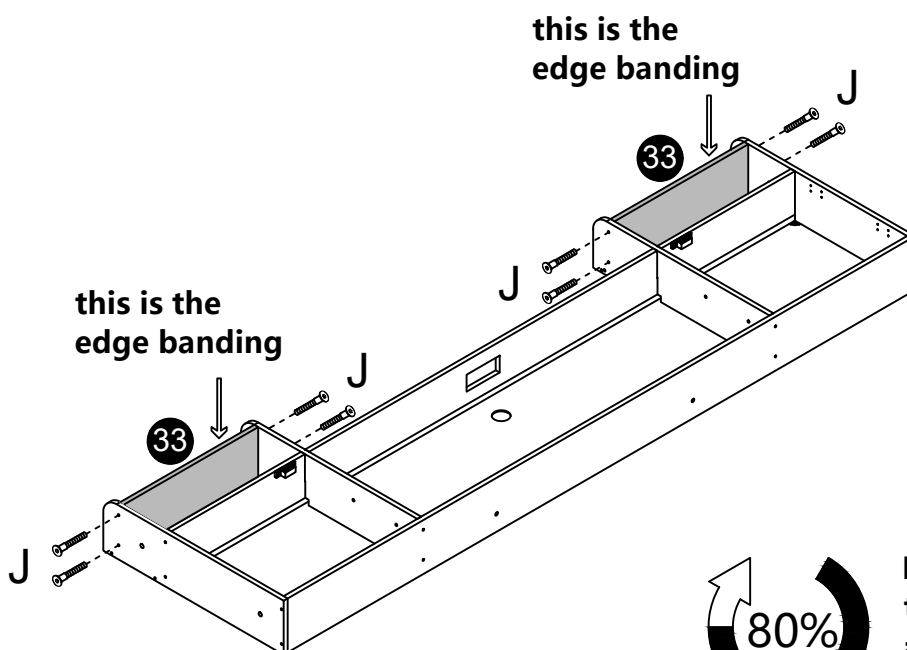

Don't screw it tightly, it will affect the subsequent assembly

Assembly Instruction

8

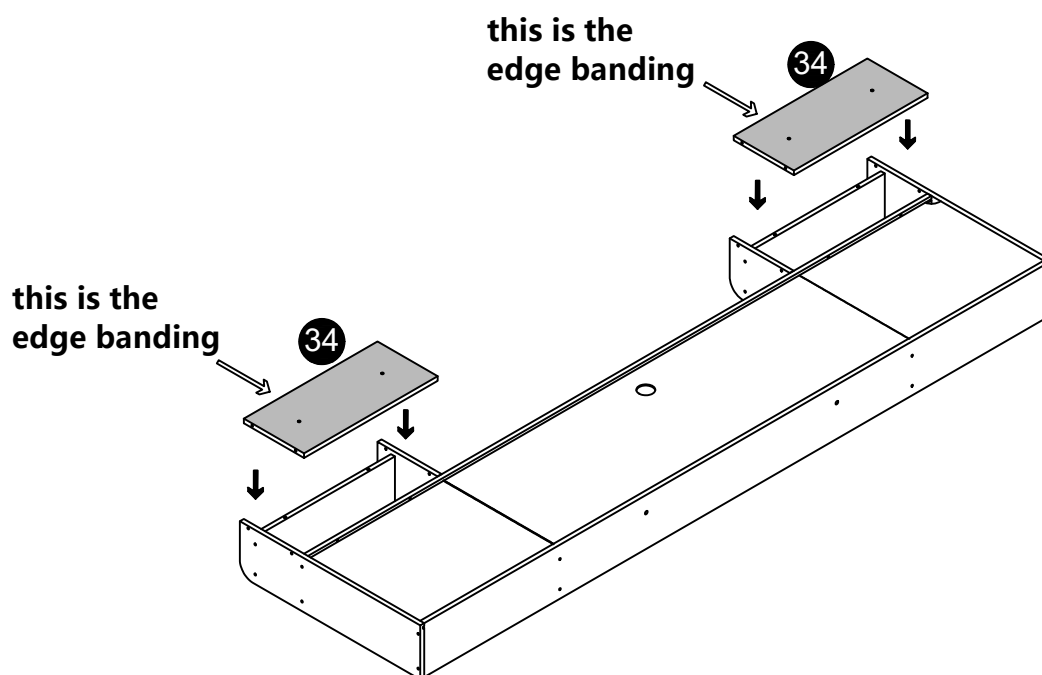


9

J M5*35




X12

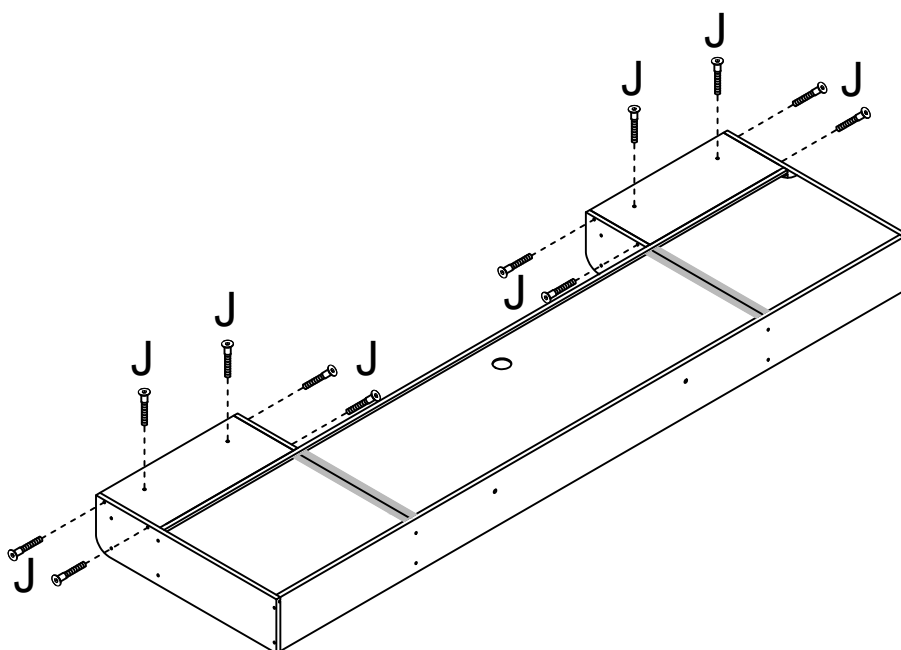


Assembly Instruction

10

In order to better reflect the assembly process of LED light belt, this drawing adopts the exploded view of bed cabinet.

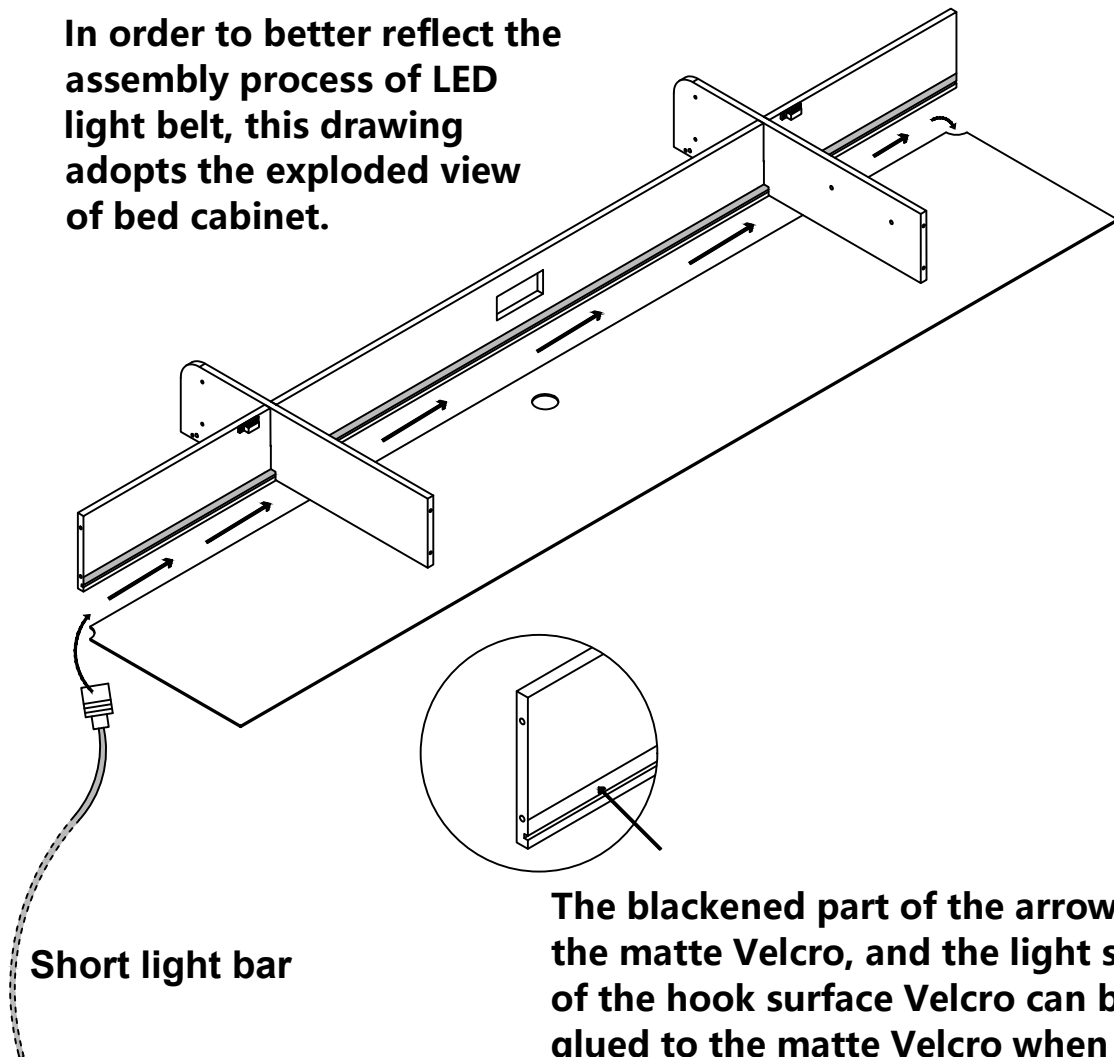

The blackened part of the arrow is the matte Velcro, and the light strip of the hook surface Velcro can be glued to the matte Velcro when passing through the cabinet on the right side according to the diagram

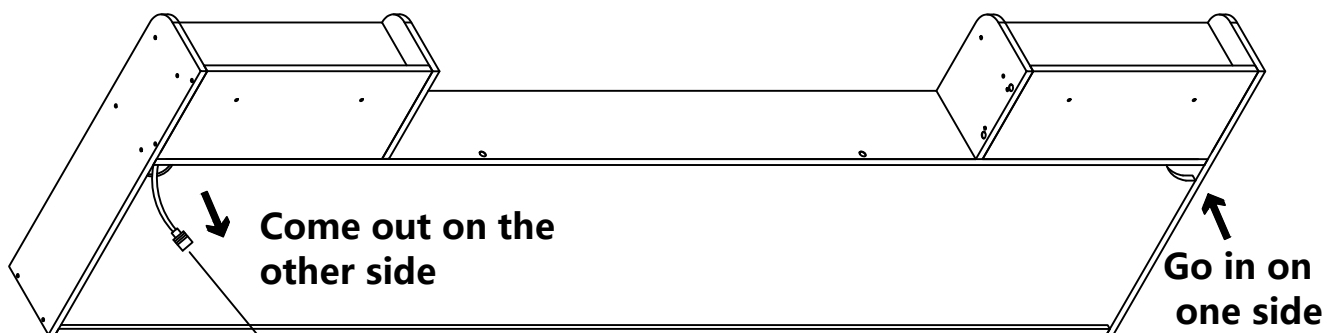

Before the light strip comes out from here, do not stick it to the velcro on the surface


Assembly Instruction

11

A M6*10



X6


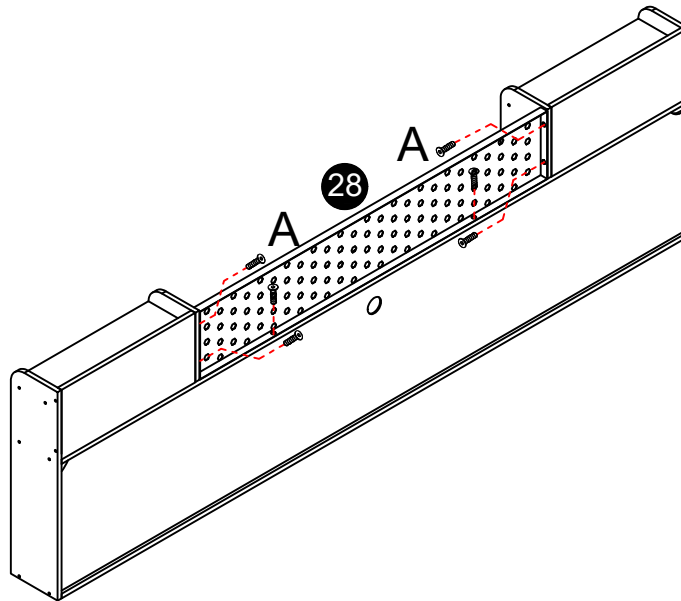


12

B M8*20




X8

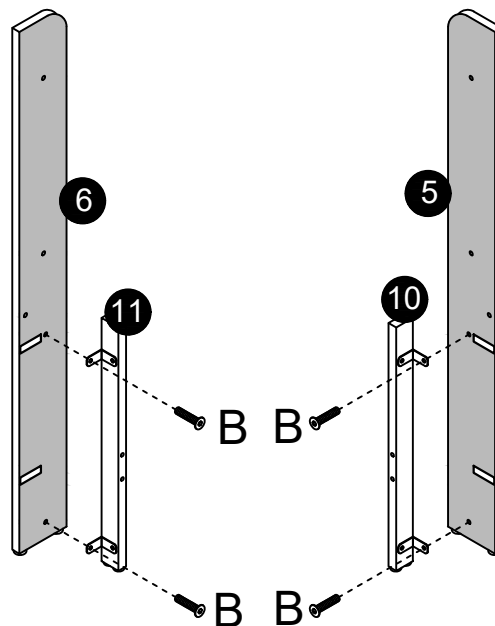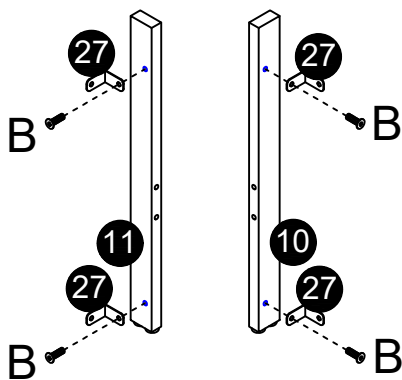


Assembly Instruction

13

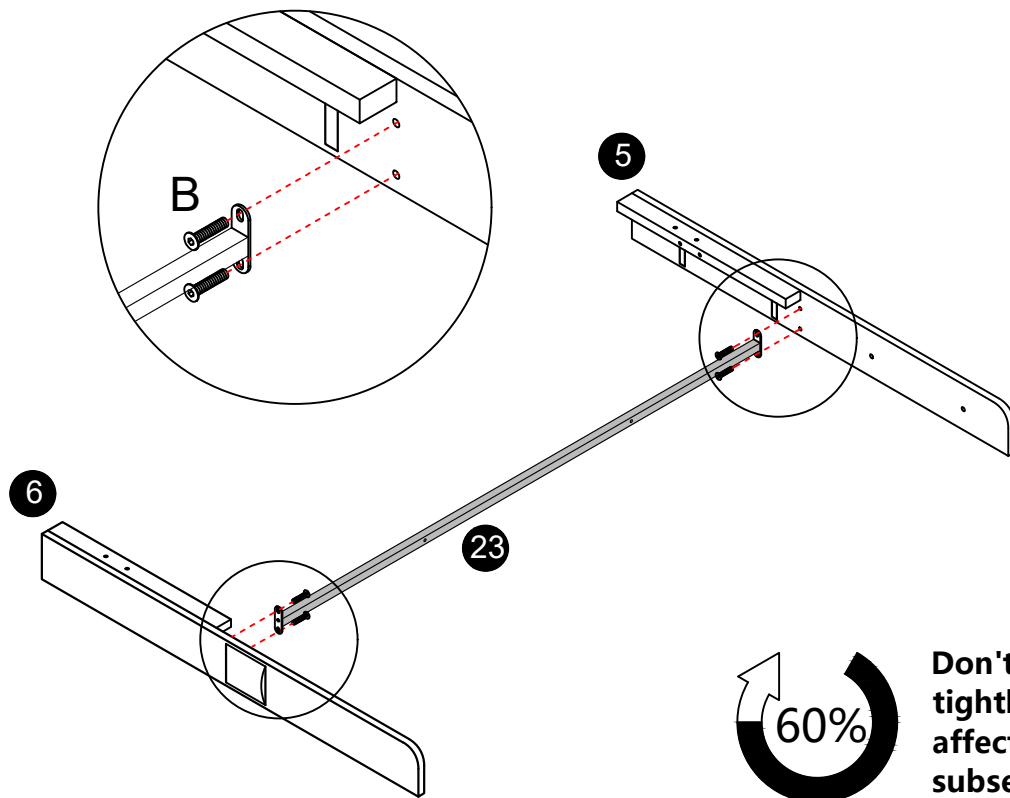


B M8*20

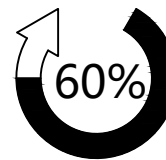

Don't screw it
tightly, it will
affect the
subsequent
assembly

14

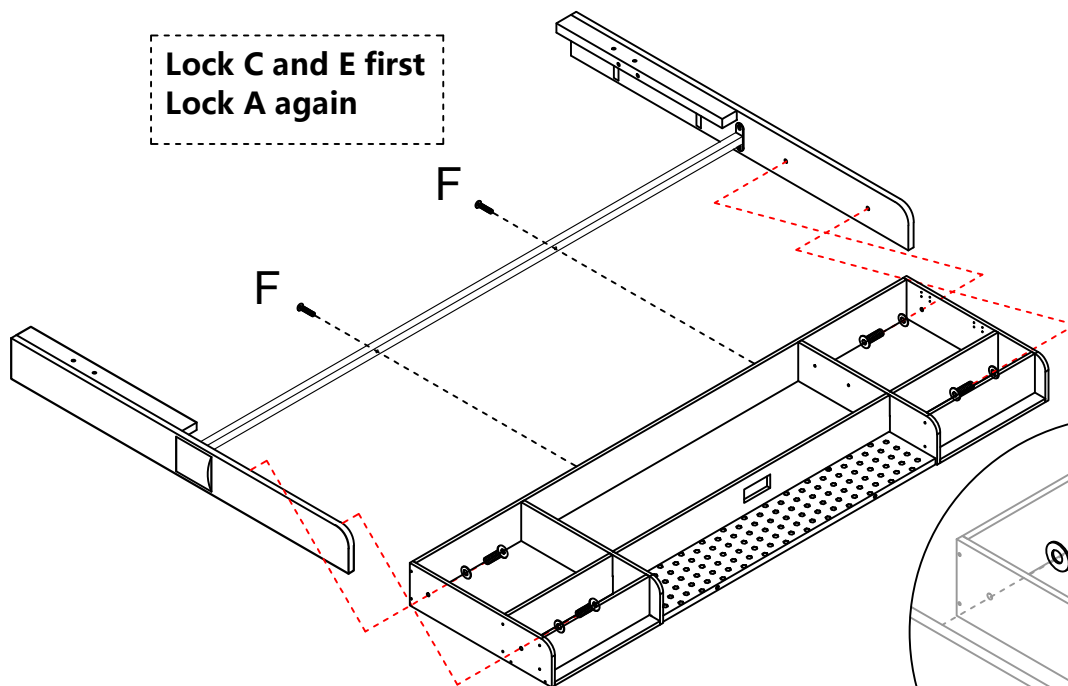

Lock C and E first
Lock A again

F M6*33



C M8*30



E M8*Ø22




Assembly Instruction

15

B M8*20







X4

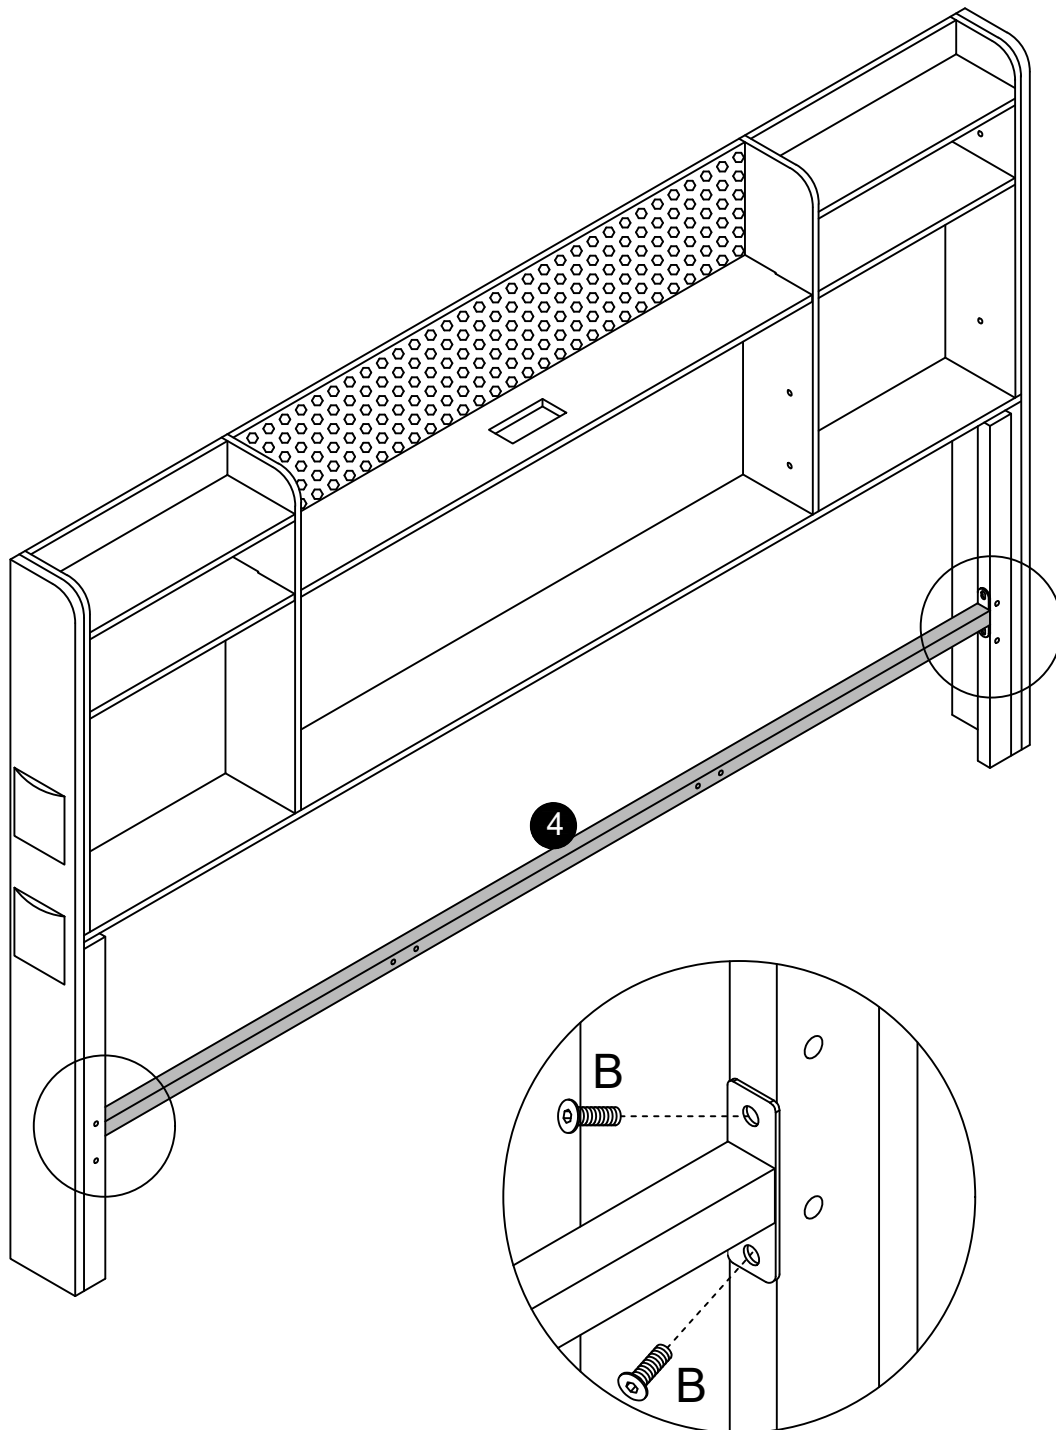

Assembly Instruction

16


D M8*35
X12

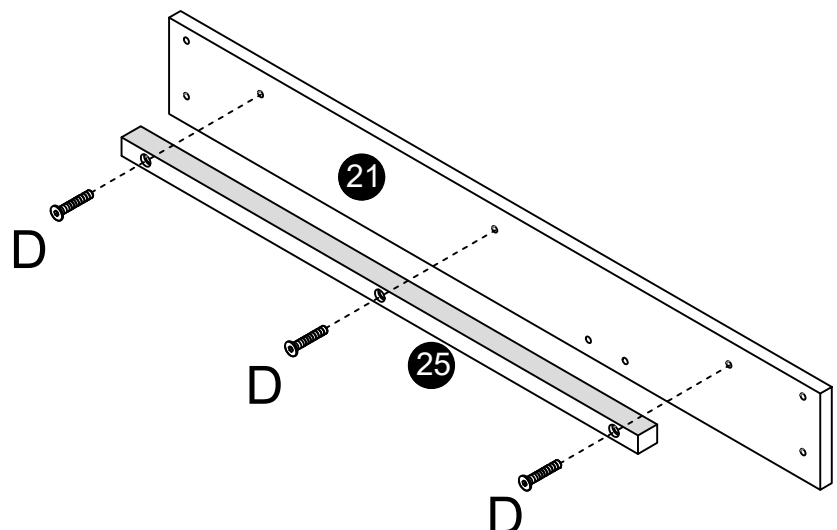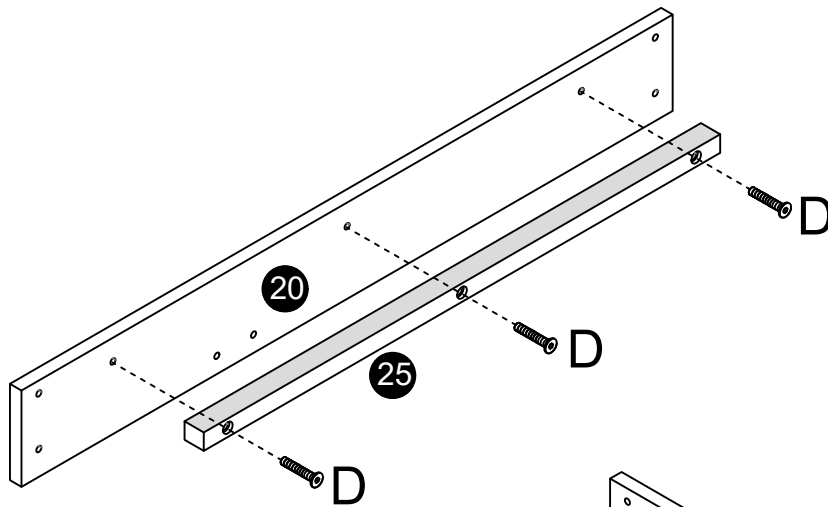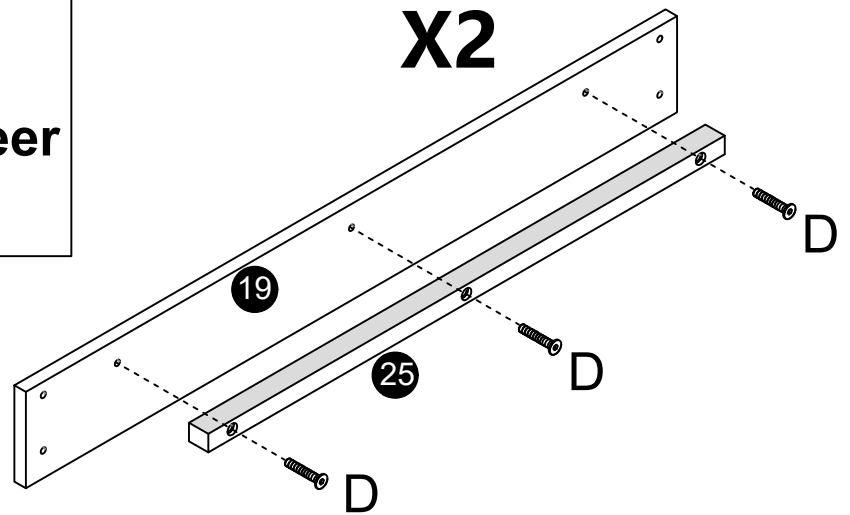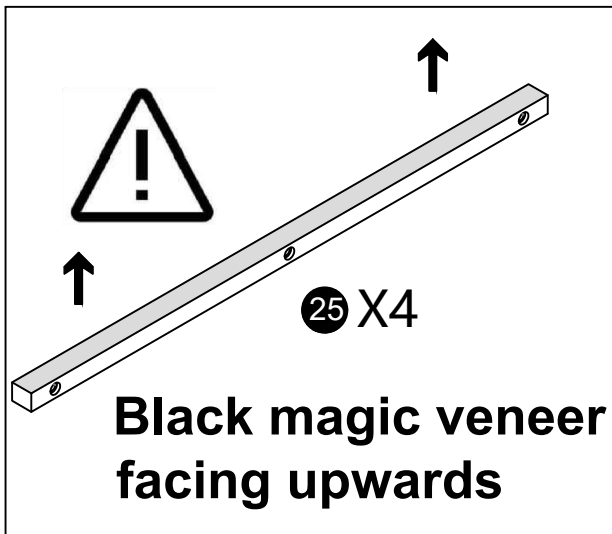

Assembly Instruction


17

When assembling Attachment 17, the orientation of the opening is different

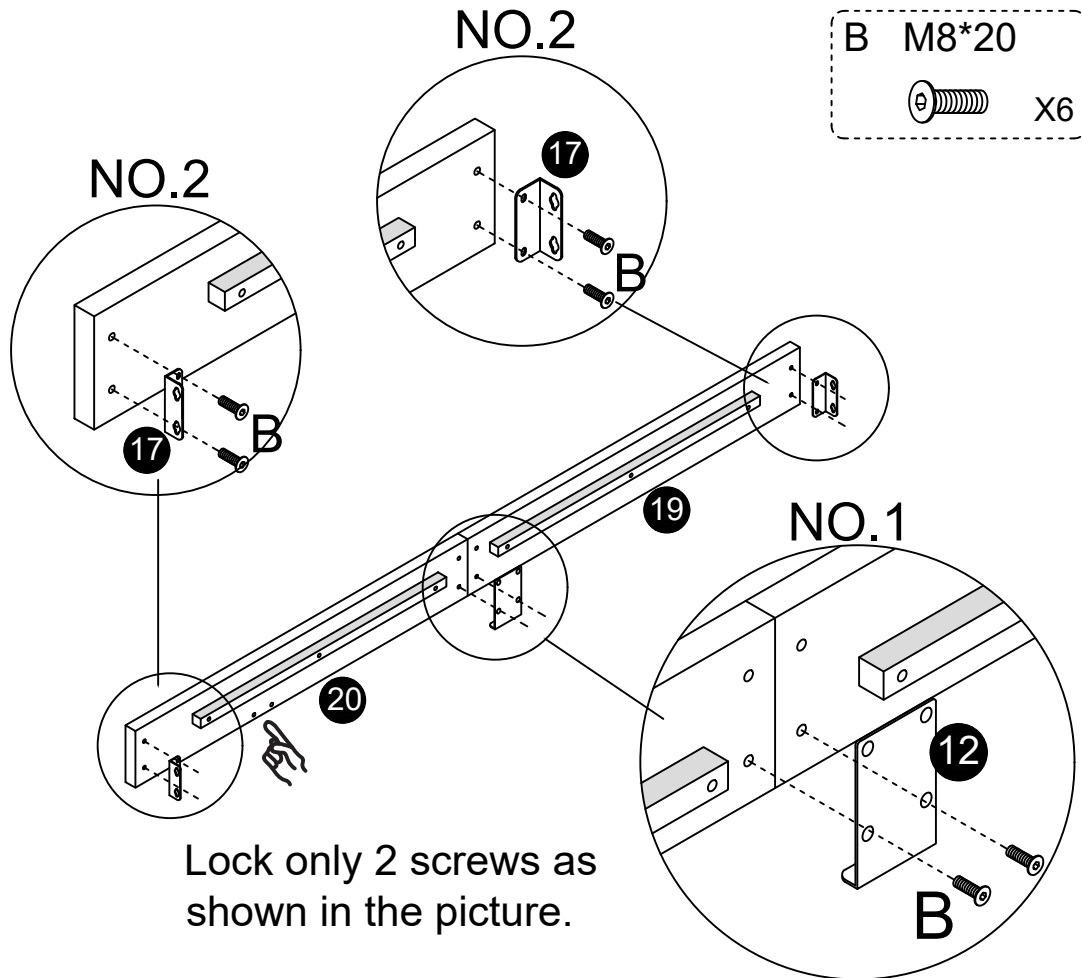

18

When assembling Attachment 18, the orientation of the opening is different

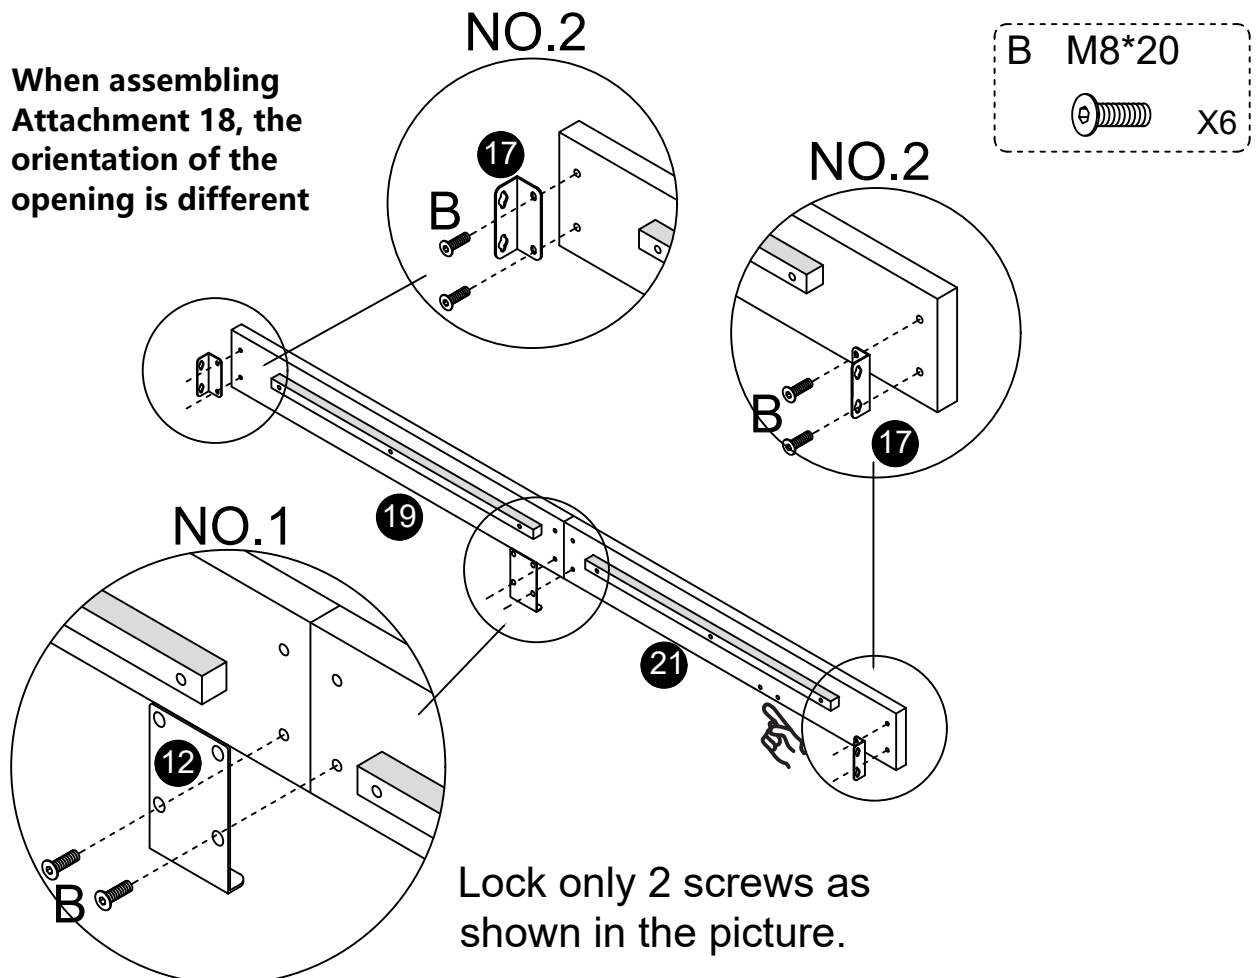


Assembly Instruction

19

Hang it up

B M8*20

X4

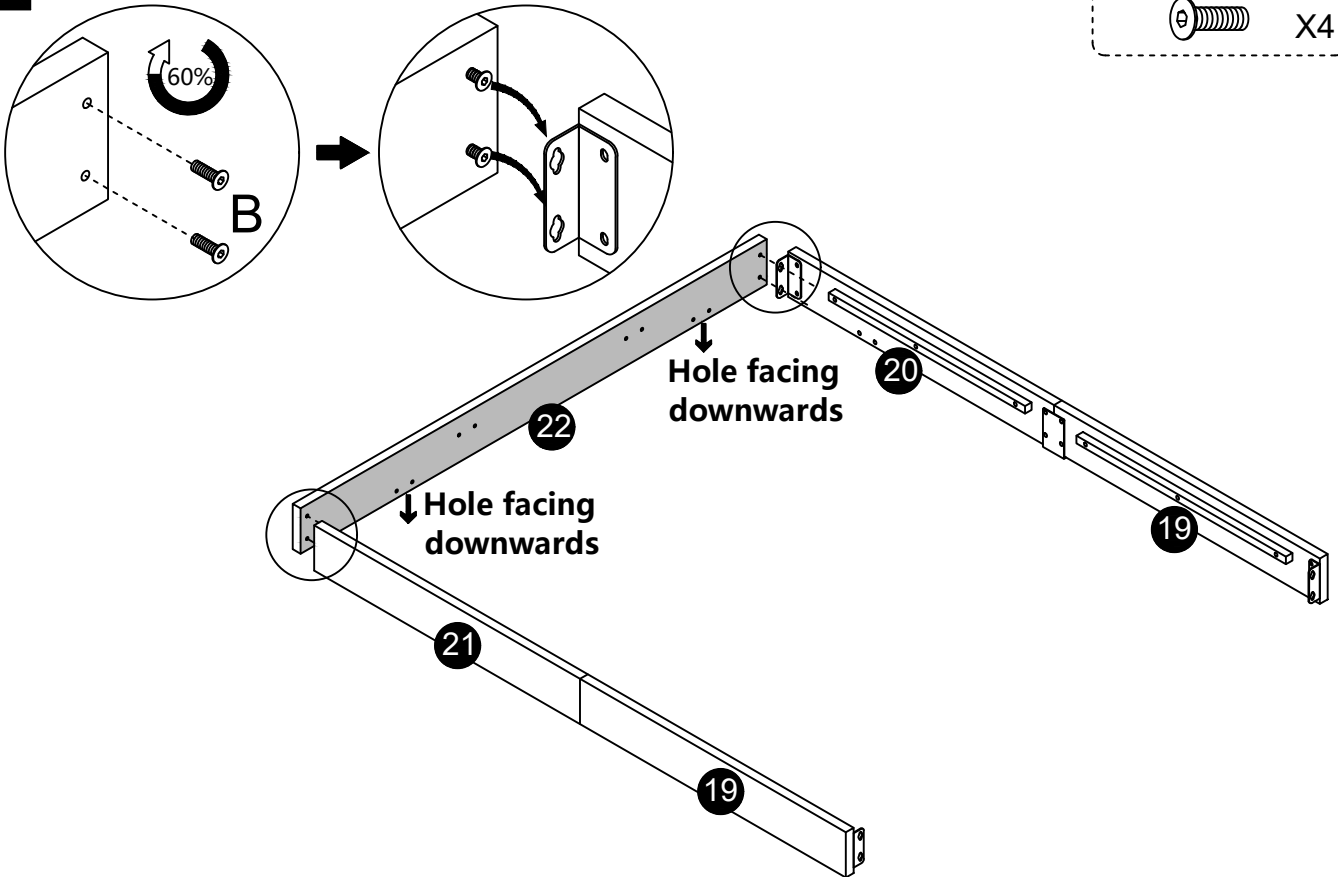


20

B M8*20

X8

D M8*35

X2

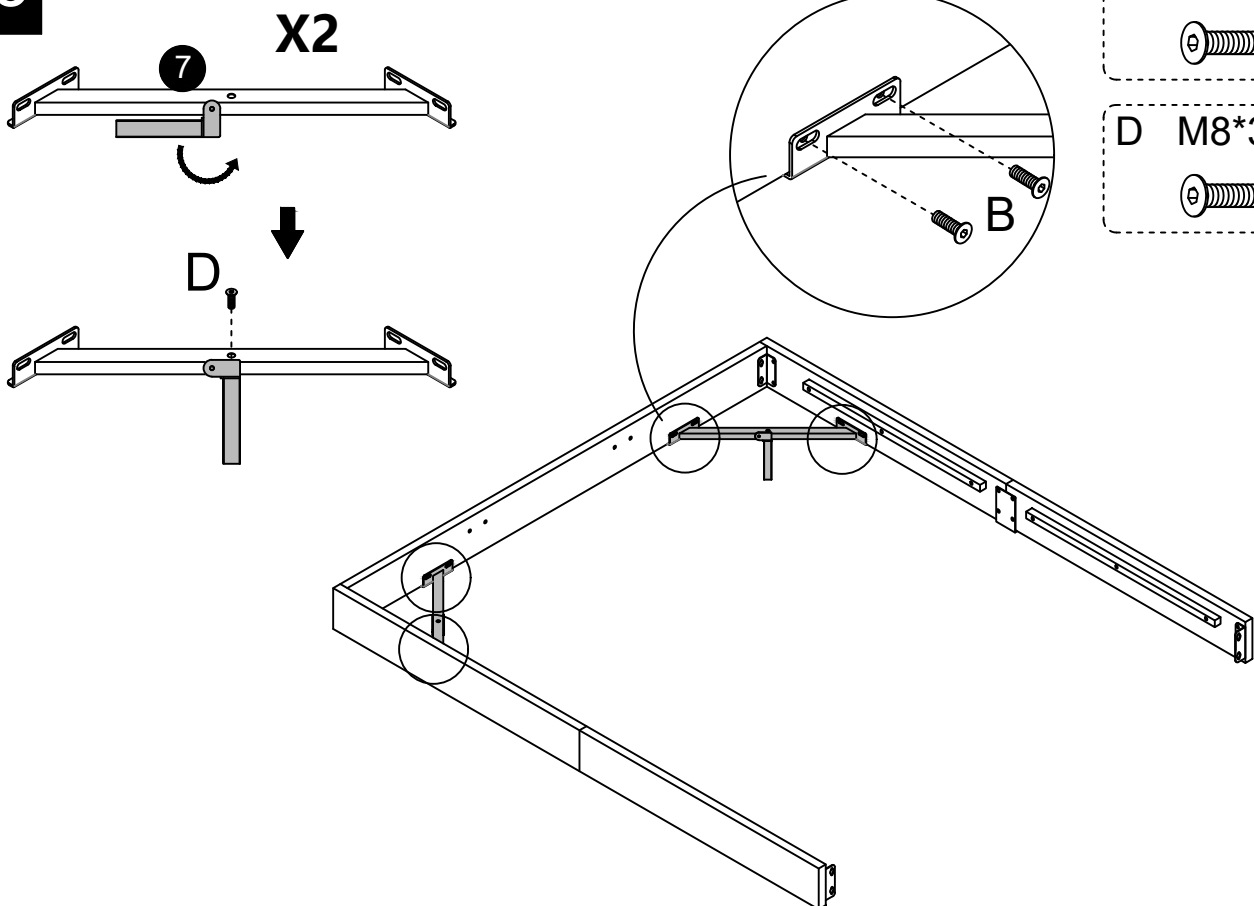


Assembly Instruction

21

D M8*35



X2


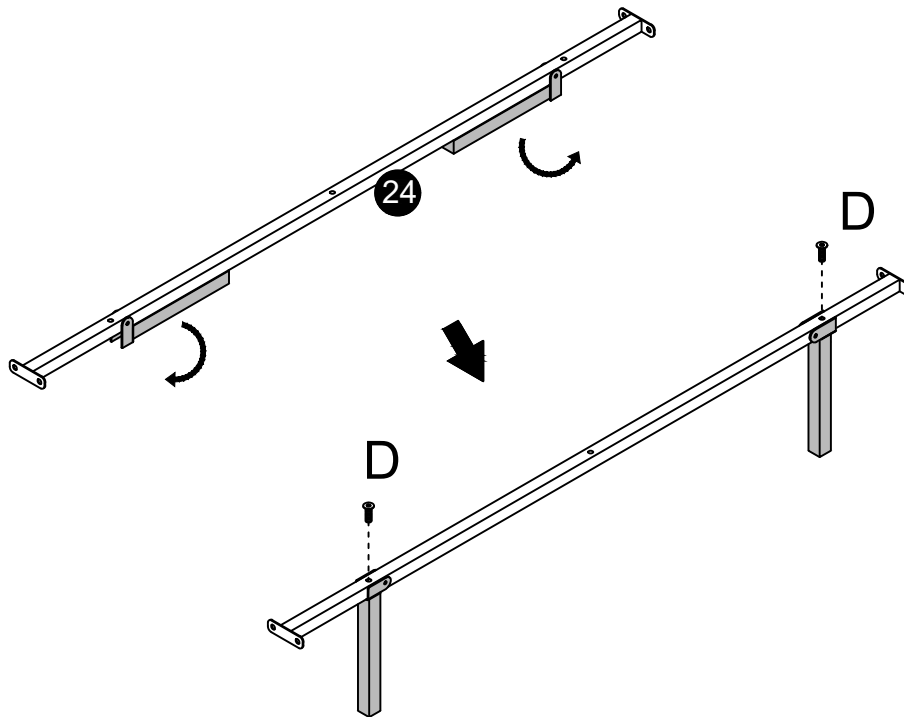


22

B M8*20



X4

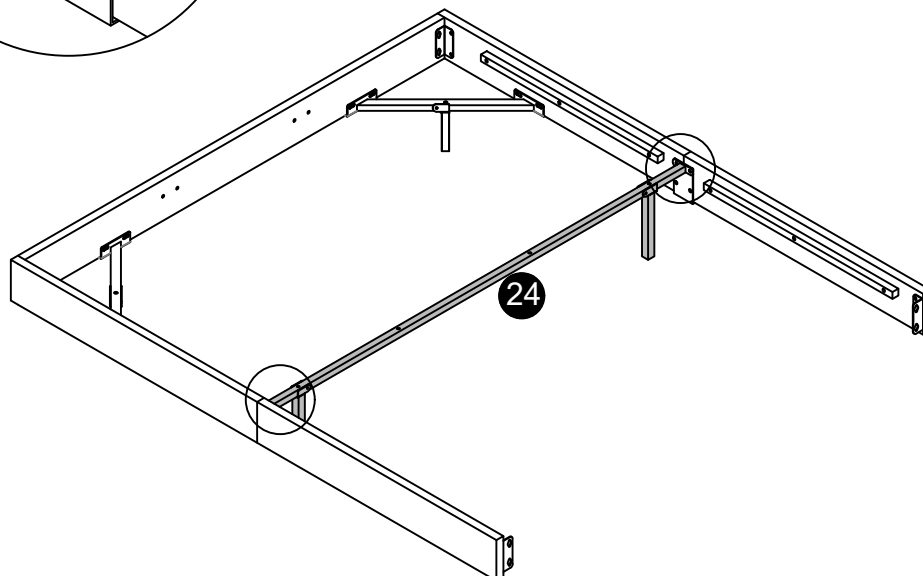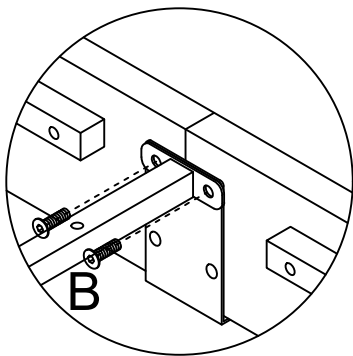


Assembly Instruction

23




D M8*35



X8

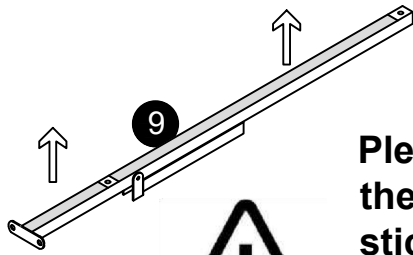

Please be sure to pay attention to the fact that there are mute stickers facing upwards during assembly, and the material feels soft to the touch

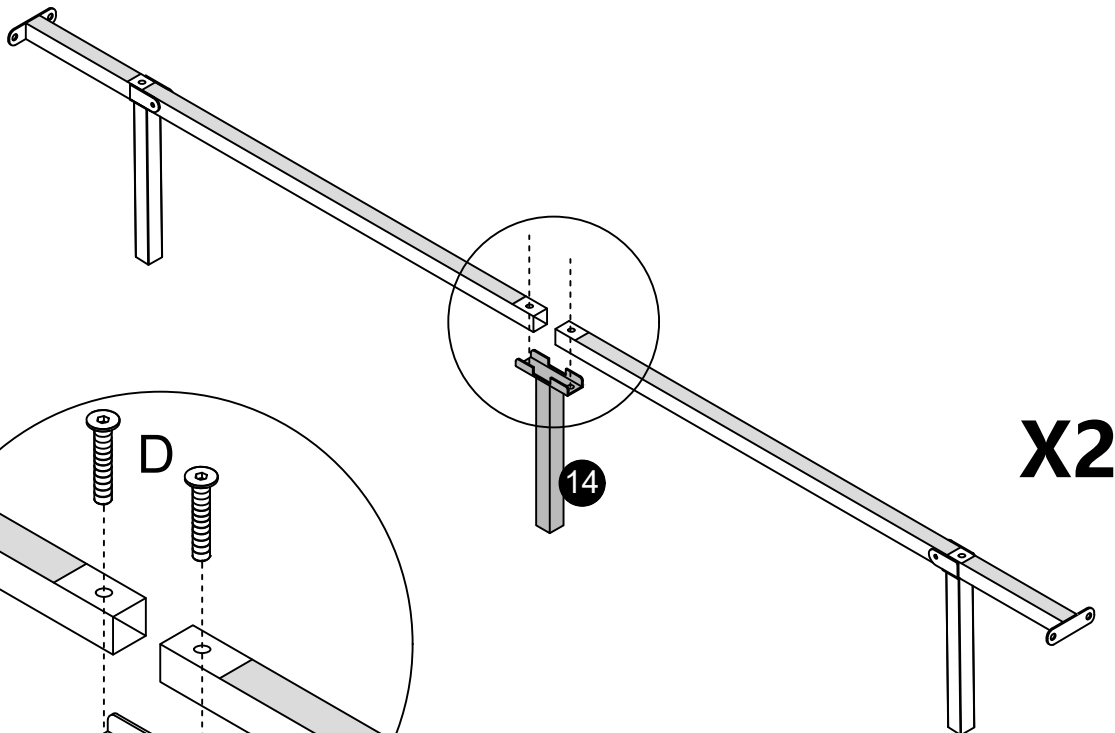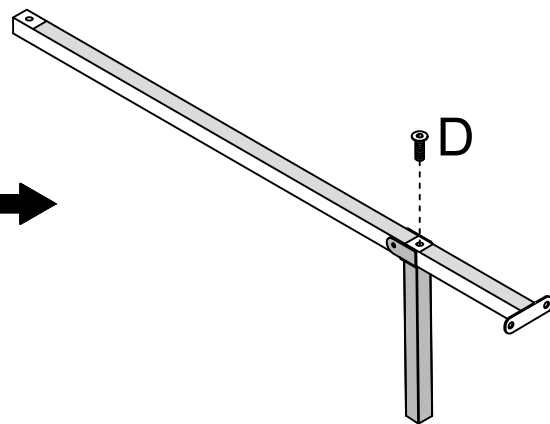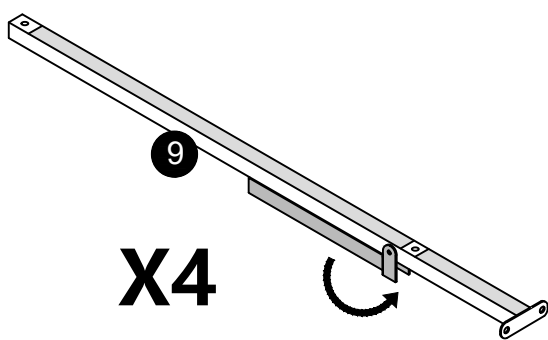


Assembly Instruction

24

D M8*35



 X2

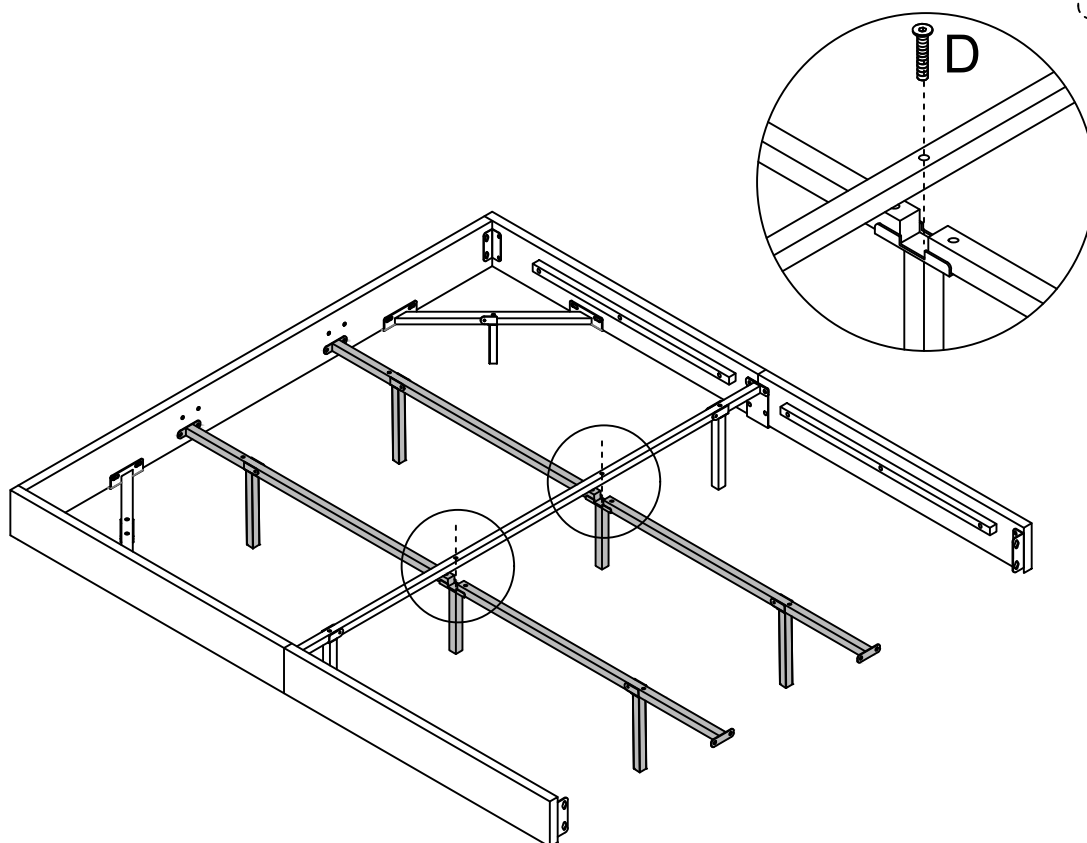

25

B M8*20

 X4

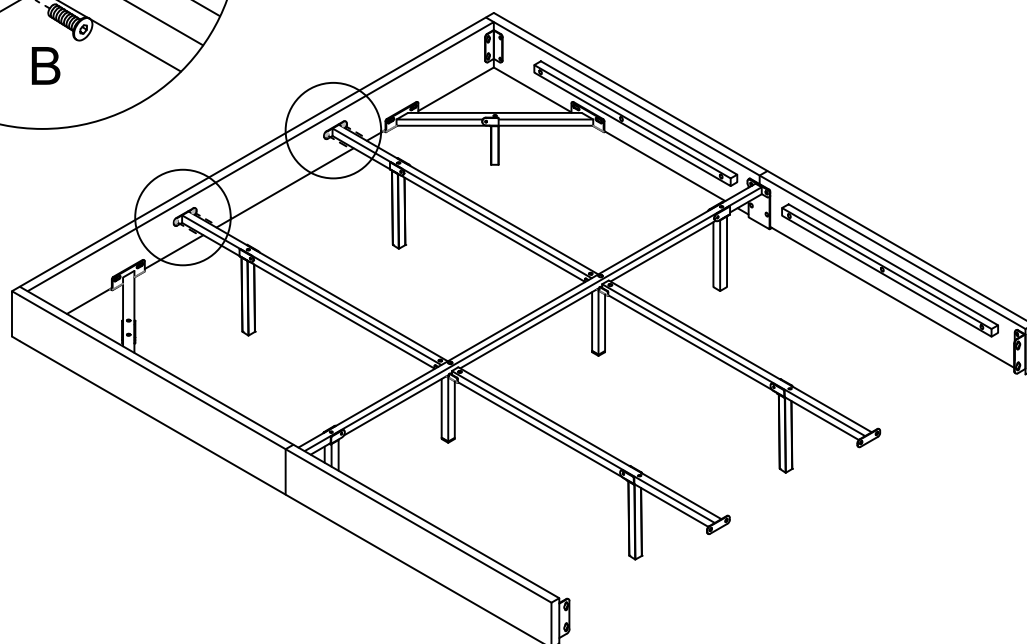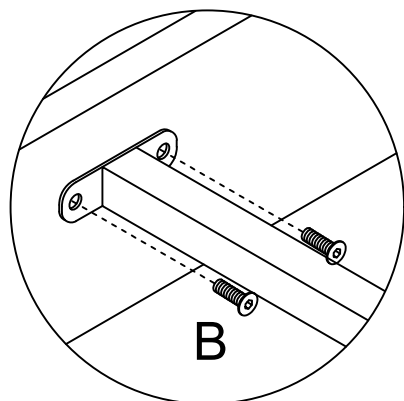

Assembly Instruction

26




B M8*20




X8

First

Hang it up

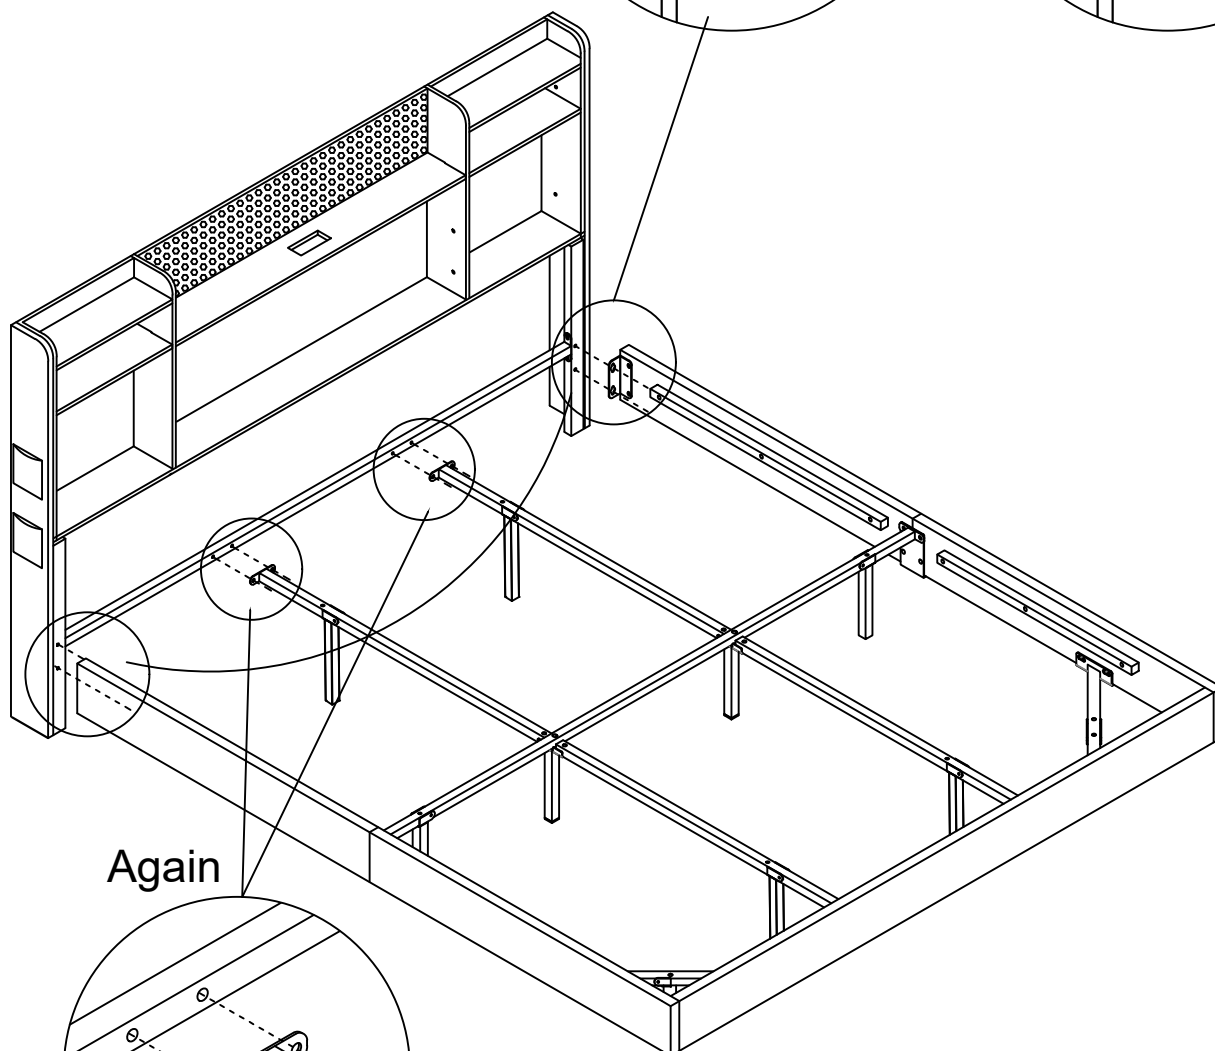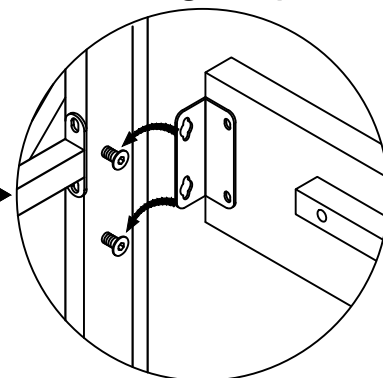
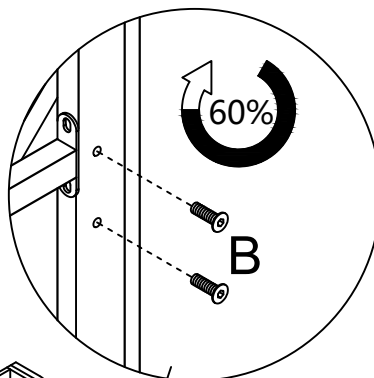


Again

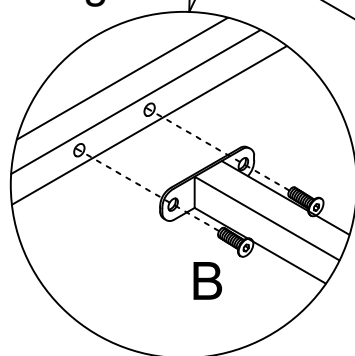

Assembly Instruction


27

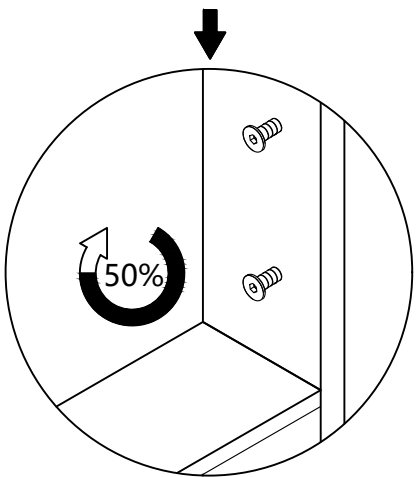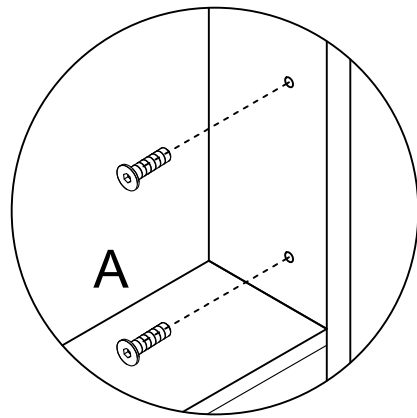



A M6*10



X4

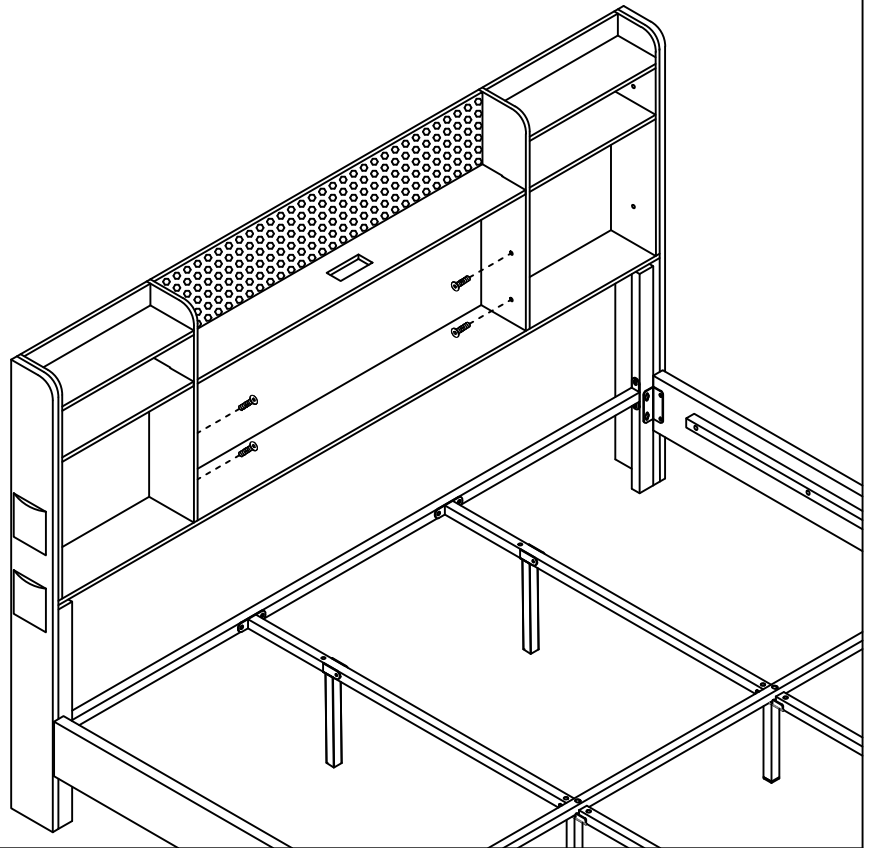


28

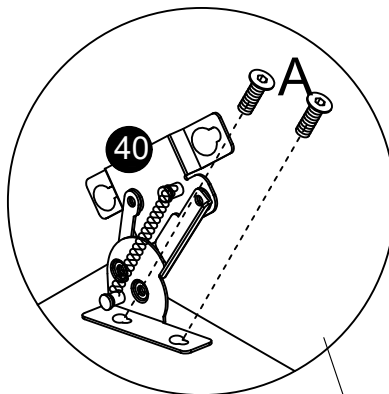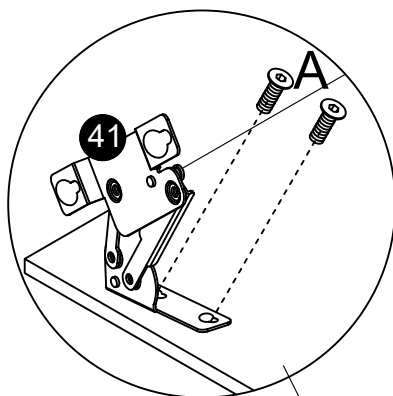


A M6*10



X4

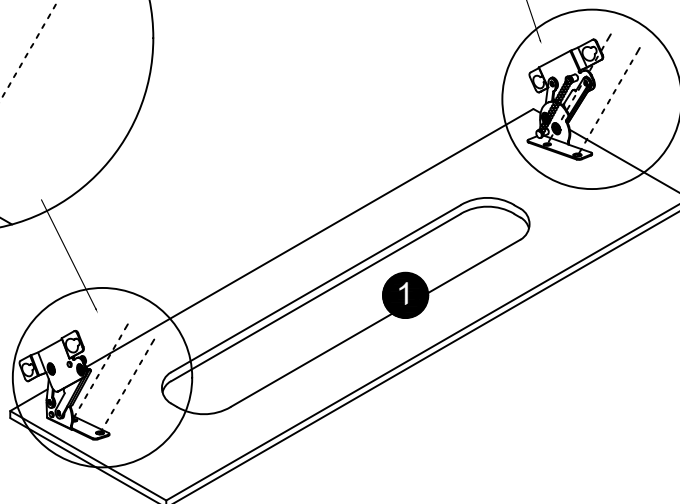

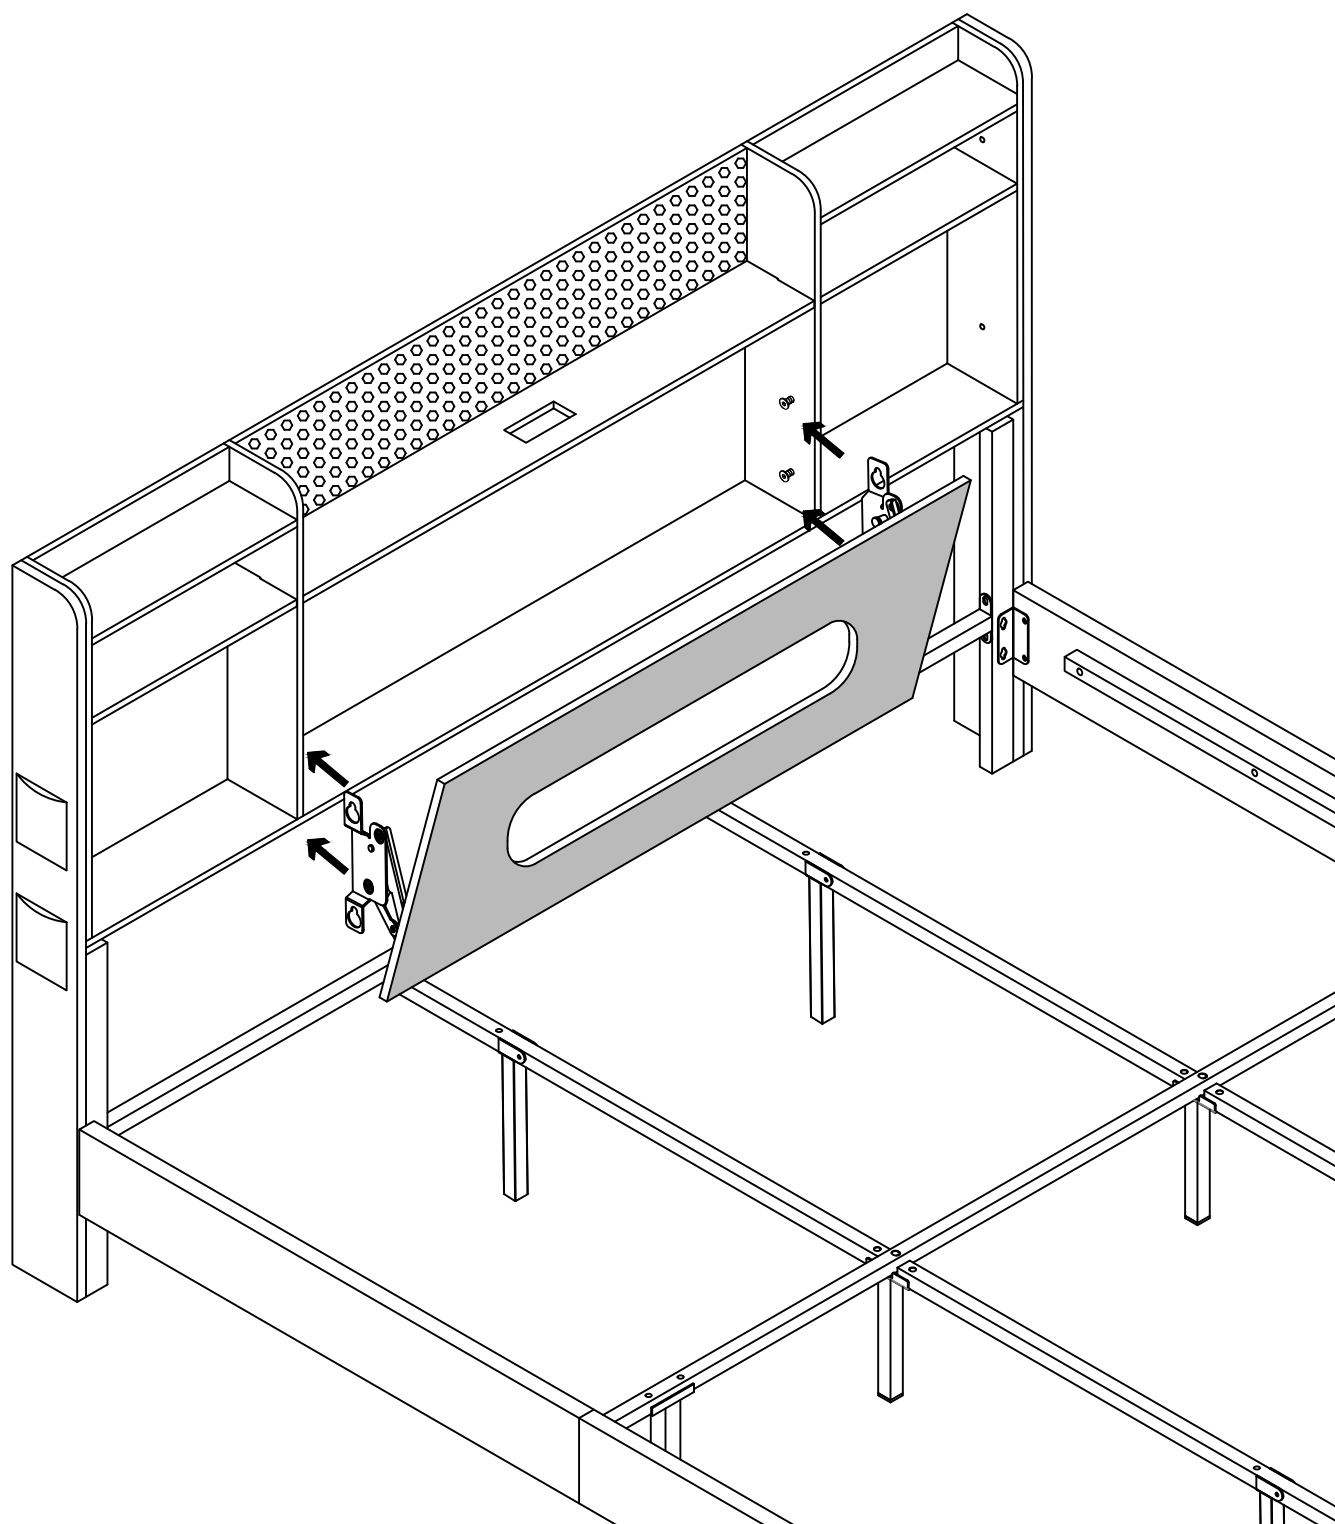


Assembly Instruction

30



M M3*12




Press it in

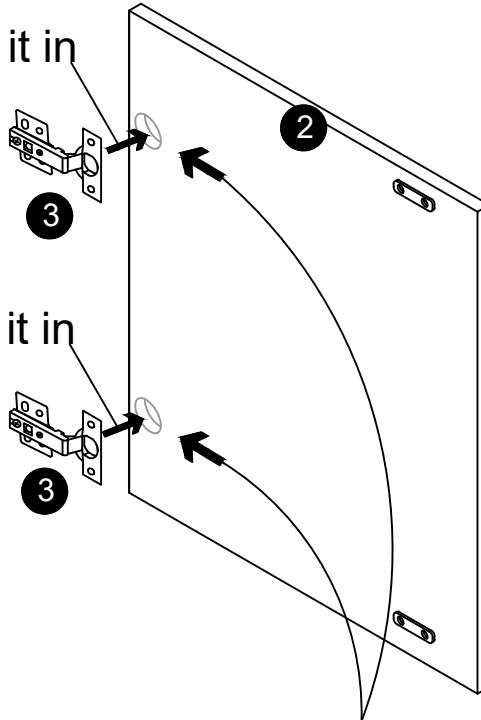

Press it in

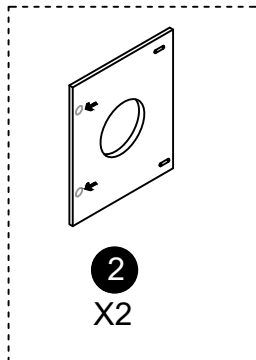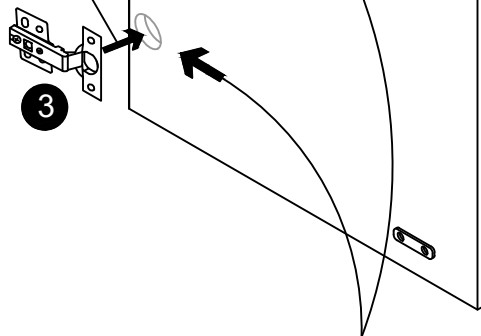

There is a circular countersunk hole at the point indicated by the labeling arrow

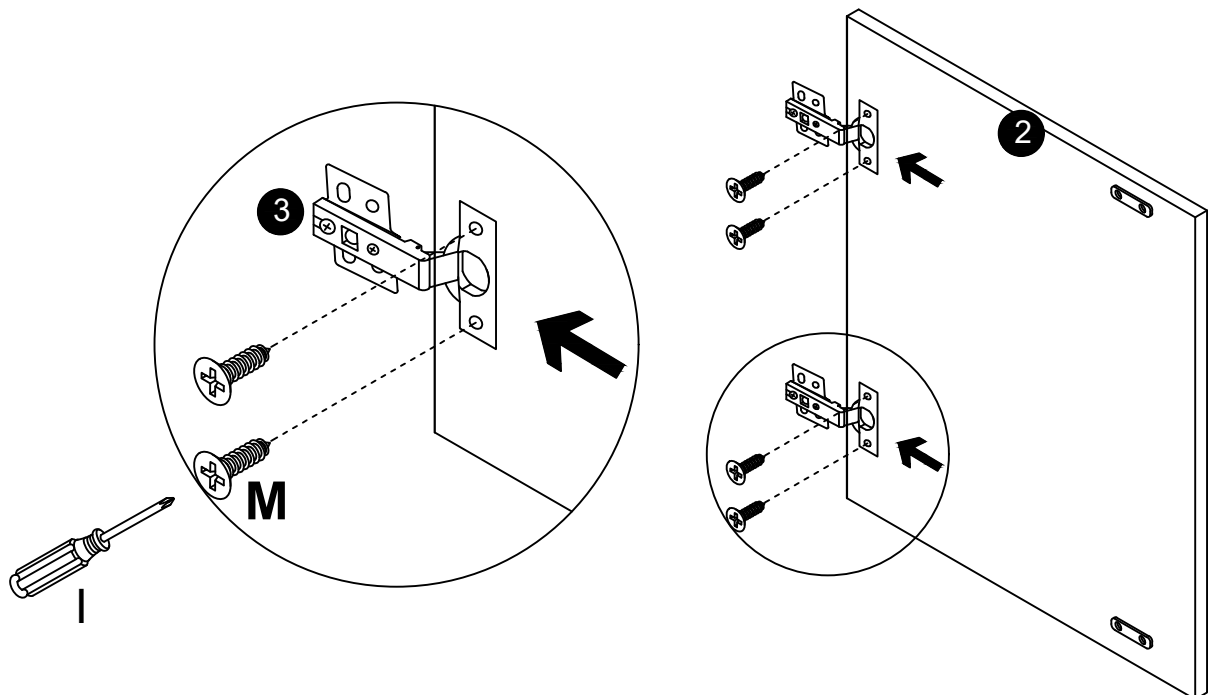

Assembly Instruction


31

G M4*12



X16


Please slightly unscrew the screw by 1-2mm
Make the iron piece better attract the magnet

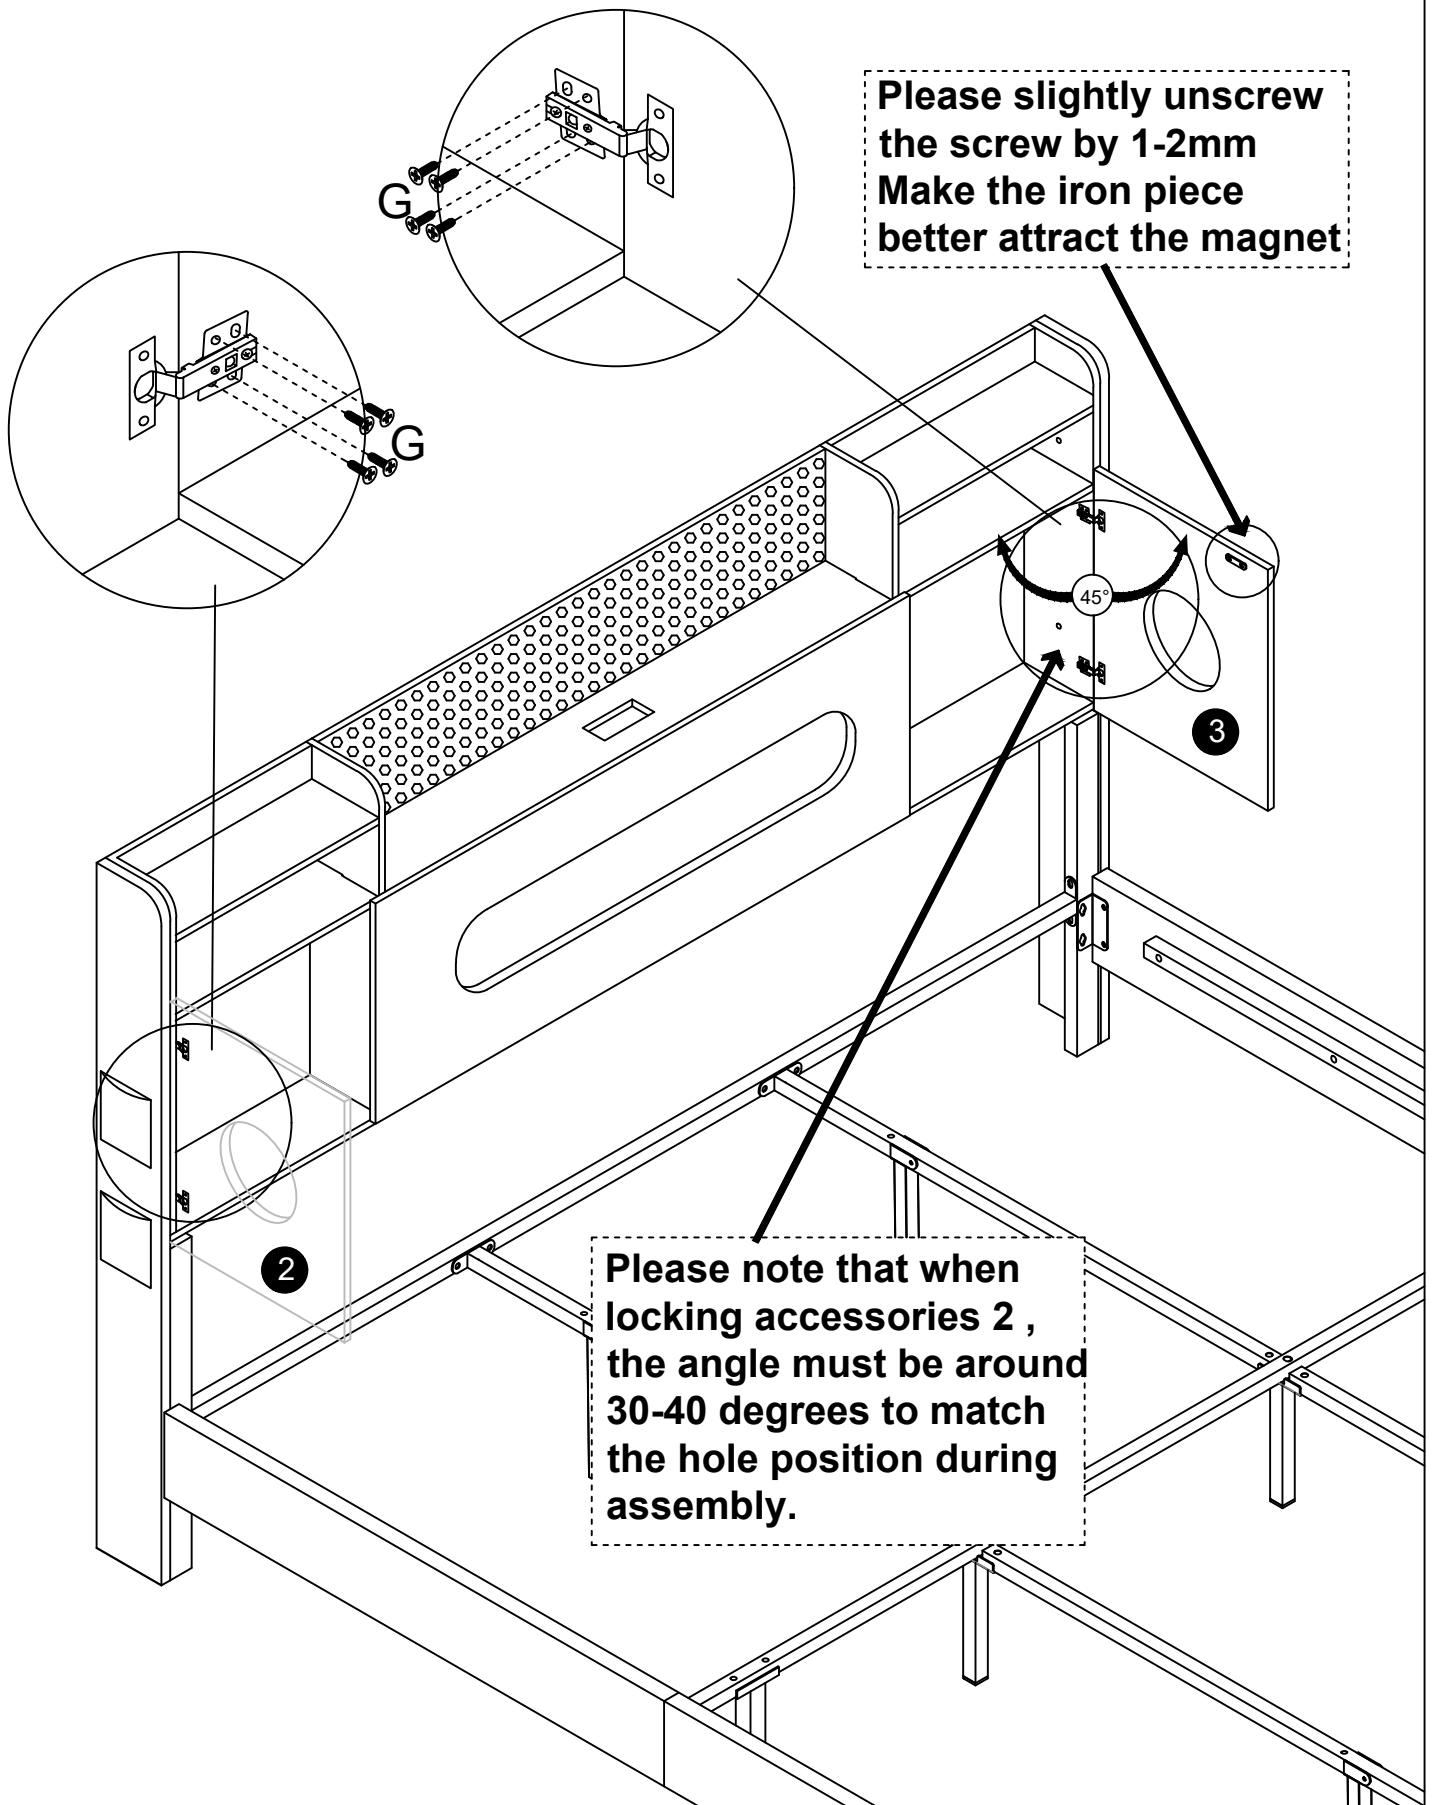


Please note that when locking accessories 2 , the angle must be around 30-40 degrees to match the hole position during assembly.

Assembly Instruction


32

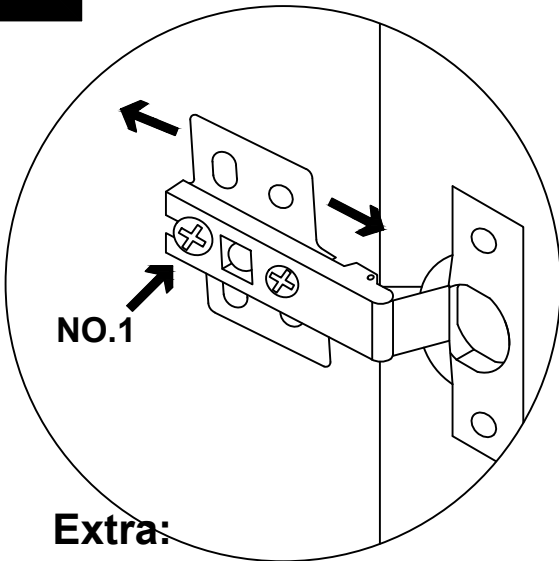


Extra:
NO.1 :Twist here to adjust
the front and back.

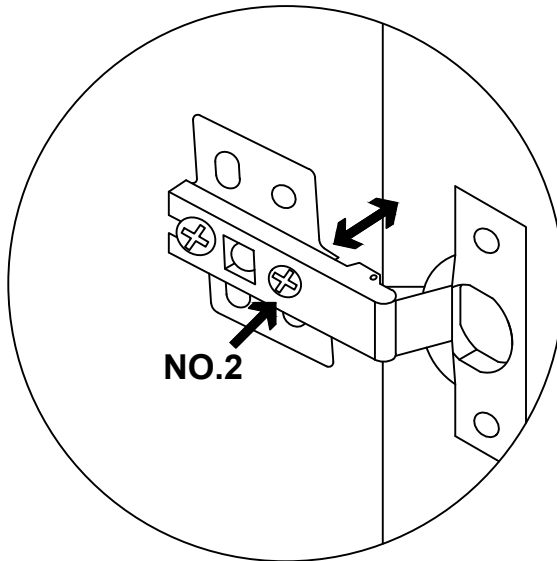

NO.2 :Twist
here to
adjust the
width
between the
door hinge
and the
door panel.

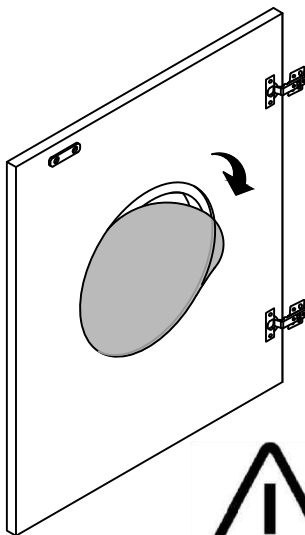

Please note that
there is a thin
film on the
inside of (2).
It is
recommended
to tear it off for
clearer visibility.

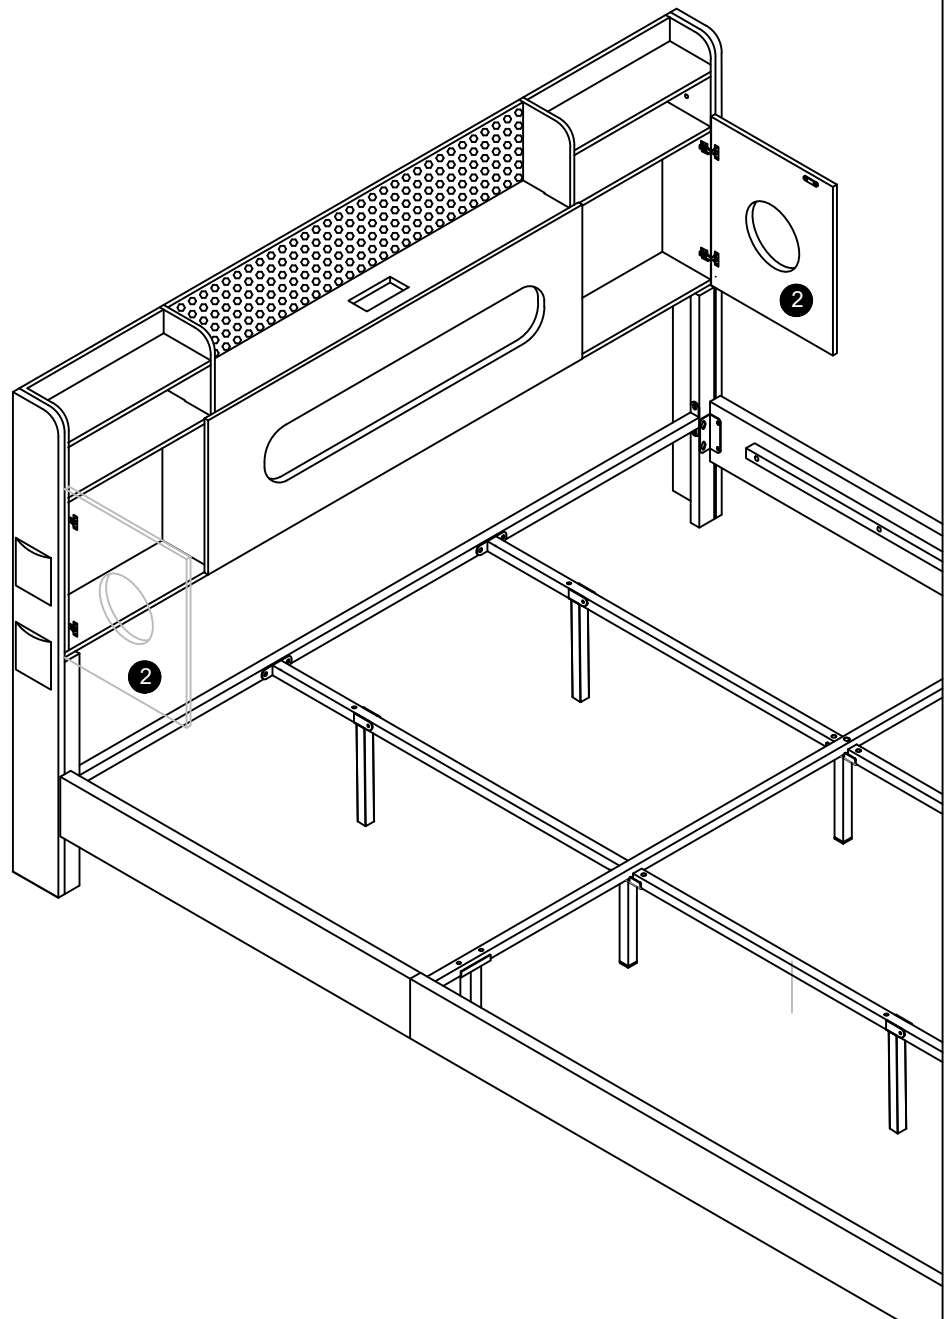



Assembly Instruction

33

G M4*12




X2

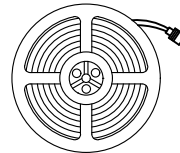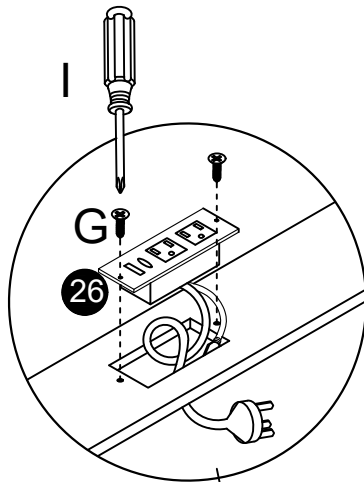

Light bar




Pull out
and unfold

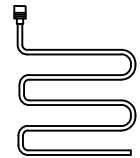


Light bar

The unfolded light strip has a light
strip surface on one side and a
magic veneer on the other side

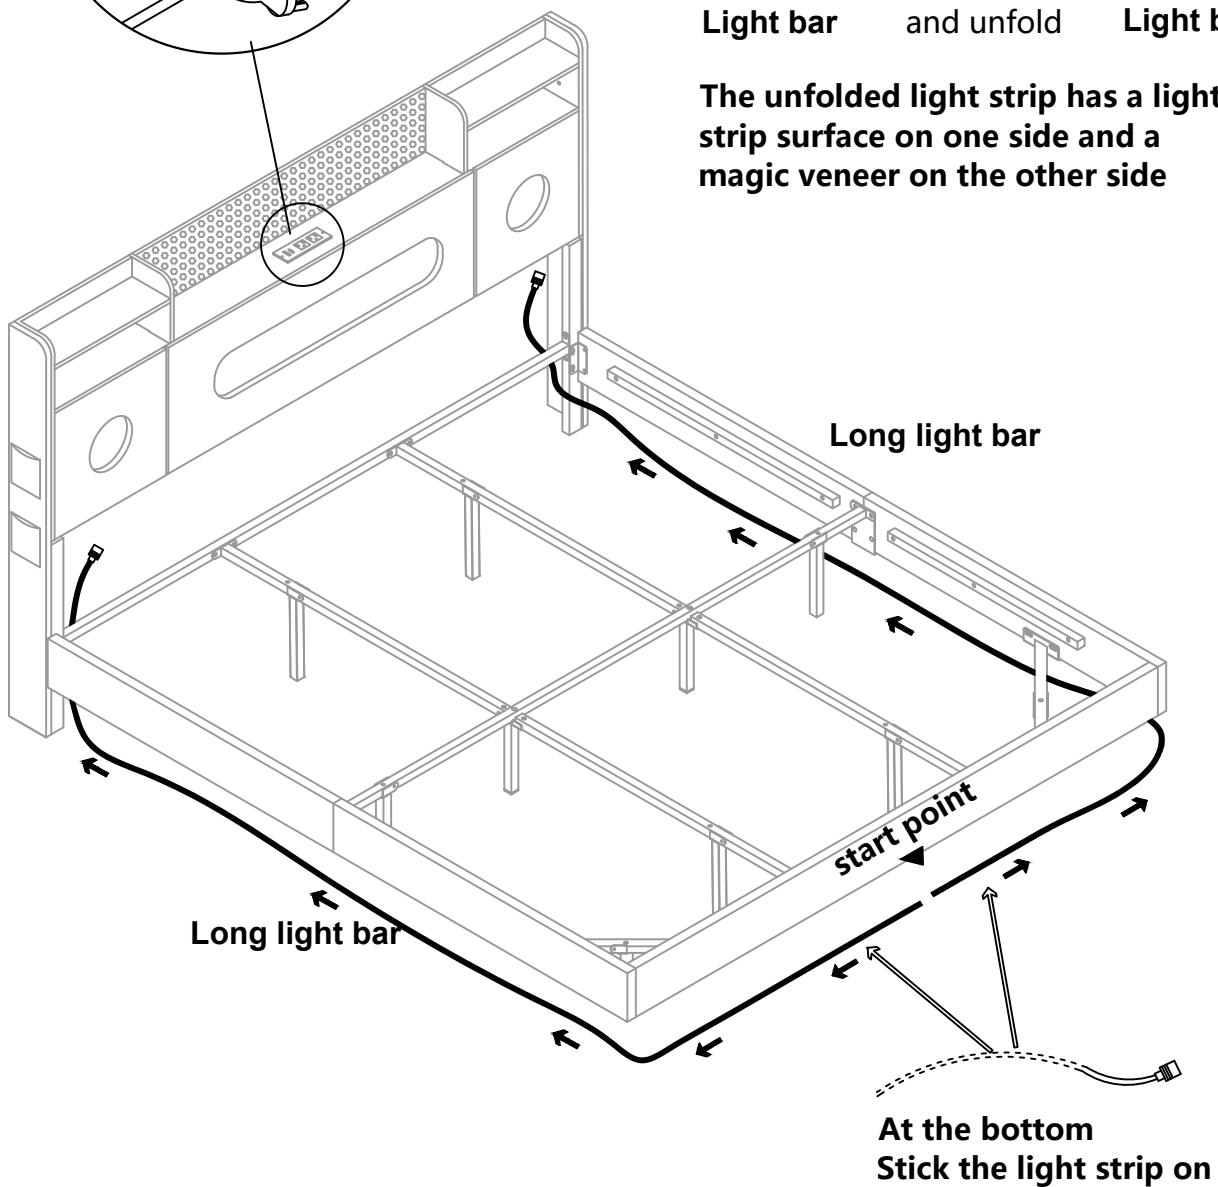


Assembly Instruction

34




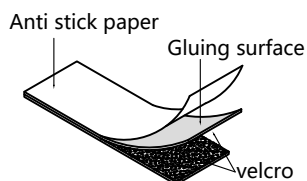


Strap magic tape

When the wires are disordered, tear off the anti stick paper, paste it on the place where the wires pass, and then bind the wires.

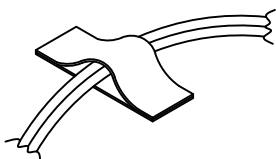

There is a USB bus under the socket, connect the USB plug of the power cord to it.

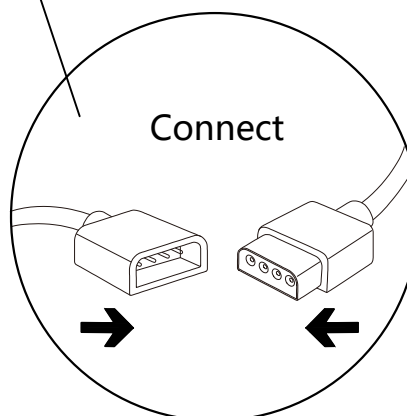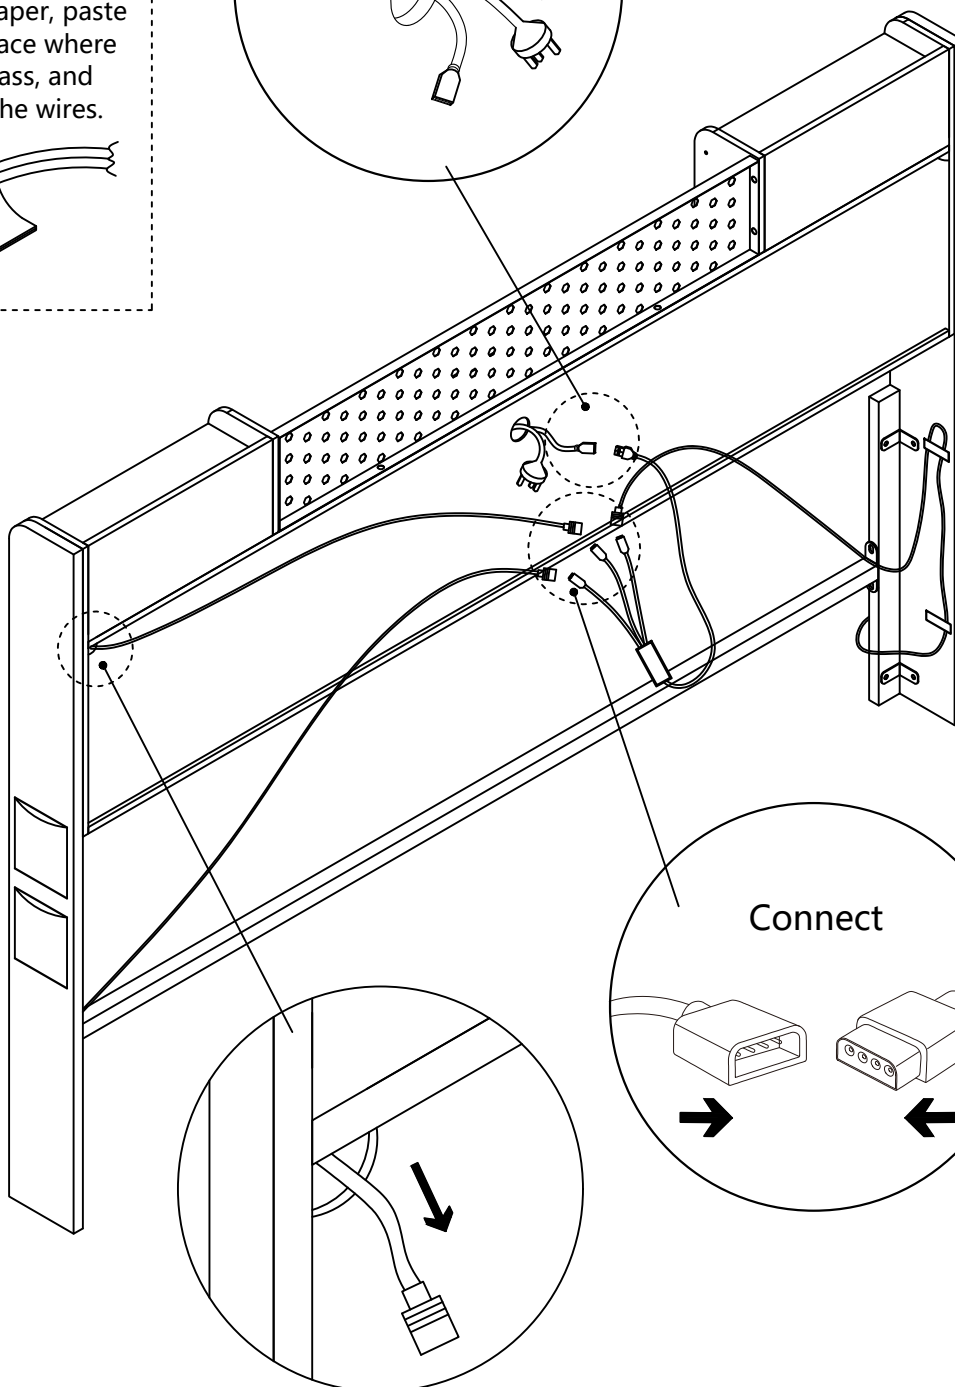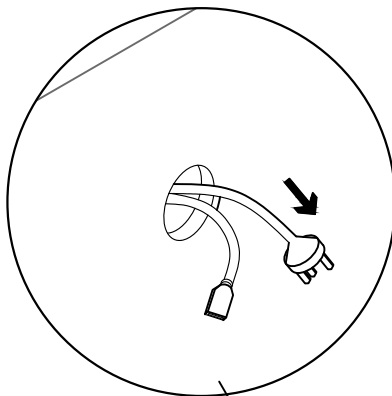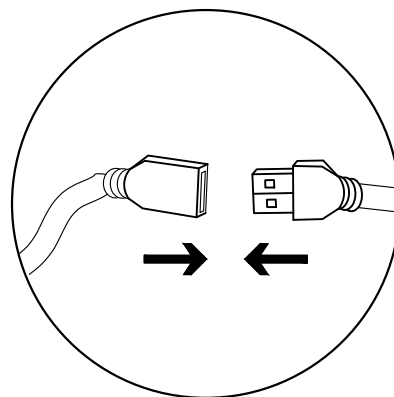

Connect

Just pull out the connector of the light strip from the back.

Assembly Instruction

35

