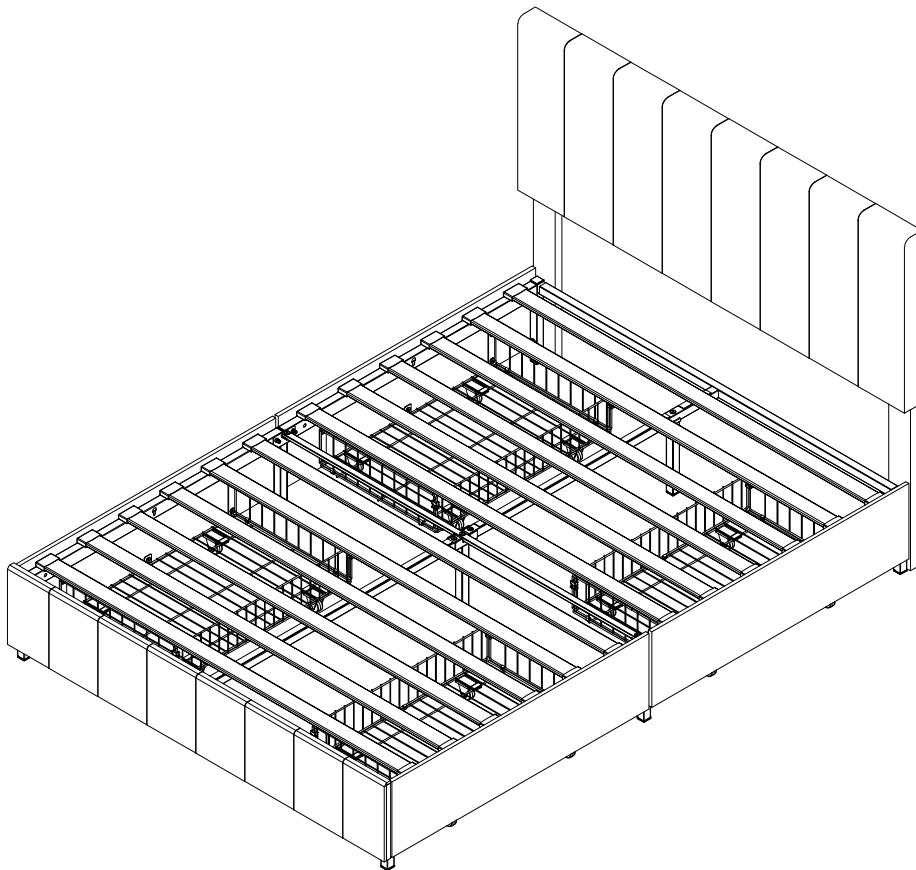
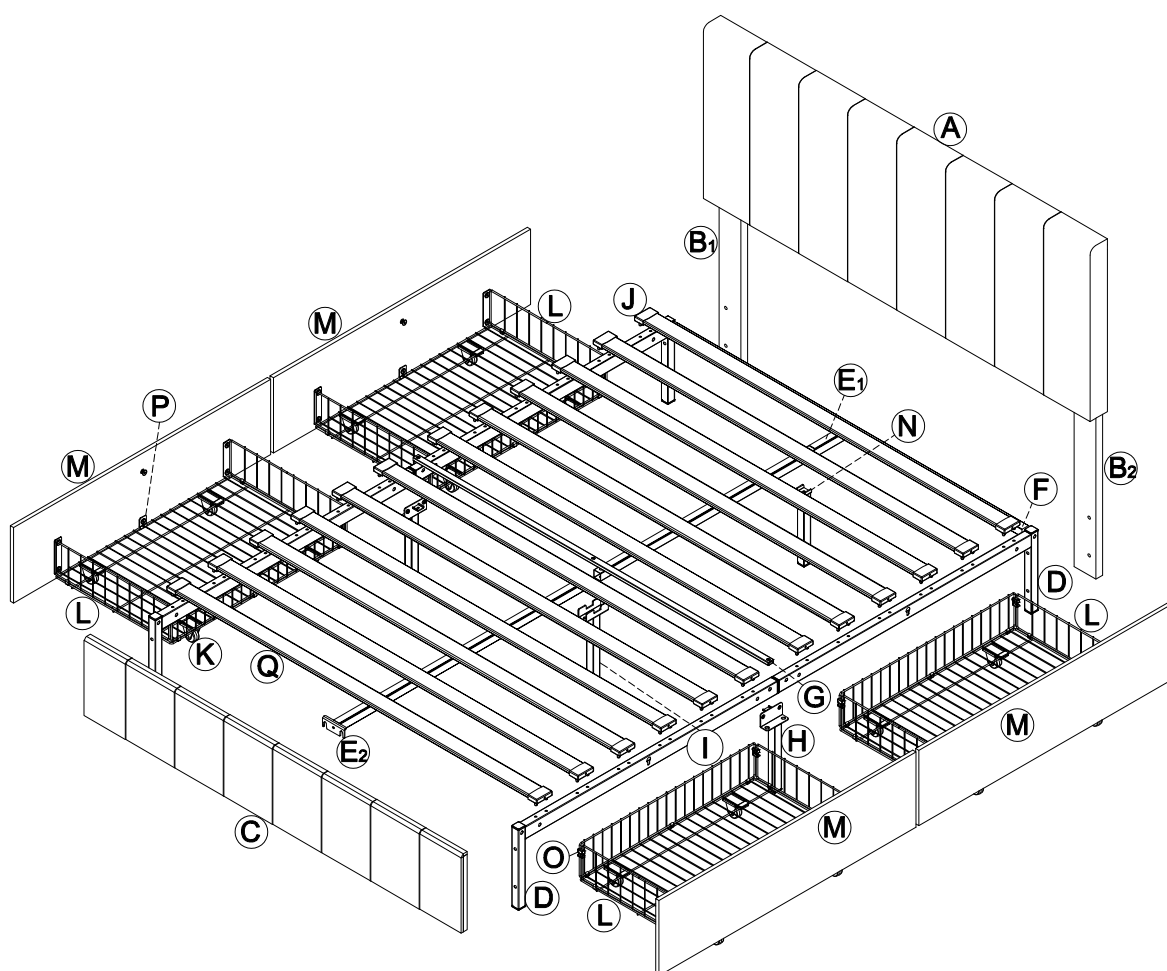


Upholstered bed



TIPS

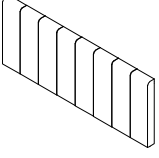
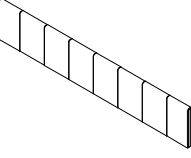

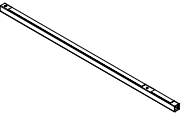
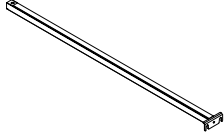
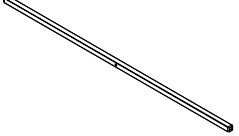
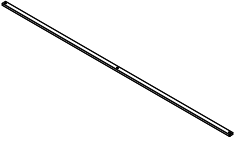
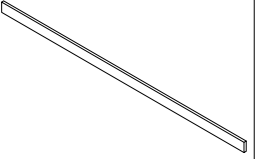
1. This product is divided into 2 parcels for delivery. They may not arrive at the same time. Please wait patiently.
2. Please read the instructions fully before assembly. These instructions include important information which could ensure correct assembly. We have been working on providing high quality products for you. However, in the rare instance that your product is defective, missing parts or there are some issues, please don't hesitate to contact our customer service to submit parts requirements, assembly suggestion, or warranty claims, and we will give the best solution as soon as possible. If necessary, we need you to provide some more clear pictures of the issue.
3. Insert the screws in holes and tighten the screws, but not too tight, 70%~80% is ok, finally tighten all the screws. If some issues happened that some screws can not target to the hole or some parts are difficult to install, please adjust the tightness of the screws.
4. 2 people are recommended to finish.



1. This product is not suitable for mattress recessed type.
2. This product is suitable for placing mattresses on the top.














Part List N652P180511

1/2


A 	B₁ 	B₂ 	C 	D 
Head board 1PC	Head board leg 1PC	Head board leg 1PC	Foot board 1PC	Side rails 4PCS
E₁ 	E₂ 	F 	G 	Q 
Center support bar 1PC	Center support bar 1PC	Cross bar 1PC	Cross bar 1PC	Slats 12PCS

Part List N652P180512

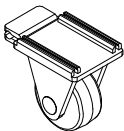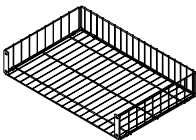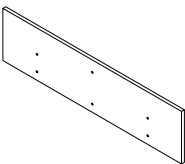2/2


H  Side rails support legs 2PCS	I  Connected support leg 1PC	J  Crank button 24PCS	K  Pulley 16PCS	L  Drawer frame 4PCS
M  Drawer panel 4PCS	N  Connected support leg 1PC	O  Drawer clip 8PCS	P  Bracket 4PCS	
1  Bolts M8*40 21PCS	2  Washers Ø12*T1.5 4PCS	3  Bolts M8*18 6PCS	4  Bolts M6*10 20PCS	5  Bolts M6*20 4PCS
6  Washers Ø20*T1.5 4PCS	7  Allen Key 4*80 1PC	8  Bolts M8*50 2PCS		

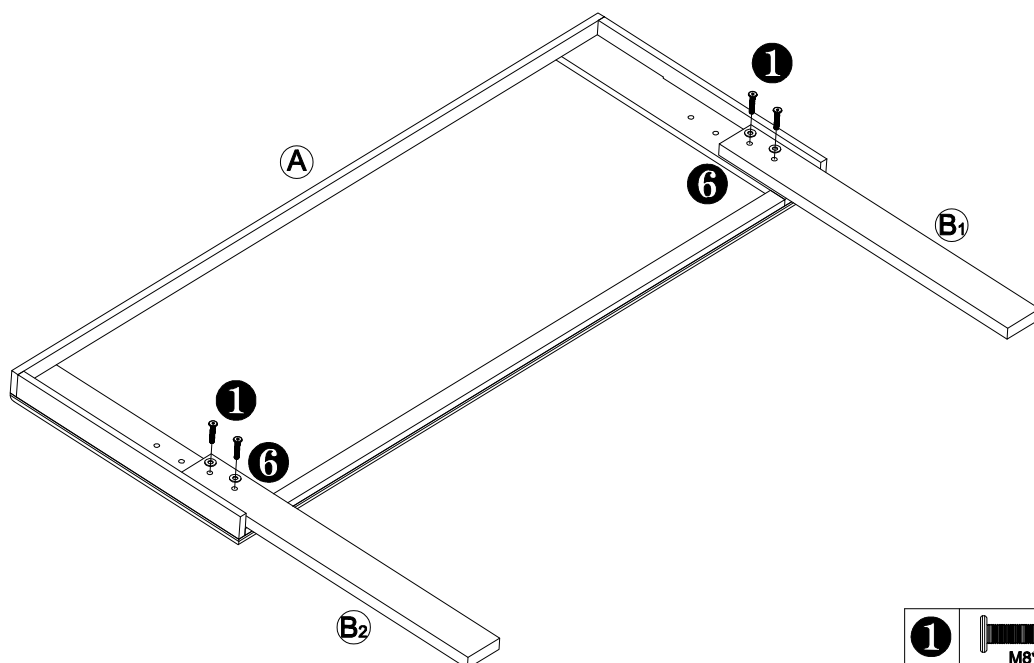1




1	 M8*40	4PCS
6	 Ø20*T1.5*4PCS	4PCS

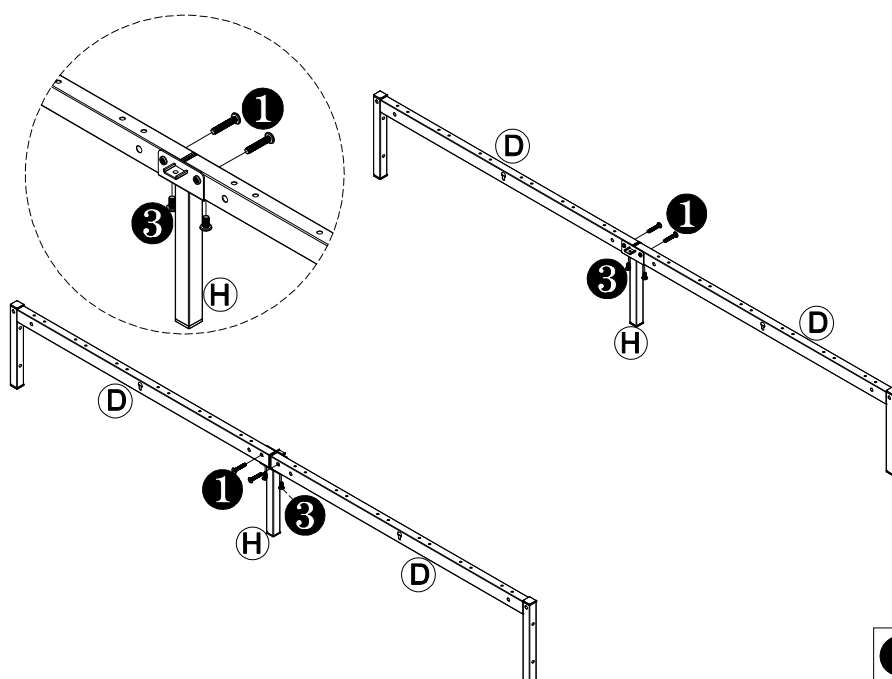2



1	 M8*40	4PCS
3	 M8*18	4PCS

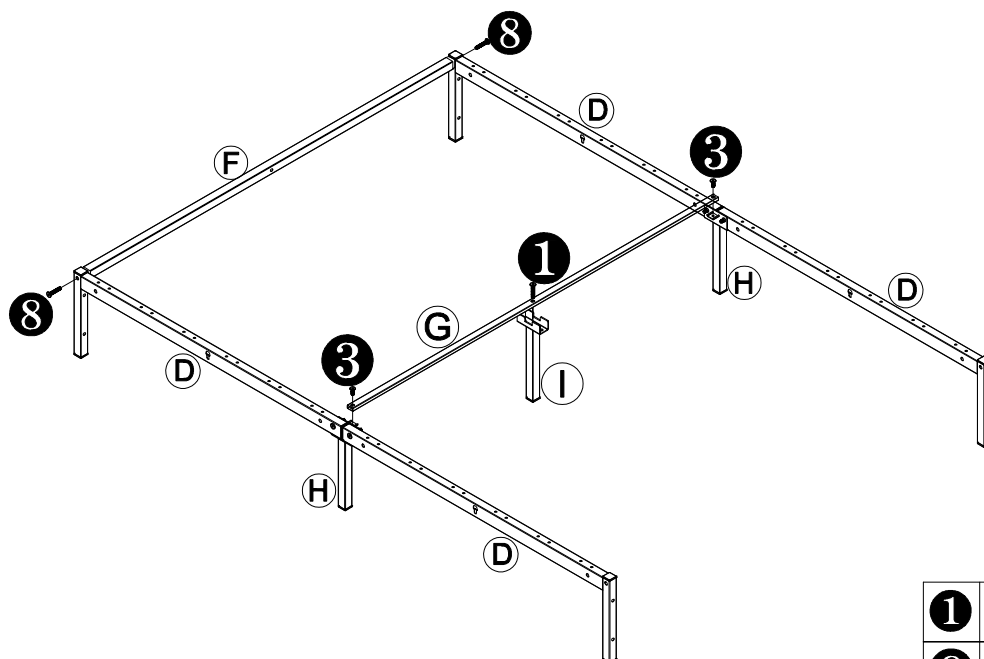
3



1		1PC
8		2PCS
3		2PCS


4

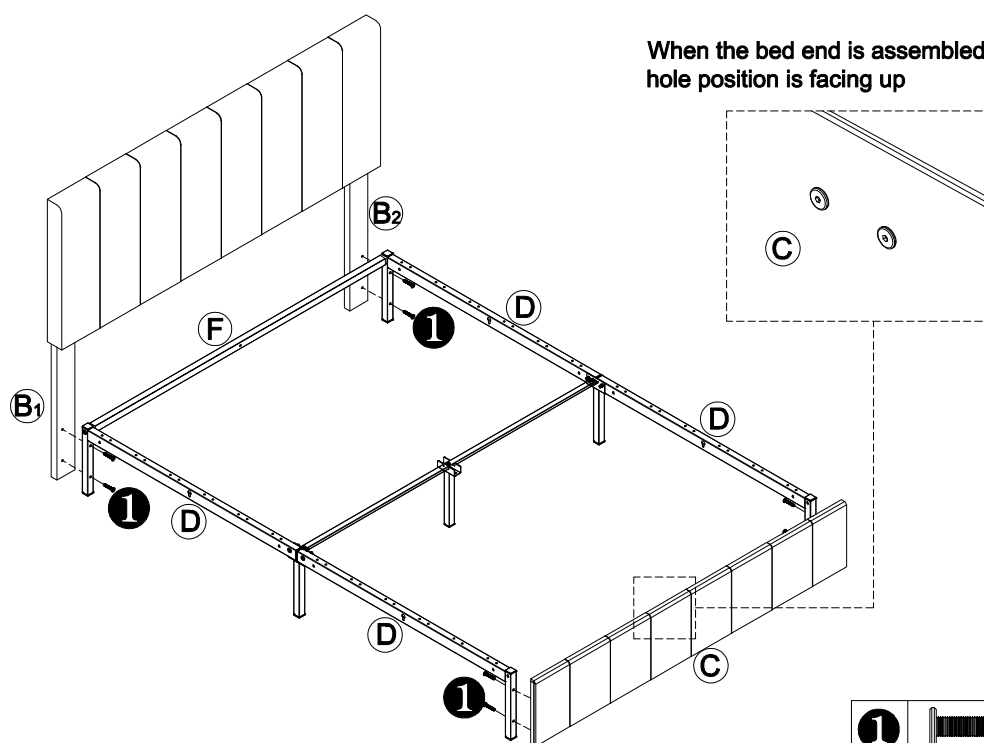When the bed end is assembled, the hole position is facing up




1		8PCS
----------	---	------

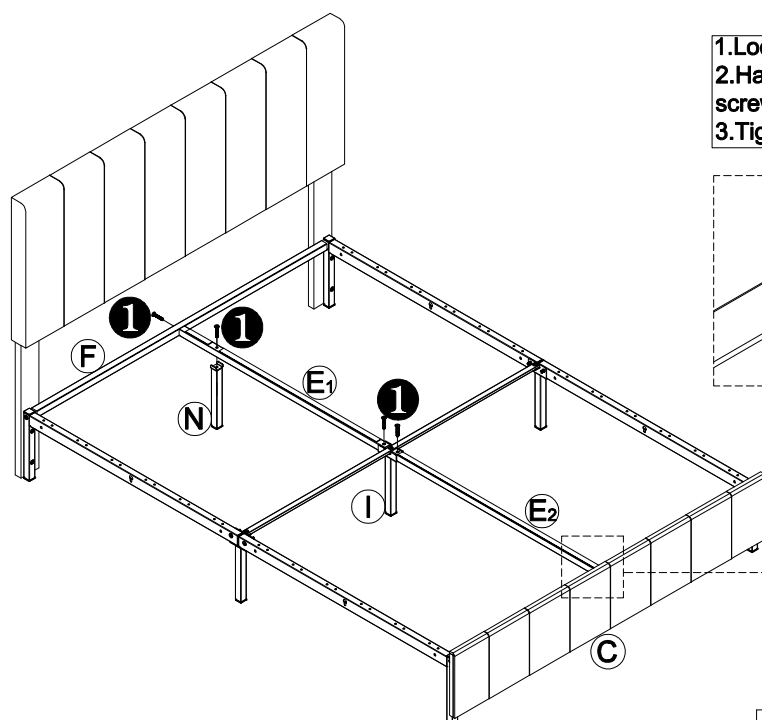
5




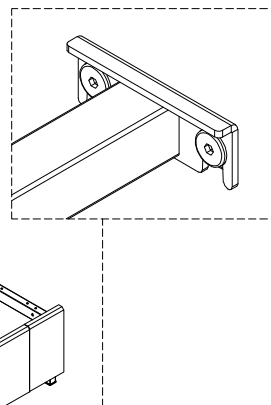
1. Loosen the screw first.
2. Hanging E2 on the screws.
3. Tighten the screws.




6

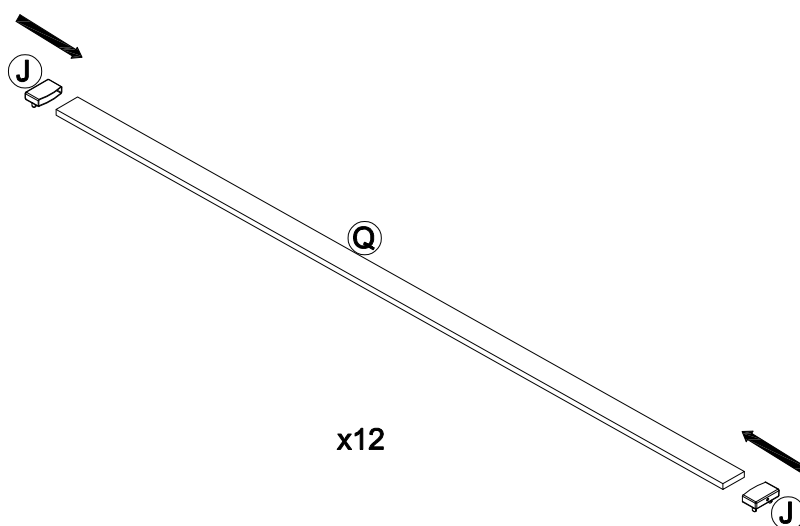


7

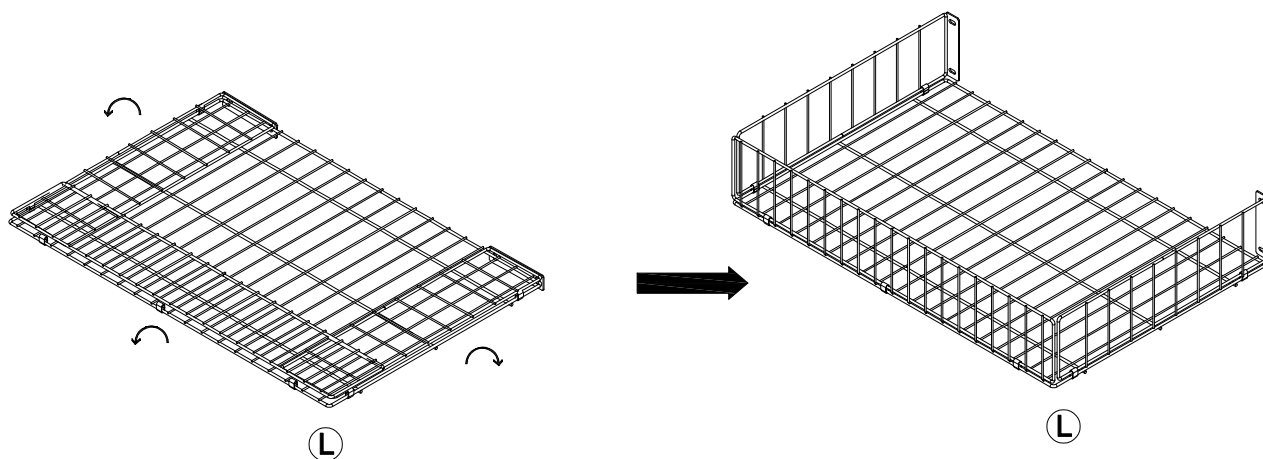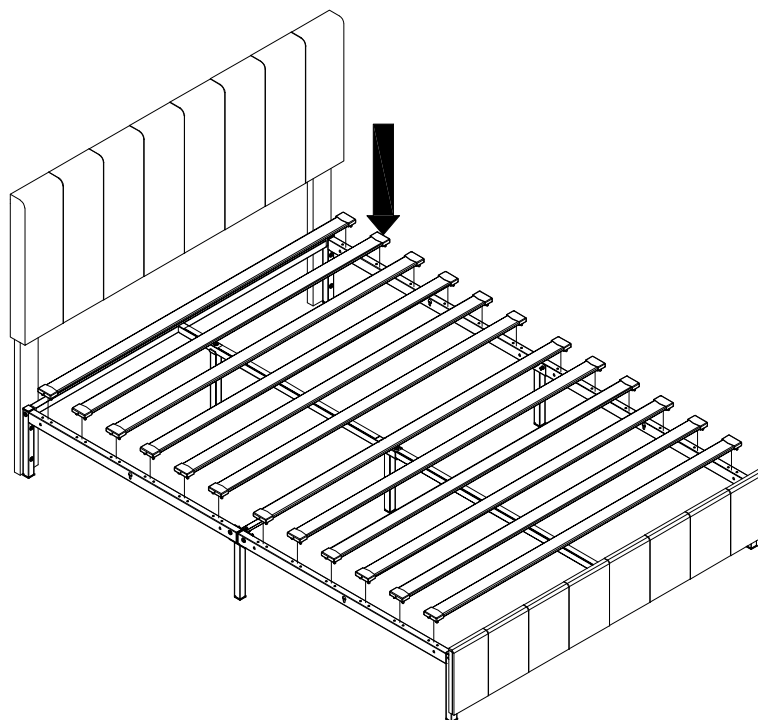
**x4**

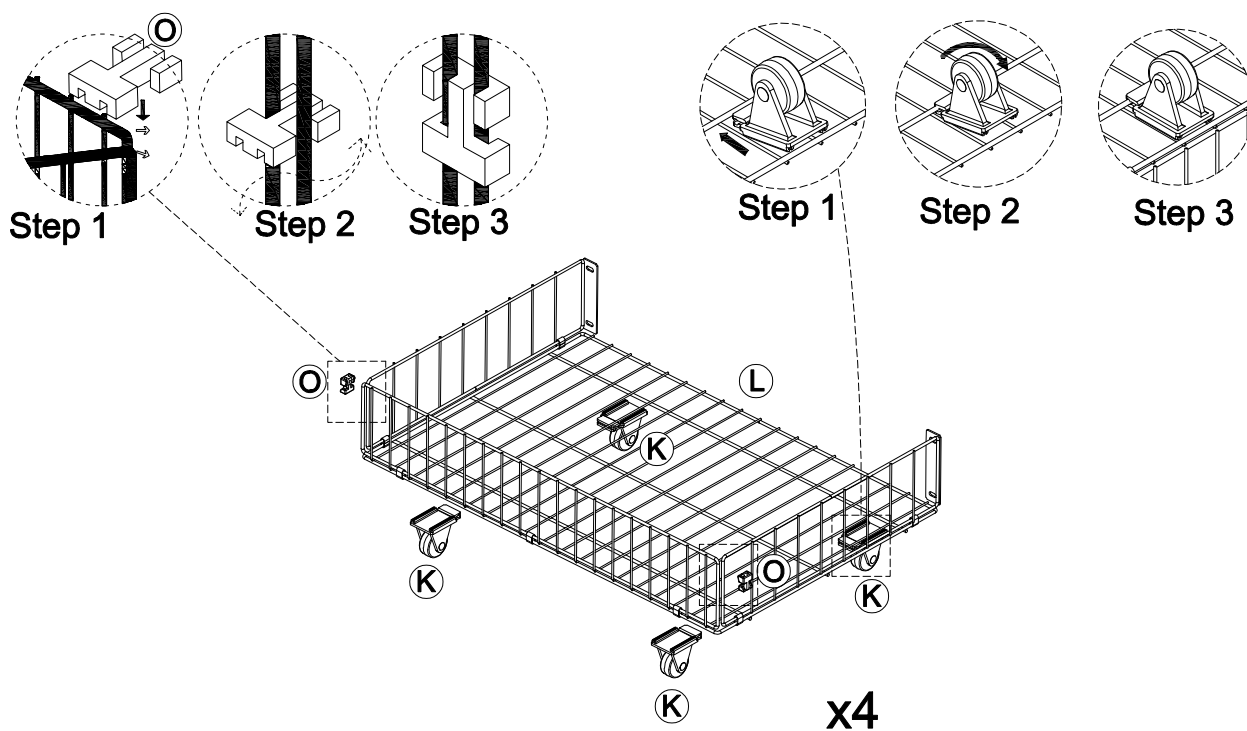9




10

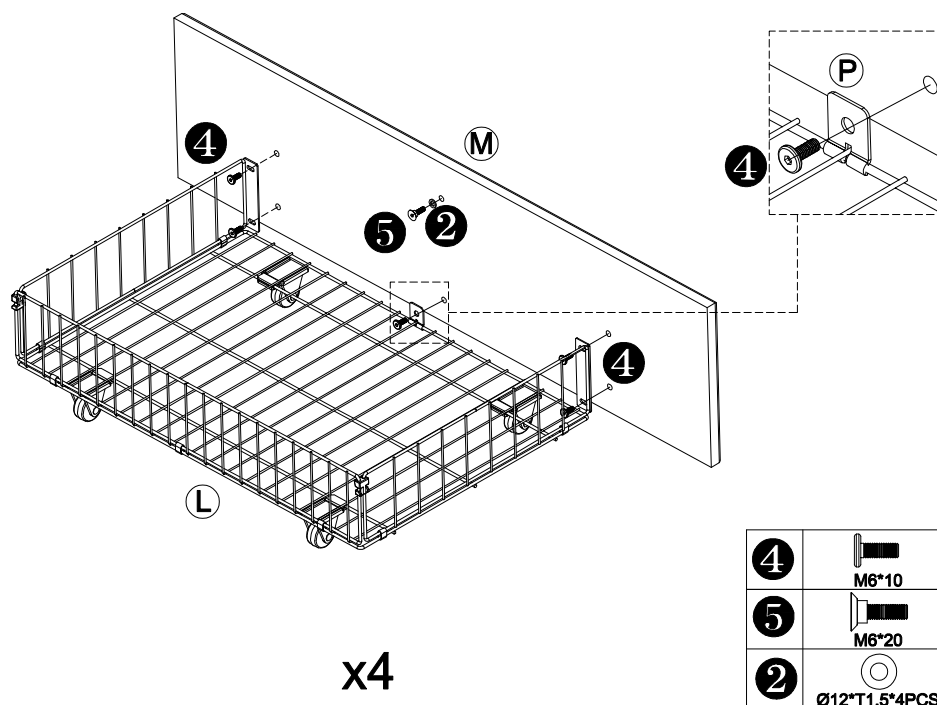

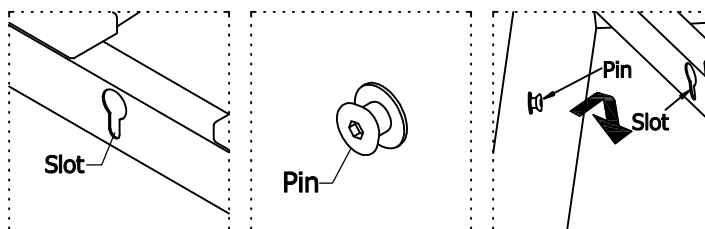

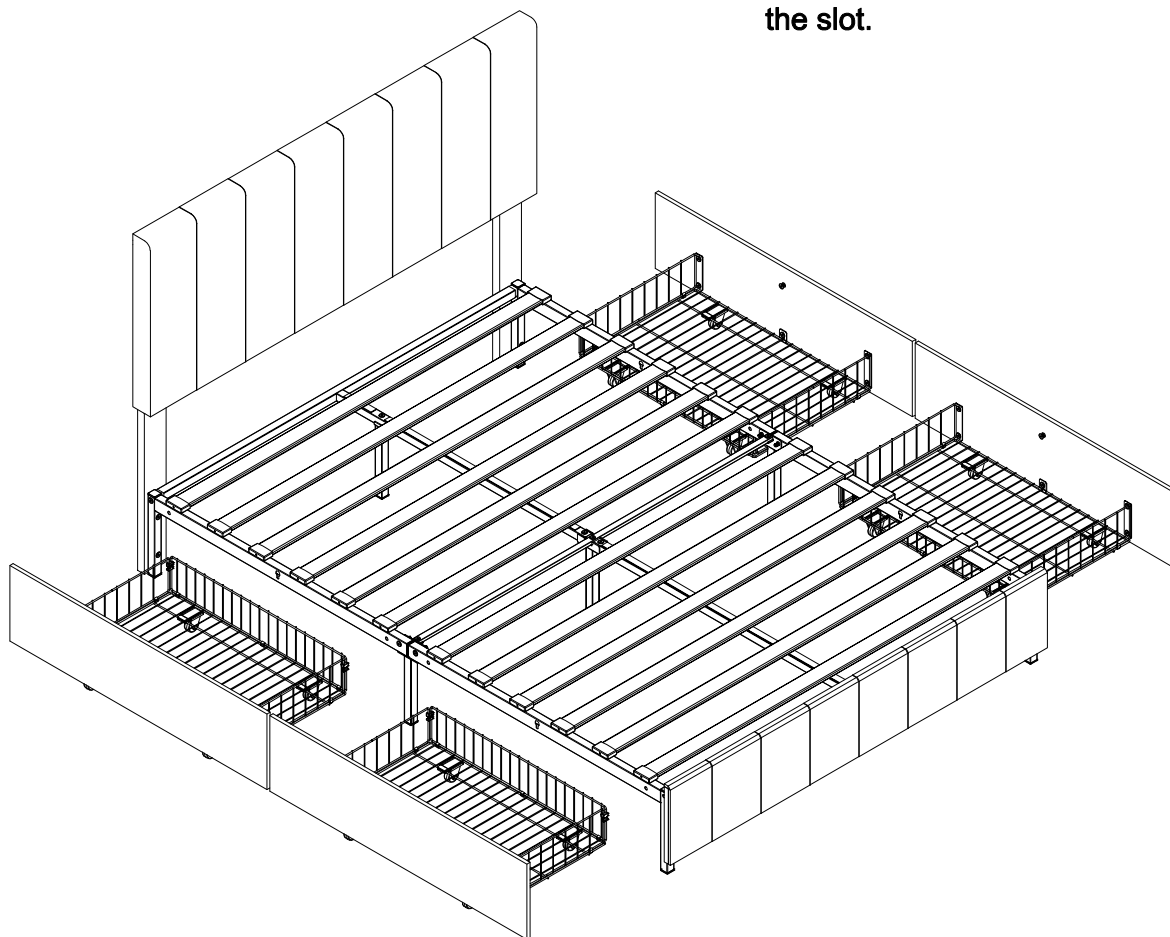1. Align the drawer with the bed frame and push it onto the bed
2. Lock the drawer by gently lifting it or inserting the pin into the slot.



Fertiges

