
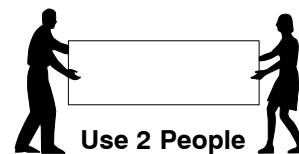


# Full Bed


## Assembly Instructions

### 1 Assembled View

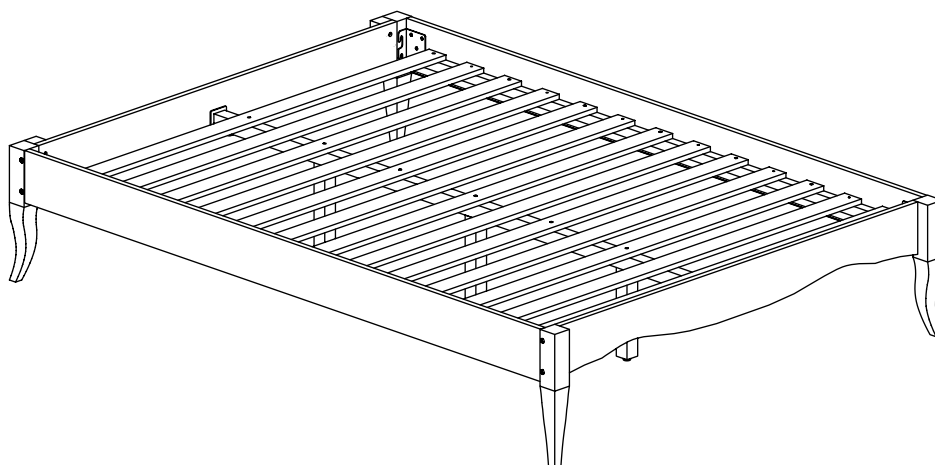


**Note:** Do not assemble using power tools. This can cause the bolts to be overtightened

### 2 Parts List



**A** Headboard Panel x 1



**B** Footboard Panel x 1




**E** Support Leg x 3




**F** Post (Left hand) x 2




**G** Post (Right hand) x 2



**C** Side Rail x 2



**D** Long Support x 1

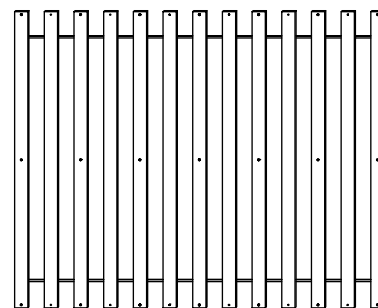


**H** Set of Bed Slats x 1


### 3 Hardware List




**1** M4 Allen Key x 1

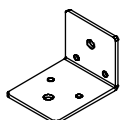

**2** Center Rail Bracket x 2



**3** Adjustable Foot x 3



**4** Wood Screw (M4 x 32mm) x 16



**5** Wood Dowel (10 x 40mm) x 4



**6** Barrel Nut x 11



**7** Spring Washer x 14



**8** Flat Washer x 14



**9** M6 x 15mm JCB x 4



**10** M6 x 20mm JCB x 8



**11** M6 x 40mm JCB x 30



**12** M6 x 90mm JCB x 8




**13** M6 x 100mm JCB x 3


# Full Bed

## Assembly Instructions


- 4** Fix the Adjustable foot to the bottom of the Support Leg (E).

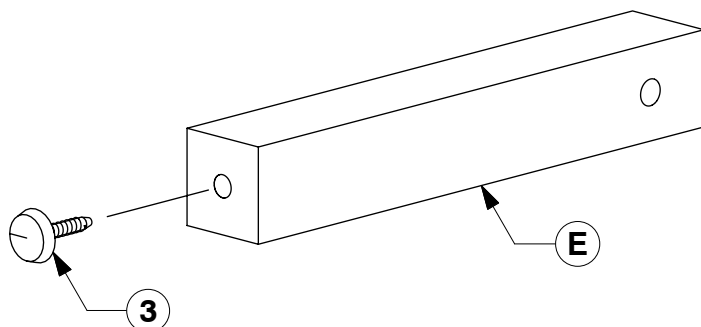

- 5** Fit the Center Rail Bracket to the Headboard Panel (A). Assemble the Headboard Panel (A) to Post (F/G), using Wood Screw 32mm (4).

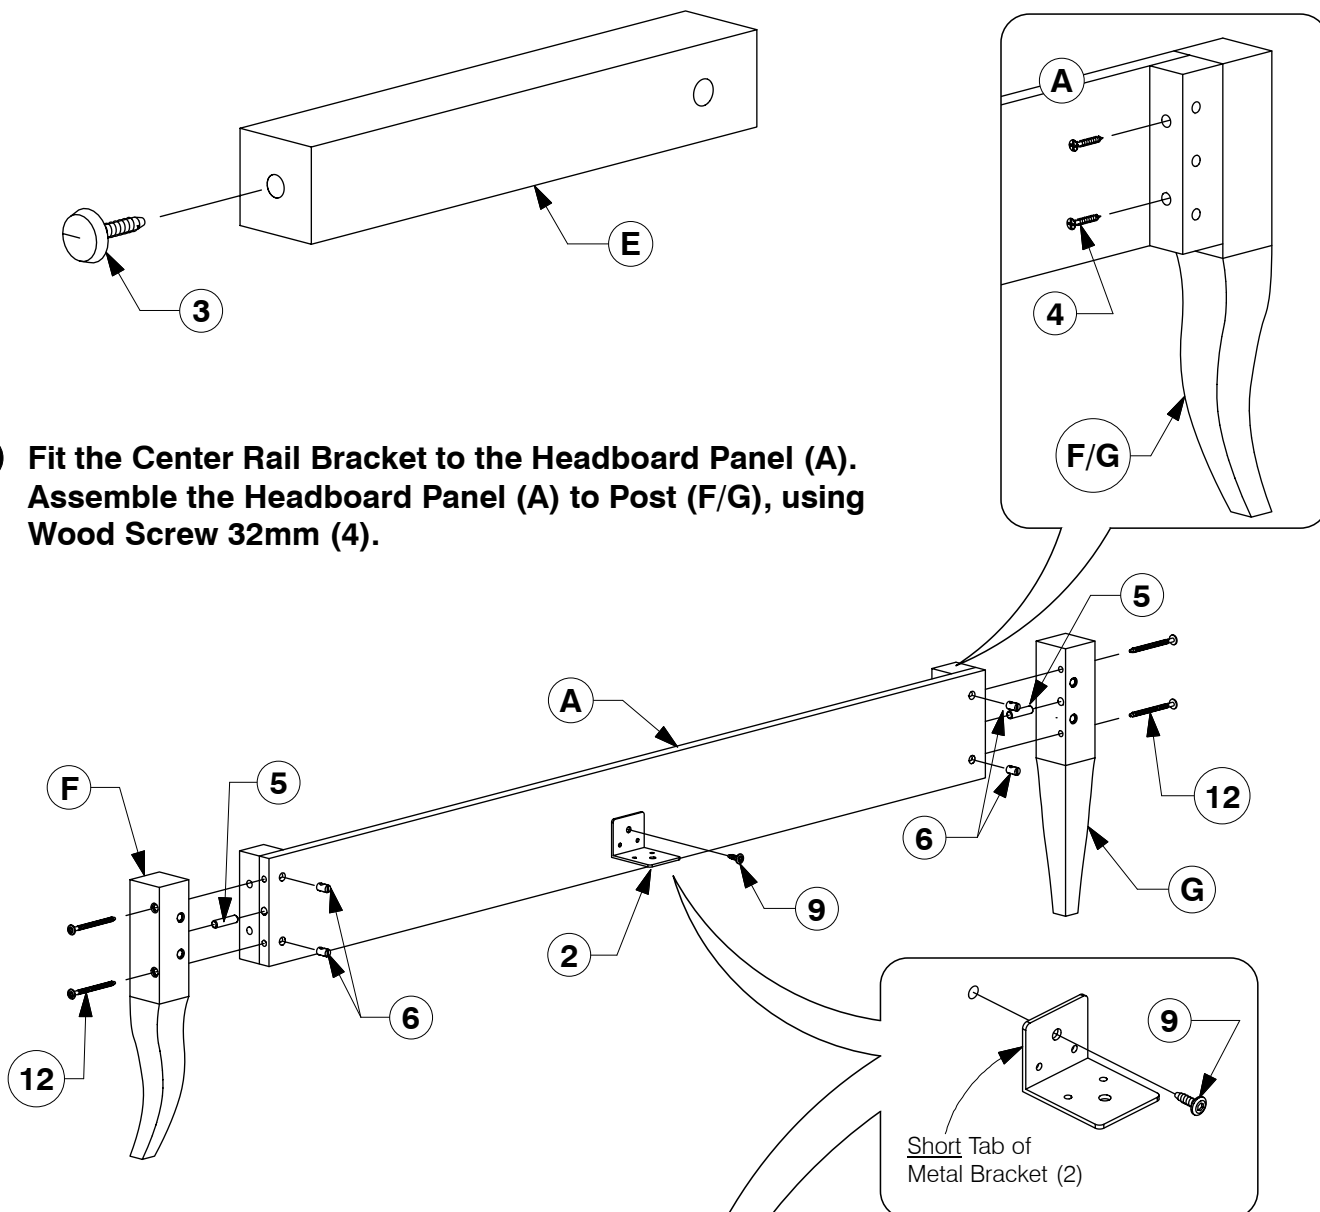


- 6** Fit the Center Rail Bracket to the Footboard Panel (B).

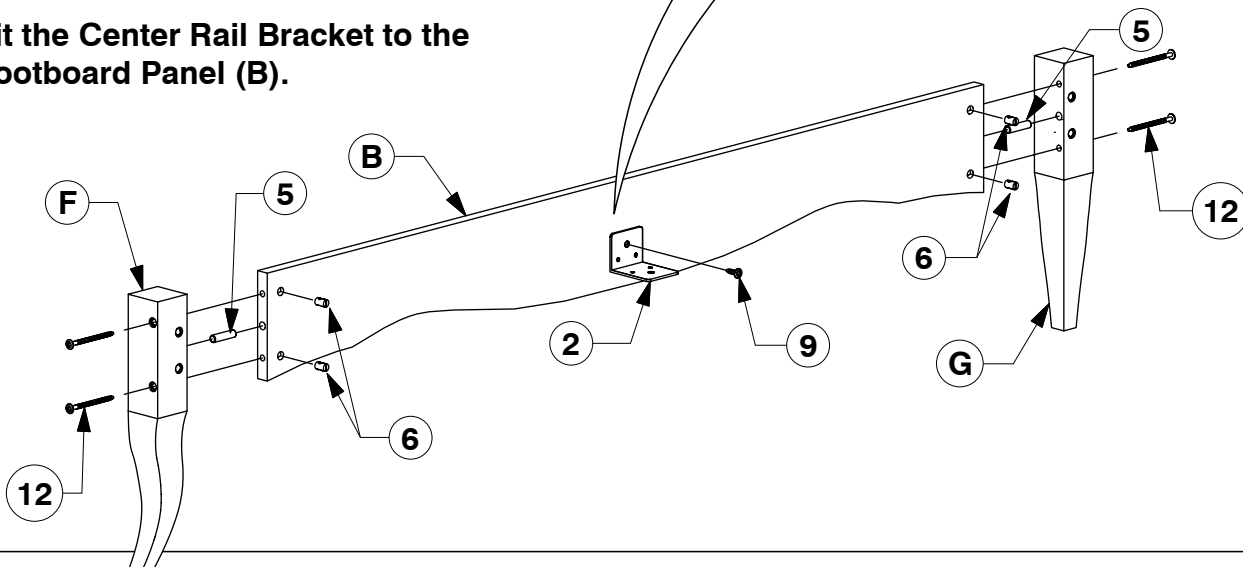


## Assembly Instructions

## 7 Assemble the Side Rail (C) to the Headboard and Footboard Panel (A & B).

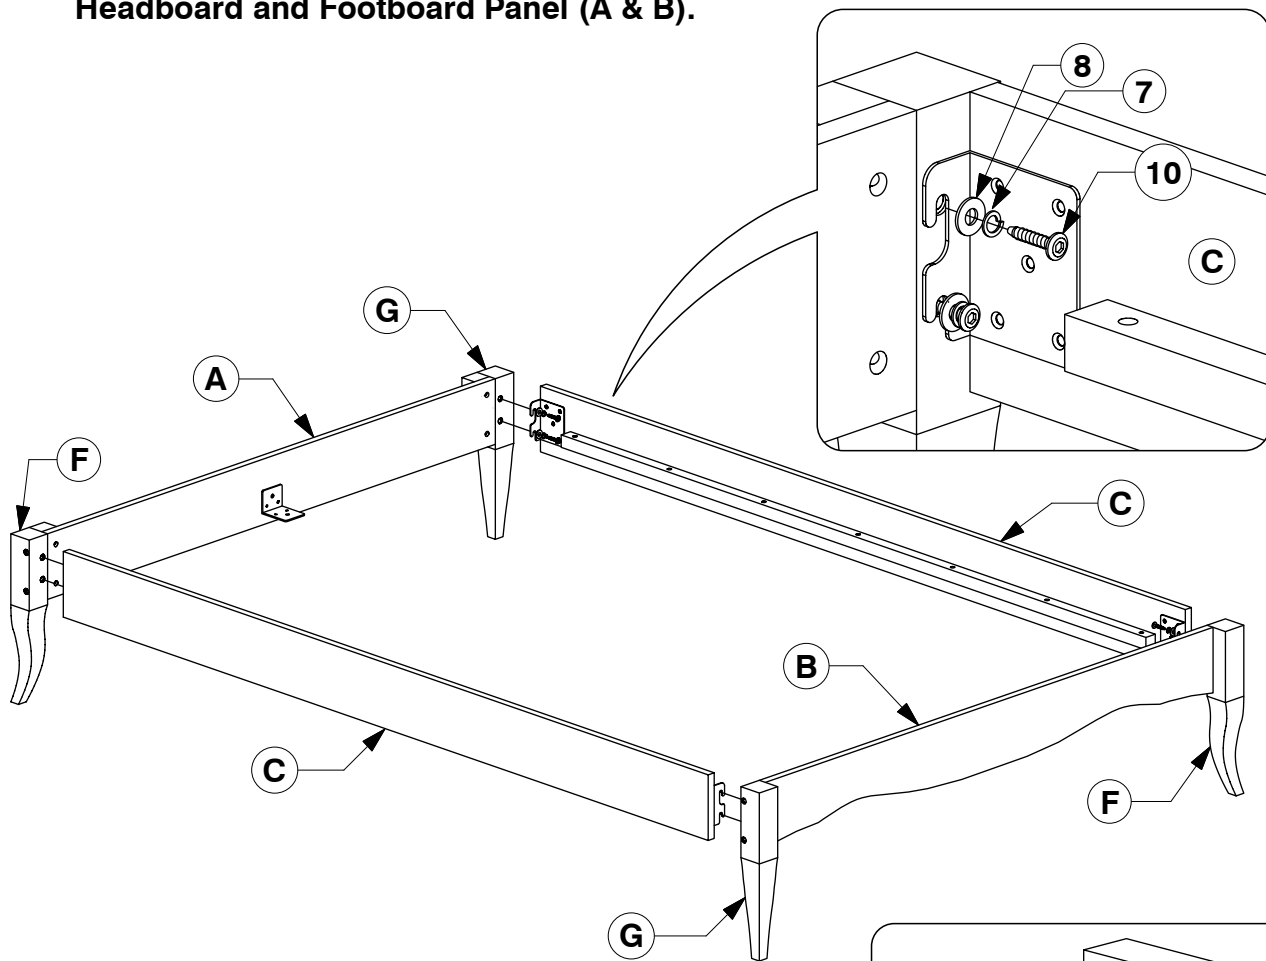


**8 Bolt the Long Support (D) to the Center Rail Brackets (2) on the Headboard and Footboard Panel (A & B).**

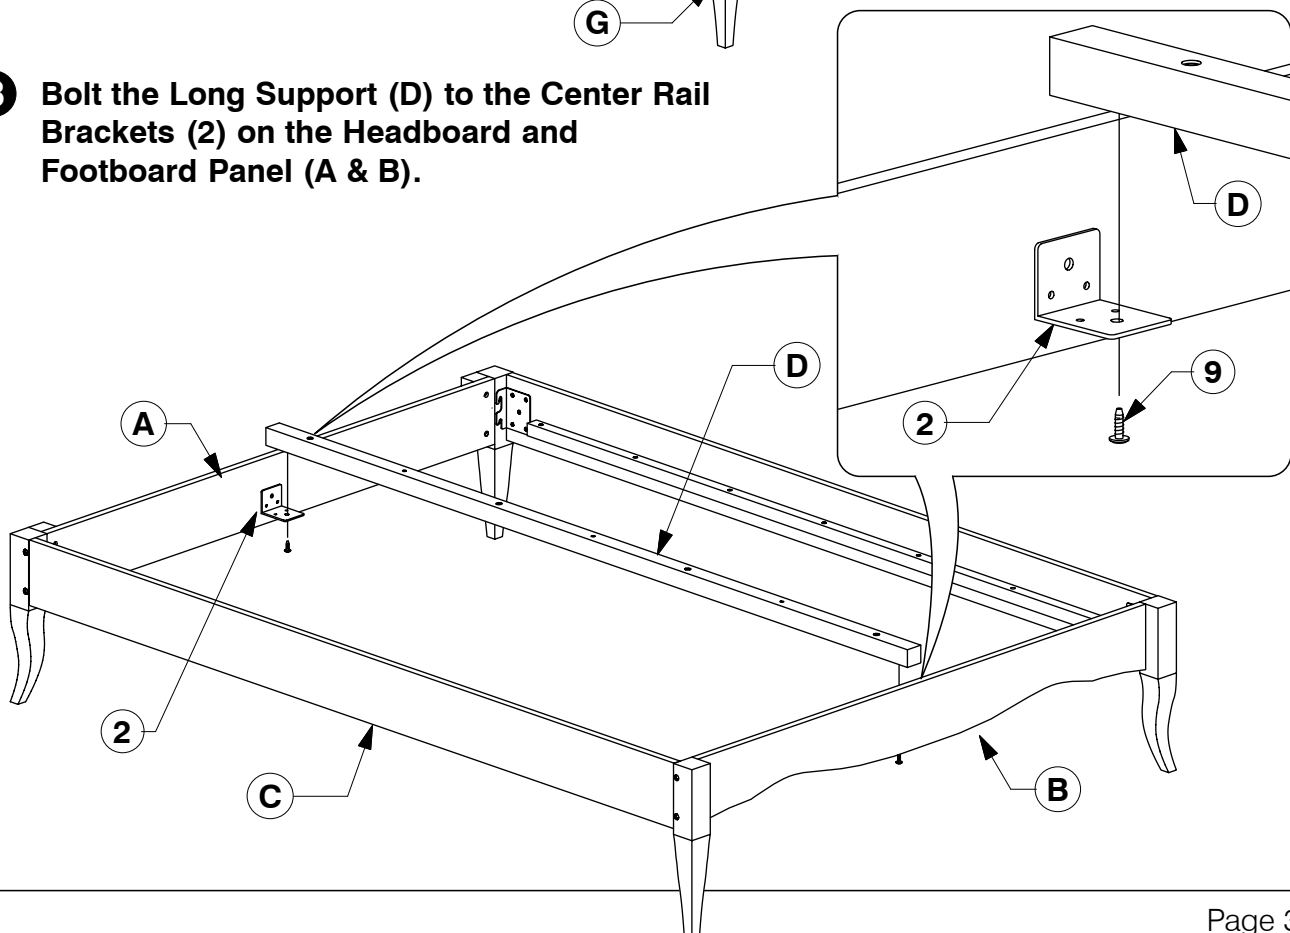


# Full Bed

## Assembly Instructions

- 9** Fit the first 3 Slats and assemble the Support Leg (E) to the Bed Slat (H). Bolt & screw the Bed Slats (H) to the Side Rail (C) & Long Support (D).

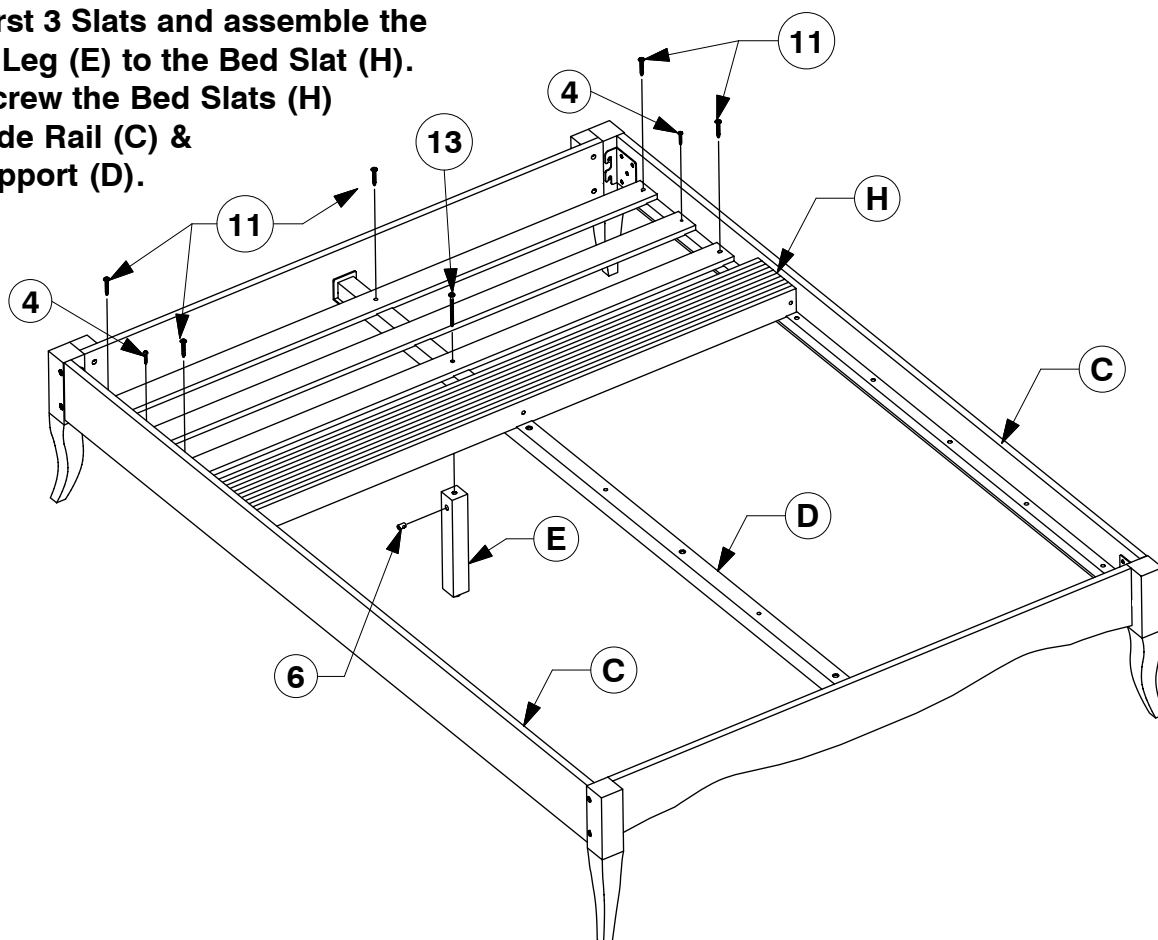


- 10** Fit the other Slats out and assemble the Support Leg (E) to the Bed Slat (H). Bolt & screw the Bed Slats (H) to the Side Rail (C) & Long Support (D).

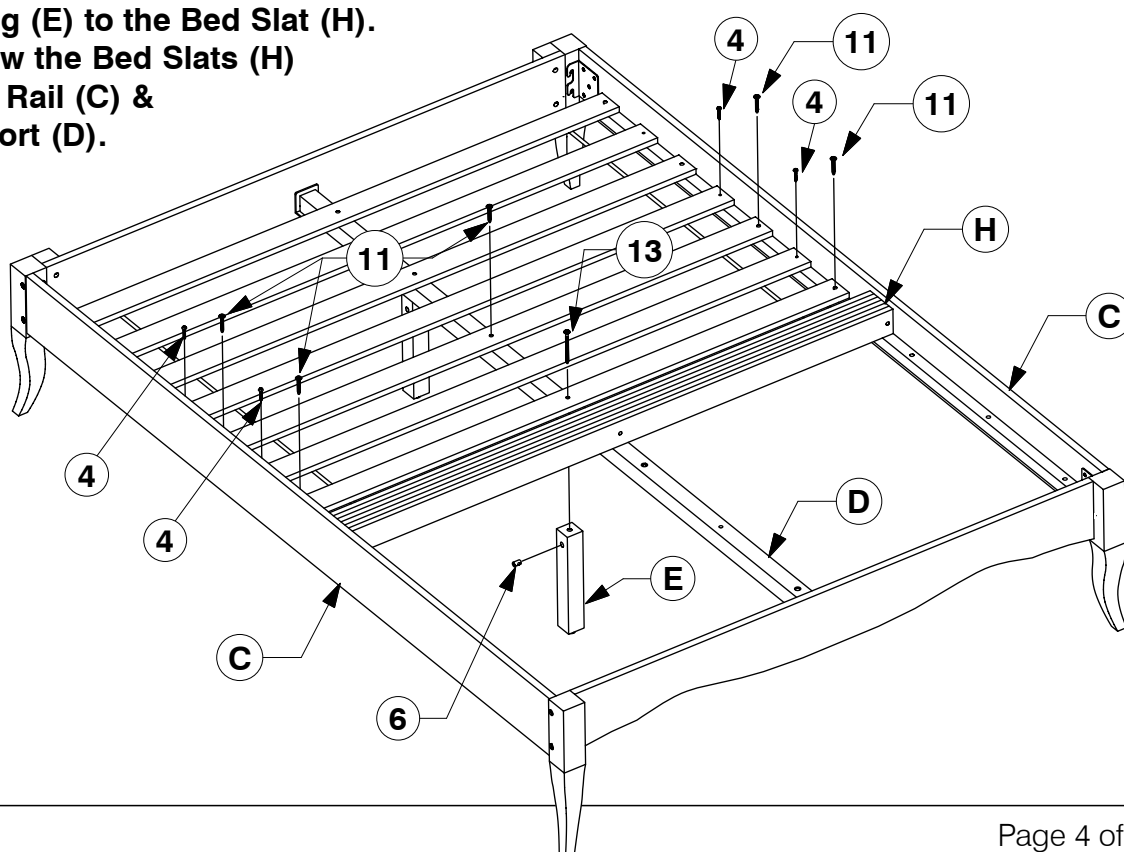


# Full Bed

## Assembly Instructions

- 11** Fit the other Slats out and assemble the Support Leg (E) to the Bed Slat (H). Bolt & screw the Bed Slats (H) to the Side Rail (C) & Long Support (D).

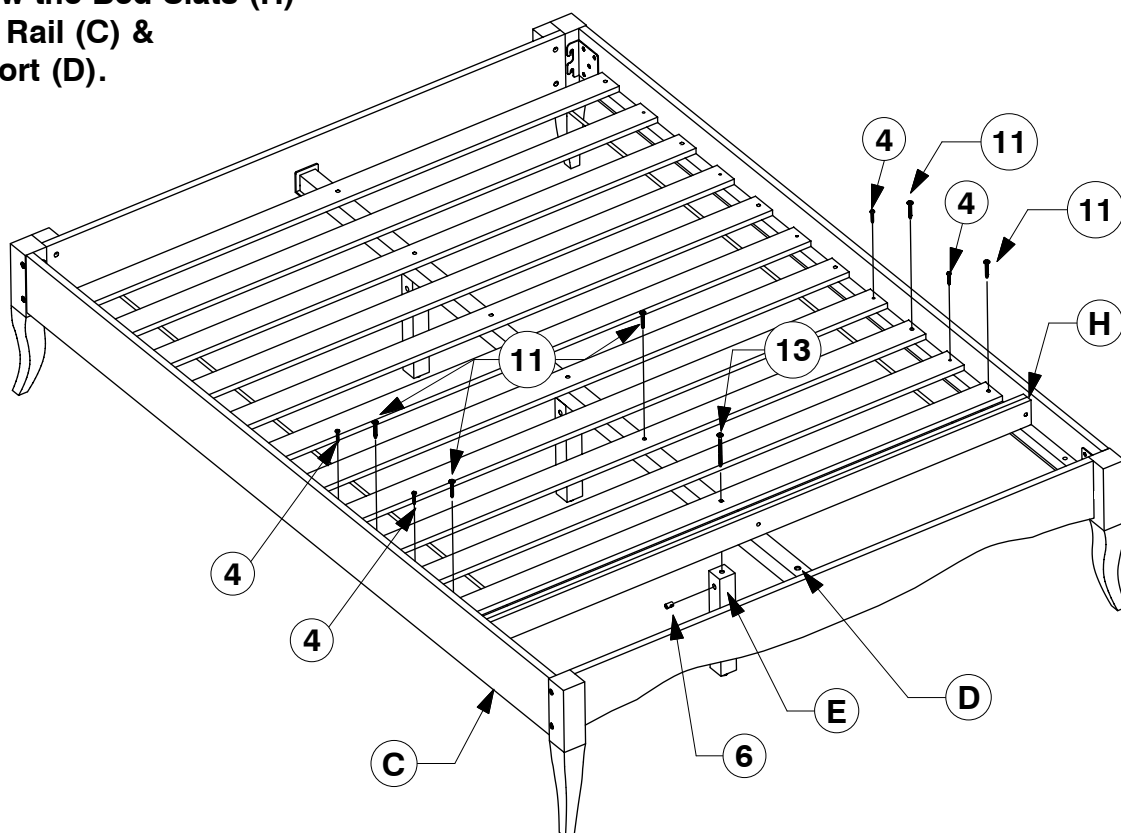


- 12** Bolt & screw the remaining Bed Slats (H) to the Side Rail (C).

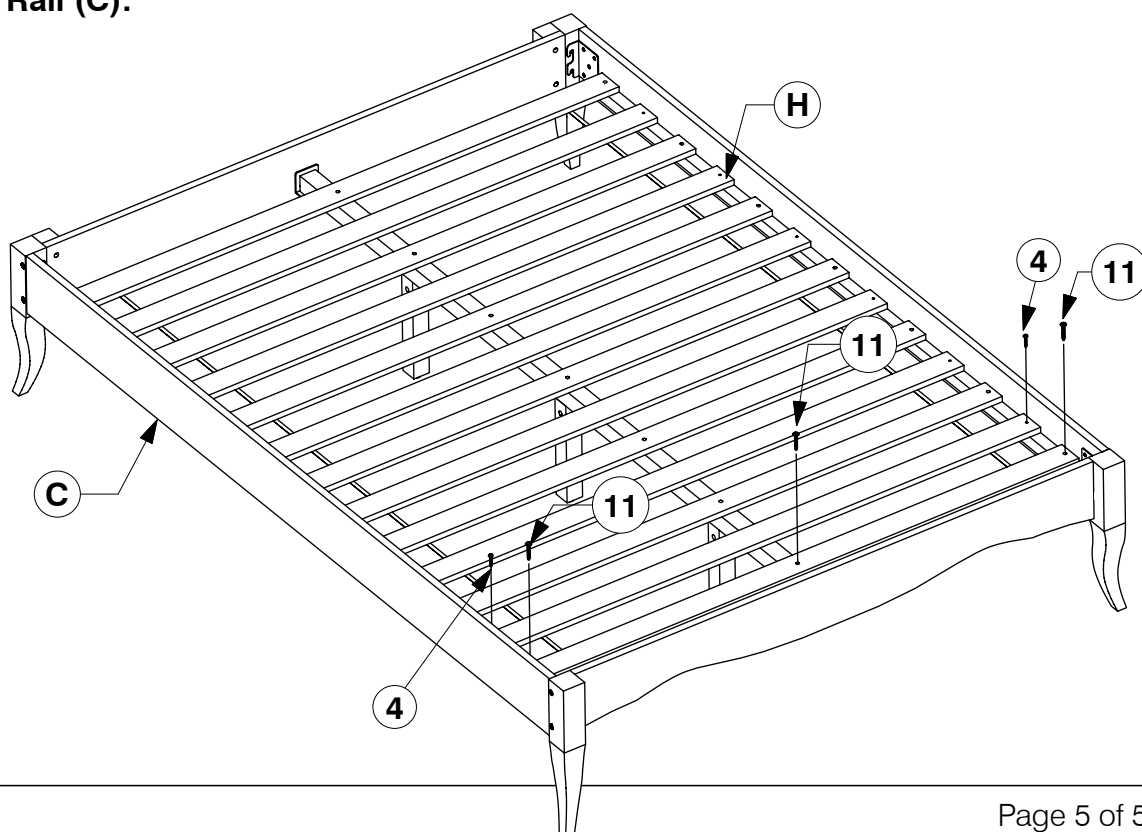


# Full Headboard

## Assembly Instructions

### 1 Parts List

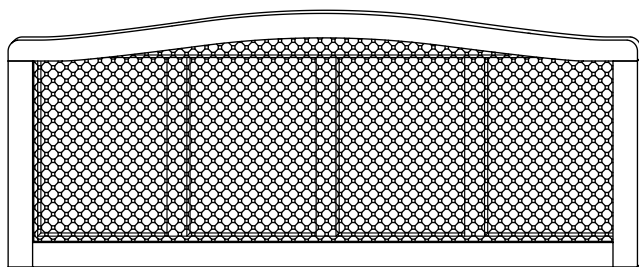


**A** Headboard Panel x 1



**B**  
Support Bar  
x 2



**C**  
Mini Support  
x 2

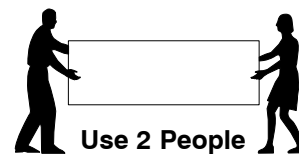

**Note:** Do not assemble using power tools. This can cause the bolts to be overtightened


### 2 Hardware List




**1** M6 x 35mm JCB  
x 4



**2** Spring Washer  
x 4





**3** Flat Washer  
x 4

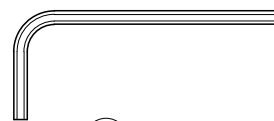

**4** Allen Key  
x 1

### 3 Fit the Mini Support (C) to the Headboard.

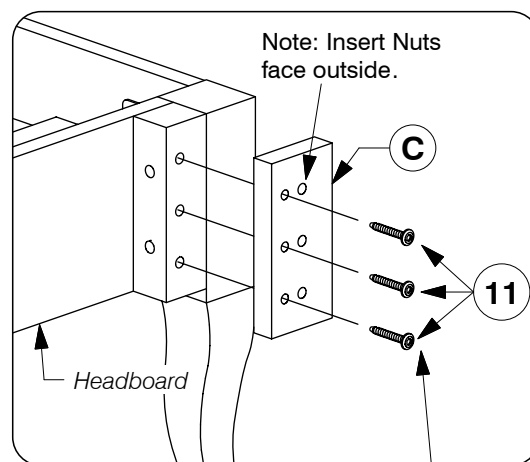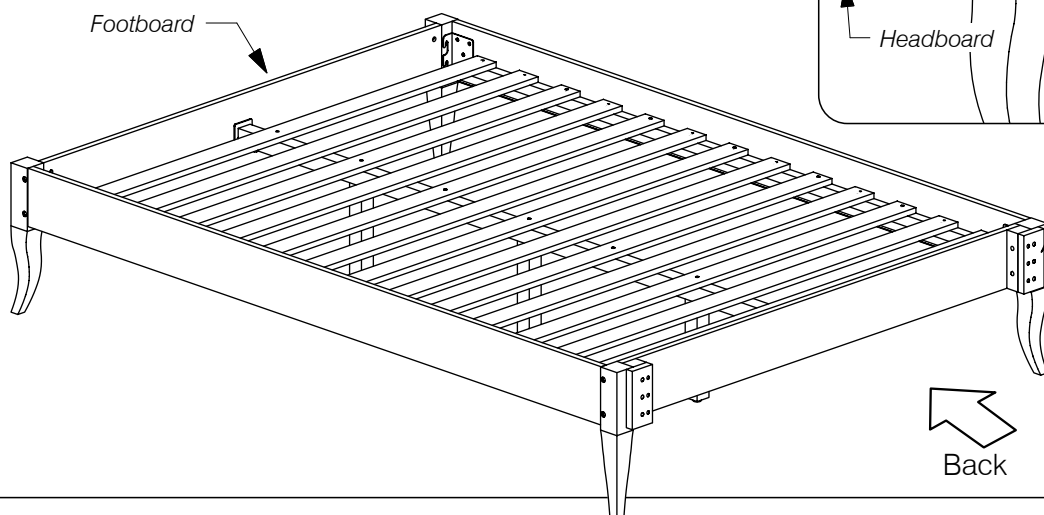


**Note:**  
Bolts from  
Footboard,  
Rails & Slats Box.

# Full Headboard

## Assembly Instructions

### 4 Assemble the Support Bars (B) to the Mini Support (C).

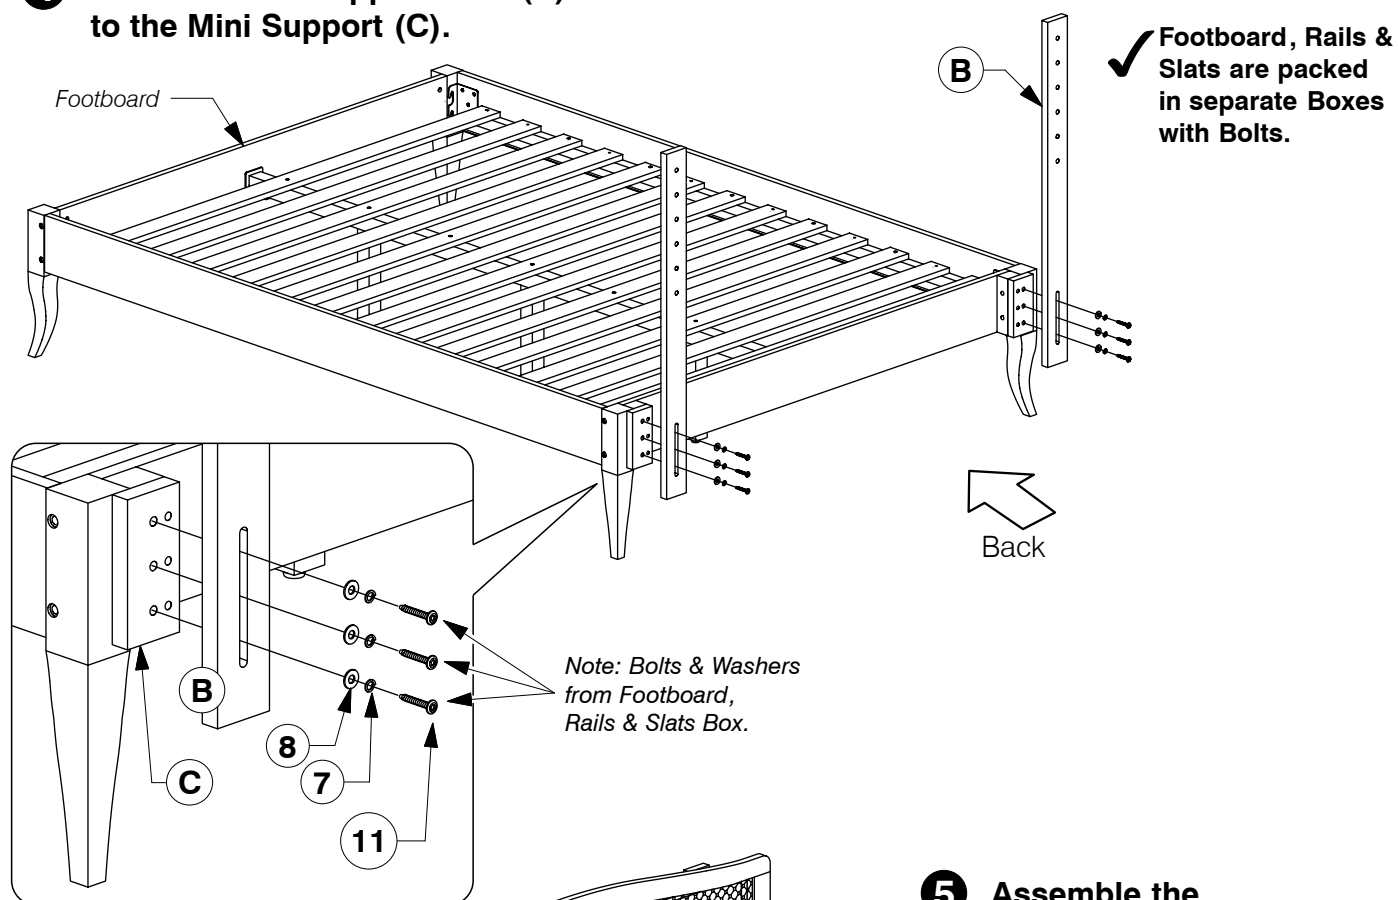

### 5 Assemble the Headboard Panel (A) to the Support Bars (B).

