

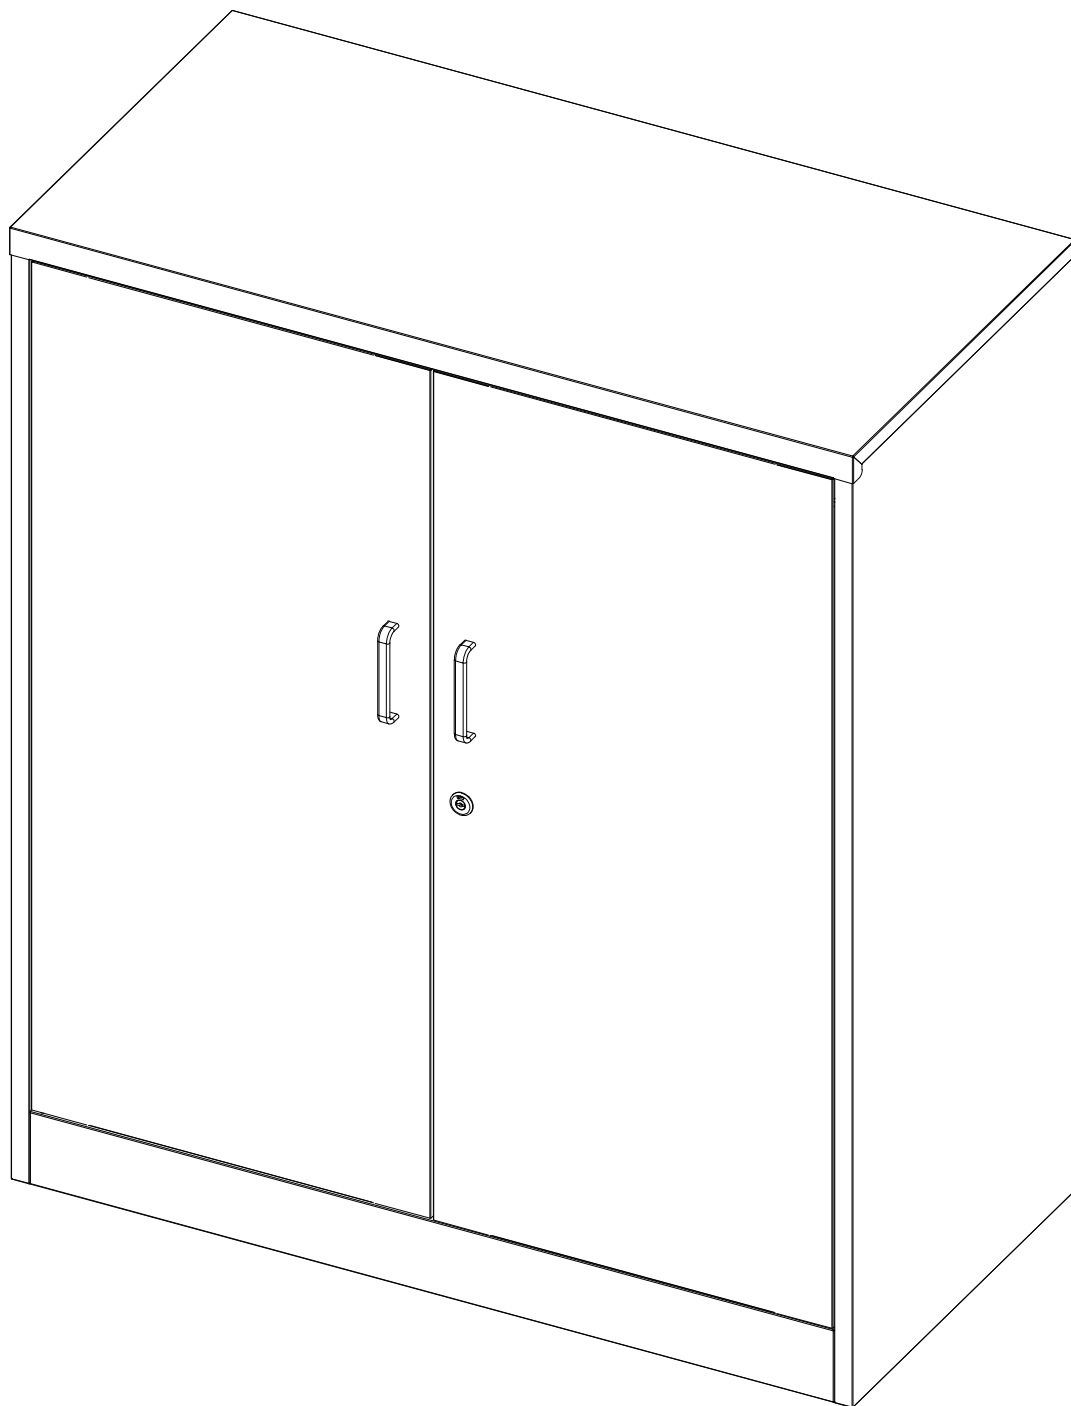
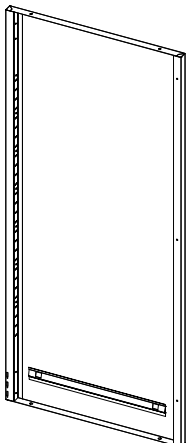
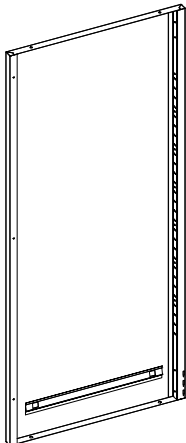
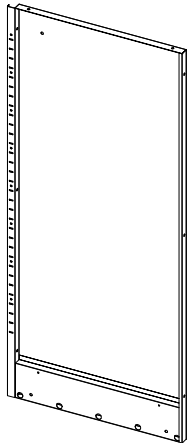
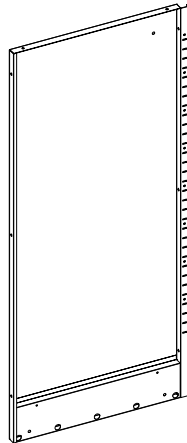
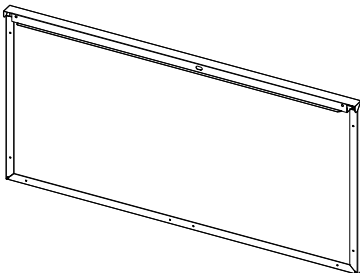
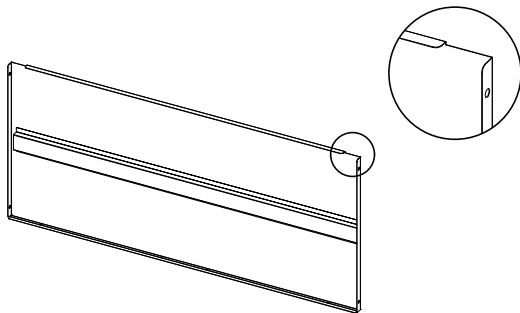
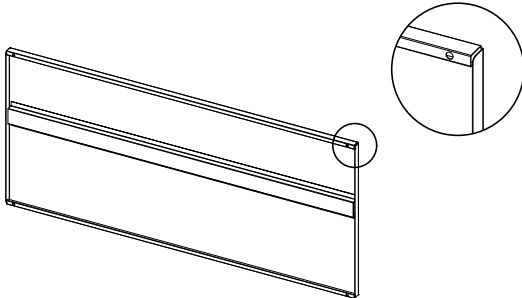
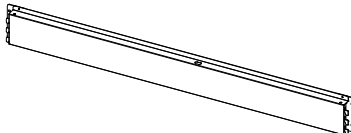
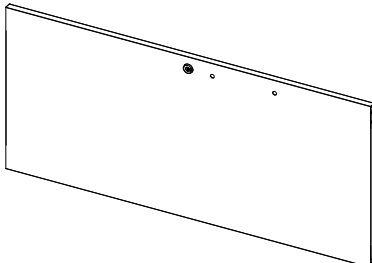
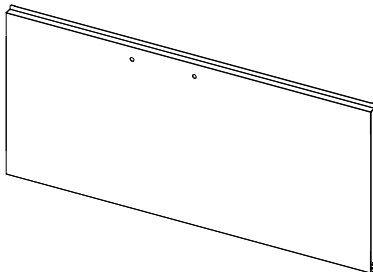
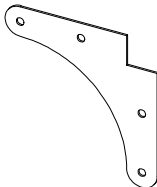

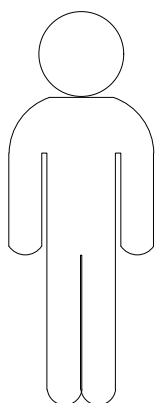





A×1 	B×1 	C×1 	D×1 						
E×1 	F×1 								
G×2 	H×1 								
I×1 	J×1 	K×2 							
L×30 	M×3 	N×3 	O×2 	P×8 	Q×4 	R×2 	S×2 	T×4 	U×2 Standby Application 

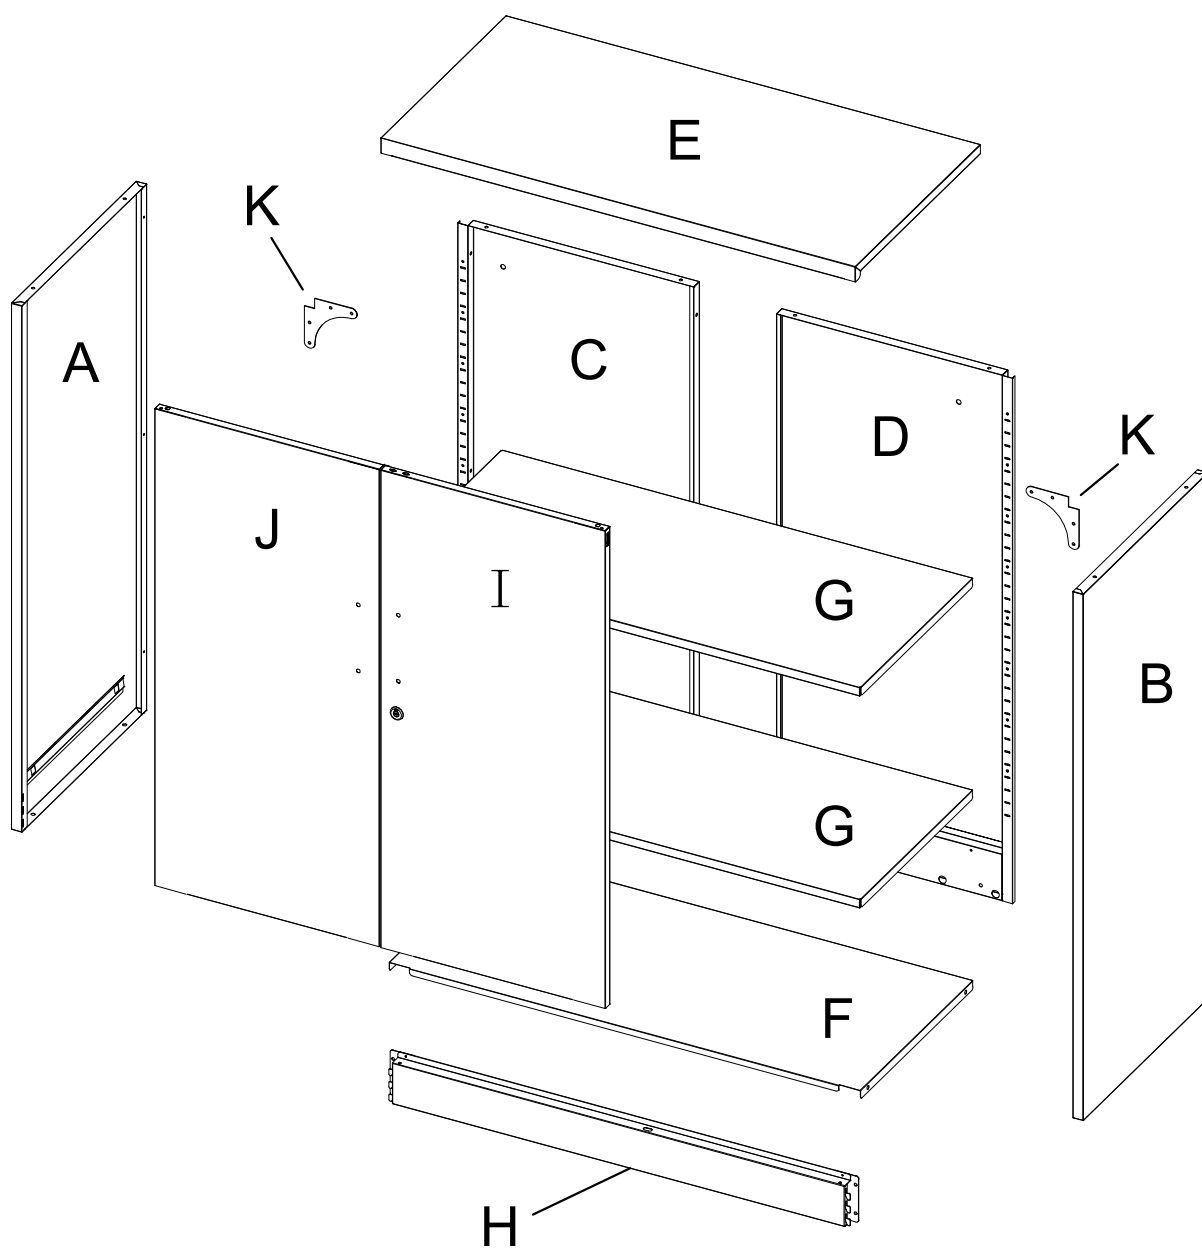


x2

1

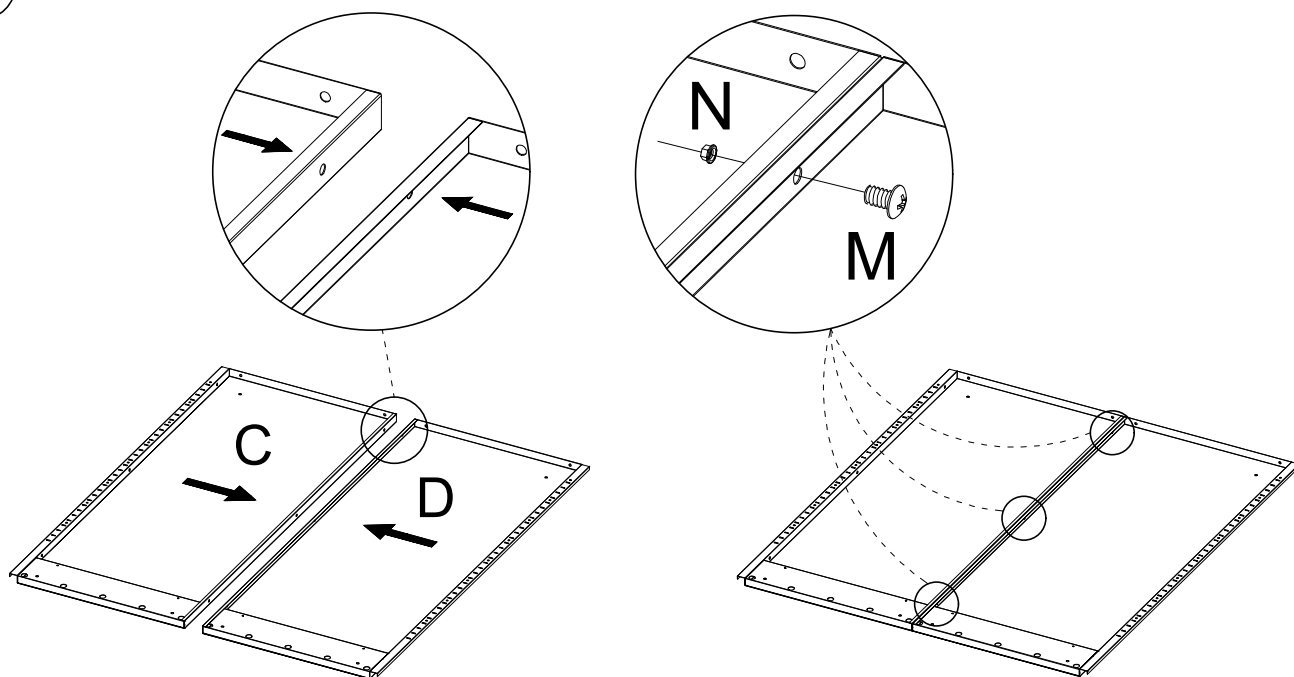


M×3 N×3

2

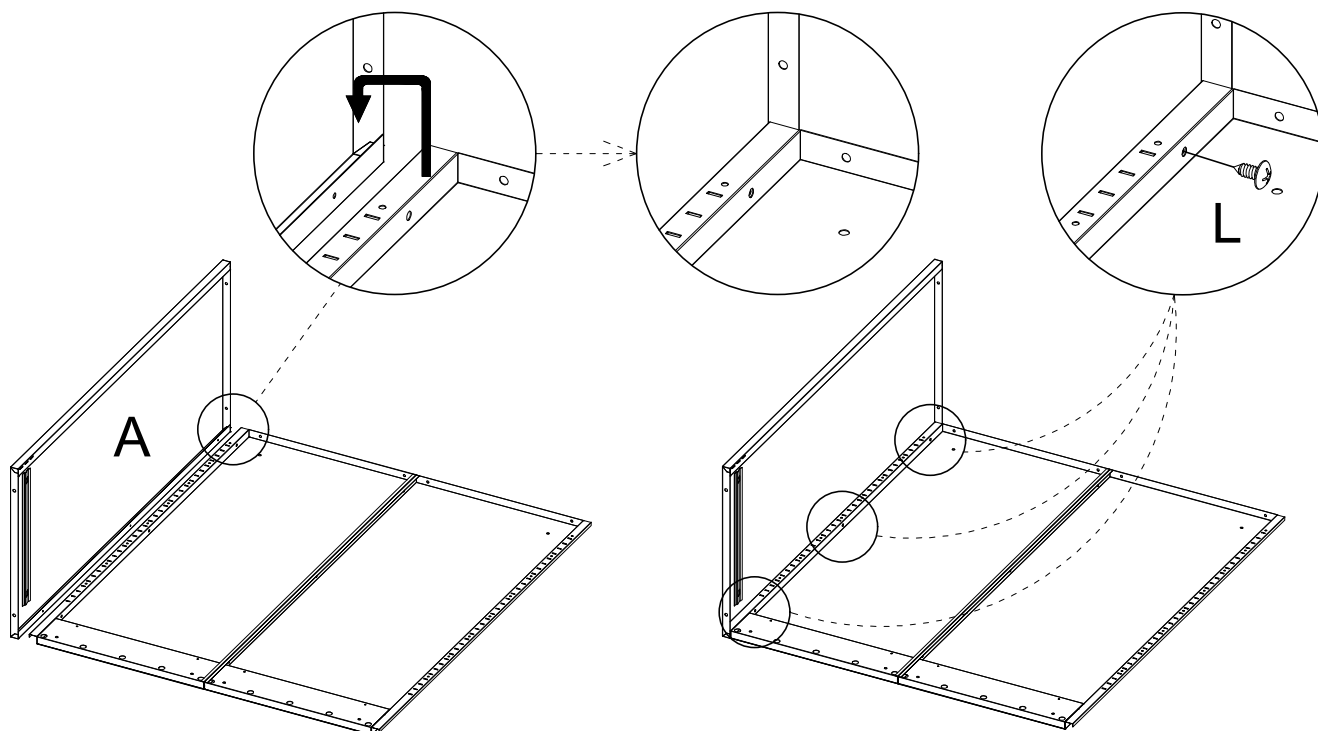


L×3

3

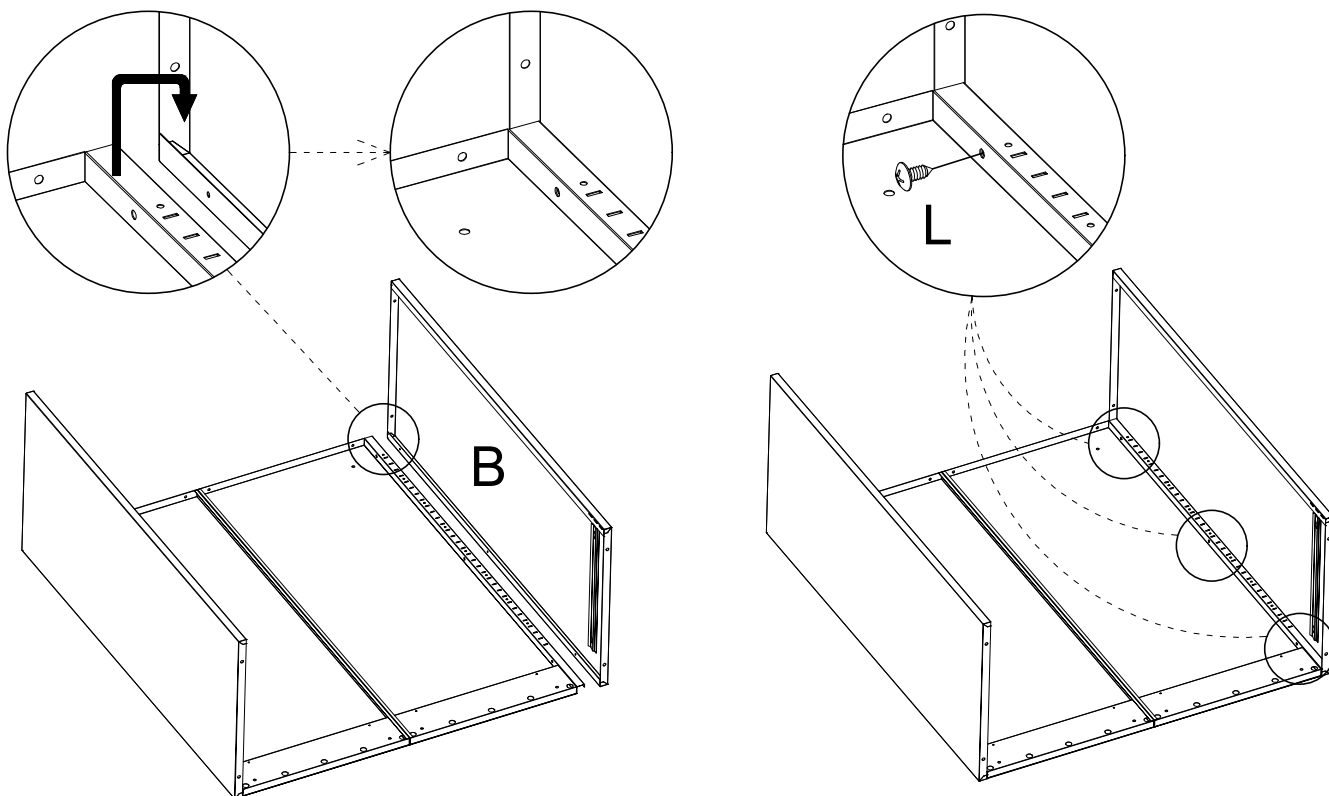


Lx3

4

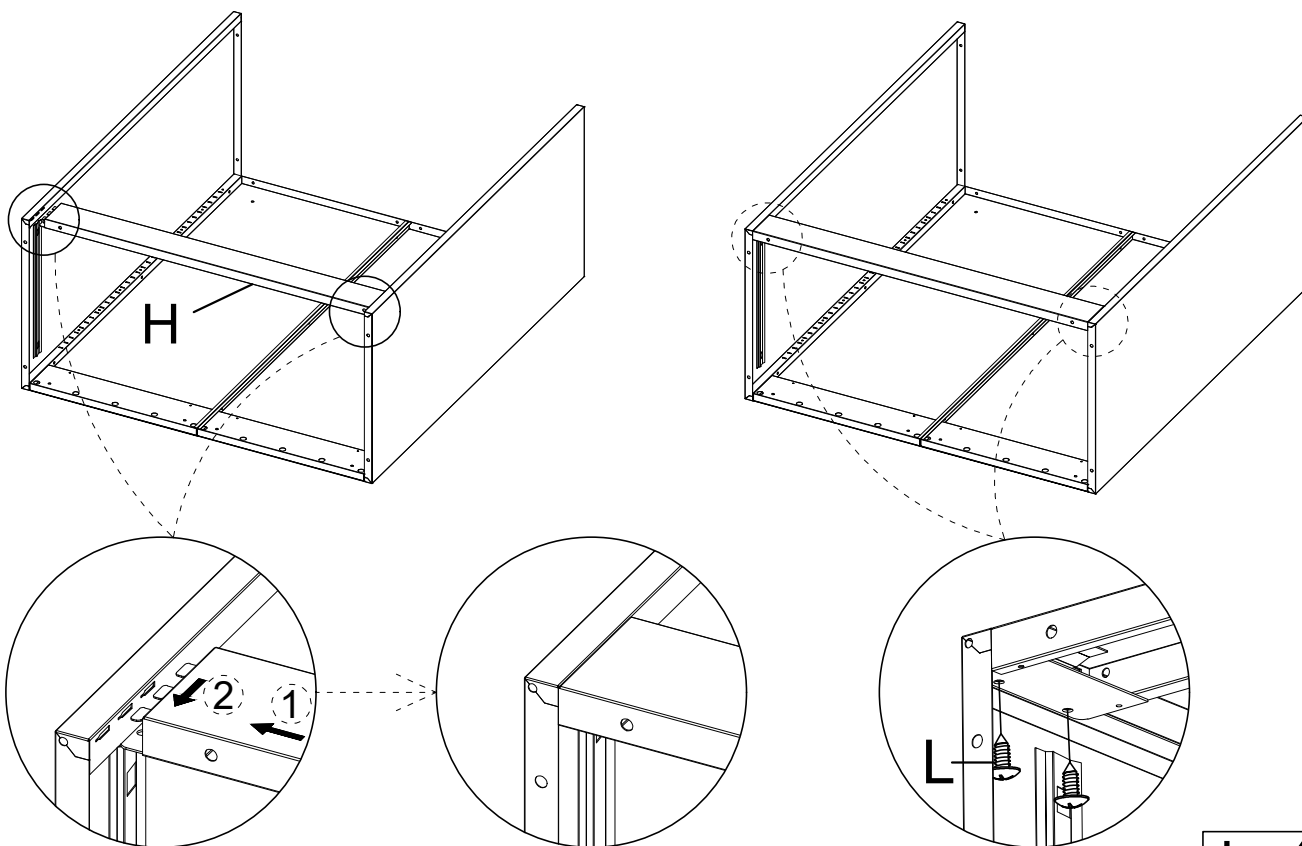


Lx4

5



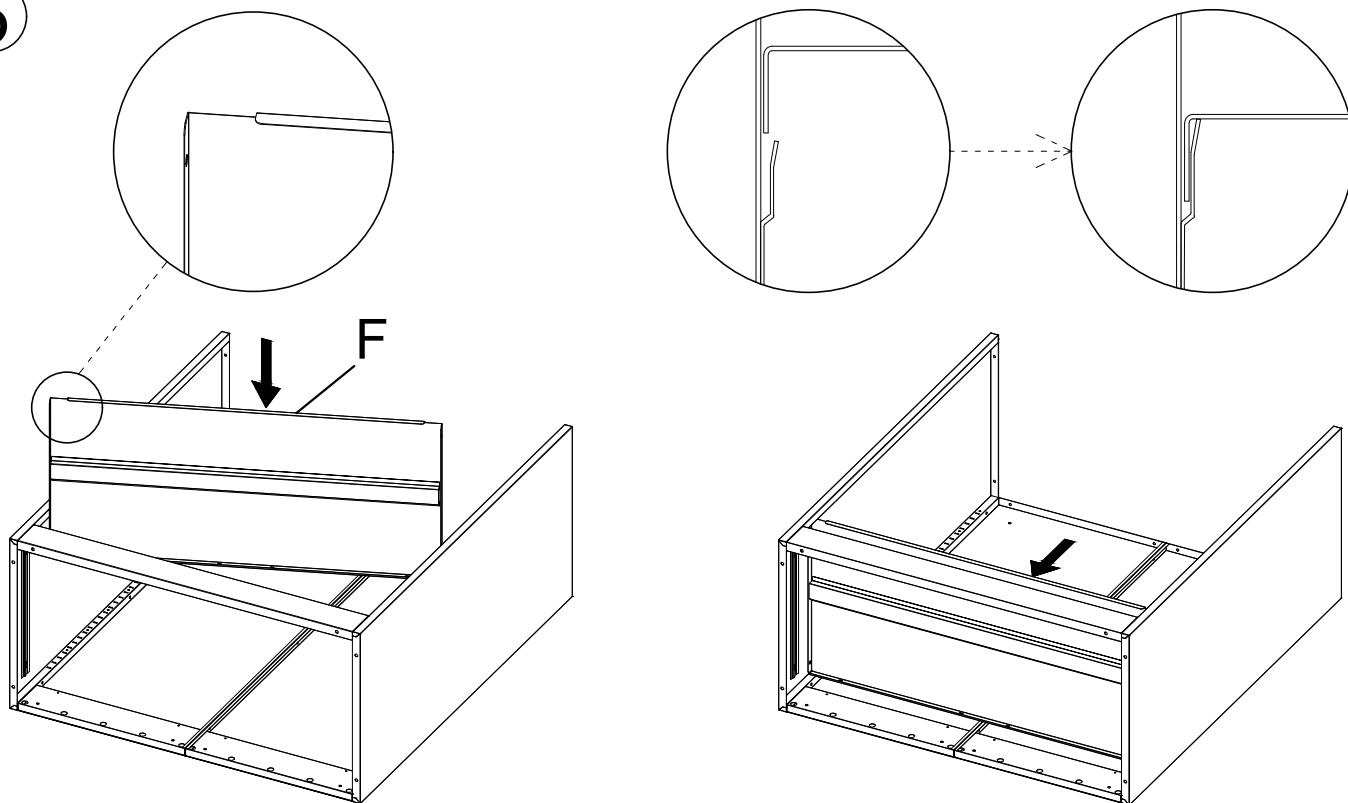


6

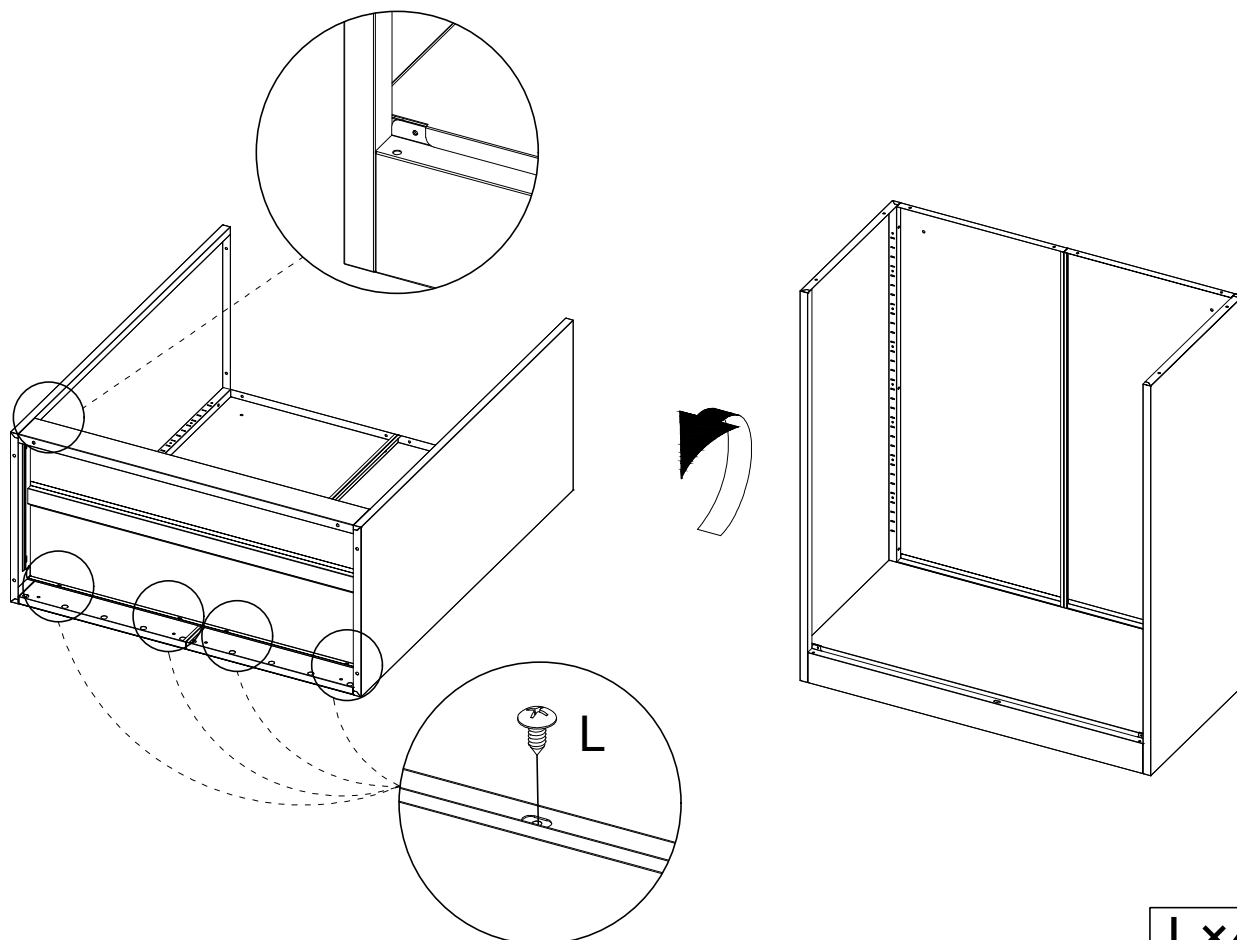




Lx4

7

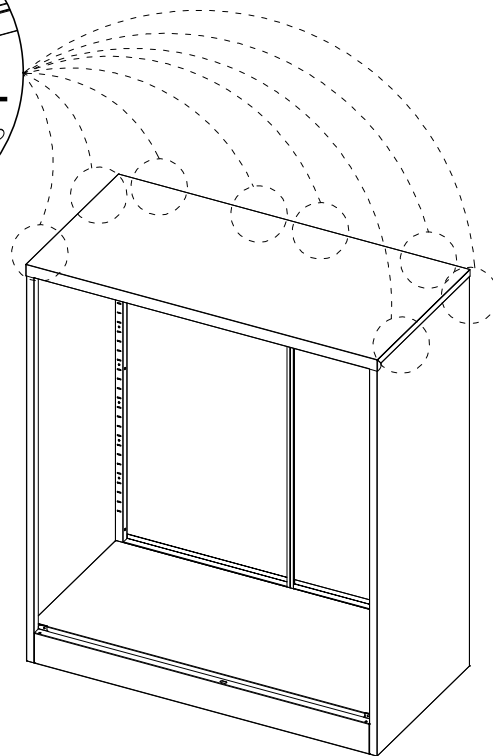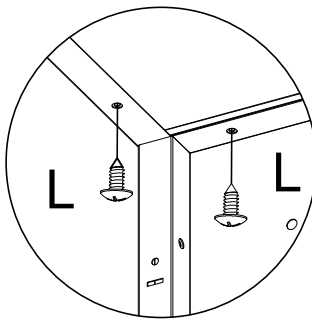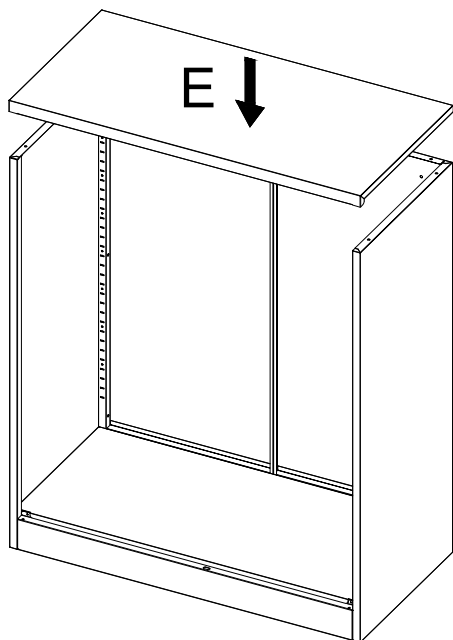



L×8

8

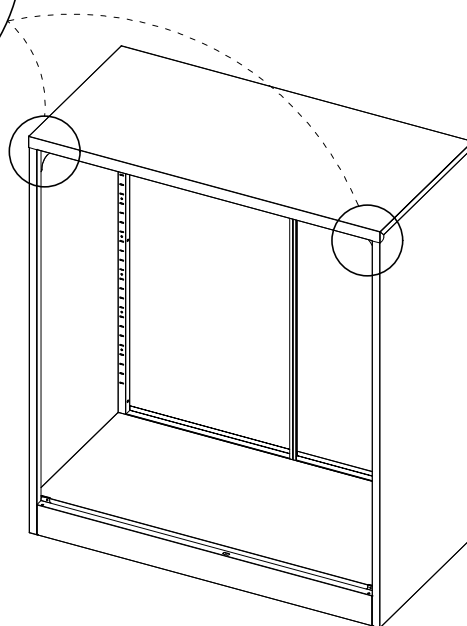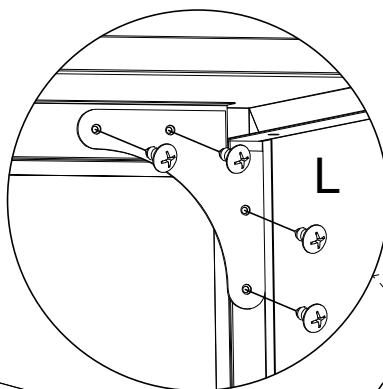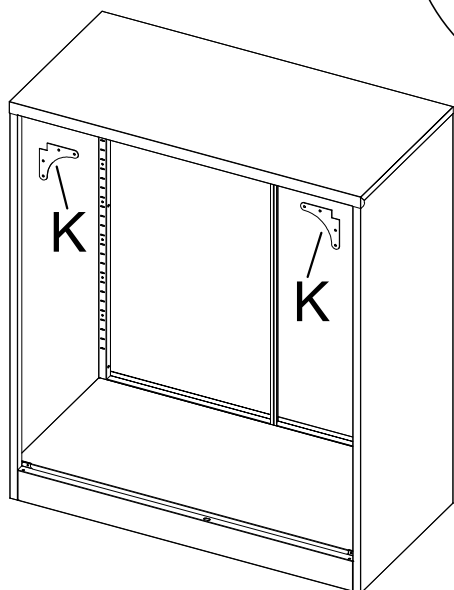




L×8

9

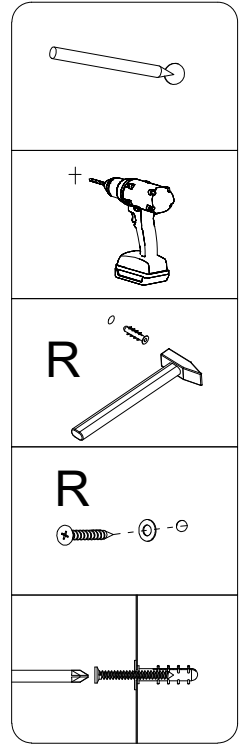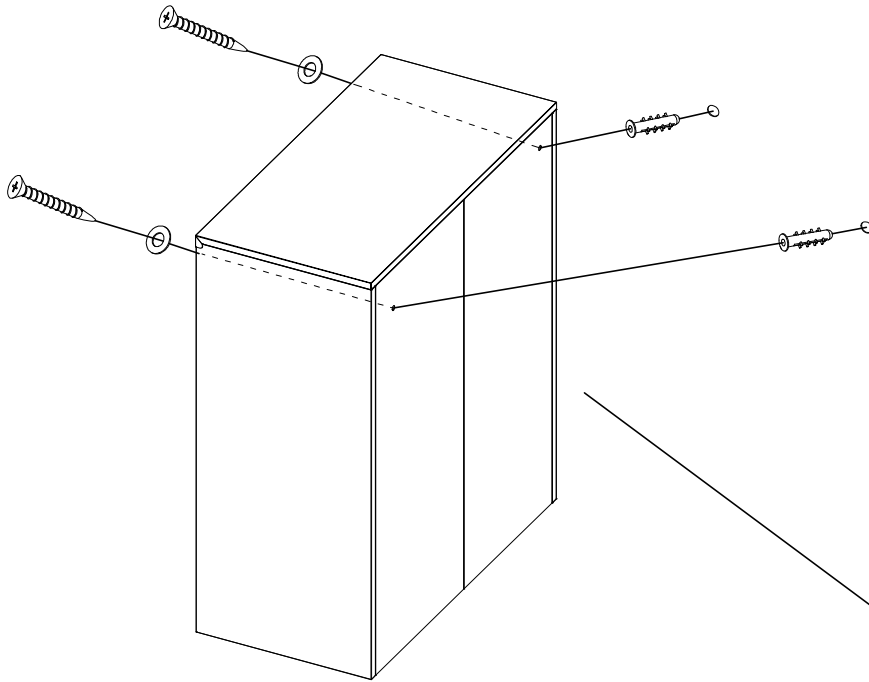




R×2

10

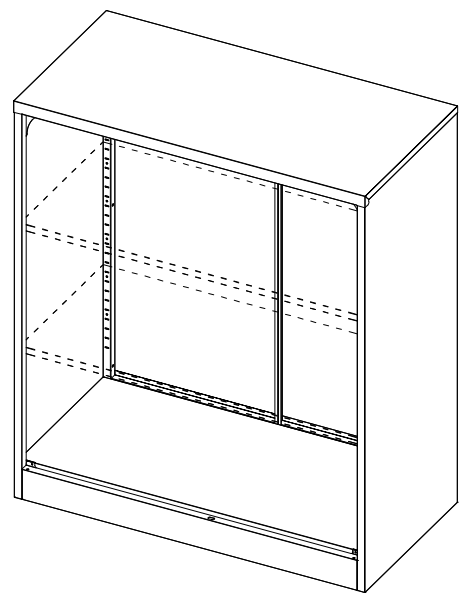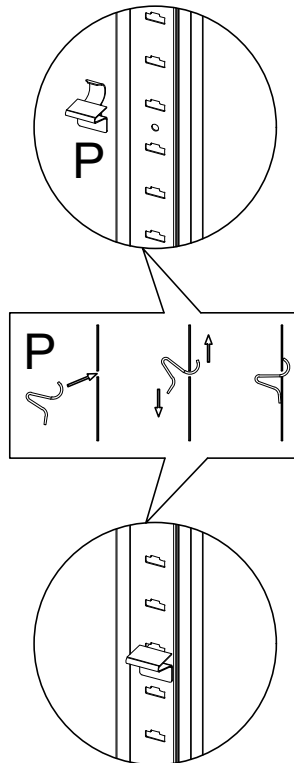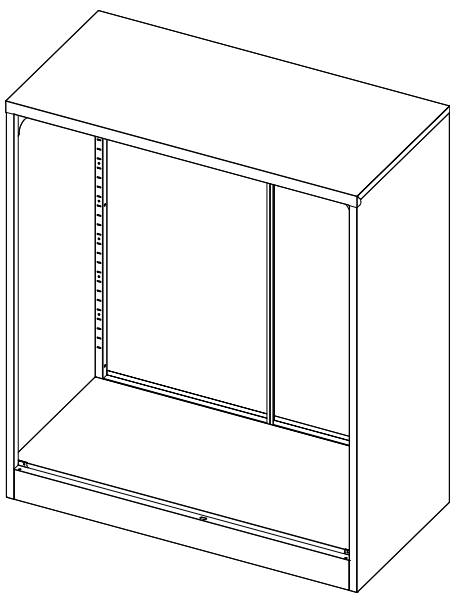







P×8

11

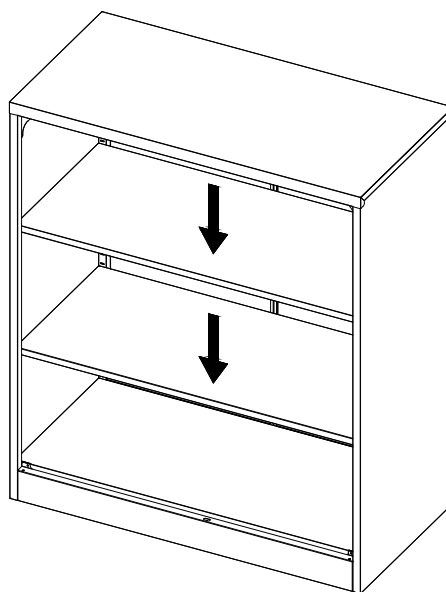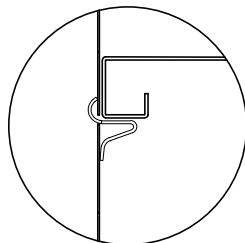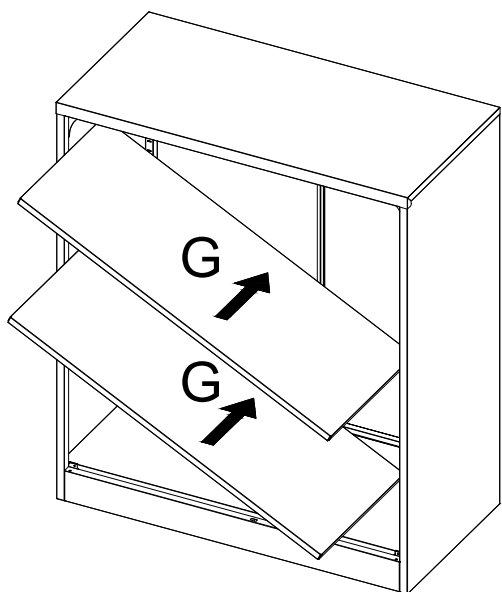

12




If the spring shaft is lost, spare parts U can be used.

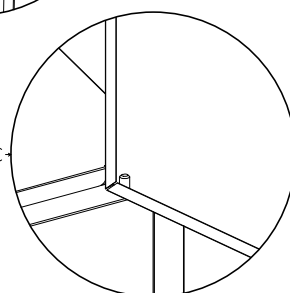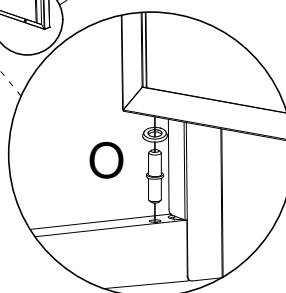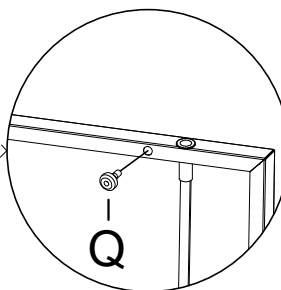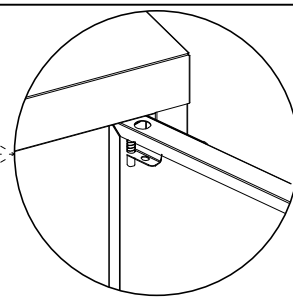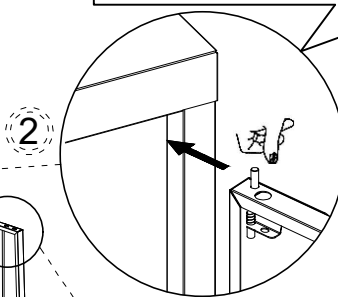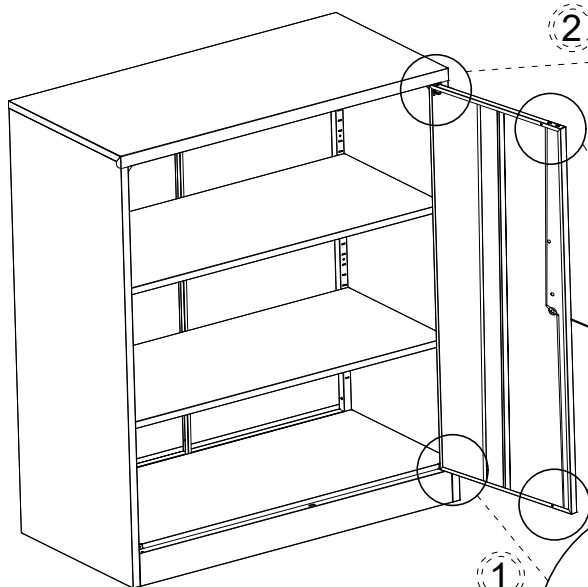

O×1
Q×2

13

If the spring shaft is lost, spare parts U can be used.

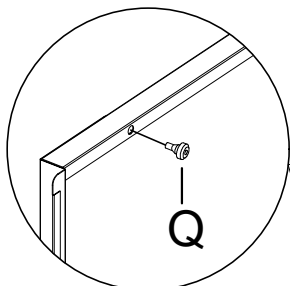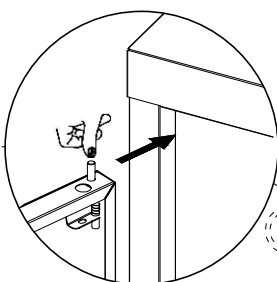
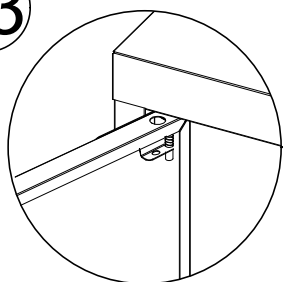


Q

J

2

1

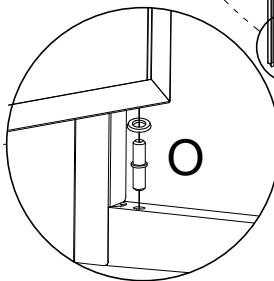
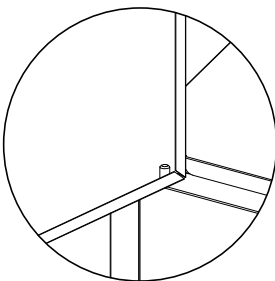


O

O×1


Q×2

14

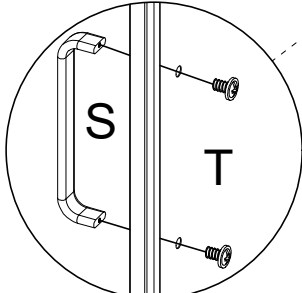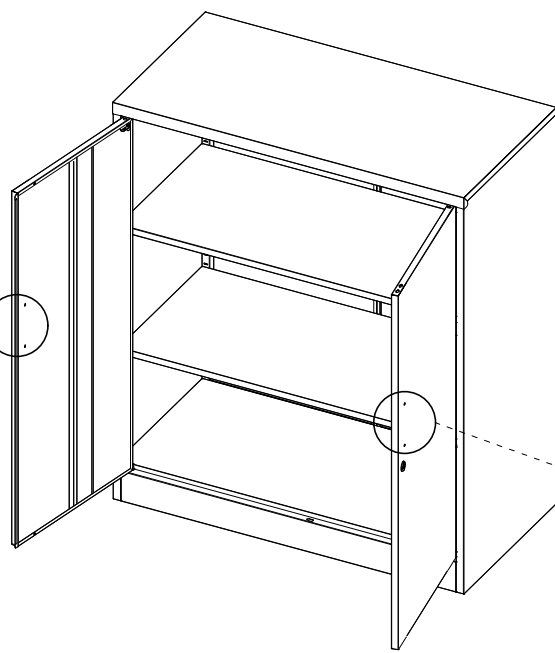

S

T

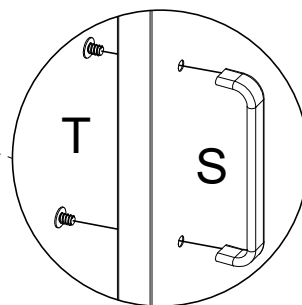

T

S

S×2

T×4